Description of Device Parameters **Levelflex FMP5x HART**

Guided wave radar



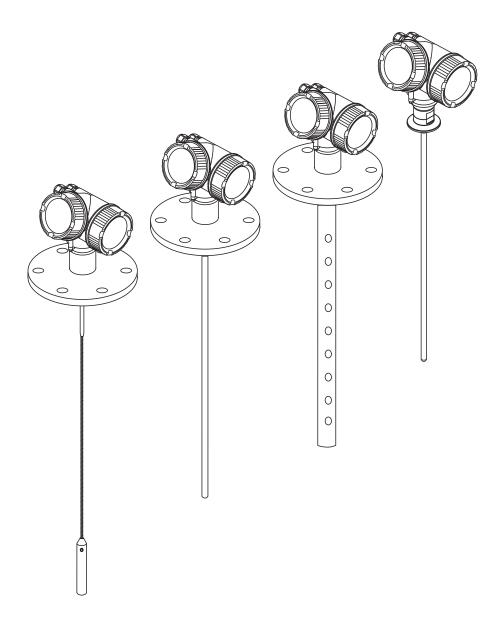




Table of contents

1	Impor	tant document information	. 4
1.1	Docume	ent function	. 4
1.2	Symbol	S	4
	1.2.1	Symbols for certain types of	
	100	information	
	1.2.2	Symbols in graphics	4
2	Basic	principles	. 5
2.1	Time-of	f-Flight principle	. 5
2.2		e measurement	
2.3	_	oe curve	
2.4		g and subtracted curve	
2.5		acking	. 8
2.6		ance measurement (only for	9
3	Overv	iew of the operating menu	10
4			
_	_	rt" menu	
4.1 4.2		re of the menu	23
4.2 4.3		tion of parameters	24 27
4.)	4.3.1	Structure of the submenu	27
	4.3.2	"Display" submenu	28
	4.3.3	"Configuration backup display"	
		submenu	. 36
	4.3.4	"Administration" submenu	
4.4	"Sensor"		
	4.4.1	Structure of the submenu \dots	45
	4.4.2	Description of parameters	47
	4.4.3	"Medium" submenu	52 . 57
	4.4.4 4.4.5	"Level" submenu	
	4.4.5	"Information" submenu	
	4.4.7	"Sensor properties" submenu	87
	4.4.8	"Distance" submenu	91
	4.4.9	"Gas phase compensation" submenu	99
	4.4.10	"Sensor diagnostics" submenu	108
	4.4.11	"Safety settings" submenu	113
	4.4.12	"Envelope curve" submenu	122
	4.4.13	"Mapping" submenu	124
	4.4.14	"EOP evaluation" submenu	133
	4.4.15	"Echo tracking" submenu	138
	4.4.16 4.4.17	"Interface" submenu	144 158
4.5		'submenu	164
1.7	4.5.1	Structure of the submenu	164
	4.5.2	"Current output 1 to 2" submenu	165
	4.5.3	"Switch output" submenu	173
4.6		ınication" submenu	179
	4.6.1	Structure of the submenu	179
	4.6.2	"Diagnostic configuration" submenu .	180
	4.6.3	"Configuration" submenu	182

Index	v.		244
	4.7.12	"Envelope diagnostics" submenu	242
		submenu	
	4.7.11	"Advanced diagnostics 1 to 2"	
	4.7.10	"Device check" submenu	223
	4.7.9	"Simulation" submenu	218
	4.7.8	"Min/max values" submenu	212
	4.7.7	"Data logging" submenu	208
	4.7.6	"Device information" submenu	205
	4.7.5	"Event logbook" submenu	202
	4.7.4	"Diagnostic list" submenu	200
	4.7.3	Description of parameters	198
		operating tool	197
	4.7.2	Structure of the submenu in an	
		local display	196
	4.7.1	Structure of the submenu on the	
4.7	"Diagno	stics" submenu	196
	4.6.6	"Output" submenu	192
		submenu	189
	4.6.5	"Burst configuration 1 to 3"	
	4.6.4	"Information" submenu	185

1 Important document information

1.1 Document function

The document is part of the Operating Instructions and serves as a reference for parameters, providing a detailed explanation of each individual parameter of the operating menu.

1.2 Symbols

1.2.1 Symbols for certain types of information

Symbol	Meaning
i	Tip Indicates additional information.
[i	Reference to documentation
A	Reference to page
	Reference to graphic
	Operation via local display
	Operation via operating tool
	Write-protected parameter

1.2.2 Symbols in graphics

Symbol	Meaning	Symbol	Meaning
1, 2, 3	Item numbers	A, B, C,	Views
A-A, B-B, C-C,	Sections		

Levelflex FMP5x HART Basic principles


2 Basic principles

2.1 Time-of-Flight principle

The Levelflex uses the guided propagation and reflection of electromagnetic pulses in order to determine the distance to a target object. The time that passes between emitting and receiving the pulses is a measurement for the distance to the object. Since the pulses have to travel to the object and back, the distance D is the result of half of the product of the duration t and the velocity of propagation c:

$$D = \Delta t \times c/2$$

From D, the level is then calculated with the help of the calibration parameters.

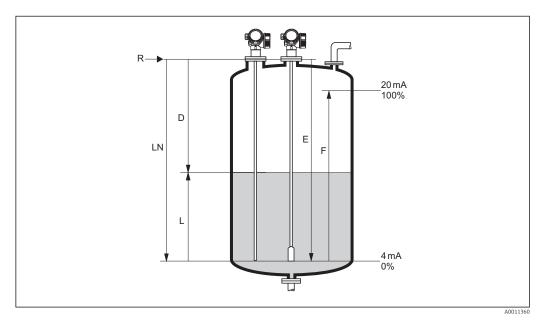

 \blacksquare 1 Calibration parameters for the time-of-flight principle

LN Length of the probe


- D Distance
- L Level
- R Reference point of the measurement
- *E* Empty calibration (= zero)
- F Full calibration (= span)

Basic principles Levelflex FMP5x HART

2.2 Interface measurement

Interface measurement is possible with FMP51, FMP52, FMP54 and FMP55. It can be activated via the **Operating mode** parameter ($\rightarrow \implies 47$).

When the high-frequency pulses hit the surface of the medium, only a percentage of the transmission pulse is reflected. In the case of media with a low dielectric constant DC_1 , in particular, the other part penetrates the medium. The pulse is reflected once more at the interface point to a second medium with a higher dielectric constant, DC_2 . The distance to the interface layer can now also be determined taking into account the delayed time-of-flight of the pulse through the upper medium.

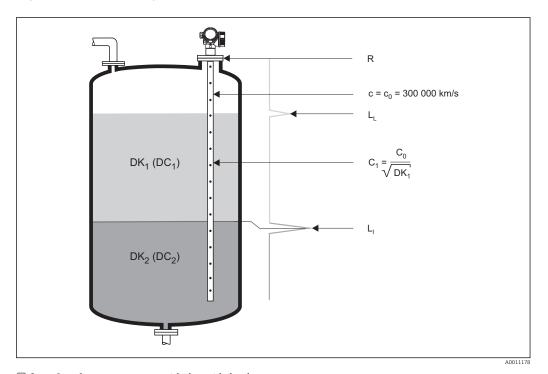

 \blacksquare 2 Interface measurement with the guided radar


Preconditions for an interface measurement

- The dielectric constant (DC) of the upper medium must be known and constant. Dielectric constants for many media commonly used in the industry are summarized in the document CD00019F, which can be downloaded from the Endress+Hauser web page (www.endress.com). In addition, if the interface thickness is existing and known, the DC can be calculated automatically via FieldCare.
- The DC of the upper medium may not be greater than 10.
- ullet The DC difference between the upper medium and lower medium must be > 10
- The upper medium must have a minimum thickness of 60 mm (2.4 in).
- For dielectric constants (DC values) of many media commonly used in various industries refer to:
 - the Endress+Hauser DC manual (CP01076F)
 - the Endress+Hauser "DC Values App" (available for Android and iOS)

Levelflex FMP5x HART Basic principles

2.3 Envelope curve

The Levelflex emits individual pulses in quick succession and scans their reflection again with a fluctuating delay. The amounts of entergy received are arranged according to their time of flight. The graphic representaaion of this sequence is called "envelope curve". The following diagram shows a sketch of a typical envelope curve:

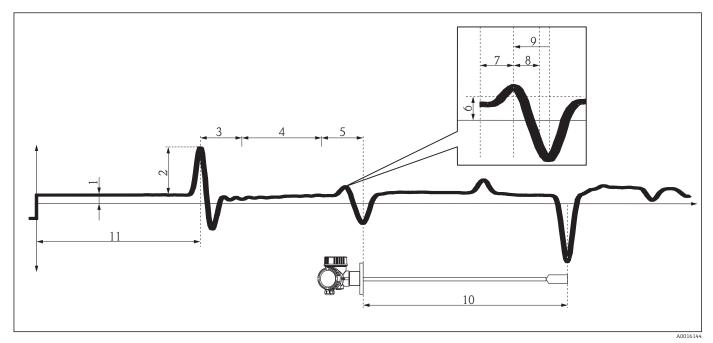

₩ 3 Important features of the envelope curve

- 1 Envelope curve offset Reference echo amplitude
- Electronics zero distance
- Cable zero distance
- Antenna zero distance
- Threshold fine zero distance
- Fine zero distance window left
- Fine zero distance window right
- Fine zero distance
- 10 Physical length of the probe (LN)
- 11 Reference echo position


Basic principles Levelflex FMP5x HART

2.4 Mapping and subtracted curve

The mapping is used to suppress static interference signals which may be generated by internal tank or silo fittings. A **mapping curve**, representing the **envelope curve** of an empty tank or silo as precisely as possible, is used for the mapping.

After a mapping, the signal evaluation does not use the envelope curve but the **subtracted curve**, instead:

Subtracted curve = Envelope curve - Mapping curve

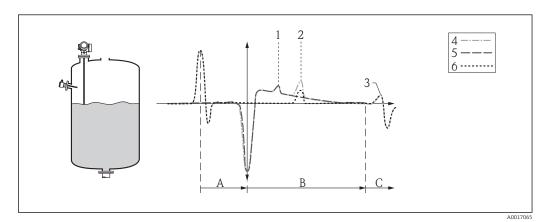

 \blacksquare 4 Mapping and subtracted curve

- 1 Interference echo
- 2 Level echo
- 3 End-of-probe echo
- 4 Envelope curve
- 5 Mapping curve
- 6 Subtracted curve
- A Internal area (Z distances)
- B Level area
- C End-of-probe area (EOP)

2.5 Echo tracking

Levelflex uses an echo tracking algorithm. This means, echoes in subsequent envelope curves are not evaluated independently but are considered to be a sequence of moving echos. To do so, each echo is surrounded by a window of a certain width and the echo is searched for within this window in the next envelope curve. If an echo of this type is found, it is allocated to the "track" of the previous echo. Each track can be assigned a specific meaning (level echo track, interface echo track, end-of-probe echo track, multiple echo track).

For a given installation, these tracks are in a well-defined relationship to each other. This relationship is recorded during the measuruement such that later on reliable measuring values can be obtained even if the echo is temporarily lost or if the device is temporarily switched off.

For details on the echo tracking refer to: $\rightarrow \blacksquare 138$.

Levelflex FMP5x HART Basic principles

2.6 Capacitance measurement (only for FMP55)

In the case of FMP55, the guided radar can be combined with a capacitance measurement. The capacitance measurement can be used to increase the reliability of the guided radar or to obtain interface values even if the interface echo is lost.


Capacitance measurement is only possible if the electrical conductivity of the two media fulfills the following conditions:

- \bullet Conductivity of the upper medium: < 1 $\mu S/cm$
- Conductivity of the lower medium: $> 100 \mu S/cm$

3 Overview of the operating menu



- The following table lists all parameters the "Expert" menu may contain. The page number refers to where a description of the parameter can be found.
- Depending on the device version and parametrization some parameters will not be available in a given situation. For details on the conditions refer to the "Prerequisite" category in the description of the respective parameter.
- The representation essentially corresponds to the menu seen when using an operating tool (e.g. FieldCare). On the local display there may be minor differences in the menu structure. Details are mentioned in the description of the respective submenu.

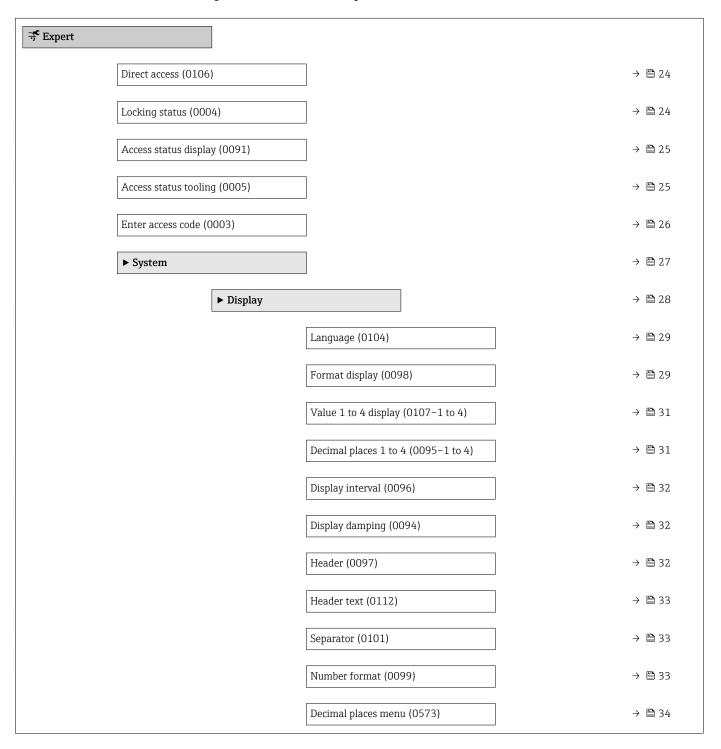

		Contrast display (0105)	→ 🖺 34
		Backlight (0111)	→ 🖺 34
		Access status display (0091)	→ 🖺 35
	► Configuration b	ackup display	→ 🖺 37
		Operating time (0652)	→ 🖺 38
		Last backup (0102)	→ 🖺 38
		Configuration management (0100)	→ 🖺 38
		Backup state (0121)	→ 🖺 39
		Comparison result (0103)	→ 🖺 39
	A. J!!!!		
	► Administration		→ 🖺 41
		Define access code (0093)	→ 🖺 42
		Confirm access code	→ 🖺 44
		Activate SW option (0029)	→ 🖺 42
		Device reset (0000)	→ 🖺 42
▶ Sensor			→ 🖺 45
	Distance unit (055	1)	→ 🖺 47
	Temperature unit (0557)	→ 🖺 47
	Operating mode (1	046)	→ 🖺 47
	Tank type (1175)		→ 🖺 48
	Tube diameter (11	17)	→ 🖺 48
	Bin type (1176)		→ 🖺 48
	Process property (1	1081)	→ 🖺 49
	Advanced process of		→ 🖺 50
	Application parame	eter (1126)	→ 🖺 51

► Medium		→ 🖺 52
	Medium group (1208)	→ 🗎 53
	Medium type (1049)	→ 🖺 53
	Medium property (1165)	→ 🖺 54
	DC value lower medium (1154)	→ 🖺 54
	DC value (1201)	→ 🖺 55
	Calculated DC value (1118)	→ 🖺 56
► Level		→ 🖺 58
	Distance offset (2309)	→ 🖺 59
	Empty calibration (2343)	→ 🖺 60
	Full calibration (2308)	→ 🖺 61
	Level unit (0576)	→ 🖺 62
	Level limit mode (2314)	→ 🖺 63
	High limit (2312)	→ 🖺 64
	Low limit (2313)	→ 🖺 64
	Level correction (2325)	→ 🖺 64
	Output mode (2317)	→ 🖺 65
	Level (2319)	→ 🖺 65
	Level linearized (2318)	→ 🖺 67
	Interface (2352)	→ 🖺 67
	Interface linearized (2382)	→ 🗎 67
	Thickness upper layer (2330)	→ 🗎 68
► Linearization		→ 🗎 70
	Linearization type (2339)	→ 🖺 72
	Unit after linearization (2340)	→ 🖺 73

12

	Free text (2341)	→	₿ 74
	Level linearized (2318)	\rightarrow	1 74
	Interface linearized (2382)	\rightarrow	≅ 75
	Maximum value (2315)	\rightarrow	1 75
	Diameter (2342))	1 75
	Intermediate height (2310))	₿ 76
	Table mode (2303))	₿ 76
	Table number (2370)	\rightarrow	1 77
	Level (2383))	₿ 78
	Level (2389))	₿ 78
	Customer value (2384))	₿ 78
	Activate table (2304)	\rightarrow	₿ 78
► Information		\rightarrow	₿ 80
	Signal quality (1047))	₿ 81
	Absolute echo amplitude (1127)	÷	₿ 81
	Relative echo amplitude (1089)	→	₿ 82
	Absolute interface amplitude (1129)	÷	₿ 83
	Relative interface amplitude (1090)	÷	₿ 83
	Absolute EOP amplitude (1128))	₿ 84
	Found echoes (1068))	₿ 84
	Used calculation (1115)	→	₿ 85
	Tank trace state (1206)	\rightarrow	₿ 86
	Measurement frequency (1180))	₿ 86
			■ 86■ 86

► Sensor properties	→ 🖺 88
Probe grounded (1222)	→ 🖺 89
Present probe length (1078)	→ 🖺 89
Confirm probe length (1080)	→ 🖺 89
Sensor module (1101)	→ 🖺 90
▶ Distance	→ 🖺 92
Distance (1124)	→ 🗎 93
Interface distance (1067)	→ 🖺 94
Dead time (1199)	→ 🖺 95
Integration time (1092)	→ 🖺 96
Blocking distance (1144)	→ 🖺 97
► Gas phase compensation	→ 🖺 105
GPC mode (1034)	→ 🖺 106
Present reference distance (1076)	→ 🖺 106
Reference distance (1033)	→ 🖺 106
Reference echo threshold (1168)	→ 🖺 107
Const. GPC factor (1217)	→ 🖺 107
► Sensor diagnostics	→ 🖺 110
Broken probe detection (1032)	→ 🖺 111
Start self check (1133)	→ 🖺 111
Result self check (1134)	→ 🖺 111
Noise of signal (1105)	→ 🖺 112
► Safety settings	→ 🖺 117
Output echo lost (2307)	→ 🖺 118
Value echo lost (2316)	→ 🖺 118

Ramp at echo lost (2323)	→ 🖺 119
Delay time echo lost (1193)	→ 🖺 119
Safety distance (1093)	→ 🖺 120
In safety distance (1018)	→ 🗎 120
Acknowledge alarm (1130)	→ 🖺 120
► Envelope curve	→ 🖺 123
Envelope curve (1207)	→ 🖺 123
► Mapping	→ 🗎 127
Distance (1124)	→ 🗎 93
Interface distance (1067)	→ 🖺 94
Confirm distance (1045)	→ 🖺 130
Present mapping (1182)	→ 🖺 131
Mapping end point (1022)	→ 🖺 131
Record map (1069)	→ 🖺 132
► EOP evaluation	→ 🖺 134
EOP search mode (1026)	→ 🖺 135
EOP shift (1027)	→ 🗎 135
DC value (1201)	→ 🗎 136
Calculated DC value (1118)	→ 🗎 137
► Echo tracking	→ 🗎 141
Evaluation mode (1112)	→ 🗎 142
History reset (1145)	→ 1 42
Inistory reset (1143) ▶ Interface	→ 1 42
Tank level (1111)	→ 1 53
Interface property (1107)	→ 🖺 153

	Interface criterion (1184)	→ 🗎 155
	Measured capacitance (1066)	→ 🖺 155
	Build-up ratio (1210)	→ 🖺 155
	Build-up thres. (1211)	→ 🖺 155
	Empty capacitance (1122)	→ 🖺 156
► External input		→ 🗎 158
	Level external input 1 (2305)	→ 🖺 159
	Function Input 1 Level (2311)	→ 🖺 159
	Fixed value inp. 1 (2332)	→ 🖺 159
	Level external input 2 (2306)	→ 🗎 160
	Function Input 2 Level (2331)	→ 🖺 160
	Fixed value inp. 2 (2333)	→ 🖺 160
	Interface external input 1 (2334)	→ 🖺 161
	Function input 1 interface (2336)	→ 🖺 161
	Fixed value input 1 interface (2338)	→ 🖺 161
	Interface external input 2 (2335)	→ 🖺 162
	Function input 2 interface (2337)	→ 🖺 162
	Fixed value input 2 interface (2344)	→ 🖺 162
	Control measurement (1083)	→ 🖺 163
	Measurement (1082)	→ 🖺 163
► Output		→ 🖺 164
► Current output	1 to 2	→ 🖺 165
	Assign current output (0359–1 to 2)	→ 🖺 166
	Current span (0353–1 to 2)	→ 🖺 167
	Fixed current (0365–1 to 2)	→ 🖺 168

16

	Damping output (0363–1 to 2)	→ 🖺 168
	System damping (1174–1 to 2)	→ 🖺 168
	Output current 1 to 2 (0361–1 to 2)	→ 🖺 168
	Failure mode (0364–1 to 2)	→ 🗎 169
	Failure current (0352–1 to 2)	→ 🖺 169
	Turn down (0358–1 to 2)	→ 🖺 170
	4 mA value (0367–1 to 2)	→ 🖺 170
	20 mA value (0372–1 to 2)	→ 🖺 170
	Measuring mode (0351–1 to 2)	→ 🗎 171
	Start-up mode (0368)	→ 🗎 171
	Start-up current (0369)	→ 🗎 172
	Measured current 1 (0366)	→ 🖺 172
	Terminal voltage 1 (0662)	→ 🖺 172
► Switch output		→ 🖺 173
	Switch output function (0481)	→ 🗎 174
	Assign diagnostic behavior (0482)	→ 🖺 174
	Assign limit (0483)	→ 🗎 175
	Switch-on value (0466)	→ 🖺 175
	Switch-off value (0464)	→ 🖺 176
	Assign status (0485)	→ 🖺 177
	Switch-on delay (0467)	→ 🖺 177
	Switch-off delay (0465)	→ 🖺 177
	Failure mode (0486)	→ 🖺 178
		, = 1,0
	Switch status (0461)	→ 🖺 178
	Switch status (0461) Invert output signal (0470)	→ 🖺 178→ 🖺 178

► Communication		→ 🖺 179
► Diagnost	▶ Diagnostic configuration	
► Configura	► Configuration	
	HART short tag (0220)	→ 🖺 183
	Device tag (0215)	→ 🖺 183
	HART address (0219)	→ 🖺 183
	No. of preambles (0217)	→ 🖺 183
► Informati	ion	→ 🖺 185
	Device revision (0204)	→ 🗎 186
	Device ID (0221)	→ 🖺 186
	Device type (0222)	→ 🖺 186
	Manufacturer ID (0223)	→ 🗎 186
	HART revision (0205)	→ 🖺 187
	HART descriptor (0212)	→ 🖺 187
	HART message (0216)	→ 🖺 187
	Hardware revision (0206)	→ 🖺 187
	Software revision (0224)	→ 🖺 187
	HART date code (0202)	→ 🖺 187
▶ Burst con	► Burst configuration 1 to 3	
	Burst mode 1 to 3 (2032–1 to 3)	→ 🖺 189
	Burst command 1 to 3 (2031–1 to 3)	→ 🖺 189
	Burst variable 07 (2033)	→ 🖺 190
	Burst trigger mode (2044–1 to 3)	→ 🖺 191
	Burst trigger level (2043–1 to 3)	→ 🖺 191

		Min. update period (2042–1 to 3)	→ 🖺 191
		Max. update period (2041–1 to 3)	→ 🖺 191
	► Output		→ 🖺 192
		Assign PV (0234)	→ 🖺 193
		Primary variable (PV) (0201)	→ 🖺 193
		Assign SV (0235)	→ 🖺 193
		Secondary variable (SV) (0226)	→ 🖺 194
		Assign TV (0236)	→ 🖺 194
		Tertiary variable (TV) (0228)	→ 🖺 195
		Assign QV (0237)	→ 🖺 195
		Quaternary variable (QV) (0203)	→ 🖺 195
▶ Diagnostics			→ 🖺 196
	Actual diagnostics	(0691)	→ 🖺 198
	Timestamp (0667)		→ 🖺 198
	Previous diagnostic	es (0690)	→ 🖺 198
	Timestamp (0672)		→ 🖺 199
	Operating time from	m restart (0653)	→ 🖺 199
	Operating time (06	552)	→ 🖺 199
	► Diagnostic list		→ 🖺 200
		Diagnostics 1 to 5 (0692–1 to 5)	→ 🖺 201
		Timestamp 1 to 5 (0683–1 to 5)	→ 🖺 201
	► Event logbook		→ 🖺 202
		Filter options (0705)	→ 🖺 203
	► Device information	tion	→ 🖺 205
		Device tag (0011)	→ 🖺 206

	Serial number (0009)	→ 🖺 206	6
	Firmware version (0010)	→ 🖺 206	6
	Order code (0008)	→ 🖺 207	7
	Extended order code 1 to 3 (0023–1 to 3)	→ 🗎 207	7
	ENP version (0012)	→ 🗎 207	7
	Configuration counter (0233)	→ 🖺 207	7
► Data logging		→ 🖺 208	8
	Assign channel 1 to 4 (0851–1 to 4)	→ 🖺 209	9
	Logging interval (0856)	→ 🖺 210	0
	Clear logging data (0855)	→ 🖺 210	0
► Min/max value	s	→ 🖺 212	2
	Max. level value (2357)	→ 🖺 213	3
	Time max. level (2385)	→ 🖺 213	3
	Min. level value (2358)	→ 🖺 213	3
	Time min. level (2386)	→ 🖺 213	3
	Max. draining speed (2320)	→ 🗎 213	3
	Max. filling speed (2360)	→ 🖺 214	4
	Reset min./max. (2324)	→ 🖺 214	4
	Max. interface value (2361)	→ 🖺 214	4
	Time max. interface (2388)	→ 🖺 214	4
	Min. interface value (2362)	→ 🗎 215	5
	Time min. interface (2387)	→ 🗎 215	5
	I max. drain speed (2363)	→ 🖺 215	5
	I max. fill speed (2359)	→ 🖺 215	5

20

Max. electronics temperature (1031) → № 216 Time max. electronics temperature (1204) → № 216 Min. electronics temperature (1204) → № 216 Time min. electronics temperature (1205) → № 216 Roset min./max. temp. (1173) → № 216 ▶ Simulation → № 216 ▶ Simulation → № 219 Assign measurement variable (2328) → № 220 Simulation current output 1 to 2 (0344-1 to 2) → № 220 Simulation current output 1 to 2 (0355-1 to 2) → № 221 Value current output 1 to 2 (0355-1 to 2) → № 221 Switch output simulation (0462) → № 221 Switch status (0463) → № 221 Smulation device alarm (0654) → № 222 ▶ Device check → № 223 Start device check (1013) → № 224 Result device check (1014) → № 224 Last check time (1203) → № 225 Launch signal (1016) → № 225
Min. electronics temperature (1040)
Time min. electronics temperature (1205) Reset min./max. temp. (1173) $\rightarrow \stackrel{\bowtie}{} 216$ \blacktriangleright Simulation Assign measurement variable (2328) $\rightarrow \stackrel{\bowtie}{} 220$ Value process variable (2329) Simulation current output 1 to 2 (0354-1 to 2) Value current output 1 to 2 (0355-1 to 2) Switch output simulation (0462) $\rightarrow \stackrel{\bowtie}{} 221$ Switch status (0463) $\rightarrow \stackrel{\bowtie}{} 221$ Simulation device alarm (0654) $\rightarrow \stackrel{\bowtie}{} 222$ \blacktriangleright Device check $\rightarrow \stackrel{\bowtie}{} 224$ Result device check (1013) $\rightarrow \stackrel{\bowtie}{} 224$ Last check time (1203) $\rightarrow \stackrel{\bowtie}{} 225$
Reset min./max. temp. (1173)
▶ Simulation ⇒ 월 219 Assign measurement variable (2328) ⇒ 월 220 Value process variable (2329) ⇒ 월 220 Simulation current output 1 to 2 (0354-1 to 2) ⇒ 월 221 Value current output 1 to 2 (0355-1 to 2) ⇒ 월 221 Switch output simulation (0462) ⇒ 월 221 Switch status (0463) ⇒ 월 221 Simulation device alarm (0654) ⇒ 월 222 ▶ Device check ⇒ 월 223 Start device check (1013) ⇒ 월 224 Level stgnal (1016) ⇒ 월 225
Assign measurement variable (2328) $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $
Value process variable (2329) ⇒
Simulation current output 1 to 2 (0354-1 to 2) Value current output 1 to 2 (0355-1 to 2) Switch output simulation (0462) Switch status (0463) ⇒ $\stackrel{\triangle}{=}$ 221 Simulation device alarm (0654) ⇒ $\stackrel{\triangle}{=}$ 222 ▶ Device check ⇒ $\stackrel{\triangle}{=}$ 223 Start device check (1013) ⇒ $\stackrel{\triangle}{=}$ 224 Last check time (1203) ⇒ $\stackrel{\triangle}{=}$ 224 Level signal (1016) ⇒ $\stackrel{\triangle}{=}$ 225
Switch output simulation (0462) \Rightarrow \Rightarrow 221 Switch status (0463) \Rightarrow \Rightarrow 221 Simulation device alarm (0654) \Rightarrow \Rightarrow 222 ▶ Device check \Rightarrow \Rightarrow 223 Start device check (1013) \Rightarrow \Rightarrow 224 Result device check (1014) \Rightarrow \Rightarrow 224 Last check time (1203) \Rightarrow \Rightarrow 225
Switch status (0463) \rightarrow \rightleftharpoons 221 Simulation device alarm (0654) \rightarrow \rightleftharpoons 222 ▶ Device check \rightarrow \rightleftharpoons 223 Start device check (1013) \rightarrow \rightleftharpoons 224 Result device check (1014) \rightarrow \rightleftharpoons 224 Last check time (1203) \rightarrow \rightleftharpoons 225
Simulation device alarm (0654) → \trianglerighteq 222 → \trianglerighteq 223 Start device check (1013) Result device check (1014) Last check time (1203) → \trianglerighteq 224 Level signal (1016) → \trianglerighteq 225
Start device check
Start device check (1013) $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $
Result device check (1014) $\Rightarrow $
Last check time (1203) $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $
Level signal (1016) $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $
Launch signal (1012) → 🖺 225
Interface signal (1015) → 🖺 225
► Advanced diagnostics 1 to 2 → 🖺 233
Assign diagnostic signal 1 to 2 (11179–1 to 2) $\Rightarrow riangleq 234$
Link AD 1 to 2 to (11180−1 to 2) → 🖺 234

	Linking logic AD 1 to 2 (11181–1 to 2)	→ 🖺 235
	Sample time 1 to 2 (11187–1 to 2)	→ 🖺 235
	Calculation type 1 to 2 (11174–1 to 2)	→ 🖺 235
	Check mode 1 to 2 (11175–1 to 2)	→ 🖺 236
	Calculation unit 1 to 2 (11188–1 to 2)	→ 🖺 237
	Upper limit 1 to 2 (11182–1 to 2)	→ 🖺 238
	Lower limit 1 to 2 (11184–1 to 2)	→ 🖺 238
	Hysteresis 1 to 2 (11178–1 to 2)	→ 🖺 239
	Maximum value 1 to 2 (11183–1 to 2)	→ 🖺 239
	Minimum value 1 to 2 (11185–1 to 2)	→ 🖺 239
	Reset min./max. 1 to 2 (11186-1 to 2)	→ 🖺 239
	Assign status signal to AD event 1 to 2 (11176–1 to 2)	→ 🖺 240
	Assign event behaviour 1 to 2 (11177–1 to 2)	→ 🖺 240
	Alarm delay 1 to 2 (11171–1 to 2)	→ 🖺 240
► Envelope diagnostics		→ 🖺 242
	Save reference curve (1218)	→ 🖺 243
	Time reference curve (1232)	→ 🖺 243
L		


Levelflex FMP5x HART "Expert" menu

4 "Expert" menu

The **Expert** menu contains all parameters of the device. It is structured according to the function blocks of the device.

4.1 Structure of the menu

Navigation 🛢 🗎 Expert

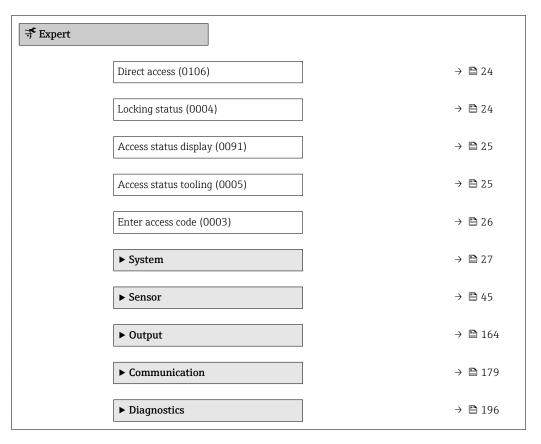

4.2 Description of parameters

Navigation 🗟 🖹 Expert

Direct access

Navigation \blacksquare Expert \rightarrow Direct access (0106)

Description Enter the access code of a parameter in order to access this parameter directly (i.e. without

navigation).

User entry 0 to 65 535

Factory setting (

Additional information The direct

The direct access code consists of a five digit number and an optional channel code, which specifies an input or output channel, e.g. 00353-2

- Leading zeros need not to be entered.
 Example: You may enter "353" instead of "00353"
- If the channel code is not entered, channel 1 is automatically selected.
 Example: By entering "353" you access the following parameter: Curr.output 1 → Current span (0353)
- In order to access a different channel: Enter the direct access code with the channel code. Example: By entering "353-2" you access the following parameter: Curr.output 2
 → Current span (0353)
- In this document, the direct access code is added in brackets after the parameter name in the *Navigation* category.

Locking status

User interface

Navigation $\blacksquare \Box$ Expert \rightarrow Locking status (0004)

Description Indicates the write protection with the highest priority that is currently active.

Hardware locked

SIL lockedWHG locked

Temporarily locked

Levelflex FMP5x HART "Expert" menu

Additional information

Meaning and priorities of the types of write protection

■ Hardware locked (priority 1)

The DIP switch for hardware locking is activated on the main electronics module. This locks write access to the parameters.

■ SIL locked (priority 2)

The SIL mode is activated. Writing access to the relevant parameters is denied.

WHG locked (priority 3)

The WHG mode is activated. Writing access to the relevant parameters is denied.

■ Temporarily locked (priority 4)

Write access to the parameters is temporarily locked on account of internal processes in progress in the device (e.g. data upload/download, reset etc.). The parameters can be modified as soon as the processes are complete.

On the display module, the $\widehat{\mathfrak{g}}$ -symbol appears in front of parameters that cannot be modified since they are write-protected.

Access status display

Prerequisite The device has a local display.

Description Indicates access authorization to parameters via local display.

User interface • Operator

Maintenance

Service

Additional information

If a figure symbol appears in front of a parameter, the parameter cannot be changed via the local display with the current access authorization.

The access authorization can be changed via the **Enter access code** parameter $(\rightarrow \stackrel{\triangle}{=} 26)$.

If additional write protection is active, this restricts the current access authorization even further. The write protection status can be viewed via the **Locking status** parameter ($\rightarrow \stackrel{\triangle}{=} 24$).

Access status tooling

Navigation \square Expert \rightarrow Access stat.tool (0005)

Description Indicates access authorization to parameters via operating tool (e.g. FieldCare).

User interface ■ Operator

Maintenance

Service

Additional information

The access authorization can be changed via the **Enter access code** parameter $(\rightarrow \implies 26)$.

If additional write protection is active, this restricts the current access authorization even further. The write protection status can be viewed via the **Locking status** parameter ($\Rightarrow \triangleq 24$).

Enter access code

Navigation $\blacksquare \blacksquare$ Expert \rightarrow Ent. access code (0003)

Description Enter access code to disable write protection of parameters.

User entry 0 to 9 999

Additional information

- If an incorrect access code is entered, the user retains his current access authorization.
- The write protection affects all parameters marked with the ♠-symbol in this document. On the local display, the ♠-symbol in front of a parameter indicates that the parameter is write-protected.
- If no key is pressed for 10 min, or the user switches from the navigation and editing mode back to the measured value display mode, the device automatically locks the writeprotected parameters after another 60 s.

Please contact your Endress+Hauser Sales Center if you lose your access code.


Levelflex FMP5x HART "Expert" menu

4.3 "System" submenu

The ${\bf System}$ submenu contains all general parameters which affect neither the measurement nor the measured value communication.

4.3.1 Structure of the submenu

Navigation $\blacksquare \blacksquare$ Expert \rightarrow System

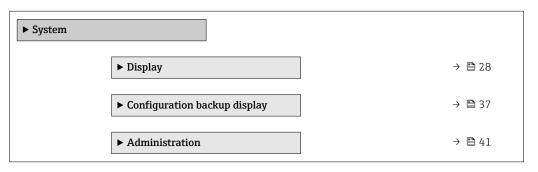


4.3.2 "Display" submenu

The **Display** submenu is used to configure the representation of measured values on the local display module. Up to four measured values can be allocated to the local display module. Additionally, display characteristics such as the format of numbers, the associated texts or the display contrast can be configured.

This submenu is only visible if a display module is connected to the device.

Structure of the submenu

Navigation \blacksquare Expert \rightarrow System \rightarrow Display

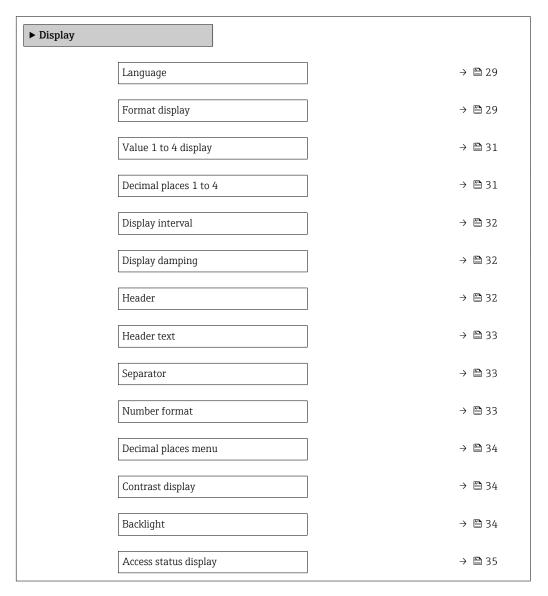

Levelflex FMP5x HART "Expert" menu

Description of parameters

Navigation $\blacksquare \square$ Expert \rightarrow System \rightarrow Display

Language

Description Set display language.

Selection ■ English

DeutschFrançais

EspañolItaliano

NederlandsPortuguesa

Polski

■ русский язык (Russian)

SvenskaTürkce

■ 中文 (Chinese)

■ 日本語 (Japanese) ■ 한국어 (Korean)

■ Bahasa Indonesia

tiếng Việt (Vietnamese)

■ čeština (Czech)

Factory setting The language selected in feature 500 of the product structure.

If no language has been selected: English

Format display

Navigation $\blacksquare \blacksquare$ Expert \rightarrow System \rightarrow Display \rightarrow Format display (0098)

Description Select how measured values are shown on the display.

Selection ■ 1 value, max. size

■ 1 bargraph + 1 value

■ 2 values

■ 1 value large + 2 values


4 values

Factory setting 1 value, max. size


Additional information




■ 5 "Format display" = "1 value, max. size"

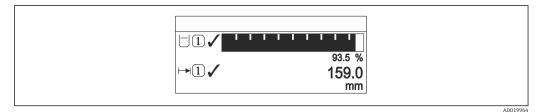


■ 6 "Format display" = "1 bargraph + 1 value"

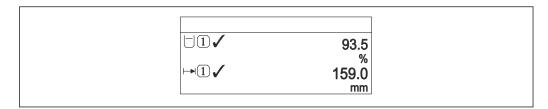

■ 7 "Format display" = "2 values"

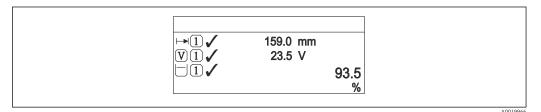

■ 8 "Format display" = "1 value large + 2 values"

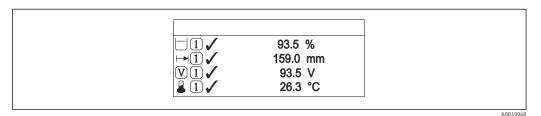

■ 9 "Format display" = "4 values"

■ The **Value 1 to 4 display** $\rightarrow \blacksquare$ 31 parameters specify which measured values are shown on the display and in which order.

■ If more measured values are specified than the current display mode permits, the values alternate on the device display. The display time until the next change is configured in the **Display interval** parameter (→ 🖺 32).

Levelflex FMP5x HART "Expert" menu

Value 1 to 4 display

Navigation Expert \rightarrow System \rightarrow Display \rightarrow Value 1 display (0107)

Description Select the measured value that is shown on the local display.

■ None 1) Selection

- Level linearized
- Distance
- Interface linearized
- Interface distance
- Thickness upper layer
- Current output 1²⁾
- Measured current
- Current output 2
- Terminal voltage
- Electronic temperature
- Measured capacitance
- Analog output adv. diagnostics 1
- Analog output adv. diagnostics 2

Factory setting For level measurements

- Value 1 display: Level linearized
- Value 2 display: Distance
- Value 3 display: Current output 1
- Value 4 display: None

For interface measurements and one current output

- Value 1 display: Interface linearized
- Value 2 display: Level linearized
- Value 3 display: Thickness upper layer
- Value 4 display: Current output 1

For interface measurements and two current outputs

- Value 1 display: Interface linearized
- Value 2 display: Level linearized
- Value 3 display: Current output 1
- Value 4 display: Current output 2

Decimal places 1 to 4

Navigation \blacksquare Expert → System → Display → Decimal places 1 to 4 (0095–1 to 4)

Description Select the number of decimal places for the display value.

Selection ■ X

- X.X
- X.XX
- X.XXX
- X.XXXX

can not be selected for the 'Value 1 display' parameter. 1)

Visibility depends on order options or device settings

Factory setting

X.XX

Additional information The setting does not affect the measuring or computational accuracy of the device.

Display interval

Navigation $\blacksquare \square$ Expert \rightarrow System \rightarrow Display \rightarrow Display interval (0096)

Description Set time measured values are shown on display if display alternates between values.

User entry 1 to 10 s

Factory setting 5 s

Additional information This parameter is only relevant if the number of selected measuring values exceeds the

number of values the selected display format can display simultaneously.

Display damping

Navigation $\blacksquare \square$ Expert \rightarrow System \rightarrow Display \rightarrow Display damping (0094)

Description Define display reaction time to fluctuations in the measured value.

User entry 0.0 to 999.9 s

Factory setting 0.0 s

Header

Navigation \blacksquare Expert \rightarrow System \rightarrow Display \rightarrow Header (0097)

Description Select header contents on local display.


Selection ■ Device tag

■ Free text

Factory setting Device tag

Levelflex FMP5x HART "Expert" menu

Additional information

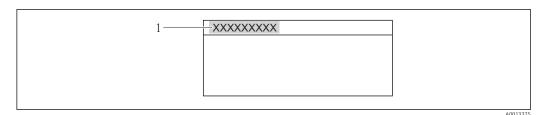

1 Position of the header text on the display

Meaning of the options

Device tag

Is defined in the **Device tag** parameter ($\rightarrow \triangleq 183$).

• Free text

Is defined in the **Header text** parameter ($\rightarrow \triangleq 33$).

Header text

Navigation \blacksquare Expert \rightarrow System \rightarrow Display \rightarrow Header text (0112)

Prerequisite Header ($\Rightarrow \triangleq 32$) = Free text

Description Enter display header text.

Factory setting ------

Additional information The number of characters which can be displayed depends on the characters used.

Navigation \blacksquare Expert \rightarrow System \rightarrow Display \rightarrow Separator (0101)

Description Select decimal separator for displaying numerical values.

Selection • .

Separator

■ ,

Factory setting .

Number format

Navigation $\blacksquare \blacksquare$ Expert \rightarrow System \rightarrow Display \rightarrow Number format (0099)

Description Choose number format for the display.

Selection • Decimal

• ft-in-1/16"

Factory setting Decimal

Additional information The **ft-in-1/16"** option is only valid for distance units.

Decimal places menu

Navigation \blacksquare Expert \rightarrow System \rightarrow Display \rightarrow Dec. places menu (0573)

Description Select number of decimal places for the representation of numbers within the operating

menu.

Selection ■ x

■ X.X

X.XXX.XXX

X.XXXX

Factory setting x.xxxx

Additional information • Is only valid for numbers in the operating menu (e.g. Empty calibration, Full

calibration), but not for the measured value display. The number of decimal places for the measured value display is defined in the **Decimal places 1 to 4** \Rightarrow \Rightarrow 31 parameters.

• The setting does not affect the accuracy of the measurement or the calculations.

Contrast display

Navigation $\blacksquare \sqsubseteq$ Expert \rightarrow System \rightarrow Display \rightarrow Contrast display (0105)

Description Adjust local display contrast setting to ambient conditions (e.g. lighting or reading angle).

User entry 20 to 80 %

Factory setting Dependent on the display.

Additional information Setting the contrast via push-buttons:

■ Darker: press the 🖸 and 📵 buttons simultaneously.

■ Brighter: press the 🕞 and 🖲 buttons simultaneously.

Backlight

Navigation $\blacksquare \blacksquare$ Expert \rightarrow System \rightarrow Display \rightarrow Backlight (0111)

Prerequisite The device has the SD03 local display (with optical keys).

Description Switch the local display backlight on and off.

Levelflex FMP5x HART "Expert" menu

Selection • Disable

Enable

Factory setting Disable

Additional information

Meaning of the options

Disable

Switches the backlight off.

■ Enable

Switches the backlight on.

Regardless of the setting in this parameter the backlight may be automatically switched off by the device if the supply voltage is too low.

Access status display

Navigation $\blacksquare \Box$ Expert \rightarrow System \rightarrow Display \rightarrow Access stat.disp (0091)

Prerequisite The device has a local display.

Description Indicates access authorization to parameters via local display.

User interface ■ Operator

Maintenance

Service

Additional information

- If a $\frac{1}{12}$ symbol appears in front of a parameter, the parameter cannot be changed via the local display with the current access authorization.
- The access authorization can be changed via the **Enter access code** parameter $(\rightarrow \cong 26)$.
- If additional write protection is active, this restricts the current access authorization even further. The write protection status can be viewed via the **Locking status** parameter ($\rightarrow \cong 24$).

4.3.3 "Configuration backup display" submenu

This submenu is only visible if a display module is connected to the device.

All software configurations are initially stored in a memory module (HistoROM) in the housing and are thus permanently connected with the device. As an additional option, the display module contains a backup memory for the device configuration. The transmission of configuration data between these two memory modules is controlled by the

Configuration management parameter ($\rightarrow \triangleq$ 38). It provides the following options:

■ Execute backup

Saves the current device configuration in the display module.

Restore

This option can be used to restore a configuration back into the device which has previously been saved in the display module.

Duplicate

If the configuration has been saved into the display module, the module can be connected to a different device and the configuration can be duplicated to this device. This allows to efficiently configure a number of devices in the same way.

Compare


The comparison result indicates whether the device configuration has been changed since the last backup.

- For FMP51, FMP52, FMP54, FMP55: Configurations can only be exchanged between devices which are in the same operating mode (see the **Operating mode** parameter $(\rightarrow \implies 47)$).
- If an existing backup is restored to a different device using the **Restore** option, it may occur that some device functionalities are no longer available. Even a reset to the delivery state won't restore the original state in some cases.

In order to transfer the configuration to a different device only the **Duplicate** option should be used.

Structure of the submenu

Navigation $\blacksquare \blacksquare$ Expert \rightarrow System \rightarrow Conf.backup disp

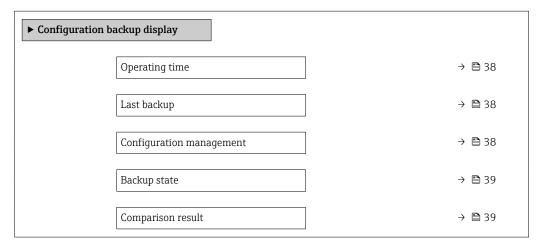

Description of parameters

Navigation $\blacksquare \sqsubseteq$ Expert \rightarrow System \rightarrow Conf.backup disp

Operating time

Navigation $\blacksquare \blacksquare$ Expert \rightarrow System \rightarrow Conf.backup disp \rightarrow Operating time (0652)

Description Indicates how long the device has been in operation.

User interface Days (d), hours (h), minutes (m), seconds (s)

Additional information *Maximum time*

9999 d (≈ 27 years)

Last backup

Navigation $\blacksquare \Box$ Expert \rightarrow System \rightarrow Conf.backup disp \rightarrow Last backup (0102)

Description Indicates when the last data backup was saved to the display module.

User interface Days (d), hours (h), minutes (m), seconds (s)

Configuration management

Navigation \blacksquare Expert \rightarrow System \rightarrow Conf.backup disp \rightarrow Config. managem. (0100)

Description Select action for managing the device data in the display module.

Selection • Cancel

■ Execute backup

■ Restore

Duplicate

Compare

Clear backup data

Factory setting Cancel

Additional information Meaning of the options

Cancel

No action is executed and the user exits the parameter.

Execute backup

A backup copy of the current device configuration in the HistoROM (built-in in the device) is saved to the display module of the device.

Restore

The last backup copy of the device configuration is copied from the display module to the HistoROM of the device.

Duplicate

The transmitter configuration is duplicated to another device using the transmitter display module. The following parameters, which characterize the individual measuring point are **not** included in the transmitted configuration:

- HART date code
- HART short tag
- HART message
- HART descriptor
- HART address
- Device tag
- Medium type

Compare

The device configuration saved in the display module is compared to the current device configuration of the HistoROM. The result of this comparison is displayed in the **Comparison result** parameter ($\rightarrow \implies 39$).

Clear backup data

The backup copy of the device configuration is deleted from the display module of the device.

- While this action is in progress, the configuration cannot be edited via the local display and a message on the processing status appears on the display.
- If an existing backup is restored to a different device using the **Restore** option, it may occur that some device functionalities are no longer available. In some cases even a device reset will not restore the original status.

In order to transmit a configuration to a different device, the **Duplicate** option should always be used.

Backup :	state
----------	-------

Navigation

Description

Displays which backup action is currently in progress.

Comparison result

Navigation

 \blacksquare ■ Expert \rightarrow System \rightarrow Conf.backup disp \rightarrow Compar. result (0103)

Description

Displays the comparison result between the device and the display.

Additional information

Meaning of the display options

Settings identical

The current device configuration of the HistoROM is identical to the backup copy in the display module.

Settings not identical

The current device configuration of the HistoROM is not identical to the backup copy in the display module.

No backup available

There is no backup copy of the device configuration of the HistoROM in the display module.

Backup settings corrupt

The current device configuration of the HistoROM is corrupt or not compatible with the backup copy in the display module.

Check not done

The device configuration of the HistoROM has not yet been compared to the backup copy in the display module.

■ Dataset incompatible

The data sets are incompatible and can not be compared.


- To start the comparison, set **Configuration management** ($\rightarrow \triangleq 38$) = **Compare**.
- If the transmitter configuration has been duplicated from a different device by Configuration management (→ 🖹 38) = Duplicate, the new device configuration in the HistoROM is only partially identical to the configuration stored in the display module: Sensor specific properties (e.g. the mapping curve) are not duplicated. Thus, the result of the comparison will be Settings not identical.

4.3.4 "Administration" submenu

The **Administration** submenu contains all parameters for the management of the device. Its structure depends on the user interface:


Structure of the submenu on the local display

Navigation riangle Expert riangle System riangle Administration

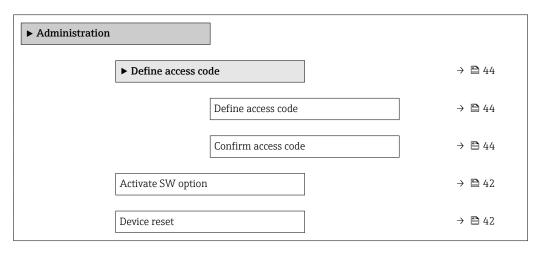

Structure of the submenu in an operating tool

Navigation \square Expert \rightarrow System \rightarrow Administration

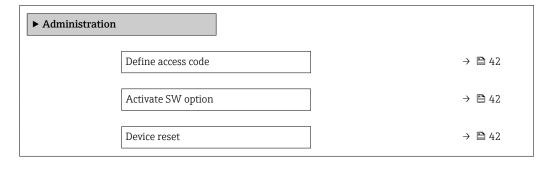

Description of parameters

Navigation \square Expert \rightarrow System \rightarrow Administration

 Define access code

 Navigation
 \blacksquare Expert → System → Administration → Def. access code (0093)

Description Define release code for write access to parameters.

User entry 0 to 9 999

Factory setting 0

Additional information

- If the factory setting is not changed or 0 is defined as the access code, the parameters are not write-protected and the configuration data of the device can then always be modified. The user is logged on in the *Maintenance* role.
- The write protection affects all parameters marked with the symbol in this document. On the local display, the symbol in front of a parameter indicates that the parameter is write-protected.
- Once the access code has been defined, write-protected parameters can only be modified if the access code is entered in the **Enter access code** parameter $(\rightarrow \cong 26)$.
- Please contact your Endress+Hauser Sales Center if you lose your access code.
- For display operation: The new access code is only valid after it has been confirmed in the **Confirm access code** parameter $(\rightarrow \triangleq 44)$.

Activate SW option

Navigation \blacksquare Expert \rightarrow System \rightarrow Administration \rightarrow Activate SW opt. (0029)

Description Enter code to unlock specific software options.

User entry Positive integer

Factory setting 0

Device reset

Navigation \blacksquare Expert \rightarrow System \rightarrow Administration \rightarrow Device reset (0000)

Description Select to which state the device is to be reset.

Selection • Cancel

■ To factory defaults

■ To delivery settings

- Of customer settings
- To transducer defaults

Restart device

Factory setting

Cancel

Additional information

Meaning of the options

Cancel

No action

■ To factory defaults

All parameters are reset to the order-code specific factory setting.

■ To delivery settings

All parameters are reset to the delivery setting. The delivery setting may differ from the factory default if customer specific settings have been ordered.

This option is only visible if customer specific settings have been ordered.

Of customer settings

All customer parameters are reset to their factory setting. Service parameters, however, remain unchanged.

■ To transducer defaults

Every measurment-related parameter is reset to its factory setting. Service parameters and communication-related parameters, however, remain unchanged.

Restart device

The restart resets every parameter which is stored in the volatile memory (RAM) to the factory setting (e.g. measured value data). The device configuration remains unchanged.

"Define access code" wizard

Define access code

Navigation extstyle extstyle

Description $\rightarrow \stackrel{\triangle}{=} 42$

Confirm access code

Navigation \blacksquare Expert \rightarrow System \rightarrow Administration \rightarrow Def. access code \rightarrow Confirm code

Description Confirm the entered access code.

User entry 0 to 9 999

Factory setting 0


4.4 "Sensor" submenu

The **Sensor** submenu contains all parameters related to the measurement and the sensor settings.

Navigation $\blacksquare \blacksquare$ Expert \rightarrow Sensor

4.4.1 Structure of the submenu

Navigation $\blacksquare \blacksquare$ Expert \rightarrow Sensor

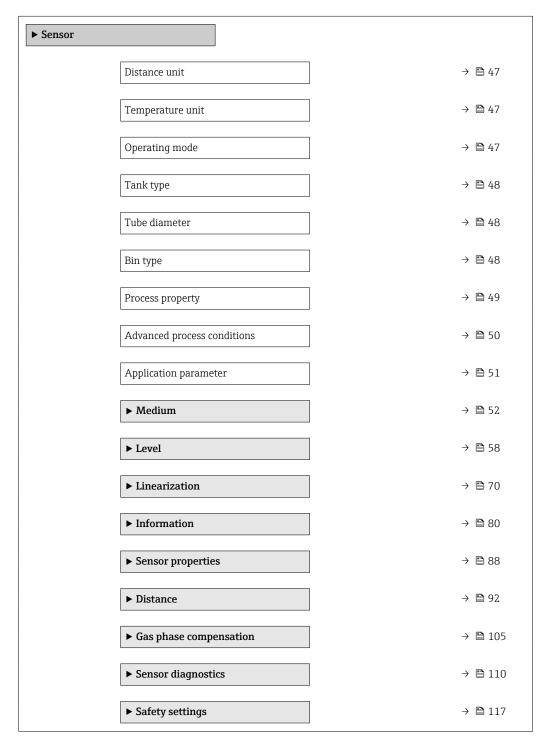

► Envelope curve	→ 🗎 123
► Mapping	→ 🖺 127
► EOP evaluation	→ 🖺 134
► Echo tracking	→ 🖺 141
► Interface	→ 🖺 152
► External input	→ 🖺 158

4.4.2 Description of parameters

Distance unit

Navigation \blacksquare Expert \rightarrow Sensor \rightarrow Distance unit (0551)

Description Select distance unit.

Selection SI units US units

■ mm

■ ft

■ m ■ in

Factory setting m

Temperature unit

Navigation $\blacksquare \square$ Expert \rightarrow Sensor \rightarrow Temperature unit (0557)

Description Select temperature unit.

Selection SI units US units

 • °C
 • °F

 • K
 • °R

Factory setting °C

Operating mode

Navigation $\blacksquare \Box$ Expert \rightarrow Sensor \rightarrow Operating mode (1046)

Prerequisite The device has the "interface measurement" application package (available for FMP51,

FMP52, FMP54) 3). FMP55 always contains this package.

Description Select operating mode.

Selection • Level

Interface with capacitance

Interface

Factory setting ■ FMP51/FMP52/FMP54: **Level**

■ FMP55: Interface with capacitance

³⁾ Product structure: Feature 540 "Application Package", Option EB "Interface measurement"

Additional information

The Interface with capacitance option is only available for FMP55.

Tank type

Navigation $\blacksquare \square$ Expert \rightarrow Sensor \rightarrow Tank type (1175)

Prerequisite Medium type ($\rightarrow \equiv 53$) = Liquid

Description Select tank type.

Selection • Metallic

Bypass / pipeNon metallicMounted outside

■ Coaxial

Factory setting Depending on the probe

Additional information

- Depending on the probe some of the options mentioned above may not be available or there may be additional options.
- For coax probes, the default setting is **Tank type = Coaxial** and can not be changed.
- For probes with metallic center washer, **Tank type = Bypass / pipe** is preset and can not be changed.

Tube diameter

Navigation \blacksquare Expert \rightarrow Sensor \rightarrow Tube diameter (1117)

Prerequisite ■ Tank type (→ 🖺 48) = Bypass / pipe

■ The probe is coated.

Description Specify diameter of bypass or stilling well.

User entry 0 to 9.999 m

Factory setting 0.0384 m

Bin type

Navigation \blacksquare Expert \rightarrow Sensor \rightarrow Bin type (1176)

Prerequisite Medium type (→ 🗎 53) = Solid

Description Specify bin type.

Selection

- Concrete
- Plastic wood
- Metallic
- Aluminium
- Buffer silo (fast)
- Bin / Pile
- Crusher / belt
- Silo
- Workbench test

Factory setting

Metallic

Navigation

Description

Specify typical rate of level change.

Selection

For "Medium type" = "Liquid"

- Very fast > 10 m (400 in)/min
- Fast > 1 m (40 in)/min
- Standard < 1 m (40in) /min
- Medium < 10 cm (4in) /min
- Slow < 1 cm (0.4in) /min
- No filter / test

For "Medium type" = "Solid"

- Very fast > 100 m (333 ft) /h
- Fast > 10 m (33 ft) /h
- Standard < 10 m (33 ft) /h
- Medium < 1 m (3ft) /h
- Slow < 0.1 m (0.3 ft) / h
- No filter / test

Factory setting

Standard < 1 m (40in) /min

Additional information

The device adjusts the signal evaluation filters and the damping of the output signal to the typical rate of level change defined in this parameter:

For "Operating mode" = "Level" and "Medium type" = "Liquid"

Process property	Step response time / s
Very fast > 10 m (400 in)/min	5
Fast > 1 m (40 in)/min	5
Standard < 1 m (40in) /min	14
Medium < 10 cm (4in) /min	39
Slow < 1 cm (0.4in) /min	76
No filter / test	< 1

For "Operating mode" = "Level" and "Medium type" = "Solid"

Process property	Step response time / s
Very fast > 100 m (333 ft) /h	37
Fast > 10 m (33 ft) /h	37
Standard < 10 m (33 ft) /h	74
Medium < 1 m (3ft) /h	146
Slow < 0.1 m (0.3ft) /h	290
No filter / test	< 1

For "Operating mode" = "Interface" or "Interface with capacitance"

Process property	Step response time / s
Very fast > 10 m (400 in)/min	5
Fast > 1 m (40 in)/min	5
Standard < 1 m (40in) /min	23
Medium < 10 cm (4in) /min	47
Slow < 1 cm (0.4in) /min	81
No filter / test	2.2

- Other values of the step-response time (e.g. intermediate values) can be defined by the following parameters:
 - Dead time (→ 🗎 95)
 - Integration time (→ 🖺 96)

Advanced process co	naitions
---------------------	----------

Navigation $\blacksquare \square$ Expert \rightarrow Sensor \rightarrow Adv. conditions (1177)

Prerequisite Operating mode (→ 🗎 47) = Level

Description Specify additional process conditions (if required).

Selection • None

- Oil/Water condensate
- Probe near tank bottom
- Build up
- Foam (>5cm/0,16ft)

Factory setting None

Additional information

Meaning of the options

Oil/Water condensate (only Medium type = Liquid)

Makes sure that in the case of two-phase media only the total level is detected (example: oil/condensate application).

■ Probe near tank bottom (only for Medium type = Liquid)

Improves the empty detection, especially if the probe is mounted close to the tank bottom.

Build up

Enables a safe empty-detection even if the end-of-probe signal has shifted due to build-up.

■ Foam (>5cm/0,16ft) (only for Medium type = Liquid)

Optimizes the signal evaluation in applications with foam formation.

Application parameter

Expert \rightarrow Sensor \rightarrow Applicat. param. (1126)

Description Indicates whether settings depending on the application parameters (e.g. **Advanced**

process conditions ($\rightarrow \triangleq 50$), Tank type ($\rightarrow \triangleq 48$) and Tube diameter ($\rightarrow \triangleq 48$))

have been changed after the basic setup.

User interface ■ Changed

Not changed

Additional information

Meaning of the options

Changed

Parameters have been changed. The device is no longer in the state defined by the application parameters.

Not changed

There have been no changes. The device is still in the state defined by the application parameters.

4.4.3 "Medium" submenu


The **Medium** submenu is used to specify the relevant properties of the measured medium, especially the dielectric constant (DC).

The dielectric constant is used to calculate the threshold for the level echo and (if applicable) the interface echo.

For FMP51/FMP52/FMP54/FMP55: The **Operating mode** parameter (→ 🖺 47) determines which parameters this submenu contains.

Structure of the submenu

Navigation $\blacksquare \blacksquare$ Expert \rightarrow Sensor \rightarrow Medium

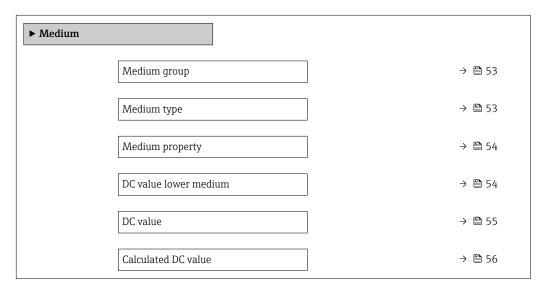

Description of parameters

Navigation $\blacksquare \blacksquare$ Expert \rightarrow Sensor \rightarrow Medium

Medium group

Navigation $\blacksquare \blacksquare$ Expert \rightarrow Sensor \rightarrow Medium \rightarrow Medium group (1208)

Prerequisite ■ For FMP51/FMP52/FMP54/FMP55: Operating mode (→ 🖺 47) = Level

■ Medium type (→ 🖺 53) = Liquid

Description Select medium group.

Selection • Others

■ Water based (DC >= 4)

Factory setting Others

Additional information

This parameter roughly specifies the dielectric constant (DC) of the medium. For a more detailed definition of the DC use the **Medium property** parameter ($\rightarrow \implies 54$).

The **Medium group** parameter presets the **Medium property** parameter ($\rightarrow \implies 54$) as follows:

Medium group	Medium property (→ 🖺 54)
Others	Unknown
Water based (DC >= 4)	DC 4 7

- The **Medium property** parameter can be changed at a later point of time. However, when doing so, the **Medium group** parameter retains its value. Only the **Medium property** parameter is relevant for the signal evaluation.
- The measuring range may be reduced for small dielectric constants. For details refer to the Technical Information (TI) of the respective device.

Medium type	a
Navigation	

Description Specify type of medium.

User interface ■ Liquid ■ Solid

Factory setting ■ FMP50, FMP51, FMP52, FMP53, FMP54, FMP55: **Liquid**

■ FMP56, FMP57: Solid

Additional information

The **Solid** option is only available for **Operating mode** (→ 🖺 47) = **Level**

This parameter determines the value of several other parameters and strongly influences the complete signal evaluation. Therefore, it is strongly recommended **not to change** the factory setting.

Medium property

Navigation \blacksquare Expert \rightarrow Sensor \rightarrow Medium property (1165)

Prerequisite
■ Operating mode (→ 🖺 47) = Level
■ EOP level evaluation ≠ Fix DC

Description Specify relative dielectric constant ε_r of the medium.

Selection • Unknown

■ DC 1.4 ... 1.6

■ DC 1.6 ... 1.9

■ DC 1.9 ... 2.5

■ DC 2.5 ... 4

■ DC 4 ... 7

■ DC 7 ... 15

■ DC > 15

Factory setting

Dependent on **Medium type** ($\rightarrow \implies 53$) and **Medium group** ($\rightarrow \implies 53$).

Additional information

Dependency on "Medium type" and "Medium group"

Medium type (→ 🗎 53)	Medium group (→ 🗎 53)	Medium property
Solid		Unknown
Liquid	Water based (DC >= 4)	DC 4 7
	Others	Unknown

- For dielectric constants (DC values) of many media commonly used in various industries refer to:
 - the Endress+Hauser DC manual (CP01076F)
 - the Endress+Hauser "DC Values App" (available for Android and iOS)
- For **EOP level evaluation** = **Fix DC**, the exact dielectric constant has to be entered into the **DC value** parameter. Therefore, the **Medium property** parameter is not available in this case.

DC value lower medium

Navigation \blacksquare Expert \rightarrow Sensor \rightarrow Medium \rightarrow DC lower medium (1154)

Prerequisite Operating mode $(\rightarrow \triangleq 47)$ = Interface or Interface with capacitance

Description Specify the relative dielectric ocnstant ε_r of the lower medium.

User entry 1 to 100

Factory setting 80.0

Additional information

For dielectric constants (DC values) of many media commonly used in various industries refer to:

- the Endress+Hauser DC manual (CP01076F)
- the Endress+Hauser "DC Values App" (available for Android and iOS)

The factory setting, ε_r = 80, is valid for water at 20 °C (68 °F).

DC value

Navigation \blacksquare Expert \rightarrow Sensor \rightarrow Medium \rightarrow DC value (1201)

Description ■ For level measurements:

Specify dielectric constant ε_r .

• For interface measurements:

Specify dielectric constant $\epsilon_{\rm r}$ of the upper medium.

User entry Signed floating-point number

Factory setting Dependent on the following parameters:

• Operating mode (\rightarrow \triangleq 47)

■ Medium property (→ 🗎 54)

■ Medium type (→ 🖺 53)

■ Bin type (\rightarrow \triangleq 48) or Tank type (\rightarrow \triangleq 48)

Additional information

Dependence of the factory settings on other parameters

For "Operating mode" = "Level"

Medium property (→ 🗎 54)	Medium type (→ 🖺 53)	Bin type (→ 🖺 48) or Tank type (→ 🖺 48)	DC value
Unknown	Solid	Bin type (→ 🖺 48) ■ Aluminium ■ Plastic wood	1.9
		Bin type (→ 🖺 48) ■ Concrete ■ Metallic	1.6
	Liquid	Tank type (→ 🖺 48) Coaxial	1.4
		Any other tank type	1.9
DC 1.4 1.6	Solid	Bin type (→ 🖺 48) Concrete Aluminium Plastic wood	1.6
		Bin type (→ 🖺 48) Metallic	1.4
	Liquid	Tank type (→ 🖺 48) Non metallic Mounted outside	1.6
		Any other tank type	1.4

Medium property (→ 🖺 54)	Medium type (→ 🖺 53)	Bin type (→ 🖺 48) or Tank type (→ 🖺 48)	DC value
DC 1.6 1.9			1.6
DC 1.9 2.5			1.9
DC 2.5 4			2.5
DC 4 7			4
DC 7 15			7
DC > 15			15

For "Operating mode" = "Interface with capacitance" or "Interface": **DC value** = 1.9



As the value defines the echo threshold, it may not exceed the actual DC of the medium. Dielectric constants above DC = 15 have only a very limited influence on the echo threshold.

Calculated DC value

Navigation

Prerequisite

EOP level evaluation = Automatic DC

Description

- For Operating mode (\rightarrow 🖺 47) = Level:
 - Displays the dielectric constant calculated from the level and end-of-probe signals.
- For Operating mode (→ 🖺 47) = Interface or Interface with capacitance:
- For Interface property (→ 🖺 153) = Special: automatic DC:
 - Displays the dielectric constant of the upper medium which has been calculated from the level and interface signal.
- Else:


Identical to **DC value** ($\rightarrow \stackrel{\triangle}{=} 55$).

User interface

1.0 to 100.0

4.4.4 "Level" submenu

The **Level** submenu ($\rightarrow \implies 58$) is used to configure the calculation of the level from the measured distance.

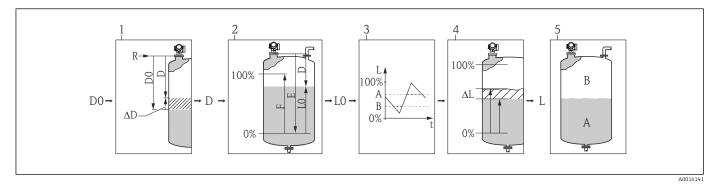

 $\blacksquare 10$ Calculation of the level from the measured distance

- 1 Correction of the measured distance
- 2 Level calculation
- B Level limitation
- 4 Correction of the level
- 5 Definition of the output value: Level (A) or Ullage (B)

Structure of the submenu

Navigation $\blacksquare \Box$ Expert \rightarrow Sensor \rightarrow Level

▶ Level	
Distance offset	→ 🖺 59
Empty calibration	→ 🖺 60
Full calibration	→ 🖺 61
Level unit	→ 🗎 62
Level limit mode	→ 🖺 63
High limit	→ 🖺 64
Low limit	→ 🖺 64
Level correction	→ 🖺 64
Output mode	→ 🖺 65
Level	→ 🖺 65
Level linearized	→ 🖺 67
Interface	→ 🖺 67
Interface linearized	→ 🖺 67
Thickness upper layer	→ 🖺 68

Description of parameters

Navigation

Distance offset

Navigation

Description Specify distance offset.


User entry -200 to 200 m

Factory setting $0 \, m$

Additional information

The value specified in this parameter is added to the measured distance between the reference point of the measurement and the level echo.

- Positive values increase the distance and thus decrease the level.
- Negative values decrease the distance and thus increase the level.

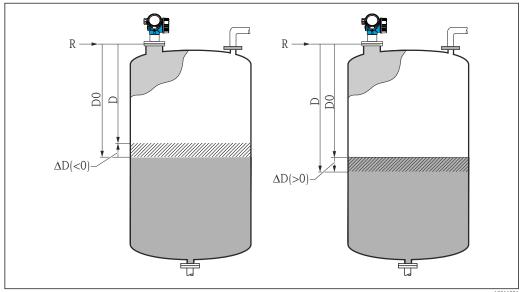

- **■** 11 Effect of "Distance offset (→ 🖺 59)"
- ΔD Distance offset
- D0Measured distance
- Corrected distance (is used to calculate the level) D
- Reference point
- The value entered in this parameter changes the distance input into the level block and thus influences the measured level. This change, however, is not taken into account in the displayed distance.

Empty calibration


Description Specify the distance E between the process connection and the minimum level (0%). This

defines the starting point of the measuring range.


User entry Depending on the probe

Factory setting Depending on the probe


Additional information

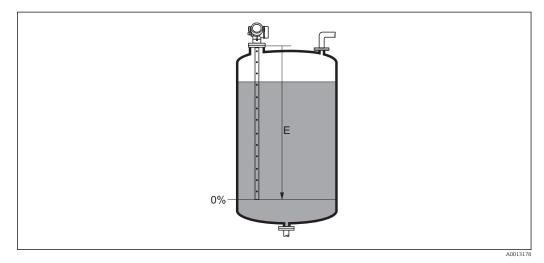

■ 12 Empty calibration (E) for level measurements in liquids

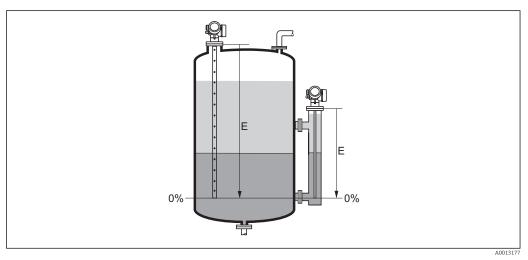

■ 13 Empty calibration (E) for interface measurements

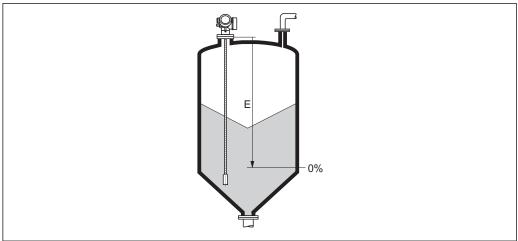

Empty calibration (E) for level measurements in bulk solids.

In the case of interface measurements the ${\bf Empty\ calibration}$ parameter is valid for both, the total and the interface level.

Full calibration


Navigation Expert \rightarrow Sensor \rightarrow Level \rightarrow Full calibr. (2308)

Description Specify the distance F between the minimum level (0%) and the maximum level (100%).


User entry Depending on the probe

Factory setting Depending on the probe


Additional information

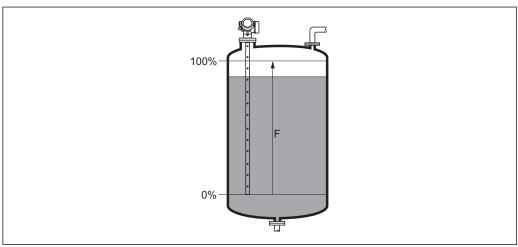

 \blacksquare 15 Full calibration (F) for level measurements in liquids

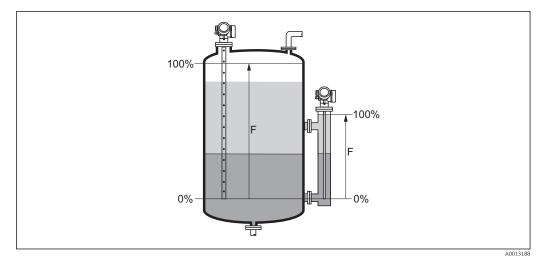

■ 16 Full calibration (F) for interface measurements

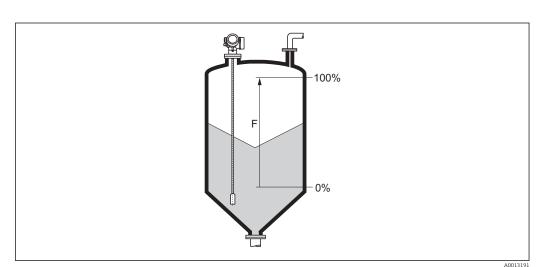

■ 17 Full calibration (F) for level measurements in bulk solids

In the case of interface measurements the **Full calibration** parameter is valid for both, the total and the interface level.

 Level unit

 Navigation
 \blacksquare Expert \Rightarrow Sensor \Rightarrow Level \Rightarrow Level unit (0576)

 Description
 Select level unit.

Selection $SI \ units$ $US \ units$ $\bullet \ \%$ $\bullet \ \text{ft}$ $\bullet \ \text{m}$ $\bullet \ \text{in}$

Factory setting %

Additional information The level unit may differ from the distance unit defined in the **Distance unit** parameter $(\rightarrow \ \ \)$ 47):

> • The unit defined in the **Distance unit** parameter is used for the basic calibration (**Empty** calibration ($\rightarrow \stackrel{\triangle}{=} 60$) and Full calibration ($\rightarrow \stackrel{\triangle}{=} 61$)).

■ The unit defined in the **Level unit** parameter is used to display the (unlinearized) level.

Level limit mode

Navigation

Description Select the type of level limitation.


Selection Off

- Low limit • High limit
- Low and High Limit

Factory setting Low limit

Additional information

The parameter determines to which direction the level is limited. The exact limits are defined in the **High limit** ($\rightarrow \implies 64$) und **Low limit** ($\rightarrow \implies 64$) parameters.

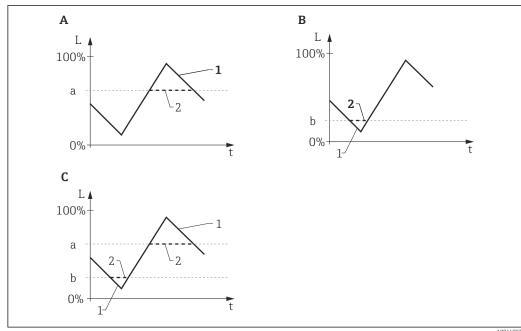

■ 18 Effect of the "Level limit mode", "High limit" and "Low limit" parameters

- Α "Level limit mode" = "High limit"
- В "Level limit mode" = "Low limit"
- С "Level limit mode" = "Low and High Limit"
- "High limit"
- "Low limit"
- Level before limitation
- Level after limitation

High limit

Navigation $\blacksquare \blacksquare$ Expert \rightarrow Sensor \rightarrow Level \rightarrow High limit (2312)

Prerequisite Level limit mode (→ 🖺 63) = High limit or Low and High Limit

Description Specify upper limit.

User entry Signed floating-point number

Factory setting 0 %

Additional information Levels exceeding the value specified in this parameter will be ignored. Instead, the device

uses the maximum level specified in this parameter (for measured value transformation

and output).

Low limit

Navigation $\blacksquare \square$ Expert \rightarrow Sensor \rightarrow Level \rightarrow Low limit (2313)

Prerequisite Level limit mode ($\rightarrow \triangleq 63$) = Low limit or Low and High Limit

Description Specify lower level limit.

User entry -200 000.0 to 200 000.0 %

Factory setting 0.0%

Additional information Levels falling below the value specified in this parameter will be ignored. Instead, the

device uses the minimum level specified in this parameter (for measured value

transformation and output).

Level correction

Navigation \blacksquare Expert \rightarrow Sensor \rightarrow Level \rightarrow Level correction (2325)

Description Specify level correction (if required).

User entry -200 000.0 to 200 000.0 %

Factory setting 0.0 %

Additional information The value specified in this parameter is added to the measured level (before linearization).

Output mode

Navigation \blacksquare Expert \rightarrow Sensor \rightarrow Level \rightarrow Output mode (2317)

Description Select output mode.

Selection • Ullage

■ Level linearized

Factory setting Level linearized

Additional information


Meaning of the options

Ullage

The remaining space in the tank or silo is indicated.

Level linearized

The level is indicated (more precisely: the linearized value if a linearization has been activated).

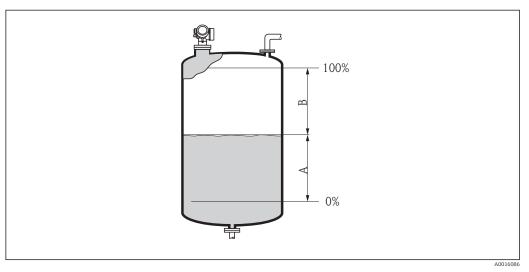

■ 19 Definition of the "Output mode (\rightarrow 🗎 65)" parameter

A Level linearized

B Ullage


The Ullage option is not available for Linearization type (→ 🖺 72) = Table.

Level


Navigation $\blacksquare \blacksquare$ Expert \rightarrow Sensor \rightarrow Level \rightarrow Level (2319)

Description Displays measured level L_L (before linearization).


Additional information

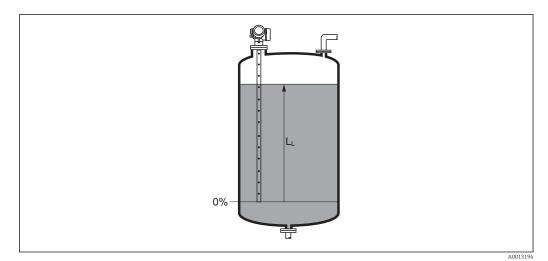

■ 20 Level in case of liquid measurements

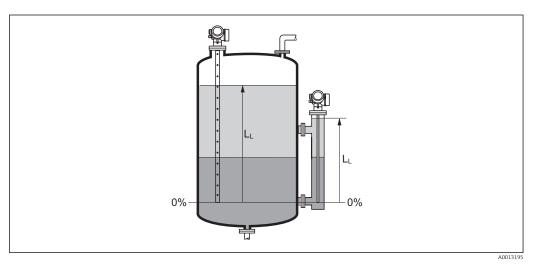

■ 21 Level in case of interface measurements

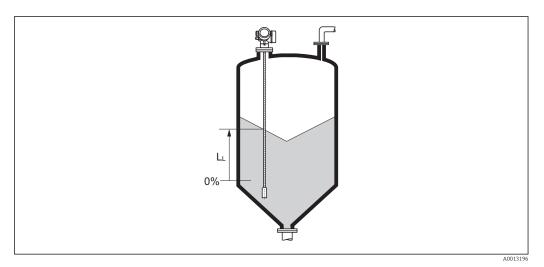

■ 22 Level in case of bulk solid measurements

Level linearized

Navigation

Description Displays linearized level.

Additional information • The unit is defined by the **Unit after linearization** parameter $\rightarrow \implies 73$.

• For interface measurements, this parameter always refers to the total level.


Interface

Navigation

Prerequisite Operating mode (→ 🗎 47) = Interface or Interface with capacitance

Description Displays the measured interface level L_I (before linearization).

Additional information

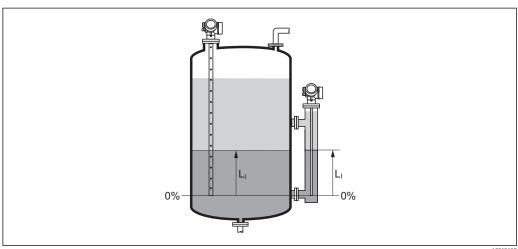

The unit is defined in the **Level unit** parameter ($\rightarrow \triangleq 62$).

Interface linearized

Navigation

Prerequisite Operating mode ($\rightarrow \triangleq 47$) = Interface or Interface with capacitance

Description Displays the linearized interface height.

Additional information The unit is defined in the **Unit after linearization** parameter $\rightarrow \triangleq 73$.

Thickness upper layer

Navigation 🚇 🖾 🛚


Prerequisite

Operating mode (→ 🗎 47) = Interface or Interface with capacitance

Description

Displays the upper interface thickness (UP).


Additional information

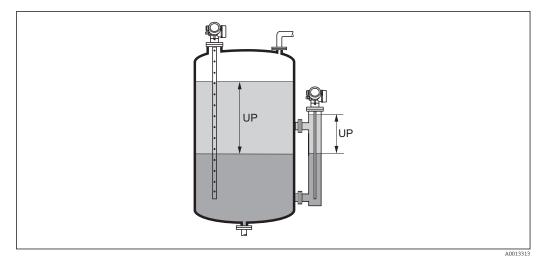

UP Thickness upper layer

The unit is defined by the **Unit after linearization** parameter $\rightarrow \Box$ 73.


4.4.5 "Linearization" submenu

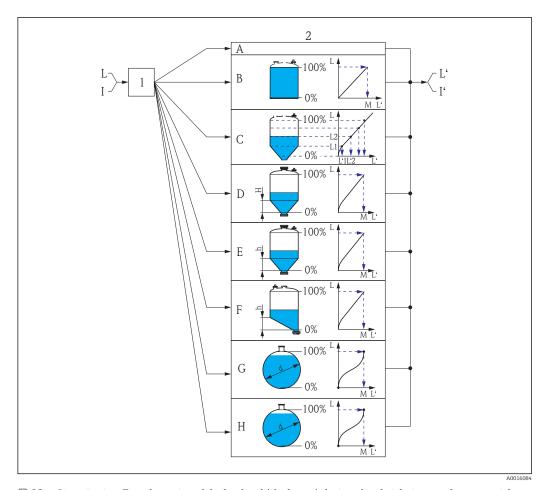

23 Linearization: Transformation of the level and (if relevant) the interface height into a volume or weight; the transformation is dependent on the shape of the vessel.

- 1 Selection of linearization type and unit
- 2 Configuration of the linearization
- A Linearization type ($\rightarrow = 72$) = None
- *B* Linearization type (\rightarrow \rightleftharpoons 72) = Linear
- D Linearization type (→ 🖺 72) = Pyramid bottom
- E Linearization type ($\Rightarrow \ \ \, \exists \ 72$) = Conical bottom
- *F* Linearization type (\rightarrow \rightleftharpoons 72) = Angled bottom
- G Linearization type ($\rightarrow \blacksquare 72$) = Horizontal cylinder
- *H* Linearization type (\rightarrow \rightleftharpoons 72) = Sphere
- I For "Operating mode ($\Rightarrow \triangleq 47$)" = "Interface" or "Interface with capacitance": Interface before linearization (measured in distance units)
- I' For "Operating mode ($\rightarrow \boxtimes 47$)" = "Interface" or "Interface with capacitance": Interface after linearization (corresponds to volume or weight)
- L Level before linearization (measured in distance units)
- L' Level linearized ($\Rightarrow \triangleq 67$) (corresponds to volume or weight)
- M Maximum value ($\rightarrow \square 75$)
- d Diameter ($\Rightarrow \stackrel{\cdot}{\cong} 75$)
- *h* Intermediate height (\rightarrow $\stackrel{\triangle}{=}$ 76)

Structure of the submenu on the local display

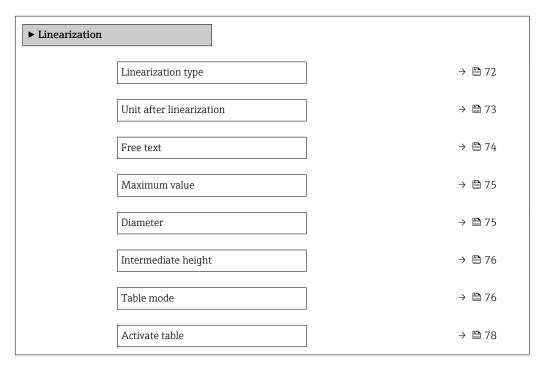

Structure of the submenu in an operating tool (e.g. FieldCare)

Navigation \square Expert \rightarrow Sensor \rightarrow Linearization

► Linearization		
	Linearization type	→ 🖺 72
	Unit after linearization	→ 🖺 73
	Free text	→ 🗎 74
	Level linearized	→ 🖺 74
	Interface linearized	→ 🗎 75
	Maximum value	→ 🗎 75
	Diameter	→ 🗎 75
	Intermediate height	→ 🗎 76
	Table mode	→ 🗎 76
	Table number	→ 🗎 77
	Level	→ 🖺 78
	Level	→ 🗎 78
	Customer value	→ 🗎 78
	Activate table	→ 🖺 78

Description of parameters

Navigation \blacksquare Expert \rightarrow Sensor \rightarrow Linearization

Linearization type

Navigation

Description Select linearization type.


Selection None

- Linear
- Table
- Pyramid bottom
- Conical bottom
- Angled bottom
- Horizontal cylinder
- Sphere

Factory setting

None

Additional information

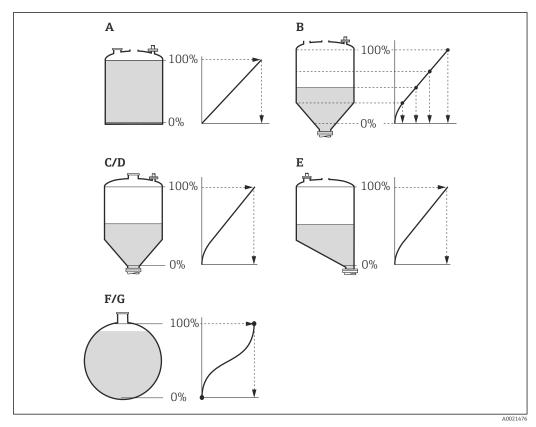

€ 24 Linearization types

- None Α
- В Table
- Pyramid bottom С
- D Conical bottom
- Е Angled bottom
- F Sphere
- G Horizontal cylinder

Meaning of the options

None

The level is transmitted in the level unit without linearization.

■ Linear

The output value (volume/weight) is directly proportional to the level L. This is valid, for example, for vertical cylinders. The following additional parameters have to be specified:

- Unit after linearization (→ 🗎 73)
- **Maximum value** (→ 🗎 **75**): Maximum volume or weight

Table

The relationship between the measured level L and the output value (volume/weight) is given by a linearization table consisting of up to 32 pairs of values "level - volume" or "level - weight", respectively. The following additional parameters have to be specified:

- Unit after linearization (→ 🗎 73)
- Table mode (→ 🗎 76)
- For each table point: **Customer value** (→ 🗎 78)

Pyramid bottom

The output value corresponds to the volume or weight in a silo with pyramid bottom. The following additional parameters have to be specified:

- Unit after linearization (→ 🗎 73)
- **Maximum value** (→ 🗎 **75**): Maximum volume or weight
- **Intermediate height (→ 🗎 76)**: The height of the pyramid

Conical bottom

The output value corresponds to the volume or weight in a tank with conical bottom. The following additional parameters have to be specified:

- Unit after linearization (→ 🗎 73)
- **Maximum value (→ 1 75)**: Maximum volume or weight
- **Intermediate height (→ (⇒) 76)**: The height of the conical part of the tank

Angled bottom

The output value corresponds to the volume or weight in a silo with an angled bottom. The following additional parameters have to be specified:

- Unit after linearization (→ 🗎 73)
- **Maximum value** (→ 🗎 **75**): Maximum volume or weight
- **Intermediate height (→ 🗎 76)**: Height of the angled bottom

Horizontal cylinder

The output value corresponds to the volume or weight in a horizontal cylinder. The following additional parameters have to be specified:

- Unit after linearization (→ 🗎 73)
- **Maximum value** (→ 🗎 **75**): Maximum volume or weight

Sphere

The output value corresponds to the volume or weight in a spherical tank. The following additional parameters have to be specified:

- Unit after linearization (→ 🗎 73)
- **Maximum value** (→ 🗎 **75**): Maximum volume or weight
- Diameter (→ 🗎 75)

Unit after linearization		
Navigation	Expert \rightarrow Sensor \rightarrow Linearization \rightarrow Unit lineariz. (2340)	

Prerequisite Linearization type (→ 🗎 72) ≠ None

Description Select unit of the lineaized value.

US units

UsGal

■ lb

■ ft³

Selection

SI units

■ STon

■ t

■ kg

cm³

■ dm³

■ m³

■ hl

- 1

• %

Custom-specific units

Free text

Factory setting

%

Additional information

The selected unit is only used to be indicated on the display. The measured value is **not** transformed according to the selected unit.

It is also possible to configure a distance-to-distance linearization, i.e. a transformation from the level unit to a different distance unit. To do so, select the **Linear** linearization mode. In order to define the new level unit, select the **Free text** option in the **Unit after linearization** parameter and enter the required unit into the Free text parameter ($\rightarrow \triangleq 74$).

Imperial units

impGal

Free text

Navigation

Unit after linearization (→ 🖺 73) = Free text **Prerequisite**

Description Enter unit symbol.

User entry Up to 32 alphanumerical characters (letters, numbers, special characters)

Factory setting Free text

Level linearized

Navigation Expert \rightarrow Sensor \rightarrow Linearization \rightarrow Level linearized (2318)

Description Displays linearized level.

Additional information

• The unit is defined by the **Unit after linearization** parameter $\rightarrow \implies 73$.

• For interface measurements, this parameter always refers to the total level.

Interface linearized

Navigation \square Expert \rightarrow Sensor \rightarrow Linearization \rightarrow Interf. lineariz (2382)

Prerequisite Operating mode ($\rightarrow \triangleq 47$) = Interface or Interface with capacitance

Description Displays the linearized interface height.

Additional information

The unit is defined in the **Unit after linearization** parameter $\rightarrow \blacksquare 73$.

Maximum value

Navigation \blacksquare Expert \rightarrow Sensor \rightarrow Linearization \rightarrow Maximum value (2315)

Prerequisite Linearization type $(\Rightarrow \bigcirc 72)$ has one of the following values:

Linear

Pyramid bottomConical bottomAngled bottomHorizontal cylinder

Sphere

Description Specify the maximum content of the vessel (100%) measured in the units after

linearization.

User entry -50 000.0 to 50 000.0 %

Factory setting 100.0 %

Diameter

Navigation $\blacksquare \blacksquare$ Expert \rightarrow Sensor \rightarrow Linearization \rightarrow Diameter (2342)

Prerequisite Linearization type $(\rightarrow \Box 72)$ has one of the following values:

Horizontal cylinder

Sphere

Description Specify tank diameter.

User entry 0 to 9 999.999 m

Factory setting 2 m

Additional information The unit is defined in the **Distance unit** parameter ($\rightarrow \triangleq 47$).

Intermediate height

Navigation $\blacksquare \blacksquare$ Expert \rightarrow Sensor \rightarrow Linearization \rightarrow Intermed. height (2310)

Prerequisite Linearization type (→ 🗎 72) has one of the following values:


Pyramid bottomConical bottomAngled bottom

Description Specify intermediate height H.

User entry 0 to 200 m

Factory setting 0 m

Additional information

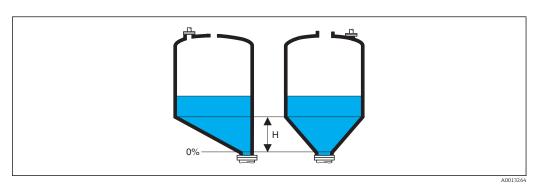

H Intermediate height

The unit is defined in the **Distance unit** parameter ($\Rightarrow \triangleq 47$).

Table mode

Navigation \blacksquare Expert \rightarrow Sensor \rightarrow Linearization \rightarrow Table mode (2303)

Prerequisite Linearization type ($\rightarrow \stackrel{\triangle}{=} 72$) = Table

Description Select editing mode of the linearization table.

Selection • Manual

SemiautomaticClear tableSort table

Factory setting

Manual

Additional information

Factory setting

Meaning of the options

Manual

The level and the associated linearized value are entered manually for each linearization point.

Semiautomatic

The level is measured by the device for each linearization point. The associated linearized value is entered manually.

Clear table

Deletes the existing linearization table.

Sort table

Rearranges the linerization points into an ascending order.

Conditions the linearization table must meet:

- The table may consist of up to 32 pairs of values "Level Linearized Value".
- The table must be monotonic (monotonically increasing or decreasing).
- The first linearization point must refer to the minimum level.
- The last linearization point must refer to the maximum level.
- Before entering a linearization table, the values for **Empty calibration** ($\rightarrow \triangleq 60$) and **Full calibration** ($\rightarrow \triangleq 61$) must be set correctly.

How to enter the table

■ Via FieldCare

The table points can be entered via the **Table number** ($\rightarrow \boxminus 77$), **Level** ($\rightarrow \boxminus 78$) and **Customer value** ($\rightarrow \boxminus 78$) parameters. As an alternative, the graphic table editor may be used: Device Operation \rightarrow Device Functions \rightarrow Additional Functions \rightarrow Linearization (Online/Offline)

Via local display

1

Select the **Edit table** submenu to call up the graphic table editor. The table is displayed and can be edited line by line.

- The factory setting for the level unit is "%". If you want to enter the linearization table in physical units, you must select the appropriate unit in the **Level unit** parameter $(\rightarrow \stackrel{\triangle}{=} 62)$ beforehand.
- If a decreasing table is entered, the values for 20 mA and 4 mA of the current output are interchanged. That means: 20 mA refers to the lowest level, whereas 4 mA refers to the highest level. If required, the current output can be inverted in the **Measuring** \mathbf{mode} parameter ($\rightarrow \square 171$).

Table number		<u> </u>		
Navigation	Expert → Sensor → Linearization → Table number (2370)			
Prerequisite	Linearization type (→ 🗎 72) = Table			
Description	Select table point you are going to enter or change.	Select table point you are going to enter or change.		
User entry	1 to 32			

Level (Manual) **Navigation** Expert \rightarrow Sensor \rightarrow Linearization \rightarrow Level (2383) Prerequisite ■ Linearization type (→ 🖹 72) = Table **■** Table mode (→ 🗎 76) = Manual Description Enter level value of the table point (value before linearization). User entry Signed floating-point number Factory setting 0 % Level (Semiautomatic) **Navigation** Expert \rightarrow Sensor \rightarrow Linearization \rightarrow Level (2389) Prerequisite ■ Linearization type (→ 🖹 72) = Table ■ Table mode (→ 🖺 76) = Semiautomatic Description Displays measured level (value before linearization). This value is transmitted to the table. **Customer value** Navigation Expert \rightarrow Sensor \rightarrow Linearization \rightarrow Customer value (2384) Prerequisite Linearization type ($\rightarrow \equiv 72$) = Table Description Enter linearized value for the table point. User entry Signed floating-point number 0 % **Factory setting** Activate table Navigation Prerequisite Linearization type ($\rightarrow \equiv 72$) = Table Description Activate (enable) or deactivate (disable) the linearization table. Selection Disable ■ Enable

Factory setting

Disable

Additional information

Meaning of the options

Disable

The measured level is not linearized.

If **Linearization type** (\rightarrow \rightleftharpoons **72**) = **Table** at the same time, the device issues error message F435.

■ Enable

The measured level is linearized according to the table.




When editing the table, the **Activate table** parameter is automatically reset to **Disable** and must be reset to **Enable** after the table has been entered.

4.4.6 "Information" submenu

The **Information** submenu comprises all display parameters which give information about the current state of the measurement.

Structure of the submenu

Navigation $\blacksquare \blacksquare$ Expert \rightarrow Sensor \rightarrow Information

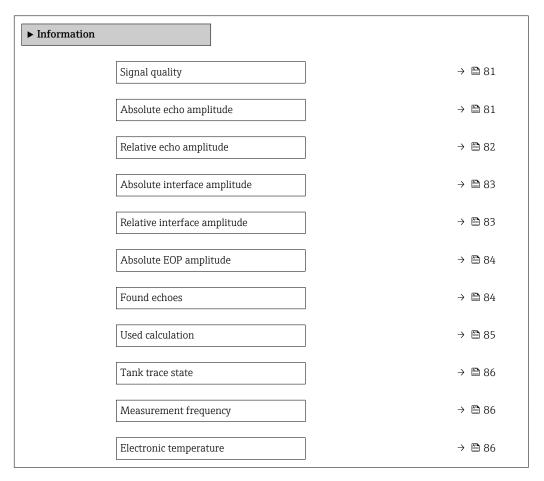

Description of parameters

Navigation $\blacksquare \blacksquare$ Expert \rightarrow Sensor \rightarrow Information

Signal quality

Description Displays the signal quality of the evaluated echo.

Additional information

Meaning of the display options

Strong

The evaluated echo exceeds the threshold by at least 10 mV.

Medium

The evaluated echo exceeds the threshold by at least 5 mV.

Weak

The evaluated echo exceeds the threshold by less than 5 mV.

No signal

The device does not find a usable echo.

The signal quality indicated in this parameter always refers to the currently evaluated echo: either the level/interface echo ⁴⁾ or the end-of-probe echo. To differentiate between these two, the quality of the end-of-probe echo is always displayed in brackets.



In case of a lost echo (**Signal quality = No signal**) the device generates the following error message:

- F941, for Output echo lost (\rightarrow 🖺 118) = Alarm.
- S941, if another option has been selected in **Output echo lost** (\rightarrow **\stackrel{\triangle}{=} 118**).

Absolute echo amplitude

Description Displays the absolute amplitude of the level echo in the subtracted curve.

⁴⁾ Of these two echos the one with the lower quality is indicated.

Additional information



1 Absolute echo amplitude in the envelope curve as measured from the 0mV line


Relative echo amplitude

Navigation

Description

Displays the relative amplitude of the level echo in the subtracted curve. The relative amplitude is the difference between the level echo and the echo threshold.

Additional information

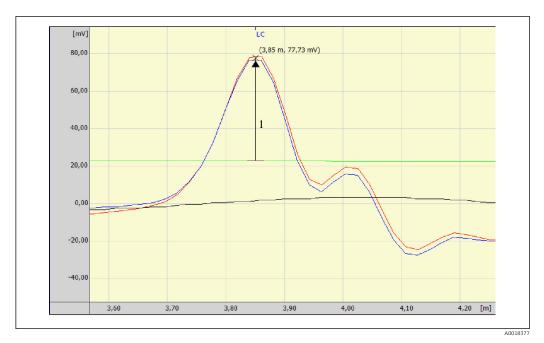

The relative echo amplitude is the difference between the amplitude in the envelope curve (blue) and the echo threshold (green).

In the envelope curve display of FieldCare, the absolute echo amplitude is indicated instead of the relative amplitude (see the number on the top right of the echo peak in the example).

Absolute interface amplitude

Navigation $\blacksquare \Box$ Expert \rightarrow Sensor \rightarrow Information \rightarrow Abs.interf.ampl. (1129)

Description Displays the absolute amplitude of the interface echo in the subtracted curve.

Relative interface amplitude

Navigation \blacksquare Expert \rightarrow Sensor \rightarrow Information \rightarrow Rel.interf.ampl. (1090)

Prerequisite Operating mode ($\rightarrow \triangleq 47$) = Interface or Interface with capacitance

Description Displays the relative amplitude of the interface echo in the subtracted curve.


Absolute EOP amplitude

Navigation

Description

Displays the absolute amplitude of the end-of-probe signal in the subtracted curve.

Additional information

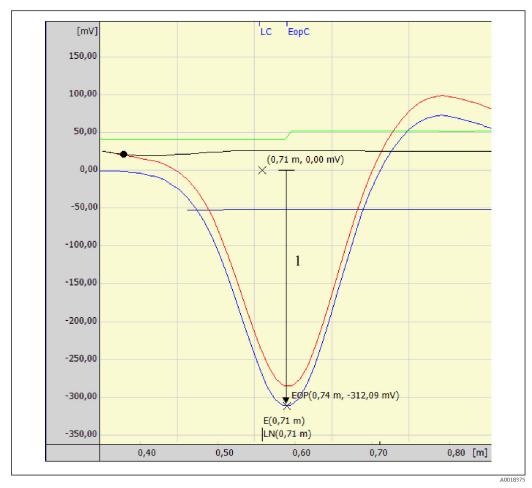

1 Absolute EOP amplitude (example for an insulated end-of-probe)

Polarity of the end-of-probe signal

- For probe ends which are freely suspended in the medium or insulated against the tank, the end-of-probe signal is negative.
- For probe ends which are grounded to the tank potential, the end-of-probe signal is positive.
- To ensure correct evaluation of the end-of-probe signal, its polarity must be specified in the **EOP search mode** parameter ($\rightarrow \triangleq 135$).

Found echoes

Navigation

Description

Indicates which echoes have been found.

User interface

- None
- Level
- Interface
- EOP
- Level and interface
- Level and EOP
- Interface and EOP
- Level. interface and EOP
- EOP (TT)
- Multiple echo (TT)
- EOP (LN)
- EOP
- Level and EOP
- Level and interface with capa.
- Level with capa. and interface

Used calculation

Navigation

Description

Indicates which echoes are used for the calculation of the measured value.

Additional information

Meaning of the options

None

The measured value is not calculated (e.g. due to a lost echo)

Level

The level is calculated from the direct level echo.

■ EOP

The level is calculated from the end-of-probe signal (EOP).

■ EOP (TT)

The level is calculated from the end-of-probe signal (EOP) taking into account the tank table (TT).

■ Multiple echo (TT)

The level is calculated from the multiple echo, taking into account the tank table (TT).

■ EOP (LN)

An empty tank is detected from the end-of-probe signal (EOP) in the interface mode.

Level and EOP

The level is calculated from the direct level echo. Its plausibility is checked by the end-of-probe signal (EOP). This situation may occur if the device is in the interface mode and the tank contains only one medium.

Interface

The interface height is calculated from the direct interface echo. This situation may occur if **Tank level** ($\rightarrow \implies 153$) = **Fully flooded**.

■ Measured capacitance (only for FMP55)

The level is calculated from the measured capacitance without taking into account any echoes.

Level and interface

The level is calculated from the direct level echo. The interface height is calculated from the direct interface echo.

• Level and interface with capa.

The level is calculated from the direct level echo. The interface height is calculated from the measured capacitance.

Tank trace state

Navigation $\blacksquare \blacksquare$ Expert \rightarrow Sensor \rightarrow Information \rightarrow Tank trace state (1206)

Description Indicates the current state of the tank trace.

Additional information Meaning of the options

Not active

A valid tank trace is not available.

■ EOP (TT)

A valid EOP tank trace is available.

■ Multiple echo (TT)

A valid multiple echo tank trace is available.

■ EOP + Multiple echo (TT)

A valid EOP and multiple echo tank trace are available.

Measurement frequency

Navigation \blacksquare Expert \rightarrow Sensor \rightarrow Information \rightarrow Measurm. freq. (1180)

Description Displays the current measurement frequency (number of pulses per second).

Additional information The measurement frequency is dependent on the length of the probe. Refer to the

Technical Information (TI) of the respective device for details.

Electronic temperature

Navigation $\blacksquare \blacksquare$ Expert \rightarrow Sensor \rightarrow Information \rightarrow Electronic temp. (1062)

Description Displays the current temperature of the electronics.

Additional information The unit is defined in the **Temperature unit** parameter ($\rightarrow \triangleq 47$).

86

4.4.7 "Sensor properties" submenu

The **Sensor properties** submenu comprises all parameters which describe the measurement-related properties of the probe and the envelope curve.

Probe length correction

For the signal evaluation it is essential that the Levelflex allocates the end-of-probe signal correctly. To ensure this one can manually enter the actual length of the probe or one can perform a probe length correctionn several times until the displayed length of the probe matches the actual length of the probe (LN). To do so one needs the following parameters:


- Present probe length (→

 89)
- Confirm probe length (→

 89)
- When operating via the local display module, the **Confirm probe length** (→ 89) and **Present probe length** (→ 89) parameters are comprised in the **Probe length correction** sequence.

Structure of the submenu

Navigation $\blacksquare \blacksquare$ Expert \rightarrow Sensor \rightarrow Sensor prop.

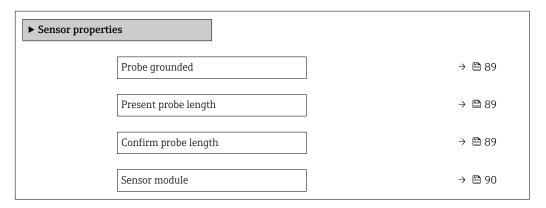

Description of parameters

Navigation $\blacksquare \square$ Expert \rightarrow Sensor \rightarrow Sensor prop.

 Probe grounded

 Navigation
 Image: Expert → Sensor prop. → Probe grounded (1222)

 Prerequisite
 Operating mode (→ Image: 47) = Level

 Description
 Specify whether the probe is grounded.

 Selection
 Image: No image: No image: Yes

Present probe length

Navigation \square Expert \rightarrow Sensor prop. \rightarrow Pres. length (1078)

Description ■ In most cases:

Displays the length of the probe according to the currently measured end-of-probe

signal

No

■ For Confirm probe length (→ 🖺 89) = Manual input:

Enter actual length of probe.

User entry 0 to 200 m

Factory setting 4 m

Factory setting

Confirm probe length

Navigation \square Expert \rightarrow Sensor prop. \rightarrow Confirm length (1080)

Description Select, whether the value displayed in the **Present probe length** parameter $\rightarrow \triangleq 89$

matches the actual length of the probe. Based on this input, the device performs a probe

length correction.

Selection ■ Probe length OK

■ Probe length too small

Probe length too big

■ Probe covered

Manual input

Probe length unknown

Factory setting Probe length OK

Additional information

Meaning of the options

■ Probe length OK

To be selected if the indicated length is correct. An adjustment is not required. The device quits the sequence.

■ Probe length too small

To be selected if the displayed length is smaller than the actual length of the probe. A different end of probe signal is allocated and the newly calculated length is displayed in the **Present probe length** parameter $\rightarrow \implies$ 89. This procedure has to be repeated until the displayed value matches the actual length of the probe.

■ Probe length too big

To be selected if the displayed length is bigger than the actual length of the probe. A different end of probe signal is allocated and the newly calculated length is indicated in the **Present probe length** parameter $\Rightarrow \triangleq 89$. This procedure has to be repeated until the displayed value matches the actual length of the probe.

■ Probe covered

To be selected if the probe is (partially or completely) covered. A probe length correction is impossible in this case. The device quits the sequence.

Manual input

• Probe length unknown

To be selected if the acutal length of the probe is unknown. A probe length correction is impossible in this case and the device quits the sequence.

.

Sensor module

Navigation


Description

Displays the type of sensor module.

⁵⁾ When operated via FieldCare, the **Manual input** option needs not to be selected explicitly. In FieldCare the length of the probe can always be edited.

4.4.8 "Distance" submenu

The **Distance** submenu contains all parameters which control the filtering of the raw distance D1. The resulting distance D0 is used for the subsequent calculation of the level.

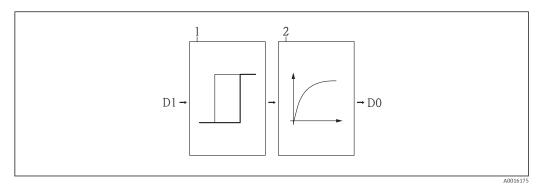


The configurable distance filters

- *Dead time (→ 🖺 95)*
- Integration time (\rightarrow $\stackrel{\triangle}{=}$ 96) (low pass filter)

Low pass filter

The low pass filter dampens the distance signal with a user defined integration time $\boldsymbol{\tau}$ (**Integration time** parameter ($\rightarrow \implies$ 96)). After a sudden change of the level, it takes about $5 \times \tau$, until the new measured value is obtained.

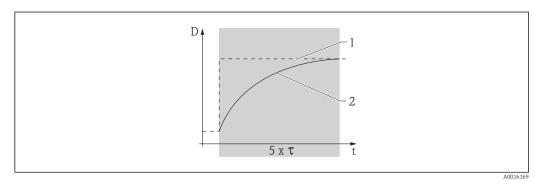


■ 26 Low pass filter

- Signal before the low pass filter
- Signal after the low pass filter Integration time ($\rightarrow \square$ 96) 2

Structure of the submenu

Navigation $\blacksquare \blacksquare$ Expert \rightarrow Sensor \rightarrow Distance

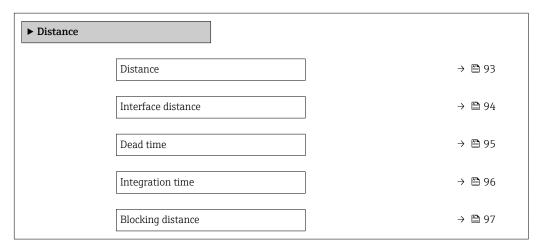

Description of parameters

Navigation $\blacksquare \blacksquare$ Expert \rightarrow Sensor \rightarrow Distance


Distance

Navigation


Description

Displays the measured distance D_L between the reference point (lower edge of the flange or threaded connection) and the level.


Additional information

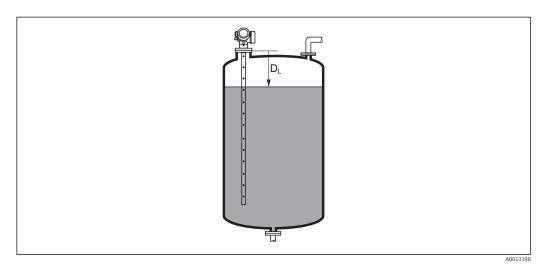

■ 27 Distance for liquid measurements

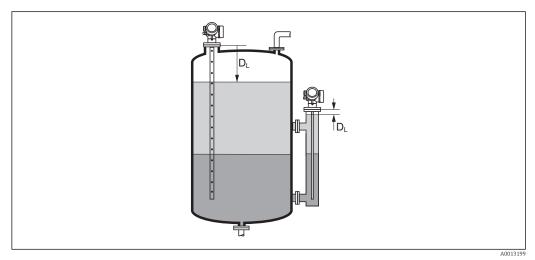

 \blacksquare 28 Distance for interface measurements

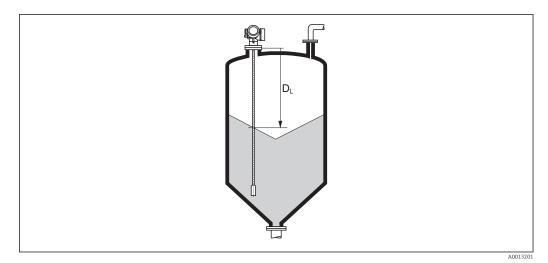

₹ 29 Distance for bulk solid measurements

The unit is defined in the **Distance unit** parameter ($\rightarrow \triangleq 47$).

Interface distance

Navigation


Prerequisite

Operating mode (→ 🖺 47) = Interface or Interface with capacitance

Description

Displays the measured distance $D_{\rm I}$ between the reference point (lower edge of flange or threaded connection) and the interface.

Additional information

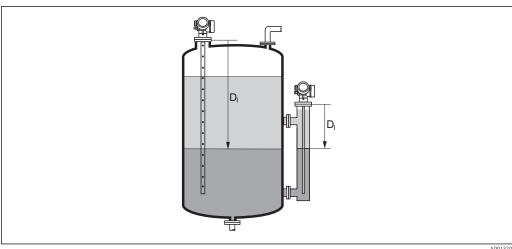

The unit is defined in the **Distance unit** parameter ($\rightarrow \triangleq 47$).

Dead time

Navigation \blacksquare Expert \rightarrow Sensor \rightarrow Distance \rightarrow Dead time (1199)

Description Define the dead time (in seconds).

User entry 0 to 60 s

Factory setting Dependent on the following parameters:

- Process property (→

 49)

Additional information

Factory setting for level measurements with "Medium type" = "Liquid"

Process property (→ 🖺 49)	Dead time
Fast > 1 m (40 in)/min	0 s
Standard < 1 m (40in) /min	1 s
Medium < 10 cm (4in) /min	3 s
Slow < 1 cm (0.4in) /min	6 s
No filter / test	0 s

Factory setting for level measurements with "Medium type" = "Solid"


Process property (→ 🖺 49)	Dead time
Fast > 10 m (33 ft) /h	1 s
Standard < 10 m (33 ft) /h	3 s
Medium < 1 m (3ft) /h	5 s
Slow < 0.1 m (0.3ft) /h	10 s
No filter / test	0 s

Factory setting for interface measurements

Process property (→ 🖺 49)	Dead time
Fast > 1 m (40 in)/min	0 s
Standard < 1 m (40in) /min	10 s
Medium < 10 cm (4in) /min	10 s
Slow < 1 cm (0.4in) /min	10 s
No filter / test	0 s

Application

Sudden changes of the measured distance are ignored during the time span defined in this parameter. In this way it is possible to prevent short-term interferences form disturbing the output signal.

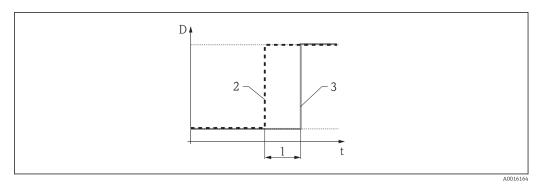

■ 30 Effect of the dead time

- 1 Dead time
- 2 Signal before the dead time filter
- 3 Signal after the dead time filter

Disadvantages

- The device slows down.
- Fast level changes are registered with a delay.

Integration time

Navigation \blacksquare Expert \rightarrow Sensor \rightarrow Distance \rightarrow Integration time (1092)

Description Define the integration time (in seconds).

User entry 0.0 to 200 000.0 s

Factory setting Dependent on the following parameters:

- Process property (→

 49)

Additional information

Factory setting for "Medium type" = "Liquid"

Process property (→ 🖺 49)	Integration time
Fast > 1 m (40 in)/min	1 s
Standard < 1 m (40in) /min	5 s
Medium < 10 cm (4in) /min	15 s
Slow < 1 cm (0.4in) /min	30 s
No filter / test	0 s

Factory setting for "Medium type" = "Solid"

Process property (→ 🖺 49)	Integration time
Fast > 10 m (33 ft) /h	37 s
Standard < 10 m (33 ft) /h	74 s
Medium < 1 m (3ft) /h	145 s

Process property (→ 🖺 49)	Integration time		
Slow < 0.1 m (0.3ft) /h	290 s		
No filter / test	< 0.8 s		

Increasing the integration time results in a calmer measuring signal. However, it also causes a delayed reaction to level changes.

Blocking distance	
-------------------	--

Navigation \blacksquare Expert \rightarrow Sensor \rightarrow Distance \rightarrow Blocking dist. (1144)

Description Specify upper blocking distance UB.

User entry 0 to 200 m

Factory setting ■ For coax probes: 0 mm (0 in)

• For rod and rope probes up to 8 m (26 ft): 200 mm (8 in)

• For rod and rope probes above 8 m (26 ft): 0.025 * Sondenlänge

Additional information


Signals in the upper blocking distance are only evaluated if they have been outside the blocking distance when the device was switched on and move into the blocking distance due to a level change during operation. Signals which are already in the blocking distance when the device is switched on, are ignored.

This behavior is only valid if the following two conditions are met:

- Expert → Sensor → Echo tracking → Evaluation mode (1112) = Short time history or Long time history)
- Expert → Sensor → Gas phase comp. → GPC mode (1034)= **On**, **Without correction** or **External correction**

If one of these conditions is not met, signals in the blocking distance will always be ignored.


If required, a different behavior for signals in the blocking distance can be defined by the Endress+Hauser service.

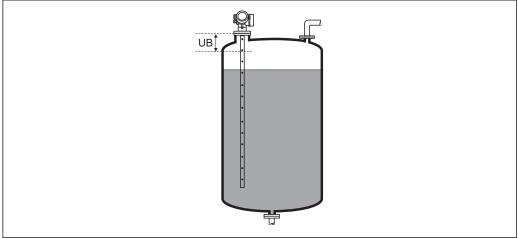

■ 31 Blocking distance (UB) for liquid measurements

Endress+Hauser 97

A0013219

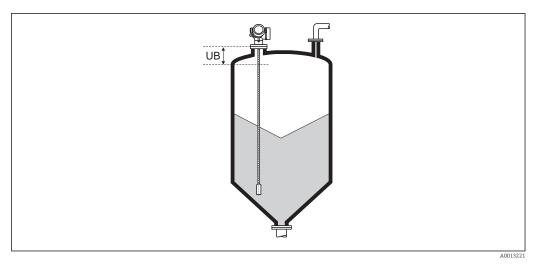

 \blacksquare 32 Blocking distance (UB) for bulk solid measurements

4.4.9 "Gas phase compensation" submenu

For FMP51, FMP52 and FMP54: The **Gas phase compensation** submenu $(\rightarrow \boxminus 105)$ is only available if **Operating mode** $(\rightarrow \boxminus 47)$ = **Level**.

Einfluss der Gasphase

High pressures reduce the propagation velocity of the measuring signals in the gas/vapor above the fluid. This effect depends on the kind of gas/vapor and of its temperature. This results in a systematic measuring error that gets bigger as the distance increases between the reference point of the measurement (flange) and the product surface.

The following table illustrates this measured error for a few typical gases/vapors (with regard to distance; a positive value means that too large a distance is being measured):

Gas layer	Tempe	erature		Pressure				
	°C	°F	1 bar (14.5 psi)	10 bar (145 psi)	50 bar (725 psi)	100 bar (1450 psi)	200 bar (2900 psi)	400 bar (5800 psi)
Air	20	68	0.00 %	0.22 %	1.2 %	2.4 %	4.9 %	9.5 %
	200	392	-0.01 %	0.13 %	0.74 %	1.5 %	3.0 %	6.0 %
	400	752	-0.02 %	0.08 %	0.52 %	1.1 %	2.1 %	4.2 %
Hydrogen	20	68	-0.01 %	0.10 %	0.61 %	1.2 %	2.5 %	4.9 %
	200	392	-0.02 %	0.05 %	0.37 %	0.76 %	1.6 %	3.1 %
	400	752	-0.02 %	0.03 %	0.25 %	0.53 %	1.1 %	2.2 %


Gas layer	Tempe	rature	Pressure							
	°C	°F	1 bar (14.5 psi)	2 bar (29 psi)	5 bar (72.5 psi)	10 bar (145 psi)	20 bar (290 psi)	50 bar (725 psi)	100 bar (1450 psi)	200 bar (2 900 psi)
Water	100	212	0.26 %	-	-	-	-	-	-	-
(saturated steam)	120	248	0.23 %	0.50 %	-	-	-	-	-	-
	152	306	0.20 %	0.42 %	1.14 %	-	-	-	-	-
	180	356	0.17 %	0.37 %	0.99 %	2.10 %	-	-	-	-
	212	414	0.15 %	0.32 %	0.86 %	1.79 %	3.9 %	-	-	-
	264	507	0.12 %	0.26 %	0.69 %	1.44 %	3.0 %	9.2 %	-	-
	311	592	0.09 %	0.22 %	0.58 %	1.21 %	2.5 %	7.1 %	19.3 %	-
	366	691	0.07 %	0.18 %	0.49 %	1.01 %	2.1 %	5.7 %	13.2 %	76 %

Gas phase compensation with reference signal

This type of gas phase compensation requires a reference signal at a defined distance from the process connection which must be above the maximum level. The current speed of propagation is determined from the shift of this reference signal The envelope curve can be scaled accordingly.

Probes with reference signal (option for FMR54)

As an option, FMP54 is available in a version for gas phase compensation (feature 540 "Application Package", Option EF: "Gas phase compensation $L_{\rm ref}$ = 300mm" oder EG: "Gas phase compensation $L_{\rm ref}$ = 550mm"). This version of the FMP54 generates a reference reflection at the distance $L_{\rm ref}$ from the flange. The reference reflection must be at least 150 mm (6 in) above the highest level.

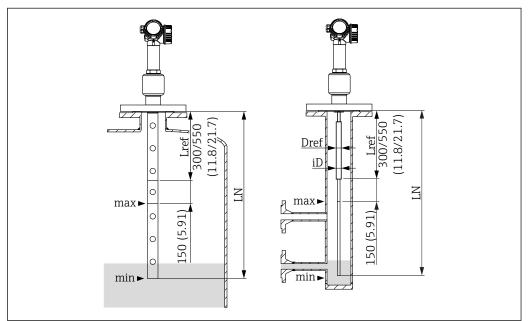

A0014534

- **Coax probes** with reference reflection can be installed in any tank (free in the tank or into a bypass). Coax probes are completely mounted and calibrated on delivery. After mounting they are ready for use; additional settings are not necessary.
- **Rod probes** are only recommended if the installation of a coax probe is not possible (e.g. if the bypass diameter is too small).

Rod probes with reference reflection are only suited for mounting in stilling wells and side gauges (bypasses). The diameter $D_{\rm ref}$ of the probe rod in the range of the reference distance $L_{\rm ref}$ must be chosen depending on the pipe inner diameter iD, see table below. In the range of the reference distance $L_{\rm ref}$ the pipe has to be cylindrical; changes of the cross section, for example at flanged connections, are only allowed up to 5% of the inside diamter iD.

In addition, the distance of the reference signal must be measured in the depressurized state and this value must be entered in the **Reference distance** parameter ($\rightarrow \boxminus 106$). This is necessary because the exact position of the reference signal is dependent on the mounting conditions (e.g. on the diameter of a nozzle or stilling well).

Inner diameter iD of the stilling well/bypass	Diameter $D_{\rm ref}$ of the rod probe within the reference distance $L_{\rm ref}$
40 mm (1.57 in) ≤ iD < 45 mm (1.77 in)	22 mm (0.87 in)
45 mm (1.77 in) ≤ iD < 70 mm (2.76 in)	25 mm (0.98 in)
70 mm (2.76 in) ≤ iD < 100 mm (3.94 in)	30 mm (1.18 in)


Limitations for coax/rod probes

Maximum probe length LN	LN ≤ 4000 mm (157 in)
Minimum probe length LN	$LN > L_{ref} + 200 \text{ mm } (7.7 \text{ in})$
Reference distance $L_{\rm ref}$	$300~\mathrm{mm}$ (11.8 in) or 550 mm (21.7 in), see feature 540 of the product structure
Maximum level relative to sealing surface of flange	L _{ref} + 150 mm (5.9 in)
Minimum dielectric constant of the medium	DC > 7

When can the gas phase compensation with reference signal be used?

Level measurements with high pressure for measuring ranges up to a few meters in polar media with a dielectric constant DC > 7 (e.g. water or ammonia), which would cause a high measuring error without the compensation.

The accuracy of measurement at reference conditions is the higher the larger the reference length L_{ref} and the samller the measuring range is:

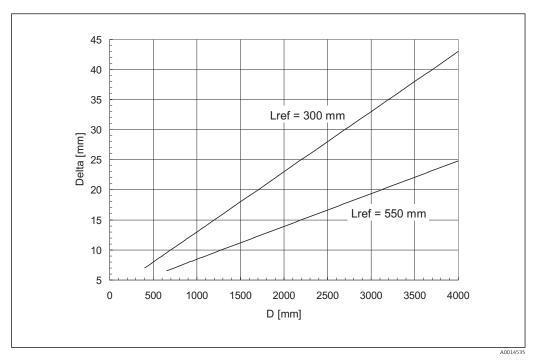


D Distance from liquid surface to lower edge of the flange
Delta Measuring error

If there are fast pressure changes, there may be an additional error, since the measured reference distance is filtered with the time constant of the level measurement. In addition, non-equilibrium conditions - for example due to heating - may cause density gradients within the medium and condensation of steam at the probe. As a result, the level readings at different locations inside the tank may vary slightly. Caused by this application influences the measuring error may be increased by a factor up to 2 to 3.

Calculation of the corrected distance

The position of the reference echo changes depending of the pressure. From this echo shift, Levelflex automatically calculates a correction factor for the microfactor (i. e. for the speed of signal propagation). This factor is used to adjust the envelope curve and thus the measured distance.

Owing to the correction of the microfactor, the corrected envelope curve is displayed in the operating tool in the case of an activated gas phase compensation.

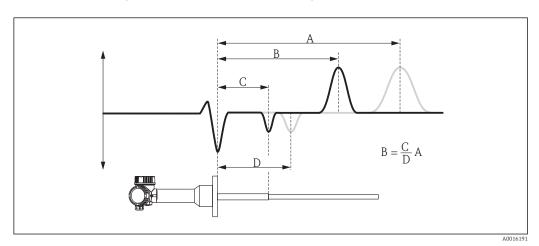


■ 33 Gas phase compensation with reference echo

- A Position of the level echo in the original envelope curve
- Position of the level echo in the adjusted envelope curve
- D Measured position of the reference echo

Constant gas phase compensation factor

If the properties of the gas phase (pressure, temperature, composition) do not change over the time and are known, a gas phase compensation can also be performed without a reference signal. Instead, a constant, user-defined correction factor is applied in this case. This factor is used to scale the envelope curve (and thus the measured echo distance).

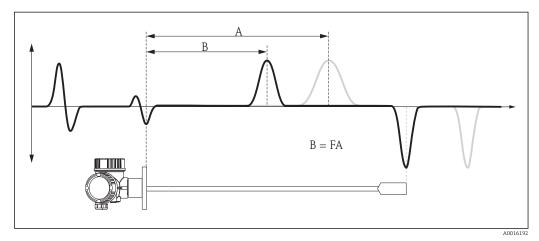


 \blacksquare 34 Gas phase compensation with a constant correction factor F

A Position of the level echo in the original envelope curve

B Position of the level echo in the corrected envelope curve.

Structure of the submenu

Navigation $\blacksquare \blacksquare$ Expert \rightarrow Sensor \rightarrow Gas phase comp.

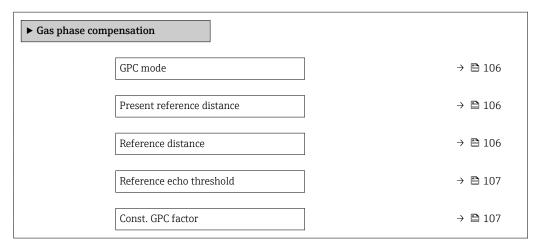

Description of parameters

Navigation $\blacksquare \blacksquare$ Expert \rightarrow Sensor \rightarrow Gas phase comp.

GPC mode

Navigation $\blacksquare \square$ Expert \rightarrow Sensor \rightarrow Gas phase comp. \rightarrow GPC mode (1034)

Description Select gas phase compensation mode.

Selection ■ Off

- On
- Without correctionConst. GPC factor

Factory setting Off

Additional information M

Meaning of the options

Off

The gas phase compensation is deactivated.

On

This option can only be selected for probes with reference echo. The gas phase compensation is calculated from the position of this reference echo. In FieldCare, the displayed envelope curve does already contain the correction.

Without correction

The correction factor is calculated from the reference echo but not applied to the measurement. In FieldCare, the envelope curve is displayed without the correction. This option is only used for diagnostic purposes and should not be selected in normal applications.

Const. GPC factor

The correction factor is a constant defined by the user. A reference echo is not needed. In FieldCare, the displayed envelope curve does already contain the correction.

Present	reference	distance
I I CSCIII	reference	uistance

Navigation \blacksquare Expert \rightarrow Sensor \rightarrow Gas phase comp. \rightarrow Pres. ref. dist. (1076)

Prerequisite GPC mode ($\rightarrow \triangleq 106$) = On or Without correction

Description Displays the currently measured distance of the reference echo.

Reference distance

Navigation $\blacksquare \square$ Expert \rightarrow Sensor \rightarrow Gas phase comp. \rightarrow Reference dist. (1033)

Prerequisite GPC mode ($\rightarrow \Box$ 106) = On or Without correction

Description Enter actual distance of the reference echo.

User entry 0 to 200 m

Factory setting According to the probe

Reference echo threshold

Navigation $\blacksquare \Box$ Expert \rightarrow Sensor \rightarrow Gas phase comp. \rightarrow Ref. echo thresh (1168)

Prerequisite GPC mode ($\rightarrow \triangleq 106$) = On or Without correction

Description Define threshold for the reference echo.

User entry -999.0 to 999.0 mV

Factory setting -80 mV

Additional information • Only echoes exceeding the defined threshold are accepted as reference echo.

• Positive reference echoes are not suited for Levelflex as they might be mistaken for the

level echo.

Const. GPC factor

Navigation $\blacksquare \Box$ Expert \rightarrow Sensor \rightarrow Gas phase comp. \rightarrow Const.GPC factor (1217)

Prerequisite GPC mode (→ 🖺 106) = Const. GPC factor

Description Specify constant correction factor for the measured distance.

User entry 0.5 to 1.5

Factory setting 1

4.4.10 "Sensor diagnostics" submenu

The **Sensor diagnostics** submenu comprises all parameters which contain information about the state of the probe and the HF cable.

Broken probe detection

In the case of a broken probe caused by mechanical wear, a negative echo arises at the breaking point. If the broken probe detection is active, the device looks for a signal of this type and creates an error message if required.

The borken probe detection can only be used if an interference echo suppression (map) has been correctly recorded.


Self check

The Start self check ($\rightarrow \boxminus 111$) and Result self check ($\rightarrow \boxminus 111$) parameters are used for the proof-test which is required for SIL applications in regular intervals. For details refer to the description of the test procedure C in the Functional Safety Manual SD00326F.

For the self check, a test signal is generated in the sensor module and fed onto the analog signal path. The device software checks whether this test signal is within the admissible amplitude and distance ranges. The result of the self check is displayed in the **Result self check** parameter ($\rightarrow \implies 111$).

Structure of the submenu

Navigation $\blacksquare \blacksquare$ Expert \rightarrow Sensor \rightarrow Sensor diag.

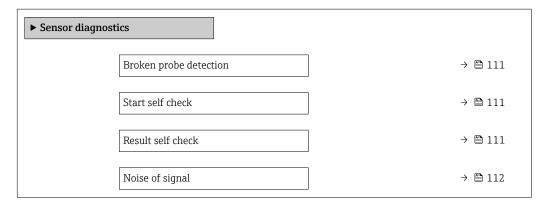

Description of parameters

Navigation $\blacksquare \blacksquare$ Expert \rightarrow Sensor \rightarrow Sensor diag.

Broken probe detection			
Navigation	\blacksquare Expert → Sensor → Sensor diag. → Brok.probe detec (1032)		
	Expert → Sensor → Sensor diag. → Brok.probe detec (1032)		
Description	Switch the broken probe detection on or off.		
Selection	■ Off ■ On		
Factory setting	Off		
Additional information	If the broken probe detection is switched on: As soon as a broken probe is detected, the device generates ana alarm and the diagnostic message Broken probe detected .		
Start self check			
Navigation			
Description	Start a self check of the device.		
Selection	■ No		

-	
Factory setting	No

Additional information

For the self check, a test signal is generated in the sensor module and fed onto the analog signal path. The device software checks whether this test signal is within the admissible amplitude and distance ranges. The result of the self check is displayed in the **Result self check** parameter ($\rightarrow \implies 111$).



Yes

The self check is used for the proof-test which is required for SIL applications in regular intervals. For details refer to the description of the test procedure C in the Functional Safety Manual SD00326F.

Result self check	
Navigation	Expert → Sensor → Sensor diag. → Result selfcheck (1134)
Description	Displays the result of the self check.

Additional information

Meaning of the options

Ok

The self check has been passed.

■ Not ok

The self check failed.

■ Check not done

A self check has not been performed.

Noise of signal			
Navigation		Expert \rightarrow Sensor \rightarrow Sensor diag. \rightarrow Noise of signal (1105) Expert \rightarrow Sensor \rightarrow Sensor diag. \rightarrow Noise of signal (1105)	
Description	Disp	Displays the noise of signal in the envelope curve	

4.4.11 "Safety settings" submenu


The **Safety settings** submenu contains all parameters which determine the behavior of the device in critical situations such as an echo loss or an undershooting of a user defined safety distance.

Behavior in the case of an echo loss

The bahavior in case of an echo loss is defined in the **Output echo lost** parameter ($\rightarrow \boxminus 118$). Depending on the selected option, suitable values must be selected in a number of additional parameters:


Option selected in in "Output echo lost (→ 🗎 118)"	Required additional parameters
Last valid value	Delay time echo lost (→ 🖺 119)
Ramp at echo lost	 Ramp at echo lost (→ ☐ 119) Delay time echo lost (→ ☐ 119)
Value echo lost	 Value echo lost (→ 🖺 118) Delay time echo lost (→ 🖺 119)
Alarm	1)

 The alarm bahavior ist defined in the submenus "Current output" (HART) or "Analog input" (PROFIBUS PA, FOUNDATION Fieldbus).

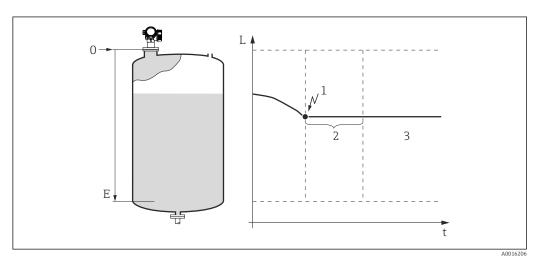


■ 35 "Output echo lost (\rightarrow 🖺 118)" = "Last valid value"

- 1 Echo loss
- 3 The last valid measured value is held.

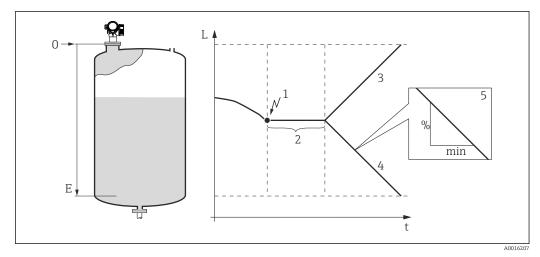

■ 36 "Output echo lost (→ 🗎 118)" = "Ramp at echo lost"

- 1 Echo loss
- 2 "Delay time echo lost (→ 🖺 119)"
- 3 For a positive ramp: The measured value is increased with a constant rate until it reaches the maximum value (100%).
- 4 For a negative ramp: The measured value is decreased with a constant rate until it reaches the minimum value (0%).
- 5 The ramp is specified as "percentage of the defined measuring span per minute".

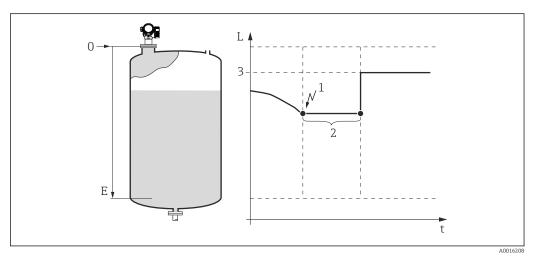


■ 37 "Output echo lost (\rightarrow 🖺 118)" = "Value echo lost"

1 Echo loss

- 2 Delay time echo lost ($\rightarrow \implies 119$)
- 3 Value echo lost ($\rightarrow \implies 118$)

Safety distance

In order to get a warning message if the level rises into the proximity of the upper blocking distance, a safety distance can be defined in the **Safety distance** parameter ($\rightarrow \triangleq 120$).

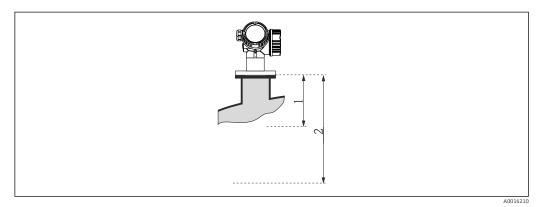


₹ 38 Definition of the safety distance

- Blocking distance (→ 🖺 97)
- Safety distance ($\Rightarrow \triangleq 120$)


The behavior of the device in case the level rises into the safety distance is defined in the following parameters:

- In safety distance (\rightarrow 🗎 120)

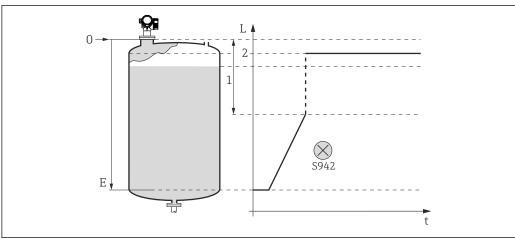


"In safety distance" = "Alarm": If the safety distance is undershot, the device generates an alarm.

- Safety distance (→ 🖺 120)
- Value defined in "Failure mode (→ 🖺 169)"

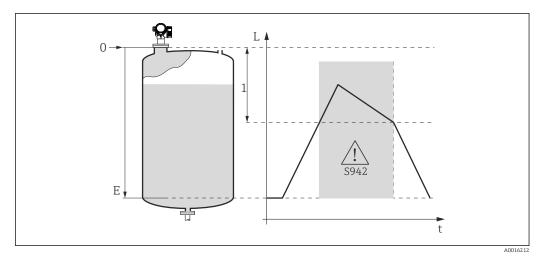


- 40 "In safety distance" = "Warning": If the safety distance is undershot, the device continues measuring but nevertheless generates a warning.
- 1 Safety distance ($\rightarrow \blacksquare 120$)

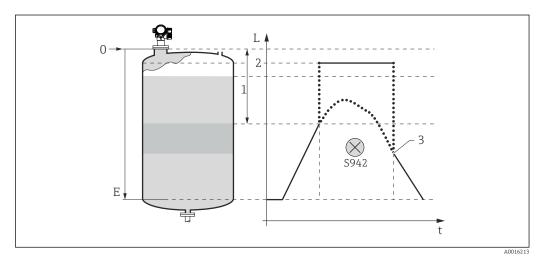

- 41 "In safety distance" = "Self holding": If the safety distance is undershot, the device generates an alarm. The measurement is not resumed until this alarm has been acknowledged by the user.
- 1 Safety distance ($\Rightarrow \implies 120$)
- 2 Value defined in "Failure mode ($\rightarrow = 169$)"
- 3 Acknowledge alarm (→ 🖺 120)

Structure of the submenu

Navigation $\blacksquare \blacksquare$ Expert \rightarrow Sensor \rightarrow Safety sett.

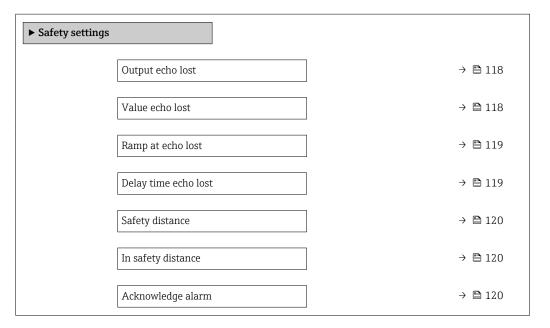

Description of parameters

Navigation $\blacksquare \blacksquare$ Expert \rightarrow Sensor \rightarrow Safety sett.

Output echo lost

Navigation $\blacksquare \blacksquare$ Expert \rightarrow Sensor \rightarrow Safety sett. \rightarrow Output echo lost (2307)

Description Define the behavior of the output signal in case of a lost echo.

Selection ■ Last valid value

Ramp at echo lostValue echo lost

Alarm

Factory setting Last valid value

Additional information Meaning of the options

Last valid value

The last valid value is kept in the case of a lost echo.

Ramp at echo lost

In the case of a lost echo the output value is continously shifted towards 0% or 100%. The slope of the ramp is defined in the **Ramp at echo lost** parameter ($\rightarrow \stackrel{\triangle}{=} 119$).

Value echo lost

In the case of a lost echo the output assumes the value defined in the **Value echo lost** parameter ($\rightarrow \triangleq 118$).

Alarm

In the case of a lost echo the device generates an alarm; see the **Failure mode** parameter $(\rightarrow \boxminus 169)$

Value echo lost

Navigation $\blacksquare \square$ Expert \rightarrow Sensor \rightarrow Safety sett. \rightarrow Value echo lost (2316)

Prerequisite Output echo lost (→ 🖺 118) = Value echo lost

Description Define output value in case of a lost echo.

User entry 0 to 200 000.0 %

Factory setting 0.0%

Additional information Use the unit which has been defined for the measured value output:

■ with linearization: **Unit after linearization** (→ 🗎 73)

Ramp at echo lost

Navigation Expert \rightarrow Sensor \rightarrow Safety sett. \rightarrow Ramp echo lost (2323)


Prerequisite Output echo lost ($\rightarrow \triangleq 118$) = Ramp at echo lost

Define the slope of the ramp in the case of a lost echo. Description

User entry Signed floating-point number

Factory setting 0.0 %/min

Additional information

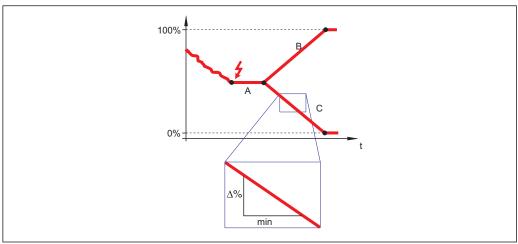

- *Delay time echo lost* ($\rightarrow \implies 119$)
- Ramp at echo lost ($\rightarrow \square$ 119) (positive value)
- Ramp at echo lost ($\Rightarrow = 119$) (negative value)
- The unit for the slope of the ramp is "percentage of the measuring range per minute" (%/
- For a negative slope of the ramp: The measured value is continuously decreased until it reaches 0%.
- For a positive slope of the ramp: The measured value is continuouly increased until it reaches 100%.

Delay time echo lost	

Navigation Expert \rightarrow Sensor \rightarrow Safety sett. \rightarrow Delay echo lost (1193)

Define the delay in the case of an echo loss. Description

User entry 0 to 99999.9 s

Factory setting 60.0 s

Additional information After an echo loss, the device waits for the time specified in this parameter before reacting

as specified in the **Output echo lost** parameter ($\Rightarrow \implies 118$). This helps to avoid

interruptions of the measurement by short-term interferences.

Safety distance

Navigation $\blacksquare \square$ Expert \rightarrow Sensor \rightarrow Safety sett. \rightarrow Safety distance (1093)

Description Define safety distance.

User entry -200 to 200 m

Factory setting 0 m

Additional information The safety distance is measured from the reference point of the measurement (lower edge

of the flange or threaded connection). The safety distance can be used to generate a warning before the level rises into the blocking distance. The **In safety distance** parameter $(\rightarrow \implies 120)$ defines the reaction of the device if the level rises into the safety distance.

In safety distance

Navigation $\blacksquare \Box$ Expert \rightarrow Sensor \rightarrow Safety sett. \rightarrow In safety dist. (1018)

Description Define reaction if the level rises into the safety distance.

Selection ■ Off

AlarmWarningSelf holding

Factory setting Warning

Additional information Meaning of the options

Off

No reaction if the level rises into the safety distance

Alarm

The device assumes the alarm state and generates the diagnostic message **In safety distance**.

Warning

The device assumes the warning state and generates the diagnostic message **In safety distance**.

Self holding

The device assumes the defined alarm state. Additionally, the diagnostic message **In safety distance** is generated. If the level drops out of the safety distance, the alarm remains active. The measurement is continued only after a reset of the self holding via the **Acknowledge alarm** parameter ($\rightarrow \implies 120$).

Acknowledge alarm

Navigation $\blacksquare \square$ Expert \rightarrow Sensor \rightarrow Safety sett. \rightarrow Acknowl. alarm (1130)

Prerequisite In safety distance (→ 🗎 120) = Self holding

Description Reset the self holding alarm of the device.

Selection ■ No

Yes

Factory setting No

Additional information Meaning of the options

■ No

The alarm is **not** rest.

Yes

The alarm is reset. The measurement is resumed.

"Envelope curve" submenu 4.4.12

The **Envelope curve** submenu ($\rightarrow \boxminus 123$) is only available on the display module (not in FieldCare). It is used to display the envelope curve on the display module. When operating via FieldCare, the envelope curve can be displayed in the envelope curve editor (Device Operation \rightarrow Device Functions \rightarrow Additional Functions \rightarrow Envelope Curve).

Description of parameters

Navigation $\blacksquare \blacksquare$ Expert \rightarrow Sensor \rightarrow Env. curve

Envelope curve

Navigation \blacksquare Expert \rightarrow Sensor \rightarrow Env. curve \rightarrow Env. curve (1207)

Description Define which curves are included in the envelope curve display on the display module.

Selection ■ Envelope curve ■ Envelope + Map


■ Subtracted + Threshold

■ Envelope + Ref.

Factory setting Envelope curve

Additional information

The display of the selected curve is called up as follows:

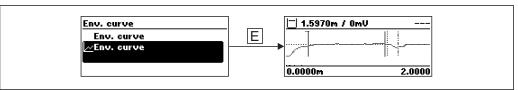

A0014279

To quit the envelope curve display, press the "+" and "-" keys simultaneously.

When operating via FieldCare, the envelope curve can be displayed in the envelope curve editor (**Device Operation** → **Device Functions** → **Additional Functions** → **Envelope Curve**).


4.4.13 "Mapping" submenu

The mapping is used to suppress static interference signals which may be generated by internal tank or silo fittings. A mapping curve, representing the envelope curve of an empty tank or silo as precisely as possible, is used for the mapping.

Mapping curve and subtracted curve

After a mapping, the signal evaluation does not use the envelope curve but the subtracted curve. instead:

Subtracted curve = Envelope curve - Mapping curve

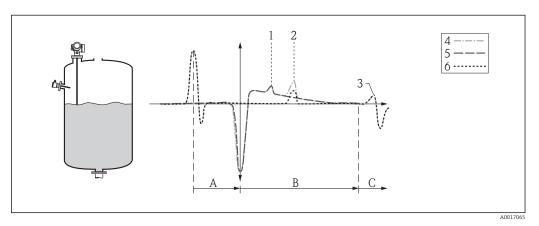

■ 42 Mapping and subtracted curve

- 1 Interference echo
- 2 Level echo
- 3 End-of-probe echo
- 4 Envelope curve
- 5 Mapping curve
- 6 Subtracted curve
- A Internal area (Z distances)
- B Level area
- C End-of-probe area (EOP)

Static map

The static map is typically used for rod and coax probes. It is recorded during the commissioning. It is essential that the probe is completely uncovered when recording the map.

When recording a new static envelope curve, the previous curve is deleted.

Dynamic map

The dynamic map is, for example, used for probes with a reference signal for gas phase compensation. In the case of a static map this reference signal would be suppressed and would no longer be visible in the subtracted curve.


Before the dynamic mapping curve can be used, a static map - if present - must be deleted.

The dynamic map continuously adjusts itself to the changing conditions within the vessel. An averaging width of 1500 mm (60 in) is used for this. This prevents the dynamic map from suppressing the acutal level echo.

Combined map

If it is not possible to record the map with the probe being completely uncovered (e.g. because the vessel can not be completely emptied during the commissioning procedure), a combined map can be used instead. In this case, a static map is only recorded for the upper part of the probe (defined by the **Mapping end point** parameter ($\rightarrow \implies 131$)). In the

lower part, a dynamic map is used. Both curves are connected by an interpolation area to ensure a smooth transition.

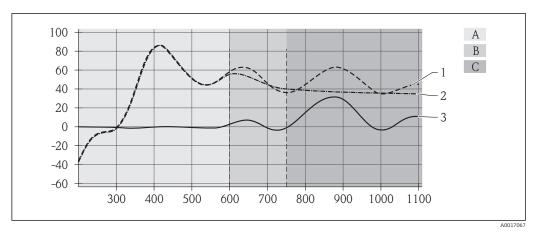

■ 43 Combined mapping curve

- 1 Envelope curve
- 2 Mapping curve
- 3 Subtracted curve
- A Static area
- B Transition area (interpolation)
- C Dynamic area

The initial map


An initial map is stored in the device. This map is active under the following conditions:

- if no static map has been recorded,
- if the static map has been deactivated,
- if the static map has been deleted.

The form of the initial map depends on a number of settings of the basic calibration and is designed to suppress typical interferences in the upper part of the probe. It can not be changed by the user.

Structure of the submenu on the local display


Navigation \blacksquare Expert \rightarrow Sensor \rightarrow Mapping

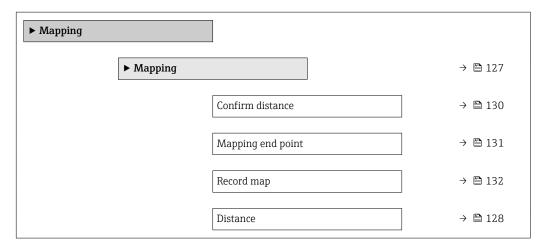

Structure of the submenu in an operating tool

Navigation \square Expert \rightarrow Sensor \rightarrow Mapping

"Mapping" submenu

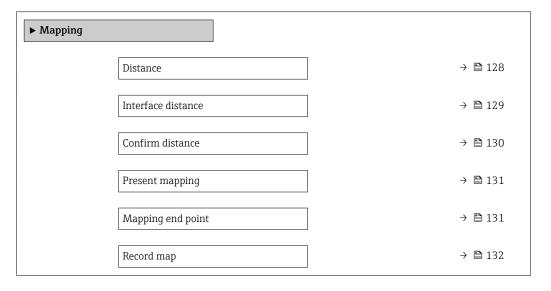

Description of parameters

Navigation \blacksquare Expert \rightarrow Sensor \rightarrow Mapping


Distance

Navigation


Description

Displays the measured distance D_L between the reference point (lower edge of the flange or threaded connection) and the level.


Additional information

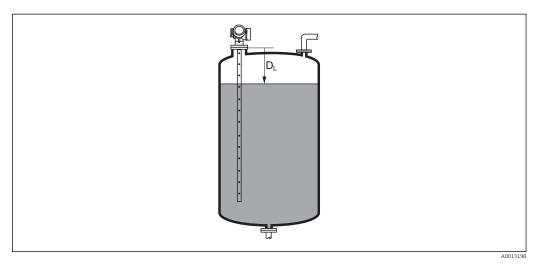

■ 44 Distance for liquid measurements

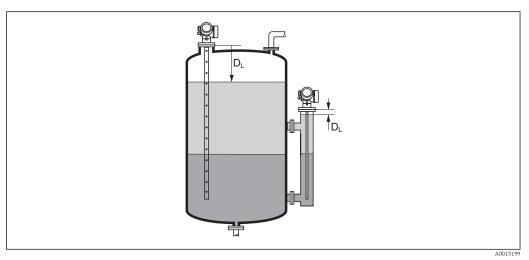

■ 45 Distance for interface measurements

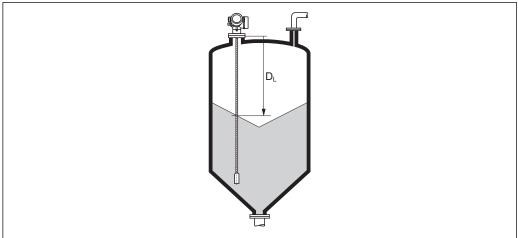

1001001

■ 46 Distance for bulk solid measurements

The unit is defined in the **Distance unit** parameter ($\rightarrow \triangleq 47$).

Interface distance

Navigation

 \blacksquare Expert → Sensor → Mapping → Interface dist. (1067)


Prerequisite

Operating mode (→ 🖺 47) = Interface or Interface with capacitance

Description

Displays the measured distance D_{I} between the reference point (lower edge of flange or threaded connection) and the interface.

Additional information

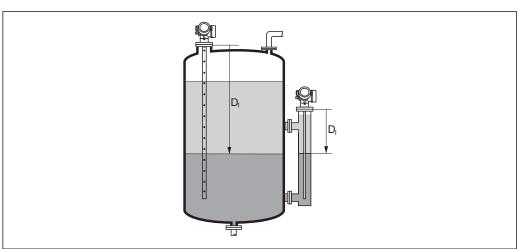

A001320

The unit is defined in the **Distance unit** parameter ($\rightarrow \triangleq 47$).

Confirm distance

Navigation

 \blacksquare Expert → Sensor → Mapping → Confirm distance (1045)

Description

Specify, whether the measured distance matches the real distance.

Depending on the selection the device automatically sets the range of mapping.

Selection

- Manual map
- Distance ok
- Distance unknown
- Distance too small
- Distance too big
- Tank empty
- Delete map

Factory setting

Distance unknown

Additional information

Meaning of the options

Manual map

To be selected if the range of mapping is to be defined manually in the **Mapping end point** parameter ($\Rightarrow \implies 131$). In this case it is not necessary to confirm the distance.

■ Distance ok

To be selected if the measured distance matches the actual distance. The device performs a mapping.

■ Distance unknown

To be selected if the actual distance is unknown. A mapping can not be performed in this case.

■ Distance too small

To be selected if the measured distance is smaller than the actual distance. The device searches for the next echo and returns to the **Confirm distance** parameter. The distance is recalculated and displayed. The comparison must be repeated until the displayed distance matches the actual distance. After this, the recording of the map can be started by selecting **Distance ok**.

130

Distance too big ⁶⁾

To be selected if the measured distance exceeds the actual distance. The device adjusts the signal evaluation and returns to the **Confirm distance** parameter. The distance is recalculated and displayed. The comparison must be repeated until the displayed distance matches the actual distance. After this, the recording of the map can be started by selecting **Distance ok**.

Tank empty

To be selected if the tank is completely empty. The device records a mapping covering the complete measuring range.

Factory map

To be selected if the present mapping curve (if one exists) is to be deleted. The device returns to the **Confirm distance** parameter and a new mapping can be recorded.

- When operating via the display module, the measured distance is displayed together with this parameter for reference purposes.
- For interface measurements the distance always refers to the toatal level (not the interface level).
- For FMP55 with rope probes and **Operating mode (→ 🖺 47) = Interface with capacitance** the mapping must be recorded with the tank being empty, and the **Tank empty** option must be selected. Otherwise the device can not register the correct empty capacitance.

For FMP55 with coax probes a mapping must be recorded at least in the upper part of the probe, as tightening the flange has an influence on the envelope curve. However, even with coax probes it is recommended to record the mapping with the tank being completely empty (and selecting the **Tank empty** option).

- If the teaching procedure with the **Distance too small** option or the **Distance too big** option is quit before the distance has been confirmed, a map is **not** recorded and the teaching procedure is reset after 60 s.
- For FMP54 with gas phase compensation (product structure: feature 540 "Application Package", option EF or EG) a map must **not** be recorded.

Present mapping		
Navigation		
Description	Indicates up to which distance a mapping has already been recorded.	
Mapping end point		
Navigation	Expert \rightarrow Sensor \rightarrow Mapping \rightarrow Map. end point (1022)	
Prerequisite	Confirm distance (→ 🗎 130) = Manual map or Distance too small	
Description	Specify new end of the mapping.	
User entry	0 to 200 000.0 m	

⁶⁾ Only available for "Expert → Sensor → Echo tracking → **Evaluation mode** parameter (→ 🖺 142)" = "Short time history" or "Long time history"

Factory setting

0.1 m

Additional information

This parameter defines up to which distance the new mapping is to be recorded. The distance is measured from the reference point, i.e. from the lower edge of the mounting flange or the threaded connection.



For reference purposes the **Present mapping** parameter ($\rightarrow \boxminus 131$) is displayed together with this parameter. It indicates up to which distance a mapping has already been recorded.

Record map

Navigation

 \blacksquare Expert → Sensor → Mapping → Record map (1069)

Prerequisite

Confirm distance (→ 🖺 130) = Manual map or Distance too small

Description

Start recording of the map.

Selection

- No
- Record map
- Delete map

Factory setting

No

Additional information

Meaning of the options

■ No

The map is not recorded.

Record map

The map is recorded. After the recording is completed, the new measured distance and the new mapping range appear on the display. When operating via the local display, these values must be confirmed by pressing \square .


Delete map

The mapping (if one exists) is deleted and the device displays the recalculated measured distance and the mapping range. When operating via the local display, these values must be confirmed by pressing \square .

4.4.14 "EOP evaluation" submenu

As an alternative to evaluating the direct level signal, Levelflex can calculate the level via the shift of the end-of-probe signal (EOP). Details on the EOP evaluation are configured in the **EOP evaluation** submenu.

Shift of the end-of-probe signal (EOP)

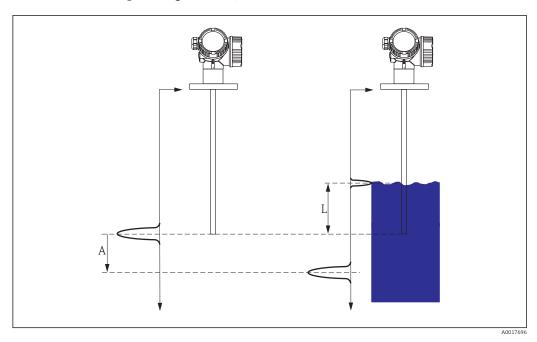

 \blacksquare 47 Shift of the end-of-probe signal (EOP) depending on the level

A EOP shift

L Level

When evaluating the end-of-probe signal, you make use of the fact that electromagnetic pulses propagate more slowly in a medium than in air. As a consequence the end-of-probe signal moves downwards when the level is increased. By inverting this relationship one can calculate the level L from the end-of-probe shift A:

$$L = A / (SQRT (DK) - 1)$$

Where *DC* is the dielectric constant of the medium.


If both, the level signal and the end-of-probe signal are known, the dielectric constant *DC* can be calculated:

$$DK = (A/L + 1)^2$$

The calculated DC value is displayed in the **Calculated DC value** parameter ($\rightarrow \triangleq 56$).

Structure of the submenu

Navigation $\blacksquare \blacksquare$ Expert \rightarrow Sensor \rightarrow EOP evaluation

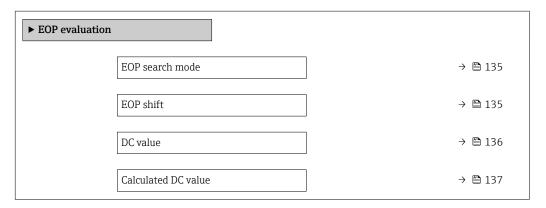

Description of parameters

Navigation $\blacksquare \blacksquare$ Expert \rightarrow Sensor \rightarrow EOP evaluation

EOP search mode		
Navigation	 Expert → Sensor → EOP evaluation → EOP search mode (Expert → Sensor → EOP evaluation → EOP search mode (•
Prerequisite	Operating mode parameter ($\rightarrow \triangleq 47$) = Level	
Description	Select method for the detection of the end-of-probe signal.	
Selection	Empty recognition onlyNegative EOP	

Factory setting

Negative EOP

Positive EOP

Additional information

Meaning of the options

■ Empty recognition only

■ Negative EOP high resolution

Positive and negative end-of-probe signals are searched for. However, the level is not calculated from the end-of-probe signal.

- If no level signal is present and if the end-of-probe signal is within the range defined in the EOP range upper area parameter, the level is set to 0%, which means an empty tank or silo is assumed.
- If no level signal is present and if the end-of-probe-signal is beyond the range defined in the EOP range upper area parameter, an echo loss is reported.

Negative EOP

Only negative end-of-probe signals are searched for. This is the correct option if the probe end is insulated.

Positive EOP

Only positive end-of-probe signals are searched for. This is the correct option if the end of the probe is connected to ground.

■ Negative EOP high resolution

The resolution at the end of the probe is improved by a deconvolution algorithm. This is only possible if the end-of-probe postion in the case of an empty tank has been stored by selecting the **Tank empty** option in the **Confirm distance** parameter ($\rightarrow \implies 130$).

EOP shift		
Navigation	Expert \rightarrow Sensor \rightarrow EOP evaluation \rightarrow EOP shift (1027) Expert \rightarrow Sensor \rightarrow EOP evaluation \rightarrow EOP shift (1027)	
Prerequisite	EOP level evaluation ≠ Off	
Description	Displays the current shift of the end-of-probe signal as compared to the empty vessel.	

DC value

Navigation

Description

- For level measurements: Specify dielectric constant ϵ_r .
- For interface measurements: Specify dielectric constant ε_r of the upper medium.

User entry

Signed floating-point number

Factory setting

Dependent on the following parameters:

- Operating mode ($\rightarrow \implies 47$)
- Medium property (→ 🖺 54)
- Medium type (\rightarrow 🖺 53)
- Bin type (\rightarrow 🗎 48)or Tank type (\rightarrow 🗎 48)

Additional information

Dependence of the factory settings on other parameters

For "Operating mode" = "Level"

Medium property (→ 🗎 54)	Medium type (→ 🖺 53)	Bin type (→ 🖺 48) or Tank type (→ 🖺 48)	DC value
Unknown	Solid	Bin type (→ 🖺 48) ■ Aluminium ■ Plastic wood	1.9
		Bin type (→ 🖺 48) ■ Concrete ■ Metallic	1.6
	Liquid	Tank type (→ 🖺 48) Coaxial	1.4
		Any other tank type	1.9
DC 1.4 1.6	Solid	Bin type (→ 🖺 48) ■ Concrete ■ Aluminium ■ Plastic wood	1.6
		Bin type (→ 🖺 48) Metallic	1.4
	Liquid	Tank type (→ 🖺 48) ■ Non metallic ■ Mounted outside	1.6
		Any other tank type	1.4
DC 1.6 1.9			1.6
DC 1.9 2.5			1.9
DC 2.5 4			2.5
DC 4 7			4
DC 7 15			7
DC > 15			15

For "Operating mode" = "Interface with capacitance" or "Interface": DC value = 1.9

As the value defines the echo threshold, it may not exceed the actual DC of the medium. Dielectric constants above DC = 15 have only a very limited influence on the echo threshold.

Calculated DC value

Navigation \blacksquare Expert \rightarrow Sensor \rightarrow EOP evaluation \rightarrow Calc. DC value (1118)

Prerequisite EOP level evaluation = Automatic DC

Description ■ For level measurements:

Displays calculated dielectric constant ε_r .

• For interface measurements:

Displays calculated dielectric constant $\epsilon_{\rm r}$ or the upper medium.

Additional information

The exact meaning of this parameter is dependent on further settings:

■ Operating mode (→ 🖺 47) = Level:

Displays the dielectric constant which is calculated from the end-of-probe signal and the

- Operating mode (→ 🖺 47) = Interface or Interface with capacitance:

 - In any other case:

Identical to the **DC value** parameter ($\rightarrow \implies 55$)

⁷⁾ The correct calculation of the dielectric constant is only possible for media with a small dielectric constant and weak signal damping, for which the level signal and the end-of-probe signal can be evaluated simultaneously. Among these media are for example oil, solvents and synthetic granules.

4.4.15 "Echo tracking" submenu

The echo tracking algorithm takes into account the change in time of the individual echoes when evaluating the envelope curve. This improves the allocation of the echoes to the level or interface signal. Different types of echo tracking can be selected in the **Evaluation mode** parameter ($\rightarrow \triangleq 142$). A number of further parameters is used to configure the echo tracking more precisely.


"Evaluation mode" = "History off"

The envelope curve is evaluated statically.

"Evaluation mode" = "Short time history"

The static envelope curve evalauation is taken as a starting point.

The position of the individual echoes is tracked. The track contains the position, the velocity, the relative and the absolute echo amplitude. Normally the strongest echo within a search window is selected and allocated to the track.

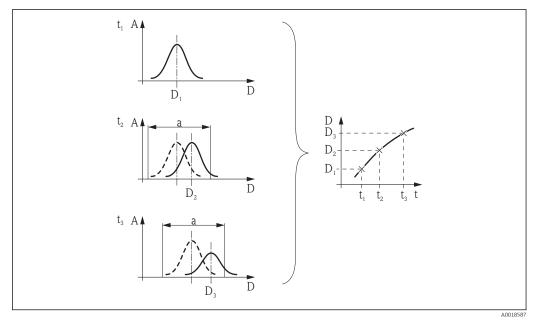

Definition of a track: In a new envelope curve, the echo is searched for in a window of width "a" centered around the echo position in the previous envelope curve. The change of the echo position in the course of time defines the track.

In this evaluation mode it is possible to activate the moving track recognition (**Moving track recognition** parameter).

The moving track recognition is used to distinguish the level echo from interference echoes. It makes use of the fact that an echo which moves in one direction for a certain time is likely to be the level echo. Interference echoes, on the other hand, normally stay at the same position within the envelope curve.

If the moving track recognition is switched on, this distinction is used as an additional criterion to identify the level echo.


"Evaluation mode" = "Long time history"

The **Long time history** option is not available for interface measurements.

A so-called tank history is used for the determination of the level and a consistency check of the echoes.

For a given tank with a given medium, the positions of the level, interface, multiple and end-of-probe or tank bottom echoes are in a defined relation to each other. This relationship is recorded during the operation of the device and stored in the tank history. On the basis of this tank history, echoes can be reliably allocated, even if one echo is lost temporarily or if the device was switched off for a while.


Schematic exmaples

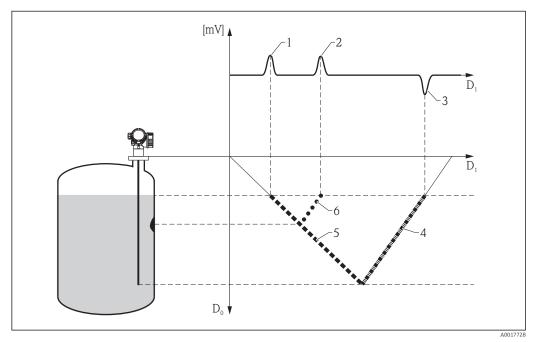

■ 49 Example 1: Tank history with interference echo and end of probe echo (small DC values)

DO Actual level distance

- D1 Distance of the signal in the envelope curve
- 1 Level echo
- 2 Interference echo
- 3 End-of-probe echo
- 4 Track "End-of-probe echo" (stored in the tank history)
- 5 Track "Level echo" (stored in the tank history)
- 6 Track "Interference echo" (stored in the tank history)

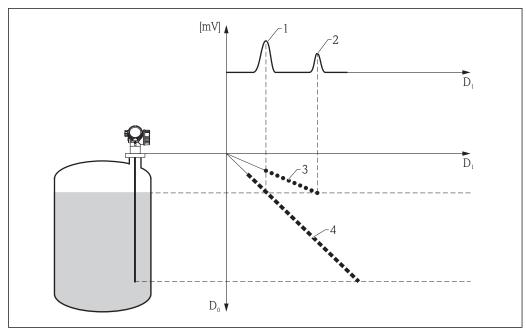


■ 50 Example 2: Tank history with a multiple echo (large DC values)

- D0 Actual level distanceD1 Distance of the signal in the envelope curve
- 1
- Level echo Multiple echo 2
- Track "Multiple echo" (stored in the tank history)
 Track "Level echo" (stored in the tank history) 3

Structure of the submenu

Navigation $\blacksquare \blacksquare$ Expert \rightarrow Sensor \rightarrow Echo tracking

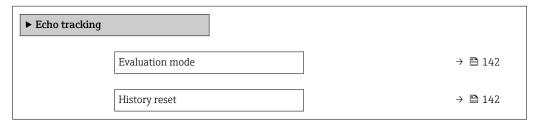

Description of parameters

Navigation $\blacksquare \blacksquare$ Expert \rightarrow Sensor \rightarrow Echo tracking

Evaluation mode

Navigation $\blacksquare \blacksquare$ Expert \rightarrow Sensor \rightarrow Echo tracking \rightarrow Evaluation mode (1112)

Description Select evaluation mode for echo tracking.

Selection • History off

- Short time history
- Long time history

Factory setting

• For level measurements:

Long time history

• For interface measurements:

Short time history

- Exceptions:
 - For FMP54 and any FMP5x with center washer:

Short time history

- For Tank type (\rightarrow $\stackrel{\triangle}{=}$ 48) = Bypass / pipe:

Short time history

- If the gas phase compensation is active, i.e. **GPC mode** (→ \blacksquare **106**) ≠ **Off**:

History off

- For Process property (→ 🖺 49) = Very fast > 100 m (333 ft) /h or No filter / test: History off

Additional information

Meaning of the options

History off

The envelope curve is evaluated only statically.

Short time history

In addition to the static algorithms a dynamic echo trace is continuously created.

Long time history

(Only available for level measurements)

In addition to the static algorithms and the dynamic echo trace a tank trace is continuously generated. Using the tank trace the device can determine the level even if the level echo ist lost temporarily.



- The **Long time history** option is not available for interface measurements.
- The Long time history option is not recommended if there are substantial changes of the medium or process conditions within a short period of time (e.g. in the case of changing dielectric constants or boiling media).

History reset

Navigation $\blacksquare \square$ Expert \rightarrow Sensor \rightarrow Echo tracking \rightarrow History reset (1145)

Description Reset history of the echo and tank tracking.

Selection

Reset done

Restart echo tracking

■ Delete history

Factory setting

Reset done

Additional information

Meaning of the options

■ Reset done

Does not initiate an action but is only a display option. It is displayed as soon as the reset operation has been accomplished.

Restart echo tracking

The echo tracking is reset. The tank trace, however, is maintained.

Delete history

- The echo tracking and tank trace are reset.
- Additionally for Operating mode (→ ≜ 47) = Interface with capacitance:
 All calibrations are reset.

4.4.16 "Interface" submenu

With Levelflex, there are two types of interface measurement which can be selected in the **Operating mode** parameter ($\rightarrow \implies 47$):


Operating mode (→ 🖺 47)	Evaluated signals	available for	Description
Interface	Signal of the guided radar	FMP51FMP52FMP54FMP55	→ 🖺 145
Interface with capacitance	Signal of the guided radarMeasured capacitance	FMP55	→ 🖺 147

Interface measurement with guided radar (without capacitance measurement)

Basic principles

When the high-frequency pulses hit the surface of the medium, only a percentage of the transmission pulse is reflected. In the case of media A with a low dielectric constant ϵ_A , in particular, the other part penetrates the medium. The pulse is reflected once more at the interface point to a second medium, B, with a higher dielectrdic constant ϵ_B . Thus, the envelope curve contains a level echo D_1 as well as an interface echo D_2 .

When evaluating the interface echo, Levelflex must take into account the fact that electromagnetic pulses propagate slower in a medium than in air. Therefore, the interface echo appears shifted into the direction of larger distances. Using the dielectric constant of the upper medium, Levelflex can automatically compensate for this shift:

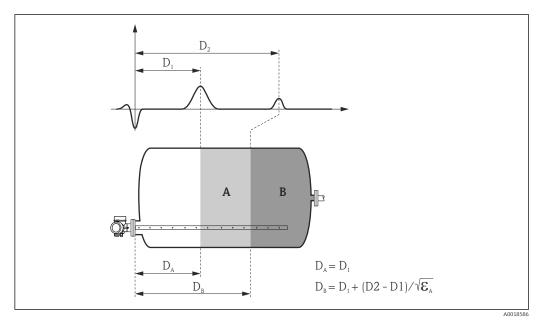

 ${
m Interface}$ measurement with the quided radar


If an interface measurement is activated, **Evaluation mode (→ 🖺 142) = Short time history** is the only option. The **Long time history** option can not be used in combination with an interface meaurement.

Prerequisites for an interface measurement

- The dielectric constant of the upper medium must be constant and known.
- Dielectric constant of the upper medium: $\varepsilon_A \le 10$
- \bullet Dielectric constant of the lower medium: $\epsilon_B \geq \epsilon_A + 10$

Tank level

For interface measurements it is important whether the container is partially filled or fully flooded. This must be specified by the user in the **Tank level** parameter ($\rightarrow \implies 153$):

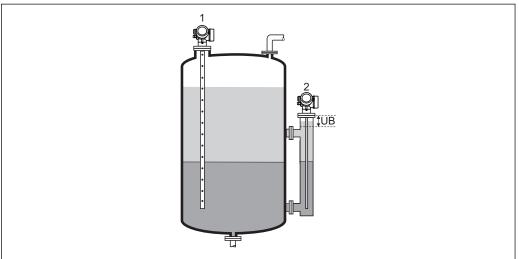

A00131

- 1 Partially filled
- 2 Fully flooded
- *UB* Blocking distance (→ 🖺 97)

■ Tank level (→ 🗎 153) = Partially filled


In this case the device looks for two signals: the interface echo and the level echo; if required, the end-of-probe signal is used for signal evaluation, too $\rightarrow \implies 133$.

■ Tank level (→ 🖺 153) = Fully flooded

Interface measurement with guided level radar and capacitance measurement

With Levelflex FMP55, the probe can not only be used for a guided radar measurement, but for a simultaneous capacitance measurement as well. This enables interface measurements even if the interface echo is lost temporarily (e.g. due to foam or emulsion).

Basic principles of the capacitance level measurement

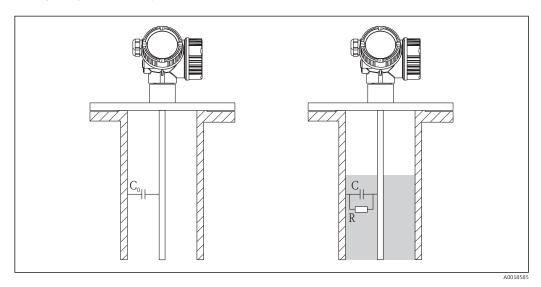

■ 52 Capacitance level measurement

 C_0 = Empty capacitance

C = Capacitance of the (partially) filled tank

The principle of capacitance level measurement is based on the change in capacitance of the capacitor due to the change in the level. The probe and container wall (conductive material) form an electric capacitor. When the probe is in air, a certain low initial capacitance is measured. When the container is filled, the capacitance of the capacitor increases the more the probe is covered.

"Interface property" = "Standard"

Basic idea

The capacitance measurement is used to calcluate the interface in the case of an echo loss.

Requirements concerning the upper medium (A)

- Conductivity $\sigma_A < 1 \mu S/cm$
- The dielectric constant ε_A must not change and must be known.
- Value of the dielectric constant: $1.4 < \epsilon_A < 10$

Voraussetzungen an das untere Medium (B)

- Conductivity $\sigma_B > 100 \mu S/cm$
- Dielectric constant: $\varepsilon_B \ge \varepsilon_A + 10$
- The factory setting for the dielectric constant of the lower medium is $\varepsilon_B = 80$. This is the value for water. If the lower medium is no water, its dielectric constant must be specified in the **DC value lower medium** parameter ($\rightarrow \square 54$).

Installation

- The measurement requires a coaxial measuring system. This can be achieved by a stilling well, a bypass or a coax probe.
- Build-up formation should be avoided.

Signal evaluation

- As long as both echos of the guided radar (level and interface) are found:
 - H_A and H_B are calculated from the guided level radar.
 - H_A , H_B and the measured capacitance C are used to recalculate the factors a and b continuously (more precisely: The thickness of the insulation is calculated from which a and b can be derived by a simple mathematical operation.)
- If the interface echo is lost:

 H_A is calculated from the measured capacitance and the last values of a and b.

"Interface property" = "Build up"

Basic idea


A comparison of the measuring results from the guided radar and the capacitance measurement shows whether build-up is present at the probe.

Requirements concerning the upper medium (A)

- Conductivity $\sigma_A < 1 \mu S/cm$
- \bullet The dielectric constant ϵ_A must not change and must be known.
- Value of the dielectric constant: $1.4 < \epsilon_A < 10$

Requirements concerning the lower medium (B)

- Conductivity $\sigma_B > 100 \,\mu\text{S/cm}$
- Dielectric constant: $\varepsilon_B \ge \varepsilon_A + 10$

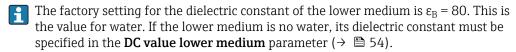

Installation

- The measurement requires a coaxial measuring system. This can be achieved by a stilling well, a bypass or a coax probe.
- In the case of a rope or rod probe, the tank must be empty on commissioning and a mapping curve must be recorded with the tank being empty. To do so, select Confirm distance (→ ≦ 130) = Tank empty. This automatically calibrates the empty capacitance of the rope or rod probe.

Signalauswertung

The interface distance is independently calculated from the guided radar and from the capacitance. The relative deviation of these two distances is calculated:

$$Q_D = (D_{I,TDR} - D_{I,C}) / D_I$$

 Q_D is displayed in the **Build-up ratio** parameter ($\rightarrow \equiv 155$).

If the absolute value of Q_D exceeds a predefined limit (defined in the **Build-up thres.** parameter ($\rightarrow \implies 155$)), the diagnostic message **Build-up detected** is generated.

If the interface echo is lost (e.g. due to an emulsion layer), the interface height is calculated from the capcitance measurement.

- The diagnostic message **Build-up detected** may also occur if the dielectric constant of the upper medium changes. It is crucial for the measurement that the exact values of the upper and the lower dielectric constants are entered:
 - DC value (→ 🖺 55)
 - DC value lower medium (→ 🖺 54)

"Interface property" = "Oil/Water condensate"

Basic idea

In the case of an emulsion layer, the interface echo is strongly attenuated and may even completely disappear. Therefore, if this option is selected, the interface height is always calculated from the measured capacitance.

Requirements concerning the upper medium (A)

- Conductivity $\sigma_A < 1 \mu S/cm$
- ullet The dielectric constant ϵ_A must not change and must be known.
- Value of the dielectric constant: $1.4 < \epsilon_A < 10$

Requirements concerning the lower medium (B)

- Conductivity $\sigma_B > 100 \mu \text{S/cm}$
- Dielectric constant: $\varepsilon_B \ge \varepsilon_A + 10$
- The factory setting for the dielectric constant of the lower medium is $\varepsilon_B = 80$. This is the value for water. If the lower medium is no water, its dielectric constant must be specified in the **DC value lower medium** parameter ($\rightarrow \equiv 54$).

Installation

- The measurement requires a coaxial measuring system. This can be achieved by a stilling well, a bypass or a coax probe.
- Any build-up formation must be avoided in order to ensure the reliabilty of the capacitance measurement.

Signalauswertung

The total level is always calculated from the guided radar signal. The interface level is always calculated from the measured capacitance and the total level.

- It is crucial for the measurement that the exact values of the upper and the lower dielectric constants are entered:
 - DC value (→ 🗎 55)
 - DC value lower medium (→ 🖺 54)

"Interface property" = "Special: automatic DC"

Basic idea

The capacitance measurement is used to continuously recalculate the dielectric constant of the upper medium. In this way ist is possible to measure processes with a changing dielectric constant.



This evaluation mode is very sensitive to errors in the radar or capacitance measurement. Errors of this type may be caused by a wrong grounding, a wrong interference echo suppression, a free-field installation of a rope probe, or build-up formation, for example. These errors result in a wrong dielectric constant and thus in wrong level values.

Requirements concerning the upper medium (A)

- Conductivity $\sigma_A < 1 \mu S/cm$
- Value of the dielectric constant: $1.4 < \epsilon_A < 10$

Requirements concerning the lower medium (B)

- Conductivity $\sigma_B > 100 \,\mu\text{S/cm}$
- Dielectric constant: $\epsilon_B \ge \epsilon_A + 10$



The factory setting for the dielectric constant of the lower medium is ε_B = 80. This is the value for water. If the lower medium is no water, its dielectric constant must be specified in the **DC value lower medium** parameter ($\rightarrow \implies 54$).

Process requirements

- The thickness of the upper medium must be at least 300 mm (12 in) throughout the
- The level and interface echoes must be detectable throughout the process.
- An interference echo suppression must be performed during commissioning.
- There must be no build-up at the probe.

Installation

- The measurement requires a coaxial measuring system. This can be achieved by a stilling well, a bypass or a coax probe.
- In the case of a rope or rod probe, the tank must be empty on commissioning and a mapping curve must be recorded with the tank being empty. To do so, select **Confirm distance** (→ 🗎 130) = Tank empty. This automatically calibrates the empty capacitance of the rope or rod probe.

Signal evaluation


The level and the interface echo as well as the measured capcitance are used to calculate the dielectric constant of the upper medium, which is than used in turn to calculate the level and the total and interface level.



Small changes of the dielectric constant (e.g. from 2.2 to 2.3) can not be compensated by the algorithm. It is only useful in the case of larger changes, e.g. from 2 to 6.

Structure of the submenu

Navigation $\blacksquare \blacksquare$ Expert \rightarrow Sensor \rightarrow Interface

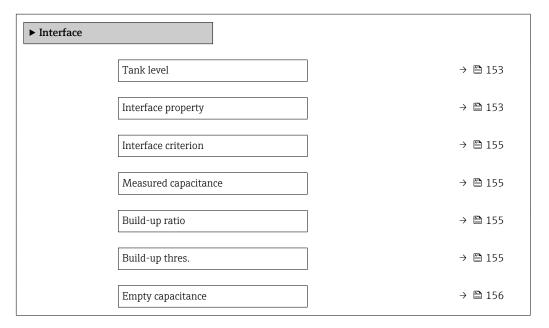

Description of parameters

Navigation $\blacksquare \blacksquare$ Expert \rightarrow Sensor \rightarrow Interface

Tank level

Navigation \blacksquare Expert \rightarrow Sensor \rightarrow Interface \rightarrow Tank level (1111)

Prerequisite Operating mode (→ 🖺 47) = Interface

Description Specify whether the tank or bypass is completely flooded or not.

Selection ■ Partially filled ■ Fully flooded

Factory setting Partially filled

Additional information


Meaning of the options

Partially filled

The device searches for 2 echo signals, one for the interface and one for the total level.

■ Fully flooded

The device searches for the interface level only. With this setting it is essential that the upper level signal always is within the upper blocking distance (UB) in order to avoid that it is evaluated by mistake.

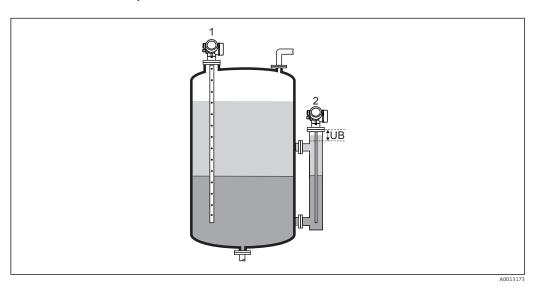

- Partially filled
- 2 Fully flooded
- UB Upper blocking distance

Interface property

Navigation \blacksquare Expert \rightarrow Sensor \rightarrow Interface \rightarrow Interface prop. (1107)

Prerequisite Operating mode (→ 🖺 47) = Interface with capacitance

Description

Select interface property.

The interface property determines how the Guided Radar and the Capacitance Measurement interact.

Selection

- Special: automatic DC
- Build up
- Standard
- Oil/Water condensate

Factory setting

Standard

Additional information

Meaning of the options

■ Special: automatic DC

- Condition:

The specific capacitance (pF/m) is known. 8)

- Signal evaluation:

As long as a clear interface is detected, both the total and the interface level are determined via the Guided Radar. The dielectric constant of the upper medium is continuously adjusted. If an emulsion layer is present, the total level is determined via the Guided Radar whereas the interface level is determined via the Capacitance Measurement.

■ Build up

- Condition:

The dielectric constant of the upper medium and the specific capacitance (pF/m) are known. $^{8)}$

Signal evaluation:

As long as a clear interface is detected, the interface level is determined via the Guided Radar as well as via the Capacitance Measurement. If these two values start to diverge from each other due to build-up formation, an error message is generated. If an emulsion layer is present, the total level is determined via the Guided Radar whereas the interface level is determined via the Capacitance Measurement.

Standard

- Condition:

The dielectric constant of the upper medium is known.

- Signal evaluation:

As long as a clear interface is detected, the specific capacitance (pF/m) is continuously adjusted. Therefore build-up has only little influence on the measurement. If an emulsion layer is present, the total level is determined via the Guided Radar whereas the interface level is determined via the Capacitance Measurement.

■ Oil/Water condensate

- Condition:

The dielectric constant of the upper medium and the specific capacitance (pF/m) are known. $^{8)}$

- Signal evaluation:

The total level is always determined via the Guided Radar. The interface level is always determined via the Capacitance Measurement.

⁸⁾ The specific capacitance of the media depends on the DC value and the geometry of the probe, which may differ noticeably. For rod probes < 2 m, the probe geometry is measured after production and the resulting specific capacitance for conductive media is preset on delivery.

Interface criterion			
Navigation			
	Expert → Sensor → Interface → Int. criterion (1184)		
Prerequisite	Operating mode (→ 🖺 47) = Interface or Interface with capacitance		
Description	Displays the threshold (in mV) for the recognition of the interface signal.		
Measured capacitance			
Navigation			
Prerequisite	Operating mode ($\rightarrow \triangleq 47$) = Interface with capacitance		
Description	Displays the measured capacitance (pF).		
Build-up ratio			
Navigation			
Prerequisite	Interface property (→ 🖺 153) = Build up		
Description	Indicates the relative deviation between the interface distance measured by the radar and the capacitance, respectively.		
Additional information	Formula by which this value is calculated:		
	(D _{Radar} - D _{Capa}) / D _{Radar}		
	If this ratio exceeds the value defined in the Build-up thres. parameter ($\rightarrow \triangleq 155$), an error message is generated.		
Build-up thres.			
Navigation	Expert → Sensor → Interface → Build-up thres. (1211) Expert → Sensor → Interface → Build-up thres. (1211)		
Prerequisite	Interface property (→ 🖺 153) = Build up		
Description	Define threshold for build-up detection.		
User entry	Signed floating-point number		
-			

Factory setting

0.1

Additional information

If the **Build-up ratio** parameter ($\rightarrow \boxminus 155$) exceeds the value specified in this parameter, the corresponding error message is generated.

Empty capacitance	
-------------------	--

Navigation \square Expert \rightarrow Sensor \rightarrow Interface \rightarrow Empty capacitan. (1122)

Prerequisite Operating mode ($\rightarrow \triangleq 47$) = Interface with capacitance

Description Specify capacitance for the empty tank.

User entry 0.0 to 10 000.0 pF

Factory setting 0.0 pF


Additional information

Normally, the device determines the empty capacitance automatically if during commissioning **Confirm distance** ($\rightarrow \triangleq 130$) = **Tank empty** is selected. In exceptional cases - if emptying the tank during commissioning is impossible - a calculated value can be entered manually.

Calculation of the empty capacitance

- 1. Read the empty capacitance per meter from the diagram.
- 2. Multiply the read value by the length of the probe.
- 3. Add the result to the basic capacitance of the device according to the following table:

Device version	Basic capacitance
Compact device	29.5 pF
Feature 600 "Probe Design", option model MB "Sensor remote, 3m/9ft cable, detachable +mounting bracket"	278.4 pF

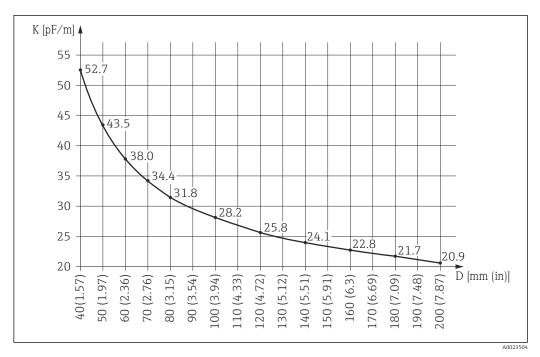

 \blacksquare 53 Empty capacitance per meter according to bypass or stilling well diameter

D Bypass or stilling well diameter

K Capacitance per meter

4.4.17 "External input" submenu

The **External input** submenu is only available for devices with PROFIBUS PA or FOUNDATION Fieldbus.

The behavior of the sensor can be controlled via two external switch inputs: The measurement can be switched on and off. Furthermore, a specific value can be assigned to the level when the digital switch signal is present, regardless of the actual measured value.

Structure of the submenu

Navigation $\blacksquare \blacksquare$ Expert \rightarrow Sensor \rightarrow External input

► External input		
	Level external input 1	→ 🖺 159
	Function Input 1 Level	→ 🖺 159
	Fixed value inp. 1	→ 🖺 159
	Level external input 2	→ 🖺 160
	Function Input 2 Level	→ 🖺 160
	Fixed value inp. 2	→ 🖺 160
	Interface external input 1	→ 🖺 161
	Function input 1 interface	→ 🖺 161
	Fixed value input 1 interface	→ 🖺 161
	Interface external input 2	→ 🖺 162
	Function input 2 interface	→ 🖺 162
	Fixed value input 2 interface	→ 🖺 162
	Control measurement	→ 🖺 163
	Measurement	→ 🖺 163

Description of parameters

Navigation $\blacksquare \blacksquare$ Expert \rightarrow Sensor \rightarrow External input

Level external input 1 **Navigation** \blacksquare Expert → Sensor → External input → Level ext. in. 1 (2305) Description Assign a DO block to the external input. The switch signal is read from this block. Selection None ■ Digital output 1 ■ Digital output 2 ■ Digital output 3 ■ Digital output 4 Digital output 5 ■ Digital output 6 ■ Digital output 7 ■ Digital output 8

Factory setting None

Function Input 1 Level

Navigation \blacksquare Expert \rightarrow Sensor \rightarrow External input \rightarrow Fct. Inp. 1 Lvl (2311)

Prerequisite Level external input 1 (→ 🖺 159) ≠ None

Description Define the reaction of the level signal in case a switching signal is active at the external

input.

Selection ■ Off

Low (0%)High (100%)Hold Last Value

■ Fixed Value

Factory setting Off

Fixed value inp. 1

Navigation \blacksquare Expert \rightarrow Sensor \rightarrow External input \rightarrow Fix. val. inp. 1 (2332)

Prerequisite Function Input 1 Level (→ 🗎 159) = Fixed Value

Description Specify the value the level signal assumes if a switch signal is active at the external input.

User entry 0.0 to 200 000.0 %

Factory setting 0.0 %

Level external input 2

Navigation $\blacksquare \square$ Expert \rightarrow Sensor \rightarrow External input \rightarrow Level ext. in. 2 (2306)

Description Assign a DO block to the external input. The switch signal is read from this block.

Selection • None

Digital output 1
Digital output 2
Digital output 3
Digital output 4
Digital output 5
Digital output 6
Digital output 7

■ Digital output 8

Factory setting None

Function Input 2 Level

Navigation \blacksquare Expert \rightarrow Sensor \rightarrow External input \rightarrow Fct. Inp. 2 Lvl (2331)

Prerequisite Level external input 2 (→ 🖺 160) ≠ None

Description Define the reaction of the level signal in case a switching signal is active at the external

input.

Selection ■ Off

- Low (0%)High (100%)Hold Last ValueFixed Value
- Factory setting Off

Fixed value inp. 2

Prerequisite Function Input 2 Level (→ 🖺 160) = Fixed Value

Description Specify the value the level signal assumes if a switch signal is active at the external input.

User entry 0.0 to 200 000.0 %

Factory setting 1.0%

Interface external input 1

Navigation \blacksquare Expert \rightarrow Sensor \rightarrow External input \rightarrow Interf. ext.in.1 (2334)

Description Assign a DO block to the external input. The switch signal is read from this block.

Selection • None

Digital output 1
Digital output 2
Digital output 3
Digital output 4
Digital output 5
Digital output 6
Digital output 7
Digital output 8

Factory setting None

Function input 1 interface

Navigation \blacksquare Expert \rightarrow Sensor \rightarrow External input \rightarrow Fct.In. 1 Interf (2336)

Prerequisite Interface external input 1 ($\Rightarrow \triangleq 161$) \neq None

Description Define the reaction of the interface signal in case a switching signal is active at the

external input.

Selection ■ Off

Low (0%)High (100%)Hold Last ValueFixed Value

Factory setting Off

Fixed value input 1 interface

Navigation \blacksquare Expert \rightarrow Sensor \rightarrow External input \rightarrow Val.in 1 interf (2338)

Prerequisite Function input 1 interface ($\rightarrow \triangleq 161$) = Fixed Value

Description Specify the value the interface signal assumes if a switch signal is active at the external

input.

User entry 0.0 to 200 000.0 %

Factory setting 0.0 %

Interface external input 2

Navigation \blacksquare Expert \rightarrow Sensor \rightarrow External input \rightarrow Interf. ext.in.2 (2335)

Description Assign a DO block to the external input. The switch signal is read from this block.

Selection • None

Digital output 1
Digital output 2
Digital output 3
Digital output 4
Digital output 5
Digital output 6
Digital output 7
Digital output 8

None

Factory setting

Function input 2 interface

Navigation \blacksquare Expert \rightarrow Sensor \rightarrow External input \rightarrow Fct.In. 2 Interf (2337)

Prerequisite Interface external input 2 (→ 🖺 162) ≠ None

Description Define the reaction of the interface signal in case a switching signal is active at the

external input.

Selection ■ Off

Low (0%)High (100%)Hold Last ValueFixed Value

Factory setting Off

Fixed value input 2 interface

Navigation $\blacksquare \blacksquare$ Expert \rightarrow Sensor \rightarrow External input \rightarrow Val.in 2 interf (2344)

Prerequisite Function input 2 interface (→ 🗎 162) = Fixed Value

Description Specify the value the interface signal assumes if a switch signal is active at the external

input.

162

User entry 0.0 to 200 000.0 %

Factory setting 1.0 %

Control measurement

Navigation \blacksquare Expert \rightarrow Sensor \rightarrow External input \rightarrow Ctrl. measurem. (1083)

Description Specify the DO block used to switch the measurement on or off.

Selection • None

Digital output 1
Digital output 2
Digital output 3
Digital output 4
Digital output 5
Digital output 6
Digital output 7
Digital output 8

Factory setting None

Measurement

Navigation \blacksquare Expert \rightarrow Sensor \rightarrow External input \rightarrow Measurement (1082)

Description Used to switch the measurement on or off manually.

Selection ■ Off

On


Factory setting On

4.5 "Output" submenu

The **Output** submenu contains all parameters needed to configure the current and switch outputs.

4.5.1 Structure of the submenu

Navigation $\blacksquare \blacksquare$ Expert \rightarrow Output

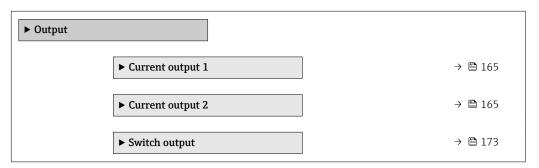


4.5.2 "Current output 1 to 2" submenu

There is a **Current output** submenu for each current output of the device (1 or 2 depending on the device version).

Structure of the submenu

Navigation \blacksquare Expert \rightarrow Output \rightarrow Curr.output 1 to 2

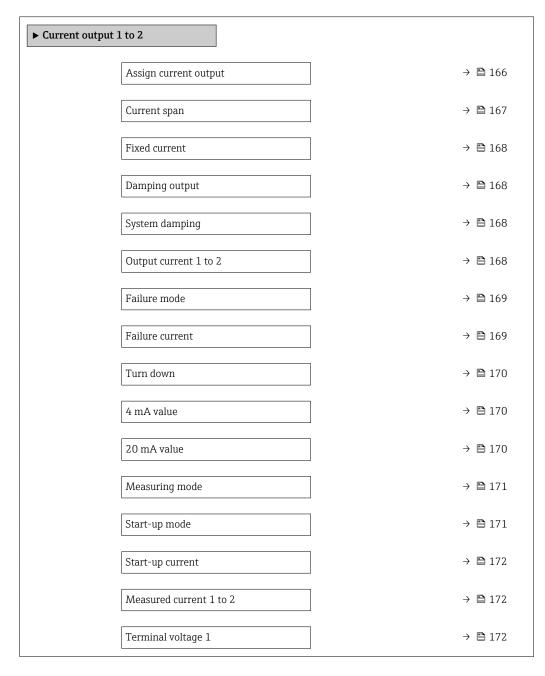

Description of parameters

Navigation $\blacksquare \blacksquare$ Expert \rightarrow Output \rightarrow Curr.output 1 to 2

Assign current output 1 to 2

Navigation

 \blacksquare Expert → Output → Curr.output 1 to 2 → Assign curr. (0359–1 to 2)

Description

Select process variable for current output.

Selection

- Level linearized
- Distance
- Electronic temperature
- Für FMP55: Measured capacitance
- Relative echo amplitude
- Analog output adv. diagnostics 1
- Analog output adv. diagnostics 2

Additionally for Operating mode = "Interface" or "Interface with capacitance":

- Interface linearized
- Interface distance
- Thickness upper layer
- Relative interface amplitude

Factory setting

For level measurements

- Current output 1: Level linearized
- Current output 2 9): Relative echo amplitude

For interface measurements

- Current output 1: Interface linearized
- Current output 2 ¹⁰⁾: Level linearized

Additional information

Definition of the current range for the process variables

Process variable	4 mA value	20 mA value
Level linearized	0 % ¹⁾ or the associated linearized value	$100\ \%^{2)}$ or the associated linearized value
Distance	0 (i.e. level is at the reference point)	Empty calibration (\rightarrow $\stackrel{\triangle}{=}$ 60) (i.e. level is at 0 %)
Electronic temperature	-50 °C (-58 °F)	100 °C (212 °F)
Measured capacitance	0 pF	4 000 pF
Relative echo amplitude	0 mV	2 000 mV
Analog output adv. diagnostics 1/2	depending on the parametrization of the Advanced Diagnostics	
Interface linearized	0 % ¹⁾ or the associated linearized value	$100\%^{2)}$ or the associated linearized value
Interface distance	0 (i.e. interface at the reference point)	Empty calibration (\rightarrow \cong 60) (i.e. interface is at 0 %)

⁹⁾ only for devices with two current outputs

¹⁰⁾ only for devices with two current outputs

Process variable	4 mA value	20 mA value
Thickness upper layer	0 % ¹⁾ or the associated linearized value	$100~\%^{2)}$ or the associated linearized value
Relative interface amplitude	0 mV	2 000 mV

- 1) the 0% level is defined by **Empty calibration** parameter ($\Rightarrow \triangleq 60$)
- 2) The 100% level is defined by **Full calibration** parameter ($\rightarrow \triangleq 61$)
- It may be necessary to adjust the 4mA and 20mA values to the application (especially in the case of the **Analog output adv. diagnostics 1/2** option).

This can be done by the following parameters:

- Expert \rightarrow Output \rightarrow Curr.output 1 to 2 \rightarrow Turn down (0358–1 to 2)
- Expert \rightarrow Output \rightarrow Curr.output 1 to 2 \rightarrow 4 mA value (0367–1 to 2)
- Expert \rightarrow Output \rightarrow Curr.output 1 to 2 \rightarrow 20 mA value (0372-1 to 2)

Current span	
--------------	--

Navigation

Description

Select current range for process variable and alarm signal.

Selection

- 4...20 mA
- 4...20 mA NAMUR
- 4...20 mA US
- Fixed current

Factory setting

4...20 mA NAMUR

Additional information

Meaning of the options

Option	Current range for process variable	Lower alarm signal level	Upper alarm signal level
420 mA	4 to 20.5 mA	< 3.6 mA	> 21.95 mA
420 mA NAMUR	3.8 to 20.5 mA	< 3.6 mA	> 21.95 mA
420 mA US	3.9 to 20.8 mA	< 3.6 mA	> 21.95 mA
Fixed current	Constant current, defined in the Fixed current parameter ($\rightarrow \triangleq 168$).		

- In the case of an error, the output current assumes the value defined in the **Failure** mode parameter ($\rightarrow \equiv 169$).
 - If the meausred value is out of the measuring range, diagnostic message **Current output** is issued.
- In a HART multidrop loop only one device can use the analog current to transmit a signal. For all other devices one must set:
 - **■** Current span = Fixed current
 - Fixed current (→

 168) = 4 mA

Fixed current

Navigation Expert \rightarrow Output \rightarrow Curr.output 1 to 2 \rightarrow Fixed current (0365–1 to 2)

Prerequisite Current span ($\Rightarrow \triangleq 167$) = Fixed current

Description Define constant value of the current.

User entry 4 to 22.5 mA

Factory setting 4 mA

Damping output

Description Define time constant τ for the damping of the output current.

User entry 0.0 to 999.9 s

Factory setting 0.0 s

Additional information Fluctuations of the measured value affect the output current with an exponential delay,

the time constant τ of which is defined in this parameter. With a small time constant the output reacts immediately to changes of the measured value. With a big time constant the reaction of the output is more delayed. For $\tau = 0$ (factory setting) there is no damping.

System damping

Navigation \blacksquare Expert \rightarrow Output \rightarrow Curr.output $1 \rightarrow$ System damping (1174–1)

Prerequisite Only for current output 1

Description Indicates the global sum of all damping values.

Additional information If the velocity is limited by the draining or filling filter ¹¹⁾, this is not taken into account in

the indicated system damping.

Output current 1 to 2

Navigation \blacksquare Expert \rightarrow Output \rightarrow Curr.output 1 to 2 \rightarrow Output curr. 1 to 2 (0361–1 to 2)

Description Displays calculated output current.

¹¹⁾ to be defined in the "Process property ($\rightarrow \triangleq 49$)", "Draining speed" and "Filling speed" parameters

Failure mode

Navigation Expert \rightarrow Output \rightarrow Curr.output 1 to 2 \rightarrow Failure mode (0364–1 to 2)

Prerequisite Current span (→ 🗎 167) ≠ Fixed current

Description Select behavior of the output current in case of an error.

Selection ■ Min. ■ Max.

- Last valid valueActual valueDefined value
- Factory setting Max.

Additional information Meaning of the options

■ Min.

The current output adopts the value of the lower alarm level according to the **Current span** parameter ($\rightarrow \triangleq 167$).

Max.

The current output adopts the value of the upper alarm level according to the **Current span** parameter ($\rightarrow \triangleq 167$).

Last valid value

The current remains constant at the last value it hat before the error occurred.

Actual value

The output current follows the actual measured value; the error is ignored.

Defined value

The output current assumes the value defined in the **Failure current** parameter $(\rightarrow \implies 169)$.

The error behavior of other output channels is not influenced by these settings but is defined in separate parameters.

Failure current ©

Navigation \blacksquare Expert \rightarrow Output \rightarrow Curr.output 1 to 2 \rightarrow Failure current (0352–1 to 2)

Prerequisite Failure mode ($\rightarrow \triangleq 169$) = Defined value

Description Enter current output value in alarm condition.

User entry 3.59 to 22.5 mA

Factory setting 22.5 mA

Turn down

Prerequisite Current span (→ 🗎 167) ≠ Fixed current

Description Switch the current turn down functionality on or off.

Selection ■ Off

On

Factory setting Off

Additional information Using the turn down functionality it is possible to map a section of the measuring range to

the total range of the output current (4-20mA). The section is defined by the $4\,\text{mA}$ value

(\rightarrow $\stackrel{\triangle}{=}$ 170) and 20 mA value (\rightarrow $\stackrel{\triangle}{=}$ 170) parameters.

Without the turn down, the complete measuring range (0 to 100%) is mapped to the

current output (4 to 20mA).

4 mA value

Prerequisite Turn down ($\rightarrow = 170$) = On

Description Enter value of the process variable for 4 mA.

User entry Signed floating-point number

Factory setting 0.0 %

20 mA value

Navigation \blacksquare Expert \rightarrow Output \rightarrow Curr.output 1 to 2 \rightarrow 20 mA value (0372–1 to 2)

Prerequisite Turn down parameter ($\rightarrow \equiv 170$) = On

Description Enter value of the process variable for 20 mA.

User entry Signed floating-point number

Factory setting 0.0 %

Additional information If **20 mA value** is smaller than **4 mA value** (→ 🗎 **170**), the current output is inverted,

which means that an increase of the process variable results in a decrease of the output

current.

Measuring mode

Navigation \blacksquare Expert \rightarrow Output \rightarrow Curr.output 1 to 2 \rightarrow Measuring mode (0351–1 to 2)

Prerequisite Current span (→ 🗎 167) ≠ Fixed current

Description Select measuring mode of the current output.

Selection ■ Standard

Inverse

Factory setting Standard

Additional information Meaning of the options

Standard

If the level increases, the output current increases as well.

Inverse

If the level increases, the output current decreases.

Start-up mode

 \blacksquare Expert → Output → Curr.output 1 → Start-up mode (0368–1)

Prerequisite ■ Current span (→ 🖺 167) ≠ Fixed current

Only for current output 1

Description Select behavior of the current output during start-up.

Selection • Min. • Max.

Defined value

Factory setting Min.

Additional information Meaning of the options

Min.

The start-sup current corresponds to the lower edge of the range selected in the **Current span** parameter ($\rightarrow \implies 167$).

Max.

The start-up current corresponds to the upper edge of the range selected in the **Current span** parameter ($\rightarrow \implies 167$).

■ Defined value

The value of the start-up current is defined in the **Start-up current** parameter $(\rightarrow \implies 172)$.

Start-up current		Î
Navigation	 Expert → Output → Curr.output 1 → Start-up current (0369-1) Expert → Output → Curr.output 1 → Start-up current (0369-1) 	
Prerequisite	 Start-up mode (→ ☐ 171) = Defined value Only for current output 1 	
Description	Define value the current output assumes during start-up.	
User entry	3.59 to 22.5 mA	
Factory setting	3.6 mA	
Measured current 1		
Navigation		
Prerequisite	Only available for current output 1	
Description	Displays the measured value of the output current.	
Terminal voltage 1		
Navigation		

Dipslays terminal voltage at the current output.


Description

4.5.3 "Switch output" submenu

The **Switch output** submenu is used to configure the switch output of the device.

Structure of the submenu

Navigation $\blacksquare \blacksquare$ Expert \rightarrow Output \rightarrow Switch output

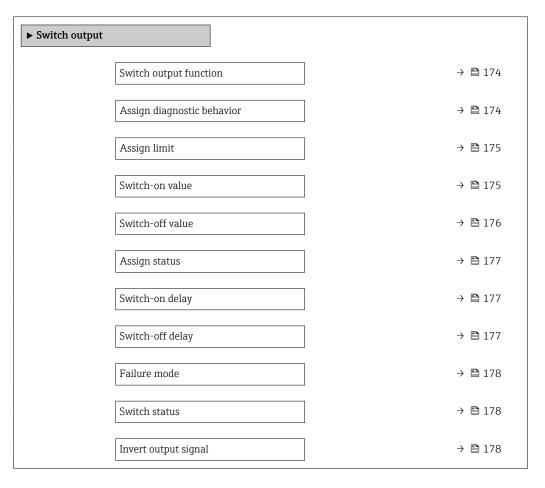

Description of parameters

Navigation $\blacksquare \blacksquare$ Expert \rightarrow Output \rightarrow Switch output

Switch output function

Navigation

 \blacksquare Expert → Output → Switch output → Switch out funct (0481)

Description

Select function for switch output.

Selection

- Off
- On
- Diagnostic behavior
- Limit
- Digital Output

Factory setting

Off

Additional information

Meaning of the options

Off

The output is always open (non-conductive).

On

The output is always closed (conductive).

Diagnostic behavior

The output is normally closed and is only opened if a diagnostic event is present. The **Assign diagnostic behavior** parameter ($\rightarrow \implies 174$) determines for which type of event the output is opened.

Limit

The output is normally closed and is only opened if a measured variable exceeds or falls below a defined limit. The limit values are defined by the following parameters:

- Assign limit (→ 🗎 175)
- Switch-on value (\rightarrow $\stackrel{\triangle}{=}$ 175)
- Switch-off value (\rightarrow $\stackrel{\triangle}{=}$ 176)
- Digital Output

The switching state of the output tracks the output value of a DI function block. The function block is selected in the **Assign status** parameter ($\Rightarrow \implies 177$).

i

The **Off** and **On** options can be used to simulate the switch output.

Assign diagnostic behavior

Navigation \blacksquare Expert \rightarrow Output \rightarrow Switch output \rightarrow Assign diag. beh (0482)

Prerequisite Switch output function (→ 🖺 174) = Diagnostic behavior

Description Select diagnostic behavior for switch output.

Selection • Alarm

- Alarm or warning
- Warning

174

Factory setting Alarm

Assign limit

Navigation \blacksquare Expert \rightarrow Output \rightarrow Switch output \rightarrow Assign limit (0483)

Prerequisite Switch output function ($\Rightarrow \triangleq 174$) = Limit

Description Select process variable for limit monitoring.

Selection ■ Off

■ Level linearized

Distance

Interface linearizedInterface distanceThickness upper layerTerminal voltage

Electronic temperature
 Measured capacitance
 Relative echo amplitude
 Relative interface amplitude
 Absolute echo amplitude

Absolute interface amplitude

Factory setting Off

Switch-on value

Navigation $\blacksquare \Box$ Expert \rightarrow Output \rightarrow Switch output \rightarrow Switch-on value (0466)

Prerequisite Switch output function (→ 🖺 174) = Limit

Description Enter measured value for the switch-on point.

User entry Signed floating-point number

Factory setting 0


Additional information The switching behavior depends on the relative position of the **Switch-on value** and

Switch-off value parameters:

Switch-on value > Switch-off value

- The output is closed if the measured value is larger than **Switch-on value**.


- The output is opened if the measured value is smaller than **Switch-off value**.

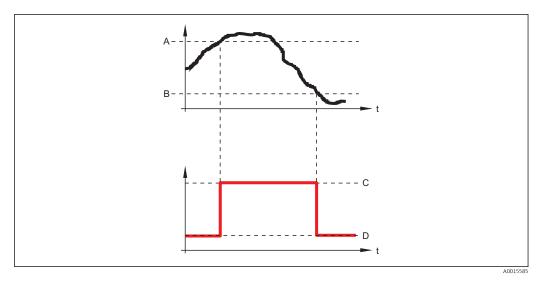

- A Switch-on value
- B Switch-off value
- C Output closed (conductive)
- D Output opened (non-conductive)

Switch-on value < Switch-off value

- The output is closed if the measured value is smaller than **Switch-on value**.
- The output is opened if the measured value is larger than **Switch-off value**.

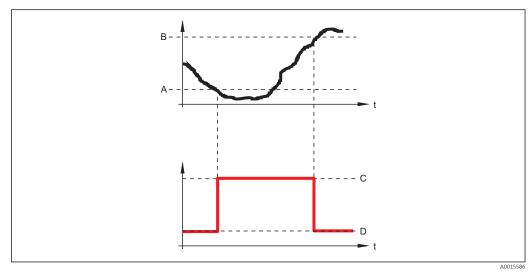

- A Switch-on value
- B Switch-off value
- C Output closed (conductive)
- D Output opened (non-conductive)

Switch-off value

Navigation \blacksquare Expert \rightarrow Output \rightarrow Switch output \rightarrow Switch-off value (0464)

Prerequisite Switch output function ($\Rightarrow \implies 174$) = Limit

Description Enter measured value for the switch-off point.

User entry Signed floating-point number

Factory setting 0

Additional information The switching behavior depends on the relative position of the **Switch-on value** and

Switch-off value parameters; description: see the **Switch-on value** parameter

 $(\rightarrow \triangleq 175)$.

Assign status

Navigation $\blacksquare \blacksquare$ Expert \rightarrow Output \rightarrow Switch output \rightarrow Assign status (0485)

Prerequisite Switch output function (→ 🖺 174) = Digital Output

Description Select device status for switch output.

Selection ■ Off

Digital output AD 1Digital output AD 2

Factory setting Off

Additional information The Digital output AD 1 and Digital output AD 2 options refer to the Advanced

Diagnostic Blocks $\rightarrow \stackrel{\triangle}{=} 226$. A switch signal generated in these blocks can be transmitted

via the switch output.

Switch-on delay

Navigation \blacksquare Expert \rightarrow Output \rightarrow Switch output \rightarrow Switch-on delay (0467)

Prerequisite Switch output function ($\Rightarrow \equiv 174$) = Limit

■ Assign limit (→ 🗎 175) ≠ Off

Description Define switch-on delay.

User entry 0.0 to 100.0 s

Factory setting 0.0 s

Switch-off delay

Navigation \blacksquare Expert \rightarrow Output \rightarrow Switch output \rightarrow Switch-off delay (0465)

Prerequisite Switch output function (\rightarrow \cong 174) = Limit

Description Define switch-off delay.

User entry 0.0 to 100.0 s

Factory setting 0.0 s

Failure mode

Description Define output behavior in alarm condition.

Selection • Actual status

OpenClosed

Factory setting Open

Switch status

Navigation \blacksquare Expert \rightarrow Output \rightarrow Switch output \rightarrow Switch status (0461)

Description Displays the current state of the switch output.

Invert output signal

Navigation \blacksquare Expert \rightarrow Output \rightarrow Switch output \rightarrow Invert outp.sig. (0470)

Description Specify whether the output signal is to be inverted.

Selection ■ No

Yes

Factory setting No

Additional information Meaning of the options

No

The behavior of the switch output is as described above.

Yes


The states **Open** and **Closed** are inverted as compared to the description above.

4.6 "Communication" submenu

The **Communication** submenu ($\rightarrow riangleq ri$

4.6.1 Structure of the submenu

Navigation $\blacksquare \square$ Expert \rightarrow Communication

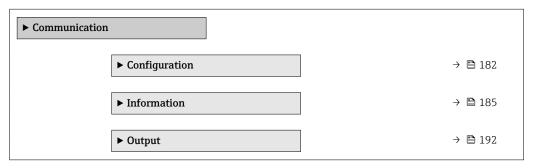


4.6.2 "Diagnostic configuration" submenu

This submenu is used to allocate a status according to NAMUR recommendation NE107 to individual error messages. This applies to the following error messages:


- In safety distance
- Echo lost
- Advanced diagnostic occured (if an advanced diagnostics has been activated.)

Navigation $\blacksquare \square$ Expert \rightarrow Communication \rightarrow Diag. config.


Configuration via local display

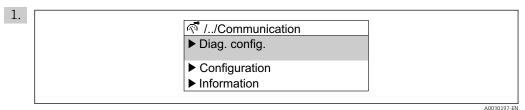

Go to the **Diagnostic configuration** submenu.

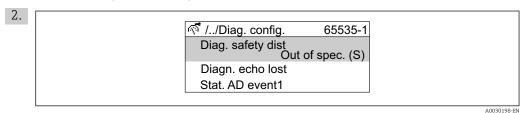

Select an error message.

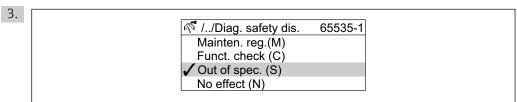


A0030199-EN

Select a status according to NE107.

Configuration via FieldCare

1. Go to the **Diagnostic configuration** submenu.

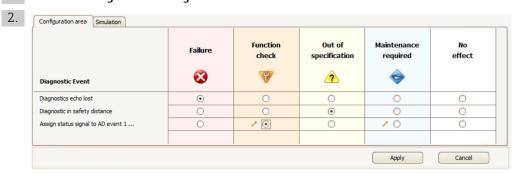

Mark the desired behavior of the individual error messages in the table and click "Apply" to confirm your selection.




Error messages can be simulated in the "Simulation" dialog in order to check the correct behavior.

4.6.3 "Configuration" submenu

Structure of the submenu

Navigation $\blacksquare \square$ Expert \rightarrow Communication \rightarrow Configuration

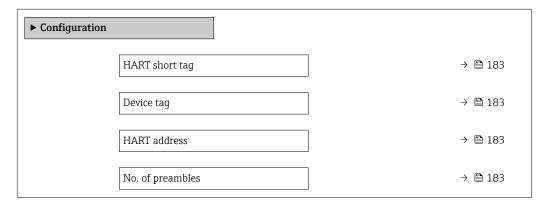

Description of parameters

Navigation $\blacksquare \blacksquare$ Expert \rightarrow Communication \rightarrow Configuration

HART short tag \blacksquare Expert → Communication → Configuration → HART short tag (0220) **Navigation** Description Define short tag for the measuring point. **SHORTTAG Factory setting** Device tag Navigation Description Enter tag for measuring point. **Factory setting** FMP5x **HART** address Navigation \blacksquare Expert → Communication → Configuration → HART address (0219) Define HART address of the device. Description 0 to 63 User entry **Factory setting** Additional information • Measured value transmission via the current value is only possible for address "0". For any other address the current is fixed at 4.0 mA (multidrop mode).

No. of preambles		
Navigation		
Description	Define number of preambles within the HART telegram.	
User entry	2 to 20	

For a system according to HART 5.0 possible addresses are 0 to 15.
For a system according to HART 6.0 possible addresses are 0 to 63.


Factory setting

5

4.6.4 "Information" submenu

Structure of the submenu

Navigation \blacksquare Expert \rightarrow Communication \rightarrow Information

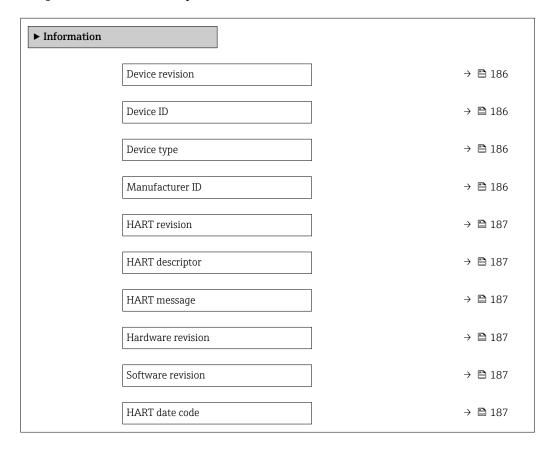

Description of parameters

Navigation $\blacksquare \square$ Expert \rightarrow Communication \rightarrow Information

Device revision	
Navigation	
Description	Displays the device revision registered for this device at the HART Communication Foundation.
Additional information	The device revision is used to allocate the correct Device Description file (DD) to the device.
Device ID	
Navigation	
Description	Displays Device ID.
Additional information	In addition to the Device type and Manufacturer ID, the Device ID is part of the unique device identification (Unique ID) which characterizes each HART device unambiguously.
Device type	
Navigation	
Description	Displays the device type with which the device is registered with the HART Communication Foundation.
Additional information	The device type is needed to allocate the correct Device Description file (DD) to the device.
Manufacturer ID	
Navigation	
Description	Displays the manufactured ID with which the device is registered with the HART Communication Foundation.

HART revision		
Navigation		
Description	Indicates HART revision of the device.	
HART descriptor		A
Navigation		
Description	Enter descriptor for the measuring point.	
Factory setting	FMP5x	
HADT massage		
HART message		
Navigation		
Description	Define HART message which is sent via the HART protocol if requested by the master	:
Factory setting	FMP5x	
Hardware revision		
Navigation		
Description	Indicates hardware revision of the device.	
Software revision		
Navigation		
Description	Indicates software revision of the device.	
HART date code		
Navigation		
Description	Enter date of the last configuration change.	

Additional information Format: YYYY-MM-DD

4.6.5 "Burst configuration 1 to 3" submenu

Structure of the submenu

Navigation \blacksquare Expert \rightarrow Communication \rightarrow Burst config. 1 to 3

► Burst configuration 1 to 3			
Burst mode 1 to 3	→ 🖺 189		
Burst command 1 to 3	→ 🖺 189		
Burst variable 07	→ 🖺 190		
Burst trigger mode	→ 🖺 191		
Burst trigger level	→ 🗎 191		
Min. update period	→ 🖺 191		
Max. update period	→ 🖺 191		

Description of parameters

Navigation \blacksquare Expert \rightarrow Communication \rightarrow Burst config. 1 to 3

Burst mode 1 to 3	
Navigation	
Description	Switch HART burst mode for burst message on.
Selection	OffOn
Factory setting	Off

Burst command 1 to 3	6

Description Select the HART command that is sent to the HART master.

Selection

- Command 1
- Command 2
- Command 3
- Command 9
- Command 33
- Command 48

Factory setting

Command 2

Burst variable 0...7

Navigation

 \blacksquare Expert → Communication → Burst config. 1 to 3 → Burst variable 0 (2033)

Description

For HART command 9 and 33, assign a HART device variable or process variable to burst variable.

Selection

- Level linearized
- Distance
- Unfiltered distance
- Interface
- Interface distance *
- Unfiltered interface distance *
- Thickness upper layer ⁷
- Terminal voltage
- Electronic temperature
- Measured capacitance *
- Absolute echo amplitude
- Relative echo amplitude
- Absolute interface amplitude *
- Relative interface amplitude
- Absolute EOP amplitude
- Noise of signal
- EOP shift
- Calculated DC value *
- Analog output adv. diagnostics 1
- Analog output adv. diagnostics 2
- Not used
- Percent of range
- Measured current
- Primary variable (PV)
- Secondary variable (SV)
- Tertiary variable (TV)
- Quaternary variable (QV)

Factory setting

Not used

^{*} Visibility depends on order options or device settings

Burst trigger mode

Navigation Supert \rightarrow Communication \rightarrow Burst config. 1 to 3 \rightarrow Trigger mode (2044–1 to 3)

Description Select the event that triggers the burst message.

Selection • Continuous

WindowRisingFallingOn change

Factory setting Continuous

Burst trigger level

Description Enter the burst trigger value that determines together with the option selected in 'Burst

trigger mode' parameter the time of burst message.

User entry Positive floating-point number

Factory setting 2.0E-38

Min. update period

Navigation \blacksquare Expert \rightarrow Communication \rightarrow Burst config. 1 to 3 \rightarrow Min. upd. per. (2042–1 to 3)

Description Enter the minimum time span between two burst responses of one burst message.

User entry Positive integer

Factory setting 1000 ms

Max. update period

Navigation \blacksquare Expert \rightarrow Communication \rightarrow Burst config. 1 to 3 \rightarrow Max. upd. per. (2041–1 to 3)


Description Enter the maximum time span between two burst responses of one burst message.

User entry Positive integer

Factory setting 2 000 ms

4.6.6 "Output" submenu

Structure of the submenu

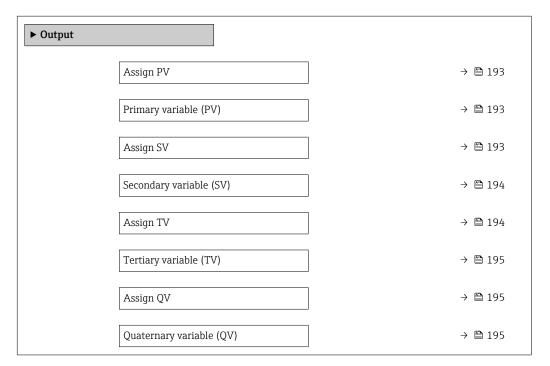

Description of parameters

Navigation $\blacksquare \square$ Expert \rightarrow Communication \rightarrow Output

Assign PV **Navigation** \blacksquare ■ Expert \rightarrow Communication \rightarrow Output \rightarrow Assign PV (0234) Select measuring variable for primary HART variable (PV). Description Selection Level linearized Distance ■ Interface linearized ■ Interface distance ■ Thickness upper layer ■ Electronic temperature Measured capacitance Relative echo amplitude ■ Relative interface amplitude Analog output adv. diagnostics 1 ■ Analog output adv. diagnostics 2 • For level measurements: Level linearized **Factory setting** • For interface measurements: Interface linearized Primary variable (PV) Navigation \blacksquare Expert → Communication → Output → Primary var (PV) (0201) Description Displays primary HART variable (PV). Assign SV Navigation Description Select measuring variable for secondary HART variable (SV). Selection None Level linearized Distance Unfiltered distance Interface linearized ■ Interface distance Unfiltered interface distance ■ Thickness upper layer ■ Terminal voltage ■ Electronic temperature

- Measured capacitance
- Absolute echo amplitude
- Relative echo amplitude
- Absolute interface amplitude
- Relative interface amplitude
- Absolute EOP amplitude
- Noise of signal
- EOP shift
- Calculated DC value
- Sensor debug
- Analog output adv. diagnostics 1
- Analog output adv. diagnostics 2

Factory setting

• For level measurements: **Distance**

• For interface measurements: Level linearized

Secondary variable (SV)

Navigation $\blacksquare \square$ Expert \rightarrow Communication \rightarrow Output \rightarrow Second.var(SV) (0226)

Description Displays secondary HART variable (SV).

Assign TV

Navigation

Description

Select measuring variable for third HART variable (TV).

Selection

- None
- Level linearized
- Distance
- Unfiltered distance
- Interface linearized
- Interface distance
- Unfiltered interface distance
- Thickness upper layer
- Terminal voltage
- Electronic temperature
- Measured capacitance
- Absolute echo amplitude
- Relative echo amplitude
- Absolute interface amplitude
- Relative interface amplitude
- Absolute EOP amplitude
- Noise of signal
- EOP shift
- Calculated DC value
- Sensor debug
- Analog output adv. diagnostics 1
- Analog output adv. diagnostics 2

194

Factory setting

• For level measurements: Absolute echo amplitude

• For interface measurements: **Thickness upper layer**

Tertiary variable (TV)

Navigation $\blacksquare \blacksquare$ Expert \rightarrow Communication \rightarrow Output \rightarrow Tertiary var(TV) (0228)

Description Displays third HART variable (TV).

Assign QV

Navigation \blacksquare Expert \rightarrow Communication \rightarrow Output \rightarrow Assign QV (0237)

Description Select measuring variable for fourth HART variable (QV).

Selection • None

■ Level linearized

- Distance
- Unfiltered distance
- Interface linearized
- Interface distance
- Unfiltered interface distance
- Thickness upper layer
- Terminal voltage
- Electronic temperature
- Measured capacitance
- Absolute echo amplitude
- Relative echo amplitude
- Absolute interface amplitude
- lacktriangle Relative interface amplitude
- Absolute EOP amplitude
- Noise of signal
- EOP shift
- Calculated DC value
- Sensor debug
- Analog output adv. diagnostics 1
- Analog output adv. diagnostics 2

Factory setting

- For level measurements: **Relative echo amplitude**
- For interface measurements: **Absolute interface amplitude**

Quaternary variable (QV)


Navigation $\blacksquare \square$ Expert \rightarrow Communication \rightarrow Output \rightarrow Quaterna.var(QV) (0203)

Description Displays fourth HART variable (QV).

4.7 "Diagnostics" submenu


4.7.1 Structure of the submenu on the local display

Navigation $\blacksquare \blacksquare$ Expert \rightarrow Diagnostics

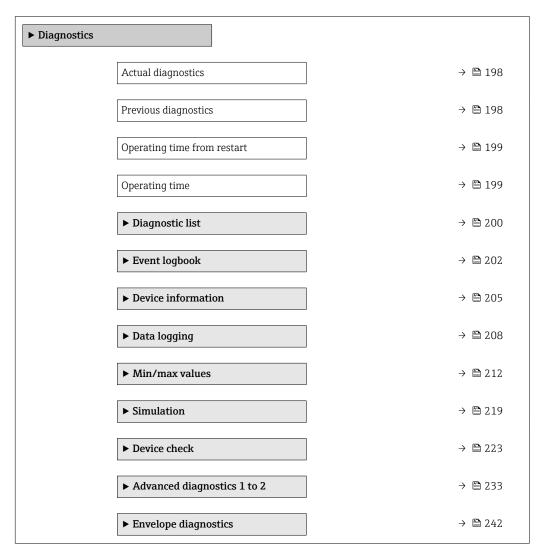

4.7.2 Structure of the submenu in an operating tool

Navigation $\blacksquare \blacksquare$ Expert \rightarrow Diagnostics

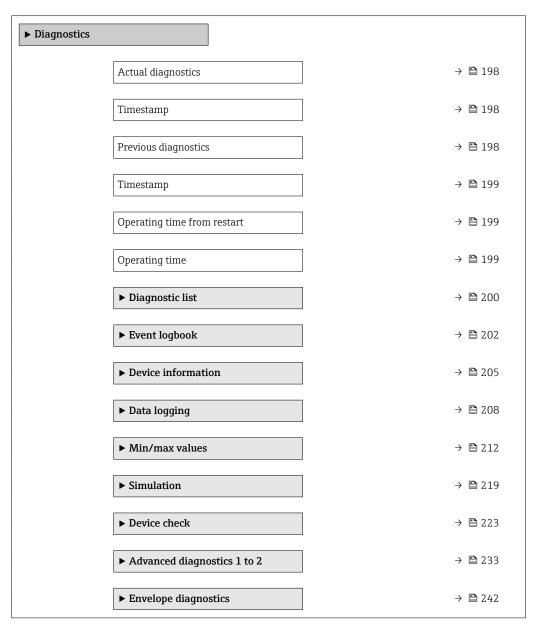

4.7.3 Description of parameters

Actual diagnostics

Navigation \blacksquare Expert \rightarrow Diagnostics \rightarrow Actual diagnos. (0691)

Description Displays current diagnostic message.

Additional information

The display consists of:

- Symbol for event behavior
- Code for diagnostic behavior
- Operating time of occurrence
- Event text
- If several messages are active at the same time, the messages with the highest priority is displayed.
- Information on what is causing the message, and remedy measures, can be viewed via the (i) symbol on the display.

Timestamp

Navigation \square Expert \rightarrow Diagnostics \rightarrow Timestamp (0667)

Description Displays timestamp for the **Actual diagnostics** parameter ($\rightarrow \triangleq 198$).

User interface Days (d), hours (h), minutes (m), seconds (s)

Previous diagnostics

Navigation \blacksquare Expert \rightarrow Diagnostics \rightarrow Prev.diagnostics (0690)

Description Displays the last diagnostic message which has been active before the current message.

Additional information

The display consists of:

- Symbol for event behavior
- Code for diagnostic behavior
- Operating time of occurrence
- Event text
- The condition displayed may still apply. Information on what is causing the message, and remedy measures, can be viewed via the (i) symbol on the display.

Timestamp

Navigation \square Expert \rightarrow Diagnostics \rightarrow Timestamp (0672)

Description Displays timestamp for the **Previous diagnostics** parameter ($\Rightarrow \implies 198$).

User interface Days (d), hours (h), minutes (m), seconds (s)

Operating time from restart

Navigation \blacksquare Expert \rightarrow Diagnostics \rightarrow Time fr. restart (0653)

Description Displays the time the device has been in operation since the last device restart.

User interface Days (d), hours (h), minutes (m), seconds (s)

Operating time

Navigation \blacksquare Expert \rightarrow Diagnostics \rightarrow Operating time (0652)

Description Indicates how long the device has been in operation.

User interface Days (d), hours (h), minutes (m), seconds (s)

Additional information *Maximum time*

9999 d (≈ 27 years)

4.7.4 "Diagnostic list" submenu


Structure of the submenu on the local display

Navigation $\blacksquare \blacksquare$ Expert \rightarrow Diagnostics \rightarrow Diagnostic list



Structure of the submenu in an operating tool

Navigation $\blacksquare \blacksquare$ Expert \rightarrow Diagnostics \rightarrow Diagnostic list

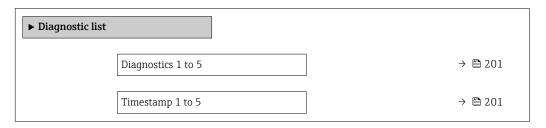

Description of parameters

Navigation \blacksquare Expert \rightarrow Diagnostics \rightarrow Diagnostic list

Diagnostics 1 to 5

Description Display the current diagnostics messages with the highest to fifth-highest priority.

Additional information The display consists of:

Symbol for event behaviorCode for diagnostic behavior

Operating time of occurrence

• Event text

Timestamp 1 to 5

Description Displays timestamp for the **Diagnostics 1 to 5** parameter ($\rightarrow \triangleq 201$).

User interface Days (d), hours (h), minutes (m), seconds (s)

4.7.5 "Event logbook" submenu

Structure of the submenu on the local display

Structure of the submenu in an operating tool

Navigation \square Expert \rightarrow Diagnostics \rightarrow Event logbook \triangleright Event logbook

Description of parameters

Navigation Expert \rightarrow Diagnostics \rightarrow Event logbook

Filter options Navigation Expert \rightarrow Diagnostics \rightarrow Event logbook \rightarrow Filter options (0705) Description Select category (status signal) whose event messages are displayed in the events list. Selection All ■ Failure (F) ■ Function check (C) Out of specification (S) Maintenance required (M) ■ Information (I)

Factory setting

All

Additional information



- This parameter is only used for operation via the local display.
- The status signals are categorized according to NAMUR NE 107.

"Event list" submenu

i

The **Event list** submenu ($\rightarrow \stackrel{\triangle}{=} 204$) is only available when operating via the local display.

The **Event list** submenu doesn't contain any parameters but only the list of events of the category selected in the **Filter options** parameter. A maximum of 100 event messages is displayed in chronological order.

The following status symbols indicate, whether an event has appeared or disappeared at the time stated:


- ①: Event appeared
- 🕒: Event disappeared

Remedy measures concerning the cause of the message can be called up via the ① symbol on the display.

4.7.6 "Device information" submenu

Structure of the submenu

Navigation \blacksquare Expert \rightarrow Diagnostics \rightarrow Device info

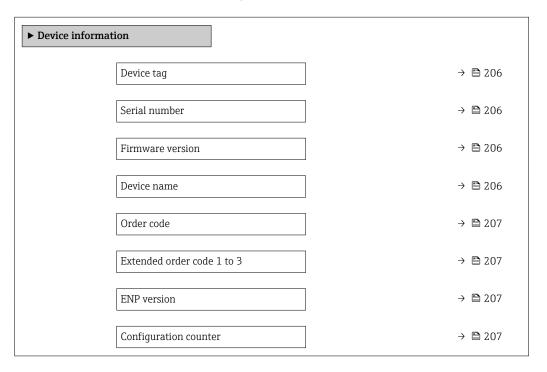

Description of parameters

Navigation $\blacksquare \blacksquare$ Expert \rightarrow Diagnostics \rightarrow Device info

Device tag

Navigation \blacksquare Expert \rightarrow Diagnostics \rightarrow Device info \rightarrow Device tag (0011)

Description Enter tag for measuring point.

Factory setting FMP5x

Serial number

Navigation \blacksquare Expert \rightarrow Diagnostics \rightarrow Device info \rightarrow Serial number (0009)

Description Displays serial number of the device.

Additional information

- Uses of the serial number
 - To identify the device quickly, e.g. when contacting Endress+Hauser.
 - To obtain specific information on the device using the Device Viewer: www.endress.com/deviceviewer
- The serial number is also indicated on the nameplate.

Firmware version

Navigation \blacksquare Expert \rightarrow Diagnostics \rightarrow Device info \rightarrow Firmware version (0010)

Description Indicates the installed Firmware version.

User interface xx.yy.zz

Additional information For firmware versions differing only in the last two digits ("zz") there is no difference concerning functionality or operation.

Device name

Description Displays device name.

Order code &

Navigation \blacksquare Expert \rightarrow Diagnostics \rightarrow Device info \rightarrow Order code (0008)

Description Displays order code of the device.

Additional information The order code is generated from the extended roder code, which defines all device

features of the product structure. In contrast, the device features can not be read directly

from the order code.

Extended order code 1 to 3

Navigation \blacksquare Expert \rightarrow Diagnostics \rightarrow Device info \rightarrow Ext. order cd. 1 to 3 (0023–1 to 3)

Description Displays the three parts of the extended order code.

Additional information The extended order code indicates the version of all the features of the product structure

and thus uniquely identifies the device.

ENP version

Navigation \blacksquare Expert \rightarrow Diagnostics \rightarrow Device info \rightarrow ENP version (0012)

Description Displays version of the electronic nameplate (ENP).

User interface xx.yy.zz

Configuration counter


Navigation \blacksquare Expert \rightarrow Diagnostics \rightarrow Device info \rightarrow Config. counter (0233)

Description Displays configuration counter.

4.7.7 "Data logging" submenu


Structure of the submenu on the local display

Navigation $\blacksquare \Box$ Expert \rightarrow Diagnostics \rightarrow Data logging

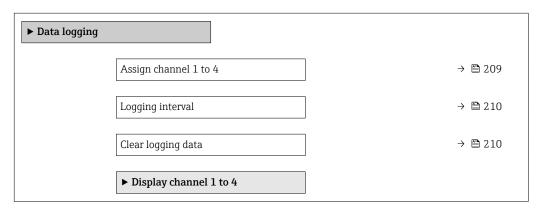

Structure of the submenu in an operating tool

Navigation $\blacksquare \blacksquare$ Expert \rightarrow Diagnostics \rightarrow Data logging

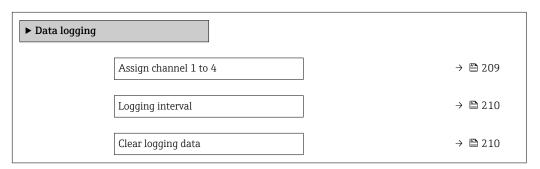

Description of parameters

Navigation $\blacksquare \blacksquare$ Expert \rightarrow Diagnostics \rightarrow Data logging

Assign channel 1 to 4

Navigation

Description

Allocate a process variable to the respective data logging channel.

Selection

- Off
- Level linearized
- Distance
- Unfiltered distance
- Interface linearized
- Interface distance
- Unfiltered interface distance
- Thickness upper layer
- Current output 1
- Measured current
- Current output 2
- Terminal voltage
- Electronic temperature
- Measured capacitance
- Absolute echo amplitude
- Relative echo amplitude
- Absolute interface amplitude
- Relative interface amplitude
- Absolute EOP amplitude
- EOP shift
- Noise of signal
- Calculated DC value
- Analog output adv. diagnostics 1
- Analog output adv. diagnostics 2

Factory setting

Off

Additional information

A total of 1000 measured values can be logged. This means:

- 1000 data points if 1 logging channel is used
- 500 data points if 2 logging channels are used
- 333 data points if 3 logging channels are used
- 250 data points if 4 logging channels are used

If the maximum number of data points is reached, the oldest data points in the data log are cyclically overwritten in such a way that the last 1000, 500, 333 or 250 measured values are always in the log (ring memory principle).

The logged data are deleted if a new option is selected in this parameter.

Logging interval

Description Define logging interval t_{loq} .

User entry 1.0 to 3 600.0 s

Factory setting 30.0 s

Additional information

This parameter defines the interval between the individual data points in the data log, and thus the maximum loggable process time T_{log} :

- If 1 logging channel is used: $T_{log} = 1000 \cdot t_{log}$
- If 2 logging channels are used: $T_{log} = 500 \cdot t_{log}$
- If 3 logging channels are used: $T_{log} = 333 \cdot t_{log}$
- If 4 logging channels are used: $T_{log} = 250 \cdot t_{log}$

Once this time elapses, the oldest data points in the data log are cyclically overwritten such that a time of T $_{log}$ always remains in the memory (ring memory principle).

🎦 The logged data are deleted if this parameter is changed.

Example

When using 1 logging channel

- $T_{log} = 1000 \cdot 1 \text{ s} = 1000 \text{ s} \approx 16.5 \text{ min}$
- $T_{log}^{109} = 1000 \cdot 10 \text{ s} = 1000 \text{ s} \approx 2.75 \text{ h}$
- $T_{log} = 1000 \cdot 80 \text{ s} = 80000 \text{ s} \approx 22 \text{ h}$
- $T_{log} = 1000 \cdot 3600 \text{ s} = 3600000 \text{ s} \approx 41 \text{ d}$

Clear logging data

Navigation $\blacksquare \blacksquare$ Expert \rightarrow Diagnostics \rightarrow Data logging \rightarrow Clear logging (0855)

Description Initiate a deletion of the complete logging memory.

Selection • Cancel


Clear data

Factory setting Cancel

"Display channel 1 to 4" submenu

The **Display channel 1 to 4** submenu is only available when operating via the local display. When operating via FieldCare, the diagram can be displayed in the "Event List / HistoROM" function.

The Display channel 1 to 4 submenu displays the measured value trend of the respective logging channel.

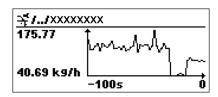

- x-axis: displays 125 to 500 measured values of a process variable (the number of values depending on the number of selected channels).
- y-axis: displays the approximate measured value span and constantly adapts this to the ongoing measurement.
- To quit the diagram and to return to the operating menu, press \pm and \Box simultaneously.

4.7.8 "Min/max values" submenu

Structure of the submenu

Navigation $\blacksquare \Box$ Expert \rightarrow Diagnostics \rightarrow Min/max val.

► Min/max values	
Max. level value	→ 🖺 213
Time max. level	→ 🖺 213
Min. level value	→ 🖺 213
Time min. level	→ 🖺 213
Max. draining speed	→ 🖺 213
Max. filling speed	→ 🖺 214
Reset min./max.	→ 🖺 214
Max. interface value	→ 🗎 214
Time max. interface	→ 🗎 214
Min. interface value	→ 🗎 215
Time min. interface	→ 🗎 215
I max. drain speed	→ 🖺 215
I max. fill speed	→ 🖺 215
Max. electronics temperature	→ 🖺 216
Time max. electronics temperature	→ 🖺 216
Min. electronics temperature	→ 🖺 216
Time min. electronics temperature	→ 🖺 216
Reset min./max. temp.	→ 🗎 216

Description of parameters

Navigation $\blacksquare \blacksquare$ Expert \rightarrow Diagnostics \rightarrow Min/max val.

Max. level value		
Navigation	Expert \rightarrow Diagnostics \rightarrow Min/max val. \rightarrow Max. level value (2357)	
	Expert → Diagnostics → Min/max val. → Max. level value (2357)	
Description	Displays maximum level measured in the past.	
Time max. level		
Navigation	Expert → Diagnostics → Min/max val. → Time max. level (2385)	
	Expert → Diagnostics → Min/max val. → Time max. level (2385)	
Description	Displays operating time at which the maximum level has been obtained.	
Min. level value		
Navigation	\blacksquare Expert → Diagnostics → Min/max val. → Min. level value (2358)	
	Expert → Diagnostics → Min/max val. → Min. level value (2358)	
Description	Displays minimum level measured in the past.	
Time min. level		
Navigation	Expert \rightarrow Diagnostics \rightarrow Min/max val. \rightarrow Time min. level (2386)	
	Expert → Diagnostics → Min/max val. → Time min. level (2386)	
Description	Displays operating time at which the minimum level has been obtained.	
Max. draining speed		
Navigation	Expert → Diagnostics → Min/max val. → Max.drain.speed (2320)	
.	Expert \rightarrow Diagnostics \rightarrow Min/max val. \rightarrow Max.drain.speed (2320)	
Description	Displays maximum draining speed measured in the past.	

Max. filling speed		
Navigation	Expert \rightarrow Diagnostics \rightarrow Min/max val. \rightarrow Max. fill. speed (2360)	
Description	Displays maximum filling speed measured in the past.	
Reset min./max.		Î
Navigation	Expert → Diagnostics → Min/max val. → Reset min/max (2324)	
Description	Select which min/max values are to be reset.	
Selection	 None Drain/fill speed Level I drain/fill speed Interface Reset all 	
Factory setting	None	
Max. interface value		
Navigation	\blacksquare Expert → Diagnostics → Min/max val. → Max.interf.value (2361)	
	Expert → Diagnostics → Min/max val. → Max.interf.value (2361)	
Prerequisite	Operating mode (→ 🖺 47) = Interface or Interface with capacitance	
Description	Displays minimum interface height measured in the past.	
Time max. interface		
Navigation	 Expert → Diagnostics → Min/max val. → Time max. interf (2388) Expert → Diagnostics → Min/max val. → Time max. interf (2388) 	
Prerequisite	Operating mode (→ 🖺 47) = Interface or Interface with capacitance	

Min. interface value		
Willi. Iliterrace value		
Navigation	\blacksquare Expert → Diagnostics → Min/max val. → Min.interf.value (2362)	
	Expert → Diagnostics → Min/max val. → Min.interf.value (2362)	
Prerequisite	Operating mode (→ 🖺 47) = Interface or Interface with capacitance	
Description	Displays minimum interface height measured in the past.	
Time min. interface		
Navigation	Expert \rightarrow Diagnostics \rightarrow Min/max val. \rightarrow Time min. interf (2387)	
	Expert → Diagnostics → Min/max val. → Time min. interf (2387)	
Prerequisite	Operating mode (→ 🗎 47) = Interface or Interface with capacitance	
Description	Displays operating time at whicht the minimum interface height has been obtained	
I max. drain speed		
Navigation	Expert → Diagnostics → Min/max val. → I max. draining (2363)	
Navigation	 Expert → Diagnostics → Min/max val. → I max. draining (2363) Expert → Diagnostics → Min/max val. → I max. draining (2363) 	
Navigation Prerequisite		
_	Expert → Diagnostics → Min/max val. → I max. draining (2363)	
Prerequisite Description	Expert \rightarrow Diagnostics \rightarrow Min/max val. \rightarrow I max. draining (2363) Operating mode (\rightarrow \rightleftharpoons 47) = Interface or Interface with capacitance	
Prerequisite	Expert \rightarrow Diagnostics \rightarrow Min/max val. \rightarrow I max. draining (2363) Operating mode (\rightarrow \rightleftharpoons 47) = Interface or Interface with capacitance	
Prerequisite Description	Expert \rightarrow Diagnostics \rightarrow Min/max val. \rightarrow I max. draining (2363) Operating mode (\rightarrow \rightleftharpoons 47) = Interface or Interface with capacitance	
Prerequisite Description I max. fill speed	 Expert → Diagnostics → Min/max val. → I max. draining (2363) Operating mode (→ 🖺 47) = Interface or Interface with capacitance Displays maximum drainging speed of the lower medium measured in the past. 	
Prerequisite Description I max. fill speed	 Expert → Diagnostics → Min/max val. → I max. draining (2363) Operating mode (→ 🖹 47) = Interface or Interface with capacitance Displays maximum drainging speed of the lower medium measured in the past. Expert → Diagnostics → Min/max val. → I max.fill speed (2359) 	

Max. electronics temperature		
Navigation		Expert → Diagnostics → Min/max val. → Max.electr.temp. (1031)
-		Expert → Diagnostics → Min/max val. → Max.electr.temp. (1031)
Description	Disp	lays maximum electronics temperature measured in the past.
Time max. electronics ter	mperatu	ire
Navigation		Expert → Diagnostics → Min/max val. → Time max.el.temp (1204)
Š		Expert \rightarrow Diagnostics \rightarrow Min/max val. \rightarrow Time max.el.temp (1204)
Description	Displays operating time at which the maximum electronics temperature has been obtained.	
Min. electronics tempera	ture	
Navigation		Expert \rightarrow Diagnostics \rightarrow Min/max val. \rightarrow Min.electr.temp. (1040)
		Expert \rightarrow Diagnostics \rightarrow Min/max val. \rightarrow Min.electr.temp. (1040)
Description	Displays minimum electronics temperature measured in the past.	
Time min. electronics ten	nperatu	re
Navigation		Expert \rightarrow Diagnostics \rightarrow Min/max val. \rightarrow Time min.el.temp (1205)
,		Expert \rightarrow Diagnostics \rightarrow Min/max val. \rightarrow Time min.el.temp (1205)
Description	Displays operating time at which the minimum electronics temperature has been obtain	
Reset min./max. temp.		
No. toother		
Navigation		Expert → Diagnostics → Min/max val. → Res.min/max temp (1173) Expert → Diagnostics → Min/max val. → Res.min/max temp (1173)
Description		ct which min/max values are to be reset.
User interface	 None Electronic temperature Reset all 	

Factory setting

None

4.7.9 "Simulation" submenu


The **Simulation** submenu is used to simulate specific measuring values or other conditions. This helps to check the correct configuration of the device and connected control units.

Conditions which can be simulated

Condition to be simulated	Associated parameters
Specific value of a process variable	 Assign measurement variable (→ ■ 220) Value process variable (→ ■ 220)
Specific value of the output current	 Simulation current output (→
Specific state of the switch output	■ Switch output simulation (→ 🖺 221) ■ Switch status (→ 🖺 221)
Existence of an alarm	Simulation device alarm (→ 🖺 222)

Structure of the submenu

Navigation \blacksquare Expert \rightarrow Diagnostics \rightarrow Simulation

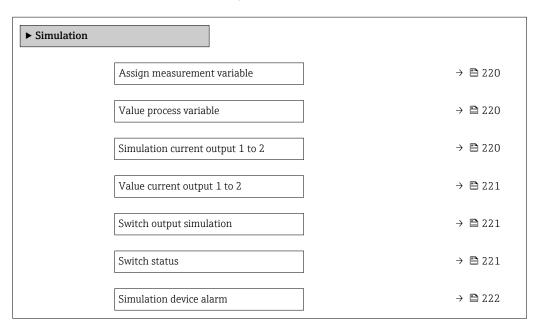

Description of parameters

Navigation $\blacksquare \blacksquare$ Expert \rightarrow Diagnostics \rightarrow Simulation

Assign measurement variable

Navigation \blacksquare Expert \rightarrow Diagnostics \rightarrow Simulation \rightarrow Assign meas.var. (2328)

Description Selct process variable to be simulated.

Selection ■ Off

- LevelInterface
- Level linearizedInterface linearizedThickness linearized

Factory setting

Off

Additional information

- The value of the variable to be simulated is defined in the **Value process variable** parameter ($\rightarrow \cong 220$).
- If **Assign measurement variable** ≠ **Off**, a simulation is active. This is indicated by a diagnotic message of the *Function check (C)* category.

Value process variable

Navigation \blacksquare Expert \rightarrow Diagnostics \rightarrow Simulation \rightarrow Value proc. var. (2329)

Prerequisite Assign measurement variable ($\Rightarrow \triangleq 220$) $\neq 0$ ff

Description Specify value of the process value being simulated.

User entry Signed floating-point number

Factory setting 0

Additional information

Downstream measured value processing and the signal output use this simulation value. In this way, users can verify whether the measuring device has been configured correctly.

Simulation current output 1 to 2

Navigation \blacksquare Expert \rightarrow Diagnostics \rightarrow Simulation \rightarrow Sim.curr.out. 1 to 2 (0354-1 to 2)

Description Switch the simulation of the current output on or off.

Selection ■ Off

■ On

220

Factory setting Off

Additional information An active simulation is indicated by a diagnostic message of the *Function check (C)*

category.

Value current output 1 to 2

Navigation \blacksquare Expert \rightarrow Diagnostics \rightarrow Simulation \rightarrow Value curr.out 1 to 2 (0355–1 to 2)

Prerequisite Simulation current output ($\Rightarrow \triangleq 220$) = On

Description Enter current value for the simulation

User entry 3.59 to 22.5 mA

Factory setting 3.59 mA

Additional information The current output assumes the value specified in this parameter. In this way, users can

verify the correct adjustment of the current output and the correct function of connected

control units.

Switch output simulation

Navigation $\blacksquare \blacksquare$ Expert \rightarrow Diagnostics \rightarrow Simulation \rightarrow Switch sim. (0462)

Description Switch the simulation of the switch output on or off.

Selection ■ Off

■ On

Factory setting Off

Switch status

Navigation \blacksquare Expert \rightarrow Diagnostics \rightarrow Simulation \rightarrow Switch status (0463)

Prerequisite Switch output simulation ($\Rightarrow \triangleq 221$) = On

Description Define the switch state to be simulated.

Selection ■ Open

Closed

Factory setting Open

Additional information


The switch status assumes the value defined in this parameter. This helps to check correct operation of connected control units. $\frac{1}{2}$

Simulation device alarm		
Navigation		
Description	Switch alarm simulation on or off.	
Selection	■ Off ■ On	
Factory setting	Off	
Additional information	When selecting the On option, the device generates an alarm. This helps to check the correct output behavior of the device in the case of an alarm.	
	An active simulation is indicated by the diagnostic message ©C484 Simulation failured .	:e

4.7.10 "Device check" submenu

Structure of the submenu

Navigation \blacksquare Expert \rightarrow Diagnostics \rightarrow Device check

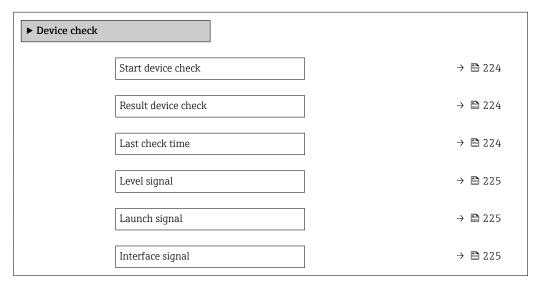

Description of parameters

Navigation $\blacksquare \blacksquare$ Expert \rightarrow Diagnostics \rightarrow Device check

Start device check Navigation \blacksquare Expert → Diagnostics → Device check → Start dev. check (1013) Description Start a device check. Selection No Yes **Factory setting** No Additional information In the case of a lost echo a device check can not be performed. Result device check Navigation \blacksquare Expert → Diagnostics → Device check → Result dev.check (1014) Description Displays the result of the device check. Additional information Meaning of the display options ■ Installation ok Measurement possible without restrictions. Accuracy reduced A measurement is possible. However, the measuring accuracy may be reduced due to the signal amplitudes. ■ Measurement capability reduced A measurement is currently possible. However, there is the risk of an echo loss. Check the mounting position of the device and the dielectric constant of the medium. Check not done

Last check time	
Navigation	
Description	Displays the operating time at which the last device check has been performed.

No device check has been performed.

Level signal

Navigation \blacksquare Expert \rightarrow Diagnostics \rightarrow Device check \rightarrow Level signal (1016)

Prerequisite Device check has been performed.

Description Displays result of the device check for the level signal.

User interface ■ Check not done

Check not OKCheck OK

Additional information For **Level signal = Check not OK**: Check the mounting position of the device and the

dielectric constant of the medium.

Launch signal

Navigation \blacksquare Expert \rightarrow Diagnostics \rightarrow Device check \rightarrow Launch signal (1012)

Prerequisite Device check has been performed.

Description Displays result of the display check for the launch signal.

User interface ■ Check not done

■ Check not OK

■ Check OK

Additional information For **Launch signal = Check not OK**: Check the mounting position of the device. In non-

metallic vessels use a metal plate or a metal flange.

Interface signal

Navigation $\blacksquare \Box$ Expert \rightarrow Diagnostics \rightarrow Device check \rightarrow Interface signal (1015)

Prerequisite ■ Operating mode (→ 🖺 47) = Interface or Interface with capacitance

• Device check has been performed.

Description Displays result of the device check for the interface signal.

User interface ■ Check not done

■ Check not OK

■ Check OK


4.7.11 "Advanced diagnostics 1 to 2" submenu

Mode of operation

The Advanced Diagnostics offers additional options to monitor the process. The device contains two Advanced Diagnostic Blocks which can be used separately or in combination.

A measuring variable can be assigned to the input of each Advanced Diagnostic Block. Based on a freely configurable time interval, the variable can be submitted to a statistical function (e.g. maximum, minimum, mean, slope). Finally, a limit detection can be parametrized and its result can be transmitted to a digital output.

The result can be displayed and evaluated by a DCS or PLC. If required, it can also be linked to the second Advanced Diagnostic block and thus it is possible to combine the two results by the logical operators AND or OR.

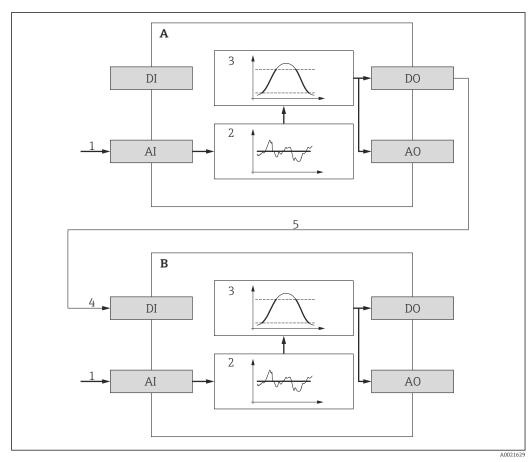

■ 54 Combined Advanced Diagnostic blocks

- A Advanced Diagnsotics 1
- B Advanced Diagnsotics 2
- AI Analog input of the respective block
- *DI Digital input of the respective block*
- AO Analog output of the respective block
- DO Digital output of the respective block
- 1 Analog process variable
- 2 Statistical calculation (maximum, minimum, mean, slope)
- 3 Limit check
- 4 Digital input of AD2
- 5 Digital output of AD1 is linked to digital input of AD2

Overview of the Advanced Diagnostic functionalities

Task	Associated parameters
Allocation of a process variable to the analog input of the block.	Assign diagnostic signal (→ 🖺 234)
Linking the digital input to the digital output of the other block.	■ Link AD to (→ 🖺 234) ■ Linking logic AD (→ 🖺 235)
Calculation of one of the following quantities for a freely configurable sampling interval: Maximum Minimum Mean Standard deviation Difference Max Min. Slope	 Sample time (→
Drag indicator for the calculated quantity	 Maximum value (→
Limit check	Check mode (→ 🖺 236) Upper limit (→ 🖺 238) Lower limit (→ 🖺 238) Hysteresis (→ 🖺 239)
Reaction in case of a limit violation	 Assign status signal to AD event (→ 240) Assign event behaviour (→ 240) Alarm delay (→ 240)


Example 1: Draining/filling speed

Only one Advanced Diagnostic Block is needed for this application. In the example this is **Advanced diagnostics 1** ($\rightarrow \triangleq 233$). However, **Advanced diagnostics 2** ($\rightarrow \triangleq 233$) could be used just as well.

The level change rate (i.e. draining or filling speed) allows the customer to instantly realize whether or not the level is changing, and at which rate. The rate at which the level is changing must be observed as powerful pumps can create significant over and underpressure in a tank. Pressure relieve valves can only operate properly up to a certain level change rate. This is in particular valid for almost emptied tanks. The level change rate is also an intermediate result for calculating transfer estimates, such as time to fill, time to empty, time to target, etc.

Basic idea

The Advanced Diagnostics is used to calculate the draining or filling speed from the measured level. The result can be transmitted via the current output or the HART communication interface.

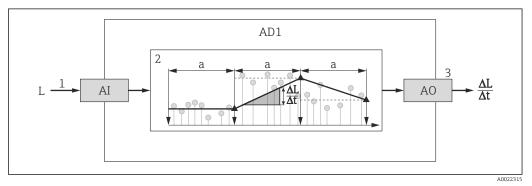

■ 55 Calculation of the draining or filling speed

- 1 Allocation of the (linearized) level to Advanced Diagnsotic Block AD1
- Calculation of the draining or filling speed $\Delta L/\Delta t$ within the sampling interval a.
- 3 $\Delta L/\Delta t$ can be transmitted via the current output or the HART communication interface.

Configuration of the calculation

The calculation of the rate of level change is configured as follows:

- 1. Select **Assign diagnostic signal 1 = Level linearized**.
- 2. Select **Link AD 1 to = None** (= factory setting)
- 3. Define **Sample time 1** in accordance with the expected draining or filling speed.
- 4. Select **Calculation type 1 = Slope**.
- 5. Select a suitable option in **Calculation unit 1**, e.g.: **"Level unit" / s**
- As the rate of level change is not to be checked for limit violation, the following parameters may retain their factory settings:
 - Check mode 1
- With this configuration, the **Maximum value 1** and **Minimum value 1** drag indicators display the maximum or minimum value the rate of lavel change has obtained. Positive values indicate filling (rising level), negative values indicate draining (falling level). If required, the drag indicators can be reset by the **Reset min./ max. 1** parameter.

Allocation of the calculated rate of level change to the current output

- 1. Navigate to the following submenu: Expert \rightarrow Output \rightarrow Curr.output 1.
- 2. Select Assign current output (→ 🖺 166) = Analog output adv. diagnostics 1.
- 3. Select Turn down ($\rightarrow = 170$) = On.
- 4. Enter maximum expected draining speed (negative value) in **4 mA value** $(\rightarrow \ \ \)$ **170**).
- 5. Enter maximum expected filling speed (positive value) in **20 mA value** ($\rightarrow \blacksquare$ **170**).

With this configuration, the rate of level change is transmitted via the current output. The relationship between the rate of level change and the output current is as follows:

$$\frac{\Delta L}{\Delta t} = \frac{5W_4 - W_{20}}{4} + \frac{W_{20} - W_4}{16 \text{ mA}}$$

......

Where:

ΔL/Δt : Rate of level change ¹²⁾

• W_4 : 4 mA value ($\rightarrow \triangle 170$)

■ W_{20} : 20 mA value (\rightarrow 🗎 170)

■ I: Output current

In the case of a constant level ($\Delta L/\Delta t = 0$) the current is:

$$I_0 = 4 \text{ mA} - \frac{W_4}{W_{20} - W_4} = 16 \text{ mA}$$

A0022242

Allocation of the calculated rate of level change to the HART output

- 1. Navigate to the following submenu: Expert \rightarrow Communication \rightarrow Output
- 2. Select Assign PV (→ 🗎 193) = Analog output adv. diagnostics 1.
- With this configuration, the **Primary variable (PV)** parameter ($\Rightarrow \triangleq 193$) displays the calculated filling or draining speed. Positive values indicate filling; negative values indicate draining.
- Instead of PV, it is also possible to allocate the rate of level change to SV, TV or QV.

¹²⁾ Negative values: draining speed; Positive values: filling speed

Example 2: Foam detection


In this example, both Advance Diagnostic Blocks are used.

Preconditions

- The process runs at a fixed level (in the example: 80 %)
- If foam occurs during the operation, the vessel should automatically be sprinkled with water from the top or an antifoam agent should be added to dissolve the foam.

Basic idea

The echo amplitude decreases in the case of foam formation. This can be used by the Advanced Diagnostics to detect the foam. The foam detection, however, should only be active as long as the level is between 75 % and 85 %.

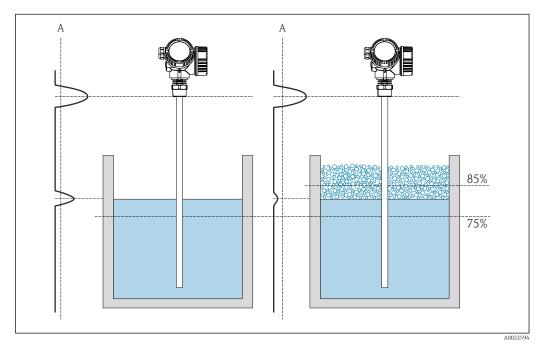

 $label{eq:balance}
label{eq:balance}
label{eq:balance}
label{eq:balance}
label{eq:balance}$ Decrease of the amplitude in case of foam formation

A Amplitude threshold for foam detection

Configuration of the level monitoring

In order to ensure that the level is within the correct range, configure the **Advanced** diagnostics 1 submenu ($\Rightarrow \triangleq 233$) submenu as follows:

- 1. Navigate to the **Advanced diagnostics 1** submenu ($\rightarrow \triangleq 233$)
- 2. Select **Assign diagnostic signal 1 = Level linearized**.
- 3. Select Check mode 1 = Out of range
- 4. Set **Upper limit 1** = 85 %.
- 5. Set **Lower limit 1** = 75 %.
- Check mode 1 = Out of range checks whether the level is outside a defined range. As long as this is the case, the block outputs "0" (INACTIVE). If the level gets into the defined range, the block outputs "1" (ACTIVE).

Configuration of the foam detection

For the foam detection, configure the **Advanced diagnostics 2** submenu ($\rightarrow \stackrel{\triangle}{=} 233$) as follows:

1. Select **Assign diagnostic signal 2 = Relative echo amplitude**.

2. Use the **Minimum value 2** parameter to observe the echo amplitude for the specified level (80 % in the example) for a while and determine a suitable lower limit for the amplitude (130 mV in the example).

- 3. Select **Calculation type 2 = Mean**.
- 4. Enter **Sample time 2** = "60 s".
- 5. Select **Check mode 2 = Lower limit**.
- 6. Enter the amplitude limit determined in step 2 into the **Lower limit 2** parameter (130 mV in the example).
- With these settings, the Advanced Diagnostic Block behaves as follows:
 - ullet If the amplitude is above 130 mV (i.e.: no foam), the block assumes the digital value "0" (INACTIVE).
 - If the amplitude is below 130 mV (i.e.: foam present), the block assumes the digital value "1" (ACTIVE).


Configuration of the block linking

The linking logic is configured in the **Advanced diagnostics 2** submenu ($\rightarrow \square$ 233):

- 1. Select Link AD 2 to = Digital output AD 1.
- 2. Select Linking logic AD 2 = AND.
- With this configuration the output of **Advanced Diagnostics 2** assumes the following value:
 - 0 (INACTIVE) if at least one of the two blocks is in the "O" (INACTIVE) status.
 - 1 (ACTIVE) if both blocks are in the "1" (ACTIVE) status. For the example this means:
 - A diagnostic signal is output, if the level is within the defined range and the signal amplitude is below the threshold (i.e. foam is present).
 - If, on the other hand, the level is out of the defined range or if the signal amplitude exceeds the threshold (i.e. no foam), no diagnostic signal is transmitted via the switch output.
- The digital output signal of **Advanced diagnostics 2** can be linked to the switch output of the device:

Expert → Output → Switch output → Assign status (0485) = Digital output AD 2

Overview: Foam detection with the advanced diagnostics

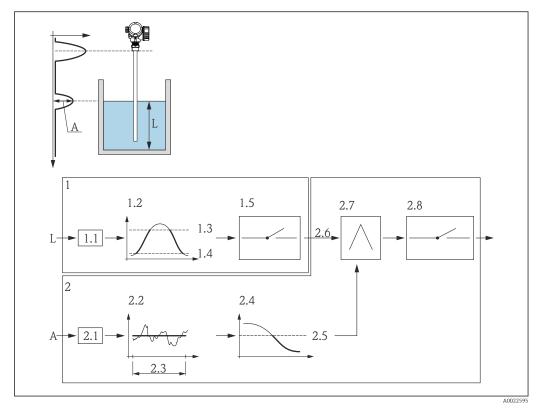

₽ 57 Configuration of the Advanced Diagnostics for foam detection

- L Level
- Α Amplitude
- Advanced diagnostics 1: Monitoring the level 1
- 1.1 "Assign diagnostic signal 1" = "Relative echo amplitude"
- 1.2 "Check mode 1" = "Out of range"
- 1.3 "Upper limit 1" = 85 % 1.4 "Lower limit 1" = 75 %
- 1.5 Digital output of Advanced Diagnostics 1
- Advanced Diagnostics 2: Monitoring the amplitude
- 2.1 "Assign diagnostic signal 2" = "Relative echo amplitude"
- 2.2 "Calculation type 2" = "Mean"
- 2.3 "Sample time 2" = 60 s
- 2.4 "Check mode 2" = "Lower limit"
- 2.5 "Lower limit 2" = 130 mV
- 2.6 "Link AD 2 to" = "Digital output AD 1"
- 2.7 "Linking logic AD 2" = "AND"
- 2.8 Digital output of Advanced Diagnostics 2

Structure of the submenu

Navigation $\blacksquare \square$ Expert \rightarrow Diagnostics \rightarrow Adv.diagn. 1 to 2

► Advanced diagr	nostics 1 to 2	
	Assign diagnostic signal 1 to 2	→ 🖺 234
	Link AD 1 to 2 to	→ 🖺 234
	Linking logic AD 1 to 2	→ 🖺 235
	Sample time 1 to 2	→ 🖺 235
	Calculation type 1 to 2	→ 🖺 235
	Check mode 1 to 2	→ 🖺 236
	Calculation unit 1 to 2	→ 🖺 237
	Upper limit 1 to 2	→ 🖺 238
	Lower limit 1 to 2	→ 🖺 238
	Hysteresis 1 to 2	→ 🖺 239
	Maximum value 1 to 2	→ 🖺 239
	Minimum value 1 to 2	→ 🖺 239
	Reset min./max. 1 to 2	→ 🖺 239
	Assign status signal to AD event 1 to 2	→ 🖺 240
	Assign event behaviour 1 to 2	→ 🖺 240
	Alarm delay 1 to 2	→ 🖺 240

Description of parameters

Navigation $\blacksquare \blacksquare$ Expert \rightarrow Diagnostics \rightarrow Adv.diagn. 1 to 2

Assign diagnostic signal 1 to 2

Navigation

 \blacksquare Expert → Diagnostics → Adv.diagn. 1 to 2 → Assign signal 1 to 2 (11179–1 to 2)

Description

Allocate a measuring variable to the Advanced Diagnostic Block.

Selection

- None
- Level linearized
- Distance
- Unfiltered distance
- Interface linearized
- Interface distance
- Unfiltered interface distance
- Thickness upper layer
- Electronic temperature
- Measured capacitance
- Relative echo amplitude
- Absolute echo amplitude
- Absolute interface amplitude
- Relative interface amplitude
- Absolute EOP amplitude
- EOP shift
- Noise of signal
- Measured current
- Terminal voltage
- Calculated DC value
- Sensor debug

Factory setting

None

Link AD 1 to 2 to

Navigation

 \blacksquare Expert → Diagnostics → Adv.diagn. 1 to 2 → Link AD 1 to 2 to (11180–1 to 2)

Description

Link the digital input (DI) of the Advanced Diagnostic Block to the digital output (DO) of the other Advanced Diagnostic Block.

Selection

- None
- Digital output AD 1
- Digital output AD 2

Factory setting

None

Linking logic AD 1 to 2

Prerequisite Link AD to (→ 🖺 234) = Digital output AD 1 oder Digital output AD 2

Description Select linking logic between the two Advanced Diagnostic Blocks.

Selection ■ AND

OR

Factory setting AND

Sample time 1 to 2

Prerequisite Assign diagnostic signal (→ 🖺 234) ≠ None

Description Specify sampling interval for the calculation.

User entry 1 to 3 600 s

Factory setting 10 s

Calculation type 1 to 2

Navigation Expert \rightarrow Diagnostics \rightarrow Adv.diagn. 1 to 2 \rightarrow Calc. type 1 to 2 (11174–1 to 2)

Prerequisite Assign diagnostic signal ($\Rightarrow \triangleq 234$) \neq None

Description Select quantity to be calculated from the measured variable.

Selection ■ Off


MaximumMinimumMean

Standard deviationDifference Max. - Min.

Slope

Factory setting Off

Additional information

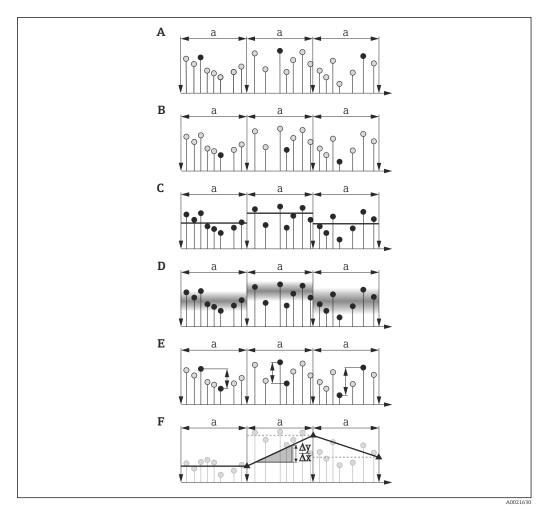

Options of the "Calculation type" parameter € 58

- Sample time ($\rightarrow \implies 235$) а
- "Calculation type " = "Maximum"
 "Calculation type " = "Minimum" Α
- В
- "Calculation type " = "Mean"
- "Calculation type" = "Standard deviation" D
- "Calculation type " = "Difference Max. Min." "Calculation type " = "Slope" Е

The calculation is performed based on the sampling interval defined in the **Sample** time parameter ($\rightarrow \implies 235$).

Check mode 1 to 2

Navigation Expert \rightarrow Diagnostics \rightarrow Adv.diagn. 1 to 2 \rightarrow Check mode 1 to 2 (11175–1 to 2)

Prerequisite Assign diagnostic signal (→ 🖺 234) ≠ None

Description Define check mode for limit monitoring.


Selection

- Off
- Upper limit
- Lower limit
- In range
- Out of range

Factory setting

Off

Additional information

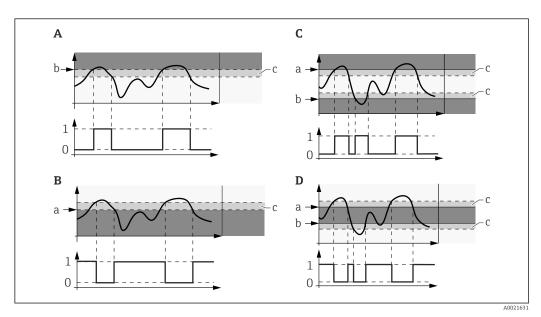

- 59 Limit monitoring in the Advanced Diagnostic Block
- O Status of digital output: 0 ("INACTIVE")
- 1 Status of digital output: 1 ("ACTIVE")
- a Upper limit (→ 🖺 238)
- b Lower limit ($\rightarrow \stackrel{\frown}{=} 238$)
- c Hysteresis (→ 🖺 239)
- A "Check mode" = "Lower limit"
- B "Check mode" = "Upper limit"
- C "Check mode" = "In range"
- D "Check mode" = "Out of range"

If a calculation has been selected in the **Calculation type** parameter ($\rightarrow \cong 235$), the check does not refer to the assigned measuring variable but to the quantity calculated from it.

Calculation unit 1 to 2

Navigation Expert \rightarrow Diagnostics \rightarrow Adv.diagn. 1 to 2 \rightarrow Calc. unit 1 to 2 (11188–1 to 2)

Prerequisite Assign diagnostic signal (→ 🖺 234) ≠ None

Description Select unit for the calculation.

Selection Dependent on the following parameters:

- Assign diagnostic signal (→ 🖺 234)
- Calculation type (→ 🖺 235)

Factory setting

Dependent on the following parameters:

■ Assign diagnostic signal (→ 🖺 234)

Upper limit 1 to 2

Navigation \blacksquare Expert \rightarrow Diagnostics \rightarrow Adv.diagn. 1 to 2 \rightarrow Upper limit 1 to 2 (11182–1 to 2)

Prerequisite Check mode parameter ($\rightarrow \triangleq 236$) has one of the following values:

Upper limitIn rangeOut of range

Description Specify upper limit for the limit monitoring.

User entryDependent on the following parameters:

■ Assign diagnostic signal (→ 🖺 234)

■ Calculation type (\rightarrow 🖺 235)

Factory setting Dependent on the following parameters:

• Assign diagnostic signal ($\rightarrow \triangleq 234$)

■ Calculation type (\rightarrow 🖺 235)

Lower limit 1 to 2

Navigation \blacksquare Expert \rightarrow Diagnostics \rightarrow Adv.diagn. 1 to 2 \rightarrow Lower limit 1 to 2 (11184–1 to 2)

Prerequisite Check mode parameter ($\rightarrow \cong 236$) has one of the following values:

Lower limitIn rangeOut of range

Description Define lower limit for the limit monitoring.

User entry Dependent on the following parameters:

■ Assign diagnostic signal (→ 🗎 234)

■ Calculation type (\rightarrow 🗎 235)

Factory setting Dependent on the following parameters:

■ Assign diagnostic signal (→ 🗎 234)

■ Calculation type (\rightarrow 🖺 235)

238

Hysteresis 1 to 2

Prerequisite Check mode parameter ($\rightarrow \triangleq$ 236) has one of the following values:

Upper limitLower limitIn rangeOut of range

Description Select hysteresis for the limit monitoring.

User entry Dependent on the following parameters:

■ Assign diagnostic signal (→ 🖺 234)

• Calculation type ($\rightarrow \triangleq 235$)

Factory setting Dependent on the following parameters:

■ Assign diagnostic signal (→ 🖺 234)

■ Calculation type (→ 🖺 235)

Maximum value 1 to 2

Prerequisite Assign diagnostic signal (→ 🖺 234) ≠ None

Description Indicates the maximum value the assigned measuring variable has obtained in the past

(drag indicator).

Minimum value 1 to 2

Prerequisite Assign diagnostic signal (→ 🖺 234) ≠ None

Description Indicates minimum value the assigned measuring variable has obtained in the past (drag

indicator).

Reset min./max. 1 to 2

Prerequisite Assign diagnostic signal ($\Rightarrow \triangleq 234$) \neq None

Description Reset drag indicators (**Maximum value** (→ 🖺 239) and/or **Minimum value** (→ 🖺 239)).

Selection ■ Off

Reset max.Reset min.Reset min./max.

Factory setting Off

Assign status signal to AD event 1 to 2

Navigation $\blacksquare \blacksquare$ Expert \rightarrow Diagnostics \rightarrow Adv.diagn. 1 to 2 \rightarrow Stat. AD event 1 to 2 (11176–1 to 2)

Prerequisite Assign diagnostic signal (→ 🗎 234) ≠ None

Description Assign a category according to NAMUR NE107 to the event of the Advanced Diagnostic

Block.

Selection ■ Failure (F)

Maintenance required (M)Function check (C)Out of specification (S)

Factory setting Maintenance required (M)

Assign event behaviour 1 to 2

Navigation \blacksquare Expert \rightarrow Diagnostics \rightarrow Adv.diagn. 1 to 2 \rightarrow Evt behaviour 1 to 2 (11177–1 to 2)

Prerequisite Assign diagnostic signal (→ 🖺 234) ≠ None

Description Assign an event behavior to the event of the Advanced Diagnostic Block.

Selection ■ Off

AlarmWarning

Logbook entry only

Factory setting Warning

Alarm delay 1 to 2

Navigation \blacksquare Expert \rightarrow Diagnostics \rightarrow Adv.diagn. 1 to 2 \rightarrow Alarm delay 1 to 2 (11171–1 to 2)

Prerequisite Assign diagnostic signal (→ 🖺 234) ≠ None

Description Define alarm delay for the Advanced Diagnostic Block.

240

User entry 0.0 to 3 600.0 s

Factory setting 10.0 s

"Envelope diagnostics" submenu 4.7.12



In devices which have been delivered with software version 01.00.zz or 01.01.zz, this submenu is only visible for the "Service" user role.


After the configuration of the measurement it is recommended to record the current envelope curve as a reference curve. The reference curve can be used later for diagnostic purposes. To record the reference curve use the Save reference curve parameter $(\rightarrow \triangleq 243).$

The reference curve can only be displayed in the envelope curve diagram of FieldCare after it has been loaded from the device into FieldCare. This is performed by the "Load Reference Curve" function in FieldCare:



Structure of the submenu

Navigation \blacksquare Expert \rightarrow Diagnostics \rightarrow Envelope diag.

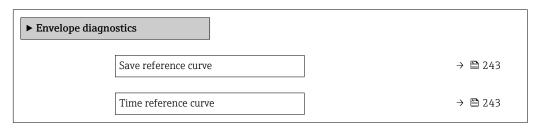

Description of parameters

Navigation $\blacksquare \Box$ Expert \Rightarrow Diagnostics \Rightarrow Envelope diag.

Save reference curve			
Navigation		Expert \rightarrow Diagnostics \rightarrow Envelope diag. \rightarrow Save ref. curve (1218) Expert \rightarrow Diagnostics \rightarrow Envelope diag. \rightarrow Save ref. curve (1218)	
Description	Save	current envelope curve as reference curve.	
Selection	■ No ■ Yes		
Factory setting	No		
Additional information	NoNoYes	action	

Time reference curve		
Navigation		Expert \rightarrow Diagnostics \rightarrow Envelope diag. \rightarrow Time ref. curve (1232) Expert \rightarrow Diagnostics \rightarrow Envelope diag. \rightarrow Time ref. curve (1232)
Description	Indic	ates at which time the existing reference curve has been recorded.

Index

0 9	Configuration (Submenu) 182, 18	
4 mA value (Parameter)	Configuration backup display (Submenu) 37,	
20 mA value (Parameter)	Configuration counter (Parameter) 2	
	Configuration management (Parameter)	
A	Confirm access code (Parameter)	44
Absolute echo amplitude (Parameter) 81	Confirm distance (Parameter)	.30
Absolute EOP amplitude (Parameter) 84	Confirm probe length (Parameter)	89
Absolute interface amplitude (Parameter) 83	Const. GPC factor (Parameter)	
Access status display (Parameter) 25, 35	Contrast display (Parameter)	34
Access status tooling (Parameter)	Control measurement (Parameter)	63
Acknowledge alarm (Parameter) 120	Current output 1 to 2 (Submenu) 165, 1	66
Activate SW option (Parameter) 42	Current span (Parameter)	67
Activate table (Parameter)	Customer value (Parameter)	78
Actual diagnostics (Parameter)	_	
Administration (Submenu) 41, 42	D	
Advanced diagnostics 1 to 2 (Submenu) 233, 234	Damping output (Parameter)	
Advanced process conditions (Parameter) 50	Data logging (Submenu) 208, 20	
Alarm delay 1 to 2 (Parameter) 240	DC value (Parameter)	36
Application parameter (Parameter) 51	DC value lower medium (Parameter)	
Assign channel 1 (Parameter) 209	Dead time (Parameter)	95
Assign current output (Parameter) 166	Decimal places 1 to 4 (Parameter)	31
Assign diagnostic behavior (Parameter) 174	Decimal places menu (Parameter)	34
Assign diagnostic signal 1 to 2 (Parameter) 234	Define access code (Parameter) 42,	44
Assign event behaviour 1 to 2 (Parameter) 240	Define access code (Wizard)	44
Assign limit (Parameter)	Delay time echo lost (Parameter)	19
Assign measurement variable (Parameter) 220	Device check (Submenu)	
Assign PV (Parameter)	Device ID (Parameter)	.86
Assign QV (Parameter)	Device information (Submenu) 205, 20	06
Assign status (Parameter)	Device name (Parameter) 20	06
Assign status signal to AD event 1 to 2 (Parameter) 240	Device reset (Parameter)	42
Assign SV (Parameter)	Device revision (Parameter)	86
Assign TV (Parameter)	Device tag (Parameter)	
5	Device type (Parameter)	
В	Diagnostic configuration (Submenu)	
Backlight (Parameter)	Diagnostic list (Submenu) 200, 20	01
Backup state (Parameter)	Diagnostics (Submenu) 196, 197, 19	.98
Bin type (Parameter)	Diagnostics 1 to 5 (Parameter) 20	
Blocking distance (Parameter)	Diameter (Parameter)	75
Broken probe detection (Parameter)	Direct access	
Build-up ratio (Parameter)	4 mA value	
Build-up thres. (Parameter)	Current output 1 to 2 (0367–1 to 2) 1	.70
Burst command 1 to 3 (Parameter) 189	20 mA value	
Burst configuration 1 to 3 (Submenu) 189	Current output 1 to 2 (0372–1 to 2) \dots 1	
Burst mode 1 to 3 (Parameter) 189	Absolute echo amplitude (1127)	
Burst trigger level (Parameter)	Absolute EOP amplitude (1128)	
Burst trigger mode (Parameter) 191	Absolute interface amplitude (1129)	83
Burst variable 0 (Parameter)	Access status display (0091) 25,	35
	Access status tooling (0005)	25
C	Acknowledge alarm (1130)	20
Calculated DC value (Parameter) 56, 137	Activate SW option (0029)	42
Calculation type 1 to 2 (Parameter) 235	Activate table (2304)	78
Calculation unit 1 to 2 (Parameter) 237	Actual diagnostics (0691) 1	98
Check mode 1 to 2 (Parameter) 236	Advanced process conditions (1177)	50
Clear logging data (Parameter) 210	Alarm delay 1 to 2 (11171–1 to 2) 2	40
Communication (Submenu)	Application parameter (1126)	
Comparison result (Parameter)	Assign channel 1 (0851) 2	
	-	

Assign current output	Device tag (0215)
Current output 1 to 2 (0359–1 to 2) 166	Device type (0222)
Assign diagnostic behavior (0482) 174	Diagnostics 1 to 5 (0692–1 to 5) 202
Assign diagnostic signal 1 to 2 (11179–1 to 2) 234	Diameter (2342)
Assign event behaviour 1 to 2 (11177–1 to 2) 240	Direct access (0106)
Assign limit (0483)	Display damping (0094)
Assign measurement variable (2328) 220	Display interval (0096)
Assign PV (0234)	Distance (1124)
Assign QV (0237)	Distance offset (2309)
Assign status (0485)	Distance unit (0551) 47
Assign status signal to AD event 1 to 2 (11176–1	Electronic temperature (1062) 86
to 2)	Empty calibration (2343) 60
Assign SV (0235)	Empty capacitance (1122) 156
Assign TV (0236)	ENP version (0012)
Backlight (0111)	Enter access code (0003)
Backup state (0121)	Envelope curve (1207)
Bin type (1176) 48	EOP search mode (1026)
Blocking distance (1144)	EOP shift (1027)
Broken probe detection (1032) 111	Evaluation mode (1112)
Build-up ratio (1210)	Extended order code 1 to 3 (0023–1 to 3) 207
Build-up thres. (1211)	Failure current
Burst command 1 to 3 (2031–1 to 3) 189	Current output 1 to 2 (0352–1 to 2) \dots 169
Burst mode 1 to 3 (2032–1 to 3) 189	Failure mode
Burst trigger level	Current output 1 to 2 (0364–1 to 2) \dots 169
Burst configuration 1 to 3 (2043–1 to 3) 191	Failure mode (0486)
Burst trigger mode	Filter options (0705)
Burst configuration 1 to 3 (2044–1 to 3) 191	Firmware version (0010)
Burst variable 0	Fixed current
Burst configuration 1 to 3 (2033) 190	Current output 1 to 2 (0365–1 to 2) 168
Calculated DC value (1118) 56, 137	Fixed value inp. 1 (2332) 159
Calculation type 1 to 2 (11174–1 to 2) 235	Fixed value inp. 2 (2333)
Calculation unit 1 to 2 (11188–1 to 2) 237	Fixed value input 1 interface (2338) 163
Check mode 1 to 2 (11175–1 to 2) 236	Fixed value input 2 interface (2344) 162
Clear logging data (0855)	Format display (0098)
Comparison result (0103)	Found echoes (1068)
Configuration counter (0233) 207	Free text (2341)
Configuration management (0100)	Full calibration (2308)
Confirm distance (1045)	Function input 1 interface (2336)
Confirm probe length (1080)	Function Input 1 Level (2311)
Const. GPC factor (1217)	Function input 2 interface (2337)
Contrast display (0105)	Function Input 2 Level (2331)
Control measurement (1083)	GPC mode (1034)
Current span	Hardware revision (0206)
Current output 1 to 2 (0353–1 to 2)	HART address (0219)
· · · · ·	HART date code (0202)
Damping output	HART descriptor (0212)
Current output 1 to 2 (0363–1 to 2)	HART revision (0205)
DC value (1201)	HART short tag (0220)
Dead time (1199)	Header (0097)
Decimal places 1 to 4 (0095–1 to 4)	Header text (0112)
Decimal places menu (0573)	High limit (2312)
Define access code (0093)	History reset (1145)
Delay time echo lost (1193)	Hysteresis 1 to 2 (11178–1 to 2)
Device ID (0221)	I max. drain speed (2363)
Device name (0013)	I max. fill speed (2359)
Device reset (0000)	In safety distance (1018)
Device revision (0204)	Integration time (1092)
Device tag (0011)	Interface (2352)

Interface criterion (1184)	Operating mode (1046)	47
Interface distance (1067) 94, 129	Operating time (0652)	
Interface external input 1 (2334) 161	Operating time from restart (0653) 1	199
Interface external input 2 (2335) 162	Order code (0008) 2	207
Interface linearized (2382) 67, 75	Output current 1 to 2 (0361–1 to 2) 1	168
Interface property (1107)	Output echo lost (2307)	118
Interface signal (1015)	Output mode (2317)	65
Intermediate height (2310)	Present mapping (1182)	L31
Invert output signal (0470)	Present probe length (1078)	89
Language (0104)	Present reference distance (1076) 1	106
Last backup (0102)	Previous diagnostics (0690) 1	198
Last check time (1203)	Primary variable (PV) (0201) 1	L93
Launch signal (1012)	Probe grounded (1222)	89
Level (2319) 65	Process property (1081)	49
Level (2383)	Quaternary variable (QV) (0203) 1	L95
Level (2389)	Ramp at echo lost (2323)	119
Level correction (2325) 64	Record map (1069) 1	L32
Level external input 1 (2305) 159	Reference distance (1033) 1	106
Level external input 2 (2306) 160	Reference echo threshold (1168) 1	L07
Level limit mode (2314) 63	Relative echo amplitude (1089)	82
Level linearized (2318) 67, 74	Relative interface amplitude (1090)	83
Level signal (1016)	Reset min./max. (2324) 2	14
Level unit (0576) 62	Reset min./max. 1 to 2 (11186-1 to 2) 2	239
Linearization type (2339)	Reset min./max. temp. (1173) 2	116
Link AD 1 to 2 to (11180–1 to 2) 234	Result device check (1014) 2	224
Linking logic AD 1 to 2 (11181–1 to 2) 235	Result self check (1134)	11
Locking status (0004) 24	Safety distance (1093)	L20
Logging interval (0856)	Sample time 1 to 2 (11187–1 to 2) 2	235
Low limit (2313)	Save reference curve (1218) 2	43
Lower limit 1 to 2 (11184–1 to 2) 238	Secondary variable (SV) (0226) 1	L94
Manufacturer ID (0223)	Sensor module (1101)	90
Mapping end point (1022)	Separator (0101)	33
Max. draining speed (2320) 213	Serial number (0009) 2	206
Max. electronics temperature (1031) 216	Signal quality (1047)	81
Max. filling speed (2360) 214	Simulation current output 1 to 2 (0354–1 to 2) 2	220
Max. interface value (2361) 214	Simulation device alarm (0654) 2	222
Max. level value (2357)	Software revision (0224) 1	
Max. update period	Start device check (1013) 2	224
Burst configuration 1 to 3 (2041–1 to 3) 191	Start self check (1133)	111
Maximum value (2315)	Start-up current	
Maximum value 1 to 2 (11183–1 to 2) 239	Current output 1 (0369–1) 1	L72
Measured capacitance (1066)	Start-up mode	
Measured current 1 (0366–1)	Current output 1 (0368–1) 1	
Measurement (1082)	Switch output function (0481) 1	L74
Measurement frequency (1180) 86	Switch output simulation (0462) 2	221
Measuring mode	Switch status (0461)	
Current output 1 to 2 (0351–1 to 2) 171	Switch status (0463) 2	
Medium group (1208) 53	Switch-off delay (0465)	L77
Medium property (1165) 54	Switch-off value (0464)	L76
Medium type (1049) 53	Switch-on delay (0467) 1	
Min. electronics temperature (1040) 216	Switch-on value (0466)	١75
Min. interface value (2362) 215	System damping	
Min. level value (2358)	Current output 1 (1174–1) 1	
Min. update period	Table mode (2303)	
Burst configuration 1 to 3 (2042–1 to 3) 191	Table number (2370)	
Minimum value 1 to 2 (11185–1 to 2) 239	Tank level (1111)	
No. of preambles (0217)	Tank trace state (1206)	
Noise of signal (1105)	Tank type (1175)	
Number format (0099)	Temperature unit (0557)	47

Current output 1 (0662) 172 Fixed current (Parameter) 108 Tritinary anaishle (TV) (0228) 195 Thickness upper layer (2330) 68 The max. per layer (2330) 68 The max. interface (2338) 214 Time max. interface (2338) 214 Time max. interface (2338) 214 Time max. level (2395) 213 Time min. interface (2387) 215 Time reference curve (1232) 243 Time reference curve (1232) 243 Time reference curve (1232) 243 Time stamp (0667) 196 Timestamp (0667) 196 Timestamp (0672) 199 Timestamp (0672) 199 Timestamp (0673) 201 Time diameter (1117) 48 Timestamp (0683) 201 Time diameter (1117) 48 Timestamp (0683) 201 Time diameter (1117) 48 Time diameter (1117) 49 Time diameter (1118) 49 Time diameter (1117) 49 Time diameter (1117) 49 Time diameter (1118) 49 Time di	Terminal voltage 1	Firmware version (Parameter) 200
Tertiary variable (TV) (0228) 195	Current output 1 (0662)	Fixed current (Parameter) 168
Thickness upper layer [2330] 68 Time max. leelectronics temperature [1204] 216 Time max. interface (2388) 214 Time max. interface (2388) 214 Time min. interface (2387) 215 Time min. interface (1237) 243 Time stamp (1067) 198 Timestamp (1067) 198 Timestamp (1067) 199 Timestamp (1067) 199 Timestamp (1068) 201 Time diameter (1117) 48 Time diameter (1117) 49 Time diameter (11182 1 to 2) 170 Time diameter (11182 1 to	Tertiary variable (TV) (0228) 195	Fixed value inp. 1 (Parameter)
Time max. electronics temperature (1204) 2.16 Time max. Interface (2388) 2.14 Time max. Interface (2385) 2.13 Time min. electronics temperature (1205) 2.16 Time min. electronics temperature (1205) 2.16 Time min. electronics temperature (1205) 2.16 Time min. letterface (2387) 2.15 Time stamp (0667) 1.98 Timestamp (0667) 1.99 Timestamp (0672) 1.99 Timestamp (0672) 1.99 Timestamp (0672) 1.99 Timestamp (0673) 2.01 Time temperature (1117) 40 Time down Current output 1 to 2 (0358-1 to 2) 1.70 Unit after linearization (2340), 23 Upper limit 1 to 2 (0358-1 to 2) 2.21 Value de disolation (1115) 85 Value 1 display (0107) 3.11 Value current output 1 to 2 (0355-1 to 2) 2.21 Value cho lost (2316) 1.18 Value current output 1 to 2 (0358-1 to 2) 2.21 Value cho lost (2316) 1.18 HART dadress (Parameter) 1.67 Direct access (Parameter) 2.44 Display (Submenu) 2.22.29 Display (Amping (Parameter) 3.29 Display (Amping (Parameter) 3.29 Display (Amping (Parameter) 3.29 Distance (Barameter) 3.20 Distance (Barameter) 3.21 Distance (Barameter) 4.21 E Cho tracking (Submenu) 1.41, 142 Eho tracking (Submenu) 1.41, 142 Eho tracking (Submenu) 1.41, 142 Ehotracking (Submenu) 1.41, 142 Ehotra		
Time max, interface (2386). 214 Time min. electronics temperature (1205). 216 Time min. electronics temperature (1205). 216 Time min. interface (2387). 215 Time min. interface (2386). 213 Time reference curve (1232). 243 Time reference curve (1232). 243 Time reference curve (1232). 243 Time stamp (0667). 1398 Timestamp (0672). 1399 Timestamp (0672). 1399 Timestamp (0683). 2011 Tube diameter (1117). 48 Turn down Current output 1 to 2 (0358-1 to 2). 170 Unit after linearization (2340). 73 Upper limit 1 to 2 (11182-1 to 2). 238 Used calculation (1115). 85 Value 1 display (0107). 31 Value current output 1 to 2 (0355-1 to 2). 221 Value echo lost (2316). 118 Value current output 1 to 2 (0355-1 to 2). 221 Tube domester (1374). 28 Value process variable (2329). 220 Display (submenu). 28, 29 Display (submenu). 28, 29 Display (submenu). 29, 23 Display (interval (Parameter). 32 Display interval (Parameter). 33 Distance (Parameter). 39 Distance (Submenu). 92, 93 Distance (Submenu). 92, 93 Distance (Submenu). 141, 142 Electronic temperature (Parameter). 207 Enter access (Parameter).		
Time max. level (2385) 213 Format display (Parameter) 2.94 Found chose (Parameter) 34 Found chose (Parameter) 35 Found chose (Parameter) 36 Found chose (Parameter) 37 Found chose (Parameter) 37 Found chose (Parameter) 37 Found chose (Parameter) 38 Found chose (Parameter) 39 Found chose (Parameter)		
Time min. electronics temperature (1205) 216 Time min. level (2386) 213 Time min. level (2386) 213 Time reference curve (1232) 243 Time reference curve (1232) 243 Time stamp (0677) 196 Timestamp (0672) 199 Timestamp (0672) 199 Timestamp (0678) 201 Tube diameter (1117) 46 Turn down 1 to 2 (0358-1 to 2) 170 Unit after linearization (2340) 73 Upper limit 1 to 2 (11182-1 to 2) 238 Used calculation (1115) 85 Value 1 display (1010*) 31 Value current output 1 to 2 (0355-1 to 2) 221 Value echo lost (2316) 118 Value process variable (2329) 2220 Direct access [Parameter] 187 HART address [Parameter] 187 HART descriptor (Parameter) 188 Hart descriptor (Parameter) 188 Hart descriptor (Parameter) 189 Hart revision (
Time min. Interface (2387) 215 Free text (Parameter) 7.4 7 7 7 7 7 7 7 7 7		
Time min. level (2336)		
Time reference curve (1232)		
Timestamp (0667). 198 Timestamp (0667). 199 Timestamp (0663). 201 Tube diameter (1117). 48 Turn down Current output 1 to 2 (0358–1 to 2). 170 Unit after linearization (2340). 73 Upper limit 1 to 2 (11182–1 to 2). 238 Used calculation (1115). 85 Value 1 display (0107). 311 Value current output 1 to 2 (0355–1 to 2). 221 Value exchools (2316). 118 Value process variable (2329). 220 Direct access (Parameter). 24 Display (380menu). 28, 29 Display (380menu). 28, 29 Display (380menu). 28, 29 Distance (Parameter). 32 Distance (Parameter). 32 Distance (Parameter). 47 Document Function. 44 Document (Parameter). 49 Distance offset (Parameter). 49 Distance offset (Parameter). 49 Distance offset (Parameter). 49 Distance offset (Parameter). 59 Distance (Parameter). 50 Distance (Parameter).		
Timestamp (0672) 199 Timestamp (0683) 201 Tube diameter (1117) 488 Turn down Current output 1 to 2 (0358-1 to 2) 170 Unit after linearization (2340) 73 Upper limit 1 to 2 (11182-1 to 2) 238 Used calculation (1115) 85 Value 1 display (0107) 31 Value current output 1 to 2 (0355-1 to 2) 221 Value echo lost (2316) 118 Value per lost (2316) 118 Use echo lost (2316) 118 Value per lost (2316) 118 Value 1 display (0107) 119 Value carrent output 1 to 2 (0355-1 to 2) 221 HART address (Parameter) 187 HART descriptor (Parameter) 1		
Timestamp (10683) 201 Tube diameter (1117) 48 Turn down		
Turn down Current output 1 to 2 (0358-1 to 2) 170 Unit after linearization (2340) 73 Upper limit 1 to 2 (11182-1 to 2) 238 Usped calculation (1115) 85 Value 1 display (0107) 31 Value current output 1 to 2 (0355-1 to 2) 221 Value echo lost (2316) 118 Value echo lost (2316) 120 Value echo lost (2416) 140 Value red value feet (Parameter) 136 Value red value feet (Parameter) 130 Value echo lost (2416) 140 Value red value feet (Parameter) 120 Value echo lost (2416) 140 Value red value feet (Parameter) 120 Value feet (Parameter) 120 Value feet (Parameter) 120 Value feet (Parameter) 120 V		
Turn down		Function Input 2 Level (Parameter)
Current output 1 to 2 (0358-1 to 2)		C
Unit after linearization (2340). 73 Upper limit 1 to 2 (11182-1 to 2) 238 Used calculation (1115) 85 Value 1 display (0107) 31 Value current output 1 to 2 (0355-1 to 2) 221 Value cerho lost (2316) 211 Value corress variable (2329) 220 Upret access (Parameter) 24 Display (Submenu) 28, 29 Display (Submenu) 28, 29 Display damping (Parameter) 32 Display interval (Parameter) 32 Distance (Submenu) 92, 93 Distance (Submenu) 92, 93 Distance (Submenu) 92, 93 Distance unit (Parameter) 47 Document Function 4 Document Function 4 Document (Parameter) 86 Entry capacitance (Parameter) 86 Empty capacitance (Parameter) 86 Empty capacitance (Parameter) 86 Empty capacitance (Parameter) 160 ENP version (Parameter) 207 Envelope curve (Parameter) 207 Envelope curve (Submenu) 134, 135 EOP search mode (Parameter) 136 EOP shift (Parameter) 136 EVent Indiana (Parameter) 155 EValuation mode (Parameter) 136 EVent logbook (Submenu) 10, 23, 24 External injut (Submenu) 158, 159 Failure current (Parameter) 169 Filter ontions (Parameter) 203 Filter ontions (Parameter) 36 Failure mode (Parameter) 169 Filter ontions (Parameter) 65, 78 Failure current (Parameter) 66 Filter ontions (Parameter) 66 Filter ontions (Parameter) 66 Failure mode (Parameter) 66 Failure mode (Parameter) 66 Failure mode (Parameter) 66 Failure mode (Parameter) 66 Failure ontions (Parameter) 66 Failure order (Parameter) 66 Failur		_
Usper limit 1 to 2 (11182 – 1 to 2)		
Hardware revision (Parameter) 187 Value 1 display (0107) 311 Value current output 1 to 2 (0355-1 to 2) 221 Value echo lost (2316) 118 Value process variable (2329) 220 MART address (Parameter) 187 Value process variable (2329) 220 MART descriptor (Parameter) 187 Value process variable (2329) 220 MART descriptor (Parameter) 187 Value process variable (2329) 220 MART descriptor (Parameter) 187 Display (Submenu) 28, 29 MART revision (Parameter) 187 MART message (Parameter) 187 MART message (Parameter) 187 MART revision (Parameter) 187 MART revision (Parameter) 187 MART revision (Parameter) 187 MART message (Parameter) 187 MART message (Parameter) 187 MART revision (Parameter) 187 MART message (Parameter) 187 MART message (Parameter) 187 MART message (Parameter) 187 MART revision (Parameter) 187 MART revision (Parameter) 187 MART revision (Parameter) 187 MART revision (Parameter) 187 MART message (Parameter) 187 MART address (Parameter) 187 MART address (Parameter) 187 MART addres revision (Parameter) 187 MART addres revision (Parameter) 187 MART address (Parameter) 187 MART addres revision (Parameter) 187 MART adare revision (Parameter) 187 MART adare revision (Parameter)		GPC mode (Parameter)
Value display (0107) 31	Upper limit 1 to 2 (11182–1 to 2) 238	***
Value current output 1 to 2 (0355-1 to 2) 221 HART address (Parameter) 183 Value perho lost (2316) 118 HART decode (Parameter) 187 Value process variable (2329) 220 HART descriptor (Parameter) 187 Direct access (Parameter) 24 HART descriptor (Parameter) 187 Display (Submenu) 28, 29 HART revision (Parameter) 183 Display damping (Parameter) 32 HART short tag (Parameter) 183 Distance (Parameter) 93, 128 Header (Parameter) 32 Distance offset (Parameter) 93, 128 Header (Parameter) 33 Distance offset (Parameter) 40 History reset (Parameter) 34 Document 4 Hysteresis 1 to 2 (Parameter) 23 Document function 4 Imax drain speed (Parameter) 23 E E Imax drain speed (Parameter) 215 In max drain speed (Parameter) 215 Inax fill speed (Parameter) 215 Empty capacitance (Parameter) 60 Interface (Parameter) 160 Interface (Parameter)	Used calculation (1115)	
Value echo lost (2316) 118 HART date code (Parameter) 187 Value process variable (2329) 220 HART descriptor (Parameter) 187 Direct access (Parameter) 24 HART message (Parameter) 187 Display (Submenu) 28, 29 HART short tag (Parameter) 187 Display interval (Parameter) 32 HART short tag (Parameter) 183 Display interval (Parameter) 32 Header (Parameter) 32 Distance (Parameter) 93, 128 Header text (Parameter) 33 Distance (Submenu) 92, 93 Hijstory reset (Parameter) 64 Distance of set (Parameter) 47 Hysteresis 1 to 2 (Parameter) 142 Document 4 Hysteresis 1 to 2 (Parameter) 239 Document function 4 Inax. drain speed (Parameter) 215 E Inax. fill speed (Parameter) 215 Electronic temperature (Parameter) 66 Interface (Parameter) 215 Envely capacitance (Parameter) 166 Interface (Parameter) 96 Envel va capacitance (Parameter)	Value 1 display (0107)	
Value echo lost (2316) 118 HART date code (Parameter) 187 Value process variable (2329) 220 HART descriptor (Parameter) 187 Direct access (Parameter) 24 HART descriptor (Parameter) 187 Display (Submenu) 28, 29 HART revision (Parameter) 187 Display interval (Parameter) 32 HART revision (Parameter) 187 Distance (Parameter) 33, 128 Header (Parameter) 33 Distance (Submenu) 92, 93 High limit (Parameter) 64 Distance unit (Parameter) 47 Hysteresis 1 to 2 (Parameter) 142 Document Function 4 Hysteresis 1 to 2 (Parameter) 239 Document function 4 Inax. fill speed (Parameter) 215 E In safety distance (Parameter) 215 E Cho tracking (Submenu) 141, 142 Information (Submenu) 80, 81, 185, 186 Envel core temperature (Parameter) 86 Integration time (Parameter) 60 Envel core temperature (Parameter) 160 Integration (Submenu) 15, 15 <td< td=""><td></td><td></td></td<>		
Value process variable (2329) 220 HART descriptor (Parameter) 187		HART date code (Parameter)
Direct access (Parameter) 24 HART message (Parameter) 187		HART descriptor (Parameter)
Display (Submenu) 28, 29 Bart Trevision (Parameter) 187 Display damping (Parameter) 32 HART short tag (Parameter) 183 Display interval (Parameter) 32 Header (Parameter) 33 Distance (Parameter) 93, 128 Distance (Submenu) 92, 93 Distance offset (Parameter) 59 Distance unit (Parameter) 47 Distance unit (Parameter) 47 Document 4 Document function 4 Document function 4 Document function 4 December of Function 4 Document function 4 December of Function 4 Document function 5 EE 1 Echo tracking (Submenu) 141, 142 Eliectronic temperature (Parameter) 86 Empty capacitance (Parameter) 60 Empty capacitance (Parameter) 156 Entre access code (Parameter) 156 Entre access code (Parameter) 123 Entre access code (Parameter) 123 Envelope curve (Parameter) 123 Envelope curve (Parameter) 123 Envelope diagnostics (Submenu) 123 Envelope diagnostics (Submenu) 124, 135 EOP search mode (Parameter) 135 EOP search mode (Parameter) 135 EOP search mode (Parameter) 142 Event logbook (Submenu) 202, 203 Expert (Menu) 202, 203 Expert (Menu) 202, 203 Expert (Menu) 158, 159 Extended order code 1 to 3 (Parameter) 207 Externed order code 1 to 3 (Parameter) 207 Externed order code 1 to 3 (Parameter) 208 Extended		HART message (Parameter)
Display damping (Parameter) 32		
Display interval (Parameter) 32 Header (Parameter) 32 Header (Parameter) 32 Distance (Parameter) 93, 128 Header text (Parameter) 33 High limit (Parameter) 64 History reset (Parameter) 142 Hysteresis 1 to 2 (Parameter) 239 Document 24 Time 24 Hysteresis 1 to 2 (Parameter) 215 In safety distance (Parameter) 216 Interface (Parameter) 216 Interface (Parameter) 217 Interface (Parameter) 218 Interface (Parameter) 219 Interface (Parameter) 210 Interface (Parameter) 210 Interface (Submenu) 215 Interface (Parameter) 216 Interface (Parameter) 217 Interface (Parameter) 218 Interface (Parameter) 218 Interface (Parameter) 219 Interface (Parameter) 215 Interface external input 1 (Parameter) 215 Interface external input 1 (Parameter) 216 Interface external input 2 (Parameter) 216 Interface Parameter) 216 Interface Parameter 217 Interface Parameter 218 Interface Parame		
Distance (Parameter) 93, 128 Header text (Parameter) 33 Distance (Submenu) 92, 93 High limit (Parameter) 64 Distance offset (Parameter) 142 Distance unit (Parameter) 47 Document		
Distance (Submenu) 92, 93 High limit (Parameter) 64 Distance orifset (Parameter) 59 History reset (Parameter) 142 Document Function 4 Document function 4 Document function 4 Imax. drain speed (Parameter) 215 I max. drain speed (Parameter) 206 Interface (Parameter) 96 Interface (Parameter) 156 Interface (Parameter) 156 Interface distance (Parameter) 156 Interface external input 1 (Parameter) 161 Interface external input 2 (Parameter) 162 Interface external input 2 (Parameter) 163 Interface property (Parameter) 156 Interface signal (Parameter) 276 Interface distance (Parameter) 276 Interface signal (Parameter) 276 Interface signal (Parameter) 276 Intermediate height (Parameter) 276 Intermediate height (Parameter) 286 Intermediate height (Parameter) 286 Intermediate height (Parameter) 286 Intermediate height (Parameter) 286 Interface distance (Parameter) 286 Interface oxternal input 2 (Parameter) 286 Interfa		
Distance offset (Parameter) 59 Distance unit (Parameter) 47 Distance unit (Parameter) 47 Document Function 4 Document function 5 E I max. drain speed (Parameter) 215 Imax. fill speed (Parameter) 215 Imax. drain		
Distance unit (Parameter) 47 Document Function 4 Document function 12 I max. drain speed (Parameter) 120 In safety distance (Parameter) 120 Interface (Parameter) 80, 81, 185, 186 Interface (Parameter) 96 Interface (Parameter) 155 Interface (Submenu) 152, 153 Interface citerion (Parameter) 155 Interface external input 1 (Parameter) 161 Interface external input 2 (Parameter) 163 Interface inearized (Parameter) 163 Interface property (Parameter) 163 Interface inearized (Parameter) 163 Interface property (Parameter) 163 Interface inearized (Parameter) 163 Interface inearized (Parameter) 163 Interface external input 2 (Parameter) 163 Interface external input 2 (Parameter) 163 Interface external input 1 (Parameter) 163 Interface external input 2 (Parameter) 163 Interface external input 2 (Parameter) 163 Interface external input 2 (Parameter) 163 Interface external inp		
Document Function 4 Document function 5 E I I max. drain speed (Parameter) 215 I max. fill speed (Parameter) 120 Information (Submenu) 80, 81, 185, 186 Integration time (Parameter) 96 Interface (Parameter) 96 Interface (Submenu) 152, 153 ENP version (Parameter) 156 Enter access code (Parameter) 207 Enter access code (Parameter) 123 Envelope curve (Parameter) 123 Envelope curve (Parameter) 123 Envelope diagnostics (Submenu) 242, 243 EOP evaluation (Submenu) 134, 135 EOP search mode (Parameter) 135 EOP shift (Parameter) 135 EOP shift (Parameter) 142 Event logbook (Submenu) 202, 203 Expert (Menu) 10, 23, 24 External input (Submenu) 10, 23, 24 External input (Submenu) 158, 159 External input (Submenu) 158, 159 External input (Submenu) 169 External input (Submenu)		
Function		Trysteresis 1 to 2 (I didineter)
Function 4 Document function 5 Document function 6 Document 7 Document 7 Document 7 Document 8 Document 9 Document		Ī
Echo tracking (Submenu) 141, 142 Electronic temperature (Parameter) 86 Empty calibration (Parameter) 66 Empty capacitance (Parameter) 156 ENP version (Parameter) 207 Enter access code (Parameter) 26 Envelope curve (Parameter) 26 Envelope curve (Submenu) 123 Envelope curve (Submenu) 123 Envelope diagnostics (Submenu) 242, 243 Envelope diagnostics (Submenu) 134, 135 EOP evaluation (Submenu) 134, 135 EOP search mode (Parameter) 135 EVA peri logbook (Submenu) 202, 203 Expert (Menu) 202, 203 Expert (Menu) 10, 23, 244 Extended order code 1 to 3 (Parameter) 207 External input (Submenu) 158, 159 Failure current (Parameter) 169 Failure mode (Parameter) 169, 178 Filter options (Parameter) 169 Filter options (Parameter) 66 Interface (Parameter) 94, 129 Interface external input 1 (Parameter) 161 Interface external input 2 (Parameter) 163 Interface property (Parameter) 153 Interface signal (Parameter) 163 Interface signal (Parameter) 178 Interface signal (Parameter) 29 Last backup (Parameter) 29 Last backup (Parameter) 29 Last backup (Parameter) 224 Exercited (Parameter) 29 Last backup (Parameter) 29 Last backup (Parameter) 225 Failure current (Parameter) 169, 178 Filter options (Parameter) 58, 59 Level (Submenu) 58, 59 Level (Submenu) 58, 59 Level correction (Parameter) 64		-
Echo tracking (Submenu)	Document function 4	
Echo tracking (Submenu) 141, 142 Electronic temperature (Parameter) 86 Empty calibration (Parameter) 60 Empty capacitance (Parameter) 156 Enter access code (Parameter) 207 Enter access code (Parameter) 123 Envelope curve (Parameter) 123 Envelope diagnostics (Submenu) 123 Envelope diagnostics (Submenu) 123 EOP evaluation (Submenu) 134, 135 EOP search mode (Parameter) 135 EOP sifit (Parameter) 135 Event logbook (Submenu) 202, 203 Expert (Menu) 10, 23, 24 Extended order code 1 to 3 (Parameter) 207 External input (Submenu) 158, 159 Faillure current (Parameter) 169, 178 Faillure current (Parameter) 169, 178 Filter options (Parameter) 203 Event logotook (Parameter) 205 Filter options (Parameter) 203 Filter options (Parameter) 203 Evel (Submenu) 58, 59 Level (Submenu) 58, 59 Interface (Parameter) 96 Interface (Parameter) 152 Interface criterion (Parameter) 94, 129 Interface external input 1 (Parameter) 161 Interface external input 2 (Parameter) 162 Interface external input 2 (Parameter) 162 Interface external input 2 (Parameter) 163 Interface external input 2 (Parameter) 164 Envelope diagnostics (Submenu) 123 Interface external input 2 (Parameter) 162 Interface external input 2 (Parameter) 163 Interface external input 2 (Parameter) 164 Event logbook (Submenu) 123 Interface external input 2 (Parameter) 162 Interface external input 2 (Parameter) 162 Interface external input 1 (Parameter) 162 Interface external input 2 (Parameter) 162 Interface external input 2 (Parameter) 162 Interface external input 1 (Parameter) 162 Interface external input 2 (Parameter) 162 Interface external input 2 (Parameter) 162 Interface distance (Parameter) 162 Interface external input 1 (Parameter) 162 Interface distance (Parameter) 162 Interface distance (Parameter) 162 Interface distance (Parameter) 162 Interface distance (Para	T.	In cafety dictance (Parameter)
Electronic temperature (Parameter) 86 Empty calibration (Parameter) 60 Empty capacitance (Parameter) 56 Empty capacitance (Parameter) 156 ENP version (Parameter) 207 Enter access code (Parameter) 26 Envelope curve (Parameter) 123 Envelope curve (Submenu) 123 Envelope diagnostics (Submenu) 242, 243 Envelope diagnostics (Submenu) 134, 135 EOP evaluation (Submenu) 134, 135 EOP search mode (Parameter) 135 EOP shift (Parameter) 135 Event logbook (Submenu) 202, 203 Expert (Menu) 202, 203 Expert (Menu) 10, 23, 24 Extended order code 1 to 3 (Parameter) 207 External input (Submenu) 158, 159 Failure current (Parameter) 169, 178 Filter options (Parameter) 169 Enterface (Submenu) 152, 153 Interface (Submenu) 152, 153 Interface (Submenu) 152, 153 Interface (Submenu) 162 Interface (Submenu) 164 Interface (Submenu) 164 Interface (Submenu) 164 Interface external input 1 (Parameter) 162 Interface external input 2 (Parameter) 162 Interface external input 2 (Parameter) 163 Interface signal (Parameter) 153 Interface signal (Parameter) 76 Invert output signal (Parameter) 76 Invert output signal (Parameter) 29 Last backup (Parameter) 29 Last backup (Parameter) 29 Last backup (Parameter) 224 Launch signal (Parameter) 224 Launch signal (Parameter) 224 Launch signal (Parameter) 224 Launch signal (Parameter) 38 Last check time (Parameter) 224 Failure current (Parameter) 169, 178 Level (Submenu) 58, 59 Filter options (Parameter) 64		Information (Submanu) 00 01 105 106
Empty calibration (Parameter) 60 Empty capacitance (Parameter) 156 Empty capacitance (Parameter) 156 ENP version (Parameter) 207 Enter access code (Parameter) 26 Envelope curve (Parameter) 123 Envelope curve (Submenu) 123 Envelope diagnostics (Submenu) 242, 243 EOP evaluation (Submenu) 134, 135 EOP search mode (Parameter) 135 EOP search mode (Parameter) 135 EOP shift (Parameter) 135 EVENT (Menu) 10, 23, 24 Extended order code 1 to 3 (Parameter) 207 External input (Submenu) 158, 159 External input (Submenu) 158, 159 East backup (Parameter) 224 Extended order code 1 to 3 (Parameter) 169 External input (Submenu) 169 External input (Submenu) 169 External input (Parameter) 225 Failure current (Parameter) 169 Evel (Parameter) 226 Evel (Parameter) 227 External input (Submenu) 202 External input 2 (Parameter)		
Empty capacitance (Parameter) 156 Empty capacitance (Parameter) 207 Enter access code (Parameter) 26 Enter access code (Parameter) 26 Envelope curve (Parameter) 123 Envelope curve (Submenu) 123 Envelope diagnostics (Submenu) 242, 243 Envelope diagnostics (Submenu) 134, 135 EOP evaluation (Submenu) 134, 135 EOP search mode (Parameter) 135 EOP search mode (Parameter) 135 EOP shift (Parameter) 135 EVALUATION 142 Event logbook (Submenu) 202, 203 Expert (Menu) 202, 203 External input (Submenu) 158, 159 Failure current (Parameter) 169 Failure mode (Parameter) 169, 178 Failure mode (Parameter) 169, 178 Filter options (Parameter) 65, 78 Level (Submenu) 58, 59 Filter options (Parameter) 65 Interface (Submenu) (Parameter) 161 Interface external input 1 (Parameter) 162 Interface external input 2 (Parameter) 153 Interface external input 2 (Parameter) 162 Interface cipation (Paramete		
ENP version (Parameter) 207 Enter access code (Parameter) 266 Envelope curve (Parameter) 123 Envelope curve (Submenu) 123 Envelope diagnostics (Submenu) 242, 243 Envelope diagnostics (Submenu) 134, 135 EOP evaluation (Submenu) 134, 135 EOP search mode (Parameter) 135 EOP search mode (Parameter) 135 EOP shift (Parameter) 135 EValuation mode (Parameter) 135 Event logbook (Submenu) 202, 203 Expert (Menu) 202, 203 External input (Submenu) 158, 159 Failure current (Parameter) 169 Failure mode (Parameter) 169 Filter options (Parameter) 207 Evel (Submenu) 58, 59 Filter options (Parameter) 64 Interface criterion (Parameter) 94, 129 Interface distance (Parameter) 161 Interface external input 1 (Parameter) 66, 78 Interface external input 2 (Parameter) 67, 75 Interface signal (Parameter) 76 Interface external input 2 (Parameter) 153 Interface external input 1 (Parameter) 153 Interface external input 1 (Parameter) 153 Interface external input 2 (Parameter) 153 Interface external input 2 (Parameter) 153 Interface external input 2 (Parameter) 162 Interface external input 1 (Parameter) 162 Interface external input 2 (Parameter) 162 Interface external input 2 (Parameter) 162 Interface external input 2 (Parameter) 162 Interf		
Enter access code (Parameter) 26 Envelope curve (Parameter) 123 Envelope curve (Submenu) 123 Envelope diagnostics (Submenu) 242, 243 Envelope diagnostics (Submenu) 134, 135 EOP evaluation (Submenu) 134, 135 EOP search mode (Parameter) 135 EOP search mode (Parameter) 135 EOP shift (Parameter) 135 EVALUATION MODE (Parameter) 142 Event logbook (Submenu) 202, 203 Expert (Menu) 10, 23, 24 External input (Submenu) 158, 159 Failure current (Parameter) 205 Failure mode (Parameter) 169, 178 Filter options (Parameter) 206 Filter options (Parameter) 64 Interface distance (Parameter) 162 Interface external input 1 (Parameter) 667, 75 Interface external input 2 (Parameter) 162 Interface external input 2 (Parameter) 153 Interface external input 2 (Parameter) 152 Interface external input 2 (Parameter) 153 Interface external input 2 (Parameter) 152 Interface external input 2 (Parameter) 153 Interface external input 2 (Parameter) 152 Interface inaction 164 Interface external input 2 (Parameter) 152 Interface input 2 (Parameter) 152 Interface input 2 (Parameter) 152 Interface input 2 (Parameter) 152		
Envelope curve (Parameter) 123 Envelope curve (Submenu) 123 Envelope diagnostics (Submenu) 123 Envelope diagnostics (Submenu) 1242, 243 Envelope diagnostics (Submenu) 134, 135 EOP evaluation (Submenu) 134, 135 EOP search mode (Parameter) 135 EOP search mode (Parameter) 135 EOP shift (Parameter) 135 EOP shift (Parameter) 135 EVALUATION MODE (Parameter) 142 Event logbook (Submenu) 202, 203 Expert (Menu) 10, 23, 24 External input 1 (Parameter) 67, 75 Interface external input 2 (Parameter) 152 Interface external input 2 (Parameter) 67, 75 Interface eignal (Parameter) 153 Interface signal (Parameter) 76 Invert output signal (Parameter) 178 Language (Parameter) 29 Last backup (Parameter) 29 Last backup (Parameter) 224 Launch signal (Parameter) 224 Launch signal (Parameter) 224 Launch signal (Parameter) 225 Level (Parameter) 58, 59 Filter options (Parameter) 203 Level correction (Parameter) 64	ENP version (Parameter) 207	· · · · · · · · · · · · · · · · · · ·
Envelope curve (Submenu) 123 Envelope diagnostics (Submenu) 242, 243 Envelope diagnostics (Submenu) 242, 243 EOP evaluation (Submenu) 134, 135 EOP search mode (Parameter) 135 EOP search mode (Parameter) 135 EOP shift (Parameter) 135 Evaluation mode (Parameter) 142 Event logbook (Submenu) 202, 203 Expert (Menu) 10, 23, 24 Extended order code 1 to 3 (Parameter) 207 External input (Submenu) 158, 159 Failure current (Parameter) 169 Failure mode (Parameter) 169, 178 Failure mode (Parameter) 203 Filter options (Parameter) 203 Level (Carameter) 65, 78 Filter options (Parameter) 203 Level (Carameter) 64	Enter access code (Parameter)	
Envelope diagnostics (Submenu) 242, 243 EOP evaluation (Submenu) 134, 135 EOP search mode (Parameter) 135 EOP search mode (Parameter) 135 EOP shift (Parameter) 135 EVALUATION MODE (Parameter) 142 Event logbook (Submenu) 202, 203 Expert (Menu) 202, 203 Extended order code 1 to 3 (Parameter) 207 External input (Submenu) 158, 159 Fillure current (Parameter) 169 Failure mode (Parameter) 169, 178 Failure mode (Parameter) 169, 178 Filter options (Parameter) 203 Interface linearized (Parameter) 153 Interface signal (Parameter) 225 Intermediate height (Parameter) 178 Interface property (Parameter) 179 Interface signal (Parameter) 225 Intermediate height (Parameter) 226 Interface signal (Parameter) 225 Intermediate height (Parameter) 225 Intermediate height (Parameter) 226 Interface	Envelope curve (Parameter)	
Envelope diagnostics (Submenu) 242, 243 EOP evaluation (Submenu) 134, 135 EOP search mode (Parameter) 135 EOP shift (Parameter) 135 EOP shift (Parameter) 135 EOP shift (Parameter) 135 EValuation mode (Parameter) 142 Event logbook (Submenu) 202, 203 Expert (Menu) 10, 23, 24 Extended order code 1 to 3 (Parameter) 207 External input (Submenu) 158, 159 Failure current (Parameter) 169 Failure mode (Parameter) 169, 178 Failure mode (Parameter) 203 Filter options (Parameter) 203 Filter options (Parameter) 203 Filter options (Parameter) 203 Interface linearized (Parameter) 153 Interface signal (Parameter) 225 Intermediate height (Parameter) 225 Intermediate height (Parameter) 225 Language (Parameter) 29 Last backup (Parameter) 38 Last check time (Parameter) 224 Launch signal (Parameter) 225 Level (Parameter) 58, 59 Level (Submenu) 58, 59 Level correction (Parameter) 64	Envelope curve (Submenu)	
EOP evaluation (Submenu) 134, 135 EOP search mode (Parameter) 135 EOP shift (Parameter) 135 EOP shift (Parameter) 135 EOP shift (Parameter) 135 EValuation mode (Parameter) 142 Event logbook (Submenu) 202, 203 Expert (Menu) 10, 23, 24 Extended order code 1 to 3 (Parameter) 207 External input (Submenu) 158, 159 Failure current (Parameter) 169 Failure mode (Parameter) 169, 178 Failure mode (Parameter) 169, 178 Filter options (Parameter) 203 Interface property (Parameter) 225 Intermediate height (Parameter) 76 Invert output signal (Parameter) 229 Language (Parameter) 29 Last backup (Parameter) 38 Last check time (Parameter) 224 Launch signal (Parameter) 225 Level (Parameter) 58, 59 Level (Submenu) 58, 59 Level (Submenu) 58, 59 Level correction (Parameter) 64		
EOP search mode (Parameter)		Interface property (Parameter)
EOP shift (Parameter)		Interface signal (Parameter)
Evaluation mode (Parameter)	· · ·	Intermediate height (Parameter)
Event logbook (Submenu)		Invert output signal (Parameter)
Expert (Menu) 10, 23, 24 Extended order code 1 to 3 (Parameter) 207 External input (Submenu) 158, 159 Failure current (Parameter) 169 Failure mode (Parameter) 169, 178 Filter options (Parameter) 203 Level (Submenu) 58, 59 Level correction (Parameter) 64		
Extended order code 1 to 3 (Parameter) 207 External input (Submenu) 158, 159 Last backup (Parameter) 38 Last check time (Parameter) 224 Launch signal (Parameter) 225 Level (Parameter) 65, 78 Failure mode (Parameter) 169, 178 Filter options (Parameter) 203 Level correction (Parameter) 64		L
External input (Submenu)		Language (Parameter)
Failure current (Parameter)		
Failure current (Parameter)Launch signal (Parameter)225Failure mode (Parameter)169Level (Parameter)65, 78Filter options (Parameter)203Level (Submenu)58, 59Level correction (Parameter)64	External input (Submenu)	
Failure current (Parameter)	F	
Failure mode (Parameter)		
Filter options (Parameter)		
	rinter options (Parameter)	

Level external input 2 (Parameter) 160	P
Level limit mode (Parameter)	Present mapping (Parameter)
Level linearized (Parameter) 67, 74	Present probe length (Parameter)
Level signal (Parameter)	Present reference distance (Parameter) 106
Level unit (Parameter)	Previous diagnostics (Parameter) 198
Linearization (Submenu) 70, 71, 72	Primary variable (PV) (Parameter) 193
Linearization type (Parameter)	Probe grounded (Parameter)
Link AD 1 to 2 to (Parameter) 234	Process property (Parameter)
Linking logic AD 1 to 2 (Parameter) 235	range (management)
Locking status (Parameter) 24	Q
Logging interval (Parameter) 210	Quaternary variable (QV) (Parameter) 195
Low limit (Parameter) 64	•
Lower limit 1 to 2 (Parameter)	R
	Ramp at echo lost (Parameter)
M	Record map (Parameter)
Manufacturer ID (Parameter)	Reference distance (Parameter) 106
Mapping (Submenu) 126, 127, 128	Reference echo threshold (Parameter) 107
Mapping end point (Parameter)	Relative echo amplitude (Parameter) 82
Max. draining speed (Parameter) 213	Relative interface amplitude (Parameter) 83
Max. electronics temperature (Parameter) 216	Reset min./max. (Parameter) 214
Max. filling speed (Parameter) 214	Reset min./max. 1 to 2 (Parameter) 239
Max. interface value (Parameter) 214	Reset min./max. temp. (Parameter) 216
Max. level value (Parameter) 213	Result device check (Parameter)
Max. update period (Parameter) 191	Result self check (Parameter)
Maximum value (Parameter)	C
Maximum value 1 to 2 (Parameter) 239	S
Measured capacitance (Parameter) 155	Safety distance (Parameter)
Measured current 1 (Parameter)	Safety settings (Submenu)
Measurement (Parameter)	Sample time 1 to 2 (Parameter)
Measurement frequency (Parameter) 86	Save reference curve (Parameter)
Measuring mode (Parameter)	Secondary variable (SV) (Parameter)
Medium (Submenu)	Sensor (Submenu)
Medium group (Parameter)	Sensor diagnostics (Submenu)
Medium property (Parameter)	Sensor module (Parameter)
Medium type (Parameter)	Sensor properties (Submenu)
Menu	Separator (Parameter)
Expert	Serial number (Parameter)
Min. electronics temperature (Parameter) 216	Signal quality (Parameter)
Min. interface value (Parameter)	Simulation (Submenu)
Min. level value (Parameter)	Simulation current output 1 to 2 (Parameter) 220
Min. update period (Parameter)	Simulation device alarm (Parameter)
Min/max values (Submenu)	Software revision (Parameter)
Minimum value 1 to 2 (Parameter) 239	Start device check (Parameter)
N	Start self check (Parameter)
No. of preambles (Parameter)	Start-up mode (Parameter)
Noise of signal (Parameter)	Submenu
Number format (Parameter)	Administration
ivuiliber format (Farameter)	Advanced diagnostics 1 to 2 233, 234
0	Burst configuration 1 to 3
Operating mode (Parameter)	Communication
Operating time (Parameter)	Configuration
Operating time from restart (Parameter) 199	Configuration backup display
Order code (Parameter)	Current output 1 to 2
Output (Submenu)	Data logging
Output current 1 to 2 (Parameter)	Device check
Output echo lost (Parameter)	Device information
Output mode (Parameter)	Diagnostic configuration
	Diagnostic list
	Diagnostic list

Diagnostics 196, 197, 19 Display 28, 2 Distance 92, 9 Echo tracking 141, 14 Envelope curve 12 Envelope diagnostics 242, 24 EOP evaluation 134, 13 Event logbook 202, 20 External input 158, 15 Gas phase compensation 105, 10 Information 80, 81, 185, 18 Interface 152, 15 Level 58, 5 Linearization 70, 71, 7 Mapping 126, 127, 12 Medium 52, 5 Min/max values 212, 21 Output 164, 192, 19 Safety settings 117, 11 Sensor 45, 4	93233539663928338
Sensor diagnostics	
Sensor properties	
Simulation	
Switch output	
System	
Switch output function (Parameter)	
Switch output simulation (Parameter)	
Switch status (Parameter)	
Switch-off delay (Parameter)	
Switch-off value (Parameter)	
Switch-on delay (Parameter)	
Switch-on value (Parameter)	
System (Submenu)	7
System damping (Farameter)	0
T	
Table number (Parameter)	
Tank level (Parameter)	
, , , , , , , , , , , , , , , , , , , ,	6 8
-51	7
Terminal voltage 1 (Parameter)	
Tertiary variable (TV) (Parameter)	
Thickness upper layer (Parameter) 6	
Time max. electronics temperature (Parameter) 21	6
Time max. interface (Parameter) 21	4
Time max. level (Parameter)	
Time min. electronics temperature (Parameter) 21	
Time min. interface (Parameter)	
Time min. level (Parameter)	
Timestamp (Parameter)	
	8
Turn down (Parameter)	_
U Unit after linearization (Parameter) 7	'2

Upper limit 1 to 2 (Parameter)
V
Value 1 display (Parameter)
Value current output 1 to 2 (Parameter)
Value echo lost (Parameter)
Value process variable (Parameter)
W
Wizard
Define access code



www.addresses.endress.com