

Operating Instructions ORSG45

Data manager

Additional Instructions for Batch Management option



Table of contents

1	About this document	3
1.1	Document function	3
1.2	Symbols	3
1.2.1	Safety symbols	3
1.2.2	Symbols for certain types of information	3
1.3	Change history	3
2	Product description	3
3	Device configuration, application setup	4
3.1	General programming guidelines	4
3.2	Expert → Application → Batch mode	4
3.3	Expert → Inputs → Digital inputs	7
3.4	Expert → Application → Signal groups	8
3.5	Use during operation	9
3.5.1	The Batch menu	9
3.5.2	Starting/ending batches	11
3.5.3	Displaying and printing out the batches in the PC evaluation software	11
3.5.4	Automatic device readout at the end of a batch	11
3.5.5	Input using a barcode reader	12
4	Diagnostics and troubleshooting ...	13
5	Appendix	14

1 About this document

1.1 Document function

NOTICE

This manual contains an additional description for a special software option.

These additional instructions are not a substitute for the Operating Instructions pertaining to the device!

► Refer to the Operating Instructions and other documentation for detailed information.

1.2 Symbols

1.2.1 Safety symbols

DANGER

This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury.

WARNING

This symbol alerts you to a potentially dangerous situation. Failure to avoid this situation can result in serious or fatal injury.

CAUTION

This symbol alerts you to a potentially dangerous situation. Failure to avoid this situation can result in minor or medium injury.

NOTICE

This symbol alerts you to a potentially harmful situation. Failure to avoid this situation can result in damage to the product or something in its vicinity.

1.2.2 Symbols for certain types of information

Symbol	Meaning	Symbol	Meaning
	Forbidden Procedures, processes or actions that are forbidden.		Tip Indicates additional information.
	Reference to documentation		Reference to page
	Reference to graphic		Series of steps

1.3 Change history

Device software Version/date	Software modifications	Analysis software version	Version of OPC server	Operating Instructions
V2.00.00/01.2016	Original software	V1.3.0 and higher	V5.00.03 and higher	BA016310/01.16
V2.04.06/10.2022	Bug fixes	V1.6.3 and higher	V5.00.07 and higher	BA016310/02.22
V2.04.09/10.2025	Bug fixes	V1.6.3 and higher	V5.00.07 and higher	BA016310/03.25

2 Product description

Definition of the batch function:

A batch in production refers to the total of all units of a product, produced, manufactured or packed under the same conditions. A total of this type is generally assigned a unique lot number (batch number) and this number is also often marked on the products in this lot.

The batches are assigned to a fixed signal analysis in the device (batch 1 → analysis 1, batch 2 → analysis 2 etc.).

Note: If 4 batches are running in parallel, the operator cannot carry out any further analyses (e.g. daily analysis). The totalizer is always determined.

A batch can be started or stopped manually at the device, using an external keyboard, barcode reader, control input (digital input) or via remote operation (fieldbus/OPC).

At the end of the batch, a batch report (**Signal analysis**) is created with min/max/average values and quantities. This can also be printed automatically.

 The batch software also contains the Math package.

 **The following information concerning FDA 21 CFR Part 11 compliance is the responsibility of the user:**

- Incorrect data logging will result if incorrect start and stop times are entered
- Incorrect data logging will result if incorrect or no batch information is entered
- Only authorized persons (controlled by user administration) may sign a batch

3 Device configuration, application setup


3.1 General programming guidelines

1. First install and configure the device as described in the Operating Instructions BA01434O. Observe all the safety instructions!
2. Make the additional settings needed for batch mode (see the next section).
3. Configure the display, for example, select the display mode. See from Section 11 of the Operating Instructions BA01434O.

3.2 Expert → Application → Batch mode


Required settings for batch mode.



 Depending on the selected function, the device's user interface is adapted so that each time only required parameters have to be checked/set.

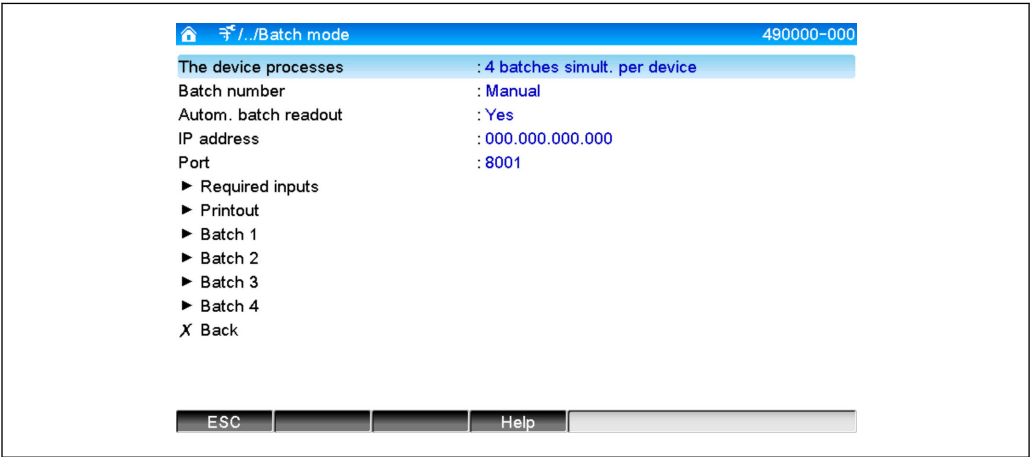

 1 Expert → Application → Batch mode

A0051337

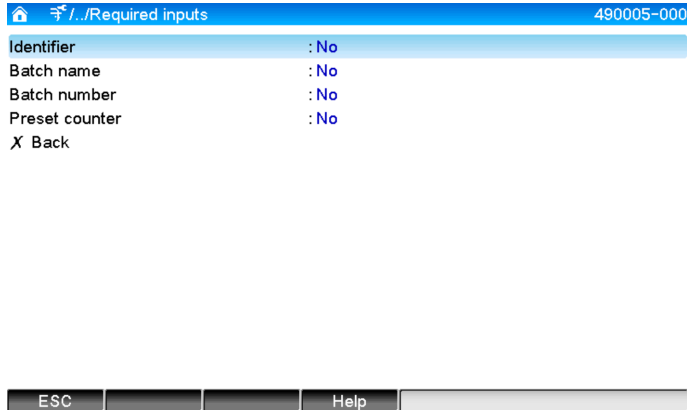"Application → Batch mode" menu items	Configurable parameters (factory settings are highlighted in bold)	Direct access code	
The device processes	The device can record up to 4 batches simultaneously. Configure how many batches the device should process simultaneously. Picklist: Switched off , 1 batch per device, x batches simult. per device	490000/000	
Batch number	Configure how the batch number is generated: Manual : You can enter any text as the batch number. Increase automatically: The batch number is automatically increased by 1 after the batch is finished.	490001/000	
Autom. batch readout	Activate this function to make the PC software automatically read out the data and print it out as soon as the batch is finished. Note : Only available if the device is connected via Ethernet and the readout automation system is started in the evaluation software. Picklist: No , Yes	490002/000	
IP address	Enter the IP address of the reader PC here. Where necessary, contact your network administrator to find out the IP address. Note : A DNS name may also be used. Factory setting: 000.000.000.000	490003/000	
Port	A connection to the reader PC is established through this communication port. Note : If your network is protected by a firewall, this port may have to be enabled. In this case, contact your network administrator. Factory setting: 8001	490004/000	
Required inputs submenu	Specify which data fields must be input before a batch can be started. A batch cannot be started until the selected required fields have been input.		
			
			
	Designation	Specify if the batch designation must be input so that a batch can be started. Picklist: No , Yes	490005/000
	Batch name	Specify if the batch name must be input so that a batch can be started. Picklist: No , Yes	490006/000
Batch number	Specify if the batch number must be input so that a batch can be started. Picklist: No , Yes	490007/000	
Preset counter	Specify whether the preset counter must be input so that a batch can be started. If No , the last preset counter is reused. Note : Only relevant if batch is ended per preset counter. Picklist: No , Yes	490008/000	

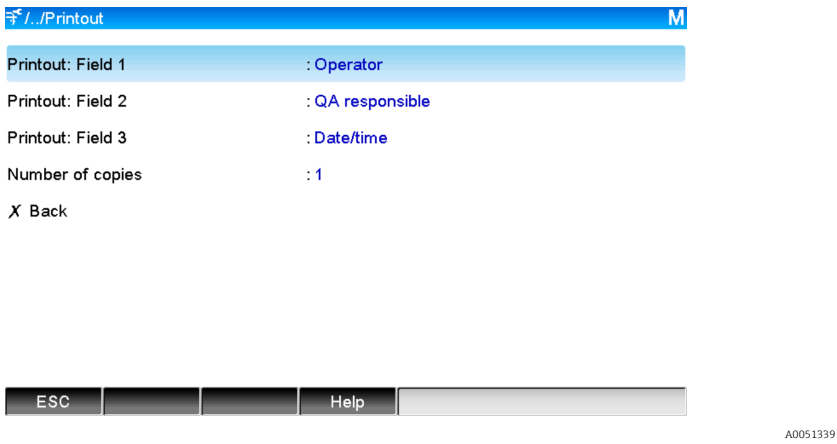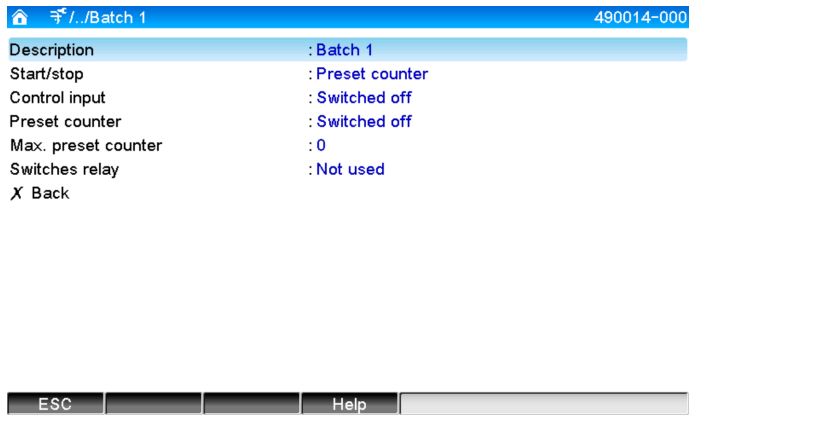"Application → Batch mode" menu items	Configurable parameters (factory settings are highlighted in bold)	Direct access code
Printout submenu	Settings for batch printout (only relevant if device has printer connected). Note: Only channels which are assigned to an active batch are printed out, i.e if Batch x or Assign all batches is configured under Application → Signal groups → Group x → Batch assignment. All other channels are disabled. Note: The batch printout can be activated in Expert → Application → Signal evaluation → Autom. printout.  ESC Help A0051339 3 Expert → Application → Batch mode, Printout submenu	
	Printout: Field 1 The batch report has 3 fields which the user can fill in individually after printing out the report. Configure the name for this field. Text entry: max. 22-digit. Factory setting: Operator	490010/000
	Printout: Field 2 The batch report has 3 fields which the user can fill in individually after printing out the report. Configure the name for this field. Text entry: max. 22-digit. Factory setting: QA responsible	490011/000
	Printout: Field 3 The batch report has 3 fields which the user can fill in individually after printing out the report. Configure the name for this field. Text entry: max. 22-digit. Factory setting: Date/Time	490012/000
	Number of copies Configure how many copies should be printed out. Picklist: 1, 2, 3	490013/000
Batch 1- 4 submenu	Batch-specific settings.  ESC Help A0051340 4 Expert → Application → Batch mode, Batch x submenu	


"Application → Batch mode" menu items	Configurable parameters (factory settings are highlighted in bold)		Direct access code
	Description	Enter a unique description for the batch here (recommended when several batches are running in parallel on the device). If no data are entered, the device generates a description automatically. Text entry: max. 16-digit.	490014/000 490014/001 490014/002 490014/003
	Start/stop	Specify how batches are started/ended. Per control input: The batch is started/ended externally via a digital control input (effect: start/stop batch x). For DIN rail: web server/fieldbus: The batch can be started/ended by operating the device, using a barcode reader or remotely (PC software, fieldbus). Preset counter: The batch can be started by operating the device, using a barcode reader or control input. The batch is ended when the counter value $\geq$ the default value.	490015/000 490015/001 490015/002 490015/003
	Control input only if Start/stop - Preset counter	Select the control input that starts the batch. Alternatively, the batch can be started via on-site operation. Note: The batch cannot be ended using this input. The assigned input is automatically preconfigured! Picklist: Switched off , Digital input x	490017/000 490017/001 490017/002 490017/003
	Control input only if Start/stop - per control input	Select the control input that starts/ends the batch. Note: The assigned input is automatically preconfigured! The input must be active during the batch. The minimum duration of the batch is one second. Picklist: Switched off , Digital input x	490017/000 490017/001 490017/002 490017/003
	Preset counter only if Start/stop - Preset counter	Select the channel that ends the batch when the quantity preset in the preset counter is reached. Note: The assigned input is automatically preconfigured! Picklist: Switched off , Analog input x, Digital input x, Maths x	490016/000 490016/001 490016/002 490016/003
	Max. preset counter only if Start/stop - Preset counter	The maximum preset counter defines the maximum value that can be entered as the preset counter value in order to prevent the entry of large incorrect values. User input: max. 8-digit.	490021/000 490021/001 490021/002 490021/003
	Default batch number only if Batch number - Automatic	Configure the default value of the batch number to which the batch number is set if it is reset via control input. User input: max. 8-digit.	490019/000 490019/001 490019/002 490019/003
	Reset batch number only if Batch number - Automatic	Select the digital input that resets the batch number to its default value. Note: The assigned input is automatically preconfigured! Picklist: Switched off , Digital input x	490020/000 490020/001 490020/002 490020/003
	Switches relay	The assigned relay is switched as long as the batch is running. Picklist: Not used , Relay x	490018/000 490018/001 490018/002 490018/003

3.3 Expert → Inputs → Digital inputs

Settings for digital inputs for batch mode.



Only settings relevant for batch mode are described here. For all the other digital input functions, see the Operating Instructions.

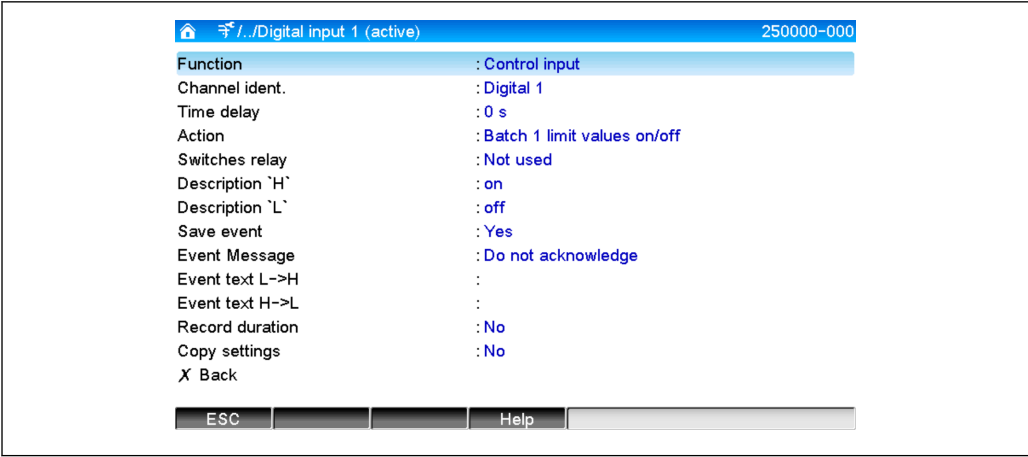

A0051341


5 Expert → Inputs → Digital inputs → Digital input x

"Inputs → Digital inputs" menu items	Configurable parameters (factory settings are highlighted in bold)	Direct access code
Function	Select the required function. Digital inputs are High active; this means the described effect is achieved by a high input. Low = -3 to +5 V, High = +12 to +30 V The following functions are available: Switched off: Digital input is not active. Control input: Various control functions can be activated for batch mode using the digital input.	250000/000 to 250000/013
Channel ident	Description of the function of this input (e.g. Batch 1 start). User input 16-digit. Factory setting: Digital x	250001/000 to 250001/013
Action	Set up the function of the control input for batch mode: Start/end batch x: Starts/stops external analysis (analysis only runs while the signal is High). Measured value acquisition for the graphic display continues. Batches are also started/ended with this function. Reset batch number x: Resets the automatically generated batch number to 0 (for Low → High change) Batch x limit values on/off: Switch the batch's limit values on/off.	250003/000 to 250003/013
Copy settings	Copies settings from actual channel to selected channel. The last two positions of the channel ident. of the target channel are replaced by its channel number.	250200/000 to 250200/013

3.4 Expert → Application → Signal groups

Settings for signal groups for batch mode.

 Only settings relevant for batch mode are described here. For all the other signal analysis functions, see the Operating Instructions.

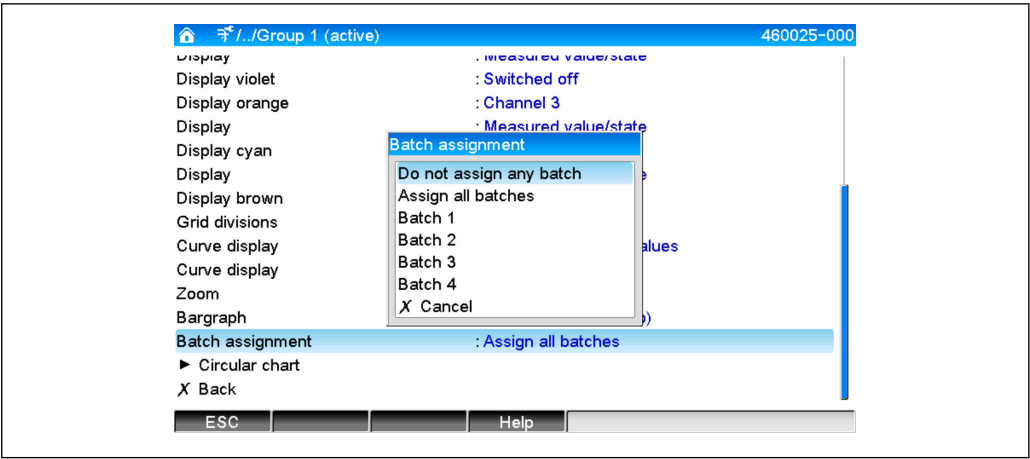

A0051342

6 Expert → Application → Signal groups → Group x

"Application → Signal groups" menu items	Configurable parameters (factory settings are highlighted in bold)	Direct access code
Batch assignment	Configure what batch this group belongs to. Notes: - Channels can be assigned to multiple batches/groups. - Only relevant for batch printout. Picklist: Do not assign any batch , Assign all batches, Batch x	460025/000 to 460025/009
Save group (only if Batch assignment - Batch x)	The group will always be saved or only when the allocated batch is active. Picklist: Only when batch is active, Always	460026/000 to 460026/009


 The modified settings do not take effect until you return to display mode (measured value display) after parameterization. Exit the operating menus by repeatedly pressing the **Back** menu item. Up to this point, the device still works with the previous data.

3.5 Use during operation

3.5.1 The Batch menu

During operation, an individual symbol is displayed for each batch at the top-right in the measured value display. A green symbol indicates the batch has started. A red symbol indicates the batch has stopped.

 Only channels which are assigned to an active batch are displayed, i.e if Batch x or **Assign all batches** is configured in under **Application → Signal groups → Group x → Batch assignment**. All other channels are disabled.

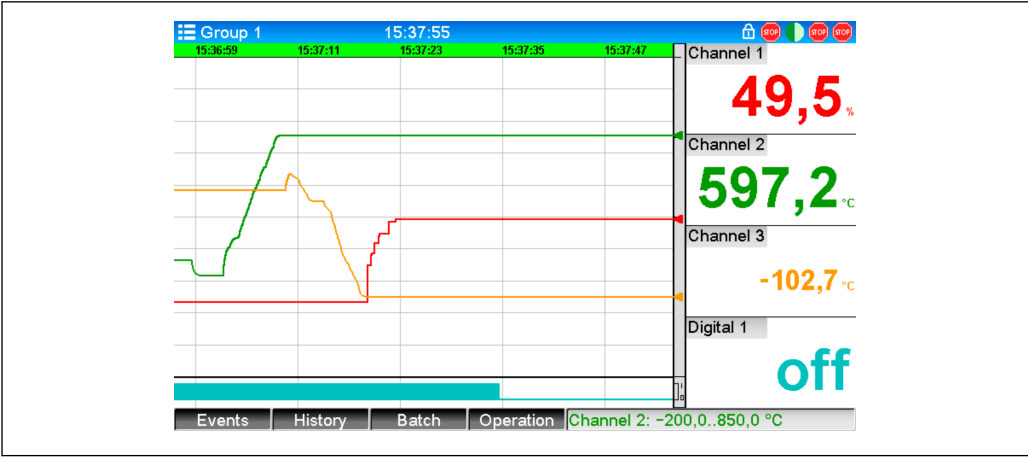

7 Batch menu

Call up the **Batch** menu by pressing softkey 3 or using **Main menu → Operation**:

8 Batch menu

This menu is used to enter batch information and control the batch.

"Batch → Batch x" menu items	Description
Status	Current status of the batch.
Designation	Text field for identifying the batch. Text entry: max. 30-digit.
Batch name	Text field for identifying the batch. Text entry: max. 30-digit.
Batch number	Enter a batch number. Text entry: max. 30-digit. Can also be generated by the device as an option. An automatically generated batch number has 9 digits max., is numerical and does not have a leading sign. Note: The function depends on the settings under Expert → Application → Batch mode → Batch number .
Preset counter	Configure the default value for the preset counter here. User input: max. 8-digit. The batch is automatically ended when the counter value ≥ the default value.
Start time	Once a batch is started, the start date and time are displayed here.
Started by	If user administration is activated, the name of the user who started the batch is displayed here.
Start or end batch	You can start or end the batch here. Note: If user administration is activated, a user must be logged on so that a batch can be started/ended.

3.5.2 Starting/ending batches

Batches are started or ended using the following:

- Control input (an individual control input for each batch)
- Operating the device (softkey **3** or under **Main menu → Operation → Batch**)
- Preset counter
- Remote access (OPC server)
- Profibus DP, Modbus, EtherNet/IP or PROFINET
- Barcode reader

An analysis is saved at the end of a batch. The analysis is displayed under **Main menu → Operation → Signal analysis → Batch x**.

Notes:

- The batch status (started or ended) is retained even after a power failure.
- There must be at least 200 ms between 2 of the same batches (stop/start).
- The minimum duration of a batch is 1 s. Batches that are shorter than this are not recorded.
- A new batch cannot be started until the old one is ended.
- The start and end of batches are recorded in the event logbook.

3.5.3 Displaying and printing out the batches in the PC evaluation software

 The analysis software must first be installed before these functions can be executed. See the Operating Instructions and information on the DVD of the PC software.

Procedure for batch read out with the PC software:

1. Start the **Readout data → Mass storage** or **Readout data → Online connection** function. Step-by-step navigation makes operation easy.
2. Over the next few steps, the device is created in the database and the data are read out.

Procedure for visualizing and printing out the batches with the PC software:

1. Start the **Visualization → New** function. Step-by-step navigation opens. Over the next few steps, the device must be selected as must the channels and batches to be visualized.
2. The curves, reports, values and events now displayed can be printed out by clicking the print icon.
3. You can use **Close** to close the visualization or save it as a template.

 Details about the functions are provided in the integrated online help of the analysis software.

3.5.4 Automatic device readout at the end of a batch

 This function is only possible if the device is connected via Ethernet. Port **8001** of the firewall must be enabled.

The following settings must be made so that the device is automatically read out at the end of a batch:

1. **At the device:**
In the main menu, under **Expert → Application → Batch mode**, set **Autom. batch readout** to **Yes**. Under **IP address** configure the IP address of the PC with the PC software installed.
2. **In the PC software:**
Start the **Data management → Automatic** function. Step-by-step navigation opens.

3. In Step 1, select **Automatic information** -> **Automatic new/edit** and **Select task:** -> **Read out device**.
4. In Step 2, select the right device.
5. In Step 3, select **Read out job** -> **Active** and **Interval: Device**. The effect of the **Additional batch triggered** function is that the device is additionally read out automatically at the selected interval (e.g. daily) after the end of the batch.
6. **Save** saves and activates the automatic function.
7. The automatic function can be stopped or restarted under **Extras** -> **Settings** -> **Automatic**.

 Details about the functions are provided in the integrated online help of the analysis software.

3.5.5 Input using a barcode reader

Batch information can be entered in two ways using a barcode reader:

Using the Batch menu:

The barcode reader can be used for the following batch information: identifier, batch name and batch number. However, the relevant input dialogs must be called up manually using the **Batch** menu.

Via command sequence as barcode:

1. **Steps:**
Read in the relevant barcode (= command sequence). Refer to the Appendix for the barcodes of the command sequences for batches 1 to 4.
2. Read in the actual data for the relevant batch.
3. The device issues a message for 30 seconds on which data were read in.

Description of the barcodes in the Appendix:

Barcode No.	Code	Function, description
①	START BATCH x	Start batch: Scanning of the barcode starts the batch. Note: If user administration is activated, a user must be logged on so that a batch can be started.
②	STOP BATCH x	Stop batch: Scanning of the barcode ends the batch. Note: If user administration is activated, a user must be logged on so that a batch can be ended.
③	BATCH x ID	Identifier: After the barcode is scanned, the designation which identifies the batch can be scanned. Max. 30-digit.
④	BATCH x NAME	Batch name: After the barcode is scanned, the batch name which identifies the batch can be scanned. Max. 30-digit.
⑤	BATCH x NO	Batch number: After the barcode is scanned, the batch number can be scanned. Max. 30-digit. Can also be generated by the device as an option. An automatically generated batch number has 9 digits max., is numerical and does not have a leading sign. Note: The function depends on the settings under Expert -> Application -> Batch mode -> Batch number .
⑥	BATCH x ENTER ALL	After the barcode is scanned, the identifier, batch name and batch number can be scanned one after another. In this way, individual scanning of barcode 3, 4 and 5 is not necessary.
⑦	BATCH x DEFAULT	Preset counter: After the barcode is scanned, the default value can be scanned. Max. 8-digit. The batch is automatically ended when the counter value $\geq$ the default value.
⑧	CANCEL	Scanning of the barcode cancels barcode entry. Note: The batch is not canceled!

 CAUTION**Failsafe mode:**

- ▶ If the relevant data are not read in within x seconds (x can be configured in the main menu under **Expert → System → Barcode reader → Timeout sequences**, 10 to 180 s, default = 30 s) after the command sequence is read in, the process is canceled without any messages.
- ▶ It is possible to read in a command sequence multiple, consecutive times. The last command sequence read in is always the valid one.

4 Diagnostics and troubleshooting

The device informs you of faults or incorrect entries using plain text on the screen. During display operation (measured value display), the error codes are displayed in the upper right-hand corner of the screen.

Version with navigator and front interfaces:

In addition, a red LED signals faults and flashes in the event of warnings or required maintenance.



Detailed error messages and troubleshooting can be found in the **Diagnostics and troubleshooting** section of the Operating Instructions.

5 Appendix

Batch 1 + 2 command sequences (code 128):

①	 \$\$\$_BATCH_1_START	①	 \$\$\$_BATCH_2_START
②	 \$\$\$_BATCH_1_STOP	②	 \$\$\$_BATCH_2_STOP
③	 \$\$\$_BATCH_1_ID	③	 \$\$\$_BATCH_2_ID
④	 \$\$\$_BATCH_1_NAME	④	 \$\$\$_BATCH_2_NAME
⑤	 \$\$\$_BATCH_1_NO	⑤	 \$\$\$_BATCH_2_NO
⑥	 \$\$\$_BATCH_1_ENTER_ALL	⑥	 \$\$\$_BATCH_2_ENTER_ALL
⑦	 \$\$\$_BATCH_1_DEFAULT	⑦	 \$\$\$_BATCH_2_DEFAULT
⑧	 \$\$\$_CANCEL	⑧	 \$\$\$_CANCEL

A0051464

Batch 3 + 4 command sequences (code 128):

①	 \$\$\$_BATCH_3_START	①	 \$\$\$_BATCH_4_START
②	 \$\$\$_BATCH_3_STOP	②	 \$\$\$_BATCH_4_STOP
③	 \$\$\$_BATCH_3_ID	③	 \$\$\$_BATCH_4_ID
④	 \$\$\$_BATCH_3_NAME	④	 \$\$\$_BATCH_4_NAME
⑤	 \$\$\$_BATCH_3_NO	⑤	 \$\$\$_BATCH_4_NO
⑥	 \$\$\$_BATCH_3_ENTER_ALL	⑥	 \$\$\$_BATCH_4_ENTER_ALL
⑦	 \$\$\$_BATCH_3_DEFAULT	⑦	 \$\$\$_BATCH_4_DEFAULT
⑧	 \$\$\$_CANCEL	⑧	 \$\$\$_CANCEL

A0051465



71758909