

Safety Instructions

Proline Prowirl 200

UKEX: II3G



Proline Prowirl 200

Table of contents

About this document 4

Associated documentation 4

Certificates and declarations 4

Manufacturer address 4

Extended order code 5

Safety instructions: General 8


Safety instructions: Installation 9

Safety instructions: Zone 0 11

Temperature tables 11

Connection values: Signal circuits 20

About this document

 The document number of these Safety Instructions (XA) must match the information on the nameplate.

Associated documentation

For an overview of the scope of the associated Technical Documentation, refer to the following:

- *Device Viewer* (www.endress.com/deviceviewer): Enter serial number from nameplate.
- *Endress+Hauser Operations app*: Enter serial number from nameplate or scan matrix code on nameplate.

To commission the device, please observe the Operating Instructions pertaining to the device:

Measuring instrument	Documentation code				
	HART	FOUNDATION Fieldbus	PROFIBUS PA	PROFINET over Ethernet-APL	Modbus TCP over Ethernet-APL
Prowirl D 200	BA01685D	BA01693D	BA01689D	BA02133D	BA02397D
Prowirl F 200	BA01686D	BA01694D	BA01690D	BA02132D	BA02398D
Prowirl O 200	BA01687D	BA01695D	BA01691D	BA02134D	BA02399D
Prowirl R 200	BA01688D	BA01696D	BA01692D	BA02135D	BA02400D

Additional documentation

Contents	Document type	Documentation code
Remote display FHX50	Special documentation	SD01007F
	Safety Instructions II2G, II2D Ex ia	<ul style="list-style-type: none">▪ XA01053F▪ XA01055F
Overvoltage Protection (OVP)	Special documentation	SD01090F
Explosion Protection	Brochure	CP00021Z/11

Please note the documentation associated with the device.

Certificates and declarations

UK Declaration of Conformity
Documentation code: UK_00357


Manufacturer address

Endress+Hauser Flowtec AG
Kägenstrasse 7
4153 Reinach BL
Switzerland

Extended
order code

The extended order code is indicated on the nameplate, which is affixed to the device in such a way that it is clearly visible. Additional information about the nameplate is provided in the associated Operating Instructions.

Structure of the extended order code

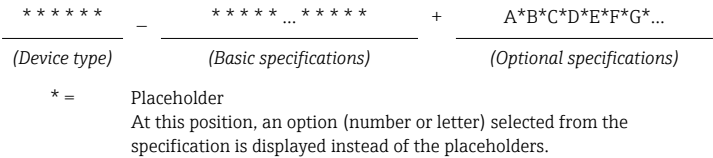

Device type

The device and the device design is defined in the "Device type" section (Product root).

Basic specifications

The features that are absolutely essential for the device (mandatory features) are specified in the basic specifications. The number of positions depends on the number of features available. The selected option of a feature can consist of several positions.

Optional specifications

The optional specifications describe additional features for the device (optional features). The number of positions depends on the number of features available. The features have a 2-digit structure to aid identification (e.g. JA). The first digit (ID) stands for the feature group and consists of a number or a letter (e.g. J = Test, Certificate). The second digit constitutes the value that stands for the feature within the group (e.g. A = 3.1 material (wetted parts), inspection certificate).

More detailed information about the device is provided in the following tables. These tables describe the individual positions and IDs in the extended order code which are relevant to hazardous locations.

Device type

Position	Order code for	Selected option	Description
1	Instrument family	7	Vortex flowmeter
2	Sensor	D, F, O, R	Sensor type
3	Transmitter	2	Transmitter type: 2-wire, compact version Remote version



Position	Order code for	Selected option	Description
4	Generation index	C	Platform generation
5, 6	Nominal diameter	D: DN 15...150 F: DN 15...300 O: DN 15...300 R: <ul style="list-style-type: none">■ Reducer DN 25...200■ Super reducer DN 40...250	Nominal diameter of sensor

Basic specifications

Position	Order code for	Selected option	Description
1, 2	Approval	UD	Ex ic ia IIC T6...T1 Ga/Gc
		UG	Ex ec IIC T6...T1 Gc ¹⁾
		UH	Ex ic IIC T6...T1 Gc ²⁾

- 1) The labeling changes according to whether "Display; operation" = "L" or "M": Ex ec|ia Ga| IIC T6...T1 Gc
- 2) The labeling changes according to whether "Display; operation" = "L" oder "M": Ex ic|ia Ga| IIC T6...T1 Gc

Position	Order code for		Description
3	Output; Input	A	4-20mA HART
		B	4-20mA HART, Pulse/frequency/switch output
		C	4-20mA HART + 4-20mA analog
		D	4-20mA HART, pulse/frequency/switch output; 4-20mA input
		E	FOUNDATION Fieldbus, Pulse/frequency/switch output
		G	PROFIBUS PA, Pulse/frequency/switch output
		S	PROFINET over Ethernet-APL/SPE, 10Mbit/s
		T	Modbus TCP over Ethernet-APL/SPE, 10Mbit/s

Position	Order code for		Description
4	Display; Operation	A	W/o; via communication
		C	SD02 4-line; push buttons + data backup function
		E	SD03 4-line, illum.; touch control + data backup function
		L	Prepared for display FHX50 + M12 connection ¹⁾
		M	Prepared for display FHX50 + custom connection ¹⁾
8, 9	Sensor version; DSC sensor; measuring tube  Only available for sensors F, O, R with the HART communication protocol.	DA	Mass steam; 316L; 316L (integrated pressure/temperature measurement), -200 to +400 °C (-328 to +750 °F)
		DB	Mass gas/liquid; 316L; 316L (integrated pressure/temperature measurement), -40 to +260 °C (-40 to +500 °F)
		DC	Mass steam; Alloy 718; 316L (integrated pressure/temperature measurement), -200 to +400 °C (-328 to +750 °F)
		DD	Mass gas/liquid; Alloy 718; 316L (integrated pressure/temperature measurement), -40 to +100 °C (-40 to +212 °F)
11	Pressure component  Only available for sensors F, O, R with the HART communication protocol.	A	Not used
		B	Pressure measuring cell 2bar/29psi abs
		C	Pressure measuring cell 4bar/58psi abs
		D	Pressure measuring cell 10bar/145psi abs
		E	Pressure measuring cell 40bar/580psi abs
		F	Pressure measuring cell 100bar/1450psi abs
		G	Pressure measuring cell 160bar/2320psi abs
	Device Model	A1	1

1) FHX50 is separately approved.

Optional specifications

ID	Order code for	Selected option	Description
Jx	Test, certificate	JN	Ambient temperature transmitter -50 °C
Nx	Accessory mounted	NA	Overvoltage Protection (OVP)

Safety
instructions:
General

- Staff must meet the following conditions for mounting, electrical installation, commissioning and maintenance of the device:
 - Be suitably qualified for their role and the tasks they perform
 - Be trained in explosion protection
 - Be familiar with national regulations or guidelines (e.g. EN 60079-14)
- Install the device according to the manufacturer's instructions and national regulations.
- Do not operate the device outside the specified electrical, thermal and mechanical parameters.
- Only use the device in media to which the wetted materials have sufficient durability.
- Refer to the temperature tables for the relationship between the permitted ambient temperature for the sensor and/or transmitter, depending on the range of application, and the temperature classes.
- Alterations to the device can affect the explosion protection and must be carried out by staff authorized to perform such work by Endress+Hauser.
- Observe all the technical data of the device (see nameplate).
- Avoid electrostatic charge (e.g. caused by friction, cleaning, maintenance, strong currents in the medium):
On the attached stainless steel nameplate and on painted metallic housings that are not integrated into the local potential equalization system.

Safety instructions: Installation

- Continuous service temperature of the connecting cable: –40 to +80 °C (–50 to +80 °C for optional specifications, ID Jx (Test, Certificate) = JN); in accordance with the range of service temperature taking into account additional influences of the process conditions ($T_{a,min}$ and $T_{a,max} + 20\text{ K}$).
- Only use certified cable glands suitable for the application. Observe selection criteria as per EN 60079-14.
- When the measuring device is connected, attention must be paid to the type of protection at the transmitter.
- In potentially explosive atmospheres:
 - Do not disconnect the electrical connection of the power supply circuit when energized.
 - Do not open the connection compartment cover when the device is energized.

Ex ec type of protection

- In potentially explosive atmospheres: Do not disconnect the electrical connection of the power supply circuit when energized.
- Seal unused entries with approved blanking elements that correspond to the type of protection. The plastic transport sealing plug does not meet this requirement and must therefore be replaced during installation.
- Only use certified cable entries and blanking elements. The metal cable entries, extensions and sealing plugs supplied meet this requirement.

Basic specification, position 3 (Output; Input) = S, T

- Only install in systems that are limited to safe extra-low voltage such as SELV, PELV, ES1 or Class 2.
- Only one conductor per terminal is allowed.

Basic specification, position 8, 9 (sensor version; DSC sensor; measuring tube) = DA, DB, DC, DD and position 11 (pressure component) = B, C, D, E, F, G

- The maximum medium temperature is limited for device versions with a pressure component that is installed directly on the sensor F, O, R:
 - To 40 °C for T6 and T5
 - To 90 °C for T4 and T1
- In the case of T4 ... T1 and medium temperatures > 90 °C the pressure component DPC21 must be installed using a spacer tube between the pressure component and the sensor F, O, R.
 - The spacer tube must have a minimum length of 50 cm (19.7 in).
 - The spacer tube supplied meets this requirement.

Intrinsic safety

- Observe the guidelines for interconnecting intrinsically safe circuits (e.g. EN 60079-14 , proof of intrinsic safety).
- The intrinsically safe input power circuit of the device is isolated from ground. If the device is only equipped with one input, the dielectric strength of the input is at least 500 V_{rms}. If the device is equipped with more than one input, the dielectric strength of each individual input to ground is at least 500 V_{rms}, and the dielectric strength of the inputs vis-à-vis one another is also at least 500 V_{rms}.
- The device can be connected to the Endress+Hauser FXA291 service tool: refer to the Operating Instructions.
- The device can be connected to the remote display FHX50 with explosion protection; refer to the Special Documentation and Ex documentation.

Basic specification, position 3 (Output; input) = A, B, C, D, E, G , S, T:

When the intrinsically safe Ex ic circuits of the device are connected to certified intrinsically safe circuits of Category Ex ic for Equipment Groups IIB, the type of protection changes from Ex ic IIC to Ex ic IIB.

Potential equalization

- Integrate the device into the potential equalization .
- If the ground connection has been established via the pipe as specified, it is also possible to integrate the sensor into the potential equalization system via the pipe.

Overvoltage protection

Optional specification, ID Nx (Accessory Mounted) = NA

- Minimum ambient temperature when using Overvoltage Protection (OVP): -40 °C
- When using the internal overvoltage protection: Reduce the admissible ambient temperature at the housing by 2 K.
- For installations which require overvoltage protection to comply with national regulations or standards, install the device using overvoltage protection (e.g. HAW56x from Endress+Hauser).
- Observe the safety instructions of the overvoltage protection.
- If an overvoltage protection according to against atmospheric over voltages is required: no other circuits may leave the housing during normal operation without additional measures.
- The intrinsically safe input power circuit of the device is isolated from ground. If the device is only equipped with one input, the dielectric strength of the input is at least 290 V_{rms}. If the device is equipped with more than one input, the dielectric strength of each individual input to ground is at least 290 V_{rms}, and the dielectric strength of the inputs vis-à-vis one another is also at least 290 V_{rms}.

Safety instructions:
Zone 0

Basic specification, position 1, 2 (Approval) = UD

Install the transmitter electronics in Zone 2. For measuring instruments with Ga/Gc the zone 0 is permitted in the measuring tube.

Temperature tables


Minimum ambient temperature

Basic specification, position 3 (Output; input) = A, B, C, D, E, G , S, T:

$T_{a, \min} = -40\text{ }^{\circ}\text{C}$

Basic specification, position 3 (Output; Input) = A, B, D in conjunction with optional specification, ID Jx (Test, Certificate) = JN:

$T_{a, \min} = -50\text{ }^{\circ}\text{C}$

(Not permitted in conjunction with optional specification, ID Nx (Accessory Mounted) = NA →  10)

Maximum ambient temperature

$T_{a, \max}$ depending on temperature class, maximum medium temperature and device-specific features. See the corresponding temperature tables.

Compact version

$T_{a, \max}$	+70 °C
---------------	--------

Sensor remote version

$T_{a, \max}$	+85 °C
---------------	--------

Transmitter remote version

Basic specification, position 3 Output; Input ¹⁾	Basic specification, position 1, 2 Approval	$T_{a, \max}$ [°C]		
		T6 [85 °C]	T5 [100 °C]	T4 [135 °C]
A	all	40	60	75
B	UD, UH	35 ²⁾	50 ³⁾	70 ⁴⁾
	UG, IG	40	55	70 ⁴⁾
C	all	40	55	70 ⁵⁾
D	all	35	50	65

Basic specification, position 3 Output; Input ¹⁾	Basic specification, position 1, 2 Approval	T _{a, max} [°C]		
		T6 [85 °C]	T5 [100 °C]	T4 [135 °C]
E G	all	40	55	70 ⁵⁾
S T	all	40	55	65

- 1) The following applies for installations with overvoltage protection in conjunction with basic specification, position 1, 2 (approval) = UD, UH: $T_{a, max} = T_{a, max} - 2\text{ K}$
- 2) $T_{a, max} = 40\text{ °C}$ for pulse/frequency/switch output $P_i = 0.85\text{ W}$
- 3) $T_{a, max} = 60\text{ °C}$ for pulse/frequency/switch output $P_i = 0.85\text{ W}$
- 4) $T_{a, max} = 75\text{ °C}$ for pulse/frequency/switch output $P_i = 0.85\text{ W}$
- 5) $T_{a, max} = 75\text{ °C}$ for pulse/frequency/switch output $P_i = 0\text{ W}$

Minimum medium temperature

The following relationship of ambient temperature to minimum medium temperature applies when $T_{m, min} < -50\text{ °C}$

T _{m, min} [°C]	-50	-100	-150	-200
T _{a, min} [°C]	-50	-47	-44	-39

Maximum medium temperature compact version

$T_{m, \max}$ See the corresponding temperature tables.

Basic specification, position 3 (output; input) = A

Version with max. $T_{m, \max}$ range = 280 °C						
$T_{a, \max}$ [°C]	$T_{m, \max}$					
	T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
40 ¹⁾	80 ²⁾	95 ²⁾	130 ²⁾	195 ²⁾	280 ²⁾	280 ²⁾
60 ¹⁾	–	95 ^{3) 2)}	130 ²⁾	195 ²⁾	280 ²⁾	280 ²⁾
65	–	–	130 ²⁾	195 ²⁾	280 ²⁾	280 ²⁾
70	–	–	130 ²⁾	130 ²⁾	130 ²⁾	130 ²⁾

- 1) The following applies for basic specification, position 1, 2 (Approval) = UD, UH: The ambient temperature changes to $T_{a, \max} = T_{a, \max} - 2$ K for installations with overvoltage protection in conjunction with temperature classes T5 and T6.
- 2) For device versions with a pressure component that is installed directly on the sensor F, O, R, the maximum medium temperature is limited to 40 °C for T6 ...T5 and to 90 °C for T4 ... T1. In the case of T4 ... T1 and medium temperatures > 90 °C, the pressure component DPC21 must be installed using a spacer tube between the pressure component and the sensor F, O, R. The length of the spacer tube must be at least 50 cm (19.7 in).
- 3) $T_{a, \max} = 55$ °C for device versions with pressure component option DA, DB, DC, DD.

Version with max. $T_{m, \max}$ range = 440 °C						
$T_{a, \max}$ [°C]	$T_{m, \max}$					
	T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
40 ¹⁾	80 ²⁾	95 ²⁾	130 ²⁾	195 ²⁾	290 ²⁾	440 ²⁾
60 ¹⁾	–	95 ^{3) 2)}	130 ²⁾	195 ²⁾	290 ²⁾	440 ²⁾
70	–	–	130 ²⁾	195 ²⁾	290 ²⁾	440 ²⁾

- 1) The following applies for basic specification, position 1, 2 (Approval) = UD, UH: The ambient temperature changes to $T_{a, \max} = T_{a, \max} - 2$ K for installations with overvoltage protection in conjunction with temperature classes T5 and T6.
- 2) For device versions with a pressure component that is installed directly on the sensor F, O, R, the maximum medium temperature is limited to 40 °C for T6 ...T5 and to 90 °C for T4 ... T1. In the case of T4 ... T1 and medium temperatures > 90 °C, the pressure component DPC21 must be installed using a spacer tube between the pressure component and the sensor F, O, R. The length of the spacer tube must be at least 50 cm (19.7 in).
- 3) $T_{a, \max} = 55$ °C for device versions with pressure component option DA, DB, DC, DD.

Basic specification, position 3 (output; input) = B

Basic specification, position 1, 2 (Approval) = UD, UH						
Version with max. $T_{m, \max \text{ range}} = 280^\circ\text{C}$						
$T_{a, \max}$ [°C]	$T_{m, \max}$					
	T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
35 ^{1) 2)}	80 ³⁾	95 ³⁾	130 ³⁾	195 ³⁾	280 ³⁾	280 ³⁾
50 ^{1) 4)}	–	95 ³⁾	130 ³⁾	195 ³⁾	280 ³⁾	280 ³⁾
60	–	–	130 ³⁾	195 ³⁾	280 ³⁾	280 ³⁾
65	–	–	130 ³⁾	195 ³⁾	280 ^{3) 5)}	280 ^{3) 5)}
70	–	–	130 ³⁾	195 ^{3) 6)}	280 ⁶⁾	280 ⁶⁾

- 1) The ambient temperature changes for installations with overvoltage protection in conjunction with temperature classes T5 and T6: $T_{a, \max} = T_{a, \max} - 2 \text{ K}$
- 2) $T_{a, \max} = 40^\circ\text{C}$ for pulse/frequency/switch output $P_i = 0.85 \text{ W}$
- 3) For device versions with a pressure component that is installed directly on the sensor F, O, R, the maximum medium temperature is limited to 40°C for T6 ...T5 and to 90°C for T4 ... T1. In the case of T4 ... T1 and medium temperatures $> 90^\circ\text{C}$, the pressure component DPC21 must be installed using a spacer tube between the pressure component and the sensor F, O, R. The length of the spacer tube must be at least 50 cm (19.7 in).
- 4) $T_{a, \max} = 55^\circ\text{C}$ for pulse/frequency/switch output $P_i = 0.85 \text{ W}$
- 5) $T_{a, \max} = 65^\circ\text{C}$ for pulse/frequency/switch output $P_i = 0.7 \text{ W}$
- 6) $T_{a, \max} = 70^\circ\text{C}$ for pulse/frequency/switch output $P_i = 0.7 \text{ W}$

Basic specification, position 1, 2 (Approval) = UD, UH						
Version with max. $T_{m, \max \text{ range}} = 440^\circ\text{C}$						
$T_{a, \max}$ [°C]	$T_{m, \max}$					
	T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
35 ^{1) 2)}	80 ³⁾	95 ³⁾	130 ³⁾	195 ³⁾	290 ³⁾	440 ³⁾
50 ^{1) 4)}	–	95 ³⁾	130 ³⁾	195 ³⁾	290 ³⁾	440 ³⁾
65	–	–	130 ³⁾	195 ³⁾	290 ³⁾	440 ³⁾
70	–	–	130 ³⁾	195 ^{5) 3)}	290 ^{3) 5)}	440 ^{3) 5)}

- 1) The ambient temperature changes for installations with overvoltage protection in conjunction with temperature classes T5 and T6: $T_{a, \max} = T_{a, \max} - 2 \text{ K}$
- 2) $T_{a, \max} = 40^\circ\text{C}$ for pulse/frequency/switch output $P_i = 0.85 \text{ W}$
- 3) For device versions with a pressure component that is installed directly on the sensor F, O, R, the maximum medium temperature is limited to 40°C for T6 ...T5 and to 90°C for T4 ... T1. In the case of T4 ... T1 and medium temperatures $> 90^\circ\text{C}$, the pressure component DPC21 must be installed using a spacer tube between the

pressure component and the sensor F, O, R. The length of the spacer tube must be at least 50 cm (19.7 in).

- 4) $T_{a,max} = 55\text{ °C}$ for pulse/frequency/switch output $P_i = 0.85\text{ W}$
- 5) $T_{a,max} = 70\text{ °C}$ for pulse/frequency/switch output $P_i = 0.85\text{ W}$

Basic specification, position 1, 2 (Approval) = UG

Version with max. $T_{m, max\ range} = 280\text{ °C}$

$T_{a, max}$ [°C]	$T_{m, max}$					
	T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
40	80 ¹⁾	95 ¹⁾	130 ¹⁾	195 ¹⁾	280 ¹⁾	280 ¹⁾
55	–	95 ¹⁾	130 ¹⁾	195 ¹⁾	280 ¹⁾	280 ¹⁾
65	–	–	130 ¹⁾	195 ¹⁾	280 ^{1) 2)}	280 ^{1) 2)}
70	–	–	130 ¹⁾	195 ^{1) 3)}	280 ^{3) 1)}	280 ^{3) 1)}

- 1) For device versions with a pressure component that is installed directly on the sensor F, O, R, the maximum medium temperature is limited to 40 °C for T6 ...T5 and to 90 °C for T4 ... T1. In the case of T4 ... T1 and medium temperatures > 90 °C, the pressure component DPC21 must be installed using a spacer tube between the pressure component and the sensor F, O, R. The length of the spacer tube must be at least 50 cm (19.7 in).
- 2) $T_{a,max} = 65\text{ °C}$ for pulse/frequency/switch output $P_i = 0.7\text{ W}$
- 3) $T_{a, max} = 70\text{ °C}$ for pulse/frequency/switch output $P_i = 0.7\text{ W}$

Basic specification, position 1, 2 (Approval) = UG

Version with max. $T_{m, max\ range} = 440\text{ °C}$

$T_{a, max}$ [°C]	$T_{m, max}$					
	T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
40	80 ¹⁾	95 ¹⁾	130 ¹⁾	195 ¹⁾	290 ¹⁾	440 ¹⁾
55	–	95 ¹⁾	130 ¹⁾	195 ¹⁾	290 ¹⁾	440 ¹⁾
65	–	–	130 ¹⁾	195 ¹⁾	290 ¹⁾	440 ¹⁾
70	–	–	130 ¹⁾	195 ^{1) 2)}	290 ^{1) 2)}	440 ^{1) 2)}

- 1) For device versions with a pressure component that is installed directly on the sensor F, O, R, the maximum medium temperature is limited to 40 °C for T6 ...T5 and to 90 °C for T4 ... T1. In the case of T4 ... T1 and medium temperatures > 90 °C, the pressure component DPC21 must be installed using a spacer tube between the pressure component and the sensor F, O, R. The length of the spacer tube must be at least 50 cm (19.7 in).
- 2) $T_{a,max} = 70\text{ °C}$ for pulse/frequency/switch output $P_i = 0.85\text{ W}$

Basic specification, position 3 (output; input) = C

Version with max. $T_{m, \max}$ range = 280 °C						
$T_{a, \max}$ [°C]	$T_{m, \max}$					
	T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
40 ¹⁾	80 ²⁾	95 ²⁾	130 ²⁾	195 ²⁾	280 ²⁾	280 ²⁾
55 ¹⁾	–	95 ²⁾	130 ²⁾	195 ²⁾	280 ²⁾	280 ²⁾
60	–	–	130 ²⁾	195 ²⁾	280 ²⁾	280 ²⁾
65	–	–	130 ²⁾	195 ²⁾	280 ^{2) 3)}	280 ^{2) 3)}
70	–	–	130 ²⁾	130 ²⁾	130 ²⁾	130 ²⁾

- 1) The following applies for basic specification, position 1, 2 (Approval) = UD, UH: The ambient temperature changes to $T_{a, \max} = T_{a, \max} - 2$ K for installations with overvoltage protection in conjunction with temperature classes T5 and T6.
- 2) For device versions with a pressure component that is installed directly on the sensor F, O, R, the maximum medium temperature is limited to 40 °C for T6 ...T5 and to 90 °C for T4 ... T1. In the case of T4 ... T1 and medium temperatures > 90 °C, the pressure component DPC2.1 must be installed using a spacer tube between the pressure component and the sensor F, O, R. The length of the spacer tube must be at least 50 cm (19.7 in).
- 3) $T_{a, \max} = 65$ °C for pulse/frequency/switch output $P_1 = 0$ W

Version with max. $T_{m, \max}$ range = 440 °C						
$T_{a, \max}$ [°C]	$T_{m, \max}$					
	T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
40 ¹⁾	80 ²⁾	95 ²⁾	130 ²⁾	195 ²⁾	290 ²⁾	440 ²⁾
55 ¹⁾	–	95 ²⁾	130 ²⁾	195 ²⁾	290 ²⁾	440 ²⁾
65	–	–	130 ²⁾	195 ²⁾	290 ²⁾	440 ²⁾
70	–	–	130 ²⁾	195 ^{2) 3)}	290 ^{3) 2)}	440 ^{3) 2)}

- 1) The following applies for basic specification, position 1, 2 (Approval) = UD, UH: The ambient temperature changes to $T_{a, \max} = T_{a, \max} - 2$ K for installations with overvoltage protection in conjunction with temperature classes T5 and T6.
- 2) For device versions with a pressure component that is installed directly on the sensor F, O, R, the maximum medium temperature is limited to 40 °C for T6 ...T5 and to 90 °C for T4 ... T1. In the case of T4 ... T1 and medium temperatures > 90 °C, the pressure component DPC2.1 must be installed using a spacer tube between the pressure component and the sensor F, O, R. The length of the spacer tube must be at least 50 cm (19.7 in).
- 3) $T_{a, \max} = 70$ °C for pulse/frequency/switch output $P_1 = 0$ W

Basic specification, position 3 (output; input) = D

Version with max. $T_{m, \max}$ range = 280 °C						
$T_{a, \max}$ [°C]	$T_{m, \max}$					
	T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
35 ¹⁾	80 ²⁾	95 ²⁾	130 ²⁾	195 ²⁾	280 ²⁾	280 ²⁾
50 ¹⁾	–	95 ²⁾	130 ²⁾	195 ²⁾	280 ²⁾	280 ²⁾
55	–	–	–	195 ²⁾	280 ²⁾	280 ²⁾
60	–	–	–	195 ²⁾	195 ²⁾	195 ²⁾

- 1) The following applies for basic specification, position 1, 2 (Approval) = UD, UH: The ambient temperature changes to $T_{a, \max} = T_{a, \max} - 2 \text{ K}$ for installations with overvoltage protection in conjunction with temperature classes T5 and T6.
- 2) For device versions with a pressure component that is installed directly on the sensor F, O, R, the maximum medium temperature is limited to 40 °C for T6 ...T5 and to 90 °C for T4 ... T1. In the case of T4 ... T1 and medium temperatures > 90 °C, the pressure component DPC21 must be installed using a spacer tube between the pressure component and the sensor F, O, R. The length of the spacer tube must be at least 50 cm (19.7 in).

Version with max. $T_{m, \max}$ range = 440 °C						
$T_{a, \max}$ [°C]	$T_{m, \max}$					
	T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
35 ¹⁾	80 ²⁾	95 ²⁾	130 ²⁾	195 ²⁾	290 ²⁾	440 ²⁾
50 ¹⁾	–	95 ²⁾	130 ²⁾	195 ²⁾	290 ²⁾	440 ²⁾
55	–	–	–	195 ²⁾	290 ²⁾	440 ²⁾
60	–	–	–	195 ²⁾	290 ²⁾	440 ²⁾
65	–	–	–	–	290 ²⁾	290 ²⁾

- 1) The following applies for basic specification, position 1, 2 (Approval) = UD, UH: The ambient temperature changes to $T_{a, \max} = T_{a, \max} - 2 \text{ K}$ for installations with overvoltage protection in conjunction with temperature classes T5 and T6.
- 2) For device versions with a pressure component that is installed directly on the sensor F, O, R, the maximum medium temperature is limited to 40 °C for T6 ...T5 and to 90 °C for T4 ... T1. In the case of T4 ... T1 and medium temperatures > 90 °C, the pressure component DPC21 must be installed using a spacer tube between the pressure component and the sensor F, O, R. The length of the spacer tube must be at least 50 cm (19.7 in).

Basic specification, position 3 (output; input) = E, G

Version with max. $T_{m, \max}$ range = 280 °C						
$T_{a, \max}$ [°C]	$T_{m, \max}$					
	T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
40 ¹⁾	80 ²⁾	95 ²⁾	130 ²⁾	195 ²⁾	280 ²⁾	280 ²⁾
50 ¹⁾	–	95 ²⁾	130 ^{2) 3)}	195 ^{2) 3)}	280 ^{2) 3)}	280 ^{2) 3)}
60	–	–	130 ²⁾	195 ²⁾	280 ²⁾	280 ²⁾
65	–	–	130 ²⁾	195 ²⁾	280 ^{2) 4)}	280 ^{2) 4)}
70	–	–	130 ²⁾	195 ^{2) 5)}	280 ^{2) 5)}	280 ^{2) 5)}

- 1) The following applies for basic specification, position 1, 2 (Approval) = UD, UH: The ambient temperature changes to $T_{a, \max} = T_{a, \max} - 2$ K for installations with overvoltage protection in conjunction with temperature classes T5 and T6.
- 2) For device versions with a pressure component that is installed directly on the sensor F, O, R, the maximum medium temperature is limited to 40 °C for T6 ...T5 and to 90 °C for T4 ... T1. In the case of T4 ... T1 and medium temperatures > 90 °C, the pressure component DPC2.1 must be installed using a spacer tube between the pressure component and the sensor F, O, R. The length of the spacer tube must be at least 50 cm (19.7 in).
- 3) $T_{a, \max} = 60$ °C for pulse/frequency/switch output $P_1 = 0$ W
- 4) $T_{a, \max} = 65$ °C for pulse/frequency/switch output $P_1 = 0$ W
- 5) $T_{a, \max} = 70$ °C for pulse/frequency/switch output $P_1 = 0$ W

Version with max. $T_{m, \max}$ range = 440 °C						
$T_{a, \max}$ [°C]	$T_{m, \max}$					
	T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
40 ¹⁾	80 ²⁾	95 ²⁾	130 ²⁾	195 ²⁾	290 ²⁾	440 ²⁾
50 ¹⁾	–	95 ²⁾	130 ^{2) 3)}	195 ^{2) 3)}	290 ^{2) 3)}	440 ^{2) 3)}
65	–	–	130 ²⁾	195 ²⁾	290 ²⁾	440 ²⁾
70	–	–	130 ²⁾	195 ^{2) 4)}	290 ^{4) 2)}	440 ^{4) 2)}

- 1) The following applies for basic specification, position 1, 2 (Approval) = UD, UH: The ambient temperature changes to $T_{a, \max} = T_{a, \max} - 2$ K for installations with overvoltage protection in conjunction with temperature classes T5 and T6.
- 2) For device versions with a pressure component that is installed directly on the sensor F, O, R, the maximum medium temperature is limited to 40 °C for T6 ...T5 and to 90 °C for T4 ... T1. In the case of T4 ... T1 and medium temperatures > 90 °C, the pressure component DPC2.1 must be installed using a spacer tube between the pressure component and the sensor F, O, R. The length of the spacer tube must be at least 50 cm (19.7 in).
- 3) $T_{a, \max} = 60$ °C for pulse/frequency/switch output $P_1 = 0$ W
- 4) $T_{a, \max} = 70$ °C for pulse/frequency/switch output $P_1 = 0$ W

Basic specification, position 3 (output; input) = S, T

Version with max. $T_{m, \max}$ range = 280 °C						
$T_{a, \max}$ [°C]	$T_{m, \max}$					
	T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
40 ¹⁾	80 ²⁾	95 ²⁾	130 ²⁾	195 ²⁾	280 ²⁾	280 ²⁾
50 ¹⁾	–	95 ²⁾	130 ²⁾	195 ²⁾	280 ²⁾	280 ²⁾
55	–	–	130 ²⁾	195 ²⁾	280 ²⁾	280 ²⁾
60	–	–	130 ²⁾	195 ²⁾	280 ²⁾	280 ²⁾

- 1) The following applies for basic specification, position 1, 2 (Approval) = UD, UH: The ambient temperature changes to $T_{a, \max} = T_{a, \max} - 2 \text{ K}$ for installations with overvoltage protection in conjunction with temperature classes T5 and T6.
- 2) For device versions with a pressure component that is installed directly on the sensor F, O, R, the maximum medium temperature is limited to 40 °C for T6 ...T5 and to 90 °C for T4 ... T1. In the case of T4 ... T1 and medium temperatures > 90 °C, the pressure component DPC21 must be installed using a spacer tube between the pressure component and the sensor F, O, R. The length of the spacer tube must be at least 50 cm (19.7 in).

Version with max. $T_{m, \max}$ range = 440 °C						
$T_{a, \max}$ [°C]	$T_{m, \max}$					
	T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
40 ¹⁾	80 ²⁾	95 ²⁾	130 ²⁾	195 ²⁾	290 ²⁾	440 ²⁾
50 ¹⁾	–	95 ²⁾	130 ²⁾	195 ²⁾	290 ²⁾	440 ²⁾
60	–	–	130 ²⁾	195 ²⁾	290 ²⁾	440 ²⁾

- 1) The following applies for basic specification, position 1, 2 (Approval) = UD, UH: The ambient temperature changes to $T_{a, \max} = T_{a, \max} - 2 \text{ K}$ for installations with overvoltage protection in conjunction with temperature classes T5 and T6.
- 2) For device versions with a pressure component that is installed directly on the sensor F, O, R, the maximum medium temperature is limited to 40 °C for T6 ...T5 and to 90 °C for T4 ... T1. In the case of T4 ... T1 and medium temperatures > 90 °C, the pressure component DPC21 must be installed using a spacer tube between the pressure component and the sensor F, O, R. The length of the spacer tube must be at least 50 cm (19.7 in).

Maximum medium temperature remote version - sensor

T_{m, max} See the corresponding temperature tables.

Version with max. T _{m, max range} = 280 °C						
T _{a, max} [°C]	T _{m, max}					
	T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
55	80 ^{1) 2)}	95 ²⁾	130 ²⁾	195 ²⁾	280 ²⁾	280 ²⁾
70	–	95 ^{2) 3)}	130 ²⁾	195 ²⁾	280 ²⁾	280 ²⁾
85	–	–	130 ²⁾	195 ²⁾	280 ²⁾	280 ²⁾

- 1) T_{a, max} = 40 °C for device versions with pressure component option DA, DB, DC, DD.
- 2) For device versions with a pressure component that is installed directly on the sensor F, O, R, the maximum medium temperature is limited to 40 °C for T6 ...T5 and to 90 °C for T4 ... T1. In the case of T4 ... T1 and medium temperatures > 90 °C, the pressure component DPC21 must be installed using a spacer tube between the pressure component and the sensor F, O, R. The length of the spacer tube must be at least 50 cm (19.7 in).
- 3) T_{a, max} = 55 °C for device versions with pressure component option DA, DB, DC, DD.

Version with max. T _{m, max range} = 440 °C						
T _{a, max} [°C]	T _{m, max}					
	T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
55	80 ^{1) 2)}	95 ²⁾	130 ²⁾	195 ²⁾	290 ²⁾	440 ²⁾
70	–	95 ^{2) 3)}	130 ²⁾	195 ²⁾	290 ²⁾	440 ²⁾
85	–	–	130 ²⁾	195 ²⁾	290 ²⁾	440 ²⁾

- 1) T_{a, max} = 40 °C for device versions with pressure component option DA, DB, DC, DD.
- 2) For device versions with a pressure component that is installed directly on the sensor F, O, R, the maximum medium temperature is limited to 40 °C for T6 ...T5 and to 90 °C for T4 ... T1. In the case of T4 ... T1 and medium temperatures > 90 °C, the pressure component DPC21 must be installed using a spacer tube between the pressure component and the sensor F, O, R. The length of the spacer tube must be at least 50 cm (19.7 in).
- 3) T_{a, max} = 55 °C for device versions with pressure component option DA, DB, DC, DD.

Connection
values: Signal
circuits

The following tables contain specifications which are dependent on the transmitter type and its input and output assignment. Compare the following specifications with those on the nameplate of the transmitter.

Cable specification: Connecting cable for remote version

Basic specification (approval) 1,2 = UD, UH

The sensor cable connection between the sensor and the transmitter has type of protection Ex ic.

Cable parameter: $L/R \leq 38.2 \mu\text{H}/\Omega$

The cable supplied by Endress+Hauser complies with the specifications.

Cable specification for pressure measuring cell connecting cable


Basic specification (approval) 1,2 = UD, UH

The cable connection between the transmitter and pressure component or between the sensor and pressure component has type of protection Ex ic.

Cable parameter: $L/R \leq 38.2 \mu\text{H}/\Omega$

The cable supplied by Endress+Hauser complies with the specifications.

Connecting the transmitter

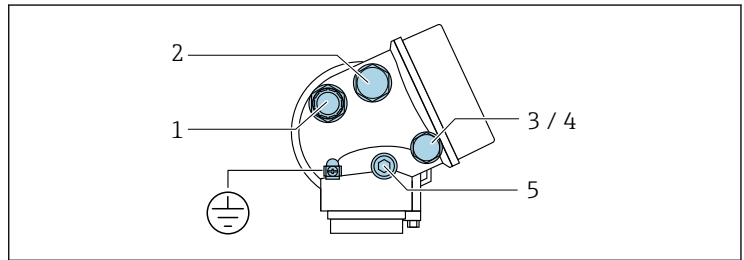

A0034702



Position		Basic specification, position 1, 2: Approval	Type of protection used for cable entry	Description
1	Cable entry for output 1	UG UD, UH	Ex ec Ex ic	The following applies for devices with basic specification, position 1, 2 (approval) = UG: In the case of device versions with a plastic transport sealing plug, this plug does not meet the explosion protection requirements and must be replaced during installation by a suitable entry that meets the approval specifications. In the case of device versions with a cable entry, this entry has a separate component approval and meets the requirements of the explosion protection indicated on the nameplate.
2	Cable entry for output 2	UG UD, UH	Ex ec Ex ic	The following applies for devices with basic specification, position 1, 2 (approval) = UG: In the case of device versions with metal extensions and sealing plugs, the latter are part of the device approval and meet the requirements of the explosion protection indicated on the nameplate. In the case of device versions with a cable entry, this entry has a separate component approval and meets the requirements of the explosion protection indicated on the nameplate.
3	Optional order code ¹⁾ ; Cable entry of the remote display and operating module FHX50	UG UD, UH	Ex ec ²⁾ Ex ic ³⁾	The following applies for devices with basic specification, position 1, 2 (approval) = UG: In the case of device versions with metal extensions and sealing plugs, the latter are part of the device approval and meet the requirements of the explosion protection indicated on the nameplate. In the case of device versions with a cable entry, this entry has a separate component approval and meets the requirements of the explosion protection indicated on the nameplate.

Position		Basic specification, position 1, 2: Approval	Type of protection used for cable entry	Description
4	Optional order code ⁴⁾ : Cable entry of pressure measuring cell	UG UD, UH	Ex ec Ex ic	The following applies for devices with basic specification, position 1, 2 (approval) = UG: In the case of device versions with metal extensions and sealing plugs, the latter are part of the device approval and meet the requirements of the explosion protection indicated on the nameplate. In the case of device versions with a cable entry, this entry has a separate component approval and meets the requirements of the explosion protection indicated on the nameplate.
Position		Description		
5	Pressure compensation plug	NOTICE Housing degree of protection voided due to insufficient sealing of the housing. ► Do not open - not a cable entry.		
⊕	Potential equalization	NOTICE Terminal for connection to potential equalization. ► Pay attention to the grounding concept of the facility.		

- 1) Basic specification, position 4 (display; operation) = L, M
- 2) The labeling changes according to whether "Display; operation" = "L" or "M": Ex ec|ia Ga| IIC T6...T1 Gc.
- 3) For UH: The labeling changes according to whether "Display; operation" = "L" or "M": Ex ic|ia Ga| IIC T6...T1 Gc.
- 4) Basic specification, position 8, 9 (sensor version; DSC sensor; measuring tube) = DA, DA, DC, DD and position 11 (pressure component) = B, C, D, E, F, G

Terminal assignment

Transmitter



 The order code is part of the extended order code. Detailed information on the features of the device and on the structure of the extended order code →  5.

Connection versions

Order code for "Output"	Terminal numbers					
	Output 1		Output 2		Input	
	1 (+)	2 (-)	3 (+)	4 (-)	5 (+)	6 (-)
Option A	4-20mA HART (passive)		-		-	
Option B ¹⁾	4-20mA HART (passive)		Pulse/frequency/switch output (passive)		-	
Option C ¹⁾	4-20mA HART (passive)		4-20mA analog (passive)		-	
Option D ^{1) 2)}	4-20mA HART (passive)		Pulse/frequency/switch output (passive)		4-20mA current input (passive)	
Option E ^{1) 3)}	FOUNDATION Fieldbus		Pulse/frequency/switch output (passive)		-	
Option G ^{1) 4)}	PROFIBUS PA		Pulse/frequency/switch output (passive)		-	
Option S	PROFINET over Ethernet-APL/SPE, 10Mbit/s		-		-	
Option T	Modbus TCP over Ethernet-APL/SPE, 10Mbit/s		-		-	

- 1) Output 1 must always be used; output 2 is optional.
- 2) The integrated overvoltage protection is not used with option D: Terminals 5 and 6 (current input) are not protected against overvoltage.
- 3) FOUNDATION Fieldbus with integrated reverse polarity protection.
- 4) PROFIBUS PA with integrated reverse polarity protection.

Intrinsically safe values

 The order code is part of the extended order code. Detailed information on the features of the device and on the structure of the extended order code →  5.

Type of protection Ex ic

Order code for "Output"	Output type	Intrinsically safe values	
Option A	4-20mA HART	$U_i = \text{DC } 35 \text{ V}$ $I_i = \text{n.a.}$ $P_i = 1 \text{ W}$ $L_i = 0 \text{ }\mu\text{H}$ $C_i = 5 \text{ nF}$	
Option B	4-20mA HART	$U_i = \text{DC } 35 \text{ V}$ $I_i = \text{n.a.}$ $P_i = 1 \text{ W}$ $L_i = 0 \text{ }\mu\text{H}$ $C_i = 5 \text{ nF}$	
	Pulse/frequency/switch output	$U_i = \text{DC } 35 \text{ V}$ $I_i = \text{n.a.}$ $P_i = 1 \text{ W}$ $L_i = 0 \text{ }\mu\text{H}$ $C_i = 6 \text{ nF}$	
Option C	4-20mA HART	$U_i = \text{DC } 30 \text{ V}$ $I_i = \text{n.a.}$ $P_i = 1 \text{ W}$ $L_i = 0 \text{ }\mu\text{H}$ $C_i = 30 \text{ nF}$	
	4-20mA analog		
Option D	4-20mA HART	$U_i = \text{DC } 35 \text{ V}$ $I_i = \text{n.a.}$ $P_i = 1 \text{ W}$ $L_i = 0 \text{ }\mu\text{H}$ $C_i = 5 \text{ nF}$	
	Pulse/frequency/switch output	$U_i = \text{DC } 35 \text{ V}$ $I_i = \text{n.a.}$ $P_i = 1 \text{ W}$ $L_i = 0 \text{ }\mu\text{H}$ $C_i = 6 \text{ nF}$	
	4 to 20 mA current input	$U_i = \text{DC } 35 \text{ V}$ $I_i = \text{n.a.}$ $P_i = 1 \text{ W}$ $L_i = 0 \text{ }\mu\text{H}$ $C_i = 5 \text{ nF}$	
Option E	FOUNDATION Fieldbus	STANDARD $U_i = 32 \text{ V}$ $I_i = 300 \text{ mA}$ $P_i = \text{n.a.}$ $L_i = 10 \text{ }\mu\text{H}$ $C_i = 5 \text{ nF}$	FISCO $U_i = 17.5 \text{ V}$ $I_i = \text{n.a.}$ $P_i = \text{n.a.}$ $L_i = 10 \text{ }\mu\text{H}$ $C_i = 5 \text{ nF}$
	Pulse/frequency/switch output	$U_i = 35 \text{ V}$ $I_i = 300 \text{ mA}$ $P_i = 1 \text{ W}$ $L_i = 0 \text{ }\mu\text{H}$ $C_i = 6 \text{ nF}$	

Order code for "Output"	Output type	Intrinsically safe values	
Option G	PROFIBUS PA	STANDARD $U_i = 32 \text{ V}$ $I_i = 300 \text{ mA}$ $P_i = \text{n.a.}$ $L_i = 10 \text{ } \mu\text{H}$ $C_i = 5 \text{ nF}$	FISCO $U_i = 17.5 \text{ V}$ $I_i = \text{n.a.}$ $P_i = \text{n.a.}$ $L_i = 10 \text{ } \mu\text{H}$ $C_i = 5 \text{ nF}$
	Pulse/frequency/switch output	$U_i = 35 \text{ V}$ $I_i = 300 \text{ mA}$ $P_i = 1 \text{ W}$ $L_i = 0 \text{ } \mu\text{H}$ $C_i = 6 \text{ nF}$	
Option S	PROFINET over Ethernet-APL/SPE, 10Mbit/s	2-WISE power load, APL port profile SLAC ¹⁾ Ex ic $U_i = 17.5 \text{ V}$ $I_i = 380 \text{ mA}$ $P_i = 5.32 \text{ W}$ $L_i = \text{negligible}$ $C_i = 1 \text{ nF}$ Cable specifications according to 2-WISE: $R_c = 15 \text{ to } 150 \text{ } \Omega/\text{km}$ $L_c = 0.4 \text{ to } 1 \text{ mH/km}$ $C_c = 45 \text{ to } 200 \text{ nF/km}$ $C_c = C_c \text{ line/line} + 0,5 C_c \text{ line/screen, if both lines are floating, or}$ $C_c = C_c \text{ line/line} + C_c \text{ line/screen, if the screen is connected to one line}$ Length of cable (not including cable stubs): $\leq 200 \text{ m (656.2)}$ Length of cable stubs: $\leq 1 \text{ m (3.3 ft)}$	
Option T	Modbus TCP over Ethernet-APL/SPE, 10Mbit/s		

1) For further options see Ethernet-APL Installation Drawing HE_01622.

Safety-related values



The order code is part of the extended order code. Detailed information on the features of the device and on the structure of the extended order code → 5.

Type of protection Ex ec

Order code for "Output"	Output type	Safety-related values
Option A	4-20mA HART	$U_{nom} = DC\ 35\ V$ $U_{max} = 250\ V$
Option B	4-20mA HART	$U_{nom} = DC\ 35\ V$ $U_{max} = 250\ V$
	Pulse/frequency/switch output	$U_{nom} = DC\ 35\ V$ $U_{max} = 250\ V$ $P_{max} = 1\ W^{1)}$
Option C	4-20mA HART	$U_{nom} = DC\ 30\ V$ $U_{max} = 250\ V$
	4-20mA analog	
Option D	4-20mA HART	$U_{nom} = DC\ 35\ V$ $U_{max} = 250\ V$
	Pulse/frequency/switch output	$U_{nom} = DC\ 35\ V$ $U_{max} = 250\ V$ $P_{max} = 1\ W^{1)}$
	4 to 20 mA current input	$U_{nom} = DC\ 35\ V$ $U_{max} = 250\ V$
Option E	FOUNDATION Fieldbus	$U_{nom} = DC\ 32\ V$ $U_{max} = 250\ V$ $P_{max} = 0.88\ W$
	Pulse/frequency/switch output	$U_{nom} = DC\ 35\ V$ $U_{max} = 250\ V$ $P_{max} = 1\ W^{1)}$
Option G	PROFIBUS PA	$U_{nom} = DC\ 32\ V$ $U_{max} = 250\ V$ $P_{max} = 0.88\ W$
	Pulse/frequency/switch output	$U_{nom} = DC\ 35\ V$ $U_{max} = 250\ V$ $P_{max} = 1\ W^{1)}$
Option S ²⁾	PROFINET over Ethernet-APL/SPE, 10Mbit/s	2-WISE power load, APL port profile SLAX $U_{nom} = DC\ 17.5\ V$ $U_{max} = 250\ V$ $P_{nom} = 0.9\ W$
Option T ²⁾	Modbus TCP over Ethernet-APL/SPE, 10Mbit/s	

1) Internal circuit limited by $R_i = 760.5\ \Omega$

2) To be installed in systems that are limited to safe extra-low voltage such as SELV, PELV or ES1. Only one conductor per terminal is allowed.

Remote display FHX50

Basic specification, position 1, 2 Approval	Cable specification	Basic specification, position 4 Display; operation Option L, M
Option UD, UG, UH	Max. cable length: 60 m (196.85 ft)	$U_o = 7,3\text{ V}$
		$I_o = 327\text{ mA}$
		$P_o = 362\text{ mW}$
		$L_o = 149\text{ }\mu\text{H}$
		$C_o = 388\text{ nF}$
		$C_c \leq 125\text{ nF}$
		$L_c \leq 149\text{ }\mu\text{H}$



71685751

www.addresses.endress.com
