


# Operating Instructions Memograph M RSG45

Data managers

Additional Instructions for Modbus RTU/TCP Master

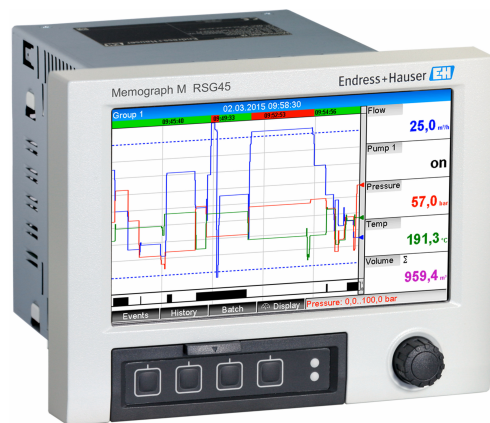

# Table of contents

<b>1</b>	<b>About this document</b> . . . . .	<b>3</b>
1.1	Document function . . . . .	3
1.2	Symbols . . . . .	3
1.2.1	Safety symbols . . . . .	3
1.2.2	Symbols for certain types of information . . . . .	3
1.3	Change history . . . . .	3
<b>2</b>	<b>Product description</b> . . . . .	<b>4</b>
2.1	Requirements . . . . .	4
2.2	Checking if the Modbus Master option exists . .	4
2.3	Required settings . . . . .	4
2.3.1	Modbus Master RTU . . . . .	4
2.3.2	Modbus Master TCP . . . . .	6
<b>3</b>	<b>Basic settings</b> . . . . .	<b>6</b>
3.1	Activating Modbus Master RTU . . . . .	6
3.1.1	Register per command . . . . .	7
3.1.2	Connection attempts . . . . .	7
3.1.3	Command distribution . . . . .	7
3.1.4	Pause between commands . . . . .	8
3.2	Activating Modbus Master TCP . . . . .	8
3.2.1	Register per command . . . . .	9
3.2.2	Transmission behavior . . . . .	9
<b>4</b>	<b>Selecting the Modbus slaves</b> . . . . .	<b>9</b>
4.1	Setting the universal input for Modbus RTU . . .	9
4.1.1	Measured value type . . . . .	9
4.1.2	Slave address . . . . .	10
4.1.3	Readout function . . . . .	11
4.1.4	Register address . . . . .	11
4.1.5	Data type . . . . .	11
4.1.6	Scaling or calculation factor . . . . .	12
4.2	Setting the universal input for Modbus TCP . .	12
4.2.1	Measured value type . . . . .	13
4.2.2	Transmission protocol . . . . .	13
4.2.3	IP address . . . . .	13
4.2.4	Slave address . . . . .	13
4.2.5	Port . . . . .	14
4.2.6	Readout function . . . . .	14
4.2.7	Register address . . . . .	14
4.2.8	Data type . . . . .	15
4.2.9	Scaling or calculation factor . . . . .	15
4.3	Data types . . . . .	16
<b>5</b>	<b>Diagnostics and troubleshooting</b> . . .	<b>18</b>
5.1	Troubleshooting for Modbus TCP . . . . .	18
5.2	Troubleshooting for Modbus RTU . . . . .	18

# 1 About this document

## 1.1 Document function

**NOTICE**

This manual contains an additional description for a special software option. These additional instructions are not a substitute for the Operating Instructions pertaining to the device!

- ▶ Refer to the Operating Instructions and other documentation for detailed information.

Available for all device versions via:

- Internet: [www.endress.com/deviceviewer](http://www.endress.com/deviceviewer)
- Smartphone/tablet: Endress+Hauser Operations app

## 1.2 Symbols

### 1.2.1 Safety symbols

**DANGER**

This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury.

**WARNING**

This symbol alerts you to a potentially dangerous situation. Failure to avoid this situation can result in serious or fatal injury.

**CAUTION**

This symbol alerts you to a potentially dangerous situation. Failure to avoid this situation can result in minor or medium injury.

**NOTICE**

This symbol alerts you to a potentially harmful situation. Failure to avoid this situation can result in damage to the product or something in its vicinity.

### 1.2.2 Symbols for certain types of information

Symbol	Meaning	Symbol	Meaning
	<b>Forbidden</b> Procedures, processes or actions that are forbidden.		<b>Tip</b> Indicates additional information.
	Reference to documentation		Reference to page
	Reference to graphic		Series of steps

## 1.3 Change history

Device software Version/date	Software modifications	Operating Instructions
V02.00.06/12.2015	Original software	BA01390R/01.15
V02.01.04/06.2016	Extended functionality AOP/bug fixes	BA01390R/02.15
V02.04.06/10.2022	Bug fixes	BA01390R/03.22
V02.04.09/05.2025	Bug fixes	BA01390R/04.25

## 2 Product description

### 2.1 Requirements

The Modbus Master function can be used in parallel with the Fieldbus slave options (Modbus TCP, Profibus DP, etc.). The device can thus be master of a Modbus bus and can be scanned as a slave by a control system.


Modbus Master RTU and Modbus Slave RTU cannot be used simultaneously because the same interface is used.

Modbus Master RTU and Modbus Master TCP cannot be used simultaneously.

The combination of Modbus Master RTU and telealarm software option is possible. However, the device's RS485/232 interface is used by the Modbus master wiring. The Internet/email functionality of the telealarm software can thus be used but modem connection is not possible via RS232.

### 2.2 Checking if the Modbus Master option exists

To establish if the **Modbus Master** option exists, check in the main menu under **Diagnostics** → **Device information** → **Device options**.

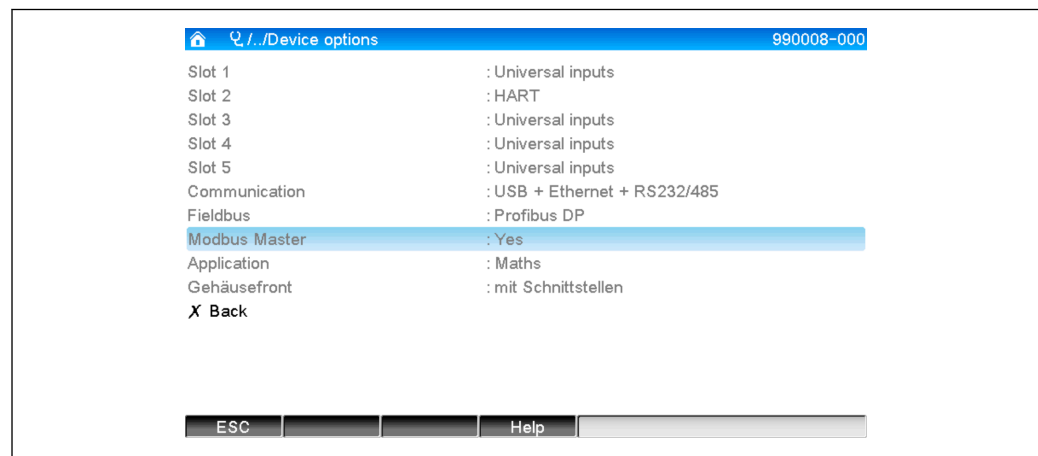

A0051251

### 2.3 Required settings

As Modbus master, the device can scan other Modbus slaves via RS485 or Ethernet. The following settings are required for this purpose.

#### 2.3.1 Modbus Master RTU

Setup → Advanced setup → Communication → Modbus Master


Modbus	RS485
Scan cycle	1, 2, 5, 10, 30s, 1, 2, 5, 10min
Timeout for response	1, 2, 5, 10s, 30s, 1min
Serial interface	
Baud rate	9600, 19200, 38400, 57600, 115200
Parity	none, odd, even
Stop bits	1, 2

Expert mode		
Register per command		3 to 125
Connection attempts		1 to 10
Command distribution		Distributed over scan cycle, At the start of the scan cycle, Continuously
Pause between commands		5 to 600000 ms

Setup → Advanced setup → Inputs → Universal inputs → Universal input x

Universal input (max. 40)		
Signal		Modbus master
Measured value type		Instantaneous value, counter
Slave address		1 to 255
Readout function		Read Input Register, Read Holding Register
Register address		1 to 65535
Data type		INT16, UINT16, INT32_B, INT32_L, UINT32_B, UINT32_L, FLOAT_B, FLOAT_L, DOUBLE_B, DOUBLE_L
Calc. factor		(If "Counter" is selected)
Start value range End value range Range start Meas. range end		(Scaling for measured value type <b>Instantaneous value</b> and data type <b>..INT..</b> )

Electrical connection

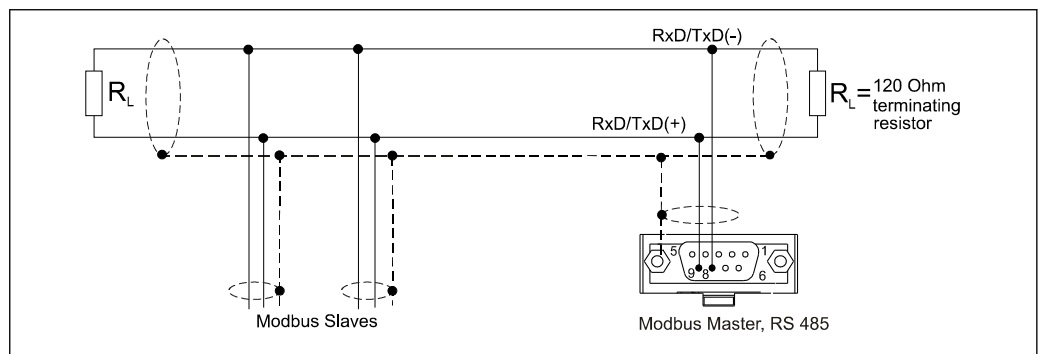

A0050461

Initial setting

The commands used are evenly distributed over the scan cycle.

If a response timeout occurs, the request is made once more at the next scan cycle. If there is still no response, all of the values of the slave are declared as invalid. Counting stops if "Counter" is selected.

The counter that is read in is interpreted as the overall counter.

## 2.3.2 Modbus Master TCP

Setup → Advanced setup → Communication → Modbus Master

Modbus	Ethernet
Expert mode	
Register per command	3 to 125

Setup → Advanced setup → Inputs → Universal inputs → Universal input x

Universal input (max. 40)	
Signal	Modbus master
Measured value type	Instantaneous value, counter
Transmission protocol	Modbus TCP, Modbus TCP with slave address, Modbus RTU or TCP
IP address	x.x.x.x
Port	502
Slave address	1 to 255 (for Modbus TCP with slave address)
Readout function	Read Input Register, Read Holding Register
Register address	1 to 65535
Data type	INT16, UINT16, INT32_B, INT32_L, UINT32_B, UINT32_L, FLOAT_B, FLOAT_L, DOUBLE_B, DOUBLE_L
Calc. factor	(If "Counter" is selected)
Start value range End value range Range start Meas. range end	(Scaling for measured value type <b>Instantaneous value</b> and data type <b>..INT..</b> )

### Initial setting

The requests are combined as follows:

- A separate connection is established for every different IP address combined with the port.
- If the IP address and port are the same, the same transmission protocols are combined with the slave address into one connection.

The commands used are evenly distributed over the time period of 0.5 s and sent in one connection.

Slaves with different IP addresses or transmission protocols are scanned in parallel.


If a response timeout occurs, the request is made once more at the next scan cycle. If there is still no response, all of the values of the slave are declared as invalid. Counting stops if "Counter" is selected.

The counter that is read in is interpreted as the overall counter.

## 3 Basic settings

### 3.1 Activating Modbus Master RTU

The Modbus Master RTU functionality must first be activated in the main menu under **Expert → Communication → Modbus Master** in order to use it.

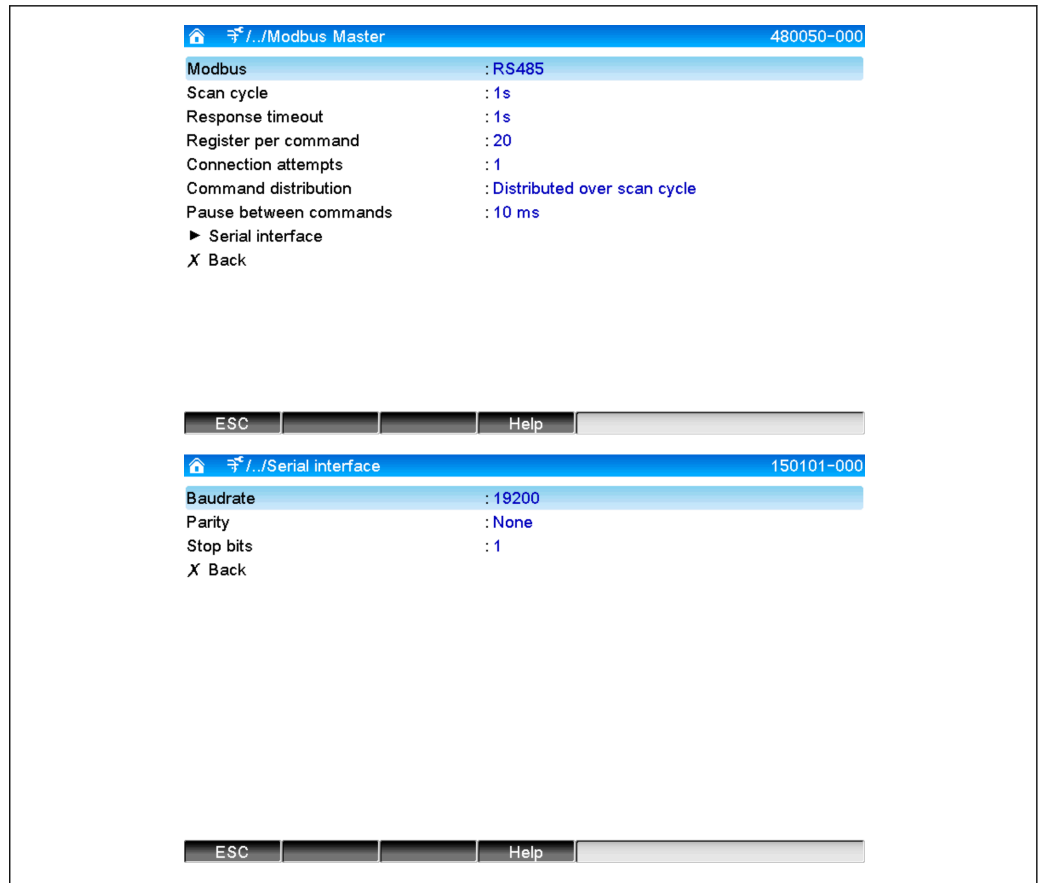

A0051252

### 3.1.1 Register per command

**Initial setting:** 20 (3 to 125)

This option is used to set the maximum number of registers combined in one command if several registers are read by one slave,

e.g. registers 1-3 and registers 10-12 should be read so registers 1-12 are read with one command.

If this parameter was set to 6 for example, two individual commands are sent.


### 3.1.2 Connection attempts

**Initial setting:** 1 (1 to 10)

If a slave does not respond within the configured time, an attempt is once again made to build a connection at the next scan cycle. The number of attempts can be set. The last value configured is reused during the attempts. The value is then flagged as invalid.

### 3.1.3 Command distribution

**Initial setting:** Distributed over scan cycle

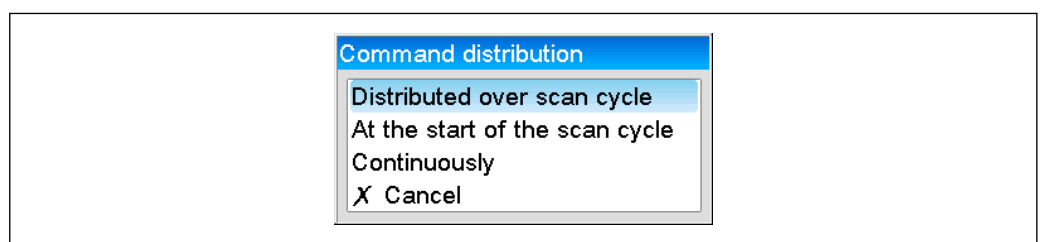

A0051253

- Distributed over scan cycle: The commands are evenly distributed over the scan cycle.
- At the start of the scan cycle: The commands are sent at intervals (pause) at the start of the scan cycle. A new request starts after the scan cycle is completed.
- Continuously: The commands are continuously sent at intervals (pause) irrespective of the scan cycle.


### 3.1.4 Pause between commands

**Initial setting: 10 ms (5 to 600000)**

The minimum duration of the pause between the commands to be sent.

## 3.2 Activating Modbus Master TCP

The Modbus Master TCP functionality must first be activated in the main menu under **Expert → Communication → Modbus Master** in order to use it.

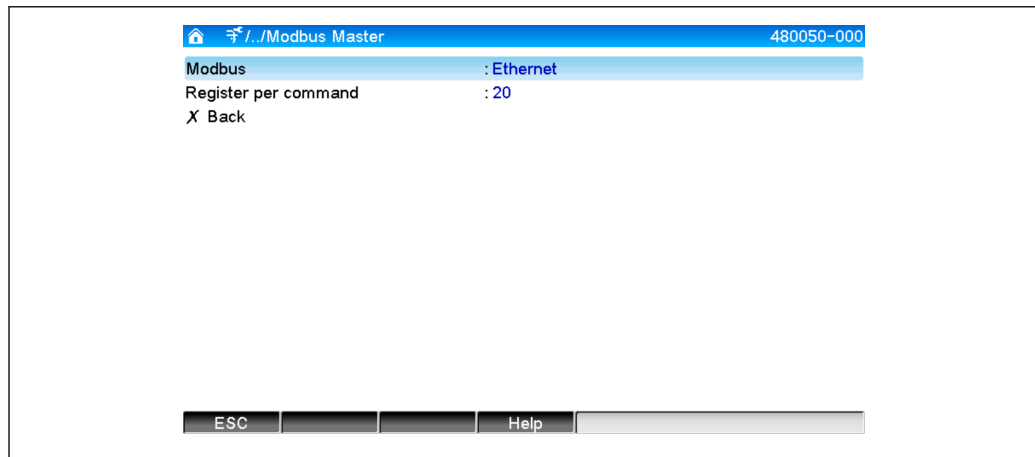

A0051254

### 3.2.1 Register per command

#### Initial setting: 20 (3 to 125)

This option is used to set the maximum number of registers combined in one command if several registers are read by one slave,

e.g. registers 1-3 and registers 10-12 should be read so registers 1-12 are read with one command.

If this parameter was set to 6 for example, two individual commands are sent.

### 3.2.2 Transmission behavior

Transmission follows an established pattern that includes the following key data:


- Connection timeout 5 s
- Resumption of connection after 2 s
- Response timeout 2 s
- Pause between the individual commands in a connection 500ms/number of commands in the connection
- If the following properties (see 3.2 → 12) are identical, the same connection is used
  - IP address
  - Port
  - Transmission protocol
  - Slave address

## 4 Selecting the Modbus slaves

The Modbus slaves are allocated in the main menu under **Expert** → **Inputs** → **Universal inputs**.

### 4.1 Setting the universal input for Modbus RTU


The Modbus Master RTU must first be activated!

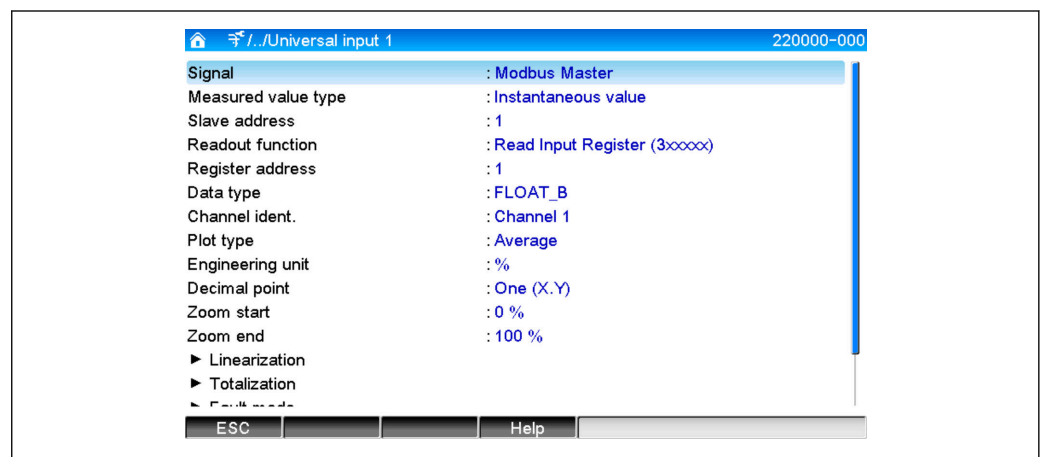

A0051255

#### 4.1.1 Measured value type


Select how the read measured value should be used.

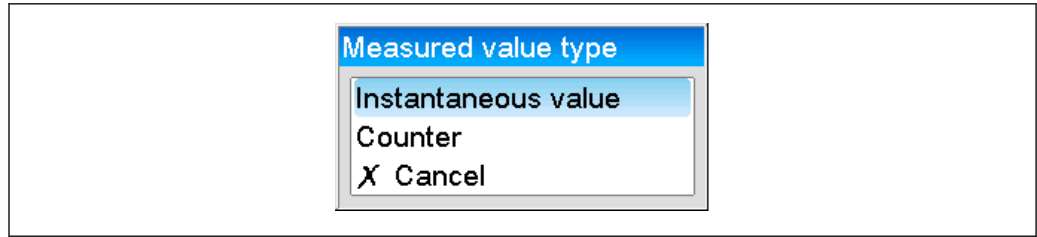

A0051256

### 4.1.2 Slave address


Configure the slave address.

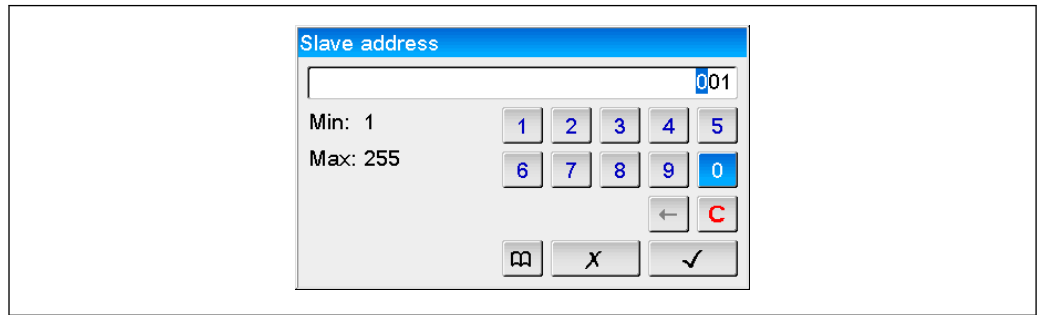

A0051257

### 4.1.3 Readout function


Select the function with which the values should be read out.

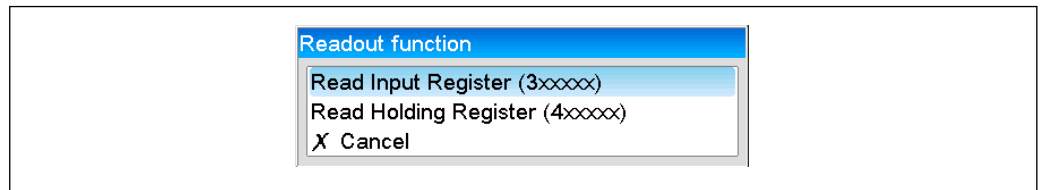

A0051258

### 4.1.4 Register address


Enter the register address. Start at 1, which corresponds to address 0 in the transmission protocol.

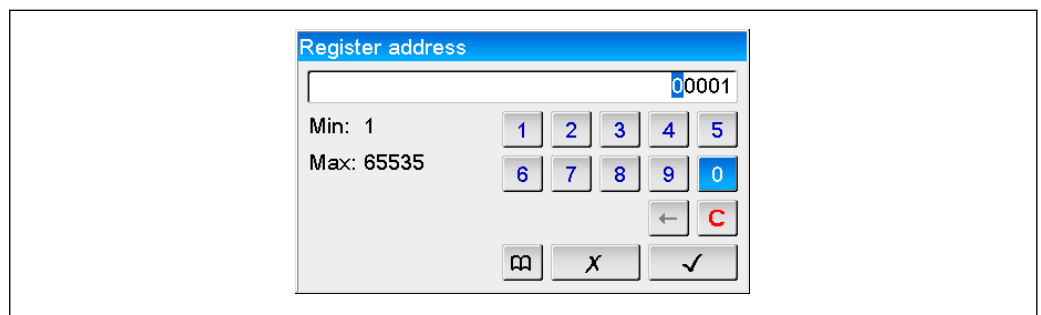

A0051259

### 4.1.5 Data type


Select the data type that should interpret the read byte sequences (see also 3.3 Data types → 16).

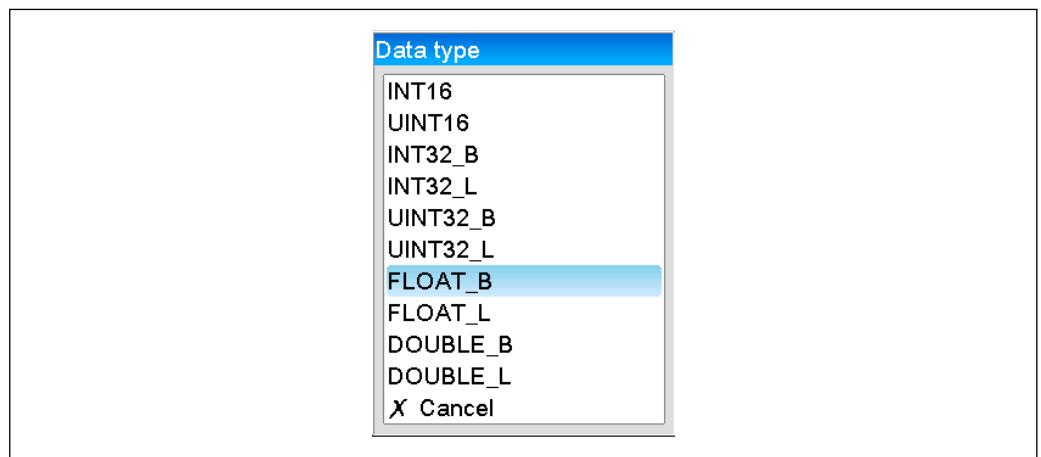

A0051260


### 4.1.6 Scaling or calculation factor

The value can be scaled if the data type was set to **..INT..** and the measured value type to **Instantaneous value**.

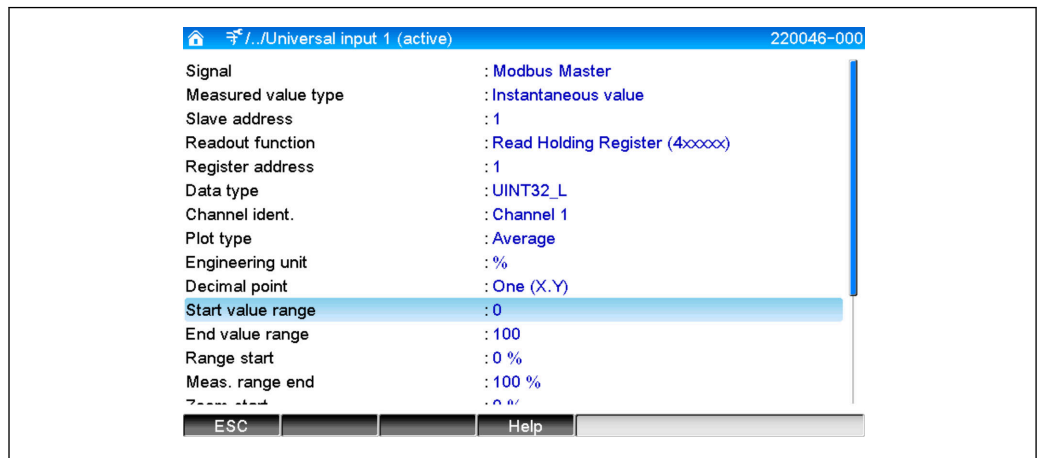

A0051261


If **Counter** is selected as measured value type, a calculation factor can be specified.

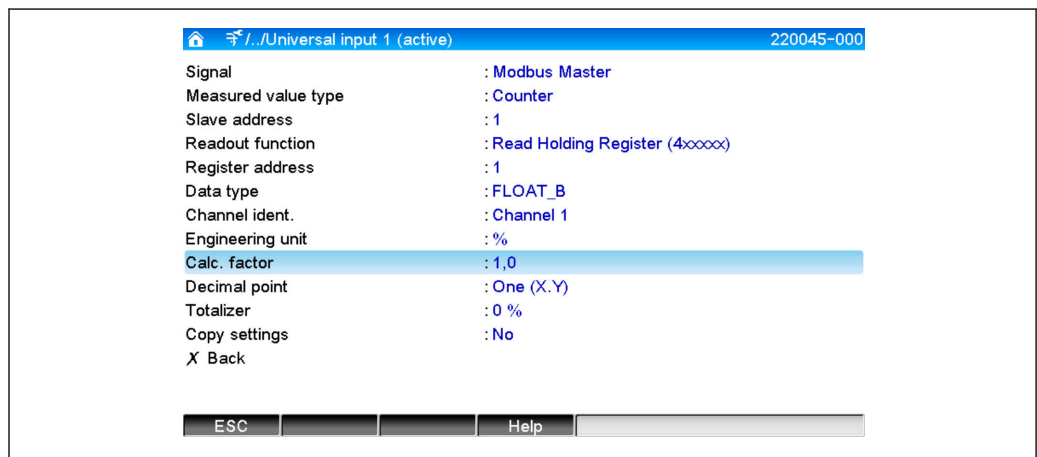

A0051262

## 4.2 Setting the universal input for Modbus TCP


The Modbus Master TCP must first be activated!

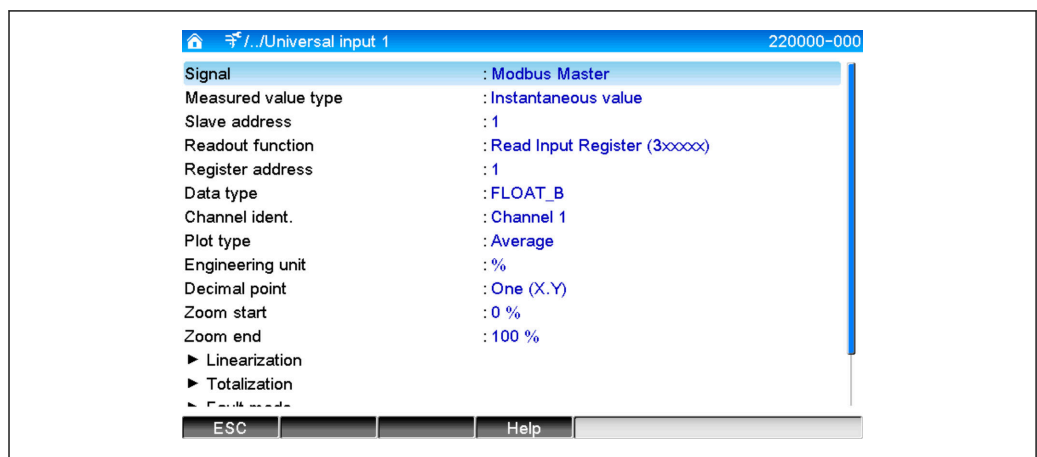

A0051263

### 4.2.1 Measured value type


Select how the read measured value should be used.

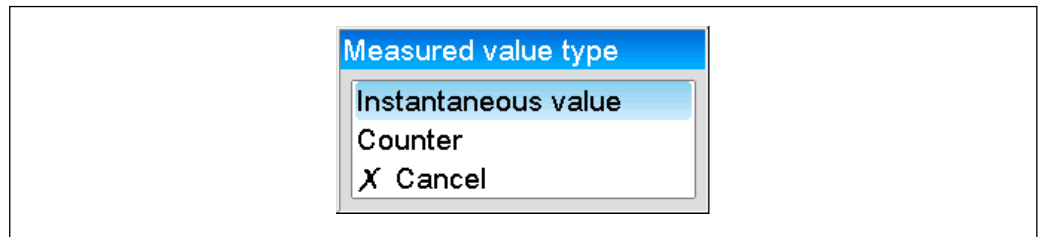

A0051256

### 4.2.2 Transmission protocol

Select the transmission protocol with which the data are transferred.

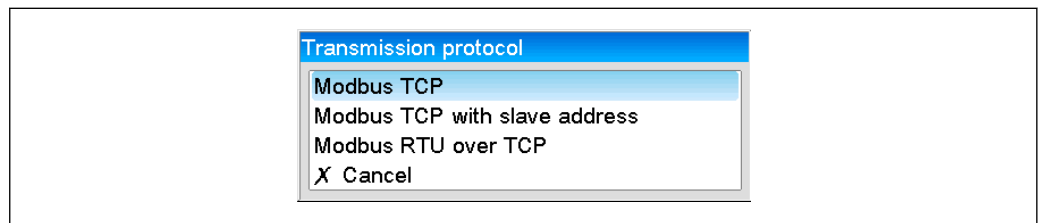

A0051264

Modbus TCP:

Communicate with Modbus TCP slaves.

Modbus TCP with slave address:


Communicate with gateways that convert the address to the correct slave using a table.

Modbus RTU over TCP:

Transfer the basic Modbus RTU protocol with CRC sum. Used in Ethernet signal converters -> RS485.

### 4.2.3 IP address


IP address of the slave or gateway.

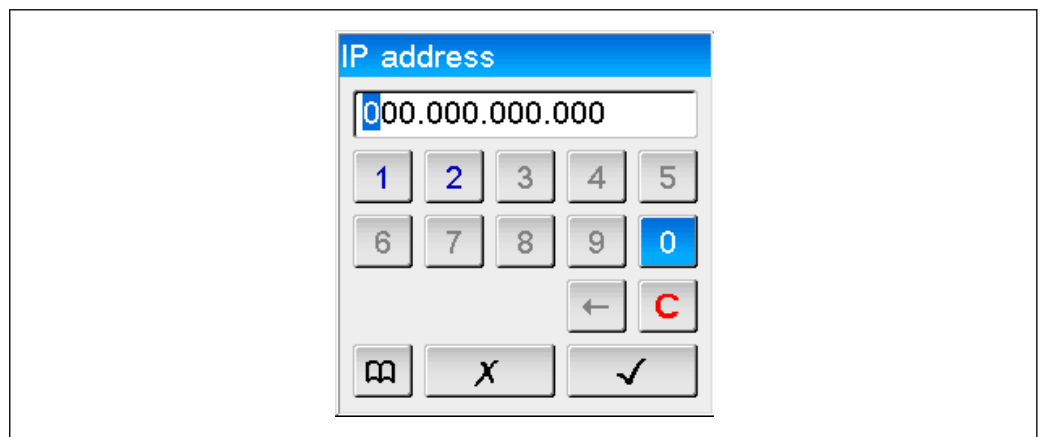

A0051265

### 4.2.4 Slave address


A slave address must be entered for the **Modbus TCP with slave address** and **Modbus RTU over TCP** transmission protocols.

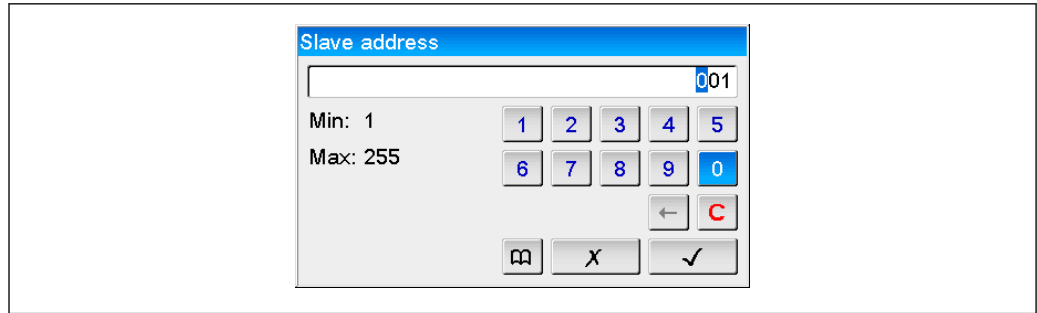

A0051257

#### 4.2.5 Port


Port for the connection.

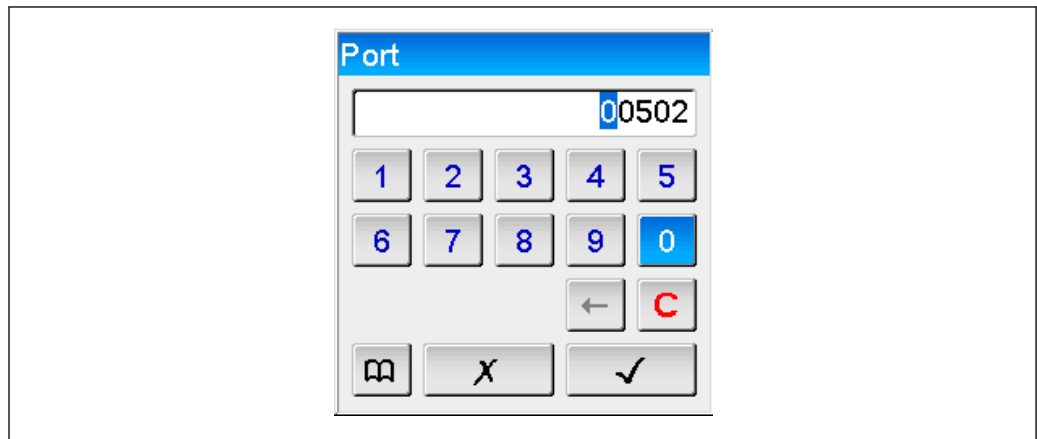

A0051266

#### 4.2.6 Readout function


Select the function with which the values should be read out.

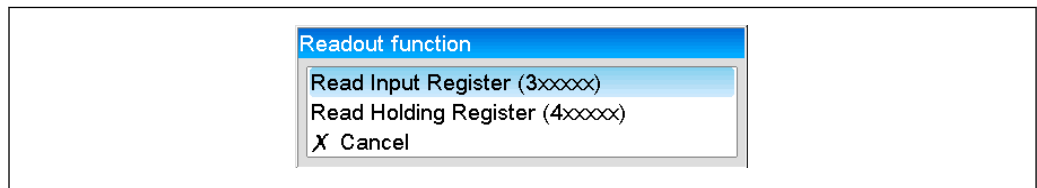

A0051258

#### 4.2.7 Register address


Enter the register address. Start at 1, which corresponds to register address 0 in the transmission protocol.

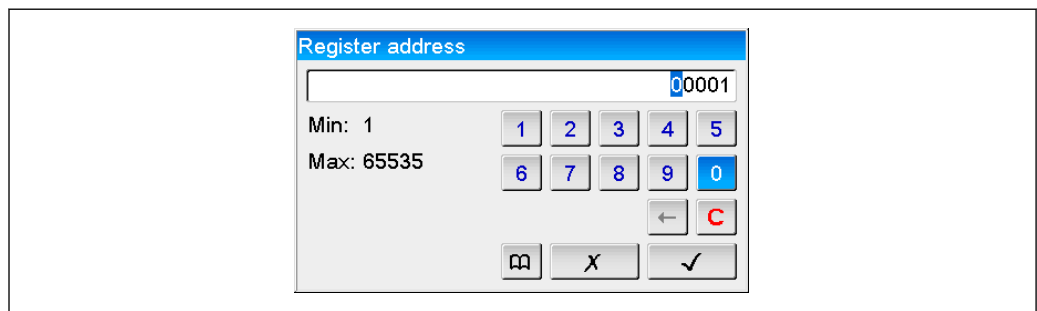

A0051259

### 4.2.8 Data type


Select the data type that should interpret the read byte sequences (see also 3.3 Data types → 16).

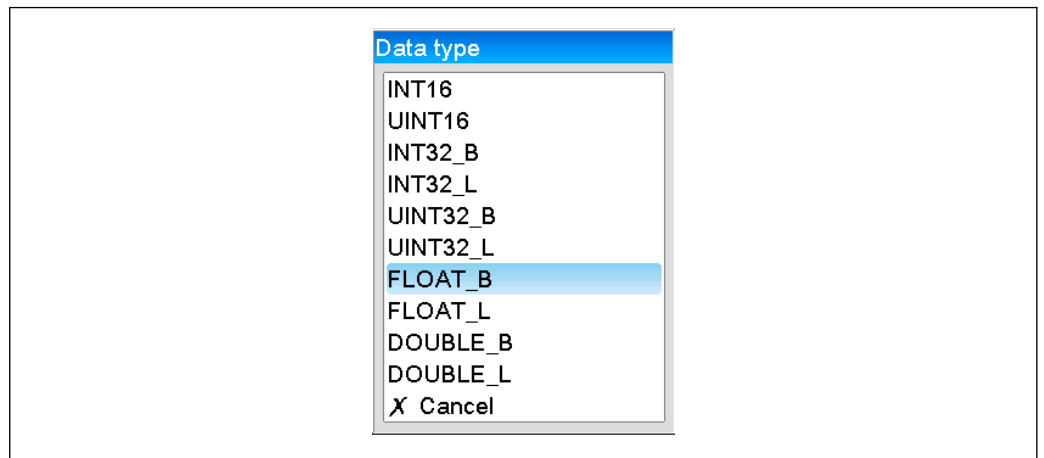

A0051260


### 4.2.9 Scaling or calculation factor

The value can be scaled if the data type was set to **..INT..** and the measured value type to **Instantaneous value**.

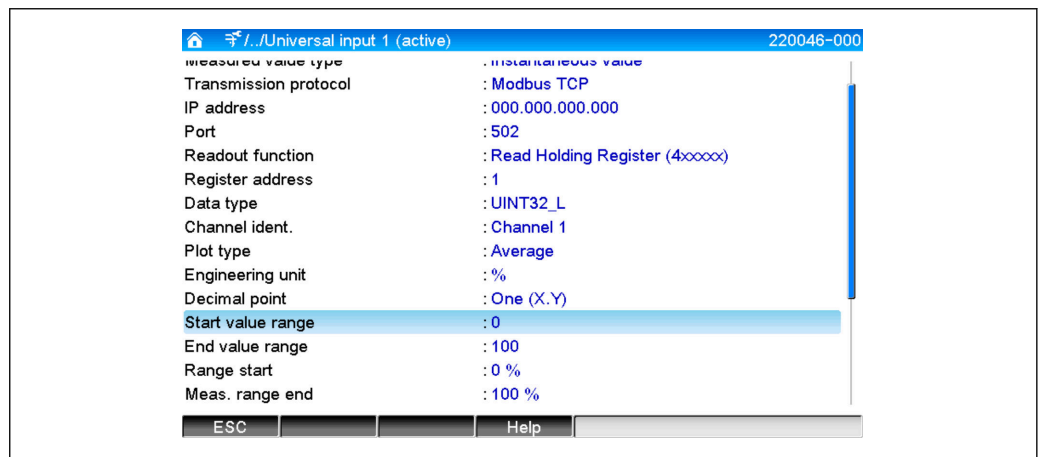

A0051267

If **Counter** is selected as measured value type, a calculation factor can be specified.

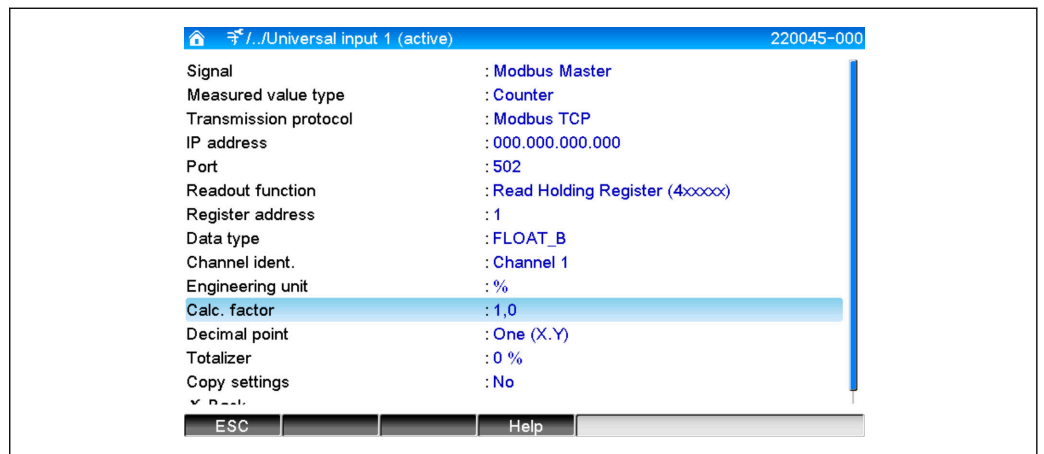

A0051268

### 4.3 Data types

The addressing of the bytes, i.e. the order in which they are transmitted, is not defined in the MODBUS specification. It is therefore important to agree or adjust the addressing mode between the master and slave when commissioning.

**The following data types are supported by the device:**

**FLOAT** (floating point number IEEE 754)

Data length = 4 bytes (2 registers)

Byte 0	Byte 1	Byte 2	Byte 3
SEEEEEEE	EMMMMMMMM	MMMMMMMMM	MMMMMMMMM
S = Sign E = Exponent M = Mantissa			

Option	Order			
	1.	2.	3.	4.
FLOAT_L	Byte 2 (MMMMMMMMM)	Byte 3 (MMMMMMMMM)	Byte 0 (SEEEEEEE)	Byte 1 (EMMMMMMMM)
FLOAT_B	Byte 0 (SEEEEEEE)	Byte 1 (EMMMMMMMM)	Byte 2 (MMMMMMMMM)	Byte 3 (MMMMMMMMM)

**DOUBLE** (floating point number IEEE 754)

Data length = 8 bytes (4 register)

Byte 0	Byte 1	Byte 2	Byte 3
SEEEEEEE	EEEEMMMMM	MMMMMMMMM	MMMMMMMMM
Byte 4	Byte 5	Byte 6	Byte 7
MMMMMMMMM	MMMMMMMMM	MMMMMMMMM	MMMMMMMMM
S = Sign E = Exponent M = Mantissa			

Option	Order			
	1.	2.	3.	4.
DOUBLE_L	Byte 6 (MMMMMMMMM)	Byte 7 (MMMMMMMMM)	Byte 4 (EMMMMMMMM)	Byte 5 (MMMMMMMMM)
	Byte 2 (MMMMMMMMM)	Byte 3 (MMMMMMMMM)	Byte 0 (SEEEEEEE)	Byte 1 (EEEEMMMMM)
DOUBLE_B	Byte 0 (SEEEEEEE)	Byte 1 (EEEEMMMMM)	Byte 2 (MMMMMMMMM)	Byte 3 (MMMMMMMMM)
	Byte 4 (MMMMMMMMM)	Byte 5 (MMMMMMMMM)	Byte 6 (MMMMMMMMM)	Byte 7 (MMMMMMMMM)

**UINT32 (unsigned) , INT32 (signed):**

Data length = 4 bytes (2 registers)

Byte 0	Byte 1	Byte 2	Byte 3
Most significant byte (MSB)			Least significant byte (LSB)

Option	Order			
	1.	2.	3.	4.
UINT32_L INT32_L	Byte 2	Byte 3 (LSB)	Byte 0 (MSB)	Byte 1
UINT32_B INT32_B	Byte 0 (MSB)	Byte 1	Byte 2	Byte 3 (LSB)

**UINT16 (unsigned) , INT16 (signed):**

Data length = 2 bytes (1 register)

Byte 1	Byte 2
Most significant byte (MSB)	Least significant byte (LSB)

Option	Order	
	1.	2.
UINT16 INT16	Byte 1 (MSB)	Byte 0 (LSB)

## 5 Diagnostics and troubleshooting

### 5.1 Troubleshooting for Modbus TCP

The following checklist is used to systematically check typical causes for communication errors:

- Is the Ethernet connection between the device and master correct?
- Does the IP address sent by the master match the address configured on the device?
- Do the port configured on the master and the port configured on the device match?

### 5.2 Troubleshooting for Modbus RTU

The following checklist is used to systematically check typical causes for communication errors:

- Do the device and master have the same baud rate and parity?
- Is the interface correctly wired?
- Does the device address sent by the master match the configured device address of the device?
- Do all the slaves on the Modbus have different device addresses?





[www.addresses.endress.com](http://www.addresses.endress.com)

---