

Description of Device Parameters

Proline Promag 300

PROFINET

Electromagnetic flowmeter

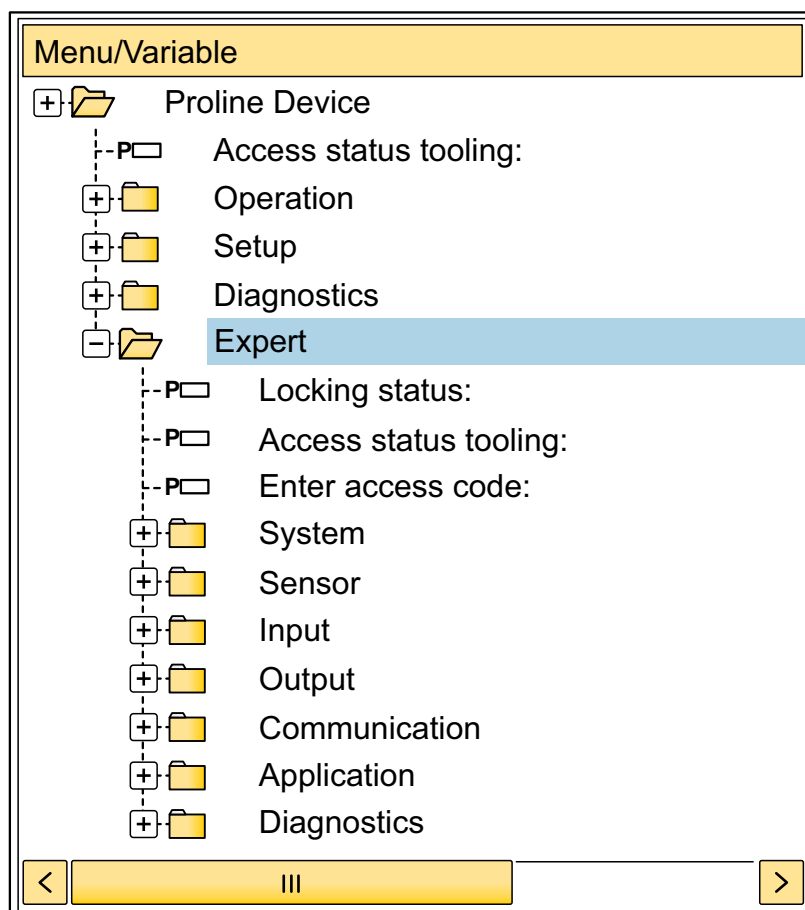


Table of contents

1	About this document	4		
1.1	Document function	4		
1.2	Target group	4		
1.3	Using this document	4		
1.3.1	Information on the document structure	4		
1.3.2	Structure of a parameter description	6		
1.4	Symbols used	6		
1.4.1	Symbols for certain types of information	6		
1.4.2	Symbols in graphics	7		
1.5	Documentation	7		
1.5.1	Standard documentation	7		
1.5.2	Supplementary device-dependent documentation	7		
2	Overview of the Expert operating menu	8		
3	Description of device parameters	11		
3.1	"System" submenu	13		
3.1.1	"Display" submenu	14		
3.1.2	"Configuration backup" submenu	28		
3.1.3	"Diagn. handling" submenu	31		
3.1.4	"Administration" submenu	40		
3.2	"Sensor" submenu	44		
3.2.1	"Measured val." submenu	45		
3.2.2	"System units" submenu	55		
3.2.3	"Process param." submenu	70		
3.2.4	"External comp." submenu	85		
3.2.5	"Sensor adjustment" submenu	92		
3.2.6	"Calibration" submenu	98		
3.3	"I/O configuration" submenu	100		
3.4	"Input" submenu	102		
3.4.1	"Current input 1 to n" submenu	102		
3.4.2	"Status input 1 to n" submenu	105		
3.5	"Output" submenu	107		
3.5.1	"Current output 1 to n" submenu	108		
3.5.2	"Pulse/frequency/switch output 1 to n" submenu	121		
3.5.3	"Relay output 1 to n" submenu	140		
3.6	"Communication" submenu	147		
3.6.1	"PROFINET config." submenu	147		
3.6.2	"PROFINET info" submenu	148		
3.6.3	"Web server" submenu	152		
3.6.4	"WLAN settings" submenu	155		
3.6.5	"Diag. config." submenu	161		
3.7	"Application" submenu	166		
3.7.1	"Totalizer 1 to n" submenu	167		
3.7.2	"Custody transfer" submenu	171		
3.8	"Diagnostics" submenu	171		
3.8.1	"Diagnostic list" submenu	174		
3.8.2	"Event logbook" submenu	178		
3.8.3	"Device info" submenu	181		
3.8.4	"Main elec.+I/O1" submenu	184		
3.8.5	"Sens. electronic" submenu	185		
3.8.6	"I/O module 1" submenu	186		
3.8.7	"I/O module 2" submenu	188		
3.8.8	"I/O module 3" submenu	189		
3.8.9	"Display module" submenu	190		
3.8.10	"Data logging" submenu	191		
3.8.11	"Min/max val." submenu	199		
3.8.12	"Data logging" submenu	202		
3.8.13	"Heartbeat" submenu	210		
3.8.14	"Simulation" submenu	210		
4	Country-specific factory settings	219		
4.1	SI units	219		
4.1.1	System units	219		
4.1.2	Full scale values	219		
4.1.3	Output current span	220		
4.1.4	Pulse value	220		
4.1.5	On value low flow cut off	220		
4.2	US units	221		
4.2.1	System units	221		
4.2.2	Full scale values	221		
4.2.3	Output current span	222		
4.2.4	Pulse value	222		
4.2.5	On value low flow cut off	223		
5	Explanation of abbreviated units	224		
5.1	SI units	224		
5.2	US units	224		
5.3	Imperial units	225		
	Index	226		

1 About this document

1.1 Document function

The document is part of the Operating Instructions and serves as a reference for parameters, providing a detailed explanation of each individual parameter of the Expert operating menu.

It is used to perform tasks that require detailed knowledge of the function of the device:

- Commissioning measurements under difficult conditions
- Optimal adaptation of the measurement to difficult conditions
- Detailed configuration of the communication interface
- Error diagnostics in difficult cases


1.2 Target group

The document is aimed at specialists who work with the device over the entire life cycle and perform specific configurations.

1.3 Using this document

1.3.1 Information on the document structure

The document lists the submenus and their parameters according to the structure from the **Expert** menu (→  8), which is displayed when the **"Maintenance" user role** is enabled.

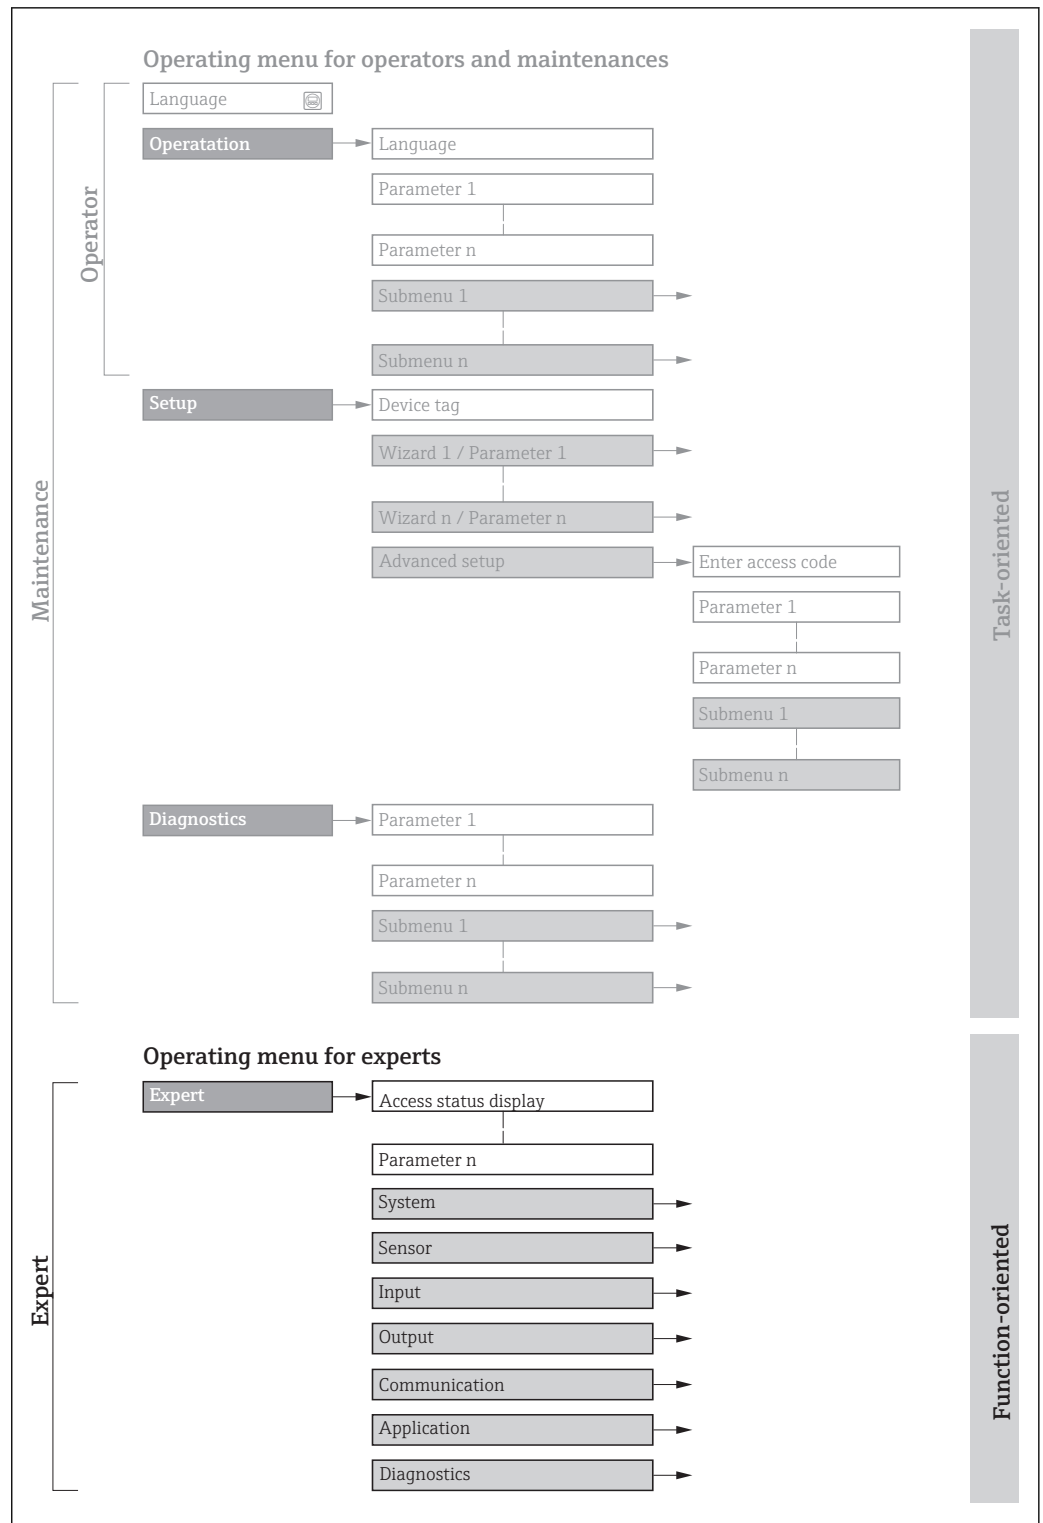

1 Sample graphic for the schematic layout of the operating menu



Additional information regarding:

- The arrangement of the parameters according to the menu structure of the **Operation** menu, **Setup** menu, **Diagnostics** menu with a brief description: Operating Instructions → 7
- Operating concept of the operating menus: Operating Instructions → 7

1.3.2 Structure of a parameter description

The individual parts of a parameter description are described in the following section:

Complete parameter name		Write-protected parameter 
Navigation	 Navigation path to the parameter via the local display (direct access code) or web browser  Navigation path to the parameter via the operating tool The names of the menus, submenus and parameters are abbreviated to the form in which they appear on the display and in the operating tool.	
Prerequisite	The parameter is only available under these specific conditions	
Description	Description of the parameter function	
Selection	List of the individual options for the parameter ■ Option 1 ■ Option 2	
User entry	Input range for the parameter	
User interface	Display value/data for the parameter	
Factory setting	Default setting ex works	
Additional information	Additional explanations (e.g. in examples): ■ On individual options ■ On display values/data ■ On the input range ■ On the factory setting ■ On the parameter function	

1.4 Symbols used

1.4.1 Symbols for certain types of information

Symbol	Meaning
	Tip Indicates additional information.
	Reference to documentation
	Reference to page
	Reference to graphic
	Operation via local display
	Operation via operating tool
	Write-protected parameter

1.4.2 Symbols in graphics

Symbol	Meaning	Symbol	Meaning
1, 2, 3 ...	Item numbers	A, B, C, ...	Views
A-A, B-B, C-C, ...	Sections		

1.5 Documentation

1.5.1 Standard documentation

Operating Instructions

Measuring device	Documentation code
Promag H 300	BA01718D
Promag P 300	BA01719D
Promag W 300	BA01941D

1.5.2 Supplementary device-dependent documentation

Special Documentation

Contents	Documentation code
Information on the Pressure Equipment Directive	SD01614D
Radio approvals for WLAN interface for A309/A310 display module	SD01793D
Remote display and operating module DKX001	SD01763D

Contents	Documentation code
Heartbeat Technology	SD01986D
Web server	SD01977D

2 Overview of the Expert operating menu

The following table provides an overview of the menu structure of the expert operating menu and its parameters. The page reference indicates where the associated description of the submenu or parameter can be found.

 Expert		
Direct access (0106)	→ 	11
Locking status (0004)	→ 	12
Access status (0005)	→ 	13
Ent. access code (0003)	→ 	13
▶ System	→ 	13
▶ Display	→ 	14
▶ Config. backup	→ 	28
▶ Diagn. handling	→ 	31
▶ Administration	→ 	40
▶ Sensor	→ 	44
▶ Measured val.	→ 	45
▶ System units	→ 	55
▶ Process param.	→ 	70
▶ External comp.	→ 	85
▶ Sensor adjustm.	→ 	92
▶ Calibration	→ 	98
▶ I/O config.	→ 	100
I/O 1 to n terminals (3902-1 to n)	→ 	100
I/O 1 to n info (3906-1 to n)	→ 	100
I/O 1 to n type (3901-1 to n)	→ 	101

Apply I/O config (3907)	→ 101
Conversion code (2762)	→ 102
► Input	→ 102
► Current input 1 to n	→ 102
► Status input 1 to n	→ 105
► Output	→ 107
► Curr.output 1 to n	→ 108
► PFS output 1 to n	→ 121
► Relay output 1 to n	→ 140
► Communication	→ 147
► PROFINET config.	→ 147
► PROFINET info	→ 148
► Web server	→ 152
► WLAN settings	→ 155
► Application	→ 166
Reset all tot. (2806)	→ 166
► Totalizer 1 to n	→ 167
► Diagnostics	→ 171
Actual diagnos. (0691)	→ 172
Prev.diagnostics (0690)	→ 173
Time fr. restart (0653)	→ 174
Operating time (0652)	→ 174
► Diagnostic list	→ 174
► Event logbook	→ 178
► Device info	→ 181


► Main elec.+I/O1	→ 184
► Sens. electronic	→ 185
► I/O module 2	→ 188
► I/O module 3	→ 189
► Display module	→ 190
► Min/max val.	→ 199
► Data logging	→ 191
► Heartbeat	→ 210
► Simulation	→ 210

3 Description of device parameters

In the following section, the parameters are listed according to the menu structure of the local display. Specific parameters for the operating tools are included at the appropriate points in the menu structure.

Expert		
Direct access (0106)	→	11
Locking status (0004)	→	12
Access status (0005)	→	13
Ent. access code (0003)	→	13
► System	→	13
► Sensor	→	44
► I/O config.	→	100
► Input	→	102
► Output	→	107
► Communication	→	147
► Application	→	166
► Diagnostics	→	171

Direct access		
Navigation	Expert → Direct access (0106)	
Description	Use this function to enter the access code to enable direct access to the desired parameter via the local display. A parameter number is assigned to each parameter for this purpose.	
User entry	0 to 65 535	
Additional information	<i>User entry</i> The direct access code consists of a 5-digit number (at maximum) and the channel number, which identifies the channel of a process variable: e.g. 00914-2. In the navigation view, this appears on the right-hand side in the header of the selected parameter.	

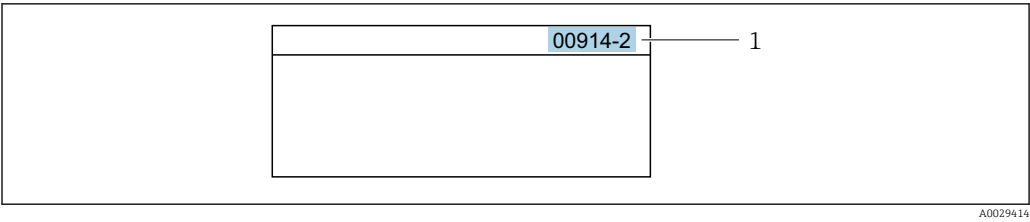

1 Direct access code

- Note the following when entering the direct access code:
- The leading zeros in the direct access code do not have to be entered.
Example: Enter "914" instead of "00914"
 - If no channel number is entered, channel 1 is accessed automatically.
Example: Enter 00914 → **Assign variable** parameter
 - If a different channel is accessed: Enter the direct access code with the corresponding channel number.
Example: Enter 00914-2 → **Assign variable** parameter

Locking status

Navigation Expert → Locking status (0004)

Description Displays the active write protection.

User interface

- Hardware locked
- Temp. locked

Additional information *Display*

If two or more types of write protection are active, the write protection with the highest priority is shown on the local display. In the operating tool all active types of write protection are displayed.

Detailed information on access authorization is provided in the "User roles and associated access authorization" and "Operating concept" sections of the Operations Instructions for the device → 7

Selection

Options	Description
None	The access status displayed in the Access status parameter (→ 13) applies . Only appears on local display.
Hardware locked (priority 1)	The DIP switch for hardware locking is activated on the PCB board. This locks write access to the parameters (e.g. via local display or operating tool) .
Temp. locked	Write access to the parameters is temporarily locked on account of internal processes running in the device (e.g. data upload/download, reset etc.). Once the internal processing has been completed, the parameters can be changed once again.

Access status	
Navigation	 Expert → Access status (0005)
Description	Displays the access authorization to the parameters via the local display, Web browser or operating tool.
User interface	▪ Operator ▪ Maintenance
Factory setting	Maintenance
Additional information	<i>Description</i>  Access authorization can be modified via the Ent. access code parameter (→  13).  If additional write protection is active, this restricts the current access authorization even further. <i>Display</i>  Detailed information on access authorization is provided in the "User roles and associated access authorization" and "Operating concept" sections of the Operations Instructions for the device →  7

Ent. access code	
Navigation	 Expert → Ent. access code (0003)
Description	Use this function to enter the user-specific release code to remove parameter write protection.
User entry	Max. 16-digit character string comprising numbers, letters and special characters

3.1 "System" submenu

Navigation  Expert → System

► System	
► Display	→  14
► Config. backup	→  28
► Diagn. handling	→  31
► Administration	→  40

3.1.1 "Display" submenu

Navigation

 Expert → System → Display

► Display		
Display language (0104)	→ 	15
Format display (0098)	→ 	15
Value 1 display (0107)	→ 	18
0% bargraph 1 (0123)	→ 	18
100% bargraph 1 (0125)	→ 	19
Decimal places 1 (0095)	→ 	19
Value 2 display (0108)	→ 	20
Decimal places 2 (0117)	→ 	21
Value 3 display (0110)	→ 	21
0% bargraph 3 (0124)	→ 	22
100% bargraph 3 (0126)	→ 	23
Decimal places 3 (0118)	→ 	23
Value 4 display (0109)	→ 	24
Decimal places 4 (0119)	→ 	25
Display interval (0096)	→ 	25
Display damping (0094)	→ 	25
Header (0097)	→ 	26
Header text (0112)	→ 	27
Separator (0101)	→ 	27
Contrast display (0105)	→ 	27
Backlight (0111)	→ 	28

Display language

Navigation	 Expert → System → Display → Display language (0104)
Prerequisite	A local display is provided.
Description	Use this function to select the configured language on the local display.
Selection	■ English ■ Deutsch ■ Français ■ Español ■ Italiano ■ Nederlands ■ Portuguesa ■ Polski ■ русский язык(Ru) ■ Svenska ■ Türkçe ■ 中文 (Chinese) ■ 日本語 (Japanese) ■ 한국어 (Korean) ■ العربية(Ara) * ■ Bahasa Indonesia ■ ภาษาไทย (Thai) * ■ tiếng Việt (Vit) ■ čeština (Czech)
Factory setting	English (alternatively, the ordered language is preset in the device)

Format display

Navigation	 Expert → System → Display → Format display (0098)
Prerequisite	A local display is provided.
Description	Use this function to select how the measured value is shown on the local display.
Selection	■ 1 value, max. ■ Bargr. + 1 value ■ 2 values ■ Val. large+2val. ■ 4 values
Factory setting	1 value, max.

* Visibility depends on order options or device settings

Additional information*Description*


The display format (size, bar graph etc.) and number of measured values displayed simultaneously (1 to 4) can be configured. This setting only applies to normal operation.




- The **Value 1 display** parameter (→ 18) to **Value 4 display** parameter (→ 24) are used to specify which measured values are shown on the local display and in what order.
- If more measured values are specified than the display mode selected permits, then the values alternate on the device display. The display time until the next change is configured via the **Display interval** parameter (→ 25).

Possible measured values shown on the local display:


"1 value, max." option

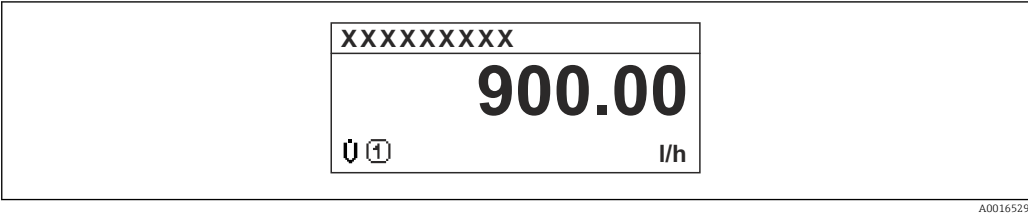


"Bagr. + 1 value" option

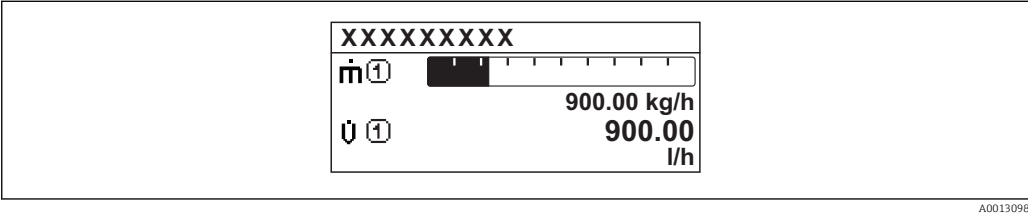


"2 values" option

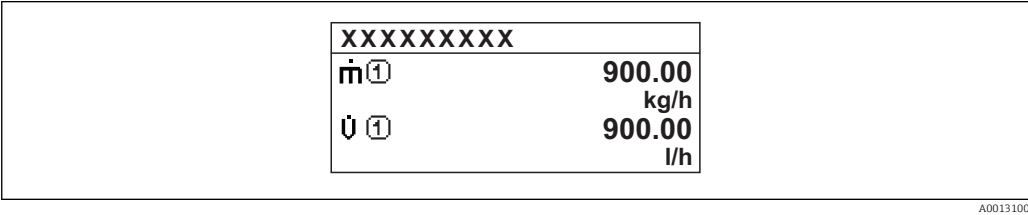

"Val. large+2val." option

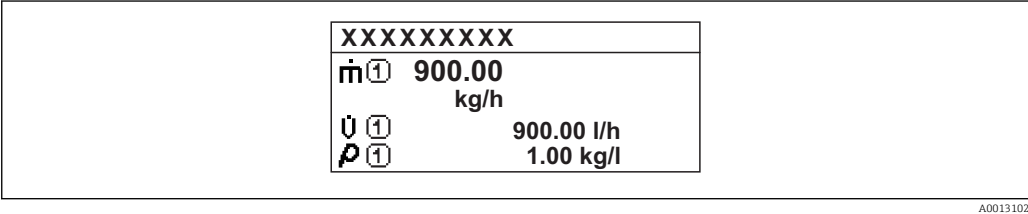

"4 values" option

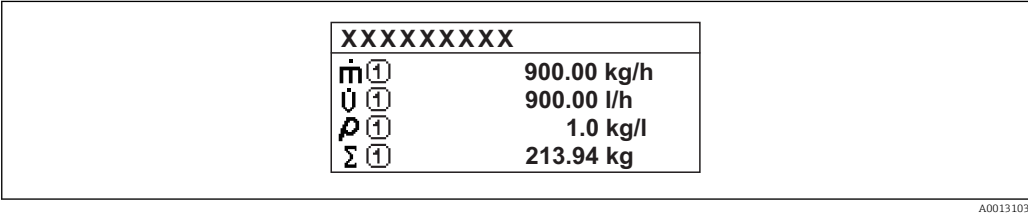

Value 1 display 	
Navigation	 Expert → System → Display → Value 1 display (0107)
Prerequisite	A local display is provided.
Description	Use this function to select one of the measured values shown on the local display.
Selection	■ Volume flow ■ Mass flow ■ Correct.vol.flow ■ Flow velocity ■ Conductivity[*] ■ CorrConductivity[*] ■ Totalizer 1 ■ Totalizer 2 ■ Totalizer 3 ■ Curr.output 1[*] ■ Curr.output 2[*] ■ Curr.output 3[*] ■ Temperature[*] ■ Electronic temp.[*] ■ Noise[*] ■ CoilCurrShotTime[*] ■ Ref Electr. Pot.[*] ■ Coating meas.val[*] ■ Test point 1 ■ Test point 2 ■ Test point 3
Factory setting	Volume flow
Additional information	<i>Description</i> If several measured values are displayed at once, the measured value selected here will be the first value to be displayed. The value is only displayed during normal operation.  The Format display parameter (→  15) is used to specify how many measured values are displayed simultaneously and how. <i>Dependency</i>  The unit of the displayed measured value is taken from the System units submenu (→  55).
0% bargraph 1 	

Navigation  Expert → System → Display → 0% bargraph 1 (0123)

Prerequisite A local display is provided.

* Visibility depends on order options or device settings

Description	Use this function to enter the 0% bar graph value to be shown on the display for the measured value 1.
User entry	Signed floating-point number
Factory setting	Country-specific: ■ 0 l/h ■ 0 gal/min (us)
Additional information	<i>Description</i>  The Format display parameter (→  15) is used to specify that the measured value is to be displayed as a bar graph. <i>User entry</i>  The unit of the displayed measured value is taken from the System units submenu (→  55).

100% bargraph 1



Navigation	  Expert → System → Display → 100% bargraph 1 (0125)
Prerequisite	A local display is provided.
Description	Use this function to enter the 100% bar graph value to be shown on the display for the measured value 1.
User entry	Signed floating-point number
Factory setting	Depends on country and nominal diameter →  219
Additional information	<i>Description</i>  The Format display parameter (→  15) is used to specify that the measured value is to be displayed as a bar graph. <i>User entry</i>  The unit of the displayed measured value is taken from the System units submenu (→  55).

Decimal places 1



Navigation	  Expert → System → Display → Decimal places 1 (0095)
Prerequisite	A measured value is specified in the Value 1 display parameter (→  18).
Description	Use this function to select the number of decimal places for measured value 1.

Selection

- X
- X.X
- X.XX
- X.XXX
- X.XXXX

Factory setting

X.XX

Additional information*Description*

This setting does not affect the measuring or computational accuracy of the device. The arrow displayed between the measured value and the unit indicates that the device computes with more digits than are shown on the local display.

Value 2 display**Navigation**

Expert → System → Display → Value 2 display (0108)

Prerequisite

A local display is provided.

Description

Use this function to select one of the measured values shown on the local display.

Selection

- None
- Volume flow
- Mass flow
- Correct.vol.flow
- Flow velocity
- Conductivity^{*}
- CorrConductivity^{*}
- Totalizer 1
- Totalizer 2
- Totalizer 3
- Curr.output 1^{*}
- Curr.output 2^{*}
- Curr.output 3^{*}
- Curr.output 4^{*}
- Temperature
- Electronic temp.^{*}
- Noise^{*}
- CoilCurrShotTime^{*}
- Ref Electr. Pot.^{*}
- Coating meas.val^{*}
- Test point 1
- Test point 2
- Test point 3

Factory setting

None

* Visibility depends on order options or device settings

Additional information	<i>Description</i> If several measured values are displayed at once, the measured value selected here will be the second value to be displayed. The value is only displayed during normal operation.  The Format display parameter (→  15) is used to specify how many measured values are displayed simultaneously and how. <i>Dependency</i>  The unit of the displayed measured value is taken from the System units submenu (→  55).
-------------------------------	---

Decimal places 2

Navigation	  Expert → System → Display → Decimal places 2 (0117)
Prerequisite	A measured value is specified in the Value 2 display parameter (→  20).
Description	Use this function to select the number of decimal places for measured value 2.
Selection	■ x ■ x.x ■ x.xx ■ x.xxx ■ x.xxxx
Factory setting	x.xx
Additional information	<i>Description</i>  This setting does not affect the measuring or computational accuracy of the device. The arrow displayed between the measured value and the unit indicates that the device computes with more digits than are shown on the local display.

Value 3 display

Navigation	  Expert → System → Display → Value 3 display (0110)
Prerequisite	A local display is provided.
Description	Use this function to select one of the measured values shown on the local display.
Selection	■ None ■ Volume flow ■ Mass flow ■ Correct.vol.flow ■ Flow velocity ■ Conductivity * ■ CorrConductivity *

* Visibility depends on order options or device settings

- Totalizer 1
- Totalizer 2
- Totalizer 3
- Curr.output 1 *
- Curr.output 2 *
- Curr.output 3 *
- Curr.output 4 *
- Temperature
- Electronic temp.
- Noise *
- CoilCurrShotTime *
- Ref Electr. Pot. *
- Coating meas.val *
- Test point 1
- Test point 2
- Test point 3

Factory setting

None

Additional information*Description*

If several measured values are displayed at once, the measured value selected here will be the third value to be displayed. The value is only displayed during normal operation.

 The **Format display** parameter (→  15) is used to specify how many measured values are displayed simultaneously and how.

Selection

 The unit of the displayed measured value is taken from the **System units** submenu (→  55).

0% bargraph 3**Navigation**

  Expert → System → Display → 0% bargraph 3 (0124)

Prerequisite

A selection was made in the **Value 3 display** parameter (→  21).

Description

Use this function to enter the 0% bar graph value to be shown on the display for the measured value 3.

User entry

Signed floating-point number

Factory setting

Country-specific:

- 0 l/h
- 0 gal/min (us)

* Visibility depends on order options or device settings

Additional information*Description*

The **Format display** parameter (→ 15) is used to specify that the measured value is to be displayed as a bar graph.

User entry

The unit of the displayed measured value is taken from the **System units** submenu (→ 55).

100% bargraph 3**Navigation**

Expert → System → Display → 100% bargraph 3 (0126)

Prerequisite

A selection was made in the **Value 3 display** parameter (→ 21).

Description

Use this function to enter the 100% bar graph value to be shown on the display for the measured value 3.

User entry

Signed floating-point number

Factory setting

0

Additional information*Description*

The **Format display** parameter (→ 15) is used to specify that the measured value is to be displayed as a bar graph.

User entry

The unit of the displayed measured value is taken from the **System units** submenu (→ 55).

Decimal places 3**Navigation**

Expert → System → Display → Decimal places 3 (0118)

Prerequisite

A measured value is specified in the **Value 3 display** parameter (→ 21).

Description

Use this function to select the number of decimal places for measured value 3.

Selection

- X
- X.X
- X.XX
- X.XXX
- X.XXXX

Factory setting

X.XX

Additional information*Description*

 This setting does not affect the measuring or computational accuracy of the device. The arrow displayed between the measured value and the unit indicates that the device computes with more digits than are shown on the local display.

Value 4 display**Navigation**

 Expert → System → Display → Value 4 display (0109)

Prerequisite

A local display is provided.

Description

Use this function to select one of the measured values shown on the local display.

Selection

- None
- Volume flow
- Mass flow
- Correct.vol.flow
- Flow velocity
- Conductivity *
- CorrConductivity *
- Totalizer 1
- Totalizer 2
- Totalizer 3
- Curr.output 1 *
- Curr.output 2 *
- Curr.output 3 *
- Curr.output 4 *
- Temperature
- Electronic temp.
- Noise *
- CoilCurrShotTime *
- Ref Electr. Pot. *
- Coating meas.val *
- Test point 1
- Test point 2
- Test point 3

Factory setting

None

Additional information*Description*

If several measured values are displayed at once, the measured value selected here will be the fourth value to be displayed. The value is only displayed during normal operation.

 The **Format display** parameter (→  15) is used to specify how many measured values are displayed simultaneously and how.

Selection

 The unit of the displayed measured value is taken from the **System units** submenu (→  55).

* Visibility depends on order options or device settings

**Decimal places 4**

Navigation	 Expert → System → Display → Decimal places 4 (0119)
Prerequisite	A measured value is specified in the Value 4 display parameter (→  24).
Description	Use this function to select the number of decimal places for measured value 4.
Selection	■ x ■ x.x ■ x.xx ■ x.xxx ■ x.xxxx
Factory setting	x.xx
Additional information	<i>Description</i>  This setting does not affect the measuring or computational accuracy of the device. The arrow displayed between the measured value and the unit indicates that the device computes with more digits than are shown on the local display.

Display interval

Navigation	 Expert → System → Display → Display interval (0096)
Prerequisite	A local display is provided.
Description	Use this function to enter the length of time the measured values are displayed if the values alternate on the display.
User entry	1 to 10 s
Factory setting	5 s
Additional information	<i>Description</i> This type of alternating display only occurs automatically if the number of measured values defined exceeds the number of values the selected display format can display simultaneously.  ■ The Value 1 display parameter (→  18) to Value 4 display parameter (→  24) are used to specify which measured values are shown on the local display. ■ The display format of the displayed measured values is specified using the Format display parameter (→  15).


Display damping

Navigation	 Expert → System → Display → Display damping (0094)
Prerequisite	A local display is provided.

Description	Use this function to enter a time constant for the reaction time of the local display to fluctuations in the measured value caused by process conditions.
User entry	0.0 to 999.9 s
Factory setting	0.0 s
Additional information	<i>User entry</i> Use this function to enter a time constant (PT1 element ¹⁾) for display damping: ■ If a low time constant is entered, the display reacts particularly quickly to fluctuating measured variables. ■ On the other hand, the display reacts more slowly if a high time constant is entered.  Damping is switched off if 0 is entered (factory setting).

Header

Navigation	  Expert → System → Display → Header (0097)
Prerequisite	A local display is provided.
Description	Use this function to select the contents of the header of the local display.
Selection	■ Device tag ■ Free text
Factory setting	Device tag
Additional information	<i>Description</i> The header text only appears during normal operation.

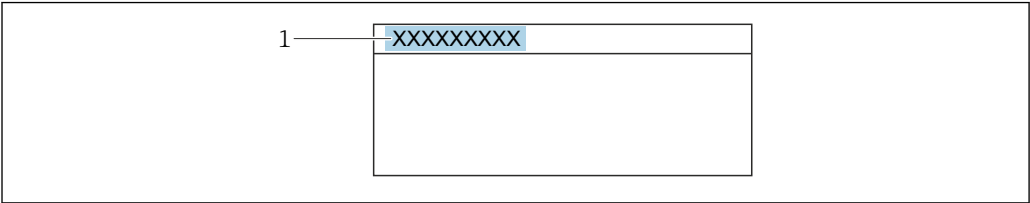


A0029422

1 Position of the header text on the display

- Selection*
- Device tag
Is defined in the **Device tag** parameter (→  181).
 - Free text
Is defined in the **Header text** parameter (→  27).

1) proportional transmission behavior with first order delay

Header text

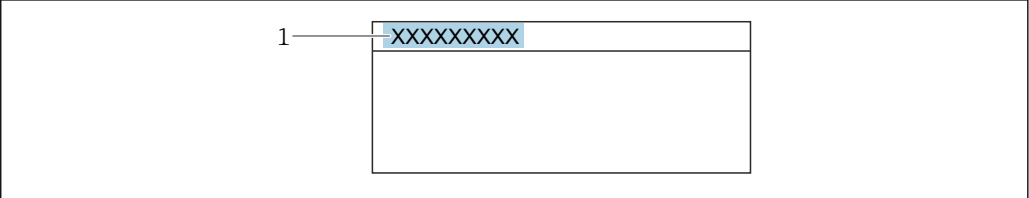Navigation	 Expert → System → Display → Header text (0112)
Prerequisite	In the Header parameter (→  26), the Free text option is selected.
Description	Use this function to enter a customer-specific text for the header of the local display.
User entry	Max. 12 characters such as letters, numbers or special characters (e.g. @, %, /)
Factory setting	-----
Additional information	<i>Description</i> The header text only appears during normal operation.  A0029422 <i>1 Position of the header text on the display</i> <i>User entry</i> The number of characters displayed depends on the characters used.

Separator

Navigation	 Expert → System → Display → Separator (0101)
Prerequisite	A local display is provided.
Description	Use this function to select the decimal separator.
Selection	▪ . (point) ▪ , (comma)
Factory setting	. (point)

Contrast display

Navigation	 Expert → System → Display → Contrast display (0105)
Prerequisite	A local display is provided.

Description	Use this function to enter a value to adapt the display contrast to the ambient conditions (e.g. the lighting or viewing angle).
User entry	20 to 80 %
Factory setting	Depends on the display

Backlight

Navigation	 Expert → System → Display → Backlight (0111)
Prerequisite	One of the following conditions is met: ■ Order code for "Display; operation", option F "4-line, illum.; touch control" ■ Order code for "Display; operation", option G "4-line, illum.; touch control +WLAN" ■ Order code for "Display; operation", option O "Separate 4-line display, illum.; 10m/30ft cable; touch control"
Description	Use this function to switch the backlight of the local display on and off.
Selection	■ Disable ■ Enable
Factory setting	Enable

3.1.2 "Configuration backup" submenu

Navigation  Expert → System → Config. backup

► Config. backup		
Operating time (0652)	→	 29
Last backup (2757)	→	 29
Config. managem. (2758)	→	 29
Backup state (2759)	→	 30
Compar. result (2760)	→	 30

Operating time

Navigation	 Expert → System → Config. backup → Operating time (0652)
Description	Use this function to display the length of time the device has been in operation.
User interface	Days (d), hours (h), minutes (m) and seconds (s)
Additional information	<i>User interface</i> The maximum number of days is 9999, which is equivalent to 27 years.

Last backup

Navigation	 Expert → System → Config. backup → Last backup (2757)
Description	Displays the time since a backup copy of the data was last saved to the device memory.
User interface	Days (d), hours (h), minutes (m) and seconds (s)

Config. managem.



Navigation	 Expert → System → Config. backup → Config. managem. (2758)
Description	Use this function to select an action to save the data to the device memory.
Selection	■ Cancel ■ Execute backup ■ Restore * ■ Compare * ■ Clear backup
Factory setting	Cancel
Additional information	<i>Selection</i>

Options	Description
Cancel	No action is executed and the user exits the parameter.
Execute backup	A backup copy of the current device configuration is saved from the HistoROM backup to the memory of the device. The backup copy includes the transmitter data of the device. The following message appears on local display: Backup active, please wait!
Restore	The last backup copy of the device configuration is restored from the device memory to the device's HistoROM backup. The backup copy includes the transmitter data of the device. The following message appears on local display: Restore active! Do not interrupt power supply!

* Visibility depends on order options or device settings

Options	Description
Compare	The device configuration saved in the device memory is compared with the current device configuration of the HistoROM backup. The following message appears on local display: Comparing files The result can be viewed in Compar. result parameter.
Clear backup	The backup copy of the device configuration is deleted from the memory of the device. The following message appears on local display: Deleting file

HistoROM

A HistoROM is a "non-volatile" device memory in the form of an EEPROM.

Backup state

Navigation	 Expert → System → Config. backup → Backup state (2759)
Description	Displays the status of the data backup process.
User interface	■ None ■ Backup in progr. ■ Restore in progr. ■ Delete in progr. ■ Comp. in progr. ■ Restoring failed ■ Backup failed
Factory setting	None

Compar. result

Navigation	 Expert → System → Config. backup → Compar. result (2760)
Description	Displays the last result of the comparison of the data records in the device memory and in the HistoROM.
User interface	■ Set. identical ■ Set. not ident. ■ No backup ■ Backup corrupt ■ Check not done ■ Dataset incomp.
Factory setting	Check not done

Additional information

Description

 The comparison is started via the **Compare** option in the **Config. managem.** parameter (→  29).

Selection

Options	Description
Set. identical	The current device configuration of the HistoROM is identical to the backup copy in the device memory. If the transmitter configuration of another device has been transmitted to the device via HistoROM in the Config. managem. parameter, the current device configuration of the HistoROM is only partially identical to the backup copy in the device memory: The settings for the transmitter are not identical.
Set. not ident.	The current device configuration of the HistoROM is not identical to the backup copy in the device memory.
No backup	There is no backup copy of the device configuration of the HistoROM in the device memory.
Backup corrupt	The current device configuration of the HistoROM is corrupt or not compatible with the backup copy in the device memory.
Check not done	The device configuration of the HistoROM has not yet been compared to the backup copy in the device memory.
Dataset incomp.	The backup copy in the device memory is not compatible with the device.

HistoROM

A HistoROM is a "non-volatile" device memory in the form of an EEPROM.

3.1.3 "Diagn. handling" submenu

Navigation  Expert → System → Diagn. handling

► Diagn. handling	
Alarm delay (0651)	→  31
► Diagn. behavior	→  32

Alarm delay



Navigation

 Expert → System → Diagn. handling → Alarm delay (0651)

Description

Use this function to enter the time interval until the device generates a diagnostic message.

 The diagnostic message is reset without a time delay.

User entry

0 to 60 s

Factory setting 0 s

Additional information Result

- This setting affects the following diagnostic messages:
- 170 coil resistance
 - 832 Electronic temp.
 - 833 Electronic temp.
 - 834 Process temp.
 - 835 Process temp.

"Diagn. behavior" submenu

Each item of diagnostic information is assigned a specific diagnostic behavior at the factory. The user can change this assignment for specific diagnostic information in the **Diagn. behavior** submenu (→  32).

The following options are available in the **Assign behavior of diagnostic no. xxx** parameters:

Options	Description
Alarm	The background lighting changes to red.
Warning	
Logbook only	The device continues to measure. The diagnostic message is displayed only in the Event logbook submenu (→  178) (Event list submenu (→  180)) and is not displayed in alternation with the operational display.
Off	The diagnostic event is ignored, and no diagnostic message is generated or entered.

The following options are available in the **Assign behavior of diagnostic no. xxx** parameters:

Diagnostic behavior	Description
Alarm	The device stops measurement. The totalizers assume the defined alarm condition. A diagnostic message is generated.
Warning	The device continues to measure. The measured value output via PROFINET and the totalizers are not affected. A diagnostic message is generated.
Logbook only	The device continues to measure. The diagnostic message is displayed only in the Event logbook submenu (→  178) (Event list submenu (→  180)) and not in alternation with the operational display.
Off	The diagnostic event is ignored, and no diagnostic message is generated or entered.

 For a list of all the diagnostic events, see the Operating Instructions for the device
→  7

Navigation  Expert → System → Diagn. handling → Diagn. behavior

► Diagn. behavior

Diagnostic no. 043 (0650)

→  33

Diagnostic no. 302 (0739)	→  34
Diagnostic no. 376 (0645)	→  34
Diagnostic no. 377 (0777)	→  34
Diagnostic no. 441 (0657)	→  35
Diagnostic no. 442 (0658)	→  35
Diagnostic no. 443 (0659)	→  35
Diagnostic no. 444 (0740)	→  36
Diagnostic no. 531 (0741)	→  36
Diagnostic no. 832 (0681)	→  37
Diagnostic no. 833 (0682)	→  37
Diagnostic no. 834 (0700)	→  37
Diagnostic no. 835 (0702)	→  38
Diagnostic no. 842 (0638)	→  38
Diagnostic no. 962 (0745)	→  39
Diagnostic no. 937 (0743)	→  38
Diagnostic no. 938 (0642)	→  39
Diagnostic no. 961 (0736)	→  39

Diagnostic no. 043 (Sens.short circ.)



Navigation

  Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 043 (0650)

Description

Option for changing the diagnostic behavior of the diagnostic message **043 Sens.short circ..**

Selection

- Off
- Alarm
- Warning
- Logbook only

Factory setting

Warning

Additional information  Detailed description of the options available for selection: →  32

Diagnostic no. 302 (Verific. active)



Navigation  Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 302 (0739)

Description Option for changing the diagnostic behavior of the diagnostic message **302 Verific. active**.

Selection

- Alarm
- Warning

Factory setting Warning

Additional information  Detailed description of the options available for selection: →  32

Diagnostic no. 376 (Sensor electron.)



Navigation  Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 376 (0645)

Description Option for changing the diagnostic behavior of the diagnostic message **376 Sensor electron..**

Selection

- Off
- Alarm
- Warning
- Logbook only

Factory setting Warning

Additional information  Detailed description of the options available for selection: →  32

Diagnostic no. 377 (Sensor electron.)



Navigation  Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 377 (0777)

Description Option for changing the diagnostic behavior of the diagnostic message **377 Sensor electron..**

Selection

- Off
- Alarm
- Warning
- Logbook only

Factory setting Warning

Additional information  Detailed description of the options available for selection: →  32

Diagnostic no. 441 (Curr.output 1 to n)



Navigation  Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 441 (0657)

Description Option for changing the diagnostic behavior of the diagnostic message **441 Curr.output 1 to n**.

Selection

- Off
- Alarm
- Warning
- Logbook only

Factory setting Warning

Additional information  Detailed description of the options available for selection: →  32

Diagnostic no. 442 (Freq. output 1 to n)



Navigation  Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 442 (0658)

Prerequisite The measuring device has a pulse/frequency/switch output.

Description Option for changing the diagnostic behavior of the diagnostic message **442 Freq. output 1 to n**.

Selection

- Off
- Alarm
- Warning
- Logbook only

Factory setting Warning

Additional information  Detailed description of the options available for selection: →  32

Diagnostic no. 443 (Pulse output 1 to n)



Navigation  Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 443 (0659)

Prerequisite The measuring device has a pulse/frequency/switch output.

Description Option for changing the diagnostic behavior of the diagnostic message **443 Pulse output 1 to n**.

Selection	■ Off ■ Alarm ■ Warning ■ Logbook only
Factory setting	Warning
Additional information	 Detailed description of the options available for selection: →  32

Diagnostic no. 444 (Current input 1 to n)

Navigation	 Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 444 (0740)
Prerequisite	The device has one current input.
Description	Option for changing the diagnostic behavior of the diagnostic message 444 Current input 1 to n .
Selection	■ Off ■ Alarm ■ Warning ■ Logbook only
Factory setting	Warning
Additional information	 Detailed description of the options available for selection: →  32

Diagnostic no. 531 (Empty pipe det.)

Navigation	 Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 531 (0741)
Description	Option for changing the diagnostic behavior of the diagnostic message 531 Empty pipe det. .
Selection	■ Off ■ Alarm ■ Warning ■ Logbook only
Factory setting	Warning
Additional information	 Detailed description of the options available for selection: →  32

Diagnostic no. 832 (Electronic temp.)



Navigation	Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 832 (0681)
Description	Option for changing the diagnostic behavior of the diagnostic message 832 Electronic temp..
Selection	■ Off ■ Alarm ■ Warning ■ Logbook only
Factory setting	Logbook only
Additional information	Detailed description of the options available for selection: → 32

Diagnostic no. 833 (Electronic temp.)



Navigation	Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 833 (0682)
Description	Option for changing the diagnostic behavior of the diagnostic message 833 Electronic temp..
Selection	■ Off ■ Alarm ■ Warning ■ Logbook only
Factory setting	Logbook only
Additional information	Detailed description of the options available for selection: → 32

Diagnostic no. 834 (Process temp.)



Navigation	Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 834 (0700)
Description	Option for changing the diagnostic behavior of the diagnostic message 834 Process temp..
Selection	■ Off ■ Alarm ■ Warning ■ Logbook only
Factory setting	Warning
Additional information	Detailed description of the options available for selection: → 32

Diagnostic no. 835 (Process temp.)



Navigation	 Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 835 (0702)
Description	Option for changing the diagnostic behavior of the diagnostic message 835 Process temp..
Selection	■ Off ■ Alarm ■ Warning ■ Logbook only
Factory setting	Warning
Additional information	 Detailed description of the options available for selection: →  32

Diagnostic no. 842 (Process limit)



Navigation	 Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 842 (0638)
Description	Option for changing the diagnostic behavior of the diagnostic message △S842 Process limit.
Selection	■ Off ■ Alarm ■ Warning ■ Logbook only
Factory setting	Off
Additional information	 Detailed description of the options available for selection: →  32

Diagnostic no. 937 (EMC interference)



Navigation	 Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 937 (0743)
Description	Option for changing the diagnostic behavior of the diagnostic message 937 EMC interference.
Selection	■ Off ■ Alarm ■ Warning ■ Logbook only
Factory setting	Warning
Additional information	 Detailed description of the options available for selection: →  32

Diagnostic no. 938 (EMC interference)



Navigation	Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 938 (0642)
Description	Option for changing the diagnostic behavior of the diagnostic message 938 EMC interference .
Selection	■ Off ■ Alarm ■ Warning ■ Logbook only
Factory setting	Alarm
Additional information	Detailed description of the options available for selection: → 32

Diagnostic no. 961



Navigation	Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 961 (0736)
Description	Option for changing the diagnostic behavior of the diagnostic message 861 Process fluid .
Selection	■ Off ■ Alarm ■ Warning ■ Logbook only
Factory setting	Alarm
Additional information	Detailed description of the options available for selection: → 32

Diagnostic no. 962 (Pipe empty)



Navigation	Expert → System → Diagn. handling → Diagn. behavior → Diagnostic no. 962 (0745)
Description	Option for changing the diagnostic behavior of the diagnostic message 862 Pipe empty .
Selection	■ Off ■ Alarm ■ Warning ■ Logbook only
Factory setting	Warning
Additional information	Detailed description of the options available for selection: → 32

3.1.4 "Administration" submenu

Navigation  Expert → System → Administration

▶ Administration		
▶ Def. access code	→ 	40
▶ Reset acc. code	→ 	41
Device reset	→ 	42
Activate SW opt.	→ 	43
SW option overv.	→ 	44

"Def. access code" wizard

 The **Def. access code** wizard (→  40) is only available when operating via the local display or Web browser.

If operating via the operating tool, the **Def. access code** parameter can be found directly in the **Administration** submenu. There is no **Confirm code** parameter if the device is operated via the operating tool.

Navigation  Expert → System → Administration → Def. access code

▶ Def. access code		
Def. access code	→ 	40
Confirm code	→ 	41

Def. access code	
------------------	---

Navigation  Expert → System → Administration → Def. access code → Def. access code

Description Use this function to enter a user-specific release code to restrict write-access to the parameters. This protects the device configuration against any inadvertent modifications via the local display, Web browser, FieldCare or DeviceCare (via CDI-RJ45 service interface).

User entry Max. 16-digit character string comprising numbers, letters and special characters

Additional information Description The write protection affects all parameters in the document marked with the  symbol. On the local display, the  symbol in front of a parameter indicates that the parameter is write-protected.

The parameters that cannot be write-accessed are grayed out in the Web browser.

-  Once the access code has been defined, write-protected parameters can only be modified if the access code is entered in the **Ent. access code** parameter (→  13).
-  If you lose the access code, please contact your Endress+Hauser sales organization.

User entry

A message is displayed if the access code is not in the input range.

Factory setting

If the factory setting is not changed or **0** is defined as the access code, the parameters are not write-protected and the device configuration data can be modified. The user is logged on in the **"Maintenance"** role.

Confirm code 	
Navigation	  Expert → System → Administration → Def. access code → Confirm code
Description	Enter the defined release code a second time to confirm the release code.
User entry	Max. 16-digit character string comprising numbers, letters and special characters

"Reset access code" submenu

Navigation   Expert → System → Administration → Reset acc. code

▶ Reset acc. code

Operating time (0652)

→  41

Reset acc. code (0024)

→  42

Operating time	
Navigation	  Expert → System → Administration → Reset acc. code → Operating time (0652)
Description	Use this function to display the length of time the device has been in operation.
User interface	Days (d), hours (h), minutes (m) and seconds (s)
Additional information	<i>User interface</i> The maximum number of days is 9999, which is equivalent to 27 years.

Reset acc. code

Navigation	 Expert → System → Administration → Reset acc. code → Reset acc. code (0024)
Description	Use this function to enter a reset code to reset the user-specific release code to the factory setting.
User entry	Character string comprising numbers, letters and special characters
Factory setting	0x00
Additional information	<i>Description</i>  For a reset code, contact your Endress+Hauser service organization. <i>User entry</i> The reset code can only be entered via: ■ Web browser ■ DeviceCare, FieldCare (via interface CDI RJ45) ■ Fieldbus

Additional parameters in the "Administration" submenu

Device reset



Navigation	 Expert → System → Administration → Device reset (0000)						
Description	Use this function to choose whether to reset the device configuration - either entirely or in part - to a defined state.						
Selection	■ Cancel ■ To delivery set. ■ Restart device ■ Rest.S-DATBackup *						
Factory setting	Cancel						
Additional information	<i>Selection</i> <table><thead><tr><th>Options</th><th>Description</th></tr></thead><tbody><tr><td>Cancel</td><td>No action is executed and the user exits the parameter.</td></tr><tr><td>To delivery set.</td><td>Every parameter for which a customer-specific default setting was ordered is reset to this customer-specific value. All other parameters are reset to the factory setting.</td></tr></tbody></table>	Options	Description	Cancel	No action is executed and the user exits the parameter.	To delivery set.	Every parameter for which a customer-specific default setting was ordered is reset to this customer-specific value. All other parameters are reset to the factory setting.
Options	Description						
Cancel	No action is executed and the user exits the parameter.						
To delivery set.	Every parameter for which a customer-specific default setting was ordered is reset to this customer-specific value. All other parameters are reset to the factory setting.						

* Visibility depends on order options or device settings

Options	Description
Restart device	The restart resets every parameter whose data are in the volatile memory (RAM) to the factory setting (e.g. measured value data). The device configuration remains unchanged.
Rest.S-DATBackup	Restore the data that are saved on the S-DAT. The data record is restored from the electronics memory to the S-DAT.  This option is displayed only in an alarm condition.

Activate SW opt.**Navigation** Expert → System → Administration → Activate SW opt. (0029)**Description**

Use this function to enter an activation code to enable an additional, ordered software option.

User entry

Max. 10-digit string consisting of numbers.

Factory setting

Depends on the software option ordered

Additional information*Description*

If a measuring device was ordered with an additional software option, the activation code is programmed in the device at the factory.

User entry

To activate a software option subsequently, please contact your Endress+Hauser sales organization.

NOTE!

The activation code is linked to the serial number of the measuring device and varies according to the device and software option.

If an incorrect or invalid code is entered, this results in the loss of software options that have already been activated.

- ▶ Before you enter a new activation code, make a note of the current activation code .
- ▶ Enter the new activation code provided by Endress+Hauser when the new software option was ordered.
- ▶ Once the activation code has been entered, check if the new software option is displayed in the **SW option overv.** parameter (→  44).
- ↳ The new software option is active if it is displayed.
- ↳ If the new software option is not displayed or all software options have been deleted, the code entered was either incorrect or invalid.
- ▶ If the code entered is incorrect or invalid, enter the old activation code .

- Have your Endress+Hauser sales organization check the new activation code remembering to specify the serial number or ask for the code again.

Example for a software option

Order code for "Application package", option **EA** "Extended HistoROM"

 The software options currently enabled are displayed in the **SW option overv.** parameter (→  44).

Web browser

 Once a software option has been activated, the page must be loaded again in the Web browser.

SW option overv.

Navigation

 Expert → System → Administration → SW option overv. (0015)

Description

Displays all the software options that are enabled in the device.

User interface

- Extend. HistoROM *
- ECC *
- HBT Monitoring *
- HBT Verification *
- Coating detect.

Additional information

Description

Displays all the options that are available if ordered by the customer.

"Extend. HistoROM" option

Order code for "Application package", option **EA** "Extended HistoROM"

"ECC" option

Order code for "Application package", option **EC** "ECC electrode cleaning"

"HBT Verification" option and "HBT Monitoring" option

Order code for "Application package", option **EB** "Heartbeat Verification + Monitoring"

3.2 "Sensor" submenu

Navigation

 Expert → Sensor

► Sensor

► Measured val.

→  45

* Visibility depends on order options or device settings

► System units	→ 55
► Process param.	→ 70
► External comp.	→ 85
► Sensor adjustm.	→ 92
► Calibration	→ 98

3.2.1 "Measured val." submenu

Navigation  Expert → Sensor → Measured val.

► Measured val.	
► Process variab.	→ 45
► Totalizer	→ 48
► Input values	→ 50
► Output values	→ 51

"Process variables" submenu

Navigation  Expert → Sensor → Measured val. → Process variab.

► Process variab.	
Volume flow (1838)	→ 46
Mass flow (1847)	→ 46
Correct.vol.flow (1851)	→ 46
Flow velocity (1854)	→ 46
Conductivity (1850)	→ 47
CorrConductivity (1853)	→ 47
Temperature (1852)	→ 47
Density (1857)	→ 48

Volume flow

Navigation  Expert → Sensor → Measured val. → Process variab. → Volume flow (1838)

Description Displays the volume flow that is currently measured.

User interface Signed floating-point number

Additional information

Mass flow

Navigation  Expert → Sensor → Measured val. → Process variab. → Mass flow (1847)

Description Displays the mass flow currently calculated.

User interface Signed floating-point number

Additional information *Dependency*
 The unit is taken from the **Mass flow unit** parameter (→  58)

Correct.vol.flow

Navigation  Expert → Sensor → Measured val. → Process variab. → Correct.vol.flow (1851)

Description Displays the corrected volume flow that is currently measured.

User interface Signed floating-point number

Additional information *Dependency*
 The unit is taken from the **Cor.volflow unit** parameter (→  60)

Flow velocity

Navigation  Expert → Sensor → Measured val. → Process variab. → Flow velocity (1854)

Description Displays the flow velocity that is currently calculated.

User interface Signed floating-point number

Conductivity

Navigation	 Expert → Sensor → Measured val. → Process variab. → Conductivity (1850)
Description	Displays the conductivity that is currently measured.
User interface	Signed floating-point number
Additional information	<i>Dependency</i>  The unit is taken from the Conductiv. unit parameter (→  57)

CorrConductivity

Navigation	 Expert → Sensor → Measured val. → Process variab. → CorrConductivity (1853)
Prerequisite	One of the following conditions is met: ■ Order code for "Sensor option", option CI "Medium temperature measurement" - or ■ The temperature is read into the flowmeter from an external device.
Description	Displays the conductivity that is currently corrected.
User interface	Positive floating-point number
Additional information	<i>Dependency</i>  The unit is taken from the Conductiv. unit parameter (→  57)

Temperature

Navigation	 Expert → Sensor → Measured val. → Process variab. → Temperature (1852)
Prerequisite	One of the following conditions is met: ■ Order code for "Sensor option", option CI "Medium temperature measurement" - or ■ The temperature is read into the flowmeter from an external device.
Description	Displays the temperature that is currently calculated.
User interface	Positive floating-point number
Additional information	<i>Dependency</i>  The unit is taken from the Temperature unit parameter (→  58)

Density

Navigation	 Expert → Sensor → Measured val. → Process variab. → Density (1857)
Description	Displays the current fixed density or density read in from an external device.
User interface	Signed floating-point number
Additional information	<i>Dependency</i>  The unit is taken from the Density unit parameter (→  59)

"Totalizer" submenu

Navigation  Expert → Sensor → Measured val. → Totalizer

► Totalizer

Totalizer val. 1 to n (0911-1 to n)

→  48

Tot. overflow 1 to n (0910-1 to n)

→  49

Totalizer val. 1 to n

Navigation	 Expert → Sensor → Measured val. → Totalizer → Totalizer val. 1 to n (0911-1 to n)
Prerequisite	A process variable is selected in the Assign variable parameter (→  167) of the Totalizer 1 to n submenu.
Description	Displays the current totalizer reading.
User interface	Signed floating-point number

Additional information*Description*

As it is only possible to display a maximum of 7 digits in the operating tool, the current counter value is the sum of the totalizer value and the overflow value from the **Tot. overflow 1 to n** parameter if the display range is exceeded.

 In the event of an error, the totalizer adopts the mode defined in the **Failure mode** parameter (→  170).

User interface

The value of the process variable totalized since measuring began can be positive or negative. This depends on the settings in the **Operation mode** parameter (→  169).

 The unit of the selected process variable is specified for the totalizer in the **Unit totalizer** parameter (→  168).

Example

Calculation of the current totalizer reading when the value exceeds the 7-digit display range of the operating tool:

- Value in the **Totalizer val. 1** parameter: 1 968 457 m³
- Value in the **Tot. overflow 1** parameter: $1 \cdot 10^7$ (1 overflow) = 10 000 000 [m³]
- Current totalizer reading: 11 968 457 m³

Tot. overflow 1 to n**Navigation**

  Expert → Sensor → Measured val. → Totalizer → Tot. overflow 1 to n (0910–1 to n)

Prerequisite

A process variable is selected in the **Assign variable** parameter (→  167) of the **Totalizer 1 to n** submenu.

Description

Displays the current totalizer overflow.

User interface

Integer with sign

Additional information*Description*

If the current totalizer reading exceeds 7 digits, which is the maximum value range that can be displayed by the operating tool, the value above this range is output as an overflow. The current totalizer value is therefore the sum of the overflow value and the totalizer value from the **Totalizer val. 1 to n** parameter.

User interface

 The unit of the selected process variable is specified for the totalizer in the **Unit totalizer** parameter (→  168).

Example

Calculation of the current totalizer reading when the value exceeds the 7-digit display range of the operating tool:

- Value in the **Totalizer val. 1** parameter: 1 968 457 m³
- Value in the **Tot. overflow 1** parameter: $2 \cdot 10^7$ (2 overflows) = 20 000 000 [m³]
- Current totalizer reading: 21 968 457 m³

"Input values" submenu

Navigation  Expert → Sensor → Measured val. → Input values

► Input values

► Current input 1 to n

→  50

► Val.stat.inp. 1 to n

→  51

"Current input 1 to n" submenu

Navigation  Expert → Sensor → Measured val. → Input values → Current input 1 to n

► Current input 1 to n

Measured val. 1 to n (1603–1 to n)

→  50

Measur. curr. 1 to n (1604–1 to n)

→  50

Measured val. 1 to n

Navigation	 Expert → Sensor → Measured val. → Input values → Current input 1 to n → Measured val. 1 to n (1603–1 to n)
Description	Displays the current input value.
User interface	Signed floating-point number

Measur. curr. 1 to n

Navigation	 Expert → Sensor → Measured val. → Input values → Current input 1 to n → Measur. curr. 1 to n (1604–1 to n)
Description	Displays the current value of the current input.
User interface	0 to 22.5 mA

"Value status input 1 to n" submenu

Navigation   Expert → Sensor → Measured val. → Input values → Val.stat.inp. 1 to n

► Val.stat.inp. 1 to n

Val.stat.inp. (1353-1 to n) →  51

Val.stat.inp.

Navigation	  Expert → Sensor → Measured val. → Input values → Val.stat.inp. 1 to n → Val.stat.inp. (1353-1 to n)
Description	Displays the current input signal level.
User interface	■ High ■ Low

"Output values" submenu

Navigation   Expert → Sensor → Measured val. → Output values

► Output values

► Value curr.out 1 to n →  51

► PFS output 1 to n →  52

► Relay output 1 to n →  54

"Value current output 1 to n" submenu

Navigation   Expert → Sensor → Measured val. → Output values → Value curr.out 1 to n

► Value curr.out 1 to n

Output curr. 1 to n (0361-1 to n) →  52

Measur. curr. 1 to n (0366-1 to n) →  52

Output curr. 1 to n

Navigation	 Expert → Sensor → Measured val. → Output values → Value curr.out 1 to n → Output curr. 1 to n (0361–1 to n)
Description	Displays the current value currently calculated for the current output.
User interface	0 to 22.5 mA

Measur. curr. 1 to n

Navigation	 Expert → Sensor → Measured val. → Output values → Value curr.out 1 to n → Measur. curr. 1 to n (0366–1 to n)
Description	Use this function to display the actual measured value of the output current.
User interface	0 to 30 mA

"Pulse/frequency/switch output 1 to n" submenu

Navigation	 Expert → Sensor → Measured val. → Output values → PFS output 1 to n
------------	---

► PFS output 1 to n

Output freq. 1 to n (0471–1 to n)

→  52

Pulse output 1 to n (0456–1 to n)

→  53

Switch status 1 to n (0461–1 to n)

→  53

Output freq. 1 to n


Navigation	 Expert → Sensor → Measured val. → Output values → PFS output 1 to n → Output freq. 1 to n (0471–1 to n)
Prerequisite	In the Operating mode parameter (→  123), the Frequency option is selected.
Description	Displays the actual value of the output frequency which is currently measured.
User interface	0.0 to 12 500.0 Hz

Pulse output 1 to n

Navigation	  Expert → Sensor → Measured val. → Output values → PFS output 1 to n → Pulse output 1 to n (0456-1 to n)
Prerequisite	The Pulse option is selected in the Operating mode parameter (→  123) parameter.
Description	Displays the pulse frequency currently output.
User interface	Positive floating-point number

Additional information*Description*

- The pulse output is an open collector output.
- This is configured at the factory in such a way that the transistor is conductive for the duration of the pulse (NO contact) and is safety-oriented.

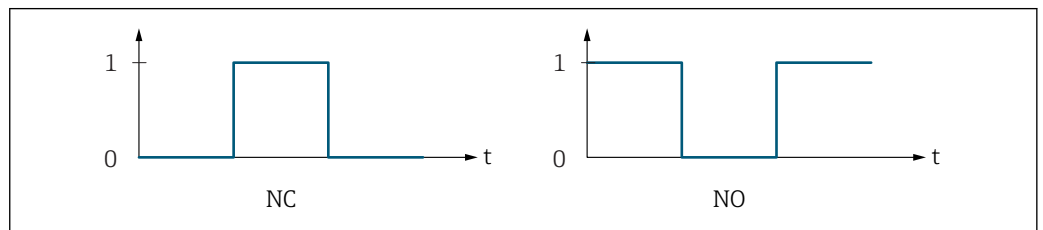

A0028726

0 Non-conductive
 1 Conductive
 NC NC contact (normally closed)
 NO NO contact (normally open)

The output behavior can be reversed via the **Invert outp.sig.** parameter (→  140) i.e. the transistor does not conduct for the duration of the pulse.

In addition, the behavior of the output in the event of a device alarm (**Failure mode** parameter (→  127)) can be configured.

Switch status 1 to n

Navigation	  Expert → Sensor → Measured val. → Output values → PFS output 1 to n → Switch status 1 to n (0461-1 to n)
Prerequisite	The Switch option is selected in the Operating mode parameter (→  123).
Description	Displays the current switch status of the status output.
User interface	■ Open ■ Closed

Additional information

User interface

- Open
The switch output is not conductive.
- Closed
The switch output is conductive.

"Relay output 1 to n" submenu

Navigation  Expert → Sensor → Measured val. → Output values → Relay output 1 to n

► Relay output 1 to n

Switch status (0801–1 to n)

→  54

Switch cycles (0815–1 to n)

→  54

Max. cycles no. (0817–1 to n)

→  55

Switch status

Navigation  Expert → Sensor → Measured val. → Output values → Relay output 1 to n → Switch status (0801–1 to n)

Description Displays the current status of the relay output.

User interface

- Open
- Closed

Additional information

User interface

- Open
The relay output is not conductive.
- Closed
The relay output is conductive.

Switch cycles

Navigation  Expert → Sensor → Measured val. → Output values → Relay output 1 to n → Switch cycles (0815–1 to n)

Description Displays all the switch cycles performed.

User interface Positive integer

Max. cycles no.	
Navigation	  Expert → Sensor → Measured val. → Output values → Relay output 1 to n → Max. cycles no. (0817-1 to n)
Description	Displays the maximum number of guaranteed switch cycles.
User interface	Positive integer

3.2.2 "System units" submenu

Navigation   Expert → Sensor → System units

► System units	
Volume flow unit (0553)	→  55
Volume unit (0563)	→  57
Conductiv. unit (0582)	→  57
Temperature unit (0557)	→  58
Mass flow unit (0554)	→  58
Mass unit (0574)	→  59
Density unit (0555)	→  59
Cor.volflow unit (0558)	→  60
Corr. vol. unit (0575)	→  61
Date/time format (2812)	→  62

Volume flow unit		
Navigation	  Expert → Sensor → System units → Volume flow unit (0553)	
Description	Use this function to select the unit for the volume flow.	

Selection*SI units*

- cm³/s
- cm³/min
- cm³/h
- cm³/d
- dm³/s
- dm³/min
- dm³/h
- dm³/d
- m³/s
- m³/min
- m³/h
- m³/d
- ml/s
- ml/min
- ml/h
- ml/d
- l/s
- l/min
- l/h
- l/d
- hl/s
- hl/min
- hl/h
- hl/d
- Ml/s
- Ml/min
- Ml/h
- Ml/d

US units

- af/s
- af/min
- af/h
- af/d
- ft³/s
- ft³/min
- ft³/h
- ft³/d
- MMft³/s
- MMft³/min
- MMft³/h
- Mft³/d
- fl oz/s (us)
- fl oz/min (us)
- fl oz/h (us)
- fl oz/d (us)
- gal/s (us)
- gal/min (us)
- gal/h (us)
- gal/d (us)
- Mgal/s (us)
- Mgal/min (us)
- Mgal/h (us)
- Mgal/d (us)
- bbl/s (us;liq.)
- bbl/min (us;liq.)
- bbl/h (us;liq.)
- bbl/d (us;liq.)
- bbl/s (us;beer)
- bbl/min (us;beer)
- bbl/h (us;beer)
- bbl/d (us;beer)
- bbl/s (us;oil)
- bbl/min (us;oil)
- bbl/h (us;oil)
- bbl/d (us;oil)
- bbl/s (us;tank)
- bbl/min (us;tank)
- bbl/h (us;tank)
- bbl/d (us;tank)
- kgal/s (us)
- kgal/min (us)
- kgal/h (us)
- kgal/d (us)

Imperial units

- gal/s (imp)
- gal/min (imp)
- gal/h (imp)
- gal/d (imp)
- Mgal/s (imp)
- Mgal/min (imp)
- Mgal/h (imp)
- Mgal/d (imp)
- bbl/s (imp;beer)
- bbl/min (imp;beer)
- bbl/h (imp;beer)
- bbl/d (imp;beer)
- bbl/s (imp;oil)
- bbl/min (imp;oil)
- bbl/h (imp;oil)
- bbl/d (imp;oil)

Factory setting

Country-specific:

- l/h
- gal/min (us)

Additional information*Result*

The selected unit applies for:

Volume flow parameter (→  46)*Selection*For an explanation of the abbreviated units: →  224

**Volume unit**

Navigation  Expert → Sensor → System units → Volume unit (0563)

Description Use this function to select the unit for the volume.

Selection

<i>SI units</i>	<i>US units</i>	<i>Imperial units</i>
■ cm ³	■ af	■ gal (imp)
■ dm ³	■ ft ³	■ Mgal (imp)
■ m ³	■ Mft ³	■ bbl (imp;beer)
■ ml	■ fl oz (us)	■ bbl (imp;oil)
■ l	■ gal (us)	
■ hl	■ kgal (us)	
■ Ml Mega	■ Mgal (us)	
	■ bbl (us;oil)	
	■ bbl (us;liq.)	
	■ bbl (us;beer)	
	■ bbl (us;tank)	

Factory setting Country-specific:
 ■ m³
 ■ gal (us)

Additional information *Selection*
 For an explanation of the abbreviated units: →  224

**Conductiv. unit**

Navigation  Expert → Sensor → System units → Conductiv. unit (0582)

Prerequisite The **On** option is selected in the **Conduct. measur.** parameter (→  74) parameter.

Description Use this function to select the unit for the conductivity.

Selection

SI units

- nS/cm
- µS/cm
- µS/m
- µS/mm
- mS/m
- mS/cm
- S/cm
- S/m
- kS/m
- MS/m

Factory setting µS/cm

Additional information	<i>Effect</i> The selected unit applies for: ■ Conductivity parameter (→ 47) ■ CorrConductivity parameter (→ 47) <i>Selection</i>  For an explanation of the abbreviated units: → 224
------------------------	---

Temperature unit	
------------------	---

Navigation	 Expert → Sensor → System units → Temperature unit (0557)						
Description	Use this function to select the unit for the temperature.						
Selection	<table><tr><td><i>SI units</i></td><td><i>US units</i></td></tr><tr><td>■ °C</td><td>■ °F</td></tr><tr><td>■ K</td><td>■ °R</td></tr></table>	<i>SI units</i>	<i>US units</i>	■ °C	■ °F	■ K	■ °R
<i>SI units</i>	<i>US units</i>						
■ °C	■ °F						
■ K	■ °R						
Factory setting	Country-specific: ■ °C ■ °F						

Additional information	<i>Result</i> The selected unit applies for: ■ Temperature parameter (→ 47) ■ Maximum value parameter (→ 200) ■ Minimum value parameter (→ 200) ■ External temp. parameter (→ 90) ■ Maximum value parameter (→ 201) ■ Minimum value parameter (→ 201) ■ FailSafeValExtT parameter (→ 91) <i>Selection</i>  For an explanation of the abbreviated units: → 224
------------------------	--

Mass flow unit	
----------------	---

Navigation	 Expert → Sensor → System units → Mass flow unit (0554)
Description	Use this function to select the unit for the mass flow.

Selection	<i>SI units</i>	<i>US units</i>
	■ g/s ■ g/min ■ g/h ■ g/d ■ kg/s ■ kg/min ■ kg/h ■ kg/d ■ t/s ■ t/min ■ t/h ■ t/d	■ oz/s ■ oz/min ■ oz/h ■ oz/d ■ lb/s ■ lb/min ■ lb/h ■ lb/d ■ STon/s ■ STon/min ■ STon/h ■ STon/d

Factory setting	Country-specific:
	■ kg/h ■ lb/min

Additional information	<i>Result</i>
	The selected unit applies for: Mass flow parameter (→  46)

SelectionFor an explanation of the abbreviated units: →  224**Mass unit**

Navigation	  Expert → Sensor → System units → Mass unit (0574)
-------------------	---

Description	Use this function to select the unit for the mass.
--------------------	--

Selection	<i>SI units</i>	<i>US units</i>
	■ g ■ kg ■ t	■ oz ■ lb ■ STon

Factory setting	Country-specific:
	■ kg ■ lb

Additional information	<i>Selection</i>
	 For an explanation of the abbreviated units: →  224

Density unit

Navigation	  Expert → Sensor → System units → Density unit (0555)
-------------------	--

Description	Use this function to select the unit for the density.
--------------------	---

Selection	<i>SI units</i>		
	■ g/cm³ ■ g/m³ ■ kg/l ■ kg/dm³ ■ kg/m³ ■ SD4°C ■ SD15°C ■ SD20°C ■ SG4°C ■ SG15°C ■ SG20°C		
	<i>US units</i>		
	■ lb/ft³ ■ lb/gal (us) ■ lb/bbl (us;liq.) ■ lb/bbl (us;beer) ■ lb/bbl (us;oil) ■ lb/bbl (us;tank)		
	<i>Imperial units</i>		
	■ lb/gal (imp) ■ lb/bbl (imp;beer) ■ lb/bbl (imp;oil)		
Factory setting	Country-specific:		
	■ kg/l ■ lb/ft³		
Additional information	<i>Result</i>		
	The selected unit applies for: ■ External density parameter (→  86) ■ Fixed density parameter (→  86)		
	<i>Selection</i>		
	■ SD = specific density The specific density is the ratio of the medium density to the water density at a water temperature of +4 °C (+39 °F), +15 °C (+59 °F), +20 °C (+68 °F). ■ SG = specific gravity The specific gravity is the ratio of the medium density to the water density at a water temperature of +4 °C (+39 °F), +15 °C (+59 °F), +20 °C (+68 °F).		
	 For an explanation of the abbreviated units: →  224		

Cor.volflow unit

Navigation	  Expert → Sensor → System units → Cor.volflow unit (0558)
Description	Use this function to select the unit for the corrected volume flow.

Selection	<i>SI units</i>	<i>US units</i>	<i>Imperial units</i>
	■ NI/s	■ Sft ³ /s	■ Sgal/s (imp)
	■ NI/min	■ Sft ³ /min	■ Sgal/min (imp)
	■ NI/h	■ Sft ³ /h	■ Sgal/h (imp)
	■ NI/d	■ Sft ³ /d	■ Sgal/d (imp)
	■ Nhl/s	■ Sgal/s (us)	
	■ Nhl/min	■ Sgal/min (us)	
	■ Nhl/h	■ Sgal/h (us)	
	■ Nhl/d	■ Sgal/d (us)	
	■ Nm ³ /s	■ Sbbbl/s (us;liq.)	
	■ Nm ³ /min	■ Sbbbl/min (us;liq.)	
	■ Nm ³ /h	■ Sbbbl/h (us;liq.)	
	■ Nm ³ /d	■ Sbbbl/d (us;liq.)	
	■ SI/s	■ MMSft ³ /s	
	■ SI/min	■ MMSft ³ /min	
	■ SI/h	■ MMSft ³ /h	
	■ SI/d	■ Sbbbl/s (us;oil)	
	■ Sm ³ /s	■ Sbbbl/min (us;oil)	
	■ Sm ³ /min	■ Sbbbl/h (us;oil)	
	■ Sm ³ /h	■ Sbbbl/d (us;oil)	
	■ Sm ³ /d		
	■ MSft ³ /d		

Factory setting	Country-specific:
	■ NI/h
	■ Sft ³ /h

Additional information	<i>Result</i> The selected unit applies for: Correct.vol.flow parameter (→  46) <i>Selection</i>  For an explanation of the abbreviated units: →  224
------------------------	--

Corr. vol. unit



Navigation	  Expert → Sensor → System units → Corr. vol. unit (0575)
------------	---

Description	Use this function to select the unit for the corrected volume.
-------------	--

Selection	<i>SI units</i>	<i>US units</i>	<i>Imperial units</i>
	■ NI	■ Sft ³	■ Sgal (imp)
	■ Nhl	■ MMSft ³	
	■ Nm ³	■ Sgal (us)	
	■ SI	■ Sbbbl (us;liq.)	
	■ Sm ³	■ Sbbbl (us;oil)	

Factory setting	Country-specific:
	■ Nm ³
	■ Sft ³

Additional information

Selection

 For an explanation of the abbreviated units: →  224

Date/time format



Navigation

  Expert → Sensor → System units → Date/time format (2812)

Description

Use this function to select the desired time format for calibration history.

Selection

- dd.mm.yy hh:mm
- dd.mm.yy am/pm
- mm/dd/yy hh:mm
- mm/dd/yy am/pm

Factory setting

dd.mm.yy hh:mm

Additional information

Selection

 For an explanation of the abbreviated units: →  224

"User-spec. units" submenu

Navigation

  Expert → Sensor → System units → User-spec. units

► User-spec. units

Volume text (0567)

→  63

Volume offset (0569)

→  64

Volume factor (0568)

→  64

Mass text (0560)

→  64

Mass offset (0562)

→  65

Mass factor (0561)

→  65

Corr. vol. text (0592)

→  65

Corr vol. offset (0602)

→  66

Cor.vol. factor (0590)

→  66

Density text (0570)

→  66

Density offset (0571)	→  67
Density factor (0572)	→  67
Spec. enth. text (0585)	→  67
Spec. enth. off. (0584)	→  68
Spec. enth. fac. (0583)	→  68
Energy text (0600)	→  68
Energy offset (0599)	→  69
Energy factor (0586)	→  69
Pressure text (0581)	→  69
Pressure offset (0580)	→  70
Pressure factor (0579)	→  70

Volume text

Navigation	 Expert → Sensor → System units → User-spec. units → Volume text (0567)
Description	Use this function to enter a text for the user-specific unit of volume and volume flow. The corresponding time units (s, min, h, d) for volume flow are generated automatically.
User entry	Max. 10 characters such as letters, numbers or special characters (@, %, /)
Factory setting	User vol.
Additional information	Result  The defined unit is shown as an option in the choose list of the following parameters: ■ Volume flow unit parameter (→  55) ■ Volume unit parameter (→  57) Example If the text GLAS is entered, the choose list of the Volume flow unit parameter (→  55) shows the following options: ■ GLAS/s ■ GLAS/min ■ GLAS/h ■ GLAS/d

Volume offset		
Navigation	 Expert → Sensor → System units → User-spec. units → Volume offset (0569)	
Description	Use this function to enter the offset for adapting the user-specific volume unit and volume flow unit (without time).	
User entry	Signed floating-point number	
Factory setting	0	
Additional information	<i>Description</i>  Value in user-specific unit = (factor × value in base unit) + offset	
Volume factor		
Navigation	 Expert → Sensor → System units → User-spec. units → Volume factor (0568)	
Description	Use this function to enter a quantity factor (without time) for the user-specific volume and volume flow unit.	
User entry	Signed floating-point number	
Factory setting	1.0	
Mass text		
Navigation	 Expert → Sensor → System units → User-spec. units → Mass text (0560)	
Description	Use this function to enter a text for the user-specific unit of mass and mass flow. The corresponding time units (s, min, h, d) for mass flow are generated automatically.	
User entry	Max. 10 characters such as letters, numbers or special characters (@, %, /)	
Factory setting	User mass	

Additional information*Result*

The defined unit is shown as an option in the choose list of the following parameters:

- **Mass flow unit** parameter (→  58)
- **Mass unit** parameter (→  59)

Example

If the text GLAS is entered, the following options are displayed in the picklist for the **Mass flow unit** parameter (→  58):

- GLAS/s
- GLAS/min
- GLAS/h
- GLAS/d

Mass offset**Navigation**

Expert → Sensor → System units → User-spec. units → Mass offset (0562)

Description

Use this function to enter the offset for adapting the user-specific mass unit and mass flow unit (without time).

User entry

Signed floating-point number

Factory setting

0

Additional information*Description*

Value in user-specific unit = (factor × value in basic unit) + offset

Mass factor**Navigation**

Expert → Sensor → System units → User-spec. units → Mass factor (0561)

Description

Use this function to enter a quantity factor (without time) for the user-specific mass and mass flow unit.

User entry

Signed floating-point number

Factory setting

1.0

Corr. vol. text**Navigation**

Expert → Sensor → System units → User-spec. units → Corr. vol. text (0592)

Description

Use this function to enter a text for the user-specific unit of the corrected volume and corrected volume flow. The corresponding time units (s, min, h, d) for mass flow are generated automatically.

User entry	Max. 10 characters such as letters, numbers or special characters (@, %, /)
Factory setting	UserCrVol.
Additional information	<i>Result</i>  The defined unit is shown as an option in the choose list of the following parameters: ▪ Cor.volflow unit parameter (→  60) ▪ Corr. vol. unit parameter (→  61) <i>Example</i> If the text GLAS is entered, the choose list of the Cor.volflow unit parameter (→  60) shows the following options: ▪ GLAS/s ▪ GLAS/min ▪ GLAS/h ▪ GLAS/d

Corr vol. offset

Navigation	  Expert → Sensor → System units → User-spec. units → Corr vol. offset (0602)
Description	Use this function to enter the offset for adapting the user-specific corrected volume unit and corrected volume flow unit (without time).  Value in user-specific unit = (factor × value in base unit) + offset
User entry	Signed floating-point number
Factory setting	0

Cor.vol. factor

Navigation	  Expert → Sensor → System units → User-spec. units → Cor.vol. factor (0590)
Description	Use this function to enter a quantity factor (without time) for the user-specific corrected volume unit and corrected volume flow unit.
User entry	Signed floating-point number
Factory setting	1.0

Density text

Navigation	  Expert → Sensor → System units → User-spec. units → Density text (0570)
Description	Use this function to enter a text or the user-specific unit of density.

User entry	Max. 10 characters such as letters, numbers or special characters (@, %, /)
Factory setting	User dens.
Additional information	<i>Result</i>  The defined unit is shown as an option in the choose list of the Density unit parameter (→  59). <i>Example</i> Enter text "CE_L" for centners per liter

Density offset

Navigation	  Expert → Sensor → System units → User-spec. units → Density offset (0571)
Description	Use this function to enter the zero point shift for the user-specific density unit.  Value in user-specific unit = (factor × value in basic unit) + offset
User entry	Signed floating-point number
Factory setting	0

Density factor

Navigation	  Expert → Sensor → System units → User-spec. units → Density factor (0572)
Description	Use this function to enter a quantity factor for the user-specific density unit.
User entry	Signed floating-point number
Factory setting	1.0

Spec. enth. text

Navigation	  Expert → Sensor → System units → User-spec. units → Spec. enth. text (0585)
User entry	Max. 10 characters such as letters, numbers or special characters (@, %, /)
Factory setting	User enth.

Additional information	<i>Result</i> <i>Example</i> If the text CAL is entered, the choose list of the Cal. value unit parameter shows the following options: ■ CAL/Nm3 ■ CAL/m3 ■ CAL/ft3 ■ CAL/Sft3
Spec. enth. off.	
Navigation	 Expert → Sensor → System units → User-spec. units → Spec. enth. off. (0584)
Description	Use this function to enter the offset for adapting the user-specific calorific value unit (without volume).
User entry	Signed floating-point number
Factory setting	0
Spec. enth. fac.	
Navigation	 Expert → Sensor → System units → User-spec. units → Spec. enth. fac. (0583)
Description	Use this function to enter a quantity factor (without volume) for the user-specific calorific value unit.
User entry	Signed floating-point number
Factory setting	1.0
Additional information	<i>Example</i> $1 \text{ W} \times \text{min} = 60 \text{ J} \rightarrow 0.166 \text{ W} \times \text{min} = 1 \text{ J} \rightarrow \text{user entry: } 0.0166$
Energy text	
Navigation	 Expert → Sensor → System units → User-spec. units → Energy text (0600)
Description	Use this function to enter a text for the user-specific energy unit.
User entry	Max. 10 characters such as letters, numbers or special characters (@, %, /)
Factory setting	User en.

Additional information*Result*

The defined unit is shown as an option in the choose list of the following parameters:

- **Energy unit** parameter
- **Energy flow unit** parameter

Example

If the text W is entered, the choose list of the **Energy flow unit** parameter shows the following options:

- W/s
- W/min
- W/h
- W/d

Energy offset**Navigation**

Expert → Sensor → System units → User-spec. units → Energy offset (0599)

Description

Use this function to enter the offset for adapting the user-specific energy unit (without time).

User entry

Signed floating-point number

Factory setting

0

Energy factor**Navigation**

Expert → Sensor → System units → User-spec. units → Energy factor (0586)

Description

Use this function to enter a quantity factor for the user-specific energy unit.

User entry

Signed floating-point number

Factory setting

1.0

Pressure text**Navigation**

Expert → Sensor → System units → User-spec. units → Pressure text (0581)

Description

Use this function to enter a text for the user-specific pressure unit.

User entry

Max. 10 characters such as letters, numbers or special characters (@, %, /)

Factory setting

User pres.

Additional information	<i>Result</i>  The defined unit is shown as an option in the choose list of the Pressure unit parameter.
Pressure offset 	
Navigation	  Expert → Sensor → System units → User-spec. units → Pressure offset (0580)
Description	Use this function to enter the offset for adapting the user-specific pressure unit.
User entry	Signed floating-point number
Factory setting	0
Pressure factor 	
Navigation	  Expert → Sensor → System units → User-spec. units → Pressure factor (0579)
Description	Use this function to enter a quantity factor for the user-specific pressure unit.
User entry	Signed floating-point number
Factory setting	1.0
Additional information	<i>Example</i> 1 Dyn/cm² = 0.1 Pa → 10 Dyn/cm² = 1 Pa → user entry: 10

3.2.3 "Process param." submenu

Navigation   Expert → Sensor → Process param.

► Process param.

Filter options (6710)

→  71

Flow damping (6661)

→  73

Flow override (1839)

→  73

Conduct. measur. (6514)

→  74

Conduct. damping (1803)

→  74

Cond. temp.coeff (1891)	→ 75
Temp. damping (1886)	→ 75
Ref.density (1885)	→ 75
► Low flow cut off	→ 76
► Empty pipe det.	→ 78
► ECC	→ 81
► Coating detect.	→ 83

Filter options

Navigation	Expert → Sensor → Process param. → Filter options (6710)
Description	Use this function to select a filter option.
Selection	■ Adaptive ■ Adaptive CIP on ■ Dynamic ■ Dynamic CIP on ■ Binomial ■ Binomial CIP on
Factory setting	Binomial
Additional information	<i>Description</i> The user can choose from a range of filter combinations which can optimize the measurement result depending on the application. Each change in the filter setting affects

the output signal of the measuring device. The response time of the output signal increases as the filter depth increases.

Selection

- **Adaptive**
 - Strong flow damping with a short output signal response time.
 - Some time is needed before a stable output signal can be generated.
 - Not suitable for pulsating flow as the average flow can be different here.
- **Dynamic**
 - Average flow damping with a delayed output signal response time.
 - The average flow is displayed correctly over a measuring interval determined over a long period.
- **Binomial**
 - Weak flow damping with a short output signal response time.
 - The average flow is displayed correctly over a measuring interval determined over a long period.
- **CIP**
 - This filter is also available for the **Adaptive** and **Dynamic** filter options.
 - If the CIP filter has detected a change in the medium (abrupt increase in the noise level, e.g. quickly changing medium conductivity values during CIP cleaning), flow damping is greatly increased and the raw value (before flow damping) is limited by the mean value (delimiter). This eliminates extremely high measured errors (up to several 100 m/s).
 - If the CIP filter is enabled, the response time of the entire measuring system increases and the output signal is delayed accordingly.

Examples

Possible applications for the filters

Application	Adaptive	Adaptive CIP	Dynamic	Dynamic CIP	Binomial	Binomial CP
Pulsating flow (flow is negative intermittently)	---	---	++	--	++	
Flow changes frequently (flow is dynamic)	-	--	++	-	++	
Clear signal, quick control loop (< 1 s)	--	--	+ ¹⁾		++	
Poor signal, slow control loop (response time of a few seconds)	++	-	--	---	---	
Permanently bad signal	++	--	-	---	-	
Short and severe signal distortion after a while		++		++		
Replacement of a Promag 50/53: system damping Promag 100 = 0.5 * Promag 50/53					+++	
Replacement of a Promag 10: system damping Promag 100 = Promag 10 + 2			+++			
For a stable flow signal (no other requirements)	+++					

1) Flow damping value < 6

Flow damping		
Navigation	  Expert → Sensor → Process param. → Flow damping (6661)	
Description	Use this function to enter flow damping. Reduction of the variability of the flow measured value (in relation to interference). For this purpose, the depth of the flow filter is adjusted: when the filter setting increases, the reaction time of the device also increases.	
User entry	0 to 15	
Factory setting	4	
Additional information	<i>User entry</i> - Value = 0: no damping - Value > 0: damping is increased  0 is a weak damping and 15 a strong one. - A damping of 0 is not recommended, as the measuring signal is then so noisy that it is almost impossible to carry out a measurement. - The damping depends on the measuring period and the filter type selected. - An increase or decrease in the damping depends on the application. <i>Effect</i>  The damping affects the following variables of the device: - Outputs →  107 - Low flow cut off →  76 - Totalizers →  167	
Flow override		
Navigation	  Expert → Sensor → Process param. → Flow override (1839)	
Description	Use this function to select whether to interrupt the evaluation of measured values. This is useful for the cleaning processes of a pipeline, for example.	
Selection	- Off - On	
Factory setting	Off	
Additional information	<i>Description</i> Flow override is active - The diagnostic message  C453 Flow override is output. - Output values - Temperature: continues to be output - Totalizers 1-3: stop being totalized  The Flow override option can also be activated in the Status input submenu: Assign stat.inp. parameter (→  106).	

Conduct. measur.

Navigation	 Expert → Sensor → Process param. → Conduct. measur. (6514)
Prerequisite	The On option is selected in the Conduct. measur. parameter (→  74) parameter.
Description	Use this function to enable and disable conductivity measurement.
Selection	■ Off ■ On
Factory setting	Off
Additional information	<i>Description</i>  For conductivity measurement to work, the medium must have a minimum conductivity of 5 µS/cm.

Conduct. damping

Navigation	 Expert → Sensor → Process param. → Conduct. damping (1803)
Prerequisite	The On option is selected in the Conduct. measur. parameter (→  74) parameter.
Description	Use this function to enter a time constant for conductivity damping (PT1 element).
User entry	0 to 999.9 s
Factory setting	0 s
Additional information	<i>Description</i>  The damping is performed by a PT1 element ²⁾. <i>User entry</i> ■ Value = 0: no damping ■ Value > 0: damping is increased  Damping is switched off if 0 is entered (factory setting).

2) Proportional behavior with first-order lag

Cond. temp.coeff		
Navigation	  Expert → Sensor → Process param. → Cond. temp.coeff (1891)	
Prerequisite	One of the following conditions is met: ■ Order code for "Sensor option", option CI "Medium temperature measurement" or ■ The temperature is read into the flowmeter from an external device.	
Description	Use this function to enter the temperature coefficient for the conductivity.	
User entry	Signed floating-point number	
Factory setting	2.1 %/K	
Temp. damping		
Navigation	  Expert → Sensor → Process param. → Temp. damping (1886)	
Prerequisite	One of the following conditions is met: ■ Order code for "Sensor option", option CI "Medium temperature measurement" or ■ The temperature is read into the flowmeter from an external device.	
Description	Use this function to enter the time constant for temperature damping.	
User entry	0 to 999.9 s	
Factory setting	0 s	
Ref.density		
Navigation	  Expert → Sensor → Process param. → Ref.density (1885)	
Description	Use this function to enter a fixed value for the reference density.	
User entry	Positive floating-point number	
Factory setting	Country-specific: ■ 1 kg/l ■ 1 lb/ft³	
Additional information	<i>Dependency</i>  The unit is taken from the Density unit parameter (→  59)	

"Low flow cut off" submenu

Navigation  Expert → Sensor → Process param. → Low flow cut off

► Low flow cut off

Assign variable (1837)

→  76

On value (1805)

→  76

Off value (1804)

→  77

Pres. shock sup. (1806)


→  77

Assign variable

Navigation	 Expert → Sensor → Process param. → Low flow cut off → Assign variable (1837)
Description	Use this function to select the process variable for low flow cutoff detection.
Selection	■ Off ■ Volume flow ■ Mass flow ■ Correct.vol.flow
Factory setting	Volume flow

On value

Navigation	 Expert → Sensor → Process param. → Low flow cut off → On value (1805)
Prerequisite	A process variable is selected in the Assign variable parameter (→  76).
Description	Use this function to enter a switch-on value for low flow cut off. Low flow cut off is activated if the value entered is not equal to 0 →  77.
User entry	Positive floating-point number
Factory setting	Depends on country and nominal diameter→  220
Additional information	Dependency  The unit depends on the process variable selected in the Assign variable parameter (→  76).

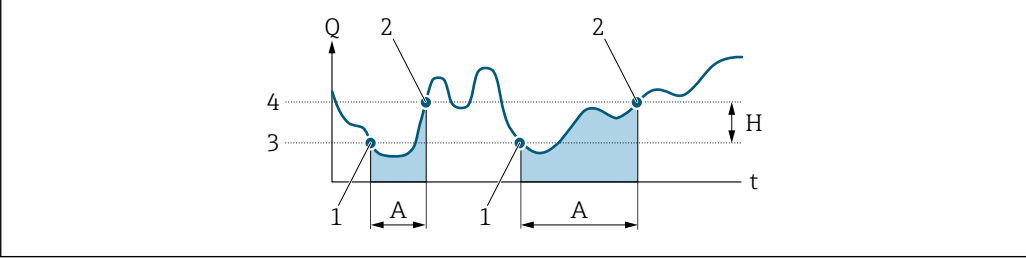
Off value	
Navigation	 Expert → Sensor → Process param. → Low flow cut off → Off value (1804)
Prerequisite	A process variable is selected in the Assign variable parameter (→  76).
Description	Use this function to enter a switch-off value for low flow cut off. The off value is entered as a positive hysteresis from the on value →  76.
User entry	0 to 100.0 %
Factory setting	50 %
Additional information	<i>Example</i>  <i>Q</i> Flow <i>t</i> Time <i>H</i> Hysteresis <i>A</i> Low flow cut off active 1 Low flow cut off is activated 2 Low flow cut off is deactivated 3 On value entered 4 Off value entered
Pres. shock sup.	
Navigation	 Expert → Sensor → Process param. → Low flow cut off → Pres. shock sup. (1806)
Prerequisite	A process variable is selected in the Assign variable parameter (→  76).
Description	Use this function to enter the time interval for signal suppression (= active pressure shock suppression).
User entry	0 to 100 s
Factory setting	0 s
Additional information	<i>Description</i> Pressure shock suppression is enabled ■ Prerequisite: Flow rate < on-value of low flow cut off ■ Output values ■ Flow displayed: 0 ■ Totalizer: the totalizers are pegged at the last correct value

Pressure shock suppression is disabled

- Prerequisite: the time interval set in this function has elapsed.
- If the flow also exceeds the switch-off value for low flow cut off, the device starts processing the current flow value again and displays it.

Example

When closing a valve, momentarily strong fluid movements may occur in the pipeline, which are registered by the measuring system. These totalized flow values lead to a false totalizer status, particularly during batching processes.

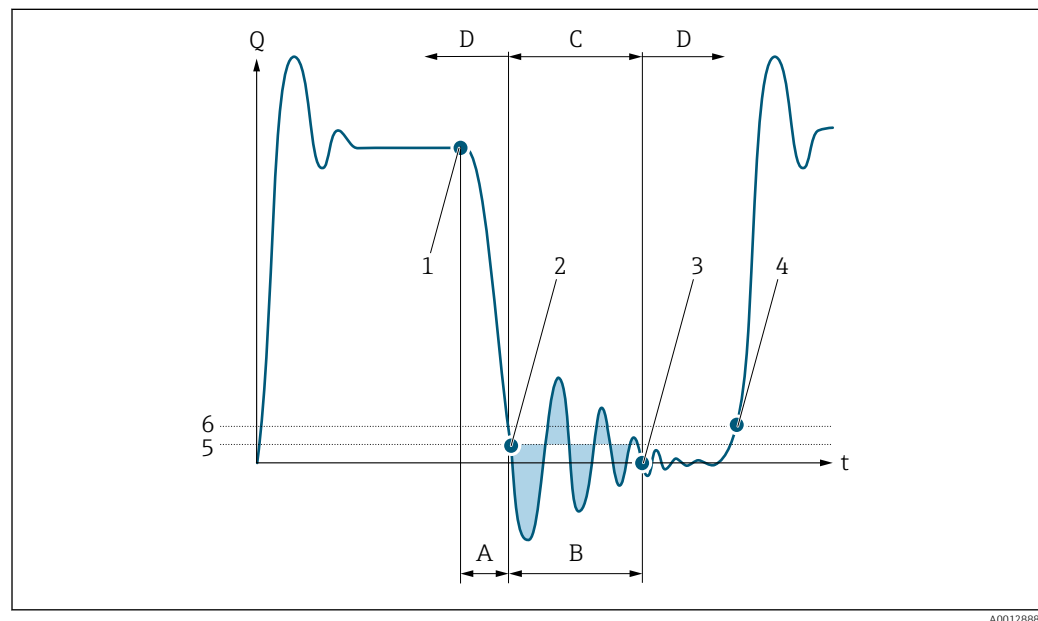

A0012888

- Q Flow
 t Time
 A Drip
 B Pressure shock
 C Pressure shock suppression active as specified by the time entered
 D Pressure shock suppression inactive
 1 Valve closes
 2 Flow falls below the on-value of the low flow cut off: pressure shock suppression is activated
 3 The time entered has elapsed: pressure shock suppression is deactivated
 4 The actual flow value is now displayed and output
 5 On-value for low flow cut off
 6 Off-value for low flow cut off

"Empty pipe det." submenu

Navigation Expert → Sensor → Process param. → Empty pipe det.

► Empty pipe det.	
Empty pipe det. (1860)	→ 79
Switch point EPD (6562)	→ 79
Response time (1859)	→ 79

New adjustment (6560)	→ 80
Progress (6571)	→ 80
Empty pipe value (6527)	→ 80
Full pipe value (6548)	→ 81
Meas. value EPD (6559)	→ 81

Empty pipe det.



Navigation	Expert → Sensor → Process param. → Empty pipe det. → Empty pipe det. (1860)
Description	Use this function to switch empty pipe detection on and off.
Selection	■ Off ■ On
Factory setting	Off

Switch point EPD



Navigation	Expert → Sensor → Process param. → Empty pipe det. → Switch point EPD (6562)
Prerequisite	The On option is selected in the Empty pipe det. parameter (→ 79).
Description	Use this function to enter the percentage threshold value of the resistance in relation to the adjustment values.
User entry	0 to 100 %
Factory setting	10 %

Response time



Navigation	Expert → Sensor → Process param. → Empty pipe det. → Response time (1859)
Prerequisite	A process variable is selected in the Assign variable parameter (→ 79).
Description	Use this function to enter the minimum length of time (debouncing time) the signal must be present for the diagnostic message △S862 Pipe empty to be triggered if the measuring pipe is empty or partially full.

User entry 0 to 100 s

Factory setting 1 s

New adjustment

Navigation   Expert → Sensor → Process param. → Empty pipe det. → New adjustment (6560)

Prerequisite The **On** option is selected in the **Empty pipe det.** parameter (→  79).

Description For selecting whether to perform an empty pipe or full pipe adjustment.

Selection

- Cancel
- Empty pipe adj.
- Full pipe adjust

Factory setting Cancel

Progress

Navigation   Expert → Sensor → Process param. → Empty pipe det. → Progress (6571)

Prerequisite The **On** option is selected in the **Empty pipe det.** parameter (→  79).

Description Use this function to view the progress.

User interface

- Ok
- Busy
- Not ok

Empty pipe value

Navigation   Expert → Sensor → Process param. → Empty pipe det. → Empty pipe value (6527)

Prerequisite

- In the **Empty pipe det.** parameter (→  79), the **On** option is selected.
- Adjustment value > full pipe value.

Description Displays the adjustment value when the measuring pipe is empty.

User interface Positive floating-point number

Full pipe value	
Navigation	  Expert → Sensor → Process param. → Empty pipe det. → Full pipe value (6548)
Prerequisite	▪ In the Empty pipe det. parameter (→  79), the On option is selected. ▪ Adjustment value < empty pipe value.
Description	Displays the adjustment value when the measuring pipe is full.
User interface	Positive floating-point number

Meas. value EPD	
Navigation	  Expert → Sensor → Process param. → Empty pipe det. → Meas. value EPD (6559)
Prerequisite	In the Empty pipe det. parameter (→  79), the On option is selected.
Description	Displays the current measured value.
User interface	Positive floating-point number

"ECC" submenu

Navigation   Expert → Sensor → Process param. → ECC

▶ ECC		
ECC (6528)		→  81
ECC duration (6555)		→  82
ECC recov. time (6556)		→  82
ECC clean. cycle (6557)		→  82
ECC Polarity (6631)		→  83

ECC	
Navigation	  Expert → Sensor → Process param. → ECC → ECC (6528)
Prerequisite	For the following order code: "Application package", option EC "ECC electrode cleaning"

Description Use this function to enable and disable cyclic electrode cleaning.

Selection

- Off
- On

Factory setting Off

ECC duration



Navigation Expert → Sensor → Process param. → ECC → ECC duration (6555)

Prerequisite For the following order code:
"Application package", option **EC** "ECC electrode cleaning"

Description Use this function to enter the duration of electrode cleaning in seconds.

User entry 0.01 to 30 s

Factory setting 2 s

ECC recov. time



Navigation Expert → Sensor → Process param. → ECC → ECC recov. time (6556)

Prerequisite For the following order code:
"Application package", option **EC** "ECC electrode cleaning"

Description Use this function to enter the recovery time after electrode cleaning to prevent signal output interference. The current output values are frozen in the meanwhile.

User entry 1 to 600 s

Factory setting 60 s

ECC clean. cycle



Navigation Expert → Sensor → Process param. → ECC → ECC clean. cycle (6557)

Prerequisite For the following order code:
"Application package", option **EC** "ECC electrode cleaning"

Description Use this function to enter the pause duration until the next electrode cleaning.

User entry 0.5 to 168 h

Factory setting 0.5 h

ECC Polarity

Navigation	 Expert → Sensor → Process param. → ECC → ECC Polarity (6631)
Prerequisite	For the following order code: "Application package", option EC "ECC electrode cleaning"
Description	Displays the polarity of the electrode cleaning circuit.
User interface	■ Positive ■ Negative
Factory setting	Depends on the electrode material: ■ Platinum: Negative option ■ Tantalum, Alloy C22, stainless steel: Positive option

"Coating detect." submenu

Navigation  Expert → Sensor → Process param. → Coating detect.

► Coating detect.		
Coating detect.	→	 83
Coating damping	→	 84
Coating meas.val	→	 84
Coating limit	→	 84
Coat.lim.hyster.	→	 84

Coating detect.



Navigation	 Expert → Sensor → Process param. → Coating detect. → Coating detect. (6734)
Description	Select mode for coating detection.
Selection	■ Off ■ Slow ■ Standard ■ Fast
Factory setting	Off

Coating damping

Navigation	  Expert → Sensor → Process param. → Coating detect. → Coating damping (6840)
Description	Enter damping value for coating detection.
User entry	0 to 15
Factory setting	0

Coating meas.val

Navigation	  Expert → Sensor → Process param. → Coating detect. → Coating meas.val (12111)
Description	Shows current coating measured value.
User interface	0.0 to 1.0
Factory setting	1.0

Coating limit

Navigation	  Expert → Sensor → Process param. → Coating detect. → Coating limit (6451)
Description	Enter limit value for the coating measured value.
User entry	0 to 1
Factory setting	0.5

Coat.lim.hyster.

Navigation	  Expert → Sensor → Process param. → Coating detect. → Coat.lim.hyster. (6452)
Description	Enter hysteresis for coating detection.
User entry	0 to 1
Factory setting	0.05

3.2.4 "External comp." submenu

Navigation  Expert → Sensor → External comp.

► External comp.		
Density source (6615)	→ 	85
Fixed density (6623)	→ 	86
External density (6630)	→ 	86
FailSaTypRefDens (2081)	→ 	86
FailSaValRefDens (2082)	→ 	87
Linear exp coeff (1817)	→ 	87
Square exp coeff (1818)	→ 	88
Ref. density (1892)	→ 	88
Temp. source (6712)	→ 	89
External temp. (6673)	→ 	90
FailSafeTypExtT (2075)	→ 	90
FailSafeValExtT (2076)	→ 	91
Ref. temperature (1816)	→ 	91

Density source

Navigation  Expert → Sensor → External comp. → Density source (6615)

Description Use this function to select the density source.

- Selection
- Fixed density
 - External density
 - Current input 1 *
 - Current input 2 *
 - Current input 3 *
 - Calculated value

Factory setting Fixed density

* Visibility depends on order options or device settings

Additional information	<i>Selection</i> Use this function to select the type of density compensation. When selecting the External density option, the density value of the cyclical PROFINET communication is used. In addition, the "External density" compensation value must be incorporated into the analog output module.
-------------------------------	---



Additional information: Operating Instructions, "Cyclical data transmission" section

Fixed density



Navigation	Expert → Sensor → External comp. → Fixed density (6623)
Prerequisite	The Fixed density option is selected in the Density source parameter (→ 85).
Description	Use this function to enter a fixed value for the density.
User entry	Positive floating-point number
Factory setting	Country-specific: ■ 1 000 kg/l ■ 1 000 lb/ft ³
Additional information	<i>Dependency</i> The unit is taken from the Density unit parameter (→ 59)

External density

Navigation	Expert → Sensor → External comp. → External density (6630)
Prerequisite	The External density option is selected in the Density source parameter (→ 85).
Description	Displays the density read in from the external device.
User entry	Positive floating-point number
Additional information	<i>Dependency</i> The unit is taken from the Density unit parameter (→ 59)

FailSaTypRefDens

Navigation	Expert → Sensor → External comp. → FailSaTypRefDens (2081)
Description	Use this function to select the failsafe mode for the external reference density value.

Selection	■ Fail-safe value ■ Fallback value ■ Off
Factory setting	Off
Additional information	<i>Description</i> If the status of the input or simulation value is BAD, the failsafe mode defined here is used. <i>Selection</i> ■ Fail-safe value A substitute value is used. The substitute value is defined in the FailSaValRefDens parameter (→ 87). ■ Fallback value The last valid value is used. ■ Off The invalid value continues to be used.

FailSaValRefDens



Navigation	Expert → Sensor → External comp. → FailSaValRefDens (2082)
Prerequisite	The Fail-safe value option is selected in the FailSaTypRefDens parameter (→ 86).
Description	Use this function to enter a fixed density value that is used for the external density in the event of a device alarm.
User entry	Signed floating-point number
Factory setting	0 kg/l
Additional information	<i>Description</i> In the event of a device alarm, the density value is displayed as an output value in the Density parameter (→ 47).

Linear exp coeff




Navigation	Expert → Sensor → External comp. → Linear exp coeff (1817)
Prerequisite	The Calculated value option is selected in the Density source parameter (→ 85) parameter.
Description	Use this function to enter a linear, fluid-specific expansion coefficient for calculating the reference density.
User interface	Signed floating-point number
Factory setting	$-2.0295 \cdot 10^{-04} \text{ 1/K}$

Square exp coeff		
Navigation	 Expert → Sensor → External comp. → Square exp coeff (1818)	
Prerequisite	The Calculated value option is selected in the Density source parameter (→  85) parameter.	
Description	For fluid with a non-linear expansion pattern: use this function to enter a quadratic, fluid-specific expansion coefficient for calculating the reference density.	
User interface	Signed floating-point number	
Factory setting	$-3.8436 \cdot 10^{-06} \text{ 1/K}^2$	
Ref. density		

Navigation	 Expert → Sensor → External comp. → Ref. density (1892)
Prerequisite	The Calculated value option is selected in the Density source parameter (→  85) parameter.
Description	Displays the reference density.
User interface	Positive floating-point number
Additional information	<i>Description</i> The reference density is required for density calculation. <i>Deviation of the process temperature from the reference temperature:</i> $\Delta T = T - T_{\text{ref}}$ ΔT: Deviation T: Process temperature T_{ref}: Ref. temperature (→  91) <i>Temperature-compensated density:</i> $\rho_{\text{comp}} = \rho_{\text{ref}}(1 + \alpha \Delta T + \beta \Delta T^2)$ ρ_{comp}: Calculated density ρ_{ref}: Reference density ΔT: Deviation of the process temperature from the reference temperature α: Linear exp coeff (→  87) β: Square exp coeff (→  88) <i>Example for water (factory setting)</i> For a reference temperature of $T_{\text{ref}} = 20 \text{ }^\circ\text{C}$

A quadratic fit of a number of density values results in the following coefficients:

- $\alpha = -2.0295 \cdot 10^{-4} \text{ 1/K}$
- $\beta = -3.8436 \cdot 10^{-6} \text{ 1/K}^2$
- $\rho_{\text{ref}} = 997.82 \text{ kg/m}^3$

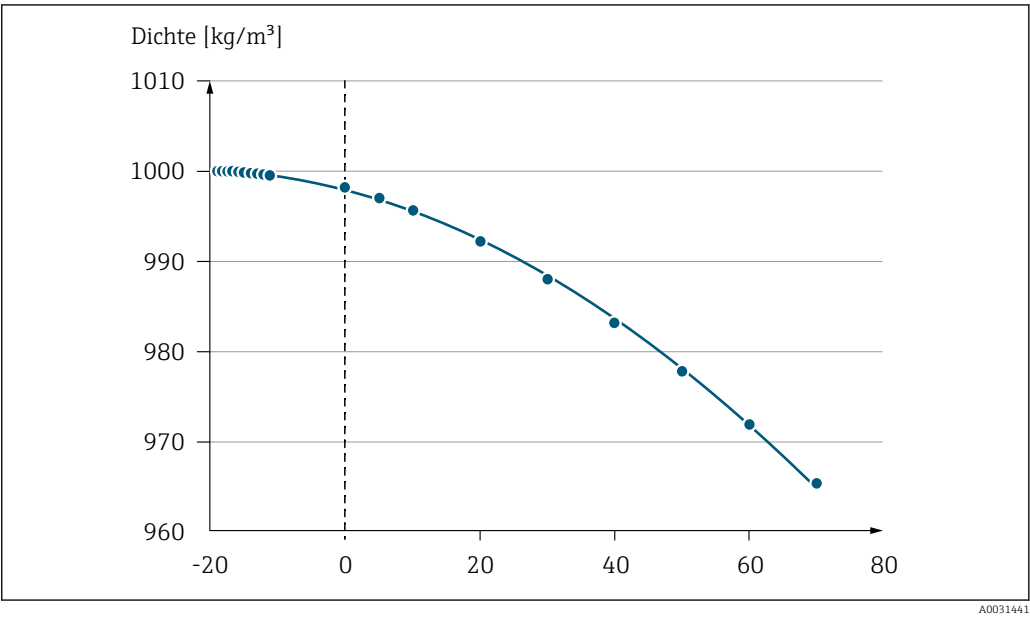

2 Quadratic fit

Dependency

 The unit is taken from the **Density unit** parameter (→  59)

Temp. source

Navigation

  Expert → Sensor → External comp. → Temp. source (6712)

Description

Use this function to select the temperature source.

Selection

- Int.temp. sensor *
- Off
- External value
- Current input 1 *
- Current input 2 *
- Current input 3 *

Factory setting

Off

Additional information

Selection

Use this function to select the type of temperature compensation. When selecting the **External value** option, the temperature value of the cyclical PROFINET communication is

* Visibility depends on order options or device settings

used. In addition, the "External temperature" compensation value must be incorporated into the analog output module.



For additional information, see the Operating Instructions, "Cyclical data transmission" section

External temp.

Navigation	Expert → Sensor → External comp. → External temp. (6673)
Prerequisite	The External value option is selected in the Temp. source parameter (→ 89).
Description	Displays the temperature read in from the external device.
User entry	Floating point number with sign
Additional information	<i>Dependency</i> The unit is taken from the Temperature unit parameter (→ 58)

FailSafeTypExtT

Navigation	Expert → Sensor → External comp. → FailSafeTypExtT (2075)
Description	Use this function to select the failsafe mode for the external temperature value.
Selection	■ Fail-safe value ■ Fallback value ■ Off
Factory setting	Off
Additional information	<i>Description</i> If the status of the input or simulation value is BAD, the failsafe mode defined here is used. <i>Selection</i> ■ Fail-safe value A substitute value is used. The substitute value is defined in the FailSafeValExtT parameter (→ 91). ■ Fallback value The last valid value is used. ■ Off The invalid value continues to be used.

FailSafeValExtT

Navigation	Expert → Sensor → External comp. → FailSafeValExtT (2076)
Prerequisite	The Fail-safe value option is selected in the FailSafeTypExtT parameter (→ 90).
Description	Use this function to enter a fixed temperature value that is used for the external pressure in the event of a device alarm.
User entry	Signed floating-point number
Factory setting	0 °C
Additional information	<i>Description</i> In the event of a device alarm, the temperature value is displayed as an output value in the Temperature parameter (→ 47).

Ref. temperature

Navigation	Expert → Sensor → External comp. → Ref. temperature (1816)
Prerequisite	The Fixed density option or External density option are selected in the Density source parameter (→ 85).
Description	Use this function to enter a reference temperature for calculating the reference density.
User interface	-273.15 to 99 999 °C
Factory setting	Country-specific: ■ +20 °C ■ +68 °F
Additional information	<i>Dependency</i> The unit is taken from the Temperature unit parameter (→ 58)

Reference density calculation

$$\rho_n = \rho \cdot (1 + \alpha \cdot \Delta t + \beta \cdot \Delta t^2)$$

A0023403

- ρ_N : reference density
- ρ : fluid density currently measured
- t : fluid temperature currently measured
- t_N : reference temperature at which the reference density is calculated (e.g. 20 °C)
- Δt : $t - t_N$
- α : linear expansion coefficient of the fluid, unit = [1/K]; K = Kelvin
- β : square expansion coefficient of the fluid, unit = [1/K²]

3.2.5 "Sensor adjustment" submenu

Navigation  Expert → Sensor → Sensor adjustm.

► Sensor adjustm.		
Install. direct. (1809)	→ 	92
Integration time (6533)	→ 	92
Measuring period (6536)	→ 	92
► Variable adjust	→ 	93

Install. direct.

Navigation	 Expert → Sensor → Sensor adjustm. → Install. direct. (1809)
Description	Use this function to change the sign of the medium flow direction.
Selection	■ In arrow direct. ■ Against arrow
Factory setting	In arrow direct.
Additional information	Description  Before changing the sign: ascertain the actual direction of fluid flow with reference to the direction indicated by the arrow on the sensor nameplate.

Integration time

Navigation	 Expert → Sensor → Sensor adjustm. → Integration time (6533)
Description	Display the duration of an integration cycle.
User interface	1 to 65 ms

Measuring period

Navigation	 Expert → Sensor → Sensor adjustm. → Measuring period (6536)
Description	Display the time of a full measuring period.

User interface 0 to 1 000 ms

"Variable adjust" submenu

Navigation   Expert → Sensor → Sensor adjustm. → Variable adjust

▶ Variable adjust		
Vol. flow offset (1831)	→ 	93
Vol. flow factor (1832)	→ 	94
Mass flow offset (1841)	→ 	94
Mass flow factor (1846)	→ 	94
Conduct. offset (1848)	→ 	95
Conduct. factor (1849)	→ 	95
Corr. vol offset (1866)	→ 	95
Corr. vol factor (1867)	→ 	96
Temp. offset (1868)	→ 	96
Temp. factor (1869)	→ 	97
Corr.cond.offset (1870)	→ 	97
Corr.cond.factor (1871)	→ 	97
Flow vel. offset (1879)	→ 	98
Flow vel. factor (1880)	→ 	98

Vol. flow offset 

Navigation   Expert → Sensor → Sensor adjustm. → Variable adjust → Vol. flow offset (1831)

Description Use this function to enter the zero point shift for the volume flow trim. The volume flow unit on which the shift is based is m³/s.

User entry Signed floating-point number

Factory setting 0 m³/s

Additional information *Description*

 Corrected value = (factor × value) + offset

Vol. flow factor

Navigation   Expert → Sensor → Sensor adjustm. → Variable adjust → Vol. flow factor (1832)

Description Enter quantity factor for the volume flow value.

User entry Positive floating-point number

Factory setting 1

Additional information *Description*

 Corrected value = (factor × value) + offset

Mass flow offset

Navigation   Expert → Sensor → Sensor adjustm. → Variable adjust → Mass flow offset (1841)

Description Use this function to enter the zero point shift for the mass flow trim. The mass flow unit on which the shift is based is kg/s.

User entry Signed floating-point number

Factory setting 0 kg/s

Additional information *Description*

 Corrected value = (factor × value) + offset

Mass flow factor

Navigation   Expert → Sensor → Sensor adjustm. → Variable adjust → Mass flow factor (1846)

Description Use this function to enter a quantity factor (without time) for the mass flow. This multiplication factor is applied over the mass flow range.

User entry Positive floating-point number

Factory setting 1

Additional information*Description*

Corrected value = (factor × value) + offset

Conduct. offset**Navigation**

Expert → Sensor → Sensor adjustm. → Variable adjust → Conduct. offset (1848)

PrerequisiteThe **On** option is selected in the **Conduct. measur.** parameter (→ 74).**Description**

Use this function to enter the zero point shift for the conductivity trim. The conductivity unit on which the shift is based is S/m.

User entry

Signed floating-point number

Factory setting

0 S/m

Additional information*Description*

Corrected value = (factor × value) + offset

Conduct. factor**Navigation**

Expert → Sensor → Sensor adjustm. → Variable adjust → Conduct. factor (1849)

PrerequisiteThe **On** option is selected in the **Conduct. measur.** parameter (→ 74).**Description**

Use this function to enter a quantity factor for the conductivity. This multiplication factor is applied over the conductivity range.

User entry

Positive floating-point number

Factory setting

1

Additional information*Description*

Corrected value = (factor × value) + offset

Corr. vol offset**Navigation**

Expert → Sensor → Sensor adjustm. → Variable adjust → Corr. vol offset (1866)

DescriptionUse this function to enter the zero point shift for the corrected volume flow trim. The corrected volume flow unit on which the shift is based is 1 Nm³/s.**User entry**

Signed floating-point number

Factory setting 0 Nm³/s

Additional information *Description*

 Corrected value = (factor × value) + offset

Corr. vol factor



Navigation  Expert → Sensor → Sensor adjustm. → Variable adjust → Corr. vol factor (1867)

Description Use this function to enter a quantity factor (without time) for the corrected volume flow. This multiplication factor is applied over the corrected volume flow range.

User entry Positive floating-point number

Factory setting 1

Additional information *Description*

 Corrected value = (factor × value) + offset

Temp. offset



Navigation  Expert → Sensor → Sensor adjustm. → Variable adjust → Temp. offset (1868)

Prerequisite One of the following conditions is met:

- Order code for "Sensor option", option **CI** "Medium temperature measurement" or
- The temperature is read into the flowmeter from an external device.

Description Use this function to enter the zero point shift for the temperature trim. The temperature unit on which the shift is based is 1 K.

User entry Signed floating-point number

Factory setting 0 K

Additional information *Description*

 Corrected value = (factor × value) + offset

Temp. factor 	
Navigation	  Expert → Sensor → Sensor adjustm. → Variable adjust → Temp. factor (1869)
Prerequisite	One of the following conditions is met: ■ Order code for "Sensor option", option CI "Medium temperature measurement" or ■ The temperature is read into the flowmeter from an external device.
Description	Use this function to enter a quantity factor (without time) for the temperature. This multiplication factor is applied over the temperature range.
User entry	Positive floating-point number
Factory setting	1
Additional information	<i>Description</i>  Corrected value = (factor × value) + offset
Corr.cond.offset 	
Navigation	  Expert → Sensor → Sensor adjustm. → Variable adjust → Corr.cond.offset (1870)
Prerequisite	The On option is selected in the Conduct. measur. parameter (→  74) parameter.
Description	Use this function to enter the zero point shift to trim the corrected conductivity. The conductivity unit on which the shift is based is µS/cm.
User entry	Signed floating-point number
Factory setting	0 S/m
Additional information	<i>Description</i>  Corrected value = (factor × value) + offset
Corr.cond.factor 	
Navigation	  Expert → Sensor → Sensor adjustm. → Variable adjust → Corr.cond.factor (1871)
Prerequisite	The On option is selected in the Conduct. measur. parameter (→  74) parameter.
Description	Use this function to enter a quantity factor for the corrected conductivity. In each case, this factor refers to the conductivity in µS/cm.
User entry	Positive floating-point number

Factory setting	1
Additional information	<i>Description</i>  Corrected value = (factor × value) + offset

Flow vel. offset

Navigation	  Expert → Sensor → Sensor adjustm. → Variable adjust → Flow vel. offset (1879)
Description	Use this function to enter the zero point shift for the flow velocity trim. The flow velocity unit on which the shift is based is m/s.
User entry	Signed floating-point number
Factory setting	0 m/s
Additional information	<i>Description</i>  Corrected value = (factor × value) + offset

Flow vel. factor

Navigation	  Expert → Sensor → Sensor adjustm. → Variable adjust → Flow vel. factor (1880)
Description	Use this function to enter a quantity factor (without time) for the flow velocity. This multiplication factor is applied over the flow velocity range.
User entry	Positive floating-point number
Factory setting	1
Additional information	<i>Description</i>  Corrected value = (factor × value) + offset

3.2.6 "Calibration" submenu

Navigation  Expert → Sensor → Calibration

► Calibration

Nominal diameter (2807)

→  99

Cal. factor (6522)	→ 99
Zero point (6546)	→ 99
Cond. cal. fact. (6718)	→ 100

Nominal diameter

Navigation	 Expert → Sensor → Calibration → Nominal diameter (2807)
Description	Displays the nominal diameter of the sensor.
User interface	DNxx / x"
Factory setting	Depends on the size of the sensor
Additional information	<i>Description</i>  The value is also specified on the sensor nameplate.

Cal. factor

Navigation	 Expert → Sensor → Calibration → Cal. factor (6522)
Description	Displays the current calibration factor for the sensor.
User interface	Positive floating-point number
Factory setting	Depends on nominal diameter and calibration.

Zero point

Navigation	 Expert → Sensor → Calibration → Zero point (6546)
Description	This function shows the zero point correction value for the sensor.
User interface	Signed floating-point number
Factory setting	Depends on nominal diameter and calibration

Cond. cal. fact.

Navigation	 Expert → Sensor → Calibration → Cond. cal. fact. (6718)
Prerequisite	The On option is selected in the Conduct. measur. parameter (→  74) parameter.
Description	Displays the calibration factor for the conductivity measurement.
User interface	0.01 to 10 000

3.3 "I/O configuration" submenu

Navigation  Expert → I/O config.

► I/O config.

I/O 1 to n terminals (3902–1 to n)

→  100

I/O 1 to n info (3906–1 to n)

→  100

I/O 1 to n type (3901–1 to n)

→  101

Apply I/O config (3907)

→  101

I/O alterat.code (2762)

→  102

I/O 1 to n terminals

Navigation	 Expert → I/O config. → I/O 1 to n terminals (3902–1 to n)
Description	Displays the terminal numbers used by the I/O module.
User interface	■ Not used ■ 26-27 (I/O 1) ■ 24-25 (I/O 2) ■ 22-23 (I/O 3)

I/O 1 to n info

Navigation	 Expert → I/O config. → I/O 1 to n info (3906–1 to n)
Description	Displays information about the plugged in I/O module.

User interface	■ Not plugged ■ Invalid ■ Not configurable ■ Configurable ■ PROFINET
Additional information	<i>"Not plugged" option</i> The I/O module is not plugged in. <i>"Invalid" option</i> The I/O module is not plugged correctly. <i>"Not configurable" option</i> The I/O module is not configurable. <i>"Configurable" option</i> The I/O module is configurable. <i>"PROFINET" option</i> The I/O module is configured for PROFINET.

I/O 1 to n type



Navigation	Expert → I/O config. → I/O 1 to n type (3901–1 to n)
Prerequisite	For the following order code: "Output; input 2", option D "Configurable I/O initial setting off"
Description	Use this function to select the I/O module type for the configuration of the I/O module.
Selection	■ Off ■ Curr.output * ■ Current input * ■ Status input * ■ PFS output * ■ Double pulse out * ■ Relay output *
Factory setting	Off

Apply I/O config



Navigation	Expert → I/O config. → Apply I/O config (3907)
Description	Use this function to activate the newly configured I/O module type.

* Visibility depends on order options or device settings

Selection	■ No ■ Yes
Factory setting	No

I/O alterat.code

Navigation	Expert → I/O config. → I/O alterat.code (2762)
Description	Use this function to enter the ordered activation code to activate the I/O configuration change.
User entry	Positive integer
Factory setting	0
Additional information	Description The I/O configuration is changed in the I/O type parameter (→ 101).

3.4 "Input" submenu

Navigation

Expert → Input

► Input

► Current input 1 to n

→ 102

► Status input 1 to n

→ 105

3.4.1 "Current input 1 to n" submenu

Navigation

Expert → Input → Current input 1 to n

► Current input 1 to n

Terminal no. (1611–1 to n)

→ 103

Signal mode (1610–1 to n)

→ 103

Current span (1605–1 to n)

→ 103

0/4 mA value (1606–1 to n)

→ 104

20 mA value (1607–1 to n)

→ 104

Failure mode (1601-1 to n)	→ 105
Failure value (1602-1 to n)	→ 105

Terminal no.

Navigation   Expert → Input → Current input 1 to n → Terminal no. (1611-1 to n)

Description Displays the terminal numbers used by the current input module.

User interface

- Not used
- 24-25 (I/O 2)
- 22-23 (I/O 3)

Additional information *"Not used" option*
The current input module does not use any terminal numbers.

Signal mode

Navigation   Expert → Input → Current input 1 to n → Signal mode (1610-1 to n)

Prerequisite The measuring device is **not** approved for use in the hazardous area with type of protection Ex-i.

Description Use this function to select the signal mode for the current input.

Selection

- Passive
- Active *

Factory setting Active

Current span

Navigation   Expert → Input → Current input 1 to n → Current span (1605-1 to n)

Description Use this function to select the current range for the process value output and the upper and lower level for signal on alarm.

Selection

- 4...20 mA
- 4...20 mA NAMUR
- 4...20 mA US
- 0...20 mA

* Visibility depends on order options or device settings

Factory setting	Country-specific: ■ 4...20 mA NAMUR ■ 4...20 mA US
Additional information	<i>Examples</i>  Sample values for the current range: Current span parameter (→  109)

0/4 mA value

Navigation	  Expert → Input → Current input 1 to n → 0/4 mA value (1606–1 to n)
Description	Use this function to enter a value for the 4 mA current.
User entry	Signed floating-point number
Factory setting	0
Additional information	<i>Current input behavior</i> The current input behaves differently depending on the settings configured in the following parameters: ■ Current span (→  103) ■ Failure mode (→  105) <i>Configuration examples</i>  Pay attention to the configuration examples for 4 mA value parameter (→  111).

20 mA value

Navigation	  Expert → Input → Current input 1 to n → 20 mA value (1607–1 to n)
Description	Use this function to enter a value for the 20 mA current.
User entry	Signed floating-point number
Factory setting	Depends on country and nominal diameter
Additional information	<i>Configuration examples</i>  Pay attention to the configuration examples for 4 mA value parameter (→  111).

Failure mode		
Navigation	  Expert → Input → Current input 1 to n → Failure mode (1601–1 to n)	
Description	Use this function to select the input behavior when measuring a current outside the configured Current span parameter (→  103).	
Selection	■ Alarm ■ Last valid value ■ Defined value	
Factory setting	Alarm	
Additional information	<i>Options</i> ■ Alarm An error message is set. ■ Last valid value The last valid measured value is used. ■ Defined value A user-defined measured value is used (Failure value parameter (→  105)).	

Failure value		
Navigation	  Expert → Input → Current input 1 to n → Failure value (1602–1 to n)	
Prerequisite	In the Failure mode parameter (→  105), the Defined value option is selected.	
Description	Use this function to enter the value that the device uses if it does not receive an input signal from the external device, or if the input signal is invalid.	
User entry	Signed floating-point number	
Factory setting	0	

3.4.2 "Status input 1 to n" submenu

Navigation   Expert → Input → Status input 1 to n

► Status input 1 to n

Terminal no. (1358–1 to n)

Assign stat.inp. (1352–1 to n)

Val.stat.inp. (1353–1 to n)

→  106

→  106

→  107

Active level (1351-1 to n)	→  107
Response time (1354-1 to n)	→  107

Terminal no.

Navigation	  Expert → Input → Status input 1 to n → Terminal no. (1358-1 to n)
Description	Displays the terminal numbers used by the status input module.
User interface	■ Not used ■ 24-25 (I/O 2) ■ 22-23 (I/O 3)
Additional information	<i>"Not used" option</i> The status input module does not use any terminal numbers.

Assign stat.inp.



Navigation	  Expert → Input → Status input 1 to n → Assign stat.inp. (1352-1 to n)
Description	Use this function to select the function for the status input.
Selection	■ Off ■ Reset totaliz. 1 ■ Reset totaliz. 2 ■ Reset totaliz. 3 ■ Reset all tot. ■ Flow override
Factory setting	Off
Additional information	<i>Selection</i> ■ Off The status input is switched off. ■ Reset totaliz. 1...3 The individual totalizers are reset. ■ Reset all tot. All totalizers are reset. ■ Flow override The Flow override (→  73) is activated.  Note on the Flow override (→  73): ■ The Flow override (→  73) is enabled as long as the level is at the status input (continuous signal). ■ All other assignments react to a change in level (pulse) at the status input.

Val.stat.inp.	
Navigation	 Expert → Input → Status input 1 to n → Val.stat.inp. (1353–1 to n)
Description	Displays the current input signal level.
User interface	■ High ■ Low
Active level	
Navigation	 Expert → Input → Status input 1 to n → Active level (1351–1 to n)
Description	Use this function to determine the input signal level at which the assigned function is activated.
Selection	■ High ■ Low
Factory setting	High
Response time	
Navigation	 Expert → Input → Status input 1 to n → Response time (1354–1 to n)
Description	Use this function to enter the minimum time period for which the input signal level must be present before the selected function is activated.
User entry	5 to 200 ms
Factory setting	50 ms

3.5 "Output" submenu

Navigation  Expert → Output

► Output	
► Curr.output 1 to n	→  108
► PFS output 1 to n	→  121
► Relay output 1 to n	→  140

3.5.1 "Current output 1 to n" submenu

Navigation  Expert → Output → Curr.output 1 to n

► Curr.output 1 to n		
Terminal no. (0379-1 to n)	→ 	108
Signal mode (0377-1 to n)	→ 	109
Assign curr. 1 to n (0359-1 to n)	→ 	109
Current span (0353-1 to n)	→ 	109
Fixed current (0365-1 to n)	→ 	110
0/4 mA value (0367-1 to n)	→ 	111
20 mA value (0372-1 to n)	→ 	113
Measuring mode (0351-1 to n)	→ 	113
Damping out. 1 to n (0363-1 to n)	→ 	118
Failure mode (0364-1 to n)	→ 	119
Failure current (0352-1 to n)	→ 	120
Output curr. 1 to n (0361-1 to n)	→ 	120
Measur. curr. 1 to n (0366-1 to n)	→ 	121

Terminal no.	
--------------	--

Navigation	 Expert → Output → Curr.output 1 to n → Terminal no. (0379-1 to n)
Description	Displays the terminal numbers used by the current output module.
User interface	■ Not used ■ 24-25 (I/O 2) ■ 22-23 (I/O 3)
Additional information	"Not used" option The current output module does not use any terminal numbers.

Signal mode



Navigation	Expert → Output → Curr.output 1 to n → Signal mode (0377–1 to n)
Description	Use this function to select the signal mode for the current output.
Selection	■ Active * ■ Passive *
Factory setting	Active

Assign curr. 1 to n



Navigation	Expert → Output → Curr.output 1 to n → Assign curr. 1 to n (0359–1 to n)
Description	Use this function to select a process variable for the current output.
Selection	■ Off * ■ Volume flow ■ Mass flow ■ Correct.vol.flow ■ Flow velocity ■ Conductivity * ■ CorrConductivity * ■ Temperature * ■ Electronic temp. ■ Ref Electr. Pot. * ■ CoilCurrShotTime * ■ Noise * ■ Coating meas.val * ■ Test point 1 ■ Test point 2 ■ Test point 3
Factory setting	Volume flow

Current span



Navigation	Expert → Output → Curr.output 1 to n → Current span (0353–1 to n)
Description	Use this function to select the current range for the process value output and the upper and lower level for signal on alarm.

* Visibility depends on order options or device settings

Selection

■

4...20 mA NAMUR

■

4...20 mA US

■

4...20 mA

■

0...20 mA

■

Fixed current

Factory setting

Country-specific:

■

4...20 mA NAMUR (3.8...20.5 mA)

■

4...20 mA US (3.9...20.8 mA)

Additional information

Description

i

■

In the event of a device alarm, the current output adopts the value specified in the **Failure mode** parameter (→  119).

■

If the measured value is outside the measuring range, the diagnostic message **△S441 Curr.output 1 to n** is displayed.

■


The measuring range is specified via the **0/4 mA value** parameter (→  111) and **20 mA value** parameter (→  113).

"Fixed current" option

The current value is set via the **Fixed current** parameter (→  110).

Example

Shows the relationship between the current span for the output of the process variable and the lower and upper alarm levels:

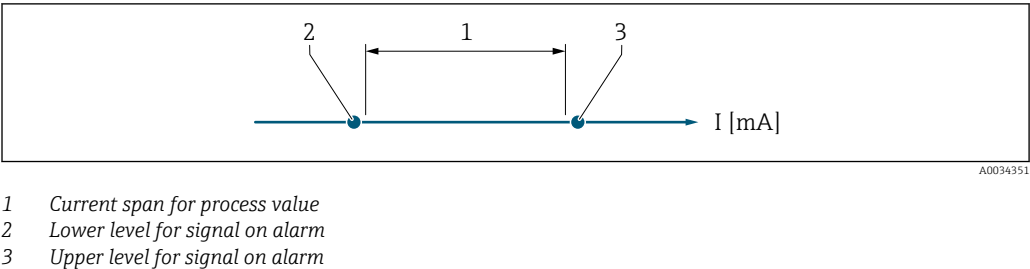

Selection

Selection	1	2	3
4...20 mA NAMUR	3.8 to 20.5 mA	< 3.6 mA	> 21.95 mA
4...20 mA US	3.9 to 20.8 mA US	< 3.6 mA	> 21.95 mA
4...20 mA	4 to 20.5 mA	< 3.6 mA	> 21.95 mA
0...20 mA	0 to 20.5 mA	< 0 mA	> 21.95 mA

i

If the flow exceeds or falls below the upper or lower signal on alarm level, the diagnostic message **△S441 Curr.output 1 to n** is displayed.

Fixed current

Navigation

  Expert → Output → Curr.output 1 to n → Fixed current (0365–1 to n)

Prerequisite


The **Fixed current** option is selected in the **Current span** parameter (→  109).

Description	Use this function to enter a constant current value for the current output.
User entry	0 to 22.5 mA
Factory setting	22.5 mA

0/4 mA value



Navigation	Expert → Output → Curr.output 1 to n → 0/4 mA value (0367-1 to n)
Prerequisite	In the Current span parameter (→ 109), one of the following options is selected: ■ 4...20 mA NAMUR ■ 4...20 mA US ■ 4...20 mA ■ 0...20 mA
Description	Use this function to enter a value for the 0/4 mA current.
User entry	Signed floating-point number
Factory setting	Country-specific: ■ 0 l/h ■ 0 gal/min (us)
Additional information	<i>Description</i> Positive and negative values are permitted depending on the process variable assigned in the Assign curr. parameter (→ 109). In addition, the value can be greater than or smaller than the value assigned for the 20 mA current in the 20 mA value parameter (→ 113). <i>Dependency</i> The unit depends on the process variable selected in the Assign curr. parameter (→ 109). <i>Current output behavior</i> The current output behaves differently depending on the settings configured in the following parameters: ■ Current span (→ 109) ■ Failure mode (→ 119) <i>Configuration examples</i> Some examples of parameter settings and their effect on the current output are given in the following section. Configuration example A Measuring mode with Forward flow option ■ 0/4 mA value parameter (→ 111) = not equal to zero flow (e.g. -250 m³/h) ■ 20 mA value parameter (→ 113) = not equal to zero flow (e.g. +750 m³/h) ■ Calculated current value = 8 mA at zero flow

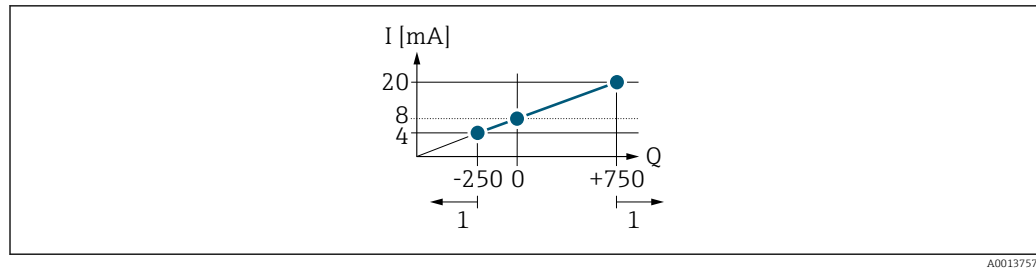


A0013757

Q Flow
I Current
 1 Measuring range is exceeded or undershot

The operational range of the measuring device is defined by the values entered for the **0/4 mA value** parameter (→ 111) and **20 mA value** parameter (→ 113). If the effective flow exceeds or falls below this operational range, the diagnostic message **△S441 Curr.output 1 to n** is displayed.

Configuration example B

Measuring mode with **Forward/Reverse** option

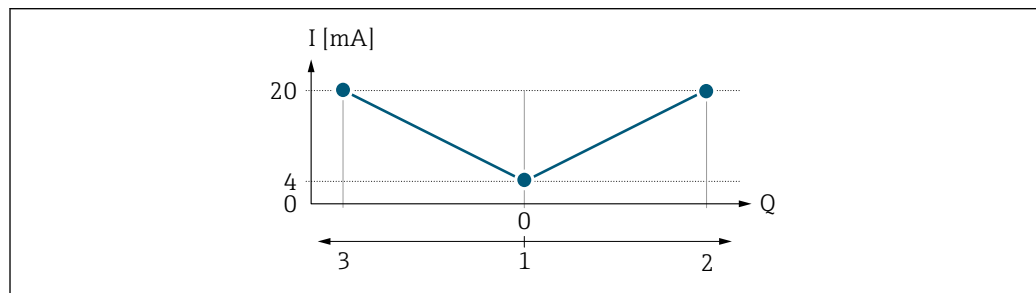

A0013758

I Current
Q Flow
 1 Value assigned to the 0/4 mA current
 2 Forward flow
 3 Reverse flow

The current output signal is independent of the direction of flow (absolute amount of the measured variable). The values for the **0/4 mA value** parameter (→ 111) and **20 mA value** parameter (→ 113) must have the same sign. The value for the **20 mA value** parameter (→ 113) (e.g. reverse flow) corresponds to the mirrored value for the **20 mA value** parameter (→ 113) (e.g. forward flow).

Configuration example C

Measuring mode with **Rev. flow comp.** option

If flow is characterized by severe fluctuations (e.g. when using reciprocating pumps), flow components outside the measuring range are buffered, balanced and output after a maximum delay of 60 s → 113.

20 mA value	
Navigation	Expert → Output → Curr.output 1 to n → 20 mA value (0372-1 to n)
Prerequisite	One of the following options is selected in the Current span parameter (→ 109): ■ 4...20 mA NAMUR ■ 4...20 mA US ■ 4...20 mA ■ 0...20 mA
Description	Use this function to enter a value for the 20 mA current.
User entry	Signed floating-point number
Factory setting	Depends on country and nominal diameter → 219
Additional information	<i>Description</i> Positive and negative values are permitted depending on the process variable assigned in the Assign curr. parameter (→ 109). In addition, the value can be greater than or smaller than the value assigned for the 0/4 mA current in the 0/4 mA value parameter (→ 111). <i>Dependency</i> The unit depends on the process variable selected in the Assign curr. parameter (→ 109). <i>Example</i> ■ Value assigned to 0/4 mA = -250 m³/h ■ Value assigned to 20 mA = +750 m³/h ■ Calculated current value = 8 mA (at zero flow) If the Forward/Reverse option is selected in the Measuring mode parameter (→ 113), different signs cannot be entered for the values of the 0/4 mA value parameter (→ 111) and 20 mA value parameter (→ 113). The diagnostic message △S441 Curr.output 1 to n is displayed. <i>Configuration examples</i> Observe the configuration examples for the 0/4 mA value parameter (→ 111).
Measuring mode	

Navigation Expert → Output → Curr.output 1 to n → Measuring mode (0351-1 to n)

Prerequisite In the **Assign curr.** parameter (→ 109), one of the following options is selected:

- Volume flow
- Mass flow
- Correct.vol.flow
- Flow velocity
- Conductivity*

* Visibility depends on order options or device settings

- CorrConductivity *
- Temperature *
- Electronic temp.

In the **Current span** parameter (→ ⓘ 109), one of the following options is selected:

- 4...20 mA NAMUR
- 4...20 mA US
- 4...20 mA
- 0...20 mA

Description

Use this function to select the measuring mode for the current output.

Selection

- Forward flow
- Forward/Reverse *
- Rev. flow comp.

Factory setting

Forward flow

Additional information

Description

i The process variable that is assigned to the current output via the **Assign curr.** parameter (→ ⓘ 109) is displayed below the parameter.


"Forward flow" option

The current output signal is proportional to the process variable assigned. The measuring range is defined by the values that are assigned to the 0/4 mA and 20 mA current value.

The flow components outside the scaled measuring range are taken into account for signal output as follows:

- Both values are defined such that they are not equal to zero flow e.g.:
 - 0/4 mA current value = $-5 \text{ m}^3/\text{h}$
 - 20 mA current value = $10 \text{ m}^3/\text{h}$
- If the effective flow exceeds or falls below this measuring range, the diagnostic message **△S441 Curr.output 1 to n** is displayed.

"Forward/Reverse" option

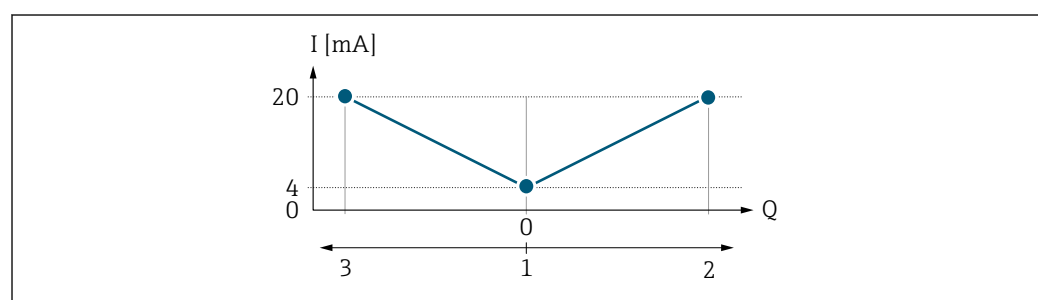

A0013758

- I* Current
Q Flow
 1 Value assigned to the 0/4 mA current
 2 Forward flow
 3 Reverse flow

* Visibility depends on order options or device settings

- The current output signal is independent of the direction of flow (absolute amount of the measured variable). The values for the **0/4 mA value** parameter (→  111) and **20 mA value** parameter (→  113) must have the same sign.
- The value for the **20 mA value** parameter (→  113) (e.g. reverse flow) corresponds to the mirrored value for the **20 mA value** parameter (→  113) (e.g. forward flow).

"Rev. flow comp." option

The **Rev. flow comp.** option is primarily used to compensate for abrupt reverse flow which can occur in connection with positive displacement pumps as a result of wear or high viscosity. The reverse flows are recorded in a buffer and balanced against forward flow the next time flow is in the forward direction.

If buffering cannot be processed within approx. 60 s, the diagnostic message  **S441 Curr.output 1 to n** is displayed.


Flow values can aggregate in the buffer in the event of prolonged and unwanted fluid reverse flow. However, these flows are not taken into consideration by the current output configuration, i.e. the reverse flow is not compensated.

If this option is set, the measuring device does not attenuate the flow signal. The flow signal is not attenuated.

Examples of how the current output behaves

Example 1

Defined measuring range: lower range value and upper range value with the **same** sign

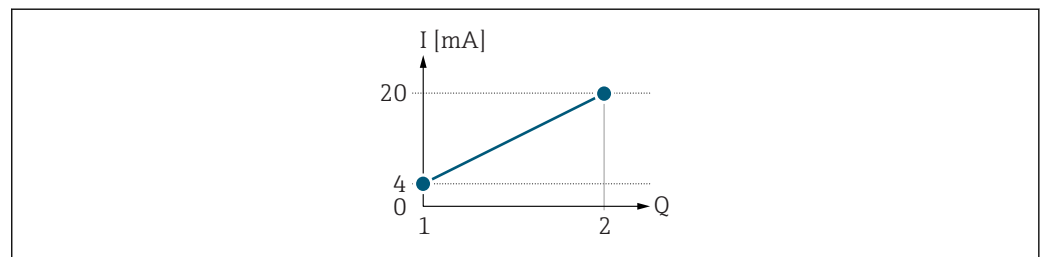

A0028084

 3 Measuring range


I Current

Q Flow

1 Lower range value (value assigned to 0/4 mA current)

2 Upper range value (value assigned to 20 mA current)

With the following flow response:

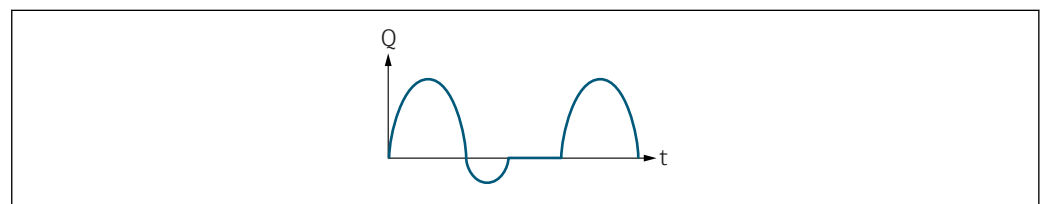

A0028091


 4 Flow response

Q Flow

t Time

With **Forward flow** option

The current output signal is proportional to the process variable assigned. The flow components outside the scaled measuring range are not taken into account for signal output:.

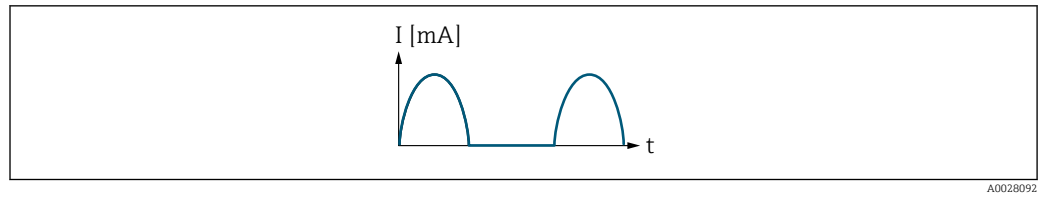


A0028092

I Current
 t Time

With **Forward/Reverse** option

The current output signal is independent of the direction of flow.

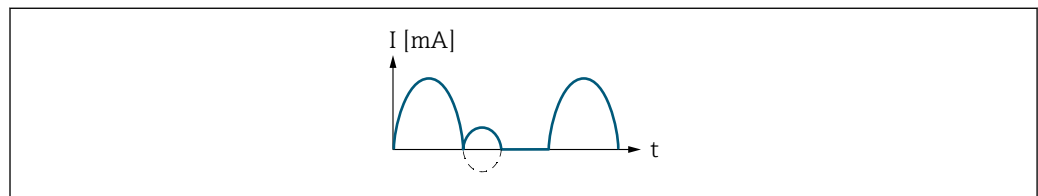


A0028093

I Current
 t Time

With **Rev. flow comp.** option

Flow components outside the span are buffered, balanced and output after a maximum delay of 60 s.

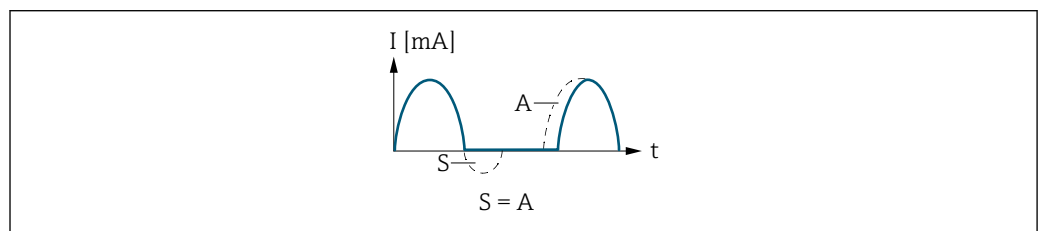


A0028094

I Current
 t Time
 S Flow components saved
 A Balancing of saved flow components

Example 2

Defined measuring range: lower range value and upper range value with **different** signs

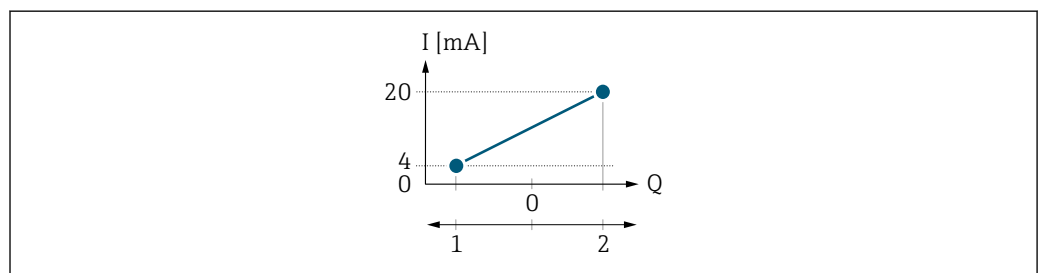


A0028095

5 Measuring range

I Current
 Q Flow
 1 Lower range value (value assigned to 0/4 mA current)
 2 Upper range value (value assigned to 20 mA current)

With flow a (–) outside, b (– –) inside the measuring range

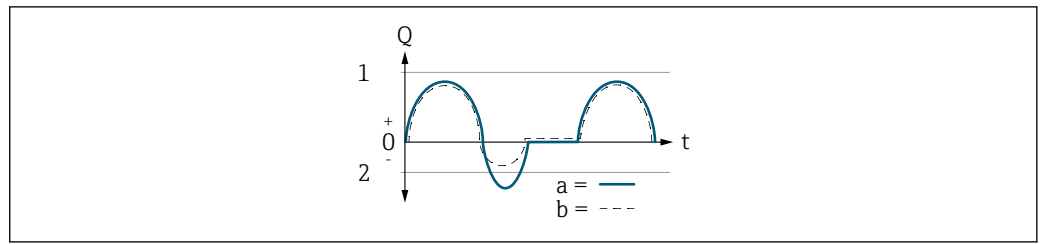


A0028098

Q Flow
t Time
 1 Lower range value (value assigned to 0/4 mA current)
 2 Upper range value (value assigned to 20 mA current)

With **Forward flow** option

- a (–): The flow components outside the scaled measuring range cannot be taken into account for signal output.
The diagnostic message Δ **S441 Curr.output 1 to n** is displayed.
- b (– –): The current output signal is proportional to the process variable assigned.

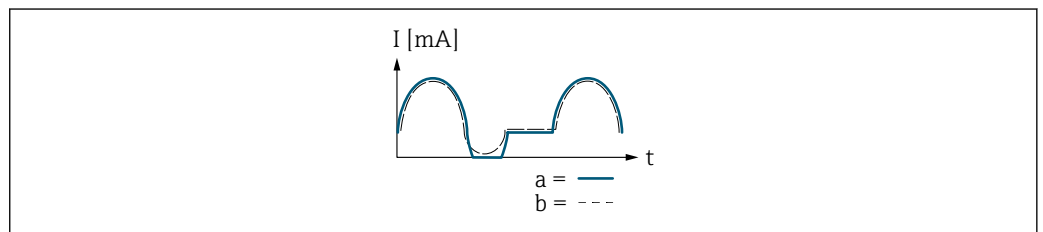

A0028100


I Current
t Time

With **Forward/Reverse** option

This option is not possible in this case as the values for the **0/4 mA value** parameter ($\rightarrow$ 111) and **20 mA value** parameter ($\rightarrow$ 113) have different signs.

With **Rev. flow comp.** option

Flow components outside the span are buffered, balanced and output after a maximum delay of 60 s.

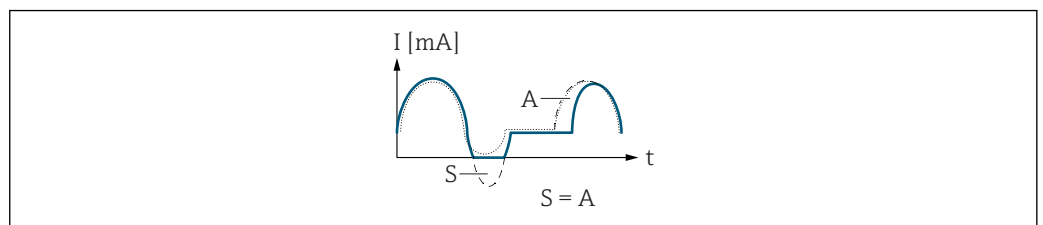

A0028101

I Current
t Time
S Flow components saved
A Balancing of saved flow components

Damping out. 1 to n 	
Navigation	  Expert → Output → Curr.output 1 to n → Damping out. 1 to n (0363–1 to n)
Prerequisite	A process variable is selected in the Assign curr. parameter (→  109) and one of the following options is selected in the Current span parameter (→  109): ■ 4...20 mA NAMUR ■ 4...20 mA US ■ 4...20 mA ■ 0...20 mA
Description	Use this function to enter a time constant for the reaction time of the current output signal to fluctuations in the measured value caused by process conditions.
User entry	0.0 to 999.9 s
Factory setting	1.0 s
Additional information	<i>User entry</i> Use this function to enter a time constant (PT1 element³⁾) for current output damping: ■ If a low time constant is entered, the current output reacts particularly quickly to fluctuating measured variables. ■ On the other hand, the current output reacts more slowly if a high time constant is entered.  Damping is switched off if 0 is entered (factory setting).
Response time	
Navigation	  Expert → Output → Curr.output 2 → Response time (0378)
Prerequisite	One of the following options is selected in the Assign curr. parameter (→  109): ■ Volume flow ■ Mass flow ■ Correct.vol.flow ■ Flow velocity ■ Conductivity[*] ■ CorrConductivity[*] ■ Temperature[*] ■ Electronic temp. One of the following options is selected in the Current span parameter (→  109): ■ 4...20 mA NAMUR ■ 4...20 mA US ■ 4...20 mA ■ 0...20 mA
Description	Displays the response time. This specifies how quickly the current output reaches the measured value change of 63 % of 100 % of the measured value change.

3) proportional transmission behavior with first order delay
^{*} Visibility depends on order options or device settings

User interface Positive floating-point number

Additional information *Description*



The response time is made up of the time specified for the following dampings:

- Current output damping → 118
- and
- Depending on the measured variable assigned to the output.
Flow damping

Failure mode

Navigation Expert → Output → Curr.output 1 to n → Failure mode (0364–1 to n)

Prerequisite A process variable is selected in the **Assign curr.** parameter (→ 109) and one of the following options is selected in the **Current span** parameter (→ 109):

- 4...20 mA NAMUR
- 4...20 mA US
- 4...20 mA
- 0...20 mA

Description Use this function to select the value of the current output in the event of a device alarm.

Selection

- Min.
- Max.
- Last valid value
- Actual value
- Defined value

Factory setting Max.

Additional information*Description*

This setting does not affect the failsafe mode of other outputs and totalizers. This is specified in separate parameters.

"Min." option

The current output adopts the value of the lower level for signal on alarm.



The signal on alarm level is defined via the **Current span** parameter (→ 109).

"Max." option

The current output adopts the value of the upper level for signal on alarm.



The signal on alarm level is defined via the **Current span** parameter (→ 109).

"Last valid value" option

The current output adopts the last measured value that was valid before the device alarm occurred.

"Actual value" option

The current output adopts the measured value on the basis of the current flow measurement; the device alarm is ignored.

"Defined value" option

The current output adopts a defined measured value.



The measured value is defined via the **Failure current** parameter (→ 120).

Failure current**Navigation**

Expert → Output → Curr.output 1 to n → Failure current (0352–1 to n)

Prerequisite

The **Defined value** option is selected in the **Failure mode** parameter (→ 119).

Description

Use this function to enter a fixed value that the current output adopts in the event of a device alarm.

User entry

0 to 22.5 mA

Factory setting

22.5 mA

Output curr. 1 to n**Navigation**

Expert → Output → Curr.output 1 to n → Output curr. 1 to n (0361–1 to n)

Description

Displays the current value currently calculated for the current output.

User interface

3.59 to 22.5 mA

Measur. curr. 1 to n	
Navigation	 Expert → Output → Curr.output 1 to n → Measur. curr. 1 to n (0366-1 to n)
Description	Use this function to display the actual measured value of the output current.
User interface	0 to 30 mA

3.5.2 "Pulse/frequency/switch output 1 to n" submenu

Navigation  Expert → Output → PFS output 1 to n

► PFS output 1 to n	
Terminal no. (0492-1 to n)	→  122
Signal mode (0490-1 to n)	→  123
Operating mode (0469-1 to n)	→  123
Assign pulse 1 to n (0460-1 to n)	→  125
Pulse scaling (0455-1 to n)	→  125
Pulse width (0452-1 to n)	→  126
Measuring mode (0457-1 to n)	→  126
Failure mode (0480-1 to n)	→  127
Pulse output 1 to n (0456-1 to n)	→  128
Assign freq. (0478-1 to n)	→  128
Min. freq. value (0453-1 to n)	→  129
Max. freq. value (0454-1 to n)	→  129
Val. at min.freq (0476-1 to n)	→  130
Val. at max.freq (0475-1 to n)	→  130
Measuring mode (0479-1 to n)	→  130
Damping out. 1 to n (0477-1 to n)	→  131

Response time (0491-1 to n)	→  132
Failure mode (0451-1 to n)	→  132
Failure freq. (0474-1 to n)	→  133
Output freq. 1 to n (0471-1 to n)	→  133
Switch out funct (0481-1 to n)	→  134
Assign diag. beh (0482-1 to n)	→  134
Assign limit (0483-1 to n)	→  135
Switch-on value (0466-1 to n)	→  137
Switch-off value (0464-1 to n)	→  137
Assign dir.check (0484-1 to n)	→  138
Assign status (0485-1 to n)	→  138
Switch-on delay (0467-1 to n)	→  138
Switch-off delay (0465-1 to n)	→  139
Failure mode (0486-1 to n)	→  139
Switch status 1 to n (0461-1 to n)	→  139
Invert outp.sig. (0470-1 to n)	→  140

Terminal no.

Navigation	  Expert → Output → PFS output 1 to n → Terminal no. (0492-1 to n)
Description	Displays the terminal numbers used by the pulse/frequency/switch output module.
User interface	■ Not used ■ 24-25 (I/O 2) ■ 22-23 (I/O 3)
Additional information	"Not used" option The pulse/frequency/switch output module does not use any terminal numbers.

Signal mode




Navigation	Expert → Output → PFS output 1 to n → Signal mode (0490–1 to n)
Description	Use this function to select the signal mode for the pulse/frequency/switch output.
Selection	■ Passive ■ Active ■ Passive NAMUR
Factory setting	Passive

Operating mode



Navigation	Expert → Output → PFS output 1 to n → Operating mode (0469–1 to n)
Description	Use this function to select the operating mode of the output as a pulse, frequency or switch output.
Selection	■ Pulse ■ Frequency ■ Switch
Factory setting	Pulse
Additional information	<i>"Pulse" option</i> Quantity-dependent pulse with configurable pulse width ■ Whenever a specific mass, volume or corrected volume is reached (pulse value), a pulse is output, the duration of which was set previously (pulse width). ■ The pulses are never shorter than the set duration. Example ■ Flow rate approx. 100 g/s ■ Pulse value 0.1 g ■ Pulse width 0.05 ms ■ Pulse rate 1 000 Impuls/s

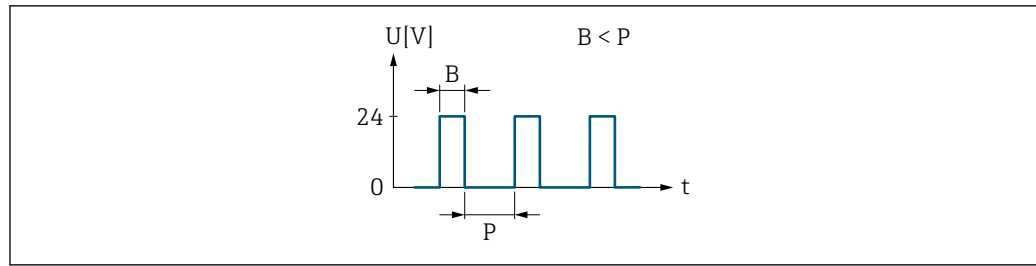

A0026883

6 Quantity-proportional pulse (pulse value) with pulse width to be configured

B Pulse width entered

P Pauses between the individual pulses


"Frequency" option

Flow-proportional frequency output with 1:1 on/off ratio

An output frequency is output that is proportional to the value of a process variable, such as volume flow, mass flow, corrected volume flow, flow velocity, conductivity, corrected conductivity, temperature or electronic temperature.

Example

- Flow rate approx. 100 g/s
- Max. frequency 10 kHz
- Flow rate at max. frequency 1000 g/s
- Output frequency approx. 1000 Hz

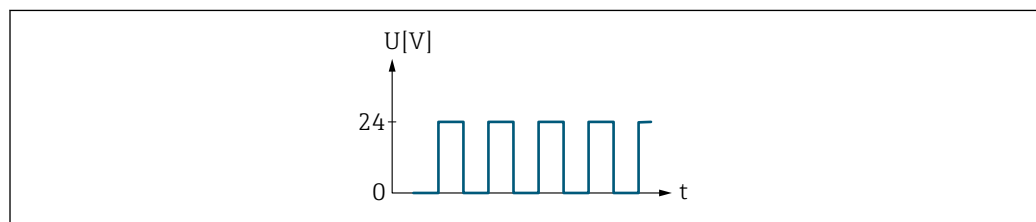

A0026886


7 Flow-proportional frequency output

"Switch" option

Contact for displaying a condition (e.g. alarm or warning if a limit value is reached)

Example

Alarm response without alarm

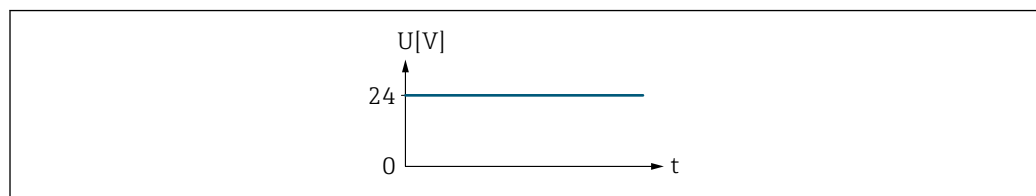


A0026884

8 No alarm, high level

Example

Alarm response in case of alarm

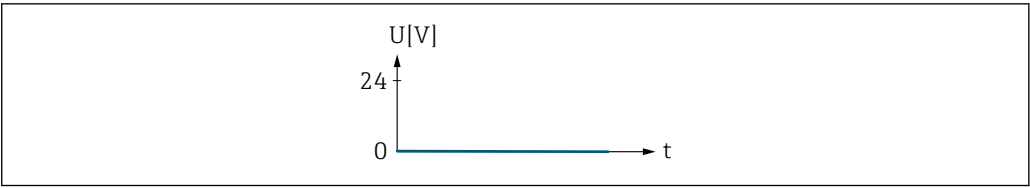

A0026885

9 Alarm, low level

Assign pulse 1 to n


Navigation	 Expert → Output → PFS output 1 to n → Assign pulse 1 to n (0460–1 to n)
Prerequisite	The Pulse option is selected in the Operating mode parameter (→  123) parameter.
Description	Use this function to select the process variable for the pulse output.
Selection	■ Off ■ Volume flow ■ Mass flow ■ Correct.vol.flow
Factory setting	Off

Pulse scaling

Navigation	 Expert → Output → PFS output 1 to n → Pulse scaling (0455–1 to n)
Prerequisite	The Pulse option is selected in the Operating mode parameter (→  123) and a process variable is selected in the Assign pulse parameter (→  125).
Description	Use this function to enter the value for the measured value that a pulse is equivalent to.
User entry	Positive floating point number
Factory setting	Depends on country and nominal diameter→  220
Additional information	User entry Weighting of the pulse output with a quantity. The lower the pulse value, the ■ better the resolution. ■ the higher the frequency of the pulse response.

Pulse width

Navigation	Expert → Output → PFS output 1 to n → Pulse width (0452-1 to n)
Prerequisite	The Pulse option is selected in the Operating mode parameter (→ 123) and a process variable is selected in the Assign pulse parameter (→ 125).
Description	Use this function to enter the duration of the output pulse.
User entry	0.05 to 2 000 ms
Factory setting	100 ms
Additional information	<i>Description</i> ■ Define how long a pulse is (duration). ■ The maximum pulse rate is defined by $f_{\max} = 1 / (2 \times \text{pulse width})$. ■ The interval between two pulses lasts at least as long as the set pulse width. ■ The maximum flow is defined by $Q_{\max} = f_{\max} \times \text{pulse value}$. ■ If the flow exceeds these limit values, the measuring device displays the diagnostic message S443 Pulse output 1 to n.

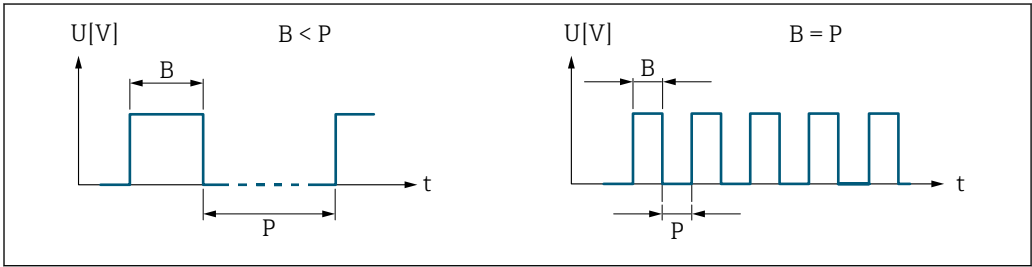

A0026882

B Pulse width entered
P Pauses between the individual pulses

Example

- Pulse value: 0.1 g
- Pulse width: 0.1 ms
- $f_{\max}$: $1 / (2 \times 0.1 \text{ ms}) = 5 \text{ kHz}$
- $Q_{\max}$: $5 \text{ kHz} \times 0.1 \text{ g} = 0.5 \text{ kg/s}$

Measuring mode

Navigation	Expert → Output → PFS output 1 to n → Measuring mode (0457-1 to n)
Prerequisite	In the Operating mode parameter (→ 123), the Pulse option is selected, and one of the following options is selected in the Assign pulse parameter (→ 125): ■ Mass flow ■ Volume flow ■ Correct.vol.flow
Description	Use this function to select the measuring mode for the pulse output.


Selection	■ Forward flow ■ Forward/Reverse ■ Reverse flow ■ Rev. flow comp.
Factory setting	Forward flow
Additional information	<i>Selection</i> ■ Forward flow Positive flow is output, negative flow is not output. ■ Forward/Reverse Positive and negative flow are output (absolute value), but a distinction is not made between positive and negative flow. ■ Reverse flow Negative flow is output, positive flow is not output. ■ Rev. flow comp. The flow components outside the span are buffered, balanced and output after a maximum delay of 60 s.  For a detailed description of the options available, see the Measuring mode parameter (→  113) <i>Examples</i>  For a detailed description of the configuration examples, see the Measuring mode parameter (→  113)

Failure mode

Navigation	 Expert → Output → PFS output 1 to n → Failure mode (0480–1 to n)
Prerequisite	The Pulse option is selected in the Operating mode parameter (→  123) and a process variable is selected in the Assign pulse parameter (→  125).
Description	Use this function to select the failure mode of the pulse output in the event of a device alarm.
Selection	■ Actual value ■ No pulses
Factory setting	No pulses
Additional information	<i>Description</i> The dictates of safety render it advisable to ensure that the pulse output shows a predefined behavior in the event of a device alarm. <i>Selection</i> ■ Actual value In the event of a device alarm, the pulse output continues on the basis of the current flow measurement. The fault is ignored. ■ No pulses In the event of a device alarm, the pulse output is "switched off". NOTICE! A device alarm is a measuring device error that must be taken seriously. It can affect the measurement quality such that the quality can no longer be guaranteed. The

Actual value option is only recommended if it can be guaranteed that all possible alarm conditions will not affect the measurement quality.

Pulse output 1 to n

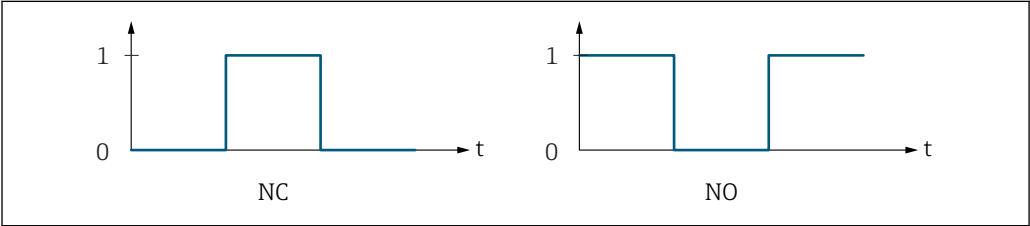Navigation	 Expert → Output → PFS output 1 to n → Pulse output 1 to n (0456–1 to n)
Prerequisite	The Pulse option is selected in the Operating mode parameter (→  123) parameter.
Description	Displays the pulse frequency currently output.
User interface	Positive floating-point number
Additional information	Description ■ The pulse output is an open collector output. ■ This is configured at the factory in such a way that the transistor is conductive for the duration of the pulse (NO contact) and is safety-oriented.  0 Non-conductive 1 Conductive NC NC contact (normally closed) NO NO contact (normally open) A0028726

The output behavior can be reversed via the **Invert outp.sig.** parameter (→  140) i.e. the transistor does not conduct for the duration of the pulse.

In addition, the behavior of the output in the event of a device alarm (**Failure mode** parameter (→  127)) can be configured.

Assign freq.

Navigation	 Expert → Output → PFS output 1 to n → Assign freq. (0478–1 to n)
Prerequisite	The Frequency option is selected in the Operating mode parameter (→  123).
Description	Use this function to select the process variable for the frequency output.
Selection	■ Off ■ Volume flow ■ Mass flow ■ Correct.vol.flow ■ Flow velocity

- Conductivity *
- CorrConductivity *
- Temperature *
- Electronic temp.
- Noise *
- CoilCurrShotTime *
- Ref Electr. Pot. *
- Coating meas.val *
- Test point 1
- Test point 2
- Test point 3

Factory setting Off

Min. freq. value

Navigation   Expert → Output → PFS output 1 to n → Min. freq. value (0453-1 to n)

Prerequisite The **Frequency** option is selected in the **Operating mode** parameter (→  123) and a process variable is selected in the **Assign freq.** parameter (→  128).

Description Use this function to enter the minimum frequency.

User entry 0.0 to 10 000.0 Hz

Factory setting 0.0 Hz

Max. freq. value

Navigation   Expert → Output → PFS output 1 to n → Max. freq. value (0454-1 to n)

Prerequisite The **Frequency** option is selected in the **Operating mode** parameter (→  123) and a process variable is selected in the **Assign freq.** parameter (→  128).

Description Use this function to enter the end value frequency.

User entry 0.0 to 10 000.0 Hz

Factory setting 10 000.0 Hz

* Visibility depends on order options or device settings

Val. at min.freq

Navigation	  Expert → Output → PFS output 1 to n → Val. at min.freq (0476–1 to n)
Prerequisite	The Frequency option is selected in the Operating mode parameter (→  123) and a process variable is selected in the Assign freq. parameter (→  128).
Description	Use this function to enter the measured value for the start value frequency.
User entry	Signed floating-point number
Factory setting	Depends on country and nominal diameter
Additional information	<i>Dependency</i>  The entry depends on the process variable selected in the Assign freq. parameter (→  128).

Val. at max.freq

Navigation	  Expert → Output → PFS output 1 to n → Val. at max.freq (0475–1 to n)
Prerequisite	The Frequency option is selected in the Operating mode parameter (→  123) and a process variable is selected in the Assign freq. parameter (→  128).
Description	Use this function to enter the measured value for the end value frequency.
User entry	Signed floating-point number
Factory setting	Depends on country and nominal diameter
Additional information	<i>Description</i> Use this function to enter the maximum measured value at the maximum frequency. The selected process variable is output as a proportional frequency. <i>Dependency</i>  The entry depends on the process variable selected in the Assign freq. parameter (→  128).

Measuring mode

Navigation	  Expert → Output → PFS output 1 to n → Measuring mode (0479–1 to n)
Prerequisite	In the Assign curr. parameter (→  109), one of the following options is selected: ■ Volume flow ■ Mass flow ■ Correct.vol.flow ■ Flow velocity

- Conductivity *
- CorrConductivity *
- Temperature *
- Electronic temp.

Description Use this function to select the measuring mode for the frequency output.

Selection

- Forward flow
- Forward/Reverse
- Rev. flow comp.

Factory setting Forward flow

Additional information *Selection*

 For a detailed description of the options available, see the **Measuring mode** parameter (→  113)

Examples

 For a detailed description of the configuration examples, see the **Measuring mode** parameter (→  113)

Damping out. 1 to n

Navigation   Expert → Output → PFS output 1 to n → Damping out. 1 to n (0477–1 to n)

Prerequisite In the **Assign curr.** parameter (→  109), one of the following options is selected:

- Volume flow
- Mass flow
- Correct.vol.flow
- Flow velocity
- Conductivity *
- CorrConductivity *
- Temperature *
- Electronic temp.

Description Use this function to enter a time constant for the reaction time of the output signal to fluctuations in the measured value.

User entry 0 to 999.9 s

Factory setting 0.0 s

* Visibility depends on order options or device settings

Additional information *User entry*

Use this function to enter a time constant (PT1 element ⁴⁾) for frequency output damping:

- If a low time constant is entered, the current output reacts particularly quickly to fluctuating measured variables.
- On the other hand, the current output reacts more slowly if a high time constant is entered.

 Damping is switched off if **0** is entered (factory setting).

The frequency output is subject to separate damping that is independent of all preceding time constants.

Response time**Navigation**

 Expert → Output → PFS output 1 to n → Response time (0491–1 to n)

Prerequisite

In the **Assign curr.** parameter (→  109), one of the following options is selected:

- Volume flow
- Mass flow
- Correct.vol.flow
- Flow velocity
- Conductivity *
- CorrConductivity *
- Temperature *
- Electronic temp.

Description

Displays the response time. This specifies how quickly the pulse/frequency/switch output reaches the measured value change of 63 % of 100 % of the measured value change.

User interface

Positive floating-point number

Additional information

Description

-  The response time is made up of the time specified for the following dampings:
- Damping of pulse/frequency/switch output →  118
and
 - Depending on the measured variable assigned to the output.
Flow damping

Failure mode**Navigation**

 Expert → Output → PFS output 1 to n → Failure mode (0451–1 to n)

Prerequisite

The **Frequency** option is selected in the **Operating mode** parameter (→  123) and a process variable is selected in the **Assign freq.** parameter (→  128).

Description

Use this function to select the failure mode of the frequency output in the event of a device alarm.

⁴⁾ proportional transmission behavior with first order delay

* Visibility depends on order options or device settings

Selection	■ Actual value ■ Defined value ■ 0 Hz
Factory setting	0 Hz
Additional information	<i>Selection</i> ■ Actual value In the event of a device alarm, the frequency output continues on the basis of the current flow measurement. The device alarm is ignored. ■ Defined value In the event of a device alarm, the frequency output continues on the basis of a predefined value. The Failure freq. (→ 133) replaces the current measured value, making it possible to bypass the device alarm. The actual measurement is switched off for the duration of the device alarm. ■ 0 Hz In the event of a device alarm, the frequency output is "switched off". NOTICE! A device alarm is a measuring device error that must be taken seriously. It can affect the measurement quality such that the quality can no longer be guaranteed. The Actual value option is only recommended if it can be guaranteed that all possible alarm conditions will not affect the measurement quality.

Failure freq.



Navigation	Expert → Output → PFS output 1 to n → Failure freq. (0474–1 to n)
Prerequisite	The Frequency option is selected in the Operating mode parameter (→ 123) and a process variable is selected in the Assign freq. parameter (→ 128).
Description	Use this function to enter the value for the frequency output in the event of a device alarm in order to bypass the alarm.
User entry	0.0 to 12 500.0 Hz
Factory setting	0.0 Hz

Output freq. 1 to n

Navigation	Expert → Output → PFS output 1 to n → Output freq. 1 to n (0471–1 to n)
Prerequisite	In the Operating mode parameter (→ 123), the Frequency option is selected.
Description	Displays the actual value of the output frequency which is currently measured.
User interface	0.0 to 12 500.0 Hz

Switch out funct 	
Navigation	  Expert → Output → PFS output 1 to n → Switch out funct (0481–1 to n)
Prerequisite	The Switch option is selected in the Operating mode parameter (→  123).
Description	Use this function to select a function for the switch output.
Selection	■ Off ■ On ■ Diag. behavior ■ Limit ■ Fl. direct.check ■ Status
Factory setting	Off
Additional information	<i>Selection</i> ■ Off The switch output is permanently switched off (open, non-conductive). ■ On The switch output is permanently switched on (closed, conductive). ■ Diag. behavior Indicates if the diagnostic event is present or not. Is used to output diagnostic information and to react to it appropriately at the system level. ■ Limit Indicates if a specified limit value has been reached for the process variable. Is used to output diagnostic information relating to the process and to react to it appropriately at the system level. ■ Fl. direct.check Indicates the flow direction (forward or reverse flow). ■ Status Indicates the device status depending on whether empty pipe detection or low flow cut off is selected.
Assign diag. beh 	
Navigation	  Expert → Output → PFS output 1 to n → Assign diag. beh (0482–1 to n)
Prerequisite	■ In the Operating mode parameter (→  123), the Switch option is selected. ■ In the Switch out funct parameter (→  134), the Diag. behavior option is selected.
Description	Use this function to select the diagnostic event category that is displayed for the switch output.
Selection	■ Alarm ■ Alarm or warning ■ Warning
Factory setting	Alarm

Additional information*Description*

If no diagnostic event is pending, the switch output is closed and conductive.

Selection

- **Alarm**
The switch output signals only diagnostic events in the alarm category.
- **Alarm or warning**
The switch output signals diagnostic events in the alarm and warning category.
- **Warning**
The switch output signals only diagnostic events in the warning category.

Assign limit**Navigation**

Expert → Output → PFS output 1 to n → Assign limit (0483–1 to n)

Prerequisite

- The **Switch** option is selected in the **Operating mode** parameter (→ 123).
- The **Limit** option is selected in the **Switch out funct** parameter (→ 134).

Description

Use this function to select a process variable for the limit function.

Selection

- Off
- Volume flow
- Mass flow
- Correct.vol.flow
- Flow velocity
- Conductivity *
- CorrConductivity *
- Totalizer 1
- Totalizer 2
- Totalizer 3
- Temperature *
- Electronic temp.

Factory setting


Volume flow

Additional information*Description*

Behavior of status output when Switch-on value > Switch-off value:

- Process variable > Switch-on value: transistor is conductive
- Process variable < Switch-off value: transistor is non-conductive

* Visibility depends on order options or device settings

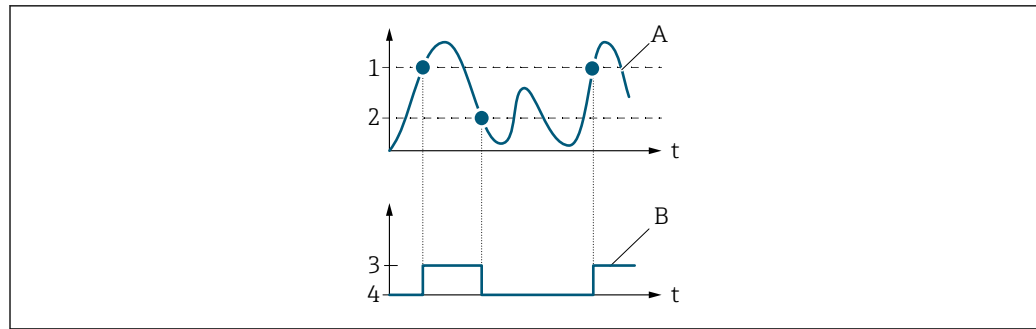


A0026891

- 1 Switch-on value
- 2 Switch-off value
- 3 Conductive
- 4 Non-conductive
- A Process variable
- B Status output

Behavior of status output when Switch-on value < Switch-off value:

- Process variable < Switch-on value: transistor is conductive
- Process variable > Switch-off value: transistor is non-conductive

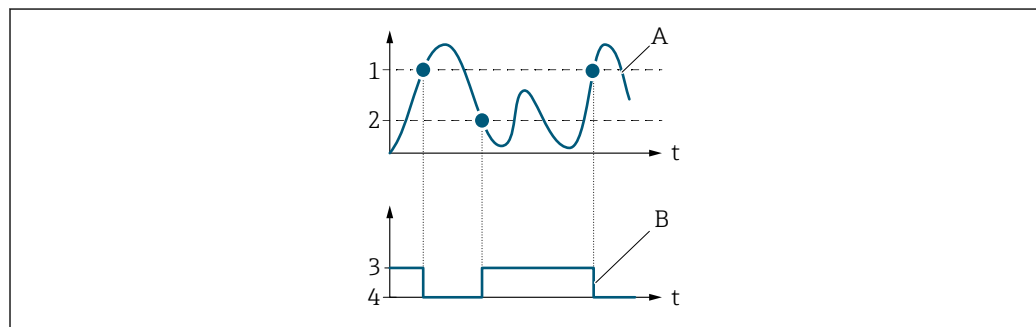


A0026892

- 1 Switch-off value
- 2 Switch-on value
- 3 Conductive
- 4 Non-conductive
- A Process variable
- B Status output

Behavior of status output when Switch-on value = Switch-off value:

- Process variable > Switch-on value: transistor is conductive
- Process variable < Switch-off value: transistor is non-conductive

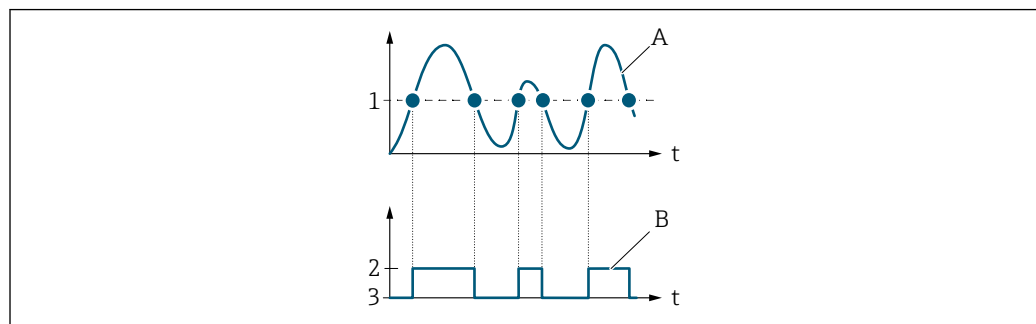

A0026893

- 1 Switch-on value = Switch-off value
- 2 Conductive
- 3 Non-conductive
- A Process variable
- B Status output

Switch-on value



Navigation	Expert → Output → PFS output 1 to n → Switch-on value (0466–1 to n)
Prerequisite	▪ The Switch option is selected in the Operating mode parameter (→ 123). ▪ The Limit option is selected in the Switch out funct parameter (→ 134).
Description	Use this function to enter the measured value for the switch-on point.
User entry	Signed floating-point number
Factory setting	Country-specific: ▪ 0 l/h ▪ 0 gal/min (us)
Additional information	<i>Description</i> Use this function to enter the limit value for the switch-on value (process variable > switch-on value = closed, conductive). When using a hysteresis: Switch-on value > Switch-off value. <i>Dependency</i> The unit depends on the process variable selected in the Assign limit parameter (→ 135).

Switch-off value



Navigation	Expert → Output → PFS output 1 to n → Switch-off value (0464–1 to n)
Prerequisite	▪ The Switch option is selected in the Operating mode parameter (→ 123). ▪ The Limit option is selected in the Switch out funct parameter (→ 134).
Description	Use this function to enter the measured value for the switch-off point.
User entry	Signed floating-point number
Factory setting	Country-specific: ▪ 0 l/h ▪ 0 gal/min (us)
Additional information	<i>Description</i> Use this function to enter the limit value for the switch-off value (process variable < switch-off value = open, non-conductive). When using a hysteresis: Switch-on value > Switch-off value. <i>Dependency</i> The unit depends on the process variable selected in the Assign limit parameter (→ 135).

Assign dir.check

Navigation	  Expert → Output → PFS output 1 to n → Assign dir.check (0484-1 to n)
Prerequisite	■ The Switch option is selected in the Operating mode parameter (→  123). ■ The Fl. direct.check option is selected in the Switch out funct parameter (→  134).
Description	Use this function to select a process variable for monitoring the flow direction.
Selection	■ Off ■ Volume flow ■ Mass flow ■ Correct.vol.flow
Factory setting	Volume flow

Assign status

Navigation	  Expert → Output → PFS output 1 to n → Assign status (0485-1 to n)
Prerequisite	■ The Switch option is selected in the Operating mode parameter (→  123). ■ The Status option is selected in the Switch out funct parameter (→  134).
Description	Use this function to select a device status for the switch output.
Selection	■ Empty pipe det. ■ Low flow cut off ■ Digital outp. 1 * ■ Digital outp. 2 * ■ Digital outp. 3 *
Factory setting	Empty pipe det.
Additional information	<i>Options</i> If empty pipe detection or low flow cut off are enabled, the output is conductive. Otherwise, the switch output is non-conductive.

Switch-on delay

Navigation	  Expert → Output → PFS output 1 to n → Switch-on delay (0467-1 to n)
Prerequisite	■ The Switch option is selected in the Operating mode parameter (→  123). ■ The Limit option is selected in the Switch out funct parameter (→  134).
Description	Use this function to enter a delay time for switching on the switch output.

* Visibility depends on order options or device settings

User entry 0.0 to 100.0 s

Factory setting 0.0 s

Switch-off delay

Navigation   Expert → Output → PFS output 1 to n → Switch-off delay (0465–1 to n)

Prerequisite

- The **Switch** option is selected in the **Operating mode** parameter (→  123).
- The **Limit** option is selected in the **Switch out funct** parameter (→  134).

Description Use this function to enter a delay time for switching off the switch output.

User entry 0.0 to 100.0 s

Factory setting 0.0 s

Failure mode

Navigation   Expert → Output → PFS output 1 to n → Failure mode (0486–1 to n)

Description Use this function to select a failsafe mode for the switch output in the event of a device alarm.

Selection

- Actual status
- Open
- Closed

Factory setting Open

Additional information *Options*

- Actual status
In the event of a device alarm, faults are ignored and the current behavior of the input value is output by the switch output. The **Actual status** option behaves in the same way as the current input value.
- Open
In the event of a device alarm, the switch output's transistor is set to **non-conductive**.
- Closed
In the event of a device alarm, the switch output's transistor is set to **conductive**.

Switch status 1 to n

Navigation   Expert → Output → PFS output 1 to n → Switch status 1 to n (0461–1 to n)

Prerequisite The **Switch** option is selected in the **Operating mode** parameter (→  123).

Description

Displays the current switch status of the status output.

- User interface
- Open

■ Closed

- Additional information
- User interface

■ Open

The switch output is not conductive.

■ Closed

The switch output is conductive.

Invert outp.sig.



Navigation

 Expert → Output → PFS output 1 to n → Invert outp.sig. (0470-1 to n)

Description

Use this function to select whether to invert the output signal.

- Selection
- No


■ Yes

Factory setting


No

- Additional information
- Selection

No option (passive - negative)

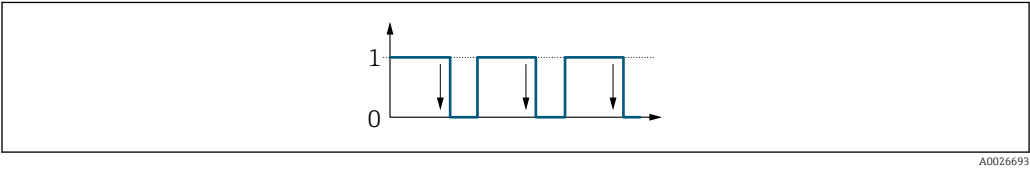

Yes option (passive - positive)

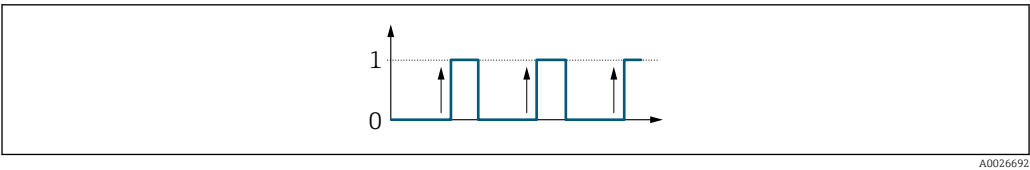

3.5.3 "Relay output 1 to n" submenu

Navigation

 Expert → Output → Relay output 1 to n

► Relay output 1 to n

Terminal no.

→  141

Relay outp.func.	→ 141
Assign dir.check	→ 142
Assign limit	→ 142
Assign diag. beh	→ 143
Assign status	→ 143
Switch-off value	→ 144
Switch-off delay	→ 144
Switch-on value	→ 145
Switch-on delay	→ 145
Failure mode	→ 145
Switch status	→ 146
Powerless relay	→ 146

Terminal no.	
Navigation	Expert → Output → Relay output 1 to n → Terminal no. (0812-1 to n)
Description	Displays the terminal numbers used by the relay output module.
User interface	■ Not used ■ 24-25 (I/O 2) ■ 22-23 (I/O 3)
Additional information	<i>"Not used" option</i> The relay output module does not use any terminal numbers.

Relay outp.func.	
Navigation	Expert → Output → Relay output 1 to n → Relay outp.func. (0804-1 to n)
Description	Use this function to select an output function for the relay output.
Selection	■ Closed ■ Open ■ Diag. behavior

- Limit
- Fl. direct.check
- Digital Output

Factory setting

Closed

Additional information*Selection*

- Closed
The relay output is permanently switched on (closed, conductive).
- Open
The relay output is permanently switched off (open, non-conductive).
- Diag. behavior
Indicates if the diagnostic event is present or not. Is used to output diagnostic information and to react to it appropriately at the system level.
- Limit
Indicates if a specified limit value has been reached for the process variable. Is used to output diagnostic information relating to the process and to react to it appropriately at the system level.
- Fl. direct.check
Indicates the flow direction (forward or reverse flow).
- Digital Output
Indicates the device status depending on whether empty pipe detection or low flow cut off is selected.

Assign dir.check**Navigation**

Expert → Output → Relay output 1 to n → Assign dir.check (0808–1 to n)

PrerequisiteIn the **Relay outp.func.** parameter (→ 141), the **Fl. direct.check** option is selected.**Description**

Use this function to select a process variable for monitoring the flow direction.

Selection

- Off
- Volume flow
- Mass flow
- Correct.vol.flow

Factory setting

Volume flow

Assign limit**Navigation**

Expert → Output → Relay output 1 to n → Assign limit (0807–1 to n)

PrerequisiteThe **Limit** option is selected in the **Relay outp.func.** parameter (→ 141).**Description**

Use this function to select a process variable for the limit value function.

Selection

- Off
- Volume flow
- Mass flow

- Correct.vol.flow
- Flow velocity
- Conductivity *
- CorrConductivity *
- Totalizer 1
- Totalizer 2
- Totalizer 3
- Temperature *
- Electronic temp.

Factory setting

Volume flow

Assign diag. beh**Navigation**

Expert → Output → Relay output 1 to n → Assign diag. beh (0806–1 to n)

PrerequisiteIn the **Relay outp.func.** parameter (→ 141), the **Diag. behavior** option is selected.**Description**

Use this function to select the category of the diagnostic events that are displayed for the relay output.

Selection

- Alarm
- Alarm or warning
- Warning

Factory setting

Alarm

Additional information*Description*

If no diagnostic event is pending, the relay output is closed and conductive.

Selection

- Alarm
The relay output signals only diagnostic events in the alarm category.
- Alarm or warning
The relay output signals diagnostic events in the alarm and warning category.
- Warning
The relay output signals only diagnostic events in the warning category.

Assign status**Navigation**

Expert → Output → Relay output 1 to n → Assign status (0805–1 to n)

PrerequisiteIn the **Relay outp.func.** parameter (→ 141), the **Digital Output** option is selected.**Description**

Use this function to select the device status for the relay output.

* Visibility depends on order options or device settings

- Selection**
- Partial pipe det
 - Low flow cut off
 - Profinet Slot 18 *
 - Profinet Slot 19 *
 - Profinet Slot 20 *

Factory setting Partial pipe det

Switch-off value

Navigation   Expert → Output → Relay output 1 to n → Switch-off value (0809-1 to n)

Prerequisite In the **Relay outp.func.** parameter (→  141), the **Limit** option is selected.

Description Use this function to enter the measured value for the switch-off point.

User entry Signed floating-point number

Factory setting Country-specific:
 ■ 0 l/h
 ■ 0 gal(us)/min

Additional information *Description*
 Use this function to enter the limit value for the switch-off value (process variable < switch-off value = open, non-conductive).

 When using a hysteresis: Switch-on value > Switch-off value.

Dependency

 The unit is dependent on the process variable selected in the **Assign limit** parameter (→  142).

Switch-off delay

Navigation   Expert → Output → Relay output 1 to n → Switch-off delay (0813-1 to n)

Prerequisite In the **Relay outp.func.** parameter (→  141), the **Limit** option is selected.

Description Use this function to enter a delay time for switching off the switch output.

User entry 0.0 to 100.0 s

Factory setting 0.0 s

* Visibility depends on order options or device settings

Switch-on value

Navigation	  Expert → Output → Relay output 1 to n → Switch-on value (0810-1 to n)
Prerequisite	The Limit option is selected in the Relay outp.func. parameter (→  141).
Description	Use this function to enter the measured value for the switch-on point.
User entry	Signed floating-point number
Factory setting	Country-specific: ■ 0 l/h ■ 0 gal(us)/min
Additional information	<i>Description</i> Use this function to enter the limit value for the switch-on value (process variable > switch-on value = closed, conductive).  When using a hysteresis: Switch-on value > Switch-off value. <i>Dependency</i>  The unit is dependent on the process variable selected in the Assign limit parameter (→  142).

Switch-on delay

Navigation	  Expert → Output → Relay output 1 to n → Switch-on delay (0814-1 to n)
Prerequisite	In the Relay outp.func. parameter (→  141), the Limit option is selected.
Description	Use this function to enter a delay time for switching on the switch output.
User entry	0.0 to 100.0 s
Factory setting	0.0 s

Failure mode

Navigation	  Expert → Output → Relay output 1 to n → Failure mode (0811-1 to n)
Description	Use this function to select the failure mode of the relay output in the event of a device alarm.
Selection	■ Actual status ■ Open ■ Closed
Factory setting	Open

Additional information	<i>Selection</i> ■ Actual status In the event of a device alarm, faults are ignored and the current behavior of the input value is output by the relay output. The Actual status option behaves in the same way as the current input value. ■ Open In the event of a device alarm, the relay output's transistor is set to non-conductive. ■ Closed In the event of a device alarm, the relay output's transistor is set to conductive.
-------------------------------	--

Switch status

Navigation  Expert → Output → Relay output 1 to n → Switch status (0801–1 to n)

Description Displays the current status of the relay output.

User interface

- Open
- Closed

Additional information *User interface*

- Open
The relay output is not conductive.
- Closed
The relay output is conductive.

Powerless relay



Navigation  Expert → Output → Relay output 1 to n → Powerless relay (0816–1 to n)

Description Use this function to select the quiescent state for the relay output.

Selection

- Open
- Closed

Factory setting Open

Additional information *Selection*

- Open
The relay output is not conductive.
- Closed
The relay output is conductive.

3.6 "Communication" submenu

Navigation  Expert → Communication

► Communication		
► PROFINET config.	→ 	147
► PROFINET info	→ 	148
► Web server	→ 	152
► WLAN settings	→ 	155

3.6.1 "PROFINET config." submenu

Navigation  Expert → Communication → PROFINET config.

► PROFINET config.		
Name of station (2071)	→ 	147
Man. spec. diag. (2084)	→ 	148

Name of station	
Navigation	 Expert → Communication → PROFINET config. → Name of station (2071)
Description	Displays a unique name for the measuring point so it can be identified quickly within the plant.
User entry	Max. 240 characters such as lower-case letters or numbers
Factory setting	eh-promag300-xxxxx
Additional information	Description
	The device tag corresponds to the device name ("Name Of Station" of PROFINET specification) The device name can be adjusted via DIP switch or the automation system.
	Factory setting
Structure of the device tag:	
eh-promag300-xxxxx	
■ eh: Endress+Hauser	
■ promag: Instrument family	
■ 300: Transmitter	
■ xxxxx: Serial number of the device	

Man. spec. diag.

Navigation	Expert → Communication → PROFINET config. → Man. spec. diag. (2084)
Description	Use this function to enable the transfer of manufacturer-specific diagnostic events.
Selection	■ Not active ■ Active
Factory setting	Active
Additional information	Description ■ Active In addition to the PROFINET standard alarms, active manufacturing-specific diagnostic events are also transferred to the automation system. The diagnostic number and the error text of the respective diagnostic event are displayed. ■ Not active Only the PROFINET standard alarms are transferred to the automation system. Selection This selection affects PROFINET communication only. Diagnostic events are displayed in the DTM or web server regardless of the selection made in this parameter. The PROFINET standard alarms (diagnosis and process) for the stack are also unaffected by the selected made.

3.6.2 "PROFINET info" submenu

Navigation Expert → Communication → PROFINET info

► PROFINET info

Device type (2083)

Device ID (2073)

Device revision (2072)

AR state (2088)

MAC IO contr. (2093)

IP IO controller (2094)

MAC backup IO c. (2095)

IP backup IO c. (2096)

→ 149

→ 149

→ 149

→ 149

→ 151

→ 151

→ 151

→ 151

MRP role (2085)	→ 150
State MRP port 1 (2086)	→ 150
State MRP port 2 (2087)	→ 150

Device type

Navigation	 Expert → Communication → PROFINET info → Device type (2083)
Description	Displays the device type (device type code).
User interface	Max. 16 characters, such as letters, numbers or special characters (e.g. @, %, /).
Factory setting	Promag 300

Device ID

Navigation	 Expert → Communication → PROFINET info → Device ID (2073)
Description	Use this function to display the device ID.
User interface	0 to 65 535

Device revision

Navigation	 Expert → Communication → PROFINET info → Device revision (2072)
Description	Use this function to display the device revision.
User interface	0 to 65 535
Additional information	<i>Description</i> The device revision enables the correct assignment of device drivers to the device.

AR state

Navigation	 Expert → Communication → PROFINET info → AR state (2088)
Description	Displays whether an active AR (Application Relation) connection has been established.

User interface	■ Active ■ Not active ■ Redund. 1AR act. ■ Redund. 2AR act.
-----------------------	--

Factory setting	Not active
------------------------	------------

MRP role

Navigation	 Expert → Communication → PROFINET info → MRP role (2085)
-------------------	--

Description	Displays the current status of the MRP (Media Redundancy Protocol) role. When a connection is established, an MRP role is assigned to the measuring device if MRP was enabled in the controller.
--------------------	--

User interface	■ MRP deactivated ■ Client activated ■ Manager active
-----------------------	---

Factory setting	MRP deactivated
------------------------	-----------------

State MRP port 1

Navigation	 Expert → Communication → PROFINET info → State MRP port 1 (2086)
-------------------	--

Description	Displays the status of MRP port 1 if an MRP connection has been established.
--------------------	--

User interface	■ Port deactivated ■ Port blocking ■ Port forwarding
-----------------------	--

Factory setting	Port deactivated
------------------------	------------------

Additional information	<i>Selection</i> ■ Port forwarding The ring is closed. ■ Port blocking The ring is open.
-------------------------------	--

State MRP port 2

Navigation	 Expert → Communication → PROFINET info → State MRP port 2 (2087)
-------------------	--

Description	Displays the status of MRP port 2 if an MRP connection has been established.
--------------------	--

User interface	■ Port deactivated ■ Port blocking ■ Port forwarding
Factory setting	Port deactivated
Additional information	<i>Selection</i> ■ Port forwarding The ring is closed. ■ Port blocking The ring is open.

MAC IO contr.

Navigation	 Expert → Communication → PROFINET info → MAC IO contr. (2093)
Description	Shows MAC of the only or of the primary controller.
Factory setting	0x00

IP IO controller

Navigation	 Expert → Communication → PROFINET info → IP IO controller (2094)
Description	Shows IP of the only or of the primary controller.
Factory setting	0x00

MAC backup IO c.

Navigation	 Expert → Communication → PROFINET info → MAC backup IO c. (2095)
Description	Shows the MAC adress of the backup IO controller.
Factory setting	0x00

IP backup IO c.

Navigation	 Expert → Communication → PROFINET info → IP backup IO c. (2096)
Description	Shows the IP adress of the backup IO controller.

Factory setting

0x00

3.6.3 "Web server" submenu

Navigation  Expert → Communication → Web server

► Web server

Webserv.language (7221)

→  152

MAC Address (7214)

→  153

IP address (7209)

→  153

Subnet mask (7211)

→  153

Default gateway (7210)

→  153

Webserver funct. (7222)

→  154

Login page (7273)

→  154

Webserv.language

Navigation  Expert → Communication → Web server → Webserv.language (7221)

Description Use this function to select the Web server language setting.

- Selection
- English
 - Deutsch
 - Français
 - Español
 - Italiano
 - Nederlands
 - Portuguesa
 - Polski
 - русский язык(Ru)
 - Svenska
 - Türkçe
 - 中文 (Chinese)
 - 日本語 (Japanese)
 - 한국어 (Korean)
 - Bahasa Indonesia
 - tiếng Việt (Vit)
 - čeština (Czech)

Factory setting English

MAC Address

Navigation   Expert → Communication → Web server → MAC Address (7214)

Description Displays the MAC⁵⁾ address of the measuring device.

User interface Unique 12-digit character string comprising letters and numbers

Factory setting Each measuring device is given an individual address.

Additional information *Example*
For the display format
00:07:05:10:01:5F

IP address



Navigation   Expert → Communication → Web server → IP address (7209)

Description Display or enter the IP address of the Web server integrated in the measuring device.

User entry 4 octet: 0 to 255 (in the particular octet)

Factory setting 192.168.1.212

Subnet mask

Navigation   Expert → Communication → Web server → Subnet mask (7211)

Description Display or enter the subnet mask.

User entry 4 octet: 0 to 255 (in the particular octet)

Factory setting 255.255.255.0

Default gateway

Navigation   Expert → Communication → Web server → Default gateway (7210)

Description Display or enter the Default gateway (→  153).

User entry 4 octet: 0 to 255 (in the particular octet)

5) Media Access Control

Factory setting

0.0.0.0

Webserver funct.

Navigation

Expert → Communication → Web server → Webserver funct. (7222)

Description

Use this function to switch the Web server on and off.

- Selection
- Off
 - HTML Off
 - On

Factory setting

On

Additional information

Description
 Once disabled, the Webserver funct. can only be re-enabled via or the operating tool FieldCare.

Selection

Option	Description
Off	■ The web server is completely disabled. ■ Port 80 is locked.
HTML Off	The HTML version of the web server is not available.
On	■ The complete functionality of the web server is available. ■ JavaScript is used. ■ The password is transferred in an encrypted state. ■ Any change to the password is also transferred in an encrypted state.

Login page

Navigation

Expert → Communication → Web server → Login page (7273)

Description

Use this function to select the format of the login page.

- Selection
- Without header
 - With header

Factory setting

With header

3.6.4 "WLAN settings" submenu

Navigation  Expert → Communication → WLAN settings

► WLAN settings		
WLAN (2702)	→ 	156
WLAN mode (2717)	→ 	156
SSID name (2714)	→ 	156
Network security (2705)	→ 	156
Sec. identific. (2718)	→ 	157
User name (2715)	→ 	157
WLAN password (2716)	→ 	157
WLAN IP address (2711)	→ 	158
WLAN MAC address (2703)	→ 	158
WLAN subnet mask (2709)	→ 	158
WLAN MAC address (2703)	→ 	158
WLAN passphrase (2706)	→ 	158
WLAN MAC address (2703)	→ 	158
Assign SSID name (2708)	→ 	159
SSID name (2707)	→ 	159
WLAN channel (2704)	→ 	159
Select antenna (2713)	→ 	160
Connection state (2722)	→ 	160
Rec.sig.strength (2721)	→ 	160
WLAN IP address (2711)	→ 	158
Gateway IP addr. (2719)	→ 	161
IP address DNS (2720)	→ 	161

WLAN



Navigation  Expert → Communication → WLAN settings → WLAN (2702)

Description Use this function to enable and disable the WLAN connection.

Selection

- Disable
- Enable

Factory setting Enable

WLAN mode



Navigation  Expert → Communication → WLAN settings → WLAN mode (2717)

Description Use this function to select the WLAN mode.

Selection

- Access point
- WLAN Client

Factory setting Access point

SSID name



Navigation  Expert → Communication → WLAN settings → SSID name (2714)

Prerequisite The client is activated.

Description Use this function to enter the user-defined SSID name (max. 32 characters) of the WLAN network.

User entry –

Factory setting –

Network security



Navigation  Expert → Communication → WLAN settings → Network security (2705)

Description Use this function to select the type of security for the WLAN interface.

Selection	■ Unsecured ■ WPA2-PSK ■ EAP-PEAP MSCHAP2 * ■ EAP-PEAP NoAuth. * ■ EAP-TLS *
Factory setting	WPA2-PSK
Additional information	<i>Selection</i> ■ Unsecured Access the WLAN connection without identification. ■ WPA2-PSK Access the WLAN connection with a network key.

Sec. identific.

Navigation	 Expert → Communication → WLAN settings → Sec. identific. (2718)
Description	Use this function to select the security settings (download via the menu: Data Management > Security > Download WLAN).
User interface	■ Trust. iss.cert. ■ Device certific. ■ Dev. private key

User name



Navigation	 Expert → Communication → WLAN settings → User name (2715)
Description	Use this function to enter the username of the WLAN network.
User entry	–
Factory setting	–

WLAN password



Navigation	 Expert → Communication → WLAN settings → WLAN password (2716)
Description	Use this function to enter the WLAN password for the WLAN network.
User entry	–
Factory setting	–

* Visibility depends on order options or device settings

WLAN IP address



Navigation	 Expert → Communication → WLAN settings → WLAN IP address (2711)
Description	Use this function to enter the IP address of the measuring device's WLAN connection.
User entry	4 octet: 0 to 255 (in the particular octet)
Factory setting	192.168.1.212

WLAN MAC address

Navigation	 Expert → Communication → WLAN settings → WLAN MAC address (2703)
Description	Displays the MAC ⁶⁾ address of the measuring device.
User interface	Unique 12-digit character string comprising letters and numbers
Factory setting	Each measuring device is given an individual address.
Additional information	<i>Example</i> For the display format 00:07:05:10:01:5F

WLAN subnet mask



Navigation	 Expert → Communication → WLAN settings → WLAN subnet mask (2709)
Description	Use this function to enter the subnet mask.
User entry	4 octet: 0 to 255 (in the particular octet)
Factory setting	255.255.255.0

WLAN passphrase



Navigation	 Expert → Communication → WLAN settings → WLAN passphrase (2706)
Prerequisite	The WPA2-PSK option is selected in the Security type parameter (→  156).
Description	Use this function to enter the network key.

6) Media Access Control

User entry	8 to 32-digit character string comprising numbers, letters and special characters (without spaces)
Factory setting	Serial number of the measuring device (e.g. L100A802000)

Assign SSID name

Navigation	  Expert → Communication → WLAN settings → Assign SSID name (2708)
Description	Use this function to select which name is used for the SSID ⁷⁾ .
Selection	■ Device tag ■ User-defined
Factory setting	User-defined
Additional information	<i>Selection</i> ■ Device tag The device tag name is used as the SSID. ■ User-defined A user-defined name is used as the SSID.

SSID name

Navigation	  Expert → Communication → WLAN settings → SSID name (2707)
Prerequisite	■ The User-defined option is selected in the Assign SSID name parameter (→  159). ■ The Access point option is selected in the WLAN mode parameter (→  156).
Description	Use this function to enter a user-defined SSID name.
User entry	Max. 32-digit character string comprising numbers, letters and special characters
Factory setting	EH_device designation_last 7 digits of the serial number (e.g. EH_Promag_300_A802000)

WLAN channel

Navigation	  Expert → Communication → WLAN settings → WLAN channel (2704)
Description	Use this function to enter the WLAN channel.
User entry	1 to 11

⁷⁾ Service Set Identifier

Factory setting 6

Additional information *Description*



- It is only necessary to enter a WLAN channel if multiple WLAN devices are in use.
- If just one measuring device is in use, it is recommended to keep the factory setting.

Select antenna



Navigation Expert → Communication → WLAN settings → Select antenna (2713)

Description Use this function to select whether the external or internal antenna is used for reception.

Selection

- External antenna
- Internal antenna

Factory setting Internal antenna

Connection state

Navigation Expert → Communication → WLAN settings → Connection state (2722)

Description The connection status is displayed.

User interface

- Connected
- Not connected

Factory setting Not connected

Rec.sig.strength

Navigation Expert → Communication → WLAN settings → Rec.sig.strength (2721)

Description Displays the signal strength received.

User interface

- Low
- Medium
- High

Factory setting High

Gateway IP addr.

Navigation	  Expert → Communication → WLAN settings → Gateway IP addr. (2719)
Description	Use this function to enter the IP address of the gateway.
Factory setting	192.168.1.212

IP address DNS

Navigation	 Expert → Communication → WLAN settings → IP address DNS (2720)  Expert → Communication → WLAN settings → IP address DNS (2720)
Description	Use this function to enter the IP address of the domain name server.
Factory setting	192.168.1.212

3.6.5 "Diag. config." submenu

For a list of all the diagnostic events, see the Operating Instructions for the device
→  7

Assign a category to the particular diagnostic event:

Category	Meaning
Failure (F)	A device error is present. The measured value is no longer valid.
Funct. check (C)	The device is in service mode (e.g. during a simulation).
Out of spec. (S)	The device is being operated: ■ Outside its technical specification limits (e.g. outside the process temperature range) ■ Outside of the configuration carried out by the user (e.g. maximum flow in parameter 20 mA value)
Mainten. req.(M)	Maintenance is required. The measured value is still valid.
No effect (N)	Has no effect on the condensed status ¹⁾ .

1) Condensed status according to NAMUR recommendation NE107

Navigation   Expert → Communication → Diag. config.

► Diag. config.		
Event category 004 (0238)	→	 162
Event category 441 (0210)	→	 162
Event category 442 (0230)	→	 163

Event category 443 (0231)	→  163
Event category 531 (0262)	→  163
Event category 832 (0218)	→  164
Event category 833 (0225)	→  164
Event category 834 (0227)	→  165
Event category 835 (0229)	→  165
Event category 862 (0214)	→  165
Event category 937 (0260)	→  166

Event category 004 (Sensor)



Navigation	 Expert → Communication → Diag. config. → Event category 004 (0238)
Description	Use this option to select a category for the diagnostic message 004 Sensor .
Selection	■ Failure (F) ■ Funct. check (C) ■ Out of spec. (S) ■ Mainten. req.(M) ■ No effect (N)
Factory setting	Out of spec. (S)
Additional information	 For a detailed description of the event categories available for selection: →  161

Event category 441 (Curr.output 1 to n)



Navigation	 Expert → Communication → Diag. config. → Event category 441 (0210)
Description	Use this function to select a category for the diagnostic message 441 Curr.output 1 to n .
Selection	■ Failure (F) ■ Funct. check (C) ■ Out of spec. (S) ■ Mainten. req.(M) ■ No effect (N)
Factory setting	Out of spec. (S)

Additional information  For a detailed description of the event categories available for selection: →  161

Event category 442 (Freq. output 1 to n)



Navigation  Expert → Communication → Diag. config. → Event category 442 (0230)

Prerequisite The pulse/frequency/switch output is available.

Description Use this function to select a category for the diagnostic message **442 Freq. output 1 to n**.

Selection

- Failure (F)
- Funct. check (C)
- Out of spec. (S)
- Mainten. req.(M)
- No effect (N)

Factory setting Out of spec. (S)

Additional information  For a detailed description of the event categories available for selection: →  161

Event category 443 (Pulse output 1 to n)



Navigation  Expert → Communication → Diag. config. → Event category 443 (0231)

Prerequisite The pulse/frequency/switch output is available.

Description Use this function to select a category for the diagnostic message **443 Pulse output 1 to n**.

Selection

- Failure (F)
- Funct. check (C)
- Out of spec. (S)
- Mainten. req.(M)
- No effect (N)

Factory setting Out of spec. (S)

Additional information  For a detailed description of the event categories available for selection: →  161

Event category 531 (Empty pipe det.)



Navigation   Expert → Communication → Diag. config. → Event category 531 (0262)

Description Use this option to select a category for the diagnostic message **531 Empty pipe det..**

Selection	■ Failure (F) ■ Funct. check (C) ■ Out of spec. (S) ■ Mainten. req.(M) ■ No effect (N)
Factory setting	Out of spec. (S)
Additional information	 For a detailed description of the event categories available for selection: →  161

Event category 832 (Electronic temp.)

Navigation	 Expert → Communication → Diag. config. → Event category 832 (0218)
Description	Use this function to select a category for the diagnostic message 832 Electronic temp..
Selection	■ Failure (F) ■ Funct. check (C) ■ Out of spec. (S) ■ Mainten. req.(M) ■ No effect (N)
Factory setting	Out of spec. (S)
Additional information	<i>Selection</i>  For a detailed description of the event categories available for selection: →  161

Event category 833 (Electronic temp.)

Navigation	 Expert → Communication → Diag. config. → Event category 833 (0225)
Description	Use this option to select a category for the diagnostic message 833 Electronic temp..
Selection	■ Failure (F) ■ Funct. check (C) ■ Out of spec. (S) ■ Mainten. req.(M) ■ No effect (N)
Factory setting	Out of spec. (S)
Additional information	<i>Selection</i>  For a detailed description of the event categories available for selection: →  161

Event category 834 (Process temp.)



Navigation	Expert → Communication → Diag. config. → Event category 834 (0227)
Description	Use this option to select a category for the diagnostic message 834 Process temp..
Selection	■ Failure (F) ■ Funct. check (C) ■ Out of spec. (S) ■ Mainten. req.(M) ■ No effect (N)
Factory setting	Out of spec. (S)
Additional information	<i>Selection</i> For a detailed description of the event categories available for selection: → 161

Event category 835 (Process temp.)



Navigation	Expert → Communication → Diag. config. → Event category 835 (0229)
Description	Use this option to select a category for the diagnostic message 835 Process temp..
Selection	■ Failure (F) ■ Funct. check (C) ■ Out of spec. (S) ■ Mainten. req.(M) ■ No effect (N)
Factory setting	Out of spec. (S)
Additional information	<i>Selection</i> For a detailed description of the event categories available for selection: → 161

Event category 862 (Pipe empty)



Navigation	Expert → Communication → Diag. config. → Event category 862 (0214)
Description	Use this option to select a category for the diagnostic message 862 Pipe empty.
Selection	■ Failure (F) ■ Funct. check (C) ■ Out of spec. (S) ■ Mainten. req.(M) ■ No effect (N)
Factory setting	Out of spec. (S)

Additional information

 For a detailed description of the event categories available for selection: →  161

Event category 937 (EMC interference)

Navigation	 Expert → Communication → Diag. config. → Event category 937 (0260)
Description	Use this option to select a category for the diagnostic message 937 EMC interference .
Selection	■ Failure (F) ■ Funct. check (C) ■ Out of spec. (S) ■ Mainten. req.(M) ■ No effect (N)
Factory setting	Out of spec. (S)
Additional information	 For a detailed description of the event categories available for selection: →  161

3.7 "Application" submenu

Navigation  Expert → Application

▶ Application

Reset all tot. (2806)

→  166

▶ Totalizer 1 to n

→  167

Reset all tot.

Navigation	 Expert → Application → Reset all tot. (2806)
Description	Use this function to reset all totalizers to the value 0 and restart the totaling process. This deletes all the flow values previously totaled.
Selection	■ Cancel ■ Reset + totalize
Factory setting	Cancel

Additional information*Selection*

Options	Description
Cancel	No action is executed and the user exits the parameter.
Reset + totalize	Resets all totalizers to 0 and restarts the totaling process. This deletes all the flow values previously totalized.

3.7.1 "Totalizer 1 to n" submenu*Navigation*
 Expert → Application → Totalizer 1 to n

► Totalizer 1 to n		
Assign variable (0914-1 to n)	→	 167
Unit totalizer 1 to n (0915-1 to n)	→	 168
Operation mode (0908-1 to n)	→	 169
Control Tot. 1 to n (0912-1 to n)	→	 169
Preset value 1 to n (0913-1 to n)	→	 170
Failure mode (0901-1 to n)	→	 170

Assign variable**Navigation**
 Expert → Application → Totalizer 1 to n → Assign variable (0914-1 to n)
Description

Use this function to select a process variable for the Totalizer 1 to n.

Selection

- Off
- Volume flow
- Mass flow
- Correct.vol.flow

Factory setting

Volume flow

Additional information*Description*

If the option selected is changed, the device resets the totalizer to 0.

Selection

If the **Off** option is selected, only **Assign variable** parameter (→  167) is still displayed in the **Totalizer 1 to n** submenu. All other parameters in the submenu are hidden.

Additional information*Description*

The unit is selected separately for each totalizer. It is independent of the selection made in the **System units** submenu (→ 55).

Selection

The selection is dependent on the process variable selected in the **Assign variable** parameter (→ 167).

Operation mode**Navigation**

Expert → Application → Totalizer 1 to n → Operation mode (0908–1 to n)

Prerequisite

A process variable is selected in the **Assign variable** parameter (→ 167) of the **Totalizer 1 to n** submenu.

Description

Use this function to select how the totalizer summates the flow.

Selection

- Net flow total
- Forward total
- Reverse total

Factory setting

Net flow total

Additional information*Selection*

- Net flow total
Flow values in the forward and reverse flow direction are totalized and balanced against one another. Net flow is registered in the flow direction.
- Forward total
Only the flow in the forward flow direction is totalized.
- Reverse total
Only the flow in the reverse flow direction is totalized (= reverse flow quantity).

Control Tot. 1 to n**Navigation**

Expert → Application → Totalizer 1 to n → Control Tot. 1 to n (0912–1 to n)

Prerequisite

A process variable is selected in the **Assign variable** parameter (→ 167) of the **Totalizer 1 to n** submenu.

Description

Use this function to select the control of totalizer value 1-3.

Selection

- Totalize
- Reset + hold
- Preset + hold
- Reset + totalize
- Preset+totalize
- Hold

Factory setting

Totalize

Additional information *Selection*

Options	Description
Totalize	The totalizer is started or continues running.
Reset + hold	The totaling process is stopped and the totalizer is reset to 0.
Preset + hold	The totaling process is stopped and the totalizer is set to its defined start value from the Preset value parameter.
Reset + totalize	The totalizer is reset to 0 and the totaling process is restarted.
Preset+totalize	The totalizer is set to the defined start value from the Preset value parameter and the totaling process is restarted.
Hold	Totalizing is stopped.

Preset value 1 to n**Navigation**  Expert → Application → Totalizer 1 to n → Preset value 1 to n (0913–1 to n)**Prerequisite** A process variable is selected in the **Assign variable** parameter (→  167) of the **Totalizer 1 to n** submenu.**Description** Use this function to enter a start value for the Totalizer 1 to n.**User entry** Signed floating-point number**Factory setting** 0 1**Additional information** *User entry*
 The unit of the selected process variable is specified for the totalizer in the **Unit totalizer** parameter (→  168).
Example

This configuration is suitable for applications such as iterative filling processes with a fixed batch quantity.

Failure mode**Navigation**  Expert → Application → Totalizer 1 to n → Failure mode (0901–1 to n)**Prerequisite** A process variable is selected in the **Assign variable** parameter (→  167) of the **Totalizer 1 to n** submenu.**Description** Use this function to select how a totalizer behaves in the event of a device alarm.**Selection**

- Stop
- Actual value
- Last valid value

Factory setting Stop

Additional information

Description

 This setting does not affect the failsafe mode of other totalizers and the outputs. This is specified in separate parameters.

Selection

- Stop
The totalizer is stopped in the event of a device alarm.
- Actual value
The totalizer continues to count based on the actual measured value; the device alarm is ignored.
- Last valid value
The totalizer continues to count based on the last valid measured value before the device alarm occurred.

3.7.2 "Custody transfer" submenu

 Only available for Promag H.

 For detailed information on the parameter descriptions for custody transfer measurement, see the Special Documentation for the device →  7

Navigation   Expert → Application → Custody transfer

► Custody transfer

3.8 "Diagnostics" submenu

Navigation   Expert → Diagnostics

► Diagnostics

Actual diagnos. (0691)

Prev.diagnostics (0690)

Time fr. restart (0653)

Operating time (0652)

► Diagnostic list

► Event logbook

► Device info

► Main elec.+I/O1

→  172

→  173

→  174

→  174

→  174

→  178

→  181

→  184

► Sens. electronic	→ 185
► I/O module 2	→ 188
► I/O module 3	→ 189
► Display module	→ 190
► Min/max val.	→ 199
► Data logging	→ 191
► Heartbeat	→ 210
► Simulation	→ 210

Actual diagnos.

Navigation	Expert → Diagnostics → Actual diagnos. (0691)
Prerequisite	A diagnostic event has occurred.
Description	Displays the current diagnostic message. If two or more messages occur simultaneously, the message with the highest priority is shown on the display.
User interface	Symbol for diagnostic behavior, diagnostic code and short message.
Additional information	<i>Display</i> Additional pending diagnostic messages can be viewed in the Diagnostic list submenu (→ 174). Via the local display: the time stamp and corrective measures referring to the cause of the diagnostic message can be accessed via the key. <i>Example</i> For the display format: ⊗F271 Main electronics

Timestamp

Navigation	Expert → Diagnostics → Timestamp
Description	Displays the operating time when the current diagnostic message occurred.
User interface	Days (d), hours (h), minutes (m) and seconds (s)

Additional information*Display*

The diagnostic message can be viewed via the **Actual diagnos.** parameter (→ 172).

Example

For the display format:
24d12h13m00s

Prev.diagnostics

Navigation

Expert → Diagnostics → Prev.diagnostics (0690)

Prerequisite

Two diagnostic events have already occurred.

Description

Displays the diagnostic message that occurred before the current message.

User interface

Symbol for diagnostic behavior, diagnostic code and short message.

Additional information*Display*

Via the local display: the time stamp and corrective measures referring to the cause of the diagnostic message can be accessed via the key.

Example

For the display format:
⊗F271 Main electronics

Timestamp

Navigation

Expert → Diagnostics → Timestamp

Description

Displays the operating time when the last diagnostic message before the current message occurred.

User interface

Days (d), hours (h), minutes (m) and seconds (s)

Additional information*Display*

The diagnostic message can be viewed via the **Prev.diagnostics** parameter (→ 173).

Example

For the display format:
24d12h13m00s

Time fr. restart

Navigation	  Expert → Diagnostics → Time fr. restart (0653)
Description	Use this function to display the time the device has been in operation since the last device restart.
User interface	Days (d), hours (h), minutes (m) and seconds (s)

Operating time

Navigation	  Expert → Diagnostics → Operating time (0652)
Description	Use this function to display the length of time the device has been in operation.
User interface	Days (d), hours (h), minutes (m) and seconds (s)
Additional information	<i>User interface</i> The maximum number of days is 9999, which is equivalent to 27 years.

3.8.1 "Diagnostic list" submenu

Navigation   Expert → Diagnostics → Diagnostic list

► Diagnostic list		
Diagnostics 1 (0692)	→	 174
Diagnostics 2 (0693)	→	 175
Diagnostics 3 (0694)	→	 176
Diagnostics 4 (0695)	→	 177
Diagnostics 5 (0696)	→	 178

Diagnostics 1

Navigation	  Expert → Diagnostics → Diagnostic list → Diagnostics 1 (0692)
Description	Displays the current diagnostics message with the highest priority.

User interface	Symbol for diagnostic behavior, diagnostic code and short message.
Additional information	<i>Display</i>  Via the local display: the time stamp and corrective measures referring to the cause of the diagnostic message can be accessed via the  key. <i>Examples</i> For the display format: ■  F271 Main electronics ■  F276 I/O module

Timestamp

Navigation	 Expert → Diagnostics → Diagnostic list → Timestamp
Description	Displays the operating time when the diagnostic message with the highest priority occurred.
User interface	Days (d), hours (h), minutes (m) and seconds (s)
Additional information	<i>Display</i>  The diagnostic message can be viewed via the Diagnostics 1 parameter (→  174). <i>Example</i> For the display format: 24d12h13m00s

Diagnostics 2

Navigation	 Expert → Diagnostics → Diagnostic list → Diagnostics 2 (0693)
Description	Displays the current diagnostics message with the second-highest priority.
User interface	Symbol for diagnostic behavior, diagnostic code and short message.
Additional information	<i>Display</i>  Via the local display: the time stamp and corrective measures referring to the cause of the diagnostic message can be accessed via the  key. <i>Examples</i> For the display format: ■  F271 Main electronics ■  F276 I/O module

Timestamp	
Navigation	 Expert → Diagnostics → Diagnostic list → Timestamp
Description	Displays the operating time when the diagnostic message with the second-highest priority occurred.
User interface	Days (d), hours (h), minutes (m) and seconds (s)
Additional information	<i>Display</i>  The diagnostic message can be viewed via the Diagnostics 2 parameter (→  175). <i>Example</i> For the display format: 24d12h13m00s

Diagnostics 3	
Navigation	  Expert → Diagnostics → Diagnostic list → Diagnostics 3 (0694)
Description	Displays the current diagnostics message with the third-highest priority.
User interface	Symbol for diagnostic behavior, diagnostic code and short message.
Additional information	<i>Display</i>  Via the local display: the time stamp and corrective measures referring to the cause of the diagnostic message can be accessed via the  key. <i>Examples</i> For the display format: ■  F271 Main electronics ■  F276 I/O module

Timestamp	
Navigation	 Expert → Diagnostics → Diagnostic list → Timestamp
Description	Displays the operating time when the diagnostic message with the third-highest priority occurred.
User interface	Days (d), hours (h), minutes (m) and seconds (s)

Additional information*Display*

The diagnostic message can be viewed via the **Diagnostics 3** parameter (→  176).

Example

For the display format:

24d12h13m00s

Diagnostics 4

Navigation

Expert → Diagnostics → Diagnostic list → Diagnostics 4 (0695)

Description

Displays the current diagnostics message with the fourth-highest priority.

User interface

Symbol for diagnostic behavior, diagnostic code and short message.

Additional information*Display*

Via the local display: the time stamp and corrective measures referring to the cause of the diagnostic message can be accessed via the  key.

Examples

For the display format:

-  F271 Main electronics
-  F276 I/O module

Timestamp

Navigation

Expert → Diagnostics → Diagnostic list → Timestamp

Description

Displays the operating time when the diagnostic message with the fourth-highest priority occurred.

User interface

Days (d), hours (h), minutes (m) and seconds (s)

Additional information*Display*

The diagnostic message can be viewed via the **Diagnostics 4** parameter (→  177).

Example

For the display format:

24d12h13m00s

Diagnostics 5

Navigation	Expert → Diagnostics → Diagnostic list → Diagnostics 5 (0696)
Description	Displays the current diagnostics message with the fifth-highest priority.
User interface	Symbol for diagnostic behavior, diagnostic code and short message.
Additional information	Display Via the local display: the time stamp and corrective measures referring to the cause of the diagnostic message can be accessed via the key. Examples For the display format: ■ F271 Main electronics ■ F276 I/O module

Timestamp

Navigation	Expert → Diagnostics → Diagnostic list → Timestamp
Description	Displays the operating time when the diagnostic message with the fifth-highest priority occurred.
User interface	Days (d), hours (h), minutes (m) and seconds (s)
Additional information	Display The diagnostic message can be viewed via the Diagnostics 5 parameter (→ 178). Example For the display format: 24d12h13m00s

3.8.2 "Event logbook" submenu

Navigation Expert → Diagnostics → Event logbook

► Event logbook

Filter options (0705)

→ 179

► Event list

→ 180

Filter options

**Navigation** Expert → Diagnostics → Event logbook → Filter options (0705)**Description**

Use this function to select the category whose event messages are displayed in the event list of the local display.

Selection

- All
- Failure (F)
- Funct. check (C)
- Out of spec. (S)
- Mainten. req.(M)
- Information (I)

Factory setting

All

Additional information*Description*

The status signals are categorized in accordance with VDI/VDE 2650 and NAMUR Recommendation NE 107:

- F = Failure
- C = Function Check
- S = Out of Specification
- M = Maintenance Required

Filter options

**Navigation** Expert → Diagnostics → Event logbook → Filter options**Description**

Use this function to select the category whose event messages are displayed in the event list of the operating tool.

Selection

- All
- Failure (F)
- Funct. check (C)
- Out of spec. (S)
- Mainten. req.(M)
- Information (I)

Factory setting

All

Additional information*Description*

The status signals are categorized in accordance with VDI/VDE 2650 and NAMUR Recommendation NE 107:

- F = Failure
- C = Function Check
- S = Out of Specification
- M = Maintenance Required

"Event list" submenu

 The **Event list** submenu is only displayed if operating via the local display.

If operating via the FieldCare operating tool, the event list can be read out with a separate FieldCare module.

If operating via the Web browser, the event messages can be found directly in the **Event logbook** submenu.

Navigation  Expert → Diagnostics → Event logbook → Event list



Event list

Navigation	 Expert → Diagnostics → Event logbook → Event list
Description	Displays the history of event messages of the category selected in the Filter options parameter (→  179).
User interface	■ For a "Category I" event message Information event, short message, symbol for event recording and operating time when error occurred ■ For a "Category F, C, S, M" event message (status signal) Diagnostics code, short message, symbol for event recording and operating time when error occurred
Additional information	<i>Description</i> A maximum of 20 event messages are displayed in chronological order. If the Extended HistoROM application package (order option) is enabled in the device, the event list can contain up to 100 entries . The following symbols indicate whether an event has occurred or has ended: ■ : Occurrence of the event ■ : End of the event <i>Examples</i> For the display format: ■ I1091 Configuration modified  24d12h13m00s ■  F271 Main electronics  01d04h12min30s <i>HistoROM</i> A HistoROM is a "non-volatile" device memory in the form of an EEPROM.

3.8.3 "Device info" submenu

Navigation  Expert → Diagnostics → Device info

► Device info		
Device tag (0011)	→ 	181
Serial number (0009)	→ 	182
Firmware version (0010)	→ 	182
Device name (0020)	→ 	182
Order code (0008)	→ 	182
Ext. order cd. 1 (0023)	→ 	183
Ext. order cd. 2 (0021)	→ 	183
Ext. order cd. 3 (0022)	→ 	183
Config. counter (2751)	→ 	184
ENP version (0012)	→ 	184

Device tag


Navigation  Expert → Diagnostics → Device info → Device tag (0011)

Description Displays a unique name for the measuring point so it can be identified quickly within the plant. The name is displayed in the header.

User interface Max. 32 characters such as lower-case letters or numbers.

Factory setting Promag

Additional information *User interface*

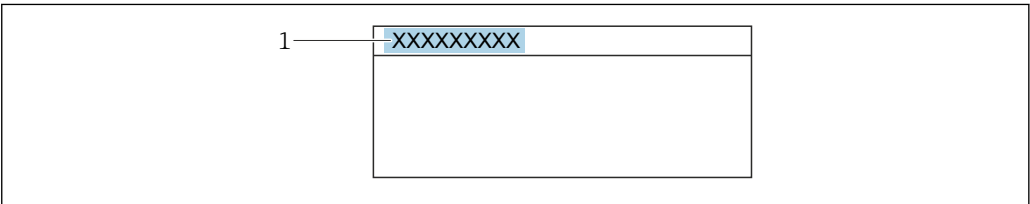

A0029422

1 Position of the header text on the display

The number of characters displayed depends on the characters used.

Serial number	
Navigation	 Expert → Diagnostics → Device info → Serial number (0009)
Description	Displays the serial number of the measuring device.  The number can be found on the nameplate of the sensor and transmitter.
User interface	Max. 11-digit character string comprising letters and numbers.
Additional information	<i>Description</i>  Uses of the serial number ▪ To identify the measuring device quickly, e.g. when contacting Endress+Hauser. ▪ To obtain specific information on the measuring device using the Device Viewer: www.endress.com/deviceviewer
Firmware version	
Navigation	 Expert → Diagnostics → Device info → Firmware version (0010)
Description	Displays the device firmware version installed.
User interface	Character string in the format xx.yy.zz
Additional information	<i>Display</i>  The Firmware version is also located: ▪ On the title page of the Operating instructions ▪ On the transmitter nameplate
Device name	
Navigation	 Expert → Diagnostics → Device info → Device name (0020)
Description	Displays the name of the transmitter. It can also be found on the nameplate of the transmitter.
User interface	Promag 300/500
Order code	
Navigation	 Expert → Diagnostics → Device info → Order code (0008)
Description	Displays the device order code.
User interface	Character string composed of letters, numbers and certain punctuation marks (e.g. /).

Additional information*Description*

The order code can be found on the nameplate of the sensor and transmitter in the "Order code" field.

The order code is generated from the extended order code through a process of reversible transformation. The extended order code indicates the attributes for all the device features in the product structure. The device features are not directly readable from the order code.

**Uses of the order code**

- To order an identical spare device.
- To identify the device quickly and easily, e.g. when contacting Endress+Hauser.

Ext. order cd. 1**Navigation**

Expert → Diagnostics → Device info → Ext. order cd. 1 (0023)

Description

Displays the first part of the extended order code.

On account of length restrictions, the extended order code is split into a maximum of 3 parameters.

User interface

Character string

Additional information*Description*

The extended order code indicates the version of all the features of the product structure for the measuring device and thus uniquely identifies the measuring device.



The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.

Ext. order cd. 2**Navigation**

Expert → Diagnostics → Device info → Ext. order cd. 2 (0021)

Description

Displays the second part of the extended order code.

User interface

Character string

Additional information

For additional information, see **Ext. order cd. 1** parameter (→ 183)

Ext. order cd. 3**Navigation**

Expert → Diagnostics → Device info → Ext. order cd. 3 (0022)

Description

Displays the third part of the extended order code.

User interface

Character string

Additional information

For additional information, see **Ext. order cd. 1** parameter (→ 183)

Config. counter

- Navigation

Expert → Diagnostics → Device info → Config. counter (2751)
- Description

Displays the number of parameter modifications for the device. When the user changes a parameter setting, this counter is incremented.
- User interface

0 to 65 535

ENP version

- Navigation

Expert → Diagnostics → Device info → ENP version (0012)
- Description

Displays the version of the electronic nameplate.
- User interface

Character string
- Factory setting

2.02.00
- Additional information

Description

This electronic nameplate stores a data record for device identification that includes more data than the nameplates attached to the outside of the device.

3.8.4 "Main elec.+I/O1" submenu

Navigation

Expert → Diagnostics → Main elec.+I/O1

► Main elec.+I/O1

Software rev.

Build no. softw.

Bootloader rev.

→ 185

→ 185

→ 185

Software rev.

Navigation	 Expert → Diagnostics → Main elec.+I/O1 → Software rev. (0072)
Description	Use this function to display the software revision of the module.
User interface	Positive integer

Build no. softw.

Navigation	 Expert → Diagnostics → Main elec.+I/O1 → Build no. softw. (0079)
Description	Use this function to display the software build number of the module.
User interface	Positive integer

Bootloader rev.

Navigation	 Expert → Diagnostics → Main elec.+I/O1 → Bootloader rev. (0073)
Description	Use this function to display the bootloader revision of the software.
User interface	Positive integer

3.8.5 "Sens. electronic" submenu

Navigation  Expert → Diagnostics → Sens. electronic

► Sens. electronic

Software rev. (0072)

Build no. softw. (0079)

Bootloader rev. (0073)

→  186

→  186

→  186

Software rev.

Navigation	  Expert → Diagnostics → Sens. electronic → Software rev. (0072)
Description	Use this function to display the software revision of the module.
User interface	Positive integer

Build no. softw.

Navigation	  Expert → Diagnostics → Sens. electronic → Build no. softw. (0079)
Description	Use this function to display the software build number of the module.
User interface	Positive integer

Bootloader rev.

Navigation	  Expert → Diagnostics → Sens. electronic → Bootloader rev. (0073)
Description	Use this function to display the bootloader revision of the software.
User interface	Positive integer

3.8.6 "I/O module 1" submenu

Navigation   Expert → Diagnostics → I/O module 1

► I/O module 1

I/O 1 terminals (3902–1)

→  187

Software rev. (0072)

→  187

Build no. softw. (0079)

→  187

Bootloader rev. (0073)

→  187

I/O 1 terminals

Navigation	 Expert → Diagnostics → I/O module 1 → I/O 1 terminals (3902-1)
Description	Displays the terminal numbers used by the I/O module.
User interface	■ Not used ■ 26-27 (I/O 1) ■ 24-25 (I/O 2) ■ 22-23 (I/O 3)

Software rev.

Navigation	 Expert → Diagnostics → I/O module → Software rev. (0072)
Description	Use this function to display the software revision of the module.
User interface	Positive integer

Build no. softw.

Navigation	 Expert → Diagnostics → I/O module → Build no. softw. (0079)
Description	Use this function to display the software build number of the module.
User interface	Positive integer

Bootloader rev.

Navigation	 Expert → Diagnostics → I/O module → Bootloader rev. (0073)
Description	Use this function to display the bootloader revision of the software.
User interface	Positive integer

3.8.7 "I/O module 2" submenu

Navigation  Expert → Diagnostics → I/O module 2

► I/O module 2		
I/O 2 terminals (3902-2)	→ 	188
Software rev. (0072)	→ 	188
Build no. softw. (0079)	→ 	188
Bootloader rev. (0073)	→ 	189

I/O 2 terminals

Navigation	 Expert → Diagnostics → I/O module 2 → I/O 2 terminals (3902-2)
Description	Displays the terminal numbers used by the I/O module.
User interface	■ Not used ■ 26-27 (I/O 1) ■ 24-25 (I/O 2) ■ 22-23 (I/O 3)

Software rev.

Navigation	 Expert → Diagnostics → I/O module → Software rev. (0072)
Description	Use this function to display the software revision of the module.
User interface	Positive integer

Build no. softw.

Navigation	 Expert → Diagnostics → I/O module → Build no. softw. (0079)
Description	Use this function to display the software build number of the module.
User interface	Positive integer

Bootloader rev.

Navigation	 Expert → Diagnostics → I/O module → Bootloader rev. (0073)
Description	Use this function to display the bootloader revision of the software.
User interface	Positive integer

3.8.8 "I/O module 3" submenu

Navigation  Expert → Diagnostics → I/O module 3

► I/O module 3		
I/O 3 terminals (3902-3)	→ 	189
Software rev. (0072)	→ 	189
Build no. softw. (0079)	→ 	190
Bootloader rev. (0073)	→ 	190

I/O 3 terminals

Navigation	 Expert → Diagnostics → I/O module 3 → I/O 3 terminals (3902-3)
Description	Displays the terminal numbers used by the I/O module.
User interface	■ Not used ■ 26-27 (I/O 1) ■ 24-25 (I/O 2) ■ 22-23 (I/O 3)

Software rev.

Navigation	 Expert → Diagnostics → I/O module → Software rev. (0072)
Description	Use this function to display the software revision of the module.
User interface	Positive integer

Build no. softw.

Navigation	 Expert → Diagnostics → I/O module → Build no. softw. (0079)
Description	Use this function to display the software build number of the module.
User interface	Positive integer

Bootloader rev.

Navigation	 Expert → Diagnostics → I/O module → Bootloader rev. (0073)
Description	Use this function to display the bootloader revision of the software.
User interface	Positive integer

3.8.9 "Display module" submenu

Navigation

 Expert → Diagnostics → Display module

► Display module

Software rev. (0072)

Build no. softw. (0079)

Bootloader rev. (0073)

→  190

→  191

→  191

Software rev.

Navigation	 Expert → Diagnostics → Display module → Software rev. (0072)
Description	Use this function to display the software revision of the module.
User interface	Positive integer

Build no. softw.

Navigation	 Expert → Diagnostics → Display module → Build no. softw. (0079)
Description	Use this function to display the software build number of the module.
User interface	Positive integer

Bootloader rev.

Navigation	 Expert → Diagnostics → Display module → Bootloader rev. (0073)
Description	Use this function to display the bootloader revision of the software.
User interface	Positive integer

3.8.10 "Data logging" submenu

Navigation  Expert → Diagnostics → Data logging

► Data logging		
Assign chan. 1 (0851)	→	 192
Assign chan. 2 (0852)	→	 193
Assign chan. 3 (0853)	→	 193
Assign chan. 4 (0854)	→	 193
Logging interval (0856)	→	 194
Clear logging (0855)	→	 194
Data logging (0860)	→	 195
Logging delay (0859)	→	 195
Data log.control (0857)	→	 196
Data log. status (0858)	→	 196
Logging duration (0861)	→	 197

► Displ.channel 1	→ 197
► Displ.channel 2	→ 198
► Displ.channel 3	→ 198
► Displ.channel 4	→ 199

Assign chan. 1



Navigation

Expert → Diagnostics → Data logging → Assign chan. 1 (0851)

Prerequisite

The **Extended HistoROM** application package is available.
 The software options currently enabled are displayed in the **SW option overv.** parameter (→ 44).

Description

Use this function to select a process variable for the data logging channel.

Selection

- Off
- Volume flow
- Mass flow
- Correct.vol.flow
- Flow velocity
- Conductivity^{*}
- CorrConductivity^{*}
- Temperature^{*}
- Electronic temp.^{*}
- Curr.output 1^{*}
- Curr.output 2^{*}
- Curr.output 3^{*}
- Curr.output 4^{*}
- Noise^{*}
- CoilCurrShotTime^{*}
- Ref Electr. Pot.^{*}
- Coating meas.val^{*}
- Test point 1
- Test point 2
- Test point 3

Factory setting

Off

Additional information

Description
A total of 1000 measured values can be logged. This means:
■ 1000 data points if 1 logging channel is used
■ 500 data points if 2 logging channels are used
■ 333 data points if 3 logging channels are used
■ 250 data points if 4 logging channels are used

* Visibility depends on order options or device settings

Once the maximum number of data points is reached, the oldest data points in the data log are cyclically overwritten in such a way that the last 1000, 500, 333 or 250 measured values are always in the log (ring memory principle).



The log contents are cleared if the option selected is changed.

Assign chan. 2



Navigation	Expert → Diagnostics → Data logging → Assign chan. 2 (0852)
Prerequisite	The Extended HistoROM application package is available. The software options currently enabled are displayed in the SW option overv. parameter (→ 44).
Description	Options for the assignment of a process variable to the data logging channel.
Selection	Picklist, see Assign channel 1 parameter (→ 192)
Factory setting	Off

Assign chan. 3



Navigation	Expert → Diagnostics → Data logging → Assign chan. 3 (0853)
Prerequisite	The Extended HistoROM application package is available. The software options currently enabled are displayed in the SW option overv. parameter (→ 44).
Description	Options for the assignment of a process variable to the data logging channel.
Selection	Picklist, see Assign channel 1 parameter (→ 192)
Factory setting	Off

Assign chan. 4



Navigation	Expert → Diagnostics → Data logging → Assign chan. 4 (0854)
Prerequisite	The Extended HistoROM application package is available. The software options currently enabled are displayed in the SW option overv. parameter (→ 44).
Description	Options for the assignment of a process variable to the data logging channel.
Selection	Picklist, see Assign channel 1 parameter (→ 192)

Factory setting Off

Logging interval

Navigation   Expert → Diagnostics → Data logging → Logging interval (0856)

Prerequisite The **Extended HistoROM** application package is available.

 The software options currently enabled are displayed in the **SW option overv.** parameter (→  44).

Description Use this function to enter the logging interval $T_{\log}$ for data logging.

User entry 0.1 to 3 600.0 s

Factory setting 1.0 s

Additional information *Description*

This defines the interval between the individual data points in the data log, and thus the maximum loggable process time $T_{\log}$:

- If 1 logging channel is used: $T_{\log} = 1000 \times t_{\log}$
- If 2 logging channels are used: $T_{\log} = 500 \times t_{\log}$
- If 3 logging channels are used: $T_{\log} = 333 \times t_{\log}$
- If 4 logging channels are used: $T_{\log} = 250 \times t_{\log}$

Once this time elapses, the oldest data points in the data log are cyclically overwritten such that a time of $T_{\log}$ always remains in the memory (ring memory principle).

 The log contents are cleared if the length of the logging interval is changed.

Example

If 1 logging channel is used:

- $T_{\log} = 1000 \times 1 \text{ s} = 1\,000 \text{ s} \approx 15 \text{ min}$
- $T_{\log} = 1000 \times 10 \text{ s} = 10\,000 \text{ s} \approx 3 \text{ h}$
- $T_{\log} = 1000 \times 80 \text{ s} = 80\,000 \text{ s} \approx 1 \text{ d}$
- $T_{\log} = 1000 \times 3\,600 \text{ s} = 3\,600\,000 \text{ s} \approx 41 \text{ d}$

Clear logging

Navigation   Expert → Diagnostics → Data logging → Clear logging (0855)

Prerequisite The **Extended HistoROM** application package is available.

 The software options currently enabled are displayed in the **SW option overv.** parameter (→  44).

Description Use this function to clear the entire logging data.

Selection

- Cancel
- Clear data

Factory setting	Cancel
Additional information	<i>Selection</i> ■ Cancel The data is not cleared. All the data is retained. ■ Clear data The logging data is cleared. The logging process starts from the beginning.

Data logging



Navigation	Expert → Diagnostics → Data logging → Data logging (0860)
Description	Use this function to select the data logging method.
Selection	■ Overwriting ■ Not overwriting
Factory setting	Overwriting
Additional information	<i>Selection</i> ■ Overwriting The device memory applies the FIFO principle. ■ Not overwriting Data logging is canceled if the measured value memory is full (single shot).

Logging delay



Navigation	Expert → Diagnostics → Data logging → Logging delay (0859)
Prerequisite	In the Data logging parameter (→ 195), the Not overwriting option is selected.
Description	Use this function to enter the time delay for measured value logging.
User entry	0 to 999 h
Factory setting	0 h
Additional information	<i>Description</i> Once measured value logging has been started with the Data log.control parameter (→ 196), the device does not save any data for the duration of the time delay entered.

Data log.control 	
Navigation	  Expert → Diagnostics → Data logging → Data log.control (0857)
Prerequisite	In the Data logging parameter (→  195), the Not overwriting option is selected.
Description	Use this function to start and stop measured value logging.
Selection	■ None ■ Delete + start ■ Stop
Factory setting	None
Additional information	<i>Selection</i> ■ None Initial measured value logging status. ■ Delete + start All the measured values recorded for all the channels are deleted and measured value logging starts again. ■ Stop Measured value logging is stopped.
Data log. status	
Navigation	  Expert → Diagnostics → Data logging → Data log. status (0858)
Prerequisite	In the Data logging parameter (→  195), the Not overwriting option is selected.
Description	Displays the measured value logging status.
User interface	■ Done ■ Delay active ■ Active ■ Stopped
Factory setting	Done
Additional information	<i>Selection</i> ■ Done Measured value logging has been performed and completed successfully. ■ Delay active Measured value logging has been started but the logging interval has not yet elapsed. ■ Active The logging interval has elapsed and measured value logging is active. ■ Stopped Measured value logging is stopped.

Logging duration

Navigation	 Expert → Diagnostics → Data logging → Logging duration (0861)
Prerequisite	In the Data logging parameter (→  195), the Not overwriting option is selected.
Description	Displays the total logging duration.
User interface	Positive floating-point number
Factory setting	0 s

"Displ.channel 1" submenu


Navigation  Expert → Diagnostics → Data logging → Displ.channel 1

► Displ.channel 1

Display channel 1 →  197

Display channel 1

Navigation	 Expert → Diagnostics → Data logging → Displ.channel 1
Prerequisite	The Extended HistoROM application package is available.  The software options currently enabled are displayed in the SW option overv. parameter (→  44). In the Assign chan. 1 parameter (→  192), one of the following options is selected: ■ Conductivity[*] ■ CorrConductivity[*] ■ Temperature[*]
Description	Displays the measured value trend for the logging channel in the form of a chart.
Additional information	<i>Description</i>

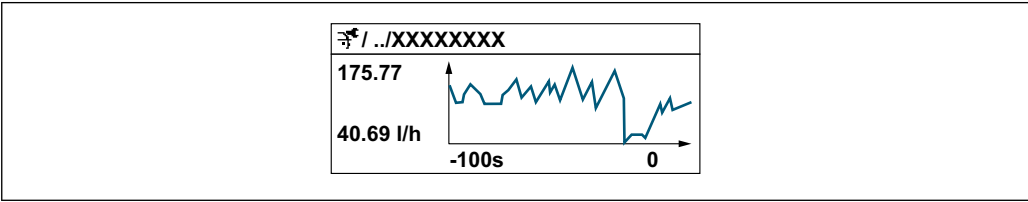

 10 Chart of a measured value trend

* Visibility depends on order options or device settings

- x-axis: depending on the number of channels selected displays 250 to 1000 measured values of a process variable.
- y-axis: displays the approximate measured value span and constantly adapts this to the ongoing measurement.

"Displ.channel 2" submenu

Navigation  Expert → Diagnostics → Data logging → Displ.channel 2

► Displ.channel 2

Display channel 2 →  198

Display channel 2

Navigation	 Expert → Diagnostics → Data logging → Displ.channel 2
Prerequisite	A process variable is defined in the Assign chan. 2 parameter.
Description	See the Display channel 1 parameter →  197

"Displ.channel 3" submenu

Navigation  Expert → Diagnostics → Data logging → Displ.channel 3

► Displ.channel 3

Display channel 3 →  198

Display channel 3

Navigation	 Expert → Diagnostics → Data logging → Displ.channel 3
Prerequisite	A process variable is defined in the Assign chan. 3 parameter.
Description	See the Display channel 1 parameter →  197

"Displ.channel 4" submenu

Navigation  Expert → Diagnostics → Data logging → Displ.channel 4

► Displ.channel 4

Display channel 4 →  199

Display channel 4

Navigation	 Expert → Diagnostics → Data logging → Displ.channel 4
Prerequisite	A process variable is defined in the Assign chan. 4 parameter.
Description	See the Display channel 1 parameter →  197

3.8.11 "Min/max val." submenu

Navigation   Expert → Diagnostics → Min/max val.

► Min/max val.

Reset min/max (6541) →  199

► Main elect.temp. →  200

► Temperature →  201

Reset min/max

Navigation	  Expert → Diagnostics → Min/max val. → Reset min/max (6541)
Description	Use this function to select measured variables whose minimum, maximum and average measured values are to be reset.
Selection	■ Cancel ■ Terminal volt. ■ IO module temp.
Factory setting	Cancel

"Main elect.temp." submenu

Navigation  Expert → Diagnostics → Min/max val. → Main elect.temp.

► Main elect.temp.

Minimum value (6547)

→  200

Maximum value (6545)

→  200

Minimum value

Navigation	 Expert → Diagnostics → Min/max val. → Main elect.temp. → Minimum value (6547)
Description	Displays the lowest previously measured temperature value of the main electronics module.
User interface	Signed floating-point number
Additional information	<i>Dependency</i>  The unit is taken from the Temperature unit parameter (→  58)

Maximum value

Navigation	 Expert → Diagnostics → Min/max val. → Main elect.temp. → Maximum value (6545)
Description	Displays the highest previously measured temperature value of the main electronics module.
User interface	Signed floating-point number
Additional information	<i>Dependency</i>  The unit is taken from the Temperature unit parameter (→  58)

"Temperature" submenu

Navigation  Expert → Diagnostics → Min/max val. → Temperature

► Temperature

Minimum value (6681)

→  201

Maximum value (6680)

→  201

Minimum value

Navigation	 Expert → Diagnostics → Min/max val. → Temperature → Minimum value (6681)
Prerequisite	One of the following conditions is met: ■ Order code for "Sensor option", option CI "Medium temperature measurement" or ■ The temperature is read into the flowmeter from an external device.
Description	Displays the lowest previously measured medium temperature value.
User interface	Signed floating-point number
Additional information	<i>Dependency</i>  The unit is taken from the Temperature unit parameter (→  58)

Maximum value

Navigation	 Expert → Diagnostics → Min/max val. → Temperature → Maximum value (6680)
Prerequisite	One of the following conditions is met: ■ Order code for "Sensor option", option CI "Medium temperature measurement" or ■ The temperature is read into the flowmeter from an external device.
Description	Displays the highest previously measured medium temperature value.
User interface	Signed floating-point number
Additional information	<i>Dependency</i>  The unit is taken from the Temperature unit parameter (→  58)

3.8.12 "Data logging" submenu

Navigation Expert → Diagnostics → Data logging

► Data logging		
Assign chan. 1 (0851)	→	192
Assign chan. 2 (0852)	→	193
Assign chan. 3 (0853)	→	193
Assign chan. 4 (0854)	→	193
Logging interval (0856)	→	194
Clear logging (0855)	→	194
Data logging (0860)	→	195
Logging delay (0859)	→	195
Data log.control (0857)	→	196
Data log. status (0858)	→	196
Logging duration (0861)	→	197
► Displ.channel 1	→	197
► Displ.channel 2	→	198
► Displ.channel 3	→	198
► Displ.channel 4	→	199

Assign chan. 1



Navigation Expert → Diagnostics → Data logging → Assign chan. 1 (0851)

Prerequisite The **Extended HistoROM** application package is available.
 The software options currently enabled are displayed in the **SW option overv.** parameter (→ 44).

Description Use this function to select a process variable for the data logging channel.

Selection

- Off
- Volume flow
- Mass flow
- Correct.vol.flow
- Flow velocity
- Conductivity *
- CorrConductivity *
- Temperature *
- Electronic temp.
- Curr.output 1 *
- Curr.output 2 *
- Curr.output 3 *
- Curr.output 4 *
- Noise *
- CoilCurrShotTime *
- Ref Electr. Pot. *
- Coating meas.val *
- Test point 1
- Test point 2
- Test point 3

Factory setting

Off

Additional information*Description*

A total of 1000 measured values can be logged. This means:

- 1000 data points if 1 logging channel is used
- 500 data points if 2 logging channels are used
- 333 data points if 3 logging channels are used
- 250 data points if 4 logging channels are used

Once the maximum number of data points is reached, the oldest data points in the data log are cyclically overwritten in such a way that the last 1000, 500, 333 or 250 measured values are always in the log (ring memory principle).

 The log contents are cleared if the option selected is changed.

Assign chan. 2**Navigation**

  Expert → Diagnostics → Data logging → Assign chan. 2 (0852)

Prerequisite

The **Extended HistoROM** application package is available.

 The software options currently enabled are displayed in the **SW option overv.** parameter (→  44).

Description

Options for the assignment of a process variable to the data logging channel.

Selection

Picklist, see **Assign channel 1** parameter (→  192)

Factory setting

Off

* Visibility depends on order options or device settings

Assign chan. 3		
Navigation	 Expert → Diagnostics → Data logging → Assign chan. 3 (0853)	
Prerequisite	The Extended HistoROM application package is available.  The software options currently enabled are displayed in the SW option overv. parameter (→  44).	
Description	Options for the assignment of a process variable to the data logging channel.	
Selection	Picklist, see Assign channel 1 parameter (→  192)	
Factory setting	Off	
Assign chan. 4		
Navigation	 Expert → Diagnostics → Data logging → Assign chan. 4 (0854)	
Prerequisite	The Extended HistoROM application package is available.  The software options currently enabled are displayed in the SW option overv. parameter (→  44).	
Description	Options for the assignment of a process variable to the data logging channel.	
Selection	Picklist, see Assign channel 1 parameter (→  192)	
Factory setting	Off	
Logging interval		
Navigation	 Expert → Diagnostics → Data logging → Logging interval (0856)	
Prerequisite	The Extended HistoROM application package is available.  The software options currently enabled are displayed in the SW option overv. parameter (→  44).	
Description	Use this function to enter the logging interval $T_{\log}$ for data logging.	
User entry	0.1 to 3 600.0 s	
Factory setting	1.0 s	

Additional information	<i>Description</i> This defines the interval between the individual data points in the data log, and thus the maximum loggable process time $T_{\log}$: ■ If 1 logging channel is used: $T_{\log} = 1000 \times t_{\log}$ ■ If 2 logging channels are used: $T_{\log} = 500 \times t_{\log}$ ■ If 3 logging channels are used: $T_{\log} = 333 \times t_{\log}$ ■ If 4 logging channels are used: $T_{\log} = 250 \times t_{\log}$ Once this time elapses, the oldest data points in the data log are cyclically overwritten such that a time of $T_{\log}$ always remains in the memory (ring memory principle).  The log contents are cleared if the length of the logging interval is changed. <i>Example</i> If 1 logging channel is used: ■ $T_{\log} = 1000 \times 1 \text{ s} = 1\,000 \text{ s} \approx 15 \text{ min}$ ■ $T_{\log} = 1000 \times 10 \text{ s} = 10\,000 \text{ s} \approx 3 \text{ h}$ ■ $T_{\log} = 1000 \times 80 \text{ s} = 80\,000 \text{ s} \approx 1 \text{ d}$ ■ $T_{\log} = 1000 \times 3\,600 \text{ s} = 3\,600\,000 \text{ s} \approx 41 \text{ d}$
-------------------------------	---

Clear logging

Navigation	 Expert → Diagnostics → Data logging → Clear logging (0855)
Prerequisite	The Extended HistoROM application package is available.  The software options currently enabled are displayed in the SW option overv. parameter (→  44).
Description	Use this function to clear the entire logging data.
Selection	■ Cancel ■ Clear data
Factory setting	Cancel
Additional information	<i>Selection</i> ■ Cancel The data is not cleared. All the data is retained. ■ Clear data The logging data is cleared. The logging process starts from the beginning.

Data logging

Navigation	 Expert → Diagnostics → Data logging → Data logging (0860)
Description	Use this function to select the data logging method.
Selection	■ Overwriting ■ Not overwriting

Factory setting Overwriting

Additional information *Selection*

- Overwriting
The device memory applies the FIFO principle.
- Not overwriting
Data logging is canceled if the measured value memory is full (single shot).

Logging delay

Navigation   Expert → Diagnostics → Data logging → Logging delay (0859)

Prerequisite In the **Data logging** parameter (→  195), the **Not overwriting** option is selected.

Description Use this function to enter the time delay for measured value logging.

User entry 0 to 999 h

Factory setting 0 h

Additional information *Description*

Once measured value logging has been started with the **Data log.control** parameter (→  196), the device does not save any data for the duration of the time delay entered.

Data log.control

Navigation   Expert → Diagnostics → Data logging → Data log.control (0857)

Prerequisite In the **Data logging** parameter (→  195), the **Not overwriting** option is selected.

Description Use this function to start and stop measured value logging.

Selection

- None
- Delete + start
- Stop

Factory setting None

Additional information *Selection*

- None
Initial measured value logging status.
- Delete + start
All the measured values recorded for all the channels are deleted and measured value logging starts again.
- Stop
Measured value logging is stopped.

Data log. status

Navigation	 Expert → Diagnostics → Data logging → Data log. status (0858)
Prerequisite	In the Data logging parameter (→  195), the Not overwriting option is selected.
Description	Displays the measured value logging status.
User interface	■ Done ■ Delay active ■ Active ■ Stopped
Factory setting	Done
Additional information	<i>Selection</i> ■ Done Measured value logging has been performed and completed successfully. ■ Delay active Measured value logging has been started but the logging interval has not yet elapsed. ■ Active The logging interval has elapsed and measured value logging is active. ■ Stopped Measured value logging is stopped.

Logging duration

Navigation	 Expert → Diagnostics → Data logging → Logging duration (0861)
Prerequisite	In the Data logging parameter (→  195), the Not overwriting option is selected.
Description	Displays the total logging duration.
User interface	Positive floating-point number
Factory setting	0 s

"Displ.channel 1" submenu


Navigation

 Expert → Diagnostics → Data logging → Displ.channel 1

► Displ.channel 1

Display channel 1 →  197

Display channel 1

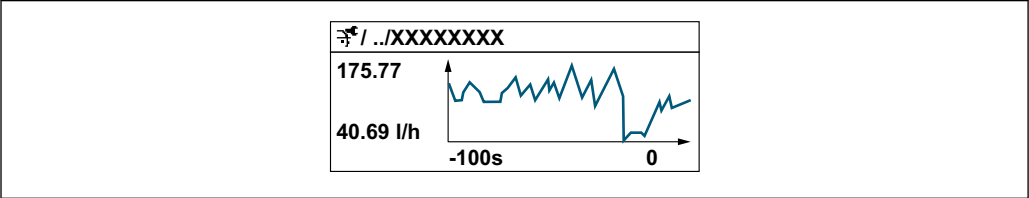Navigation	 Expert → Diagnostics → Data logging → Displ.channel 1
Prerequisite	The Extended HistoROM application package is available.  The software options currently enabled are displayed in the SW option overv. parameter (→  44). In the Assign chan. 1 parameter (→  192), one of the following options is selected: ■ Conductivity[*] ■ CorrConductivity[*] ■ Temperature[*]
Description	Displays the measured value trend for the logging channel in the form of a chart.
Additional information	<i>Description</i>  A0034352  11 <i>Chart of a measured value trend</i> ■ x-axis: depending on the number of channels selected displays 250 to 1000 measured values of a process variable. ■ y-axis: displays the approximate measured value span and constantly adapts this to the ongoing measurement.

"Displ.channel 2" submenu

Navigation	 Expert → Diagnostics → Data logging → Displ.channel 2
	► Displ.channel 2 Display channel 2 →  198

Display channel 2

Navigation	 Expert → Diagnostics → Data logging → Displ.channel 2
Prerequisite	A process variable is defined in the Assign chan. 2 parameter.

^{*} Visibility depends on order options or device settings

Description See the **Display channel 1** parameter →  197

"Displ.channel 3" submenu

Navigation  Expert → Diagnostics → Data logging → Displ.channel 3

► Displ.channel 3

Display channel 3 →  198

Display channel 3

Navigation  Expert → Diagnostics → Data logging → Displ.channel 3

Prerequisite A process variable is defined in the **Assign chan. 3** parameter.

Description See the **Display channel 1** parameter →  197

"Displ.channel 4" submenu

Navigation  Expert → Diagnostics → Data logging → Displ.channel 4

► Displ.channel 4

Display channel 4 →  199

Display channel 4

Navigation  Expert → Diagnostics → Data logging → Displ.channel 4

Prerequisite A process variable is defined in the **Assign chan. 4** parameter.

Description See the **Display channel 1** parameter →  197

3.8.13 "Heartbeat" submenu

 For detailed information on the parameter descriptions for the **Heartbeat Verification+Monitoring** refer to the Special Documentation for the device →  7

Navigation  Expert → Diagnostics → Heartbeat

▶ Heartbeat

3.8.14 "Simulation" submenu

Navigation  Expert → Diagnostics → Simulation

▶ Simulation

Assign proc.var. (1810)

Proc. var. value (1811)

Status inp.sim (1355)

Signal level (1356)

Curr.inp 1 to n sim. (1608-1 to n)

Value curr.inp 1 to n (1609-1 to n)

Curr.out. 1 to n sim. (0354-1 to n)

Value curr.out 1 to n (0355-1 to n)

FreqOutputSim 1 to n (0472-1 to n)

Freq value 1 to n (0473-1 to n)

Puls.outp.sim. 1 to n (0458-1 to n)

Pulse value 1 to n (0459-1 to n)

Switch sim. 1 to n (0462-1 to n)

Switch status 1 to n (0463-1 to n)

Relay out. 1 to n sim (0802-1 to n)

Switch status 1 to n (0803-1 to n)

Dev. alarm sim. (0654)

→  211

→  211

→  212

→  212

→  212

→  213

→  213

→  214

→  214

→  214

→  215

→  215

→  216

→  216

→  217

→  217

→  218

Event category (0738)	→ 218
Diag. event sim. (0737)	→ 218

Assign proc.var.

Navigation	 Expert → Diagnostics → Simulation → Assign proc.var. (1810)
Description	Use this function to select a process variable for the simulation process that is activated. The display alternates between the measured value and a diagnostic message of the "Function check" category (C) while simulation is in progress.
Selection	■ Off ■ Volume flow ■ Mass flow ■ Correct.vol.flow ■ Flow velocity ■ Conductivity * ■ CorrConductivity * ■ Temperature *
Factory setting	Off
Additional information	<i>Description</i>  The simulation value of the process variable selected is defined in the Proc. var. value parameter (→ 211).

Proc. var. value

Navigation	 Expert → Diagnostics → Simulation → Proc. var. value (1811)
Prerequisite	A process variable is selected in the Assign proc.var. parameter (→ 211).
Description	Use this function to enter a simulation value for the selected process variable. Subsequent measured value processing and the signal output use this simulation value. In this way, users can verify whether the measuring device has been configured correctly.
User entry	Depends on the process variable selected
Factory setting	0
Additional information	<i>User entry</i>  The unit of the displayed measured value is taken from the System units submenu (→ 55).

* Visibility depends on order options or device settings

Status inp.sim 1 to n 	
Navigation	  Expert → Diagnostics → Simulation → Status inp.sim 1 to n (1355–1 to n)
Description	Use this function to switch simulation of the status input on and off. The display alternates between the measured value and a diagnostic message of the "Function check" category (C) while simulation is in progress.
Selection	■ Off ■ On
Factory setting	Off
Additional information	<i>Description</i>  The desired simulation value is defined in the Signal level parameter (→  212). <i>Selection</i> ■ Off Simulation for the status input is switched off. The device is in normal measuring mode or another process variable is being simulated. ■ On Simulation for the status input is active.
Signal level 1 to n 	
Navigation	  Expert → Diagnostics → Simulation → Signal level 1 to n (1356–1 to n)
Prerequisite	In the Status inp.sim parameter (→  212), the On option is selected.
Description	Use this function to select the signal level for the simulation of the status input. In this way, users can verify the correct configuration of the status input and the correct function of upstream feed-in units.
Selection	■ High ■ Low
Curr.inp 1 to n sim. 	
Navigation	  Expert → Diagnostics → Simulation → Curr.inp 1 to n sim. (1608–1 to n)
Description	Option for switching simulation of the current input on and off. The display alternates between the measured value and a diagnostic message of the "Function check" category (C) while simulation is in progress.  The desired simulation value is defined in the Value curr.inp 1 to n parameter.
Selection	■ Off ■ On

Factory setting Off

Additional information *Selection*

- Off
Current simulation is switched off. The device is in normal measuring mode or another process variable is being simulated.
- On
Current simulation is active.

Value curr.inp 1 to n



Navigation Expert → Diagnostics → Simulation → Value curr.inp 1 to n (1609–1 to n)

Prerequisite In the **Curr.inp 1 to n sim.** parameter, the **On** option is selected.

Description Use this function to enter the current value for the simulation. In this way, users can verify the correct configuration of the current input and the correct function of upstream feed-in units.

User entry 0 to 22.5 mA

Curr.out. 1 to n sim.



Navigation Expert → Diagnostics → Simulation → Curr.out. 1 to n sim. (0354–1 to n)

Description Use this function to switch simulation of the current output on and off. The display alternates between the measured value and a diagnostic message of the "Function check" category (C) while simulation is in progress.

Selection

- Off
- On

Factory setting Off

Additional information *Description*



The desired simulation value is defined in the **Value curr.out 1 to n** parameter.

Selection

- Off
Current simulation is switched off. The device is in normal measuring mode or another process variable is being simulated.
- On
Current simulation is active.

Value curr.out 1 to n		
Navigation	Expert → Diagnostics → Simulation → Value curr.out 1 to n (0355–1 to n)	
Prerequisite	In the Curr.out. 1 to n sim. parameter, the On option is selected.	
Description	Use this function to enter a current value for the simulation. In this way, users can verify the correct adjustment of the current output and the correct function of downstream switching units.	
User entry	3.59 to 22.5 mA	
Additional information	<i>Dependency</i> The input range is dependent on the option selected in the Current span parameter (→ 109).	
FreqOutputSim 1 to n		
Navigation	Expert → Diagnostics → Simulation → FreqOutputSim 1 to n (0472–1 to n)	
Prerequisite	In the Operating mode parameter (→ 123), the Frequency option is selected.	
Description	Use this function to switch simulation of the frequency output on and off. The display alternates between the measured value and a diagnostic message of the "Function check" category (C) while simulation is in progress.	
Selection	■ Off ■ On	
Factory setting	Off	
Additional information	<i>Description</i> The desired simulation value is defined in the Freq value 1 to n parameter.	
	<i>Selection</i> ■ Off Frequency simulation is switched off. The device is in normal measuring mode or another process variable is being simulated. ■ On Frequency simulation is active.	
Freq value 1 to n		

Navigation Expert → Diagnostics → Simulation → Freq value 1 to n (0473–1 to n)

Prerequisite In the **FreqOutputSim 1 to n** parameter, the **On** option is selected.

Description	Use this function to enter a frequency value for the simulation. In this way, users can verify the correct adjustment of the frequency output and the correct function of downstream switching units.
User entry	0.0 to 12 500.0 Hz

Puls.outp.sim. 1 to n



Navigation	Expert → Diagnostics → Simulation → Puls.outp.sim. 1 to n (0458–1 to n)
Prerequisite	In the Operating mode parameter (→ 123), the Pulse option is selected.
Description	Use this function to switch simulation of the pulse output on and off. The display alternates between the measured value and a diagnostic message of the "Function check" category (C) while simulation is in progress.
Selection	■ Off ■ Fixed value ■ Down-count. val.
Factory setting	Off
Additional information	<i>Description</i> The desired simulation value is defined in the Pulse value 1 to n parameter. <i>Selection</i> ■ Off Pulse simulation is switched off. The device is in normal measuring mode or another process variable is being simulated. ■ Fixed value Pulses are continuously output with the pulse width specified in the Pulse width parameter (→ 126). ■ Down-count. val. The pulses specified in the Pulse value parameter (→ 215) are output.

Pulse value 1 to n



Navigation	Expert → Diagnostics → Simulation → Pulse value 1 to n (0459–1 to n)
Prerequisite	In the Puls.outp.sim. 1 to n parameter, the Down-count. val. option is selected.
Description	Use this function to enter a pulse value for the simulation. In this way, users can verify the correct adjustment of the pulse output and the correct function of downstream switching units.
User entry	0 to 65 535

Switch sim. 1 to n 	
Navigation	 Expert → Diagnostics → Simulation → Switch sim. 1 to n (0462–1 to n)
Prerequisite	In the Operating mode parameter (→  123), the Switch option is selected.
Description	Use this function to switch simulation of the switch output on and off. The display alternates between the measured value and a diagnostic message of the "Function check" category (C) while simulation is in progress.
Selection	■ Off ■ On
Factory setting	Off
Additional information	<i>Description</i>  The desired simulation value is defined in the Switch status 1 to n parameter. <i>Selection</i> ■ Off Switch simulation is switched off. The device is in normal measuring mode or another process variable is being simulated. ■ On Switch simulation is active.
Switch status 1 to n 	
Navigation	 Expert → Diagnostics → Simulation → Switch status 1 to n (0463–1 to n)
Description	Use this function to select a switch value for the simulation. In this way, users can verify the correct adjustment of the switch output and the correct function of downstream switching units.
Selection	■ Open ■ Closed
Additional information	<i>Selection</i> ■ Open Switch simulation is switched off. The device is in normal measuring mode or another process variable is being simulated. ■ Closed Switch simulation is active.

Relay out. 1 to n sim 	
Navigation	  Expert → Diagnostics → Simulation → Relay out. 1 to n sim (0802–1 to n)
Description	Use this function to switch simulation of the relay output on and off. The display alternates between the measured value and a diagnostic message of the "Function check" category (C) while simulation is in progress.
Selection	■ Off ■ On
Factory setting	Off
Additional information	<i>Description</i>  The desired simulation value is defined in the Switch status 1 to n parameter. <i>Selection</i> ■ Off Relay simulation is switched off. The device is in normal measuring mode or another process variable is being simulated. ■ On Relay simulation is active.
Switch status 1 to n 	
Navigation	  Expert → Diagnostics → Simulation → Switch status 1 to n (0803–1 to n)
Prerequisite	The On option is selected in the Switch sim. 1 to n parameter parameter.
Description	Use this function to select a relay value for the simulation. In this way, users can verify the correct adjustment of the relay output and the correct function of downstream switching units.
Selection	■ Open ■ Closed
Additional information	<i>Selection</i> ■ Open Relay simulation is switched off. The device is in normal measuring mode or another process variable is being simulated. ■ Closed Relay simulation is active.

Dev. alarm sim.		
Navigation	Expert → Diagnostics → Simulation → Dev. alarm sim. (0654)	
Description	Use this function to switch the device alarm on and off.	
Selection	■ Off ■ On	
Factory setting	Off	
Additional information	<i>Description</i> The display alternates between the measured value and a diagnostic message of the "Function check" category (C) while simulation is in progress.	
Event category		
Navigation	Expert → Diagnostics → Simulation → Event category (0738)	
Description	Use this function to select the category of the diagnostic events that are displayed for the simulation in the Diag. event sim. parameter (→ 218).	
Selection	■ Sensor ■ Electronics ■ Configuration ■ Process	
Factory setting	Process	
Diag. event sim.		
Navigation	Expert → Diagnostics → Simulation → Diag. event sim. (0737)	
Description	Use this function to select a diagnostic event for the simulation process that is activated.	
Selection	■ Off ■ Diagnostic event picklist (depends on the category selected)	
Factory setting	Off	
Additional information	<i>Description</i> For the simulation, you can choose from the diagnostic events of the category selected in the Event category parameter (→ 218).	

4 Country-specific factory settings

4.1 SI units



Not valid for USA and Canada.

4.1.1 System units

Volume flow	l/h
Volume	m ³
Conductivity	μS/cm
Temperature	°C
Mass flow	kg/h
Mass	kg
Density	kg/l
Corrected volume flow	NI/h
Corrected volume	Nm ³

4.1.2 Full scale values



The factory settings apply to the following parameters:

- 20 mA value (full scale value of the current output)
- 100% bar graph value 1

Nominal diameter [mm]	(v ~ 2.5 m/s) [dm ³ /min]
2	0.5
4	2
8	8
15	25
25	75
32	125
40	200
50	300
65	500
80	750
100	1200
125	1850
150	150 m ³ /h
200	300 m ³ /h
250	500 m ³ /h
300	750 m ³ /h
350	1000 m ³ /h
400	1200 m ³ /h
450	1500 m ³ /h

Nominal diameter [mm]	(v ~ 2.5 m/s) [dm ³ /min]
500	2 000 m ³ /h
600	2 500 m ³ /h

4.1.3 Output current span

Current output 1 to n	4 to 20 mA NAMUR
-----------------------	------------------

4.1.4 Pulse value

Nominal diameter [mm]	(~ 2 pulse/s) [dm ³]
2	0.005
4	0.025
8	0.1
15	0.2
25	0.5
32	1
40	1.5
50	2.5
65	5
80	5
100	10
125	15
150	0.03 m ³
200	0.05 m ³
250	0.05 m ³
300	0.1 m ³
350	0.1 m ³
400	0.15 m ³
450	0.25 m ³
500	0.25 m ³
600	0.3 m ³

4.1.5 On value low flow cut off

 The switch-on point depends on the type of medium and the nominal diameter.

Nominal diameter [mm]	(v ~ 0.04 m/s) [m ³ /h]
2	0.01
4	0.05
8	0.1
15	0.5
25	1

Nominal diameter [mm]	(v ~ 0.04 m/s) [m³/h]
32	2
40	3
50	5
65	8
80	12
100	20
125	30
150	2.5
200	5
250	7.5
300	10
350	15
400	20
450	25
500	30
600	40

4.2 US units

 Only valid for USA and Canada.

4.2.1 System units

Volume flow	gal/min (us)
Volume	gal (us)
Temperature	°F
Mass flow	lb/min
Mass	lb
Density	lb/ft³
Corrected volume flow	Sft³/h
Corrected volume	Sft³

4.2.2 Full scale values

 The factory settings apply to the following parameters:

- 20 mA value (full scale value of the current output)
- 100% bar graph value 1

Nominal diameter [in]	(v ~ 2.5 m/s) [gal/min]
1/12	0.1
1/8	0.5
3/8	2
1/2	6

Nominal diameter [in]	(v ~ 2.5 m/s) [gal/min]
1	18
1½	50
2	75
3	200
4	300
5	450
6	600
8	1200
10	1500
12	2400
14	3600
15	4800
16	4800
18	6000
20	7500
24	10500

4.2.3 Output current span

Current output 1 to n	4 to 20 mA US
-----------------------	---------------

4.2.4 Pulse value

Nominal diameter [in]	(~ 2 pulse/s) [gal]
1/12	0.001
1/8	0.005
3/8	0.02
1/2	0.1
1	0.2
1½	0.5
2	0.5
3	2
4	2
5	5
6	5
8	10
10	15
12	25
14	30
15	50
16	50
18	50

Nominal diameter [in]	(~ 2 pulse/s) [gal]
20	75
24	100

4.2.5 On value low flow cut off



The switch-on point depends on the type of medium and the nominal diameter.

Nominal diameter [in]	(v ~ 0.04 m/s) [gal/min]
1/12	0.002
1/8	0.008
3/8	0.025
1/2	0.15
1	0.25
1 1/2	0.75
2	1.25
3	2.5
4	4
5	7
6	12
8	15
10	30
12	45
14	60
15	60
16	60
18	90
20	120
24	180

5 Explanation of abbreviated units

5.1 SI units

Process variable	Units	Explanation
Density	g/cm ³ , g/m ³	Gram/volume unit
	kg/dm ³ , kg/l, kg/m ³	Kilogram/volume unit
	SD4°C, SD15°C, SD20°C	Specific density: The specific density is the ratio of the density of the fluid to the density of water at a water temperature of 4 °C (39 °F), 15 °C (59 °F), 20 °C (68 °F).
	SG4°C, SG15°C, SG20°C	Specific gravity: The specific gravity is the ratio of the density of the fluid to the density of water at a water temperature of 4 °C (39 °F), 15 °C (59 °F), 20 °C (68 °F).
Conductivity	µS/mm	Microsiemens/length unit
	nS/cm, µS/cm, mS/cm, S/cm	Nano-, Micro-, Milli-, Siemens/length unit
	µS/m, mS/m, S/m, kS/m, MS/m	Micro-, Milli-, Siemens, Kilo-, Megasiemens/length unit
Mass	g, kg, t	Gram, kilogram, metric ton
Mass flow	g/s, g/min, g/h, g/d	Gram/time unit
	kg/s, kg/min, kg/h, kg/d	Kilogram/time unit
	t/s, t/min, t/h, t/d	Metric ton/time unit
Temperature	°C, K	Celsius, Kelvin
Volume	cm ³ , dm ³ , m ³	Cubic centimeter, cubic decimeter, cubic meter
	ml, l, hl, Ml Mega	Milliliter, liter, hectoliter, megaliter
Time	s, m, h, d, y	Second, minute, hour, day, year

5.2 US units

Process variable	Units	Explanation
Density	lb/ft ³ , lb/gal (us)	Pound/cubic foot, pound/gallon
	lb/bbl (us;liq.), lb/bbl (us;beer), lb/bbl (us;oil), lb/bbl (us;tank)	Pound/volume unit
Mass	oz, lb, STon	Ounce, pound, standard ton
Mass flow	oz/s, oz/min, oz/h, oz/d	Ounce/time unit
	lb/s, lb/min, lb/h, lb/d	Pound/time unit
	STon/s, STon/min, STon/h, STon/d	Standard ton/time unit
Corrected volume	Sft ³ , Sgal (us), Sbbl (us;liq.)	Standard cubic foot, standard gallon, standard barrel
Correct.vol.flow	Sft ³ /s, Sft ³ /min, Sft ³ /h, Sft ³ /d	Standard cubic foot/time unit
	Sgal/s (us), Sgal/min (us), Sgal/h (us), Sgal/d (us)	Standard gallon/time unit
	Sbbl/s (us;liq.), Sbbl/min (us;liq.), Sbbl/h (us;liq.), Sbbl/d (us;liq.)	Barrel/time unit (normal liquids)
Temperature	°F, °R	Fahrenheit, Rankine
Volume	af	Acre foot
	ft ³	Cubic foot

Process variable	Units	Explanation
	fl oz (us), gal (us), kgal (us), Mgal (us)	Fluid ounce, gallon, kilogallon, million gallon
	bbl (us;liq.), bbl (us;beer), bbl (us;oil), bbl (us;tank)	Barrel (normal liquids), barrel (beer), barrel (petrochemicals), barrel (filling tanks)
Volume flow	af/s, af/min, af/h, af/d	Acre foot/time unit
	ft ³ /s, ft ³ /min, ft ³ /h, ft ³ /d	Cubic foot/time unit
	fl oz/s (us), fl oz/min (us), fl oz/h (us), fl oz/d (us)	Fluid ounce/time unit
	gal/s (us), gal/min (us), gal/h (us), gal/d (us)	Gallon/time unit
	kgal/s (us), kgal/min (us), kgal/h (us), kgal/d (us)	Kilogallon/time unit
	Mgal/s (us), Mgal/min (us), Mgal/h (us), Mgal/d (us)	Million gallon/time unit
	bbl/s (us;liq.), bbl/min (us;liq.), bbl/h (us;liq.), bbl/d (us;liq.)	Barrel/time unit (normal liquids) Normal liquids: 31.5 gal/bbl
	bbl/s (us;beer), bbl/min (us;beer), bbl/h (us;beer), bbl/d (us;beer)	Barrel /time unit (beer) Beer: 31.0 gal/bbl
	bbl/s (us;oil), bbl/min (us;oil), bbl/h (us;oil), bbl/d (us;oil)	Barrel/time unit (petrochemicals) Petrochemicals: 42.0 gal/bbl
	bbl/s (us;tank), bbl/min (us;tank), bbl/h (us;tank), bbl/d (us;tank)	Barrel/time unit (filling tank) Filling tanks: 55.0 gal/bbl
Time	s, m, h, d, y	Second, minute, hour, day, year
	am, pm	Ante meridiem (before midday), post meridiem (after midday)

5.3 Imperial units

Process variable	Units	Explanation
Density	lb/gal (imp), lb/bbl (imp;beer), lb/bbl (imp;oil)	Pound/volume unit
Corrected volume	Sgal (imp)	Standard gallon
Correct.vol.flow	Sgal/s (imp), Sgal/min (imp), Sgal/h (imp), Sgal/d (imp)	Standard gallon/time unit
Volume	gal (imp), Mgal (imp)	Gallon, mega gallon
	bbl (imp;beer), bbl (imp;oil)	Barrel (beer), barrel (petrochemicals)
Volume flow	gal/s (imp), gal/min (imp), gal/h (imp), gal/d (imp)	Gallon/time unit
	Mgal/s (imp), Mgal/min (imp), Mgal/h (imp), Mgal/d (imp)	Mega gallon/time unit
	bbl/s (imp;beer), bbl/min (imp;beer), bbl/h (imp;beer), bbl/d (imp;beer)	Barrel /time unit (beer) Beer: 36.0 gal/bbl
	bbl/s (imp;oil), bbl/min (imp;oil), bbl/h (imp;oil), bbl/d (imp;oil)	Barrel/time unit (petrochemicals) Petrochemicals: 34.97 gal/bbl
Time	s, m, h, d, y	Second, minute, hour, day, year
	am, pm	Ante meridiem (before midday), post meridiem (after midday)

Index

0 ... 9

0/4 mA value (Parameter)	104, 111
0% bargraph value 1 (Parameter)	18
0% bargraph value 3 (Parameter)	22
2.4 GHz WLAN channel (Parameter)	159
20 mA value (Parameter)	104, 113
100% bargraph value 1 (Parameter)	19
100% bargraph value 3 (Parameter)	23

A

Access status (Parameter)	13
Activate SW option (Parameter)	43
Active level (Parameter)	107
Actual diagnostics (Parameter)	172
Administration (Submenu)	40
Alarm delay (Parameter)	31
Application (Submenu)	166
Apply I/O configuration (Parameter)	101
AR state (Parameter)	149
Assign behavior of diagnostic no. 043 (Parameter) ...	33
Assign behavior of diagnostic no. 302 (Parameter) ...	34
Assign behavior of diagnostic no. 376 (Parameter) ...	34
Assign behavior of diagnostic no. 377 (Parameter) ...	34
Assign behavior of diagnostic no. 441 (Parameter) ...	35
Assign behavior of diagnostic no. 442 (Parameter) ...	35
Assign behavior of diagnostic no. 443 (Parameter) ...	35
Assign behavior of diagnostic no. 444 (Parameter) ...	36
Assign behavior of diagnostic no. 531 (Parameter) ...	36
Assign behavior of diagnostic no. 832 (Parameter) ...	37
Assign behavior of diagnostic no. 833 (Parameter) ...	37
Assign behavior of diagnostic no. 834 (Parameter) ...	37
Assign behavior of diagnostic no. 835 (Parameter) ...	38
Assign behavior of diagnostic no. 842 (Parameter) ...	38
Assign behavior of diagnostic no. 937 (Parameter) ...	38
Assign behavior of diagnostic no. 938 (Parameter) ...	39
Assign behavior of diagnostic no. 961 (Parameter) ...	39
Assign behavior of diagnostic no. 962 (Parameter) ...	39
Assign channel 1 (Parameter)	192, 202
Assign channel 2 (Parameter)	193, 203
Assign channel 3 (Parameter)	193, 204
Assign channel 4 (Parameter)	193, 204
Assign current output 1 to n (Parameter)	109
Assign diagnostic behavior (Parameter)	134, 143
Assign flow direction check (Parameter)	138, 142
Assign frequency output (Parameter)	128
Assign limit (Parameter)	135, 142
Assign process variable (Parameter)	76, 167
Assign pulse output 1 to n (Parameter)	125
Assign simulation process variable (Parameter) ...	211
Assign SSID name (Parameter)	159
Assign status (Parameter)	138, 143
Assign status input (Parameter)	106

B

Backlight (Parameter)	28
Backup state (Parameter)	30

Bootloader revision (Parameter) 185, 186, 187, 189,	190,	191
Build no. software (Parameter) 185, 186, 187, 188,	190,	191

C

Calibration (Submenu)	98
Calibration factor (Parameter)	99
Clear logging data (Parameter)	194, 205
Coating detection (Parameter)	83
Coating detection (Submenu)	83
Coating detection damping (Parameter)	84
Coating limit (Parameter)	84
Coating limit hysteresis (Parameter)	84
Coating measured value (Parameter)	84
Communication (Submenu)	147
Comparison result (Parameter)	30
Conductivity (Parameter)	47
Conductivity calibration factor (Parameter)	100
Conductivity damping (Parameter)	74
Conductivity factor (Parameter)	95
Conductivity measurement (Parameter)	74
Conductivity offset (Parameter)	95
Conductivity temperature coefficient (Parameter) ...	75
Conductivity unit (Parameter)	57
Configuration backup (Submenu)	28
Configuration counter (Parameter)	184
Configuration management (Parameter)	29
Confirm access code (Parameter)	41
Connection state (Parameter)	160
Contrast display (Parameter)	27
Control Totalizer 1 to n (Parameter)	169
Corrected conductivity (Parameter)	47
Corrected conductivity factor (Parameter)	97
Corrected conductivity offset (Parameter)	97
Corrected volume flow (Parameter)	46
Corrected volume flow factor (Parameter)	96
Corrected volume flow offset (Parameter)	95
Corrected volume flow unit (Parameter)	60
Corrected volume unit (Parameter)	61
Current input 1 to n (Submenu)	50, 102
Current input 1 to n simulation (Parameter)	212
Current output 1 to n (Submenu)	108
Current output 1 to n simulation (Parameter)	213
Current span (Parameter)	103, 109
Custody transfer (Submenu)	171

D

Damping output 1 to n (Parameter)	118, 131
Data logging (Parameter)	195, 205
Data logging (Submenu)	191, 202
Data logging control (Parameter)	196, 206
Data logging status (Parameter)	196, 207
Date/time format (Parameter)	62
Decimal places 1 (Parameter)	19
Decimal places 2 (Parameter)	21

- Decimal places 3 (Parameter) 23
- Decimal places 4 (Parameter) 25
- Default gateway (Parameter) 153
- Define access code (Parameter) 40
- Define access code (Wizard) 40
- Density (Parameter) 48
- Density source (Parameter) 85
- Density unit (Parameter) 59
- Device alarm simulation (Parameter) 218
- Device ID (Parameter) 149
- Device information (Submenu) 181
- Device name (Parameter) 182
- Device reset (Parameter) 42
- Device revision (Parameter) 149
- Device tag (Parameter) 181
- Device type (Parameter) 149
- Diagnostic behavior (Submenu) 32
- Diagnostic configuration (Submenu) 161
- Diagnostic event category (Parameter) 218
- Diagnostic event simulation (Parameter) 218
- Diagnostic handling (Submenu) 31
- Diagnostic list (Submenu) 174
- Diagnostics (Submenu) 171
- Diagnostics 1 (Parameter) 174
- Diagnostics 2 (Parameter) 175
- Diagnostics 3 (Parameter) 176
- Diagnostics 4 (Parameter) 177
- Diagnostics 5 (Parameter) 178
- Direct access
 - 0/4 mA value
 - Current input 1 to n (1606–1 to n) 104
 - Current output 1 to n (0367–1 to n) 111
 - 0% bargraph value 1 (0123) 18
 - 0% bargraph value 3 (0124) 22
 - 2.4 GHz WLAN channel (2704) 159
 - 20 mA value
 - Current input 1 to n (1607–1 to n) 104
 - Current output 1 to n (0372–1 to n) 113
 - 100% bargraph value 1 (0125) 19
 - 100% bargraph value 3 (0126) 23
 - Access status (0005) 13
 - Activate SW option (0029) 43
 - Active level
 - Status input 1 to n (1351–1 to n) 107
 - Actual diagnostics (0691) 172
 - Alarm delay (0651) 31
 - Apply I/O configuration (3907) 101
 - AR state (2088) 149
 - Assign behavior of diagnostic no. 043 (0650) 33
 - Assign behavior of diagnostic no. 302 (0739) 34
 - Assign behavior of diagnostic no. 376 (0645) 34
 - Assign behavior of diagnostic no. 377 (0777) 34
 - Assign behavior of diagnostic no. 441 (0657) 35
 - Assign behavior of diagnostic no. 442 (0658) 35
 - Assign behavior of diagnostic no. 443 (0659) 35
 - Assign behavior of diagnostic no. 444 (0740) 36
 - Assign behavior of diagnostic no. 531 (0741) 36
 - Assign behavior of diagnostic no. 832 (0681) 37
 - Assign behavior of diagnostic no. 833 (0682) 37
 - Assign behavior of diagnostic no. 834 (0700) 37
 - Assign behavior of diagnostic no. 835 (0702) 38
 - Assign behavior of diagnostic no. 842 (0638) 38
 - Assign behavior of diagnostic no. 937 (0743) 38
 - Assign behavior of diagnostic no. 938 (0642) 39
 - Assign behavior of diagnostic no. 961 (0736) 39
 - Assign behavior of diagnostic no. 962 (0745) 39
 - Assign channel 1 (0851) 192, 202
 - Assign channel 2 (0852) 193, 203
 - Assign channel 3 (0853) 193, 204
 - Assign channel 4 (0854) 193, 204
 - Assign current output 1 to n (0359–1 to n) 109
 - Assign diagnostic behavior
 - Pulse/frequency/switch output 1 to n (0482–1 to n) 134
 - Relay output 1 to n (0806–1 to n) 143
 - Assign flow direction check
 - Pulse/frequency/switch output 1 to n (0484–1 to n) 138
 - Relay output 1 to n (0808–1 to n) 142
 - Assign frequency output
 - Pulse/frequency/switch output 1 to n (0478–1 to n) 128
 - Assign limit
 - Pulse/frequency/switch output 1 to n (0483–1 to n) 135
 - Relay output 1 to n (0807–1 to n) 142
 - Assign process variable
 - Totalizer 1 to n (0914–1 to n) 167
 - Assign process variable (1837) 76
 - Assign pulse output 1 to n (0460–1 to n) 125
 - Assign simulation process variable (1810) 211
 - Assign SSID name (2708) 159
 - Assign status
 - Pulse/frequency/switch output 1 to n (0485–1 to n) 138
 - Relay output 1 to n (0805–1 to n) 143
 - Assign status input
 - Status input 1 to n (1352–1 to n) 106
 - Backlight (0111) 28
 - Backup state (2759) 30
 - Bootloader revision
 - I/O module (0073) 187, 189, 190
 - Bootloader revision (0073) 185, 186, 191
 - Build no. software
 - I/O module (0079) 187, 188, 190
 - Build no. software (0079) 185, 186, 191
 - Calibration factor (6522) 99
 - Clear logging data (0855) 194, 205
 - Coating detection (6734) 83
 - Coating detection damping (6840) 84
 - Coating limit (6451) 84
 - Coating limit hysteresis (6452) 84
 - Coating measured value (12111) 84
 - Comparison result (2760) 30
 - Conductivity (1850) 47
 - Conductivity calibration factor (6718) 100
 - Conductivity damping (1803) 74
 - Conductivity factor (1849) 95

Conductivity measurement (6514)	74	Empty pipe adjust value (6527)	80
Conductivity offset (1848)	95	Empty pipe detection (1860)	79
Conductivity temperature coefficient (1891)	75	ENP version (0012)	184
Conductivity unit (0582)	57	Enter access code (0003)	13
Configuration counter (2751)	184	Entire logging duration (0861)	197, 207
Configuration management (2758)	29	Event category 004 (0238)	162
Connection state (2722)	160	Event category 441 (0210)	162
Contrast display (0105)	27	Event category 442 (0230)	163
Control Totalizer 1 to n (0912-1 to n)	169	Event category 443 (0231)	163
Corrected conductivity (1853)	47	Event category 531 (0262)	163
Corrected conductivity factor (1871)	97	Event category 832 (0218)	164
Corrected conductivity offset (1870)	97	Event category 833 (0225)	164
Corrected volume flow (1851)	46	Event category 834 (0227)	165
Corrected volume flow factor (1867)	96	Event category 835 (0229)	165
Corrected volume flow offset (1866)	95	Event category 862 (0214)	165
Corrected volume flow unit (0558)	60	Event category 937 (0260)	166
Corrected volume unit (0575)	61	Extended order code 1 (0023)	183
Current input 1 to n simulation (1608-1 to n)	212	Extended order code 2 (0021)	183
Current output 1 to n simulation (0354-1 to n)	213	Extended order code 3 (0022)	183
Current span		External density (6630)	86
Current input 1 to n (1605-1 to n)	103	External temperature (6673)	90
Current output 1 to n (0353-1 to n)	109	Fail-safe type external ref. density (2081)	86
Damping output 1 to n (0363-1 to n)	118	Fail-safe type external temperature (2075)	90
Damping output 1 to n (0477-1 to n)	131	Fail-safe value external ref. density (2082)	87
Data logging (0860)	195, 205	Fail-safe value external temperature (2076)	91
Data logging control (0857)	196, 206	Failure current	
Data logging status (0858)	196, 207	Current output 1 to n (0352-1 to n)	120
Date/time format (2812)	62	Failure frequency	
Decimal places 1 (0095)	19	Pulse/frequency/switch output 1 to n (0474-1 to n)	133
Decimal places 2 (0117)	21	Failure mode	
Decimal places 3 (0118)	23	Current input 1 to n (1601-1 to n)	105
Decimal places 4 (0119)	25	Current output 1 to n (0364-1 to n)	119
Default gateway (7210)	153	Pulse/frequency/switch output 1 to n (0451-1 to n)	132
Density (1857)	48	Pulse/frequency/switch output 1 to n (0480-1 to n)	127
Density source (6615)	85	Pulse/frequency/switch output 1 to n (0486-1 to n)	139
Density unit (0555)	59	Relay output 1 to n (0811-1 to n)	145
Device alarm simulation (0654)	218	Totalizer 1 to n (0901-1 to n)	170
Device ID (2073)	149	Failure value	
Device name (0020)	182	Current input 1 to n (1602-1 to n)	105
Device reset (0000)	42	Filter options	179
Device revision (2072)	149	Filter options (0705)	179
Device tag (0011)	181	Filter options (6710)	71
Device type (2083)	149	Firmware version (0010)	182
Diagnostic event category (0738)	218	Fixed current	
Diagnostic event simulation (0737)	218	Current output 1 to n (0365-1 to n)	110
Diagnostics 1 (0692)	174	Fixed density (6623)	86
Diagnostics 2 (0693)	175	Flow damping (6661)	73
Diagnostics 3 (0694)	176	Flow override (1839)	73
Diagnostics 4 (0695)	177	Flow velocity (1854)	46
Diagnostics 5 (0696)	178	Flow velocity factor (1880)	98
Direct access (0106)	11	Flow velocity offset (1879)	98
Display damping (0094)	25	Format display (0098)	15
Display interval (0096)	25	Frequency output simulation 1 to n (0472-1 to n)	214
Display language (0104)	15	Frequency value 1 to n (0473-1 to n)	214
ECC cleaning cycle (6557)	82		
ECC duration (6555)	82		
ECC Polarity (6631)	83		
ECC recovery time (6556)	82		
Electrode cleaning circuit (6528)	81		

- Full pipe adjust value (6548) 81
- Gateway IP address (2719) 161
- Header (0097) 26
- Header text (0112) 27
- I/O alteration code (2762) 102
- I/O module 1 terminal numbers (3902-1) 187
- I/O module 1 to n information (3906-1 to n) ... 100
- I/O module 1 to n terminal numbers (3902-1 to n) 100
- I/O module 1 to n type (3901-1 to n) 101
- I/O module 2 terminal numbers (3902-2) .. 188, 189
- I/O module 3 terminal numbers (3902-3) .. 188, 189
- I/O module 4 terminal numbers (3902-4) .. 188, 189
- Input signal level 1 to n (1356-1 to n) 212
- Installation direction (1809) 92
- Integration time (6533) 92
- Invert output signal
 - Pulse/frequency/switch output 1 to n (0470-1 to n) 140
- IP address (7209) 153
- IP address backup IO controller (2096) 151
- IP address domain name server (2720) 161
- IP address IO controller (2094) 151
- Last backup (2757) 29
- Linear expansion coefficient (1817) 87
- Locking status (0004) 12
- Logging delay (0859) 195, 206
- Logging interval (0856) 194, 204
- Login page (7273) 154
- MAC address (7214) 153
- MAC address backup IO controller (2095) 151
- MAC address IO controller (2093) 151
- Manufacturer-specific diagnostics (2084) 148
- Mass flow (1847) 46
- Mass flow factor (1846) 94
- Mass flow offset (1841) 94
- Mass flow unit (0554) 58
- Mass unit (0574) 59
- Max. switch cycles number
 - Relay output 1 to n (0817-1 to n) 55
- Maximum frequency value
 - Pulse/frequency/switch output 1 to n (0454-1 to n) 129
- Maximum value (6545) 200
- Maximum value (6680) 201
- Measured current 1 to n (0366-1 to n) 52, 121
- Measured current 1 to n (1604-1 to n) 50
- Measured value EPD (6559) 81
- Measured values 1 to n (1603-1 to n) 50
- Measuring mode
 - Current output 1 to n (0351-1 to n) 113
 - Pulse/frequency/switch output 1 to n (0457-1 to n) 126
 - Pulse/frequency/switch output 1 to n (0479-1 to n) 130
- Measuring period (6536) 92
- Measuring value at maximum frequency
 - Pulse/frequency/switch output 1 to n (0475-1 to n) 130
- Measuring value at minimum frequency
 - Pulse/frequency/switch output 1 to n (0476-1 to n) 130
- Minimum frequency value
 - Pulse/frequency/switch output 1 to n (0453-1 to n) 129
- Minimum value (6547) 200
- Minimum value (6681) 201
- MRP role (2085) 150
- Name of station (2071) 147
- Network security (2705) 156
- New adjustment (6560) 80
- Nominal diameter (2807) 99
- Off value low flow cutoff (1804) 77
- On value low flow cutoff (1805) 76
- Operating mode
 - Pulse/frequency/switch output 1 to n (0469-1 to n) 123
- Operating time (0652) 29, 41, 174
- Operating time from restart (0653) 174
- Order code (0008) 182
- Output current 1 to n (0361-1 to n) 52, 120
- Output frequency 1 to n (0471-1 to n) 52, 133
- Powerless relay status
 - Relay output 1 to n (0816-1 to n) 146
- Preset value 1 to n (0913-1 to n) 170
- Pressure shock suppression (1806) 77
- Previous diagnostics (0690) 173
- Process variable value (1811) 211
- Progress (6571) 80
- Pulse output 1 to n (0456-1 to n) 53, 128
- Pulse output simulation 1 to n (0458-1 to n) ... 215
- Pulse scaling
 - Pulse/frequency/switch output 1 to n (0455-1 to n) 125
- Pulse value 1 to n (0459-1 to n) 215
- Pulse width
 - Pulse/frequency/switch output 1 to n (0452-1 to n) 126
- Received signal strength (2721) 160
- Reference density (1885) 75
- Reference density (1892) 88
- Reference temperature (1816) 91
- Relay output 1 to n simulation (0802-1 to n) ... 217
- Relay output function
 - Relay output 1 to n (0804-1 to n) 141
- Reset access code (0024) 42
- Reset all totalizers (2806) 166
- Reset min/max values (6541) 199
- Response time
 - Current output 2 (0378) 118
 - Pulse/frequency/switch output 1 to n (0491-1 to n) 132
- Response time empty pipe detection (1859) 79
- Response time status input
 - Status input 1 to n (1354-1 to n) 107
- Security identification (2718) 157
- Select antenna (2713) 160
- Separator (0101) 27

Serial number (0009)	182
Signal mode	
Current input 1 to n (1610-1 to n)	103
Current output 1 to n (0377-1 to n)	109
Pulse/frequency/switch output 1 to n (0490-1 to n)	123
Software option overview (0015)	44
Software revision	
I/O module (0072)	187, 188, 189
Software revision (0072)	185, 186, 190
Square expansion coefficient (1818)	88
SSID name (2707)	159
SSID name (2714)	156
State MRP port 1 (2086)	150
State MRP port 2 (2087)	150
Status input simulation 1 to n (1355-1 to n)	212
Subnet mask (7211)	153
Switch cycles	
Relay output 1 to n (0815-1 to n)	54
Switch output function	
Pulse/frequency/switch output 1 to n (0481-1 to n)	134
Switch output simulation 1 to n (0462-1 to n) ..	216
Switch point empty pipe detection (6562)	79
Switch status	
Relay output 1 to n (0801-1 to n)	54, 146
Switch status 1 to n (0461-1 to n)	53, 139
Switch status 1 to n (0463-1 to n)	216
Switch status 1 to n (0803-1 to n)	217
Switch-off delay	
Pulse/frequency/switch output 1 to n (0465-1 to n)	139
Relay output 1 to n (0813-1 to n)	144
Switch-off value	
Pulse/frequency/switch output 1 to n (0464-1 to n)	137
Relay output 1 to n (0809-1 to n)	144
Switch-on delay	
Pulse/frequency/switch output 1 to n (0467-1 to n)	138
Relay output 1 to n (0814-1 to n)	145
Switch-on value	
Pulse/frequency/switch output 1 to n (0466-1 to n)	137
Relay output 1 to n (0810-1 to n)	145
Temperature (1852)	47
Temperature damping (1886)	75
Temperature factor (1869)	97
Temperature offset (1868)	96
Temperature source (6712)	89
Temperature unit (0557)	58
Terminal number	
Current input 1 to n (1611-1 to n)	103
Current output 1 to n (0379-1 to n)	108
Pulse/frequency/switch output 1 to n (0492-1 to n)	122
Relay output 1 to n (0812-1 to n)	141
Status input 1 to n (1358-1 to n)	106
Timestamp	172, 173, 175, 176, 177, 178

Totalizer operation mode	
Totalizer 1 to n (0908-1 to n)	169
Totalizer overflow 1 to n (0910-1 to n)	49
Totalizer value 1 to n (0911-1 to n)	48
Unit totalizer 1 to n (0915-1 to n)	168
User corrected volume factor (0590)	66
User corrected volume offset (0602)	66
User corrected volume text (0592)	65
User density factor (0572)	67
User density offset (0571)	67
User density text (0570)	66
User energy factor (0586)	69
User energy offset (0599)	69
User energy text (0600)	68
User mass factor (0561)	65
User mass offset (0562)	65
User mass text (0560)	64
User name (2715)	157
User pressure factor (0579)	70
User pressure offset (0580)	70
User pressure text (0581)	69
User specific-enthalpy factor (0583)	68
User specific-enthalpy offset (0584)	68
User specific-enthalpy text (0585)	67
User volume factor (0568)	64
User volume offset (0569)	64
User volume text (0567)	63
Value 1 display (0107)	18
Value 2 display (0108)	20
Value 3 display (0110)	21
Value 4 display (0109)	24
Value current input 1 to n (1609-1 to n)	213
Value current output 1 to n (0355-1 to n)	214
Value status input	
Status input 1 to n (1353-1 to n)	107
Value status input 1 to n (1353-1 to n)	51
Volume flow (1838)	46
Volume flow factor (1832)	94
Volume flow offset (1831)	93
Volume flow unit (0553)	55
Volume unit (0563)	57
Web server functionality (7222)	154
Web server language (7221)	152
WLAN (2702)	156
WLAN IP address (2711)	158
WLAN MAC address (2703)	158
WLAN mode (2717)	156
WLAN passphrase (2706)	158
WLAN password (2716)	157
WLAN subnet mask (2709)	158
Zero point (6546)	99
Direct access (Parameter)	11
Display (Submenu)	14
Display channel 1 (Submenu)	197, 207
Display channel 2 (Submenu)	198, 208
Display channel 3 (Submenu)	198, 209
Display channel 4 (Submenu)	199, 209
Display damping (Parameter)	25
Display interval (Parameter)	25

Display language (Parameter)	15
Display module (Submenu)	190
Document	
Explanation of the structure of a parameter	
description	6
Function	4
Structure	4
Symbols used	6
Target group	4
Using the document	4
Document function	4

E

ECC cleaning cycle (Parameter)	82
ECC duration (Parameter)	82
ECC Polarity (Parameter)	83
ECC recovery time (Parameter)	82
Electrode cleaning circuit (Parameter)	81
Electrode cleaning circuit (Submenu)	81
Empty pipe adjust value (Parameter)	80
Empty pipe detection (Parameter)	79
Empty pipe detection (Submenu)	78
ENP version (Parameter)	184
Enter access code (Parameter)	13
Entire logging duration (Parameter)	197, 207
Event category 004 (Parameter)	162
Event category 441 (Parameter)	162
Event category 442 (Parameter)	163
Event category 443 (Parameter)	163
Event category 531 (Parameter)	163
Event category 832 (Parameter)	164
Event category 833 (Parameter)	164
Event category 834 (Parameter)	165
Event category 835 (Parameter)	165
Event category 862 (Parameter)	165
Event category 937 (Parameter)	166
Event list (Submenu)	180
Event logbook (Submenu)	178
Extended order code 1 (Parameter)	183
Extended order code 2 (Parameter)	183
Extended order code 3 (Parameter)	183
External compensation (Submenu)	85
External density (Parameter)	86
External temperature (Parameter)	90

F

Factory settings	219
SI units	219
US units	221
Fail-safe type external ref. density (Parameter)	86
Fail-safe type external temperature (Parameter)	90
Fail-safe value external ref. density (Parameter)	87
Fail-safe value external temperature (Parameter)	91
Failure current (Parameter)	120
Failure frequency (Parameter)	133
Failure mode (Parameter) 105, 119, 127, 132, 139, 145,	170
Failure value (Parameter)	105
Filter options (Parameter)	71, 179

Firmware version (Parameter)	182
Fixed current (Parameter)	110
Fixed density (Parameter)	86
Flow damping (Parameter)	73
Flow override (Parameter)	73
Flow velocity (Parameter)	46
Flow velocity factor (Parameter)	98
Flow velocity offset (Parameter)	98
Format display (Parameter)	15
Frequency output simulation 1 to n (Parameter)	214
Frequency value 1 to n (Parameter)	214
Full pipe adjust value (Parameter)	81
Function	
see Parameter	

G

Gateway IP address (Parameter)	161
--------------------------------------	-----

H

Header (Parameter)	26
Header text (Parameter)	27
Heartbeat (Submenu)	210

I

I/O alteration code (Parameter)	102
I/O configuration (Submenu)	100
I/O module 1 (Submenu)	186
I/O module 1 terminal numbers (Parameter)	187
I/O module 1 to n information (Parameter)	100
I/O module 1 to n terminal numbers (Parameter) ...	100
I/O module 1 to n type (Parameter)	101
I/O module 2 (Submenu)	188
I/O module 2 terminal numbers (Parameter) ..	188, 189
I/O module 3 (Submenu)	189
I/O module 3 terminal numbers (Parameter) ..	188, 189
I/O module 4 terminal numbers (Parameter) ..	188, 189
Input (Submenu)	102
Input signal level 1 to n (Parameter)	212
Input values (Submenu)	50
Installation direction (Parameter)	92
Integration time (Parameter)	92
Invert output signal (Parameter)	140
IP address (Parameter)	153
IP address backup IO controller (Parameter)	151
IP address domain name server (Parameter)	161
IP address IO controller (Parameter)	151

L

Last backup (Parameter)	29
Linear expansion coefficient (Parameter)	87
Locking status (Parameter)	12
Logging delay (Parameter)	195, 206
Logging interval (Parameter)	194, 204
Login page (Parameter)	154
Low flow cut off (Submenu)	76

M

MAC address (Parameter)	153
MAC address backup IO controller (Parameter)	151
MAC address IO controller (Parameter)	151

Main electronic module + I/O module 1 (Submenu) .	184
Main electronic temperature (Submenu)	200
Manufacturer-specific diagnostics (Parameter)	148
Mass flow (Parameter)	46
Mass flow factor (Parameter)	94
Mass flow offset (Parameter)	94
Mass flow unit (Parameter)	58
Mass unit (Parameter)	59
Max. switch cycles number (Parameter)	55
Maximum frequency value (Parameter)	129
Maximum value (Parameter)	200, 201
Measured current 1 to n (Parameter)	50, 52, 121
Measured value EPD (Parameter)	81
Measured values (Submenu)	45
Measured values 1 to n (Parameter)	50
Measuring mode (Parameter)	113, 126, 130
Measuring period (Parameter)	92
Measuring value at maximum frequency (Parameter)	
.	130
Measuring value at minimum frequency (Parameter)	
.	130
Min/max values (Submenu)	199
Minimum frequency value (Parameter)	129
Minimum value (Parameter)	200, 201
MRP role (Parameter)	150

N

Name of station (Parameter)	147
Network security (Parameter)	156
New adjustment (Parameter)	80
Nominal diameter (Parameter)	99

O

Off value low flow cutoff (Parameter)	77
On value low flow cutoff (Parameter)	76
Operating mode (Parameter)	123
Operating time (Parameter)	29, 41, 174
Operating time from restart (Parameter)	174
Order code (Parameter)	182
Output (Submenu)	107
Output current 1 to n (Parameter)	52, 120
Output frequency 1 to n (Parameter)	52, 133
Output values (Submenu)	51

P

Parameter	
Structure of a parameter description	6
Powerless relay status (Parameter)	146
Preset value 1 to n (Parameter)	170
Pressure shock suppression (Parameter)	77
Previous diagnostics (Parameter)	173
Process parameters (Submenu)	70
Process variable adjustment (Submenu)	93
Process variable value (Parameter)	211
Process variables (Submenu)	45
PROFINET configuration (Submenu)	147
PROFINET information (Submenu)	148
Progress (Parameter)	80
Pulse output 1 to n (Parameter)	53, 128

Pulse output simulation 1 to n (Parameter)	215
Pulse scaling (Parameter)	125
Pulse value 1 to n (Parameter)	215
Pulse width (Parameter)	126
Pulse/frequency/switch output 1 to n (Submenu)	52,
121	

R

Received signal strength (Parameter)	160
Reference density (Parameter)	75, 88
Reference temperature (Parameter)	91
Relay output 1 to n (Submenu)	54, 140
Relay output 1 to n simulation (Parameter)	217
Relay output function (Parameter)	141
Reset access code (Parameter)	42
Reset access code (Submenu)	41
Reset all totalizers (Parameter)	166
Reset min/max values (Parameter)	199
Response time (Parameter)	118, 132
Response time empty pipe detection (Parameter)	79
Response time status input (Parameter)	107

S

Security identification (Parameter)	157
Select antenna (Parameter)	160
Sensor (Submenu)	44
Sensor adjustment (Submenu)	92
Sensor electronic module (ISEM) (Submenu)	185
Separator (Parameter)	27
Serial number (Parameter)	182
Signal mode (Parameter)	103, 109, 123
Simulation (Submenu)	210
Software option overview (Parameter)	44
Software revision (Parameter) 185, 186, 187, 188,	
189,	190
Square expansion coefficient (Parameter)	88
SSID name (Parameter)	156, 159
State MRP port 1 (Parameter)	150
State MRP port 2 (Parameter)	150
Status input 1 to n (Submenu)	105
Status input simulation 1 to n (Parameter)	212
Submenu	
Administration	40
Application	166
Calibration	98
Coating detection	83
Communication	147
Configuration backup	28
Current input 1 to n	50, 102
Current output 1 to n	108
Custody transfer	171
Data logging	191, 202
Device information	181
Diagnostic behavior	32
Diagnostic configuration	161
Diagnostic handling	31
Diagnostic list	174
Diagnostics	171
Display	14

Display channel 1	197, 207	System units (Submenu)	55
Display channel 2	198, 208	T	
Display channel 3	198, 209	Target group	4
Display channel 4	199, 209	Temperature (Parameter)	47
Display module	190	Temperature (Submenu)	201
Electrode cleaning circuit	81	Temperature damping (Parameter)	75
Empty pipe detection	78	Temperature factor (Parameter)	97
Event list	180	Temperature offset (Parameter)	96
Event logbook	178	Temperature source (Parameter)	89
External compensation	85	Temperature unit (Parameter)	58
Heartbeat	210	Terminal number (Parameter)	103, 106, 108, 122, 141
I/O configuration	100	Timestamp (Parameter)	172, 173, 175, 176, 177, 178
I/O module 1	186	Totalizer (Submenu)	48
I/O module 2	188	Totalizer 1 to n (Submenu)	167
I/O module 3	189	Totalizer operation mode (Parameter)	169
Input	102	Totalizer overflow 1 to n (Parameter)	49
Input values	50	Totalizer value 1 to n (Parameter)	48
Low flow cut off	76	U	
Main electronic module + I/O module 1	184	Unit totalizer 1 to n (Parameter)	168
Main electronic temperature	200	User corrected volume factor (Parameter)	66
Measured values	45	User corrected volume offset (Parameter)	66
Min/max values	199	User corrected volume text (Parameter)	65
Output	107	User density factor (Parameter)	67
Output values	51	User density offset (Parameter)	67
Process parameters	70	User density text (Parameter)	66
Process variable adjustment	93	User energy factor (Parameter)	69
Process variables	45	User energy offset (Parameter)	69
PROFINET configuration	147	User energy text (Parameter)	68
PROFINET information	148	User mass factor (Parameter)	65
Pulse/frequency/switch output 1 to n	52, 121	User mass offset (Parameter)	65
Relay output 1 to n	54, 140	User mass text (Parameter)	64
Reset access code	41	User name (Parameter)	157
Sensor	44	User pressure factor (Parameter)	70
Sensor adjustment	92	User pressure offset (Parameter)	70
Sensor electronic module (ISEM)	185	User pressure text (Parameter)	69
Simulation	210	User specific-enthalpy factor (Parameter)	68
Status input 1 to n	105	User specific-enthalpy offset (Parameter)	68
System	13	User specific-enthalpy text (Parameter)	67
System units	55	User volume factor (Parameter)	64
Temperature	201	User volume offset (Parameter)	64
Totalizer	48	User volume text (Parameter)	63
Totalizer 1 to n	167	User-specific units (Submenu)	62
User-specific units	62	V	
Value current output 1 to n	51	Value 1 display (Parameter)	18
Value status input 1 to n	51	Value 2 display (Parameter)	20
Web server	152	Value 3 display (Parameter)	21
WLAN settings	155	Value 4 display (Parameter)	24
Subnet mask (Parameter)	153	Value current input 1 to n (Parameter)	213
Switch cycles (Parameter)	54	Value current output 1 to n (Parameter)	214
Switch output function (Parameter)	134	Value current output 1 to n (Submenu)	51
Switch output simulation 1 to n (Parameter)	216	Value status input (Parameter)	51, 107
Switch point empty pipe detection (Parameter)	79	Value status input 1 to n (Submenu)	51
Switch status (Parameter)	54, 146	Volume flow (Parameter)	46
Switch status 1 to n (Parameter)	53, 139, 216, 217	Volume flow factor (Parameter)	94
Switch-off delay (Parameter)	139, 144	Volume flow offset (Parameter)	93
Switch-off value (Parameter)	137, 144	Volume flow unit (Parameter)	55
Switch-on delay (Parameter)	138, 145		
Switch-on value (Parameter)	137, 145		
System (Submenu)	13		

Volume unit (Parameter) 57

W

Web server (Submenu) 152

Web server functionality (Parameter) 154

Web server language (Parameter) 152

Wizard

 Define access code 40

WLAN (Parameter) 156

WLAN IP address (Parameter) 158

WLAN MAC address (Parameter) 158

WLAN mode (Parameter) 156

WLAN passphrase (Parameter) 158

WLAN password (Parameter) 157

WLAN settings (Submenu) 155

WLAN subnet mask (Parameter) 158

Z

Zero point (Parameter) 99

www.addresses.endress.com
