BA01540D/06/EN/06.22-00 71575124 2022-08-01 Valid as of version 01.06.zz (Device firmware)

Operating Instructions **Proline Promass F 500**

Coriolis flowmeter Modbus RS485







- Make sure the document is stored in a safe place such that it is always available when working on or with the device.
- To avoid danger to individuals or the facility, read the "Basic safety instructions" section carefully, as well as all other safety instructions in the document that are specific to working procedures.
- The manufacturer reserves the right to modify technical data without prior notice. Your Endress+Hauser Sales Center will supply you with current information and updates to these instructions.

Table of contents

1	About this document
1.1 1.2 1.3 1.4	Document function6Symbols61.2.1Safety symbols61.2.2Electrical symbols61.2.3Communication-specific symbols61.2.4Tool symbols71.2.5Symbols for certain types of information71.2.6Symbols in graphics7Documentation81.3.1Document function8Registered trademarks8
2	Safety instructions
2.1 2.2 2.3 2.4 2.5 2.6 2.7	Requirements for the personnel9Intended use9Workplace safety10Operational safety10Product safety10IT security10IT security11Device-specific IT security112.7.1Protecting access via hardware write protection112.7.2Protecting access via a password122.7.3Access via Service interface (CDI- DY(C)10
0	RJ45) 13
3 3.1	Product description 14 Product design 14 3.1.1 Proline 500 – digital 14 3.1.2 Proline 500 15
4	Incoming acceptance and product
4.1 4.2	identification16Incoming acceptance16Product identification164.2.1Transmitter nameplate174.2.2Sensor nameplate194.2.3Symbols on measuring device20
5 5.1 5.2	Storage and transport21Storage conditions21Transporting the product215.2.1Measuring devices without lifting lugs215.2.2Measuring devices with lifting lugs225.2.3Transporting with a fork lift22Packaging disposal22

6	Mounting	22
6.1	Mounting requirements	22
	6.1.1 Mounting position	22
	6.1.2 Environment and process	
	requirements	25
	6.1.3 Special mounting instructions	27
6.2	Mounting the measuring device	29
	6.2.1 Required tools	29
	6.2.2 Preparing the measuring device	29
	6.2.3 Mounting the measuring device	30
	6.2.4 Mounting the transmitter housing:	
	Proline 500 – digital	30
	6.2.5 Mounting the transmitter housing:	
	Proline 500	32
	6.2.6 Turning the transmitter housing:	
	Proline 500	33
	6.2.7 Turning the display module: Proline	
	500	33
6.3	Post-installation check	34
7		35
7.1	Electrical safety	35
7.2	Connecting requirements	35
	7.2.1 Required tools	35
	7.2.2 Requirements for connecting cable	35
	7.2.3 Terminal assignment	40
	7.2.4 Shielding and grounding	40
	7.2.5 Preparing the measuring device	41
7.3	Connecting the measuring device: Proline	
	500 – digital	42
	7.3.1 Connecting the connecting cable	42
	7.3.2 Connecting the signal cable and the	
	supply voltage cable	47
7.4	Connecting the measuring device: Proline 500	49
	7.4.1 Connecting the connecting cable	49
	7.4.2 Connecting the signal cable and the	чJ
	supply voltage cable	53
7.5	Potential equalization	55
1.5	7.5.1 Requirements	55
7.6	Special connection instructions	56
	7.6.1 Connection examples	56
7.7	Hardware settings	59
	7.7.1 Setting the device address	59
	7.7.2 Activating the terminating resistor	61
7.8	Ensuring the degree of protection	62
7.9	Post-connection check	63
8	Operation options	64
8.1 8.2	Overview of operation options Structure and function of the operating	64
	menu	65
	8.2.1 Structure of the operating menu	65

8.2.1Structure of the operating menu658.2.2Operating philosophy66

8.3	Access to the operating menu via the local	<i>(</i> 7
	display	67
	8.3.1 Operational display	67
	8.3.2 Navigation view	69
	8.3.3 Editing view	71
	8.3.4 Operating elements	73
	8.3.5 Opening the context menu	
	8.3.6 Navigating and selecting from list	75
	8.3.7 Calling the parameter directly	75
	8.3.8 Calling up help text	76
	8.3.9 Changing the parameters	76
	8.3.10 User roles and related access	
	authorization	77
	8.3.11 Disabling write protection via access	
	code	77
	8.3.12 Enabling and disabling the keypad	
	lock	78
8.4	Access to the operating menu via the Web	
	browser	78
	8.4.1 Function scope	78
	8.4.2 Requirements	79
	8.4.3 Establishing a connection	80
	8.4.4 Logging on	82
	8.4.5 User interface	83
	8.4.6 Disabling the Web server	84
	8.4.7 Logging out	84
8.5	Access to the operating menu via the	
	operating tool	85
	8.5.1 Connecting the operating tool	85
	8.5.2 FieldCare	
		88
	8.5.3 DeviceCare	88 89
9		
-	8.5.3 DeviceCare	89 90
9 9.1	8.5.3 DeviceCare System integration Overview of device description files	89 90 90
-	 8.5.3 DeviceCare System integration Overview of device description files 9.1.1 Current version data for the device 	89 90 90 90
9.1	 8.5.3 DeviceCare System integration Overview of device description files 9.1.1 Current version data for the device 9.1.2 Operating tools 	89 90 90 90
9.1 9.2	 8.5.3 DeviceCare System integration Overview of device description files 9.1.1 Current version data for the device 9.1.2 Operating tools Compatibility with earlier model 	89 90 90 90 90
9.1	 8.5.3 DeviceCare System integration Overview of device description files 9.1.1 Current version data for the device 9.1.2 Operating tools Compatibility with earlier model Modbus RS485 information 	89 90 90 90 90 90 91
9.1 9.2	 8.5.3 DeviceCare System integration Overview of device description files 9.1.1 Current version data for the device 9.1.2 Operating tools Scompatibility with earlier model Modbus RS485 information 9.3.1 Function codes 	89 90 90 90 90 90 91 91
9.1 9.2	 8.5.3 DeviceCare System integration Overview of device description files 9.1.1 Current version data for the device 9.1.2 Operating tools Compatibility with earlier model Modbus RS485 information 9.3.1 Function codes 9.3.2 Register information 	89 90 90 90 90 91 91 92
9.1 9.2	 8.5.3 DeviceCare System integration Overview of device description files 9.1.1 Current version data for the device 9.1.2 Operating tools 9.1.2 Operating tools Compatibility with earlier model Modbus RS485 information 9.3.1 Function codes 9.3.2 Register information 9.3.3 Response time 	89 90 90 90 91 91 92 92
9.1 9.2	 8.5.3 DeviceCare System integration Overview of device description files 9.1.1 Current version data for the device 9.1.2 Operating tools Compatibility with earlier model Modbus RS485 information 9.3.1 Function codes 9.3.2 Register information 9.3.3 Response time 9.3.4 Data types 	89 90 90 90 90 91 91 92 92 92
9.1 9.2	 8.5.3 DeviceCare System integration Overview of device description files 9.1.1 Current version data for the device 9.1.2 Operating tools 9.1.2 Operating tools Compatibility with earlier model Modbus RS485 information 9.3.1 Function codes 9.3.2 Register information 9.3.3 Response time 9.3.4 Data types 9.3.5 Byte transmission sequence 	89 90 90 90 91 91 92 92 92 92 93
9.1 9.2	 8.5.3 DeviceCare System integration Overview of device description files 9.1.1 Current version data for the device 9.1.2 Operating tools 9.1.2 Operating tools Compatibility with earlier model Modbus RS485 information 9.3.1 Function codes 9.3.2 Register information 9.3.3 Response time 9.3.4 Data types 	89 90 90 90 90 91 91 92 92 92
9.1 9.2	 8.5.3 DeviceCare System integration Overview of device description files 9.1.1 Current version data for the device 9.1.2 Operating tools 9.1.2 Operating tools Compatibility with earlier model Modbus RS485 information 9.3.1 Function codes 9.3.2 Register information 9.3.3 Response time 9.3.4 Data types 9.3.5 Byte transmission sequence 	89 90 90 90 91 91 92 92 92 92 93
9.1 9.2 9.3 10	 8.5.3 DeviceCare System integration Overview of device description files 9.1.1 Current version data for the device 9.1.2 Operating tools Compatibility with earlier model Modbus RS485 information 9.3.1 Function codes 9.3.2 Register information 9.3.3 Response time 9.3.4 Data types 9.3.5 Byte transmission sequence 9.3.6 Modbus data map 	 89 90 90 90 90 91 91 92 92 92 93 93 96
9.1 9.2 9.3 10 10.1	8.5.3DeviceCareSystem integrationOverview of device description files9.1.1Current version data for the device9.1.2Operating toolsCompatibility with earlier modelModbus RS485 information9.3.1Function codes9.3.2Register information9.3.3Response time9.3.4Data types9.3.5Byte transmission sequence9.3.6Modbus data mapFunction check	 89 90 90 90 90 91 92 92 93 93 96
9.1 9.2 9.3 10 10.1 10.2	8.5.3DeviceCareSystem integrationOverview of device description files9.1.1Current version data for the device9.1.2Operating toolsCompatibility with earlier modelModbus RS485 information9.3.1Function codes9.3.2Register information9.3.3Response time9.3.4Data types9.3.5Byte transmission sequence9.3.6Modbus data mapFunction checkSwitching on the measuring device	 89 90 90 90 90 91 92 92 93 93 96 96
9.1 9.2 9.3 10 10.1 10.2 10.3	8.5.3DeviceCareSystem integrationOverview of device description files9.1.1Current version data for the device9.1.2Operating toolsCompatibility with earlier modelModbus RS485 information9.3.1Function codes9.3.2Register information9.3.3Response time9.3.4Data types9.3.5Byte transmission sequence9.3.6Modbus data mapFunction checkSwitching on the measuring deviceSetting the operating language	 89 90 90 90 90 91 92 92 93 93 96 96 96 96
9.1 9.2 9.3 10 10.1 10.2	8.5.3DeviceCareSystem integrationOverview of device description files9.1.1Current version data for the device9.1.2Operating toolsCompatibility with earlier modelModbus RS485 information9.3.1Function codes9.3.2Register information9.3.3Response time9.3.4Data types9.3.5Byte transmission sequence9.3.6Modbus data mapFunction checkSwitching on the measuring deviceSetting the operating languageConfiguring the measuring device	 89 90 90 90 90 91 92 92 93 93 96 96 96 96 96 96 96
9.1 9.2 9.3 10 10.1 10.2 10.3	8.5.3DeviceCareSystem integrationOverview of device description files9.1.1Current version data for the device9.1.2Operating toolsCompatibility with earlier modelModbus RS485 information9.3.1Function codes9.3.2Register information9.3.3Response time9.3.4Data types9.3.5Byte transmission sequence9.3.6Modbus data mapFunction checkSwitching on the measuring deviceSetting the operating languageConfiguring the measuring device10.4.1Defining the tag name	 89 90 90 90 90 91 91 92 92 93 93 96 96 96 96 96 98
9.1 9.2 9.3 10 10.1 10.2 10.3	8.5.3DeviceCareSystem integrationOverview of device description files9.1.1Current version data for the device9.1.2Operating toolsCompatibility with earlier modelModbus RS485 information9.3.1Function codes9.3.2Register information9.3.3Response time9.3.4Data types9.3.5Byte transmission sequence9.3.6Modbus data mapFunction checkSwitching on the measuring deviceSetting the operating languageConfiguring the measuring device10.4.1Defining the tag name10.4.2Setting the system units	 89 90 90 90 90 91 92 92 93 93 96 96 96 96 96 96 96
9.1 9.2 9.3 10 10.1 10.2 10.3	8.5.3DeviceCareSystem integrationOverview of device description files9.1.1Current version data for the device9.1.2Operating toolsCompatibility with earlier modelModbus RS485 information9.3.1Function codes9.3.2Register information9.3.3Response time9.3.4Data types9.3.5Byte transmission sequence9.3.6Modbus data mapFunction checkSwitching on the measuring deviceSetting the operating languageConfiguring the tag name10.4.1Defining the tag name10.4.3Configuring the communication	 89 90 90 90 91 92 92 93 93 96 96 96 96 96 98 98
9.1 9.2 9.3 10 10.1 10.2 10.3	8.5.3 DeviceCare System integration Overview of device description files 9.1.1 Current version data for the device 9.1.2 Operating tools Compatibility with earlier model Modbus RS485 information 9.3.1 Function codes 9.3.2 Register information 9.3.3 Response time 9.3.4 Data types 9.3.5 Byte transmission sequence 9.3.6 Modbus data map Switching on the measuring device Setting the operating language Configuring the measuring device 10.4.1 Defining the tag name 10.4.2 Setting the system units 10.4.3 Configuring the communication interface 10.4.3	 89 90 90 90 91 92 92 93 93 96 96 96 96 96 96 98 98 100
9.1 9.2 9.3 10 10.1 10.2 10.3	 8.5.3 DeviceCare	89 90 90 90 91 92 92 92 93 93 93 96 96 96 96 96 96 96 98 98 100
9.1 9.2 9.3 10 10.1 10.2 10.3	 8.5.3 DeviceCare	89 90 90 90 91 92 92 92 93 93 93 93 96 96 96 96 96 96 96 96 96 96 91 100
9.1 9.2 9.3 10 10.1 10.2 10.3	 8.5.3 DeviceCare	89 90 90 90 91 92 92 92 93 93 93 96 96 96 96 96 96 96 98 98 100

		figuring the current output	107
		nfiguring the pulse/frequency/	
		tch output	112
		figuring the relay output	121
		figuring the double pulse output	124
		figuring the local display	125
		figuring the low flow cut off	130
		figuring partially filled pipe	101
10 F		ection	131
10.5		ettings	132
		ng the parameter to enter the ess code	133
		culated process variables	133
		rying out a sensor adjustment	134
		figuring the totalizer	138
		rying out additional display	190
		figurations	140
		AN configuration	146
		figuration management	148
		ng parameters for device	
		ninistration	149
10.6	Simulation .		151
10.7	Protecting s	ettings from unauthorized access	154
		ite protection via access code	154
		ite protection via write protection	
	swi	tch	155
	•		1 - 0
11	Operation	1	158
11.1	Reading off	the device locking status	1 5 0
			158
11.2	Adjusting th	ne operating language	158
11.3	Adjusting th Configuring	ne operating language the display	158 158
	Adjusting th Configuring Reading me	ne operating language	158 158 158
11.3	Adjusting th Configuring Reading me 11.4.1 "Me	the display	158 158 158 159
11.3	Adjusting th Configuring Reading me 11.4.1 "Me 11.4.2 "Tot	the operating language	158 158 158 159 169
11.3	Adjusting th Configuring Reading me 11.4.1 "Me 11.4.2 "Tot 11.4.3 "Inp	ne operating language the display	158 158 158 159 169 170
11.3 11.4	Adjusting th Configuring Reading me 11.4.1 "Me 11.4.2 "Tot 11.4.3 "Inp 11.4.4 Out	ne operating language	158 158 158 159 169
11.3	Adjusting the Configuring Reading me 11.4.1 "Me 11.4.2 "Tot 11.4.3 "Inp 11.4.4 Out Adapting the	ne operating language	158 158 158 159 169 170 171
11.3 11.4 11.5	Adjusting the Configuring Reading me 11.4.1 "Me 11.4.2 "Tot 11.4.3 "Inp 11.4.4 Out Adapting the conditions.	he operating language	158 158 159 169 170 171
11.3 11.4	Adjusting th Configuring Reading me 11.4.1 "Me 11.4.2 "Tot 11.4.3 "Inp 11.4.4 Out Adapting th conditions. Performing	he operating language	158 158 158 159 169 170 171
11.3 11.4 11.5	Adjusting the Configuring Reading me 11.4.1 "Me 11.4.2 "Tot 11.4.3 "Inp 11.4.4 Out Adapting the conditions . Performing 11.6.1 Fur	he operating language the display	158 158 159 169 170 171 173
11.3 11.4 11.5	Adjusting th Configuring Reading me 11.4.1 "Me 11.4.2 "Tot 11.4.3 "Inp 11.4.4 Out Adapting th conditions . Performing 11.6.1 Fur par	ne operating language	158 158 159 169 170 171
11.3 11.4 11.5	Adjusting the Configuring Reading me 11.4.1 "Me 11.4.2 "Tot 11.4.3 "Inp 11.4.4 Out Adapting the conditions . Performing 11.6.1 Fur par 11.6.2 Fur	he operating language	158 158 159 169 170 171 173
11.3 11.4 11.5	Adjusting th Configuring Reading me 11.4.1 "Me 11.4.2 "Tot 11.4.3 "Inp 11.4.4 Out Adapting th conditions . Performing 11.6.1 Fur par 11.6.2 Fur tota	ne operating language	158 158 159 169 170 171 173 173 175
11.3 11.4 11.5 11.6	Adjusting th Configuring Reading me 11.4.1 "Me 11.4.2 "Tot 11.4.3 "Inp 11.4.4 Out Adapting th conditions . Performing 11.6.1 Fun 11.6.2 Fun tota Show data l Gas Fraction	he operating language	158 158 159 169 170 171 173 173 175 175 175 179
11.3 11.4 11.5 11.6 11.7	Adjusting the Configuring Reading me 11.4.1 "Me 11.4.2 "Tot 11.4.3 "Inp 11.4.4 Out Adapting the conditions . Performing 11.6.1 Fur par 11.6.2 Fur tota Show data I Gas Fraction 11.8.1 "Me	he operating language the display	158 158 159 169 170 171 173 173 175 175 175 179 179
11.3 11.4 11.5 11.6 11.7	Adjusting the Configuring Reading me 11.4.1 "Me 11.4.2 "Tot 11.4.3 "Inp 11.4.4 Out Adapting the conditions . Performing 11.6.1 Fur par 11.6.2 Fur tota Show data I Gas Fraction 11.8.1 "Me	he operating language	158 158 159 169 170 171 173 173 175 175 175 179
11.3 11.4 11.5 11.6 11.7 11.8	Adjusting th Configuring Reading me 11.4.1 "Me 11.4.2 "Tot 11.4.3 "Inp 11.4.4 Out Adapting th conditions . Performing 11.6.1 Fur tota Show data I Gas Fraction 11.8.1 "Me 11.8.2 "Me	he operating language	158 158 159 169 170 171 173 173 175 175 175 179 179 180
 11.3 11.4 11.5 11.6 11.7 11.8 12 	Adjusting th Configuring Reading me 11.4.1 "Me 11.4.2 "Tot 11.4.3 "Inp 11.4.4 Out Adapting th conditions . Performing 11.6.1 Fur par 11.6.2 Fur tota Show data I Gas Fraction 11.8.1 "Me 11.8.2 "Me	he operating language	158 158 159 169 170 171 173 173 175 175 175 179 179 180 181
11.3 11.4 11.5 11.6 11.7 11.8 12 12.1	Adjusting the Configuring Reading me 11.4.1 "Me 11.4.2 "Tot 11.4.3 "Inp 11.4.4 Out Adapting the conditions . Performing 11.6.1 Fur par 11.6.2 Fur tota Show data le Gas Fraction 11.8.1 "Me 11.8.2 "Me Diagnosti General trou	ne operating language	158 158 159 169 170 171 173 173 175 175 175 179 179 180
 11.3 11.4 11.5 11.6 11.7 11.8 12 	Adjusting th Configuring Reading me 11.4.1 "Me 11.4.2 "Tot 11.4.3 "Inp 11.4.4 Out Adapting th conditions . Performing 11.6.1 Fun tota Show data I Gas Fraction 11.8.1 "Me 11.8.2 "Me Diagnosti General trou	he operating language	158 158 159 169 170 171 173 173 175 175 175 179 180 181 181
11.3 11.4 11.5 11.6 11.7 11.8 12 12.1	Adjusting th Configuring Reading me 11.4.1 "Me 11.4.2 "Tot 11.4.3 "Inp 11.4.4 Out Adapting th conditions . Performing 11.6.1 Fur tota Show data l Gas Fraction 11.8.1 "Me 11.8.2 "Me Diagnosti General trou Diagnostic i diodes	he operating language	158 158 159 169 170 171 173 175 175 175 175 179 179 180 181 181 183
11.3 11.4 11.5 11.6 11.7 11.8 12 12.1	Adjusting the Configuring Reading me 11.4.1 "Me 11.4.2 "Tot 11.4.3 "Inp 11.4.4 Out Adapting the conditions . Performing 11.6.1 Fur par 11.6.2 Fur tota Show data I Gas Fraction 11.8.1 "Me 11.8.2 "Me Diagnosti General trou Diagnostic i diodes 12.2.1 Tra	he operating language	158 158 159 169 170 171 173 175 175 175 175 179 179 180 181 181 183 183
 11.3 11.4 11.5 11.6 11.7 11.8 12 12.1 12.2 	Adjusting the Configuring Reading me 11.4.1 "Me 11.4.2 "Tot 11.4.3 "Inp 11.4.4 Out Adapting the conditions . Performing 11.6.1 Fur par 11.6.2 Fur tota Show data le Gas Fraction 11.8.1 "Me 11.8.2 "Me Diagnosti General trou Diagnostic i diodes 12.2.1 Tra 12.2.2 Sen	he operating language	158 158 159 169 170 171 173 173 175 175 175 179 179 180 181 183 183 183 185
11.3 11.4 11.5 11.6 11.7 11.8 12 12.1	Adjusting the Configuring Reading me 11.4.1 "Me 11.4.2 "Tot 11.4.3 "Inp 11.4.4 Out Adapting the conditions . Performing 11.6.1 Fur par 11.6.2 Fur tota Show data I Gas Fraction 11.8.1 "Me 11.8.2 "Me Diagnosti General trou Diagnostic i diodes 12.2.1 Tra 12.2.2 Sen Diagnostic i	he operating language	158 158 159 169 170 171 173 175 175 175 175 179 179 180 181 181 183 183

12.3.2 Calling up remedial measures 189

12.4	Diagnostic information in the Web browser .	189
	12.4.1 Diagnostic options	189
12.5	12.4.2 Calling up remedy information Diagnostic information in FieldCare or	190
12.7	DeviceCare	190
	12.5.1 Diagnostic options	190
	12.5.2 Calling up remedy information	191
12.6	Diagnostic information via communication	
	interface	192
	12.6.1 Reading out diagnostic information12.6.2 Configuring error response mode	192 192
12.7	Adapting the diagnostic information	192
10.7	12.7.1 Adapting the diagnostic behavior	192
12.8	Overview of diagnostic information	193
12.9	Pending diagnostic events	198
12.10		198
12.11	Event logbook 12.11.1 Reading out the event logbook	199 199
	12.11.2 Filtering the event logbook	200
	12.11.3 Overview of information events	200
12.12	Resetting the measuring device	201
	12.12.1 Function scope of "Device reset"	
	parameter	202
	Device information	202
	Firmware history	204
12.10	Device history and compatibility	206
13	Maintenance	207
13.1	Maintenance tasks	207
		207
	13.1.1 Exterior cleaning	207
	13.1.1Exterior cleaning13.1.2Interior cleaning	207 207
13.2	13.1.1 Exterior cleaning13.1.2 Interior cleaningMeasuring and test equipment	207 207 207
13.2 13.3	13.1.1Exterior cleaning13.1.2Interior cleaning	207 207
	13.1.1 Exterior cleaning13.1.2 Interior cleaningMeasuring and test equipmentEndress+Hauser services	207 207 207
13.3	13.1.1 Exterior cleaning13.1.2 Interior cleaningMeasuring and test equipmentEndress+Hauser servicesRepair	207 207 207 207
13.3 14	13.1.1 Exterior cleaning13.1.2 Interior cleaningMeasuring and test equipmentEndress+Hauser services	207 207 207 207 207
13.3 14 14.1	13.1.1 Exterior cleaning13.1.2 Interior cleaningMeasuring and test equipmentEndress+Hauser servicesRepairGeneral information14.1.1 Repair and conversion concept14.1.2 Notes for repair and conversion	207 207 207 207 208 208 208 208
13.31414.114.2	13.1.1 Exterior cleaning13.1.2 Interior cleaningMeasuring and test equipmentEndress+Hauser servicesRepairGeneral information14.1.1 Repair and conversion concept14.1.2 Notes for repair and conversionSpare parts	207 207 207 207 208 208 208 208 208
 13.3 14 14.1 14.2 14.3 	13.1.1 Exterior cleaning13.1.2 Interior cleaningMeasuring and test equipmentEndress+Hauser servicesRepairGeneral information14.1.1 Repair and conversion concept14.1.2 Notes for repair and conversionSpare partsEndress+Hauser services	207 207 207 207 208 208 208 208 208 208
 13.3 14 14.1 14.2 14.3 14.4 	13.1.1 Exterior cleaning13.1.2 Interior cleaningMeasuring and test equipmentEndress+Hauser servicesRepairGeneral information14.1.1 Repair and conversion concept14.1.2 Notes for repair and conversionSpare partsEndress+Hauser servicesReturn	207 207 207 207 208 208 208 208 208 208 208
 13.3 14 14.1 14.2 14.3 	13.1.1 Exterior cleaning13.1.2 Interior cleaningMeasuring and test equipmentEndress+Hauser servicesRepairGeneral information14.1.1 Repair and conversion concept14.1.2 Notes for repair and conversionSpare partsEndress+Hauser servicesReturnDisposal	207 207 207 207 208 208 208 208 208 208 208 208 208
 13.3 14 14.1 14.2 14.3 14.4 	13.1.1 Exterior cleaning13.1.2 Interior cleaningMeasuring and test equipmentEndress+Hauser servicesRepairGeneral information14.1.1 Repair and conversion concept14.1.2 Notes for repair and conversionSpare partsEndress+Hauser servicesReturn	207 207 207 207 208 208 208 208 208 208 208
13.3 14 14.1 14.2 14.3 14.4 14.5	13.1.1 Exterior cleaning13.1.2 Interior cleaningMeasuring and test equipmentEndress+Hauser servicesRepairGeneral information14.1.1 Repair and conversion concept14.1.2 Notes for repair and conversionSpare partsEndress+Hauser servicesReturnDisposal14.5.1 Removing the measuring device14.5.2 Disposing of the measuring device	207 207 207 207 208 208 208 208 208 208 208 208 208 209 209 209
13.3 14 14.1 14.2 14.3 14.4 14.5 15	13.1.1 Exterior cleaning13.1.2 Interior cleaningMeasuring and test equipmentEndress+Hauser servicesRepairGeneral information14.1.1 Repair and conversion concept14.1.2 Notes for repair and conversionSpare partsEndress+Hauser servicesReturnDisposal14.5.1 Removing the measuring device14.5.2 Disposing of the measuring device	207 207 207 207 208 208 208 208 208 208 208 208 209 209 209 209
13.3 14 14.1 14.2 14.3 14.4 14.5	13.1.1 Exterior cleaning13.1.2 Interior cleaningMeasuring and test equipmentEndress+Hauser servicesRepairGeneral information14.1.1 Repair and conversion concept14.1.2 Notes for repair and conversionSpare partsEndress+Hauser servicesReturnDisposal14.5.1 Removing the measuring device14.5.2 Disposing of the measuring deviceDevice-specific accessories	207 207 207 207 208 208 208 208 208 208 208 208 209 209 209 209 209
13.3 14 14.1 14.2 14.3 14.4 14.5 15	13.1.1 Exterior cleaning13.1.2 Interior cleaningMeasuring and test equipmentEndress+Hauser servicesRepairGeneral information14.1.1 Repair and conversion concept14.1.2 Notes for repair and conversionSpare partsEndress+Hauser servicesReturnDisposal14.5.1 Removing the measuring device14.5.2 Disposing of the measuring device14.5.1 For the transmitter	207 207 207 207 208 208 208 208 208 208 208 208 209 209 209 209 209 209
13.3 14 14.1 14.2 14.3 14.4 14.5 15	13.1.1 Exterior cleaning13.1.2 Interior cleaningMeasuring and test equipmentEndress+Hauser servicesRepairGeneral information14.1.1 Repair and conversion concept14.1.2 Notes for repair and conversionSpare partsEndress+Hauser servicesReturnDisposal14.5.1 Removing the measuring device14.5.2 Disposing of the measuring deviceDevice-specific accessories	207 207 207 207 208 208 208 208 208 208 208 208 209 209 209 209 209
 13.3 14 14.1 14.2 14.3 14.4 14.5 15 15.1	13.1.1 Exterior cleaning13.1.2 Interior cleaningMeasuring and test equipmentEndress+Hauser servicesRepairGeneral information14.1.1 Repair and conversion concept14.1.2 Notes for repair and conversionSpare partsEndress+Hauser servicesReturnDisposal14.5.1 Removing the measuring device14.5.2 Disposing of the measuring device14.5.2 Disposing of the measuring device15.1.1 For the transmitter15.1.2 For the sensor	207 207 207 207 208 208 208 208 208 208 208 208 209 209 209 209 209 209 209
13.3 14 14.1 14.2 14.3 14.4 14.5 15 15.1 15.2	13.1.1Exterior cleaning13.1.2Interior cleaningMeasuring and test equipmentEndress+Hauser servicesEndress+Hauser servicesSeneral information14.1.1Repair and conversion concept14.1.2Notes for repair and conversionSpare partsSpare partsEndress+Hauser servicesReturnDisposalSeneral device14.5.1Removing the measuring device14.5.2Disposing of the measuring device15.1.1For the transmitter15.1.2For the sensorService-specific accessoriesService-specific accessoriesSystem componentsSystem components	207 207 207 207 208 208 208 208 208 208 208 208 209 209 209 209 209 209 209 210 210 210 211 212 212
13.3 14 14.1 14.2 14.3 14.4 14.5 15 15.1 15.2 15.3 16	13.1.1 Exterior cleaning13.1.2 Interior cleaningMeasuring and test equipmentEndress+Hauser servicesRepairGeneral information14.1.1 Repair and conversion concept14.1.2 Notes for repair and conversionSpare partsEndress+Hauser servicesReturnDisposal14.5.1 Removing the measuring device14.5.2 Disposing of the measuring device14.5.2 Disposing of the measuring device15.1.1 For the transmitter15.1.2 For the sensorService-specific accessoriesSystem componentsSystem components	207 207 207 207 208 208 208 208 208 208 208 209 209 209 209 209 209 209 209 209 210 210 211 212 212 212
 13.3 14 14.1 14.2 14.3 14.4 14.5 15 15.1 15.2 15.3 	13.1.1Exterior cleaning13.1.2Interior cleaningMeasuring and test equipmentEndress+Hauser servicesEndress+Hauser servicesSeneral information14.1.1Repair and conversion concept14.1.2Notes for repair and conversionSpare partsSpare partsEndress+Hauser servicesReturnDisposalSeneral device14.5.1Removing the measuring device14.5.2Disposing of the measuring device15.1.1For the transmitter15.1.2For the sensorService-specific accessoriesService-specific accessoriesSystem componentsSystem components	207 207 207 207 208 208 208 208 208 208 208 208 209 209 209 209 209 209 209 210 210 210 211 212 212
13.3 14 14.1 14.2 14.3 14.4 14.5 15 15.1 15.2 15.3 16 16.1	13.1.1 Exterior cleaning13.1.2 Interior cleaningMeasuring and test equipmentEndress+Hauser servicesRepairGeneral information14.1.1 Repair and conversion concept14.1.2 Notes for repair and conversionSpare partsEndress+Hauser servicesReturnDisposal14.5.1 Removing the measuring device14.5.2 Disposing of the measuring device15.1.1 For the transmitter15.1.2 For the sensorSystem componentsSystem componentsApplication	207 207 207 207 208 208 208 208 208 208 208 209 209 209 209 209 209 209 209 209 210 210 211 212 212 212 212 213

16.4	Output	217
16.5	Power supply	222
16.6	Performance characteristics	223
16.7	Installation	228
16.8	Environment	229
16.9	Process	230
16.10	Custody transfer	235
16.11	Mechanical construction	235
16.12	Operability	239
16.13	Certificates and approvals	243
16.14	Application packages	246
	Accessories	248
16.16	Supplementary documentation	248

Index 250

1 About this document

1.1 Document function

These Operating Instructions contain all the information required in the various life cycle phases of the device: from product identification, incoming acceptance and storage, to installation, connection, operation and commissioning, through to troubleshooting, maintenance and disposal.

1.2 Symbols

1.2.1 Safety symbols

DANGER

This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury.

A WARNING

This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.

A CAUTION

This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or medium injury.

NOTICE

This symbol contains information on procedures and other facts which do not result in personal injury.

1.2.2 Electrical symbols

Symbol	Meaning
	Direct current
\sim	Alternating current
\sim	Direct current and alternating current
<u>+</u>	Ground connection A grounded terminal which, as far as the operator is concerned, is grounded via a grounding system.
	Potential equalization connection (PE: protective earth) Ground terminals that must be connected to ground prior to establishing any other connections.
	The ground terminals are located on the interior and exterior of the device:Interior ground terminal: potential equalization is connected to the supply network.Exterior ground terminal: device is connected to the plant grounding system.

1.2.3 Communication-specific symbols

Symbol	Meaning
((:-	Wireless Local Area Network (WLAN) Communication via a wireless, local network.
	LED Light emitting diode is off.

Symbol	Meaning
Ϋ́.	LED Light emitting diode is on.
	LED Light emitting diode is flashing.

1.2.4 Tool symbols

Symbol	Meaning
€	Torx screwdriver
	Phillips head screwdriver
Ń	Open-ended wrench

1.2.5 Symbols for certain types of information

Symbol	Meaning
	Permitted Procedures, processes or actions that are permitted.
	Preferred Procedures, processes or actions that are preferred.
×	Forbidden Procedures, processes or actions that are forbidden.
1	Tip Indicates additional information.
Ĩ	Reference to documentation
	Reference to page
	Reference to graphic
	Notice or individual step to be observed
1., 2., 3	Series of steps
4	Result of a step
?	Help in the event of a problem
	Visual inspection

1.2.6 Symbols in graphics

Symbol	Meaning
1, 2, 3,	Item numbers
1., 2., 3.,	Series of steps
A, B, C,	Views
A-A, B-B, C-C,	Sections
EX	Hazardous area

Symbol	Meaning
×	Safe area (non-hazardous area)
≈ →	Flow direction

1.3 Documentation

For an overview of the scope of the associated Technical Documentation, refer to the following:

- *W@M Device Viewer* (www.endress.com/deviceviewer): Enter the serial number from the nameplate
- *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the matrix code on the nameplate

1.3.1 Document function

Document type	Purpose and content of the document
Technical Information (TI)	Planning aid for your device The document contains all the technical data on the device and provides an overview of the accessories and other products that can be ordered for the device.
Brief Operating Instructions (KA)	Guide that takes you quickly to the 1st measured value The Brief Operating Instructions contain all the essential information from incoming acceptance to initial commissioning.
Operating Instructions (BA)	Your reference guide These Operating Instructions contain all the information that is required in the various life cycle phases of the device: from product identification, incoming acceptance and storage, to mounting, connection, operation and commissioning, through to troubleshooting, maintenance and disposal.
Description of Device Parameters (GP)	Reference for your parameters The document provides a detailed explanation of each individual parameter. The description is aimed at those who work with the device over the entire life cycle and perform specific configurations.
Safety Instructions (XA)	Depending on the approval, safety instructions for electrical equipment in hazardous areas are also supplied with the device. They are an integral part of the Operating Instructions. The nameplate indicates which Safety Instructions (XA) apply to the device in question.
Supplementary device-dependent documentation	Additional documents are supplied depending on the device version ordered: Always comply strictly with the instructions in the supplementary documentation. The supplementary documentation is an integral part of the device documentation.

1.4 Registered trademarks

Modbus®

Registered trademark of SCHNEIDER AUTOMATION, INC.

TRI-CLAMP®

Registered trademark of Ladish & Co., Inc., Kenosha, USA

2 Safety instructions

2.1 Requirements for the personnel

The personnel for installation, commissioning, diagnostics and maintenance must fulfill the following requirements:

- Trained, qualified specialists must have a relevant qualification for this specific function and task.
- Are authorized by the plant owner/operator.
- Are familiar with federal/national regulations.
- Before starting work, read and understand the instructions in the manual and supplementary documentation as well as the certificates (depending on the application).
- ► Follow instructions and comply with basic conditions.

The operating personnel must fulfill the following requirements:

- Are instructed and authorized according to the requirements of the task by the facility's owner-operator.
- ▶ Follow the instructions in this manual.

2.2 Intended use

Application and media

The measuring device described in this manual is intended only for the flow measurement of liquids and gases.

Depending on the version ordered, the measuring device can also measure potentially explosive, flammable, poisonous and oxidizing media.

Measuring devices for use in hazardous areas, in hygienic applications or in applications where there is an increased risk due to process pressure, are marked accordingly on the nameplate.

To ensure that the measuring device remains in proper condition for the operation time:

- Keep within the specified pressure and temperature range.
- Only use the measuring device in full compliance with the data on the nameplate and the general conditions listed in the Operating Instructions and supplementary documentation.
- Based on the nameplate, check whether the ordered device is permitted for the intended use in the hazardous area (e.g. explosion protection, pressure vessel safety).
- Use the measuring device only for media to which the process-wetted materials are sufficiently resistant.
- If the ambient temperature of the measuring device is outside the atmospheric temperature, it is absolutely essential to comply with the relevant basic conditions as specified in the device documentation → <a> 8.
- Protect the measuring device permanently against corrosion from environmental influences.

Incorrect use

Non-designated use can compromise safety. The manufacturer is not liable for damage caused by improper or non-designated use.

WARNING

Danger of breakage due to corrosive or abrasive fluids and ambient conditions!

- ► Verify the compatibility of the process fluid with the sensor material.
- Ensure the resistance of all fluid-wetted materials in the process.
- ► Keep within the specified pressure and temperature range.

NOTICE

Verification for borderline cases:

For special fluids and fluids for cleaning, Endress+Hauser is glad to provide assistance in verifying the corrosion resistance of fluid-wetted materials, but does not accept any warranty or liability as minute changes in the temperature, concentration or level of contamination in the process can alter the corrosion resistance properties.

Residual risks

WARNING

If the temperature of the media or electronics unit is high or low, this may cause the surfaces of the device to become hot or cold. This poses a risk of burns or frostbite!

 In the case of hot or cold medium temperatures, install appropriate protection against contact.

WARNING

Danger of housing breaking due to measuring tube breakage!

If a measuring tube ruptures, the pressure inside the sensor housing will rise according to the operating process pressure.

Use a rupture disk.

WARNING

Danger from medium escaping!

For device versions with a rupture disk: medium escaping under pressure can cause injury or material damage.

• Take precautions to prevent injury and material damage if the rupture disk is actuated.

2.3 Workplace safety

When working on and with the device:

▶ Wear the required personal protective equipment as per national regulations.

2.4 Operational safety

Risk of injury!

- Operate the device only if it is in proper technical condition, free from errors and faults.
- The operator is responsible for the interference-free operation of the device.

Modifications to the device

Unauthorized modifications to the device are not permitted and can lead to unforeseeable dangers!

► If modifications are nevertheless required, consult with the manufacturer.

Repair

To ensure continued operational safety and reliability:

- Carry out repairs on the device only if they are expressly permitted.
- Observe federal/national regulations pertaining to the repair of an electrical device.
- Use only original spare parts and accessories.

2.5 Product safety

This measuring device is designed in accordance with good engineering practice to meet state-of-the-art safety requirements, has been tested, and left the factory in a condition in which it is safe to operate.

It meets general safety standards and legal requirements. It also complies with the EU directives listed in the device-specific EU Declaration of Conformity. Endress+Hauser confirms this by affixing the CE mark to the device.

Furthermore, the device meets the legal requirements of the applicable UK regulations (Statutory Instruments). These are listed in the UKCA Declaration of Conformity along with the designated standards.

By selecting the order option for UKCA marking, Endress+Hauser confirms a successful evaluation and testing of the device by affixing the UKCA mark.

Contact address Endress+Hauser UK: Endress+Hauser Ltd. Floats Road Manchester M23 9NF United Kingdom www.uk.endress.com

2.6 IT security

Our warranty is valid only if the product is installed and used as described in the Operating Instructions. The product is equipped with security mechanisms to protect it against any inadvertent changes to the settings.

IT security measures, which provide additional protection for the product and associated data transfer, must be implemented by the operators themselves in line with their security standards.

2.7 Device-specific IT security

The device offers a range of specific functions to support protective measures on the operator's side. These functions can be configured by the user and guarantee greater in-operation safety if used correctly. An overview of the most important functions is provided in the following section:

Function/interface	Factory setting	Recommendation
Write protection via hardware write protection switch $\Rightarrow \square 11$	Not enabled	On an individual basis following risk assessment
Access code (also applies for Web server login or FieldCare connection) $\rightarrow 12$	Not enabled (0000)	Assign a customized access code during commissioning
WLAN (order option in display module)	Enabled	On an individual basis following risk assessment
WLAN security mode	Enabled (WPA2- PSK)	Do not change
WLAN passphrase (password) → 🗎 12	Serial number	Assign a customized WLAN passphrase during commissioning
WLAN mode	Access point	On an individual basis following risk assessment
Web server $\rightarrow \square 13$	Enabled	On an individual basis following risk assessment
CDI-RJ45 service interface $\rightarrow \square$ 13	-	On an individual basis following risk assessment

2.7.1 Protecting access via hardware write protection

Write access to the parameters of the device via the local display, Web browser or operating tool (e.g. FieldCare, DeviceCare) can be disabled via a write protection switch

(DIP switch on the main electronics module). When hardware write protection is enabled, only read access to the parameters is possible.

Hardware write protection is disabled when the device is delivered $\rightarrow \cong 155$.

2.7.2 Protecting access via a password

Different passwords are available to protect write access to the device parameters or access to the device via the WLAN interface.

User-specific access code

Protect write access to the device parameters via the local display, Web browser or operating tool (e.g. FieldCare, DeviceCare). Access authorization is clearly regulated through the use of a user-specific access code.

WLAN passphrase

The network key protects a connection between an operating unit (e.g. notebook or tablet) and the device via the WLAN interface which can be ordered as an option.

Infrastructure mode

When the device is operated in infrastructure mode, the WLAN passphrase corresponds to the WLAN passphrase configured on the operator side.

User-specific access code

Write access to the device parameters via the local display, Web browser or operating tool (e.g. FieldCare, DeviceCare) can be protected by the modifiable, user-specific access code ($\rightarrow \cong 154$).

When the device is delivered, the device does not have an access code and is equivalent to 0000 (open).

WLAN passphrase: Operation as WLAN access point

A connection between an operating unit (e.g. notebook or tablet) and the device via the WLAN interface ($\rightarrow \bowtie$ 86), which can be ordered as an optional extra, is protected by the network key. The WLAN authentication of the network key complies with the IEEE 802.11 standard.

When the device is delivered, the network key is pre-defined depending on the device. It can be changed via the **WLAN settings** submenu in the **WLAN passphrase** parameter ($\rightarrow \triangleq 147$).

Infrastructure mode

A connection between the device and WLAN access point is protected by means of an SSID and passphrase on the system side. Please contact the relevant system administrator for access.

General notes on the use of passwords

- The access code and network key supplied with the device should be changed during commissioning.
- Follow the general rules for generating a secure password when defining and managing the access code or network key.
- The user is responsible for the management and careful handling of the access code and network key.
- For information on configuring the access code or on what to do if you lose the password, for example, see the "Write protection via access code" section →
 ¹⁵⁴

2.7.3 Access via Web server

The device can be operated and configured via a Web browser with the integrated Web server ($\rightarrow \square 78$). The connection is via the service interface (CDI-RJ45) or the WLAN interface.

The Web server is enabled when the device is delivered. The Web server can be disabled if necessary (e.g. after commissioning) via the **Web server functionality** parameter.

The device and status information can be hidden on the login page. This prevents unauthorized access to the information.

For detailed information on device parameters, see: The "Description of Device Parameters" document $\rightarrow \square 248$.

2.7.4 Access via service interface (CDI-RJ45)

The device can be connected to a network via the service interface (CDI-RJ45). Devicespecific functions guarantee the secure operation of the device in a network.

The use of relevant industrial standards and guidelines that have been defined by national and international safety committees, such as IEC/ISA62443 or the IEEE, is recommended. This includes organizational security measures such as the assignment of access authorization as well as technical measures such as network segmentation.



Transmitters with an Ex de approval may not be connected via the service interface (CDI-RJ45)!

Order code for "Approval transmitter + sensor", options (Ex de): BA, BB, C1, C2, GA, GB, MA, MB, NA, NB

3 Product description

The measuring system consists of a transmitter and a sensor. The transmitter and sensor are mounted in physically separate locations. They are interconnected by connecting cables.

3.1 Product design

Two versions of the transmitter are available.

3.1.1 Proline 500 – digital


Signal transmission: digital

Order code for "Integrated ISEM electronics", option A "Sensor"

For use in applications not required to meet special requirements due to ambient or operating conditions.

As the electronics are located in the sensor, the device is ideal: For simple transmitter replacement.

- A standard cable can be used as the connecting cable.
- Not sensitive to external EMC interference.

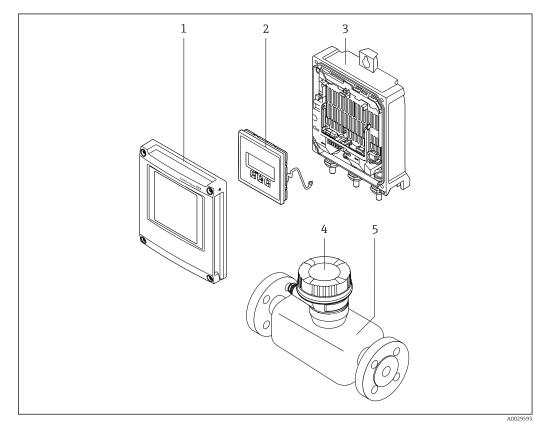

■ 1 Important components of a measuring device

- *1 Electronics compartment cover*
- 2 Display module
- 3 Transmitter housing
- 4 Sensor connection housing with integrated ISEM electronics: connecting cable connection
- 5 Sensor


3.1.2 Proline 500

Signal transmission: analog Order code for "Integrated ISEM electronics", option **B** "Transmitter"

For use in applications required to meet special requirements due to ambient or operating conditions.

As the electronics are located in the transmitter, the device is ideal in the event of:


- Strong vibrations at the sensor.
- Sensor operation in underground installations.
- Permanent sensor immersion in water.

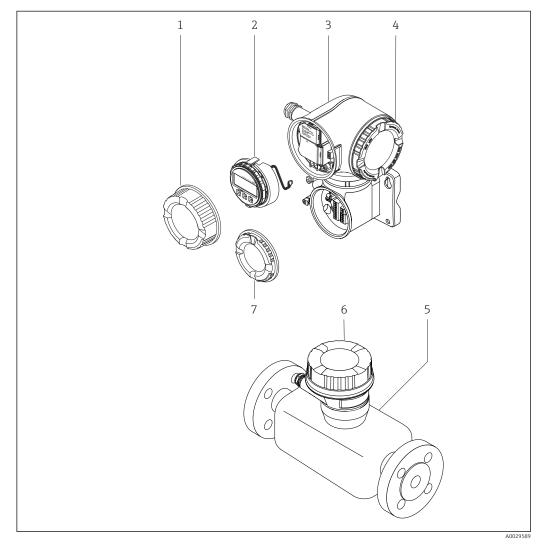

- Important components of a measuring device
- 1 Connection compartment cover
- 2 Display module
- *3* Transmitter housing with integrated ISEM electronics
- 4 Electronics compartment cover
- 5 Sensor
- 6 Sensor connection housing: connecting cable connection
- 7 Connection compartment cover: connecting cable connection

4 Incoming acceptance and product identification

4.1 Incoming acceptance

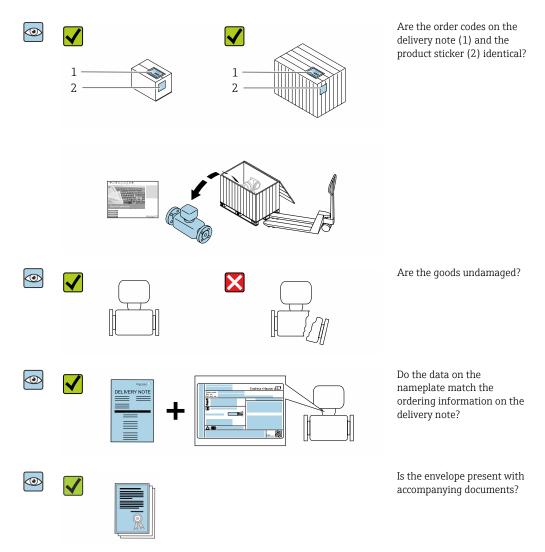

4.2 Product identification

The following options are available for identification of the device:


- Nameplate specifications
- Order code with breakdown of the device features on the delivery note
- Enter the serial numbers from the nameplates in the *Device Viewer* (www.endress.com/deviceviewer): all the information about the device is displayed.
- Enter the serial numbers from the nameplates into the *Endress+Hauser Operations App* or scan the DataMatrix code on the nameplate with the *Endress+Hauser Operations App*: all the information about the device is displayed.

For an overview of the scope of the associated Technical Documentation, refer to the following:

- The chapters "Additional standard documentation on the device" and "Supplementary device-dependent documentation"
- The *Device Viewer*: Enter the serial number from the nameplate (www.endress.com/deviceviewer)
- The *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the DataMatrix code on the nameplate.

4.2.1 Transmitter nameplate


Proline 500 – digital

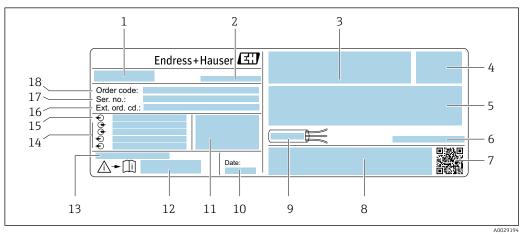

Example of a transmitter nameplate

- 1 Name of the transmitter
- 2 Place of manufacture
- *Space for approvals: use in hazardous areas*
- 4 Degree of protection
- 5 Electrical connection data: available inputs and outputs
- 6 Permitted ambient temperature (T_a)
- 7 2-D matrix code
- 8 Space for approvals and certificates: e.g. CE mark, RCM tick
- 9 Permitted temperature range for cable
- 10 Date of manufacture: year-month
- 11 Firmware version (FW) and device revision (Dev.Rev.) from the factory
- 12 Document number of safety-related supplementary documentation
- 13 Space for additional information in the case of special products
- 14 Available inputs and outputs, supply voltage
- 15 Electrical connection data: supply voltage
- 16 Extended order code (Ext. ord. cd.)
- 17 Serial number (Ser. no.)
- 18 Order code


Proline 500

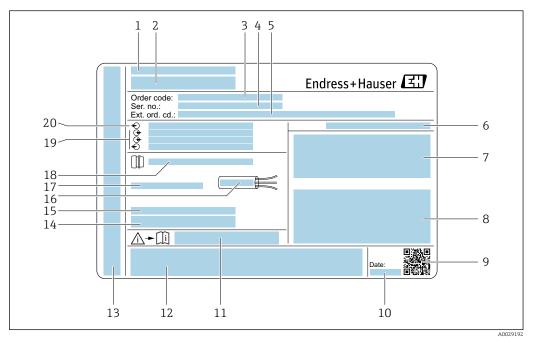

Example of a transmitter nameplate

- 1 Place of manufacture
- 2 Name of the transmitter
- 3 Order code
- 4 Serial number (Ser. no.)
- 5 Extended order code (Ext. ord. cd.)
- 6 Degree of protection
- 7 Space for approvals: use in hazardous areas
- 8 Electrical connection data: available inputs and outputs
- 9 2-D matrix code
- 10 Date of manufacture: year-month
- 11 Document number of safety-related supplementary documentation
- 12 Space for approvals and certificates: e.g. CE mark, RCM tick
- 13 Space for degree of protection of connection and electronics compartment when used in hazardous areas
- 14 Firmware version (FW) and device revision (Dev.Rev.) from the factory
- 15 Space for additional information in the case of special products
- 16 Permitted temperature range for cable
- 17 Permitted ambient temperature (T_a)
- 18 Information on cable gland
- 19 Available inputs and outputs, supply voltage
- 20 Electrical connection data: supply voltage

4.2.2 Sensor nameplate

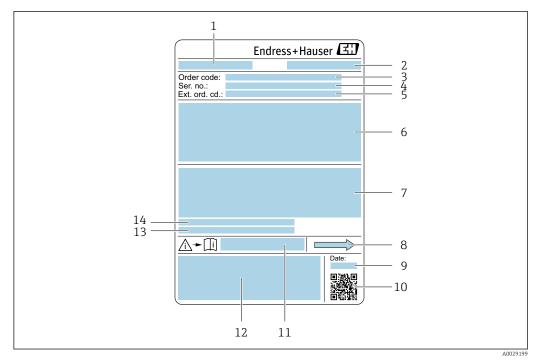

₽ 5 Example of a sensor nameplate

- Name of the sensor 1
- 2 Place of manufacture
- 3 Order code
- Serial number (Ser. no.) 4
- 5 Extended order code (Ext. ord. cd.)
- 6 Nominal diameter of the sensor; flange nominal diameter/nominal pressure; sensor test pressure; medium temperature range; material of measuring tube and manifold; sensor-specific information: e.g. pressure range of sensor housing, wide-range density specification (special density calibration)
- 7 Approval information for explosion protection, Pressure Equipment Directive and degree of protection
- Flow direction 8
- 9 Manufacturing date: year-month
- 10 2-D matrix code
- Document number of safety-related supplementary documentation 11
- CE mark, RCM-Tick mark 12
- 13 Surface roughness
- Permitted ambient temperature (T_a) 14



The measuring device is reordered using the order code.

Extended order code

- The device type (product root) and basic specifications (mandatory features) are always listed.
- Of the optional specifications (optional features), only the safety and approvalrelated specifications are listed (e.g. LA). If other optional specifications are also ordered, these are indicated collectively using the **#** placeholder symbol (e.g. **#LA#**).
- If the ordered optional specifications do not include any safety and approval-related specifications, they are indicated by the + placeholder symbol (e.g. XXXXXX-ABCDE +).

Symbol	Meaning	
Â	WARNING! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in service or fatal injury. To determine the nature of the potential hazard and the measures required to avoid it, consult the documentation accompanying the measuring device.	
	Reference to documentation Refers to the corresponding device documentation.	
	Protective ground connection A terminal which must be connected to ground prior to establishing any other connections.	

4.2.3 Symbols on measuring device

5 Storage and transport

5.1 Storage conditions


Observe the following notes for storage:

- Store in the original packaging to ensure protection from shock.
- Do not remove protective covers or protective caps installed on process connections. They prevent mechanical damage to the sealing surfaces and contamination in the measuring pipe.
- ▶ Protect from direct sunlight to avoid unacceptably high surface temperatures.
- ► Store in a dry and dust-free place.
- ► Do not store outdoors.

Storage temperature \rightarrow 🖺 229

5.2 Transporting the product

Transport the measuring device to the measuring point in the original packaging.

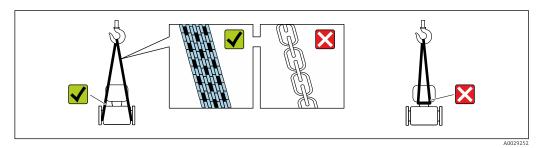

Do not remove protective covers or caps installed on process connections. They prevent mechanical damage to the sealing surfaces and contamination in the measuring tube.


5.2.1 Measuring devices without lifting lugs

WARNING

Center of gravity of the measuring device is higher than the suspension points of the webbing slings.

Risk of injury if the measuring device slips.

- Secure the measuring device against slipping or turning.
- Observe the weight specified on the packaging (stick-on label).

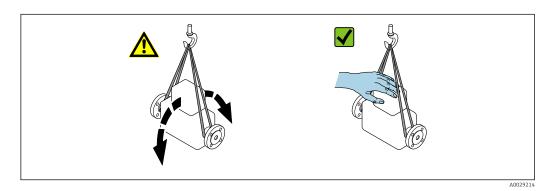

Endress+Hauser

5.2.2 Measuring devices with lifting lugs

Special transportation instructions for devices with lifting lugs

- Only use the lifting lugs fitted on the device or flanges to transport the device.
- The device must always be secured at two lifting lugs at least.

5.2.3 Transporting with a fork lift

If transporting in wood crates, the floor structure enables the crates to be lifted lengthwise or at both sides using a forklift.

5.3 Packaging disposal

All packaging materials are environmentally friendly and 100 % recyclable:


- Outer packaging of device
 - Polymer stretch wrap, complying with EU Directive 2002/95/EC (RoHS)
- Packaging
 - Wooden crate treated in accordance with ISPM 15 standard, confirmed by IPPC logo
 - Cardboard box in accordance with European packaging guideline 94/62EC, recyclability confirmed by Resy symbol
- Carrying and securing materials
 - Disposable plastic pallet
 - Plastic straps
 - Plastic adhesive strips
- Filler material Paper pads

6 Mounting

6.1 Mounting requirements

6.1.1 Mounting position

Mounting location

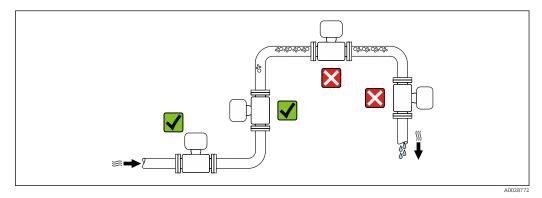


To prevent measuring errors arising from accumulation of gas bubbles in the measuring pipe, avoid the following mounting locations in the piping:

- Highest point of a pipeline.
- Directly upstream of a free pipe outlet in a down pipe.

Installation in down pipes

However, the following installation suggestion allows for installation in an open vertical pipeline. Pipe restrictions or the use of an orifice with a smaller cross-section than the nominal diameter prevent the sensor running empty while measurement is in progress.

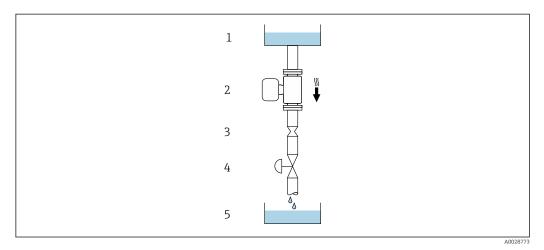

■ 6 Installation in a down pipe (e.g. for batching applications)

- 1 Supply tank
- 2 Sensor
- 3 Orifice plate, pipe restriction
- 4 Valve 5 Batchina tank

2	Бинстипу	lunik

DN		Ø orifice plate, pipe restriction	
[mm]	[in]	[mm]	[in]
8	3⁄8	6	0.24
15	1/2	10	0.40
25	1	14	0.55
40	11/2	22	0.87
50	2	28	1.10
80	3	50	1.97
100	4	65	2.60
150	6	90	3.54
250	10	150	5.91

Orientation


The direction of the arrow on the sensor nameplate helps you to install the sensor according to the flow direction (direction of medium flow through the piping).

	Orientation		Recommendation
A	Vertical orientation	A0015591	✓ ✓ ¹⁾
В	Horizontal orientation, transmitter at top	A0015589	$\bowtie^{2)}$ Exception: → \boxdot 7, 🗎 24

	Orientation		Recommendation
С	Horizontal orientation, transmitter at bottom	A0015590	Exception: $\rightarrow \bigcirc 7, \bigcirc 24$
D	Horizontal orientation, transmitter at side	A0015592	

- 1) This orientation is recommended to ensure self-draining.
- 2) Applications with low process temperatures may reduce the ambient temperature. To maintain the minimum ambient temperature for the transmitter, this orientation is recommended.
- 3) Applications with high process temperatures may increase the ambient temperature. To maintain the maximum ambient temperature for the transmitter, this orientation is recommended.

If a sensor is installed horizontally with a curved measuring tube, match the position of the sensor to the fluid properties.

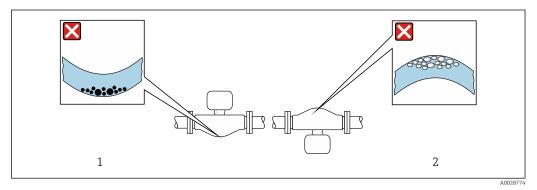


☑ 7 Orientation of sensor with curved measuring tube

- 1 Avoid this orientation for fluids with entrained solids: Risk of solids accumulating.
- 2 Avoid this orientation for outgassing fluids: Risk of gas accumulating.

Inlet and outlet runs

No special precautions need to be taken for fittings which create turbulence, such as valves, elbows or T-pieces, as long as no cavitation occurs $\rightarrow \cong 25$.

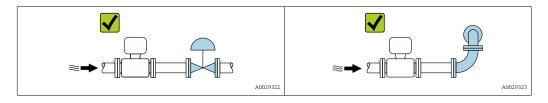


Dimensions

For the dimensions and installed lengths of the device, see the "Technical Information" document, "Mechanical construction" section

6.1.2 Environment and process requirements

Ambient temperature range

Measuring device	 -40 to +60 °C (-40 to +140 °F) Order code for "Test, certificate", option JP: -50 to +60 °C (-58 to +140 °F) Order code for "Test, certificate", option JQ: Sensor: -60 to +60 °C (-76 to +140 °F) Transmitter: -50 to +60 °C (-58 to +140 °F)
Readability of the	-20 to $+60$ °C (-4 to $+140$ °F)
local display	The readability of the display may be impaired at temperatures outside the temperature range.

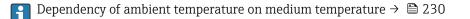

► If operating outdoors:

Avoid direct sunlight, particularly in warm climatic regions.



You can order a weather protection cover from Endress+Hauser. $\rightarrow \cong 210$.

System pressure


It is important that cavitation does not occur, or that gases entrained in the liquids do not outgas.

Cavitation is caused if the pressure drops below the vapor pressure:

- In liquids that have a low boiling point (e.g. hydrocarbons, solvents, liquefied gases)
- In suction lines
- Ensure the system pressure is sufficiently high to prevent cavitation and outgassing.

For this reason, the following mounting locations are recommended:

- At the lowest point in a vertical pipe
- Downstream from pumps (no danger of vacuum)

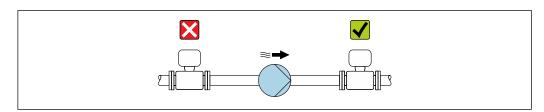

Thermal insulation

In the case of some fluids, it is important to keep the heat radiated from the sensor to the transmitter to a low level. A wide range of materials can be used for the required insulation.


The following device versions are recommended for versions with thermal insulation:

- Version with extended neck for insulation: Order code for "Sensor option", option CG with an extended neck length of 105 mm (4.13 in).
- Extended temperature version: Order code for "Measuring tube material", option SD, SE, SF or TH with an extended neck length of 105 mm (4.13 in).
- High-temperature version: Order code for "Measuring tube material", option TS, TT or TU with an extended neck length of 142 mm (5.59 in).

NOTICE

Electronics overheating on account of thermal insulation!

- Recommended orientation: horizontal orientation, sensor connection housing pointing downwards.
- Do not insulate the sensor connection housing.
- Maximum permissible temperature at the lower end of the sensor connection housing: 80 °C (176 °F)
- Thermal insulation with not isolated extended neck: We recommend that you do not insulate the extended neck in order to ensure optimum dissipation of heat.

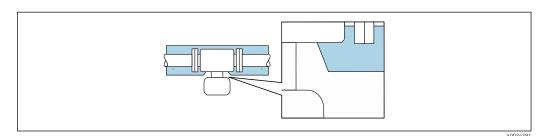

8 Thermal insulation with not isolated extended neck

Low-temperature version: It is generally not necessary to insulate the sensor connection housing. If insulation is provided, the rules that apply are the same as those for thermal insulation.

Heating

NOTICE

Electronics can overheat due to elevated ambient temperature!

- Observe maximum permitted ambient temperature for the transmitter.
- Depending on the medium temperature, take the device orientation requirements into account.

NOTICE

Danger of overheating when heating

- ► Ensure that the temperature at the lower end of the transmitter housing does not exceed 80 °C (176 °F).
- Ensure that sufficient convection takes place at the transmitter neck.
- Ensure that a sufficiently large area of the transmitter neck remains exposed. The uncovered part serves as a radiator and protects the electronics from overheating and excessive cooling.
- ► When using in potentially explosive atmospheres, observe the information in the device-specific Ex documentation. For detailed information on the temperature tables, see the separate document entitled "Safety Instructions" (XA) for the device.

Heating options

If a fluid requires that no heat loss should occur at the sensor, users can avail of the following heating options:

- Electrical heating, e.g. with electric band heaters ¹⁾
- Via pipes carrying hot water or steam
- Via heating jackets

¹⁾ The use of parallel electric band heaters is generally recommended (bidirectional electricity flow). Particular considerations must be made if a single-wire heating cable is to be used. Additional information is provided in the document EA01339D "Installation instructions for electrical trace heating systems".

Vibrations

The high oscillation frequency of the measuring tubes ensures that the correct operation of the measuring system is not influenced by plant vibrations.

6.1.3 Special mounting instructions

Drainability

When installed vertically, the measuring tubes can be drained completely and protected against buildup.

Hygienic compatibility

When installing in hygienic applications, please refer to the information in the "Certificates and approvals/hygienic compatibility" section $\rightarrow \square 244$

Rupture disk

Process-related information: \rightarrow 🗎 233.

WARNING

Danger from medium escaping!

Medium escaping under pressure can cause injury or material damage.


- Take precautions to prevent danger to persons and damage if the rupture disk is actuated.
- Observe the information on the rupture disk sticker.
- Make sure that the function and operation of the rupture disk is not impeded through the installation of the device.
- ▶ Do not use a heating jacket.
- Do not remove or damage the rupture disk.

The position of the rupture disk is indicated by a sticker affixed beside it.

The transportation guard must be removed.

The existing connecting nozzles are not intended for the purpose of rinsing or pressure monitoring, but instead serve as the mounting location for the rupture disk.

In the event of a failure of the rupture disk, a drain device can be screwed onto the female thread of the rupture disk in order to drain off any escaping medium.

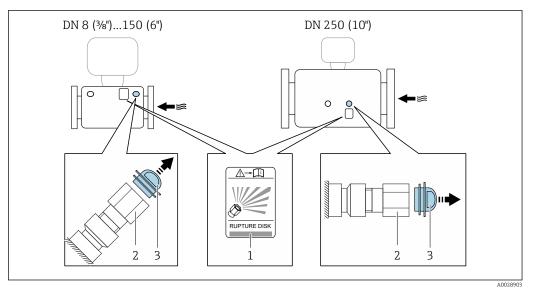



1 Rupture disk label


2 Rupture disk with 1/2" NPT female thread and 1" width across flats

3 Transport protection

For information on the dimensions, see the "Technical Information" document, "Mechanical construction" section (accessories).

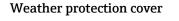

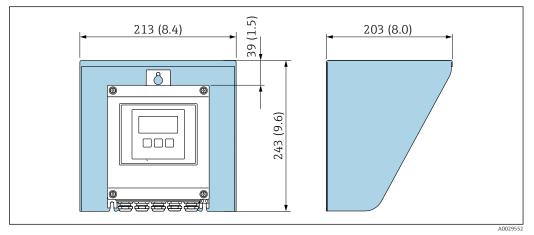

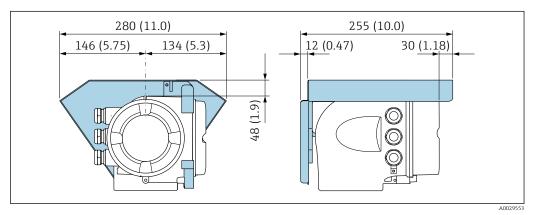

🖻 10 Weather protection cover for Proline 500; engineering unit mm (in)


Cover locking: Proline 500

NOTICE

Order code "Transmitter housing", option L "Cast, stainless": The covers of the transmitter housing are provided with a borehole to lock the cover.

The cover can be locked using screws and a chain or cable provided by the customer on site.

- The use of stainless steel chains or cables is recommended.
- If a protective coating is applied, it is recommended to use a heat shrink tube to protect the housing paint.

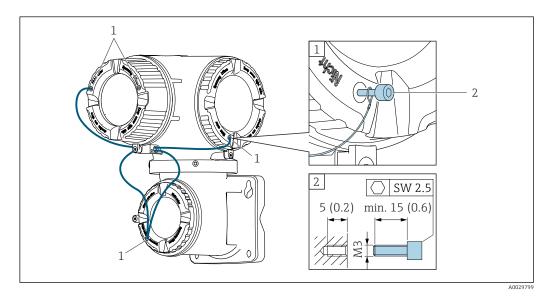

1 Cover borehole for the securing screw

2 Securing screw to lock the cover

6.2 Mounting the measuring device

6.2.1 Required tools

For transmitter

For mounting on a post:

- Proline 500 digital transmitter
 - Open-ended wrench AF 10
 - Torx screwdriver TX 25
- Proline 500 transmitter
 Open-ended wrench AF 13

For wall mounting: Drill with drill bit Ø 6.0 mm

For sensor

For flanges and other process connections: use a suitable mounting tool

6.2.2 Preparing the measuring device

1. Remove all remaining transport packaging.


- 2. Remove any protective covers or protective caps present from the sensor.
- 3. Remove stick-on label on the electronics compartment cover.

6.2.3 Mounting the measuring device

WARNING

Danger due to improper process sealing!

- Ensure that the inside diameters of the gaskets are greater than or equal to that of the process connections and piping.
- Ensure that the seals are clean and undamaged.
- ► Secure the seals correctly.
- **1.** Ensure that the direction of the arrow on the nameplate of the sensor matches the flow direction of the medium.
- 2. Install the measuring device or turn the transmitter housing so that the cable entries do not point upwards.

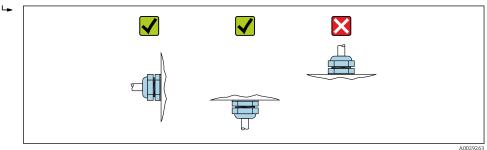

6.2.4 Mounting the transmitter housing: Proline 500 – digital

ACAUTION

Ambient temperature too high!

Danger of electronics overheating and housing deformation.

- Do not exceed the permitted maximum ambient temperature .
- ► If operating outdoors: Avoid direct sunlight and exposure to weathering, particularly in warm climatic regions.

ACAUTION

Excessive force can damage the housing!

• Avoid excessive mechanical stress.

The transmitter can be mounted in the following ways:

- Post mounting
- Wall mounting


Post mounting

WARNING

Excessive tightening torque applied to the fixing screws!


Risk of damaging the plastic transmitter.

• Tighten the fixing screws as per the tightening torque: 2 Nm (1.5 lbf ft)

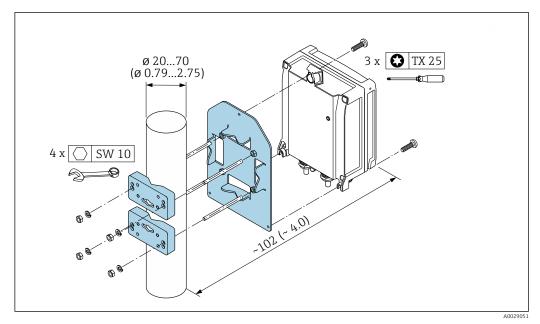

🗷 11 Engineering unit mm (in)

Wall mounting

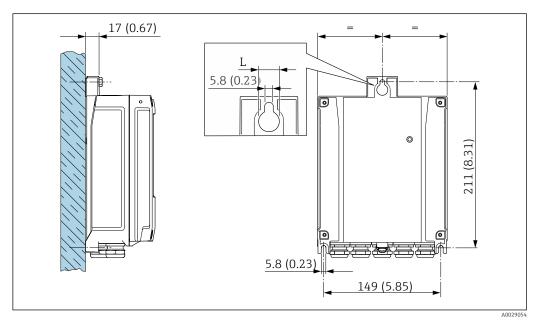

🖻 12 Engineering unit mm (in)

L Depends on order code for "Transmitter housing"

Order code for "Transmitter housing"

- Option **A**, aluminum, coated: L =14 mm (0.55 in)
- Option **D**, polycarbonate: L = 13 mm (0.51 in)

1. Drill the holes.

2. Insert wall plugs into the drilled holes.

3. Screw in the securing screws slightly.

- 4. Fit the transmitter housing over the securing screws and hook into place.
- 5. Tighten the securing screws.

6.2.5 Mounting the transmitter housing: Proline 500

ACAUTION

Ambient temperature too high!

Danger of electronics overheating and housing deformation.

- ► Do not exceed the permitted maximum ambient temperature .
- ► If operating outdoors: Avoid direct sunlight and exposure to weathering, particularly in warm climatic regions.

ACAUTION


Excessive force can damage the housing!

• Avoid excessive mechanical stress.

The transmitter can be mounted in the following ways:

- Post mounting
- Wall mounting

Wall mounting

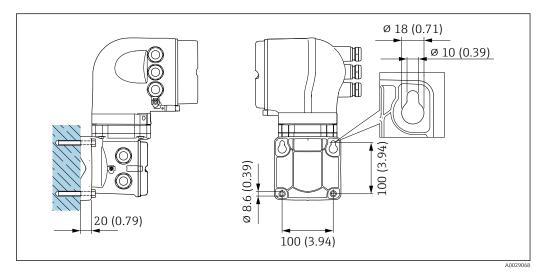

■ 13 Engineering unit mm (in)

- 1. Drill the holes.
- 2. Insert wall plugs into the drilled holes.
- 3. Screw in the securing screws slightly.
- 4. Fit the transmitter housing over the securing screws and hook into place.
- 5. Tighten the securing screws.


Post mounting

WARNING

Order code for "Transmitter housing", option L "Cast, stainless": cast transmitters are very heavy.

They are unstable if they are not mounted on a secure, fixed post.


• Only mount the transmitter on a secure, fixed post on a stable surface.

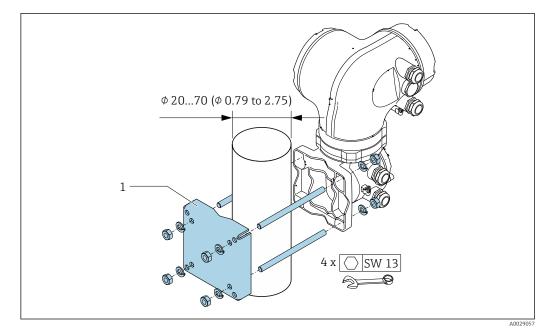

🖻 14 Engineering unit mm (in)

6.2.6 Turning the transmitter housing: Proline 500

To provide easier access to the connection compartment or display module, the transmitter housing can be turned.

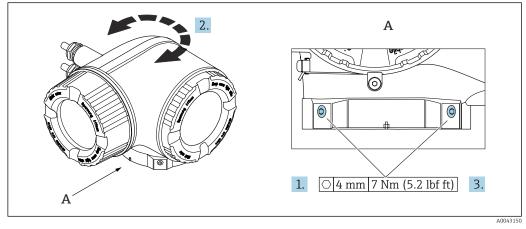


■ 15 Ex housing

- 1. Loosen the fixing screws.
- 2. Turn the housing to the desired position.
- 3. Tighten the securing screws.

6.2.7 Turning the display module: Proline 500

The display module can be turned to optimize display readability and operability.

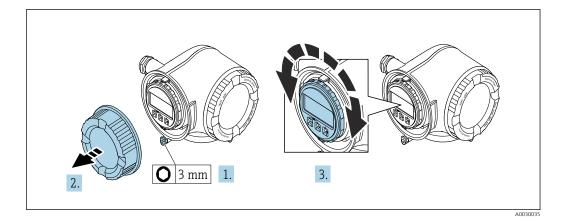

- **1.** Depending on the device version: Loosen the securing clamp of the connection compartment cover.
- 2. Unscrew the connection compartment cover.
- **3.** Turn the display module to the desired position: max. $8 \times 45^{\circ}$ in each direction.
- 4. Screw on the connection compartment cover.
- **5.** Depending on the device version: Attach the securing clamp of the connection compartment cover.

6.3 Post-installation check

Is the device undamaged (visual inspection)?	
 Does the measuring device conform to the measuring point specifications? For example: Process temperature → ²³⁰ 230 Process pressure (refer to the section on "Pressure-temperature ratings" in the "Technical Information" document) Ambient temperature Measuring range 	
Has the correct orientation for the sensor been selected ? According to sensor type According to medium temperature According to medium properties (outgassing, with entrained solids) 	
Does the arrow on the sensor nameplate match the direction of flow of the fluid through the piping $\rightarrow \bigoplus 23$?	
Are the measuring point identification and labeling correct (visual inspection)?	
Is the device adequately protected from precipitation and direct sunlight?	
Are the securing screw and securing clamp tightened securely?	

Electrical connection

WARNING

7

Live parts! Incorrect work performed on the electrical connections can result in an electric shock.

- Set up a disconnecting device (switch or power-circuit breaker) to easily disconnect the device from the supply voltage.
- ► In addition to the device fuse, include an overcurrent protection unit with max. 10 A in the plant installation.

7.1 Electrical safety

In accordance with applicable national regulations.

7.2 Connecting requirements

7.2.1 Required tools

- For cable entries: Use corresponding tools
- For securing clamp: Allen key 3 mm
- Wire stripper
- When using stranded cables: crimper for wire end ferrule
- For removing cables from terminal: Flat blade screwdriver \leq 3 mm (0.12 in)

7.2.2 Requirements for connecting cable

The connecting cables provided by the customer must fulfill the following requirements.

Protective grounding cable for the outer ground terminal

Conductor cross-section < 2.1 mm² (14 AWG)

The use of a cable lug enables the connection of larger cross-sections.

The grounding impedance must be less than 2 $\boldsymbol{\Omega}.$

Permitted temperature range

- The installation guidelines that apply in the country of installation must be observed.
- The cables must be suitable for the minimum and maximum temperatures to be expected.

Power supply cable (incl. conductor for the inner ground terminal)

Standard installation cable is sufficient.

Signal cable

Modbus RS485

The EIA/TIA-485 standard specifies two types of cable (A and B) for the bus line which can be used for every transmission rate. Cable type A is recommended.

Cable type A	
Characteristic impedance	135 to 165 Ω at a measuring frequency of 3 to 20 MHz
Cable capacitance	< 30 pF/m
Wire cross-section	> 0.34 mm ² (22 AWG)

Cable type	Twisted pairs
Loop resistance	\leq 110 Ω/km
Signal dampingMax. 9 dB over the entire length of the cable cross-section	
ShieldCopper braided shielding or braided shielding with foil shield. When the cable shield, observe the grounding concept of the plant.	

Current output 0/4 to 20 mA

- Standard installation cable is sufficient
- For custody transfer measurement, use a shielded cable: tin-plated copper braid, optical cover $\geq 85~\%$

Pulse /frequency /switch output

- Standard installation cable is sufficient
- For custody transfer measurement, use a shielded cable: tin-plated copper braid, optical cover $\geq 85~\%$

Double pulse output

- Standard installation cable is sufficient
- For custody transfer measurement, use a shielded cable: tin-plated copper braid, optical cover $\geq 85~\%$

Relay output

Standard installation cable is sufficient.

Current input 0/4 to 20 mA

- Standard installation cable is sufficient
- For custody transfer measurement, use a shielded cable: tin-plated copper braid, optical cover $\geq 85~\%$

Status input


- Standard installation cable is sufficient
- For custody transfer measurement, use a shielded cable: tin-plated copper braid, optical cover $\geq 85~\%$

Cable diameter

- Cable glands supplied:
 - $M20 \times 1.5$ with cable Ø 6 to 12 mm (0.24 to 0.47 in)
- Spring-loaded terminals: Suitable for strands and strands with ferrules. Conductor cross-section 0.2 to 2.5 mm² (24 to 12 AWG).

Choice of connecting cable between the transmitter and sensor

Depends on the type of transmitter and the installation zones

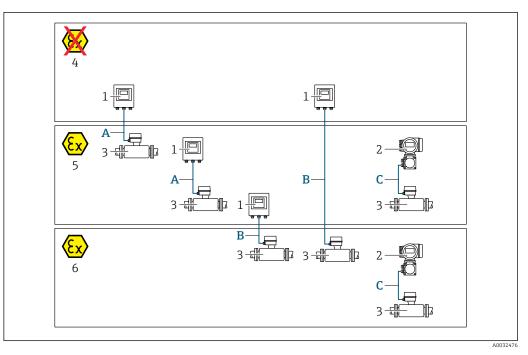

- 1 Proline 500 digital transmitter
- 2 Proline 500 transmitter
- 3 Sensor Promass
- 4 Non-hazardous area
- 5 Hazardous area: Zone 2; Class I, Division 2
- 6 Hazardous area: Zone 1; Class I, Division 1
- A Standard cable to 500 digital transmitter →
 ^B 37 Transmitter installed in the non-hazardous area or hazardous area: Zone 2; Class I, Division 2 / sensor installed in the hazardous area: Zone 2; Class I, Division 2
- B Standard cable to 500 digital transmitter →
 ^B 38 Transmitter installed in the hazardous area: Zone 2; Class I, Division 2 / sensor installed in the hazardous area: Zone 1; Class I, Division 1
- C Signal cable to 500 transmitter →
 ⁽¹⁾/₂ 40
 Transmitter and sensor installed in the hazardous area: Zone 2; Class I, Division 2 or Zone 1;
 Class I, Division 1

A: Connecting cable between sensor and transmitter: Proline 500 - digital

Standard cable

A standard cable with the following specifications can be used as the connecting cable.

Design 4 cores (2 pairs); uninsulated stranded CU wires; pair-stranded with conshield	
ShieldingTin-plated copper braid, optical cover ≥ 85 %	
Loop resistancePower supply line $(+, -)$: maximum 10 Ω	
Cable length	Maximum 300 m (900 ft), see the following table.

Cross-section	Cable length [max.]
0.34 mm ² (AWG 22)	80 m (240 ft)
0.50 mm ² (AWG 20)	120 m (360 ft)
0.75 mm ² (AWG 18)	180 m (540 ft)
1.00 mm ² (AWG 17)	240 m (720 ft)
1.50 mm ² (AWG 15)	300 m (900 ft)

Optionally available connecting cable

Design	$2 \times 2 \times 0.34 \text{ mm}^2$ (AWG 22) PVC cable ¹⁾ with common shield (2 pairs, uninsulated stranded CU wires; pair-stranded)
Flame resistance	According to DIN EN 60332-1-2
Oil-resistance	According to DIN EN 60811-2-1
Shielding	Tin-plated copper braid, optical cover \geq 85 %
Operating temperature	When mounted in a fixed position: –50 to +105 $^\circ$ C (–58 to +221 $^\circ$ F); when cable can move freely: –25 to +105 $^\circ$ C (–13 to +221 $^\circ$ F)
Available cable length	Fixed: 20 m (60 ft); variable: up to maximum 50 m (150 ft)

1) UV radiation can impair the cable outer sheath. Protect the cable from direct sunshine where possible.

B: Connecting cable between sensor and transmitter: Proline 500 - digital Standard cable

A standard cable with the following specifications can be used as the connecting cable.

Design	4, 6, 8 cores (2, 3, 4 pairs); uninsulated stranded CU wires; pair-stranded with common shield	
ShieldingTin-plated copper braid, optical cover ≥ 85 %		
Capacitance C	Maximum 760 nF IIC, maximum 4.2 µF IIB	
Inductance L Maximum 26 µH IIC, maximum 104 µH IIB		
$\begin{tabular}{lllllllllllllllllllllllllllllllllll$		
Loop resistance	Power supply line (+, –): maximum 5 Ω	
Cable length	Maximum 150 m (450 ft), see the following table.	

Cross-section	Cable length [max.]	Termination
2 x 2 x 0.50 mm ² (AWG 20)	50 m (150 ft)	2 x 2 x 0.50 mm ² (AWG 20)
		BN WT YE GN - - A B GY
		 +, - = 0.5 mm² A, B = 0.5 mm²
3 x 2 x 0.50 mm ² (AWG 20)	100 m (300 ft)	3 x 2 x 0.50 mm ² (AWG 20)
		BN WT GY PK YE GN + - A B GY
		 +, - = 1.0 mm² A, B = 0.5 mm²
4 x 2 x 0.50 mm ² (AWG 20)	150 m (450 ft)	4 x 2 x 0.50 mm ² (AWG 20)
		BN WT GY PK RD BU + - A B GY YE GN
		 +, - = 1.5 mm² A, B = 0.5 mm²

Optionally available connecting cable

Connecting cable for	Zone 1; Class I, Division 1
Standard cable	$2\times2\times0.5~mm^2$ (AWG 20) PVC cable $^{1)}$ with common shield (2 pairs, pair-stranded)
Flame resistance	According to DIN EN 60332-1-2
Oil-resistance	According to DIN EN 60811-2-1
Shielding	Tin-plated copper braid, optical cover \geq 85 %
Operating temperature	When mounted in a fixed position: –50 to +105 $^\circ$ C (–58 to +221 $^\circ$ F); when cable can move freely: –25 to +105 $^\circ$ C (–13 to +221 $^\circ$ F)
Available cable length	Fixed: 20 m (60 ft); variable: up to maximum 50 m (150 ft)

1) UV radiation can impair the cable outer sheath. Protect the cable from direct sunshine where possible.

Design	$6 \times 0.38 \text{ mm}^2 \text{ PVC}$ cable ¹⁾ with individual shielded cores and common copper shield		
	With order code for "Test, certificate", option JQ $7 \times 0.38 \text{ mm}^2 \text{ PUR cable}^{-1)}$ with individual shielded cores and common copper shield		
Conductor resistance	\leq 50 Ω /km (0.015 Ω /ft)		
Capacitance: core/shield	≤ 420 pF/m (128 pF/ft)		
Cable length (max.)	20 m (60 ft)		
Cable lengths (available for order)	5 m (15 ft), 10 m (30 ft), 20 m (60 ft)		
Cable diameter	11 mm (0.43 in) ± 0.5 mm (0.02 in)		
Operating temperature	 Depends on the device version and how the cable is installed: Standard version: Cable - fixed installation: -40 to +105 °C (-40 to +221 °F) Cable - movable: -25 to +105 °C (-13 to +221 °F) Order code for "Test, certificate", option JP: Cable - fixed installation: -50 to +105 °C (-58 to +221 °F) Cable - movable: -25 to +105 °C (-13 to +221 °F) Order code for "Test, certificate", option JQ: Cable - fixed installation: -60 to +105 °C (-76 to +221 °F) Cable - movable: -25 to +105 °C (-13 to +221 °F) 		

C: *Connecting cable between sensor and transmitter*: *Proline 500*

1) UV radiation can impair the cable outer sheath. Protect the cable from direct sunshine where possible.

7.2.3 Terminal assignment

Transmitter: supply voltage, input/outputs

The terminal assignment of the inputs and outputs depends on the individual order version of the device. The device-specific terminal assignment is documented on an adhesive label in the terminal cover.

Supply	voltage	je Input/output 1		Input/output 2		Input/output 3		Input/output 4	
1 (+)	2 (-)	26 (B)	27 (A)	24 (+)	25 (-)	22 (+)	23 (-)	20 (+)	21 (-)
		Device-specific terminal assignment: adhesive label in terminal cover.							

Transmitter and sensor connection housing: connecting cable

The sensor and transmitter, which are mounted in separate locations, are interconnected by a connecting cable. The cable is connected via the sensor connection housing and the transmitter housing.

Terminal assignment and connection of the connecting cable:

- Proline 500 digital → 🗎 42
- Proline $500 \rightarrow \textcircled{2}{49}$

7.2.4 Shielding and grounding

Shielding and grounding concept

- 1. Maintain electromagnetic compatibility (EMC).
- 2. Take explosion protection into consideration.
- **3.** Pay attention to the protection of persons.
- 4. Comply with national installation regulations and guidelines.

- 5. Observe cable specifications .
- 6. Keep the stripped and twisted lengths of cable shield to the ground terminal as short as possible.
- 7. Shield cables fully.

Grounding of the cable shield

NOTICE

In systems without potential matching, the multiple grounding of the cable shield causes mains frequency equalizing currents!

Damage to the bus cable shield.

- Only ground the bus cable shield to either the local ground or the protective ground at one end.
- Insulate the shield that is not connected.

To comply with EMC requirements:

1. Ensure the cable shield is grounded to the potential matching line at multiple points.

2. Connect every local ground terminal to the potential matching line.

7.2.5 Preparing the measuring device

Carry out the steps in the following order:

- 1. Mount the sensor and transmitter.
- 2. Sensor connection housing: Connect connecting cable.
- **3**. Transmitter: Connect connecting cable.
- 4. Transmitter: Connect signal cable and cable for supply voltage.

NOTICE

Insufficient sealing of the housing!

Operational reliability of the measuring device could be compromised.

- ▶ Use suitable cable glands corresponding to the degree of protection.
- 1. Remove dummy plug if present.
- 2. If the measuring device is supplied without cable glands: Provide suitable cable gland for corresponding connecting cable.
- If the measuring device is supplied with cable glands:
 Observe requirements for connecting cables →
 ⁽²⁾ 35.

7.3 Connecting the measuring device: Proline 500 – digital

NOTICE

Limitation of electrical safety due to incorrect connection!

- ► Have electrical connection work carried out by appropriately trained specialists only.
- Observe applicable federal/national installation codes and regulations.
- Comply with local workplace safety regulations.
- ► Always connect the protective ground cable ⊕ before connecting additional cables.
- For use in potentially explosive atmospheres, observe the information in the devicespecific Ex documentation.


7.3.1 Connecting the connecting cable

WARNING

Risk of damaging electronic components!

- Connect the sensor and transmitter to the same potential equalization.
- Only connect the sensor to a transmitter with the same serial number.

Connecting cable terminal assignment

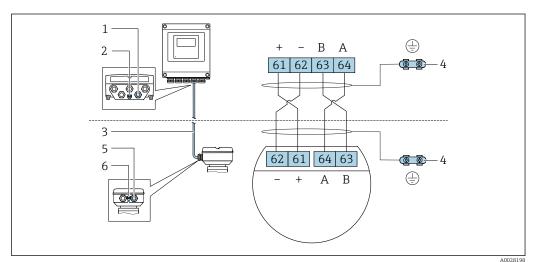

- 1 Cable entry for cable on transmitter housing
- 2 Protective earth (PE)
- 3 Connecting cable ISEM communication
- 4 Grounding via ground connection; on device plug versions grounding is through the plug itself
- 5 Cable entry for cable or connection of device plug on sensor connection housing
- 6 Protective earth (PE)

Connecting the connecting cable to the sensor connection housing

- Connection via terminals with order code for "Sensor connection housing":
 - Option **A** "Aluminum, coated" $\rightarrow \implies 43$
 - Option **B** "Stainless" $\rightarrow \square 44$
 - Option **L** "Cast, stainless" $\rightarrow \square 43$


Connecting the connecting cable to the transmitter

The cable is connected to the transmitter via terminals $\rightarrow \cong 46$.

Connecting the sensor connection housing via terminals

For the device version with the order code for "Sensor connection housing":

- Option A "Aluminum coated"
- Option L "Cast, stainless"

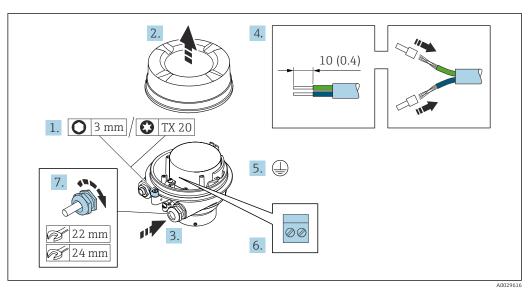

- 1. Loosen the securing clamp of the housing cover.
- 2. Unscrew the housing cover.
- **3.** Push the cable through the cable entry. To ensure tight sealing, do not remove the sealing ring from the cable entry.
- 4. Strip the cable and cable ends. In the case of stranded cables, fit ferrules.
- 5. Connect the protective ground.
- 6. Connect the cable in accordance with the connecting cable terminal assignment.
- 7. Firmly tighten the cable glands.
 - └ This concludes the process for connecting the connecting cable.


WARNING

Housing degree of protection voided due to insufficient sealing of the housing.

- Screw in the thread on the cover without using any lubricant. The thread on the cover is coated with a dry lubricant.
- 8. Screw on the housing cover.
- 9. Tighten the securing clamp of the housing cover.

Connecting the sensor connection housing via terminals


For the device version with the order code for "Sensor connection housing": Option ${\bf B}$ "Stainless"

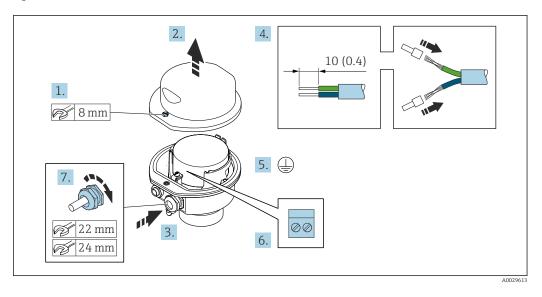


- 1. Release the securing screw of the housing cover.
- 2. Open the housing cover.
- **3.** Push the cable through the cable entry . To ensure tight sealing, do not remove the sealing ring from the cable entry.
- 4. Strip the cable and cable ends. In the case of stranded cables, fit ferrules.
- 5. Connect the protective ground.
- 6. Connect the cable in accordance with the connecting cable terminal assignment.
- 7. Firmly tighten the cable glands.
 - └ This concludes the process for connecting the connecting cable.
- 8. Close the housing cover.
- 9. Tighten the securing screw of the housing cover.


Connecting the sensor connection housing via the connector

For the device version with the order code for "Sensor connection housing": Option **C** "Ultra-compact hygienic, stainless"

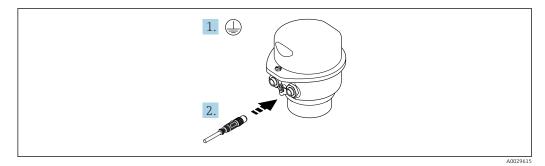

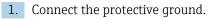


2. Connect the connector.

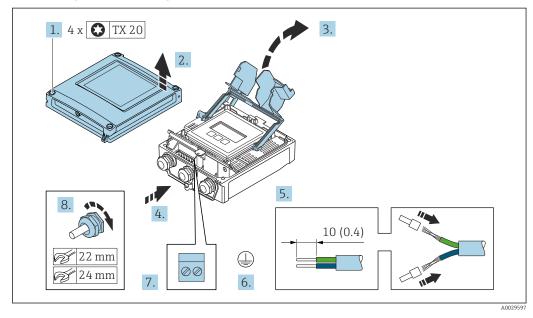


Connecting the connecting cable to the transmitter

- 1. Loosen the 4 fixing screws on the housing cover.
- 2. Open the housing cover.
- 3. Fold open the terminal cover.
- 4. Push the cable through the cable entry. To ensure tight sealing, do not remove the sealing ring from the cable entry.
- 5. Strip the cable and cable ends. In the case of stranded cables, fit ferrules.
- 6. Connect the protective ground.
- **7.** Connect the cable according to the terminal assignment for the connecting cable $\rightarrow \cong 42$.
- 8. Firmly tighten the cable glands.
 - └ This concludes the process for connecting the connecting cable.
- 9. Close the housing cover.
- **10.** Tighten the securing screw of the housing cover.
- **11.** After connecting the connecting cable: Connect the signal cable and the supply voltage cable $\rightarrow \cong 47$.

7.3.2 Connecting the signal cable and the supply voltage cable

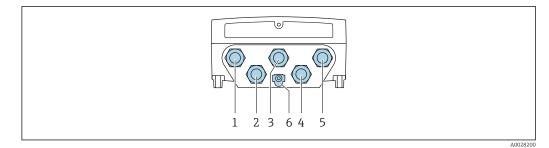

- 1 Terminal connection for supply voltage
- 2 Terminal connection for signal transmission, input/output
- *3 Terminal connection for signal transmission, input/output*
- 4 Terminal connection for connecting cable between sensor and transmitter
- 5 Terminal connection for signal transmission, input/output; optional: connection for external WLAN antenna
- 6 Protective earth (PE)

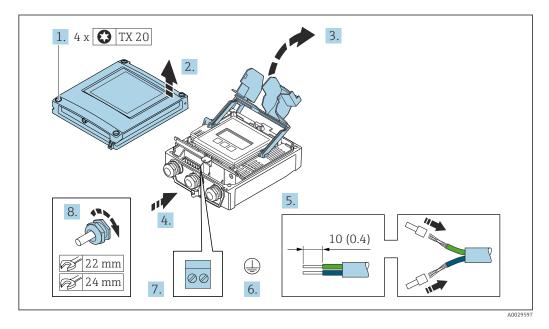

- 1. Loosen the 4 fixing screws on the housing cover.
- 2. Open the housing cover.
- 3. Fold open the terminal cover.
- 4. Push the cable through the cable entry. To ensure tight sealing, do not remove the sealing ring from the cable entry.
- 5. Strip the cable and cable ends. In the case of stranded cables, fit ferrules.
- 6. Connect the protective ground.
- 7. Connect the cable in accordance with the terminal assignment .
 - Signal cable terminal assignment: The device-specific terminal assignment is documented on an adhesive label in the terminal cover.
 Supply voltage terminal assignment: Adhesive label in the terminal cover or →
 ⇒ 40.
- 8. Firmly tighten the cable glands.
 - └ This concludes the cable connection process.
- 9. Close the terminal cover.
- **10.** Close the housing cover.

WARNING

Housing degree of protection may be voided due to insufficient sealing of the housing.

• Screw in the screw without using any lubricant.


WARNING

Excessive tightening torque applied to the fixing screws!

Risk of damaging the plastic transmitter.

- ▶ Tighten the fixing screws as per the tightening torque: 2 Nm (1.5 lbf ft)
- **11.** Tighten the 4 fixing screws on the housing cover.

Removing a cable

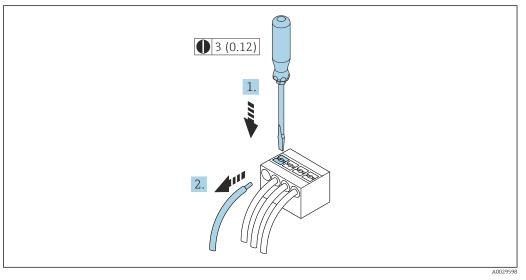

16 Engineering unit mm (in)

- **1.** To remove a cable from the terminal, use a flat-blade screwdriver to push the slot between the two terminal holes
- 2. while simultaneously pulling the cable end out of the terminal.

7.4 Connecting the measuring device: Proline 500

NOTICE

Limitation of electrical safety due to incorrect connection!

- ► Have electrical connection work carried out by appropriately trained specialists only.
- Observe applicable federal/national installation codes and regulations.
- Comply with local workplace safety regulations.
- ► Always connect the protective ground cable ⊕ before connecting additional cables.
- For use in potentially explosive atmospheres, observe the information in the devicespecific Ex documentation.


7.4.1 Connecting the connecting cable

WARNING

Risk of damaging electronic components!

- Connect the sensor and transmitter to the same potential equalization.
- Only connect the sensor to a transmitter with the same serial number.

Connecting cable terminal assignment

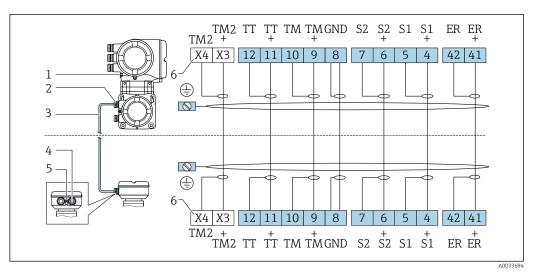

- 1 Protective earth (PE)
- 2 Cable entry for connecting cable on transmitter connection housing
- 3 Connecting cable
- 4 Cable entry for connecting cable on sensor connection housing
- 5 Protective earth (PE)
- *X* Terminals X3, X4: temperature sensor


Connecting the connecting cable to the sensor connection housing

Connection via terminals with order code for "Housing":

- Option **B** "Stainless" $\rightarrow \square 51$
- Option **L** "Cast, stainless" $\rightarrow \square 50$

Connecting the sensor connection housing via terminals

For the device version with the order code for "Housing": Option **L** "Cast, stainless"

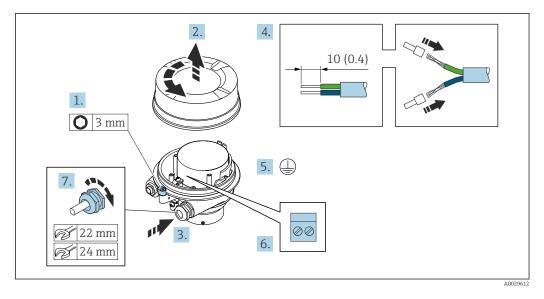

- 1. Loosen the securing clamp of the housing cover.
- 2. Unscrew the housing cover.
- **3.** Push the cable through the cable entry . To ensure tight sealing, do not remove the sealing ring from the cable entry.
- 4. Strip the cable and cable ends. In the case of stranded cables, fit ferrules.
- 5. Connect the protective ground.
- 6. Connect the cable in accordance with the connecting cable terminal assignment.
- 7. Firmly tighten the cable glands.
 - └ This concludes the process for connecting the connecting cable.


WARNING

Housing degree of protection voided due to insufficient sealing of the housing.


- Screw in the thread on the cover without using any lubricant. The thread on the cover is coated with a dry lubricant.
- 8. Screw on the housing cover.
- **9.** Tighten the securing clamp of the housing cover.

Connecting the sensor connection housing via terminals

For the device version with the order code for "Housing": Option ${\bf B}$ "Stainless"

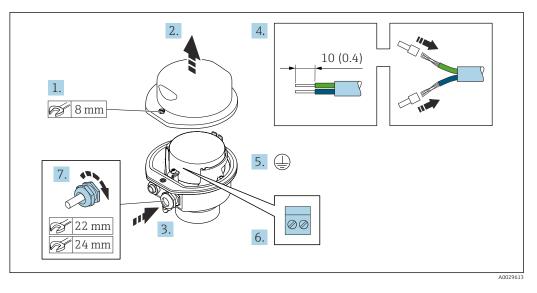

- 1. Release the securing screw of the housing cover.
- 2. Open the housing cover.
- **3.** Push the cable through the cable entry . To ensure tight sealing, do not remove the sealing ring from the cable entry.
- 4. Strip the cable and cable ends. In the case of stranded cables, fit ferrules.
- 5. Connect the protective ground.
- 6. Connect the cable in accordance with the connecting cable terminal assignment.
- 7. Firmly tighten the cable glands.
 - └ This concludes the process for connecting the connecting cable.
- 8. Close the housing cover.
- 9. Tighten the securing screw of the housing cover.

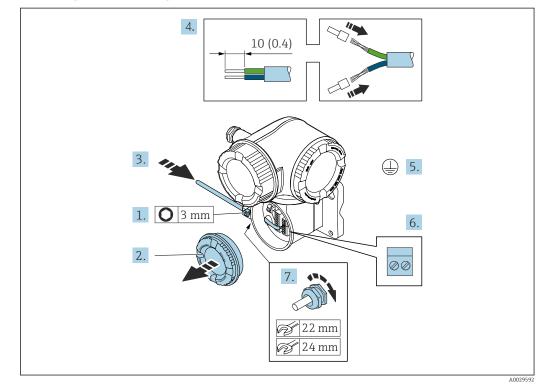


Attaching the connecting cable to the transmitter


- **1.** Loosen the securing clamp of the connection compartment cover.
- 2. Unscrew the connection compartment cover.
- **3.** Push the cable through the cable entry. To ensure tight sealing, do not remove the sealing ring from the cable entry.
- 4. Strip the cable and cable ends. In the case of stranded cables, also fit ferrules.
- 5. Connect the protective ground.
- 6. Connect the cable in accordance with the connecting cable terminal assignment $\rightarrow \cong 49$.
- 7. Firmly tighten the cable glands.
 - └ This concludes the process for attaching the connecting cable.
- 8. Screw on the connection compartment cover.
- 9. Tighten the securing clamp of the connection compartment cover.
- **10**. After connecting the connecting cable:

Connect the signal cable and the supply voltage cable $\rightarrow \square 53$.


7.4.2 Connecting the signal cable and the supply voltage cable

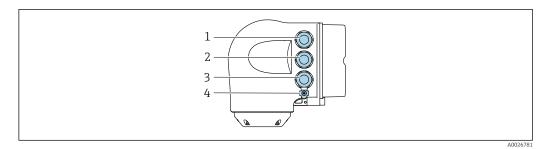


- 1 Terminal connection for supply voltage
- 2 Terminal connection for signal transmission, input/output
- 3 Terminal connection for signal transmission, input/output or terminal connection for network connection via service interface (CDI-RJ45)
- 4 Protective earth (PE)

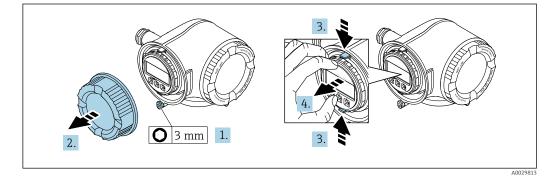


- 1. Loosen the securing clamp of the connection compartment cover.
- 2. Unscrew the connection compartment cover.
- 3. Squeeze the tabs of the display module holder together.
- 4. Remove the display module holder.

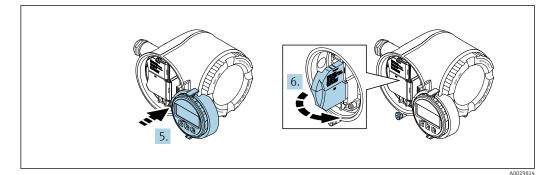

- 5. Attach the holder to the edge of the electronics compartment.
- 6. Open the terminal cover.

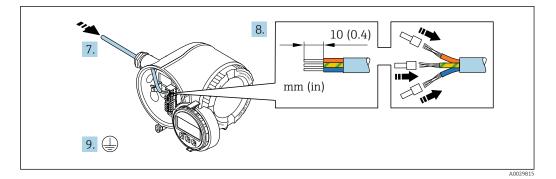


- 7. Push the cable through the cable entry. To ensure tight sealing, do not remove the sealing ring from the cable entry.
- 8. Strip the cable and cable ends. In the case of stranded cables, also fit ferrules.
- 9. Connect the protective ground.

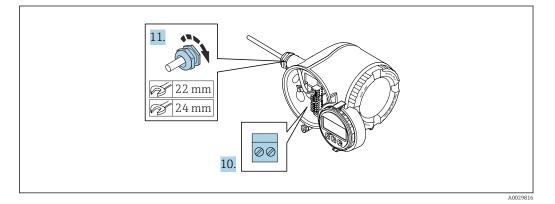

- **10.** Connect the cable according to the terminal assignment.
- **11.** Firmly tighten the cable glands.
 - \blacktriangleright This concludes the cable connection process.
- 12. Close the terminal cover.
- **13.** Fit the display module holder in the electronics compartment.
- **14.** Screw on the connection compartment cover.
- **15.** Secure the securing clamp of the connection compartment cover.

Removing a cable

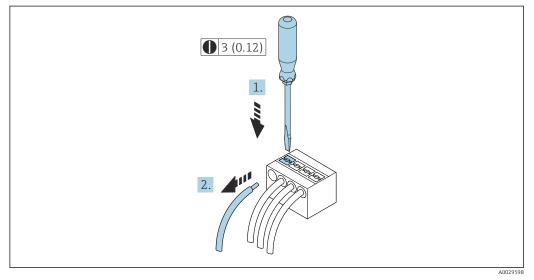

■ 17 Engineering unit mm (in)

1. To remove a cable from the terminal, use a flat-blade screwdriver to push the slot between the two terminal holes

2. while simultaneously pulling the cable end out of the terminal.

7.5 Potential equalization

7.5.1 Requirements

For potential equalization:


- Pay attention to in-house grounding concepts
- Take account of operating conditions like the pipe material and grounding
- Connect the medium, sensor and transmitter to the same electrical potential
- Use a ground cable with a minimum cross-section of 6 mm² (0.0093 in²) and a cable lug for potential equalization connections

For devices intended for use in hazardous locations, please observe the guidelines in the Ex documentation (XA).

7.6 Special connection instructions

7.6.1 Connection examples


Modbus RS485

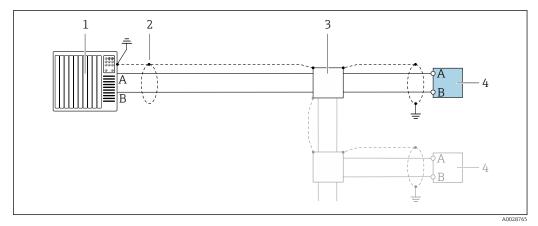

18 Connection example for Modbus RS485, non-hazardous area and Zone 2; Class I, Division 2


- 1 Control system (e.g. PLC)
- 2 Cable shield provided at one end. The cable shield must be grounded at both ends to comply with EMC requirements; observe cable specifications
- 3 Distribution box
- 4 Transmitter

Current output 4-20 mA

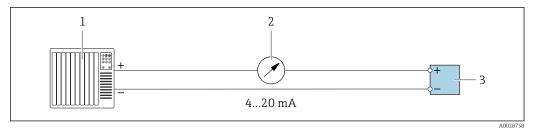

☑ 19 Connection example for 4-20 mA current output (active)


- 1 Automation system with current input (e.g. PLC)
- 2 Analog display unit: observe maximum load
- 3 Transmitter

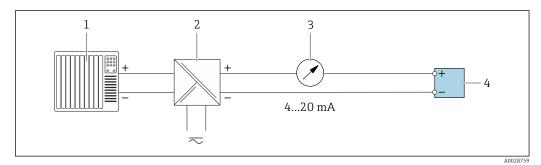

■ 20 Connection example for 4-20 mA current output (passive)

- 1 Automation system with current input (e.g. PLC)
- 2 Active barrier for power supply (e.g. RN221N)
- 3 Analog display unit: observe maximum load
- 4 Transmitter


Pulse/frequency output

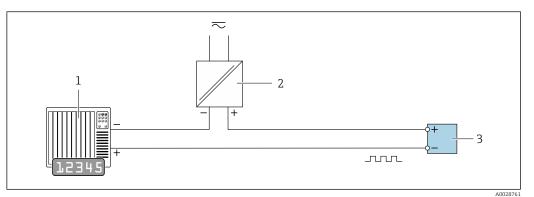

21 Connection example for pulse/frequency output (passive)

- 1 Automation system with pulse/frequency input (e.g. PLC with 10 kΩ pull-up or pull-down resistor)
- 2 Power supply
- 3 Transmitter: observe input values $\rightarrow \cong 217$


Switch output

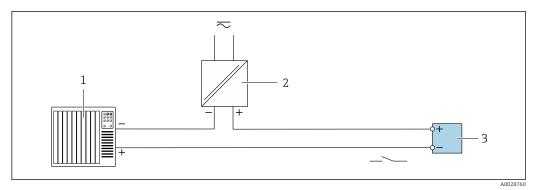

■ 22 Connection example for switch output (passive)


- 1 Automation system with switch input (e.g. PLC with a 10 k Ω pull-up or pull-down resistor)
- 2 Power supply
- 3 Transmitter: observe input values $\rightarrow \cong 217$

Double pulse output

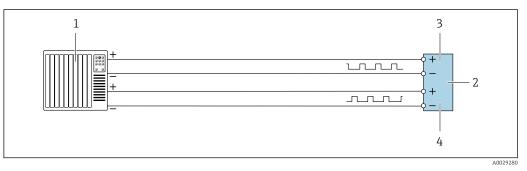

23 Connection example for double pulse output (active)


- 1 Automation system with double pulse input (e.g. PLC)
- 2 Transmitter: observe input values $\rightarrow \implies 219$
- 3 Double pulse output
- 4 Double pulse output (slave), phase-shifted

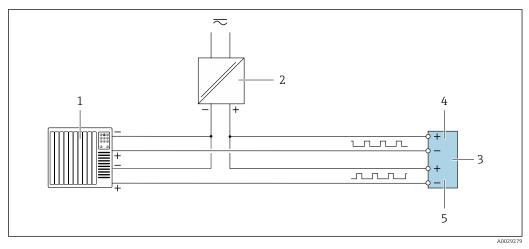

24 Connection example for double pulse output (passive)

- 1 Automation system with double pulse input (e.g. PLC with a 10 k Ω pull-up or pull-down resistor)
- 2 Power supply
- 3 Transmitter: observe input values $\rightarrow \cong 219$
- 4 Double pulse output
- 5 Double pulse output (slave), phase-shifted


Relay output

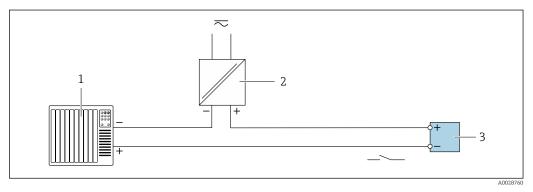

25 Connection example for relay output (passive)

- 1 Automation system with relay input (e.g. PLC)
- 2 Power supply
- 3 Transmitter: observe input values $\rightarrow \cong 219$


Current input

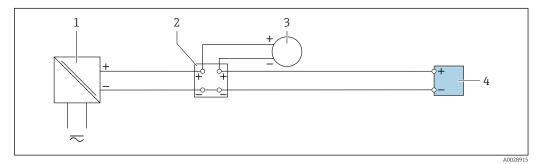

■ 26 Connection example for 4 to 20 mA current input

- 1 Power supply
- 2 Terminal box
- 3 External measuring device (to read in pressure or temperature, for instance)
- 4 Transmitter

Status input

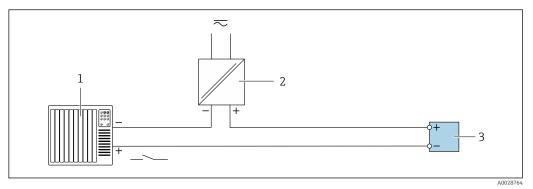

- 27 Connection example for status input
- 1 Automation system with status output (e.g. PLC)
- 2 Power supply
- 3 Transmitter


7.7 Hardware settings

7.7.1 Setting the device address

The device address must always be configured for a Modbus slave. The valid device addresses are in the range from 1 to 247. Each address may only be assigned once in a Modbus RS485 network. If an address is not configured correctly, the measuring device is not recognized by the Modbus master. All measuring devices are delivered from the factory with the device address 247 and with the "software addressing" address mode.

Proline 500 – digital transmitter

Hardware addressing

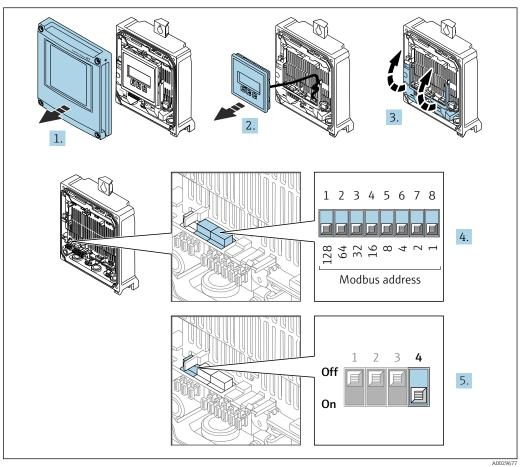


- 1. Open the housing cover.
- 2. Remove the display module.
- 3. Fold open the terminal cover.
- 4. Set the desired device address using the DIP switches.
- 5. To switch addressing from software addressing to hardware addressing: set the DIP switch to **On**.
 - └ The change of device address takes effect after 10 seconds.

Software addressing


- To switch addressing from hardware addressing to software addressing: set the DIP switch to Off.
 - └→ The device address configured in the **Device address** parameter takes effect after 10 seconds.

Proline 500 transmitter

Hardware addressing

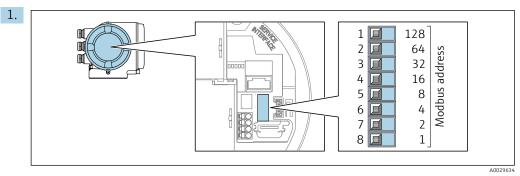

Set the desired device address using the DIP switches in the connection compartment.

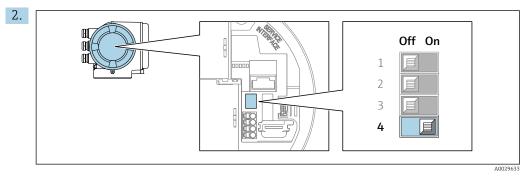

To switch addressing from software addressing to hardware addressing: set the DIP switch to **On**.


└ The change of device address takes effect after 10 seconds.

Software addressing

- To switch addressing from hardware addressing to software addressing: set the DIP switch to Off.
 - └→ The device address configured in the **Device address** parameter takes effect after 10 seconds.

7.7.2 Activating the terminating resistor


To avoid incorrect communication transmission caused by impedance mismatch, terminate the Modbus RS485 cable correctly at the start and end of the bus segment.

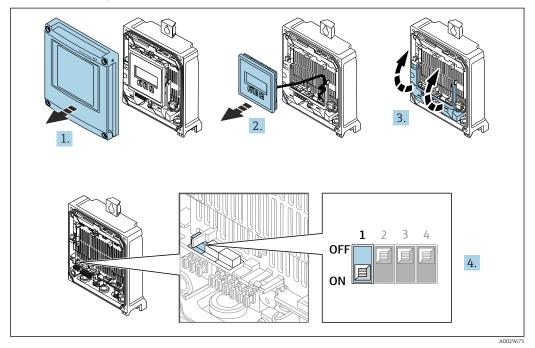

Proline 500 – digital transmitter

- 1. Open the housing cover.
- 2. Remove the display module.
- 3. Fold open the terminal cover.
- 4. Switch DIP switch no. 3 to **On**.

Proline 500 transmitter

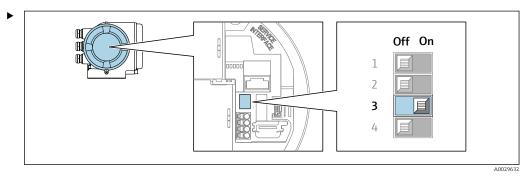

Switch DIP switch no. 3 to **On**.

7.8 Ensuring the degree of protection


The measuring device fulfills all the requirements for the degree of protection IP66/67, Type 4X enclosure.

To guarantee the degree of protection IP66/67, Type 4X enclosure, carry out the following steps after the electrical connection:

- 1. Check that the housing seals are clean and fitted correctly.
- 2. Dry, clean or replace the seals if necessary.
- 3. Tighten all housing screws and screw covers.
- 4. Firmly tighten the cable glands.

┕►

 To ensure that moisture does not enter the cable entry: Route the cable so that it loops down before the cable entry ("water trap").

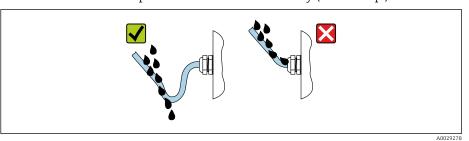


6. Insert dummy plugs (corresponding to the housing degree of protection) into unused cable entries.

7.9 Post-connection check

Are cables or the device undamaged (visual inspection)?	
Is the protective earthing established correctly?	
Do the cables used comply with the requirements ?	
Do the mounted cables have adequate strain relief?	
Are all cable glands installed, securely tightened and leak-tight? Cable run with "water trap" $\rightarrow \cong 62$?	
Is the terminal assignment correct ?	
Are dummy plugs inserted in unused cable entries and have transportation plugs been replaced with dummy plugs?	

8 Operation options

8.1 Overview of operation options

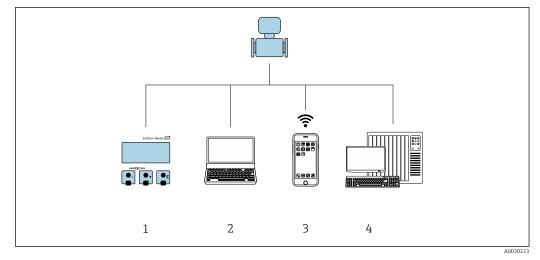


- 1 Local operation via display module
- 2 Computer with Web browser (e.g. Internet Explorer) or with operating tool (e.g. FieldCare, DeviceCare, AMS Device Manager, SIMATIC PDM)
- 3 Mobile handheld terminal with SmartBlue App
- 4 Control system (e.g. PLC)

8.2 Structure and function of the operating menu

8.2.1 Structure of the operating menu

For an overview of the operating menu for experts: see the "Description of Device Parameters" document supplied with the device $\rightarrow \square 248$

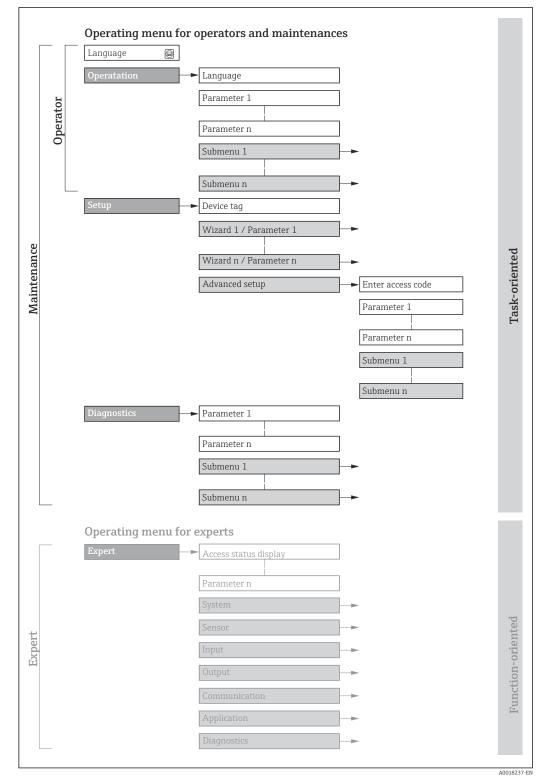

■ 28 Schematic structure of the operating menu

8.2.2 Operating philosophy

The individual parts of the operating menu are assigned to certain user roles (operator, maintenance etc.). Each user role contains typical tasks within the device lifecycle.


For custody transfer, once the device has been put into circulation or sealed, its operation is restricted.

Menu	/parameter	User role and tasks	Content/meaning		
Language	task-oriented	 Role "Operator", "Maintenance" Tasks during operation: Configuration of the operational display Reading measured values 	Defining the operating languageDefining the Web server operating languageResetting and controlling totalizers		
Operation			 Configuring the operational display (e.g. display format, display contrast) Resetting and controlling totalizers 		
Setup		 "Maintenance" role Commissioning: Configuration of the measurement Configuration of the inputs and outputs Configuration of the communication interface 	 Wizards for fast commissioning: Configuration of the system units Configuration of the communication interface Definition of the medium Displaying the I/O configuration Configuration of the inputs Configuration of the outputs Configuration of the low flow cut off Configuration of the detection of partially filled and empty pipes Advanced setup For more customized configuration of the measurement (adaptation to special measuring conditions) Configuration of WLAN settings Administration (define access code, reset measuring device) 		
Diagnostics		 "Maintenance" role Troubleshooting: Diagnostics and elimination of process and device errors Measured value simulation 	 Contains all parameters for error detection and analyzing process and device errors: Diagnostic list Contains up to 5 currently pending diagnostic messages. Event logbook Contains event messages that have occurred. Device information Contains information for identifying the device. Measured values Contains all current measured values. Data logging submenu with the "Extended HistoROM" order option Storage and visualization of measured values Heartbeat The functionality of the device is checked on demand and the verification results are documented. Simulation Is used to simulate measured values or output values. 		

Menu/parameter		User role and tasks	Content/meaning		
Expert	function-oriented	 Tasks that require detailed knowledge of the function of the device: Commissioning measurements under difficult conditions Optimal adaptation of the measurement to difficult conditions Detailed configuration of the communication interface Error diagnostics in difficult cases 	 Contains all the parameters of the device and makes it possible to access these parameters directly using an access code. The structure of this menu is based on the function blocks of the device: System Contains all higher-level device parameters that do not pertain either to the measurement or to measured value communication. Sensor Configuration of the measurement. Input Configuration of the status input. Output Comfiguration of the analog current outputs as well as the pulse/frequency and switch output. Communication Configuration of the digital communication interface and the Web server. Application Configuration of the functions that go beyond the actual measurement (e.g. totalizer). Diagnostics Error detection and analysis of process and device errors and for device simulation and Heartbeat Technology. 		

8.3 Access to the operating menu via the local display

8.3.1 Operational display

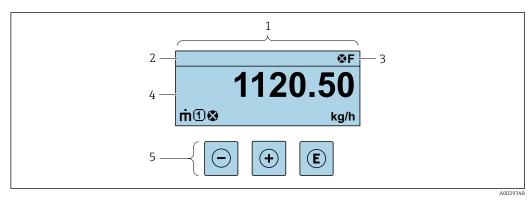

- 1 Operational display
- 2 Device tag
- 3 Status area
- 4 Display area for measured values (4-line)
- 5 Operating elements $\rightarrow \square 73$


Status area

The following symbols appear in the status area of the operational display at the top right:

- Status signals → 🗎 187
 - F: Failure
 - C: Function check
 - S: Out of specification
 - M: Maintenance required
- Diagnostic behavior → 🖺 188
 - 🛯 🐼: Alarm
 - <u>M</u>: Warning
- $\widehat{\Box}$: Locking (the device is locked via the hardware)
- 🖘 : Communication (communication via remote operation is active)

Display area

In the display area, each measured value is prefaced by certain symbol types for further description:

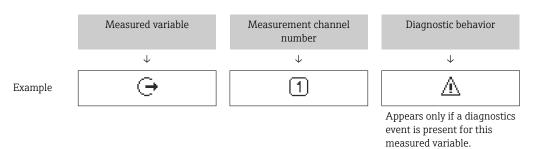

Measured variables

Symbol	Meaning
'n	Mass flow
Ú	Volume flowCorrected volume flow
ρ	DensityReference density
-	Temperature
Σ	Totalizer Image: The measurement channel number indicates which of the three totalizers is displayed.
Ģ	Output Image: The measurement channel number indicates which of the outputs is displayed.
Ð	Status input

Measurement channel numbers

Symbol	Meaning
14	Measurement channel 1 to 4
The measurement channel number is displayed only if more than one channel is present for the same measured variable type (e.g. Totalizer 1 to 3).	


Diagnostic behavior

The diagnostic behavior pertains to a diagnostic event that is relevant to the displayed measured variable. For information on the symbols $\rightarrow B$ 188

i


The number and display format of the measured values can be configured via the **Format display** parameter ($\Rightarrow \square 127$).

8.3.2 Navigation view

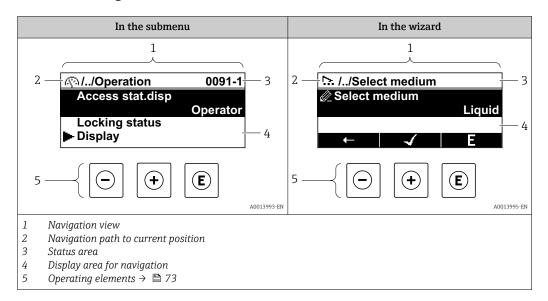

Navigation path

The navigation path - displayed at the top left in the navigation view - consists of the following elements:

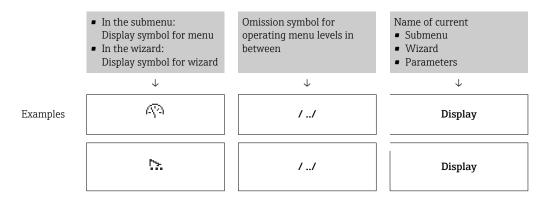


For more information about the icons in the menu, refer to the "Display area" section $\rightarrow \cong 70$

Status area

The following appears in the status area of the navigation view in the top right corner: • In the submenu

- The direct access code for the parameter you are navigating to (e.g. 0022-1)
- If a diagnostic event is present, the diagnostic behavior and status signal
- In the wizard
- If a diagnostic event is present, the diagnostic behavior and status signal

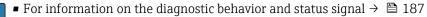

• For information on the function and entry of the direct access code $\rightarrow \square 75$

Display area

Menus

Symbol	Meaning
R	Operation Appears: In the menu next to the "Operation" selection At the left in the navigation path in the Operation menu
ų	 Setup Appears: In the menu next to the "Setup" selection At the left in the navigation path in the Setup menu
ų	Diagnostics Appears: In the menu next to the "Diagnostics" selection At the left in the navigation path in the Diagnostics menu
-3 ^e	 Expert Appears: In the menu next to the "Expert" selection At the left in the navigation path in the Expert menu

Submenus, wizards, parameters

Symbol	Meaning
•	Submenu
₩.	Wizard
Ø	Parameters within a wizard Image: No display symbol exists for parameters in submenus.

Locking


Symbol	Meaning
ô	Parameter lockedWhen displayed in front of a parameter name, indicates that the parameter is locked.By a user-specific access codeBy the hardware write protection switch

Wizard operation

Symbol	Meaning
	Switches to the previous parameter.
\checkmark	Confirms the parameter value and switches to the next parameter.
E	Opens the editing view of the parameter.

8.3.3 Editing view


Numeric editor

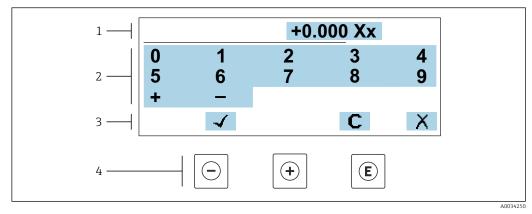

29 For entering values in parameters (e.g. limit values)

- 1 Entry display area
- 2 Input screen
- 3 Confirm, delete or reject entry
- 4 Operating elements

Text editor

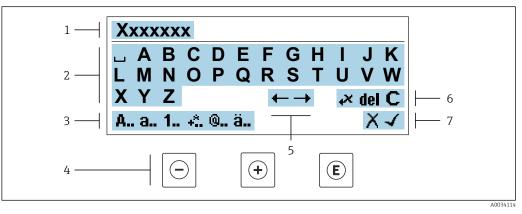

■ 30 For entering text in parameters (e.g. tag name)

- 1 Entry display area
- 2 Current input screen
- 3 Change input screen
- 4 Operating elements
- 5 Move entry position
- 6 Delete entry
- 7 Reject or confirm entry

Using the operating elements in the editing view

Кеу	Meaning
$\overline{\bigcirc}$	Minus key Move the entry position to the left.
(+)	Plus key Move the entry position to the right.

Кеу	Meaning
E	Enter keyPressing the key briefly confirms the selection.Pressing the key for 2 s confirms your entry.
— + +	Escape key combination (press keys simultaneously) Close the editing view without accepting a change.

Input screens

Symbol	Meaning
A	Upper case
а	Lower case
1	Numbers
+*	Punctuation marks and special characters: = + – * / ² ³ ¹ / ₄ ¹ / ₂ ³ / ₄ () [] < > { }
@	Punctuation marks and special characters: ' "`^. , ; : ? ! % µ ° € \$ £ ¥ § @ # / \ I ~ & _
ä	Umlauts and accents

Controlling data entries

Symbol	Meaning
←→	Move entry position
X	Reject entry
-	Confirm entry
×,	Delete character immediately to the left of the entry position
del	Delete character immediately to the right of the entry position
С	Clear all the characters entered

8.3.4 **Operating elements**

Key	Meaning
	Minus key
	<i>In menu, submenu</i> Moves the selection bar upwards in a picklist.
	With a wizard Confirms the parameter value and goes to the previous parameter.
	For text and numeric editor Move the entry position to the left.
	Plus key
	<i>In menu, submenu</i> Moves the selection bar downwards in a picklist.
	With a wizard Confirms the parameter value and goes to the next parameter.
	For text and numeric editor Move the entry position to the right.
	Enter key
	For operational display Pressing the key briefly opens the operating menu.
Ē	 In menu, submenu Pressing the key briefly: Opens the selected menu, submenu or parameter. Starts the wizard. If help text is open, closes the help text of the parameter. Pressing the key for 2 s in a parameter:
	If present, opens the help text for the function of the parameter. <i>With a wizard</i> Opens the editing view of the parameter.
	 For text and numeric editor Pressing the key briefly confirms the selection. Pressing the key for 2 s confirms your entry.
	Escape key combination (press keys simultaneously)
() ++	 In menu, submenu Pressing the key briefly: Exits the current menu level and takes you to the next level up. If help text is open, closes the help text of the parameter. Pressing the key for 2 s returns you to the operational display ("home position").
	With a wizard Exits the wizard and takes you to the next level up.
	For text and numeric editor Closes the editing view without applying changes.
	Minus/Enter key combination (press and hold down the keys simultaneously)
⊕+€	 If the keypad lock is enabled: Pressing the key for 3 s disables the keypad lock. If the keypad lock is not enabled: Pressing the key for 3 s opens the context menu including the selection for activating the keypad lock.

8.3.5 Opening the context menu


Using the context menu, the user can call up the following menus quickly and directly from the operational display:

- Setup
- Data backup
- Simulation

Calling up and closing the context menu

The user is in the operational display.

- **1**. Press the \Box and \blacksquare keys for longer than 3 seconds.
 - └ The context menu opens.

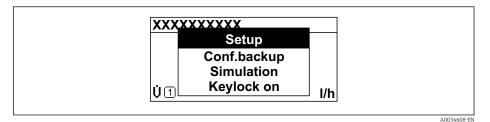

2. Press = + + simultaneously.

└ The context menu is closed and the operational display appears.

Calling up the menu via the context menu


- 1. Open the context menu.
- **2.** Press \pm to navigate to the desired menu.
- 3. Press 🗉 to confirm the selection.
 - └ The selected menu opens.

8.3.6 Navigating and selecting from list

Different operating elements are used to navigate through the operating menu. The navigation path is displayed on the left in the header. Icons are displayed in front of the individual menus. These icons are also shown in the header during navigation.

For an explanation of the navigation view with symbols and operating elements $\rightarrow \cong 69$


Example: Setting the number of displayed measured values to "2 values"

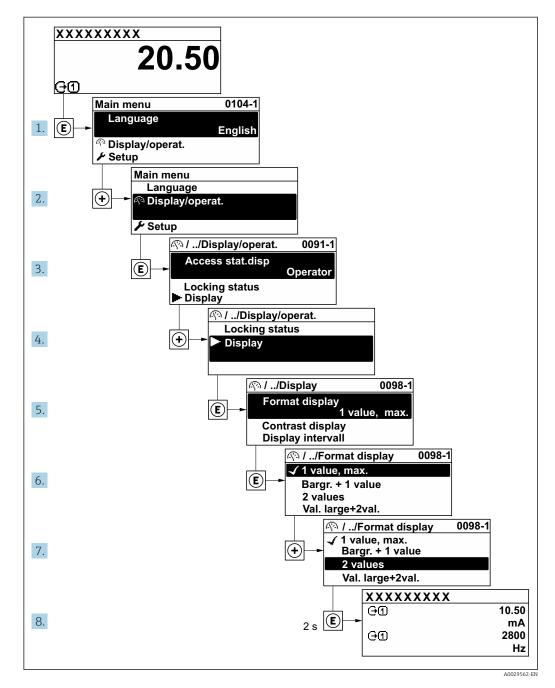

8.3.7 Calling the parameter directly

A parameter number is assigned to every parameter to be able to access a parameter directly via the onsite display. Entering this access code in the **Direct access** parameter calls up the desired parameter directly.

Navigation path Expert \rightarrow Direct access The direct access code consists of a 5-digit number (at maximum) and the channel number, which identifies the channel of a process variable: e.g. 00914-2. In the navigation view, this appears on the right-hand side in the header of the selected parameter.

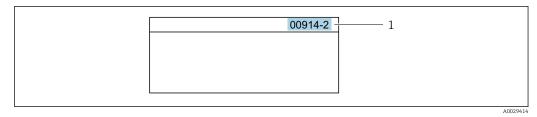

1 Direct access code

Note the following when entering the direct access code:

- The leading zeros in the direct access code do not have to be entered. Example: Enter "914" instead of "00914"
- If no channel number is entered, channel 1 is opened automatically.
 Example: Enter 00914 → Assign process variable parameter
- If a different channel is opened: Enter the direct access code with the corresponding channel number.

Example: Enter $00914\text{-}2 \rightarrow Assign \ process \ variable \ parameter$

For the direct access codes of the individual parameters, see the "Description of Device Parameters" document for the device

8.3.8 Calling up help text


Help text is available for some parameters and can be called up from the navigation view. The help text provides a brief explanation of the parameter function and thereby supports swift and safe commissioning.

Calling up and closing the help text

The user is in the navigation view and the selection bar is on a parameter.

1. Press E for 2 s.

← The help text for the selected parameter opens.

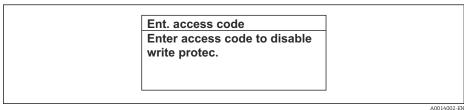

- 31 Example: Help text for parameter "Enter access code"
- 2. Press + + simultaneously.
 - └ The help text is closed.

8.3.9 Changing the parameters

Parameters can be changed via the numeric editor or text editor.

- Numeric editor: Change values in a parameter, e.g. specifications for limit values.
- Text editor: Enter text in a parameter, e.g. tag name.

A message is displayed if the value entered is outside the permitted value range.

Ent. access code
Invalid or out of range input
value
Min:0
Max:9999

For a description of the editing view - consisting of the text editor and numeric editor - with symbols → 🗎 71, for a description of the operating elements → 🗎 73

8.3.10 User roles and related access authorization

The two user roles "Operator" and "Maintenance" have different write access to the parameters if the customer defines a user-specific access code. This protects the device configuration via the local display from unauthorized access $\rightarrow \cong 154$.

Defining access authorization for user roles

An access code is not yet defined when the device is delivered from the factory. Access authorization (read and write access) to the device is not restricted and corresponds to the "Maintenance" user role.

- ► Define the access code.
 - └ The "Operator" user role is redefined in addition to the "Maintenance" user role. Access authorization differs for the two user roles.

Access authorization to parameters: "Maintenance" user role

Access code status	Read access	Write access
An access code has not yet been defined (factory setting).	V	V
After an access code has been defined.	V	✓ ¹⁾

1) The user only has write access after entering the access code.

Access authorization to parameters: "Operator" user role

Access code status	Read access	Write access
After an access code has been defined.	V	_ 1)

 Despite the defined access code, certain parameters can always be modified and thus are excluded from the write protection, as they do not affect the measurement. Refer to the "Write protection via access code" section

The user role with which the user is currently logged on is indicated by the **Access status** parameter. Navigation path: Operation → Access status

8.3.11 Disabling write protection via access code

If the @-symbol appears on the local display in front of a parameter, the parameter is write-protected by a user-specific access code and its value cannot be changed at the moment using local operation $\Rightarrow @$ 154.

Parameter write protection via local operation can be disabled by entering the user-specific access code in the **Enter access code** parameter ($\rightarrow \square$ 133) via the respective access option.

1. After you press E, the input prompt for the access code appears.

2. Enter the access code.

➡ The B -symbol in front of the parameters disappears; all previously writeprotected parameters are now re-enabled.

8.3.12 Enabling and disabling the keypad lock

The keypad lock makes it possible to block access to the entire operating menu via local operation. As a result, it is no longer possible to navigate through the operating menu or change the values of individual parameters. Users can only read the measured values on the operational display.

The keypad lock is switched on and off via the context menu.

Switching on the keypad lock

The keypad lock is switched on automatically:

- If the device has not been operated via the display for > 1 minute.
- Each time the device is restarted.

To activate the keylock manually:

1. The device is in the measured value display.

- Press the \Box and \blacksquare keys for 3 seconds.
- 2. In the context menu select the **Keylock on** option.
 - └ The keypad lock is switched on.

If the user attempts to access the operating menu while the keypad lock is active, the **Keylock on** message appears.

Switching off the keypad lock

- The keypad lock is switched on.
 - Press the \Box and \blacksquare keys for 3 seconds.
 - └ The keypad lock is switched off.

8.4 Access to the operating menu via the Web browser

8.4.1 Function scope

Thanks to the integrated Web server the device can be operated and configured via a Web browser and via the service interface (CDI-RJ45) or via the WLAN interface. The structure of the operating menu is the same as for the local display. In addition to the measured values, device status information is also displayed and allows users to monitor the status of the device. Furthermore the device data can be managed and the network parameters can be configured.

A device that has a WLAN interface (can be ordered as an option) is required for the WLAN connection: order code for "Display; operation", option G "4-line, illuminated; touch control + WLAN". The device acts as an Access Point and enables communication by computer or a mobile handheld terminal.

For additional information on the Web server, refer to the Special Documentation for the device $\rightarrow \cong 249$

8.4.2 Requirements

Computer hardware

Hardware	Interface	
	CDI-RJ45	WLAN
Interface	The computer must have an RJ45 interface.	The operating unit must have a WLAN interface.
Connection	Ethernet cable with RJ45 connector.	Connection via Wireless LAN.
Screen	Recommended size: ≥12" (depends on the screen resolution)	

Computer software

Software	Interface	
	CDI-RJ45	WLAN
Recommended operating systems	 Microsoft Windows 8 or higher. Mobile operating systems: iOS Android Microsoft Windows XP is supported. 	
Web browsers supported	 Microsoft Internet Explorer 8 or higher Microsoft Edge Mozilla Firefox Google Chrome Safari 	

Computer settings

Settings	Interface		
	CDI-RJ45	WLAN	
User rights	Appropriate user rights (e.g. administrator rights) for TCP/IP and proxy server settings are necessary (for adjusting the IP address, subnet mask etc.).		
Proxy server settings of the Web browser	The Web browser setting <i>Use proxy server for LAN</i> must be disabled .		
JavaScript	JavaScript must be enabled.		
	If JavaScript cannot be enabled: Enter http://192.168.1.212/servlet/basic.html in the address bar of the web browser. A fully functional but simplified version of the operating menu structure starts in the Web browser.		
	When installing a new firmware version: To enable correct data display, clear the temporary memory (cache) of the Web browser under Internet options .		
Network connections	Only the active network connections to the measuring device should be used.		
	Switch off all other network connections such as WLAN.	Switch off all other network connections.	

In the event of connection problems: $\rightarrow \cong 182$

Measuring device: Via CDI-RJ45 service interface

Device	CDI-RJ45 service interface
Measuring device	The measuring device has an RJ45 interface.
Web server	 Web server must be enabled; factory setting: ON I For information on enabling the Web server → ■ 84

Measuring device: via WLAN interface

Device	WLAN interface
Measuring device	The measuring device has a WLAN antenna:Transmitter with integrated WLAN antennaTransmitter with external WLAN antenna
Web server	Web server and WLAN must be enabled; factory setting: ONI For information on enabling the Web server → 84

8.4.3 Establishing a connection

Via service interface (CDI-RJ45)

Preparing the measuring device

Proline 500 – digital

- 1. Loosen the 4 fixing screws on the housing cover.
- 2. Open the housing cover.
- 3. The location of the connection socket depends on the measuring device and the communication protocol:

Connect the computer to the RJ45 plug via the standard Ethernet connecting cable .

Proline 500

- Depending on the housing version: Loosen the securing clamp or fixing screw of the housing cover.
- 2. Depending on the housing version: Unscrew or open the housing cover.
- 3. The location of the connection socket depends on the measuring device and the communication protocol:

Connect the computer to the RJ45 plug via the standard Ethernet connecting cable .

Configuring the Internet protocol of the computer

The following information refers to the default Ethernet settings of the device.

IP address of the device: 192.168.1.212 (factory setting)

- 1. Switch on the measuring device.
- **2.** Connect to the computer using a cable $\rightarrow \cong 85$.
- 3. If a 2nd network card is not used, close all the applications on the notebook.
 - ← Applications requiring Internet or a network, such as e-mail, SAP applications, Internet or Windows Explorer.
- 4. Close any open Internet browsers.
- 5. Configure the properties of the Internet protocol (TCP/IP) as defined in the table:

IP address	192.168.1.XXX; for XXX all numerical sequences except: 0, 212 and 255 \rightarrow e.g. 192.168.1.213
Subnet mask	255.255.255.0
Default gateway	192.168.1.212 or leave cells empty

Via WLAN interface

Configuring the Internet protocol of the mobile terminal

NOTICE

If the WLAN connection is lost during the configuration, settings made may be lost.

▶ Make sure that the WLAN connection is not disconnected while configuring the device.

NOTICE

In principle, avoid simultaneous access to the measuring device via the service interface (CDI-RJ45) and the WLAN interface from the same mobile terminal. This could cause a network conflict.

- Only activate one service interface (CDI-RJ45 service interface or WLAN interface).
- ► If simultaneous communication is necessary: configure different IP address ranges, e.g. 192.168.0.1 (WLAN interface) and 192.168.1.212 (CDI-RJ45 service interface).

Preparing the mobile terminal

• Enable WLAN reception on the mobile terminal.

Establishing a connection from the mobile terminal to the measuring device

1. In the WLAN settings of the mobile terminal:

Select the measuring device using the SSID (e.g. EH_Promass_500_A802000).

- 2. If necessary, select the WPA2 encryption method.
- **3.** Enter the password: serial number of the measuring device ex-works (e.g. L100A802000).
 - └ LED on display module flashes: it is now possible to operate the measuring device with a web browser, FieldCare or DeviceCare.
 - The serial number can be found on the nameplate.
 - To ensure the safe and swift assignment of the WLAN network to the measuring point, it is advisable to change the SSID name. It should be possible to clearly assign the new SSID name to the measuring point (e.g. tag name) because it is displayed as the WLAN network.

Disconnecting


 After configuring the device: Terminate the WLAN connection between the operating unit and measuring device.

Starting the Web browser

1. Start the Web browser on the computer.

2. Enter the IP address of the web server in the address line of the web browser: 192.168.1.212

└ The login page appears.

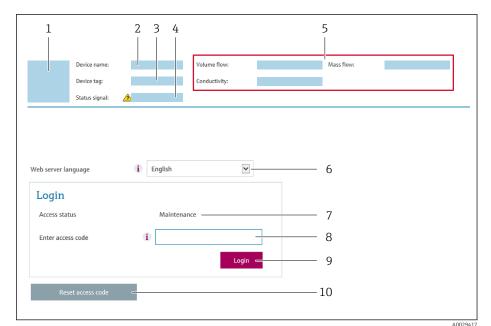

- 1 Picture of device
- 2 Device name
- Device tag
 Status signa
- 4 Status signal
- 5 Current measured values6 Operating language
- 7 User role
- 8 Access code
- 9 Login
- 10 Reset access code ($\rightarrow \square 150$)

If a login page does not appear, or if the page is incomplete $\rightarrow \cong 182$

8.4.4 Logging on


1. Select the preferred operating language for the Web browser.

- 2. Enter the user-specific access code.
- 3. Press **OK** to confirm your entry.

Access code 0000 (default setting); can be changed by customer
--

If no action is performed for 10 minutes, the Web browser automatically returns to the login page.

8.4.5 User interface

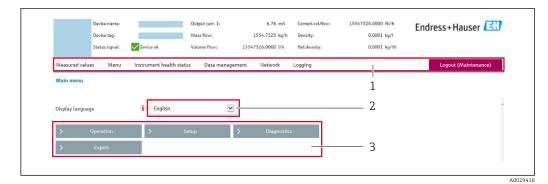

- 1 Function row
- 2 Local display language
- 3 Navigation area

Header

The following information appears in the header:

- Device name
- Device tag
- Device status with status signal \rightarrow \square 190
- Current measured values

Function row

Functions	Meaning
Measured values	Displays the measured values of the device
Menu	 Access to the operating menu from the measuring device The structure of the operating menu is the same as for the local display For detailed information on the structure of the operating menu, see the Operating Instructions for the measuring device
Device status	Displays the diagnostic messages currently pending, listed in order of priority
Data management	 Data exchange between PC and measuring device: Device configuration: Load settings from the device (XML format, save configuration) Save settings to the device (XML format, restore configuration) Logbook - Export Event logbook (.csv file) Documents - Export documents: Export backup data record (.csv file, create documentation of the measuring point configuration) Verification report (PDF file, only available with the "Heartbeat Verification" application package)
Network configuration	Configuration and checking of all the parameters required for establishing the connection to the measuring device: Network settings (e.g. IP address, MAC address) Device information (e.g. serial number, firmware version)
Logout	End the operation and call up the login page

Navigation area

If a function is selected in the function bar, the submenus of the function open in the navigation area. The user can now navigate through the menu structure.

Working area

Depending on the selected function and the related submenus, various actions can be performed in this area:

- Configuring parameters
- Reading measured values
- Calling up help text
- Starting an upload/download

8.4.6 Disabling the Web server

The Web server of the measuring device can be switched on and off as required using the **Web server functionality** parameter.

Navigation

"Expert" menu \rightarrow Communication \rightarrow Web server

Parameter overview with brief description

Parameter	Description	Selection	Factory setting
Web server functionality	Switch the Web server on and off.	OffHTML OffOn	On

Function scope of the "Web server functionality" parameter

Option	Description
Off	The Web server is completely disabled.Port 80 is locked.
HTML Off	The HTML version of the Web server is not available.
On	 The complete Web server functionality is available. JavaScript is used. The password is transferred in an encrypted state. Any change to the password is also transferred in an encrypted state.

Enabling the Web server

If the Web server is disabled it can only be re-enabled with the **Web server functionality** parameter via the following operating options:

- Via local display
- Via Bedientool "FieldCare"
- Via "DeviceCare" operating tool

8.4.7 Logging out

Before logging out, perform a data backup via the **Data management** function (upload configuration from device) if necessary.

- 1. Select the **Logout** entry in the function row.
 - ← The home page with the Login box appears.
- 2. Close the Web browser.
- 3. If no longer needed:

Reset the modified properties of the Internet protocol (TCP/IP) $\rightarrow \cong$ 80.


8.5 Access to the operating menu via the operating tool

The structure of the operating menu in the operating tools is the same as for operation via the local display.

8.5.1 Connecting the operating tool

Via Modbus RS485 protocol

This communication interface is available in device versions with a Modbus-RS485 output.

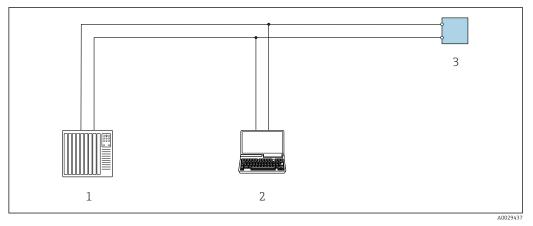

32 Options for remote operation via Modbus-RS485 protocol (active)

- 1 Control system (e.g. PLC)
- 2 Computer with Web browser (e.g. Internet Explorer) for accessing the integrated device Web server or with operating tool (e.g. FieldCare, DeviceCare) with COM DTM "CDI Communication TCP/IP" or Modbus DTM
- 3 Transmitter

Service interface


Via service interface (CDI-RJ45)

A point-to-point connection can be established via onsite device configuration. With the housing open, the connection is established directly via the service interface (CDI-RJ45) of the device.

An adapter for RJ45 to the M12 plug is optionally available: Order code for "Accessories", option **NB**: "Adapter RJ45 M12 (service interface)"

The adapter connects the service interface (CDI-RJ45) to an M12 plug mounted in the cable entry. The connection to the service interface can be established via an M12 plug without opening the device.


Proline 500 – digital transmitter

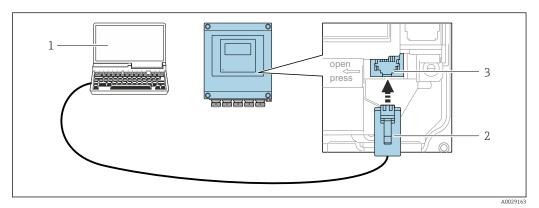

■ 33 Connection via service interface (CDI-RJ45)

- 1 Computer with Web browser (e.g. Microsoft Internet Explorer, Microsoft Edge) for accessing the integrated Web server or with "FieldCare", "DeviceCare" operating tool with COM DTM "CDI Communication TCP/IP" or Modbus DTM
- 2 Standard Ethernet connecting cable with RJ45 plug
- 3 Service interface (CDI-RJ45) of the measuring device with access to the integrated Web server

Proline 500 transmitter

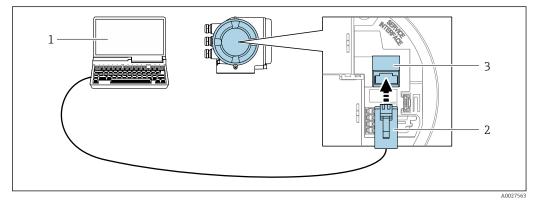


☑ 34 Connection via service interface (CDI-RJ45)

- 1 Computer with Web browser (e.g. Microsoft Internet Explorer, Microsoft Edge) for accessing the integrated Web server or with "FieldCare", "DeviceCare" operating tool with COM DTM "CDI Communication TCP/IP" or Modbus DTM
- 2 Standard Ethernet connecting cable with RJ45 plug
- 3 Service interface (CDI-RJ45) of the measuring device with access to the integrated Web server

Via WLAN interface

The optional WLAN interface is available on the following device version: Order code for "Display; operation", option G "4-line, illuminated; touch control + WLAN"

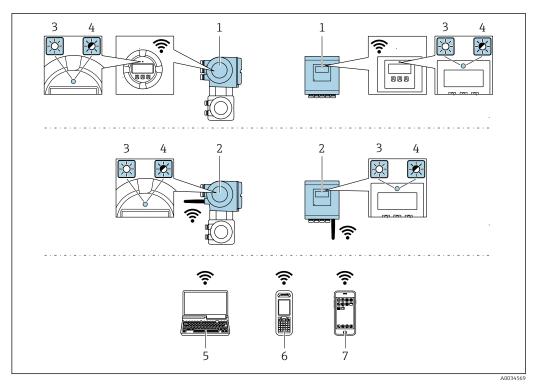

- 1 Transmitter with integrated WLAN antenna
- 2 Transmitter with external WLAN antenna
- 3 LED lit constantly: WLAN reception is enabled on measuring device
- 4 LED flashing: WLAN connection established between operating unit and measuring device
- 5 Computer with WLAN interface and Web browser (e.g. Microsoft Internet Explorer, Microsoft Edge) for accessing the integrated device Web server or with operating tool (e.g. FieldCare, DeviceCare)
- 6 Mobile handheld terminal with WLAN interface and Web browser (e.g. Microsoft Internet Explorer, Microsoft Edge) for accessing the integrated device Web server or operating tool (e.g. FieldCare, DeviceCare)
- 7 Smart phone or tablet (e.g. Field Xpert SMT70)

Function	WLAN: IEEE 802.11 b/g (2.4 GHz)	
Encryption	WPA2-PSK AES-128 (in accordance with IEEE 802.11i)	
Configurable WLAN channels	1 to 11	
Degree of protection	IP67	
Available antennas	 Internal antenna External antenna (optional) In the event of poor transmission/reception conditions at the place of installation. Only 1 antenna is active at any one time! 	
Range	 Internal antenna: typically 10 m (32 ft) External antenna: typically 50 m (164 ft) 	
Materials (external antenna)	 Antenna: ASA plastic (acrylic ester-styrene-acrylonitrile) and nickel- plated brass Adapter: Stainless steel and nickel-plated brass Cable: Polyethylene Plug: Nickel-plated brass Angle bracket: Stainless steel 	

Configuring the Internet protocol of the mobile terminal

NOTICE

If the WLAN connection is lost during the configuration, settings made may be lost.

▶ Make sure that the WLAN connection is not disconnected while configuring the device.

NOTICE

In principle, avoid simultaneous access to the measuring device via the service interface (CDI-RJ45) and the WLAN interface from the same mobile terminal. This could cause a network conflict.

- Only activate one service interface (CDI-RJ45 service interface or WLAN interface).
- ► If simultaneous communication is necessary: configure different IP address ranges, e.g. 192.168.0.1 (WLAN interface) and 192.168.1.212 (CDI-RJ45 service interface).

Preparing the mobile terminal

• Enable WLAN reception on the mobile terminal.

Establishing a connection from the mobile terminal to the measuring device

1. In the WLAN settings of the mobile terminal:

Select the measuring device using the SSID (e.g. EH_Promass_500_A802000).

- 2. If necessary, select the WPA2 encryption method.
- **3.** Enter the password: serial number of the measuring device ex-works (e.g. L100A802000).
 - LED on display module flashes: it is now possible to operate the measuring device with a web browser, FieldCare or DeviceCare.
- The serial number can be found on the nameplate.
- To ensure the safe and swift assignment of the WLAN network to the measuring point, it is advisable to change the SSID name. It should be possible to clearly assign the new SSID name to the measuring point (e.g. tag name) because it is displayed as the WLAN network.

Disconnecting

 After configuring the device: Terminate the WLAN connection between the operating unit and measuring device.

8.5.2 FieldCare

Function scope

FDT-based plant asset management tool from Endress+Hauser. It can configure all smart field devices in a system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition.

Access is via:

- CDI-RJ45 service interface $\rightarrow \cong 85$
- WLAN interface $\rightarrow \cong 86$

Typical functions:

- Parameterization of transmitters
- Loading and saving device data (upload/download)
- Documentation of the measuring point
- Visualization of the measured value memory (line recorder) and event logbook

For additional information about FieldCare, see Operating Instructions BA00027S and BA00059S

Source for device description files


See information $\rightarrow \square 90$

Establishing a connection

	Т
1	

For additional information, see Operating Instructions BA00027S and BA00059S

User interface

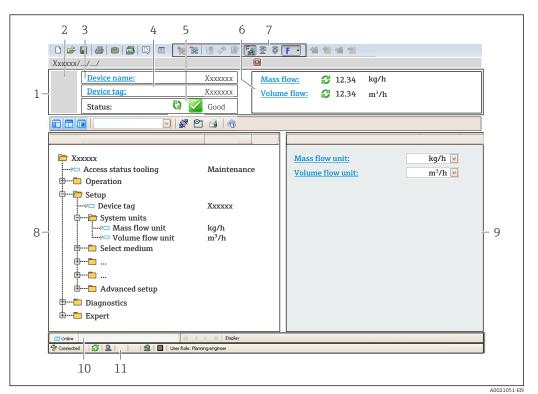

- 1 Header
- 2 Picture of device
- 3 Device name
- 4 Tag name
- 5 Status area with status signal $\rightarrow \square$ 190
- 6 Display area for current measured values
- 7 Edit bar with additional functions such as save/load, event list and document creation
- 8 Navigation area with operating menu structure
- 9 Working area
- 10 Range of action
- 11 Status area

8.5.3 DeviceCare

Function scope

Tool for connecting and configuring Endress+Hauser field devices.

The fastest way to configure Endress+Hauser field devices is with the dedicated "DeviceCare" tool. Together with the device type managers (DTMs) it presents a convenient, comprehensive solution.

For details, see Innovation Brochure IN01047S

Source for device description files

See information $\rightarrow \square 90$

9 System integration

9.1 **Overview of device description files**

9.1.1 Current version data for the device

Firmware version	01.06.zz	 On the title page of the Operating Instructions On the transmitter nameplate Firmware version Diagnostics → Device information → Firmware version
Release date of firmware version	08.2022	

For an overview of the various firmware versions for the device $\rightarrow \cong 204$

9.1.2 Operating tools

The suitable device description file for the individual operating tools is listed in the table below, along with information on where the file can be acquired.

Operating tool via service interface (CDI) or Modbus interface	Sources for obtaining device descriptions
FieldCare	 www.endress.com → Download Area CD-ROM (contact Endress+Hauser) DVD (contact Endress+Hauser)
DeviceCare	 www.endress.com → Download Area CD-ROM (contact Endress+Hauser) DVD (contact Endress+Hauser)

9.2 Compatibility with earlier model

If the device is replaced, the measuring device Promass 500 supports the compatibility of the Modbus registers for the process variables and the diagnostic information with the previous model Promass 83. It is not necessary to change the engineering parameters in the automation system.

Compatible Modbus registers: process variables

Process variable	Compatible Modbus registers
Mass flow	2007
Volume flow	2009
Corrected volume flow	2011
Density	2013
Reference density	2015
Temperature	2017
Totalizer 1	2610
Totalizer 2	2810
Totalizer 3	3010

Compatible Modbus registers: diagnostic information

Diagnostic information	Compatible Modbus registers
Diagnostic code (data type: String), e.g. F270	6821
Diagnostic number (data type: Integer), e.g. 270	6859

The Modbus registers are compatible but the diagnostic numbers are not. Overview of the new diagnostic numbers $\rightarrow \square$ 193.

9.3 Modbus RS485 information

9.3.1 Function codes

Function codes are used to define which read or write action is carried out via the Modbus protocol. The measuring device supports the following function codes:

Code	Name	Description	Application
03	Read holding register	Master reads one or more Modbus registers from the device. A maximum of 125 consecutive registers can be read with 1 telegram: 1 register = 2 bytes The measuring device does not make a distinction between function codes 03 and 04; these codes therefore yield the same result.	Read device parameters with read and write access Example: Read mass flow
04	Read input register	Master reads one or more Modbus registers from the device. A maximum of 125 consecutive registers can be read with 1 telegram: 1 register = 2 bytes The measuring device does not make a distinction between function codes 03 and 04; these codes therefore yield the same result.	Read device parameters with read access Example: Read totalizer value
06	Write single registers	Master writes a new value to one Modbus register of the measuring device. Use function code 16 to write multiple registers with just 1 telegram.	Write only 1 device parameter Example: reset totalizer
08	Diagnostics	 Master checks the communication connection to the measuring device. The following "Diagnostics codes" are supported: Sub-function 00 = Return query data (loopback test) Sub-function 02 = Return diagnostics register 	

Code	Name	Description	Application
16	Write multiple registers	Master writes a new value to multiple Modbus registers of the device. A maximum of 120 consecutive registers can be written with 1 telegram.	Write multiple device parameters Example: • Mass flow unit • Mass unit
		If the required device parameters are not available as a group, yet must nevertheless be addressed with a single telegram, use Modbus data map → 93	
23	Read/Write multiple registers	Master reads and writes a maximum of 118 Modbus registers of the measuring device simultaneously with 1 telegram. Write access is executed before read access.	Write and read multiple device parameters Example: • Read mass flow • Reset totalizer

Broadcast messages are only allowed with function codes 06, 16 and 23.

9.3.2 Register information

For an overview of device parameters with their respective Modbus register information, please refer to the "Modbus RS485 register information" section in the "Description of device parameters" documentation $\rightarrow \square$ 248.

9.3.3 Response time

Response time of the measuring device to the request telegram of the Modbus master: typically 3 to 5 ms

9.3.4 Data types

The measuring device supports the following data types:

FLOAT (floating po Data length = 4 byt	int number IEEE 754) es (2 registers)		
Byte 3	Byte 2	Byte 1	Byte 0
SEEEEEE EMMMMMMM MMMMMMMM MMMMMMMMM			
S = sign, E = exponent, M = mantissa			

INTEGER Data length = 2 bytes (1 register)	
Byte 1	Byte 0
Most significant byte (MSB)	Least significant byte (LSB)

STRING Data length = depends on the bytes (9 registers)	device parameter, e	.g. presentatio	on of a device para	meter with a data length = 18
Byte 17Byte 16Byte 1Byte 0				
Most significant byte (MSB)				Least significant byte (LSB)

9.3.5 Byte transmission sequence

Byte addressing, i.e. the transmission sequence of the bytes, is not specified in the Modbus specification. For this reason, it is important to coordinate or match the addressing method between the master and slave during commissioning. This can be configured in the measuring device using the **Byte order** parameter.

The bytes are transmitted depending on the selection in the **Byte order** parameter:

	Sequence			
Options	1.	2.	3.	4.
1-0-3-2*	Byte 1	Byte 0	Byte 3	Byte 2
	(MMMMMMMM)	(MMMMMMMM)	(SEEEEEEE)	(EMMMMMMM)
0 - 1 - 2 - 3	Byte 0	Byte 1	Byte 2	Byte 3
	(MMMMMMMM)	(MMMMMMMM)	(EMMMMMMM)	(SEEEEEEE)
2 - 3 - 0 - 1	Byte 2	Byte 3	Byte 0	Byte 1
	(EMMMMMMM)	(SEEEEEEE)	(MMMMMMM)	(MMMMMMM)
3 - 2 - 1 - 0	Byte 3	Byte 2	Byte 1	Byte 0
	(SEEEEEE)	(EMMMMMMM)	(MMMMMMMM)	(MMMMMMMM)

INTEGER			
	Sequence		
Options	1.	2.	
1 - 0 - 3 - 2 * 3 - 2 - 1 - 0	Byte 1 (MSB)	Byte 0 (LSB)	
0 - 1 - 2 - 3 2 - 3 - 0 - 1	Byte 0 (LSB)	Byte 1 (MSB)	

* = factory setting, MSB = most significant byte, LSB = least significant byte

	Sequence			
Options	1.	2.	 17.	18.
1 - 0 - 3 - 2 * 3 - 2 - 1 - 0	Byte 17 (MSB)	Byte 16	 Byte 1	Byte 0 (LSB)
0 - 1 - 2 - 3 2 - 3 - 0 - 1	Byte 16	Byte 17 (MSB)	 Byte 0 (LSB)	Byte 1

9.3.6 Modbus data map

Function of the Modbus data map

The device offers a special memory area, the Modbus data map (for a maximum of 16 device parameters), to allow users to call up multiple device parameters via Modbus RS485 and not only individual device parameters or a group of consecutive device parameters.

Grouping of device parameters is flexible and the Modbus master can read or write to the entire data block simultaneously with a single request telegram.

Structure of the Modbus data map

The Modbus data map consists of two data sets:

- Scan list: Configuration area The device parameters to be grouped are defined in a list by entering their Modbus RS485 register addresses in the list.
- Data area

The measuring device reads out the register addresses entered in the scan list cyclically and writes the associated device data (values) to the data area.



For an overview of device parameters with their respective Modbus register information, please refer to the "Modbus RS485 register information" section in the "Description of device parameters" documentation $\rightarrow \square 248$.

Scan list configuration

For configuration, the Modbus RS485 register addresses of the device parameters to be grouped must be entered in the scan list. Please note the following basic requirements of the scan list:

Max. entries	16 device parameters
Supported device parameters	Only parameters with the following characteristics are supported:Access type: read or write accessData type: float or integer

Configuration of the scan list via FieldCare or DeviceCare

Carried out using the operating menu of the measuring device: Expert \rightarrow Communication \rightarrow Modbus data map \rightarrow Scan list register 0 to 15

Scan list		
No.	Configuration register	
0	Scan list register 0	
15	Scan list register 15	

Configuration of the scan list via Modbus RS485

Carried out using register addresses 5001 - 5016

Scan list			
No.	Modbus RS485 register	Data type	Configuration register
0	5001	Integer	Scan list register 0
		Integer	
15	5016	Integer	Scan list register 15

Reading out data via Modbus RS485

The Modbus master accesses the data area of the Modbus data map to read out the current values of the device parameters defined in the scan list.

Master access to data area	Via register addresses 5051-5081
----------------------------	----------------------------------

Data area				
Device parameter value	Modbus RS485	Modbus RS485 register		Access**
	Start register	End register (Float only)		
Value of scan list register 0	5051	5052	Integer/float	Read/write
Value of scan list register 1	5053	5054	Integer/float	Read/write
Value of scan list register				
Value of scan list register 15	5081	5082	Integer/float	Read/write

* Data type depends on the device parameters entered in the scan list. ** Data access depends on the device parameters entered in the scan list. If the device parameter entered supports read and write access, the parameter can also be accessed via the data area.

10 Commissioning

10.1 Function check

Before commissioning the measuring device:

- Make sure that the post-installation and post-connection checks have been performed.
- Checklist for "Post-mounting check" $\rightarrow \square 34$
- Checklist for "Post-connection check" $\rightarrow \cong 63$

10.2 Switching on the measuring device

- After a successful function check, switch on the measuring device.
 - ← After a successful startup, the local display switches automatically from the startup display to the operational display.

If nothing appears on the local display or a diagnostic message is displayed, refer to the section on "Diagnostics and troubleshooting" $\rightarrow \square$ 181.


10.3 Setting the operating language

Factory setting: English or ordered local language

The operating language can be set in FieldCare or DeviceCare: Operation \rightarrow Display language

10.4 Configuring the measuring device


- The **Setup** menu with its guided wizards contains all the parameters needed for standard operation.
- Navigation to the Setup menu

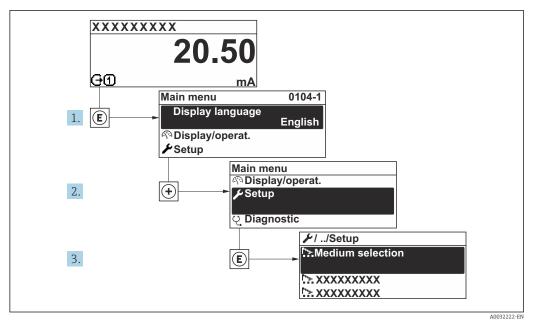

35 Taking the example of the local display


The number of submenus and parameters can vary depending on the device version. Certain submenus and parameters in these submenus are not described in the Operation Instructions. Instead a description is provided in the Special Documentation for the device (→ "Supplementary documentation" section).

🗲 Setup		
	Device tag	
	► System units	→ 🗎 98
	► Communication	→ 🗎 100
	► Medium selection	→ 🗎 102
	► I/O configuration	→ 🖺 104
	► Current input 1 to n	→ 🗎 105
	► Status input 1 to n	→ 🗎 106
	► Current output 1 to n	→ 🗎 107
	► Pulse/frequency/switch output 1 to n	→ 🗎 112
	► Relay output 1 to n	→ 🗎 121
	► Double pulse output	→ 🗎 124
	► Display	→ 🗎 125

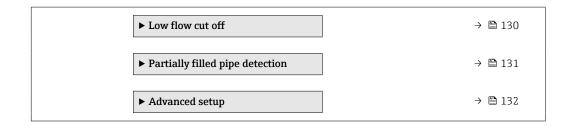

10.4.1 Defining the tag name

To enable fast identification of the measuring point within the system, you can enter a unique designation using the **Device tag** parameter and thus change the factory setting.

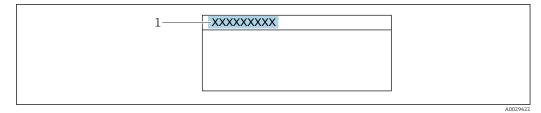

■ 36 Header of the operational display with tag name

1 Tag name

Enter the tag name in the "FieldCare" operating tool $\rightarrow \cong 89$

Navigation

"Setup" menu \rightarrow Device tag

Parameter overview with brief description

Parameter	Description	User entry	Factory setting
Device tag	Enter the name for the measuring point.	Max. 32 characters, such as letters, numbers or special characters (e.g. @, %, /).	Promag

10.4.2 Setting the system units

In the **System units** submenu the units of all the measured values can be set.

The number of submenus and parameters can vary depending on the device version. Certain submenus and parameters in these submenus are not described in the Operation Instructions. Instead a description is provided in the Special Documentation for the device (→ "Supplementary documentation" section).

Navigation

"Setup" menu → System units

► System units	
Mass flow unit] → 🗎 99
Mass unit] → 🗎 99
Volume flow unit] → 🗎 99

] →	₿ 99
e flow unit] →	₿ 99
eunit]	₿ 99
]	₿ 99
/ unit]	₿ 100
	- 	100
t		100
] →	₿ 100
	e flow unit e unit y unit t	$\begin{array}{c} \begin{array}{c} \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\$

Parameter	Description	Selection	Factory setting
Mass flow unit	Select mass flow unit. <i>Effect</i> The selected unit applies for: • Output • Low flow cut off • Simulation process variable	Unit choose list	Country-specific: • kg/h • lb/min
Mass unit	Select mass unit.	Unit choose list	Country-specific: • kg • lb
Volume flow unit	Select volume flow unit. <i>Effect</i> The selected unit applies for: • Output • Low flow cut off • Simulation process variable	Unit choose list	Depends on country: • l/h • gal/min (us)
Volume unit	Select volume unit.	Unit choose list	Country-specific: • l (DN > 150 (6"): m³ option) • gal (us)
Corrected volume flow unit	Select corrected volume flow unit. Result The selected unit applies for: Corrected volume flow parameter $(\rightarrow \boxminus 161)$	Unit choose list	Country-specific: • Nl/h • Sft ³ /min
Corrected volume unit	Select corrected volume unit.	Unit choose list	Country-specific: • NI • Sft ³
Density unit	Select density unit. <i>Effect</i> The selected unit applies for: • Output • Simulation process variable • Density adjustment (Expert menu)	Unit choose list	Country-specific: • kg/l • lb/ft ³

Parameter	Description	Selection	Factory setting
Reference density unit	Select reference density unit.	Unit choose list	Country-dependent • kg/Nl • lb/Sft ³
Density 2 unit	Select second density unit.	Unit choose list	Depends on country: • kg/l • lb/ft ³
Temperature unit	 Select temperature unit. <i>Effect</i> The selected unit applies for: Electronic temperature parameter (6053) Maximum value parameter (6051) Minimum value parameter (6052) External temperature parameter (6080) Maximum value parameter (6108) Minimum value parameter (6109) Carrier pipe temperature parameter (6027) Maximum value parameter (6030) Reference temperature parameter (1816) Temperature parameter 	Unit choose list	Country-specific: ● °C ● °F
Pressure unit	 Select process pressure unit. Result The unit is taken from: Pressure value parameter (→ ■ 104) External pressure parameter (→ ■ 104) Pressure value 	Unit choose list	Country-specific: • bar a • psi a

10.4.3 Configuring the communication interface

The **Communication** submenu guides you systematically through all the parameters that have to be configured for selecting and setting the communication interface.

Navigation

"Setup" menu \rightarrow Communication

► Communication	
Bus address	→ 🗎 101
Baudrate	→ 🗎 101
Data transfer mode	→ 🗎 101
Parity	→ 🗎 101
Byte order	→ 🗎 101
Failure mode	→ 🗎 101

Parameter	Description	User entry / Selection	Factory setting
Bus address	Enter device address.	1 to 247	247
Baudrate	Define data transfer speed.	d. 1200 BAUD 2400 BAUD 4800 BAUD 9600 BAUD 19200 BAUD 38400 BAUD 57600 BAUD 115200 BAUD	
Data transfer mode	Select data transfer mode.	ASCIIRTU	RTU
Parity	Select parity bits.	 Picklist ASCII option: 0 = Even option 1 = Odd option Picklist RTU option: 0 = Even option 1 = Odd option 2 = None / 1 stop bit option 3 = None / 2 stop bits option 	Even
Byte order	Select byte transmission sequence.	 0-1-2-3 3-2-1-0 1-0-3-2 2-3-0-1 	1-0-3-2
Failure mode	Select measured value output behavior when a diagnostic message occurs via Modbus communication. NaN ¹⁾	NaN valueLast valid value	NaN value

Parameter overview with brief description

1) Not a Number

10.4.4 Selecting and setting the medium

The **Select medium** wizard submenu contains parameters that must be configured in order to select and set the medium.

Navigation

"Setup" menu \rightarrow Medium selection

► Medium selection	
MFT (Multi-Frequency Technology)]
Select medium type) → 🗎 103
Select gas type) → 🗎 103
Reference sound velocity) → 🗎 103
Reference sound velocity	→ 🗎 103
Temperature coefficient sound velocity) → 🗎 103
Temperature coefficient sound velocity) → 🗎 103
Pressure compensation) → 🗎 103
Pressure value) → 🗎 104
External pressure	→ 🗎 104

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Select medium type	_	Use this function to select the type of medium: "Gas" or "Liquid". Select the "Other" option in exceptional cases in order to enter the properties of the medium manually (e.g. for highly compressive liquids such as sulfuric acid).	LiquidGasOther	Liquid
Select gas type	In the Medium selection submenu, the Gas option is selected.	Select measured gas type.	 Air Ammonia NH3 Argon Ar Sulfur hexafluoride SF6 Oxygen O2 Ozone O3 Nitrogen oxide NOx Nitrogen N2 Nitrous oxide N2O Methane CH4 + 10% Hydrogen H2 Methane CH4 + 20% Hydrogen H2 Methane CH4 + 30% Hydrogen H2 Helium He Hydrogen chloride HCI Hydrogen sulfide H2S Ethylene C2H4 Carbon dioxide CO2 Carbon monoxide CO Chlorine CI2 Butane C4H10 Propane C3H8 Propylene C3H6 Ethane C2H6 Other 	Methane CH4
Reference sound velocity	In the Select gas type parameter, the Other option is selected.	Enter sound velocity of the gas at 0 $^{\circ}$ C (32 $^{\circ}$ F).	1 to 99999.9999 m/ s	415.0 m/s
Reference sound velocity	In the Select medium type parameter, the Other option is selected.	Enter sound velocity of the medium at 0 °C (32 °F).	Signed floating-point number	1456 m/s
Temperature coefficient sound velocity	In the Select gas type parameter, the Other option is selected.	Enter the temperature coefficient for the gas sound velocity.	Positive floating point number	0.87 (m/s)/K
Temperature coefficient sound velocity	In the Select medium type parameter, the Other option is selected.	Enter temperature coefficient for the medium sound velocity.	Signed floating-point number	1.3 (m/s)/K
Pressure compensation	-	Select pressure compensation type.	 Off Fixed value External value Current input 1 * Current input 2 * Current input 3 * 	Off

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Pressure value	In the Pressure compensation parameter, the Fixed value option is selected.	Enter process pressure to be used for pressure correction.	Positive floating- point number	1.01325 bar
External pressure	In the Pressure compensation parameter, the External value option or the Current input 1n option is selected.	1		-


* Visibility depends on order options or device settings

10.4.5 Displaying the I/O configuration

The **I/O configuration** submenu guides the user systematically through all the parameters in which the configuration of the I/O modules is displayed.

Navigation

"Setup" menu \rightarrow I/O configuration

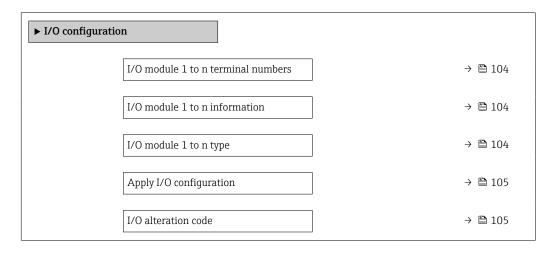

Parameter	Description	User interface / Selection / User entry	Factory setting
I/O module 1 to n terminal numbers	Shows the terminal numbers used by the I/O module.	 Not used 26-27 (I/O 1) 24-25 (I/O 2) 22-23 (I/O 3) 20-21 (I/O 4)* 	-
I/O module 1 to n information	Shows information of the plugged I/O module.	 Not plugged Invalid Not configurable Configurable MODBUS 	-
I/O module 1 to n type	Shows the I/O module type.	 Off Current output * Current input * Status input * Pulse/frequency/switch output * Double pulse output * Relay output * 	Off

Parameter	Description	User interface / Selection / User entry	Factory setting
Apply I/O configuration	Apply parameterization of the freely configurable I/O module.	NoYes	No
I/O alteration code	Enter the code in order to change the I/O configuration.	Positive integer	0

* Visibility depends on order options or device settings

10.4.6 Configuring the current input

The **"Current input" wizard** guides the user systematically through all the parameters that have to be set for configuring the current input.

Navigation

"Setup" menu → Current input

► Current input 1 to n	
Terminal number] → 🗎 105
Signal mode] → 🗎 105
0/4 mA value] → 🗎 105
20 mA value] → 🗎 105
Current span] → 🗎 106
Failure mode] → 🗎 106
Failure value] → 🗎 106

Parameter	Prerequisite	Description	User interface / Selection / User entry	Factory setting
Terminal number	-	Shows the terminal numbers used by the current input module.	 Not used 24-25 (I/O 2) 22-23 (I/O 3) 20-21 (I/O 4)* 	-
Signal mode	The measuring device is not approved for use in the hazardous area with type of protection Ex-i.	Select the signal mode for the current input.	 Passive Active *	Active
0/4 mA value	-	Enter 4 mA value.	Signed floating-point number	0
20 mA value	-	Enter 20 mA value.	Signed floating-point number	Depends on country and nominal diameter

Parameter	Prerequisite	Description	User interface / Selection / User entry	Factory setting
Current span	-	Select current range for process value output and upper/lower level for alarm signal.	 420 mA (4 20.5 mA) 420 mA NE (3.820.5 mA) 420 mA US (3.920.8 mA) 020 mA (0 20.5 mA) 	Country-specific: • 420 mA NE (3.820.5 mA) • 420 mA US (3.920.8 mA)
Failure mode	-	Define input behavior in alarm condition.	 Alarm Last valid value Defined value	Alarm
Failure value	In the Failure mode parameter, the Defined value option is selected.	Enter value to be used by the device if input value from external device is missing.	Signed floating-point number	0

* Visibility depends on order options or device settings

10.4.7 Configuring the status input

The **Status input** submenu guides the user systematically through all the parameters that have to be set for configuring the status input.

Navigation

"Setup" menu \rightarrow Status input 1 to n

► Status input 1 to n	
Assign status input) → 🗎 107
Terminal number	→ 🗎 107
Active level	→ 🗎 107
Terminal number) → 🗎 107
Response time status input	→ 🗎 107
Terminal number	→ 🗎 107

Parameter	Description	Selection / User interface / User entry	Factory setting
Assign status input	Select function for the status input.	 Off Reset totalizer 1 Reset totalizer 2 Reset totalizer 3 Reset all totalizers Flow override Zero adjustment Reset weighted averages * Reset weighted averages + totalizer 3 * 	Off
Terminal number	Shows the terminal numbers used by the status input module.	 Not used 24-25 (I/O 2) 22-23 (I/O 3) 20-21 (I/O 4)* 	-
Active level	Define input signal level at which the assigned function is triggered.	HighLow	High
Response time status input	Define the minimum amount of time the input signal level must be present before the selected function is triggered.	5 to 200 ms	50 ms

Parameter overview with brief description

* Visibility depends on order options or device settings

10.4.8 Configuring the current output

The **Current output** wizard guides you systematically through all the parameters that have to be set for configuring the current output.

Navigation

"Setup" menu \rightarrow Current output

► Current output 1 to n	
Terminal number] → 🗎 108
Signal mode] → 🗎 108
Process variable current output] → 🗎 109
Current range output] → 🗎 110
Lower range value output] → 🗎 110
Upper range value output] → 🗎 110
Fixed current] → 🗎 110
Damping current output] → 🗎 110

Failure behavior current output	→ 🗎 111
Failure current	→ 🗎 111

Parameter	Prerequisite	Description	User interface / Selection / User entry	Factory setting
Terminal number	-	Shows the terminal numbers used by the current output module.	 Not used 24-25 (I/O 2) 22-23 (I/O 3) 20-21 (I/O 4)* 	-
Signal mode	-	Select the signal mode for the current output.	 Active * Passive * 	Active

Parameter	Prerequisite	Description	User interface / Selection / User entry	Factory setting
Process variable current output		Select the process variable for the current output.	 Off* Mass flow Volume flow Corrected volume flow* Density Reference density* Temperature Target mass flow* Carrier mass flow* Carrier volume flow* Carrier corrected volume flow* Reference density alternative* GSV flow GSV flow alternative* NSV flow* NSV flow * NSV flow * NSV flow * Oil density* Water cut* Oil density* Water volume flow* Water volume flow* Water corrected volume flow* Concentration * Application specific output 0* Application specific output 1* Inhomogeneous medium index Suspended bubbles index* Raw value mass flow Exciter current 0 Oscillation damping 0 Oscillation damping 0 Oscillation frequency 0 Frequency fluctuation 0* Signal asymmetry* Carrier pipe temperature * Flequency fluctuation 0 Signal asymmetry* Carrier pipe temperature * Frequency fluctuation 0 	Mass flow

Parameter	Prerequisite	Description	User interface / Selection / User entry	Factory setting
			 Oscillation amplitude 0* Oscillation damping fluctuation 0* HBSI* Pressure* Electronics temperature Sensor index coil asymmetry Test point 0 Test point 1 	
Current range output	_	Select current range for process value output and upper/lower level for alarm signal.	 420 mA NE (3.820.5 mA) 420 mA US (3.920.8 mA) 420 mA (4 20.5 mA) 020 mA (0 20.5 mA) Fixed value 	Depends on country: • 420 mA NE (3.820.5 mA) • 420 mA US (3.920.8 mA)
Lower range value output	 One of the following options is selected in the Current span parameter (→	Enter lower range value for the measured value range.	Signed floating-point number	Depends on country: • 0 kg/h • 0 lb/min
Upper range value output	 One of the following options is selected in the Current span parameter (→ 🗎 110): 420 mA NE (3.820.5 mA) 420 mA US (3.920.8 mA) 420 mA (4 20.5 mA) 020 mA (0 20.5 mA) 	Enter upper range value for the measured value range.	Signed floating-point number	Depends on country and nominal diameter
Fixed current	The Fixed current option is selected in the Current span parameter ($\rightarrow \square 110$).	Defines the fixed output current.	0 to 22.5 mA	22.5 mA
Damping current output	 A process variable is selected in the Assign current output parameter (→ ^(⇒) 109) and one of the following options is selected in the Current span parameter (→ ^(⇒) 110): 420 mA NE (3.820.5 mA) 420 mA US (3.920.8 mA) 420 mA (4 20.5 mA) 020 mA (0 20.5 mA) 	Set reaction time for output signal to fluctuations in the measured value.	0.0 to 999.9 s	1.0 s

Parameter	Prerequisite	Description	User interface / Selection / User entry	Factory setting
Failure behavior current output	A process variable is selected in the Assign current output parameter (→ 🗎 109) and one of the following options is selected in the Current span parameter (→ 🗎 110): • 420 mA NE (3.820.5 mA) • 420 mA US (3.920.8 mA) • 420 mA (4 20.5 mA) • 020 mA (0 20.5 mA)	Define output behavior in alarm condition.	 Min. Max. Last valid value Actual value Fixed value 	Max.
Failure current	The Defined value option is selected in the Failure mode parameter.	Enter current output value in alarm condition.	0 to 22.5 mA	22.5 mA

10.4.9 Configuring the pulse/frequency/switch output

The **Pulse/frequency/switch output** wizard guides you systematically through all the parameters that can be set for configuring the selected output type.

Navigation

"Setup" menu \rightarrow Advanced setup \rightarrow Pulse/frequency/switch output

Pulse/frequency 1 to n	/switch output	
	Operating mode	→ 🖺 112

Parameter overview with brief description

Parameter	Description	Selection	Factory setting
Operating mode	Define the output as a pulse, frequency or switch output.	PulseFrequencySwitch	Pulse

Configuring the pulse output

Navigation

"Setup" menu \rightarrow Pulse/frequency/switch output

 Pulse/frequency/switch output 1 to n 	
Operating mode) → 🗎 113
Terminal number] → 🗎 113
Signal mode) → 🗎 113
Assign pulse output) → 🗎 113
Pulse scaling) → 🗎 113
Pulse width) → 🗎 113
Failure mode) → 🗎 114
Invert output signal) → 🗎 114

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Operating mode	-	Define the output as a pulse, frequency or switch output.	 Pulse Frequency Switch	Pulse
Terminal number	-	Shows the terminal numbers used by the PFS output module.	 Not used 24-25 (I/O 2) 22-23 (I/O 3) 20-21 (I/O 4)* 	-
Signal mode	-	Select the signal mode for the PFS output.	 Passive Active * Passive NE 	Passive
Assign pulse output	The Pulse option is selected in the Operating mode parameter.	Select process variable for pulse output.	 Off Mass flow Volume flow Corrected volume flow* Target mass flow* Carrier mass flow* Carrier volume flow* Carrier volume flow* Carrier corrected volume flow* GSV flow* GSV flow* GSV flow* NSV flow* NSV flow* NSV flow* NSV flow* Oil mass flow* Oil volume flow* Oil corrected volume flow* Oil corrected volume flow* Water corrected volume flow* 	Off
Pulse scaling	The Pulse option is selected in the Operating mode parameter ($\rightarrow \boxminus 112$) and a process variable is selected in the Assign pulse output parameter ($\rightarrow \boxminus 113$).	Enter quantity for measured value at which a pulse is output.	Positive floating point number	Depends on country and nominal diameter
Pulse width	The Pulse option is selected in the Operating mode parameter ($\rightarrow \boxdot 112$) and a process variable is selected in the Assign pulse output parameter ($\rightarrow \boxminus 113$).	Define time width of the output pulse.	0.05 to 2 000 ms	100 ms

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Failure mode	The Pulse option is selected in the Operating mode parameter ($\rightarrow \boxdot 112$) and a process variable is selected in the Assign pulse output parameter ($\rightarrow \boxdot 113$).	Define output behavior in alarm condition.	Actual valueNo pulses	No pulses
Invert output signal	-	Invert the output signal.	NoYes	No

Configuring the frequency output

Navigation

"Setup" menu \rightarrow Pulse/frequency/switch output

 Pulse/frequency/switch output 1 to n 	
Operating mode] → 🗎 115
Terminal number] → 🗎 115
Signal mode] → 🗎 115
Assign frequency output) → 🖺 116
Minimum frequency value) → 🗎 117
Maximum frequency value) → 🗎 117
Measuring value at minimum frequency	→ 🗎 117
Measuring value at maximum frequency	→ 🗎 117
Failure mode	→ 🗎 117
Failure frequency) → 🗎 117
Invert output signal] → 🗎 117

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Operating mode	-	Define the output as a pulse, frequency or switch output.	PulseFrequencySwitch	Pulse
Terminal number	-	Shows the terminal numbers used by the PFS output module.	 Not used 24-25 (I/O 2) 22-23 (I/O 3) 20-21 (I/O 4)* 	-
Signal mode	-	Select the signal mode for the PFS output.	 Passive Active * Passive NE 	Passive

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Assign frequency output	In the Operating mode parameter (→ ☐ 112), the Frequency option is selected.	Select process variable for frequency output.	 Off Mass flow Volume flow Corrected volume flow* Density Reference density* Time period signal frequency (TPS)* Temperature Pressure GSV flow* GSV flow* NSV flow* NSV flow* NSV flow* NSV flow alternative* S&W volume flow* Reference density alternative* Water cut* Oil density* Water density* Oil mass flow* Water density* Oil ourne flow* Water cut* Oil volume flow* Water roure flow* Oil corrected volume flow* Concentration* Target mass flow* Carrier mass flow* Carrier mass flow* Carrier volume flow* Carrier volume flow* Carrier corrected volume flow* Target corrected volume flow* Carrier corrected volume flow* Carrier corrected volume flow* Carrier corrected volume flow* Carrier corrected volume flow* Raw value mass flow Exciter current 0 Oscillation damping 0 Oscillation damping 0 Oscillation 0* Oscillation 0* Suspended bubbles index* HBSI* Raw value mass flow Exciter current 0 Oscillation damping fluctuation 0* Oscillation 0* Signal asymmetry 	Off

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
			 Torsion signal asymmetry* Carrier pipe temperature* Electronics temperature Sensor index coil asymmetry Test point 0 Test point 1 	
Minimum frequency value	The Frequency option is selected in the Operating mode parameter ($\rightarrow \bigoplus 112$) and a process variable is selected in the Assign frequency output parameter ($\rightarrow \bigoplus 116$).	Enter minimum frequency.	0.0 to 10000.0 Hz	0.0 Hz
Maximum frequency value	The Frequency option is selected in the Operating mode parameter ($\rightarrow \square 112$) and a process variable is selected in the Assign frequency output parameter ($\rightarrow \square 116$).	Enter maximum frequency.	0.0 to 10000.0 Hz	10 000.0 Hz
Measuring value at minimum frequency	The Frequency option is selected in the Operating mode parameter ($\rightarrow \implies 112$) and a process variable is selected in the Assign frequency output parameter ($\rightarrow \implies 116$).	Enter measured value for minimum frequency.	Signed floating-point number	Depends on country and nominal diameter
Measuring value at maximum frequency	The Frequency option is selected in the Operating mode parameter ($\rightarrow \implies 112$) and a process variable is selected in the Assign frequency output parameter ($\rightarrow \implies 116$).	Enter measured value for maximum frequency.	Signed floating-point number	Depends on country and nominal diameter
Failure mode	The Frequency option is selected in the Operating mode parameter ($\rightarrow \cong 112$) and a process variable is selected in the Assign frequency output parameter ($\rightarrow \cong 116$).	Define output behavior in alarm condition.	 Actual value Defined value 0 Hz 	0 Hz
Failure frequency	In the Operating mode parameter ($\rightarrow \equiv 112$), the Frequency option is selected, in the Assign frequency output parameter ($\rightarrow \equiv 116$) a process variable is selected, and in the Failure mode parameter, the Defined value option is selected.	Enter frequency output value in alarm condition.	0.0 to 12 500.0 Hz	0.0 Hz
Invert output signal	-	Invert the output signal.	• No • Yes	No

Configuring the switch output

Navigation

"Setup" menu \rightarrow Pulse/frequency/switch output

 Pulse/frequency/switch output 1 to n 	
Operating mode) → 🗎 118
Terminal number) → 🗎 118
Signal mode] → 🗎 118
Switch output function	→ 🗎 119
Assign diagnostic behavior) → 🗎 119
Assign limit] → 🗎 120
Assign flow direction check) → 🗎 120
Assign status	→ 🗎 121
Switch-on value	→ 🗎 121
Switch-off value	→ 🗎 121
Switch-on delay	→ 🗎 121
Switch-off delay	→ 🗎 121
Failure mode] → 🗎 121
Invert output signal) → 🗎 121

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Operating mode	-	Define the output as a pulse, frequency or switch output.	PulseFrequencySwitch	Pulse
Terminal number	-	Shows the terminal numbers used by the PFS output module.	 Not used 24-25 (I/O 2) 22-23 (I/O 3) 20-21 (I/O 4)* 	-
Signal mode	-	Select the signal mode for the PFS output.	 Passive Active * Passive NE 	Passive

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Switch output function	The Switch option is selected in the Operating mode parameter.	Select function for switch output.	 Off On Diagnostic behavior Limit Flow direction check Status 	Off
Assign diagnostic behavior	 In the Operating mode parameter, the Switch option is selected. In the Switch output function parameter, the Diagnostic behavior option is selected. 	Select diagnostic behavior for switch output.	AlarmAlarm or warningWarning	Alarm

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Assign limit	 In the Operating mode parameter, the Switch option is selected. In the Switch output function parameter, the Limit option is selected. 	Select process variable for limit function.	 Mass flow Volume flow Corrected volume flow* Target mass flow* Carrier mass flow* Carrier volume flow* Carrier volume flow* Carrier corrected volume flow* Carrier corrected volume flow* Density Reference density* Reference density alternative* GSV flow alternative* SSW volume flow* NSV flow alternative* S&W volume flow* Vater cut* Oil density* Water density* Oil corrected volume flow* Water roume flow* Water cut* Oil corrected volume flow* Water cut* Oil corrected volume flow* Water corrected volume flow* Concentration* Temperature Totalizer 1 Totalizer 1 Totalizer 3 Oscillation damping Pressure Application specific output 0* Application aspecific output 1* Inhomogeneous medium index Suspended bubbles index* 	Volume flow
Assign flow direction check	 The Switch option is selected in the Operating mode parameter. The Flow direction check option is selected in the Switch output function parameter. 	Select process variable for flow direction monitoring.	 Off Volume flow Mass flow Corrected volume flow * 	Mass flow

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
J J J J J J J J J J J J J J J J J J J		Select device status for switch output.	Partially filled pipe detectionLow flow cut off	Partially filled pipe detection
Switch-on value	 The Switch option is selected in the Operating mode parameter. The Limit option is selected in the Switch output function parameter. 	ch option is n the Operating rameter. t option is selected itch output		Country-specific: • 0 kg/h • 0 lb/min
Switch-off value	 The Switch option is selected in the Operating mode parameter. The Limit option is selected in the Switch output function parameter. 	Enter measured value for the switch-off point.	Signed floating-point number	Country-specific: • 0 kg/h • 0 lb/min
Switch-on delay	 The Switch option is selected in the Operating mode parameter. The Limit option is selected in the Switch output function parameter. 	Define delay for the switch-on of status output.	0.0 to 100.0 s	0.0 s
Switch-off delay	 The Switch option is selected in the Operating mode parameter. The Limit option is selected in the Switch output function parameter. 	Define delay for the switch-off of status output.	0.0 to 100.0 s	0.0 s
Failure mode	-	Define output behavior in alarm condition.	Actual statusOpenClosed	Open
Invert output signal	-	Invert the output signal.	NoYes	No


10.4.10 Configuring the relay output

The **Relay output** wizard guides the user systematically through all the parameters that have to be set for configuring the relay output.

Navigation

"Setup" menu \rightarrow Relay output 1 to n

► Relay output 1 to n	
Terminal number	→ 🗎 122
Relay output function) → 🖺 122
Assign flow direction check) → 🖺 122
Assign limit] → 🗎 123

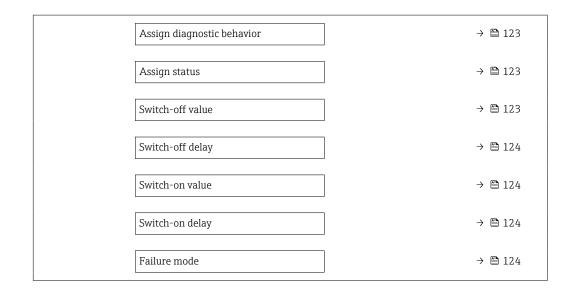

Parameter	Prerequisite	Description	User interface / Selection / User entry	Factory setting
Terminal number	-	Shows the terminal numbers used by the relay output module.	 Not used 24-25 (I/O 2) 22-23 (I/O 3) 20-21 (I/O 4) 	-
Relay output function	-	Select the function for the relay output.	 Closed Open Diagnostic behavior Limit Flow direction check Digital Output 	Closed
Assign flow direction check	The Flow direction check option is selected in the Relay output function parameter.	Select process variable for flow direction monitoring.	 Off Volume flow Mass flow Corrected volume flow * 	Mass flow

Parameter	Prerequisite	Description	User interface / Selection / User entry	Factory setting
Assign limit	The Limit option is selected in the Relay output function parameter.	Select process variable for limit function.	 Mass flow Volume flow Corrected volume flow* Target mass flow* Carrier mass flow Target volume flow* Carrier volume flow* Carrier corrected volume flow* Carrier corrected volume flow* Carrier corrected volume flow* Carrier corrected volume flow* Density Reference density alternative* GSV flow GSV flow* NSV flow* NSV flow* NSV flow* NSV flow* Water cut* Oil density* Water density* Water density* Oil corrected volume flow* Oil corrected volume flow* Oil corrected volume flow* Water cure flow* Oil corrected volume flow* Concentration* Temperature Totalizer 1 Totalizer 2 Totalizer 3 Oscillation damping Pressure Application specific output 0* Application specific output 1* Inhomogeneous medium index Suspended bubbles index* 	Mass flow
Assign diagnostic behavior	In the Relay output function parameter, the Diagnostic behavior option is selected.	Select diagnostic behavior for switch output.	AlarmAlarm or warningWarning	Alarm
Assign status	In the Relay output function parameter, the Digital Output option is selected.	Select device status for switch output.	 Partially filled pipe detection Low flow cut off	Partially filled pipe detection
Switch-off value	In the Relay output function parameter, the Limit option is selected.	Enter measured value for the switch-off point.	Signed floating-point number	Country-specific: • 0 kg/h • 0 lb/min

Parameter	Prerequisite	Description	User interface / Selection / User entry	Factory setting
Switch-off delay	In the Relay output function parameter, the Limit option is selected.	Define delay for the switch-off of status output.	0.0 to 100.0 s	0.0 s
Switch-on value	The Limit option is selected in the Relay output function parameter.	Enter measured value for the switch-on point.	Signed floating-point number	Country-specific: • 0 kg/h • 0 lb/min
Switch-on delay	In the Relay output function parameter, the Limit option is selected.	Define delay for the switch-on of status output.	0.0 to 100.0 s	0.0 s
Failure mode	-	Define output behavior in alarm condition.	Actual statusOpenClosed	Open

10.4.11 Configuring the double pulse output

The **Double pulse output** submenu guides the user systematically through all the parameters that have to be set for configuring the double pulse output.

Navigation

"Setup" menu → Double pulse output

► Double pulse output	
Signal mode) → 🗎 125
Master terminal number) → 🗎 125
Assign pulse output] → 🗎 125
Measuring mode] → 🗎 125
Value per pulse) → 🗎 125
Pulse width	→ 🗎 125
Failure mode) → 🖺 125
Invert output signal] → 🗎 125

Parameter	Description	Selection / User interface / User entry	Factory setting
Signal mode	Select the signal mode for the double pulse output.	 Passive Active * Passive NE 	Passive
Master terminal number	Shows the terminal numbers used by the master of the double pulse output module.	 Not used 24-25 (I/O 2) 22-23 (I/O 3) 	-
Assign pulse output	Select process variable for pulse output.	 Off Mass flow Volume flow Corrected volume flow* Target mass flow* Carrier mass flow* Carrier volume flow* Carrier volume flow* Carrier corrected volume flow* Carrier corrected volume flow* GSV flow* GSV flow alternative* NSV flow alternative* S&W volume flow* Oil mass flow* Oil volume flow* Oil corrected volume flow* Water corrected volume flow* Water corrected volume flow* Water corrected volume flow* Water corrected volume flow* 	Off
Measuring mode	Select measuring mode for pulse output.	 Forward flow Forward/Reverse flow Reverse flow Reverse flow compensation 	Forward flow
Value per pulse	Enter measured value at which a pulse is output.	Signed floating-point number	Depends on country and nominal diameter
Pulse width	Define time width of the output pulse.	0.5 to 2 000 ms	0.5 ms
Failure mode	Define output behavior in alarm condition.	Actual valueNo pulses	No pulses
Invert output signal	Invert the output signal.	NoYes	No

* Visibility depends on order options or device settings

10.4.12 Configuring the local display

The **Display** wizard guides you systematically through all the parameters that can configured for configuring the local display.

Navigation

"Setup" menu \rightarrow Display

► Display			
	Format display		→ 🗎 127

Value 1 display		→ 🗎 128
0% bargraph value 1		→ 🗎 129
100% bargraph value 1		→ 🗎 129
Value 2 display		→ 🗎 129
Value 3 display		→ 🗎 129
0% bargraph value 3		→ 🗎 129
100% bargraph value 3		→ 🗎 129
Value 4 display		→ 🗎 129
Value 5 display		→ 🗎 129
Value 6 display		→ 🗎 129
Value 7 display		→ 🗎 129
]	→ 🗎 129
Value 8 display		/ 🖾 127

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Format display	A local display is provided.	Select how measured values are shown on the display.	 1 value, max. size 1 bargraph + 1 value 2 values 1 value large + 2 values 4 values 	1 value, max. size

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Value 1 display	A local display is provided.	Select the measured value that is shown on the local display.	 Mass flow Volume flow Corrected volume flow* Density Reference density* Temperature Pressure Totalizer 1 Totalizer 1 Totalizer 3 GSV flow* GSV flow alternative* NSV flow alternative* S&W volume flow* Reference density alternative* Weighted density average* Weighted density* Water cut* Oil density* Water density* Oil volume flow* Vater density* Oil corrected volume flow* Oil corrected volume flow* Concentration* Target mass flow* Water corrected volume flow* Carrier mass flow* Target corrected volume flow* Carrier volume flow* Carrier corrected volume flow* Carrier orrected volume flow* Carrier orrected volume flow* Carrier orrected volume flow* Carrier orrected volume flow* Carrier corrected volume flow* 	Mass flow

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
			 Frequency fluctuation 0* Oscillation amplitude 0* Signal asymmetry Torsion signal asymmetry* Carrier pipe temperature* Electronics temperature Sensor index coil asymmetry Test point 0 Test point 1 Current output 1 Current output 2* Current output 3* Current output 4 	
0% bargraph value 1	A local display is provided.	Enter 0% value for bar graph display.	Signed floating-point number	Country-specific: • 0 kg/h • 0 lb/min
100% bargraph value 1	A local display is provided.	Enter 100% value for bar graph display.	Signed floating-point number	Depends on country and nominal diameter
Value 2 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see the Value 1 display parameter $(\rightarrow \square 128)$	None
Value 3 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see the Value 1 display parameter $(\rightarrow \square 128)$	None
0% bargraph value 3	A selection was made in the Value 3 display parameter.	Enter 0% value for bar graph display.	Signed floating-point number	Country-specific: • 0 kg/h • 0 lb/min
100% bargraph value 3	A selection was made in the Value 3 display parameter.	Enter 100% value for bar graph display.	Signed floating-point number	0
Value 4 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see the Value 1 display parameter $(\rightarrow \cong 128)$	None
Value 5 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see the Value 1 display parameter $(\rightarrow \square 128)$	None
Value 6 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see the Value 1 display parameter $(\rightarrow \square 128)$	None
Value 7 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see the Value 1 display parameter $(\rightarrow \cong 128)$	None
Value 8 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see the Value 1 display parameter $(\rightarrow \square 128)$	None


^{*} Visibility depends on order options or device settings

10.4.13 Configuring the low flow cut off

The **Low flow cut off** wizard systematically guides the user through all the parameters that must be set to configure low flow cut off.

Navigation

"Setup" menu \rightarrow Low flow cut off

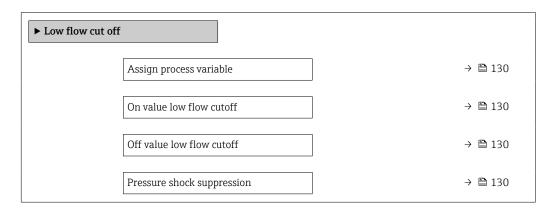

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Assign process variable	-	Select process variable for low flow cut off.	 Off Mass flow Volume flow Corrected volume flow * 	Mass flow
On value low flow cutoff	A process variable is selected in the Assign process variable parameter ($\rightarrow \textcircled{B}$ 130).	Enter on value for low flow cut off.	Positive floating- point number	Depends on country and nominal diameter
Off value low flow cutoff	A process variable is selected in the Assign process variable parameter ($\rightarrow \cong$ 130).	Enter off value for low flow cut off.	0 to 100.0 %	50 %
Pressure shock suppression	A process variable is selected in the Assign process variable parameter ($\rightarrow \cong$ 130).	Enter time frame for signal suppression (= active pressure shock suppression).	0 to 100 s	0 s


* Visibility depends on order options or device settings

10.4.14 Configuring partially filled pipe detection

The **Partial filled pipe detection** wizard guides you systematically through all parameters that have to be set for configuring the monitoring of the pipe filling.

Navigation

"Setup" menu \rightarrow Partially filled pipe detection

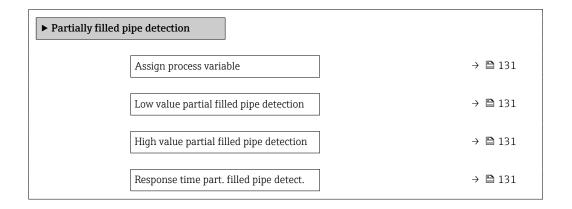


Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Assign process variable	-	Select process variable for partially filled pipe detection.	OffDensityCalculated reference density	Off
Low value partial filled pipe detection	A process variable is selected in the Assign process variable parameter ($\rightarrow \square$ 131).	Enter lower limit value for deactivating partialy filled pipe detection.	Signed floating-point number	Depends on country: • 200 kg/m ³ • 12.5 lb/ft ³
High value partial filled pipe detection	A process variable is selected in the Assign process variable parameter ($\rightarrow \square$ 131).	Enter upper limit value for deactivating partialy filled pipe detection.	Signed floating-point number	Depends on country: • 6 000 kg/m ³ • 374.6 lb/ft ³
Response time part. filled pipe detect.	A process variable is selected in the Assign process variable parameter ($\rightarrow \square$ 131).	Use this function to enter the minimum time (hold time) the signal must be present before diagnostic message S962 "Pipe only partly filled" is triggered in the event of a partially filled or empty measuring pipe.	0 to 100 s	1 s

10.5 Advanced settings

The **Advanced setup** submenu with its submenus contains parameters for specific settings.

Navigation to the "Advanced setup" submenu

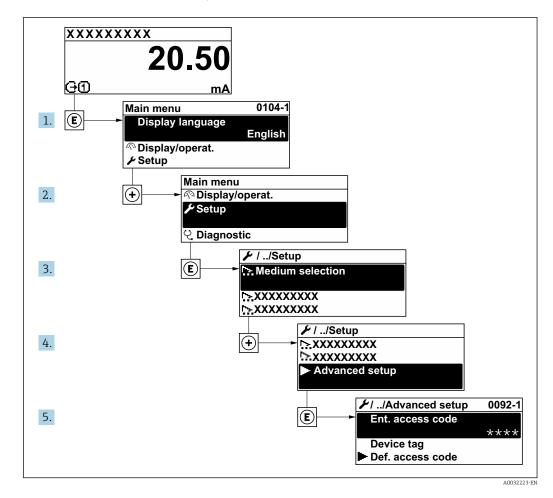


The number of submenus and parameters can vary depending on the device version and the available application packages. These submenus and their parameters are explained in the Special Documentation for the device and not in Operating Instructions.

For detailed information on the parameter descriptions for application packages or for operation in custody transfer mode: Special Documentation for the device $\rightarrow \cong 249$

Navigation

"Setup" menu \rightarrow Advanced setup

► Advanced setup				
Enter access code) → 🗎 133			
► Calculated values	→ 🗎 133			
► Sensor adjustment	→ 🗎 134			

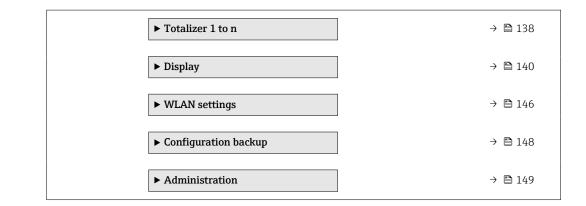

10.5.1 Using the parameter to enter the access code

Navigation

"Setup" menu \rightarrow Advanced setup

Parameter overview with brief description

Parameter	Description	User entry
Enter access code	1 1	Max. 16-digit character string comprising numbers, letters and special characters

10.5.2 Calculated process variables

The **Calculated values** submenu contains parameters for calculating the corrected volume flow.

The **Calculated values** submenu is **not** available if one of the following options was selected in the **Petroleum mode** parameter in the "Application package", option **EJ** "Petroleum": **API referenced correction** option, **Net oil & water cut** option or **ASTM D4311** option

Navigation

"Setup" menu \rightarrow Advanced setup \rightarrow Calculated values

► Calculated values	;	
	► Corrected volume flow calculation	→ 🗎 133

"Corrected volume flow calculation" submenu

Navigation

"Setup" menu \rightarrow Advanced setup \rightarrow Calculated values \rightarrow Corrected volume flow calculation

► Corrected volume flow calculation					
Select reference density (1812)	→ 🗎 134				
External reference density (6198)	→ 🗎 134				

Fixed reference density (1814)	→ 🗎 134
Reference temperature (1816)	→ 🗎 134
Linear expansion coefficient (1817)	→ 🗎 134
Square expansion coefficient (1818)	→ 🗎 134

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Select reference density	-	Select reference density for calculating the corrected volume flow.	 Fixed reference density Calculated reference density Current input 1 * Current input 2 * Current input 3 * 	Calculated reference density
External reference density	In the Corrected volume flow calculation parameter, the External reference density option is selected.	Shows external reference density.	Floating point number with sign	-
Fixed reference density	The Fixed reference density option is selected in the Corrected volume flow calculation parameter parameter.	Enter fixed value for reference density.	Positive floating- point number	1 kg/Nl
Reference temperature	The Calculated reference density option is selected in the Corrected volume flow calculation parameter parameter.	Enter reference temperature for calculating the reference density.	-273.15 to 99999 ℃	Country-specific: • +20 °C • +68 °F
Linear expansion coefficient	The Calculated reference density option is selected in the Corrected volume flow calculation parameter parameter.	Enter linear, medium-specific expansion coefficient for calculating the reference density.	Signed floating-point number	0.0 1/K
Square expansion coefficient	The Calculated reference density option is selected in the Corrected volume flow calculation parameter parameter.	For media with a non-linear expansion pattern: enter the quadratic, medium-specific expansion coefficient for calculating the reference density.	Signed floating-point number	0.0 1/K ²

* Visibility depends on order options or device settings

10.5.3 Carrying out a sensor adjustment

The **Sensor adjustment** submenu contains parameters that pertain to the functionality of the sensor.

Navigation

"Setup" menu \rightarrow Advanced setup \rightarrow Sensor adjustment

► Sensor adjustment				
Installation direction) → 🗎 135			
► Zero verification	→ 🗎 135			
► Zero adjustment) → 🗎 137			

Parameter overview with brief description

Parameter	Description	Selection	Factory setting
Installation direction	Select sign of flow direction.	Forward flowReverse flow	Forward flow

Zero point verification and zero adjustment

All measuring devices are calibrated in accordance with state-of-the-art technology. Calibration takes place under reference conditions $\rightarrow \square$ 223. Therefore, a zero adjustment in the field is generally not required.

Experience shows that zero adjustment is advisable only in special cases:

- To achieve maximum measuring accuracy even with low flow rates.
- Under extreme process or operating conditions (e.g. very high process temperatures or very high-viscosity fluids).

To get a representative zero point, ensure that:

- any flow in the device is prevented during the adjustment
- the process conditions (e.g. pressure, temperature) are stable and representative

Zero point verification and zero adjustment cannot be performed if the following process conditions are present:

- Gas pockets
- Ensure that the system has been sufficiently flushed with the medium. Repeat flushing can help to eliminate gas pockets
- Thermal circulation

In the event of temperature differences (e.g. between the measuring tube inlet and outlet section), induced flow can occur even if the valves are closed due to thermal circulation in the device

Leaks at the valves

If the valves are not leak-tight, flow is not sufficiently prevented when determining the zero point

If these conditions cannot be avoided, it is advisable to keep the factory setting for the zero point.

Zero point verification

The zero point can be verified with the Zero verification wizard.

Navigation "Setup" menu \rightarrow Advanced setup \rightarrow Sensor adjustment \rightarrow Zero verification

► Zero verification	
Process conditions] → 🗎 136
Progress	→ 🗎 136
Status) → 🗎 136
Additional information] → 🗎 136
Recommendation:) → 🗎 136
Root cause] → 🗎 136
Abort cause) → 🗎 136
Zero point measured	→ 🗎 137
Zero point standard deviation) → 🗎 137
Zero point standard deviation] → 🗎 137

Parameter	Parameter Description Selection / User interface		Factory setting
Process conditions	Ensure process conditions as follows.	 Tubes are completely filled Process operational pressure applied No-flow conditions (closed valves) Process and ambient temperatures stable 	-
Progress	Shows the progress of the process.	0 to 100 %	-
Status	Shows the status of the process.	BusyFailedDone	-
Additional information	Indicate whether to display additional information.	HideShow	Hide
Recommendation:	Indicates whether an adjustment is recommended. Only recommended if the measured zero point deviates significantly from the current zero point.	Do not adjust zero pointAdjust zero point	-
Abort cause	Indicates why the wizard was aborted.	Check process conditions!A technical issue has occurred	-
Root cause	Shows the diagnostic and remedy.	 Zero point too high. Ensure no-flow. Zero point is unstable. Ensure no-flow. Fluctuation high. Avoid 2- phase medium. 	-

Parameter	Description	Selection / User interface	Factory setting
Zero point measured	Shows the zero point measured for the adjustment.	Signed floating-point number	-
Zero point standard deviation	Shows the standard deviation of the zero point measured.	Positive floating-point number	-

Zero adjust

The zero point can be adjusted with the **Zero adjustment** wizard.

A zero point verification should be performed before a zero adjustment.
 The zero point can also be adjusted manually: Expert → Sensor → Calibration

Navigation

"Setup" menu \rightarrow Advanced setup \rightarrow Sensor adjustment \rightarrow Zero adjustment

► Zero adjustment	
Process conditions] → 🗎 138
Progress] → 🗎 138
Status] → 🗎 138
Root cause] → 🗎 138
Abort cause] → 🗎 138
Root cause] → 🗎 138
Reliability of measured zero point] → 🗎 138
Additional information] → 🗎 138
Reliability of measured zero point] → 🗎 138
Zero point measured] → 🗎 138
Zero point standard deviation] → 🗎 138
Select action] → 🗎 138

Parameter	Parameter Description Selection / User interface		Factory setting
Process conditions	Ensure process conditions as follows.	 Tubes are completely filled Process operational pressure applied No-flow conditions (closed valves) Process and ambient temperatures stable 	-
Progress	Shows the progress of the process.	0 to 100 %	-
Status	Shows the status of the process.	Busy Failed Done	
Abort cause	Indicates why the wizard was aborted.	 Check process conditions! – A technical issue has occurred 	
Root cause	Shows the diagnostic and remedy.	 Zero point too high. Ensure no-flow. Zero point is unstable. Ensure no-flow. Fluctuation high. Avoid 2- phase medium. 	-
Reliability of measured zero point	Indicates the reliability of the zero point measured.	Not doneGoodUncertain	-
Additional information	Indicate whether to display additional information.	HideShow	Hide
Zero point measured	Shows the zero point measured for the adjustment.	Signed floating-point number	-
Zero point standard deviation	Shows the standard deviation of the zero point measured.	Positive floating-point number –	
Select action	Select the zero point value to apply.	 Keep current zero point Apply zero point measured Apply factory zero point* 	Keep current zero point

* Visibility depends on order options or device settings

10.5.4 Configuring the totalizer

In the **"Totalizer 1 to n" submenu** the individual totalizer can be configured.

Navigation

"Setup" menu \rightarrow Advanced setup \rightarrow Totalizer 1 to n

► Totalizer 1 to n	
Assign process variable	→ 🗎 139
Unit totalizer 1 to n	→ 🗎 139
Totalizer operation mode	→ 🗎 139
Failure mode	→ 🗎 139

Parameter	Prerequisite	Description	Selection	Factory setting
Assign process variable		Select process variable for totalizer.	 Off Mass flow Volume flow Corrected volume flow* Target mass flow* Carrier mass flow* Carrier volume flow* Carrier corrected volume flow* Carrier corrected volume flow* GSV flow GSV flow alternative* NSV flow alternative* S&W volume flow* Oil mass flow* Oil mass flow* Oil volume flow* Oil corrected volume flow* Oil corrected volume flow* Water corrected volume flow* Raw value mass flow 	Mass flow
Unit totalizer 1 to n	A process variable is selected in the Assign process variable parameter ($\rightarrow \square$ 139) of the Totalizer 1 to n submenu.	Select the unit for the process variable of the totalizer.	Unit choose list	Depends on country: • kg • lb
Totalizer operation mode	A process variable is selected in the Assign process variable parameter ($\rightarrow \square$ 139) of the Totalizer 1 to n submenu.	Select totalizer calculation mode.	NetForwardReverse	Net
Failure mode	A process variable is selected in the Assign process variable parameter ($\rightarrow 139$) of the Totalizer 1 to n submenu.	Select totalizer behavior in the event of a device alarm.	 Hold Continue Last valid value + continue 	Hold

* Visibility depends on order options or device settings

10.5.5 Carrying out additional display configurations

In the **Display** submenu you can set all the parameters associated with the configuration of the local display.

Navigation

"Setup" menu \rightarrow Advanced setup \rightarrow Display

► Display	
Format display) → 🗎 142
Value 1 display) → 🗎 143
0% bargraph value 1] → 🗎 144
100% bargraph value 1) → 🗎 144
Decimal places 1) → 🗎 144
Value 2 display] → 🗎 144
Decimal places 2) → 🗎 144
Value 3 display] → 🗎 144
0% bargraph value 3] → 🗎 144
100% bargraph value 3] → 🗎 144
Decimal places 3] → 🗎 144
Value 4 display) → 🗎 145
Decimal places 4] → 🗎 145
Value 5 display] → 🗎 145
0% bargraph value 5] → 🗎 145
100% bargraph value 5] → 🗎 145
Decimal places 5] → 🗎 145
Value 6 display] → 🗎 145
Decimal places 6] → 🗎 145
Value 7 display) → 🗎 145

0% bargraph value 7		→ 🗎 145
100% bargraph value 7		→ 🖺 145
Decimal places 7		→ 🗎 145
Value 8 display		→ 🖺 145
Decimal places 8		→ 🗎 146
Display language	· .	→ 🖺 146
Display interval		→ 🗎 146
Display damping		→ 🗎 146
Header		→ 🗎 146
Header text		→ 🖺 146
Separator		→ 🖺 146
Backlight		→ 🗎 146

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Format display	A local display is provided.	Select how measured values are shown on the display.	 1 value, max. size 1 bargraph + 1 value 2 values 1 value large + 2 values 4 values 	1 value, max. size

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Value 1 display	A local display is provided.	Select the measured value that is shown on the local display. Image: Select the measured value that is shown on the local display. Image: Select the measured value that is shown on the local display. Image: Select the measured value that is shown on the local display. Image: Select the measured value that is shown on the local display. Image: Select the measured value that is shown on the local display. Image: Select the measured value that is shown on the local display. Image: Select the measured value that is shown on the local display. Image: Select the measured value that is shown on the local display. Image: Select the measured value that is shown on the local display. Image: Select the measured value that is shown on the local display. Image: Select the measured value that is shown on the local display. Image: Select the measured value that is shown on the local display. Image: Select the measured value that is shown on the local display. Image: Select the measured value that is shown on the local display. Image: Select the measured value that is shown on the local display. Image: Select the measured value that is shown on the local display. Image: Select the measured value that is shown on the local display. Image: Select the measured value that is shown on the local display. Image: Select the measured value that is shown on the local displ	 Mass flow Volume flow Corrected volume flow* Density Reference density* Temperature Pressure Totalizer 1 Totalizer 2 Totalizer 3 GSV flow* GSV flow* NSV flow* NSV flow* NSV flow alternative* S&W volume flow* Reference density alternative* Weighted density average* Weighted density* Wighted density* Oil density* Water cut* Oil density* Water density* Oil corrected volume flow* Oil corrected volume flow* Concentration* Target mass flow* Water cure flow* Concentration* Target mass flow* Carrier mass flow* Carrier volume flow* Carrier volume flow* Carrier corrected volume flow* Carrier corrected volume flow* Carrier orrected volume flow* Carrier torected volume flow* Carrier corrected volume flow* Application specific output 0* Application flow Exciter current 0 Oscillation damping Guevee flow 	Mass flow

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
			 Frequency fluctuation 0* Oscillation amplitude 0* Signal asymmetry Torsion signal asymmetry* Carrier pipe temperature* Electronics temperature Sensor index coil asymmetry Test point 0 Test point 1 Current output 1 Current output 1 Current output 3 Current output 4 	
0% bargraph value 1	A local display is provided.	Enter 0% value for bar graph display.	Signed floating-point number	Country-specific: • 0 kg/h • 0 lb/min
100% bargraph value 1	A local display is provided.	Enter 100% value for bar graph display.	Signed floating-point number	Depends on country and nominal diameter
Decimal places 1	A measured value is specified in the Value 1 display parameter.	Select the number of decimal places for the display value.	 X X.X X.XX X.XXX X.XXXX X.XXXX X.XXXXX X.XXXXXX 	x.xx
Value 2 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see the Value 1 display parameter $(\rightarrow \square 128)$	None
Decimal places 2	A measured value is specified in the Value 2 display parameter.	Select the number of decimal places for the display value.	 X X.X X.XX X.XXX X.XXXX X.XXXXX X.XXXXXX X.XXXXXXX 	X.XX
Value 3 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see the Value 1 display parameter $(\rightarrow \square 128)$	None
0% bargraph value 3	A selection was made in the Value 3 display parameter.	Enter 0% value for bar graph display.	Signed floating-point number	Country-specific: • 0 kg/h • 0 lb/min
100% bargraph value 3	A selection was made in the Value 3 display parameter.	Enter 100% value for bar graph display.	Signed floating-point number	0
Decimal places 3	A measured value is specified in the Value 3 display parameter.	Select the number of decimal places for the display value.	 X X.X X.XX X.XXX X.XXXX X.XXXXX X.XXXXXX 	X.XX

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Value 4 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see the Value 1 display parameter $(\rightarrow \cong 128)$	None
Decimal places 4	A measured value is specified in the Value 4 display parameter.	Select the number of decimal places for the display value.	 x x.x x.xx x.xxx x.xxxx x.xxxx x.xxxxx x.xxxxx x.xxxxx 	X.XX
Value 5 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see the Value 1 display parameter $(\rightarrow \cong 128)$	None
0% bargraph value 5	An option was selected in the Value 5 display parameter.	Enter 0% value for bar graph display.	Signed floating-point number	Depends on country: • 0 kg/h • 0 lb/min
100% bargraph value 5	An option was selected in the Value 5 display parameter.	Enter 100% value for bar graph display.	Signed floating-point number	0
Decimal places 5	A measured value is specified in the Value 5 display parameter.	Select the number of decimal places for the display value.	 x x.x x.xx x.xxx x.xxxx x.xxxxx x.xxxxx x.xxxxx 	X.XX
Value 6 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see the Value 1 display parameter $(\rightarrow \square 128)$	None
Decimal places 6	A measured value is specified in the Value 6 display parameter.	Select the number of decimal places for the display value.	 X X.X X.XX X.XXX X.XXXX X.XXXXX X.XXXXX X.XXXXXX 	X.XX
Value 7 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see the Value 1 display parameter $(\rightarrow \square 128)$	None
0% bargraph value 7	An option was selected in the Value 7 display parameter.	Enter 0% value for bar graph display.	Signed floating-point number	Depends on country: • 0 kg/h • 0 lb/min
100% bargraph value 7	An option was selected in the Value 7 display parameter.	Enter 100% value for bar graph display.	Signed floating-point number	0
Decimal places 7	A measured value is specified in the Value 7 display parameter.	Select the number of decimal places for the display value.	 x x.x x.xx x.xxx x.xxxx x.xxxx x.xxxxx x.xxxxx x.xxxxx 	X.XX
Value 8 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see the Value 1 display parameter $(\rightarrow \cong 128)$	None

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Decimal places 8	A measured value is specified in the Value 8 display parameter.	Select the number of decimal places for the display value.	 x x.x x.xx x.xxx x.xxxx x.xxxx x.xxxxx x.xxxxx x.xxxxx 	x.xx
Display language	A local display is provided.	Set display language. English Deutsch Français Español Italiano Nederlands Portuguesa Polski pyccкий язык (Russian) Svenska Türkçe 中文 (Chinese) 日本語 (Japanese) 한국어 (Korean) tiếng Việt (Vietnamese) čeština (Czech)		English (alternatively, the ordered language is preset in the device)
Display interval	A local display is provided.	Set time measured values are shown on display if display alternates between values.	1 to 10 s	5 s
Display damping	A local display is provided.	Set display reaction time to fluctuations in the measured value.	0.0 to 999.9 s	0.0 s
Header	A local display is provided.	Select header contents on local display.	 Device tag Free text	Device tag
Header text	The Free text option is selected in the Header parameter.	Enter display header text.	Max. 12 characters, such as letters, numbers or special characters (e.g. @, %, /)	
Separator	A local display is provided.	Select decimal separator for displaying numerical values.	 . (point) , (comma) 	. (point)
Backlight	One of the following conditions is met: Order code for "Display; operation", option F "4-line, illum.; touch control" Order code for "Display; operation", option G "4-line, illum.; touch control +WLAN"	Switch the local display backlight on and off.	DisableEnable	Enable

* Visibility depends on order options or device settings

10.5.6 WLAN configuration

The **WLAN Settings** submenu guides the user systematically through all the parameters that have to be set for the WLAN configuration.

Navigation

"Setup" menu \rightarrow Advanced setup \rightarrow WLAN settings

► WLAN settings			
WLA	AN IP address]	→ 🖺 14
Secu	rity type]	→ 🖺 14
WLA	AN passphrase]	→ 🖺 14
Assi	gn SSID name]	→ 🖺 14
SSID	name]	→ 🗎 14
App	ly changes]	→ 🖺 14

Parameter overview with brief description

Parameter	Prerequisite	Description	User entry / Selection	Factory setting
WLAN IP address	-	Enter IP address of the WLAN interface of the device.	4 octet: 0 to 255 (in the particular octet)	192.168.1.212
Network security	-	Select the security type of the WLAN network.	 Unsecured WPA2-PSK EAP-PEAP with MSCHAPv2* EAP-PEAP MSCHAPv2 no server authentic.* EAP-TLS* 	WPA2-PSK
WLAN passphrase	The WPA2-PSK option is selected in the Security type parameter.	Enter the network key (8 to 32 characters). The network key supplied with the device should be changed during commissioning for security reasons.	8 to 32-digit character string comprising numbers, letters and special characters (without spaces)	Serial number of the measuring device (e.g. L100A802000)
Assign SSID name	-	Select which name will be used for SSID: device tag or user- defined name.	Device tagUser-defined	User-defined
SSID name	 The User-defined option is selected in the Assign SSID name parameter. The WLAN access point option is selected in the WLAN mode parameter. 	Enter the user-defined SSID name (max. 32 characters). The user-defined SSID name may only be assigned once. If the SSID name is assigned more than once, the devices can interfere with one another.	Max. 32-digit character string comprising numbers, letters and special characters	EH_device designation_last 7 digits of the serial number (e.g. EH_Promass_500_A 802000)
Apply changes	-	Use changed WLAN settings.	CancelOk	Cancel

* Visibility depends on order options or device settings

10.5.7 Configuration management

After commissioning, you can save the current device configurationor restore the previous device configuration.

You can do so using the **Configuration management** parameter and the related options found in the **Configuration backup** submenu.

Navigation

"Setup" menu \rightarrow Advanced setup \rightarrow Configuration backup

► Configuration backup				
Operating time) → 🗎 148			
Last backup) → 🗎 148			
Configuration management] → 🗎 148			
Backup state) → 🗎 148			
Comparison result] → 🗎 148			


Parameter overview with brief description

Parameter	Description	User interface / Selection	Factory setting
Operating time	Indicates how long the device has been in operation.	Days (d), hours (h), minutes (m) and seconds (s)	-
Last backup	Shows when the last data backup was saved to HistoROM backup.	Days (d), hours (h), minutes (m) and seconds (s)	-
Configuration management	Select action for managing the device data in the HistoROM backup.	 Cancel Execute backup Restore * Compare * Clear backup data 	Cancel
Backup state	Shows the current status of data saving or restoring.	 None Backup in progress Restoring in progress Delete in progress Compare in progress Restoring failed Backup failed 	None
Comparison result	Comparison of current device data with HistoROM backup.	 Settings identical Settings not identical No backup available Backup settings corrupt Check not done Dataset incompatible 	Check not done

* Visibility depends on order options or device settings

Options	Description	
Cancel	No action is executed and the user exits the parameter.	
Execute backup	A backup copy of the current device configuration is saved from the HistoROI backup to the memory of the device. The backup copy includes the transmittee of the device.	
Restore	The last backup copy of the device configuration is restored from the device memory to the device's HistoROM backup. The backup copy includes the transmitter data of the device.	
Compare	The device configuration saved in the device memory is compared with the current device configuration of the HistoROM backup.	
Clear backup data	The backup copy of the device configuration is deleted from the memory of the device.	

Function scope of the "Configuration management" parameter

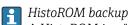

A HistoROM is a "non-volatile" device memory in the form of an EEPROM.

While this action is in progress, the configuration cannot be edited via the local display and a message on the processing status appears on the display.

10.5.8 Using parameters for device administration

The **Administration** submenu systematically guides the user through all the parameters that can be used for device administration purposes.

Navigation

"Setup" menu \rightarrow Advanced setup \rightarrow Administration

► Administration			
	► Define access code		→ 🗎 149
	► Reset access code		→ 🖺 150
	Device reset]	→ 🗎 150

Using the parameter to define the access code

Complete this wizard to specify an access code for the Maintenance role.

Navigation

"Setup" menu \rightarrow Advanced setup \rightarrow Administration \rightarrow Define access code

► Define access code	
Define access code	→ 🗎 150
Confirm access code	→ 🗎 150

Parameter	Description	User entry
Define access code	Restrict write-access to parameters to protect the configuration of the device against unintentional changes.	Max. 16-digit character string comprising numbers, letters and special characters
Confirm access code	Confirm the entered access code.	Max. 16-digit character string comprising numbers, letters and special characters

Using the parameter to reset the access code

Navigation

"Setup" menu \rightarrow Advanced setup \rightarrow Administration \rightarrow Reset access code

► Reset access code	
Operating time] → 🗎 150
Reset access code) → 🗎 150

Parameter overview with brief description

Parameter	Description	User interface / User entry	Factory setting
Operating time	Indicates how long the device has been in operation.	Days (d), hours (h), minutes (m) and seconds (s)	-
Reset access code	 Reset access code to factory settings. For a reset code, contact your Endress+Hauser service organization. The reset code can only be entered via: Web browser DeviceCare, FieldCare (via CDI-RJ45 service interface) Fieldbus 	Character string comprising numbers, letters and special characters	0x00

Using the parameter to reset the device

Navigation

"Setup" menu \rightarrow Advanced setup \rightarrow Administration

Parameter overview with brief description

Parameter	Description	Selection	Factory setting
Device reset	Reset the device configuration - either entirely or in part - to a defined state.	 Cancel To delivery settings Restart device Restore S-DAT backup * 	Cancel

* Visibility depends on order options or device settings

10.6 Simulation

The **Simulation** submenu enables you to simulate, without a real flow situation, various process variables in the process and the device alarm mode and to verify downstream signal chains (switching valves or closed-control loops).

Navigation

"Diagnostics" menu \rightarrow Simulation

► Simulation			
	Assign simulation process variable		→ 🗎 152
	Process variable value		→ 🗎 152
	Current output 1 to n simulation		→ 🗎 152
	Current output value		→ 🗎 152
	Frequency output 1 to n simulation		→ 🖺 152
	Frequency output 1 to n value		→ 🗎 153
	Pulse output simulation 1 to n		→ 🖺 153
	Pulse value 1 to n		→ 🖺 153
	Switch output simulation 1 to n		→ 🖺 153
	Switch state 1 to n		→ 🖺 153
	Relay output 1 to n simulation		→ 🖺 153
	Switch state 1 to n		→ 🗎 153
	Pulse output simulation		→ 🖺 153
	Pulse value		→ 🖺 153
	Device alarm simulation		→ 🖺 153
	Diagnostic event category		→ 🖺 153
	Diagnostic event simulation		→ 🗎 153
	Current input 1 to n simulation		→ 🗎 153
	Value current input 1 to n]	→ 🗎 153

Status input 1 to n simulation	→ 🗎 153
Input signal level 1 to n	→ 🗎 153

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Assign simulation process variable		Select a process variable for the simulation process that is activated.	 Off Mass flow Volume flow Corrected volume flow* Target mass flow* Carrier mass flow* Carrier volume flow* Carrier volume flow* Carrier corrected volume flow* Seference density Reference density Reference density GSV flow* GSV flow* GSV flow* NSV flow* NSV flow* NSV flow alternative* S&W volume flow* Water cut* Oil density* Water density* Oil volume flow* Water volume flow* Water corrected volume flow* Water corrected volume flow* Water corrected volume flow* Water corrected volume flow* Temperature Concentration* Time period signal frequency (TPS)* 	Off
Process variable value	A process variable is selected in the Assign simulation process variable parameter $(\rightarrow \square 152)$.	Enter the simulation value for the selected process variable.	Depends on the process variable selected	0
Current output 1 to n simulation	-	Switch the simulation of the current output on and off.	• Off • On	Off
Current output value	In the Current output 1 to n simulation parameter, the On option is selected.	Enter the current value for simulation.	3.59 to 22.5 mA	3.59 mA
Frequency output 1 to n simulation	In the Operating mode parameter, the Frequency option is selected.	Switch the simulation of the frequency output on and off.	• Off • On	Off

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Frequency output 1 to n value	In the Frequency simulation 1 to n parameter, the On option is selected.	Enter the frequency value for the simulation.	0.0 to 12 500.0 Hz	0.0 Hz
Pulse output simulation 1 to n	In the Operating mode parameter, the Pulse option is selected.	Set and switch off the pulse output simulation. For Fixed value option: Pulse width parameter (→ □ 113) defines the pulse width of the pulses output.	 Off Fixed value Down-counting value 	Off
Pulse value 1 to n	In the Pulse output simulation 1 to n parameter, the Down-counting value option is selected.	Enter the number of pulses for simulation.	0 to 65 535	0
Switch output simulation 1 to n	In the Operating mode parameter, the Switch option is selected.	Switch the simulation of the switch output on and off.	OffOn	Off
Switch state 1 to n	-	Select the status of the status output for the simulation.	OpenClosed	Open
Relay output 1 to n simulation	-	Switch simulation of the relay output on and off.	OffOn	Off
Switch state 1 to n	The On option is selected in the Switch output simulation 1 to n parameter parameter.	Select status of the relay output for the simulation.	 Open Closed	Open
Pulse output simulation	_	Set and switch off the pulse output simulation. For Fixed value option: Pulse width parameter defines the pulse width of the pulses output.	 Off Fixed value Down-counting value 	Off
Pulse value	In the Pulse output simulation parameter, the Down-counting value option is selected.	Set and switch off the pulse output simulation.	0 to 65 535	0
Device alarm simulation	-	Switch the device alarm on and off.	OffOn	Off
Diagnostic event category	-	Select a diagnostic event category.	SensorElectronicsConfigurationProcess	Process
Diagnostic event simulation	-	Select a diagnostic event to simulate this event.	 Off Diagnostic event picklist (depends on the category selected) 	Off
Current input 1 to n simulation	-	Switch simulation of the current input on and off.	OffOn	Off
Value current input 1 to n	In the Current input 1 to n simulation parameter, the On option is selected.	Enter the current value for simulation.	0 to 22.5 mA	0 mA
Status input 1 to n simulation	-	Switch simulation of the status input on and off.	OffOn	Off
Input signal level 1 to n	In the Status input simulation parameter, the On option is selected.	Select the signal level for the simulation of the status input.	HighLow	High

* Visibility depends on order options or device settings

10.7 Protecting settings from unauthorized access

The following write protection options exist in order to protect the configuration of the measuring device from unintentional modification:

- Protect access to parameters via access code $\rightarrow \implies 154$
- Protect access to local operation via key locking \rightarrow \cong 78
- Protect access to measuring device via write protection switch \rightarrow 🖺 155

10.7.1 Write protection via access code

The effects of the user-specific access code are as follows:

- Via local operation, the parameters for the measuring device configuration are writeprotected and their values can no longer be changed.
- Device access is protected via the Web browser, as are the parameters for the measuring device configuration.
- Device access is protected via FieldCare or DeviceCare (via CDI-RJ45 service interface), as are the parameters for the measuring device configuration.

Defining the access code via local display

1. Navigate to the **Define access code** parameter ($\rightarrow \implies 150$).

- 2. Define a max. 16-digit character string comprising numbers, letters and special characters as the access code.
- **3.** Enter the access code again in the **Confirm access code** parameter ($\rightarrow \triangleq 150$) to confirm the code.
 - └ The ⓓ-symbol appears in front of all write-protected parameters.

The device automatically locks the write-protected parameters again if a key is not pressed for 10 minutes in the navigation and editing view. The device locks the write-protected parameters automatically after 60 s if the user skips back to the operational display mode from the navigation and editing view.

- If parameter write protection is activated via an access code, it can also only be deactivated via this access code →
 77.
 - The user role with which the user is currently logged on via the local display
 - → \boxdot 77 is indicated by the Access status parameter. Navigation path: Operation → Access status

Parameters which can always be modified via the local display

Certain parameters that do not affect the measurement are excepted from parameter write protection via the local display. Despite the user-specific access code, they can always be modified, even if the other parameters are locked.

	Parameters for configuring the local display	Parameters for configuring the totalizer
	↓	\downarrow
Language	Format display	Control Totalizer
	Contrast display	Preset value
	Display interval	Reset all totalizers

Defining the access code via the Web browser

- **1.** Navigate to the **Define access code** parameter ($\rightarrow \implies 150$).
- 2. Define a max. 16-digit numeric code as an access code.

3. Enter the access code again in the **Confirm access code** parameter ($\rightarrow \implies 150$) to confirm the code.

← The Web browser switches to the login page.

If no action is performed for 10 minutes, the Web browser automatically returns to the login page.

- - The user role with which the user is currently logged on via Web browser is indicated by the Access status parameter. Navigation path: Operation → Access status

Resetting the access code

If you misplace the user-specific access code, it is possible to reset the code to the factory setting. A reset code must be entered for this purpose. The user-specific access code can then be defined again afterwards.

Via Web browser, FieldCare, DeviceCare (via CDI-RJ45 service interface), fieldbus

You can only obtain a reset code from your local Endress+Hauser service organization. The code must be calculated explicitly for every device.

- 1. Note down the serial number of the device.
- 2. Read off the **Operating time** parameter.
- **3.** Contact the local Endress+Hauser service organization and tell them the serial number and the operating time.
 - └ Get the calculated reset code.
- 4. Enter the reset code in the **Reset access code** parameter ($\Rightarrow \triangleq 150$).
 - → The access code has been reset to the factory setting **0000**. It can be redefined $\rightarrow \cong 154$.
- For IT security reasons, the calculated reset code is only valid for 96 hours from the specified operating time and for the specific serial number. If you cannot return to the device within 96 hours, you should either increase the operating time you read out by a few days or switch off the device.

10.7.2 Write protection via write protection switch

Unlike parameter write protection via a user-specific access code, this allows the user to lock write access to the entire operating menu - apart from the **"Contrast display" parameter**.

The parameter values are now read only and cannot be edited any more (exception **"Contrast display" parameter**):

- Via local display
- Via MODBUS RS485 protocol


Proline 500 - digital

WARNING


Excessive tightening torque applied to the fixing screws!

Risk of damaging the plastic transmitter.

► Tighten the fixing screws as per the tightening torque: 2 Nm (1.5 lbf ft)

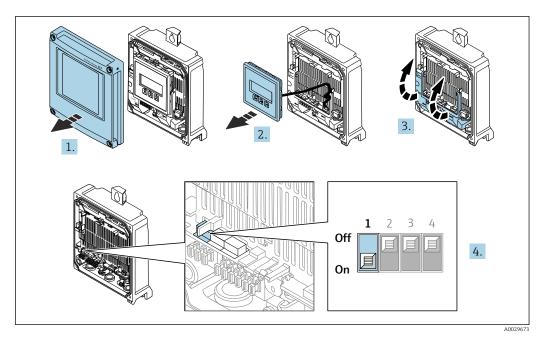


- 1. Open the housing cover.
- 2. Remove the display module.
- **3**. Fold open the terminal cover.
- **4.** Setting the write protection (WP) switch on the main electronics module to the **ON** position enables hardware write protection.
 - In the Locking status parameter, the Hardware locked option is displayed
 → 158. In addition, on the local display the
 Parameters in the header of the operational display and in the navigation view.

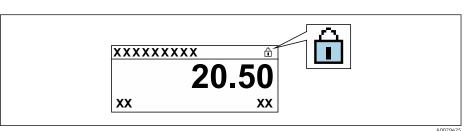


- 5. Setting the write protection (WP) switch on the main electronics module to the **OFF** position (factory setting) disables hardware write protection.
 - Iso option is displayed in the Locking status parameter → <a>Phi 158. On the local display, the <a>B symbol disappears from in front of the parameters in the header of the operational display and in the navigation view.

Proline 500

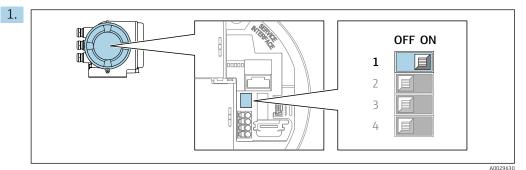

Setting the write protection (WP) switch on the main electronics module to the **ON** position enables hardware write protection.

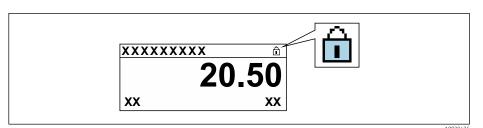

- 2. Setting the write protection (WP) switch on the main electronics module to the **OFF** position (factory setting) disables hardware write protection.

11 Operation

11.1 Reading off the device locking status

Device active write protection: Locking status parameter

Operation \rightarrow Locking status

Function scope of the "Locking status" parameter

Options	Description	
None	The access authorization displayed in the Access status parameter applies $\rightarrow \square$ 77. Only appears on local display.	
Hardware locked	The DIP switch for hardware locking is activated on the PCB board. This locks write access to the parameters (e.g. via local display or operating tool) $\rightarrow \square$ 155.	
CT active - all parameters	The DIP switch for custody transfer mode is activated on the PCB board. Locks the parameters that are relevant for custody transfer and also parameters that are predefined by Endress+Hauser and are not relevant for custody transfer (e.g. on local display or operating tool).	
	For detailed information on custody transfer mode, see the Special Documentation for the device	
CT active - defined parameters	The DIP switch for the custody transfer mode is activated on the PCB board. Only locks the parameters that are relevant for custody transfer (e.g. on the local display or operating tool). For detailed information on custody transfer mode, see the Special Documentation for the device	
Temporarily locked	Write access to the parameters is temporarily locked on account of internal processes running in the device (e.g. data upload/download, reset, etc.). Once the internal processing has been completed, the parameters can be changed once again.	

11.2 Adjusting the operating language

P Detailed information:

- To configure the operating language $\rightarrow \square 96$
- For information on the operating languages supported by the measuring device $\rightarrow \cong 239$

11.3 Configuring the display

Detailed information:

- On the basic settings for the local display $\rightarrow \implies 125$
- On the advanced settings for the local display $\rightarrow \ \ 140$

11.4 Reading measured values

With the **Measured values** submenu, it is possible to read all the measured values.

Navigation

"Diagnostics" menu \rightarrow Measured values

► Measured values	
► Measured variables) → 🗎 159
► Input values) → 🗎 170
 Output values) → 🗎 171
► Totalizer) → 🗎 169

11.4.1 "Measured variables" submenu


The **Measured variables** submenu contains all the parameters needed to display the current measured values for each process variable.

Navigation

"Diagnostics" menu \rightarrow Measured values \rightarrow Measured variables

► Measured variables	
Mass flow	→ 🗎 161
Volume flow	→ 🗎 161
Corrected volume flow	→ 🗎 161
Density	→ 🗎 161
Reference density	→ 🗎 161
Temperature	→ 🗎 161
Pressure	→ 🗎 162
Concentration	→ 🗎 162
Target mass flow	→ 🗎 162
Carrier mass flow	→ 🗎 162
Target corrected volume flow	→ 🗎 162
Carrier corrected volume flow	→ 🗎 162
Target volume flow	→ ➡ 163

Carrier volume flow	→ 🗎 163
CTL	→ 🗎 163
CPL	→ 🗎 163
CTPL	→ 🖺 164
S&W volume flow	→ 🗎 164
S&W correction value	→ 🗎 164
Reference density alternative	→ 🗎 164
GSV flow) → 🗎 164
GSV flow alternative	→ 🗎 165
NSV flow	→ 🗎 165
NSV flow alternative	→ 🗎 165
Oil CTL	→ 🗎 165
Oil CPL	→ 🗎 165
Oil CTPL	→ 🗎 166
Water CTL	→ 🗎 166
CTL alternative	→ 🗎 166
CPL alternative	→ 🗎 166
CTPL alternative	→ 🗎 166
Oil reference density	→ 🗎 167
Water reference density	→ 🗎 167
Oil density	→ 🗎 167
Water density	→ 🗎 167
Water cut	→ 🗎 167
Oil volume flow	→ 🗎 168

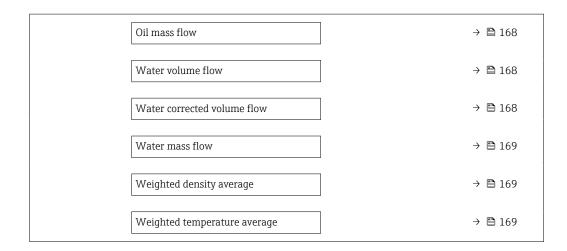

Parameter	Prerequisite	Description	User interface	Factory setting
Mass flow	-	Displays the mass flow that is currently measured. Dependency The unit is taken from: Mass flow unit parameter $(\rightarrow \cong 99)$	Signed floating-point number	-
Volume flow	-	Displays the volume flow that is currently calculated. Dependency The unit is taken from the Volume flow unit parameter $(\rightarrow \supseteq 99).$	Signed floating-point number	-
Corrected volume flow	-	Displays the corrected volume flow that is currently calculated. Dependency The unit is taken from: Corrected volume flow unit parameter (→ 🗎 99)	Signed floating-point number	-
Density	-	Shows the density currently measured. <i>Dependency</i> The unit is taken from the Density unit parameter $(\rightarrow \cong 99).$	Signed floating-point number	-
Reference density	-	Displays the reference density that is currently calculated. <i>Dependency</i> The unit is taken from: Reference density unit parameter (→ 🗎 100)	Signed floating-point number	-
Temperature	-	Shows the medium temperature currently measured. Dependency The unit is taken from: Temperature unit parameter $(\rightarrow \cong 100)$	Signed floating-point number	-

Parameter	Prerequisite	Description	User interface	Factory setting
Pressure	_	Displays either a fixed or external pressure value. Dependency The unit is taken from the Pressure unit parameter $(\rightarrow \square 100).$	Signed floating-point number	_
Concentration	For the following order code: Order code for "Application package", option ED "Concentration" The software options currently enabled are displayed in the Software option overview parameter.	Displays the concentration that is currently calculated. <i>Dependency</i> The unit is taken from the Concentration unit parameter.	Signed floating-point number	-
Target mass flow	With the following conditions: Order code for "Application package", option ED "Concentration" Image: The software options currently enabled are displayed in the Software option overview parameter.	Displays the mass flow that is currently measured for the target medium. <i>Dependency</i> The unit is taken from the Mass flow unit parameter $(\rightarrow \square 99)$.	Signed floating-point number	-
Carrier mass flow	With the following conditions: Order code for "Application package", option ED "Concentration" Image: The software options currently enabled are displayed in the Software option overview parameter.	Displays the mass flow of the carrier medium that is currently measured. <i>Dependency</i> The unit is taken from: Mass flow unit parameter $(\rightarrow \square 99)$	Signed floating-point number	-
Target corrected volume flow	 With the following conditions: Order code for "Application package", option ED "Concentration" The Ethanol in water option or %mass / %volume option is selected in the Liquid type parameter. The software options currently enabled are displayed in the Software option overview parameter. 	Displays the corrected volume flow that is currently measured for the target fluid. <i>Dependency</i> The unit is taken from the Volume flow unit parameter $(\rightarrow \square 99)$.	Signed floating-point number	_
Carrier corrected volume flow	 With the following conditions: Order code for "Application package", option ED "Concentration" In the Liquid type parameter, the Ethanol in water option or %mass / %volume option is selected. The software options currently enabled are displayed in the Software option overview parameter. 	Displays the corrected volume flow currently measured for the carrier fluid. <i>Dependency</i> The unit is taken from the Volume flow unit parameter $(\rightarrow \square 99)$.	Signed floating-point number	-

Parameter	Prerequisite	Description	User interface	Factory setting
Target volume flow	 With the following conditions: Order code for "Application package", option ED "Concentration" The Ethanol in water option or %mass / %volume option is selected in the Liquid type parameter. The %vol option is selected in the Concentration unit parameter. The software options currently enabled are displayed in the Software option overview parameter. 	Displays the volume flow currently measured for the target medium. <i>Dependency</i> The unit is taken from the Volume flow unit parameter $(\rightarrow \square 99)$.	Signed floating-point number	-
Carrier volume flow	 With the following conditions: Order code for "Application package", option ED "Concentration" The Ethanol in water option or %mass / %volume option is selected in the Liquid type parameter. The %vol option is selected in the Concentration unit parameter. The software options currently enabled are displayed in the Software option overview parameter. 	Displays the volume flow currently measured for the carrier medium. <i>Dependency</i> The unit is taken from the Volume flow unit parameter $(\rightarrow \square 99)$.	Signed floating-point number	-
CTL	 For the following order code: "Application package", option EJ "Petroleum" In the Petroleum mode parameter, the API referenced correction option is selected. The software options currently enabled are displayed in the Software option overview parameter. 	Displays the correction factor which represents the effect of temperature on the fluid. This is used to convert the measured volume flow and the measured density to values at reference temperature.	Positive floating- point number	-
CPL	For the following order code: "Application package", option EJ "Petroleum" In the Petroleum mode parameter, the API referenced correction option is selected. The software options currently enabled are displayed in the Software option overview parameter.	Displays the correction factor which represents the effect of pressure on the fluid. This is used to convert the measured volume flow and the measured density to values at reference pressure.	Positive floating- point number	-

Parameter	Prerequisite	Description	User interface	Factory setting
CTPL	For the following order code: "Application package", option EJ "Petroleum" In the Petroleum mode parameter, the API referenced correction option is selected. The software options currently enabled are displayed in the Software option overview parameter. 	Displays the combined correction factor which represents the effect of temperature and pressure on the fluid. This is used to convert the measured volume flow and the measured density to values at reference temperature and reference pressure.	Positive floating- point number	_
S&W volume flow	For the following order code: "Application package", option EJ "Petroleum" In the Petroleum mode parameter, the API referenced correction option is selected. The software options currently enabled are displayed in the Software option overview parameter.	Displays the S&W volume flow which is calculated from the measured total volume flow minus the net volume flow. <i>Dependency</i> The unit is taken from: Volume flow unit parameter	Signed floating-point number	-
S&W correction value	 For the following order code: "Application package", option EJ "Petroleum" In the S&W input mode parameter, the External value option or the Current input 1n option is selected. The software options currently enabled are displayed in the Software option overview parameter. 	Shows the correction value for sediment and water.	Positive floating- point number	-
Reference density alternative	 For the following order code: "Application package", option EJ "Petroleum" In the Petroleum mode parameter, the API referenced correction option is selected. The software options currently enabled are displayed in the Software option overview parameter. 	Displays the fluid density at the alternative reference temperature. <i>Dependency</i> The unit is taken from: Reference density unit parameter	Signed floating-point number	-
GSV flow	For the following order code: "Application package", option EJ "Petroleum" In the Petroleum mode parameter, the API referenced correction option is selected. The software options currently enabled are displayed in the Software option overview parameter.	Displays the measured total volume flow, corrected to the reference temperature and the reference pressure. <i>Dependency</i> The unit is taken from: Corrected volume flow unit parameter	Signed floating-point number	-

Parameter	Prerequisite	Description	User interface	Factory setting
GSV flow alternative	 For the following order code: "Application package", option EJ "Petroleum" In the Petroleum mode parameter, the API referenced correction option is selected. The software options currently enabled are displayed in the Software option overview parameter. 	Displays the measured total volume flow, corrected to the alternative reference temperature and the alternative reference pressure. <i>Dependency</i> The unit is taken from: Corrected volume flow unit parameter	Signed floating-point number	-
NSV flow	 For the following order code: "Application package", option EJ "Petroleum" In the Petroleum mode parameter, the API referenced correction option is selected. The software options currently enabled are displayed in the Software option overview parameter. 	Displays the net volume flow which is calculated from the measured total volume flow minus the value for sediment & water and minus the shrinkage. <i>Dependency</i> The unit is taken from: Corrected volume flow unit parameter	Signed floating-point number	_
NSV flow alternative	For the following order code: "Application package", option EJ "Petroleum" In the Petroleum mode parameter, the API referenced correction option is selected. The software options currently enabled are displayed in the Software option overview parameter.	Displays the net volume flow which is calculated from the measured alternative total volume minus the value for sediment & water and minus the shrinkage. <i>Dependency</i> The unit is taken from: Corrected volume flow unit parameter	Signed floating-point number	-
Oil CTL	 For the following order code: "Application package", option EJ "Petroleum" In the Petroleum mode parameter, the Net oil & water cut option is selected. The software options currently enabled are displayed in the Software option overview parameter. 	Displays the correction factor which represents the effect of temperature on the oil. This is used to convert the measured oil volume flow and the measured oil density to values at reference temperature.	Positive floating- point number	-
Oil CPL	For the following order code: "Application package", option EJ "Petroleum" In the Petroleum mode parameter, the Net oil & water cut option is selected. The software options currently enabled are displayed in the Software option overview parameter.	Displays the correction factor which represents the effect of pressure on the oil. This is used to convert the measured oil volume flow and the measured oil density to values at reference pressure.	Positive floating- point number	_

Parameter	Prerequisite	Description	User interface	Factory setting
Oil CTPL	 For the following order code: "Application package", option EJ "Petroleum" In the Petroleum mode parameter, the Net oil & water cut option is selected. The software options currently enabled are displayed in the Software option overview parameter. 	Displays the combined correction factor which represents the effect of temperature and pressure on the oil. This is used to convert the measured oil volume flow and the measured oil density to values at reference temperature and reference pressure.	Positive floating- point number	_
Water CTL	 For the following order code: "Application package", option EJ "Petroleum" In the Petroleum mode parameter, the Net oil & water cut option is selected. The software options currently enabled are displayed in the Software option overview parameter. 	Displays the correction factor which represents the effect of temperature on the water. This is used to convert the measured water volume flow and the measured water density to values at reference temperature.	Positive floating- point number	-
CTL alternative	For the following order code: "Application package", option EJ "Petroleum" In the Petroleum mode parameter, the API referenced correction option is selected. The software options currently enabled are displayed in the Software option overview parameter.	Displays the correction factor which represents the effect of temperature on the fluid. This is used to convert the measured volume flow and the measured density to values at the alternative reference temperature.	Positive floating- point number	-
CPL alternative	For the following order code: "Application package", option EJ "Petroleum" In the Petroleum mode parameter, the API referenced correction option is selected. The software options currently enabled are displayed in the Software option overview parameter.	Displays the correction factor which represents the effect of pressure on the fluid. This is used to convert the measured volume flow and the measured density to values at the alternative reference pressure.	Positive floating- point number	-
CTPL alternative	 For the following order code: "Application package", option EJ "Petroleum" In the Petroleum mode parameter, the API referenced correction option is selected. The software options currently enabled are displayed in the Software option overview parameter. 	Displays the combined correction factor which represents the effect of temperature and pressure on the fluid. This is used to convert the measured volume flow and the measured density to values at the alternative reference temperature and the alternative reference pressure.	Positive floating- point number	1

Parameter	Prerequisite	Description	User interface	Factory setting
Oil reference density	 For the following order code: "Application package", option EJ "Petroleum" In the Petroleum mode parameter, the Net oil & water cut option is selected. 	Shows the oil density at the reference temperature.	Signed floating-point number	-
	The software options currently enabled are displayed in the Software option overview parameter.			
Water reference density	 For the following order code: "Application package", option EJ "Petroleum" In the Petroleum mode parameter, the Net oil & water cut option is selected. The software options currently enabled are displayed in the Software option 	Shows the water density at the reference temperature.	Signed floating-point number	_
Oil density	overview parameter. For the following order code: "Application package", option EJ "Petroleum" In the Petroleum mode	Displays the density of the oil currently measured.	Signed floating-point number	-
	parameter, the Net oil & water cut option is selected. The software options currently enabled are displayed in the Software option overview parameter.			
Water density	 For the following order code: "Application package", option EJ "Petroleum" In the Petroleum mode parameter, the Net oil & water cut option is selected. 	Displays the density of the water currently measured.	Signed floating-point number	-
	The software options currently enabled are displayed in the Software option overview parameter.			
Water cut	 For the following order code: "Application package", option EJ "Petroleum" In the Petroleum mode parameter, the API referenced correction option is selected. 	Displays the percentage water volume flow in relation to the total volume flow of the fluid.	0 to 100 %	-
	The software options currently enabled are displayed in the Software option overview parameter.			

Parameter	Prerequisite	Description	User interface	Factory setting
Oil volume flow	 For the following order code: "Application package", option EJ "Petroleum" In the Petroleum mode parameter, the Net oil & water cut option is selected. The software options currently enabled are displayed in the Software option overview parameter. 	 Displays the currently calculated volume flow of the oil. Dependency: Based on the value displayed in the Water cut parameter The unit is taken from: Volume flow unit parameter 	Signed floating-point number	-
Oil corrected volume flow	For the following order code: • "Application package", option EJ "Petroleum" • In the Petroleum mode parameter, the Net oil & water cut option is selected. The software options currently enabled are displayed in the Software option overview parameter.	 Displays the currently calculated volume flow of the oil, calculated to values at reference temperature and reference pressure. Dependency: Based on the value displayed in the Water cut parameter The unit is taken from: Corrected volume flow unit parameter 	Signed floating-point number	-
Oil mass flow	 For the following order code: "Application package", option EJ "Petroleum" In the Petroleum mode parameter, the Net oil & water cut option is selected. The software options currently enabled are displayed in the Software option overview parameter. 	 Displays the currently calculated mass flow of the oil. Dependency: Based on the value displayed in the Water cut parameter The unit is taken from: Mass flow unit parameter 	Signed floating-point number	-
Water volume flow	 For the following order code: "Application package", option EJ "Petroleum" In the Petroleum mode parameter, the Net oil & water cut option is selected. The software options currently enabled are displayed in the Software option overview parameter. 	 Displays the currently calculated volume flow of the water. Dependency: Based on the value displayed in the Water cut parameter The unit is taken from: Volume flow unit parameter 	Signed floating-point number	-
Water corrected volume flow	 For the following order code: "Application package", option EJ "Petroleum" In the Petroleum mode parameter, the Net oil & water cut option is selected. The software options currently enabled are displayed in the Software option overview parameter. 	Displays the currently calculated volume flow of the water, calculated to values at reference temperature and reference pressure. Dependency: • Based on the value displayed in the Water cut parameter • The unit is taken from: Corrected volume flow unit parameter	Signed floating-point number	-

Parameter	Prerequisite	Description	User interface	Factory setting
Water mass flow	 For the following order code: "Application package", option EJ "Petroleum" In the Petroleum mode parameter, the Net oil & water cut option is selected. The software options currently enabled are displayed in the Software option overview parameter. 	 Displays the currently calculated mass flow of the water. Dependency: Based on the value displayed in the Water cut parameter The unit is taken from: Mass flow unit parameter 	Signed floating-point number	-
Weighted density average	 For the following order code: "Application package", option EJ "Petroleum" "Application package", option EM "Petroleum + Locking function" The software options currently enabled are displayed in the Software option overview parameter. 	Displays the weighted average for the density since the last time the density averages were reset. Dependency: • The unit is taken from: Density unit parameter • The value is reset to NaN (Not a Number) via the Reset weighted averages parameter	Signed floating-point number	-
Weighted temperature average	 For the following order code: "Application package", option EJ "Petroleum" "Application package", option EM "Petroleum + Locking function" The software options currently enabled are displayed in the Software option overview parameter. 	Displays the weighted average for the temperature since the last time the temperature averages were reset. Dependency: • The unit is taken from: Temperature unit parameter • The value is reset to NaN (Not a Number) via the Reset weighted averages parameter	Signed floating-point number	-

11.4.2 "Totalizer" submenu

The **Totalizer** submenu contains all the parameters needed to display the current measured values for every totalizer.

Navigation

"Diagnostics" menu \rightarrow Measured values \rightarrow Totalizer

► Totalizer		
1	Totalizer value 1 to n	→ 🗎 170
1	Fotalizer overflow 1 to n	→ 🗎 170

Parameter	Prerequisite	Description	User interface
Totalizer value 1 to n	A process variable is selected in the Assign process variable parameter $(\rightarrow \bigoplus 139)$ of the Totalizer 1 to n submenu.	Displays the current totalizer counter reading.	Signed floating-point number
Totalizer overflow 1 to n	A process variable is selected in the Assign process variable parameter $(\rightarrow \cong 139)$ of the Totalizer 1 to n submenu.	Displays the current totalizer overflow.	Integer with sign

11.4.3 "Input values" submenu

The **Input values** submenu guides you systematically to the individual input values.

Navigation

"Diagnostics" menu \rightarrow Measured values \rightarrow Input values

► Input values		
	► Current input 1 to n	→ 🗎 170
	► Status input 1 to n	→ 🗎 170

Input values of current input

The **Current input 1 to n** submenu contains all the parameters needed to display the current measured values for every current input.

Navigation

"Diagnostics" menu \rightarrow Measured values \rightarrow Input values \rightarrow Current input 1 to n

► Current input 1 to n	
Measured values 1 to n	→ 🗎 170
Measured current 1 to n) → 🗎 170

Parameter overview with brief description

Parameter	Description	User interface
Measured values 1 to n	Displays the current input value.	Signed floating-point number
Measured current 1 to n	Displays the current value of the current input.	0 to 22.5 mA

Input values of status input

The **Status input 1 to n** submenu contains all the parameters needed to display the current measured values for every status input.

Navigation

"Diagnostics" menu \rightarrow Measured values \rightarrow Input values \rightarrow Status input 1 to n

► Status input 1 to	n		
	Value status input		→ 🗎 171

Parameter overview with brief description

Parameter	Description	User interface
Value status input	Shows the current input signal level.	HighLow

11.4.4 Output values

The **Output values** submenu contains all the parameters needed to display the current measured values for every output.

Navigation

"Diagnostics" menu \rightarrow Measured values \rightarrow Output values

► Output values	
► Current output 1 to n	→ 🗎 171
Pulse/frequency/switch output 1 to n	→ ● 172
► Relay output 1 to n	→ 🗎 172
► Double pulse output	→ 🗎 173

Output values of current output

The **Value current output** submenu contains all the parameters needed to display the current measured values for every current output.

Navigation

"Diagnostics" menu \rightarrow Measured values \rightarrow Output values \rightarrow Value current output 1 to n

► Current output 1 to n		
Output current	→ 🗎 172	
Measured current	→ 🗎 172	

Parameter	Description	User interface
Output current	Displays the current value currently calculated for the current output.	3.59 to 22.5 mA
Measured current	Displays the current value currently measured for the current output.	0 to 30 mA

Output values for pulse/frequency/switch output

The **Pulse/frequency/switch output 1 to n** submenu contains all the parameters needed to display the current measured values for every pulse/frequency/switch output.

Navigation

"Diagnostics" menu \rightarrow Measured values \rightarrow Output values \rightarrow Pulse/frequency/switch output 1 to n

Pulse/frequency/switch output 1 to n	
Output frequency	→ 🗎 172
Pulse output 1 to n	→ 🗎 172
Switch state) → 🗎 172

Parameter overview with brief description

Parameter	Prerequisite	Description	User interface
Output frequency	In the Operating mode parameter, the Frequency option is selected.	Displays the value currently measured for the frequency output.	0.0 to 12 500.0 Hz
Pulse output 1 to n	The Pulse option is selected in the Operating mode parameter parameter.	Displays the pulse frequency currently output.	Positive floating-point number
Switch state	The Switch option is selected in the Operating mode parameter.	Displays the current switch output status.	 Open Closed

Output values for relay output

The **Relay output 1 to n** submenu contains all the parameters needed to display the current measured values for every relay output.

Navigation

"Diagnostics" menu \rightarrow Measured values \rightarrow Output values \rightarrow Relay output 1 to n

► Relay output 1 to n				
Switch state) → 🗎 173			
Switch cycles) → 🗎 173			
Max. switch cycles number	→ 🗎 173			

Parameter	Description	User interface
Switch state	Shows the current relay switch status.	 Open Closed
Switch cycles	Shows number of all performed switch cycles.	Positive integer
Max. switch cycles number	Shows the maximal number of guaranteed switch cycles.	Positive integer

Output values for double pulse output

The **Double pulse output** submenu contains all the parameters needed to display the current measured values for every double pulse output.

Navigation

"Diagnostics" menu → Measured values → Output values → Double pulse output

► Double pulse output		
Pulse output		→ 🗎 173

Parameter overview with brief description

Parameter	Description	User interface
Pulse output	Shows the currently output pulse frequency.	Positive floating-point number

11.5 Adapting the measuring device to the process conditions

The following are available for this purpose:

- Basic settings using the Setup menu ($\rightarrow \square 96$)
- Advanced settings using the **Advanced setup** submenu ($\Rightarrow \square 132$)

11.6 Performing a totalizer reset

The totalizers are reset in the **Operation** submenu:

- Control Totalizer
- Reset all totalizers

Navigation

"Operation" menu \rightarrow Totalizer handling

► Totalizer handling				
Control Totalizer 1 to n	→ 🗎 174			
Preset value 1 to n	→ 🗎 174			
Totalizer value 1 to n	→ 🗎 174			

Weighted density average	→ 🗎 174
Weighted temperature average	→ 🗎 174
Reset weighted averages	→ 🗎 175
Reset all totalizers	→ 🗎 175

Parameter	Prerequisite	Description	Selection / User entry / User interface	Factory setting
Control Totalizer 1 to n	A process variable is selected in the Assign process variable parameter ($\rightarrow \square$ 139) of the Totalizer 1 to n submenu.	Control totalizer value.	 Totalize Reset + hold * Preset + hold * Reset + totalize Preset + totalize * Hold * 	Totalize
Preset value 1 to n	A process variable is selected in the Assign process variable parameter ($\rightarrow \square$ 139) of the Totalizer 1 to n submenu.	 Specify start value for totalizer. Dependency The unit of the selected process variable is specified for the totalizer in the Unit totalizer parameter (→ 139). 	Signed floating-point number	Country-specific: • 0 kg • 0 lb
Totalizer value 1 to n	A process variable is selected in the Assign process variable parameter ($\rightarrow \textcircled{139}$) of the Totalizer 1 to n submenu.	Displays the current totalizer counter reading.	Signed floating-point number	-
Weighted density average	 For the following order code: "Application package", option EJ "Petroleum" "Application package", option EM "Petroleum + Locking function" The software options currently enabled are displayed in the Software option overview parameter. 	Displays the weighted average for the density since the last time the density averages were reset. Dependency: • The unit is taken from: Density unit parameter • The value is reset to NaN (Not a Number) via the Reset weighted averages parameter	Signed floating-point number	-
Weighted temperature average	 For the following order code: "Application package", option EJ "Petroleum" "Application package", option EM "Petroleum + Locking function" The software options currently enabled are displayed in the Software option overview parameter. 	Displays the weighted average for the temperature since the last time the temperature averages were reset. Dependency: • The unit is taken from: Temperature unit parameter • The value is reset to NaN (Not a Number) via the Reset weighted averages parameter	Signed floating-point number	-

Parameter	Prerequisite	Description	Selection / User entry / User interface	Factory setting
Reset weighted averages	The values can only be reset at zero flow. For the following order code: "Application package", option EJ "Petroleum" The software options currently enabled are displayed in the Software option overview parameter.	Resets the weighted averages for density and temperature to NaN (Not a Number) and then starts determining the weighted averages.	 Totalize Reset weighted averages Reset weighted averages + totalizer 3 	Totalize
Reset all totalizers	-	Reset all totalizers to 0 and start.	CancelReset + totalize	Cancel

* Visibility depends on order options or device settings

11.6.1 Function scope of "Control Totalizer" parameter

Options	Description
Totalize	The totalizer is started or continues running.
Reset + hold	The totaling process is stopped and the totalizer is reset to 0.
Preset + hold ¹⁾	The totaling process is stopped and the totalizer is set to its defined start value from the Preset value parameter.
Reset + totalize	The totalizer is reset to 0 and the totaling process is restarted.
Preset + totalize ¹⁾	The totalizer is set to the defined start value in the Preset value parameter and the totaling process is restarted.
Hold	Totalizing is stopped.

1) Visible depending on the order options or device settings

11.6.2 Function scope of the "Reset all totalizers" parameter

Options	Description
Cancel	No action is executed and the user exits the parameter.
Reset + totalize	Resets all totalizers to 0 and restarts the totaling process. This deletes all the flow values previously totalized.

11.7 Show data logging


The **Extended HistoROM** application package must be enabled in the device (order option) for the **Data logging** submenu to appear. This contains all the parameters for the measured value history.

Pata logging is also available via:

- Plant Asset Management Tool FieldCare →
 ■ 88.
 - Web browser

Function scope

- A total of 1000 measured values can be stored
- 4 logging channels
- Adjustable logging interval for data logging
- Measured value trend for each logging channel displayed in the form of a chart

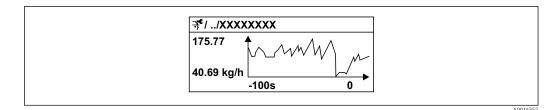

■ 37 Chart of a measured value trend

- x-axis: depending on the number of channels selected displays 250 to 1000 measured values of a process variable.
- y-axis: displays the approximate measured value span and constantly adapts this to the ongoing measurement.

If the length of the logging interval or the assignment of the process variables to the channels is changed, the content of the data logging is deleted.

Navigation

"Diagnostics" menu \rightarrow Data logging

► Data logging	
Assign channel 1] → 🗎 177
Assign channel 2] → 🗎 178
Assign channel 3] → 🗎 178
Assign channel 4] → 🗎 178
Logging interval] → 🗎 178
Clear logging data] → 🗎 178
Data logging] → 🗎 178
Logging delay] → 🗎 178
Data logging control] → 🗎 178
Data logging status] → 🗎 179
Entire logging duration	→ 🗎 179
► Display channel 1]
► Display channel 2]
► Display channel 3]
► Display channel 4]

Parameter	Prerequisite	Description	Selection / User entry / User interface	Factory setting
Assign channel 1	The Extended HistoROM application package is available.	Assign process variable to logging channel.	 Off Mass flow Volume flow Corrected volume flow* Density Reference density* Temperature Pressure GSV flow GSV flow alternative* NSV flow alternative* S&W volume flow* Reference density alternative* S&W volume flow* Water cut* Oil density* Water density* Oil density Water volume flow* Vater volume flow* Oil corrected volume flow* Oil corrected volume flow* Carrier mass flow* Carrier mass flow* Carrier mass flow* Carrier mass flow* Carrier volume flow* Carrier volume flow* Carrier corrected volume flow* Application * Oscillation damping 0 Oscillation family 0 Oscillation family 0 Oscillation family 0* Osci	Off

Parameter	Prerequisite	Description	Selection / User entry / User interface	Factory setting
			 Oscillation amplitude 1* Signal asymmetry Torsion signal asymmetry* Carrier pipe temperature* Electronics temperature Sensor index coil asymmetry Test point 0 Test point 1 Current output 1 Current output 2* Current output 3* Current output 4* 	
Assign channel 2	The Extended HistoROM application package is available. The software options currently enabled are displayed in the Software option overview parameter.	Assign a process variable to logging channel.	For the picklist, see the Assign channel 1 parameter (→ ≌ 177)	Off
Assign channel 3	The Extended HistoROM application package is available. The software options currently enabled are displayed in the Software option overview parameter.	Assign a process variable to logging channel.	For the picklist, see the Assign channel 1 parameter $(\rightarrow \square 177)$	Off
Assign channel 4	The Extended HistoROM application package is available. The software options currently enabled are displayed in the Software option overview parameter.	Assign a process variable to logging channel.	For the picklist, see the Assign channel 1 parameter $(\rightarrow \square 177)$	Off
Logging interval	The Extended HistoROM application package is available.	Define the logging interval for data logging. This value defines the time interval between the individual data points in the memory.	0.1 to 3 600.0 s	1.0 s
Clear logging data	The Extended HistoROM application package is available.	Clear the entire logging data.	CancelClear data	Cancel
Data logging	-	Select the type of data logging.	 Overwriting Not overwriting	Overwriting
Logging delay	In the Data logging parameter, the Not overwriting option is selected.	Enter the time delay for measured value logging.	0 to 999 h	0 h
Data logging control	In the Data logging parameter, the Not overwriting option is selected.	Start and stop measured value logging.	 None Delete + start Stop 	None

Parameter	Prerequisite	Description	Selection / User entry / User interface	Factory setting
Data logging status	In the Data logging parameter, the Not overwriting option is selected.	Displays the measured value logging status.	DoneDelay activeActiveStopped	Done
Entire logging duration	In the Data logging parameter, the Not overwriting option is selected.	Displays the total logging duration.	Positive floating- point number	0 s

* Visibility depends on order options or device settings

11.8 Gas Fraction Handler

The Gas Fraction Handler improves measurement stability and repeatability in the event of two-phase media and provides valuable diagnostic information for the process.

The function continuously checks for the presence of gas bubbles in liquids or droplets in gases, as this second phase influences the output values for flow and density.

In the case of two-phase media, the Gas Fraction Handler stabilizes the output values and enables better readability for operators and easier interpretation by the distributed control system. The level of smoothing is adjusted according to the severity of the disturbances introduced by the second phase. In the case of single-phase media, the Gas Fraction Handler does not have any influence on the output values.

Possible options in the Gas Fraction Handler parameter:

- Off: Disables the Gas Fraction Handler. When a second phase is present, large fluctuations in the values output for flow and density will occur.
- Moderate: Use for applications with low levels or intermittent levels of second phase.
- Powerful: Use for applications with very significant levels of second phase.

The Gas Fraction Handler is cumulative to any fixed damping constants applied to flow and density that are set elsewhere in the instrument parameterization.

For detailed information on the parameter descriptions of the Gas Fraction Handler, see the Special Documentation for the device $\rightarrow \cong 249$

11.8.1 "Measurement mode" submenu

Navigation

"Expert" menu \rightarrow Sensor \rightarrow Measurement mode


► Measurement r	node	
	Gas Fraction Handler (6377)	→ 🖺 179

Parameter	Description	Selection	Factory setting
Gas Fraction Handler	Activates the Gas Fraction Handler function for two phase media.	OffModeratePowerful	Moderate

11.8.2 "Medium index" submenu

Navigation

"Expert" menu \rightarrow Application \rightarrow Medium index

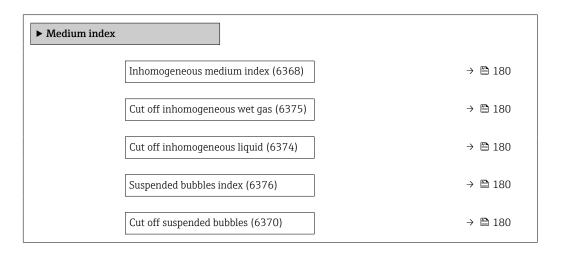

Parameter	Prerequisite	Description	User interface / User entry	Factory setting
Inhomogeneous medium index	-	Shows the degree of inhomogeneity of the medium.	Signed floating-point number	-
Cut off inhomogeneous wet gas	-	Enter cut off value for wet gas applications. Below this value the 'Inhomogeneous medium index' is set to 0.	Positive floating- point number	0.25
Cut off inhomogeneous liquid	-	Enter cut off value for liquid applications. Below this value the Inhomogeneous medium index' is set to 0.	Positive floating- point number	0.05
Suspended bubbles index	The diagnostic index is only available for Promass Q.	Shows the relative amount of suspended bubbles in the medium.	Signed floating-point number	-
Cut off suspended bubbles	The parameter is only available for Promass Q.	Enter the cut off value for suspended bubbles. Below this value the 'Index for suspended bubbles' is set to 0.	Positive floating- point number	0.05

12 Diagnostics and troubleshooting

12.1 General troubleshooting

For local display

Error	Possible causes	Remedy
Local display dark and no output signals	Supply voltage does not match that specified on the nameplate.	Apply the correct supply voltage $\rightarrow 53 \rightarrow 47.$
Local display dark and no output signals	The polarity of the supply voltage is wrong.	Correct the polarity.
Local display dark and no output signals	No contact between connecting cables and terminals.	Check the connection of the cables and correct if necessary.
Local display dark and no output signals	Terminals are not plugged into the I/O electronics module correctly. Terminals are not plugged into the main electronics module correctly.	Check terminals.
Local display dark and no output signals	I/O electronics module is defective. Main electronics module is defective.	Order spare part → 🗎 208.
Local display dark and no output signals	The connector between the main electronics module and display module is not plugged in correctly.	Check the connection and correct if necessary.
Local display dark and no output signals	The connecting cable is not plugged in correctly.	 Check the connection of the electrode cable and correct if necessary. Check the connection of the coil current cable and correct if necessary.
Local display is dark, but signal output is within the valid range	Display is set too bright or too dark.	 Set the display brighter by simultaneously pressing + E. Set the display darker by simultaneously pressing - + E.
Local display is dark, but signal output is within the valid range	The cable of the display module is not plugged in correctly.	Insert the plug correctly into the main electronics module and display module.
Local display is dark, but signal output is within the valid range	Display module is defective.	Order spare part $\rightarrow \square$ 208.
Backlighting of local display is red	Diagnostic event with "Alarm" diagnostic behavior has occurred.	Take remedial measures $\rightarrow \square 193$
Text on local display appears in a foreign language and cannot be understood.	Incorrect operating language is configured.	1. Press 2 s \Box + \oplus ("home position"). 2. Press E . 3. Set the desired language in the Display language parameter ($\rightarrow \cong$ 146).
Message on local display: "Communication Error" "Check Electronics"	Communication between the display module and the electronics is interrupted.	 Check the cable and the connector between the main electronics module and display module. Order spare part → [△] 208.

For output signals

Error	Possible causes	Remedial action
Signal output outside the valid range	Main electronics module is defective.	Order spare part $\rightarrow \square$ 208.
Device shows correct value on local display, but signal output is incorrect, though in the valid range.	Parametrization errors	Check parameterization and correct it.
Device measures incorrectly.	Configuration error or device is operated outside the application.	 Check and correct parameter configuration. Observe limit values specified in the "Technical Data".

For access

Error	Possible causes	Remedy
No write access to parameters	Hardware write protection enabled	Set the write protection switch on the main electronics module to the OFF position $\rightarrow \cong$ 155.
No write access to parameters	Current user role has limited access authorization	 Check user role → 77. Enter correct customer-specific access code ⇒ 77.
No connection via Modbus RS485	Modbus RS485 bus cable connected incorrectly	Check the terminal assignment $\rightarrow \square 40$.
No connection via Modbus RS485	Modbus RS485 cable incorrectly terminated	Check the terminating resistor $\rightarrow \oplus 61$.
No connection via Modbus RS485	Incorrect settings for the communication interface	Check the Modbus RS485 configuration $\rightarrow \cong 100.$
No connection to Web server	Web server disabled	Using the "FieldCare" or "DeviceCare" operating tool, check whether the Web server of the measuring device is enabled, and enable it if necessary→ 🗎 84.
	Incorrect settings for the Ethernet interface of the computer	 Check the properties of the Internet protocol (TCP/IP) → ≅ 80→ ≅ 80. Check the network settings with the IT manager.
No connection to Web server	Incorrect IP address	Check the IP address: 192.168.1.212 $\rightarrow \cong 80 \rightarrow \cong 80$
No connection to Web server	Incorrect WLAN access data	 Check WLAN network status. Log on to the device again using WLAN access data. Check that WLAN is enabled on the measuring device and operating device →
	WLAN communication disabled	-
Not connecting to Web server, FieldCare or DeviceCare	No WLAN network available	 Check if WLAN reception is present: LED on display module is lit blue Check if WLAN connection is enabled: LED on display module flashes blue Switch on instrument function.
Network connection not present or unstable	WLAN network is weak.	 Operating device is outside of reception range: Check network status on operating device. To improve network performance, use an external WLAN antenna.
	Parallel WLAN and Ethernet communication	 Check network settings. Temporarily enable only the WLAN as an interface.
Web browser frozen and operation no longer possible	Data transfer active	Wait until data transfer or current action is finished.


Error	Possible causes	Remedy
	Connection lost	 Check cable connection and power supply. Refresh the Web browser and restart if necessary.
Content of Web browser incomplete or difficult to read	Not using optimum version of Web server.	 Use the correct Web browser version ⊖ 79. Clear the Web browser cache and restart the Web browser.
	Unsuitable view settings.	Change the font size/display ratio of the Web browser.
No or incomplete display of contents in the Web browser	 JavaScript not enabled JavaScript cannot be enabled	 Enable JavaScript. Enter http://XXX.XXX.X.X.X.X/servlet/ basic.html as the IP address.
Operation with FieldCare or DeviceCare not possible via CDI-RJ45 service interface (port 8000)	Firewall of computer or network is preventing communication	Depending on the settings of the firewall used on the computer or in the network, the firewall must be adapted or disabled to allow FieldCare/ DeviceCare access.
Flashing of firmware with FieldCare or DeviceCare via CDI-RJ45 service interface (via port 8000 or TFTP ports)	Firewall of computer or network is preventing communication	Depending on the settings of the firewall used on the computer or in the network, the firewall must be adapted or disabled to allow FieldCare/ DeviceCare access.

12.2 Diagnostic information via light emitting diodes

12.2.1 Transmitter

Proline 500 – digital

Different LEDs in the transmitter provide information on the device status.

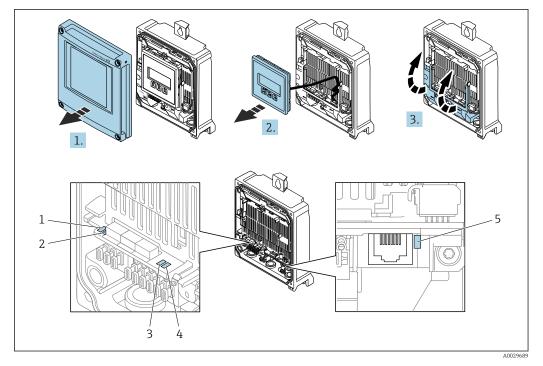


- Supply voltage Device status 1
- 2
- 3 Not used
- 4 Communication 5 Service interface (CDI) active
- 1. Open the housing cover.
- 2. Remove the display module.
- 3. Fold open the terminal cover.

LED		Color	Meaning
1	Supply voltage	Off	Supply voltage is off or too low.
		Green	Supply voltage is ok.
2	Device status (normal	Off	Firmware error
	operation)	Green	Device status is ok.
		Flashing green	Device is not configured.
		Flashing red	A diagnostic event with "Warning" diagnostic behavior has occurred.
		Red	A diagnostic event with "Alarm" diagnostic behavior has occurred.
		Flashing red/green	The device restarts.
2	Device status (during	Flashes red slowly	If > 30 seconds: problem with the boot loader.
	start-up)	Flashes red quickly	If > 30 seconds: compatibility problem when reading the firmware.
3	Not used	-	-
4	Communication	Off	Communication not active.
		White	Communication active.
5	Service interface (CDI)	Off	Not connected or no connection established.
		Yellow	Connected and connection established.
		Flashing yellow	Service interface active.

Proline 500

Different LEDs in the transmitter provide information on the device status.

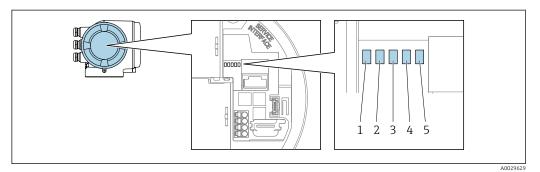


- 1 Supply voltage
- 2 Device status
- 3 Not used
- 4 Communication
- 5 Service interface (CDI) active

LED		Color	Meaning
1	Supply voltage	Off	Supply voltage is off or too low.
		Green	Supply voltage is ok.
2	Device status (normal	Off	Firmware error
	operation)	Green	Device status is ok.
		Flashing green	Device is not configured.
		Red	A diagnostic event with "Alarm" diagnostic behavior has occurred.
		Flashing red	A diagnostic event with "Warning" diagnostic behavior has occurred.
		Flashing red/green	The device restarts.
2	Device status (during	Flashes red slowly	If > 30 seconds: problem with the boot loader.
	start-up)	Flashes red quickly	If > 30 seconds: compatibility problem when reading the firmware.
3	Not used	-	-
4	Communication	Off	Communication not active.
		White	Communication active.
5	Service interface (CDI)	Off	Not connected or no connection established.
		Yellow	Connected and connection established.
		Flashing yellow	Service interface active.

12.2.2 Sensor connection housing

Proline 500 – digital

Various light emitting diodes (LED) on the ISEM electronics unit (intelligent sensor electronics module) in the sensor connection housing provide information about the device status.

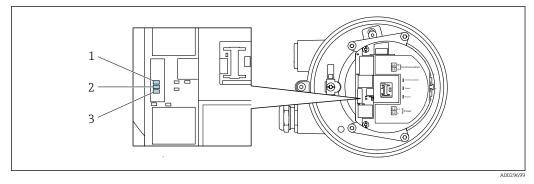


- 1 Communication
- 2 Device status
- 3 Supply voltage

LED		Color	Meaning
1	Communication	White	Communication active.
2	Device status (normal	Red	Error
	operation)	Flashing red	Warning
2	Device status (during	Flashes red slowly	If > 30 seconds: problem with the boot loader.
	start-up)	Flashes red quickly	If > 30 seconds: compatibility problem when reading the firmware.
3	Supply voltage	Green	Supply voltage is ok.
		Off	Supply voltage is off or too low.

12.3 Diagnostic information on local display

12.3.1 **Diagnostic message**

Faults detected by the self-monitoring system of the measuring device are displayed as a diagnostic message in alternation with the operational display.

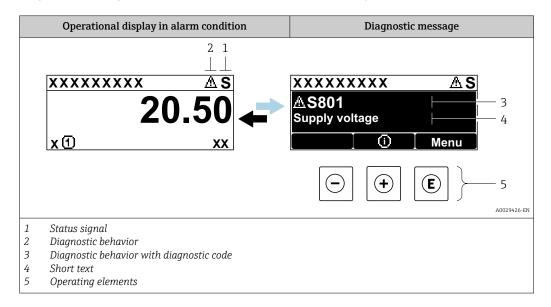

If two or more diagnostic events are pending simultaneously, only the message of the diagnostic event with the highest priority is shown.

Other diagnostic events that have occurred can be displayed in the **Diagnostics** menu:

- Via parameter $\rightarrow \square$ 198
- Via submenus →
 ⁽¹⁾
 ⁽²⁾
 ⁽²⁾

Status signals

The status signals provide information on the state and reliability of the device by categorizing the cause of the diagnostic information (diagnostic event).



The status signals are categorized according to VDI/VDE 2650 and NAMUR Recommendation NE 107: F = Failure, C = Function Check, S = Out of Specification, M = Maintenance Required


Symbol	Meaning
F	Failure A device error has occurred. The measured value is no longer valid.
С	Function check The device is in service mode (e.g. during a simulation).
S	Out of specification The device is operated: Outside its technical specification limits (e.g. outside the process temperature range)
М	Maintenance required Maintenance is required. The measured value remains valid.

Diagnostic behavior

Symbol	Meaning
8	 Alarm Measurement is interrupted. Signal outputs and totalizers assume the defined alarm condition. A diagnostic message is generated.
Δ	Warning Measurement is resumed. The signal outputs and totalizers are not affected. A diagnostic message is generated.


Diagnostic information

The fault can be identified using the diagnostic information. The short text helps you by providing information about the fault. In addition, the corresponding symbol for the diagnostic behavior is displayed in front of the diagnostic information on the local display.

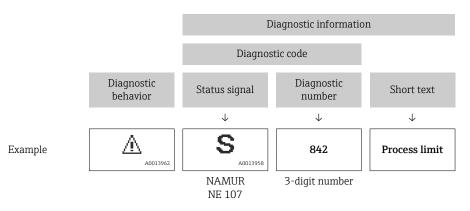

Operating elements

Кеу	Meaning
+	Plus key In a menu, submenu Opens the message about remedy information.
E	Enter key <i>In a menu, submenu</i> Opens the operating menu.

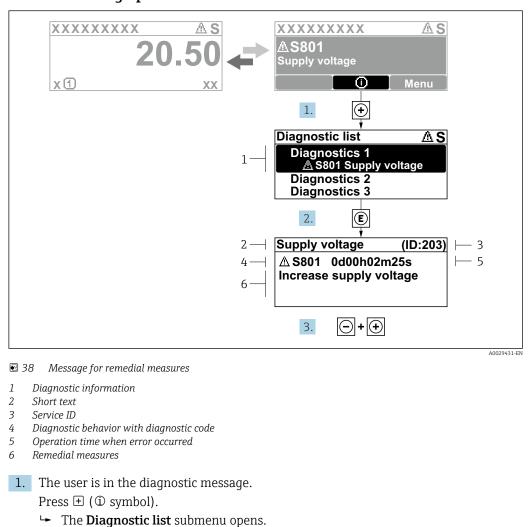

12.3.2 Calling up remedial measures

- **2.** Select the desired diagnostic event with \oplus or \Box and press \blacksquare .
 - └ The message about the remedial measures opens.
- 3. Press + + simultaneously.
 - └ The message about the remedial measures closes.


The user is in the **Diagnostics** menu at an entry for a diagnostics event, e.g. in the **Diagnostic list** submenu or **Previous diagnostics** parameter.

- 1. Press E.
 - └ The message for the remedial measures for the selected diagnostic event opens.
- 2. Press + + simultaneously.
 - └ The message for the remedial measures closes.

12.4 Diagnostic information in the Web browser

12.4.1 Diagnostic options

Any faults detected by the measuring device are displayed in the Web browser on the home page once the user has logged on.

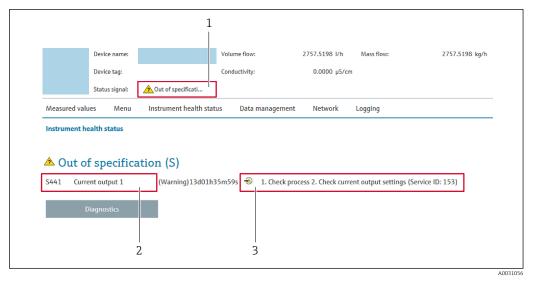

- 1 Status area with status signal
- 2 Diagnostic information
- 3 Remedial measures with service ID

In addition, diagnostic events which have occurred can be shown in the **Diagnostics** menu:

- Via parameter $\rightarrow \square$ 198
- Via submenu →
 [™]
 [™]
 198

Status signals

The status signals provide information on the state and reliability of the device by categorizing the cause of the diagnostic information (diagnostic event).

Symbol	Meaning
\otimes	Failure A device error has occurred. The measured value is no longer valid.
V	Function check The device is in the service mode (during a simulation, for example).
<u>^</u>	Out of specification The device is being operated: Outside its technical specification limits (e.g. outside the process temperature range)
	Maintenance required Maintenance is required. The measured value is still valid.

The status signals are categorized in accordance with VDI/VDE 2650 and NAMUR Recommendation NE 107.

12.4.2 Calling up remedy information

Remedy information is provided for every diagnostic event to ensure that problems can be rectified quickly. These measures are displayed in red along with the diagnostic event and the related diagnostic information.

12.5 Diagnostic information in FieldCare or DeviceCare

12.5.1 Diagnostic options

Any faults detected by the measuring device are displayed on the home page of the operating tool once the connection has been established.

D 🛩 🖬 🚝 🕋 🛱 💭 📖 🗽 🖄 Xxxxxx///	a
Device name: XXXXXXX Device tag: XXXXXXX Status signal: & Y Fu	Mass flow: ₽ 12.34 kg/h Volume flow: ₽ 12.34 m³/h
C→ XXXXXX P⊡ Diagnostics 1: C4	C485 Simu Deactivate
	Alainenance Failure (F) Function check (C) Diagnostics 1: C485 Simulation measured vari V Remedy information: Deactivate Simulation (Service V
	Image: Second system Out of spezification (S) Image: Second system Maintenance required (M)


- 1 Status area with status signal $\rightarrow \square 187$
- 2 Diagnostics information $\rightarrow \square 188$
- 3 Remedial measures with service ID

In addition, diagnostic events which have occurred can be shown in the **Diagnostics** menu:

- Via parameter $\rightarrow \triangleq 198$
- Via submenu →
 [™]
 [™]
 198

Diagnostic information

The fault can be identified using the diagnostic information. The short text helps you by providing information about the fault. In addition, the corresponding symbol for the diagnostic behavior is displayed in front of the diagnostic information on the local display.

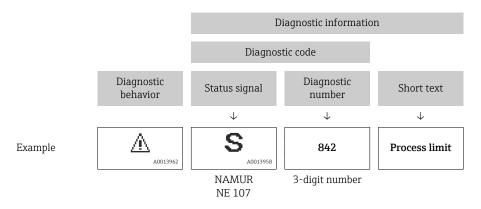

12.5.2 Calling up remedy information

Remedy information is provided for every diagnostic event to ensure that problems can be rectified quickly:

- On the home page
- Remedy information is displayed in a separate field below the diagnostics information.
- In the **Diagnostics** menu

Remedy information can be called up in the working area of the user interface.

The user is in the **Diagnostics** menu.

- 1. Call up the desired parameter.
- 2. On the right in the working area, mouse over the parameter.
 - ← A tool tip with remedy information for the diagnostic event appears.

12.6 Diagnostic information via communication interface

12.6.1 Reading out diagnostic information

Diagnostic information can be read out via Modbus RS485 register addresses.

- Via register address 6821 (data type = string): diagnosis code, e.g. F270
- Via register address 6859 (data type = integer): diagnosis number, e.g. 270

For an overview of diagnostic events with diagnosis number and diagnosis code $\rightarrow \cong 193$

12.6.2 Configuring error response mode

The error response mode for Modbus RS485 communication can be configured in the **Communication** submenu using 2 parameters.

Navigation path

 $\mathsf{Setup} \to \mathsf{Communication}$

Parameter overview with brief description

Parameters	Description	Selection	Factory setting
Failure mode	Select measured value output behavior when a diagnostic message occurs via Modbus communication. The effect of this parameter depends on the option selected in the Assign diagnostic behavior parameter.	 NaN value Last valid value NaN = not a number 	NaN value

12.7 Adapting the diagnostic information

12.7.1 Adapting the diagnostic behavior

Each item of diagnostic information is assigned a specific diagnostic behavior at the factory. The user can change this assignment for specific diagnostic information in the **Diagnostic behavior** submenu.

Expert \rightarrow System \rightarrow Diagnostic handling \rightarrow Diagnostic behavior

You can assign the following options to the diagnostic number as the diagnostic behavior:

Options	Description
Alarm	The device stops measurement. The measured value output via Modbus RS485 and the totalizers assume the defined alarm condition. A diagnostic message is generated. The background lighting changes to red.
Warning	The device continues to measure. The measured value output via Modbus RS485 and the totalizers are not affected. A diagnostic message is generated.

Options	Description
Logbook entry only	The device continues to measure. The diagnostic message is displayed only in the Event logbook submenu (Event list submenu) and is not displayed in alternation with the operational display.
Off	The diagnostic event is ignored, and no diagnostic message is generated or entered.

12.8 Overview of diagnostic information

The amount of diagnostic information and the number of measured variables affected increase if the measuring device has one or more application packages.

In the case of some items of diagnostic information, the diagnostic behavior can be changed. Adapting the diagnostic information $\rightarrow \square$ 192

Diagnostic number	Short text	Remedy instructions	Status signal [from the factory]	Diagnostic behavior [from the factory]
Diagnostic of	sensor			
002	Sensor unknown	 Check if the correct sensor is mounted Check if the 2-D matrix code on the sensor is undamaged 	F	Alarm
022	Temperature sensor defective	 If available: Check connection cable between sensor and transmitter Check or replace sensor electronic module (ISEM) Replace sensor 	F	Alarm
046	Sensor limit exceeded	 Check process conditions Check sensor 	S	Warning ¹⁾
062	Sensor connection faulty	 If available: Check connection cable between sensor and transmitter Check or replace sensor electronic module (ISEM) Replace sensor 	F	Alarm
063	Exciter current faulty	 If available: Check connection cable between sensor and transmitter Check or replace sensor electronic module (ISEM) Replace sensor 	F	Alarm
082	Data storage inconsistent	Check module connections	F	Alarm
083	Memory content inconsistent	 Restart device Restore S-DAT data Replace S-DAT 	F	Alarm
119	Sensor initialization active	Sensor initialization in progress, please wait	С	Warning
140	Sensor signal asymmetrical	 If available: Check connection cable between sensor and transmitter Check or replace sensor electronic module (ISEM) Replace sensor 	S	Alarm ¹⁾
141	Zero adjustment failed	 Check process conditions Repeat commissioning procedure Check sensor 	F	Alarm
142	Sensor index coil asymmetry too high	Check sensor	S	Warning ¹⁾

Diagnostic number	Short text	Remedy instructions	Status signal [from the factory]	Diagnostic behavior [from the factory]
144	Measurement error too high	 Check process conditions Check or change sensor 	F	Alarm ¹⁾
Diagnostic of	electronic		1	1
201	Electronics faulty	 Restart device Replace electronics 	F	Alarm
242	Firmware incompatible	 Check firmware version Flash or replace electronic module 	F	Alarm
252	Module incompatible	 Check electronic modules Check if correct modules are available (e.g. NEx, Ex) Replace electronic modules 	F	Alarm
262	Module connection interrupted	 Check or replace connection cable between sensor electronic module (ISEM) and main electronics Check or replace ISEM or main electronics 	F	Alarm
270	Main electronics defective	 Restart device Replace main electronic module 	F	Alarm
271	Main electronics faulty	 Restart device Replace main electronic module 	F	Alarm
272	Main electronics faulty	Restart device	F	Alarm
273	Main electronics defective	 Pay attention to display emergency operation Replace main electronics 	F	Alarm
275	I/O module defective	Change I/O module	F	Alarm
276	I/O module faulty	1. Restart device 2. Change I/O module	F	Alarm
283	Memory content inconsistent	Restart device	F	Alarm
302	Device verification active	Device verification active, please wait.	С	Warning ¹⁾
303	I/O 1 to n configuration changed	 Apply I/O module configuration (parameter 'Apply I/O configuration') Afterwards reload device description and check wiring 	М	Warning
304	Device verification failed	 Check verification report Repeat commissioning procedure Check sensor 	F	Alarm ¹⁾
311	Sensor electronics (ISEM) faulty	Maintenance required! Do not reset device	М	Warning
330	Flash file invalid	 Update firmware of device Restart device 	М	Warning
331	Firmware update failed	 Update firmware of device Restart device 	F	Warning
332	Writing in HistoROM backup failed	 Replace user interface board Ex d/XP: replace transmitter 	F	Alarm
361	I/O module 1 to n faulty	 Restart device Check electronic modules Change I/O module or main electronics 	F	Alarm
369	Matrix code scanner defective	Replace matrix code scanner	F	Alarm

Diagnostic number	Short text	Remedy instructions	Status signal [from the factory]	Diagnostic behavior [from the factory]
371	Temperature sensor defective	Contact service	М	Warning
372	Sensor electronics (ISEM) faulty	 Restart device Check if failure recurs Replace sensor electronic module (ISEM) 	F	Alarm
373	Sensor electronics (ISEM) faulty	Transfer data or reset device	F	Alarm
374	Sensor electronics (ISEM) faulty	 Restart device Check if failure recurs Replace sensor electronic module (ISEM) 	S	Warning ¹⁾
375	I/O- 1 to n communication failed	 Restart device Check if failure recurs Replace module rack inclusive electronic modules 	F	Alarm
378	Supply voltage ISEM faulty	 If available: Check connection cable between sensor and transmitter Replace main electronic module Replace sensor electronic module (ISEM) 	F	Alarm
382	Data storage	1. Insert T-DAT 2. Replace T-DAT	F	Alarm
383	Memory content	Reset device	F	Alarm
387	HistoROM data faulty	Contact service organization	F	Alarm
Diagnostic of	configuration			
410	Data transfer failed	 Retry data transfer Check connection 	F	Alarm
412	Processing download	Download active, please wait	С	Warning
431	Trim 1 to n required	Carry out trim	С	Warning
437	Configuration incompatible	 Update firmware Execute factory reset 	F	Alarm
438	Dataset different	 Check data set file Check device parameterization Download new device parameterization 	M	Warning
441	Current output 1 to n faulty	 Check process Check current output settings 	S	Warning ¹⁾
442	Frequency output faulty	 Check process Check frequency output settings 	S	Warning ¹⁾
443	Pulse output 1 to n faulty	 Check process Check pulse output settings 	S	Warning ¹⁾
444	Current input 1 to n faulty	 Check process Check current input settings 	S	Warning ¹⁾
453	Flow override active	Deactivate flow override	С	Warning
484	Failure mode simulation active	Deactivate simulation	С	Alarm
485	Process variable simulation active	Deactivate simulation	С	Warning
486	Current input simulation active	Deactivate simulation	С	Warning

Diagnostic number	Short text	Remedy instructions	Status signal [from the factory]	Diagnostic behavior [from the factory]
491	Current output 1 to n simulation active	Deactivate simulation	С	Warning
492	Frequency output simulation active	Deactivate simulation frequency output	С	Warning
493	Pulse output simulation active	Deactivate simulation pulse output	С	Warning
494	Switch output simulation active	Deactivate simulation switch output	С	Warning
495	Diagnostic event simulation active	Deactivate simulation	С	Warning
496	Status input simulation active	Deactivate simulation status input	С	Warning
502	CT activation/ deactivation failed	Follow the sequence of the custody transfer activation/deactivation: First authorized user login, then set the DIP switch on the main electonic module	С	Warning
520	I/O 1 to n hardware configuration invalid	 Check I/O hardware configuration Replace wrong I/O module Plug the module of double pulse output on correct slot 	F	Alarm
528	Concentration calculation not possible	Out of valid range of the selected calculation algorithm 1. Check concentration settings 2. Check measured values, e.g. density or temperature	S	Alarm
529	Concentration calculation not accurate	Out of valid range of the selected calculation algorithm 1. Check concentration settings 2. Check measured values, e.g. density or temperature	S	Warning
537	Configuration	 Check IP addresses in network Change IP address 	F	Warning
540	Custody transfer mode failed	 Power off device and toggle DIP switch Deactivate custody transfer mode Reactivate custody transfer mode Check electronic components 	F	Alarm
543	Double pulse output	 Check process Check pulse output settings 	S	Warning ¹⁾
593	Double pulse output simulation	Deactivate simulation pulse output	С	Warning
594	Relay output simulation	Deactivate simulation switch output	С	Warning
599	Custody transfer logbook full	 Deactivate custody transfer mode Clear custody transfer logbook (all 30 entries) Activate custody transfer mode 	F	Warning ¹⁾
Diagnostic of	process			
803	Loop current 1 faulty	 Check wiring Change I/O module 	F	Alarm
830	Ambient temperature too high	Reduce ambient temp. around the sensor housing	S	Warning ¹⁾
831	Ambient temperature too low	Increase ambient temp. around the sensor housing	S	Warning ¹⁾

Diagnostic number	Short text	Remedy instructions	Status signal [from the factory]	Diagnostic behavior [from the factory]
832	Electronics temperature too high	Reduce ambient temperature	S	Warning ¹⁾
833	Electronics temperature too low	Increase ambient temperature	S	Warning ¹⁾
834	Process temperature too high	Reduce process temperature	S	Warning ¹⁾
835	Process temperature too low	Increase process temperature	S	Warning ¹⁾
842	Process value below limit	 Decrease process value Check application Check sensor 	S	Warning ¹⁾
862	Partly filled pipe	 Check for gas in process Adjust detection limits 	S	Warning ¹⁾
882	Input signal faulty	 Check input signal parameterization Check external device Check process conditions 	F	Alarm
910	Tubes not oscillating	 If available: Check connection cable between sensor and transmitter Check or replace sensor electronic module (ISEM) Check sensor 	F	Alarm
912	Medium inhomogeneous	 Check process cond. Increase system pressure 	S	Warning ¹⁾
913	Medium unsuitable	 Check process conditions Check electronic modules or sensor 	S	Warning ¹⁾
915	Viscosity ouf of specification	 Avoid 2-phase flow Increase system pressure Verify viscosity and density are within range Check process conditions 	S	Warning ¹⁾
941	API/ASTM temperature out of specificat.	 Check process temperature with selected API/ASTM commodity group Check API/ASTM-related parameters 	S	Warning ¹⁾
942	API/ASTM density out of specification	 Check process density with selected API/ASTM commodity group Check API/ASTM-related parameters 	S	Warning ¹⁾
943	API pressure out of specification	 Check process pressure with selected API commodity group Check API related parameters 	S	Warning ¹⁾
944	Monitoring failed	Check process conditions for Heartbeat Monitoring	S	Warning ¹⁾
948	Oscillation damping too high	Check process conditions	S	Warning ¹⁾
984	Condensation risk	 Decrease ambient temperature Increase medium temperature 	S	Warning ¹⁾

1) Diagnostic behavior can be changed.

12.9 Pending diagnostic events

The **Diagnostics** menu allows the user to view the current diagnostic event and the previous diagnostic event separately.

To call up the measures to rectify a diagnostic event:

- Via local display $\rightarrow \triangleq 189$
- Via web browser $\rightarrow \implies 190$
- Via "DeviceCare" operating tool $\rightarrow \square$ 191

Other pending diagnostic events can be displayed in the **Diagnostic list** submenu $\rightarrow \cong 198$

Navigation

"Diagnostics" menu

옃 Diagnostics		
1	Actual diagnostics	→ 🗎 198
Ι	Previous diagnostics	→ 🗎 198
	Operating time from restart	→ 🗎 198
	Operating time	→ 🗎 198

Parameter overview with brief description

Parameter	Prerequisite	Description	User interface
Actual diagnostics	A diagnostic event has occurred.	Shows the current occured diagnostic event along with its diagnostic information.	Symbol for diagnostic behavior, diagnostic code and short message.
		If two or more messages occur simultaneously, the message with the highest priority is shown on the display.	
Previous diagnostics	Two diagnostic events have already occurred.	Shows the diagnostic event that occurred prior to the current diagnostic event along with its diagnostic information.	Symbol for diagnostic behavior, diagnostic code and short message.
Operating time from restart	-	Shows the time the device has been in operation since the last device restart.	Days (d), hours (h), minutes (m) and seconds (s)
Operating time	-	Indicates how long the device has been in operation.	Days (d), hours (h), minutes (m) and seconds (s)

12.10 Diagnostic list

Up to 5 currently pending diagnostic events can be displayed in the **Diagnostic list** submenu along with the associated diagnostic information. If more than 5 diagnostic events are pending, the events with the highest priority are shown on the display.

Navigation path

Diagnostics \rightarrow Diagnostic list

્ર //Diagnose list
Diagnostics
SF273 Main electronic
Diagnostics 2
Diagnostics 3

39 Taking the example of the local display

To call up the measures to rectify a diagnostic event:

- ′ Via local display → 🖺 189
- Via web browser $\rightarrow \square$ 190
- Via "DeviceCare" operating tool →

 ¹
 191


12.11 Event logbook

12.11.1 Reading out the event logbook

A chronological overview of the event messages that have occurred is provided in the **Events list** submenu.

Navigation path

Diagnostics menu → **Event logbook** submenu → Event list

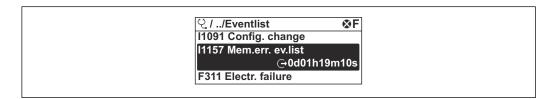

^{■ 40} Taking the example of the local display

- A maximum of 20 event messages can be displayed in chronological order.
- If the **Extended HistoROM** application package (order option) is enabled in the device, the event list can contain up to 100 entries .

The event history includes entries for:

- Diagnostic events $\rightarrow \square$ 193
- Information events $\rightarrow \cong 200$

In addition to the operation time of its occurrence, each event is also assigned a symbol that indicates whether the event has occurred or is ended:

- Diagnostic event
 - \odot : Occurrence of the event
- G: End of the event
- Information event

 \odot : Occurrence of the event

To call up the measures to rectify a diagnostic event:

- Via local display $\rightarrow \square$ 189
- Via web browser →
 ¹ 190
- Via "FieldCare" operating tool $\rightarrow \square$ 191
- Via "DeviceCare" operating tool →

 ¹91

For filtering the displayed event messages →
⁽¹⁾ 200

12.11.2 Filtering the event logbook

Using the **Filter options** parameter you can define which category of event message is displayed in the **Events list** submenu.

Navigation path

Diagnostics \rightarrow Event logbook \rightarrow Filter options

Filter categories

- All
- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- Information (I)

12.11.3 Overview of information events

Unlike a diagnostic event, an information event is displayed in the event logbook only and not in the diagnostic list.

Info number	Info name
I1000	(Device ok)
I1079	Sensor changed
I1089	Power on
I1090	Configuration reset
I1091	Configuration changed
I1092	HistoROM backup deleted
I1111	Density adjust failure
I11280	ZeroPT verified and adjustm. recommended
I11281	ZeroPT verif. and adjust. not recommend.
I1137	Electronics changed
I1151	History reset
I1155	Reset electronics temperature
I1156	Memory error trend
I1157	Memory error event list
I1209	Density adjustment ok
I1221	Zero point adjust failure
I1222	Zero point adjustment ok
I1256	Display: access status changed
I1278	I/O module restarted
I1335	Firmware changed
I1361	Web server: login failed
I1397	Fieldbus: access status changed
I1398	CDI: access status changed
I1444	Device verification passed
I1445	Device verification failed
I1447	Record application reference data
I1448	Application reference data recorded
I1449	Recording application ref. data failed

Info number	Info name
I1450	Monitoring off
I1451	Monitoring on
I1457	Measurement error verification failed
I1459	I/O module verification failed
I1460	HBSI verification failed
I1461	Sensor verification failed
I1462	Sensor electronic module verific. failed
I1512	Download started
I1513	Download finished
I1514	Upload started
I1515	Upload finished
I1517	Custody transfer active
I1518	Custody transfer inactive
I1618	I/O module 2 replaced
I1619	I/O module 3 replaced
I1621	I/O module 4 replaced
I1622	Calibration changed
I1624	All totalizers reset
I1625	Write protection activated
I1626	Write protection deactivated
I1627	Web server: login successful
I1628	Display: login successful
I1629	CDI: login successful
I1631	Web server access changed
I1632	Display: login failed
I1633	CDI: login failed
I1634	Reset to factory settings
I1635	Reset to delivery settings
I1639	Max. switch cycles number reached
I1643	Custody transfer logbook cleared
I1649	Hardware write protection activated
I1650	Hardware write protection deactivated
I1651	Custody transfer parameter changed
I1712	New flash file received
I1725	Sensor electronic module (ISEM) changed
I1726	Configuration backup failed

12.12 Resetting the measuring device

The entire device configuration or some of the configuration can be reset to a defined state with the **Device reset** parameter ($\Rightarrow \triangleq 150$).

Options	Description
Cancel	No action is executed and the user exits the parameter.
To delivery settings	Every parameter for which a customer-specific default setting was ordered is reset to the customer-specific value. All other parameters are reset to the factory setting.
Restart device	The restart resets every parameter with data stored in volatile memory (RAM) to the factory setting (e.g. measured value data). The device configuration remains unchanged.
Restore S-DAT backup	Restores the data that is saved on the S-DAT. Additional information: This function can be used to resolve the memory issue "083 Memory content inconsistent" or to restore the S-DAT data when a new S-DAT has been installed. This option is displayed only in an alarm condition.

12.12.1 Function scope of "Device reset" parameter

12.13 Device information

The **Device information** submenu contains all parameters that display different information for device identification.

Navigation

"Diagnostics" menu \rightarrow Device information

► Device information	
Device tag) → 🗎 203
Serial number) → 🗎 203
Firmware version) → 🗎 203
Device name) → 🗎 203
Manufacturer]
Order code) → 🗎 203
Extended order code 1	→ 🗎 203
Extended order code 2) → 🗎 203
Extended order code 3	→ 🗎 203
ENP version) → 🗎 203

Parameter	Description	User interface	Factory setting
Device tag	Shows name of measuring point.	Max. 32 characters, such as letters, numbers or special characters (e.g. @, %, /).	Promass
Serial number	Shows the serial number of the measuring device.	Max. 11-digit character string comprising letters and numbers.	-
Firmware version	Shows the device firmware version installed.	Character string in the format xx.yy.zz	-
Device name	Shows the name of the transmitter. The name can be found on the nameplate of the transmitter.	Promass 300/500	-
Order code	Shows the device order code. The order code can be found on the nameplate of the sensor and transmitter in the "Order code" field.	Character string composed of letters, numbers and certain punctuation marks (e.g. /).	-
Extended order code 1	Shows the 1st part of the extended order code. The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.	Character string	-
Extended order code 2	Shows the 2nd part of the extended order code. The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.	Character string	-
Extended order code 3	Shows the 3rd part of the extended order code. The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.	Character string	-
ENP version	Shows the version of the electronic nameplate (ENP).	Character string	2.02.00

Parameter overview with brief description

Release date	Firmware version	Order code for "Firmware version"	Firmware changes	Documentation type	Documentation
08.2022	01.06.zz	Option 58	 New gas type: methane with hydrogen Eight display values on local display Zero point verification and zero adjustment wizard New density unit: "API New diagnostic parameters Additional languages for Heartbeat Technology Reports 	Operating Instructions	BA01540D/06/EN/06.22
09.2019	01.05.zz	Option 64	 Gas Fraction Handler Adaptive Filter, Gas Entrainment Index Application- specific Input module Upgrading of the Petroleum application package 	Operating Instructions	BA01540D/06/EN/04.19
10.2018	01.02.zz	Option 65	 Integration of "StdBarrelOil" and "MillionStdCubi cFeetPerDay" units Modification of the functionality in the "Weighted Averages" Flow Block: Weighted density average Weighted temperature average 	Operating Instructions	BA01540D/06/EN/03.18

12.14 Firmware history

Release date	Firmware version	Order code for "Firmware version"	Firmware changes	Documentation type	Documentation
10.2017	01.01.zz	Option 70	 Petroleum new Concentration update Local display - enhanced performance and data entry via text editor Optimized keypad lock for local display Improvements and enhancements with regard to custody transfer measurement Web server feature update Support for trend data function Heartbeat function Heartbeat function Heartbeat function Heartbeat function enhanced to include detailed results (page 3/4 of the report) Device configuration as PDF (parameter log, similar to FDT print) Network capability of Ethernet (service) interface Comprehensive Heartbeat feature update Local display - support for WLAN infrastructure mode Implementation of reset code 	Operating Instructions	BA01540D/06/EN/02.17
08.2016	01.00.zz	Option 76	Original firmware	Operating Instructions	BA01540D/06/EN/01.16



It is possible to flash the firmware to the current version or the previous version using the service interface. For the compatibility of the firmware version, see the "Device history and compatibility" section $\rightarrow \cong 206$



For the compatibility of the firmware version with the previous version, the installed device description files and operating tools, observe the information about the device in the "Manufacturer's information" document.

The manufacturer's information is available:

- In the Download Area of the Endress+Hauser web site: www.endress.com → Downloads
- Specify the following details:
 - Product root: e.g. 8F5B The product root is the first part of the order code: see the nameplate on the device.
 - Text search: Manufacturer's information
 - Media type: Documentation Technical Documentation

12.15 Device history and compatibility

The device model is documented in the order code on the nameplate of the device (e.g. 8F3BXX-XXX....XXXA1-XXXXX).

Device model	Release	Change compared with earlier model	Compatibility with earlier model
A2	09.2019	I/O module with enhanced performance and functionality: see device firmware $01.05.zz \rightarrow \bigoplus 204$	No
A1	08.2016	-	-

13 Maintenance

13.1 Maintenance tasks

No special maintenance work is required.

13.1.1 Exterior cleaning

When cleaning the exterior of measuring devices, always use cleaning agents that do not attack the surface of the housing or the seals.

13.1.2 Interior cleaning

Observe the following points for CIP and SIP cleaning:

- Use only cleaning agents to which the process-wetted materials are adequately resistant.
 - Observe the maximum permitted medium temperature for the measuring device $\rightarrow \cong 230$.

13.2 Measuring and test equipment

Endress+Hauser offers a wide variety of measuring and test equipment, such as W@M or device tests.

Your Endress+Hauser Sales Center can provide detailed information on the services.

List of some of the measuring and testing equipment: $\rightarrow \cong 210 \rightarrow \boxtimes 212$

13.3 Endress+Hauser services

Endress+Hauser offers a wide variety of services for maintenance such as recalibration, maintenance service or device tests.

Your Endress+Hauser Sales Center can provide detailed information on the services.

14 Repair

14.1 General information

14.1.1 Repair and conversion concept

The Endress+Hauser repair and conversion concept provides for the following:

- The measuring devices have a modular design.
- Spare parts are grouped into logical kits with the associated Installation Instructions.
- Repairs are carried out by Endress+Hauser Service or by appropriately trained customers.
- Certified devices can only be converted to other certified devices by Endress+Hauser Service or at the factory.

14.1.2 Notes for repair and conversion

For repair and modification of a measuring device, observe the following notes:

- Use only original Endress+Hauser spare parts.
- Carry out the repair according to the Installation Instructions.
- Observe the applicable standards, federal/national regulations, Ex documentation (XA) and certificates.
- ► Document every repair and each conversion and enter them into the *W*@*M* life cycle management database and Netilion Analytics.

14.2 Spare parts

Device Viewer (www.endress.com/deviceviewer):

All the spare parts for the measuring device, along with the order code, are listed here and can be ordered. If available, users can also download the associated Installation Instructions.

All Measuring device serial number:

- Is located on the nameplate of the device.
- Can be read out via the Serial number parameter (→
 ^(→) 203) in the Device information submenu.

14.3 Endress+Hauser services

Endress+Hauser offers a wide range of services.

Your Endress+Hauser Sales Center can provide detailed information on the services.

14.4 Return

The requirements for safe device return can vary depending on the device type and national legislation.

- Refer to the web page for information: http://www.endress.com/support/return-material
 Select the region.
- 2. Return the device if repairs or a factory calibration are required, or if the wrong device was ordered or delivered.

14.5 Disposal

X

If required by the Directive 2012/19/EU on waste electrical and electronic equipment (WEEE), the product is marked with the depicted symbol in order to minimize the disposal of WEEE as unsorted municipal waste. Do not dispose of products bearing this marking as unsorted municipal waste. Instead, return them to the manufacturer for disposal under the applicable conditions.

14.5.1 Removing the measuring device

1. Switch off the device.

WARNING

Danger to persons from process conditions!

 Beware of hazardous process conditions such as pressure in the measuring device, high temperatures or aggressive media.

2. Carry out the mounting and connection steps from the "Mounting the measuring device" and "Connecting the measuring device" sections in reverse order. Observe the safety instructions.

14.5.2 Disposing of the measuring device

WARNING

Danger to personnel and environment from fluids that are hazardous to health.

 Ensure that the measuring device and all cavities are free of fluid residues that are hazardous to health or the environment, e.g. substances that have permeated into crevices or diffused through plastic.

Observe the following notes during disposal:

- Observe valid federal/national regulations.
- Ensure proper separation and reuse of the device components.

15 Accessories

Various accessories, which can be ordered with the device or subsequently from Endress +Hauser, are available for the device. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: www.endress.com.

15.1 Device-specific accessories

15.1.1 For the transmitter

Accessories	Description
Transmitter • Proline 500 – digital • Proline 500	 Transmitter for replacement or storage. Use the order code to define the following specifications: Approvals Output Input Display/operation Housing Software Image: Proline 500 - digital transmitter: Order number: 8X5BXX-******A Proline 500 transmitter: Order number: 8X5BXX-******B Proline 500 transmitter for replacement: It is essential to specify the serial number of the current transmitter when ordering. On the basis of the serial number, the device-specific data (e.g. calibration factors) of the replaced device can be used for the new transmitter. Proline 500 - digital transmitter: Installation Instructions EA01151D Proline 500 transmitter: Installation Instructions EA01152D
External WLAN antenna	 External WLAN antenna with 1.5 m (59.1 in) connecting cable and two angle brackets. Order code for "Accessory enclosed", option P8 "Wireless antenna wide area". Image: The external WLAN antenna is not suitable for use in hygienic applications. Additional information regarding the WLAN interface → B 86. Order number: 71351317 Installation Instructions EA01238D
Pipe mounting set	Pipe mounting set for transmitter. Image: Proline 500 - digital transmitter Order number: 71346427 Image: Proline 500 transmitter Order number: 71346428
Weather protection cover Transmitter • Proline 500 – digital • Proline 500	Is used to protect the measuring device from the effects of the weather: e.g. rainwater, excess heating from direct sunlight. Proline 500 - digital transmitter Order number: 71343504 Proline 500 transmitter Order number: 71343505 Installation Instructions EA01191D

Display guard Proline 500 – digital	Is used to protect the display against impact or scoring, for example from sand in desert areas. Order number: 71228792 Installation Instructions EA01093D
Connecting cable Proline 500 – digital Sensor – Transmitter	 The connecting cable can be ordered directly with the measuring device (order code for "Cable, sensor connection) or as an accessory (order number DK8012). The following cable lengths are available: order code for "Cable, sensor connection" Option B: 20 m (65 ft) Option E: User-configurable up to max. 50 m Option F: User-configurable up to max. 165 ft Maximum possible cable length for a Proline 500 – digital connecting cable: 300 m (1000 ft)
Connecting cable Proline 500 Sensor – Transmitter	The connecting cable can be ordered directly with the measuring device (order code for "Cable, sensor connection") or as an accessory (order number DK8012). The following cable lengths are available: order code for "Cable, sensor connection" • Option 1: 5 m (16 ft) • Option 2: 10 m (32 ft) • Option 3: 20 m (65 ft) Possible cable length for a Proline 500 connecting cable: max. 20 m (65 ft)

15.1.2 For the sensor

Accessories	Description
Heating jacket	Is used to stabilize the temperature of the fluids in the sensor. Water, water vapor and other non-corrosive liquids are permitted for use as fluids.
	If using oil as a heating medium, please consult with Endress+Hauser.
	Heating jackets cannot be used with sensors fitted with a rupture disk. Use the order code with the product root DK8003.
	Special Documentation SD02156D

Accessory	Description	
Applicator	 Software for selecting and sizing Endress+Hauser measuring devices: Choice of measuring devices with industrial requirements Calculation of all the necessary data for identifying the optimum flowmeter: e.g. nominal diameter, pressure loss, flow velocity and accuracy. Graphic illustration of the calculation results Determination of the partial order code, administration, documentation and access to all project-related data and parameters over the entire life cycle of a project. 	
	Applicator is available:Via the Internet: https://portal.endress.com/webapp/applicatorAs a downloadable DVD for local PC installation.	
W@M	W@M Life Cycle ManagementImproved productivity with information at your fingertips. Data relevant to aplant and its components is generated from the first stages of planning andduring the asset's complete life cycle.W@M Life Cycle Management is an open and flexible information platformwith online and on-site tools. Instant access for your staff to current, in-depthdata shortens your plant's engineering time, speeds up procurement processesand increases plant uptime.Combined with the right services, W@M Life Cycle Management boostsproductivity in every phase. For more information, see:www.endress.com/lifecyclemanagement	
FieldCare	FDT-based plant asset management tool from Endress+Hauser. It can configure all smart field units in your system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition.	
DeviceCare	Tool for connecting and configuring Endress+Hauser field devices.	

15.2 Service-specific accessories

15.3 System components

Accessories	Description
Memograph M graphic data manager	The Memograph M graphic data manager provides information on all the relevant measured variables. Measured values are recorded correctly, limit values are monitored and measuring points analyzed. The data are stored in the 256 MB internal memory and also on a SD card or USB stick.
	 Technical Information TI00133R Operating Instructions BA00247R
Cerabar M	The pressure transmitter for measuring the absolute and gauge pressure of gases, steam and liquids. It can be used to read in the operating pressure value.
	 Technical Information TI00426P and TI00436P Operating Instructions BA00200P and BA00382P
Cerabar S	The pressure transmitter for measuring the absolute and gauge pressure of gases, steam and liquids. It can be used to read in the operating pressure value.
iTEMP	The temperature transmitters can be used in all applications and are suitable for the measurement of gases, steam and liquids. They can be used to read in the medium temperature.
	Fields of Activity'' document FA00006T

16 Technical data

16.1 Application

The measuring device is only suitable for the flow measurement of liquids and gases.

Depending on the version ordered, the measuring device can also measure potentially explosive, flammable, poisonous and oxidizing media.

To ensure that the device remains in proper operating condition for its service life, use the measuring device only for media against which the process-wetted materials are sufficiently resistant.

16.2 Function and system design

Measuring principle	Mass flow measurement based on the Coriolis measuring principle
Measuring system	The measuring system consists of a transmitter and a sensor. The transmitter and sensor are mounted in physically separate locations. They are interconnected by connecting cables.
	Information on the structure of the device $\rightarrow extsf{B} extsf{14}$

16.3 Input

Measured variable Direct measured variables

- Mass flowDensity
- Temperature

Calculated measured variables

- Volume flow
- Corrected volume flow
- Reference density

Measuring range

Measuring range for liquids

DN		Measuring range full scale values $\dot{m}_{min(F)}$ to $\dot{m}_{max(F)}$	
[mm]	[in]	[in] [kg/h] [lb/m	
8	3⁄8	0 to 2 000	0 to 73.50
15	1/2	0 to 6 500	0 to 238.9
25	1	0 to 18000	0 to 661.5
40	11/2	0 to 45 000	0 to 1654
50	2	0 to 70000	0 to 2 573
80	3	0 to 180 000	0 to 6615
100	4	0 to 350 000	0 to 12860
150	6	0 to 800 000	0 to 29 400
250	10	0 to 2 200 000	0 to 80850

Measuring range for gases

The full scale value depends on the density and the sound velocity of the gas used. The full scale value can be calculated with the following formulas:

 $\dot{m}_{max(G)} = minimum of$

 $(\dot{m}_{max(F)}\cdot\rho_G:x$) and $(\rho_G\cdot(c_G/2)\cdot d_i^{\,2}\cdot(\pi/4)\cdot 3600\cdot n)$

m _{max(G)}	Maximum full scale value for gas [kg/h]	
ḿ _{max(F)}	Maximum full scale value for liquid [kg/h]	
$\dot{m}_{\max(G)} < \dot{m}_{\max(F)}$	$\dot{m}_{max(G)}$ can never be greater than $\dot{m}_{max(F)}$	
ρ _G	Gas density in [kg/m ³] at operating conditions	
x	Limitation constant for max. gas flow [kg/m ³]	
c _G	Sound velocity (gas) [m/s]	
di	Measuring tube internal diameter [m]	
π	Pi	
n = 2	Number of measuring tubes	

	DN		x	
	[mm]	[in]	[kg/m³]	
	8	3/8	60	
	15	1/2	80	
	25	1	90	
	40	11/2	90	
	50	2	90	
	80	3	110	
	100	4	130	
	150	6	200	
	250	10	200	
	Recommended measur Flow limit → 23			
perable flow range	Over 1000 : 1.			
	Flow rates above the pre result that the totalizer		o not override the electronics unit, with the correctly.	
nput signal	External measured values			
	 To increase the accuracy of certain measured variables or to calculate the corrected volume flow for gases, the automation system can continuously write different measured values to the measuring device: Operating pressure to increase accuracy (Endress+Hauser recommends the use of a pressure measuring device for absolute pressure, e.g. Cerabar M or Cerabar S) Medium temperature to increase accuracy (e.g. iTEMP) Reference density for calculating the corrected volume flow for gases 			
	Various pressure and temperature measuring devices can be ordered from Endress +Hauser: see "Accessories" section $\rightarrow \cong 212$			
	It is recommended to read in external measured values to calculate the corrected volume flow.			
	Current input			
	The measured values are written from the automation system to the measuring device via the current input $\rightarrow \cong 215$.			
	Digital communication			
	The measured values are written by the automation system via Modbus RS485.			
	Current input 0/4 to 20 mA			

Current input	0/4 to 20 mA (active/passive)
Current span	 4 to 20 mA (active) 0/4 to 20 mA (passive)

Resolution	1 μΑ
Voltage drop	Typically: 0.6 to 2 V for 3.6 to 22 mA (passive)
Maximum input voltage	< 30 V (passive)
Open-circuit voltage	< 28.8 V (active)
Possible input variables	PressureTemperatureDensity

Status input

Maximum input values	 DC -3 to 30 V If status input is active (ON): R_i >3 kΩ
Response time	Configurable: 5 to 200 ms
Input signal level	 Low signal: DC -3 to +5 V High signal: DC 12 to 30 V
Assignable functions	 Off Reset the individual totalizers separately Reset all totalizers Flow override

16.4 Output

Output signal

Modbus RS485

Physical interf	face	RS485 in accordance with EIA/TIA-485 standard
Terminating r	esistor	Integrated, can be activated via DIP switches

Current output 4 to 20 mA

Signal mode	Can be set to: • Active • Passive
Current span	Can be set to: • 4 to 20 mA NAMUR • 4 to 20 mA US • 4 to 20 mA • 0 to 20 mA (only if the signal mode is active) • Fixed current
Maximum output values	22.5 mA
Open-circuit voltage	DC 28.8 V (active)
Maximum input voltage	DC 30 V (passive)
Load	0 to 700 Ω
Resolution	0.38 μΑ
Damping	Configurable: 0 to 999.9 s
Assignable measured variables	 Mass flow Volume flow Corrected volume flow Density Reference density Temperature Electronics temperature Oscillation frequency 0 Oscillation damping 0 Signal asymmetry Exciter current 0 In range of options increases if the measuring device has one or more application packages.

Pulse/frequency/switch output

Function	Can be configured as pulse, frequency or switch output
Version	Open collector
	Can be set to: • Active • Passive • Passive NAMUR Ex-i, passive
Maximum input values	DC 30 V, 250 mA (passive)
Open-circuit voltage	DC 28.8 V (active)
Voltage drop	For 22.5 mA: ≤ DC 2 V
Pulse output	
Maximum input values	DC 30 V, 250 mA (passive)

Non-instant or the state	$22 \mathrm{Fm} \mathrm{A} (\mathrm{active})$
Maximum output current	22.5 mA (active)
Open-circuit voltage	DC 28.8 V (active)
Pulse width	Configurable: 0.05 to 2 000 ms
Maximum pulse rate	10 000 Impulse/s
Pulse value	Configurable
Assignable measured variables	Mass flowVolume flowCorrected volume flow
Frequency output	
Maximum input values	DC 30 V, 250 mA (passive)
Maximum output current	22.5 mA (active)
Open-circuit voltage	DC 28.8 V (active)
Output frequency	Configurable: end value frequency 2 to 10000 Hz(f _{max} = 12500 Hz)
Damping	Configurable: 0 to 999.9 s
Pulse/pause ratio	1:1
Assignable measured variables	 Mass flow Volume flow Corrected volume flow Density Reference density Temperature Electronics temperature Oscillation frequency 0 Oscillation damping 0 Signal asymmetry Exciter current 0 The range of options increases if the measuring device has one or more
Switch output	application packages.
Maximum input values	DC 30 V, 250 mA (passive)
Open-circuit voltage	DC 28.8 V (active)
Switching behavior	Binary, conductive or non-conductive
Switching delay	Configurable: 0 to 100 s
Number of switching	Unlimited
cycles Assignable functions	 Off On Diagnostic behavior Limit value Mass flow Volume flow Corrected volume flow Density Reference density Temperature Totalizer 1-3 Flow direction monitoring Status Partially filled pipe detection Low flow cut off Image of options increases if the measuring device has one or more application packages.

Double pulse output

Function	Double pulse
Version	Open collector
	Can be set to: • Active • Passive • Passive NAMUR
Maximum input values	DC 30 V, 250 mA (passive)
Open-circuit voltage	DC 28.8 V (active)
Voltage drop	For 22.5 mA: ≤ DC 2 V
Output frequency	Configurable: 0 to 1000 Hz
Damping	Configurable: 0 to 999 s
Pulse/pause ratio	1:1
Assignable measured variables	 Mass flow Volume flow Corrected volume flow Density Reference density Temperature The range of options increases if the measuring device has one or more application packages.

Relay output

Function	Switch output
Version	Relay output, galvanically isolated
Switching behavior	Can be set to: • NO (normally open), factory setting • NC (normally closed)
Maximum switching capacity (passive)	 DC 30 V, 0.1 A AC 30 V, 0.5 A
Assignable functions	 Off On Diagnostic behavior Limit value Mass flow Volume flow Corrected volume flow Density Reference density Temperature Totalizer 1-3 Flow direction monitoring Status Partially filled pipe detection Low flow cut off The range of options increases if the measuring device has one or more application packages.

User-configurable input/output

One specific input or output is assigned to a user-configurable input/output (configurable I/O) during device commissioning.

The following inputs and outputs are available for assignment:

- Choice of current output: 4 to 20 mA (active), 0/4 to 20 mA (passive)
- Pulse/frequency/switch output
- Choice of current input: 4 to 20 mA (active), 0/4 to 20 mA (passive)
- Status input

Signal on alarm

Depending on the interface, failure information is displayed as follows:

Modbus RS485

Failure mode	Choose from:
	NaN value instead of current valueLast valid value

Current output 0/4 to 20 mA

4 to 20 mA

Failure mode	 Choose from: 4 to 20 mA in accordance with NAMUR recommendation NE 43 4 to 20 mA in accordance with US Min. value: 3.59 mA Max. value: 22.5 mA Freely definable value between: 3.59 to 22.5 mA Actual value Last valid value
--------------	---

0 to 20 mA

Failure mode	Choose from:
	 Maximum alarm: 22 mA Freely definable value between: 0 to 20.5 mA

Pulse/frequency/switch output

Pulse output	
Failure mode	Choose from: • Actual value • No pulses
Frequency output	
Failure mode	Choose from: • Actual value • 0 Hz • Defined value (f _{max} 2 to 12 500 Hz)
Switch output	
Failure mode	Choose from: • Current status • Open • Closed

Relay output

Failure mode	Choose from: • Current status
	OpenClosed

Local display

Plain text display	With information on cause and remedial measures
Backlight	Red backlighting indicates a device error.



Interface/protocol

- Via digital communication: Modbus RS485
- Via service interface
 - CDI-RJ45 service interface
 - WLAN interface

Plain text display Wit

Web browser

Plain text display	With information on cause and remedial measures
--------------------	---

Light emitting diodes (LED)

Status information	Status indicated by various light emitting diodes		
	 The following information is displayed depending on the device version: Supply voltage active Data transmission active Device alarm/error has occurred 		
	Diagnostic information via light emitting diodes $\rightarrow \square$ 183		

Low flow cut off The switch points for low flow cut off are user-selectable.

Galvanic isolation

The outputs are galvanically isolated: • from the power supply

- from one another
- from the potential equalization (PE) terminal

Protocol-specific data	Protocol	Modbus Applications Protocol Specification V1.1
	Response times	 Direct data access: typically 25 to 50 ms Auto-scan buffer (data range): typically 3 to 5 ms
	Device type	Slave
	Slave address range	1 to 247
	Broadcast address range	0
	Function codes	 03: Read holding register 04: Read input register 06: Write single registers 08: Diagnostics 16: Write multiple registers 23: Read/write multiple registers

Broadcast messages	Supported by the following function codes: 06: Write single registers 16: Write multiple registers 23: Read/write multiple registers 	
Supported baud rate	 1 200 BAUD 2 400 BAUD 4 800 BAUD 9 600 BAUD 19 200 BAUD 38 400 BAUD 57 600 BAUD 115 200 BAUD 	
Data transfer mode	ASCII RTU	
Data access	Each device parameter can be accessed via Modbus RS485.	
Compatibility with earlier model	If the device is replaced, the measuring device Promass 500 supports the compatibility of the Modbus registers for the process variables and the diagnostic information with the previous model Promass 83. It is not necessary to change the engineering parameters in the automation system.	
System integration	 Information on system integration → Modbus RS485 information Function codes Register information Response time Modbus data map 	

16.5 Power supply

Terminal assignment $\rightarrow \blacksquare 40$ Supply voltage Order code for Terminal voltage Frequency range "Power supply" Option **D** DC 24 V ±20% Option E AC 100 to 240 V -15 to +10% 50/60 Hz DC 24 V ±20% Option I AC 100 to 240 V -15 to +10% 50/60 Hz Power consumption Transmitter Max. 10 W (active power) switch-on current Max. 36 A (<5 ms) as per NAMUR Recommendation NE 21 Current consumption Transmitter • Max. 400 mA (24 V) Max. 200 mA (110 V, 50/60 Hz; 230 V, 50/60 Hz) Power supply failure Totalizers stop at the last value measured. • Depending on the device version, the configuration is retained in the device memoryor in the pluggable data memory (HistoROM DAT). • Error messages (incl. total operated hours) are stored.

Overcurrent protection element	 The device must be operated with a dedicated circuit breaker, as it does not have an ON/OFF switch of its own. The circuit breaker must be easy to reach and labeled accordingly. Permitted nominal current of the circuit breaker: 2 A up to maximum 10 A.
Electrical connection	$\bullet \rightarrow \textcircled{2}{42}$ $\bullet \rightarrow \textcircled{2}{49}$
Potential equalization	→ 🗎 55
Terminals	Spring-loaded terminals: Suitable for strands and strands with ferrules. Conductor cross-section 0.2 to 2.5 mm^2 (24 to 12 AWG).
Cable entries	 Cable gland: M20 × 1.5 with cable Ø 6 to 12 mm (0.24 to 0.47 in) Thread for cable entry: NPT ½" G ½" M20 Device plug for connecting cable: M12 A device plug is always used for the device version with the order code for "Sensor connection housing", option C "Ultra-compact, hygienic, stainless".

Cable specification $\rightarrow \square$	22
---	----

Overvoltage protection	Mains voltage fluctuations	→ 🗎 222	
	Overvoltage category	Overvoltage category II	
	Short-term, temporary overvoltage Up to 1200 V between cable and gr		
	Long-term, temporary overvoltage	Up to 500 V between cable and ground	

16.6 Performance characteristics

Reference operating conditions	 Error limits based on ISO 11631 Water with +15 to +45 °C (+59 to +113 °F) at 2 to 6 bar (29 to 87 psi) Specifications as per calibration protocol Accuracy based on accredited calibration rigs that are traced to ISO 17025. 		
	To obtain measured errors, use the <i>Applicator</i> sizing tool $\rightarrow \square$ 212		
Maximum measured error	o.r. = of reading; 1 g/cm ³ = 1 kg/l; T = medium temperature		
	Base accuracy		
	且 Design fundamentals → 🗎 228		
	Mass flow and volume flow (liquids)		
	 ±0.05 % o.r. (optional for mass flow: PremiumCal; order code for "Calibration flow", option D) ±0.10 % o.r. (standard) 		

Mass flow (gases) ±0.25 % o.r.

Mass flow (cryogenic liquids and gases under –100 $^{\circ}$ C (–148 $^{\circ}$ F))

 ± 0.35 % o.r. (order code for "Measuring tube material", option LA)

Density (liquids)

Under reference conditions	Standard density calibration	Wide-range Density specification ^{1) 2)}
[g/cm³]	[g/cm³]	[g/cm³]
±0.0005	±0.0005	±0.001

1) Valid range for special density calibration: 0 to 2 g/cm³, +5 to +80 $^{\circ}$ C (+41 to +176 $^{\circ}$ F)

2) order code for "Application package", option EE "Special density"

Density (cryogenic liquids and gases under -100 °C (-148 °F)) ±0.05 g/cm³ (order code for "Measuring tube material", option LA)

Temperature

±0.5 °C ± 0.005 · T °C (±0.9 °F ± 0.003 · (T – 32) °F)

Zero point stability

DN		Zero point stability	
[mm]	[in]	[kg/h]	[lb/min]
8	3⁄8	0.030	0.001
15	1/2	0.200	0.007
25	1	0.540	0.019
40	11/2	2.25	0.083
50	2	3.50	0.129
80	3	9.0	0.330
100	4	14.0	0.514
150	6	32.0	1.17
250	10	88.0	3.23

High-temperature version: order code for "Measuring tube material", option TS, TT, TU

DN		Zero point stability	
[mm]	[in]	[kg/h]	[lb/min]
15	1/2	0.3	0.011
25	1	1.8	0.0662
50	2	7	0.2573
80	3	18	0.6615
100	4	21	0.7718
150	6	48	1.764
250	10	132	4.851

For devices with low-temperature version, order code for "Measuring tube mat., wetted surface", option LA, please note the following:

NOTICE

Zero point confirmation and zero adjustment are difficult to carry out in the field due to the vaporization of the cryogenic liquid.

► As a general rule, the factory-set zero point should not be changed. Please ensure that the medium is in the liquid phase if a zero adjustment is to be carried out.

Flow values

Flow values as turndown parameters depending on the nominal diameter.

SI units

DN	1:1	1:10	1:20	1:50	1:100	1:500
[mm]	[kg/h]	[kg/h]	[kg/h]	[kg/h]	[kg/h]	[kg/h]
8	2 000	200	100	40	20	4
15	6500	650	325	130	65	13
25	18000	1800	900	360	180	36
40	45 000	4500	2250	900	450	90
50	70000	7000	3 500	1400	700	140
80	180000	18000	9000	3600	1800	360
100	350000	35000	17500	7 000	3 500	700
150	800000	80000	40000	16000	8000	1600
250	2200000	220000	110000	44000	22000	4 400

US units

DN	1:1	1:10	1:20	1:50	1:100	1:500
[inch]	[lb/min]	[lb/min]	[lb/min]	[lb/min]	[lb/min]	[lb/min]
3/8	73.50	7.350	3.675	1.470	0.735	0.147
1/2	238.9	23.89	11.95	4.778	2.389	0.478
1	661.5	66.15	33.08	13.23	6.615	1.323
11/2	1654	165.4	82.70	33.08	16.54	3.308
2	2 5 7 3	257.3	128.7	51.46	25.73	5.146
3	6615	661.5	330.8	132.3	66.15	13.23
4	12860	1286	643.0	257.2	128.6	25.72
6	29400	2940	1470	588	294	58.80
10	80850	8085	4043	1617	808.5	161.7

Accuracy of outputs

The outputs have the following base accuracy specifications.

Current output

Accuracy	±5 μA
----------	-------


	Pulse/frequency outpu	t			
	o.r. = of reading				
	Accuracy	Max. ±50 ppm o.r. (over the entire ambient temperature range)			
Repeatability	o.r. = of reading; $1 \text{ g/cm}^3 = 1 \text{ kg/l}$; T = medium temperature				
	Base repeatability				
	Design fundamen	tals $\rightarrow \square 228$			
	Mass flow and volume	flow (liquids)			
	±0.025 % o.r. (Premiu ±0.05 % o.r.	mCal)			
	Mass flow (gases) ±0.20 % o.r.				
	Mass flow (cryogenic liquids and gases under -100 °C (-148 °F)) ±0.175 % % o.r. (order code for "Measuring tube material", option LA)				
	Density (liquids) ±0.00025 g/cm ³				
	Density (cryogenic liquids and gases under –100 °C (–148 °F)) ±0.025 g/cm ³ (order code for "Measuring tube material", option LA)				
	Temperature	C (±0.45 °F ± 0.0015 · (T−32) °F)			
Response time	The response time dep	ends on the configuration (damping).			
Influence of ambient	Current output				
temperature	Temperature coefficient	Max. 1 µA/°C			
	Pulse/frequency output				
	Temperature coefficient	No additional effect. Included in accuracy.			
Influence of medium	Mass flow and volum	e flow			
temperature	o.f.s. = of full scale value				
	If there is a difference between the temperature during zero adjustment and the process temperature, the additional measured error of the sensors is typically ± 0.0002 %o.f.s./°C (± 0.0001 % o.f.s./°F).				
	The influence is reduced when the zero adjustment is performed at process temperature.				

Density

If there is a difference between the density calibration temperature and the process temperature, the measured error of the sensors is typically $\pm 0.00005 \text{ g/cm}^3/^{\circ}\text{C}$ ($\pm 0.000025 \text{ g/cm}^3/^{\circ}\text{F}$). Field density adjustment is possible. Can also be used for order code for "Measuring tube material", option LA up to $-100 \,^{\circ}\text{C}$ ($-148 \,^{\circ}\text{F}$).

Wide-range density specification (special density calibration)

If the process temperature is outside the valid range ($\rightarrow \triangleq 223$) the measured error is $\pm 0.00005 \text{ g/cm}^3 \text{/}^{\circ}\text{C} (\pm 0.000025 \text{ g/cm}^3 \text{/}^{\circ}\text{F})$

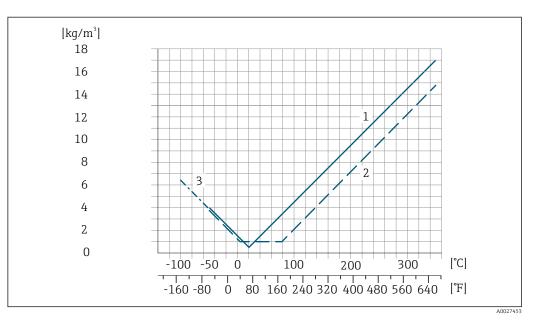

1 Field density adjustment, for example at +20 °C (+68 °F)

2 Special density calibration

3 Applicable for the order code for "Measuring tube material", option LA

Temperature

±0.005 · T °C (± 0.005 · (T – 32) °F)

Influence of medium pressure

The tables below show the effect that a difference in pressure between the calibration pressure and the process pressure has on the accuracy in the case of the mass flow and density.

o.r. = of reading

- It is possible to compensate for the effect by:
 - Reading in the current pressure measured value via the current input or a digital input.
 - Specifying a fixed value for the pressure in the device parameters.
- Operating Instructions .

DN		[% o.r./bar]	[% o.r./psi]		
[mm]	[in]				
8	3/8	no influence			
15	1/2	-0.002	-0.0001		
25	1	no influence			
40	11/2	-0.003	-0.0002		
50	2	-0.008	-0.0006		

D	N	[% o.r./bar]	[% o.r./psi]	
[mm]	[in]			
80	3	-0.009	-0.0006	
100	4	-0.007	-0.0005	
150	6	-0.009	-0.0006	
250	10	-0.009	-0.0006	

Design fundamentals

o.r. = of reading, o.f.s. = of full scale value

BaseAccu = base accuracy in % o.r., BaseRepeat = base repeatability in % o.r.

MeasValue = measured value; ZeroPoint = zero point stability


Calculation of the maximum measured error as a function of the flow rate

Flow rate	Maximum measured error in % o.r.
$\geq \frac{\text{ZeroPoint}}{\text{BaseAccu}} \cdot 100$	± BaseAccu
A0021332	A0021337
$< rac{ ext{ZeroPoint}}{ ext{BaseAccu}} \cdot 100$	$\pm \frac{\text{ZeroPoint}}{\text{MeasValue}} \cdot 100$
A0021333	A0021334

Calculation of the maximum repeatability as a function of the flow rate

Flow rate	Maximum repeatability in % o.r.
$\geq \frac{\frac{1}{2} \cdot \text{ZeroPoint}}{\text{BaseRepeat}} \cdot 100$	± BaseRepeat
A0021335	A0021340
$< \frac{\frac{1}{2} \cdot \text{ZeroPoint}}{\text{BaseRepeat}} \cdot 100$	$\pm \frac{1}{2} \cdot \frac{\text{ZeroPoint}}{\text{MeasValue}} \cdot 100$
A0021336	A0021337

Example of maximum measured error

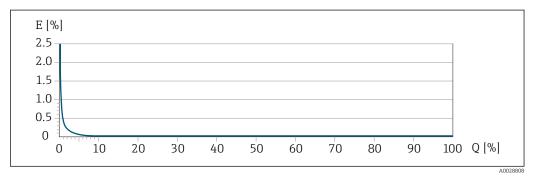

E Maximum measured error in % o.r. (example with PremiumCal)

Q Flow rate in % of maximum full scale value

16.7 Installation

Installation conditions

→ 🗎 22

	16.8 Environment				
Ambient temperature range	→ ¹ 25				
	Temperature tables				
	Observe the interdependencies between the permitted ambient and fluid temperatures when operating the device in hazardous areas.				
	For detailed information on the temperature tables, see the separate document entitled "Safety Instructions" (XA) for the device.				
Storage temperature	–50 to +80 °C (–58 to +176 °F)				
Climate class	DIN EN 60068-2-38 (test Z/AD)				
Relative humidity	The device is suitable for use in outdoor and indoor areas with a relative humidity of 4 to 95%.				
Operating height	 According to EN 61010-1 ≤ 2 000 m (6 562 ft) > 2 000 m (6 562 ft) with additional overvoltage protection (e.g. Endress+Hauser HAW Series) 				
Degree of protection	Transmitter				
	 IP66/67, Type 4X enclosure, suitable for pollution degree 4 When the housing is open: IP20, Type 1 enclosure, suitable for pollution degree 2 Display module: IP20, Type 1 enclosure, suitable for pollution degree 2 				
	Sensor				
	 IP66/67, Type 4X enclosure, suitable for pollution degree 4 When the housing is open: IP20, Type 1 enclosure, suitable for pollution degree 2 				
	Optional				
	Order code for "Sensor options", option CM "IP69				
	External WLAN antenna				
	IP67				
Vibration- and shock-	Vibration sinusoidal, in accordance with IEC 60068-2-6				
resistance	 Sensor: order code for "Meas. tube mat., wetted parts surface", option LA, SD, SE, SF, TH, TT, TU 2 to 8.4 Hz, 3.5 mm peak 8.4 to 2 000 Hz, 1 g peak 				
	Sensor: order code for "Meas. tube mat., wetted parts surface", option HA, SA, SB, SC • 2 to 8.4 Hz, 7.5 mm peak • 8.4 to 2 000 Hz, 2 g peak				
	Transmitter • 2 to 8.4 Hz, 7.5 mm peak				


8.4 to 2 000 Hz, 2 g peak

	Vibration broad-band random, according to IEC 60068-2-64				
	Sensor: order code for "Meas. tube mat., wetted parts surface", option LA, SD, SE, SF, TH, TT, TU • 10 to 200 Hz, 0.003 g ² /Hz • 200 to 2 000 Hz, 0.001 g ² /Hz • Total: 1.54 g rms				
	 Sensor: order code for "Meas. tube mat., wetted parts surface", option HA, SA, SB, SC 10 to 200 Hz, 0.01 g²/Hz 200 to 2 000 Hz, 0.003 g²/Hz Total: 2.70 g rms 				
	Transmitter • 10 to 200 Hz, 0.01 g ² /Hz • 200 to 2 000 Hz, 0.003 g ² /Hz • Total: 2.70 g rms				
	Shock half-sine, according to IEC 60068-2-27				
	 Sensor: order code for "Meas. tube mat., wetted parts surface", option LA, SD, SE, SF, TH, TT, TU 6 ms 30 g 				
	 Sensor: order code for "Meas. tube mat., wetted parts surface", option HA, SA, SB, SC 6 ms 50 g Transmitter 6 ms 50 g 				
	Rough handling shocks, according to IEC 60068-2-31				
Interior cleaning	Cleaning in place (CIP)Sterilization in place (SIP)				
	 Options Oil- and grease-free version for wetted parts, without declaration Order code for "Service", option HA Oil- and grease-free version for wetted parts as per IEC/TR 60877-2.0 and BOC 50000810-4, with declaration Order code for "Service", option HB 				
Mechanical load	Transmitter housing and sensor connection housing:Protect against mechanical effects, such as shock or impactDo not use as a ladder or climbing aid				
Electromagnetic	As per IEC/EN 61326 and NAMUR Recommendation 21 (NE 21)				
compatibility (EMC)	Details are provided in the Declaration of Conformity.				
	This unit is not intended for use in residential environments and cannot guarantee adequate protection of the radio reception in such environments.				
	16.9 Process				

Medium temperature range


Standard version	-50 to +150 °C (-58 to +302 °F)	Order code for "Measuring tube mat., wetted surface", option HA, SA, SB, SC
Extended temperature version	-50 to +240 °C (-58 to +464 °F)	Order code for "Measuring tube mat., wetted surface", option SD, SE, SF, TH
High-temperature version	–50 to +350 °C (–58 to +662 °F)	For nominal diameters DN 15 (½"), 25 (1"), 50 to 250 (2 to 10") Order code for "Measuring tube mat., wetted surface", option TS, TT, TU
Low-temperature version	 -196 to +150 °C (-320 to +302 °F) NOTICE Material fatigue due to excessive temperature difference! Maximum temperature difference of media used: 300 K 	Order code for "Measuring tube mat., wetted surface", option LA

Dependency of ambient temperature on medium temperature

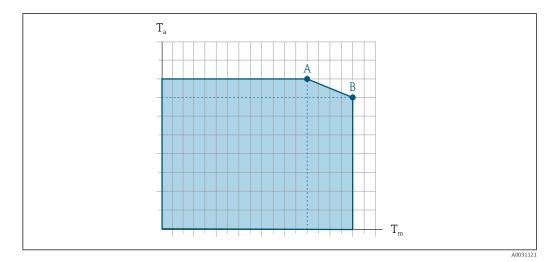

Exemplary representation, values in the table below.

- *T_a Ambient temperature*
- T_m Medium temperature
- A Maximum permitted medium temperature T_m at $T_{a max} = 60 \degree C$ (140 °F); higher medium temperatures T_m require a reduction in the ambient temperature T_a
- *B* Maximum permitted ambient temperature T_a for the maximum specified medium temperature T_m of the sensor

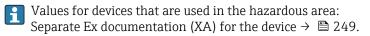

	Not insulated				Insulated						
	A		В		A		В				
Version ¹⁾	Ta	T _m	Ta	T _m	Ta	T _m	Ta	T _m			
Standard version	60 ℃ (140 ℉)	130 ℃ (266 ℉)	55 ℃ (131 ℉)	150 ℃ (302 ℉)	60 °C (140 °F)	90 ℃ (194 ℉)	45 ℃ (113 ℉)	150 ℃ (302 ℉)			
Extended temperature version	60 °C (140 °F)	240 °C (464 °F)	-	-	60 °C (140 °F)	150 °C (302 °F)	50 °C (122 °F)	240 °C (464 °F)			
High-temperature version	60 °C (140 °F)	240 °C (464 °F)	50 °C (122 °F)	350 ℃ (662 ℉)	60 °C (140 °F)	210 °C (410 °F)	50 °C (122 °F)	350 ℃ (662 ℉)			
) The values apply for Prom			s F 500. to 312 lb/c	f)							
Pressure-temperature Patings	For the	an overviev Technical Ii	v of the pres nformation	sure-tempe	rature ratin	gs for the pi	cocess conne	ctions, see			
Sensor housing							–58 to +302 ronics and n				
	For all other temperature versions the sensor housing is filled with dry inert gas.										
	If a measuring tube fails (e.g. due to process characteristics like corrosive or abrasive fluids), the fluid will initially be contained by the sensor housing.										
	accordir burst pr rupture housing involvin	g to the ope essure does disk. This p . Therefore, g high gas p	erating proce not provide revents exce the use of a pressures, an	ess pressure an adequat ssively high rupture dis d particular	e. If the user e safety man pressure fro k is strongly	judges that gin, the dev om forming recommen tions in wh	ousing will r the sensor r rice can be fi inside the so ded in applic ich the proce	ousing tted with a ensor cations			
	If there is a need to drain the leaking medium into a discharge device, the sensor should be fitted with a rupture disk. Connect the discharge to the additional threaded connection .										
	If the sensor is to be purged with gas (gas detection), it should be equipped with purge connections.										
	Do not open the purge connections unless the containment can be filled immediately with a dry, inert gas. Use only low pressure to purge.										

Maximum pressure:

- DN 08 to 150 (3/8 to 6"): 5 bar (72.5 psi)
- DN 250 (10"):
 - Medium temperature ≤ 100 °C (212 °F): 5 bar (72.5 psi)
 - Medium temperature > 100 °C (212 °F): 3 bar (43.5 psi)

Burst pressure of the sensor housing

The following sensor housing burst pressures are only valid for standard devices and/or devices equipped with closed purge connections (not opened/as delivered).

If a device fitted with purge connections (order code for "Sensor option", option CH "Purge connection") is connected to the purge system, the maximum pressure is determined by the purge system itself or by the device, depending on which component has the lower pressure classification.

If the device is fitted with a rupture disk (order code for "Sensor option", option CA "Rupture disk"), the rupture disk trigger pressure is decisive .

The sensor housing burst pressure refers to a typical internal pressure which is reached prior to mechanical failure of the sensor housing and which was determined during type testing. The corresponding type test declaration can be ordered with the device (order code for "Additional approval", option LN "Sensor housing burst pressure, type test").

DN		Sensor housing burst pressure	
[mm]	[in]	[bar]	[psi]
8	3⁄8	400	5800
15	1/2	350	5070
25	1	280	4060
40	11⁄2	260	3 770
50	2	180	2610
80	3	120	1740
100	4	95	1370
150	6	75	1080
250	10	50	720

For information on the dimensions: see the "Mechanical construction" section of the "Technical Information" document

Rupture disk To increase the level of safety, a device version with a rupture disk with a trigger pressure of 10 to 15 bar (145 to 217.5 psi)can be used (order code for "Sensor option", option CA "rupture disk"). The use of rupture disks cannot be combined with the separately available heating jacket. For information on the dimensions of the rupture disk: see the "Mechanical construction" section of the "Technical Information" document Flow limit Select the nominal diameter by optimizing between the required flow range and permissible pressure loss. For an overview of the full scale values for the measuring range, see the "Measuring range" section $\rightarrow \cong 214$ • The minimum recommended full scale value is approx. 1/20 of the maximum full scale value In most applications, 20 to 50 % of the maximum full scale value can be considered ideal • A low full scale value must be selected for abrasive media (such as liquids with entrained solids): flow velocity < 1 m/s (< 3 ft/s). • For gas measurement the following rules apply: • The flow velocity in the measuring tubes should not exceed half the sound velocity (0.5 Mach). The maximum mass flow depends on the density of the gas: formula To calculate the flow limit, use the Applicator sizing tool \rightarrow 🗎 212 Pressure loss To calculate the pressure loss, use the *Applicator* sizing tool $\rightarrow \cong 212$

Promass F with reduced pressure loss: order code for "Sensor option", option CE "Reduced pressure loss"

System pressure $\rightarrow \cong 25$

16.10 Custody transfer

The measuring device is optionally tested in accordance with OIML R117/R81 and has an EU type evaluation certificate which authorizes the use in EU type-examination certificates according to Measuring Instruments Directive 2014/32/EU for service subject to legal metrological control ("custody transfer") for liquids other than water and cryogenic liquids (Annex VII).

The measuring device is optionally tested according to OIML R137 and has an EU typeexamination certificate according to Measuring Instruments Directive 2014/32/EU for service subject to legal metrological control ("custody transfer") as a gas meter (Annex IV).

The device is used with a legally controlled totalizer on the local display and optionally with legally controlled outputs.

Measuring devices subject to legal metrological control totalize in both directions, i.e. all the outputs consider flow components in the positive (forward) and negative (reverse) flow direction.

Generally a measuring device subject to legal metrological control is secured against tampering by seals on the transmitter or sensor. These seals may normally only be opened by a representative of the competent authority for legal metrology controls.

After putting the device into circulation or after sealing the device, operation is only possible to a limited extent.

Detailed ordering information is available from your local Endress+Hauser sales center for national approvals, which are based on the OIML certificates, for applications with liquids other than water, cryogenic liquids or gases.

More information is provided in the supplementary documentation.

16.11 Mechanical construction

Design, dimensions	For the dimensions and installed lengths of the device, see the "Technical Information" document, "Mechanical construction" section		
Weight	All values (weight exclusive of packaging material) refer to devices with EN/DIN PN 40 flanges.		
	Transmitter Proline 500 – digital polycarbonate: 1.4 kg (3.1 lbs) Proline 500 – digital aluminum: 2.4 kg (5.3 lbs) Proline 500 aluminum: 6.5 kg (14.3 lbs) Proline 500 cast, stainless: 15.6 kg (34.4 lbs)		
		 Sensor Sensor with cast connection housing version, stainless: +3.7 kg (+8.2 lbs) Sensor with aluminum connection housing version: 	
	Weight in SI units		
	DN [mm]	Weight [kg]	
	8	9	
	15 10		

25

40

50

12

17

28

DN [mm]	Weight [kg]
80	53
100	94
150	152
250	398

Weight in US units

DN [in]	Weight [lbs]
3/8	20
1/2	22
1	26
1½	37
2	62
3	117
4	207
6	335
10	878

Materials

Transmitter housing

Housing of Proline 500 – digital transmitter

Order code for "Transmitter housing":

- Option **A** "Aluminum coated": aluminum, AlSi10Mg, coated
- Option **D** "Polycarbonate": polycarbonate

Housing of Proline 500 transmitter

Order code for "Transmitter housing":

- Option **A** "Aluminum coated": aluminum, AlSi10Mg, coated
- Option L "Cast, stainless": cast, stainless steel, 1.4409 (CF3M) similar to 316L

Window material

Order code for "Transmitter housing":

- Option **A** "Aluminum, coated": glass
- Option **D** "Polycarbonate": plastic
- Option L "Cast, stainless": glass

Fastening components for mounting on a post


- Screws, threaded bolts, washers, nuts: stainless A2 (chrome-nickel steel)
- Metal plates: stainless steel, 1.4301 (304)

Sensor connection housing

Order code for "Sensor connection housing":

- Option A "Aluminum coated": aluminum, AlSi10Mg, coated
- Option B "Stainless":
- Stainless steel 1.4301 (304)
- Optional: Order code for "Sensor feature", option CC "Hygienic version, for maximum corrosion resistance": stainless steel, 1.4404 (316L)
- Option **C** "Ultra-compact, stainless":
- Stainless steel 1.4301 (304)
- Optional: Order code for "Sensor feature", option **CC** "Hygienic version, for maximum corrosion resistance": stainless steel, 1.4404 (316L)
- Option L "Cast, stainless": 1.4409 (CF3M) similar to 316L

Cable entries/cable glands

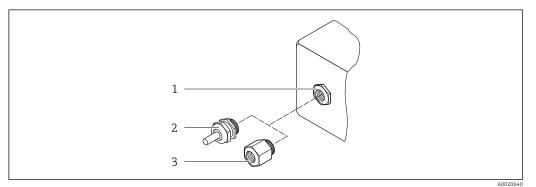

42 Possible cable entries/cable glands


1 Female thread M20 × 1.5

2 Cable gland M20 × 1.5

3 Adapter for cable entry with female thread G ¹/₂" or NPT ¹/₂"

Cable entries and adapters	Material
Cable gland M20 × 1.5	Plastic
 Adapter for cable entry with female thread G ¹/₂" Adapter for cable entry with female thread NPT ¹/₂" 	Nickel-plated brass
 Only available for certain device versions: Order code for "Transmitter housing": Option A "Aluminum, coated" Option D "Polycarbonate" Order code for "Sensor connection housing": Proline 500 - digital: Option A "Aluminum coated" Option A "Aluminum coated" Option B "Stainless" Proline 500: Option B "Stainless" Proline 500: Option B "Stainless" Option B "Stainless" Option B "Stainless" Option L "Cast, stainless" 	
 Adapter for cable entry with female thread G ¹/₂" Adapter for cable entry with female thread NPT ¹/₂" 	Stainless steel, 1.4404 (316L)
 Only available for certain device versions: Order code for "Transmitter housing": Option L "Cast, stainless" Order code for "Sensor connection housing": Option L "Cast, stainless" 	

Connecting cable

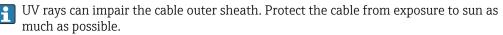

Connecting cable for sensor - Proline 500 – digital transmitter

PVC cable with copper shield

Connecting cable for sensor - Proline 500 transmitter

- PVC cable with copper shield
- Devices with order code for "Test, certificate", option JQ: PUR with copper shield

Sensor housing

The material of the sensor housing depends on the option selected in the order code for "Measuring tube mat., wetted surface".

Order code for "Measuring tube mat., wetted surface"	Material
Option HA, SA, SD, TH	Acid and alkali-resistant outer surfaceStainless steel 1.4301 (304)
	With order code for "Sensor option", option CC "316L Sensor housing": stainless steel, 1.4404 (316L)
Option SB, SC, SE, SF	Acid and alkali-resistant outer surfaceStainless steel 1.4301 (304)
Option TS, TT, TU, LA	Acid and alkali-resistant outer surfaceStainless steel, 1.4404 (316L)

Measuring tubes

- DN 8 to 100 (3/8 to 4"): stainless steel, 1.4539 (904L); Manifold: stainless steel, 1.4404 (316/316L)
- DN 150 (6"), DN 250 (10"): stainless steel, 1.4404 (316/316L); Manifold: stainless steel, 1.4404 (316/316L)
- DN 8 to 250 (3/8 to 10"): Alloy C22, 2.4602 (UNS N06022); Manifold: Alloy C22, 2.4602 (UNS N06022)

High-temperature version

DN 15 (¹/₂"), 25 (1"), 50 to 250 (2 to 10"):

- DN 15 to 100 (½ to 4"): stainless steel, 1.4539 (904L)
- DN 150 (6"), 250 (10"): stainless steel, 1.4404 (316/316L)
- DN 15 to 250 (¹/₂ to 10"): Alloy C22, 2.4602 (UNS N06022)

Process connections

- Flanges according to EN 1092-1 (DIN2501) / according to ASME B 16.5 / as per JIS B2220:
 - Stainless steel, 1.4404 (F316/F316L)
 - Alloy C22, 2.4602 (UNS N06022)
 - Lap joint flanges: stainless steel, 1.4301 (F304); wetted parts Alloy C22
- All other process connections: Stainless steel, 1.4404 (316/316L)

High-temperature version

Flanges according to EN 1092-1 (DIN2501) / according to ASME B 16.5 / as per JIS B2220:

- DN 15 to 250 (1/2 to 10"): stainless steel, 1.4404 (316/316L)
- DN 15 to 250 (¹/₂ to 10"): Alloy C22, 2.4602 (UNS N06022)

Available process connections $\rightarrow \cong 239$

Seals

Welded process connections without internal seals

Accessories

Protective cover

Stainless steel, 1.4404 (316L)

External WLAN antenna

- Antenna: ASA plastic (acrylic ester-styrene-acrylonitrile) and nickel-plated brass
- Adapter: Stainless steel and nickel-plated brass
- Cable: Polyethylene
- Plug: Nickel-plated brass
- Angle bracket: Stainless steel

Process connections	 Fixed flange connections: EN 1092-1 (DIN 2501) flange EN 1092-1 (DIN 2512N) flange Namur lengths in accordance with NE 132 ASME B16.5 flange JIS B2220 flange DIN 11864-2 Form A flange, DIN 11866 series A, flange with notch Clamp connections: Tri-Clamp (OD tubes), DIN 11866 series C Thread: DIN 11851 thread, DIN 11866 series A SMS 1145 thread ISO 2853 thread, ISO 2037 DIN 11864-1 Form A thread, DIN 11866 series A VCO connections: 8-VCO-4 12-VCO-4
	Process connection materials $\rightarrow \cong 238$
Surface roughness	All data refer to parts in contact with the medium. The following surface roughness

All data refer to parts in contact with the medium. The following surface roughness categories can be ordered.

- Not polished
- Ra_{max} = 0.76 µm (30 µin)
- Ra_{max} = 0.38 µm (15 µin)
- Ra_{max} = 0.38 µm (15 µin) electropolished

16.12 Operability

Languages

Can be operated in the following languages:

 Via local operation
 English, German, French, Spanish, Italian, Dutch, Portuguese, Polish, Russian, Turkish, Chinese, Japanese, Korean, Vietnamese, Czech, Swedish


 Via Web browser
 English, German, French, Spanish, Italian, Dutch, Portuguese, Polish, Russian, Turkish, Chinese, Japanese, Vietnamese, Czech, Swedish

• Via "FieldCare", "DeviceCare" operating tool: English, German, French, Spanish, Italian, Chinese, Japanese

Local operation

Via display module

- Equipment:
- Order code for "Display; operation", option F "4-line, illuminated, graphic display; touch control"
- Order code for "Display; operation", option G "4-line, illuminated, graphic display; touch control + WLAN"
- Information about WLAN interface $\rightarrow \cong 86$

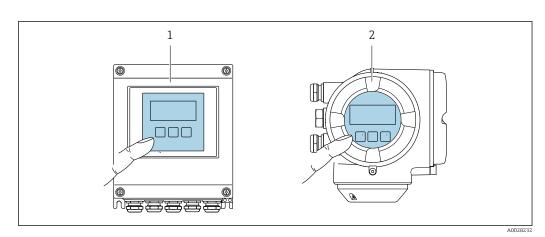

- 43 Operation with touch control
- 1 Proline 500 digital
- 2 Proline 500

Display elements

- 4-line, illuminated, graphic display
- White background lighting; switches to red in event of device errors
- Format for displaying measured variables and status variables can be individually configured
- Permitted ambient temperature for the display: -20 to +60 °C (-4 to +140 °F) The readability of the display may be impaired at temperatures outside the temperature range.

Operating elements

- External operation via touch control (3 optical keys) without opening the housing: , \boxdot ,
- Operating elements also accessible in the various zones of the hazardous area

Remote operation	→ 🖹 85
Service interface	→ 🖹 85
Supported operating tools	Different operating tools can be used for local or remote access to the measuring device. Depending on the operating tool used, access is possible with different operating units and via a variety of interfaces.

Supported operating tools	Operating unit	Interface	Additional information
Web browser	Notebook, PC or tablet with Web browser	CDI-RJ45 service interfaceWLAN interface	Special Documentation for the device $\rightarrow \cong 249$
DeviceCare SFE100	Notebook, PC or tablet with Microsoft Windows system	 CDI-RJ45 service interface WLAN interface Fieldbus protocol 	→ 🖹 212
FieldCare SFE500	Notebook, PC or tablet with Microsoft Windows system	 CDI-RJ45 service interface WLAN interface Fieldbus protocol 	→ 🗎 212
Field Xpert	SMT70/77/50	 All fieldbus protocols WLAN interface Bluetooth CDI-RJ45 service interface 	Operating Instructions BA01202S Device description files: Use update function of handheld terminal
SmartBlue app	Smart phone or tablet with iOs or Android	WLAN	→ 🗎 212

Other operating tools based on FDT technology with a device driver such as DTM/ iDTM or DD/EDD can be used for device operation. These operating tools are available from the individual manufacturers. Integration into the following operating tools, among others, is supported:

- Field Device Manager (FDM) from Honeywell → www.process.honeywell.com
- FieldMate from Yokogawa → www.yokogawa.com
- PACTWare → www.pactware.com

The related device description files are available: www.endress.com \rightarrow Downloads

Web server

Thanks to the integrated Web server the device can be operated and configured via a Web browser and via the service interface (CDI-RJ45) or via the WLAN interface. The structure of the operating menu is the same as for the local display. In addition to the measured values, device status information is also displayed and allows users to monitor the status of the device. Furthermore the device data can be managed and the network parameters can be configured.

A device that has a WLAN interface (can be ordered as an option) is required for the WLAN connection: order code for "Display; operation", option G "4-line, illuminated; touch control + WLAN". The device acts as an Access Point and enables communication by computer or a mobile handheld terminal.

Supported functions

Data exchange between the operating unit (such as a notebook for example) and the measuring device:

- Upload the configuration from the measuring device (XML format, configuration backup)
- Save the configuration to the measuring device (XML format, restore configuration)
- Export event list (.csv file)
- Export parameter settings (.csv file or PDF file, document the measuring point configuration)
- Export the Heartbeat verification log (PDF file, only available with the "Heartbeat Verification" application package)

	 Flash firmware version for device firmware upgrade, for instance Download driver for system integration Visualize up to 1000 saved measured values (only available with the Extended HistoROM application package → [□] 246)
	Web server special documentation $\rightarrow \square 249$
HistoROM data management	The measuring device features HistoROM data management. HistoROM data management comprises both the storage and import/export of key device and process data, making operation and servicing far more reliable, secure and efficient.
	When the device is delivered, the factory settings of the configuration data are stored as a backup in the device memory. This memory can be overwritten with an updated data record, for example after commissioning.

Additional information on the data storage concept

There are different types of data storage units in which device data are stored and used by the device:

	HistoROM backup	T-DAT	S-DAT
Available data	 Event logbook such as diagnostic events for example Parameter data record backup Device firmware package 	 Measured value logging ("Extended HistoROM" order option) Current parameter data record (used by firmware at run time) Maximum indicators (min/max values) Totalizer values 	 Sensor data: nominal diameter etc. Serial number Calibration data Device configuration (e.g. SW options, fixed I/O or multi I/O)
Storage location	Fixed on the user interface board in the connection compartment	Attachable to the user interface board in the connection compartment	In the sensor plug in the transmitter neck part

Data backup

Automatic

- The most important device data (sensor and transmitter) are automatically saved in the DAT modules
- If the transmitter or measuring device is replaced: once the T-DAT containing the previous device data has been exchanged, the new measuring device is ready for operation again immediately without any errors
- If the sensor is replaced: once the sensor has been replaced, new sensor data are transferred from the S-DAT in the measuring device and the measuring device is ready for operation again immediately without any errors
- If exchanging the electronics module (e.g. I/O electronics module): Once the electronics module has been replaced, the software of the module is compared against the current device firmware. The module software is upgraded or downgraded where necessary. The electronics module is available for use immediately afterwards and no compatibility problems occur.

Manual

Additional parameter data record (complete parameter settings) in the integrated device memory HistoROM backup for:

- Data backup function Backup and subsequent restoration of a device configuration in the device memory HistoROM backup
- Data comparison function Comparison of the current device configuration with the device configuration saved in the device memory HistoROM backup

Data transmission

Manual

Transfer of a device configuration to another device using the export function of the specific operating tool, e.g. with FieldCare, DeviceCare or Web server: to duplicate the configuration or to store in an archive (e.g. for backup purposes)

Event list

Automatic

- Chronological display of up to 20 event messages in the events list
- If the Extended HistoROM application package (order option) is enabled: up to 100 event messages are displayed in the events list along with a time stamp, plain text description and remedial measures
- The events list can be exported and displayed via a variety of interfaces and operating tools e.g. DeviceCare, FieldCare or Web server

Data logging

Manual

- If the Extended HistoROM application package (order option) is enabled:
- Record up to 1000 measured values via 1 to 4 channels
- User configurable recording interval
- Record up to 250 measured values via each of the 4 memory channels
- Export the measured value log via a variety of interfaces and operating tools e.g. FieldCare, DeviceCare or web server

16.13 Certificates and approvals

Current certificates and approvals that are available for the product can be selected via the Product Configurator at www.endress.com:

The device meets the legal requirements of the applicable EU Directives. These are listed in

the corresponding EU Declaration of Conformity along with the standards applied. Endress+Hauser confirms successful testing of the device by affixing to it the CE mark.

- 1. Select the product using the filters and search field.
- 2. Open the product page.
- 3. Select **Configuration**.

CE mark

UKCA marking

The device meets the legal requirements of the applicable UK regulations (Statutory Instruments). These are listed in the UKCA Declaration of Conformity along with the designated standards. By selecting the order option for UKCA marking, Endress+Hauser confirms a successful evaluation and testing of the device by affixing the UKCA mark.

Contact address Endress+Hauser UK: Endress+Hauser Ltd. Floats Road Manchester M23 9NF United Kingdom www.uk.endress.com

RCM mark

The measuring system meets the EMC requirements of the "Australian Communications and Media Authority (ACMA)".

Ex approval	The devices are certified for use in hazardous areas and the relevant safety instructions are provided in the separate "Safety Instructions" (XA) document. Reference is made to this document on the nameplate.	
Hygienic compatibility	 3-A approval Only measuring devices with the order code for "Additional approval", option LP "3A" have 3-A approval. The 3-A approval refers to the measuring device. When installing the measuring device, ensure that no liquid can accumulate on the outside of the measuring device. A remote display module must be installed in accordance with the 3-A Standard. Accessories (e.g. heating jacket, weather protection cover, wall holder unit) must be installed in accordance with the 3-A Standard. Each accessory can be cleaned. Disassembly may be necessary under certain circumstances. EHEDG-tested Only devices with the order code for "Additional approval", option LT "EHEDG" have been tested and meet the requirements of the EHEDG. To meet the requirements for EHEDG certification, the device must be used with process connections in accordance with the EHEDG position paper entitled "Easy cleanable Pipe couplings and Process connections" (www.ehedg.org). FDA Food Contact Materials Regulation (EC) 1935/2004 	
Pharmaceutical compatibility	 FDA 21 CFR 177 USP <87> USP <88> Class VI 121 °C TSE/BSE Certificate of Suitability cGMP Devices with the order code for "Test, certificate", option JG "Conformity with cGMP-derived requirements, declaration" comply with the requirements of cGMP with regard to the surfaces of parts in contact with the medium, design, FDA 21 CFR material conformity, USP Class VI tests and TSE/BSE conformity. A serial number-specific declaration is generated. 	
Pressure Equipment Directive	 With the marking: a) PED/G1/x (x = category) or b) UK/G1/x (x = category) on the sensor nameplate, Endress+Hauser confirms compliance with the "Essential Safety Requirements" a) specified in Annex I of the Pressure Equipment Directive 2014/68/EU or b) Schedule 2 of Statutory Instruments 2016 No. 1105. Devices not bearing this marking (without PED or UKCA) are designed and manufactured according to sound engineering practice. They meet the requirements of a) Art. 4 Para. 3 of the Pressure Equipment Directive 2014/68/EU or b) Part 1, Para. 8 of Statutory Instruments 2016 No. 1105. The scope of application is indicated a) in diagrams 6 to 9 in Annex II of the Pressure Equipment Directive 2014/68/EU or b) Schedule 3, Para. 2 of Statutory Instruments 2016 No. 1105. 	
Radio approval	The measuring device has radio approval. For detailed information on the radio approval, see the Special Documentation $\rightarrow \cong 249$	

Measuring instrument approval	The measuring device is (optionally) approved as a gas meter (MI-002) or component in measuring systems (MI-005) in service subject to legal metrological control in accordance with the European Measuring Instruments Directive 2014/32/EU (MID).						
	The measuring device is qualified to OIML R117 or OIML R137 OIML R117 and has an OIML Certificate of Conformity (optional).						
Additional certification	CRN approval						
	Some device versions have CRN approval. A CRN-approved process connection with a CSA approval must be ordered for a CRN-approved device.						
	 Tests and certificates EN10204-3.1 material certificate, wetted parts and sensor housing Pressure test, internal process, inspection certificate PMI test (XRF), internal procedure, wetted parts, test report Compliance with requirements derived from cGMP, Declaration EN10204-2.1 confirmation of compliance with the order and EN10204-2.2 test report 						
	Option	Testing of welded connections Option Test standard				Component	
	opuon	ISO 23277 AL2x (PT) ISO 10675-1 AL1 (RT, DR)	ASME B31.3 NFS	ASME VIII Div.1 Appx. 4+8	NORSOK M-601		Process connection
	KF	X				PT	RT
	KK		x			РТ	RT
	KP			х		РТ	RT
	KR				х	VT, PT	VT, RT
	K1	Х				PT	DR
	K2		х			PT	DR
	КЗ			х		PT	DR
	K4				х	VT, PT	VT, DR
	PT = penetrant testing, RT = radiographic testing, VT = visual testing, DR = digital radiography All options with test report						
Other standards and guidelines	 EN 60529 Degrees of protection provided by enclosures (IP code) IEC/EN 60068-2-6 Environmental influences: Test procedure - Test Fc: vibrate (sinusoidal). IEC/EN 60068-2-31 Environmental influences: Test procedure - Test Ec: shocks due to rough handling, primarily for devices. EN 61010-1 Safety requirements for electrical equipment for measurement, control and laboratory use - general requirements IEC/EN 61326-2-3 Emission in accordance with Class A requirements. Electromagnetic compatibility (EMC requirements). NAMUR NE 21 Electromagnetic compatibility (EMC) of industrial process and laboratory control equipment NAMUR NE 32 Data retention in the event of a power failure in field and control instruments with microprocessors 						

NAMUR NE 43

NAMUR NE 53

with analog output signal.

Standardization of the signal level for the breakdown information of digital transmitters

Software of field devices and signal-processing devices with digital electronics NAMUR NE 80 The application of the pressure equipment directive to process control devices NAMUR NE 105 Specifications for integrating fieldbus devices in engineering tools for field devices NAMUR NE 107 Self-monitoring and diagnosis of field devices NAMUR NE 131 Requirements for field devices for standard applications NAMUR NE 132 Coriolis mass meter NACE MR0103 Materials resistant to sulfide stress cracking in corrosive petroleum refining environments. NACE MR0175/ISO 15156-1 Materials for use in H2S-containing Environments in Oil and Gas Production. 16.14 Application packages Many different application packages are available to enhance the functionality of the device. Such packages might be needed to address safety aspects or specific application requirements. The application packages can be ordered with the device or subsequently from Endress+Hauser. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: www.endress.com. Detailed information on the application packages: **I** Special Documentation for the device $\rightarrow \cong 249$ Diagnostic functionality Order code for "Application package", option EA "Extended HistoROM" Comprises extended functions concerning the event log and the activation of the measured value memory. Event log: Memory volume is extended from 20 message entries (standard version) to up to 100 entries. Data logging (line recorder): • Memory capacity for up to 1000 measured values is activated. • 250 measured values can be output via each of the 4 memory channels. The recording interval can be defined and configured by the user. • Measured value logs can be accessed via the local display or operating tool e.g. FieldCare, DeviceCare or Web server. For detailed information, see the Operating Instructions for the device. Order code for "Application package", option EB "Heartbeat Verification + Monitoring" Heartbeat Technology

Heartbeat Verification Meets the requirement for traceable verification to DIN ISO 9001:2008 Chapter 7.6 a) "Control of monitoring and measuring equipment". • Functional testing in the installed state without interrupting the process. • Traceable verification results on request, including a report. Simple testing process via local operation or other operating interfaces. Clear measuring point assessment (pass/fail) with high test coverage within the framework of manufacturer specifications. • Extension of calibration intervals according to operator's risk assessment. Heartbeat Monitoring Continuously supplies data, which are characteristic of the measuring principle, to an external condition monitoring system for the purpose of preventive maintenance or process analysis. These data enable the operator to: Draw conclusions - using these data and other information - about the impact the process influences (e.g. corrosion, abrasion, formation of buildup etc.) have on measuring performance over time. Schedule servicing in time. Monitor the process or product quality, e.g. gas pockets. For detailed information, see the Special Documentation for the device. Concentration Order code for "Application package", option ED "Concentration" measurement Calculation and outputting of fluid concentrations. The measured density is converted to the concentration of a substance of a binary mixture using the "Concentration" application package: Choice of predefined fluids (e.g. various sugar solutions, acids, alkalis, salts, ethanol etc.). - Common or user-defined units (°Brix, °Plato, % mass, % volume, mol/l etc.) for standard applications. Concentration calculation from user-defined tables. For detailed information, see the Special Documentation for the device. Special density Order code for "Application package", option EE "Special density" Many applications use density as a key measured value for monitoring quality or controlling processes. The device measures the density of the fluid as standard and makes this value available to the control system. The "Special Density" application package offers high-precision density measurement over a wide density and temperature range particularly for applications subject to varying process conditions. For detailed information, see the Operating Instructions for the device. Petroleum Order code for "Application package", option EJ "Petroleum" The most important parameters for the Oil & Gas Industry can be calculated and displayed with this application package.

- Corrected volume flow and calculated reference density in accordance with the "API Manual of Petroleum Measurement Standards, Chapter 11.1"
- Water content, based on density measurement
- Weighted mean of the density and temperature

For detailed information, see the Special Documentation for the device.

Petroleum & locking function	Order code for "Application package", option EM "Petroleum & locking function"
	The most important parameters for the Oil & Gas Industry can be calculated and displayed with this application package. It is also possible to lock the settings.
	 Corrected volume flow and calculated reference density in accordance with the "API Manual of Petroleum Measurement Standards, Chapter 11.1" Water content, based on density measurement Weighted mean of the density and temperature
	For detailed information, see the Special Documentation for the device.
	16.15 Accessories Overview of accessories available for order $\rightarrow \cong 210$
	16.16 Supplementary documentation
	For an overview of the scope of the associated Technical Documentation, refer to the following:
	 Device Viewer (www.endress.com/deviceviewer): Enter serial number from nameplate.
	Endress+Hauser Operations app: Enter serial number from nameplate or scan

Standard documentation Brief Operating Instructions

Brief Operating Instructions for the sensor

Measuring device	Documentation code
Proline Promass F	KA01261D

matrix code on nameplate.

Brief Operating Instructions for the transmitter

Measuring device	Documentation code
Proline 500 – digital	KA01319D
Proline 500	KA01318D

Technical Information

Measuring device	Documentation code
Promass F 500	TI01222D

Description of Device Parameters

Measuring device	Documentation code
Promass 500	GP01062D

Supplementary devicedependent documentation

Safety instructions

Safety instructions for electrical equipment for hazardous areas.

Contents	Documentation code
	Measuring device
ATEX/IECEx Ex i	XA01473D
ATEX/IECEx Ex ec	XA01474D
cCSAus IS	XA01475D
cCSAus Ex i	XA01509D
cCSAus Ex nA	XA01510D
INMETRO Ex i	XA01476D
INMETRO Ex ec	XA01477D
NEPSI Ex i	XA01478D
NEPSI Ex nA	XA01479D
NEPSI Ex i	XA01658D
NEPSI Ex nA	XA01659D
JPN	XA01780D

Special Documentation

Contents	Documentation code
Information on the Pressure Equipment Directive	SD01614D
Radio approvals for WLAN interface for A309/A310 display module	SD01793D
Web server	SD01667D
Heartbeat Technology	SD01704D
Concentration measurement	SD01710D
Petroleum	SD02014D
Custody transfer (counter for liquids other than water)	SD01691D
Custody transfer (counter for gas)	SD02465D
Custody transfer (counter for gas, in accordance with the German Measurement and Calibration Ordinance (Mess- und Eichverordnung))	SD02583D

Installation Instructions

Contents	Comment
Installation instructions for spare part sets and accessories	 Access the overview of all the available spare part sets via <i>Device Viewer</i> → ⁽¹⁾ 208 Accessories available for order with Installation Instructions → ⁽²⁾ 210

Index

09	
3-A approval	ł
A	
Access authorization to parameters	
Read access	'
Write access	
Access code	,
Incorrect input	
Accuracy	
Adapting the diagnostic behavior	
Additional certification	
Ambient conditions	
Mechanical load)
Operating height)
Relative humidity	
Ambient temperature	
Influence	,
Ambient temperature range 229	
Application	,
Application packages	
Applicator	
Approvals	
Attaching the connecting cable	
Proline 500 transmitter	
Auto scan buffer	
see Modbus RS485 Modbus data map	
С	
Cable entries	
Technical data 223	

Cable entries
Technical data
Cable entry
Degree of protection
CE mark
Certificates
cGMP 244
Check
Connection
Installation
Checklist
Post-connection check 63
Post-installation check
Cleaning
Cleaning in place (CIP)
Exterior cleaning
Interior cleaning
Sterilization in place (SIP)
Cleaning in place (CIP)
Climate class
Commissioning
Advanced settings
Configuring the measuring device 96
Compatibility
Configuring error response mode, Modbus RS485 192
Connecting cable

Connecting the connecting cable
Proline 500 – digital transmitter
Proline 500 terminal assignment
Sensor connection housing, Proline 500 49
Sensor connection housing, Proline 500 - digital 42
Terminal assignment of Proline 500 - digital 42
Connecting the measuring device
Proline 500
Proline 500 – digital
Connecting the signal cable/supply voltage cable
Proline 500 – digital transmitter
Proline 500 transmitter
Connection
see Electrical connection
Connection preparations
Connection tools
Context menu
Calling up
Closing
Explanation
Current consumption
Custody transfer 235

D

Date of manufacture
Declaration of Conformity 10
Define access code
Degree of protection
Density
Design
Measuring device
Design fundamentals
Maximum measured error
Repeatability
Device components
Device description files
Device history
Device locking, status
Device name
Sensor
Transmitter
Device repair
Device revision
Device type ID
Device Viewer
DeviceCare
Device description file
Diagnostic behavior
Explanation
Symbols
Diagnostic information
Communication interface
Design, description
DeviceCare
FieldCare
Light emitting diodes

Local display187Overview193Remedial measures193Web browser189
Diagnostic list
Diagnostic message
Diagnostics
Symbols
Dimensions
DIP switch
see Write protection switch
Direct access
Direct access code
Disabling write protection
Display
see Local display
Display area
For operational display
In the navigation view
Display values
For locking status
Disposal
Document
Function
Symbols
Document function
Document information 6
Down pipe
-

E

Editing view
Input screen
Using operating elements
EHDEG-certified
Electrical connection
Computer with Web browser (e.g. Internet
Explorer)
Degree of protection
Measuring device
Operating tool (e.g. FieldCare, DeviceCare, AMS
Device Manager, SIMATIC PDM)
Operating tools
Via Modbus RS485 protocol
Via service interface (CDI-RJ45)
Via WLAN interface
Web server
WLAN interface
Electromagnetic compatibility 230
Electronics module
Enabling write protection 154
Enabling/disabling the keypad lock
Endress+Hauser services
Maintenance
Repair
Environment
Storage temperature
Vibration- and shock-resistance
Error messages
see Diagnostic messages
5 5

Event list
Event logbook
Ex approval
Extended order code
Sensor
Transmitter
Exterior cleaning
F
F

1	
FDA	244
Field of application	
Residual risks	. 10
FieldCare	88
Device description file	. 90
Establishing a connection	. 89
Function	88
User interface	89
Filtering the event logbook	200
Firmware	
Release date	. 90
Version	90
Firmware history	204
Flow direction	5, 30
Flow limit	233
Food Contact Materials Regulation	244
Function check	96
Function codes	91
Functions	

see Parameters

G

Galvanic isolation	221
Gas Fraction Handler	179

Η

I

Identifying the measuring device
Incoming acceptance
Influence
Ambient temperature
Medium pressure
Medium temperature
Inlet runs
Input
Inspection
Received goods
Installation check
Installation conditions
Dimensions
Intended use
Interior cleaning

L
Languages, operation options
Line recorder
Local display
Navigation view
see Diagnostic message
see In alarm condition
see Operational display
Text editor
Low flow cut off
Μ
Main electronics module
Maintenance tasks
Managing the device configuration 148
Manufacturer ID
Materials
Maximum measured error
Measured values
see Process variables
Measuring and test equipment
Measuring device
Configuration
Conversion
Design
Disposal
Mounting the sensor
Preparing for electrical connection
Preparing for mounting
Removing
1
Switching on
Measuring instrument approval
Measuring principle
Measuring range
For gases
For liquids
Measuring range, recommended
Measuring system
Mechanical load 230
Medium pressure
Influence
Medium temperature
Influence
Menu
Diagnostics
Setup
Menus
For measuring device configuration 96
For specific settings
Modbus RS485
Configuring error response mode
Diagnostic information
Function codes
Modbus data map
Read access
Reading out data
Register addresses
Register information

Response time 92 Scan list 94 Write access 91 Mounting 22
Mounting dimensions
see Dimensions
Mounting location
Mounting preparations
Mounting requirements
Down pipe
Inlet and outlet runs
Mounting location
Orientation
Rupture disk
Sensor heating
System pressure
Thermal insulation
Vibrations
Mounting tool

Na Na

Nameplate	
Sensor	19
Transmitter	17
Navigation path (navigation view)	69
Navigation view	
In the submenu	69
In the wizard	69
Numeric editor	71

0

Onsite display	
Numeric editor	71
Operable flow range	215
Operating elements	188
Operating height	229
Operating keys	

see Operating elements	
Operating menu	
Menus, submenus	65
Structure	65
Submenus and user roles	66
Operating philosophy	66
Operation	58
Operation options	64
Operational display	67
Operational safety	
Order code	19
Orientation (vertical, horizontal)	23
Outlet runs	
Output signal	17
Output variables	

P

. 22
76
. 76

Parameter settings	
Administration (Submenu)	150
Advanced setup (Submenu)	133
Communication (Submenu)	100
Configuration backup (Submenu)	148
Corrected volume flow calculation (Submenu)	133
Current input	105
Current input (Wizard)	105
Current input 1 to n (Submenu)	170
Current output	107
Current output (Wizard)	107
Data logging (Submenu)	175
Define access code (Wizard)	149
Device information (Submenu)	202
Diagnostics (Menu)	198
Display (Submenu)	140
Display (Wizard)	125
Double pulse output	124
Double pulse output (Submenu)	173
Double pulse output (Wizard)	124
I/O configuration	104
I/O configuration (Submenu)	104
Low flow cut off (Wizard)	130
Measured variables (Submenu)	159
Measurement mode (Submenu)	179
Medium index (Submenu)	180
Medium selection (Wizard)	102
Partially filled pipe detection (Wizard)	131
Pulse/frequency/switch output	112
Pulse/frequency/switch output (Wizard)	110
Pulse/frequency/switch output 1 to n (Submenu)	172
Pulse/frequency/switch output 1 to n (Submenu) Relay output	172 121
Pulse/frequency/switch output 1 to n (Submenu) Relay output	172 121 172
	172 121 172 121
	172 121 172 121 150
	172 121 172 121 150 134
	172 121 172 121 150 134 . 98
	172 121 172 121 150 134 . 98 151
	172 121 172 121 150 134 . 98 151 106
	172 121 172 121 150 134 . 98 151 106 170
	172 121 172 121 150 134 . 98 151 106 170 106
	172 121 172 121 150 134 . 98 151 106 170 106 . 98
	172 121 172 121 150 134 . 98 151 106 170 106 . 98 169
112, 114,Pulse/frequency/switch output 1 to n (Submenu)Relay output .Relay output 1 to n (Submenu)Relay output 1 to n (Wizard)Reset access code (Submenu)Sensor adjustment (Submenu)Setup (Menu)Status input 1 to n (Submenu)Status input 1 to n (Submenu)System units (Submenu)Totalizer (Submenu)Totalizer 1 to n (Submenu)	172 121 172 121 150 134 . 98 151 106 170 106 . 98 169 138
	172 121 172 121 150 134 . 98 151 106 170 106 . 98 169 138 173
112, 114,Pulse/frequency/switch output 1 to n (Submenu)Relay output .Relay output 1 to n (Submenu)Relay output 1 to n (Wizard)Reset access code (Submenu)Sensor adjustment (Submenu)Setup (Menu)Simulation (Submenu)Status input 1 to n (Submenu)Statizer (Submenu)Statizer 1 to n (Submenu)Statizer 1 to n (Submenu)Status input 1 to n (Submenu)Status input 1 to n (Submenu)	172 121 172 121 150 134 . 98 151 106 170 106 . 98 169 138 173 171
112, 114,Pulse/frequency/switch output 1 to n (Submenu)Relay output .Relay output 1 to n (Submenu)Relay output 1 to n (Wizard)Reset access code (Submenu)Sensor adjustment (Submenu)Setup (Menu)Simulation (Submenu)Status input 1 to n (Submenu)Status routits (Submenu)System units (Submenu)Totalizer 1 to n (Submenu)Totalizer 1 to n (Submenu)Value current output 1 to n (Submenu)Web server (Submenu)	172 121 172 121 150 134 . 98 151 106 170 106 . 98 169 138 173 171 . 84
112, 114,Pulse/frequency/switch output 1 to n (Submenu)Relay output .Relay output 1 to n (Submenu)Relay output 1 to n (Wizard)Reset access code (Submenu)Sensor adjustment (Submenu)Setup (Menu)Simulation (Submenu)Status input 1 to n (Submenu)Statizer (Submenu)Statizer 1 to n (Submenu)Statizer 1 to n (Submenu)Status input 1 to n (Submenu)Status input 1 to n (Submenu)	172 121 172 121 150 134 . 98 151 106 170 106 . 98 169 138 173 171 . 84 146
112, 114,Pulse/frequency/switch output 1 to n (Submenu)Relay outputRelay output 1 to n (Submenu)Relay output 1 to n (Wizard)Reset access code (Submenu)Sensor adjustment (Submenu)Setup (Menu)Status inputStatus input 1 to n (Submenu)Status input 1 to n (Wizard)Status input 1 to n (Submenu)Status input 1 to n (Submenu)System units (Submenu)Totalizer 1 to n (Submenu)Value current output 1 to n (Submenu)Value current output 1 to n (Submenu)Web server (Submenu)WLAN settings (Wizard)	172 121 172 121 150 134 . 98 151 106 170 106 . 98 169 138 173 171 . 84 146 137
112, 114,Pulse/frequency/switch output 1 to n (Submenu)Relay output .Relay output 1 to n (Submenu)Relay output 1 to n (Wizard)Reset access code (Submenu)Sensor adjustment (Submenu)Setup (Menu)Status input 1Status input 1 to n (Wizard)Status input 1 to n (Wizard)Status input 1 to n (Submenu)Status input 1 to n (Submenu)System units (Submenu)System units (Submenu)Status input 1 to n (Submenu)Status input 1 to n (Submenu)System units (Submenu)System units (Submenu)Status input 1 to n (Submenu)	172 121 172 121 150 134 . 98 151 106 170 106 . 98 169 138 173 171 . 84 146 137 135
112, 114,Pulse/frequency/switch output 1 to n (Submenu)Relay output .Relay output 1 to n (Submenu)Relay output 1 to n (Wizard)Reset access code (Submenu)Sensor adjustment (Submenu)Setup (Menu)Simulation (Submenu)Status input 1 to n (Wizard)Status input 1 to n (Submenu)Status input 1 to n (Submenu)System units (Submenu)Totalizer (Submenu)Totalizer for (Submenu)Value current output 1 to n (Submenu)Web server (Submenu)WLAN settings (Wizard)Zero adjustment (Wizard)Zero verification (Wizard)Performance characteristicsPharmaceutical compatibility	172 121 172 121 150 134 .98 151 106 170 106 .98 169 138 173 171 .84 146 137 135 223 244
112, 114,Pulse/frequency/switch output 1 to n (Submenu)Relay output .Relay output 1 to n (Submenu)Relay output 1 to n (Wizard)Reset access code (Submenu)Sensor adjustment (Submenu)Setup (Menu)Simulation (Submenu)Status input 1 to n (Wizard)Status input 1 to n (Submenu)Status input 1 to n (Submenu)System units (Submenu)Totalizer (Submenu)Totalizer handling (Submenu)Value current output 1 to n (Submenu)Web server (Submenu)WLAN settings (Wizard)Zero adjustment (Wizard)Zero verification (Wizard)Performance characteristics	172 121 172 121 150 134 .98 151 106 170 106 .98 169 138 173 171 .84 146 137 135 223 244
112, 114,Pulse/frequency/switch output 1 to n (Submenu)Relay output .Relay output 1 to n (Submenu)Relay output 1 to n (Wizard)Reset access code (Submenu)Sensor adjustment (Submenu)Setup (Menu)Simulation (Submenu)Status input 1 to n (Wizard)Status input 1 to n (Submenu)Status input 1 to n (Submenu)System units (Submenu)Totalizer (Submenu)Totalizer for (Submenu)Value current output 1 to n (Submenu)Web server (Submenu)WLAN settings (Wizard)Zero adjustment (Wizard)Zero verification (Wizard)Performance characteristicsPharmaceutical compatibility	172 121 172 121 150 134 .98 151 106 170 106 .98 169 138 173 171 .84 146 137 135 223 244 63 34
112, 114,Pulse/frequency/switch output 1 to n (Submenu)Relay output .Relay output 1 to n (Submenu)Relay output 1 to n (Wizard)Reset access code (Submenu)Sensor adjustment (Submenu)Setup (Menu)Simulation (Submenu)Status input .Status input 1 to n (Wizard)Status input 1 to n (Submenu)Status input 1 to n (Submenu)Protalizer 1 to n (Submenu)Value current output 1 to n (Submenu)Web server (Submenu)Web server (Submenu)WLAN settings (Wizard)Zero adjustment (Wizard)Performance characteristicsPharmaceutical compatibilityPost-connection check (checklist)	$172 \\ 121 \\ 172 \\ 121 \\ 150 \\ 134 \\ .98 \\ 151 \\ 106 \\ 170 \\ 106 \\ .98 \\ 169 \\ 138 \\ 173 \\ 171 \\ .84 \\ 146 \\ 137 \\ 135 \\ 223 \\ 244 \\ 63 \\ 34 \\ .84 \\ $
112, 114,Pulse/frequency/switch output 1 to n (Submenu)Relay output 1Relay output 1 to n (Submenu)Relay output 1 to n (Wizard)Reset access code (Submenu)Sensor adjustment (Submenu)Setup (Menu)Status input 1Status input 1 to n (Wizard)Status input 1 to n (Wizard)Status input 1 to n (Submenu)Status input 1 to n (Submenu)Status input 1 to n (Submenu)Totalizer (Submenu)Totalizer 1 to n (Submenu)Value current output 1 to n (Submenu)Value current output 1 to n (Submenu)Web server (Submenu)WLAN settings (Wizard)Zero adjustment (Wizard)Zero verification (Wizard)Performance characteristicsPharmaceutical compatibilityPost-connection check (checklist)Power consumption	172 121 172 121 150 134 .98 151 106 .98 169 138 173 171 .84 146 137 135 223 244 63 34 .55 222
112, 114,Pulse/frequency/switch output 1 to n (Submenu)Relay output .Relay output 1 to n (Submenu)Relay output 1 to n (Wizard)Reset access code (Submenu)Sensor adjustment (Submenu)Setup (Menu)Simulation (Submenu)Status input 1Status input 1 to n (Wizard)System units (Submenu)Totalizer (Submenu)Totalizer 1 to n (Submenu)Totalizer handling (Submenu)Value current output 1 to n (Submenu)Web server (Submenu)WLAN settings (Wizard)Zero adjustment (Wizard)Zero verification (Wizard)Performance characteristicsPharmaceutical compatibilityPost-installation check (checklist)Potential equalization	172 121 172 121 150 134 .98 151 106 170 106 .98 169 138 173 171 .84 146 137 135 223 244 63 34 .55 222 222

Pressure loss	
Pressure-temperature ratings	232
Process connections	239
Process variables	
Calculated	
Measured	
Product safety	. 10
Proline 500 – digital transmitter	
Connecting the signal cable/supply voltage cable .	. 47
Proline 500 connecting cable terminal assignment	
Sensor connection housing	. 49
Proline 500 transmitter	
Connecting the signal cable/supply voltage cable .	. 53
Protecting parameter settings	154
_	
R	
Radio approval	
RCM mark	
Read access	
Reading measured values	158
Reading out diagnostic information, Modbus RS485	192
Recalibration	
Reference operating conditions	
Registered trademarks	8
Remedial measures	
Calling up	189
Closing	189
Remote operation	240
Repair	
Notes	
Repair of a device	208
Repeatability	226
Replacement	
Device components	208
Requirements for personnel	9
Response time	226
Return	208
Rupture disk	
Safety instructions	. 27
Triggering pressure	
0	
S	

S
Safety
Sensor
Mounting
Sensor heating
Sensor housing
Serial number
Setting the operating language
Settings
Adapting the measuring device to the process
conditions
Administration
Advanced display configurations
Communication interface 100
Current input
Current output
Double pulse output
I/O configuration

Local display	125
Low flow cut off	
Managing the device configuration	148
Medium	102
Operating language	
Partially filled pipe detection	131
Pulse output	
Pulse/frequency/switch output 1	
Relay output	
Resetting the device	
Resetting the totalizer	
Sensor adjustment	
Simulation	
Status input	
Switch output	
System units	
Tag name	
Totalizer	
Totalizer reset	
WLAN	
Show data logging	
Signal on alarm	
Software release	
Spare part	
Spare parts	
Special connection instructions	
Special mounting instructions)0
	77
Hygienic compatibility	
Standards and guidelines	240
	67
For operational display	
For operational display	69
For operational display In the navigation view Status signals	69 187, 190
For operational display In the navigation view Status signals Sterilization in place (SIP)	69 187, 190 230
For operational display For operational display In the navigation view Status signals Status signals I Sterilization in place (SIP) Storage concept	69 187, 190 230 242
For operational display	69 187, 190 230 242 21
For operational display	69 187, 190 230 242 21 21
For operational display In the navigation view Status signals Sterilization in place (SIP) Storage concept Storage conditions Storage temperature Storage temperature range	69 187, 190 230 242 21 21
For operational display	69 187, 190 230 242 21 21 229
For operational display	69 187, 190 230 242 21 21 229
For operational display	69 187, 190 230 242 21 21 229 65
For operational display In the navigation view Status signals Sterilization in place (SIP) Storage concept Storage conditions Storage conditions Storage temperature Storage temperature range Structure Operating menu Submenu Administration	69 187, 190 230 242 21 21 229 65
For operational display In the navigation view Status signals Sterilization in place (SIP) Storage concept Storage conditions Storage conditions Storage temperature Storage temperature range Structure Operating menu Submenu Administration 1 Advanced setup	69 187, 190 230 242 21 21 229 65 149, 150 132, 133
For operational display In the navigation view Status signals Sterilization in place (SIP) Storage concept Storage conditions Storage conditions Storage temperature Storage temperature range Structure Operating menu Submenu Administration Advanced setup	69 187, 190 230 242 21 21 229 65 149, 150 132, 133 133
For operational display In the navigation view Status signals Sterilization in place (SIP) Storage concept Storage conditions Storage conditions Storage temperature Storage temperature range Structure Operating menu Submenu Administration In the navigation In the navigation In the navigation In the navigation In the navigation in place (SIP) Operating temperature In the navigation In the navigati	69 187, 190 230 242 21 229 65 149, 150 132, 133 133 100
For operational display In the navigation view Status signals Sterilization in place (SIP) Storage concept Storage conditions Storage conditions Storage temperature Storage temperature range Operating menu Submenu Advanced setup Calculated values Configuration backup	69 187, 190 230 242 21 229 65 149, 150 132, 133 133 100 148
For operational display . In the navigation view . Status signals . Sterilization in place (SIP) . Storage concept . Storage conditions . Storage conditions . Storage temperature . Storage temperature range . Coperating menu . Submenu Advanced setup . 1 Calculated values . 1 Configuration backup . 1 Corrected volume flow calculation . 1	69 187, 190 230 242 21 21 229 65 149, 150 132, 133 133 100 148 133
For operational display . In the navigation view . Status signals . Sterilization in place (SIP) . Storage concept . Storage conditions . Storage conditions . Storage temperature . Storage temperature range . Structure Operating menu . Submenu Administration . Advanced setup . In the navigation backup . Corrected volume flow calculation . Current input 1 to n .	69 187, 190 230 242 21 21 229 65 149, 150 132, 133 133 100 148 133 170
For operational display In the navigation view Status signals Sterilization in place (SIP) Storage concept Storage conditions Storage conditions Storage temperature Storage temperature range Structure Operating menu Administration 1 Advanced setup 1 Calculated values Configuration backup Corrected volume flow calculation Data logging	69 187, 190 230 242 21 21 229 65 149, 150 132, 133 133 133 148 133 170 175
For operational display . In the navigation view . Status signals . Sterilization in place (SIP) . Storage concept . Storage conditions . Storage conditions . Storage temperature . Storage temperature range . Structure Operating menu . Submenu Administration . Advanced setup . In the navigation backup . Corrected volume flow calculation . Current input 1 to n .	69 187, 190 230 242 21 21 229 65 149, 150 132, 133 133 100 148 133 170 175 202
For operational display In the navigation view Status signals Sterilization in place (SIP) Storage concept Storage conditions Storage conditions Storage temperature Storage temperature range Storage temperature range Storage temperature range Storage temperature range Operating menu Submenu Advanced setup Advanced setup Configuration backup Corrected volume flow calculation Current input 1 to n Data logging Display	69 187, 190 230 242 21 21 229 65 149, 150 132, 133 133 100 148 133 170 175 202 140
For operational display In the navigation view Status signals Sterilization in place (SIP) Storage concept Storage conditions Storage conditions Storage temperature Storage temperature range Structure Operating menu Submenu Administration Advanced setup Communication Corrected volume flow calculation Current input 1 to n Data logging Device information Display	69 187, 190 230 242 21 21 229 65 149, 150 132, 133 133 133 148 133 170 175 202 140 173
For operational display . In the navigation view . Status signals . Sterilization in place (SIP) . Storage concept . Storage concept . Storage conditions . Storage conditions . Storage temperature . Storage temperature range . Structure Operating menu . Submenu Administration . Advanced setup . Configuration backup . Corrected volume flow calculation . Current input 1 to n . Data logging . Device information . Display . Double pulse output .	69 187, 190 230 242 21 21 229 65 149, 150 132, 133 133 100 148 133 170 175 202 140 173 199
For operational display In the navigation view Status signals Sterilization in place (SIP) Storage concept Storage conditions Storage conditions Storage temperature Storage temperature range Structure Operating menu Submenu Administration Advanced setup Communication Corrected volume flow calculation Current input 1 to n Data logging Device information Display	69 187, 190 230 242 21 21 229 65 149, 150 132, 133 133 100 148 133 170 175 202 140 173 199
For operational display . In the navigation view . Status signals . Sterilization in place (SIP) . Storage concept . Storage concept . Storage conditions . Storage conditions . Storage temperature . Storage temperature range . Structure Operating menu . Submenu Administration . Advanced setup . Configuration backup . Corrected volume flow calculation . Current input 1 to n . Data logging . Device information . Display . Double pulse output .	69 187, 190 230 242 21 21 229 65 149, 150 132, 133 133 133 100 148 133 170 175 202 140 173 199 104
For operational display . In the navigation view . Status signals . Sterilization in place (SIP) . Storage concept . Storage conditions . Storage conditions . Storage conditions . Storage temperature . Storage temperature range . Structure Operating menu . Submenu Administration . Advanced setup . Configuration backup . Corrected volume flow calculation . Current input 1 to n . Data logging . Device information . Display . Double pulse output . Event list . I/O configuration .	69 187, 190 230 242 21 21 229 65 149, 150 132, 133 133 133 100 148 133 170 175 202 140 173 199 104 170
For operational display . In the navigation view . Status signals . Sterilization in place (SIP) . Storage concept . Storage concept . Storage conditions . Storage conditions . Storage conditions . Storage conditions . Storage temperature . Storage temperature range . Structure Operating menu . Submenu Administration . Advanced setup . I Calculated values . Communication . Corrected volume flow calculation . Current input 1 to n . Data logging . Device information . Display . Double pulse output . Event list . I/O configuration . Input values . Measured values .	69 187, 190 230 242 21 21 229 65 149, 150 132, 133 133 133 148 133 170 175 202 140 173 199 104 158
For operational display . In the navigation view . Status signals . Sterilization in place (SIP) . Storage concept . Storage conditions . Storage conditions . Storage conditions . Storage temperature . Storage temperature range . Structure Operating menu . Submenu Administration . Advanced setup . I Calculated values . Corrected volume flow calculation . Current input 1 to n Data logging . Device information . Display . Double pulse output . Event list . I/O configuration .	69 .87, 190 230 242 21 21 229 65 .49, 150 .32, 133 133 133 148 133 170 175 202 140 173 199 104 158 159

Output values
Overview
Process variables
Pulse/frequency/switch output 1 to n
Relay output 1 to n
Reset access code
Sensor adjustment
Simulation
Status input 1 to n
System units
Totalizer
Totalizer 1 to n
Totalizer handling 173
Value current output 1 to n
Web server
Supply voltage
Surface roughness 239
Switch output
Symbols
Controlling data entries
For communication
For diagnostic behavior
For locking
For measured variable
For measurement channel number 68
For menus
For parameters
For status signal
For submenu
For wizard
In the status area of the local display 67
Input screen
Operating elements
System design
Measuring system
see Measuring device design
System integration
System pressure
Т
Technical data, overview
Temperature range
Ambient temperature range for display 240
Medium temperature
Storage temperature
Terminal assignment
Terminal assignment of connecting cable for Proline
500- digital
Sensor connection housing
Terminals
Tests and certificates
Text editor
Thermal insulation
Tool
For mounting
Transport
<u>▲</u>

Tools
Electrical connection
Totalizer
Configuration
Transmitter
Turning the display module
Turning the housing
Transporting the measuring device
Troubleshooting
General
TSE/BSE Certificate of Suitability 244
Turning the display module
Turning the electronics housing
see Turning the transmitter housing
Turning the transmitter housing
U
UKCA marking 243
Use of the measuring device
Borderline cases
Incorrect use
see Intended use
User interface
Current diagnostic event
Previous diagnostic event
User roles
USP Class VI
17
V
Version data for the device
Vibration- and shock-resistance
Vibration- and shock-resistance
Vibration- and shock-resistance
Vibration- and shock-resistance 229 Vibrations 27 W 207, 208
Vibration- and shock-resistance
Vibration- and shock-resistance 229 Vibrations 27 W 207, 208
Vibration- and shock-resistance 229 Vibrations 27 W 207, 208 W@M Device Viewer 16 Weight 16
Vibration- and shock-resistance
Vibration- and shock-resistance229Vibrations27WWW@M207, 208W@M Device Viewer16Weight16SI units235Transport (notes)21US units236Wizard105Current input107Define access code149Display125
Vibration- and shock-resistance229Vibrations27WWW@M207, 208W@M Device Viewer16Weight16SI units235Transport (notes)21US units236Wizard105Current input107Define access code149Display125Double pulse output124
Vibration- and shock-resistance 229 Vibrations 27 W 207, 208 W@M Device Viewer 16 Weight 235 Transport (notes) 21 US units 236 Wizard 105 Current input 107 Define access code 149 Display 125 Double pulse output 124 Low flow cut off 130
Vibration- and shock-resistance229Vibrations27WW@MW@M Device Viewer16Weight207, 208SI units235Transport (notes)21US units236Wizard105Current input105Current output107Define access code149Display125Double pulse output124Low flow cut off130Medium selection102
Vibration- and shock-resistance229Vibrations27WW@MW@M Device Viewer16Weight16SI units235Transport (notes)21US units236Wizard105Current input107Define access code149Display125Double pulse output124Low flow cut off130Medium selection102Partially filled pipe detection131
Vibration- and shock-resistance229Vibrations27WW@MW@M Device Viewer16Weight16SI units235Transport (notes)21US units236Wizard105Current input107Define access code149Display125Double pulse output124Low flow cut off130Medium selection102Partially filled pipe detection112, 114, 118
Vibration- and shock-resistance 229 Vibrations 27 W 207, 208 W@M Device Viewer 16 Weight 235 SI units 235 Transport (notes) 21 US units 236 Wizard 107 Define access code 149 Display 125 Double pulse output 124 Low flow cut off 130 Medium selection 131 Pulse/frequency/switch output 112, 114, 118 Relay output 1 to n 121
Vibration- and shock-resistance229Vibrations27WW@MW@M Device Viewer16Weight16SI units235Transport (notes)21US units236Wizard105Current input107Define access code149Display125Double pulse output124Low flow cut off130Medium selection102Partially filled pipe detection112, 114, 118
Vibration- and shock-resistance 229 Vibrations 27 W 207, 208 W@M Device Viewer 16 Weight 235 SI units 235 Transport (notes) 21 US units 236 Wizard 107 Define access code 149 Display 125 Double pulse output 124 Low flow cut off 130 Medium selection 131 Pulse/frequency/switch output 112, 114, 118 Relay output 1 to n 121
Vibration- and shock-resistance 229 Vibrations 27 W 207, 208 W@M Device Viewer 16 Weight 235 SI units 235 Transport (notes) 21 US units 236 Wizard 105 Current input 107 Define access code 149 Display 125 Double pulse output 124 Low flow cut off 130 Medium selection 131 Pulse/frequency/switch output 112, 114, 118 Relay output 1 to n 121 Status input 1 to n 106
Vibration- and shock-resistance 229 Vibrations 27 W 207, 208 W@M Device Viewer 16 Weight 235 SI units 235 Transport (notes) 21 US units 236 Wizard 105 Current input 107 Define access code 149 Display 125 Double pulse output 124 Low flow cut off 130 Medium selection 131 Pulse/frequency/switch output 112, 114, 118 Relay output 1 to n 121 Status input 1 to n 106 WLAN settings 146
Vibration- and shock-resistance 229 Vibrations 27 W 207, 208 W@M Device Viewer 16 Weight 235 SI units 235 Transport (notes) 21 US units 236 Wizard 107 Define access code 149 Display 125 Double pulse output 124 Low flow cut off 130 Medium selection 131 Pulse/frequency/switch output 112, 114, 118 Relay output 1 to n 121 Status input 1 to n 106 WLAN settings 146 Zero adjustment 137 Zero verification 135
Vibration- and shock-resistance 229 Vibrations 27 W 207, 208 W@M Device Viewer 16 Weight 235 SI units 235 Transport (notes) 21 US units 236 Wizard 105 Current input 107 Define access code 149 Display 125 Double pulse output 124 Low flow cut off 130 Medium selection 131 Pulse/frequency/switch output 112, 114, 118 Relay output 1 to n 121 Status input 1 to n 106 WLAN settings 146 Zero adjustment 137

Write protection	
Via access code	ł
Via write protection switch 155	5
Write protection switch	5



www.addresses.endress.com

