

# Special Documentation

## Proline Promag 300

Heartbeat Verification + Monitoring application package  
Modbus RS485





## Table of contents

<b>1</b>	<b>Certification</b> .....	<b>4</b>
<b>2</b>	<b>About this document</b> .....	<b>5</b>
2.1	Document function .....	5
2.2	Content and scope .....	5
2.3	Symbols .....	5
2.4	Documentation .....	6
2.5	Registered trademarks .....	6
<b>3</b>	<b>Product features and availability</b> .....	<b>7</b>
3.1	Product features .....	7
3.2	Availability .....	7
<b>4</b>	<b>System integration</b> .....	<b>9</b>
4.1	Performing verification and creating a verification report .....	9
4.2	Integration into the PLC system .....	10
4.3	Data availability for the user .....	11
4.4	Data management .....	11
<b>5</b>	<b>Heartbeat Verification</b> .....	<b>16</b>
5.1	Performance characteristics .....	16
5.2	Commissioning .....	16
5.3	Operation .....	17
<b>6</b>	<b>Heartbeat Monitoring</b> .....	<b>40</b>
6.1	Commissioning .....	40
6.2	Operation .....	44
<b>7</b>	<b>Build-up detection using the Build- up index</b> .....	<b>46</b>
7.1	General principles .....	46
7.2	Application examples .....	50
<b>8</b>	<b>Modbus RS485 register information</b> .....	<b>52</b>
8.1	Notes .....	52
8.2	Overview of the Heartbeat operating menu ...	53

# 1 Certification

Certification is issued by an independent certification body.


The following requirements are certified:

- Inspection method
- Test principles
- Test results with total test coverage (TTC) specified
- Traceable verification according to DIN EN ISO 9001:2015, Section 7.1.5/7.1.5.2 a)



## **Requirements according to DIN EN ISO 9001**

Heartbeat Technology™ also meets the requirements for traceable verification according to DIN EN ISO 9001: 2015 - Section 7.1.5/7.1.5.2 a) "Control of monitoring and measuring equipment". According to the standard, the user is responsible for specifying the verification interval in a manner that complies with requirements.

Further information on the documentation →  6.

## 2 About this document

### 2.1 Document function

This manual is a Special Documentation and does not replace the Operating Instructions included in the scope of supply. It is a part of the Operating Instructions and serves as a reference for using the Heartbeat Technology function integrated in the measuring device.

### 2.2 Content and scope

This document contains descriptions of the additional parameters and technical data of the application package and detailed explanations regarding:

- Application-specific parameters
- Advanced technical specifications

### 2.3 Symbols

#### 2.3.1 Safety symbols

##### **DANGER**

This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury.

##### **WARNING**

This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.








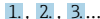

##### **CAUTION**

This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or medium injury.

##### **NOTICE**

This symbol contains information on procedures and other facts which do not result in personal injury.


#### 2.3.2 Symbols for certain types of information

Symbol	Meaning
	<b>Permitted</b> Procedures, processes or actions that are permitted.
	<b>Forbidden</b> Procedures, processes or actions that are forbidden.
	<b>Tip</b> Indicates additional information.
	Reference to documentation
	Reference to page
	Reference to graphic
	Notice or individual step to be observed
	Series of steps
	Result of a step


### 2.3.3 Symbols in graphics

Symbol	Meaning
1, 2, 3 ...	Item numbers
A, B, C, ...	Views
A-A, B-B, C-C, ...	Sections

## 2.4 Documentation

 For an overview of the scope of the associated Technical Documentation, refer to the following:

- *Device Viewer* ([www.endress.com/deviceviewer](http://www.endress.com/deviceviewer)): Enter the serial number from the nameplate
- *Endress+Hauser Operations app*: Enter serial number from nameplate or scan matrix code on nameplate.

 This Special Documentation and other documentation is available:  
In the Download Area of the Endress+Hauser website: [www.endress.com](http://www.endress.com) → Downloads

This documentation is an integral part of the following Operating Instructions:

Measuring device	Documentation code
Promag H 300	BA01394D
Promag P 300	BA01395D
Promag W 300	BA01939D

The following certification is available for this documentation:

Certification	Documentation code
Manufacturer declaration Promag 300/500	HE_01639

## 2.5 Registered trademarks

### Modbus®

Registered trademark of SCHNEIDER AUTOMATION, INC.

### TRI-CLAMP®

Registered trademark of Ladish & Co., Inc., Kenosha, USA

## 3 Product features and availability

### 3.1 Product features

Heartbeat Technology offers diagnostic functionality through continuous self-monitoring, the transmission of additional measured variables to an external Condition Monitoring system and the in-situ verification of flowmeters in the application.

The test scope achieved using these diagnostic and verification tests is expressed as the **total test coverage** (TTC). The TTC is calculated using the following formula for random errors (calculation based on FMEDA as per IEC 61508):

$$TTC = (\lambda_{TOT} - \lambda_{du}) / \lambda_{TOT}$$

$\lambda_{TOT}$ : Rate of all theoretically possible failures

$\lambda_{du}$ : Rate of undetected dangerous failures

Only the dangerous undetected failures that are not captured by the device diagnostics can falsify the measured value that is output or interrupt the output of measured values.

Heartbeat Technology checks the device function within the specified measuring tolerance with a defined TTC. The defined TTC is indicated in the product-specific TÜV certificate (TÜV = Technical Inspection Association).



The current value for the TTC depends on the configuration and integration of the measuring device. The values indicated above were determined under the following conditions:

- Integration of measuring device for measured value output via 4 to 20 mA HART output
- Simulation operation not active
- Error behavior, current output set to **Minimum alarm** or **Maximum alarm** and evaluation unit recognizes both alarms
- Settings for diagnostic behavior correspond to factory settings

### 3.2 Availability

The application package can be ordered together with the device or can be activated subsequently with an activation code. Detailed information on the order code is available via the Endress+Hauser website [www.endress.com](http://www.endress.com) or from your local Endress+Hauser Sales Center.

#### 3.2.1 Order code

If ordering directly with the device or subsequently as a retrofit kit:

Order code for "Application package", option EB "Heartbeat Verification + Monitoring"

The availability of the application package can be checked as follows:

- Order code with breakdown of the device features on the delivery note
- Call up the Device Viewer via the website [www.endress.com/deviceviewer](http://www.endress.com/deviceviewer): enter the serial number from the nameplate and check whether the feature is displayed
- In the operating menu Expert → System → Administration : The **Software option overview** parameter indicates whether the application package is enabled

### 3.2.2 Activation

A retrofit kit is supplied if the application package is ordered subsequently. This kit includes a tag plate with device data and an activation code.



For detailed information on "Activating application packages via the software license code", see Installation Instructions EA01164D


### 3.2.3 Access

Heartbeat Technology is compatible with all the system integration options. Interfaces with digital communication are required to access the data saved in the device. The speed of data transmission depends on the type of communication interface used.



## 4 System integration

The **Heartbeat Technology** features are available via the local display module and the digital interfaces. The features can be used both via an asset management system and via the automation infrastructure (e.g. PLC).

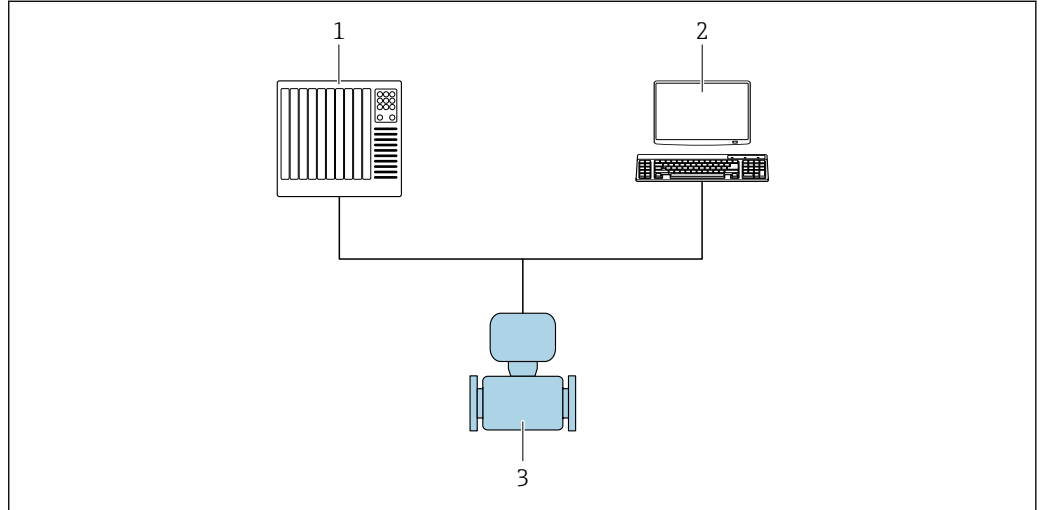


A0020248

1 General screen layout

- 1 PLC
- 2 Asset management system
- 3 Measuring device

### 4.1 Performing verification and creating a verification report

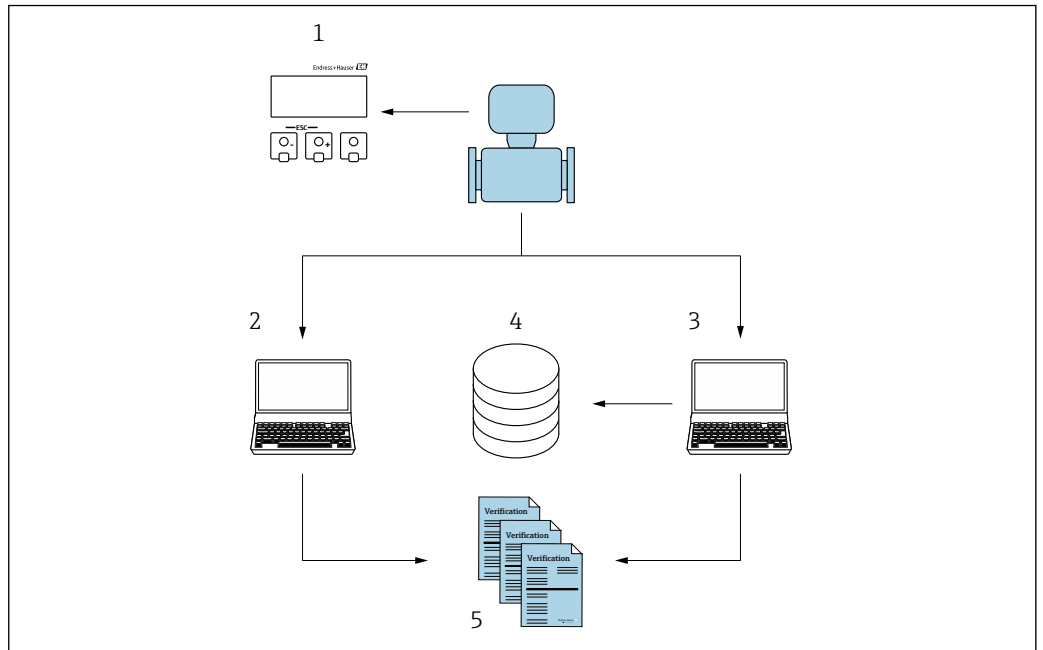

A0031421

- 1 Local display
- 2 Web browser
- 3 FieldCare
- 4 Data memory in the measuring device
- 5 Verification report

Run the **Heartbeat Verification** via one of the following interfaces:

- System integration interface of a higher-level system
- Local display
- WLAN interface
- Service interface CDI-RJ45 (CDI: Common Data Interface)

The device must be accessed externally from a higher-level system via the system integration interface in order to start a verification and signal the verification result (Passed or Failed). It is not possible to start the verification via an external status signal and relay the results to a higher-level system via the status output.

The detailed results of the verification (8 data records) are saved in the device and provided in the form of a verification report.

Verification reports can be created using the device DTM and the Web server integrated in the measuring device or FieldCare, the Endress+Hauser plant asset management software.



With the Flow Verification DTM, FieldCare also offers the possibility of data management and of archiving the verification results to create traceable documentation.

The Flow Verification DTM also enables trend analysis – i.e. the ability to monitor, compare and track the verification results of all the verifications performed on the device. This can be used for assessment purposes, e.g. to be able to extend recalibration intervals.


Data exchange can take place automatically or be triggered by a user.

## 4.2 Integration into the PLC system

The measuring device's built-in verification can be activated via a control system and the results can be checked.

 For further information on "System integration", see the Operating Instructions →  6 (documentation code)

The following procedure must be implemented for this purpose:

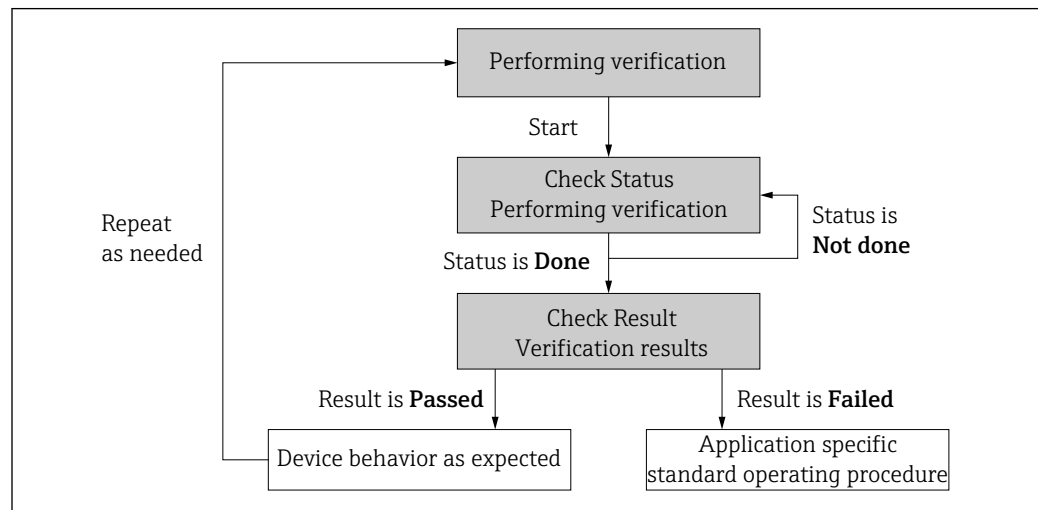

A0020258-EN

Verification result: The overall result of the verification is indicated in the **Overall result** parameter. Different, application-specific measures must be performed by system routines depending on the result, e.g. a "Maintenance Required" alert is triggered if the result is **Failed**.

## 4.3 Data availability for the user

The data from the **Heartbeat Monitoring** and **Heartbeat Verification** function can be made available in a variety of ways.

### 4.3.1 Device

#### **Heartbeat Monitoring**

The user can read the monitoring measured variables in the operating menu.

#### **Heartbeat Verification**

The Heartbeat Verification result is displayed in the operating menu.

### 4.3.2 Asset management system

#### **Heartbeat Monitoring**

The user can read the monitoring measured variables in the operating menu.

#### **Heartbeat Verification**

- Start the verification
- Upload, archive and document the verification results including detailed results

### 4.3.3 PLC system

#### **Heartbeat Monitoring**

The user can read the monitoring measured variables in the system.

#### **Heartbeat Verification**

The Heartbeat Verification result is displayed in the operating menu.

## 4.4 Data management

The results of a **Heartbeat Verification** are saved as a non-volatile parameter set in the measuring device memory:

- 8 storage locations available for parameter data records
- New verification results overwrite old data following the FIFO <sup>1)</sup> principle

The results can be documented in the form of a verification report using the Web server integrated in the measuring device the Endress+Hauser asset management software, FieldCare.

FieldCare also offers additional capabilities with the Flow Verification DTM:

- Archiving of verification results
- Export of data from these archives
- Trend analysis of verification results (line recorder function)

### 4.4.1 Data management via Web browser

Thanks to the integrated Web server the device can be operated and configured via a Web browser. In addition, it is possible to query the results of the verification and create a verification report.

#### **Printing a verification report**


A verification report is created in PDF format.

 Prerequisite: A verification has already been performed.

User interface in the Web browser following login:

---

1) First In – First Out

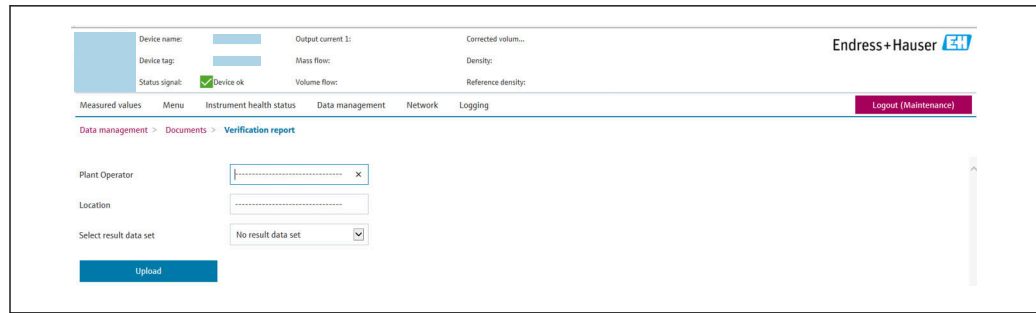

A0031439


1. Click the navigation buttons **Data management** → **Documents** → **Verification report**.
  - ↳ The input area for downloading verification reports is displayed.
2. Enter the necessary information in the **Plant operator** and **Location** fields.
  - ↳ The information entered here appears in the verification report.
3. Select the result data set.
  - ↳ A result data set is indicated as a time stamp in the drop-down list. If no verification has been performed, the message "No result data set" is displayed here.
4. Click **Upload**.
  - ↳ The Web server generates a verification report in PDF format.

#### 4.4.2 Data management via device DTM

With the device DTM, it is possible to operate the device and perform **Heartbeat Verification**. The results that are generated are displayed as a verification report and saved in PDF format.


#### 4.4.3 Data management via Flow Verification DTM


A special DTM (Flow Verification DTM) is available for **Heartbeat Verification**. The Flow Verification DTM offers advanced capabilities for managing and visualizing the results.

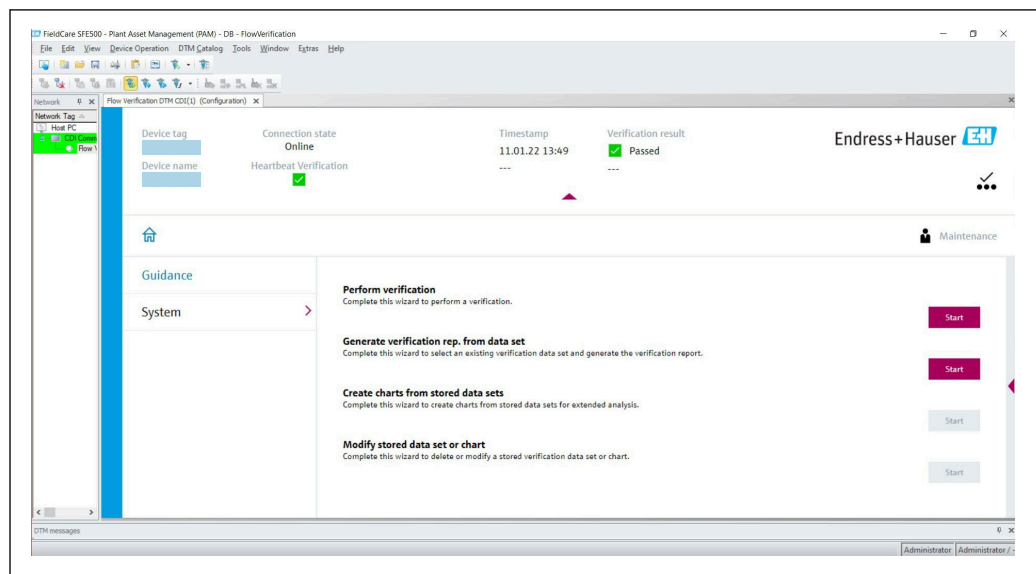


A0047634

- 2 Home page of "Flow Verification DTM" in FieldCare SFE500

 A wizard with help text guides you step-by-step through four different procedures.


Starting point	Description of procedure
<p><i>Perform verification</i></p> <p> <i>Online connection to device required.</i></p>	<p>Perform verification and create a verification report.</p>
<p><i>Create the verification report using a verification data record</i></p> <ul style="list-style-type: none"> <li>▪ from the device (online)</li> <li>▪ from the archive (offline)</li> </ul>	<p>Select an existing verification data record and create the verification report.</p>
<p><i>Create charts on selected diagnostic parameters from saved verification data records</i></p>	<p>Create charts on selected diagnostic parameters from archived verification data records for advanced analyses and trending.</p>
<p><i>Manage saved verification data records or chart templates</i></p>	<p>Delete or change archived verification data records or chart templates.</p>

### Perform verification

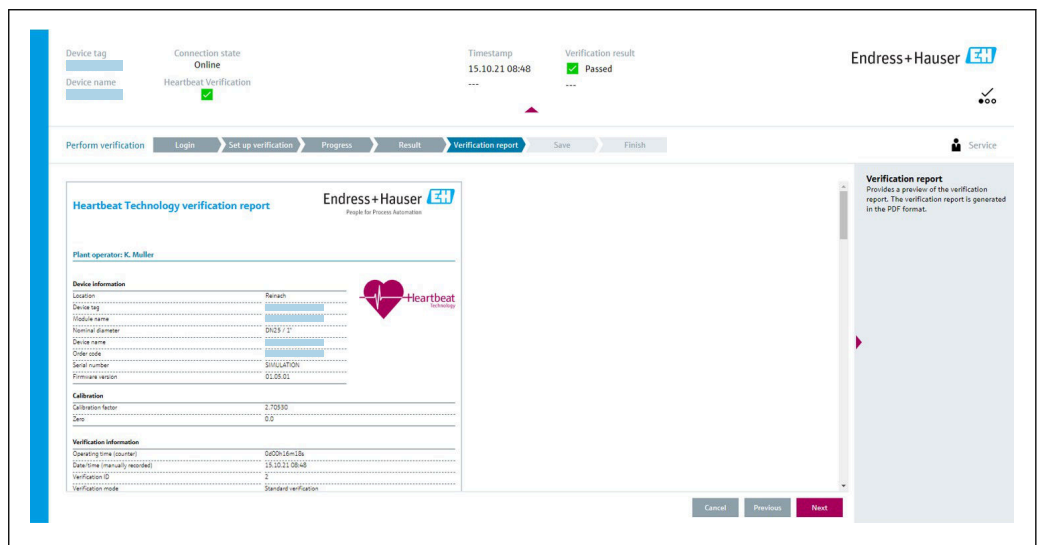


A0047643

 3 *Example: Displaying the verification report after performing verification*

 Online connection to device required.

### Creating the verification report using a verification data record

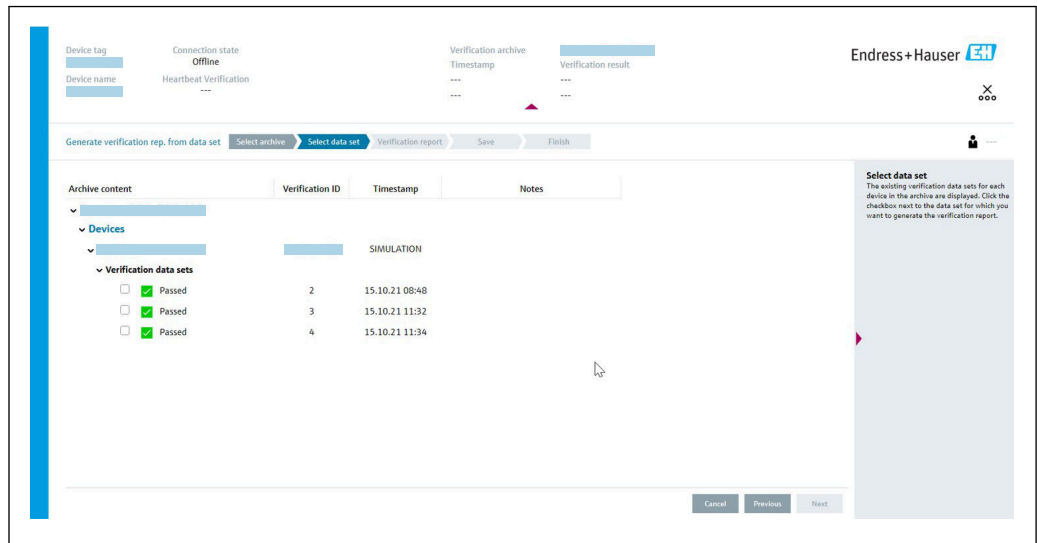

A0047644

4 Example: Creating the verification report using a verification data record

- i** Reading in the verification data record from the
  - Device: Online connection to device required.
  - Archive: Offline use sufficient.

### Creating charts on selected diagnostic parameters from saved verification data records




A0047645

5 Example: Creating self-edited charts on selected diagnostic parameters from saved verification data records

- i** It is possible to create templates.

### Managing saved verification data records or chart templates

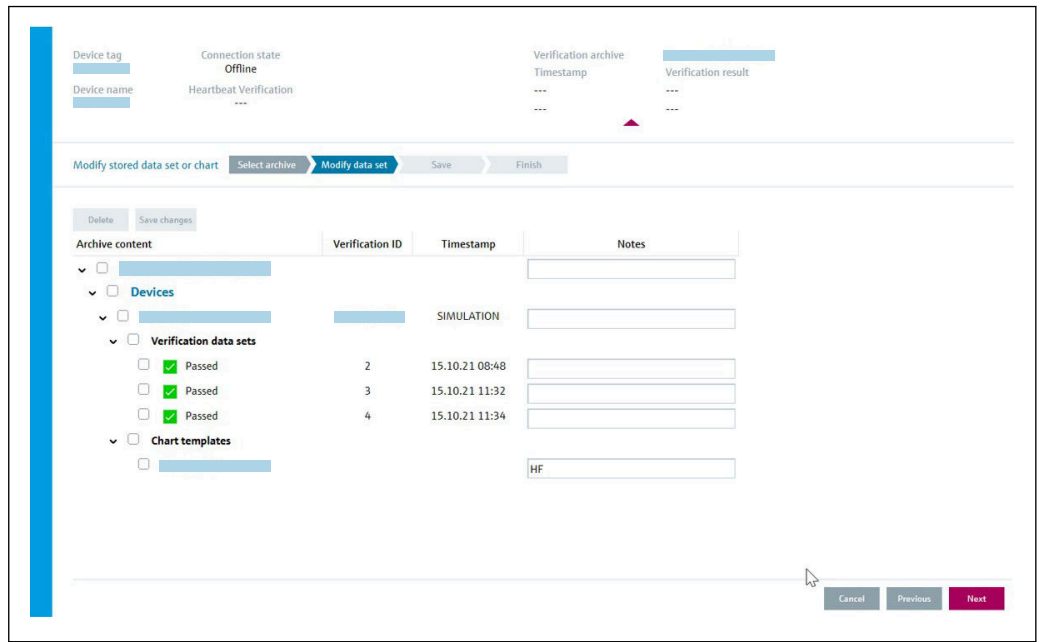

6 Example: Deleting or changing saved verification data records or chart templates



A0047646

## 5 Heartbeat Verification

Heartbeat Verification checks the device function within the specified measuring tolerance on demand. The result of the verification is "Passed" or "Failed".

The verification data are saved in the device and, optionally, are archived on a PC with the FieldCare asset management software. A verification report is generated automatically on the basis of these data to ensure the traceable documentation of the verification results.

Heartbeat Technology offers two ways to perform Heartbeat Verification:

- Standard verification →  18  
Verification is performed by the device without manual checking of external measured variables.
- Extended verification →  22  
Verification includes the entry of external measured variables.

### 5.1 Performance characteristics

**Heartbeat Verification** is performed on demand and supplements permanent self-monitoring with additional checks (coil circuit measurement, shot control circuit, electrode signal integrity).

Standard verification additionally checks the following analog inputs and outputs:

- 4 to 20 mA current output, active and passive
- Pulse/frequency output, active and passive
- 4 to 20 mA current input, active and passive
- Double pulse output, active and passive
- Relay output

Extended verification supports verification the following output modules:

- 4 to 20 mA current output, active and passive
- Pulse/frequency output, active and passive



 **Heartbeat Verification** does not check the digital inputs and outputs and does not output any result for them.

The verification is based on references that are incorporated in the measuring device, traceable from the factory and redundant in the device. **Heartbeat Verification** confirms on demand the device function with the total test coverage (TTC).

Assessed by an independent body: **Heartbeat Technology** meets the requirement for traceable verification according to DIN EN ISO 9001: 2015 Chapter 7.1.5.2 a) Control of monitoring and measuring equipment.

### 5.2 Commissioning

The configuration (factory reference) required as part of **Heartbeat Verification** is recorded during calibration at the factory and is permanently stored in the measuring device. When verifying in the application, the current situation of the measuring device is compared against this factory reference.

 Recommendation: During the process of commissioning the measuring device, an initial verification (and all additional verifications during the life cycle) is performed under process or reference conditions →  11.

The results are saved as the initial situation in the life cycle of the measuring device up to the 8th verification. From the 9th verification, it is recommended to upload the results using the verification DTM so that the data of the previous verifications is not lost.



### 5.2.1 Recording reference data

It is possible to manually record reference data relating to the operator and the location. These reference data appear on the verification report.

#### Navigation

"Setup" menu → Advanced setup → Heartbeat setup → Heartbeat base settings

#### Navigation

"Expert" menu → Diagnostics → Heartbeat → Heartbeat base settings

▶ Heartbeat base settings

Plant operator	→  17
Location	→  17
Partially filled pipe	→  17

#### Parameter overview with brief description

Parameter	Description	User entry / Selection	Factory setting
Plant operator	Enter the plant operator.	Max. 32 characters such as letters, numbers or special characters (e.g. @, %, /)	–
Location	Enter the location.	Max. 32 characters such as letters, numbers or special characters (e.g. @, %, /)	–
Partially filled pipe	Indicate, if the measuring tube is partially filled during the verification process in order to avoid evaluating the EPD electrode cable.	<ul style="list-style-type: none"> <li>▪ No</li> <li>▪ Yes</li> </ul>	No

## 5.3 Operation

### 5.3.1 General information

The **Heartbeat Verification** function can be used without restriction on a custody-transfer (CT) measuring device in the custody transfer mode.

### 5.3.2 Initial verification

▶ When commissioning the measuring device:

An initial verification is performed to archive the results as the initial situation in the life cycle of the measuring device. From the 9th verification onwards, an upload using the verification DTM is recommended.

Initial verification can be performed in 2 ways:

- Standard verification → 18
- Extended verification → 22

### 5.3.3 Device behavior and interpretation

#### Result is "Passed"

All test results are within the specifications.

If the calibration factor and the zero point match the factory settings, there is a high degree of certainty that the measuring device complies with the specification for flow.

Verification generally delivers the result "Passed" in most applications.

#### Result is "Failed"

One or more test results are outside the specifications.

If the result of the verification is "Failed", take the following measures:

1. Establish defined and stable process conditions.
  - ↳ Ensure a constant process temperature.  
Avoid wet gases, two-phase mixtures, pulsating flow, pressure shock and very high flow rates.
2. Repeat verification.
  - ↳ Repeat verification "Passed"  
If the result of the second verification is "Passed", the result of the first verification can be ignored. In order to identify possible deviations, compare the current process conditions with the process conditions of a previous verification.

If the result of the verification is "Failed" again, take the following measures:

1. Take remedial action on the basis of the verification results and the diagnostic information of the measuring device.
  - ↳ The cause of the error can be narrowed down if the test group that "Failed" the verification is identified.
2. Provide Endress+Hauser Service with the verification result with the current process conditions.
3. Check the calibration or calibrate the measuring device.
  - ↳ The calibration has the advantage that the "as found" measuring device state is recorded and the actual measured error is determined.




### 5.3.4 Standard verification

Standard verification is performed automatically by the device and without manual checking of external measured variables.

#### Diagnostic behavior


The device signals that standard verification is being performed: **△C302 Device verification in progress** diagnostic message

- Factory setting for diagnostic behavior: warning
- The device continues to measure.
- The last good value is output intermittently for 10 seconds.

- The signal outputs and totalizers are not affected.
  - All measured values during the verification are added to the totalizers.
  - Test duration: approx. 60 seconds.
-  ▪ The diagnostic behavior can be changed by the user if necessary:  
Expert → System → Diagnostic handling → Diagnostic behavior  
If **Alarm** is selected as the diagnostic behavior, the output of measured values is interrupted in the event of an error and the signal outputs and totalizers adopt the defined alarm condition.
- A category is assigned to the diagnostic message of the outputs in the **Diagnostic configuration** submenu.  
Expert → Communication → Diagnostic configuration  
If the device does not have outputs, they are output as an error. To prevent an error from being output, assign the **No effect (N)** option to any outputs that are not present on the device.
-  Detailed information on diagnostics and troubleshooting and on diagnostic information and associated troubleshooting measures can be found in the Operating Instructions →  6.

### Performing standard verification

#### Before verification starts

-  The date and time are saved with the current operating time and the verification results and also appear in the verification report.

The **Year** parameter, **Month**, **Day**, **Hour**, **AM/PM** and **Minute** are used to manually record the data at the time of verification.

1. Enter date and time.


#### Select the verification mode


2. In the **Verification mode** parameter, select the **Standard verification** option.


#### Starting the verification test





3. In the **Start verification** parameter, select the **Start** option.
  - ↳ While the verification is being performed, the progress of the verification is indicated as a % (bar graph indicator) in the **Progress** parameter.

#### Displaying the verification status and result

The current status of standard verification is displayed in the **Status** parameter (→  22):

- Done  
The verification test is finished.
- Busy  
The verification test is running.
- Not done  
A verification has not yet been performed on this measuring device.
- Failed  
A precondition for performing the verification has not been met, the verification cannot start (e.g. due to unstable process parameters) →  18.















The result of the verification is displayed in the **Overall result** parameter (→  22):

- Passed
  - All the verification tests were successful.
- Not done
  - A verification has not yet been performed on this measuring device.
- Failed
  - One or more verification tests were not successful →  18.
-  ■ The overall result of the last verification can always be accessed in the menu.
  - Navigation:
    - Diagnostics → Heartbeat Technology → Verification results
  - Detailed information on the verification result (test groups and test status) are shown in the verification report in addition to the overall result →  33.
  - If the device does not pass the verification, the results are saved nonetheless and indicated in the verification report.
  - This facilitates a targeted search for the cause of the fault →  18.

### "Performing verification" submenu

#### Navigation




"Diagnostics" menu → Heartbeat Technology → Performing verification

► Performing verification	
Year	→  21
Month	→  21
Day	→  21
Hour	→  21
AM/PM	→  21
Minute	→  21
Verification mode	→  21
External device information	→  21
Start verification	→  21
Remaining lockout period	→  22
Lockout period	→  22
Progress	→  22
Measured values	→  22
Output values	→  22


Status	→  22
Overall result	→  22

**Parameter overview with brief description**

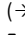Parameter	Prerequisite	Description	User entry / Selection / User interface	Factory setting
Year	Can be edited if Heartbeat Verification is not active.	Entry for date and time (field 1): enter the year verification is performed.	9 to 99	10
Month	Can be edited if Heartbeat Verification is not active.	Entry for date and time (field 2): enter the month verification is performed.	<ul style="list-style-type: none"> <li>▪ January</li> <li>▪ February</li> <li>▪ March</li> <li>▪ April</li> <li>▪ May</li> <li>▪ June</li> <li>▪ July</li> <li>▪ August</li> <li>▪ September</li> <li>▪ October</li> <li>▪ November</li> <li>▪ December</li> </ul>	January
Day	Can be edited if Heartbeat Verification is not active.	Entry for date and time (field 3): enter the day verification is performed.	1 to 31 d	1 d
Hour	Can be edited if Heartbeat Verification is not active.	Entry for date and time (field 4): enter the hour verification is performed.	0 to 23 h	12 h
AM/PM	Can be edited if Heartbeat Verification is not active.  The <b>dd.mm.yy hh:mm am/pm</b> option or the <b>mm/dd/yy hh:mm am/pm</b> option is selected in the <b>Date/time format</b> parameter (2812).	Entry for date and time (field 5): enter the morning or afternoon.	<ul style="list-style-type: none"> <li>▪ AM</li> <li>▪ PM</li> </ul>	AM
Minute	Can be edited if Heartbeat Verification is not active.	Entry for date and time (field 6): enter the minute verification is performed.	0 to 59 min	0 min
Verification mode	Can be edited if Heartbeat Verification is not active.	Select the verification mode. Standard verification Verification is performed automatically by the device and without manual checking of external measured variables.	Standard verification	Standard verification
External device information	With the following conditions: <ul style="list-style-type: none"> <li>▪ The <b>Extended verification</b> option is selected in the <b>Verification mode</b> parameter.</li> <li>▪ Can be edited if the verification status is not active.</li> </ul>	Record measuring equipment for extended verification.	Free text entry	-
Start verification	-	Start the verification. Start the verification with the <b>Start</b> option.	<ul style="list-style-type: none"> <li>▪ Cancel</li> <li>▪ Start</li> </ul>	Cancel

Parameter	Prerequisite	Description	User entry / Selection / User interface	Factory setting
Remaining lockout period	–	Shows the remaining number of hours until the lockout period has elapsed.	0 to 99 h	0 h
Lockout period	–	Enter the lockout period in hours. When the device is in custody transfer mode, it is not possible to perform a verification during this time.	0 to 99 h	48 h
Progress	–	Shows the progress of the process.	0 to 100 %	–
Measured values	One of the following options is selected in the <b>Start verification</b> parameter (→  21): <ul style="list-style-type: none"> <li>▪ Output 1 low value</li> <li>▪ Output 1 high value</li> <li>▪ Output 2 low value</li> <li>▪ Output 2 high value</li> <li>▪ Output 3 low value</li> <li>▪ Output 3 high value</li> <li>▪ Frequency output 1</li> <li>▪ Pulse output 1</li> <li>▪ Frequency output 2</li> <li>▪ Pulse output 2</li> <li>▪ Double pulse output</li> </ul>	Use this function to enter the measured values (actual values) for the external measured variables: <ul style="list-style-type: none"> <li>▪ Current output: Output current in [mA]</li> <li>▪ Pulse/frequency output: Output frequency in [Hz]</li> <li>▪ Double pulse output: Output frequency in [Hz]</li> </ul>	Signed floating-point number	0
Output values	–	Displays the simulated output values (target values) for the external measured variables: <ul style="list-style-type: none"> <li>▪ Current output: Output current in [mA].</li> <li>▪ Pulse/frequency output: Output frequency in [Hz].</li> </ul>	Signed floating-point number	–
Status	–	Displays the current status of the verification.	<ul style="list-style-type: none"> <li>▪ Done</li> <li>▪ Busy</li> <li>▪ Failed</li> <li>▪ Not done</li> </ul>	–
Verification result	–	Displays the overall result of the verification.  Detailed description of results classification: →  32	<ul style="list-style-type: none"> <li>▪ Not supported</li> <li>▪ Passed</li> <li>▪ Not done</li> <li>▪ Failed</li> </ul>	Not done

### 5.3.5 Extended verification

The extended verification supplements the standard verification with the output of various measured variables. During the verification process, these measured variables are recorded manually with the help of external measuring equipment, for example, and entered in the measuring device →  27. The value entered is checked and verified by the measuring device to ensure that it complies with the factory specifications. A status (Passed or Failed) is issued accordingly and is documented as an individual result of the verification and taken into account in the overall result.

Permanently predefined output signals, which do not represent the current measured value, are simulated during extended verification of the outputs. To measure the simulated signals, it may be necessary to set the higher-level process control system to a safe state beforehand. In order to perform a verification, the pulse/frequency/switch output must be enabled and assigned to a measured variable.



**Extended verification measured variables**

Output current (current output)

- Simulation of the measured values for every output physically present on the device
- Simulation "Low value" and "High value"
- Measurement of the two values
- Entry of the two measured values in the verification screen

Output frequency (pulse/frequency output)

- Simulation of the measured values for every output physically present on the device
- Simulation value pulse output: Simulated frequency depending on the pulse width configured
- Simulation value frequency output: Maximum frequency

 For more information on simulation, see the Operating Instructions →  6.

**Measuring equipment requirements**

*Recommendations for the measuring equipment*

DC current measuring uncertainty	±0.2 %
DC current resolution	10 µA
DC voltage measuring uncertainty	±0.1 %
DC voltage resolution	1 mV
Frequency measuring uncertainty	±0.1 %
Frequency resolution	1 Hz
Temperature coefficient	0.0075 %/°C

**Connecting the measuring equipment in the measuring circuit**** WARNING**

**Danger to persons from non-approved equipment in the hazardous area!**



- ▶ Only use intrinsically safe measuring equipment in hazardous zones.
- ▶ Measure intrinsically safe circuits with approved equipment only.
- ▶ Outputs (passive) for the hazardous area may only be connected to suitable intrinsically safe circuits.


*Determining the terminal assignment for the outputs*

The terminal assignment depends on the specific device version.


To determine the device-specific terminal assignment:

- See the adhesive label in the terminal cover
- Check the operating menu via the local display, Web browser or operating tool
  - Setup → I/O configuration → I/O module 1 to n terminal numbers
  - Expert → I/O configuration → I/O module 1 to n terminal numbers

 For detailed information on terminal assignment, see the Operating Instructions for the device →  6

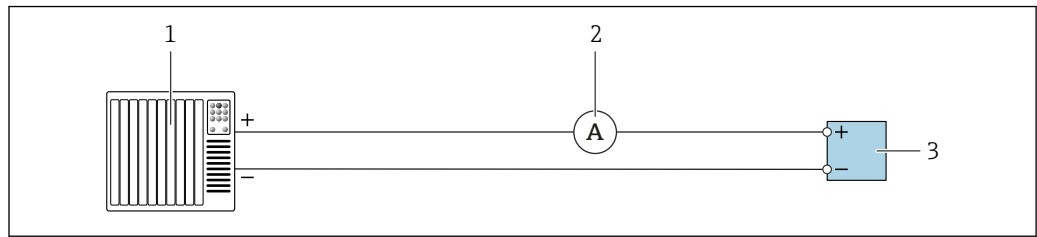*Active current output*

A0033916

 7 *Extended verification of the active current output*


- 1 Automation system with current input (e.g. PLC)
- 2 Ammeter
- 3 Transmitter

*Extended verification of the active current output*


- ▶ Connect the ammeter to the transmitter by looping it in series into the circuit.

If the automation system is switched off, the measuring circuit may be interrupted as a result. It is then not possible to perform a measurement. If this is the case, proceed as follows:

1. Disconnect the output cables of the current output (+/-) from the automation system.
2. Short the output cables of the current output (+ / -).
3. Connect the ammeter to the transmitter by looping it in series into the circuit.

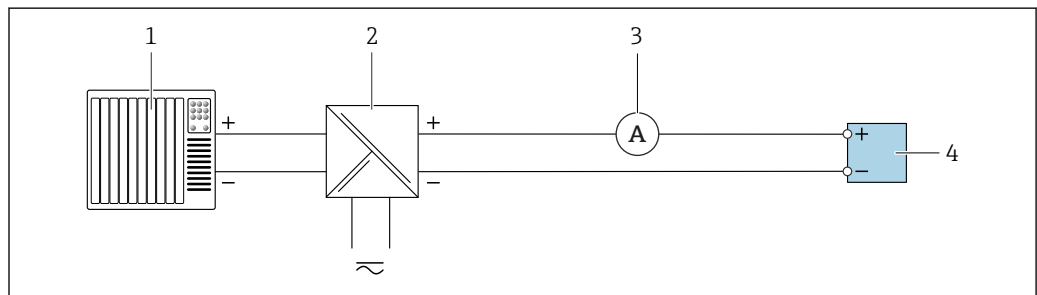*Passive current output*

A0034446

 8 *Extended verification of the passive current output*


- 1 Automation system with current input (e.g. PLC)
- 2 Power supply unit
- 3 Ammeter
- 4 Transmitter

*Extended verification of the passive current output*

1. Connect the ammeter to the transmitter by looping it in series into the circuit.
2. Connect the power supply unit.



Active pulse/frequency/switch output

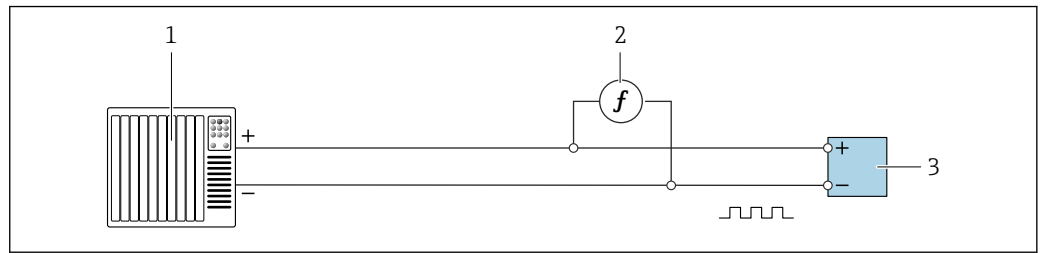


9 Extended verification of the active pulse/frequency output

- 1 Automation system with pulse/frequency input (e.g. PLC)
- 2 Frequency meter
- 3 Transmitter

Extended verification of the active pulse/frequency output

- ▶ Connect the frequency meter in parallel to the pulse/frequency output of the transmitter

Passive pulse/frequency/switch output

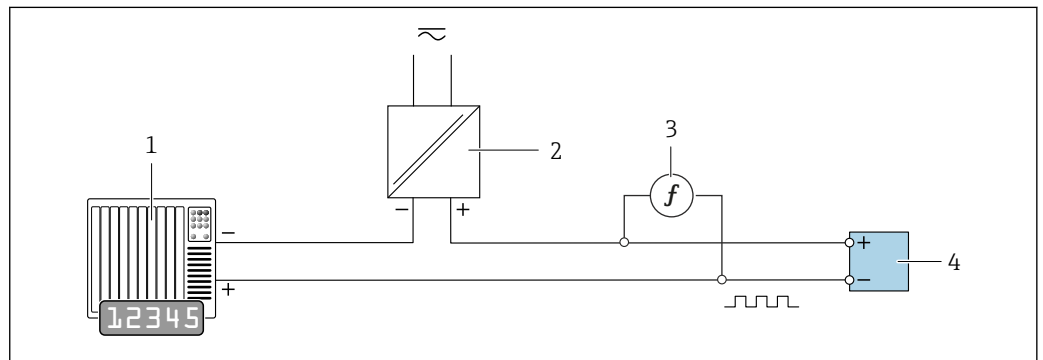

10 Extended verification of the passive pulse/frequency output

- 1 Automation system with pulse/frequency input (e.g. PLC)
- 2 Power supply unit
- 3 Frequency meter
- 4 Transmitter

Extended verification of the passive pulse/frequency output


1. Connect the power supply unit
2. Connect the frequency meter in parallel to the pulse/frequency output of the transmitter

Diagnostic behavior

A diagnostic event signals that extended verification is being performed:


- The screen alternates between the status signal "C" (Function Check) and the operational display:
  - Verification is currently active in the device.
- Different diagnostic behaviors, along with the relevant diagnostic codes, can be displayed depending on the device version.
  - The output selected under the **Start verification** parameter is always displayed, however:
    - Output 1...n low value** option, **Output 1...n high value** option



Diagnostic code	Diagnostic behavior	Options in Start verification
C491	<b>Current output 1 to n simulation</b> active	Output 1...n low value Output 1...n high value
C492	<b>Simulation frequency output 1 to n</b> active	Frequency output 1...n
C493	<b>Simulation pulse output 1 to n</b> active	Pulse output 1...n
C302	<b>△C302 Device verification in progress</b>	

 An extended verification (simulation mode) may be started only if the process plant is not in the automatic mode.

If the **Start** option is selected in the **Start verification** parameter, the following diagnostic event is shown on the display (2nd part of external verification): **△C302 Device verification in progress** diagnostic message

- Factory setting for diagnostic behavior: warning
- The device continues to measure.
- The last good value is output intermittently for 10 seconds.
- All measured values during the verification are added to the totalizers.
- Test duration (all outputs switched on): approx. 60 seconds.

-  ▪ The diagnostic behavior can be changed by the user if necessary:  
Expert → System → Diagnostic handling → Diagnostic behavior  
If **Alarm** is selected as the diagnostic behavior, the output of measured values is interrupted in the event of an error and the signal outputs and totalizers adopt the defined alarm condition.
- A category is assigned to the diagnostic message of the outputs in the **Diagnostic configuration** submenu.  
Expert → Communication → Diagnostic configuration  
If the device does not have outputs, they are output as an error. To prevent an error from being output, assign the **No effect (N)** option to any outputs that are not present on the device.

 Detailed information on diagnostics and troubleshooting and on diagnostic information and associated troubleshooting measures can be found in the Operating Instructions →  6.

### Performing extended verification


A full standard verification is performed in the course of the verification. The validity of the entered and measured values of the outputs is checked. Additional standard verification of the outputs does not take place.

#### NOTICE

**If the electrical connections have not been established and the ammeter is not looped in during verification, extended verification is not possible.**

- ▶ Establish the electrical connection before starting the extended verification.
- ▶ Loop in ammeter before extended verification starts.

### Before verification starts

 The date and time are saved with the current operating time and the verification results and also appear in the verification report.

The **Year** parameter, **Month**, **Day**, **Hour**, **AM/PM** and **Minute** are used to manually record the data at the time of verification.

1. Enter date and time.



### Select the verification mode

2. In the **Verification mode** parameter, select the **Extended verification** option.

### Further parameter settings

3. In the **External device information** parameter, enter a unique ID (e.g. serial number) of the measuring equipment used (max. 32 characters).
4. In the **Start verification** parameter, select one of the options available (e.g. the **Output 1 low value** option).
5. In the **Measured values** parameter, enter the value shown on the external measuring equipment.
6. Repeat steps 4 and 5 until all the output options are checked.
7. Adhere to the sequence indicated and enter the measured values.


The duration of the process and number of outputs depend on the device configuration, on whether the output is switched on and on whether the output is active or passive.

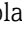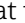
The value displayed in the **Output values** parameter (→  22) shows the value simulated by the device at the selected output →  23


### Starting the verification test





8. In the **Start verification** parameter, select the **Start** option.
  - ↳ While the verification is being performed, the progress of the verification is indicated as a % (bar graph indicator) in the **Progress** parameter.

### Displaying the verification status and result

The current status of standard verification is displayed in the **Status** parameter (→  22):

- Done  
The verification test is finished.
- Busy  
The verification test is running.
- Not done  
A verification has not yet been performed on this measuring device.
- Failed  
A precondition for performing the verification has not been met, the verification cannot start (e.g. due to unstable process parameters) →  18.

The result of the verification is displayed in the **Overall result** parameter (→  22):

- Passed  
All the verification tests were successful.
  - Not done  
A verification has not yet been performed on this measuring device.
  - Failed  
One or more verification tests were not successful →  18.
-  The overall result of the last verification can always be accessed in the menu.
- Navigation:  
Diagnostics → Heartbeat Technology → Verification results
  - Detailed information on the verification result (test groups and test status) are shown in the verification report in addition to the overall result →  33.
  - If the device does not pass the verification, the results are saved nonetheless and indicated in the verification report.
  - This facilitates a targeted search for the cause of the fault →  18.

### "Performing verification" submenu

#### Navigation







"Diagnostics" menu → Heartbeat Technology → Performing verification




► Performing verification

Year	→  28
Month	→  28
Day	→  29
Hour	→  29
AM/PM	→  29
Minute	→  29
Verification mode	→  29
External device information	→  29
Start verification	→  29
Remaining lockout period	→  30
Lockout period	→  30
Progress	→  30
Measured values	→  30
Output values	→  30
Status	→  30
Verification result	→  30

### Parameter overview with brief description

Parameter	Prerequisite	Description	User entry / Selection / User interface	Factory setting
Year	Can be edited if Heartbeat Verification is not active.	Entry for date and time (field 1): enter the year verification is performed.	9 to 99	10
Month	Can be edited if Heartbeat Verification is not active.	Entry for date and time (field 2): enter the month verification is performed.	<ul style="list-style-type: none"> <li>▪ January</li> <li>▪ February</li> <li>▪ March</li> <li>▪ April</li> <li>▪ May</li> <li>▪ June</li> <li>▪ July</li> <li>▪ August</li> <li>▪ September</li> <li>▪ October</li> <li>▪ November</li> <li>▪ December</li> </ul>	January

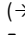Parameter	Prerequisite	Description	User entry / Selection / User interface	Factory setting
Day	 Can be edited if Heartbeat Verification is not active.	Entry for date and time (field 3): enter the day verification is performed.	1 to 31 d	1 d
Hour	 Can be edited if Heartbeat Verification is not active.	Entry for date and time (field 4): enter the hour verification is performed.	0 to 23 h	12 h
AM/PM	 Can be edited if Heartbeat Verification is not active.  The <b>dd.mm.yy hh:mm am/pm</b> option or the <b>mm/dd/yy hh:mm am/pm</b> option is selected in the <b>Date/time format</b> parameter (2812).	Entry for date and time (field 5): enter the morning or afternoon.	<ul style="list-style-type: none"> <li>▪ AM</li> <li>▪ PM</li> </ul>	AM
Minute	 Can be edited if Heartbeat Verification is not active.	Entry for date and time (field 6): enter the minute verification is performed.	0 to 59 min	0 min
Verification mode	 Can be edited if Heartbeat Verification is not active.	Select the verification mode.  Extended verification Standard verification is extended by the additional entry of external measured variables: <b>Measured values</b> parameter.	Extended verification	Standard verification
External device information	With the following conditions: <ul style="list-style-type: none"> <li>▪ The <b>Extended verification</b> option is selected in the <b>Verification mode</b> parameter.</li> <li>▪ Can be edited if the verification status is not active.</li> </ul>	Record measuring equipment for extended verification.	Free text entry	–
External reference voltage 1	–	Use this function to enter the reference voltage.   The external reference voltage can be measured at the GND and REF terminals.	Signed floating-point number	2.5 V
Start verification	–	Start the verification.  To carry out a complete verification, select the selection parameters individually. Once the external measured values have been recorded, verification is started using the <b>Start</b> option.	<ul style="list-style-type: none"> <li>▪ Cancel</li> <li>▪ Output 1 low value<sup>*</sup></li> <li>▪ Output 1 high value<sup>*</sup></li> <li>▪ Output 2 low value<sup>*</sup></li> <li>▪ Output 2 high value<sup>*</sup></li> <li>▪ Output 3 low value<sup>*</sup></li> <li>▪ Output 3 high value<sup>*</sup></li> <li>▪ Frequency output 1<sup>*</sup></li> <li>▪ Pulse output 1<sup>*</sup></li> <li>▪ Frequency output 2<sup>*</sup></li> <li>▪ Pulse output 2<sup>*</sup></li> <li>▪ Double pulse output<sup>*</sup></li> <li>▪ Start</li> </ul>	Cancel

Parameter	Prerequisite	Description	User entry / Selection / User interface	Factory setting
Remaining lockout period	–	Shows the remaining number of hours until the lockout period has elapsed.	0 to 99 h	0 h
Lockout period	–	Enter the lockout period in hours. When the device is in custody transfer mode, it is not possible to perform a verification during this time.	0 to 99 h	48 h
Progress	–	Shows the progress of the process.	0 to 100 %	–
Measured values	One of the following options is selected in the <b>Start verification</b> parameter (→  21): <ul style="list-style-type: none"> <li>▪ Output 1 low value</li> <li>▪ Output 1 high value</li> <li>▪ Output 2 low value</li> <li>▪ Output 2 high value</li> <li>▪ Output 3 low value</li> <li>▪ Output 3 high value</li> <li>▪ Frequency output 1</li> <li>▪ Pulse output 1</li> <li>▪ Frequency output 2</li> <li>▪ Pulse output 2</li> <li>▪ Double pulse output</li> </ul>	Use this function to enter the measured values (actual values) for the external measured variables: <ul style="list-style-type: none"> <li>▪ Current output: Output current in [mA]</li> <li>▪ Pulse/frequency output: Output frequency in [Hz]</li> <li>▪ Double pulse output: Output frequency in [Hz]</li> </ul>	Signed floating-point number	0
Output values	–	Displays the simulated output values (target values) for the external measured variables: <ul style="list-style-type: none"> <li>▪ Current output: Output current in [mA].</li> <li>▪ Pulse/frequency output: Output frequency in [Hz].</li> </ul>	Signed floating-point number	–
Status	–	Displays the current status of the verification.	<ul style="list-style-type: none"> <li>▪ Done</li> <li>▪ Busy</li> <li>▪ Failed</li> <li>▪ Not done</li> </ul>	–
Verification result	–	Displays the overall result of the verification.  Detailed description of results classification: →  32	<ul style="list-style-type: none"> <li>▪ Not supported</li> <li>▪ Passed</li> <li>▪ Not done</li> <li>▪ Failed</li> </ul>	Not done

\* Visibility depends on order options or device settings

### 5.3.6 Verification results

Access to the verification results:

In the operating menu via the local display, operating tool or Web browser

- Diagnostics → Heartbeat Technology → Verification results
- Expert → Diagnostics → Heartbeat Technology → Verification results

#### Navigation




"Diagnostics" submenu → Heartbeat → Verification results





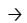
**Navigation**

"Expert" menu → Diagnostics → Heartbeat → Verification results

▶ Verification results		
Date/time (manually entered)		→ ⓘ 31
Verification ID		→ ⓘ 31
Operating time		→ ⓘ 31
Verification result		→ ⓘ 31
Sensor		→ ⓘ 31
Sensor electronic module (ISEM)		→ ⓘ 31
I/O module		→ ⓘ 32
System status		→ ⓘ 32

**Parameter overview with brief description**

Parameter	Prerequisite	Description	User interface	Factory setting
Date/time (manually entered)	The verification has been performed.	Date and time.	dd.mmmm.yyyy; hh:mm	1 January 2010; 12:00
Verification ID	The verification has been performed.	Displays consecutive numbering of the verification results in the measuring device.	0 to 65535	0
Operating time	The verification has been performed.	Indicates how long the device has been in operation up to the verification.	Days (d), hours (h), minutes (m), seconds (s)	-
Verification result	-	Displays the overall result of the verification.  Detailed description of results classification: → ⓘ 32	<ul style="list-style-type: none"> <li>▪ Not supported</li> <li>▪ Passed</li> <li>▪ Not done</li> <li>▪ Failed</li> </ul>	Not done
Sensor	The <b>Failed</b> option result is shown in the <b>Overall result</b> parameter.	Displays the result for the sensor.  Detailed description of results classification: → ⓘ 32	<ul style="list-style-type: none"> <li>▪ Not supported</li> <li>▪ Passed</li> <li>▪ Not done</li> <li>▪ Failed</li> </ul>	Not done
Sensor electronic module (ISEM)	The <b>Failed</b> option result is shown in the <b>Overall result</b> parameter.	Displays the result for the sensor electronics module (ISEM).  Detailed description of results classification: → ⓘ 32	<ul style="list-style-type: none"> <li>▪ Not supported</li> <li>▪ Passed</li> <li>▪ Not done</li> <li>▪ Failed</li> </ul>	Not done

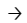Parameter	Prerequisite	Description	User interface	Factory setting
I/O module	In the <b>Overall result</b> parameter, the <b>Failed</b> option was displayed.	<p>Displays the result for I/O module monitoring of the I/O module.</p> <ul style="list-style-type: none"> <li>▪ For current output: Accuracy of the current</li> <li>▪ For pulse output: Accuracy of the pulses</li> <li>▪ For frequency output: Accuracy of the frequency</li> <li>▪ Current input: Accuracy of the current</li> <li>▪ Double pulse output: Accuracy of the pulses</li> <li>▪ Relay output: Number of switching cycles</li> </ul> <p> <b>Heartbeat Verification</b> does not check the digital inputs and outputs and does not output any result for them.</p> <p> Detailed description of results classification: →  32</p>	<ul style="list-style-type: none"> <li>▪ Not supported</li> <li>▪ Passed</li> <li>▪ Not done</li> <li>▪ Not plugged</li> <li>▪ Failed</li> </ul>	Not done
System status	The <b>Failed</b> option result is shown in the <b>Overall result</b> parameter.	<p>Displays the system condition. Tests the measuring device for active errors.</p> <p> Detailed description of results classification: →  32</p>	<ul style="list-style-type: none"> <li>▪ Not supported</li> <li>▪ Passed</li> <li>▪ Not done</li> <li>▪ Failed</li> </ul>	Not done

## Classification of results

### Individual results


Result	Description
Failed	At least one individual test in the test group was outside the specifications.
Not used	The result is used for internal purposes.
Passed	All individual tests in the test group complied with the specifications. The result is also "Passed" if the result of an individual test is "Check not done" and the result of all other tests is "Passed".
Not done	No test has been performed for this test group.
Not plugged	The result is displayed if no I/O module is plugged into the slot.

### Overall results

Result	Description
Failed	At least one test group was outside the specifications.
Not used	The result is used for internal purposes.
Passed	All verified test groups complied with the specifications (result "Passed"). The overall result is also "Passed" if the result for an individual test group is "Check not done" and the result for all other test groups is "Passed".




Result	Description
Not done	No verification was performed for any of the test groups (result for all test groups is "Check not done").
Not plugged	The result is displayed if no I/O module is plugged into the slot.

 **Heartbeat Verification** confirms the device function within the specified measuring tolerance on demand. Based on redundant references in the device which are traceable from the factory, **Heartbeat Technology** meets all the requirements concerning traceable device verification according to DIN ISO 9001: 2015 Chapter 7.1.5.2 a).

### Test groups

Test group	Description
Sensor	Electrical components of the sensor (signals, circuits and cables)
Sensor electronics module (ISEM)	Electronics module for activating and converting the sensor signals
I/O module	Results of the input and output modules installed on the measuring device
System condition	Test for active measuring device errors of "alarm"-type diagnostic behavior

For more information on the test groups and individual tests .

 The results for a test group (e.g. sensor) contain the result of several individual tests. All the individual tests must be passed for the test group to pass.

The same applies to the overall result: All the test groups must pass for the overall result to be "passed". Information on the individual tests is provided in the verification report and the individual test group results which can be accessed with the Flow Verification DTM.

### Limit values

#### I/O module

Input; Output	Standard verification	Extended verification
Current output 4 to 20 mA, active and passive	<ul style="list-style-type: none"> <li>▪ <math>\pm 1\%</math></li> <li>▪ <math>\pm 100\ \mu\text{A}</math> (offset)</li> </ul>	<ul style="list-style-type: none"> <li>▪ Lower value 4mA: <math>\pm 1\%</math></li> <li>▪ Upper value 20mA: <math>\pm 0.5\%</math></li> </ul>
Pulse/frequency/switch output, active and passive	$\pm 0.05\%$ , with a 120 s cycle	<ul style="list-style-type: none"> <li>▪ Pulse: <math>\pm 0.3\%</math></li> <li>▪ Frequency: <math>\pm 0.3\%</math></li> </ul>
Current input 4 to 20 mA, active and passive	<ul style="list-style-type: none"> <li>▪ <math>-20\%</math>: <math>24\ \text{V} - 20\% = 19.2\ \text{V}</math></li> <li>▪ In addition: <math>-5\%</math>: <math>19.2\ \text{V} - 5\%</math></li> </ul>	Only standard verification possible.
Double pulse output, active and passive	$\pm 0.05\%$ , with a 120 s cycle	Only standard verification possible.
Relay output	The number of switching cycles depends on the hardware	Only standard verification possible.

### 5.3.7 Detailed verification results

The process conditions at the time of verification and the individual test group results can be accessed with the Flow Verification DTM.

- Process conditions: "VerificationDetailedResults → VerificationActualProcessConditions"
- Verification results: "VerificationDetailedResults → VerificationSensorResults"

### Process conditions


To increase the comparability of the results, the process conditions that apply at the time of verification are recorded and documented as process conditions on the last page of the verification report.



Process conditions	Description
Volume flow verification value	Current measured value for volume flow
Conductivity verification value	Current measured value for medium conductivity (if switched on)
Current potential difference	Current measured value for potential difference
Current potential of electrode 1	Current measured value for potential of electrode 1
Current potential of electrode 2	Current measured value for potential of electrode 2
Current potential of pipe GND electrode	Current measured value for potential of pipe GND electrode
Process temperature verification value	Current measured value for medium temperature (if available)
Electronic temperature	Current measured value for the electronic temperature in the transmitter
HSBI	Current measured value of HBSI (relative change of magnetic system)
Buildup index	Current measured value of build-up detection

### Individual test group results

The individual test group results listed below provide information on the results of the individual tests within a test group.

#### Sensor

Parameter/individual test	Description	Result/limit value	Interpretation/cause/remedial measures
Rise time symmetry	Monitoring of symmetry in the exciter circuit for coil current shot times while both field polarities are changed.	No value range <ul style="list-style-type: none"> <li>■ Passed</li> <li>■ Failed</li> <li>■ Not done</li> </ul>	<ul style="list-style-type: none"> <li>■ EMC interference</li> <li>■ Defective H-bridge in the amplifier</li> </ul>
Holding voltage symmetry	Monitoring of symmetry in holding voltages of exciter circuit for setting the coil current for both field polarities.	No value range <ul style="list-style-type: none"> <li>■ Passed</li> <li>■ Failed</li> <li>■ Not done</li> </ul>	<ul style="list-style-type: none"> <li>■ EMC interference</li> <li>■ Defective H-bridge in the amplifier</li> </ul>
Coil current loss	Monitoring of the coil current path for leak current. Comparison of incoming and outgoing currents.	No value range <ul style="list-style-type: none"> <li>■ Passed</li> <li>■ Failed</li> <li>■ Not done</li> </ul>	Sensor short-circuit. Check entire sensor system: <ul style="list-style-type: none"> <li>▶ Check for moisture (e.g. condensation)</li> <li>▶ Check for faulty sensor and cable connections or interfaces</li> <li>▶ Check coils</li> <li>▶ Check insulation resistance</li> </ul>
Coil current stability	Monitoring the correct adjustment of the coil current.	No value range <ul style="list-style-type: none"> <li>■ Passed</li> <li>■ Failed</li> <li>■ Not done</li> </ul>	EMC interference
Coil resistance	Monitoring of the coil resistance.	No value range <ul style="list-style-type: none"> <li>■ Passed</li> <li>■ Failed</li> <li>■ Not done</li> </ul>	<ul style="list-style-type: none"> <li>■ Faulty connections: check the outer connection parts, clamp connections and connecting cables</li> <li>■ Process temperature too high</li> <li>■ Coil in the sensor is defective</li> </ul>
Electrode circuit 1	Monitoring of the impedance in electrode circuit 1.	No value range <ul style="list-style-type: none"> <li>■ Passed</li> <li>■ Failed</li> <li>■ Not done</li> </ul>	Electrode cable defective  The test is not performed if the measuring tube is empty Status indicated: "Not done"

Parameter/individual test	Description	Result/limit value	Interpretation/cause/remedial measures
Electrode circuit 2	Monitoring of the impedance in electrode circuit 2.	No value range <ul style="list-style-type: none"> <li>■ Passed</li> <li>■ Failed</li> <li>■ Not done</li> </ul>	Electrode cable defective  The test is not performed if the measuring tube is empty Status indicated: "Not done"
EPD electrode circuit	Monitoring of the impedance in the EPD circuit.	No value range <ul style="list-style-type: none"> <li>■ Passed</li> <li>■ Failed</li> <li>■ Not done</li> </ul>	EPD cable defective  The test is not performed if the measuring tube is empty Status indicated: "Not done"




*Sensor electronics module (ISEM)*

Parameter/individual test	Description	Result/limit value	Interpretation/cause/remedial measures
Supply voltage	All the relevant supply voltages are checked. Monitoring of the supply voltage for the sensor electronics module guarantees that the system is functioning correctly.	No value range <ul style="list-style-type: none"> <li>■ Passed</li> <li>■ Failed</li> <li>■ Not done</li> </ul>	Sensor electronics module (ISEM) defective <ul style="list-style-type: none"> <li>▶ Replace sensor electronics module (ISEM)</li> </ul>
Linearity and reference voltage	<ul style="list-style-type: none"> <li>■ Monitoring of flowmeter circuit with regard to gain and linearity.</li> <li>■ Monitoring of reference voltages in flowmeter circuit and exciter circuit</li> </ul>	No value range <ul style="list-style-type: none"> <li>■ Passed</li> <li>■ Failed</li> <li>■ Not done</li> </ul>	Sensor electronics module (ISEM) defective <ul style="list-style-type: none"> <li>▶ Replace sensor electronics module (ISEM)</li> </ul>
Offset electrode signal amplifier	Monitoring of flow measurement amplifier with regard to zero point.	No value range <ul style="list-style-type: none"> <li>■ Passed</li> <li>■ Failed</li> <li>■ Not done</li> </ul>	Sensor electronics module (ISEM) defective <ul style="list-style-type: none"> <li>▶ Replace sensor electronics module (ISEM)</li> </ul>
Hold voltage feedback	The configured hold voltage is fed back to ensure the secure and constant functioning of the hold voltage.	No value range <ul style="list-style-type: none"> <li>■ Passed</li> <li>■ Failed</li> <li>■ Not done</li> </ul>	Sensor electronics module (ISEM) defective <ul style="list-style-type: none"> <li>▶ Replace sensor electronics module (ISEM)</li> </ul>
Overvoltage feedback	The overvoltage is fed back to ensure the secure and constant functioning of the overvoltage.	No value range <ul style="list-style-type: none"> <li>■ Passed</li> <li>■ Failed</li> <li>■ Not done</li> </ul>	Sensor electronics module (ISEM) defective
Electronic current loss	Monitoring of the coil current path for leak current.	No value range <ul style="list-style-type: none"> <li>■ Passed</li> <li>■ Failed</li> <li>■ Not done</li> </ul>	Sensor electronics module (ISEM) defective
Coil current measurement	Monitoring of low-side current measurement.	No value range <ul style="list-style-type: none"> <li>■ Passed</li> <li>■ Failed</li> <li>■ Not done</li> </ul>	Sensor electronics module (ISEM) defective
Overvoltage circuit	Monitoring of overvoltage.	No value range <ul style="list-style-type: none"> <li>■ Passed</li> <li>■ Failed</li> <li>■ Not done</li> </ul>	Sensor electronics module (ISEM) defective
Electrode signal integrity	Monitoring of input stage, sensor and electrode cable.	No value range <ul style="list-style-type: none"> <li>■ Passed</li> <li>■ Failed</li> <li>■ Not done</li> </ul>	One of the electrode signals is missing. This can be due to the following: <ul style="list-style-type: none"> <li>■ Sensor electronics module (ISEM) defective</li> <li>■ Faulty connection to the sensor</li> <li>■ Electrode short-circuit or open circuit</li> <li>■ Sensor defective</li> </ul>


*System condition*

Parameter/individual test	Description	Result/limit value	Interpretation/cause/remedial measures
System condition	System condition monitoring	No value range <ul style="list-style-type: none"> <li>■ Passed</li> <li>■ Failed</li> <li>■ Not done</li> </ul>	<b>Causes</b> System error during verification <b>Corrective action</b> <ul style="list-style-type: none"> <li>▶ Check diagnostic event in the <b>Event logbook</b> submenu.</li> </ul>

*I/O modules*

Parameter/individual test	Description	Result/limit value	Interpretation/cause/remedial measures
Output 1 to n	Check of all the input and output modules installed at the measuring device →  16	No value range <ul style="list-style-type: none"> <li>■ Passed</li> <li>■ Failed</li> <li>■ Not done</li> </ul>  Limit values →  33	<b>Causes</b> <ul style="list-style-type: none"> <li>■ Output values out of specification</li> <li>■ I/O modules defective</li> </ul> <b>Measures</b> <ul style="list-style-type: none"> <li>▶ Check cabling.</li> <li>▶ Check connections.</li> <li>▶ Check load (current output).</li> <li>▶ Replace the I/O module.</li> </ul>

### 5.3.8 Verification report

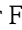The results of the verification can be documented in the form of a verification report via the Web server or FieldCare operating tool →  11. The verification report is created on the basis of the data records saved in the measuring device after verification. As the verification results are automatically and uniquely identified with a verification ID and the operating time, they are suitable for the traceable documentation of the verification of flowmeters.


#### First page: identification

Measuring point identification, identification of the verification results and confirmation of completion:

- System operator
  - Customer reference
- Device information
  - Information on the place of operation (tag) and the current configuration of the measuring point
  - Management of the information in the device
  - Display on the verification report
- Calibration
  - Information on the calibration factor and zero point setting for the sensor
  - These values must correspond to those from the last calibration or repeat calibration in order to comply with factory specifications
- Verification information
  - The operating time and verification ID are used to uniquely assign the verification results for the traceable documentation of the verification
  - Storage and display of the manual date and time entry as well as the current operating time in the device
  - Verification mode: standard verification or extended verification
- Overall verification result
  - Overall result of the verification passed if all of the individual results are passed

#### Second page: test results

Details on the individual results for all test groups:

- System operator
- Test groups →  33
  - Sensor
    - Sensor electronics module (ISEM)
  - System condition
  - I/O module

#### Third page (and subsequent pages): measured values and visualization

Numerical values and graphic presentation of all the values recorded:

- System operator
- Test object
- Unit
- Current: measured value
- Min.: lower limit
- Max.: upper limit
- Visualization: graphic presentation of the measured value, within the lower and upper limits.

#### Last page: process conditions

Information on the process conditions that applied during the verification:

- Volume flow
- Conductivity
- Electronic temperature
- HBSI
- Current potential difference
- Current potential of electrode 1

- Current potential of electrode 2
- Current potential of pipe GND electrode
- Build-up index value (only with the Heartbeat Verification + Monitoring application package)

As a prerequisite for the validity of the verification report, the **Heartbeat Verification** feature must be activated on the measuring device concerned and must have been performed by an operator tasked to carry out this job by the customer. Alternatively, an Endress+Hauser service technician or a service provider authorized by Endress+Hauser can be tasked with performing the verification.

 Individual test groups and description of individual tests: →  33


### 5.3.9 Interpreting and using the verification results

**Heartbeat Verification** uses the self-monitoring function of the Proline flowmeters to check the measuring device functionality. During the verification process, the system checks whether the measuring device components comply with the factory specifications. Both the sensor and the electronics modules are included in the tests.

Compared to flow calibration, which incorporates the entire measuring device and assesses the flow measuring performance directly (primary measured variable), **Heartbeat Verification** checks the function of the measuring chain from the sensor to the outputs.

Here, the function checks device-internal parameters that are correlated with flow measurement (secondary measured variables, comparative values). The check is based on reference values that were recorded during the factory calibration.



If a verification is passed, this confirms that the comparative values checked are within the factory specification and that the measuring device is working correctly. At the same time, zero point and calibration factor of the sensor can be traced via the verification report. To ensure that the measuring device complies with the factory specification, these values must correspond to those of the last calibration or repeat calibration.

-  ■ Confirmation of compliance with the flow specification with 100 % test coverage can only be obtained by verifying the primary measured variable (flow) by means of recalibration or proving.
- **Heartbeat Verification** confirms on demand that the device is functioning within the specified measuring tolerance and the specified total test coverage TTC.



#### Recommended course of action if the result of a verification is "Failed"

If the result of a verification is **Failed**, it is advisable to begin by repeating the verification.

Ideally, ensure defined and stable process conditions in order to rule out process-specific influences as much as possible. When repeating the verification, it is advisable to compare the current process conditions to those of the previous verification in order to identify any deviations.

-  The process conditions of the previous verification are documented on the last page of the verification report and can be accessed using the Flow Verification DTM →  33.

#### *Additional remedial measures if the result of a verification is "Failed"*

- Calibrate the measuring device  
The calibration has the advantage that the "as found" measuring device state is recorded and the actual measured error is determined.
- Direct remedial measures  
Take remedial action on the basis of the verification results and the diagnostic information of the measuring device. Narrow down the possible cause of the error by identifying the test group that **failed** the verification.
-  Detailed information on diagnostics and troubleshooting and on diagnostic information and associated troubleshooting measures can be found in the Operating Instructions →  6.

## 6 Heartbeat Monitoring

With Heartbeat Monitoring, additional measured values are output continuously and monitored in an external Condition Monitoring system so that changes to the measuring device and in the process can be detected at an early stage. The measured variables can be interpreted in a Condition Monitoring system. The information obtained in this way helps users to control measures concerning maintenance or process optimization. Possible applications of Condition Monitoring include the detection of the formation of build-up or wear as a result of corrosion.

### 6.1 Commissioning

Assign the diagnostic parameters to the outputs for commissioning. After commissioning, the parameters are available at the outputs and in case of digital communication they are generally continuously available.


#### Enabling or disabling Heartbeat Monitoring

The output of the HBSI and build-up index diagnostic parameters is switched on or off in the operating menu:

→  40


#### 6.1.1 Description of the monitoring parameters

The following diagnostic parameters can be assigned to the various outputs of the measuring device for continuous transmission to a condition monitoring system.

 Some measured variables are only available if the **Heartbeat Verification + Monitoring** application package is enabled in the measuring device.

Parameter	Description	Value range
Noise <sup>1)</sup>	Degree to which the differential signal from both measuring electrodes is dispersed	0 to $+3.0 \cdot 10^{+38}$
Coil current shot time <sup>1)</sup>	Rise time of coil current for buildup of magnetic field	2 to 500 ms
Reference electrode potential against PE <sup>1)</sup>	Voltage of reference electrode based on potential of measuring tube	-30 to +30 V
Build-up index value <sup>1)</sup>	Detection and monitoring of a coating forming on the inside of the measuring tube	0.0 to 100.0 %
HBSI <sup>1)</sup>	HBSI deviation from reference value in %.	±4 %

1) Only available if the "Heartbeat Monitoring" function is enabled in the measuring device.

 For information on using the parameters and interpreting the measurement results →  44.

#### 6.1.2 HBSI monitoring

The **HBSI** parameter (Heartbeat Sensor Integrity) offers another method of process and device monitoring. The HBSI value can be used as a support to assess the reliability of the device used and the displayed measured values.

The following points can help users to draw conclusions concerning the process and the state of the device in service:

- Prevention of production downtime
- Promotion of a high level of reliability
- Forward-looking scheduling of service intervals



Examples of situations that can influence the HBSI value include the following:


- Magnetic field interference from outside (external electromagnetic field, drift expected in negative range)
- Magnetic field interference from inside (external electromagnetic field, drift expected in positive range)
- Systematic errors caused by mechanical influences (handling, maintenance, repairs)

When calibrating the devices during production, the output value is initially determined, adjusted to 0% and saved in the device. The value is output in percentage from -100 to 100. The measurement is based on the general principles of magnetic flow within an electromagnetic measuring device that is continuously monitored. A minor deviation after commissioning a new device is possible due to the process conditions. A warning for the **HBSI** parameter is preset at the factory at a limit value of +/- 4 %. This can be modified by the user.

### Configuration of HBSI monitoring

#### Navigation

"Expert" menu → Sensor → Process parameters → HBSI

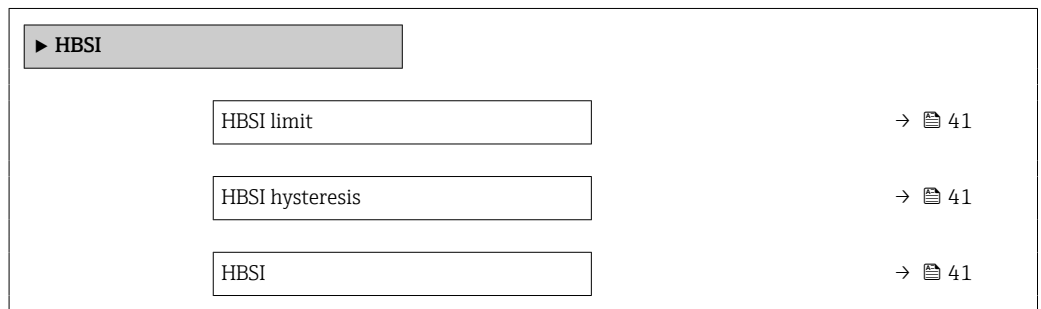



#### Parameter overview with brief description

Parameter	Description	User entry / User interface	Factory setting
HBSI limit	Enter HBSI limit value.	0 to 100 %	4 %
HBSI hysteresis	Enter hysteresis for HBSI limit value.	0 to 100 %	1 %
HBSI	Displays the relative change of the entire sensor, with all its electrical, mechanical and electromechanical components incorporated in the sensor housing (including the measuring tube, electrodynamic pick-ups, excitation system, cables etc.), in % of the reference value.	-100.0 to 100.0 %	-

### 6.1.3 Build-up index monitoring


Build-up detection using the Build-up index is part of Heartbeat Monitoring. It is used to detect and monitor an even coating forming on the inside of the measuring tube.

- 
 ▪ The build-up detection function is only available in conjunction with the Promag W sensor.
  - For additional prerequisites for the optimum and reliable use of the build-up detection function, see →  48

## Enabling and disabling Build-up index monitoring

### Navigation

"Expert" menu → Sensor → Process parameters → Build-up index

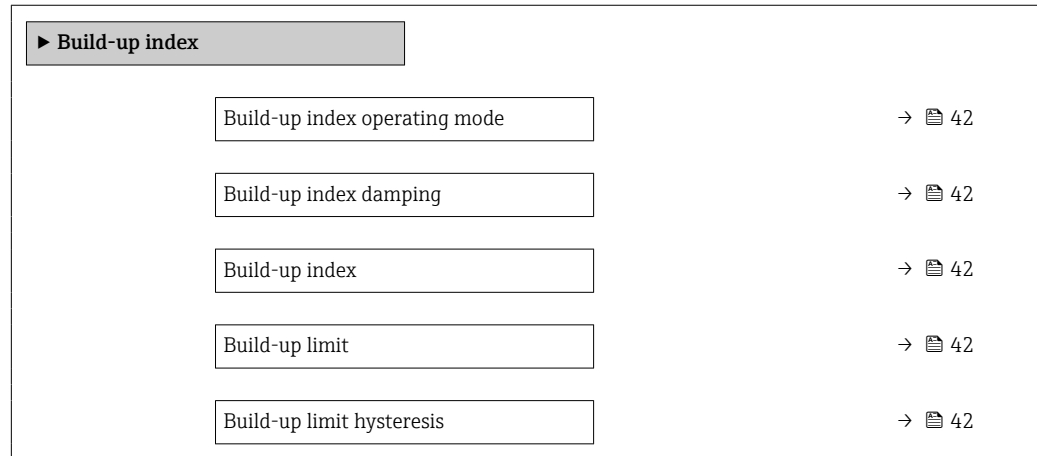


### Parameter overview with brief description

Parameter	Description	Selection / User entry / User interface	Factory setting
Build-up index operating mode	Select the operating mode for the build-up index. The operating mode indicates the interval at which the value of the build-up index is determined.	<ul style="list-style-type: none"> <li>▪ Off</li> <li>▪ Slow</li> <li>▪ Standard</li> <li>▪ Fast</li> </ul>	Off
Build-up index damping	Enter damping value for build-up index. Damping value: <ul style="list-style-type: none"> <li>▪ 0 = minimum damping</li> <li>▪ 15 = maximum damping</li> </ul> The damping value should only be increased if the measured value is unstable.	0 to 15	0
Build-up index	Shows current build-up index value.	0.0 to 100.0 %	0.0 %
Build-up limit	Enter limit value for the build-up index.	0 to 100 %	50 %
Build-up limit hysteresis	Enter hysteresis for build-up limit value. If the value for build-up detection hysteresis is higher than the Build-up limit, the "Build-up detected" diagnostic information is not reset until the measuring tube has been cleaned and a restart has been performed.	0 to 100 %	20 %


### 6.1.4 Displaying the monitoring results

The current value of the **HBSI** parameter and **Build-up index** parameter is continuously displayed in the Expert menu.

 In the case of measuring devices with a local display, the value can also be configured as a display value.

**Navigation**

"Diagnostics" submenu → Heartbeat → Monitoring results

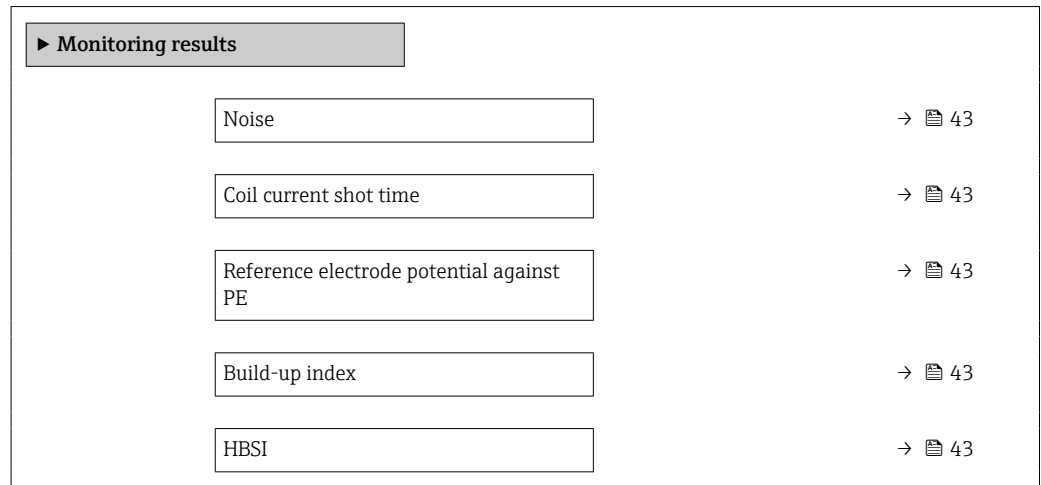

**Parameter overview with brief description**

Parameter	Description	User interface	Factory setting
Noise	Indicates the degree to which the differential signal from both measuring electrodes is dispersed.	0 to $3.0 \cdot 10^{+38} \mu\text{V}$	-
Coil current shot time	Indicates the rise time of the coil current for the buildup of the magnetic field.	2 to 500 ms	-
Reference electrode potential against PE	Displays the voltage of the reference electrode in relation to the potential of the measuring tube.	-30 to +30 V	-
Build-up index	Shows current build-up index value.	0.0 to 100.0 %	0.0 %
HBSI	Displays the relative change of the entire sensor, with all its electrical, mechanical and electromechanical components incorporated in the sensor housing (including the measuring tube, electrodynamic pick-ups, excitation system, cables etc.), in % of the reference value.	-100.0 to 100.0 %	-

**6.1.5 Configuration of the outputs and local display**

With the application package "Heartbeat Verification + Monitoring", the user has additional monitoring parameters available → 40 . The following examples illustrate how a monitoring measured variable is assigned to a current output or is shown on the local display.

**Example: Configuring the current output**

**Select the monitoring measured variable for current output**

1. Prerequisite:  
 Setup → I/O configuration  
 ↳ Configurable I/O module displays the **I/O module type** parameter with **Current output** option
2. Setup → Current output

3. Select the monitoring measured variable for the current output in the **Assign current output** parameter

#### Navigation

"Setup" menu → Current output → Assign current output

#### Example: Configuring the local display

##### Select the measured value that is shown on the local display

1. Setup → Display → Value 1 display
2. Select the measured value.

## 6.2 Operation

The benefits of **Heartbeat Monitoring** are in direct correlation with the recorded data selection and their interpretation. Good data interpretation is critical for deciding whether a problem has occurred and when and how maintenance should be scheduled or performed (good knowledge of the application is required). The elimination of process effects that cause misleading warnings or interpretation must also be ensured. For this reason it is important to compare the recorded data against a process reference.

Heartbeat Monitoring enables additional monitoring values to be displayed in continuous operation mode.

focuses on measured variables that indicate a change in the performance of the device brought about by process-specific influences. There are two difference categories of process-specific influences:

- Temporary process-specific influences that impact the measuring function directly and therefore result in a higher level of measuring uncertainty than would normally be expected (e.g. measurement of multiphase fluids). These process-specific influences generally do not affect the integrity of the device but do impact measuring performance temporarily.
- Process-specific influences that only impact the integrity of the sensor over the medium term but that also bring about a gradual change in the measuring performance (e.g. abrasion, corrosion or buildup in the sensor). These influences also affect the integrity of the device on the long term.

Devices with **Heartbeat Monitoring** offer a range of parameters that are particularly suitable for monitoring specific, application-related influences. These target applications are:

- Fluids containing magnetite
- Multi-phase fluids (gas content in liquid fluids)
- Applications in which the sensor is exposed to a programmed amount of wear
- Applications with cathodic protection systems
- Applications with pipes that are not grounded
- Applications in which build-up can form.

The results of must always be interpreted in the context of the application.

### 6.2.1 Possible interpretation of the monitoring parameters

This section describes the interpretation of certain monitoring parameters in connection with the process and the application.

Monitoring parameter	Possible reasons for deviation
Noise	A change can be an indicator of multi-phase fluids (gas content in liquid fluids or a change in the solids content of the fluid) or changing electrical conductivity. This value allows conclusions to be drawn about the process.
Coil current shot time	At constant process temperatures, a change can indicate a possible build-up of magnetite or an increase in the magnetite content of the medium. Strong external magnetic fields influence this value too.
Reference electrode potential against PE	This diagnostic value describes the voltage between the fluid and the protective ground. This value is of significance if the measuring device with the reference electrode contacting the fluid is disconnected from the protective ground.
Build-up index value	Detection and monitoring of an even coating forming on the inside of the measuring tube.
HBSI	Influences on this value can indicate a magnetic field interference from outside (external electromagnetic field) or inside (magnetite). Systematic errors caused by mechanical influences (handling, maintenance, repairs) or the aging of the measuring device can be other influencing factors.

## 7 Build-up detection using the Build-up index

Build-up detection makes it possible to:

- Draw conclusions regarding accuracy
- Avoid process disruptions
- Identify and control necessary cleaning intervals early on

Build-up is understood to be an even coating that forms over the entire inner wall of the measuring tube and increases in the course of the process. The time required for build-up to form varies. Depending on the process and medium, build-up can form within just a few hours or only after a few months.


Build-up detection is particularly suitable for processes in which an even coating forms, e.g:

- Heating circuits with magnetite deposits
- Sugar refining processes with oxalates
- Dairy and food processing with protein or sugar deposits
- Iron clogging in drinking water and water processes

### 7.1 General principles

#### 7.1.1 Build-up and deposits

The build-up detection function is designed to detect and monitor the formation of an even coating and **cannot** be used for the detection of deposits at the bottom of a measuring tube.

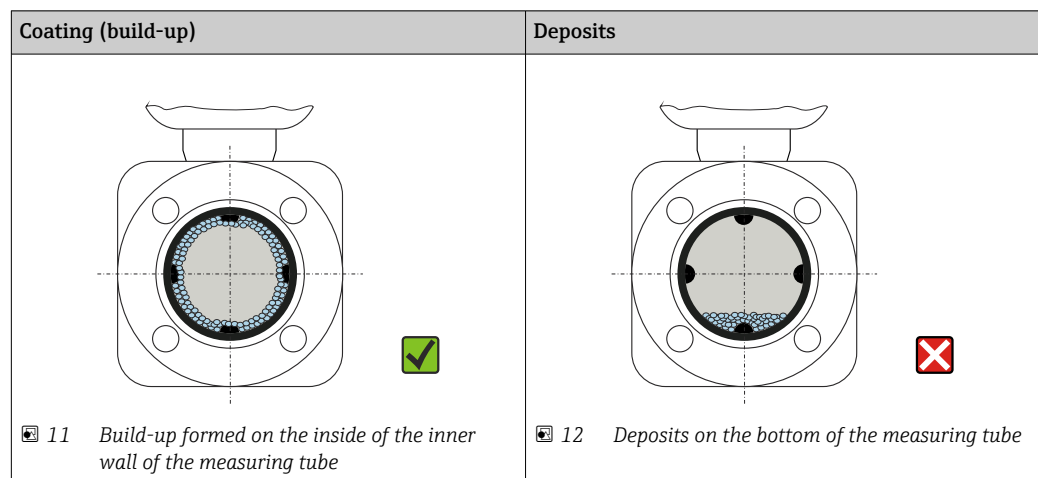

#### 7.1.2 Operating principle

The electrical conductivity values of the flowing medium and the build-up differ from one another. By analyzing the distribution of electrical conductivity within the measuring tube, it is possible to detect the formation of build-up.

The distribution of electrical conductivity in the cleaned measuring tube serves as the reference situation. In this state, a reference value is calibrated and the value of 0% is assigned to the Build-up index value before the device is delivered.

Build-up detection using the Build-up index assesses the difference between the conductivity of the flowing medium and the conductivity of the build-up. If the thickness of the build-up increases, the Build-up index value also increases. This effect is used to track the formation of build-up or cleaning progress.

### Evaluation of build-up formation

For a comparative assessment, it is important to note that if build-up has already formed in the pipe, a change in the conductivity of the flowing medium can also cause a change in the Build-up index value. Build-up formation should therefore always be assessed at a constant medium conductivity.

### Build-up index value

The formation of build-up is indicated as a percentage in the Build-up index value parameter. The higher the percentage value, the thicker the layer of build-up.

Build-up index value = 0%

- No build-up present
- Measuring tube as-delivered state (initial value)
- Measuring tube was cleaned thoroughly after formation of build-up

Build-up index value = 100%

- Value for the maximum measurable build-up thickness
- The thickness of the build-up at 100% varies depending on the process
- 100% does **not** indicate a clogged measuring tube

The percentage indicated in the Build-up index value parameter does not provide direct information about the absolute thickness or the composition of the build-up. Therefore, to make optimum use of the build-up detection function with the Build-up index, it is necessary to first compare the formation of build-up in the process, as known from experience, with the associated Build-up index value. The aim is to determine the Build-up index value at the time the cleaning is usually performed.

On the basis of the Build-up index value during cleaning, it is possible to make a valid assessment of the condition inside the measuring tube and to plan the cleaning using the Build-up limit and Build-up limit hysteresis parameters.

In addition, conclusions about possible effects on neighboring processes can be drawn from the Build-up index value.

### Interval for build-up detection

The interval for recording the Build-up index value can be specified in the Build-up index parameter.

- If it is known, from experience, that build-up is formed quickly, a short interval should be selected (**Fast** option). This option is also suitable for cleaning processes with a short monitoring duration of approx. 5 to 20 minutes.
- A longer interval, e.g. one measurement per minute or less, suffices for build-up that forms slowly over several months (**Slow** option).


The Fast, Standard and Slow options each differ from one another by a time factor of 10.


Example for the measuring interval with DN 25 nominal diameter:

- **Fast** option: Every 6 seconds
- **Standard** option: Every 60 seconds
- **Slow** option: Every 600 seconds

### Displaying the "Build-up detected" diagnostic information

Use the Build-up limit and Build-up limit hysteresis parameters to define a range for the thickness of the build-up in which the "Build-up detected" diagnostic information is output.

-  ▪ If the value for the build-up detection hysteresis is higher than the Build-up limit, the "Build-up detected" diagnostic information is only reset once the measuring tube has been cleaned and the device is restarted.
- If the "Build-up detected" diagnostic information is displayed for an empty measuring tube, this can be avoided by activating empty pipe detection: Setup → Empty pipe detection

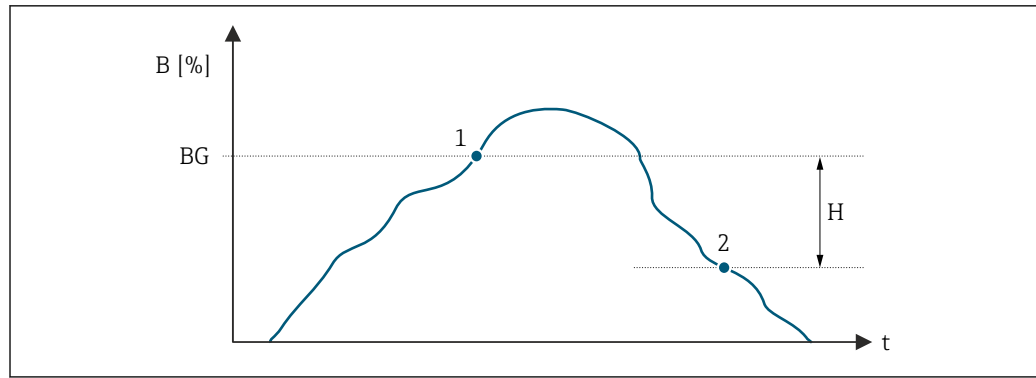

A0041854

- B* Build-up index value [%]  
*t* Time  
*BG* Build-up limit [%]  
*1* Diagnostics information switch-on point  
*H* Build-up limit hysteresis [%]  
*2* Diagnostics information switch-off point

### 7.1.3 Prerequisites

The following conditions must be met to ensure the optimum and reliable use of the build-up detection function.

#### Device version

The build-up detection function is only available in conjunction with the Promag W sensor.

#### Potential equalization

Potential equalization must be ensured in line with the operational environment of the measuring device in the plant.



For more information on ensuring potential equalization, see the Operating Instructions → 6.

#### Conductivity measurement

Build-up detection is only available if conductivity measurement is activated: Expert → Sensor → Process parameters → Conductivity measurement


#### Installation

- Vertical orientation (preferable)
- Mount the device downstream of assemblies such as valves, T-sections or pumps
- Observe inlet and outlet runs





For devices with the order code for "Design", option C, H, I, no inlet or outlet runs need to be considered.

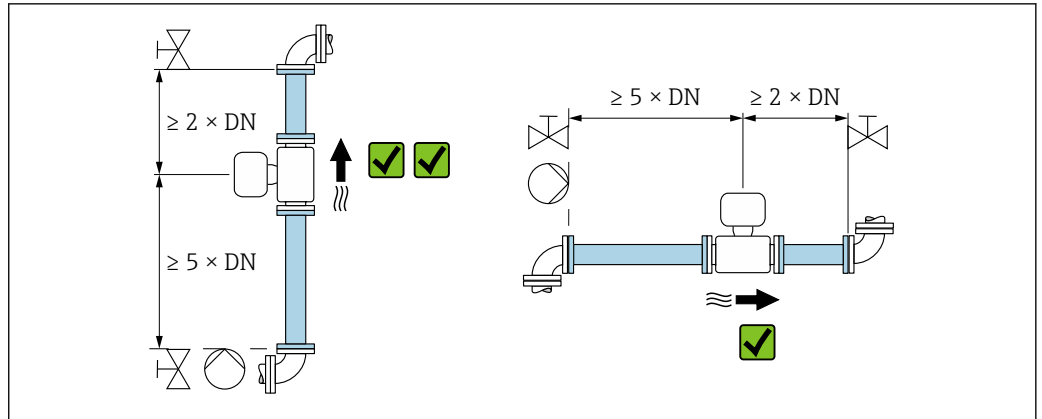



A0046360


 For more information on installation, see the Operating Instructions →  6.

## 7.2 Application examples

**i** The following application examples show how differently build-up forms in various processes. While the values indicated cannot be applied directly on a one-to-one basis, they do provide an indication of behavior in similar processes.

### 7.2.1 Water application

Application	Water supply
Type of build-up	Iron clogging
Monitoring duration	12 months
Build-up detection	Standard (one measurement per minute)
Nominal diameter of measuring tube	DN 100
Build-up formed	9 mm
Analysis	

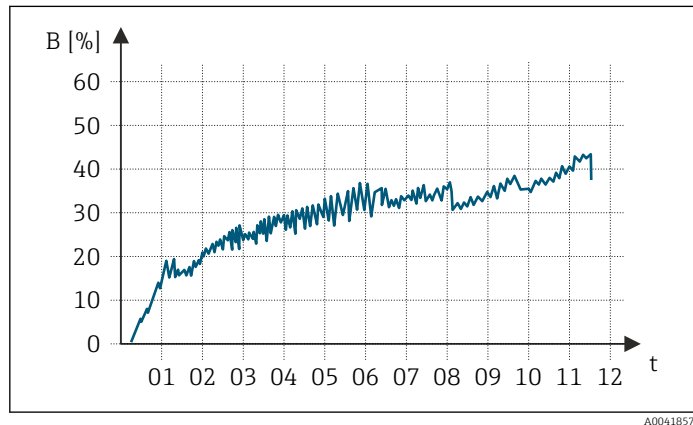


*B* Build-up index value [%]  
*t* Time [months]

- Build-up index value:
- 0 to 5% : no build-up present
  - > 5% : build-up is detected

### 7.2.2 Application in the food industry: sugar

Application	Sugar refinery
Type of build-up	Oxalates in sugar beet juice
Monitoring duration	4 months
Build-up detection	Standard (one measurement per minute)
Nominal diameter of measuring tube	DN 100
Build-up formed	4 to 8 mm
Analysis	

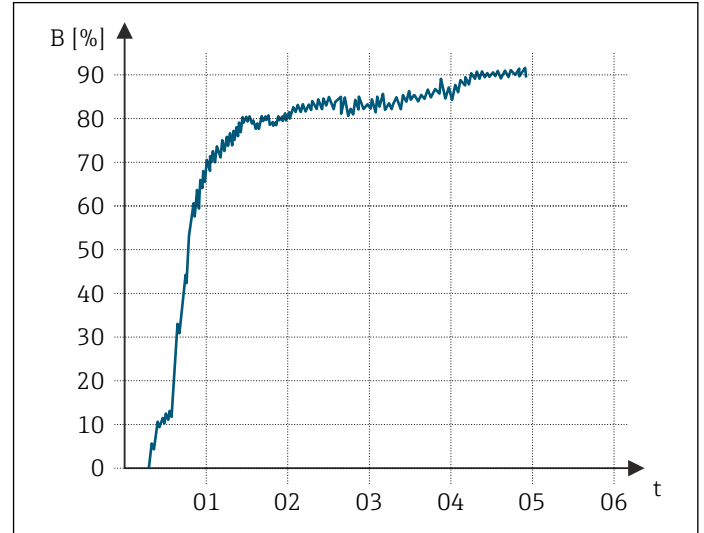

A0041868

*B* Build-up index value [%]  
*t* Time [months]

- Build-up index value:
- 0 to 5% : no build-up present
  - > 5% : build-up is detected

### 7.2.3 Application in the food industry: whey protein



Application	Food processing facility
Type of build-up	Whey protein
Monitoring duration	1 day
Build-up detection	Standard (one measurement per minute)
Measuring tube nominal diameter	DN 25
Build-up formed	3-4 mm

## 8 Modbus RS485 register information

### 8.1 Notes

#### 8.1.1 Structure of the register information

The individual parts of a parameter description are described in the following section:

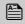Navigation: navigation path to the parameter					
Parameter	Register	Data type	Access type	User interface/ Selection/User entry	→ 
Name of parameter	Indicated in decimal numerical format	<ul style="list-style-type: none"> <li>▪ Float length = 4 byte</li> <li>▪ Integer length = 2 byte</li> <li>▪ String length, depending on parameter</li> </ul>	Possible type of access to parameter: <ul style="list-style-type: none"> <li>▪ Read access via function codes 03, 04 or 23</li> <li>▪ Write access via function codes 06, 16 or 23</li> </ul>	<b>Options</b> List of the individual options for the parameter <ul style="list-style-type: none"> <li>▪ Option 1</li> <li>▪ Option 2</li> <li>▪ Option 3 (+)</li> </ul>  (+) = Factory setting depends on country, order options or device settings  <b>User entry</b> Specific value or input range for the parameter	Page number information and cross-reference to the standard parameter description

#### NOTICE

**If non-volatile device parameters are modified via the MODBUS RS485 function codes 06, 16 or 23, the change is saved in the EEPROM of the measuring device.**

The number of writes to the EEPROM is technically restricted to a maximum of 1 million.

- ▶ Make sure to comply with this limit since, if it is exceeded, data loss and measuring device failure will result.
- ▶ Avoid constantly writing non-volatile device parameters via the MODBUS RS485.

#### 8.1.2 Address model

The Modbus RS485 register addresses of the measuring device are implemented in accordance with the "Modbus Applications Protocol Specification V1.1".

In addition, systems are used that work with the register address model "Modicon Modbus Protocol Reference Guide (PI-MBUS-300 Rev. J)".

Depending on the function code used, a number is added at the start of the register address with this specification:

- "3" → "Read" access
- "4" → "Write" access

Function code	Access type	Register in accordance with "Modbus Applications Protocol Specification"	Register in accordance with "Modicon Modbus Protocol Reference Guide"
03 04 23	Read	XXXX Example: mass flow = 2007	3XXXX Example: mass flow = 32007
06 16 23	Write	XXXX Example: reset totalizer = 6401	4XXXX Example: reset totalizer = 46401


## 8.2 Overview of the Heartbeat operating menu

The following tables provide an overview of the structure of the Heartbeat Technology operating menu along with the parameters. The page reference indicates where the associated description of the submenu or parameter can be found.

### 8.2.1 "Heartbeat setup" submenu

**Navigation**

"Setup" menu → Advanced setup → Heartbeat setup

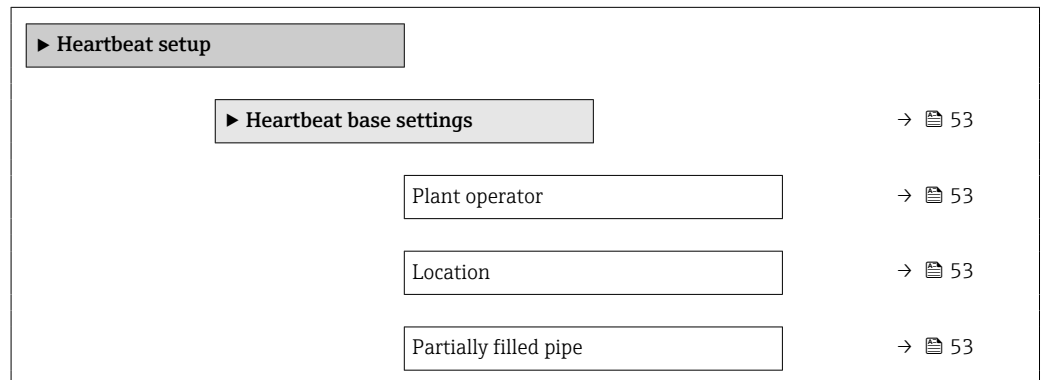

### 8.2.2 Register information


**"Heartbeat base settings" submenu**









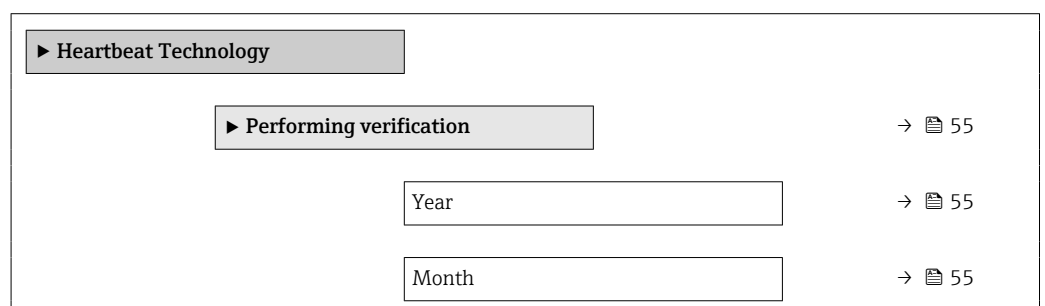
















Navigation: Heartbeat setup → Heartbeat base settings					
Parameter	Register	Data type	Access	Selection / User entry / User interface	→ 53
Plant operator	3414 to 3429	String	Read / Write	Max. 32 characters such as letters, numbers or special characters (e.g. @, %, /)	17
Location	3430 to 3445	String	Read / Write	Max. 32 characters such as letters, numbers or special characters (e.g. @, %, /)	17
Partially filled pipe	37517	Integer	Read / Write	0 = Yes 1 = No	17




### 8.2.3 "Heartbeat" submenu

**Navigation**

"Heartbeat" submenu




Day	→  55
Hour	→  55
AM/PM	→  55
Minute	→  55
External device information	→  55
Start verification	→  55
Progress	→  55
Remaining lockout period	→  55
Lockout period	→  55
Measured values	→  55
Output values	→  55
Status	→  55
Verification result	→  55
<b>► Verification results</b>	→  56
Date/time (manually entered)	→  56
Verification ID	→  56
Operating time	→  56
Verification result	→  56
Sensor	→  56
Sensor electronic module (ISEM)	→  56
I/O module	→  56
System status	→  56
<b>► Monitoring results</b>	→  56
Noise	→  56
Coil current shot time	→  56


Reference electrode potential against PE	→  56
Build-up index	→  56
HBSI	→  56

## 8.2.4 Register information


### "Performing verification" wizard

Navigation: Heartbeat Technology → Performing verification					
Parameter	Register	Data type	Access	Selection / User entry / User interface	→ 
Year	2495	Integer	Read / Write	9 to 99	21
Month	2494	Integer	Read / Write	<b>0 = January</b> 1 = February 2 = March 3 = April 4 = May 5 = June 6 = July 7 = August 8 = September 9 = October 10 = November 11 = December	21
Day	2493	Integer	Read / Write	1 to 31 d	21
Hour	2492	Integer	Read / Write	0 to 23 h	21
AM/PM	2496	Integer	Read / Write	<b>0 = AM</b> 1 = PM	21
Minute	2467	Integer	Read / Write	0 to 59 min	21
External device information	20493 to 20508	String	Read / Write	Free text entry	21
Start verification	2270	Integer	Read / Write	<b>0 = Cancel</b> 1 = Start	21
Progress	6797	Integer	Read	0 to 100 %	22
Remaining lockout period	25118 to 25119	Float	Read	0 to 99 h	22
Lockout period	25116 to 25117	Float	Read / Write	0 to 99 h	22
Measured values	5512 to 5513	Float	Read / Write	Signed floating-point number	22
Output values	5516 to 5517	Float	Read	Signed floating-point number	22
Status	2079	Integer	Read	0 = Failed 1 = Done 3 = Not done 8 = Busy	22
Verification result	2355	Integer	Read	0 = Failed 2 = Passed 3 = Not done 250 = Not supported	22

**"Verification results" submenu**

Navigation: Heartbeat Technology → Verification results					
Parameter	Register	Data type	Access	Selection / User entry / User interface	→ 
Date/time (manually entered)	2372 to 2381	String	Read	dd.mmmm.yyyy; hh:mm	31
Verification ID	2315	Integer	Read	0 to 65 535	31
Operating time	3346	String	Read	Days (d), hours (h), minutes (m), seconds (s)	31
Verification result	2355	Integer	Read	0 = Failed 2 = Passed 3 = Not done 250 = Not supported	22
Sensor	2384	Integer	Read	0 = Failed 2 = Passed <b>3 = Not done</b> 250 = Not supported	31
Sensor electronic module (ISEM)	2385	Integer	Read	0 = Failed 2 = Passed <b>3 = Not done</b> 250 = Not supported	31
I/O module	2386	Integer	Read	0 = Failed 2 = Passed <b>3 = Not done</b> 250 = Not supported 254 = Not plugged	32
System status	5790	Integer	Read	0 = Failed 2 = Passed <b>3 = Not done</b> 250 = Not supported	32

**"Monitoring results" submenu**

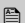Navigation: Heartbeat Technology → Monitoring results					
Parameter	Register	Data type	Access	Selection / User entry / User interface	→ 
Noise	2463 to 2464	Float	Read	0 to $3.0 \cdot 10^{+38} \mu\text{V}$	43
Coil current shot time	2465 to 2466	Float	Read	2 to 500 ms	43
Reference electrode potential against PE	3990 to 3991	Float	Read	-30 to +30 V	43
Build-up index	32597 to 32598	Float	Read	0.0 to 100.0 %	42
HBSI	48268 to 48269	Float	Read	-100.0 to 100.0 %	41











71577068

[www.addresses.endress.com](http://www.addresses.endress.com)

---