
Valid as of version 01.00.zz (Device firmware) Products Solutions

itions Services

Operating Instructions Proline Promass P 100 PROFINET

Coriolis flowmeter

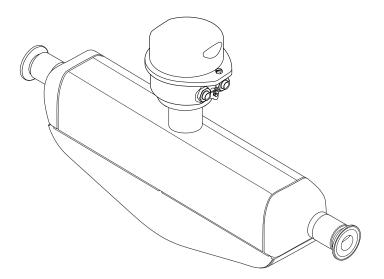



- Make sure the document is stored in a safe place such that it is always available when working on or with the device.
- To avoid danger to individuals or the facility, read the "Basic safety instructions" section carefully, as well as all other safety instructions in the document that are specific to working procedures.
- The manufacturer reserves the right to modify technical data without prior notice. Your Endress+Hauser Sales Center will supply you with current information and updates to these instructions.

Table of contents

1.1 1.2	About this document 6 Document function 6 Symbols 6		6.2.2 Preparing the measuring device6.2.3 Mounting the measuring device6.2.4 Turning the display module	23 24
1.2	1.2.1 Safety symbols 6 1.2.2 Electrical symbols 6 1.2.3 Tool symbols 6	6.3 7	Post-installation check	
1.3 1.4	1.2.4 Symbols for certain types of information	7.1 7.2	Electrical safety	26 26 26 27
	-	7.3	7.2.4 Pin assignment, device plug	28
2 2.1 2.2	Safety instructions9Requirements for the personnel9Intended use9	7.5	7.3.1 Connecting the transmitter	29 30
2.3 2.4 2.5 2.6	Workplace safety 10 Operational safety 10 Product safety 10 IT security 10	7.5	7.4.1 Connection examples	31 31 31
2.0 3	•	7.6 7.7	Ensuring the degree of protection Post-connection check	
ر 3.1	Product description	8	Operation options	35
	3.1.1 Device version with PROFINET communication protocol 11	8.1 8.2	Overview of operating options Structure and function of the operating menu	35 36
4	Incoming acceptance and product		8.2.1 Structure of the operating menu	36
	identification	8.3	8.2.2 Operating philosophy Displaying the measured values via the local	37
4.1 4.2	Incoming acceptance12Product identification124.2.1 Transmitter nameplate134.2.2 Sensor nameplate144.2.3 Symbols on measuring device15	8.4	display (optionally available)	
5	Storage and transport 16	0.1	8.4.1 PROFINET with Ethernet-APL	40
5.1 5.2	Storage conditions		8.4.3 Establishing a connection	42 43 44
5.3	lugs	8.5	8.4.7 Logging out	45 46
6	Mounting		8.5.1 Connecting the operating tool	46 47
6.1	Mounting requirements		8.5.3 DeviceCare	48
	6.1.1 Mounting position	9 9.1	System integration	
6.2	requirements		9.1.1 Current version data for the device 9.1.2 Operating tools	49

9.2	Device master file (GSD)	50	12	Diagnostics and troubleshooting	88
	9.2.1 File name of the manufacturer-specific device master file (GSD)	50	12.1	General troubleshooting	88
	9.2.2 File name of the PA Profile device	00	12.2	Diagnostic information via light emitting	
	master file (GSD)	50		diodes	
9.3	Cyclic data transmission	51	10.0	12.2.1 Transmitter	
	9.3.1 Overview of the modules	51	12.3	Diagnostic information in the Web browser	
	9.3.2 Description of the modules	51		12.3.1 Diagnostic options	
	9.3.3 Status coding	59	10 /	12.3.2 Calling up remedy information	92
	9.3.4 Factory setting	60	12.4	Diagnostic information in FieldCare or DeviceCare	92
	9.3.5 Startup configuration	61		12.4.1 Diagnostic options	
				12.4.2 Calling up remedy information	
10	Commissioning	62	12.5	Adapting the diagnostic information	93
10.1	Post-installation and post-connection check	62		12.5.1 Adapting the diagnostic behavior	
10.2	Identifying the device in the PROFINET		12.6	Overview of diagnostic information	
	network	62		12.6.1 Diagnostic of sensor	
10.3	Startup parameterization	62		12.6.2 Diagnostic of electronic	100
10.4	Connecting via FieldCare			12.6.3 Diagnostic of configuration	106
10.5	Setting the operating language	62		12.6.4 Diagnostic of process	
10.6	Configuring the measuring device	62			117
	10.6.1 Defining the tag name			3	118
	10.6.2 Setting the system units	63	12.9	3	118
	10.6.3 Displaying the communication			3	118
	interface	I		3	119
	10.6.4 Selecting and setting the medium	67	12 10		119
	10.6.5 Configuring the low flow cut off	69	12.10	Resetting the measuring device	120
	10.6.6 Configuring partially filled pipe detection	70		parameter	120
10.7	Advanced settings	70 71	12 11		121
10.7	10.7.1 Using the parameter to enter the	′ 1		Firmware history	
	access code	71	12.12	Timiware instory	102
	10.7.2 Calculated process variables		13	Maintenance 1	123
	10.7.3 Carrying out a sensor adjustment				
	10.7.4 Configuring the totalizer		13.1	Maintenance tasks	
	10.7.5 Using parameters for device			13.1.1 Exterior cleaning	
	administration		12.2	13.1.2 Interior cleaning	
10.8	Simulation			Measuring and test equipment Endress+Hauser services	
10.9	Protecting settings from unauthorized access .		1).)	Endress Trauser Services	14.
	10.9.1 Write protection via access code	79	1 /.	Damain 1	17/
	10.9.2 Write protection via write protection	00	14	•	124
	switch	80	14.1		124
	10.9.3 Write protection via startup	0.1		14.1.1 Repair and conversion concept	
	parameterization	01		*	124
		00	14.2	1 1	124
11	Operation	82	14.3		124
11.1	Reading the device locking status	82	14.4	Return	
11.2	Adjusting the operating language		14.5	*	125125
11.3	Configuring the display			3	125
11.4	Reading measured values			14.7.2 Disposing of the measuring device	14,
	11.4.1 "Measured variables" submenu	I	16	A ganganing	176
11 ୮	11.4.2 "Totalizer" submenu	84	15		126
11.5	Adapting the measuring device to the process	0 =	15.1	Device-specific accessories	
11 6	conditions	85 85	455	15.1.1 For the sensor	
11.6	11.6.1 Function scope of "Control Totalizer"	رں		Communication-specific accessories	
	parameter	86		Service-specific accessories	
	11.6.2 Function scope of the "Reset all		15.4	System components	175
	totalizers" parameter	87			
	*				

16	Technical data	129
16.1	Application	129
16.2	Function and system design	129
16.3	Input	130
16.4	Output	131
16.5	Power supply	135
16.6	Performance characteristics	136
16.7	Mounting	140
16.8	Environment	140
16.9	Process	141
16.10	Mechanical construction	144
16.11	Operability	147
16.12	Certificates and approvals	149
16.13	Application packages	151
16.14	Accessories	152
16.15	Supplementary documentation	152
Indes	,	154

1 About this document

1.1 Document function

These Operating Instructions contain all the information required in the various life cycle phases of the device: from product identification, incoming acceptance and storage, to installation, connection, operation and commissioning, through to troubleshooting, maintenance and disposal.

1.2 Symbols

1.2.1 Safety symbols

⚠ DANGER

This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury.

▲ WARNING

This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.

A CAUTION

This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or medium injury.

NOTICE

This symbol contains information on procedures and other facts which do not result in personal injury.

1.2.2 Electrical symbols

Symbol	Meaning
===	Direct current
~	Alternating current
$\overline{}$	Direct current and alternating current
=	Ground connection A grounded terminal which, as far as the operator is concerned, is grounded via a grounding system.
	Potential equalization connection (PE: protective earth) Ground terminals that must be connected to ground prior to establishing any other connections.
	The ground terminals are located on the interior and exterior of the device: Interior ground terminal: potential equalization is connected to the supply network. Exterior ground terminal: device is connected to the plant grounding system.

1.2.3 Tool symbols

	Symbol	Meaning
	0 6	Allen key
Ī	Ó	Open-ended wrench

1.2.4 Symbols for certain types of information

Symbol	Meaning
✓	Permitted Procedures, processes or actions that are permitted.
✓ ✓	Preferred Procedures, processes or actions that are preferred.
X	Forbidden Procedures, processes or actions that are forbidden.
i	Tip Indicates additional information.
<u> </u>	Reference to documentation
A	Reference to page
	Reference to graphic
•	Notice or individual step to be observed
1., 2., 3	Series of steps
L	Result of a step
?	Help in the event of a problem
	Visual inspection

1.2.5 Symbols in graphics

Symbol	Meaning
1, 2, 3,	Item numbers
1., 2., 3.,	Series of steps
A, B, C,	Views
A-A, B-B, C-C,	Sections
EX	Hazardous area
×	Safe area (non-hazardous area)
≋➡	Flow direction

1.3 Documentation

- For an overview of the scope of the associated Technical Documentation, refer to the following:
 - Device Viewer (www.endress.com/deviceviewer): Enter the serial number from the nameplate
 - *Endress+Hauser Operations app*: Enter serial number from nameplate or scan matrix code on nameplate.

1.3.1 Document function

The following documentation may be available depending on the version ordered:

Document type	Purpose and content of the document
Technical Information (TI)	Planning aid for your device The document contains all the technical data on the device and provides an overview of the accessories and other products that can be ordered for the device.
Brief Operating Instructions (KA)	Guide that takes you quickly to the 1st measured value The Brief Operating Instructions contain all the essential information from incoming acceptance to initial commissioning.
Operating Instructions (BA)	Your reference document The Operating Instructions contain all the information that is required in the various phases of the life cycle of the device: from product identification, incoming acceptance and storage, to mounting, connection, operation and commissioning through to troubleshooting, maintenance and disposal.
Description of Device Parameters (GP)	Reference for your parameters The document provides a detailed explanation of each individual parameter. The description is aimed at those who work with the device over the entire life cycle and perform specific configurations.
Safety Instructions (XA)	Depending on the approval, safety instructions for electrical equipment in hazardous areas are also supplied with the device. The Safety Instructions are an integral part of the Operating Instructions. Information on the Safety Instructions (XA) relevant to the device is provided on the nameplate.
Supplementary device-dependent documentation (SD/FY)	Always comply strictly with the instructions in the relevant supplementary documentation. The supplementary documentation is an integral part of the device documentation.

1.4 Registered trademarks

PROFINET®

Registered trademark of the PROFIBUS Nutzerorganisation e.V. (PROFIBUS User Organization), Karlsruhe, Germany

TRI-CLAMP®

Registered trademark of Ladish & Co., Inc., Kenosha, USA

2 Safety instructions

2.1 Requirements for the personnel

The personnel for installation, commissioning, diagnostics and maintenance must fulfill the following requirements:

- ► Trained, qualified specialists must have a relevant qualification for this specific function and task.
- ► Are authorized by the plant owner/operator.
- ► Are familiar with federal/national regulations.
- ▶ Before starting work, read and understand the instructions in the manual and supplementary documentation as well as the certificates (depending on the application).
- ▶ Follow instructions and comply with basic conditions.

The operating personnel must fulfill the following requirements:

- ► Are instructed and authorized according to the requirements of the task by the facility's owner-operator.
- ▶ Follow the instructions in this manual.

2.2 Intended use

Application and media

The measuring device described in this manual is intended only for the flow measurement of liquids.

Depending on the version ordered, the measuring device can also measure potentially explosive, flammable, poisonous and oxidizing media.

Measuring devices for use in hazardous areas, in hygienic applications or where there is an increased risk due to process pressure, are labeled accordingly on the nameplate.

To ensure that the measuring device remains in proper condition for the operation time:

- ► Keep within the specified pressure and temperature range.
- ▶ Only use the measuring device in full compliance with the data on the nameplate and the general conditions listed in the Operating Instructions and supplementary documentation.
- ► Based on the nameplate, check whether the ordered device is permitted for the intended use in the hazardous area (e.g. explosion protection, pressure vessel safety).
- ▶ Use the measuring device only for media to which the process-wetted materials are sufficiently resistant.
- ▶ If the ambient temperature of the measuring device is outside the atmospheric temperature, it is absolutely essential to comply with the relevant basic conditions as specified in the device documentation → 🖺 7.
- ► Protect the measuring device permanently against corrosion from environmental influences.

Incorrect use

Non-designated use can compromise safety. The manufacturer is not liable for damage caused by improper or non-intended use.

A WARNING

Danger of breakage due to corrosive or abrasive fluids and ambient conditions!

- ▶ Verify the compatibility of the process fluid with the sensor material.
- ► Ensure the resistance of all fluid-wetted materials in the process.
- ► Keep within the specified pressure and temperature range.

NOTICE

Verification for borderline cases:

► For special fluids and fluids for cleaning, Endress+Hauser is glad to provide assistance in verifying the corrosion resistance of fluid-wetted materials, but does not accept any warranty or liability as minute changes in the temperature, concentration or level of contamination in the process can alter the corrosion resistance properties.

Residual risks

A CAUTION

The electronics and the medium may cause the surfaces to heat up or freeze. Risk of burns or frostbite!

► Mount suitable touch protection.

2.3 Workplace safety

When working on and with the device:

▶ Wear the required personal protective equipment as per national regulations.

2.4 Operational safety

Damage to the device!

- ▶ Operate the device in proper technical condition and fail-safe condition only.
- ▶ The operator is responsible for the interference-free operation of the device.

Modifications to the device

Unauthorized modifications to the device are not permitted and can lead to unforeseeable dangers!

▶ If modifications are nevertheless required, consult with the manufacturer.

Repair

To ensure continued operational safety and reliability:

- ► Carry out repairs on the device only if they are expressly permitted.
- ▶ Observe federal/national regulations pertaining to the repair of an electrical device.
- ▶ Use only original spare parts and accessories.

2.5 Product safety

This measuring device is designed in accordance with good engineering practice to meet state-of-the-art safety requirements, has been tested, and left the factory in a condition in which it is safe to operate.

It meets general safety standards and legal requirements. It also complies with the EU directives listed in the device-specific EU Declaration of Conformity. The manufacturer confirms this by affixing the CE mark to the device..

2.6 IT security

Our warranty is valid only if the product is installed and used as described in the Operating Instructions. The product is equipped with security mechanisms to protect it against any inadvertent changes to the settings.

IT security measures, which provide additional protection for the product and associated data transfer, must be implemented by the operators themselves in line with their security standards.

Product description 3


The device consists of a transmitter and a sensor.

The device is available as a compact version:

The transmitter and sensor form a mechanical unit.

Product design 3.1

3.1.1 Device version with PROFINET communication protocol

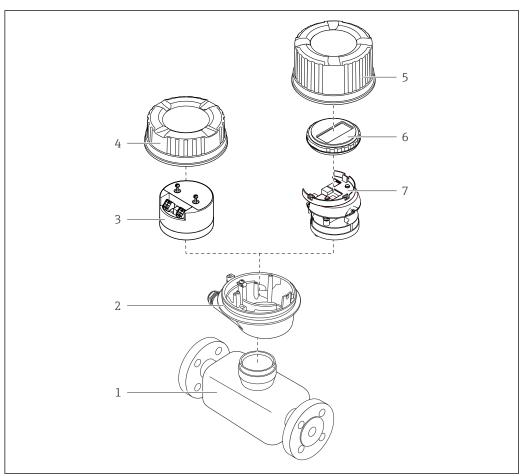


■ 1 Important components of a measuring device

- Sensor
- Transmitter housing
- Main electronics module
- Transmitter housing cover
- Transmitter housing cover (version for optional local display)
- Local display (optional)
- Main electronics module (with bracket for optional local display)

4 Incoming acceptance and product identification

4.1 Incoming acceptance

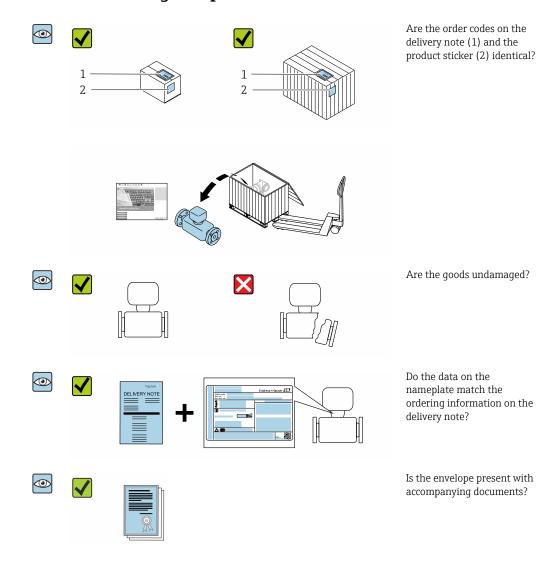

- If one of the conditions is not satisfied, contact your Endress+Hauser Sales Center.

4.2 Product identification


The following options are available for identification of the device:

- Nameplate specifications
- Order code with breakdown of the device features on the delivery note
- Enter the serial numbers from the nameplates in the *Device Viewer* (www.endress.com/deviceviewer): all the information about the device is displayed.
- Enter the serial numbers from the nameplates into the *Endress+Hauser Operations App* or scan the DataMatrix code on the nameplate with the *Endress+Hauser Operations App*: all the information about the device is displayed.

For an overview of the scope of the associated Technical Documentation, refer to the following:

- The chapters "Additional standard documentation on the device" and "Supplementary device-dependent documentation"
- The *Device Viewer*: Enter the serial number from the nameplate (www.endress.com/deviceviewer)
- The *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the DataMatrix code on the nameplate.


4.2.1 Transmitter nameplate

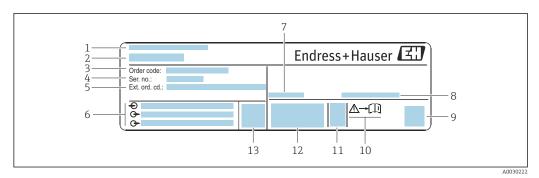

■ 2 Example of a transmitter nameplate

- 1 Manufacturing location
- 2 Name of the transmitter
- 3 Order code
- 4 Serial number (Ser. no.)
- 5 Extended order code (Ext. ord. cd.)
- 6 Electrical connection data, e.g. available inputs and outputs, supply voltage
- 7 Permitted ambient temperature (T_a)
- 8 Degree of protection
- 9 2-D matrix code
- 11 Date of manufacture: year-month
- 12 CE mark, RCM-Tick mark
- 13 Firmware version (FW)

4.2.2 Sensor nameplate

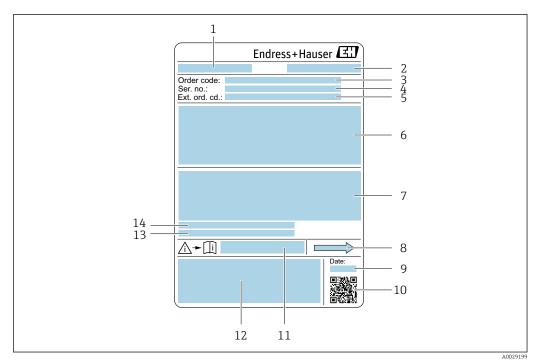

₩ 3 Example of a sensor nameplate

- Name of the sensor 1 2 Place of manufacture
- 3 Order code
- Serial number (Ser. no.) 4
- Extended order code (Ext. ord. cd.)
- Nominal diameter of the sensor; flange nominal diameter/nominal pressure; sensor test pressure; medium temperature range; material of measuring tube and manifold; sensor-specific information: e.g. pressure range of sensor housing, wide-range density specification (special density calibration)
- 7 Approval information for explosion protection, Pressure Equipment Directive and degree of protection
- Flow direction 8
- 9 Manufacturing date: year-month
- 10 2-D matrix code
- 11 Document number of safety-related supplementary documentation
- CE mark, RCM-Tick mark 12
- 13 Surface roughness
- Permitted ambient temperature (T_a)

Order code

The measuring device is reordered using the order code.

Extended order code

- The device type (product root) and basic specifications (mandatory features) are always listed.
- Of the optional specifications (optional features), only the safety and approvalrelated specifications are listed (e.g. LA). If other optional specifications are also ordered, these are indicated collectively using the # placeholder symbol (e.g. #LA#).
- If the ordered optional specifications do not include any safety and approval-related specifications, they are indicated by the + placeholder symbol (e.g. XXXXXX-ABCDE +).

4.2.3 Symbols on measuring device

Symbol	Meaning
\triangle	WARNING! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury. To determine the nature of the potential hazard and the measures required to avoid it, consult the documentation accompanying the measuring device.
(i	Reference to documentation Refers to the corresponding device documentation.
	Protective ground connection A terminal which must be connected to ground prior to establishing any other connections.

5 Storage and transport

5.1 Storage conditions


Observe the following notes for storage:

- ► Store in the original packaging to ensure protection from shock.
- ▶ Do not remove protective covers or protective caps installed on process connections. They prevent mechanical damage to the sealing surfaces and contamination in the measuring pipe.
- ▶ Protect from direct sunlight to avoid unacceptably high surface temperatures.
- ► Store in a dry and dust-free place.
- ▶ Do not store outdoors.

Storage temperature $\rightarrow \triangleq 140$

5.2 Transporting the product

Transport the measuring device to the measuring point in the original packaging.

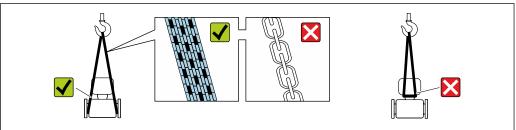

A002925

Do not remove protective covers or caps installed on process connections. They prevent mechanical damage to the sealing surfaces and contamination in the measuring tube.


5.2.1 Measuring devices without lifting lugs

MARNING

Center of gravity of the measuring device is higher than the suspension points of the webbing slings.

Risk of injury if the measuring device slips.

- ► Secure the measuring device against slipping or turning.
- ▶ Observe the weight specified on the packaging (stick-on label).

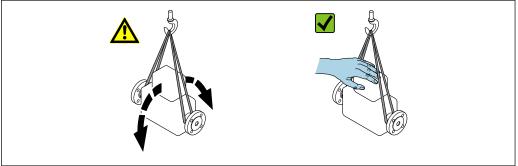

A0029214

5.2.2 Measuring devices with lifting lugs

A CAUTION

Special transportation instructions for devices with lifting lugs

- ▶ Only use the lifting lugs fitted on the device or flanges to transport the device.
- ► The device must always be secured at two lifting lugs at least.

5.2.3 Transporting with a fork lift

If transporting in wood crates, the floor structure enables the crates to be lifted lengthwise or at both sides using a forklift.

5.3 Packaging disposal

All packaging materials are environmentally friendly and 100 % recyclable:


- Outer packaging of device
 Polymer stretch wrap, complying with EU Directive 2002/95/EC (RoHS)
- Packaging
 - Wooden crate treated in accordance with ISPM 15 standard, confirmed by IPPC logo
 - Cardboard box in accordance with European packaging guideline 94/62EC, recyclability confirmed by Resy symbol
- Carrying and securing materials
 - Disposable plastic pallet
 - Plastic straps
 - Plastic adhesive strips
- Filler material Paper pads

6 Mounting

6.1 Mounting requirements

6.1.1 Mounting position

Mounting location

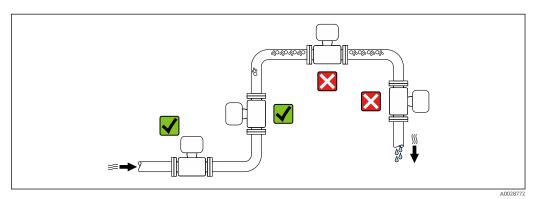


To prevent measuring errors arising from accumulation of gas bubbles in the measuring pipe, avoid the following mounting locations in the piping:

- Highest point of a pipeline.
- Directly upstream of a free pipe outlet in a down pipe.

Installation in down pipes

However, the following installation suggestion allows for installation in an open vertical pipeline. Pipe restrictions or the use of an orifice with a smaller cross-section than the nominal diameter prevent the sensor running empty while measurement is in progress.

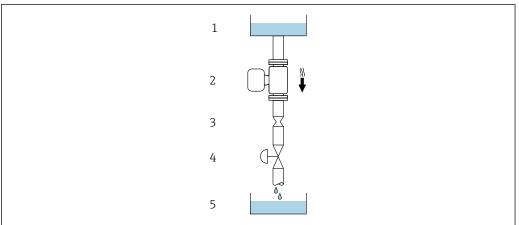

A002877

- 4 Installation in a down pipe (e.g. for batching applications)
- 1 Supply tank
- 2 Sensor
- 3 Orifice plate, pipe restriction
- 4 Valve
- 5 Batching tank

DN		Ø orifice plate, pipe restriction	
[mm]	[in]	[mm]	[in]
8	3/8	6	0.24
15	1/2	10	0.40
25	1	14	0.55
40	11/2	22	0.87
50	2	28	1.10


Orientation

The direction of the arrow on the sensor nameplate helps you to install the sensor according to the flow direction (direction of medium flow through the piping).

	Recommendation		
A	Vertical orientation	A0015591	√ √ 1)
В	Horizontal orientation, transmitter at top	A0015589	✓✓² ²⁾ Exception: → 🗹 5, 🖺 19
С	Horizontal orientation, transmitter at bottom	A0015590	√√√ ³⁾ Exception: → ② 5, ③ 19
D	Horizontal orientation, transmitter at side	A0015592	\checkmark

- 1) This orientation is recommended to ensure self-draining.
- 2) Applications with low process temperatures may reduce the ambient temperature. To maintain the minimum ambient temperature for the transmitter, this orientation is recommended.
- 3) Applications with high process temperatures may increase the ambient temperature. To maintain the maximum ambient temperature for the transmitter, this orientation is recommended.

If a sensor is installed horizontally with a curved measuring tube, match the position of the sensor to the fluid properties.

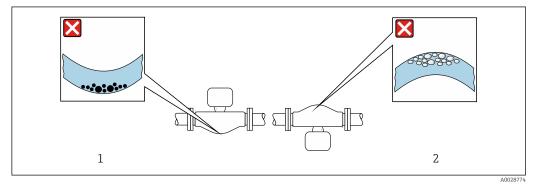

■ 5 Orientation of sensor with curved measuring tube


- 1 Avoid this orientation for fluids with entrained solids: Risk of solids accumulating.
- 2 Avoid this orientation for outgassing fluids: Risk of gas accumulating.

Inlet and outlet runs

No special precautions need to be taken for fittings that create turbulence, such as valves, elbows or T-pieces, as long as no cavitation occurs $\rightarrow \triangleq 20$.



Dimensions

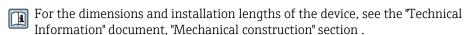

6.1.2 **Environment and process requirements**

Ambient temperature range

Measuring device	 -40 to +60 °C (-40 to +140 °F) Order code for "Test, certificate", option JM:
	−50 to +60 °C (−58 to +140 °F)

► If operating outdoors: Avoid direct sunlight, particularly in warm climatic regions.

System pressure


It is important that cavitation does not occur, or that gases entrained in the liquids do not

Cavitation is caused if the pressure drops below the vapor pressure:

- In liquids that have a low boiling point (e.g. hydrocarbons, solvents, liquefied gases)
- In suction lines
- ► Ensure the system pressure is sufficiently high to prevent cavitation and outgassing.

For this reason, the following mounting locations are recommended:

- At the lowest point in a vertical pipe
- Downstream from pumps (no danger of vacuum)

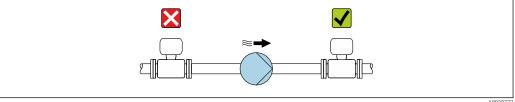

Thermal insulation

In the case of some fluids, it is important to keep the heat radiated from the sensor to the transmitter to a low level. A wide range of materials can be used for the required insulation.


The following device versions are recommended for versions with thermal insulation:

- Version with extended neck for insulation:
 Order code for "Sensor option", option CG with an extended neck length of 105 mm (4.13 in).
- Extended temperature version:
 Order code for "Measuring tube material", option TD or TG with an extended neck length of 105 mm (4.13 in).

NOTICE

Electronics overheating on account of thermal insulation!

- Recommended orientation: horizontal orientation, transmitter housing pointing downwards.
- ▶ Do not insulate the transmitter housing.
- ▶ Maximum permissible temperature at the lower end of the transmitter housing: $80 \,^{\circ}\text{C} (176 \,^{\circ}\text{F})$
- ► Thermal insulation with not isolated extended neck: We recommend that you do not insulate the extended neck in order to ensure optimum dissipation of heat.

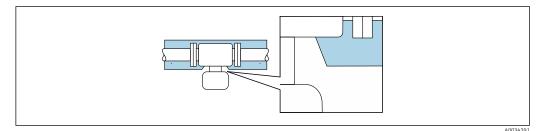

■ 6 Thermal insulation with not isolated extended neck

Heating

NOTICE

Electronics can overheat due to elevated ambient temperature!

- ▶ Observe maximum permitted ambient temperature for the transmitter.
- ▶ Depending on the medium temperature, take the device orientation requirements into account.

NOTICE

Danger of overheating when heating

- ▶ Ensure that the temperature at the lower end of the transmitter housing does not exceed 80 $^{\circ}$ C (176 $^{\circ}$ F).
- ▶ Ensure that sufficient convection takes place at the transmitter neck.
- ► Ensure that a sufficiently large area of the transmitter neck remains exposed. The uncovered part serves as a radiator and protects the electronics from overheating and excessive cooling.
- ▶ When using in potentially explosive atmospheres, observe the information in the device-specific Ex documentation. For detailed information on the temperature tables, see the separate document entitled "Safety Instructions" (XA) for the device.
- ► Take account of the behavior of process diagnostic "830 Ambient temperature too high" and "832 Electronics temperature too high" if it is not possible to avoid overheating with a suitable system layout.

Heating options

If a fluid requires that no heat loss should occur at the sensor, users can avail of the following heating options:

- Electrical heating, e.g. with electric band heaters ¹⁾
- Via pipes carrying hot water or steam
- Via heating jackets

Vibrations


The high oscillation frequency of the measuring tubes ensures that the correct operation of the measuring system is not influenced by plant vibrations.

6.1.3 Special mounting instructions

Drainability

When installed vertically, the measuring tube can be drained completely and protected against buildup.

When the sensor is installed in a horizontal line, eccentric clamps can be used to ensure complete drainability. When the system is pitched in a specific direction and at a specific slope, gravity can be used to achieve complete drainability. The sensor must be mounted in the correct position to ensure full drainability in the horizontal position. Markings on the sensor show the correct mounting position to optimize drainability.

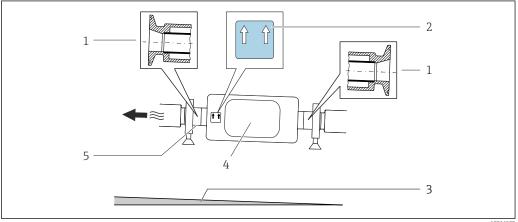

- Eccentric clamp connection
- "This side up" label indicates which side is up
- 3 For DN 8 to 25(3/8 to 1"): Gradient: approx. 2% or 21 mm/m (0.24 in/ft); for DN 40 to 50(1½ to 2"): Gradient approx. 2° or 35 mm/m (0.42 in/ft)
- Transmitter
- Line on the underside indicates the lowest point of the eccentric process connection.

Hygienic compatibility


When installing in hygienic applications, please refer to the information in the "Certificates and approvals/hygienic compatibility" section $\rightarrow \blacksquare 149$

Securing with mounting clamp in the case of hygiene connections

It is not necessary to provide additional support for the sensor for operational performance purposes. If, however, additional support is required for installation purposes, the following dimensions must be observed.

The use of parallel electric band heaters is generally recommended (bidirectional electricity flow). Particular considerations must be made if a 1) single-wire heating cable is to be used. Additional information is provided in the document EA01339D "Installation instructions for electrical trace heating systems".

Use mounting clamp with lining between clamp and measuring instrument.

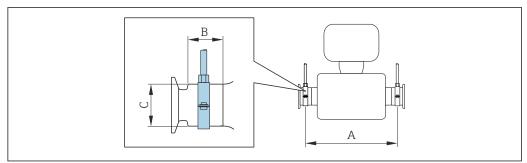

A0030298

DN		A		В		С	
[mm]	[in]	[mm]	[in]	[mm]	[in]	[mm]	[in]
8	3/8	298	11.73	33	1.3	28	1.1
15	1/2	402	15.83	33	1.3	28	1.1
25	1	542	21.34	33	1.3	38	1.5
40	1 ½	658	25.91	36.5	1.44	56	2.2
50	2	772	30.39	44.1	1.74	75	2.95

6.2 Mounting the measuring device

6.2.1 Required tool

For sensor

For flanges and other process connections: use a suitable mounting tool

6.2.2 Preparing the measuring device

- 1. Remove all remaining transport packaging.
- 2. Remove any protective covers or protective caps present from the sensor.
- 3. Remove stick-on label on the electronics compartment cover.


6.2.3 Mounting the measuring device

WARNING

Danger due to improper process sealing!

- ► Ensure that the inside diameters of the gaskets are greater than or equal to that of the process connections and piping.
- ▶ Ensure that the seals are clean and undamaged.
- ► Secure the seals correctly.
- 1. Ensure that the direction of the arrow on the nameplate of the sensor matches the flow direction of the medium.

2. Install the measuring device or turn the transmitter housing so that the cable entries do not point upwards.

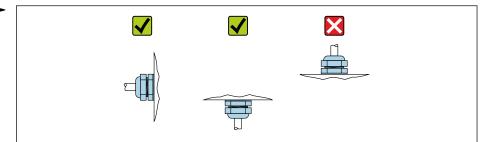


A0029263

6.2.4 Turning the display module


The local display is only available with the following device version: Order code for "Display; Operation", option ${\bf B}$: 4-line; lit, via communication

The display module can be turned to optimize display readability.

Aluminum housing version, AlSi10Mg, coated

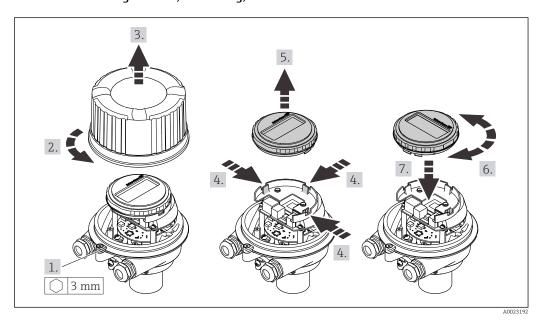

Compact and ultra-compact housing version, hygienic, stainless

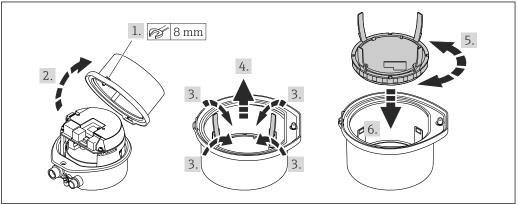

A0023195

6.3 Post-installation check

Is the device undamaged (visual inspection)?		
Does the measuring device conform to the measuring point specifications? For example: Process temperature → 🖺 141 Process pressure (refer to the section on "Pressure-temperature ratings" in the "Technical Information" document) Ambient temperature Measuring range		
Has the correct orientation for the sensor been selected? According to sensor type According to medium temperature According to medium properties (outgassing, with entrained solids)		
Does the arrow on the sensor nameplate match the direction of flow of the fluid through the piping $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $		
Are the measuring point identification and labeling correct (visual inspection)?		
Is the device adequately protected from precipitation and direct sunlight?		
Are the securing screw and securing clamp tightened securely?		

7 Electrical connection

WARNING

Live parts! Incorrect work performed on the electrical connections can result in an electric shock.

- ► Set up a disconnecting device (switch or power-circuit breaker) to easily disconnect the device from the supply voltage.
- ► In addition to the device fuse, include an overcurrent protection unit with max. 16 A in the plant installation.

7.1 Electrical safety

In accordance with applicable national regulations.

7.2 Connecting requirements

7.2.1 Required tools

- For cable entries: Use corresponding tools
- For securing clamp (on aluminum housing): Allen screw3 mm
- For securing screw (for stainless steel housing): open-ended wrench 8 mm
- Wire stripper
- When using stranded cables: crimper for wire end ferrule

7.2.2 Requirements for connecting cable

The connecting cables provided by the customer must fulfill the following requirements.

Permitted temperature range

- The installation quidelines that apply in the country of installation must be observed.
- The cables must be suitable for the minimum and maximum temperatures to be expected.


Power supply cable (incl. conductor for the inner ground terminal)

Standard installation cable is sufficient.

Signal cable

PROFINET

Standard IEC 61156-6 specifies CAT 5 as the minimum category for a cable used for PROFINET. CAT 5e and CAT 6 are recommended.

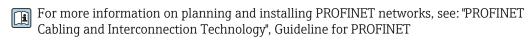

Cable diameter

- Cable glands supplied:
 M20 × 1.5 with cable Ø 6 to 12 mm (0.24 to 0.47 in)
- Spring terminals:
 Wire cross-sections 0.5 to 2.5 mm² (20 to 14 AWG)

7.2.3 Terminal assignment

Transmitter

PROFINET connection version


Order code for "Output", option **R**

Depending on the housing version, the transmitters can be ordered with terminals or device plugs.

Order code "Housing"	Connection me	thods available	Possible options for order code
	Output	Power supply	"Electrical connection"
Options A, B	Device plug connectors → 🖺 28	Terminals	■ Option L : plug M12x1 + thread NPT ½" ■ Option N : plug M12x1 + coupling M20 ■ Option P : plug M12x1 + thread G ½" ■ Option U : plug M12x1 + thread M20
Options A, B, C	Device plug connectors → 🗎 28	Device plug connectors → 🗎 28	Option Q : 2 x plug M12x1

Order code for "Housing":

- Option **A**: compact, coated aluminum
- Option **B**: compact, hygienic, stainless
- Option **C** ultra-compact, hygienic, stainless

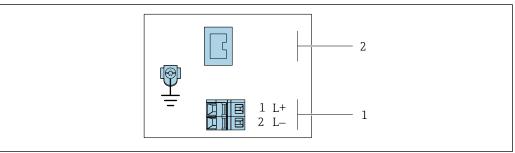

A001705

- 7 PROFINET terminal assignment
- 1 Power supply: DC 24 V
- 2 PROFINET

		Terminal number				
Order code "Output"	Power	supply	Output			
	2 (L-)	1 (L+)	Device plug M12x1			
Option R	DC 2	24 V	PROFINET			
Order code for "Output": Option R: PROFINET						

7.2.4 Pin assignment, device plug

Supply voltage

2	Pin		Assignment
	1	L+	DC 24 V
3 0 0 0 1	2		Not assigned
	3		Not assigned
5	4	L-	DC 24 V
4 A0016809	5		Grounding/shielding
	Cod	ling	Plug/socket
	A	A	Plug

Device plug for signal transmission (device side)

2	Pin		Assignment
	1	+	TD +
1 3	2	+	RD +
	3	-	TD -
	4	-	RD -
4 A0016812	Cod	ling	Plug/socket
	I)	Socket

7.2.5 Preparing the measuring device

NOTICE

Insufficient sealing of the housing!

Operational reliability of the measuring device could be compromised.

- ▶ Use suitable cable glands corresponding to the degree of protection.
- 1. Remove dummy plug if present.
- 2. If the measuring device is supplied without cable glands: Provide suitable cable gland for corresponding connecting cable.
- 3. If the measuring device is supplied with cable glands:

 Observe requirements for connecting cables →

 26.

7.3 Connecting the measuring device

NOTICE


An incorrect connection compromises electrical safety!

- ► Have electrical connection work carried out by appropriately trained specialists only.
- ▶ Observe applicable federal/national installation codes and regulations.
- ► Comply with local workplace safety regulations.
- ► Always connect the protective ground cable ⊕ before connecting additional cables.
- ► When using in potentially explosive atmospheres, observe the information in the device-specific Ex documentation.


7.3.1 Connecting the transmitter

The connection of the transmitter depends on the following order codes:

- Housing version: compact or ultra-compact
- Connection version: device plug or terminals

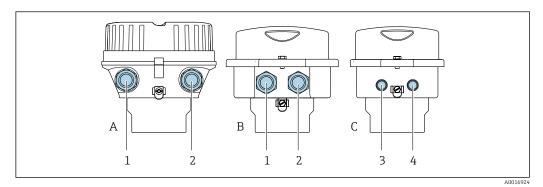

- 8 Housing versions and connection versions
- A Housing version: compact, coated, aluminum
- B Housing version: compact, hygienic, stainless
- 1 Cable entry or device plug for signal transmission
- 2 Cable entry or device plug for supply voltage
- C Housing version: ultra-compact, hygienic, stainless
- 3 Device plug for signal transmission
- 4 Device plug for supply voltage

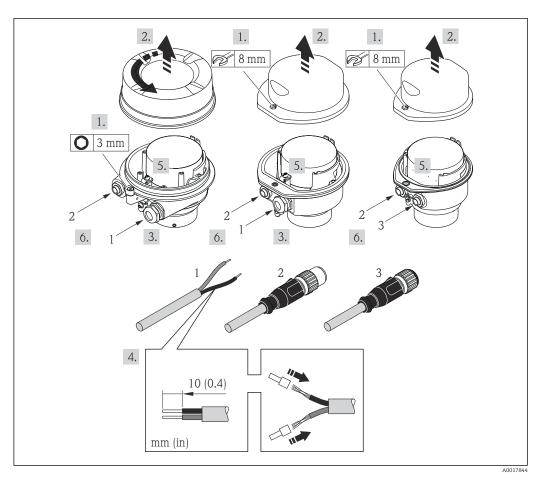

- **■** 9 Device versions with connection examples
- 1 Cable
- 2 Device plug for signal transmission
- 3 Device plug for supply voltage

For device version with device pluq: follow step 6 only.

- 1. Depending on the housing version, loosen the securing clamp or fixing screw of the housing cover.
- 2. Push the cable through the cable entry . To ensure tight sealing, do not remove the sealing ring from the cable entry.
- 3. Strip the cable and cable ends. In the case of stranded cables, also fit ferrules.
- 4. Connect the cable in accordance with the terminal assignment or the device plug pin assignment.
- 5. Depending on the device version, tighten the cable glands or plug in the device plug and tighten .

6. **AWARNING**

Housing degree of protection may be voided due to insufficient sealing of the housing.

► Screw in the screw without using any lubricant. The threads on the cover are coated with a dry lubricant.

Reverse the removal procedure to reassemble the transmitter.

7.3.2 Potential equalization

Requirements

Please consider the following to ensure correct measurement:

- Same electrical potential for the fluid and sensor
- Company-internal grounding concepts

For devices intended for use in hazardous locations, please observe the guidelines in the Ex documentation (XA).

30


Connection example, standard scenario

Connection example in special situations

7.4 Special connection instructions

7.4.1 Connection examples

PROFINET

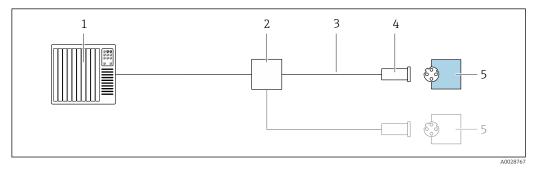

■ 10 Connection example for PROFINET

- 1 Control system (e.g. PLC)
- 2 Ethernet switch
- 3 Observe cable specifications
- 4 Device plug
- 5 Transmitter

7.5 Hardware settings

7.5.1 Setting the device name

A measuring point can be quickly identified within a plant on the basis of the tag name. The tag name is equivalent to the device name (name of station of the PROFINET specification). The factory-assigned device name can be changed using the DIP switches or the automation system.

Example of device name (factory setting): EH-Promass100-XXXXX

ЕН	Endress+Hauser		
Promass	Instrument family		
100	Transmitter		
XXXXX	Serial number of the device		

The device name currently used is displayed in Setup \rightarrow Name of station.

Setting the device name using the DIP switches

The last part of the device name can be set using DIP switches 1-8. The address range is between 1 and 254 (factory setting: serial number of the device)

Overview of the DIP switches

DIP switches	Bit	Description	
1	1		
2	2		
3	4		
4	8	Configurable part of the device name	
5	16	Configurable part of the device name	
6	32		
7	64		
8	128		
9	-	Enable hardware write protection	
10	-	Default IP address: use 192.168.1.212	


Example: set the device name EH-PROMASS100-065

DIP switches	ON/OFF	Bit
1	ON	1
26	OFF	-
7	ON	64
8	OFF	-

Setting the device name

Risk of electric shock when opening the transmitter housing.

▶ Disconnect the device from the power supply before opening the transmitter housing.

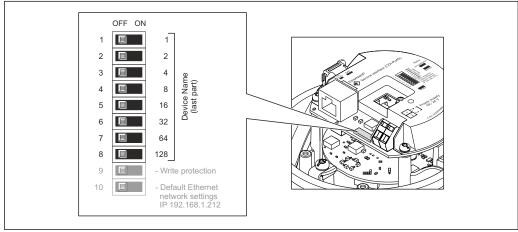

- 1. Depending on the housing version, loosen the securing clamp or fixing screw of the housing cover.
- 2. Depending on the housing version, unscrew or open the housing cover and disconnect the local display from the main electronics module where necessary → ■ 147.

- 3. Set the desired device name using the corresponding DIP switches on the I/O electronics module.
- 4. Reverse the removal procedure to reassemble the transmitter.
- 5. Reconnect the device to the power supply. The configured device address is used once the device is restarted.
- If the device is reset via the PROFINET interface, it is not possible to reset the device name to the factory setting. The value 0 is used instead of the device name.

Setting the device name via the automation system

DIP switches 1-8 must all be set to **OFF** (factory setting) or all be set to **ON** to be able to set the device name via the automation system.

The complete device name (name of station) can be changed individually via the automation system.




- The serial number used as part of the device name in the factory setting is not saved. It is not possible to reset the device name to the factory setting with the serial number. The value 0 is used instead of the serial number.
 - When assigning the device name via the automation system, enter the device name in lower-case letters.

7.6 Ensuring the degree of protection

The measuring device fulfills all the requirements for the degree of protection IP66/67, Type 4X enclosure.

To quarantee the degree of protection IP66/67, Type 4X enclosure, carry out the following steps after the electrical connection:

- 1. Check that the housing seals are clean and fitted correctly.
- 2. Dry, clean or replace the seals if necessary.
- 3. Tighten all housing screws and screw covers.
- 4. Firmly tighten the cable glands.
- 5. To ensure that moisture does not enter the cable entry: Route the cable so that it loops down before the cable entry ("water trap").

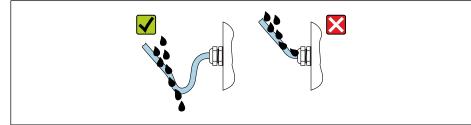

6. The cable glands supplied do not provide any housing protection if they are not used. Therefore, they must be replaced by dummy plugs that match the housing protection.


7.7 Post-connection check

Are cables or the device undamaged (visual inspection)?	
Do the cables used comply with the requirements → 🖺 26?	
Do the mounted cables have adequate strain relief?	

Are all cable glands installed, securely tightened and leak-tight? Cable run with "water trap" → 🖺 33?	
Depending on the device version: are all the device plugs firmly tightened $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $	
Does the supply voltage match the specifications on the transmitter nameplate $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $	
Is the terminal assignment $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $	
If supply voltage is present, is the power LED on the electronics module of the transmitter lit green $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $	
Depending on the device version, is the securing clamp or fixing screw firmly tightened?	

8 Operation options


8.1 Overview of operating options

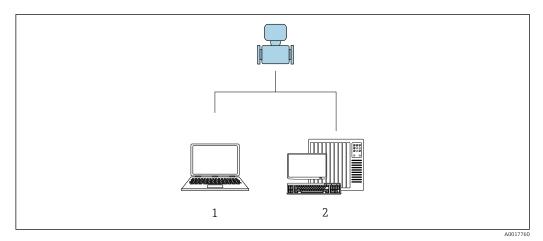

- Computer with Web browser (e.g. Internet Explorer) or with "FieldCare" operating tool
- Automation system, e.g. Siemens S7-300 or S7-1500 with Step7 or TIA portal and latest GSD file.

8.2 Structure and function of the operating menu

8.2.1 Structure of the operating menu

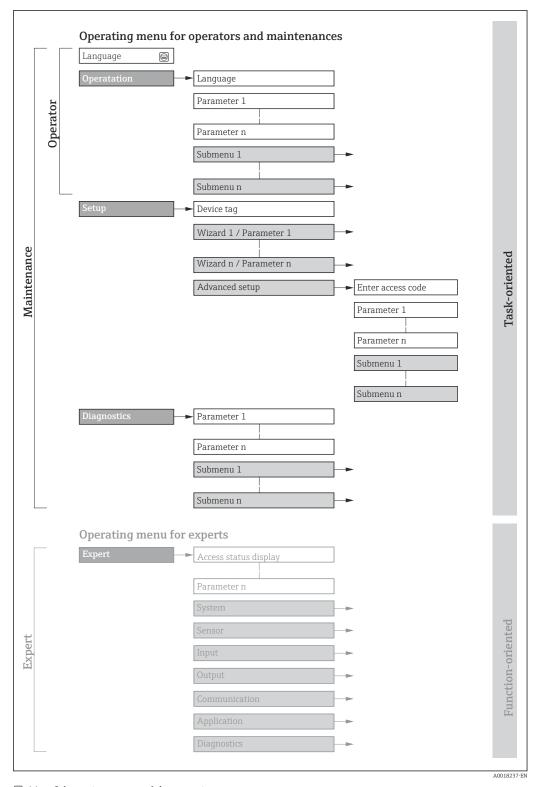

 $\blacksquare 11$ Schematic structure of the operating menu

8.2.2 Operating philosophy

The individual parts of the operating menu are assigned to certain user roles (operator, maintenance etc.). Each user role contains typical tasks within the device lifecycle.


Menu/parameter		User role and tasks	Content/meaning
Language	Task- oriented	Role "Operator", "Maintenance" Tasks during operation: Configuration of the operational display Reading measured values	 Defining the operating language Defining the Web server operating language Resetting and controlling totalizers
Operation	peration		 Configuring the operational display (e.g. display format, display contrast) Resetting and controlling totalizers
Setup		"Maintenance" role Commissioning: Configuration of the measurement	Submenus for fast commissioning: Configuration of the system units Definition of the medium Configuration of the operational display Configuration of the low flow cut off Configuration of the detection of partially filled and empty pipes
			Advanced setup For more customized configuration of the measurement (adaptation to special measuring conditions) Configuration of totalizers Administration (define access code, reset measuring device)
Diagnostics		"Maintenance" role Troubleshooting: Diagnostics and elimination of process and device errors Measured value simulation	Contains all parameters for error detection and analyzing process and device errors: Diagnostic list Contains up to 5 currently pending diagnostic messages. Event logbook Contains event messages that have occurred. Device information Contains information for identifying the device. Measured values Contains all current measured values. Heartbeat The functionality of the device is checked on demand and the verification results are documented. Simulation Is used to simulate measured values or output values.
Expert	Function- oriented	Tasks that require detailed knowledge of the function of the device: Commissioning measurements under difficult conditions Optimal adaptation of the measurement to difficult conditions Detailed configuration of the communication interface Error diagnostics in difficult cases	Contains all the parameters of the device and makes it possible to access these parameters directly using an access code. The structure of this menu is based on the function blocks of the device: System Contains all higher-level device parameters that do not pertain either to the measurement or to measured value communication. Sensor Configuration of the measurement. Communication Configuration of the digital communication interface and the Web server. Application Configuration of the functions that go beyond the actual measurement (e.g. totalizer). Diagnostics Error detection and analysis of process and device errors and for device simulation and Heartbeat Technology.

8.3 Displaying the measured values via the local display (optionally available)

8.3.1 Operational display

The local display is optionally available:

Order code for "Display; operation", option B "4-line, illuminated; via communication".

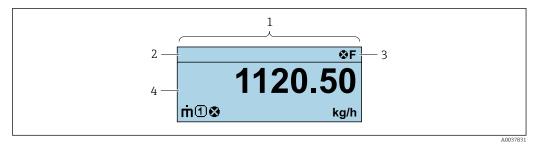

1 Operational display

- 2 Tag name
- 3 Status area
- 4 Display area for measured values (4-line)

Status area

The following symbols appear in the status area of the operational display at the top right:

- Status signals
 - **F**: Failure
 - **C**: Function check
 - **S**: Out of specification
 - M: Maintenance required
- Diagnostic behavior
 - 🐼: Alarm
 - <u>M</u>: Warning
- 🛱: Locking (the device is locked via the hardware)
- ←: Communication (communication via remote operation is active)

Display area

In the display area, each measured value is prefaced by certain symbol types for further description:

Measured variables

Symbol	Meaning
ṁ	Mass flow
Ü	Volume flowCorrected volume flow
P	DensityReference density
	Temperature
Σ	Totalizer The measurement channel number indicates which of the three totalizers is displayed.

Measurement channel numbers

Symbol	Meaning
14	Measurement channel 1 to 4

The measurement channel number is displayed only if more than one channel is present for the same measured variable type (e.g. Totalizer 1 to 3).

Diagnostic behavior

The diagnostic behavior pertains to a diagnostic event that is relevant to the displayed measured variable. For information on the symbols

The number and display format of the measured values can only be configured via the control system or Web server.

8.3.2 User roles and related access authorization

The two user roles "Operator" and "Maintenance" have different write access to the parameters if the customer defines a user-specific access code. This protects the device configuration from unauthorized access .

Defining access authorization for user roles

An access code is not yet defined when the device is delivered from the factory. Access authorization (read and write access) to the device is not restricted and corresponds to the "Maintenance" user role.

- ▶ Define the access code.
 - The "Operator" user role is redefined in addition to the "Maintenance" user role. Access authorization differs for the two user roles.

Access authorization to parameters: "Maintenance" user role

Access code status	Read access	Write access
An access code has not yet been defined (factory setting).	V	V
After an access code has been defined.	V	✓ ¹⁾

1) The user only has write access after entering the access code.

Access authorization to parameters: "Operator" user role

Access code status	Read access	Write access
After an access code has been defined.	V	_ 1)

- Despite the defined access code, certain parameters can always be modified and thus are excluded from the write protection, as they do not affect the measurement. Refer to the "Write protection via access code" section
- The user role with which the user is currently logged on is indicated by the . Navigation path:

8.4 Access to operating menu via web browser

8.4.1 PROFINET with Ethernet-APL

Device use	Device connection to an APL field switch The device may only be operated according to the following APL port classifications: If used in hazardous areas: SLAA or SLAC 1) If used in non-hazardous areas: SLAX Connection values of APL field switch (for example corresponds to APL port classification SPCC or SPAA): Maximum input voltage: 15 V _{DC} Minimum output values: 0.54 W
	Device connection to an SPE switch If used in non-hazardous areas: suitable SPE switch
	SPE switch prerequisite: Support of 10BASE-T1L standard Support of PoDL power class 10, 11 or 12 Detection of SPE field devices without integrated PoDL module
	Connection values of SPE switch: • Maximum input voltage: 30 V _{DC} • Minimum output values: 1.85 W
PROFINET	According to IEC 61158 and IEC 61784
Ethernet-APL	According to IEEE 802.3cg, APL port profile specification v1.0, galvanically isolated
Data transfer	10 Mbit/s
Current consumption	Transmitter
	Max. 55.56 mA
Permitted supply voltage	 Ex: 9 to 15 V Non-Ex: 9 to 32 V
Network connection	With integrated reverse polarity protection

1) For more information on using the device in the hazardous area, see the Ex-specific Safety Instructions

8.4.2 Prerequisites

Computer hardware

Hardware	Interface		
	CDI-RJ45	WLAN	
Interface	The computer must have an RJ45 interface.	The operating unit must have a WLAN interface.	
Connection	Standard Ethernet cable with RJ45 connector.	Connection via Wireless LAN.	
Display	Recommended size: ≥12" (depends on the screen resolution)		

Computer software

Software	Interface		
	CDI-RJ45	WLAN	
Recommended operating systems	 Microsoft Windows 8 or higher. Mobile operating systems: iOS Android Microsoft Windows XP is supported Microsoft Windows 7 is supported. 		
Web browsers supported	 Microsoft Internet Explorer 8 or higher Microsoft Edge Mozilla Firefox Google Chrome Safari 		

$Computer\ settings$

User rights	Appropriate user rights (e.g. administrator rights) for TCP/IP and proxy server settings are necessary (for adjusting the IP address, subnet mask etc.).
Proxy server settings of the Web browser	The web browser setting <i>Use a Proxy Server for Your LAN</i> must be deselected .
JavaScript	JavaScript must be enabled.
	If JavaScript cannot be enabled: Enter http://XXX.XXX.XXX/servlet/basic.html in the address bar of the web browser, e.g. http://192.168.1.212/servlet/basic.html. A fully functional but simplified version of the operating menu structure starts in the web browser.
Network connections	Only the active network connections to the measuring device should be used.
	Switch off all other network connections.



Measuring device: Via CDI-RJ45 service interface

Device	CDI-RJ45 service interface
Measuring device	The measuring device has an RJ45 interface.
Web server	Web server must be enabled; factory setting: ON

8.4.3 Establishing a connection

Via service interface (CDI-RJ45)

Preparing the measuring device

Configuring the Internet protocol of the computer

The IP address can be assigned to the measuring device in a variety of ways:

- Dynamic Configuration Protocol (DCP), factory setting:
 The IP address is automatically assigned to the measuring device by the automation system (e.g. Siemens S7).
- Hardware addressing:
- The IP address is set via DIP switches .
- Software addressing: The IP address is entered via the **IP address** parameter ($\Rightarrow \triangleq 65$).
- DIP switch for "Default IP address":
 To establish the network connection via the service interface (CDI-RJ45): the fixed IP address 192.168.1.212 is used .

The device works with the Dynamic Configuration Protocol (DCP) ex-works, i.e. the IP address of the measuring device is automatically assigned by the automation system (e.g. Siemens S7).

To establish a network connection via the service interface (CDI-RJ45): set the "Default IP address" DIP switch to **ON**. The measuring device then has the fixed IP address: 192.168.1.212. The fixed IP address 192.168.1.212 can now be used to establish the connection to the network.


- 1. Via DIP switch 2, activate the default IP address 192.168.1.212: .
- 2. Switch on the measuring device.
- 3. Connect the computer to the RJ45 plug via the standard Ethernet cable $\rightarrow \triangleq 148$.
- 4. If a 2nd network card is not used, close all the applications on the notebook.
 - Applications requiring Internet or a network, such as e-mail, SAP applications, Internet or Windows Explorer.
- 5. Close any open Internet browsers.
- 6. Configure the properties of the Internet protocol (TCP/IP) as defined in the table:

IP address	192.168.1.XXX; for XXX all numerical sequences except: 0, 212 and 255 \rightarrow e.g. 192.168.1.213
Subnet mask	255.255.255.0
Default gateway	192.168.1.212 or leave cells empty

Starting the Web browser

1. Start the Web browser on the computer.

- 2. Enter the IP address of the web server in the address line of the web browser: 192.168.1.212
 - ► The login page appears.

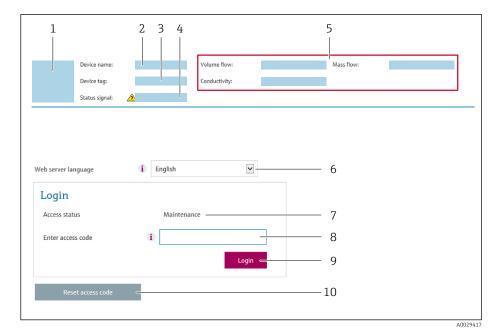

- 1 Picture of device
- 2 Device name
- 3 Device tag
- 4 Status signal
- 5 Current measured values
- 6 Operating language
- 7 User role
- 8 Access code
-) Login
- 10 Reset access code


8.4.4 Logging on

- 1. Select the preferred operating language for the Web browser.
- 2. Enter the user-specific access code.
- 3. Press **OK** to confirm your entry.

Access code 0000 (factory setting); can be changed by customer

If no action is performed for 10 minutes, the Web browser automatically returns to the login page.

8.4.5 User interface

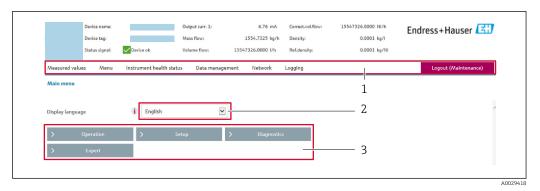

- 1 Function row
- 2 Local display language
- 3 Navigation area

Header

The following information appears in the header:

- Device name
- Device tag
- Device status with status signal \rightarrow $\stackrel{\triangle}{=}$ 91
- Current measured values

Function row

Functions	Meaning
Measured values	Displays the measured values of the device
Menu	 Access to the operating menu from the measuring device The structure of the operating menu is the same as for the operating tools Detailed information on the structure of the operating menu: see the Description of Device Parameters
Device status	Displays the diagnostic messages currently pending, listed in order of priority
Data management	Data exchange between computer and measuring device: Device configuration: Load settings from the device (XML format, save configuration) Save settings to the device (XML format, restore configuration) Logbook - Export Event logbook (.csv file) Documents - Export documents: Export backup data record (.csv file, create documentation of the measuring point configuration) Verification report (PDF file, only available with the "Heartbeat Verification" application package) File for system integration - If using fieldbuses, upload device drivers for system integration from the measuring device: PROFINET: GSD file
Network	Configuration and checking of all the parameters required for establishing the connection to the measuring device: Network settings (e.g. IP address, MAC address) Device information (e.g. serial number, firmware version)
Logout	End the operation and call up the login page

Navigation area

The menus, the associated submenus and parameters can be selected in the navigation area.

Working area

Depending on the selected function and the related submenus, various actions can be performed in this area:

- Configuring parameters
- Reading measured values
- Calling up help text
- Starting an upload/download

8.4.6 Disabling the Web server

The Web server of the measuring device can be switched on and off as required using the **Web server functionality** parameter.

Navigation

"Expert" menu \rightarrow Communication \rightarrow Web server

Parameter overview with brief description

Parameter	Description	Selection
Web server functionality	Switch the Web server on and off.	OffHTML OffOn

Function scope of the "Web server functionality" parameter

Option	Description
Off	The Web server is completely disabled.Port 80 is locked.
On	 The complete Web server functionality is available. JavaScript is used. The password is transferred in an encrypted state. Any change to the password is also transferred in an encrypted state.

Enabling the Web server

If the Web server is disabled it can only be re-enabled with the **Web server functionality** parameter via the following operating options:

- Via Bedientool "FieldCare"
- Via "DeviceCare" operating tool

8.4.7 Logging out

- Before logging out, perform a data backup via the **Data management** function (upload configuration from device) if necessary.
- 1. Select the **Logout** entry in the function row.
 - ► The home page with the Login box appears.
- 2. Close the Web browser.
- 3. If no longer needed:

 Reset the modified properties of the Internet protocol (TCP/IP) →

 42.
- If communication with the web server was established via the default IP address 192.168.1.212, DIP switch no. 10 must be reset (from **ON** → **OFF**). Afterwards, the IP address of the device is active again for network communication.


Access to the operating menu via the operating tool 8.5

8.5.1 Connecting the operating tool

Via PROFINET network

This communication interface is available in device versions with PROFINET.

Star topology

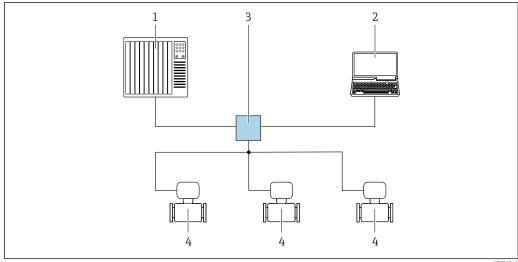


■ 12 Options for remote operation via PROFINET network: star topology

- Automation system, e.g. Simatic S7 (Siemens)
- Computer with Web browser (e.g. Internet Explorer) for accessing the integrated Web server or computer with operating tool (e.g. FieldCare, DeviceCare, SIMATIC PDM) with COM DTM "CDI Communication TCP/IP"
- Standard Ethernet switch, e.g. Scalance X204 (Siemens)
- Measuring device

Via service interface (CDI-RJ45)

PROFINET

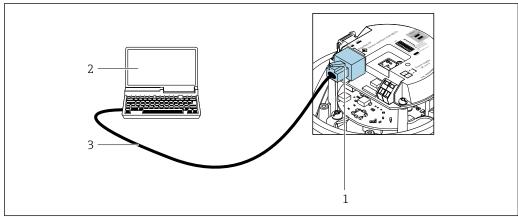

■ 13 Connection for order code for "Output", option R: PROFINET

- Service interface (CDI-RJ45) and PROFINET interface of the measuring device with access to the integrated
- $Computer\ with\ web\ browser\ (e.g.\ Internet\ Explorer)\ for\ accessing\ the\ integrated\ web\ server\ or\ with\ "Field Care"$ operating tool with COM DTM "CDI Communication TCP/IP"
- Standard Ethernet connecting cable with RJ45 plug

8.5.2 FieldCare

Function scope

FDT (Field Device Technology)-based plant asset management tool from Endress+Hauser. It can configure all smart field units in a system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition.

Access is via:

CDI-RJ45 service interface

Typical functions:

- Configuring parameters of transmitters
- Loading and saving device data (upload/download)
- Documentation of the measuring point
- Visualization of the measured value memory (line recorder) and event logbook
- For additional information about FieldCare, see Operating Instructions BA00027S and BA00059S


Source for device description files

See information \rightarrow $\stackrel{\triangle}{=}$ 49

Establishing a connection

- 1. Start FieldCare and launch the project.
- 2. In the network: Add a device.
 - ► The **Add device** window opens.
- 3. Select the **CDI Communication TCP/IP** option from the list and press **OK** to confirm.
- 4. Right-click **CDI Communication TCP/IP** and select the **Add device** option in the context menu that opens.
- 5. Select the desired device from the list and press **OK** to confirm.
 - ► The CDI Communication TCP/IP (Configuration) window opens.
- 6. Enter the device address in the **IP address** field and press **Enter** to confirm: 192.168.1.212 (factory setting); if the IP address is not known.
- 7. Establish the online connection to the device.
- For additional information, see Operating Instructions BA00027S and BA00059S

User interface

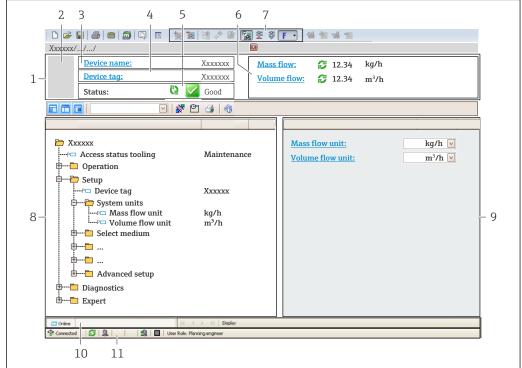

A0021051-EN

- 1 Header
- 2 Picture of device
- 3 Device name
- 4 Tag name
- 5 Status area with status signal $\rightarrow = 91$
- 6 Display area for current measured values
- 7 Edit toolbar with additional functions such as save/load, event list and create documentation
- 8 Navigation area with operating menu structure
- 9 Working area
- 10 Range of action
- 11 Status area

8.5.3 DeviceCare

Function scope

Tool to connect and configure Endress+Hauser field devices.

The fastest way to configure Endress+Hauser field devices is with the dedicated "DeviceCare" tool. Together with the device type managers (DTMs) it presents a convenient, comprehensive solution.



For details, see Innovation Brochure INO1047S $\,$

Source for device description files

See information $\rightarrow \triangle 49$

System integration 9

Overview of device description files 9.1

9.1.1 Current version data for the device

Firmware version	01.00.zz	 On the title page of the Operating Instructions On the transmitter nameplate Firmware version Diagnostics → Device information → Firmware version
Release date of firmware version	12.2015	-
Manufacturer ID	0x11	Manufacturer ID Diagnostics → Device information → Manufacturer ID
Device ID	0x844A	Device ID Expert → Communication → PROFINET configuration → PROFINET information → Device ID
Device type ID	Promass 100	Device Type Expert → Communication → PROFINET configuration → PROFINET information → Device Type
Device revision	1	Device revision Expert → Communication → PROFINET configuration → PROFINET information → Device revision
PROFINET version	2.3.x	-

For an overview of the various firmware versions for the device

9.1.2 Operating tools

The suitable device description file for the individual operating tools is listed in the table below, along with information on where the file can be acquired.

Operating tool via Service interface (CDI-RJ45)	Sources for obtaining device descriptions
FieldCare	 www.endress.com → Download Area USB stick (contact Endress+Hauser) DVD (contact Endress+Hauser)
DeviceCare	 www.endress.com → Download Area CD-ROM (contact Endress+Hauser) DVD (contact Endress+Hauser)

9.2 Device master file (GSD)

In order to integrate field devices into a bus system, PROFINET needs a description of the device parameters, such as output data, input data, data format and data volume.

These data are available in the device master file (GSD) which is provided to the automation system when the communication system is commissioned. In addition device bit maps, which appear as icons in the network structure, can also be integrated.

The device master file (GSD) is in XML format, and the file is created in the GSDML description markup language.

With the PA Profile 4.02 device master file (GSD) it is possible to exchange field devices made by different manufacturers without having to reconfigure.

The use of two different device master files (GSDs) is possible: the manufacturer-specific GSD and the PA-Profile GSD.

9.2.1 File name of the manufacturer-specific device master file (GSD)

Example of the name of a device master file:

GSDML-V2.3.x-EH-PROMASS 100-yyyymmdd.xml

GSDML	Description language	
V2.3.x	Version of the PROFINET specification	
ЕН	Endress+Hauser	
PROMASS	Instrument family	
100	Transmitter	
yyyymmdd	Date of issue (yyyy: year, mm: month, dd: day)	
.xml	File name extension (XML file)	

9.2.2 File name of the PA Profile device master file (GSD)

9.3 Cyclic data transmission

9.3.1 Overview of the modules

The following tables shows which modules are available to the measuring device for cyclic data exchange. Cyclic data exchange is performed with an automation system.

Measuring device		Direction	Control system
Modules	Slot	Data flow	Control system
Analog Input module → 🖺 51	1 to 14	→	
Digital Input module → 🖺 52	1 to 14	→	
Diagnose Input module → 🗎 53	1 to 14	→	
Analog Output module → 🖺 56	18, 19, 20	+	220222
Digital Output module → 🖺 57	21, 22	+	PROFINET
Totalizer 1 to 3 → 🖺 54	15 to 17	← →	
Heartbeat Verification module → 🖺 58	23	← →	
		,	

9.3.2 Description of the modules



The data structure is described from the perspective of the automation system:

- Input data: Are sent from the measuring device to the automation system.
- Output data: Are sent from the automation system to the measuring device.

Analog Input module

Transmit input variables from the measuring device to the automation system.

Analog Input modules cyclically transmit the selected input variables, along with the status, from the measuring device to the automation system. The input variable is depicted in the first four bytes in the form of a floating point number as per the IEEE 754 standard. The fifth byte contains status information pertaining to the input variable.

Selection: input variable

Slot	Input variables
1 to 14	■ Mass flow ■ Volume flow ■ Corrected volume flow ■ Target mass flow ■ Density ■ Reference density ■ Concentration ■ Temperature ■ Carrier tube temperature ²⁾ ■ Electronic temperature ■ Oscillation frequency ■ Oscillation amplitude ■ Frequency fluctuation ■ Oscillation damping ■ Tube damping fluctuation ■ Signal asymmetry ■ Exciter current

- 1) Only available with the Concentration application package
- 2) Only available with the Heartbeat Verification application package

Data structure

Input data of Analog Input

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5
Measured value: floating point number (IE		EEE 754)	Status 1)	

Application-specific Input module

Transmit compensation values from the measuring device to the automation system.

The Application-specific Input module cyclically transmits compensation values, including the status, from the measuring device to the automation system. The compensation value is depicted in the first four bytes in the form of a floating point number as per the IEEE 754 standard. The fifth byte contains standardized status information pertaining to the compensation value.

Assigned compensation values



The configuration is performed via: Expert \rightarrow Application \rightarrow Application specific calculations \rightarrow Process variables

Slot	Compensation value	
31	Application-specific Input module	
32	Application-specific Input module	

Data structure

Input data of Application-specific Input module

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5
Measure	Measured value: floating point number (IEE		EEE 754)	Status 1)

1) Status coding

Failsafe mode

A failsafe mode can be defined for using the compensation values.

If the status is GOOD or UNCERTAIN, the compensation values transmitted by the automation system are used. If the status is BAD, the failsafe mode is activated for the use of the compensation values.

Parameters are available per compensation value to define the failsafe mode: Expert \rightarrow Application \rightarrow Application specific calculations \rightarrow Process variables

Fail safe type parameter

- Fail safe value option: The value defined in the Fail safe value parameter is used.
- Fallback value option: The last valid value is used.
- Off option: Failsafe mode is disabled.

Fail safe value parameter

Use this parameter to enter the compensation value which is used if the Fail safe value option is selected in the Fail safe type parameter.

Digital Input module

Transmit digital input values from the measuring device to the automation system.

Digital input values are used by the measuring device to transmit the state of device functions to the automation system.

Digital Input modules cyclically transmit discrete input values, including the status, from the measuring device to the automation system. The discrete input value is depicted in the first byte. The second byte contains standardized status information pertaining to the input value.

Selection: device function

Slot	Device function	Status (meaning)
1 to 14	Empty pipe detection	 0 (device function not active)
	Low flow cut off	■ 1 (device function active)

Data structure

Input data of Digital Input

Byte 1	Byte 2
Digital Input	Status 1)

1) Status coding $\rightarrow \triangleq 59$

Diagnose Input module

Transmit discrete input values (diagnostic information) from the measuring device to the automation system.

Diagnostic information is used by the measuring device to transmit the device status to the automation system.

Diagnose Input modules transmit discrete input values from the measuring device to the automation system. The first two bytes contain the information regarding the diagnostic information number ($\Rightarrow \implies 96$). The third byte provides the status.

Selection: device function

Slot	Device function	Status (meaning)
1 to 14	Last diagnostics	Diagnostic information number
	Current diagnosis	(→ 🖺 96) and status

Data structure

Input data of Diagnose Input

Byte 1	Byte 2	Byte 3	Byte 4
Diagnostic information number		Status	Value 0

Status

Coding (hex)	Status
0x00	No device error is present.
0x01	Failure (F): A device error is present. The measured value is no longer valid.

Coding (hex)	Status
0x02	Function check (C): The device is in service mode (e.g. during a simulation).
0x04	Maintenance required (M): Maintenance is required. The measured value is still valid.
0x08	Out of specification (S): The device is being operated outside its technical specification limits (e.g. process temperature range).

Totalizer module

The Totalizer module consists of the Totalizer Value, Totalizer Control and Totalizer Mode submodules.

Totalizer Value submodule

Transmit transmitter value from the device to the automation system.

Totalizer modules cyclically transmit a selected totalizer value, along with the status, from the measuring device to the automation system via the Totalizer Value submodule. The totalizer value is depicted in the first four bytes in the form of a floating point number as per the IEEE 754 standard. The fifth byte contains status information pertaining to the totalizer value.

Selection: input variable

Slot	Sub-slot	Input variable	
1517	1	 Mass flow Volume flow Corrected volume flow Target mass flow 1) Carrier mass flow 1) 	

1) Only available with the Concentration application package

Data structure of input data (Totalizer Value submodule)

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5
Measure	d value: floating	EEE 754)	Status 1)	

Totalizer Control module

Transmit totalizer value from the measuring device to the automation system.

Selection: input variable

Data structure

Totalizer Control input data

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5
Measure	d value: floating	point number (IE	EEE 754)	Status 1)

1) Status coding

Selection: output variable

Transmit the control value from the automation system to the measuring device.

Slot	Sub-slot	Value	Input variable
	1	Reset to "0"	
70 to 71	1	2	Preset value
70 t0 /1	1	3	Stop
	4	Totalize	

Data structure

Totalizer Control output data

Byte 1	
Control variable	

Totalizer Control submodule

Control the totalizer via the automation system.

Selection: control totalizer

Slot	Sub-slot	Value	Control totalizer
	1517 ₂	0	Totalize
		1	Reset + hold
15 17		2	Preset + hold
1517		3	Reset + totalize
		4	Preset + totalize
		5	Hold

Data structure of output data (Totalizer Control submodule)

	Byte 1
Cor	ntrol variable

Totalizer Mode submodule

Configure the totalizer via the automation system.

Selection: totalizer configuration

Slot	Sub-slot	Value	Control totalizer
		0	Balancing
1517	3	1	Balance the positive flow
		2	Balance the negative flow

Data structure of output data (Totalizer Mode submodule)

Byte 1
Configuration variable

Analog Output module

Transmit compensation values from the automation system to the measuring device.

Analog Output modules cyclically transmit compensation values, along with the status and the associated unit, from the automation system to the measuring device. The compensation value is depicted in the first four bytes in the form of a floating point number as per the IEEE 754 standard. The fifth byte contains standardized status information pertaining to the compensation value. The unit is transmitted in the sixth and seventh byte.

Assigned compensation values

i

The configuration is performed via: Expert \rightarrow Sensor \rightarrow External compensation

Slot	Compensation value
18	External pressure
19	External temperature
20	External reference density
29	External value for % S&W (sediment and water) 1)
30	External value for % Water cut ¹⁾

1) Only available with the Petroleum application package.

Available units

Pressure		Tempe	Temperature		Density		Percent	
Unit code	Unit	Unit code	Unit	Unit code	Unit	Unit code	Unit	
1610	Ра а	1001	°C	32840	kg/Nm³	1342	%	
1616	kPa a	1002	°F	32841	kg/Nl			
1614	МРа а	1000	K	32842	g/Scm ₃			
1137	bar	1003	°R	32843	kg/Scm ₃			
1611	Pa g			32844	lb/Sft ₃			
1617	kPa g							
1615	MPa g							
32797	bar g							
1142	psi a							
1143	psi g							

Data structure

Output data of Analog Output

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5	Byte 6	Byte 7
Measured value: floating point number (IEEE 754)			Status 1)	Unit	code	

1) Status coding $\rightarrow \blacksquare$ 59

Failsafe mode

A failsafe mode can be defined for using the compensation values.

If the status is GOOD or UNCERTAIN, the compensation values transmitted by the automation system are used. If the status is BAD, the failsafe mode is activated for the use of the compensation values.

Parameters are available per compensation value to define the failsafe mode: Expert \rightarrow Sensor \rightarrow External compensation

Fail safe type parameter

- Fail safe value option: The value defined in the Fail safe value parameter is used.
- Fallback value option: The last valid value is used.
- Off option: The failsafe mode is disabled.

Fail safe value parameter

Use this parameter to enter the compensation value which is used if the Fail safe value option is selected in the Fail safe type parameter.

Digital Output module

Transmit digital output values from the automation system to the measuring device.

Digital output values are used by the automation system to enable and disable device functions.

Digital output values cyclically transmit discrete output values, including the status, from the automation system to the measuring device. The discrete output value is transmitted in the first byte. The second byte contains status information pertaining to the output value.

Assigned device functions

Slot	Device function	Status (meaning)
21	Flow override	■ 0 (disable device function)
22	Zero adjust	■ 1 (enable device function)
24 to 26	Relay output	Relay output value: • 0 • 1

Data structure

Output data of Digital Output

Byte 1	Byte 2
Digital Output	Status 1) 2)

- 2) If the status is BAD, the control variable is not adopted.

Heartbeat Verification module

Receive discrete output values from the automation system and transmit discrete input values from the measuring device to the automation system.

The Heartbeat Verification module receives discrete output data from the automation system and transmits discrete input data from the measuring device to the automation system.

The discrete output value is provided by the automation system in order to start Heartbeat Verification. The discrete input value is depicted in the first byte. The second byte contains status information pertaining to the input value.

The discrete input value is used by the measuring device to transmit the status of the Heartbeat Verification device functions to the automation system. The module cyclically transmits the discrete input value, along with the status, to the automation system. The

discrete input value is depicted in the first byte. The second byte contains status information pertaining to the input value.

•

Only available with the Heartbeat Verification application package.

Assigned device functions

Slot	Device function	Bit	Verification status
	Status verification (input data)	0	Verification has not been performed
		1	Verification has failed
		2	Currently performing verification
		3	Verification terminated
	Verification result (input data)	Bit	Verification result
23		4	Verification has failed
		5	Verification performed successfully
		6	Verification has not been performed
		7	-
	Start verification (output data)	Verific	cation control
		A char	nge in the status from 0 to 1 starts the verification

Data structure

Output data of the Heartbeat Verification module

Byte 1	
Discrete Output	

Input data of the Heartbeat Verification module

Byte 1	Byte 2
Discrete Input	Status ¹⁾

1) Status coding $\rightarrow \stackrel{\triangle}{=} 59$

Concentration module

i

Only available with the Concentration Measurement application package.

Assigned device functions

Slot	Input variables
28	Selection of the liquid type

Data structure

Concentration output data

Byte 1	
Control variable	

Liquid type	Enum code
Off	0
Sucrose in water	5
Glucose in water	2
Fructose in water	1
Invert sugar in water	6
Corn syrup HFCS42	15
Corn syrup HFCS55	16
Corn syrup HFCS90	17
Original wort	18
Ethanol in water	11
Methanol in water	12
Hydrogen peroxide in water	4
Hydrochloric acid	24
Sulfuric acid	25
Nitric acid	7
Phosphoric acid	8
Sodium hydroxide	10
Potassium hydroxide	9
Ammonium nitrate in water	13
Iron(III) chloride in water	14
% mass / % volume	19
User Profile Coef Set No. 1	21
User Profile Coef Set No. 2	22
User Profile Coef Set No. 3	23

9.3.3 Status coding

Status	Coding (hex)	Meaning
BAD - Maintenance alarm	0x24	A measured value is not available because a device error has occurred.
BAD - Process related	0x28	A measured value is not available because the process conditions are not within the device's technical specification limits.
BAD - Function check	0x3C	A function check is active (e.g. cleaning or calibration)
UNCERTAIN - Initial value	0x4F	A predefined value is output until a correct measured value is available again or corrective measures have been performed that change this status.
UNCERTAIN - Maintenance demanded	0x68	Signs of wear and tear have been detected on the measuring device. Short-term maintenance is needed to ensure that the measuring device remains operational. The measured value might be invalid. The use of the measured value depends on the application.
UNCERTAIN - Process related	0x78	The process conditions are not within the device's technical specification limits. This could have a negative impact on the quality and accuracy of the measured value. The use of the measured value depends on the application.

Status	Coding (hex)	Meaning
GOOD - OK	0x80	No error has been diagnosed.
GOOD - Maintenance demanded	0xA8	The measured value is valid. It is highly advisable to service the device in the near future.
GOOD - Function check	0xBC	The measured value is valid. The measuring device is performing an internal function check. The function check does not have any noticeable effect on the process.

9.3.4 Factory setting

The slots are already assigned in the automation system for initial commissioning.

Assigned slots

Slot	Factory setting
1	Mass flow
2	Volume flow
3	Corrected volume flow
4	Density
5	Reference density
6	Temperature
7 to 14	-
15	Totalizer 1
16	Totalizer 2
17	Totalizer 3

9.3.5 Startup configuration

If startup configuration is enabled, the configuration of the most important device parameters is taken from the automation system and used. The following configurations are taken from the automation system.

Startup configuration (NSU)

- Management:
 - Software revision
 - Write protection
 - Web server functionality
- System units:
 - Mass flow
 - Mass
 - Volume flow
 - Volume
 - Corrected volume flow
 - Corrected volume
 - Density
 - Reference density
 - Temperature
 - Pressure
- Concentration application package:
 - Coefficients A0 to A4
 - Coefficients B1 to B3
 - Medium type
- Sensor adjustment
- Process parameter:
 - Damping (flow, density, temperature)
 - Flow override
- Low flow cut off:
 - Assign process variable
 - Switch-on/switch-off point
 - Pressure shock suppression
- Empty pipe detection:
 - Assign process variable
 - Limits
 - Response time
 - Max. damping
- Corrected volume flow calculation:
 - External reference density
 - Fixed reference density
 - Reference temperature
 - Linear expansion coefficient
 - Square expansion coefficient
- Measuring mode:
 - Medium
 - Reference sound velocity
 - Temperature coefficient sound velocity
- External compensation:
 - Pressure compensation
 - Pressure value
 - External pressure
- Alarm delay
- Diagnostic settings
- Diagnostic behavior for diverse diagnostic information
- Petroleum application package:
 - Petroleum mode
 - Water density unit
 - Water reference density unit
 - Oil density unit
 - Oil sample density
 - Oil sample temperature
 - Oil sample pressure
 - Water sample density
 - Water sample temperature
 - API commodity group
 - API table selection
 - Thermal expansion coefficient

10 Commissioning

10.1 Post-installation and post-connection check

Before commissioning the device:

- ► Make sure that the post-installation and post-connection checks have been performed successfully.
- "Post-installation check" checklist → 🖺 25
- "Post-connection check" checklist → 🖺 33

10.2 Identifying the device in the PROFINET network

A device can be quickly identified within a plant using the PROFINET flash function. If the PROFINET flash function is activated in the automation system, the LED indicating the network status flashes and the red backlight of the onsite display is switched on.

10.3 Startup parameterization

By activating the startup parameterization function (NSU: Normal Startup Unit), the configuration of the most important measuring device parameters is taken from the automation system.



Configurations taken from the automation system.

10.4 Connecting via FieldCare

- For FieldCare connection
- For connecting via FieldCare $\rightarrow \triangleq 47$
- For the FieldCare → 🖺 48 user interface


10.5 Setting the operating language

Factory setting: English or ordered local language

The operating language can be set in FieldCare, DeviceCare or via the Web server: Operation \rightarrow Display language

10.6 Configuring the measuring device

The **Setup** menu with its submenus contains all the parameters needed for standard operation.

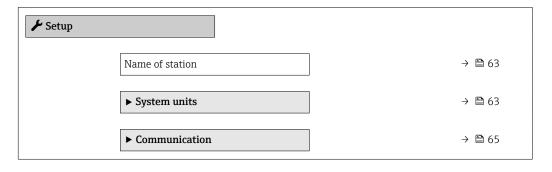

► Medium selection	→ 🖺 67
► Low flow cut off	→ 🖺 69
▶ Partially filled pipe detection	→ 🖺 70
► Advanced setup	→ 🖺 71

10.6.1 Defining the tag name

A measuring point can be quickly identified within a plant on the basis of the tag name. The tag name is equivalent to the device name (name of station) of the PROFINET specification (data length: 255 bytes)

The device name currently used is displayed in the **Name of station** parameter.

Navigation


"Setup" menu → PROFINET device name

Parameter overview with brief description

Parameter	Description	User interface	Factory setting
Name of station	J	Max. 32 characters such as letters and numbers.	EH-PROMASS100 serial


10.6.2 Setting the system units

In the **System units** submenu the units of all the measured values can be set.

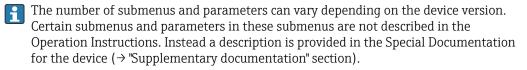

Navigation

"Setup" menu \rightarrow Advanced setup \rightarrow System units

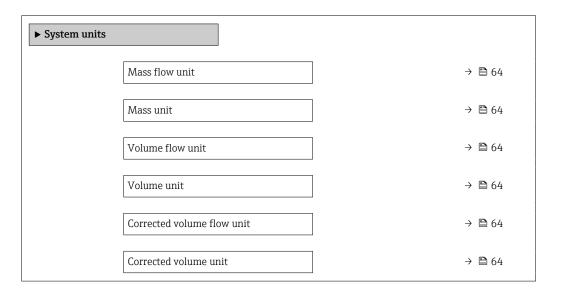

Density unit	→ 🖺 64
Reference density unit	→ 🖺 64
Temperature unit	→ 🖺 65
Pressure unit	→ 🖺 65

Parameter overview with brief description

Parameter	Description	Selection	Factory setting
Mass flow unit	Select mass flow unit. Effect The selected unit applies for: Output Low flow cut off Simulation process variable	Unit choose list	Country-specific: kg/h lb/min
Mass unit	Select mass unit.	Unit choose list	Country-specific: kg lb
Volume flow unit	Select volume flow unit. Effect The selected unit applies for: Output Low flow cut off Simulation process variable	Unit choose list	Depends on country: l/h gal/min (us)
Volume unit	Select volume unit.	Unit choose list	Country-specific: 1 (DN > 150 (6"): m³ option) gal (us)
Corrected volume flow unit	Select corrected volume flow unit. *Result* The selected unit applies for: *Corrected volume flow parameter* (→ **83)	Unit choose list	Country-specific: NI/h Sft³/min
Corrected volume unit	Select corrected volume unit.	Unit choose list	Country-specific: NI Sft³
Density unit	Select density unit. Effect The selected unit applies for: Output Simulation process variable Density adjustment (Expert menu)	Unit choose list	Country-specific: kg/l lb/ft ³
Reference density unit	Select reference density unit.	Unit choose list	Country-dependent kg/Nl lb/Sft³
Density 2 unit	Select second density unit.	Unit choose list	Depends on country: • kg/l • lb/ft ³


Parameter	Description	Selection	Factory setting
Temperature unit	Select temperature unit. Effect The selected unit applies for: • Electronic temperature parameter (6053) • Maximum value parameter (6051) • Minimum value parameter (6052) • External temperature parameter (6080) • Maximum value parameter (6108) • Minimum value parameter (6109) • Carrier pipe temperature parameter (6027) • Maximum value parameter (6029) • Minimum value parameter (6030) • Reference temperature parameter (1816) • Temperature parameter	Unit choose list	Country-specific:
Pressure unit	Select process pressure unit. Result The unit is taken from: Pressure value parameter (→ 🖺 68) External pressure parameter (→ 🖺 68) Pressure value	Unit choose list	Country-specific: • bar a • psi a

10.6.3 Displaying the communication interface

The **Communication** submenu shows all the current parameter settings for selecting and configuring the communication interface.

Navigation

"Setup" menu \rightarrow Communication

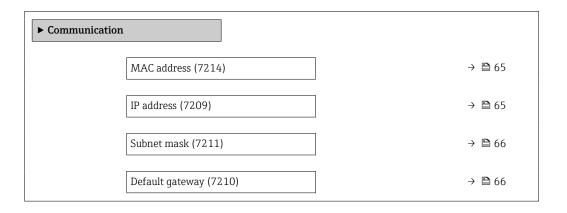

Parameter overview with brief description

Parameter	Description	User interface	Factory setting
MAC address	Displays the MAC address of the measuring device. MAC = Media Access Control	Unique 12-digit character string comprising letters and numbers, e.g.: 00:07:05:10:01:5F	Each measuring device is given an individual address.
IP address	IP address of the Web server integrated in the measuring device. If the DHCP client is switched off and write access is enabled, the IP address can also be entered.	4 octet: 0 to 255 (in the particular octet)	_


Parameter	Description	User interface	Factory setting
Subnet mask	Displays the subnet mask. If the DHCP client is switched off and write access is enabled, the Subnet mask can also be entered.	4 octet: 0 to 255 (in the particular octet)	-
Default gateway	Displays the default gateway. If the DHCP client is switched off and write access is enabled, the Default gateway can also be entered.	4 octet: 0 to 255 (in the particular octet)	-

10.6.4 Selecting and setting the medium

The **Select medium** wizard submenu contains parameters that must be configured in order to select and set the medium.

Navigation

"Setup" menu \rightarrow Medium selection

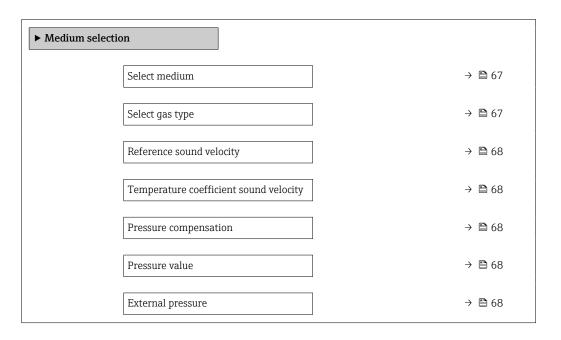

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry
Select medium	-	Use this function to select the type of medium: "Gas" or "Liquid". Select the "Other" option in exceptional cases in order to enter the properties of the medium manually (e.g. for highly compressive liquids such as sulfuric acid).	LiquidGas
Select gas type	In the Medium selection submenu, the Gas option is selected.	Select measured gas type.	■ Air ■ Ammonia NH3 ■ Argon Ar ■ Sulfur hexafluoride SF6 ■ Oxygen O2 ■ Ozone O3 ■ Nitrogen oxide NOx ■ Nitrogen N2 ■ Nitrous oxide N2O ■ Methane CH4 ■ Hydrogen H2 ■ Helium He ■ Hydrogen chloride HCl ■ Hydrogen sulfide H2S ■ Ethylene C2H4 ■ Carbon dioxide CO2 ■ Carbon monoxide CO ■ Chlorine Cl2 ■ Butane C4H10 ■ Propane C3H8 ■ Propylene C3H6 ■ Ethane C2H6


Parameter	Prerequisite	Description	Selection / User entry
Reference sound velocity	In the Select gas type parameter, the Others option is selected.	Enter sound velocity of gas at 0 $^{\circ}$ C (32 $^{\circ}$ F).	1 to 99 999.9999 m/s
Temperature coefficient sound velocity	In the Select gas type parameter, the Others option is selected.	Enter temperature coefficient for the gas sound velocity.	Positive floating-point number
Pressure compensation	-	Select pressure compensation type.	OffFixed valueExternal value
Pressure value	In the Pressure compensation parameter, the Fixed value option or the Current input 1n option is selected.	Enter process pressure to be used for pressure correction.	Positive floating-point number
External pressure	In the Pressure compensation parameter, the External value option is selected.	Shows the external, fixed process pressure value.	

10.6.5 Configuring the low flow cut off

The **Low flow cut off** submenu contains the parameters that must be set in order to configure the low flow cut off.

Navigation

"Setup" menu \rightarrow Low flow cut off

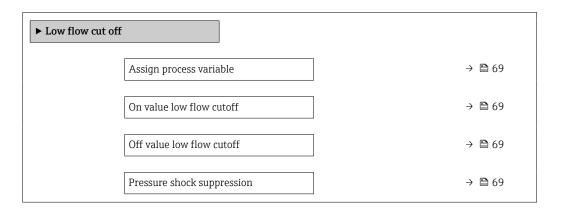

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Assign process variable	-	Select process variable for low flow cut off.	 Off Mass flow Volume flow Corrected volume flow	-
On value low flow cutoff	A process variable is selected in the Assign process variable parameter ($\rightarrow \triangleq 69$).	Enter on value for low flow cut off.	Positive floating- point number	Depends on country and nominal diameter
Off value low flow cutoff	A process variable is selected in the Assign process variable parameter ($\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \$	Enter off value for low flow cut off.	0 to 100.0 %	_
Pressure shock suppression	A process variable is selected in the Assign process variable parameter (→ 🖺 69).	Enter time frame for signal suppression (= active pressure shock suppression).	0 to 100 s	_

10.6.6 Configuring partially filled pipe detection

The $\pmb{\text{Partially filled pipe detection}}$ submenu contains parameters that have to be set for configuring empty pipe detection.

Navigation

"Setup" menu \rightarrow Partially filled pipe detection

▶ Partially filled pipe detection	
Assign process variable	→ 🖺 70
Low value partial filled pipe detection	→ 🖺 70
High value partial filled pipe detection	→ 🖺 70
Response time part. filled pipe detect.	→ 🖺 70

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Assign process variable	-	Select process variable for partially filled pipe detection.	 Off Density Reference density	-
Low value partial filled pipe detection	A process variable is selected in the Assign process variable parameter ($\rightarrow \implies 70$).	Enter lower limit value for deactivating partialy filled pipe detection.	Signed floating-point number	Depends on country: 200 kg/m³ 12.5 lb/ft³
High value partial filled pipe detection	A process variable is selected in the Assign process variable parameter ($\rightarrow \implies 70$).	Enter upper limit value for deactivating partialy filled pipe detection.	Signed floating-point number	Depends on country: • 6000 kg/m ³ • 374.6 lb/ft ³
Response time part. filled pipe detect.	A process variable is selected in the Assign process variable parameter ($\rightarrow \implies 70$).	Use this function to enter the minimum time (hold time) the signal must be present before diagnostic message S962 "Pipe only partly filled" is triggered in the event of a partially filled or empty measuring pipe.	0 to 100 s	-

70


10.7 Advanced settings

The **Advanced setup** submenu with its submenus contains parameters for specific settings.

The number of submenus can vary depending on the device version, e.g. viscosity is available only with the Promass I.

Navigation

"Setup" menu → Advanced setup

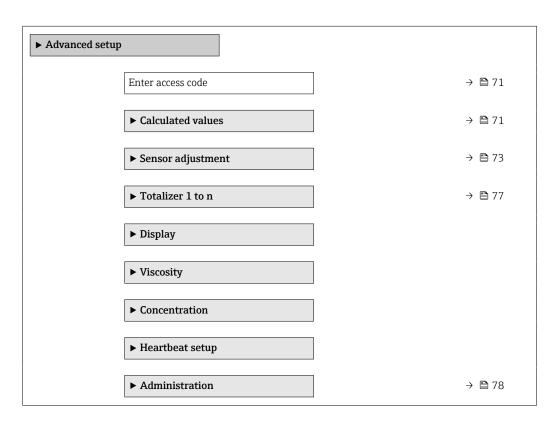

10.7.1 Using the parameter to enter the access code

Navigation

"Setup" menu → Advanced setup

Parameter overview with brief description


Parameter	Description	User entry
Enter access code	1	Max. 16-digit character string comprising numbers, letters and special characters

10.7.2 Calculated process variables

The **Calculated values** submenu contains parameters for calculating the corrected volume flow.

Navigation

"Setup" menu → Advanced setup → Calculated values

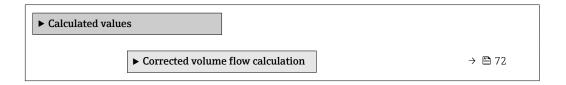

"Corrected volume flow calculation" submenu

Navigation

"Setup" menu \rightarrow Advanced setup \rightarrow Calculated values \rightarrow Corrected volume flow calculation

► Corrected volume flow calculation	
Corrected volume flow calculation (1812)	→ 🖺 72
External reference density (6198)	→ 🖺 72
Fixed reference density (1814)	→ 🗎 72
Reference temperature (1816)	→ 🗎 73
Linear expansion coefficient (1817)	→ 🖺 73
Square expansion coefficient (1818)	→ 🗎 73

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Corrected volume flow calculation	-	Select reference density for calculating the corrected volume flow.	 Fixed reference density Calculated reference density Reference density by API table 53 External reference density 	-
External reference density	In the Corrected volume flow calculation parameter, the External reference density option is selected.	Shows external reference density.	Floating point number with sign	-
Fixed reference density	The Fixed reference density option is selected in the Corrected volume flow calculation parameter parameter.	Enter fixed value for reference density.	Positive floating- point number	-


Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Reference temperature	The Calculated reference density option is selected in the Corrected volume flow calculation parameter parameter.	Enter reference temperature for calculating the reference density.	-273.15 to 99999 °C	Country-specific: ■ +20 °C ■ +68 °F
Linear expansion coefficient	The Calculated reference density option is selected in the Corrected volume flow calculation parameter parameter.	Enter linear, medium-specific expansion coefficient for calculating the reference density.	Signed floating-point number	-
Square expansion coefficient	The Calculated reference density option is selected in the Corrected volume flow calculation parameter parameter.	For media with a non-linear expansion pattern: enter the quadratic, medium-specific expansion coefficient for calculating the reference density.	Signed floating-point number	-

10.7.3 Carrying out a sensor adjustment

The Sensor adjustment submenu contains parameters that pertain to the functionality of the sensor.

Navigation

"Setup" menu \rightarrow Advanced setup \rightarrow Sensor adjustment

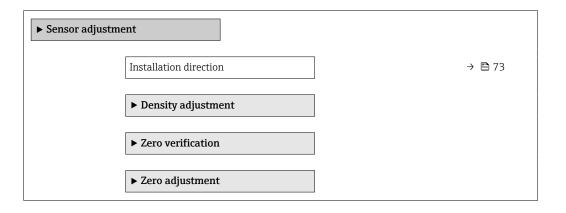

Parameter overview with brief description

Parameter	Description	Selection
Installation direction	Set sign of flow direction to match the direction of the arrow on the sensor.	Flow in arrow directionFlow against arrow direction

Density adjustment

With density adjustment, a high level of accuracy is achieved only at the point of adjustment and at the relevant density and temperature. However, the accuracy of a density adjustment is only ever as good as the quality of the reference measuring data provided. Therefore it is not a substitute for special density calibration.

Performing density adjustment

- Note the following before performing the adjustment:
 - A density adjustment only makes sense if there is little variation in the operating conditions and the density adjustment is performed under the operating conditions.
 - The density adjustment scales the internally computed density value with a userspecific slope and offset.
 - A 1-point or 2-point density adjustment can be performed.
 - For a 2-point density adjustment, there must be a difference of at least 0.2 kg/l between the two target density values.
 - The reference media must be gas-free or pressurized so that any gas they contain is compressed.
 - The reference density measurements must be performed at the same medium temperature that prevails in the process, as otherwise the density adjustment will not be accurate.
 - The correction resulting from the density adjustment can be deleted with the **Restore original** option.

"1 point adjustment" option

- 1. In the **Density adjustment mode** parameter, select the **1 point adjustment** option and confirm.
- 2. In the **Density setpoint 1** parameter, enter the density value and confirm.
 - In the **Execute density adjustment** parameter the following options are now available:

Ok

Measure density 1 option

Restore original

- 3. Select the **Measure density 1** option and confirm.
- 4. If 100% was reached in the **Progress** parameter on the display and the **Ok** option is displayed in the **Execute density adjustment** parameter, then confirm.
 - In the **Execute density adjustment** parameter the following options are now available:

Ok

Calculate

Cancel

5. Select the **Calculate** option and confirm.

If the adjustment was completed successfully, the **Density adjustment factor** parameter and the **Density adjustment offset** parameter and the values calculated for them are shown on the display.

"2 point adjustment" option

- 1. In the **Density adjustment mode** parameter, select the **2 point adjustment** option and confirm.
- 2. In the **Density setpoint 1** parameter, enter the density value and confirm.
- 3. In the **Density setpoint 2** parameter, enter the density value and confirm.
 - In the **Execute density adjustment** parameter the following options are now available:

Ωk

Measure density 1

Restore original

74

- 4. Select the **Measure density 1** option and confirm.
 - ► In the **Execute density adjustment** parameter the following options are now available:

Ok

Measure density 2

Restore original

- 5. Select the **Measure density 2** option and confirm.
 - ☐ In the **Execute density adjustment** parameter the following options are now available:

Ok

Calculate

Cancel

6. Select the **Calculate** option and confirm.

If the **Density adjust failure** option is displayed in the **Execute density adjustment** parameter, call up the options and select the **Cancel** option. The density adjustment is canceled and can be repeated.

If the adjustment was completed successfully, the **Density adjustment factor** parameter and the **Density adjustment offset** parameter and the values calculated for them are shown on the display.

Navigation

"Expert" menu \rightarrow Sensor \rightarrow Sensor adjustment \rightarrow Density adjustment

► Density adjustment	
Density adjustment mode	→ 🗎 75
Density setpoint 1	→ 🖺 75
Density setpoint 2	→ 🖺 75
Execute density adjustment	→ 🖺 76
Progress	→ 🖺 76
Density adjustment factor	→ 🗎 76
Density adjustment offset	→ 🖺 76

Parameter overview with brief description

Parameter	Prerequisite	Description	User interface	Factory setting
Density adjustment mode	-		1 point adjustment2 point adjustment	_
Density setpoint 1	-		The entry depends on the unit selected in the Density unit parameter (0555).	-
Density setpoint 2	In the Density adjustment mode parameter, the 2 point adjustment option is selected.		The entry depends on the unit selected in the Density unit parameter (0555).	-

Parameter	Prerequisite	Description	User interface	Factory setting
Execute density adjustment	-		 Cancel Busy Ok Density adjust failure Measure density 1 Measure density 2 Calculate Restore original 	-
Progress	-	Shows the progress of the process.	0 to 100 %	-
Density adjustment factor	-		Signed floating-point number	-
Density adjustment offset	_		Signed floating-point number	-

Zero point verification and zero adjustment

Experience shows that zero adjustment is advisable only in special cases:

- To achieve maximum measuring accuracy even with low flow rates.
- Under extreme process or operating conditions (e.g. very high process temperatures or very high-viscosity fluids).

To get a representative zero point, ensure that:

- any flow in the device is prevented during the adjustment
- the process conditions (e.g. pressure, temperature) are stable and representative


Zero point verification and zero adjustment cannot be performed if the following process conditions are present:

- Gas pockets
 - Ensure that the system has been sufficiently flushed with the medium. Repeat flushing can help to eliminate gas pockets
- Thermal circulation
 - In the event of temperature differences (e.g. between the measuring tube inlet and outlet section), induced flow can occur even if the valves are closed due to thermal circulation in the device
- Leaks at the valves
 - If the valves are not leak-tight, flow is not sufficiently prevented when determining the zero point

If these conditions cannot be avoided, it is advisable to keep the factory setting for the zero point.

Navigation

"Setup" menu → Advanced setup → Sensor adjustment → Zero point adjustment

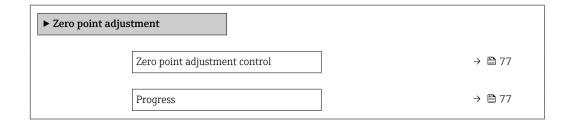

Parameter overview with brief description


Parameter	Description	Selection / User interface	Factory setting
Zero point adjustment control	Start zero point adjustment.	CancelBusyZero point adjust failureStart	-
Progress	Shows the progress of the process.	0 to 100 %	-

10.7.4 Configuring the totalizer

In the "Totalizer 1 to n" submenu the individual totalizer can be configured.

Navigation

"Setup" menu \rightarrow Advanced setup \rightarrow Totalizer 1 to n

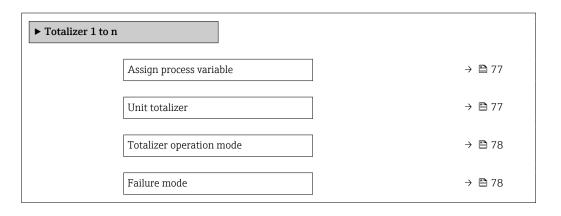

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection	Factory setting
Assign process variable	-	Select process variable for totalizer.	Volume flowMass flowCorrected volume flow	-
Unit totalizer	One of the following options is selected in the Assign process variable parameter: • Mass flow • Volume flow • Corrected volume flow • Target mass flow • Carrier mass flow	Select the unit for the process variable of the totalizer.	Unit choose list	Country-specific: • kg • lb

Parameter	Prerequisite	Description	Selection	Factory setting
Totalizer operation mode	In the Assign process variable parameter, one of the following options is selected: Mass flow Volume flow Corrected volume flow Target mass flow Carrier mass flow Carrier mass flow	Select totalizer calculation mode.	 Net flow total Forward flow total Reverse flow total Last valid value 	-
Failure mode	In the Assign process variable parameter, one of the following options is selected: Mass flow Volume flow Corrected volume flow Target mass flow Carrier mass flow	Define the totalizer behavior in the event of a device alarm.	StopActual valueLast valid value	-


^{*} Visibility depends on order options or device settings

10.7.5 Using parameters for device administration

The **Administration** submenu systematically guides the user through all the parameters that can be used for device administration purposes.

Navigation

"Setup" menu \rightarrow Advanced setup \rightarrow Administration

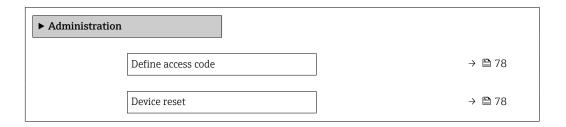

Parameter overview with brief description


Parameter	Description	User entry / Selection
Define access code	Define release code for write access to parameters.	0 to 9 999
Device reset	Reset the device configuration - either entirely or in part - to a defined state.	 Cancel To delivery settings Restart device Delete powerfail storage Delete T-DAT Delete factory data

10.8 Simulation

Via the **Simulation** submenu, it is possible to simulate various process variables in the process and the device alarm mode and verify downstream signal chains (switching valves or closed-control loops). The simulation can be performed without a real measurement (no flow of medium through the device).

Navigation

"Diagnostics" menu → Simulation

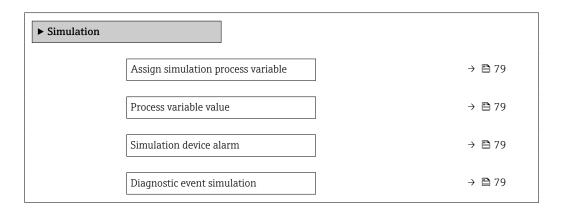

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry
Assign simulation process variable	-	Select a process variable for the simulation process that is activated.	 Off Mass flow Volume flow Corrected volume flow Density Reference density Temperature Concentration * Target mass flow * Carrier mass flow *
Process variable value	A process variable is selected in the Assign simulation process variable parameter $(\rightarrow \blacksquare 79)$.	Enter the simulation value for the selected process variable.	Depends on the process variable selected
Simulation device alarm	-	Switch the device alarm on and off.	Off On
Diagnostic event category	-	Select a diagnostic event category.	SensorElectronicsConfigurationProcess
Diagnostic event simulation	-	Select a diagnostic event to simulate this event.	Off Diagnostic event picklist (depends on the category selected)

^{*} Visibility depends on order options or device settings

10.9 Protecting settings from unauthorized access


The following options exist for protecting the configuration of the measuring device from unintentional modification after commissioning:

10.9.1 Write protection via access code

With the customer-specific access code, access to the measuring device via the Web browser is protected, as are the parameters for the measuring device configuration.

Navigation

"Setup" menu \rightarrow Advanced setup \rightarrow Administration \rightarrow Define access code

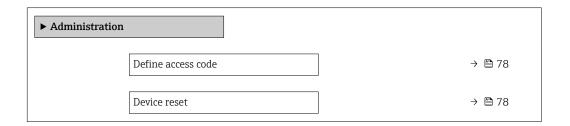

Defining the access code via the Web browser

- 1. Navigate to the **Define access code** parameter.
- 2. Define a max. 16-digit numeric code as an access code.
- 3. Enter the access code again in the to confirm the code.
 - The Web browser switches to the login page.
- If no action is performed for 10 minutes, the Web browser automatically returns to the login page.
- If parameter write protection is activated via an access code, it can also only be deactivated via this access code.
 - The user role with which the user is currently logged on via Web browser is indicated by the **Access status tooling** parameter. Navigation path: Operation → Access status tooling

10.9.2 Write protection via write protection switch


The write protection switch makes it possible to block write access to the entire operating menu with the exception of the following parameters:

- External pressure
- External temperature
- Reference density
- All parameters for configuring the totalizer

The parameter values are now read only and cannot be edited any more:

- Via service interface (CDI-RJ45)
- Via PROFINET
- 1. Depending on the housing version, loosen the securing clamp or fixing screw of the housing cover.
- 2. Depending on the housing version, unscrew or open the housing cover and disconnect the local display from the main electronics module where necessary → 147.

80

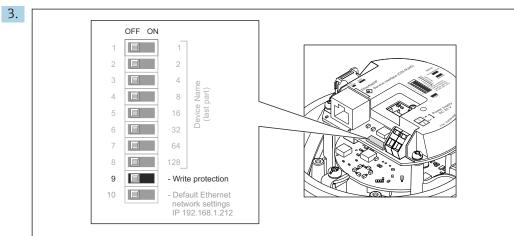

Δ0028081

Setting the write protection switch on the main electronics module to the **On** position enables hardware write protection. Setting the write protection switch on the main electronics module to the **Off** position (factory setting) disables hardware write protection.

- If hardware write protection is enabled: the **Locking status** parameter displays the **Hardware locked** option; if disabled, the **Locking status** parameter does not display any option.
- 4. Reverse the removal procedure to reassemble the transmitter.

10.9.3 Write protection via startup parameterization

Software write protection can be enabled via startup parameterization. If software write protection is enabled, device configuration can only be performed via the PROFINET controller. In this case, write access is **no longer** possible via:

- Acyclic PROFINET communication
- Service interface
- Web server
- Startup parameterization settings .

Operation 11

11.1 Reading the device locking status

Device active write protection: **Locking status** parameter

Navigation

"Operation" menu → Locking status

Function scope of "Locking status" parameter

Options	Description
Hardware locked	The write protection switch (DIP switch) for hardware locking is activated on the ${\rm I/O}$ electronic module. This prevents write access to the parameters .
Temporarily locked	Write access to the parameters is temporarily locked on account of internal processes running in the device (e.g. data upload/download, reset etc.). Once the internal processing has been completed, the parameters can be changed once again.

11.2 Adjusting the operating language



Petailed information:

- To configure the operating language → 🖺 62
- For information on the operating languages supported by the measuring device → 🖺 148

11.3 Configuring the display

Detailed information:


On the advanced settings for the local display

11.4 Reading measured values

With the **Measured values** submenu, it is possible to read all the measured values.

Navigation

"Diagnostics" menu → Measured values

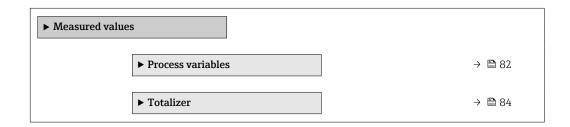

11.4.1 "Measured variables" submenu

The **Process variables** submenu contains all the parameters needed to display the current measured values for each process variable.

Navigation

"Diagnostics" menu \rightarrow Measured values \rightarrow Measured variables

► Measured varia	bles	
	Mass flow	→ 🖺 83
	Volume flow	→ 🖺 83
	Corrected volume flow	→ 🖺 83
	Density	→ 🖺 84
	Reference density	→ 🖺 84
	Temperature	→ 🖺 84
	Pressure	→ 🖺 84
	Concentration	→ 🖺 84
	Target mass flow	→ 🖺 84
	Carrier mass flow	→ 🖺 84
	Target corrected volume flow	→ 🖺 84
	Carrier corrected volume flow	→ 🖺 84
	Target volume flow	→ 🖺 84
	Carrier volume flow	→ 🖺 84

Parameter overview with brief description

Parameter	Prerequisite	Description	User interface
Mass flow	-	Displays the mass flow that is currently measured.	Signed floating-point number
		Dependency The unit is taken from: Mass flow unit parameter (→ 64)	
Volume flow	-	Displays the volume flow that is currently calculated.	Signed floating-point number
		Dependency The unit is taken from the Volume flow unit parameter (→ 🖺 64).	
Corrected volume flow	-	Displays the corrected volume flow that is currently calculated.	Signed floating-point number
		Dependency The unit is taken from: Corrected volume flow unit parameter (→ 🖺 64)	


Parameter	Prerequisite	Description	User interface
Density	-	Shows the density currently measured. Dependency The unit is taken from the Density unit parameter $(\rightarrow \ \ \ \ \ \ \ \ \ \ \)$	Signed floating-point number
Reference density	-	Displays the reference density that is currently calculated. Dependency The unit is taken from: Reference density unit parameter (→ 월 64)	Signed floating-point number
Temperature	-	Shows the medium temperature currently measured. Dependency The unit is taken from: Temperature unit parameter (> \exists 65)	Signed floating-point number
Pressure value	-	Displays either a fixed or external pressure value. Dependency The unit is taken from the Pressure unit parameter (→ 🖺 65).	Signed floating-point number
Concentration	For the following order code: Order code for "Application package", option ED "Concentration" The software options currently enabled are displayed in the Software option overview parameter.	Displays the concentration that is currently calculated. Dependency The unit is taken from the Concentration unit parameter.	Signed floating-point number
Target mass flow	With the following conditions: Order code for "Application package", option ED "Concentration" The software options currently enabled are displayed in the Software option overview parameter.	Displays the mass flow that is currently measured for the target medium. Dependency The unit is taken from the Mass flow unit parameter (→ 🖺 64).	Signed floating-point number
Carrier mass flow	With the following conditions: Order code for "Application package", option ED "Concentration" The software options currently enabled are displayed in the Software option overview parameter.	Displays the mass flow of the carrier medium that is currently measured. Dependency The unit is taken from: Mass flow unit parameter (→	Signed floating-point number
Target corrected volume flow	-		Signed floating-point number
Carrier corrected volume flow	-		Signed floating-point number
Target volume flow	-		Signed floating-point number
Carrier volume flow	-		Signed floating-point number

11.4.2 "Totalizer" submenu

The **Totalizer** submenu contains all the parameters needed to display the current measured values for every totalizer.

Navigation

"Diagnostics" menu \rightarrow Measured values \rightarrow Totalizer

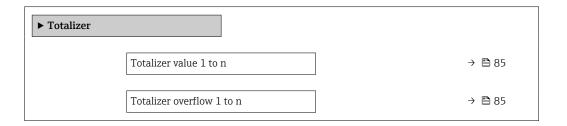

Parameter overview with brief description

Parameter	Prerequisite	Description	User interface
Totalizer value 1 to n	One of the following options is selected in the Assign process variable parameter of the Totalizer 1 to n submenu: Volume flow Mass flow Corrected volume flow Target mass flow Carrier mass flow Carrier mass flow	Displays the current totalizer counter reading.	Signed floating-point number
Totalizer overflow 1 to n	One of the following options is selected in the Assign process variable parameter of the Totalizer 1 to n submenu: Volume flow Mass flow Corrected volume flow Target mass flow Carrier mass flow Carrier mass flow	Displays the current totalizer overflow.	Integer with sign

^{*} Visibility depends on order options or device settings

11.5 Adapting the measuring device to the process conditions

The following are available for this purpose:

- Basic settings using the **Setup** menu (\rightarrow 🗎 62)
- Advanced settings using the Advanced setup submenu (→ 🖺 71)

11.6 Performing a totalizer reset

The totalizers are reset in the **Operation** submenu:

- Control Totalizer
- Reset all totalizers

Navigation

"Operation" menu → Totalizer handling



Preset value 1 to n	→ 🖺 86
Totalizer value 1 to n	→ 🖺 86
Reset all totalizers	→ 🖺 86

Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry / User interface	Factory setting
Control Totalizer 1 to n	A process variable is selected in the Assign process variable parameter of the Totalizer 1 to n submenu.	Control totalizer value.	 Totalize Reset + hold Preset + hold Reset + totalize Preset + totalize Hold 	-
Preset value 1 to n	A process variable is selected in the Assign process variable parameter of the Totalizer 1 to n submenu.	Specify start value for totalizer. Dependency The unit of the selected process variable is specified for the totalizer in the Unit totalizer parameter.	Signed floating-point number	Country-specific: • 0 kg • 0 lb
Totalizer value	One of the following options is selected in the Assign process variable parameter of the Totalizer 1 to n submenu: Volume flow Mass flow Corrected volume flow Target mass flow* Carrier mass flow*	Displays the current totalizer counter reading.	Signed floating-point number	-
Reset all totalizers	-	Reset all totalizers to 0 and start.	CancelReset + totalize	-

^{*} Visibility depends on order options or device settings

11.6.1 Function scope of "Control Totalizer" parameter

Options	Description
Totalize	The totalizer is started or continues running.
Reset + hold	The totaling process is stopped and the totalizer is reset to 0.
Preset + hold 1)	The totaling process is stopped and the totalizer is set to its defined start value from the Preset value parameter.
Reset + totalize	The totalizer is reset to 0 and the totaling process is restarted.
Preset + totalize 1)	The totalizer is set to the defined start value in the Preset value parameter and the totaling process is restarted.

1) Visible depending on the order options or device settings

86

11.6.2 Function scope of the "Reset all totalizers" parameter

Options	Description
Cancel	No action is executed and the user exits the parameter.
Reset + totalize	Resets all totalizers to 0 and restarts the totaling process. This deletes all the flow values previously totalized.

12 Diagnostics and troubleshooting

12.1 General troubleshooting

For local display

Problem	Possible causes	Remedial action
Local display is dark, but signal output is within the valid range	The cable of the display module is not plugged in correctly.	Insert the plug correctly into the main electronics module and display module.
Local display dark and no output signals	Supply voltage does not match the voltage specified on the nameplate.	Apply the correct supply voltage → 🖺 29.
Local display dark and no output signals	Supply voltage has incorrect polarity.	Correct the polarity.
Local display dark and no output signals	No contact between connecting cables and terminals.	Ensure electrical contact between the cable and the terminal.
Local display dark and no output signals	Terminals are not plugged into the I/O electronics module correctly.	Check terminals.
Local display dark and no output signals	 I/O electronics module is defective. 	Order spare part → 🗎 124.
Local display is not readable, but signal output is within the valid range	Display is set too bright or too dark.	 Set the display brighter by simultaneously pressing ± + E. Set the display darker by simultaneously pressing □ + E.
Local display is dark, but signal output is within the valid range	Display module is defective.	Order spare part → 🖺 124.
Backlighting of local display is red	Diagnostic event with "Alarm" diagnostic behavior has occurred.	Take remedial measures → 🖺 96
Message on local display: "Communication Error" "Check Electronics"	Communication between the display module and the electronics is interrupted.	 Check the cable and the connector between the main electronics module and display module. Order spare part → 124.

For output signals

Error	Possible causes	Remedial action
Green power LED on the main electronics module of the transmitter is dark	Supply voltage does not match the value indicated on the nameplate.	Apply the correct supply voltage → 🖺 29.
Device measures incorrectly.	Configuration error or device is operated outside the application.	Check and correct parameter configuration. Observe limit values specified in the "Technical Data".

For access

Problem	Possible causes	Remedy
No write access to parameters.		Set the write protection switch on the main electronics module to the OFF position $\rightarrow \blacksquare 80$.
No connection via PROFINET.	PROFINET bus cable is connected incorrectly.	Check the terminal assignment $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $
No connection via PROFINET.	Device plug is not properly connected.	Check the pin assignment of the device plugs .

Problem	Possible causes	Remedy
No connection to web server.	Web server is disabled.	Using the "FieldCare" or "DeviceCare" operating tool, check whether the Web server of the measuring device is enabled, and enable it if necessary→ 45.
	Incorrect settings for the Ethernet interface of the computer.	1. Check the properties of the Internet protocol (TCP/IP) → 🗎 42. 2. Check the network settings with the IT manager.
No connection to Web server.	 Incorrect IP address IP address is not known 	1. If addressing via hardware: open the transmitter and check the IP address configured (last octet). 2. Check the IP address of the measuring device with the network manager. 3. If the IP address is not known, set DIP switch no. 10 to ON, restart the device and enter the factory IP address 192.168.1.212.
	Web browser setting "Use a Proxy Server for Your LAN" is enabled	Disable the use of the proxy server in the Web browser settings of the computer. Using the example of MS Internet Explorer: 1. Under Control Panel open Internet options. 2. Select the Connections tab and then double-click LAN settings. 3. In the LAN settings disable the use of the proxy server and select OK to confirm.
	Apart from the active network connection to the measuring device, other network connections are also being used.	 Make sure that no other network connections are established by the computer and close other programs with network access to the computer. If using a docking station for notebooks, make sure that a network connection to another network is not active.
Web browser is frozen and operation no longer possible.	Data transfer is active.	Wait until data transfer or current action is finished.
	Connection lost	Check cable connection and power supply. Refresh the Web browser and restart if necessary.
Content of web browser is incomplete or difficult to read.	Not using optimum version of Web server.	 Use the correct Web browser version → 🖺 40. Clear the Web browser cache and restart the Web browser.
	Unsuitable view settings.	Change the font size/display ratio of the Web browser.
No or incomplete display of contents in the web browser.	 JavaScript is not enabled JavaScript cannot be enabled	Enable JavaScript. Enter http://XXX.XXX.X.X.XX/servlet/basic.html as the IP address.
Operation with FieldCare or DeviceCare is not possible via CDI-RJ45 service interface (port 8000).	Firewall of computer or network is preventing communication.	Depending on the settings of the firewall used on the computer or in the network, the firewall must be adapted or disabled to allow FieldCare/ DeviceCare access.
Flashing of firmware with FieldCare or DeviceCare via CDI-RJ45 service interface (via port 8000 or TFTP ports) is not possible.	Firewall of computer or network is preventing communication.	Depending on the settings of the firewall used on the computer or in the network, the firewall must be adapted or disabled to allow FieldCare/ DeviceCare access.


For system integration

Error	Possible causes	Remedy
The PROFINET device name is not displayed correctly and contains coding.	A device name containing one or more underscores has been specified via the automation system.	Specify a correct device name (without underscores) via the automation system.

12.2 Diagnostic information via light emitting diodes

12.2.1 Transmitter

Different LEDs in the transmitter provide information on the device status.

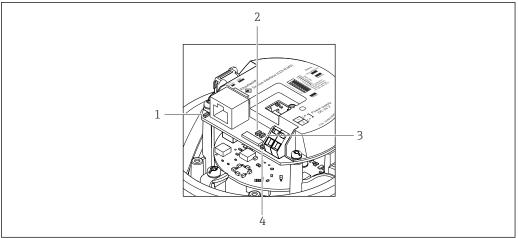

A0027678


- 1 Link/Activity
- 2 Network status
- 3 Device status
- 4 Supply voltage

LED	Color	Meaning	
Supply voltage	Off	Supply voltage is off or too low	
	Green	Supply voltage is ok	
Device status	Device status is ok		
	Flashing red	A device error of diagnostic behavior "Warning" has occurred	
	Red	A device error of diagnostic behavior "Alarm" has occurred	
Network status	Green	Device performing cyclic data exchange	
	Flashing green	Following request from automation system: Flash frequency: 1 Hz (flash functionality: 500 ms on, 500 ms off)	
		The device does not have an IP address, no cyclic data exchange Flash frequency: 3 Hz	
	Red	IP address is available but no connection to the automation system	
	Flashing red	Cyclic connection was established but connection was dropped Flash frequency: 3 Hz	
Link/Activity Orange Link available but no activity		Link available but no activity	
	Flashing orange	Activity present	

12.3 Diagnostic information in the Web browser

12.3.1 Diagnostic options

Any faults detected by the measuring device are displayed in the Web browser on the home page once the user has logged on.

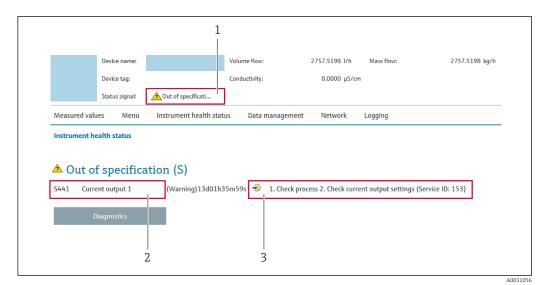

- 1 Status area with status signal
- 3 Remedial measures with service ID
- In addition, diagnostic events which have occurred can be shown in the **Diagnostics** menu:

 - Via submenu → 🖺 118

Status signals


The status signals provide information on the state and reliability of the device by categorizing the cause of the diagnostic information (diagnostic event).

Symbol	Meaning
8	Failure A device error has occurred. The measured value is no longer valid.
7	Function check The device is in the service mode (during a simulation, for example).
<u>^</u> ?	Out of specification The device is being operated: Outside its technical specification limits (e.g. outside the process temperature range)
&	Maintenance required Maintenance is required. The measured value is still valid.

The status signals are categorized in accordance with VDI/VDE 2650 and NAMUR Recommendation NE 107.

Diagnostic information

The fault can be identified using the diagnostic information. The short text helps you by providing information about the fault.

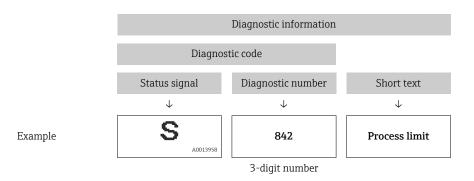


12.3.2 Calling up remedy information

Remedy information is provided for every diagnostic event to ensure that problems can be rectified quickly. These measures are displayed in red along with the diagnostic event and the related diagnostic information.

12.4 Diagnostic information in FieldCare or DeviceCare

12.4.1 Diagnostic options


Any faults detected by the measuring device are displayed on the home page of the operating tool once the connection has been established.

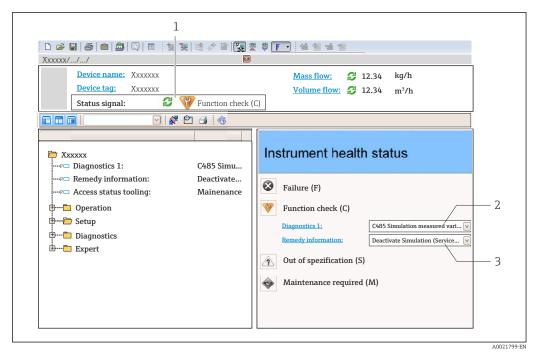

- 1 Status area with status signal
- 2 Diagnostics information → 🖺 91
- 3 Remedial measures with service ID
- In addition, diagnostic events which have occurred can be shown in the **Diagnostics** menu:
 - Via parameter \rightarrow 🖺 117
 - Via submenu → 🗎 118

Diagnostic information

The fault can be identified using the diagnostic information. The short text helps you by providing information about the fault.

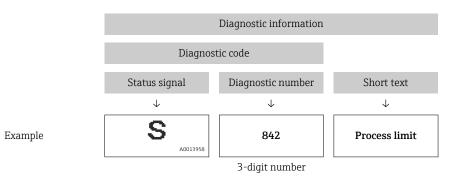

12.4.2 Calling up remedy information

Remedy information is provided for every diagnostic event to ensure that problems can be rectified quickly:

- On the home page Remedy information is displayed in a separate field below the diagnostics information.
- In the **Diagnostics** menu
 Remedy information can be called up in the working area of the user interface.

The user is in the **Diagnostics** menu.

- 1. Call up the desired parameter.
- 2. On the right in the working area, mouse over the parameter.
 - ► A tool tip with remedy information for the diagnostic event appears.

12.5 Adapting the diagnostic information

12.5.1 Adapting the diagnostic behavior

Each item of diagnostic information is assigned a specific diagnostic behavior at the factory. The user can change this assignment for specific diagnostic information in the **Diagnostic behavior** submenu.

Expert \rightarrow System \rightarrow Diagnostic handling \rightarrow Diagnostic behavior


Available diagnostic behaviors

The following diagnostic behaviors can be assigned:

Diagnostic behavior	Description
Alarm	The device stops measurement. The totalizers assume the defined alarm condition. A diagnostic message is generated.
Warning	The device continues to measure. Measured value output via PROFINET and totalizers are not affected. A diagnostic message is generated.
Logbook entry only	The device continues to measure. The diagnostic message is only displayed in the Event logbook submenu (Event list submenu) and is not displayed in alternating sequence with the operational display.
Off	The diagnostic event is ignored, and no diagnostic message is generated or entered.

Displaying the measured value status

If modules with input data (e.g. Analog Input module, Discrete Input module, Totalizer module, Heartbeat module) are configured for cyclic data transmission, the measured value status is coded as per PROFINET PA Profile 4 Specification and transmitted along with the measured value to the PROFINET Controller via the status byte. The status byte is split into three segments: Quality, Quality Substatus and Limits.

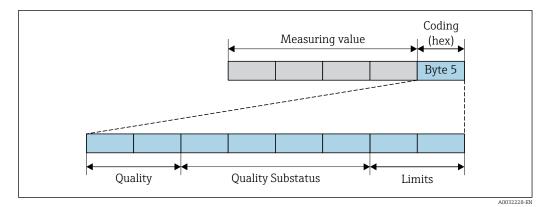

■ 14 Structure of the status byte

The content of the status byte depends on the configured failure mode in the individual function block. Depending on which failure mode has been configured, status information in accordance with PROFINET PA Profile Specification 4 is transmitted to the the PROFINET controller via the status byte status information. The two bits for the limits always have the value 0.

Supported status information

Status	Coding (hex)
BAD - Maintenance alarm	0x24
BAD - Process related	0x28
BAD - Function check	0x3C
UNCERTAIN - Initial value	0x4F
UNCERTAIN - Maintenance demanded	0x68
UNCERTAIN - Process related	0x78
GOOD - OK	0x80
GOOD - Maintenance demanded	0xA8
GOOD - Function check	0xBC

Determining the measured value status and device status via the diagnostic behavior

When the diagnostic behavior is assigned, this also changes the measured value status and device status for the diagnostic information. The measured value status and device status depend on the choice of diagnostic behavior and on the group in which the diagnostic information is located.

The diagnostic information is grouped as follows:

- Diagnostic information pertaining to the sensor: diagnostic number 000 to 199
 → 95
- Diagnostic information pertaining to the electronics: diagnostic number 200 to 399 \rightarrow $\stackrel{ riangle}{\Rightarrow}$ 95
- Diagnostic information pertaining to the configuration: diagnostic number 400 to 599
 → 96

Depending on the group in which the diagnostic information is located, the following measured value status and device status are firmly assigned to the particular diagnostic behavior:

Diagnostic information pertaining to the sensor: diagnostic number 000 to 199

Diagnostis hohovion	Measured value status (fixed assignment)				Device diagnosis
Diagnostic behavior (configurable)	Quality	Quality Substatus	Coding (hex)	Category (NE107)	(fixed assignment)
Alarm	BAD	Maintenance alarm	0x24	F (Failure)	Maintenance alarm
Warning	GOOD	Maintenance demanded	0xA8	M (Maintenance)	Maintenance demanded
Logbook entry only	GOOD	ole	0x80	_	_
Off	GOOD	ok	UX8U	_	_

Diagnostic information pertaining to the electronics: diagnostic number 200 to 399

Diagnostic number 200 to 301, 303 to 399

Diagnostis habavian	Measured value status (fixed assignment)				Dovino dingposis
Diagnostic behavior (configurable)	Quality	Quality Substatus	Coding (hex)	Category (NE107)	Device diagnosis (fixed assignment)
Alarm	BAD	Maintenance alarm	0x24	F (Failure)	Maintenance alarm
Warning					
Logbook entry only	GOOD	COOD	0x80 to 0x8E		
Off	GOOD	ok	UXOU IO UXBE	_	_

Diagnostic information 302

Diagnostic behavior	N	leasured value sta	Device diagnosis		
(configurable)	Quality	Quality Substatus	Coding (hex)	Category (NE107)	(fixed assignment)
Alarm	BAD	Function check, local override	0x24	С	Function check
Warning	GOOD	Function check	0xBC to 0xBF	ı	_

Diagnostic information 302 (device verification active) is output during internal or external Heartbeat verification.

- Signal status: Function check
- Choice of diagnostic behavior: alarm or warning (factory setting)

When Heartbeat verification starts, data logging is interrupted, the last valid measured value is output and the totalizers are stopped.

Diagnostic information pertaining to the configuration: diagnostic number 400 to 599

Diagnostic behavior	IV.	leasured value st	Device diagnosis		
(configurable)	Quality	Quality Substatus	Coding (hex)	Category (NE107)	(fixed assignment)
Alarm	BAD	Process related	0x28	F (Failure)	Invalid process condition
Warning	UNCERTA IN	Process related	0x78	S (Out of specification)	Invalid process condition
Logbook entry only	GOOD	GOOD ok	0x80	_	_
Off	GOOD	UK	UXOU	_	_

Diagnostic information pertaining to the process: diagnostic number 800 to 999

Diagnostis hohovion	M	leasured value sta	Davies dis su sais		
Diagnostic behavior (configurable)	Quality	Quality Substatus	Coding (hex)	Category (NE107)	Device diagnosis (fixed assignment)
Alarm	BAD	Process related	0x28	F (Failure)	Invalid process condition
Warning	UNCERTA IN	Process related	0x78	S (Out of specification)	Invalid process condition
Logbook entry only Off	GOOD	ok	0x80	-	-

12.6 Overview of diagnostic information

- i
- The amount of diagnostic information and the number of measured variables affected increase if the measuring device has one or more application packages.
- All of the measured variables affected in the entire Promass instrument family are always listed under "Measured variables affected". The measured variables available for the device in question depend on the device version. When assigning the measured variables to the device functions, for example to the individual outputs, all of the measured variables available for the device version in question are available for selection.

12.6.1 Diagnostic of sensor

	Diagnosti	cinformation	Remedy instructions	Influenced measured
No.		Short text		variables
022	Sensor temperature		Change main electronic module	Carrier mass flow
	Measured variable status		2. Change sensor	ConcentrationDensity
	Quality	Bad		Dynamic viscosityKinematic viscosity
	Quality substatus Maintenance alarm	Maintenance alarm		 Mass flow
	Coding (hex)	0x24 to 0x27		Sensor integrityReference density
	Status signal	F		Corrected volume flowTarget mass flow
	Diagnostic behavior	Alarm		 Target mass now Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Status Volume flow

	Diagnostic	information	Remedy instructions	Influenced measured
No.	S	hort text		variables
046	Sensor limit exceeded		1. Inspect sensor	Carrier mass flow
	Measured variable status [from the factory] 1)		2. Check process condition	ConcentrationDensity
	Quality	Good		Dynamic viscosityKinematic viscosity
	Quality substatus	Ok		Mass flow
	Coding (hex)	0x80 to 0x83		Sensor integrityReference density
	Status signal	S		 Corrected volume flow
	Diagnostic behavior	Warning		 Target mass flow Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Volume flow

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

	Diagnos	tic information	Remedy instructions	Influenced measured
No.		Short text		variables
062	Sensor connection		1. Change main electronic module	Carrier mass flow
	Measured variable status		2. Change sensor	ConcentrationDensity
	Quality	Bad		Dynamic viscosityKinematic viscosity
	Quality substatus Maintenance alarm Coding (hex) 0x24 to 0x27		Mass flow	
			Sensor integrityReference density	
	Status signal	F		 Corrected volume flow
	Diagnostic behavior	Alarm		 Target mass flow Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Status Volume flow

	Diagnostic	information	Remedy instructions	Influenced measured	
No.	S	Short text		variables	
082	Data storage		1. Check module connections	Carrier mass flow	
	Measured variable status		2. Contact service	ConcentrationDensityDynamic viscosity	
	Quality	Bad		Dynamic viscosityKinematic viscosity	
	Quality substatus	Maintenance alarm		 Mass flow 	
	Coding (hex)	0x24 to 0x27		Sensor integrityReference density	
	Status signal	F		 Corrected volume flow 	
	Diagnostic behavior	Alarm		 Target mass flow Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Volume flow 	

	Diagnostic information		Remedy instructions	Influenced measured	
No.	s	hort text		variables	
083	Memory content		1. Restart device	Carrier mass flow	
	Measured variable status		2. Contact service	 Concentration Density Dynamic viscosity Kinematic viscosity Mass flow 	
	Quality	Bad			
	Quality substatus	Maintenance alarm		 Mass flow 	
	Coding (hex)	0x24 to 0x27		Sensor integrityReference density	
	Status signal	F		Corrected volume flowTarget mass flow	
	Diagnostic behavior	Alarm		 Target mass now Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Status Volume flow 	

	Diagnostic information		Remedy instructions	Influenced measured
No.	2	Short text		variables
140	Sensor signal		Check or change main electronics	Carrier mass flow
	Measured variable status [from the factory] 1)		2. Change sensor	ConcentrationDensity
	Quality	Good		Dynamic viscosityKinematic viscosity
	Quality substatus	Ok		Mass flow
	Coding (hex)	0x80 to 0x83		Sensor integrityReference density
	Status signal	S		Corrected volume flow
	Diagnostic behavior	Alarm		 Target mass flow Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature

¹⁾ Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

	Diagnostic information		Remedy instructions	Influenced measured variables	
No.	S	hort text		variables	
144	Measuring error too high		1. Check or change sensor	 Carrier mass flow 	
	Measured variable status [fr	om the factory] ¹⁾	2. Check process conditions	ConcentrationDensity	
	Quality	Good		Dynamic viscosityKinematic viscosity	
	Quality substatus	Ok		Mass flow	
	Coding (hex)	0x80 to 0x83		Sensor integrityReference density	
	Status signal	F		Corrected volume flow	
	Diagnostic behavior	Alarm		 Target mass flow Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature 	

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

	Diagnostic information		Remedy instructions	Influenced measured
No.	o. Short text			variables
190	Special event 1		Contact service	Carrier mass flow
	Measured variable status			ConcentrationDensity
	Quality	Bad		Dynamic viscosityKinematic viscosity
	Quality substatus	Maintenance alarm		Mass flow
	Coding (hex)	0x24 to 0x27		Sensor integrityReference density
	Status signal	F		 Corrected volume flow
	Diagnostic behavior	Alarm		 Target mass flow Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Status Volume flow

	Diagnostic information		Remedy instructions	Influenced measured
No.	Short text			variables
191	Special event 5		Contact service	Carrier mass flow
	Measured variable status			ConcentrationDensity
	Quality	Bad		Dynamic viscosityKinematic viscosity
	Quality substatus	Maintenance alarm		Mass flow
	Coding (hex)	0x24 to 0x27		Sensor integrityReference density
	Status signal	F		 Corrected volume flow
	Diagnostic behavior	Alarm		 Target mass flow Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Status Volume flow

	Diagnostic information		Remedy instructions	Influenced measured
No.	Short text			variables
192	Special event 9		Contact service	Carrier mass flow
	Measured variable status [f	rom the factory] ¹⁾		ConcentrationDensity
	Quality	Good		 Dynamic viscosity Kinematic viscosity Mass flow Sensor integrity Reference density
	Quality substatus	Ok		
	Coding (hex)	0x80 to 0x83		
	Status signal	F		 Corrected volume flow
	Diagnostic behavior	Alarm		 Target mass flow Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Status Volume flow

¹⁾ Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

12.6.2 Diagnostic of electronic

	Diagnostic information		Remedy instructions	Influenced measured
No.	. Short text			variables
201	Device failure		1. Restart device	Carrier mass flow
	Measured variable status		2. Contact service	ConcentrationDensity
	Quality	Bad		Dynamic viscosityKinematic viscosityMass flow
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		Sensor integrityReference density
	Status signal	F		 Corrected volume flow
	Diagnostic behavior	Alarm		 Target mass flow Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Status Volume flow

	Diagnostic information		Remedy instructions	Influenced measured
No.	Short text			variables
242	Software incompatible		1. Check software	Carrier mass flow
	Measured variable status		Flash or change main electronics module	ConcentrationDensity
	Quality	Bad		Dynamic viscosityKinematic viscosity
	Quality substatus	Maintenance alarm		Mass flow
	Coding (hex)	0x24 to 0x27		Sensor integrityReference density
	Status signal	F		Corrected volume flow
	Diagnostic behavior	Alarm		 Target mass flow Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Status Volume flow

	Diagnostic information		Remedy instructions	Influenced measured
No.		Short text		variables
252	2 Modules incompatible		1. Check electronic modules	 Carrier mass flow
	Measured variable status	[from the factory] 1)	2. Change electronic modules	ConcentrationDensity
	Quality	Good		Dynamic viscosityKinematic viscosity
	Quality substatus	Ok		 Mass flow
	Coding (hex)	0x80 to 0x83		Reference densityCorrected volume flow
	Status signal	F		Target mass flow
	Diagnostic behavior	Alarm		 Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Status Volume flow

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

	Diagnostic information		Remedy instructions	Influenced measured
No.	o. Short text			variables
262	Module connection		1. Check module connections	 Carrier mass flow
	Measured variable status		2. Change main electronics	ConcentrationDensity
	Quality	Bad		 Dynamic viscosity Kinematic viscosity Mass flow Sensor integrity Reference density
	Quality substatus	Maintenance alarm		
	, , , , , , , , , , , , , , , , , , ,	0x24 to 0x27		
		F		 Corrected volume flow
	Diagnostic behavior	Alarm		 Target mass flow Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Status Volume flow

	Diagnostic information		Remedy instructions	Influenced measured
No.	S	hort text		variables
270	Main electronic failure		Change main electronic module	Carrier mass flow
	Measured variable status			ConcentrationDensity
	Quality	Bad		Dynamic viscosityKinematic viscosity
	Quality substatus	Maintenance alarm		Mass flow
	Coding (hex)	0x24 to 0x27		Sensor integrityReference density
	Status signal	F		 Corrected volume flow
	Diagnostic behavior	Alarm		 Target mass flow Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Status Volume flow

	Diagnostic information		Remedy instructions	Influenced measured
No.	. Short text			variables
271	Main electronic failure		1. Restart device	Carrier mass flow
	Measured variable status		2. Change main electronic module	ConcentrationDensity
	Quality	Bad		 Dynamic viscosity Kinematic viscosity Mass flow Sensor integrity Reference density
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F		Corrected volume flow
	Diagnostic behavior	Alarm		 Target mass flow Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Status Volume flow

	Diagnostic information		Remedy instructions	Influenced measured
No.	S	Short text		variables
272	Main electronic failure		1. Restart device	Carrier mass flow
	Measured variable status		2. Contact service	ConcentrationDensity
	Quality	Bad		Dynamic viscosityKinematic viscosity
	Quality substatus	Maintenance alarm		 Mass flow
	Coding (hex)	0x24 to 0x27		Sensor integrityReference density
	Status signal	F		Corrected volume flow
	Diagnostic behavior	Alarm		 Target mass flow Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Status Volume flow

	Diagnostic information		Remedy instructions	Influenced measured
No.	Short text			variables
273	Main electronic failure		Change electronic	Carrier mass flow
	Measured variable status			ConcentrationDensity
	Quality	Bad		Dynamic viscosityKinematic viscosity
	Quality substatus	Maintenance alarm		Mass flow
	Coding (hex)	0x24 to 0x27		Sensor integrityReference density
	Status signal	F		 Corrected volume flow
	Diagnostic behavior	Alarm		 Target mass flow Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Status Volume flow

	Diagnostic	information	Remedy instructions	Influenced measured
No.	SI	hort text		variables
274	Main electronic failure Measured variable status [from the factory] 1)		Change electronic	Mass flow
				Sensor integrityCorrected volume flow
	Quality	Good		 Volume flow
	Quality substatus	Ok		
	Coding (hex)	0x80 to 0x83		
	Status signal	S		
	Diagnostic behavior	Warning		

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

	Diagnostic information		Remedy instructions	Influenced measured	
No.	S	hort text		variables	
283	Memory content		1. Reset device	Carrier mass flow	
	Measured variable status		2. Contact service	 Concentration Density Dynamic viscosity Kinematic viscosity Mass flow Reference density Corrected volume flow Target mass flow Temp. compensated 	
	Quality	Bad			
	Quality substatus	Maintenance alarm		 Mass flow 	
	Coding (hex)	0x24 to 0x27		1	
	Status signal	F]	
	Diagnostic behavior	Alarm		dynamic viscosity Temp. compensated	
				kinematic viscosity Temperature Status Volume flow	

	Diagnostic information		Remedy instructions	Influenced measured
No.	Short text			variables
311	Electronic failure		1. Reset device	Carrier mass flow
	Measured variable status		2. Contact service	ConcentrationDensity
	Quality	Bad		Dynamic viscosityKinematic viscosity
	Quality substatus	Maintenance alarm		 Mass flow
	Coding (hex)	0x24 to 0x27		Sensor integrityReference density
	Status signal	F		 Corrected volume flow
	Diagnostic behavior	Alarm		 Target mass flow Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Status Volume flow

	Diagnostic	information	Remedy instructions	Influenced measured
No.	S	hort text		variables
311	Electronic failure		1. Do not reset device	Carrier mass flow
	Measured variable status Ouality Bad		2. Contact service	ConcentrationDensity
	Quality	Bad		Dynamic viscosityKinematic viscosity
	Quality substatus	Maintenance alarm		Mass flow
	Coding (hex)	0x24 to 0x27		Sensor integrityReference density
	Status signal	M		Corrected volume flow
	Diagnostic behavior	Warning		 Target mass flow Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Volume flow

	Diagnostic information		Remedy instructions	Influenced measured
No.		Short text		variables
382	Data storage		1. Insert DAT module	Carrier mass flow
	Measured variable status		2. Change DAT module	ConcentrationDensity
	Quality	Bad		Dynamic viscosityKinematic viscosity
	Quality substatus	Maintenance alarm		 Mass flow
	Coding (hex)	0x24 to 0x27		Reference densityCorrected volume flow
	Status signal	F		■ Target mass flow
	Diagnostic behavior	Alarm		 Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Status Volume flow

	Diagnostic information		Remedy instructions	Influenced measured
No.	:	Short text		variables
383	Memory content		1. Restart device	 Carrier mass flow
	Measured variable status		service	ConcentrationDensity
	Quality	Bad		Dynamic viscosity
	Quality substatus	Maintenance alarm		Kinematic viscosityMass flow
	Coding (hex)	0x24 to 0x27		 Reference density Corrected volume flow
	Status signal	F		Target mass flow
	Diagnostic behavior	Alarm		 Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Status Volume flow

	Diagnostic information		Remedy instructions	Influenced measured
No.		Short text		variables
390			Contact service	Carrier mass flowConcentration
	Measured variable status			Density
	Quality	Bad		Dynamic viscosityKinematic viscosity
	Quality substatus	Maintenance alarm		 Mass flow
	Coding (hex)	0x24 to 0x27		Sensor integrityReference density
	Status signal	F		Corrected volume flow
	Diagnostic behavior	Alarm		 Target mass flow Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Status Volume flow

	Diagnostic information		Remedy instructions	Influenced measured	
No.		Short text		variables	
391	Special event 6		Contact service	Carrier mass flow	
	Measured variable status			Carrier mass flow Concentration Density Dynamic viscosity Kinematic viscosity Mass flow Sensor integrity Reference density Corrected volume flow Target mass flow Temp. compensated dynamic viscosity	
	Quality	Bad			
	Quality substatus	Maintenance alarm		 Mass flow 	
	Coding (hex)	0x24 to 0x27		3 3	
	Status signal	F			
	Diagnostic behavior	Alarm		■ Temp. compensated	

	Diagnostic information		Remedy instructions	Influenced measured
No.	Short text			variables
392	Special event 10		Contact service	Carrier mass flow
	Measured variable status [from the factory] 1)			ConcentrationDensity
	Quality	Good		Dynamic viscosityKinematic viscosity
	Quality substatus	Ok		 Mass flow
	Coding (hex)	0x80 to 0x83		Sensor integrityReference density
	Status signal	F		Corrected volume flow Torget mass flow
	Diagnostic behavior	Alarm		 Target mass flow Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Status Volume flow

¹⁾ Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

12.6.3 Diagnostic of configuration

	Diagnostic information		Remedy instructions	Influenced measured
No.		Short text		variables
410	Data transfer		1. Check connection	Carrier mass flow
	Measured variable status		2. Retry data transfer	 Concentration Density Dynamic viscosity Kinematic viscosity Mass flow Sensor integrity Reference density
	Quality	Bad		
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F		 Corrected volume flow
	Diagnostic behavior	Alarm		 Target mass flow Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Volume flow

	Diagnostic information		Remedy instructions	Influenced measured
No.	S	Short text		variables
412	Processing download		Download active, please wait	 Carrier mass flow
	Measured variable status			ConcentrationDensity
	Quality	Uncertain		Dynamic viscosityKinematic viscosity
	Quality substatus	Initial value		 Mass flow
	Coding (hex)	0x4C to 0x4F		Sensor integrityReference density
	Status signal	С		■ Corrected volume flow
	Diagnostic behavior	Warning		 Target mass flow Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Volume flow

No.	Diagnostic information No. Short text		Remedy instructions	Influenced measured variables
437	Configuration incompatible		1. Restart device	 Carrier mass flow
	Measured variable status		2. Contact service	ConcentrationDensity
	Quality	Bad		Dynamic viscosity
	Quality substatus	Maintenance alarm		Kinematic viscosityMass flow
	Coding (hex)	0x24 to 0x27		Reference densityCorrected volume flow
	Status signal	F		 Target mass flow
	Diagnostic behavior	Alarm		 Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Status Volume flow

	Diagnostic information		Remedy instructions	Influenced measured
No.	:	Short text		variables
438	Dataset		1. Check data set file	• Carrier mass flow
	Measured variable status		2. Check device configuration 3. Up- and download new configuration	ConcentrationDensity
	Quality	Uncertain Maintenance demanded		Dynamic viscosityKinematic viscosity
	Quality substatus Coding (hex)	0x68 to 0x6B		 Mass flow Sensor integrity Reference density
	Status signal	M		 Corrected volume flow Target mass flow
	Diagnostic behavior	Warning		 Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Volume flow

	Diagnostic information		Remedy instructions	Influenced measured
No.	S	hort text		variables
453	Flow override		Deactivate flow override	Carrier mass flow
	Measured variable status			ConcentrationDensity
	Quality	Good		Dynamic viscosityKinematic viscosity
	Quality substatus	Function check		Mass flow
	Coding (hex)	0xBC to 0xBF		Sensor integrityReference density
	Status signal	С		Corrected volume flow
	Diagnostic behavior	Warning		 Target mass flow Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Volume flow

	Diagnostic information		Remedy instructions	Influenced measured
No.	o. Short text			variables
484	Simulation Failure Mode		Deactivate simulation	Carrier mass flow
	Measured variable status			ConcentrationDensity
	Quality	Bad		Dynamic viscosityKinematic viscosity
	Quality substatus	Function check		Mass flow
	Coding (hex)	0x3C to 0x3F		Sensor integrityReference density
	Status signal	С		 Corrected volume flow
	Diagnostic behavior	Alarm		 Target mass flow Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Status Volume flow

	Diagnostic information		Remedy instructions	Influenced measured
No.	S	Short text		variables
485	Simulation measured variable		Deactivate simulation	Carrier mass flow
	Measured variable status			ConcentrationDensity
	Quality	Good		Dynamic viscosityKinematic viscosity
	Quality substatus	Function check		 Mass flow
	Coding (hex)	0xBC to 0xBF		Sensor integrityReference density
	Status signal	С		 Corrected volume flow
	Diagnostic behavior	Warning		 Target mass flow Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Volume flow

Diagnostic information		Remedy instructions	Influenced measured	
No.	S	hort text		variables
495	Diagnostic event simulation		Deactivate simulation	_
	Measured variable status			
	Quality	Good		
	Quality substatus	Ok		
	Coding (hex)	0x80 to 0x83		
	Status signal	С		
	Diagnostic behavior	Warning		

	Diagnostic information		Remedy instructions	Influenced measured
No.	s	hort text		variables
537	Configuration		Check IP addresses in network	-
	Measured variable status		2. Change IP address	
	Quality	Good		
	Quality substatus	Ok		
	Coding (hex)	0x80 to 0x83		
	Status signal	F		
	Diagnostic behavior	Warning		

	Diagnostic information		Remedy instructions	Influenced measured
No.		Short text		variables
590	Special event 3		Contact service	Carrier mass flow
	Measured variable status			ConcentrationDensity
	Quality	Bad		Dynamic viscosityKinematic viscosity
	Quality substatus	Maintenance alarm		 Mass flow
	Coding (hex)	0x24 to 0x27		Sensor integrityReference density
	Status signal	F		 Corrected volume flow
	Diagnostic behavior	Alarm		 Target mass flow Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Status Volume flow

	Diagnostic information		Remedy instructions	Influenced measured
No.		Short text		variables
591	Special event 7		Contact service	Carrier mass flowConcentration
	Measured variable status		Density	
	Quality	Bad		Dynamic viscosityKinematic viscosity
	Quality substatus	Maintenance alarm		 Mass flow
	Coding (hex)	0x24 to 0x27		Sensor integrityReference density
	Status signal	F		Corrected volume flowTarget mass flow
	Diagnostic behavior	Alarm		 Target mass now Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Status Volume flow

	Diagnostic information		Remedy instructions	Influenced measured
No.	o. Short text			variables
592	Special event 11		Contact service	Carrier mass flow
	Measured variable status [from the factory] 1)			ConcentrationDensity
	Quality	Good		Dynamic viscosityKinematic viscosity
	Quality substatus	Ok		 Mass flow
	Coding (hex)	0x80 to 0x83		Sensor integrityReference density
	Status signal	F		 Corrected volume flow
	Diagnostic behavior	Alarm		 Target mass flow Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Status Volume flow

12.6.4 Diagnostic of process

	Diagnostic information		Remedy instructions	Influenced measured
No.	S	Short text		variables
825	Operating temperature		1. Check ambient temperature	Carrier mass flow
	Measured variable status		2. Check process temperature	ConcentrationDensity
	Quality	Good		Dynamic viscosityKinematic viscosity
-	Quality substatus	Ok		 Mass flow
	Coding (hex)	0x80 to 0x83		Sensor integrityReference density
	Status signal	S		Corrected volume flow Tanget mass flows
	Diagnostic behavior	Warning		 Target mass flow Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Status Volume flow

	Diagnostic information		Remedy instructions	Influenced measured
No.	. Short text			variables
825	Operating temperature		Check ambient temperature	Carrier mass flow
	Measured variable status		2. Check process temperature	ConcentrationDensity
	Quality	Uncertain		Dynamic viscosityKinematic viscosity
	Quality substatus	Process related		Mass flow
	Coding (hex)	0x78 to 0x7B		Sensor integrityReference density
	Status signal	S		Corrected volume flow
	Diagnostic behavior	Warning		 Target mass flow Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Status Volume flow

	Diagnostic information		Remedy instructions	Influenced measured	
No.	S	hort text		variables	
825	Operating temperature		1. Check ambient temperature	Carrier mass flow	
	Measured variable status		2. Check process temperature	ConcentrationDensity	
	Quality	Bad		Dynamic viscosityKinematic viscosity	
	Quality substatus	Process related		 Mass flow 	
	Coding (hex)	0x28 to 0x2B		Reference densityCorrected volume flow	
	Status signal	F		■ Target mass flow	
	Diagnostic behavior	Alarm		 Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Status Volume flow 	

	Diagnostic information		Remedy instructions	Influenced measured
No.	S	hort text		variables
830	Sensor temperature too high		Reduce ambient temp. around the sensor	Carrier mass flow
	Measured variable status		housing	ConcentrationDensity
	Quality	Uncertain		Dynamic viscosityKinematic viscosity
	Quality substatus	Process related		Mass flow
	Coding (hex)	0x78 to 0x7B		Sensor integrityReference density
	Status signal	S		Corrected volume flow
	Diagnostic behavior	Warning		 Target mass flow Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Volume flow

No.	Diagnostic information No. Short text		Remedy instructions	Influenced measured variables
No.	SI	iort text		
831 Senso	or temperature too low		Increase ambient temp. around the sensor	 Carrier mass flow
Moss	sured variable status		housing	Concentration
Meas	sureu variable status			Density
Qualit	tv	Uncertain		 Dynamic viscosity
				 Kinematic viscosity
Qualit	ty substatus	Process related		 Mass flow
Codin	ng (hex)	0x78 to 0x7B		Sensor integrity
Couiii	ig (iiex)	0270 to 0275		 Reference density
Status	s signal	S		 Corrected volume flow
				 Target mass flow
Diagn	nostic behavior	Warning		■ Temp. compensated
				dynamic viscosity
				■ Temp. compensated
				kinematic viscosity
				■ Temperature
				 Volume flow

	Diagnostic information		Remedy instructions	Influenced measured
No.	SI	hort text		variables
832	Electronic temperature too hig	h	Reduce ambient temperature	Carrier mass flow Can contration
	Measured variable status [fro	om the factory] 1)		ConcentrationDensity
	Quality	Good		 Mass flow Sensor integrity Reference density Corrected volume flow Target mass flow
	Quality substatus	Ok		
	Coding (hex)	0x80 to 0x83		
	Status signal	S		 Temperature
	Diagnostic behavior	Warning		 Volume flow

	Diagnostic information		Remedy instructions	Influenced measured
No.	S	hort text		variables
833	Electronic temperature too low Measured variable status [from the factory] 1)		Increase ambient temperature	Carrier mass flowConcentration
	Quality	Good Ok		DensityDynamic viscosityKinematic viscosity
	Quality substatus Coding (hex)	0x80 to 0x83		Mass flowSensor integrityReference density
	Status signal Diagnostic behavior	S Warning		 Corrected volume flow Target mass flow Temp. compensated dynamic viscosity
				 Temp. compensated kinematic viscosity Volume flow

	Diagnostic information		Remedy instructions	Influenced measured
No.		Short text		variables
834	4 Process temperature too high		Reduce process temperature	Carrier mass flowConcentration
Measured variable status [from	from the factory] ¹⁾		Density	
	Quality	Good		Dynamic viscosityKinematic viscosityMass flow
	Quality substatus	Ok		
	Coding (hex)	0x80 to 0x83		Sensor integrityReference density
	Status signal	S		Corrected volume flowTarget mass flow
	Diagnostic behavior	Warning		 Target mass now Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Volume flow

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

	Diagnostic information		Remedy instructions	Influenced measured
No.		Short text		variables
835	Process temperature too low		Increase process temperature	 Carrier mass flow
	Measured variable status [from the factory] 1)			ConcentrationDensity
	Quality	Good		Dynamic viscosity
	Quality substatus	Ok		Kinematic viscosityMass flow
	Coding (hex)	0x80 to 0x83		Sensor integrityReference density
	Status signal	S		■ Corrected volume flow
	Diagnostic behavior	Warning		 Target mass flow Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Volume flow

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

112

	Diagnostic information		Remedy instructions	Influenced measured	
No.	2	Short text		variables	
842	2 Process limit		Low flow cut off active!	 Carrier mass flow 	
	Measured variable status		Check low flow cut off configuration	Density	
	Quality	Good		Dynamic viscosityKinematic viscosity	
	Quality substatus	Ok		Mass flow	
	Coding (hex)	0x80 to 0x83		Reference densityCorrected volume flow	
	Status signal	S		■ Target mass flow	
	Diagnostic behavior	Warning		 Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Volume flow 	

	Diagnostic information		Remedy instructions	Influenced measured variables
No.		Short text		Turius ici
843	Process limit		Check process conditions	 Carrier mass flow
	Measured variable status			ConcentrationDensity
	Quality	Good		Dynamic viscosityKinematic viscosity
	Quality substatus	Ok		Mass flow
	Coding (hex)	0x80 to 0x83		Sensor integrityReference density
	Status signal	S		Corrected volume flow
	Diagnostic behavior	Warning		 Target mass flow Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Volume flow

	Diagnostic information		Remedy instructions	Influenced measured
No.		Short text		variables
862	J 11		1. Check for gas in process	Carrier mass flow
	Measured variable status	,	2. Adjust detection limits	ConcentrationDensity
	Quality	Uncertain		Dynamic viscosityKinematic viscosity
	Quality substatus	Process related		 Mass flow
	Coding (hex)	0x78 to 0x7B		Sensor integrityReference density
	Status signal	S		Corrected volume flow Toward many flows
	Diagnostic behavior	Warning		 Target mass flow Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Volume flow

	Diagnostic i	information	Remedy instructions	Influenced measured
No.	SI	hort text		variables
882	Input signal		1. Check input configuration	■ Density
	Measured variable status		Check external device or process conditions	Mass flowReference density
	Quality	Bad		Corrected volume flowVolume flow
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F		
	Diagnostic behavior	Alarm		

No.	Diagnostic information No. Short text		Remedy instructions	Influenced measured variables
910		1. Check electronic	Carrier mass flow Concentration	
		2. Inspect sensor	ConcentrationDensity	
	Quality	Bad		 Mass flow Sensor integrity Reference density Corrected volume flow Target mass flow Temperature
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F		
	Diagnostic behavior	Alarm		Volume flow

	Diagnostic information		Remedy instructions	Influenced measured
No.	s	hort text		variables
912	Medium inhomogeneous		1. Check process cond.	 Carrier mass flow
	Measured variable status [from the factory] 1)		2. Increase system pressure	ConcentrationDensity
	Quality	Good		Dynamic viscosityKinematic viscosity
	Quality substatus	Ok		 Mass flow
	Coding (hex)	0x80 to 0x83		Sensor integrityReference density
	Status signal	S		 Corrected volume flow
	Diagnostic behavior	Warning		 Target mass flow Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Volume flow

¹⁾ Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

	Diagnostic information		Remedy instructions	Influenced measured
No.		Short text		variables
912	2 Inhomogeneous		1. Check process cond.	• Carrier mass flow
	Measured variable status [from the factory] 1)		2. Increase system pressure	ConcentrationDensity
	Quality	Good		Dynamic viscosityKinematic viscosity
	Quality substatus	Ok		Mass flow
	Coding (hex)	0x80 to 0x83		Sensor integrityReference density
	Status signal	S		Corrected volume flowTarget mass flow
	Diagnostic behavior	Warning		 Target mass now Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Volume flow

	Diagnostic information		Remedy instructions	Influenced measured
No.		Short text		variables
913			Check process conditions Check place and the angencer	Carrier mass flow Concentration
			2. Check electronic modules or sensor	ConcentrationDensity
	Quality	Good		Dynamic viscosityKinematic viscosity
	Quality substatus	Ok		 Mass flow
	Coding (hex)	0x80 to 0x83		Sensor integrityReference density
	Status signal	S		Corrected volume flow
	Diagnostic behavior	Warning		 Target mass flow Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Volume flow

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

	Diagnostic	information	Remedy instructions	Influenced measured
No.	SI	hort text		variables
944	Monitoring failed		Check process conditions for Heartbeat	Carrier mass flow
	Measured variable status [fro	om the factory] 1)	Monitoring Concentration Density Mass flow Sensor integrity Reference density Corrected volume flow Target mass flow Temperature	ConcentrationDensity
	Quality	Good		Sensor integrityReference density
	Quality substatus	Ok		
	Coding (hex)	0x80 to 0x83		
	Status signal	S		3
	Diagnostic behavior	Warning		

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

	Diagnostic information		Remedy instructions	Influenced measured
No.	S	Short text		variables
948	8 Tube damping too high Measured variable status [from the factory] 1)		Check process conditions	Carrier mass flowConcentration
	Quality Quality	Good		DensityDynamic viscosityKinematic viscosity
	Quality substatus	Ok		 Mass flow
	Coding (hex)	0x80 to 0x83		Sensor integrityReference density
	Status signal	S		Corrected volume flowTarget mass flow
	Diagnostic behavior	Warning		 Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Status Volume flow

	Diagnostic information		Remedy instructions	Influenced measured
No.	Short text			variables
990	Special event 4		Contact service	Carrier mass flow Concentration
	Measured variable status		Density	
	Quality	Bad		 Dynamic viscosity Kinematic viscosity Mass flow Sensor integrity Reference density
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F		Corrected volume flow Target mass flow
	Diagnostic behavior	Alarm		 Target mass now Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Status Volume flow

	Diagnostic information		Remedy instructions	Influenced measured
No.	S	hort text		variables
991	Special event 8		Contact service	Carrier mass flow
	Measured variable status			ConcentrationDensity
	Quality	Bad		Dynamic viscosityKinematic viscosity
	Quality substatus	Maintenance alarm		 Mass flow
	Coding (hex)	0x24 to 0x27		Sensor integrityReference density
	Status signal	F		Corrected volume flow
	Diagnostic behavior	Alarm		 Target mass flow Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Status Volume flow

	Diagnos	stic information	Remedy instructions	Influenced measured variables
No.		Short text		variables
992	Special event 12		Contact service	Carrier mass flow
	Measured variable status	[from the factory] 1)		ConcentrationDensity
	Quality	Good		Dynamic viscosityKinematic viscosity
	Quality substatus	Ok		Mass flow
	Coding (hex)	0x80 to 0x83		Sensor integrityReference density
	Status signal	F		 Corrected volume flow
	Diagnostic behavior	Alarm		 Target mass flow Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temperature Status Volume flow


12.7 Pending diagnostic events

The **Diagnostics** menu allows the user to view the current diagnostic event and the previous diagnostic event separately.

- To call up the measures to rectify a diagnostic event:
- 💳 Via web browser → 🖺 92
 - Via "FieldCare" operating tool → 🖺 93
 - Via "DeviceCare" operating tool → 🖺 93
- Other pending diagnostic events can be displayed in the **Diagnostic list** submenu $\rightarrow \stackrel{\cong}{=} 118$

Navigation

"Diagnostics" menu

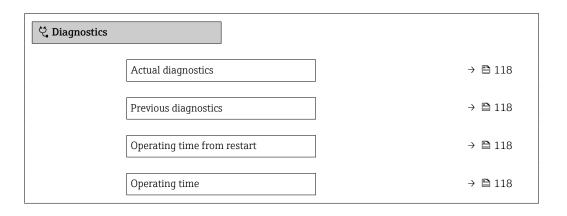

Parameter overview with brief description

Parameter	Prerequisite	Description	User interface
Actual diagnostics	A diagnostic event has occurred.	Shows the current occured diagnostic event along with its diagnostic information.	Symbol for diagnostic behavior, diagnostic code and short message.
		If two or more messages occur simultaneously, the message with the highest priority is shown on the display.	
Previous diagnostics	Two diagnostic events have already occurred.	Shows the diagnostic event that occurred prior to the current diagnostic event along with its diagnostic information.	Symbol for diagnostic behavior, diagnostic code and short message.
Operating time from restart	-	Shows the time the device has been in operation since the last device restart.	Days (d), hours (h), minutes (m) and seconds (s)
Operating time	-	Indicates how long the device has been in operation.	Days (d), hours (h), minutes (m) and seconds (s)

12.8 Diagnostic list

Up to 5 currently pending diagnostic events can be displayed in the **Diagnostic list** submenu along with the associated diagnostic information. If more than 5 diagnostic events are pending, the events with the highest priority are shown on the display.

Navigation path

Diagnostics → Diagnostic list



To call up the measures to rectify a diagnostic event:

- Via web browser →

 92
- Via "FieldCare" operating tool → 🖺 93
- Via "DeviceCare" operating tool → 🖺 93

12.9 Event logbook

12.9.1 Reading out the event logbook

A chronological overview of the event messages that have occurred is provided in the **Events list** submenu.

Navigation path

 $\textbf{Diagnostics} \ \text{menu} \rightarrow \textbf{Event logbook} \ \text{submenu} \rightarrow \textbf{Event list}$

The event history includes entries for:

- Diagnostic events → 🖺 96
- Information events \rightarrow 🗎 119

In addition to the operation time of its occurrence, each event is also assigned a symbol that indicates whether the event has occurred or is ended:

- Diagnostic event
 - ①: Occurrence of the event
 - 🕒: End of the event
- Information event
 - €: Occurrence of the event
- To call up the measures to rectify a diagnostic event:
 - Via web browser →

 92
 - Via "FieldCare" operating tool → 🗎 93
 - Via "DeviceCare" operating tool → 🗎 93
- For filtering the displayed event messages $\rightarrow \stackrel{ riangle}{=} 119$

12.9.2 Filtering the event logbook

Using the **Filter options** parameter you can define which category of event message is displayed in the **Events list** submenu.

Navigation path

Diagnostics \rightarrow Event logbook \rightarrow Filter options

Filter categories

- All
- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- Information (I)

12.9.3 Overview of information events

Unlike a diagnostic event, an information event is displayed in the event logbook only and not in the diagnostic list.

Info number	Info name	
I1000	(Device ok)	
I1089	Power on	
11090	Configuration reset	
I1091	Configuration changed	
I1111	Density adjust failure	
I1137	Electronic changed	
I1151	History reset	
I1155	Reset electronic temperature	
I1157	Memory error event list	
I1185	Display backup done	
I1186	Restore via display done	
I1187	Settings downloaded with display	
I1188	Display data cleared	
I1189	Backup compared	
I1209	Density adjustment ok	
I1221	Zero point adjust failure	
I1222	Zero point adjustment ok	

Info number	Info name
I1256	Display: access status changed
I1335	Firmware changed
I1361	Web server login failed
I1397	Fieldbus: access status changed
I1398	CDI: access status changed
I1444	Device verification passed
I1445	Device verification failed
I1446	Device verification active
I1447	Record application reference data
I1448	Application reference data recorded
I1449	Recording application ref. data failed
I1450	Monitoring off
I1451	Monitoring on
I1457	Measured error verification failed
I1459	I/O module verification failed
I1460	Sensor integrity verification failed
I1461	Sensor verification failed
I1462	Sensor electronic module verific. failed
I1512	Download started
I1513	Download finished
I1514	Upload started
I1515	Upload finished
I1627	Web server login successful
I1631	Web server access changed
I1649	Hardware write protection activated
I1650	Hardware write protection deactivated

12.10 Resetting the measuring device

The entire device configuration or some of the configuration can be reset to a defined state with the **Device reset** parameter ($\Rightarrow \implies 78$).

12.10.1 Function scope of "Device reset" parameter


Options	Description	
Cancel	No action is executed and the user exits the parameter.	
To delivery settings	Every parameter for which a customer-specific default setting was ordered is reset to the customer-specific value. All other parameters are reset to the factory setting. This option is not visible if no customer-specific settings have been ordered.	
Restart device	The restart resets every parameter with data stored in volatile memory (RAM) to the factory setting (e.g. measured value data). The device configuration remains unchanged.	

12.11 Device information

The **Device information** submenu contains all parameters that display different information for device identification.

Navigation

"Diagnostics" menu \rightarrow Device information

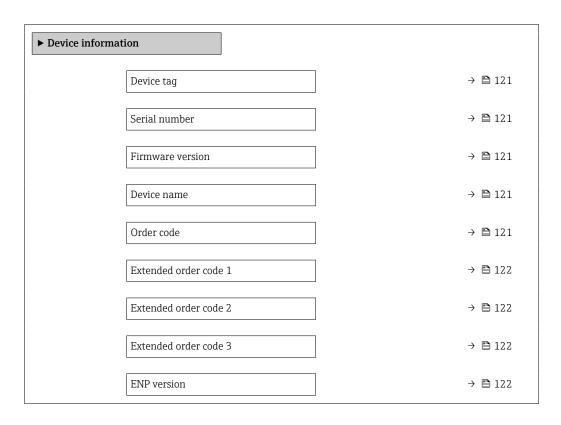

Parameter overview with brief description

Parameter	Description	User interface	Factory setting
Device tag	Shows name of measuring point.	Max. 32 characters such as lower-case letters or numbers.	eh-promass100-xxxxx
Serial number	Shows the serial number of the measuring device.	Max. 11-digit character string comprising letters and numbers.	-
Firmware version	Shows the device firmware version installed.	Character string in the format xx.yy.zz	-
Device name	Shows the name of the transmitter. The name can be found on the nameplate of the transmitter.	Character string comprising numbers, letters and special characters	-
Device name	Shows the name of the transmitter. The name can be found on the nameplate of the transmitter.	Max. 32 characters such as lower-case letters or numbers.	eh-promass100-xxxxx
Order code	Shows the device order code. The order code can be found on the nameplate of the sensor and transmitter in the "Order code" field.	Character string composed of letters, numbers and certain punctuation marks (e.g. /).	_

Parameter	Description	User interface	Factory setting
Extended order code 1	Shows the 1st part of the extended order code. The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.	Character string	-
Extended order code 2	Shows the 2nd part of the extended order code. The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.	Character string	-
Extended order code 3	Shows the 3rd part of the extended order code. The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.	Character string	-
ENP version	Shows the version of the electronic nameplate (ENP).	Character string	_

12.12 Firmware history

Release date	Firmware version	Order code for "Firmware version"	Firmware changes	Documentation type	Documentation
12.2015	01.00.zz	Option 68	Original firmware	Operating Instructions	BA01431D/06/EN/01.15

- It is possible to flash the firmware to the current version using the service interface.
- For the compatibility of the firmware version with the installed device description files and operating tools, observe the information about the device in the "Manufacturer's information" document.
- The manufacturer's information is available:
 - \blacksquare In the Download Area of the Endress+Hauser web site: www.endress.com \rightarrow Downloads
 - Specify the following details:
 - Product root, e.g. 8E1B
 The product root is the first part of the order code: see the nameplate on the device.
 - Text search: Manufacturer's information
 - Media type: Documentation Technical Documentation

13 Maintenance

13.1 Maintenance tasks

No special maintenance work is required.

13.1.1 Exterior cleaning

When cleaning the exterior of measuring devices, always use cleaning agents that do not attack the surface of the housing or the seals.

13.1.2 Interior cleaning

Observe the following points for CIP and SIP cleaning:

- Use only cleaning agents to which the process-wetted materials are adequately resistant.

Observe the following point for cleaning with pigs:

Observe the inside diameter of the measuring tube and process connection.

13.2 Measuring and test equipment

Endress+Hauser offers a wide variety of measuring and test equipment, such as W@M or device tests.

Your Endress+Hauser Sales Center can provide detailed information on the services.

List of some of the measuring and testing equipment: $\rightarrow \implies 126 \rightarrow \implies 127$

13.3 Endress+Hauser services

Endress+Hauser offers a wide variety of services for maintenance such as recalibration, maintenance service or device tests.

Your Endress+Hauser Sales Center can provide detailed information on the services.

14 Repair

14.1 General information

14.1.1 Repair and conversion concept

The Endress+Hauser repair and conversion concept provides for the following:

- The measuring devices have a modular design.
- Spare parts are grouped into logical kits with the associated Installation Instructions.
- Repairs are carried out by Endress+Hauser Service or by appropriately trained customers.
- Certified devices can only be converted to other certified devices by Endress+Hauser Service or at the factory.

14.1.2 Notes for repair and conversion

For repair and modification of a measuring device, observe the following notes:

- ▶ Use only original Endress+Hauser spare parts.
- ► Carry out the repair according to the Installation Instructions.
- ► Observe the applicable standards, federal/national regulations, Ex documentation (XA) and certificates.
- ▶ Document every repair and each conversion and enter them into the *W@M* life cycle management database and Netilion Analytics.

14.2 Spare parts

Device Viewer (www.endress.com/deviceviewer):

All the spare parts for the measuring device, along with the order code, are listed here and can be ordered. If available, users can also download the associated Installation Instructions.

- Measuring device serial number:
 - Is located on the nameplate of the device.

14.3 Endress+Hauser services

Endress+Hauser offers a wide range of services.

Your Endress+Hauser Sales Center can provide detailed information on the services.

14.4 Return

The requirements for safe device return can vary depending on the device type and national legislation.

- 1. Refer to the web page for information: http://www.endress.com/support/return-material
 - ► Select the region.
- 2. Return the device if repairs or a factory calibration are required, or if the wrong device was ordered or delivered.

14.5 Disposal



If required by the Directive 2012/19/EU on waste electrical and electronic equipment (WEEE), the product is marked with the depicted symbol in order to minimize the disposal of WEEE as unsorted municipal waste. Do not dispose of products bearing this marking as unsorted municipal waste. Instead, return them to the manufacturer for disposal under the applicable conditions.

14.5.1 Removing the measuring device

1. Switch off the device.

A WARNING

Danger to persons from process conditions!

- ▶ Beware of hazardous process conditions such as pressure in the measuring device, high temperatures or aggressive media.
- 2. Carry out the mounting and connection steps from the "Mounting the measuring device" and "Connecting the measuring device" sections in reverse order. Observe the safety instructions.

14.5.2 Disposing of the measuring device

A WARNING

Danger to personnel and environment from fluids that are hazardous to health.

► Ensure that the measuring device and all cavities are free of fluid residues that are hazardous to health or the environment, e.g. substances that have permeated into crevices or diffused through plastic.

Observe the following notes during disposal:

- ▶ Observe valid federal/national regulations.
- ► Ensure proper separation and reuse of the device components.

15 Accessories

Various accessories, which can be ordered with the device or subsequently from Endress +Hauser, are available for the device. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: www.endress.com.

15.1 Device-specific accessories

15.1.1 For the sensor

Accessories	Description
Heating jacket	Is used to stabilize the temperature of the fluids in the sensor. Water, water vapor and other non-corrosive liquids are permitted for use as fluids.
	If using oil as a heating medium, please consult with Endress+Hauser.
	 If ordered together with the measuring device:
	Order code for "Accessory enclosed"
	Option RB "Heating jacket, G 1/2" female thread"
	Option RC "Heating jacket, G 3/4" female thread"
	Option RD "Heating jacket, NPT 1/2" female thread"
	Option RE "Heating jacket, NPT 3/4" female thread"
	• If ordered subsequently:
	Use the order code with the product root DK8003.
	Special Documentation SD02160D

15.2 Communication-specific accessories

Accessories	Description
Commubox FXA291	Connects Endress+Hauser field devices with a CDI interface (= Endress+Hauser Common Data Interface) and the USB port of a computer or laptop. Technical Information TI405C/07
Fieldgate FXA42	Is used to transmit the measured values of connected 4 to 20 mA analog measuring devices, as well as digital measuring devices
	 Technical Information TI01297S Operating Instructions BA01778S Product page: www.endress.com/fxa42
Field Xpert SMT50	The Field Xpert SMT70 tablet PC for device configuration enables mobile plant asset management in non-hazardous areas. It is suitable for commissioning and maintenance staff to manage field instruments with a digital communication interface and to record progress. This tablet PC is designed as an all-in-one solution with a preinstalled driver library and is an easy-to-use, touch-sensitive tool which can be used to manage field instruments throughout their entire life cycle. Technical Information TI01342S
	 Operating Instructions BA01709S Product page: www.endress.com/smt50

Field Xpert SMT70	The Field Xpert SMT70 tablet PC for device configuration enables mobile plant asset management in hazardous and non-hazardous areas. It is suitable for commissioning and maintenance staff to manage field instruments with a digital communication interface and to record progress. This tablet PC is designed as an all-in-one solution with a preinstalled driver library and is an easy-to-use, touch-sensitive tool which can be used to manage field instruments throughout their entire life cycle.
	 Technical Information TI01342S Operating Instructions BA01709S Product page: www.endress.com/smt70
Field Xpert SMT77	The Field Xpert SMT77 tablet PC for device configuration enables mobile plant asset management in areas categorized as Ex Zone 1.
	 Technical Information TI01418S Operating Instructions BA01923S Product page: www.endress.com/smt77

15.3 Service-specific accessories

Accessory	Description
Applicator	Software for selecting and sizing Endress+Hauser measuring devices: Choice of measuring devices with industrial requirements Calculation of all the necessary data for identifying the optimum flowmeter: e.g. nominal diameter, pressure loss, flow velocity and accuracy. Graphic illustration of the calculation results Determination of the partial order code, administration, documentation and access to all project-related data and parameters over the entire life cycle of a project. Applicator is available: Via the Internet: https://portal.endress.com/webapp/applicator As a downloadable DVD for local PC installation.
W@M	W@M Life Cycle Management Improved productivity with information at your fingertips. Data relevant to a plant and its components is generated from the first stages of planning and during the asset's complete life cycle. W@M Life Cycle Management is an open and flexible information platform with online and on-site tools. Instant access for your staff to current, in-depth data shortens your plant's engineering time, speeds up procurement processes and increases plant uptime. Combined with the right services, W@M Life Cycle Management boosts productivity in every phase. For more information, see: www.endress.com/lifecyclemanagement
FieldCare	FDT-based plant asset management tool from Endress+Hauser. It can configure all smart field units in your system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition. Operating Instructions BA00027S and BA00059S
DeviceCare	Tool for connecting and configuring Endress+Hauser field devices. Innovation brochure IN01047S

15.4 System components

Accessories	Description
Memograph M graphic data manager	The Memograph M graphic data manager provides information on all the relevant measured variables. Measured values are recorded correctly, limit values are monitored and measuring points analyzed. The data are stored in the 256 MB internal memory and also on a SD card or USB stick.
	Technical Information TI00133ROperating Instructions BA00247R
iTEMP	The temperature transmitters can be used in all applications and are suitable for the measurement of gases, steam and liquids. They can be used to read in the medium temperature.
	"Fields of Activity" document FA00006T

128

16 Technical data

16.1 Application

The measuring device is intended only for the flow measurement of liquids.

Depending on the version ordered, the measuring device can also measure potentially explosive, flammable, poisonous and oxidizing media.

To ensure that the device remains in proper operating condition for its service life, use the measuring device only for media against which the process-wetted materials are sufficiently resistant.

16.2 Function and system design

Measuring principle	Mass flow measurement based on the Coriolis measuring principle	
Measuring system	The device consists of a transmitter and a sensor.	
	The device is available as a compact version: The transmitter and sensor form a mechanical unit.	
	Information on the structure of the device $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $	

16.3 Input

Measured variable

Direct measured variables

- Mass flow
- Density
- Temperature

Calculated measured variables

- Volume flow
- Corrected volume flow
- Reference density

Measuring range

Measuring range for liquids

DN		Measuring range full scale values $\dot{m}_{min(F)}$ to $\dot{m}_{max(F)}$	
[mm]	[in]	[kg/h]	[lb/min]
8	3/8	0 to 2 000	0 to 73.50
15	1/2	0 to 6 500	0 to 238.9
25	1	0 to 18 000	0 to 661.5
40	1½	0 to 45 000	0 to 1654
50	2	0 to 70 000	0 to 2 573

Recommended measuring range



Operable flow range

Over 1000:1.

Flow rates above the preset full scale value do not override the electronics unit, with the result that the totalizer values are registered correctly.

Input signal

External measured values

To increase the accuracy of certain measured variables or to calculate the corrected volume flow for gases, the automation system can continuously write different measured values to the measuring device:

- Operating pressure to increase accuracy (Endress+Hauser recommends the use of a pressure measuring device for absolute pressure, e.g. Cerabar M or Cerabar S)
- Medium temperature to increase accuracy (e.g. iTEMP)
- Reference density for calculating the corrected volume flow for gases

It is recommended to read in external measured values to calculate the following measured variables:

- Mass flow
- Corrected volume flow

Digital communication

The measured values are written by the automation system via PROFINET.

16.4 Output

Output signal

PROFINET

Standards	In accordance with IEEE 802.3

Signal on alarm

Depending on the interface, failure information is displayed as follows.

PROFINET

tralized periphery", Version 2	According to "Application Layer protocol for decentralize	Device diagnostics
--------------------------------	---	--------------------

Local display

Plain text display	With information on cause and remedial measures	
Backlight	Red backlighting indicates a device error.	



Status signal as per NAMUR recommendation NE 107

Interface/protocol

- Via digital communication: **PROFINET**
- Via service interface CDI-RJ45 service interface

Plain text display	With information on cause and remedial measures
--------------------	---

Web browser

Plain text display	With information on cause and remedial measures
--------------------	---

Light emitting diodes (LED)

Status information	Status indicated by various light emitting diodes		
	The following information is displayed depending on the device version:		
	 Supply voltage active 		
	 Data transmission active 		
	 Device alarm/error has occurred 		
	 PROFINET network available 		
	 PROFINET connection established 		
	 PROFINET blinking feature 		
	Diagnostic information via light emitting diodes		

Low flow cut off

The switch points for low flow cut off are user-selectable.

Galvanic isolation

The following connections are galvanically isolated from each other:

- Outputs
- Power supply

Protocol-specific data

protocol-specific data

Protocol	"Application layer protocol for decentral device periphery and distributed automation", version 2.3
Conformance Class	В
Communication type	100 MBit/s
Device profile	Application interface identifier 0xF600 Generic device
Manufacturer ID	0x11
Device type ID	0x844A
Device description files (GSD, DTM)	Information and files at: ■ https://www.endress.com/download On the device product page: PRODUCTS → Product Finder → Links ■ https://www.profibus.com
Baud rates	Automatic 100 Mbit/s with full-duplex detection
Cycle times	From 8 ms
Polarity	Auto-polarity for automatic correction of crossed TxD and RxD pairs
Supported connections	 1 x AR (Application Relation) 1 x Input CR (Communication Relation) 1 x Output CR (Communication Relation) 1 x Alarm CR (Communication Relation)
Configuration options for measuring device	 DIP switches on the electronics module, for device name assignment (last part) Manufacturer-specific software (FieldCare, DeviceCare) Web browser Device master file (GSD), can be read out via the integrated web server of the measuring device
Configuration of the device name	 DIP switches on the electronics module, for device name assignment (last part) DCP protocol

Output values Analog Input module (slot 1 to 14) (from measuring device to Mass flow Volume flow automation system) Corrected volume flow Target mass flow · Carrier mass flow Density · Reference density Concentration Temperature • Carrier pipe temperature Electronics temperature Oscillation frequency Oscillation amplitude • Frequency fluctuation Oscillation damping Tube damping fluctuation Signal asymmetry Exciter current Discrete Input module (slot 1 to 14) Empty pipe detection Low flow cut off Diagnostics Input module (slot 1 to 14) Previous diagnostics Actual diagnostics Totalizer 1 to 3 (slot 15 to 17) Mass flow Volume flow Corrected volume flow Heartbeat Verification module (fixed assignment) Verification status (slot 23) The range of options increases if the measuring device has one or more application packages. Input values Analog Output module (fixed assignment) (from automation system to External pressure (slot 18) measuring device) • External temperature (slot 19) • External reference density (slot 20) Discrete Output module (fixed assignment) • Activate/deactivate positive zero return (slot 21) Perform zero adjustment (slot 22) Totalizer 1 to 3 (slot 15 to 17) Totalize Reset and hold Preset and hold Stop • Operating mode configuration: Net flow total Forward flow total Reverse flow total Heartbeat Verification module (fixed assignment) Start verification (slot 23) The range of options increases if the measuring device has one or more application packages. Supported functions • Identification & Maintenance Simple device identification via: Control system ■ Nameplate • Measured value status The process variables are communicated with a measured value status Blinking feature via the local display for simple device identification and assignment

Administration of software options

Input/output value	Process variable	Category	Slot
Output value	Mass flow	Process variable	114
	Volume flow		
	Corrected volume flow		
	Density	_	
	Reference density		
	Temperature		
	Electronics temperature		
	Oscillation frequency		
	Frequency fluctuation		
	Oscillation damping		
	Oscillation frequency		
	Signal asymmetry		
	Exciter current		
	Empty pipe detection		
	Low flow cut off		
	Current device diagnostics		
	Previous device diagnostics		
Output value	Target mass flow	Concentration 1)	114
	Carrier mass flow		
	Concentration		
Output value	Carrier pipe temperature	Heartbeat ²⁾	114
	Oscillation damping 1		
	Oscillation frequency 1		
	Oscillation amplitude 0		
	Oscillation amplitude 1		
	Frequency fluctuation 1		
	Tube damping fluctuation 1		
	Exciter current 1		
Input value	External density	Process monitoring	18
	External temperature		19
	External reference density		20
	Flow override		21
	Zero adjust		22
	Verification status	Heartbeat Verification 2)	23

- Only available with the "Concentration" application package. Only available with the "Heartbeat" application package. 1)

134

Startup configuration

Startup configuration (NSU)

If startup configuration is enabled, the configuration of the most important device parameters is taken from the automation system and used.

The following configuration is taken from the automation system:

- Management
 - Software revision
 - Write protection
- System units
 - Mass flow

 - Mass Volume flow
 - Volume
 - Corrected volume flow
 - Corrected volume
 - Density
 - Reference density
 - Temperature
 - Pressure
- Concentration application package
 - Coefficients A0 to A4
 - Coefficients B1 to B3
- Sensor adjustment
- Process parameters
 - Damping (flow, density, temperature)
 - Flow override
- Low flow cut off
 - Assign process variable
 - Switch-on/switch-off point
 - Pressure shock suppression
- Empty pipe detection
 - Assign process variable
 - Limits
 - Response time
 - Max. damping
- Corrected volume flow calculation
 - External reference density
 - Fixed reference density
 - Reference temperature
 - Linear expansion coefficient
 - Square expansion coefficient
- Measuring mode
 - Medium
 - Gas type
 - Reference sound velocity
 - Temperature coefficient sound velocity
- External compensation
 - Pressure compensation
 - Pressure value
 - External pressure
- Diagnostic settings
- Diagnostic behavior for diverse diagnostic information

Power supply 16.5

Terminal assignment

→ ■ 27

Supply voltage

The power unit must be tested to ensure it meets safety requirements (e.g. PELV, SELV).

Power consumption	r

Transmitter

Order code for "Output"	Maximum Power consumption
Option R: PROFINET	3.5 W

Current consumption

Transmitter

Order code for "Output"	Maximum Current consumption	Maximum switch-on current	
Option R: PROFINET	145 mA	18 A (< 0.125 ms)	

Device fuse

Fine-wire fuse (slow-blow) T2A

Power supply failure

- Totalizers stop at the last value measured.
- Depending on the device version, the configuration is retained in the device memory or in the plug-in memory (HistoROM DAT).
- Error messages (incl. total operated hours) are stored.

Electrical connection

→ 🖺 28

Potential equalization

Terminals

Transmitter

Spring terminals for wire cross-sections 0.5 to 2.5 mm² (20 to 14 AWG)

Cable entries

- Cable gland: M20 × 1.5 with cable Ø 6 to 12 mm (0.24 to 0.47 in)
- Thread for cable entry:
 - M20
 - G ½"
 - NPT ½"

Cable specification

→ 🖺 26

16.6 Performance characteristics

Reference operating conditions

- Error limits based on ISO 11631
- Water with +15 to +45 °C (+59 to +113 °F) at 2 to 6 bar (29 to 87 psi)
- Specifications as per calibration protocol
- Accuracy based on accredited calibration rigs that are traced to ISO 17025.

Maximum measured error

o.r. = of reading; $1 \text{ g/cm}^3 = 1 \text{ kg/l}$; T = medium temperature

Base accuracy

i

Design fundamentals $\rightarrow \blacksquare 139$

136

Mass flow and volume flow (liquids) ± 0.10 % o.r.

Density (liquids)

Under reference conditions	Standard density calibration 1)	Wide-range Density specification ^{2) 3)}
[g/cm³]	[g/cm³]	[g/cm³]
±0.0005	±0.01	±0.002

- 1) Valid over the entire temperature and density range $\,$
- Valid range for special density calibration: 0 to 2 g/cm³, +10 to +80 $^{\circ}$ C (+50 to +176 $^{\circ}$ F)
- 3) order code for "Application package", option EE "Special density"

Temperature

 $\pm 0.5 \,^{\circ}\text{C} \pm 0.005 \cdot \text{T} \,^{\circ}\text{C} \, (\pm 0.9 \,^{\circ}\text{F} \pm 0.003 \cdot (\text{T} - 32) \,^{\circ}\text{F})$

Zero point stability

DN		Zero point stability		
[mm] [in]		[kg/h]	[lb/min]	
8	3/8	0.20	0.007	
15	1/2	0.65	0.024	
25	1	1.80	0.066	
40	1½	4.50	0.165	
50	2	7.0	0.257	

Flow values

Flow values as turndown parameters depending on the nominal diameter.

SI units

DN	1:1	1:10	1:20	1:50	1:100	1:500
[mm]	[kg/h]	[kg/h]	[kg/h]	[kg/h]	[kg/h]	[kg/h]
8	2 000	200	100	40	20	4
15	6 500	650	325	130	65	13
25	18 000	1800	900	360	180	36
40	45 000	4500	2 250	900	450	90
50	70 000	7 000	3 500	1400	700	140

US units

DN	1:1	1:10	1:20	1:50	1:100	1:500
[inch]	[lb/min]	[lb/min]	[lb/min]	[lb/min]	[lb/min]	[lb/min]
3/8	73.50	7.350	3.675	1.470	0.735	0.147
1/2	238.9	23.89	11.95	4.778	2.389	0.478
1	661.5	66.15	33.08	13.23	6.615	1.323
11/2	1654	165.4	82.70	33.08	16.54	3.308
2	2 5 7 3	257.3	128.7	51.46	25.73	5.146

Accuracy of outputs

i

The output accuracy must be factored into the measured error if analog outputs are used, but can be ignored for fieldbus outputs (e.g. Modbus RS485, EtherNet/IP).

The outputs have the following base accuracy specifications.

Repeatability

o.r. = of reading; $1 \text{ g/cm}^3 = 1 \text{ kg/l}$; T = medium temperature

Base repeatability



Mass flow and volume flow (liquids)

±0.05 % o.r.

Density (liquids)

 $\pm 0.00025 \text{ g/cm}^3$

Temperature

 $\pm 0.25 \,^{\circ}\text{C} \pm 0.0025 \cdot \text{T} \,^{\circ}\text{C} \, (\pm 0.45 \,^{\circ}\text{F} \pm 0.0015 \cdot (\text{T}-32) \,^{\circ}\text{F})$

Response time

The response time depends on the configuration (damping).

Influence of medium temperature

Mass flow and volume flow

o.f.s. = of full scale value

If there is a difference between the temperature during zero adjustment and the process temperature, the additional measured error of the sensors is typically ± 0.0002 %o.f.s./°C (± 0.0001 % o.f.s./°F).


The influence is reduced when the zero adjustment is performed at process temperature.

Density

If there is a difference between the density calibration temperature and the process temperature, the measured error of the sensors is typically $\pm 0.0001 \text{ g/cm}^3/^{\circ}\text{C}$ ($\pm 0.00005 \text{ g/cm}^3/^{\circ}\text{F}$). Field density adjustment is possible.

Wide-range density specification (special density calibration)

If the process temperature is outside the valid range ($\rightarrow \triangleq 136$) the measured error is ± 0.0001 g/cm³ /°C (± 0.00005 g/cm³ /°F)

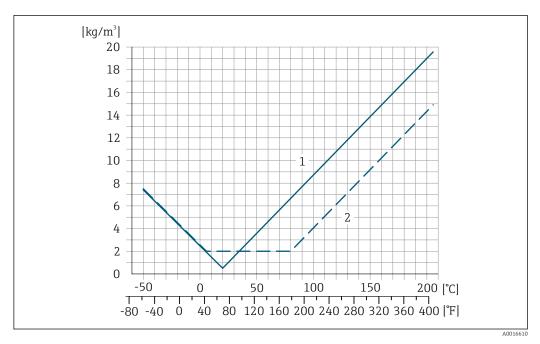

- Field density adjustment, for example at $+20 \,^{\circ}\text{C}$ ($+68 \,^{\circ}\text{F}$)
- 2 Special density calibration

Temperature

 $\pm 0.005 \cdot \text{T} \,^{\circ}\text{C} \, (\pm 0.005 \cdot (\text{T} - 32) \,^{\circ}\text{F})$

Influence of medium pressure

The tables below show the effect that a difference in pressure between the calibration pressure and the process pressure has on the accuracy in the case of the mass flow and density.

o.r. = of reading



It is possible to compensate for the effect by:

- Reading in the current pressure measured value via the current input or a digital input.
- Specifying a fixed value for the pressure in the device parameters.



Operating Instructions .

DN		[% o.r./bar]	[% o.r./psi]
[mm] [in]			
8	3/8	-0.002	-0.0001
15	1/2	-0.006	-0.0004
25	1	-0.005	-0.0003
40	1½	-0.007	-0.0005
50	2	-0.006	-0.0004

Design fundamentals

o.r. = of reading, o.f.s. = of full scale value

 $\label{eq:baseAccu} {\sf BaseAccu} = {\sf base} \ {\sf accuracy} \ {\sf in} \ \% \ {\sf o.r.}, \ {\sf BaseRepeat} = {\sf base} \ {\sf repeatability} \ {\sf in} \ \% \ {\sf o.r.}.$

MeasValue = measured value; ZeroPoint = zero point stability


Calculation of the maximum measured error as a function of the flow rate

Flow rate	Maximum measured error in % o.r.
$\geq \frac{\text{ZeroPoint}}{\text{BaseAccu}} \cdot 100$	± BaseAccu
A0021332	AUGELIJI
< ZeroPoint · 100	± ZeroPoint MeasValue · 100
A0021333	A0021334

Calculation of the maximum repeatability as a function of the flow rate

Flow rate	Maximum repeatability in % o.r.
$\geq \frac{\frac{1}{2} \cdot ZeroPoint}{BaseRepeat} \cdot 100$	± BaseRepeat
A0021335	A0021340
$<\frac{\frac{1}{2} \cdot ZeroPoint}{BaseRepeat} \cdot 100$	$\pm \frac{1}{2} \cdot \frac{\text{ZeroPoint}}{\text{MeasValue}} \cdot 100$
A0021336	A0021337

Example of maximum measured error

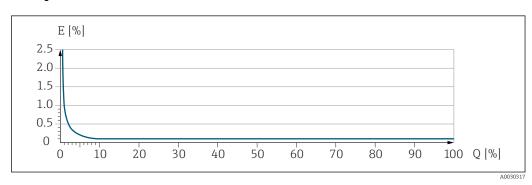

- E Maximum measured error in % o.r. (example)
- Q Flow rate in % of maximum full scale value

16.7 Mounting

Mounting requirements

→ 🖺 18

16.8 Environment

Ambient temperature range

Temperature tables

- Observe the interdependencies between the permitted ambient and fluid temperatures when operating the device in hazardous areas.
- For detailed information on the temperature tables, see the separate document entitled "Safety Instructions" (XA) for the device.

Storage temperature

- -40 to +80 °C (-40 to +176 °F), preferably at +20 °C (+68 °F) (standard version)
- -50 to +80 °C (-58 to +176 °F) (Order code for "Test, certificate", option JM)

140

Climate class

DIN EN 60068-2-38 (test Z/AD)

Degree of protection

Transmitter and sensor

- Standard: IP66/67, Type 4X enclosure, suitable for pollution degree 4
- With the order code for "Sensor options", option CM: IP69 can also be ordered
- When the housing is open: IP20, Type 1 enclosure, suitable for pollution degree 2
- Display module: IP20, Type 1 enclosure, suitable for pollution degree 2

Vibration- and shock-resistance

Vibration sinusoidal, in accordance with IEC 60068-2-6

- 2 to 8.4 Hz, 3.5 mm peak
- 8.4 to 2 000 Hz, 1 g peak

Vibration broad-band random, according to IEC 60068-2-64

- 10 to 200 Hz, 0.003 g²/Hz
- 200 to 2000 Hz, 0.001 g²/Hz
- Total: 1.54 g rms

Shock half-sine, according to IEC 60068-2-27

6 ms 30 q

Rough handling shocks, according to IEC 60068-2-31

Interior cleaning

- Cleaning in place (CIP)
- Sterilization in place (SIP)
- Cleaning with pigs

Options

Oil- and grease-free version for wetted parts, without declaration Order code for "Service", option HA

Electromagnetic compatibility (EMC)

- As per IEC/EN 61326
- Complies with emission limits for industry as per EN 55011 (Class A)



Details are provided in the Declaration of Conformity.




This unit is not intended for use in residential environments and cannot guarantee adequate protection of the radio reception in such environments.

16.9 Process

Medium temperature range

Standard version	-50 to +150 °C (-58 to +302 °F)	Order code for "Measuring tube mat., wetted surface", option BB, BC, BD
Extended temperature version	−50 to +205 °C (−58 to +401 °F)	Order code for "Measuring tube mat., wetted surface", option TD, TG

Dependency of ambient temperature on medium temperature

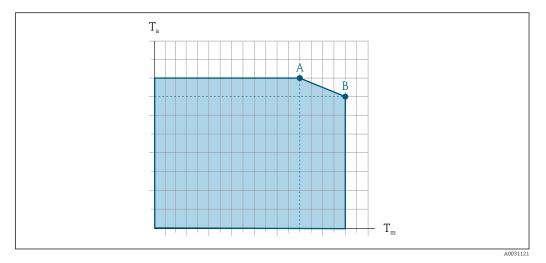

 \blacksquare 15 Exemplary representation, values in the table below.

T_a Ambient temperature

- T_m Medium temperature
- A Maximum permitted medium temperature T_m at $T_{a max} = 60$ °C (140 °F); higher medium temperatures T_m require a reduction in the ambient temperature T_a
- B Maximum permitted ambient temperature T_a for the maximum specified medium temperature T_m of the sensor
- Values for devices that are used in the hazardous area: Separate Ex documentation (XA) for the device.

Density

0 to 5000 kg/m^3 (0 to 312 lb/cf)

Pressure-temperature ratings

(i

For an overview of the pressure-temperature ratings for the process connections, see the Technical Information

Sensor housing

The sensor housing is filled with dry nitrogen gas and protects the electronics and mechanics inside.

If a measuring tube fails (e.g. due to process characteristics like corrosive or abrasive fluids), the fluid will initially be contained by the sensor housing.

If the sensor is to be purged with gas (gas detection), it should be equipped with purge connections.

Do not open the purge connections unless the containment can be filled immediately with a dry, inert gas. Use only low pressure to purge.

Maximum pressure: 5 bar (72.5 psi)

Burst pressure of the sensor housing

The following sensor housing burst pressures are only valid for standard devices and/or devices equipped with closed purge connections (not opened/as delivered).

If a device fitted with purge connections (order code for "Sensor option", option CH "Purge connection") is connected to the purge system, the maximum pressure is determined by the purge system itself or by the device, depending on which component has the lower pressure classification.

142

The sensor housing burst pressure refers to a typical internal pressure which is reached prior to mechanical failure of the sensor housing and which was determined during type testing. The corresponding type test declaration can be ordered with the device (order code for "Additional approval", option LN "Sensor housing burst pressure, type test").

DN		Sensor housing burst pressure	
[mm] [in]		[bar]	[psi]
8	3/8	190	2755
15	1/2	175	2 538
25	1	165	2 3 9 2
40	1½	152	2 2 0 4
50	2	103	1494


For information on the dimensions: see the "Mechanical construction" section of the "Technical Information" document

Flow limit

Select the nominal diameter by optimizing between the required flow range and permissible pressure loss.

- The minimum recommended full scale value is approx. 1/20 of the maximum full scale value
- In most applications, 20 to 50 % of the maximum full scale value can be considered ideal
- A low full scale value must be selected for abrasive media (such as liquids with entrained solids): flow velocity < 1 m/s (< 3 ft/s).
- To calculate the flow limit, use the *Applicator* sizing tool $\rightarrow \triangleq 127$

Pressure loss

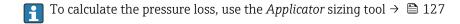

System pressure

→ 🖺 20

16.10 Mechanical construction

Design, dimensions



For the dimensions and installation lengths of the device, see the "Technical Information" document, "Mechanical construction" section .

Weight

All values (weight exclusive of packaging material) refer to devices with EN/DIN PN 40 flanges. Weight specifications including transmitter: order code for "Housing", option A "Compact, aluminum coated".

Weight in SI units

DN [mm]	Weight [kg]
8	12
15	14
25	20
40	36
50	59

Weight in US units


DN [in]	Weight [lbs]
3/8	26
1/2	31
1	44
1½	79
2	130

Materials

Transmitter housing

- Order code for "Housing", option A "Compact, aluminum coated": Aluminum, AlSi10Mq, coated
- Order code for "Housing", option B "Compact, hygienic, stainless": Hygienic version, stainless steel 1.4301 (304)
- Order code for "Housing", option C "Ultra-compact, hygienic, stainless": Hygienic version, stainless steel 1.4301 (304)
- Window material for optional local display ($\rightarrow = 147$):
 - For order code for "Housing", option **A**: glass
 - For order code for "Housing", option **B** and **C**: plastic

Cable entries/cable glands

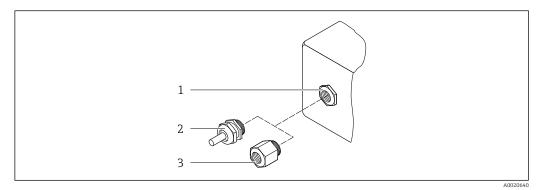

■ 16 Possible cable entries/cable glands

- 1 Female thread M20 \times 1.5
- 2 Cable gland $M20 \times 1.5$
- 3 Adapter for cable entry with female thread G $\frac{1}{2}$ " or NPT $\frac{1}{2}$ "

Order code for "Housing", option A "Compact, aluminum, coated"

The various cable entries are suitable for hazardous and non-hazardous areas.

Cable entry/cable gland	Material
Cable gland M20 × 1.5	
Adapter for cable entry with internal thread G ½"	Nickel-plated brass
Adapter for cable entry with internal thread NPT ½"	

Order code for "Housing", option B "Compact, hygienic, stainless"

The various cable entries are suitable for hazardous and non-hazardous areas.

Cable entry/cable gland	Material
Cable gland M20 × 1.5	Stainless steel, 1.4404 (316L)
Adapter for cable entry with internal thread G ½"	
Adapter for cable entry with internal thread NPT ½"	

Device plug

Electrical connection	Material
Plug M12x1	 Socket: Stainless steel, 1.4404 (316L) Contact housing: Polyamide Contacts: Gold-plated brass

Sensor housing

- Acid and alkali-resistant outer surface
- Stainless steel 1.4301 (304)

Measuring tubes

Stainless steel, 1.4435 BN2 (316L)

Process connections

 Flanges according to EN 1092-1 (DIN 2501) / according to ASME B16.5 / according to JIS B2220:

Stainless steel, 1.4404 (F316/F316L)

• All other process connections: Stainless steel, 1.4435 BN2 (316L)



Available process connections → 146

Seals

Welded process connections without internal seals

Accessories

Protective cover

Stainless steel, 1.4404 (316L)

Safety Barrier Promass 100

Housing: Polyamide

Process connections

- Fixed flange connections:
 - EN 1092-1 (DIN 2501) flange
 - EN 1092-1 (DIN 2512N) flange
 - ASME B16.5 flange
 - JIS B2220 flange
 - DIN 11864-2 Form A flange, DIN 11866 series A, flange with notch
 - BBS flange small (sterile orbital), DIN 11866 series A, female
 - BBS flange small (sterile orbital), DIN 11866 series B, female
- Clamp connections:
 - Tri-Clamp (OD tubes), DIN 11866 series C
 - DIN 11864-3 Form A clamp, DIN 11866 series A, with notch
 - DIN 32676 clamp, DIN 11866 series A
 - ISO 2852 clamp, ISO 2037
 - ISO 2852 clamp, DIN 11866 series B
 - BBS Quick-Connect (sterile orbital), DIN 11866 series A, female
 - BBS Quick-Connect (sterile orbital), DIN 11866 series B, female
 - Neumo BioConnect clamp, DIN 11866 series A, clamp form R
- Eccentric clamp connection:
 - Eccen. Tri-Clamp, DIN 11866 series C
 - DIN 11864-3 Form A clamp, DIN 11866 series A, with notch
 - DIN 32676 clamp, DIN 11866 series A
 - ISO 2852 clamp, DIN 11866 series B
 - BBS Quick-Connect (sterile orbital), DIN 11866 series A, female
 - BBS Quick-Connect (sterile orbital), DIN 11866 series B, female
 - Neumo BioConnect clamp, DIN 11866 series A, clamp form R
- Thread:
 - DIN 11851 thread, DIN 11866 series A
 - SMS 1145 thread
 - ISO 2853 thread, ISO 2037
 - DIN 11864-1 Form A thread, DIN 11866 series A
 - BBS thread (sterile orbital), DIN 11866 series A
 - BBS thread (sterile orbital), DIN 11866 series B

Process connection materials

146

Surface roughness

All data refer to parts in contact with the medium. The following surface roughness categories can be ordered.

- $Ra_{max} = 0.76 \mu m (30 \mu in)$
- $Ra_{max} = 0.38 \mu m$ (15 μ in) electropolished
- Delta ferrite < 1%

16.11 Operability


Local display

The local display is only available with the following device order code: Order code for "Display; operation", option **B**: 4-line; illuminated, via communication

Display element

- 4-line liquid crystal display with 16 characters per line.
- White background lighting; switches to red in event of device errors.
- Format for displaying measured variables and status variables can be individually configured.
- Permitted ambient temperature for the display: -20 to +60 °C (-4 to +140 °F). The readability of the display may be impaired at temperatures outside the temperature range.

Disconnecting the local display from the main electronics module

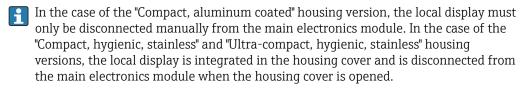

"Compact, aluminum coated" housing version

The local display is plugged onto the main electronics module. The electronic connection between the local display and main electronics module is established via a connecting cable.

For some work performed on the measuring device (e.g. electrical connection), it is advisable to disconnect the local display from the main electronics module:

- 1. Press in the side latches of the local display.
- 2. Remove the local display from the main electronics module. Pay attention to the length of the connecting cable when doing so.


Once the work is completed, plug the local display back on.

Remote operation

Via PROFINET network

This communication interface is available in device versions with PROFINET.

Star topology

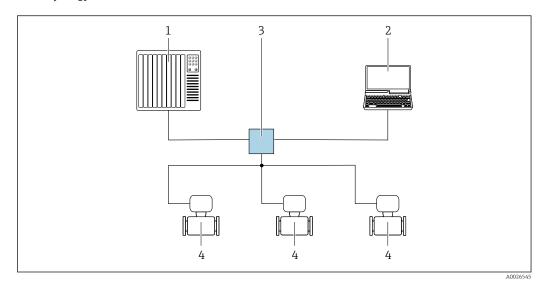


■ 17 Options for remote operation via PROFINET network: star topology

- 1 Automation system, e.g. Simatic S7 (Siemens)
- 2 Computer with Web browser (e.g. Internet Explorer) for accessing the integrated Web server or computer with operating tool (e.g. FieldCare, DeviceCare, SIMATIC PDM) with COM DTM "CDI Communication TCP/IP"
- 3 Standard Ethernet switch, e.g. Scalance X204 (Siemens)
- 4 Measuring device

Service interface

Via service interface (CDI-RJ45)

PROFINET

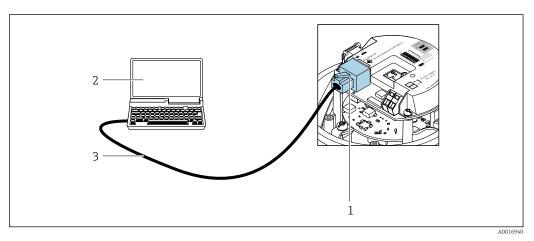

 \blacksquare 18 Connection for order code for "Output", option R: PROFINET

- 1 Service interface (CDI-RJ45) and PROFINET interface of the measuring device with access to the integrated web server
- 2 Computer with web browser (e.g. Internet Explorer) for accessing the integrated web server or with "FieldCare" operating tool with COM DTM "CDI Communication TCP/IP"
- 3 Standard Ethernet connecting cable with RJ45 plug

Languages

Can be operated in the following languages:

Via "FieldCare" operating tool: English, German, French, Spanish, Italian, Chinese, Japanese

148

16.12 Certificates and approvals

Current certificates and approvals that are available for the product can be selected via the Product Configurator at www.endress.com:

- 1. Select the product using the filters and search field.
- 2. Open the product page.
- 3. Select **Configuration**.

CE mark

The device meets the legal requirements of the applicable EU Directives. These are listed in the corresponding EU Declaration of Conformity along with the standards applied.

Endress+Hauser confirms successful testing of the device by affixing to it the CE mark.

UKCA marking

The device meets the legal requirements of the applicable UK regulations (Statutory Instruments). These are listed in the UKCA Declaration of Conformity along with the designated standards. By selecting the order option for UKCA marking, Endress+Hauser confirms a successful evaluation and testing of the device by affixing the UKCA mark.

Contact address Endress+Hauser UK:

Endress+Hauser Ltd.

Floats Road

Manchester M23 9NF

United Kingdom

www.uk.endress.com

Ex approval

The devices are certified for use in hazardous areas and the relevant safety instructions are provided in the separate "Safety Instructions" (XA) document. Reference is made to this document on the nameplate.

Hygienic compatibility

- 3-A approval
 - Only measuring devices with the order code for "Additional approval", option LP "3A" have 3-A approval.
 - The 3-A approval refers to the measuring device.
 - When installing the measuring device, ensure that no liquid can accumulate on the outside of the measuring device.
 - A remote display module must be installed in accordance with the 3-A Standard.
 - Accessories (e.g. heating jacket, weather protection cover, wall holder unit) must be installed in accordance with the 3-A Standard.
 - Each accessory can be cleaned. Disassembly may be necessary under certain circumstances.
- EHEDG-tested

Only devices with the order code for "Additional approval", option LT "EHEDG" have been tested and meet the requirements of the EHEDG.

To meet the requirements for EHEDG certification, the device must be used with process connections in accordance with the EHEDG position paper entitled "Easy cleanable Pipe couplings and Process connections" (www.ehedg.org).

Pharmaceutical compatibility

- FDA 21 CFR 177
- USP <87>
- USP <88> Class VI 121 °C
- TSE/BSE Certificate of Suitability

Certification PROFINET

PROFINET interface

The measuring device is certified and registered by the PNO (PROFIBUS Nutzerorganisation e.V. / PROFIBUS User Organization). The measuring system meets all the requirements of the following specifications:

- Certified according to:
 - Test specification for PROFINET devices
 - PROFINET Security Level 1 Netload Class 2 0 Mbps
- The device can also be operated with certified devices of other manufacturers (interoperability)
- The device supports PROFINET S2 system redundancy.

Pressure Equipment Directive

- With the marking:
 - a) PED/G1/x (x = category) or
 - b) UK/G1/x (x = category)

on the sensor nameplate, Endress+Hauser confirms compliance with the "Essential Safety Requirements"

- a) specified in Annex I of the Pressure Equipment Directive 2014/68/EU or
- b) Schedule 2 of Statutory Instruments 2016 No. 1105.
- Devices not bearing this marking (without PED or UKCA) are designed and manufactured according to sound engineering practice. They meet the requirements of
 - a) Art. 4 Para. 3 of the Pressure Equipment Directive 2014/68/EU or
 - b) Part 1, Para. 8 of Statutory Instruments 2016 No. 1105.

The scope of application is indicated

- a) in diagrams 6 to 9 in Annex II of the Pressure Equipment Directive 2014/68/EU or
- b) Schedule 3, Para. 2 of Statutory Instruments 2016 No. 1105.

Other standards and guidelines

■ EN 60529

Degrees of protection provided by enclosures (IP code)

■ IEC/EN 60068-2-6

Environmental influences: Test procedure - Test Fc: vibrate (sinusoidal).

■ IEC/EN 60068-2-31

Environmental influences: Test procedure - Test Ec: shocks due to rough handling, primarily for devices.

■ EN 61010-1

Safety requirements for electrical equipment for measurement, control and laboratory use - general requirements

■ IEC/EN 61326-2-3

Emission in accordance with Class A requirements. Electromagnetic compatibility (EMC requirements).

■ NAMUR NE 21

Electromagnetic compatibility (EMC) of industrial process and laboratory control equipment

■ NAMUR NE 32

Data retention in the event of a power failure in field and control instruments with microprocessors

■ NAMUR NE 43

Standardization of the signal level for the breakdown information of digital transmitters with analog output signal.

■ NAMUR NE 53

Software of field devices and signal-processing devices with digital electronics

■ NAMUR NE 80

The application of the pressure equipment directive to process control devices

■ NAMUR NE 105

Specifications for integrating fieldbus devices in engineering tools for field devices

■ NAMUR NE 107

Self-monitoring and diagnosis of field devices

- NAMUR NE 131
 - Requirements for field devices for standard applications
- NAMUR NE 132
 - Coriolis mass meter
- ETSI EN 300 328
 - Guidelines for 2.4 GHz radio components.
- EN 301489

Electromagnetic compatibility and radio spectrum matters (ERM).

16.13 Application packages

Many different application packages are available to enhance the functionality of the device. Such packages might be needed to address safety aspects or specific application requirements.

The application packages can be ordered with the device or subsequently from Endress+Hauser. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: www.endress.com.



Detailed information on the application packages: Special Documentation for the device $\rightarrow \stackrel{\triangle}{=} 153$

Heartbeat Technology

Order code for "Application package", option EB "Heartbeat Verification + Monitoring"

Heartbeat Verification

Meets the requirement for traceable verification to DIN ISO 9001:2008 Chapter 7.6 a) "Control of monitoring and measuring equipment".

- Functional testing in the installed state without interrupting the process.
- Traceable verification results on request, including a report.
- Simple testing process via local operation or other operating interfaces.
- Clear measuring point assessment (pass/fail) with high test coverage within the framework of manufacturer specifications.
- Extension of calibration intervals according to operator's risk assessment.

Heartbeat Monitoring

Continuously supplies data, which are characteristic of the measuring principle, to an external condition monitoring system for the purpose of preventive maintenance or process analysis. These data enable the operator to:

- Draw conclusions using these data and other information about the impact process influences (e.g. corrosion, abrasion, formation of buildup etc.) have on the measuring performance over time.
- Schedule servicing in time.
- Monitor the process or product quality, e.q. gas pockets.



For detailed information, see the Special Documentation for the device.

Concentration measurement

Order code for "Application package", option ED "Concentration"

Calculation and outputting of fluid concentrations.

The measured density is converted to the concentration of a substance of a binary mixture using the "Concentration" application package:

- Choice of predefined fluids (e.g. various sugar solutions, acids, alkalis, salts, ethanol etc.).
- Common or user-defined units (*Brix, *Plato, *% mass, *% volume, mol/l etc.) for standard applications.
- Concentration calculation from user-defined tables.

The measured values are output via the digital and analog outputs of the device.



For detailed information, see the Special Documentation for the device.

Special density

Order code for "Application package", option EE "Special density"

Many applications use density as a key measured value for monitoring quality or controlling processes. The device measures the density of the fluid as standard and makes this value available to the control system.

The "Special Density" application package offers high-precision density measurement over a wide density and temperature range particularly for applications subject to varying process conditions.



For detailed information, see the Operating Instructions for the device.

16.14 Accessories



Overview of accessories available for order → 🖺 126

16.15 Supplementary documentation



For an overview of the scope of the associated Technical Documentation, refer to the following:

- Device Viewer (www.endress.com/deviceviewer): Enter the serial number from the nameplate
- Endress+Hauser Operations app: Enter serial number from nameplate or scan matrix code on nameplate.

Standard documentation

Brief Operating Instructions

Brief Operating Instructions for the sensor

Measuring device	Documentation code
Proline Promass P	KA01286D

Transmitter Brief Operating Instructions

Measuring device	Documentation code
Proline Promass 100	KA01336D

Technical Information

Measuring device	Documentation code
Proline Promass P 100	TI01036D

Description of Device Parameters

Measuring device	Documentation code
Proline Promass 100	GP01037D

Supplementary devicedependent documentation

Safety Instructions

Content	Documentation code
ATEX/IECEx Ex i	XA00159D
ATEX/IECEx Ex nA	XA01029D
cCSAus IS	XA00160D
INMETRO Ex i	XA01219D
INMETRO Ex nA	XA01220D
NEPSI Ex i	XA01249D
NEPSI Ex nA	XA01262D

Special Documentation

Content	Documentation code
Information on the Pressure Equipment Directive	SD00142D
Concentration measurement	SD01503D
Heartbeat Technology	SD01493D
Web server	SD01823D

Installation Instructions

Contents	Comment
Installation instructions for spare part sets and accessories	 Access the overview of all the available spare part sets via <i>Device Viewer</i> → □ 124 Accessories available for order with Installation Instructions → □ 126

Index

0 9	Density adjustment
3-A approval	Design
	Measuring device
A	Design fundamentals
Access authorization to parameters	Maximum measured error
Read access	Repeatability
Write access	Device components
Access code	Device description files
Incorrect input	Device fuse
Adapting the diagnostic behavior 93	Device locking, status
Application	Device master file
Application packages	GSD
Approvals	Device name
6	Sensor
C	Transmitter
Cable entries	Device repair
Technical data	Device revision
Cable entry	Device type ID
Degree of protection	Device Viewer
CE mark	DeviceCare
Certificates	Device description file
Certification PROFINET	Diagnostic information
cGMP	Design, description
Check	DeviceCare
Connection	FieldCare
Installation	Light emitting diodes
Checklist	Overview
Post-connection check	Remedial measures
Post-installation check	Web browser
Cleaning	Diagnostic list
Cleaning in place (CIP)	Dimensions
Exterior cleaning	DIP switch
Interior cleaning	see Write protection switch
Sterilization in place (SIP)	Display area
Cleaning in place (CIP)	For operational display
Climate class	Display values
Commissioning	For locking status
Advanced settings	Disposal
Configuring the measuring device 62	Document
Connecting cable	Function
Connecting the measuring device 28 Connection	Symbols
see Electrical connection	Document function
Connection examples, potential equalization	Document information
	Down pipe
Connection preparations	E
Current consumption	EHDEG-certified
Cyclic data transmission	Electrical connection
Cyclic data transmission	Degree of protection
D	Measuring device
Date of manufacture	Operating tools
Deactivating the write protection	Via PROFINET network
Declaration of Conformity	Via service interface (CDI-RJ45)
Define access code	RSLogix 5000
Degree of protection	Web server
Density	Electromagnetic compatibility
- caucy	Licenomagnetic companionity

154

Enabling write protection	L
Endress+Hauser services	Languages, operation options
Maintenance	Local display
Repair	see Operational display
Environment	Low flow cut off
Storage temperature	7.6
Vibration- and shock-resistance	M
Error messages	Main electronics module
see Diagnostic messages	Maintenance tasks
Event list	Manufacturer ID
Event logbook	Materials 144 Maximum measured error 136
Ex approval	Measured values
Sensor	see Process variables
Transmitter	Measurement accuracy
Exterior cleaning	Measuring and test equipment
Exterior deathing	Measuring device
F	Configuration
FDA	Conversion
Field of application	Design
Residual risks	Disposal
FieldCare	Mounting the sensor
Device description file	Preparing for electrical connection 28
Establishing a connection 47	Preparing for mounting
Function	Removing
User interface	Repairs
Filtering the event logbook	Measuring principle
Firmware	Measuring range
Release date	For liquids
Version	Measuring range, recommended
Firmware history	Measuring system
Flash function	Medium pressure
Flow limit	Influence
Food Contact Materials Regulation	Medium temperature
Functions	Influence
see Parameters	Menu 117
See I didilictels	Diagnostics 117 Operation 82
G	Setup
Galvanic isolation	Menus
	For measuring device configuration 62
H	For specific settings
Hardware write protection 80	Module
Hygienic compatibility	Totalizer
T	Totalizer Control 54
I/O electronics module	Mounting
Identifying the measuring device	Mounting dimensions
Incoming acceptance	see Dimensions
Influence	Mounting location
Medium pressure	Mounting preparations
Medium temperature	Mounting requirements
Inlet runs	Dimensions
Input	Down pipe
Inspection	Inlet and outlet runs
Received goods	Mounting location
Intended use	Orientation
Interior cleaning	Sensor heating
,	System pressure
	Thermal insulation 20

Vibrations	Pressure loss
Mounting tool	Pressure-temperature ratings 142
N.Y.	Process connections
N	Process variables
Nameplate	Calculated
Sensor	Measured
Transmitter	Product safety
	Protecting parameter settings 79
0	g r
Operable flow range	R
Operating menu	Read access
Menus, submenus	Reading measured values
Structure	Recalibration
Submenus and user roles	Reference operating conditions
Operating philosophy	Registered trademarks
Operation	Remote operation
Operation options	Repair
Operational display	Notes
Operational safety	Repair of a device
Order code	
Orientation (vertical, horizontal)	Repeatability
	Replacement
Outlet runs	Device components
Output signal	Requirements for personnel
Output variables	Response time
P	Return
	C
Packaging disposal	S
Parameter settings	Safety
Administration (Submenu)	Sensor
Advanced setup (Submenu)	Mounting
Communication (Submenu)	Sensor heating
Corrected volume flow calculation (Submenu) 72	Sensor housing
Density adjustment (Wizard) 74	Serial number
Device information (Submenu) 121	Setting the operating language 62
Diagnostics (Menu)	Settings
Low flow cut off (Wizard) 69	Adapting the measuring device to the process
Measured variables (Submenu) 82	conditions
Medium selection (Submenu) 67	Administration
Partially filled pipe detection (Wizard) 70	Communication interface 65
Sensor adjustment (Submenu) 73	Low flow cut off 69
Setup (Menu)	Medium
Simulation (Submenu)	Operating language 62
System units (Submenu) 63	Partially filled pipe detection 70
Totalizer (Submenu)	Resetting the device
Totalizer 1 to n (Submenu)	Resetting the totalizer
Totalizer handling (Submenu)	Sensor adjustment
Web server (Submenu) 45	Simulation
Zero point adjustment (Submenu)	System units 63
Performance characteristics	Tag name
Performing density adjustment	Totalizer
Pharmaceutical compatibility	Totalizer reset
Post-connection check	
	Signal on alarm
Post-connection check (checklist)	Software release
Post-installation check	Software write protection
Post-installation check (checklist)	Spare part
Potential equalization	Spare parts
Power consumption	Special connection instructions
Power supply failure	Special mounting instructions
Pressure Equipment Directive	Hygienic compatibility

Standards and guidelines	
For operational display	91 41 16 16
Operating menu	36
Corrected volume flow calculation Device information	71 71 65 72 21
Zero point adjustment	
For status signal	38 38 38
System design Measuring system	.29
System pressure	49 20
T Technical data, overview	29
Temperature range Medium temperature	.41 16 29 .36
Tool For mounting	

Electrical connection
Totalizer
Configuration
Totalizer Control module
Transmitter
Connecting the signal cables 29
Turning the display module
Transporting the measuring device
Troubleshooting
General
TSE/BSE Certificate of Suitability
Turning the display module
U
UKCA marking
Use of the measuring device
Borderline cases
Incorrect use
see Intended use
User interface
Current diagnostic event
Previous diagnostic event
User roles
USP Class VI
V
•
Version data for the device
Version data for the device 49 Vibration- and shock-resistance 141 Vibrations 22 W W@M 123, 124 W@M Device Viewer 12 Weight 144 SI units 144
Version data for the device 49 Vibration- and shock-resistance 141 Vibrations 22 W W@M 123, 124 W@M Device Viewer 12 Weight SI units 144 Transport (notes) 16
Version data for the device 49 Vibration- and shock-resistance 141 Vibrations 22 W W@M 123, 124 W@M Device Viewer 12 Weight 12 SI units 144 Transport (notes) 16 US units 144
Version data for the device
Version data for the device 49 Vibration- and shock-resistance 141 Vibrations 22 W W@M 123, 124 W@M Device Viewer 12 Weight SI units 144 Transport (notes) 16 US units 144 Wizard Define access code 79
Version data for the device 49 Vibration- and shock-resistance 141 Vibrations 22 W W@M 123, 124 Weight 12 SI units 144 Transport (notes) 16 US units 144 Wizard 14 Define access code 79 Density adjustment 74
Version data for the device 49 Vibration- and shock-resistance 141 Vibrations 22 W W@M 123, 124 Weight 12 SI units 144 Transport (notes) 16 US units 144 Wizard 14 Define access code 79 Density adjustment 74 Low flow cut off 69
Version data for the device 49 Vibration- and shock-resistance 141 Vibrations 22 W W@M 123, 124 W@M Device Viewer 12 Weight 144 Transport (notes) 16 US units 144 Wizard 144 Define access code 79 Density adjustment 74 Low flow cut off 69 Partially filled pipe detection 70
Version data for the device 49 Vibration- and shock-resistance 141 Vibrations 22 W W@M 123, 124 W@M Device Viewer 12 Weight 12 SI units 144 Transport (notes) 16 US units 144 Wizard 144 Define access code 79 Density adjustment 74 Low flow cut off 69 Partially filled pipe detection 70 Workplace safety 10
Version data for the device 49 Vibration- and shock-resistance 141 Vibrations 22 W W@M 123, 124 W@M Device Viewer 12 Weight 12 SI units 144 Transport (notes) 16 US units 144 Wizard 144 Define access code 79 Density adjustment 74 Low flow cut off 69 Partially filled pipe detection 70 Workplace safety 10 Write access 39
Version data for the device 49 Vibration- and shock-resistance 147 Vibrations 22 W W@M 123, 124 W@M Device Viewer 12 Weight 12 SI units 144 Transport (notes) 16 US units 144 Wizard 144 Define access code 79 Density adjustment 74 Low flow cut off 65 Partially filled pipe detection 70 Workplace safety 10 Write access 35 Write protection 35
Version data for the device 49 Vibration- and shock-resistance 141 Vibrations 22 W W@M 123, 124 W@M Device Viewer 12 Weight 144 Transport (notes) 16 US units 144 Wizard 16 Define access code 79 Density adjustment 74 Low flow cut off 69 Partially filled pipe detection 70 Workplace safety 10 Write access 39 Write protection 79 Via access code 79
Version data for the device 49 Vibration- and shock-resistance 141 Vibrations 22 W W@M 123, 124 W@M Device Viewer 12 Weight 144 Transport (notes) 16 US units 144 Wizard 144 Define access code 79 Density adjustment 74 Low flow cut off 69 Partially filled pipe detection 70 Workplace safety 10 Write access 39 Write protection 79 Via access code 79 Via startup parameterization (NSU) 81
Version data for the device 49 Vibration- and shock-resistance 141 Vibrations 22 W W@M 123, 124 W@M Device Viewer 12 Weight 144 Transport (notes) 16 US units 144 Wizard 16 Define access code 79 Density adjustment 74 Low flow cut off 69 Partially filled pipe detection 70 Workplace safety 10 Write access 39 Write protection 79 Via access code 79



www.addresses.endress.com