

Safety Instructions

iTHERM TM111, iTHERM TM112, iTHERM TM131, iTHERM TM151, iTHERM TM152

ATEX, IECEx: Ex ia IIC T6 Ga/Gb
Ex ia IIIC Txxx °C Da/Db



iTHERM TM111, iTHERM TM112, iTHERM TM131, iTHERM TM151, iTHERM TM152

Table of contents

Associated documentation	4
Supplementary documentation	4
Manufacturer's certificates	4
Manufacturer address	4
Safety instructions	4
Safety instructions: General	5
Safety instructions: Installation in equipment of Group III	6
Safety instructions for Intrinsic safety: Installation	6
Safety instructions: Partition wall	7
Safety instructions: Specific conditions of use	7
Temperature tables	7
Electrical data	10

Associated documentation

All documentation is available on the Internet:
www.endress.com/Deviceviewer
(enter the serial number from the nameplate).



If not yet available, a translation into EU languages can be ordered.

To commission the device, please observe the Operating Instructions pertaining to the device:
www.endress.com/<product code>, e.g. iTHERM TM151

Supplementary documentation

Explosion protection brochure: CP00021Z

The explosion protection brochure is available on the Internet:
www.endress.com/Downloads

Manufacturer's certificates**IECEX certificate**

Certificate number: IECEX EPS 18.0074X

Affixing the certificate number certifies conformity with the following standards (depending on the device version)

- IEC 60079-0: 2017
- IEC 60079-11: 2011
- IEC 60079-26: 2014

ATEX certificate

Certificate number: EPS 18 ATEX 1 152 X

EU Declaration of Conformity

Declaration number: EC_00735

The EU Declaration of Conformity is available on the Internet:
www.endress.com/Downloads

UKCA certificate

Certificate number: CML 21UKEX21238X


UKCA Declaration of Conformity

Declaration number: UK_00426

Manufacturer address

Endress+Hauser Wetzler GmbH + Co. KG
Obere Wank 1
87484 Nesselwang, Germany

Safety instructions

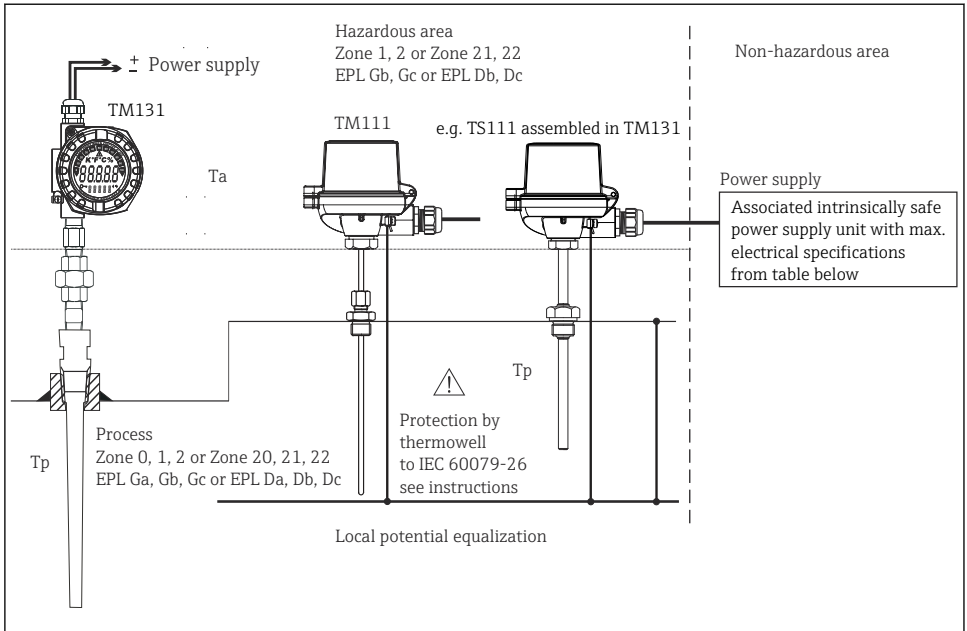

Safety instructions:
General

- Comply with the installation and safety instructions in the Operating Instructions.
- Install the device according to the manufacturer's instructions and any other valid standards and regulations (e.g. EN/IEC 60079-14).
- The housing of the thermometer must be connected to the local potential equalization or installed in a grounded metallic piping or tank respectively.
- It cannot be taken for granted that when using compression fittings with non metallic olives that there is a secure grounding when installing in a metal system. This means that an additional safe connection to the local potential equalization needs to be used.
- For using of a plug-in connector (e.g. PA-connector by Weidmüller) is to be observed that the requirements for the respective category and the operating temperature are followed.

Safety instructions: Installation in equipment of Group III

- Sensors of TM111/TM112 with a diameter smaller than 6 mm or 1/4" shall be protected by a thermowell providing a degree of protection of at least IP5X and in compliance with the enclosure requirements to IEC/EN 60079-0.
- TM131 temperature sensors shall always be protected by a thermowell providing a degree of protection of at least IP5X and in compliance with the enclosure requirements to IEC/EN 60079-0.
- Seal the cable entries tight with certified cable glands (min. IP6X) IP6X according to IEC/EN 60529.
- The provided cable entries to option code glands are suitable ATEX/IECEX Ex certified glands with a temperature range of -20 to +95 °C.
- For operating the thermometer at an ambient temperature under -20 °C, appropriate cables, cable entries and sealing facilities permitted for this application must be used.
- For ambient temperatures higher than +70 °C, use suitable heat-resisting cables or wires, cable entries and sealing facilities for Ta +5 K above surrounding.
- For using of a plug-in connector (e.g. PA-connector by Weidmüller) is to be observed that the requirements for the respective category and the operating temperature are followed.
- The thermometer must be installed and maintained so, that even in the event of rare incidents, an ignition source due to impact or friction between the enclosure and iron/steel is excluded.

WARNING

Explosive atmosphere

- ▶ In an explosive atmosphere, do not open the device when voltage is supplied (ensure that the IP6x housing protection is maintained during operation).

Safety instructions for Intrinsic safety: Installation

- Comply with the installation and safety instructions in the Operating Instructions.
- Install the device according to the manufacturer's instructions and any other valid standards and regulations (e.g. EN/IEC 60079-14).
- Observe the safety instructions for the used transmitters.
- The display, type TID10, may only be installed in Zone 1 (EPL Gb) or Zone 2 (EPL Gc).
- The type of protection changes as follows when the devices are connected to certified intrinsically safe circuits of Category **ib: Ex ib IIC**.
When connecting to an intrinsically safe **ib** circuit, do not operate the sensor at Zone 0 without any thermowell according to IEC/EN 60079-26.
- The inserts with dual circuits (3 mm (1/8") and 6 mm (1/4") diameter) and 3 mm (1/8") diameter are not isolated to the metallic sheath in conformance with IEC/EN 60079-11 chapter 6.3.13.

- When connecting dual sensors make sure that the potential equalizations are at the same local potential equalization.
- Inserts with 3 mm (1/8") diameter or grounded inserts, e.g. type TSx11 must be connected to the local potential equalization.
- For inserts with 3 mm (1/8") diameter or grounded inserts, e.g. type TSx11 an intrinsically safe supply with galvanic isolation must be used.

Safety instructions:
Partition wall

Install the thermometer in a partition wall which is in compliance with IEC/EN 60079-26 in reference to its ultimate application.

Safety instructions:
Specific conditions of use

- From the safety point of view, the circuit of versions of the following temperature sensors and inserts shall be considered to be connected to earth (for details, the instruction manual, provided with the equipment, shall be observed):
 - Type TS111, TS211 and TS212 with diameter 3 mm or 1/8", single or dual
 - Type TS111, TS211 and TS212 with diameter 6 mm or 1/4" dual
- The thermometer must be installed and maintained so, that even in the event of rare incidents, an ignition source due to impact or friction between the enclosure and iron/steel is excluded.
- Avoid electrostatic charging of the plastic housing (do not rub dry).

Temperature tables

The dependency of the ambient and process temperatures upon the temperature class for assembly with transmitters:

Type	Assembled Transmitter	Temperature class	Ambient temperature range housing	Maximum surface temperature housing
TM111, TM112, TM131, TM151, TM152, TS111	TMT84, TMT85 TMT162 PA, FF	T6	$-40\text{ °C} \leq T_a \leq +55\text{ °C}$	T85 °C
		T5	$-40\text{ °C} \leq T_a \leq +70\text{ °C}$	T100 °C
		T4	$-40\text{ °C} \leq T_a \leq +85\text{ °C}$	T135 °C
	TMT71, TMT72, TMT86 ¹⁾ TMT162 HART TMT142 HART	T6	$-50\text{ °C} \leq T_a \leq +55\text{ °C}$	T85 °C
		T5	$-50\text{ °C} \leq T_a \leq +70\text{ °C}$	T100 °C
		T4	$-50\text{ °C} \leq T_a \leq +85\text{ °C}$	T135 °C
	TMT82 ¹⁾	T6	$-50\text{ °C} \leq T_a \leq +58\text{ °C}$	T85 °C
		T5	$-50\text{ °C} \leq T_a \leq +75\text{ °C}$	T100 °C
		T4	$-50\text{ °C} \leq T_a \leq +85\text{ °C}$	T135 °C

Type	Assembled Transmitter	Temperature class	Ambient temperature range housing	Maximum surface temperature housing
	TMT8x, TMT7x with display	T6	$-40\text{ °C} \leq T_a \leq +55\text{ °C}$	T85 °C
		T5	$-40\text{ °C} \leq T_a \leq +70\text{ °C}$	T100 °C
		T4	$-40\text{ °C} \leq T_a \leq +85\text{ °C}$	T135 °C

1) lower temperature of -52 °C is possible with marking Ex ia IIC Ga/Gb only

Type	Assembled Transmitter	Insert diameter	Process temperature range	Temperature class/ maximum surface temperature sensor
TM111, TM112, TM131, TM151, TM152, TS111, TS211	TMT8x, TMT7x	3 mm (1/8"), 3 mm (1/8") dual or 6 mm (1/4") dual	$-50\text{ °C} \leq T_p \leq +66\text{ °C}$	T6/T85 °C
			$-50\text{ °C} \leq T_p \leq +81\text{ °C}$	T5/T100 °C
			$-50\text{ °C} \leq T_p \leq +116\text{ °C}$	T4/T135 °C
			$-50\text{ °C} \leq T_p \leq +181\text{ °C}$	T3/T200 °C
			$-50\text{ °C} \leq T_p \leq +276\text{ °C}$	T2/T300 °C
			$-50\text{ °C} \leq T_p \leq +426\text{ °C}$	T1/T450 °C
		6 mm (1/4") dual	$-50\text{ °C} \leq T_p \leq +73\text{ °C}$	T6/T85 °C
			$-50\text{ °C} \leq T_p \leq +88\text{ °C}$	T5/T100 °C
			$-50\text{ °C} \leq T_p \leq +123\text{ °C}$	T4/T135 °C
			$-50\text{ °C} \leq T_p \leq +188\text{ °C}$	T3/T200 °C
		$-50\text{ °C} \leq T_p \leq +283\text{ °C}$	T2/T300 °C	
		$-50\text{ °C} \leq T_p \leq +433\text{ °C}$	T1/T450 °C	

Type	Assembled Transmitter	Insert diameter	Process temperature range	Temperature class/ maximum surface temperature sensor
TM131, TM151, TM152, TS211, TS212	TMT162	3 mm (1/8"), 3 mm (1/8") dual or 6 mm (1/4") dual	$-50\text{ °C} \leq T_p \leq +64\text{ °C}$	T6/T85 °C
			$-50\text{ °C} \leq T_p \leq +79\text{ °C}$	T5/T100 °C
			$-50\text{ °C} \leq T_p \leq +114\text{ °C}$	T4/T135 °C
			$-50\text{ °C} \leq T_p \leq +179\text{ °C}$	T3/T200 °C
			$-50\text{ °C} \leq T_p \leq +279\text{ °C}$	T2/T300 °C
			$-50\text{ °C} \leq T_p \leq +424\text{ °C}$	T1/T450 °C
		6 mm (1/4") dual	$-50\text{ °C} \leq T_p \leq +71\text{ °C}$	T6/T85 °C
			$-50\text{ °C} \leq T_p \leq +86\text{ °C}$	T5/T100 °C
			$-50\text{ °C} \leq T_p \leq +121\text{ °C}$	T4/T135 °C

Type	Assembled Transmitter	Insert diameter	Process temperature range	Temperature class/ maximum surface temperature sensor
			$-50\text{ °C} \leq T_p \leq +186\text{ °C}$	T3/T200 °C
			$-50\text{ °C} \leq T_p \leq +286\text{ °C}$	T2/T300 °C
			$-50\text{ °C} \leq T_p \leq +431\text{ °C}$	T1/T450 °C



For thermocouple inserts, the temperature class T6...T1 and the maximum surface temperature T85 °C...T450 °C are equal to the process temperature.

The dependency of the ambient and process temperatures upon the temperature class for assembly without transmitter (terminal block):

Insert diameter	Temperature class/ Maximum surface temperature	Tp (process) - maximum allowed process temperature (sensor)				
		Pi ≤ 50 mW	Pi ≤ 100 mW	Pi ≤ 200 mW	Pi ≤ 500 mW	Pi ≤ 650 mW
3 mm (1/8"), 3 mm (1/8") dual or 6 mm (1/4") dual	T1/T450 °C	426 °C	415 °C	396 °C	343 °C	333 °C
	T2/T300 °C	276 °C	265 °C	246 °C	193 °C	183 °C
	T3/T200 °C	181 °C	170 °C	151 °C	98 °C	88 °C
	T4/T135 °C	116 °C	105 °C	86 °C	33 °C	23 °C
	T5/T100 °C	81 °C	70 °C	51 °C	-2 °C	-12 °C
	T6/T85 °C	66 °C	55 °C	36 °C	-17 °C	-27 °C
6 mm (1/4") dual	T1/T450 °C	433 °C	428 °C	420 °C	398 °C	388 °C
	T2/T300 °C	283 °C	278 °C	270 °C	248 °C	238 °C
	T3/T200 °C	188 °C	183 °C	175 °C	153 °C	143 °C
	T4/T135 °C	123 °C	118 °C	110 °C	88 °C	78 °C
	T5/T100 °C	88 °C	83 °C	75 °C	53 °C	43 °C
	T6/T85 °C	73 °C	68 °C	60 °C	38 °C	28 °C

Insert diameter	Temperature class/ Maximum surface temperature	Tp (process) - maximum allowed process temperature (sensor)			Ta (ambient) - ambient temperature (housing) ¹⁾
		Pi ≤ 750 mW	Pi ≤ 800 mW	Pi ≤ 1000 mW	
3 mm (1/8"), 3 mm (1/8") dual or 6 mm (1/4") dual	T1/T450 °C	320 °C	312 °C	280 °C	$-40\text{ °C} \leq T_a \leq +130\text{ °C}$
	T2/T300 °C	170 °C	162 °C	130 °C	
	T3/T200 °C	75 °C	62 °C	30 °C	

Insert diameter	Temperature class/ Maximum surface temperature	Tp (process) - maximum allowed process temperature (sensor)			Ta (ambient) - ambient temperature (housing) ¹⁾
		Pi ≤ 750 mW	Pi ≤ 800 mW	Pi ≤ 1000 mW	
	T4/T135 °C	10 °C	2 °C	-30 °C	-40 °C ≤ Ta ≤ +116 °C
	T5/T100 °C	-25 °C	-33 °C	-	-40 °C ≤ Ta ≤ +81 °C
	T6/T85 °C	-40 °C	-	-	-40 °C ≤ Ta ≤ +66 °C
6 mm (1/4") dual	T1/T450 °C	381 °C	377 °C	361 °C	-40 °C ≤ Ta ≤ +130 °C
	T2/T300 °C	231 °C	227 °C	211 °C	
	T3/T200 °C	136 °C	127 °C	111 °C	
	T4/T135 °C	71 °C	67 °C	51 °C	-40 °C ≤ Ta ≤ +123 °C
	T5/T100 °C	36 °C	32 °C	16 °C	-40 °C ≤ Ta ≤ +88 °C
	T6/T85 °C	21 °C	17 °C	1 °C	-40 °C ≤ Ta ≤ +73 °C

- 1) The ambient temperature at the terminal head may be directly influenced by the process temperature, but its restricted to the range -40 to +130 °C, besides tor types TA30A, TA30D and TA30H with a restricted range -50 to +130 °C. For thermometers with two mounted head transmitters the allowed ambient temperature is up to 12 K lower than each head transmitter's certified ambient temperature.



For thermocouple inserts, the temperature class T6...T1 and the maximum surface temperature T85 °C...T450 °C are equal to the process temperature.

Electrical data

Associated intrinsically safe power supply unit with maximum electrical specifications below the characteristic values of the assembled transmitter:

Transmitter	Ui	Ii	Pi	Ci	Li
TMT71/TMT72	30 V	100 mA	800 mW	0	0
TMT82	30 V	130 mA	800 mW	0	0
TMT162 HART	30 V	300 mA	1000 mW	0	0
TMT162 PA/FF	FISCO field device				
TMT84, TMT85, TMT86	FISCO field device				

Transmitter	Ui	Ii	Pi	Ci	Li
Terminal block	30 V	140 mA	1 000 mW	See tables below	
Flying leads	30 V	140 mA	1 000 mW	See tables below	

Sensor type	Insertion Length IL		Flying leads		Terminal block	
	C _i /m	L _i /m	C _i	L _i	C _i	L _i
Single	200 pF	1 µH	56.4 pF	282 nH	4.6 pF	23 nH
Dual	400 pF	2 µH	113 pF	564 nH	9.2 pF	46 nH

Calculation formula for options with flying leads only:

- $C_i = C_i \text{ Insertion length IL} \times \text{IL} + C_i \text{ Flying leads}$
- $L_i = L_i \text{ Insertion length IL} \times \text{IL} + L_i \text{ Flying leads}$

Calculation formula for options with terminal block only:

- $C_i = C_i \text{ Insertion length IL} \times \text{IL} + C_i \text{ Terminal block}$
- $L_i = L_i \text{ Insertion length IL} \times \text{IL} + L_i \text{ Terminal block}$

Category	Type of protection (ATEX/IECEX)	Type
II 1/2G	Ex ia IIC T6...T1 Ga/Gb	TM111, TM112, TM131, TM151, TM152
II1/2D	Ex ia IIIC T85 °C...T450 °C Da/Db	



71619736

www.addresses.endress.com
