Valid as of version 01.02.zz (Device firmware) Products Solutions

Services

# Operating Instructions **Proline Prosonic Flow P 500**

Ultrasonic time-of-flight flowmeter Modbus RS485







- Make sure the document is stored in a safe place such that it is always available when working on or with the device.
- To avoid danger to individuals or the facility, read the "Basic safety instructions" section carefully, as well as all other safety instructions in the document that are specific to working procedures.
- The manufacturer reserves the right to modify technical data without prior notice. Your Endress+Hauser Sales Center will supply you with current information and updates to these instructions.

# Table of contents

1	About this document	6		6.1.2	Sensor set selection and	2.2
1.1	Document function			6.1.3	arrangement	22
1.2	Symbols			0.2.5	requirements	27
	1.2.1 Safety symbols			6.1.4	Special mounting instructions	
	1.2.2 Electrical symbols		6.2	Mount	ing the measuring device	
	<ul><li>1.2.3 Communication-specific symbols</li><li>1.2.4 Tool symbols</li></ul>			6.2.1	Required tools	
	1.2.5 Symbols for	,		6.2.2	Preparing the measuring device	
	certain types of information	7		6.2.3	Mounting the measuring device	
	1.2.6 Symbols in graphics			6.2.4	Mounting the sensor	29
1.3	Documentation	8		6.2.5	Mounting the transmitter housing:	, 0
	1.3.1 Document function			()(	Proline 500	42
L.4	Registered trademarks			6.2.6	Turning the transmitter housing: Proline 500	/1./1
	-			6.2.7	Turning the display module: Proline	44
2	Safety Instructions	9		0.2.7	500	44
	-		6.3	Post-m	nounting check	
2.1 2.2	Requirements for the personnel		0.5	1 000 11	iouning encert	1,
2.3	Workplace safety		7	Floots	rical connection	46
2.4	Operational safety					
2.5		10	7.1		cal safety	
2.6	IT security		7.2		cting requirements	
2.7	Device-specific IT security			7.2.1 7.2.2	Required tools	
	2.7.1 Protecting access via hardware write			7.2.2 7.2.3	Requirements for connection cable Terminal assignment	
		11		7.2.3 7.2.4	Shielding and grounding	
	J 1	11		7.2.5	Preparing the measuring device	
		12	7.3		cting the measuring device: Proline	10
	2.7.4 Access via service interface (CDI-		, .5			50
	RJ45)	12		7.3.1	Connecting the connecting cable	50
				7.3.2	Connecting the signal cable and the	
3	Product description	13			supply voltage cable	52
3.1	Product design	13		7.3.3	Integrating the transmitter into a	
	3.1.1 Proline 500				network	55
			7.4		ial equalization	
<del>'</del>	Incoming acceptance and product			7.4.1	Requirements	
_		1 -	7.5		connection instructions	
	identification	15	7.6		Connection examples	
4.1	Incoming acceptance		7.6	7.6.1	are settings	
4.2	Product identification			7.6.2	Activating the terminating resistor	60
	1	16	7.7		ng the degree of protection	
	1	17	7.7		onnection check	
	4.2.3 Symbols on the device	17	/.0	1 050 00	Sinicetion eneck	01
5	Storage and transport	18	8	Opera	ation options	62
	_		8.1	Overvi	ew of operation options	62
5.1	Storage conditions		8.2		are and function of the operating	02
5.2	Transporting the product					63
5.3	5.2.1 Transporting with a fork lift Packaging disposal			8.2.1	Structure of the operating menu	63
ر.ر	i ackaging aisposai	10		8.2.2	Operating philosophy	64
<u> </u>	Mounting	10	8.3	Access	to operating menu via local display	65
5	Mounting			8.3.1	Operational display	65
5.1	Mounting requirements			8.3.2	Navigation view	67
	6.1.1 Mounting position	19		8.3.3	Editing view	69
				8.3.4	Operating elements	/1

	8.3.5 8.3.6	Opening the context menu Navigating and selecting from list	71 73	10.5	Advanced settings	125
	8.3.7	Calling the parameter directly	73		access code	126
	8.3.8	Calling up help text	74		10.5.2 Carrying out a sensor adjustment	126
	8.3.9	Changing the parameters	74		10.5.3 Performing the sensor setup	126
	8.3.10	User roles and related access authorization	75		<ul><li>10.5.4 Configuring the totalizer</li></ul>	130
	8.3.11	Disabling write protection via access			configurations	133
		code	75		10.5.6 WLAN configuration	
	8.3.12	Enabling and disabling the keypad			10.5.7 Configuration management	
		lock	76		10.5.8 Using parameters for device	
3.4	Access	to operating menu via web browser	76		administration	139
	8.4.1	Function range	76	10.6	Simulation	140
	8.4.2	Requirements	77	10.7	Protecting settings from unauthorized access	143
	8.4.3	Connecting the device	78		10.7.1 Write protection via access code	143
	8.4.4	Logging on	80		10.7.2 Write protection via write protection	
	8.4.5		81		switch	145
	8.4.6	Disabling the Web server	I			
	8.4.7	Logging out		11	Operation	1/.7
3.5		to the operating menu via the	-	11	•	147
		ng tool	83	11.1	Reading off the device locking status	147
	8.5.1	Connecting the operating tool	83	11.2	Adjusting the operating language	147
	8.5.2	FieldCare	86	11.3	Configuring the display	147
	8.5.3	DeviceCare	87	11.4	Reading off measured values	147
	0.5.5	Devicedare	07		11.4.1 Process variables	148
_					11.4.2 System values	152
9	Syster	n integration	88		11.4.3 "Input values" submenu	153
9.1	Overvie	w of device description files	88		11.4.4 Output values	154
	9.1.1	Current version data for the device			11.4.5 "Totalizer" submenu	156
	9.1.2		88	11.5	Adapting the measuring device to the process	
9.2		s RS485 information	88		conditions	157
,,_	9.2.1	Function codes	88	11.6	Performing a totalizer reset	157
	9.2.2		89	11.0	11.6.1 Function scope of "Control Totalizer"	1),
	9.2.3	Response time	- 1		parameter	158
	9.2.4	Data types			11.6.2 Function range of "Reset all	100
	9.2.5	Byte transmission sequence			totalizers" parameter	158
	9.2.6	Modbus data map		11.7	Displaying the measured value history	159
10	Comm	nissioning	93	12	Diagnosis and troubleshooting	162
10.1		ounting and post-connection check		12.1	General troubleshooting	
10.1		ng on the measuring device		12.1	Diagnostic information via LEDs	
10.2		the operating language		12.2	12.2.1 Transmitter	
10.4	_	ring the measuring device		12.3	Diagnostic information on local display	
10.4		Defining the tag name		14.5	2	
					12.3.1 Diagnostic message	
		Setting the system units	95	10 /	12.3.2 Calling up remedial measures	168
	10.4.3	Configuring the communication	0.7	12.4	Diagnostic information in the web browser	168
	10 / /	interface	97		12.4.1 Diagnostic options	168
		Configuring the measuring point	98	10 5	12.4.2 Calling up remedy information	169
		1 3 3	103	12.5	Diagnostic information in FieldCare or	1.00
			104		DeviceCare	169
		5 5	105		12.5.1 Diagnostic options	169
		3 3	106		12.5.2 Calling up remedy information	170
		3 3	107	12.6	Diagnostic information via communication	
	10.4.10	Configuring the pulse/frequency/			interface	171
		*	110		12.6.1 Reading out diagnostic information	171
		5 5 1	117		12.6.2 Configuring error response mode	171
			119	12.7	Adapting the diagnostic information	171
	10.4.13	B Configuring the local display 1	120		12.7.1 Adapting the diagnostic behavior	171
			123	12.8	Overview of diagnostic information	172

12.9	Pending diagnostic events	177
	Diagnostics list	178
12.11	Event logbook	178
	12.11.1 Reading out the event logbook	178
	12.11.2 Filtering the event logbook	179
10 10	12.11.3 Overview of information events	179
12.12	Resetting the measuring device	181
	parameter	181
12.13	Device information	181
12.14	Firmware history	183
13	Maintenance	184
13.1	Maintenance tasks	184
	13.1.1 Exterior cleaning	184
13.2	Measuring and test equipment	184
13.3	Endress+Hauser services	184
14	Repair	185
14.1	General notes	185
14.1	14.1.1 Repair and conversion concept	185
	14.1.2 Notes for repair and conversion	185
14.2	Spare parts	185
14.3	Endress+Hauser services	185
14.4	Return	185
14.5	Disposal	186
14.7	14.5.1 Removing the measuring device	186
	14.5.2 Disposing of the measuring device	186
15	Accessories	187
15.1		187
15.1	Device-specific accessories	187
	15.1.1 For the transmitter	188
15.2	Communication-specific accessories	189
15.2	Service-specific accessories	189
	System components	
16	Tachnical data	191
	Technical data	
16.1	Application	191
16.2	Function and system design	191
16.3	Input	192
16.4	Output	194
16.5	Power supply	199
16.6	Performance characteristics	200
16.7	Mounting	202
16.8	Environment	202
16.9	Process	204
	Mechanical construction	204
	Display and user interface	207
16.12	Certificates and approvals	210
	Application packages	212
	Accessories	<ul><li>213</li><li>213</li></ul>
Tun day		215

# 1 About this document

#### 1.1 Document function

These Operating Instructions contain all the information required in the various life cycle phases of the device: from product identification, incoming acceptance and storage, to installation, connection, operation and commissioning, through to troubleshooting, maintenance and disposal.

# 1.2 Symbols

#### 1.2.1 Safety symbols

#### **⚠** DANGER

This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury.

#### **▲** WARNING

This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.

#### **A** CAUTION

This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or medium injury.

#### NOTICE

This symbol contains information on procedures and other facts which do not result in personal injury.

#### 1.2.2 Electrical symbols

Symbol	Meaning	
===	Direct current	
~	Alternating current	
$\overline{}$	Direct current and alternating current	
=	Ground connection A grounded terminal which, as far as the operator is concerned, is grounded via a grounding system.	
Potential equalization connection (PE: protective earth) Ground terminals that must be connected to ground prior to establishing a connections.		
	The ground terminals are located on the interior and exterior of the device:  Interior ground terminal: potential equalization is connected to the supply network.  Exterior ground terminal: device is connected to the plant grounding system.	

#### 1.2.3 Communication-specific symbols

Symbol	Meaning
<b></b>	Wireless Local Area Network (WLAN) Communication via a wireless, local network.
•	LED Light emitting diode is off.

Symbol	Meaning
<del>\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\</del>	<b>LED</b> Light emitting diode is on.
	<b>LED</b> Light emitting diode is flashing.

# 1.2.4 Tool symbols

Symbol	Meaning	
Torx screwdriver		
96	Phillips head screwdriver	
Ó	Open-ended wrench	

# 1.2.5 Symbols for certain types of information


Symbol	Meaning
<b>✓</b>	Permitted Procedures, processes or actions that are permitted.
<b>✓</b> ✓	Preferred Procedures, processes or actions that are preferred.
×	Forbidden Procedures, processes or actions that are forbidden.
i	Tip Indicates additional information.
	Reference to documentation
	Reference to page
	Reference to graphic
<b>•</b>	Notice or individual step to be observed
1., 2., 3	Series of steps
L	Result of a step
?	Help in the event of a problem
	Visual inspection

# 1.2.6 Symbols in graphics

Symbol	Meaning
1, 2, 3,	Item numbers
1., 2., 3.,	Series of steps
A, B, C,	Views
A-A, B-B, C-C,	Sections
EX	Hazardous area

Symbol	Meaning
×	Safe area (non-hazardous area)
≋➡	Flow direction

# 1.3 Documentation

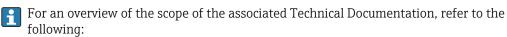

- *Device Viewer* (www.endress.com/deviceviewer): Enter the serial number from the nameplate
- Endress+Hauser Operations app: Enter serial number from nameplate or scan matrix code on nameplate.

#### 1.3.1 Document function

The following documentation may be available depending on the version ordered:

Document type	Purpose and content of the document	
Technical Information (TI)	Planning aid for your device The document contains all the technical data on the device and provides an overview of the accessories and other products that can be ordered for the device.	
Brief Operating Instructions (KA)	Guide that takes you quickly to the 1st measured value The Brief Operating Instructions contain all the essential information from incoming acceptance to initial commissioning.	
Operating Instructions (BA)	Your reference document The Operating Instructions contain all the information that is required in the various phases of the life cycle of the device: from product identification, incoming acceptance and storage, to mounting, connection, operation and commissioning through to troubleshooting, maintenance and disposal.	
Description of Device Parameters (GP)	Reference for your parameters The document provides a detailed explanation of each individual parameter. The description is aimed at those who work with the device over the entire life cycle and perform specific configurations.	
Safety Instructions (XA)	Depending on the approval, safety instructions for electrical equipment in hazardous areas are also supplied with the device. The Safety Instructions are an integral part of the Operating Instructions.	
	Information on the Safety Instructions (XA) relevant to the device is provided on the nameplate.	
Supplementary device-dependent documentation (SD/FY)	Always comply strictly with the instructions in the relevant supplementary documentation. The supplementary documentation is an integral part of the device documentation.	

# 1.4 Registered trademarks

#### Modbus<sup>®</sup>

Registered trademark of SCHNEIDER AUTOMATION, INC.

# 2 Safety Instructions

# 2.1 Requirements for the personnel

The personnel for installation, commissioning, diagnostics and maintenance must fulfill the following requirements:

- ► Trained, qualified specialists must have a relevant qualification for this specific function and task.
- ► Are authorized by the plant owner/operator.
- ► Are familiar with federal/national regulations.
- ▶ Before starting work, read and understand the instructions in the manual and supplementary documentation as well as the certificates (depending on the application).
- ► Follow instructions and comply with basic conditions.

The operating personnel must fulfill the following requirements:

- ► Are instructed and authorized according to the requirements of the task by the facility's owner-operator.
- ▶ Follow the instructions in this manual.

#### 2.2 Intended use

#### Application and media

The measuring device described in this manual is intended only for the flow measurement of liquids.

Depending on the version ordered, the measuring device can also measure potentially explosive, flammable, poisonous and oxidizing media.

Measuring devices for use in explosive atmospheres, in hygienic applications or where there is a high risk of pressures, are labeled accordingly on the nameplate.

To ensure that the measuring device is in proper condition during the operation period:

- ▶ Only use the measuring device in full compliance with the data on the nameplate and the general conditions listed in the Operating Instructions and supplementary documentation.
- ► Refer to the nameplate to check whether the ordered metering system can be operated for the intended application in areas requiring specific approvals (e.g. explosion protection, pressure equipment safety).
- ► Use the measuring device only for media to which the process-wetted materials are sufficiently resistant.
- ▶ Keep within the specified pressure and temperature range.
- ▶ Keep within the specified ambient temperature range.
- ► Protect the measuring device permanently against corrosion from environmental influences.

#### Incorrect use

Non-designated use can compromise safety. The manufacturer is not liable for damage caused by improper or non-designated use.

#### Residual risks

#### **A** CAUTION

Risk of hot or cold burns! The use of media and electronics with high or low temperatures can produce hot or cold surfaces on the device.

- ▶ Mount suitable touch protection.
- ▶ Use suitable protective equipment.

# 2.3 Workplace safety

When working on and with the device:

▶ Wear the required personal protective equipment as per national regulations.

# 2.4 Operational safety

Damage to the device!

- ▶ Operate the device in proper technical condition and fail-safe condition only.
- ► The operator is responsible for the interference-free operation of the device.

#### Modifications to the device

Unauthorized modifications to the device are not permitted and can lead to unforeseeable dangers!

▶ If modifications are nevertheless required, consult with the manufacturer.

#### Repair

To ensure continued operational safety and reliability:

- ▶ Carry out repairs on the device only if they are expressly permitted.
- ▶ Observe federal/national regulations pertaining to the repair of an electrical device.
- ▶ Use only original spare parts and accessories.

# 2.5 Product safety

This measuring device is designed in accordance with good engineering practice to meet state-of-the-art safety requirements, has been tested, and left the factory in a condition in which it is safe to operate.

It meets general safety standards and legal requirements. It also complies with the EU directives listed in the device-specific EU Declaration of Conformity. The manufacturer confirms this by affixing the CE mark to the device..

# 2.6 IT security

Our warranty is valid only if the product is installed and used as described in the Operating Instructions. The product is equipped with security mechanisms to protect it against any inadvertent changes to the settings.

IT security measures, which provide additional protection for the product and associated data transfer, must be implemented by the operators themselves in line with their security standards.

# 2.7 Device-specific IT security

The device offers a range of specific functions to support protective measures on the operator's side. These functions can be configured by the user and guarantee greater inoperation safety if used correctly. The following list provides an overview of the most important functions:

Function/interface	Factory setting	Recommendation
Write protection via hardware write protection switch $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $	Not enabled	On an individual basis following risk assessment
Access code (also applies to web server login or FieldCare connection) → 🖺 11	Not enabled (0000)	Assign a customized access code during commissioning

Function/interface	Factory setting	Recommendation
WLAN (order option in display module)	Enabled	On an individual basis following risk assessment
WLAN security mode	Enabled (WPA2- PSK)	Do not change
WLAN passphrase (Password) → 🖺 11	Serial number	Assign an individual WLAN passphrase during commissioning
WLAN mode	Access point	On an individual basis following risk assessment
Web server → 🗎 12	Enabled	On an individual basis following risk assessment
CDI-RJ45 service interface→ 🗎 12	-	On an individual basis following risk assessment

#### 2.7.1 Protecting access via hardware write protection

Write access to the parameters of the device via the local display, web browser or operating tool (e.g. FieldCare, DeviceCare) can be disabled via a write protection switch (DIP switch on the main electronics module). When hardware write protection is enabled, only read access to the parameters is possible.

Hardware write protection is disabled when the device is delivered  $\rightarrow \triangleq 145$ .

#### 2.7.2 Protecting access via a password

Different passwords are available to protect write access to the device parameters or access to the device via the WLAN interface.

- User-specific access code
   Protect write access to the device parameters via the local display, web browser or operating tool (e.g. FieldCare, DeviceCare). Access authorization is clearly regulated through the use of a user-specific access code.
- WLAN passphrase
   The network key protects a connection between an operating unit (e.g. notebook or tablet) and the device via the WLAN interface which can be ordered as an option.
- Infrastructure mode
  When the device is operated in infrastructure mode, the WLAN passphrase corresponds
  to the WLAN passphrase configured on the operator side.

#### User-specific access code

Write access to the device parameters via the local display, web browser or operating tool (e.g. FieldCare, DeviceCare) can be protected by the modifiable, user-specific access code  $(\rightarrow \cong 143)$ .

When the device is delivered, the device does not have an access code and is equivalent to 0000 (open).

#### WLAN passphrase: Operation as WLAN access point

When the device is delivered, the network key is pre-defined depending on the device. It can be changed via the **WLAN settings** submenu in the **WLAN passphrase** parameter  $(\rightarrow \implies 137)$ .

#### Infrastructure mode

A connection between the device and WLAN access point is protected by means of an SSID and passphrase on the system side. Please contact the relevant system administrator for access.

#### General notes on the use of passwords

- The access code and network key supplied with the device should be changed during commissioning for safety reasons.
- Follow the general rules for generating a secure password when defining and managing the access code and network kev.
- The user is responsible for the management and careful handling of the access code and network kev.
- For information on configuring the access code or on what to do if you lose the

#### 2.7.3 Access via web server

 $\rightarrow$   $\blacksquare$  76With the integrated web server, the device can be operated and configured via a web browser. The connection is via the service interface (CDI-RJ45) or the WLAN interface.

The web server is enabled when the device is delivered. The web server can be disabled via the **Web server functionality** parameter if necessary (e.g., after commissioning).

The device and status information can be hidden on the login page. This prevents unauthorized access to the information.



For detailed information on device parameters, see: "Description of device parameters" document.

#### 2.7.4 Access via service interface (CDI-RJ45)

The device can be connected to a network via the service interface (CDI-RJ45). Devicespecific functions quarantee the secure operation of the device in a network.

The use of relevant industrial standards and quidelines that have been defined by national and international safety committees, such as IEC/ISA62443 or the IEEE, is recommended. This includes organizational security measures such as the assignment of access authorization as well as technical measures such as network segmentation.



Transmitters with an Ex de approval may not be connected via the service interface (CDI-RJ45)!

# **3** Product description

The measuring system consists of a transmitter and two or one sensor sets. The transmitter and sensor sets are mounted in physically separate locations. They are interconnected by sensor cables.

The measuring system uses a measurement method based on the transit time difference. Here, the sensors function as sound generators and sound receivers. Depending on the application and version, the sensors can be arranged for a measurement via 1, 2, 3 or 4 traverses  $\rightarrow \implies 22$ .


The transmitter serves to control the sensor sets, to prepare, process and evaluate the measuring signals, and to convert the signals to the desired output variable.

# 3.1 Product design

The electronics are located in the transmitter.

#### 3.1.1 Proline 500

Signal transmission: analog Order code for "Integrated ISEM electronics", option  ${\bf B}$  "Transmitter"

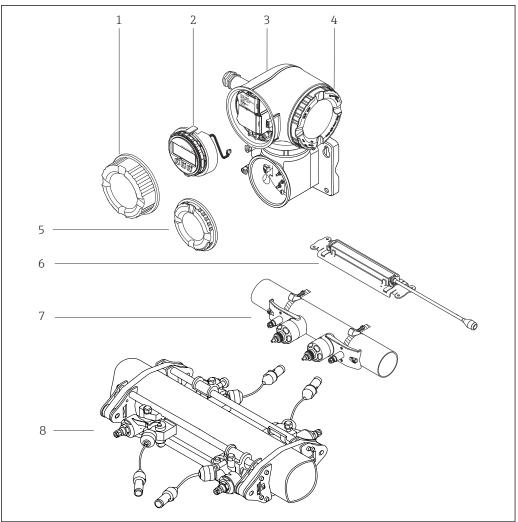


**₽** 1 Important components of a measuring device

- 1 Connection compartment cover
- Display module 2
- 3 *Transmitter housing with integrated ISEM electronics*
- Electronics compartment cover 4
- Connection compartment cover: sensor cable connection Sensor for DN 15 to 65 (½ to 2½") Sensor for DN 50 to 4000 (2 to 160") 5

- Sensor for high-temperature applications

# 4 Incoming acceptance and product identification

# 4.1 Incoming acceptance

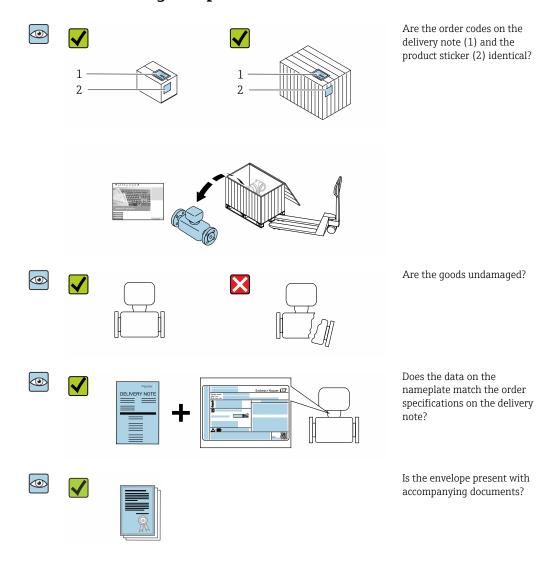

- **■** If one of the conditions is not satisfied, contact your Endress+Hauser Sales Center.

#### 4.2 Product identification

The following options are available for identification of the device:


- Nameplate
- Order code with details of the device features on the delivery note
- Enter the serial numbers from the nameplates in the *Device Viewer* (www.endress.com/deviceviewer): all the information about the device is displayed.
- Enter the serial numbers from the nameplates into the *Endress+Hauser Operations app* or scan the DataMatrix code on the nameplate with the *Endress+Hauser Operations app*: all the information about the device is displayed.

For an overview of the scope of the associated Technical Documentation, refer to the following:

- The "Additional standard documentation on the device" and "Supplementary device-dependent documentation" sections
- The *Device Viewer*: Enter the serial number from the nameplate (www.endress.com/deviceviewer)
- The *Endress+Hauser Operations app*: Enter the serial number from the nameplate or scan the DataMatrix code on the nameplate.

#### 4.2.1 Transmitter nameplate


#### Proline 500

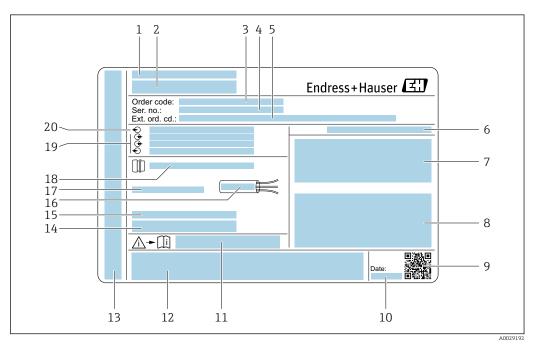

■ 2 Example of a transmitter nameplate

- 1 Manufacturer address/certificate holder
- 2 Name of the transmitter
- 3 Order code
- 4 Serial number (Ser. no.)
- 5 Extended order code (ext. ord. cd.)
- 6 Degree of protection
- 7 Space for approvals: use in hazardous areas
- 8 Electrical connection data: available inputs and outputs
- 9 2-D matrix code
- 10 Date of manufacture: year-month
- 11 Document number of safety-related supplementary documentation
- 12 Space for approvals and certificates: e.g. CE mark, RCM tick
- 13 Space for degree of protection of connection and electronics compartment when used in hazardous areas
- 14 Firmware version (FW) and device revision (Dev.Rev.) from the factory
- 15 Space for additional information in the case of special products
- 16 Permitted temperature range for cable
- 17 Permitted ambient temperature  $(T_a)$
- 18 Information on cable gland
- 19 Available inputs and outputs, supply voltage
- 20 Electrical connection data: supply voltage

#### 4.2.2 Sensor nameplate

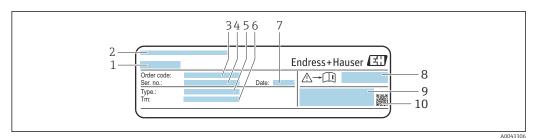

■ 3 Example of sensor nameplate, "front"

- 1 Name of sensor
- 2 Manufacturer address/certificate holder
- 3 Order code
- 4 Serial number (Ser. no.)
- 5 Model
- 6 Medium temperature range
- 7 Date of manufacture: year-month
- 8 Document number of safety-related supplementary documentation  $\Rightarrow riangleq 214$
- 9 Additional information
- 10 2D-Matrixcode



A004330

- 4 Example of sensor nameplate, "back"
- 1 CE mark, RCM-Tick mark, approval information on explosion protection and degree of protection

# Order code

The measuring device is reordered using the order code.

#### Extended order code

- The device type (product root) and basic specifications (mandatory features) are always listed.
- Of the optional specifications (optional features), only the safety and approvalrelated specifications are listed (e.g. LA). If other optional specifications are also ordered, these are indicated collectively using the # placeholder symbol (e.g. #LA#).
- If the ordered optional specifications do not include any safety and approval-related specifications, they are indicated by the + placeholder symbol (e.g. XXXXXX-ABCDE +).

#### 4.2.3 Symbols on the device

Symbol	Meaning
$\triangle$	WARNING! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury. Please consult the documentation for the measuring device to discover the type of potential danger and measures to avoid it.
[i]	Reference to documentation Refers to the corresponding device documentation.
	Protective ground connection A terminal that must be connected to the ground prior to establishing any other connections.

# 5 Storage and transport

# 5.1 Storage conditions

Observe the following notes for storage:

- ▶ Store in the original packaging to ensure protection from shock.
- ▶ Protect from direct sunlight. Avoid unacceptably high surface temperatures.
- ► Store in a dry and dust-free place.
- ▶ Do not store outdoors.

Storage temperature  $\rightarrow \triangleq 203$ 

# 5.2 Transporting the product

Transport the measuring device to the measuring point in the original packaging.

#### 5.2.1 Transporting with a fork lift

If transporting in wood crates, the floor structure enables the crates to be lifted lengthwise or at both sides using a forklift.

# 5.3 Packaging disposal

All packaging materials are environmentally friendly and 100% recyclable:

- Outer packaging of device
   Stretch wrap made of polymer in accordance with EU Directive 2002/95/EC (RoHS)
- Packaging
  - Wood crate treated in accordance with ISPM 15 standard, confirmed by IPPC logo
  - Cardboard box in accordance with European packaging guideline 94/62/EC, recyclability confirmed by Resy symbol
- Transport material and fastening fixtures
  - Disposable plastic pallet
  - Plastic straps
  - Plastic adhesive strips
- Filler material


Paper pads

# 6 Mounting

# 6.1 Mounting requirements

#### 6.1.1 Mounting position


#### Mounting location

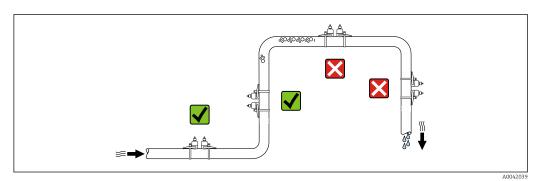

To prevent measuring errors arising from accumulation of gas bubbles in the measuring pipe, avoid the following mounting locations in the piping:

- Highest point of a pipeline.
- Directly upstream of a free pipe outlet in a down pipe.

#### Orientation

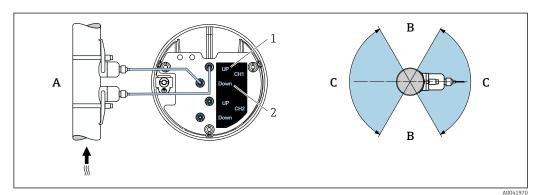

Orientation views

- 1 Channel 1 upstream
- 2 Channel 1 downstream
- A Recommended orientation with upward flow direction
- B Non-recommended installation range with horizontal orientation (60°)
- C Recommended installation range max. 120°

#### Vertica

Recommended orientation with upward flow direction (view A) With this orientation, entrained solids sink and gases rise away from the sensor area when the medium is not flowing. In addition, the pipe can be completely drained and protected against the buildup of deposits.

#### Horizontal


In the recommended installation range with a horizontal orientation (View B), gas and air accumulations at the top of the pipe and inteference from deposit buildup at the bottom of the pipe can influence the measurement to a lesser degree.

#### Inlet and outlet runs

If possible, install the sensors upstream of assemblies such as valves, T-pieces, elbows, and pumps. If this is not possible, the specified measurement accuracy of the measuring device is achieved by observing the specified minimum inlet and outlet runs with optimum sensor configuration. If there are several flow obstructions, the longest specified inlet run must be taken into account.

#### *Inlet and outlet runs with FlowDC*

Shorter inlet and outlet runs are possible with the following device versions: Two-path measurement with 2 sensor sets (order code for "Mounting type", option A2 "Clamp-on, 2-channel, 2-sensor sets") and FlowDC

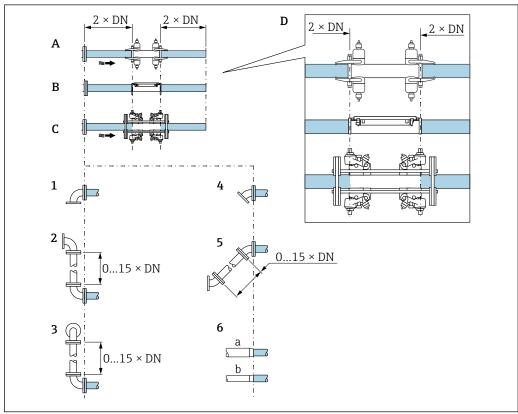

A005322


#### € 6

- A Inlet and outlet runs DN 50 to 4000 (2 to 160")
- B Inlet and outlet runs DN 15 to 65 ( $\frac{1}{2}$  to  $2\frac{1}{2}$ ")
- *C* Inlet and outlet runs for high-temperature sensors
- D Position of inlet and outlet runs on sensor
- 1 Single elbow
- 2 Double elbow(2  $\times$  90° in the same plane, with 0 to 15 x DN between the elbows)
- 3 Double elbow 3D (2  $\times$  90° in different planes, with 0 to 15 x DN between the elbows)
- 4 45° bend
- 5 "2 x 45° bend" option(2 × 45° in the same plane, with 0 to 15 x DN between the elbows)
- 6a Concentric diameter change (contraction)
- 6b Concentric diameter change (expansion)

#### Inlet and outlet runs without FlowDC

Minimum inlet and outlet runs without FlowDC with 1 or 2 sensor sets with different flow obstructions

20

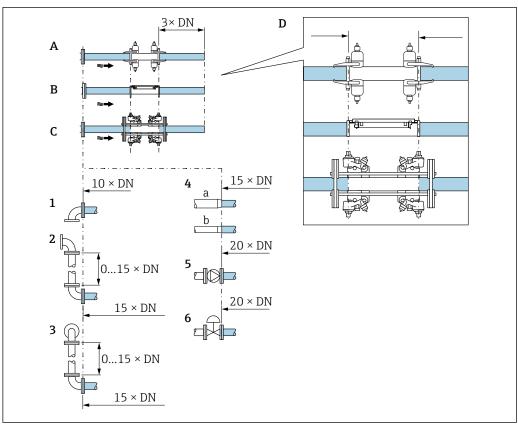

A005330

- **№** 7
- A Inlet and outlet runs DN 50 to 4000 (2 to 160")
- B Inlet and outlet runs DN 15 to 65 (½ to 2½")
- *C* Inlet and outlet runs for high-temperature sensors
- D Position of inlet and outlet runs on sensor
- 1 Pipe elbow 90° or 45°
- 2 Two pipe elbows 90° or 45° (in one plane, with 0 to 15 x DN between the elbows)
- 3 Two pipe elbows 90° or 45° (in two planes, with 0 to 15 x DN between the elbows)
- 4a Reduction
- 4b Extension
- 5 Control valve (2/3 open)
- 6 Pump

#### Measuring mode

*Two-path measurement with FlowDC* <sup>1)</sup> (standard configuration)


In the case of two-path measurement with FlowDC, the flow is measured by two measurements at the measuring point.

For this, the two sensor sets are installed on the measuring pipe, offset at a specific angle to one another (180° for 1 traverse, 90° for 2 traverses, angle tolerance  $\pm 5$ °). This arrangement is independent of the circumferential position of the two sensor sets on the measuring pipe.

The measured values of both sensor sets are averaged. The resulting measurement error is compensated based on the type of interference, the distance from the measuring point to the disturbance point, and the Reynolds number. The error-compensated average thus ensures that the specified maximum measurement error and repeatability are maintained even under non-ideal flow conditions (see for example  $\rightarrow \blacksquare 6$ ,  $\trianglerighteq 20$ ).

The configuration of the two measuring paths is only performed once and is adopted for both measuring paths.

<sup>1)</sup> Flow disturbance compensation

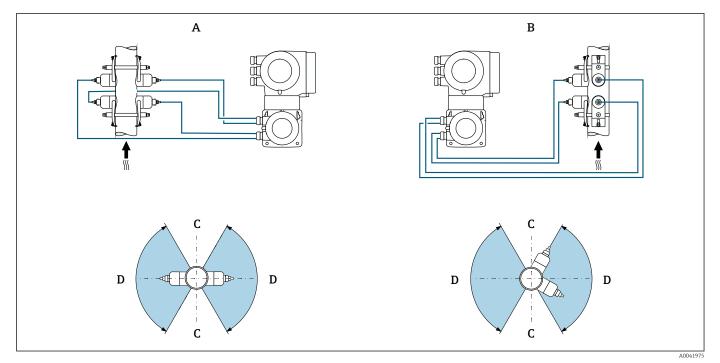

- ₽8 Two-path measurement: examples of the horizontal arrangement of the sensor sets at a measuring point
- Α Installation of the sensor sets for measurement via 1 traverse
- Installation of the sensor sets for measurement via 2 traverses В
- For horizontal orientation: non-recommended installation range (60°) С
- For horizontal orientation: recommended installation range max. 120°
- If extending the measuring point from single-path measurement to two-path measurement, a sensor of the same design must be selected.

#### Dimensions

For the dimensions and installation lengths of the device, see the "Technical Information" document, "Mechanical construction" section .

#### 6.1.2 Sensor set selection and arrangement

If mounting horizontally, always mount the sensor set so that it is offset at an angle of  $\pm 30^{\circ}$  to the top of the measuring pipe to avoid incorrect measurements caused by gas pockets or bubbles at the top of the pipe.

The sensors can be arranged in different ways:

- Mounting arrangement for measurement with 1 sensor set (1 measuring path):
  - The sensors are located on opposite sides of the measuring pipe (offset at 180°): measurement with 1 or 3 traverses.
  - The sensors are located on the same side of the measuring pipe: measurement with 2 or 4 traverses
- Mounting for measurement with 2 sensor sets <sup>2)</sup> (2 measuring paths):
  - 1 sensor of each sensor set is located at the opposite side of the measuring pipe (offset by 180°): measurement with 1 or 3 traverses
  - The sensors are located on the same side of the measuring pipe: measurement with 2 or 4 traverses


The sensor sets are arranged on the measuring pipe, offset by 90°.

#### Using 5 MHz sensors


Here, the rails of the two sensor sets are always arranged at an angle of  $180^{\circ}$  to one another for all measurements with 1, 2, 3 or 4 traverses. The sensor functions are assigned in the two rails via the transmitter electronics unit depending on the selected number of traverses. It is not necessary to swap the cables in the transmitter between the channels.


#### Use of high-temperature sensors


The measuring paths for a high-temperature measurement are preferably mounted with 1 traverse on the pipe. If 2 measuring paths are being used, the individual paths are arranged so they are offset by 180° from each other (X-arrangement).

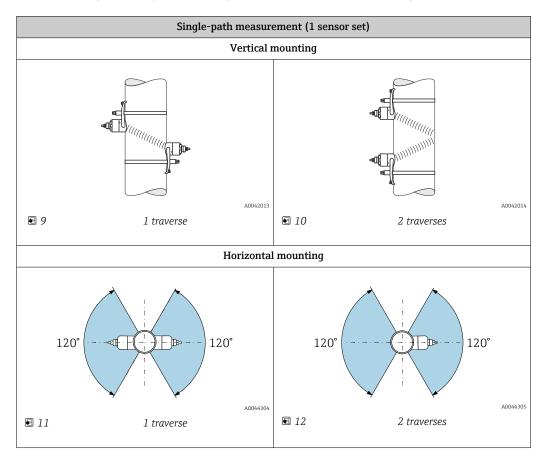

<sup>2)</sup> Do not swap the sensors of the two sensor sets, as this can affect the measurement performance.

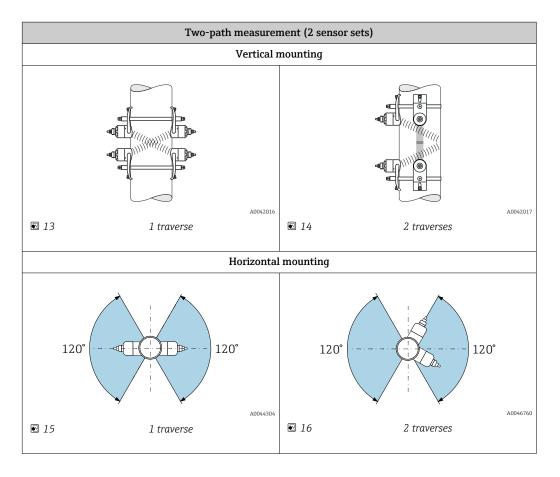

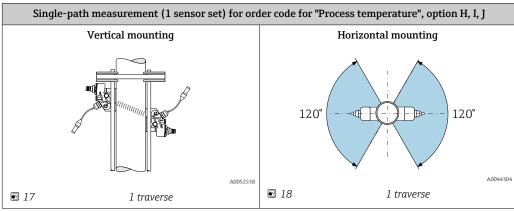

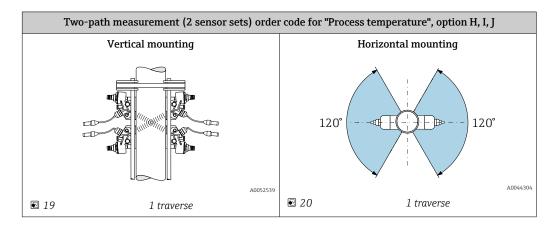

#### Operating frequency selection

The sensors of the measuring device are available with adapted operating frequencies. For the resonance behavior of the measuring pipes, these frequencies are optimized for different properties of measuring pipes (material, pipe wall thickness) and media (kinematic viscosity). If these properties are known, an optimum selection can be made according to the following tables <sup>3)</sup>.

Measuring pipe material	Nominal diameter of measuring pipe	Recommendation
	< DN 65 (2½")	C-500-A
Steel, cast iron	≥ DN 65 (2½")	Table for measuring pipe material: steel, cast iron $\rightarrow \stackrel{ riangle}{ riangle}$ 25
	< DN 50 (2")	C-500-A
Plastic	≥ DN 50 (2")	Table for measuring pipe material: plastic → 🖺 26
Glass-fiber reinforced	< DN 50 (2")	C-500-A (with restrictions)
plastic	≥ DN 50 (2")	Table for measuring pipe material: glass-fiber reinforced plastic → 🖺 26



Order code for "Sensor version", options AG, AH: To comply with the measurement accuracy specifications of the high-temperature sensors, these sensors may only be installed on metallic pipes!

Further selection criteria are provided in SD03088D (Special Documentation for high-temperature applications).

#### Measuring pipe material: steel, cast iron

	Kinematic viscosity cSt [mm²/s]		
	$0 < v \le 10$ $10 < v \le 100$		100 < <i>v</i> ≤ 1000
Measuring pipe wall thickness [mm (in)]	Converter frequency (sensor version/number of traverses) 1)		
1.0 to 1.9 (0.04 to 0.07)	2 MHz (C-200 / 2)	2 MHz (C-200 / 1)	2 MHz (C-200 / 1)
> 1.9 to 2.2 (0.07 to 0.09)	1 MHz (C-100 / 2)	1 MHz (C-100 / 1)	1 MHz (C-100 / 1)
> 2.2 to 2.8 (0.09 to 0.11)	2 MHz (C-200 / 2)	1 MHz (C-100 / 1)	1 MHz (C-100 / 1)
> 2.8 to 3.4 (0.11 to 0.13)	1 MHz (C-100 / 2)	1 MHz (C-100 / 1)	1 MHz (C-100 / 1)
> 3.4 to 4.2 (0.13 to 0.17)	2 MHz (C-200 / 2)	2 MHz (C-200 / 1)	1 MHz (C-100 / 1)
> 4.2 to 5.9 (0.17 to 0.23)	1 MHz (C-100 / 2)	1 MHz (C-100 / 1)	0.3 MHz (C-030 / 2)
> 5.9 (0.23)	Selection according to table: "Measuring pipe material: steel, cast iron > 5.9 mm (0.23 in)"		

<sup>1)</sup> Table shows a typical selection: In critical cases (large pipe diameter, liner, gas or solid inclusions) the optimum sensor type may differ from these recommendations.

Measuring pipe material: Steel, cast iron with wall thicknesses > 5.9 mm (0.23 in)

	Kinematic viscosity cSt [mm²/s]				
	$0 < v \le 10$ $10 < v \le 100$ $100 < v \le 1000$				
Nominal diameter [mm (")]	Converter frequency (sensor version/number of traverses) 1)				
15 to 50 (½ to 2)	5 MHz (C-500)				
> 50 to 300 (2 to 12)	2 MHz (C-200)	1 MHz (C-100)	1 MHz (C-100)		

	Kinematic viscosity cSt [mm <sup>2</sup> /s]				
	$0 < v \le 10$ $10 < v \le 100$ $100 < v \le 1000$				
Nominal diameter [mm (")]	Converter frequency (sensor version/number of traverses) 1)				
> 300 to 1000 (12 to 40)	1 MHz (C-100) 0.3 MHz (C-030) 0.3 MHz (C-030)				
> 1000 to 4000 (40 to 160)	0.3 MHz (C-030)				

<sup>1)</sup> Table shows a typical selection: In critical cases (large pipe diameter, liner, gas or solid inclusions) the optimum sensor type may differ from these recommendations.

#### *Measuring pipe material: plastic*

	Kinematic viscosity cSt [mm²/s]		
	<b>0</b> < <i>ν</i> ≤ <b>10</b>	10 < <i>v</i> ≤ 100	100 < <i>v</i> ≤ 1000
Nominal diameter [mm (")]	Converter frequency (sensor version/number of traverses) 1)		
15 to 50 (½ to 2)	5 MHz (C-500 / 2)	5 MHz (C-500 / 2)	5 MHz (C-500 / 2)
> 50 to 80 (2 to 3)	2 MHz (C-200 / 2)	1 MHz (C-100 / 2)	0.3 MHz (C-030 / 2)
> 80 to 150 (3 to 6)	1 MHz (C-100 / 2)	1 MHz (C-100 / 2)	0.3 MHz (C-030 / 2)
> 150 to 200 (6 to 8)	1 MHz (C-100 / 2)	0.3 MHz (C-030 / 2)	0.3 MHz (C-030 / 2)
> 200 to 300 (8 to 12)	1 MHz (C-100 / 2)	0.3 MHz (C-030 / 2)	0.3 MHz (C-030 / 2)
> 300 to 400 (12 to 16)	1 MHz (C-100 / 1)	0.3 MHz (C-030 / 2)	0.3 MHz (C-030 / 1)
> 400 to 500 (16 to 20)	1 MHz (C-100 / 1)	0.3 MHz (C-030 / 1)	0.3 MHz (C-030 / 1)
> 500 to 1000 (20 to 40)	0.3 MHz (C-030 / 1)	0.3 MHz (C-030 / 1)	-
> 1000 to 4000 (40 to 160)	0.3 MHz (C-030 / 1)	-	-

<sup>1)</sup> Table shows a typical selection: In critical cases (large pipe diameter, liner, gas or solid inclusions) the optimum sensor type may differ from these recommendations.

#### ${\it Measuring pipe material: glass-fiber reinforced plastic}$

	Kinematic viscosity cSt [mm²/s]			
	$0 < v \le 10$ $10 < v \le 100$ $100 < v \le 100$		100 < <i>v</i> ≤ 1000	
Nominal diameter [mm (")]	Converter frequency (sensor version/number of traverses) 1)			
15 to 50 (½ to 2)	5 MHz (C-500 / 2)	5 MHz (C-500 / 2)	5 MHz (C-500 / 2)	
> 50 to 80 (2 to 3)	0.3 MHz (C-030 / 2)	0.3 MHz (C-030 / 2)	0.3 MHz (C-030 / 1)	
> 80 to 150 (3 to 6)	0.3 MHz (C-030 / 2)	0.3 MHz (C-030 / 1)	0.3 MHz (C-030 / 1)	
> 150 to 400 (6 to 16)	0.3 MHz (C-030 / 2)	0.3 MHz (C-030 / 1)	-	
> 400 to 500 (16 to 20)	0.3 MHz (C-030 / 1)	-	-	

	Kinematic viscosity cSt [mm²/s]				
	$0 < v \le 10$ $10 < v \le 100$ $100 < v \le 1000$				
Nominal diameter [mm (")]	Converter frequency (sensor version/number of traverses) 1)				
> 500 to 1000 (20 to 40)	0.3 MHz (C-030 / 1)	-	-		
> 1000 to 4000 (40 to 160)	0.3 MHz (C-030 / 1)	-	-		

1) Table shows a typical selection: In critical cases (large pipe diameter, liner, gas or solid inclusions) the optimum sensor type may differ from these recommendations.



- If clamp-on sensors are used, a 2 traverse-type installation is recommended. This is the easiest and most convenient type of installation, particularly for measuring devices whose measuring pipe is difficult to access from one side.
- A 1 traverse installation is recommended for the following installation conditions:
  - Certain plastic measuring pipes with a wall thickness of >4 mm (0.16 in)
  - Measuring pipes made of composite materials (e.g. glass-fiber reinforced plastic)
  - Lined measuring pipes
  - Applications with media with high acoustic damping
  - High-temperature applications (>170°C), order code "Process temperature", options H, I, J: configuration and sizing of the measuring point using the Applicator is recommended.

#### **6.1.3** Environmental and process requirements

#### Ambient temperature range

Transmitter	<ul> <li>Standard: -40 to +60 °C (-40 to +140 °F)</li> <li>Optional order code for "Test, certificate", option JN: -50 to +60 °C (-58 to +140 °F)</li> </ul>
Readability of the local display	$-20\ \text{to}\ +60\ ^\circ\text{C}\ (-4\ \text{to}\ +140\ ^\circ\text{F})$ The readability of the display may be impaired at temperatures outside the temperature range.
Sensor	DN 15 to 65 (½ to ½½") -40 to +150 °C (-40 to +302 °F)
	DN 50 to 4000 (2 to 160")  Standard: -40 to +80 °C (-40 to +176 °F)  Optional: 0 to +170 °C (+32 to +338 °F)
	DN 50 to 600 (2 to 24") High temperature: +150 to +550 °C (+302 to +1022 °F)
Sensor cable (connection between transmitter and sensor)	DN 15 to 65 (½ to ½½") Standard (TPE 1): –40 to +80 °C (–40 to +176 °F)
	DN 50 to 4000 (2 to 160")  Standard (TPE halogen-free): -40 to +80 °C (-40 to +176 °F)  Optional (PTFE 1): -50 to +170 °C (-58 to +338 °F)

- 1) Armored version also available for order
- ► If operating outdoors:

Avoid direct sunlight, particularly in warm climatic regions.


- In principle, it is permitted to insulate the sensors mounted on the pipe. In the case of insulated sensors, make sure that the process temperature does not exceed or drop below the specified cable temperature.
- For notes on insulation for high-temperature sensors, see the Special Documentation on high-temperature applications for the device  $\rightarrow \stackrel{\triangle}{=} 214$

#### Medium pressure range

No pressure limitation For correct measurement, the static pressure of the medium must be higher than the vapor pressure.

#### **6.1.4** Special mounting instructions

#### Weather protection cover

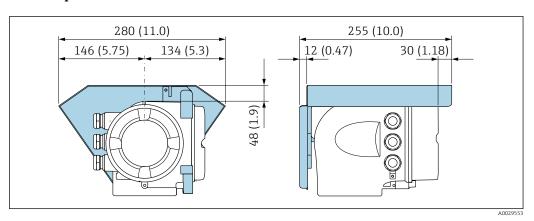

■ 21 Weather protection cover for Proline 500; engineering unit mm (in)


Cover locking: Proline 500

#### **NOTICE**

Order code "Transmitter housing", option L "Cast, stainless": The covers of the transmitter housing are provided with a borehole to lock the cover.

The cover can be locked using screws and a chain or cable provided by the customer on site

- ▶ The use of stainless steel chains or cables is recommended.
- ► If a protective coating is applied, it is recommended to use a heat shrink tube to protect the housing paint.

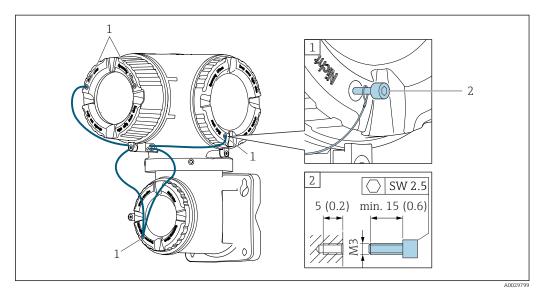

1 Cover borehole for the securing screw

2 Securing screw to lock the cover

# 6.2 Mounting the measuring device

#### 6.2.1 Required tools

#### For transmitter

For mounting on a post: Proline 500 transmitter Open-ended wrench AF 13

For wall mounting: Drill with drill bit Ø 6.0 mm

#### For sensor


For installation on the measuring pipe: use a suitable mounting tool

#### 6.2.2 Preparing the measuring device

- 1. Remove all remaining transport packaging.
- 2. Remove stick-on label on the electronics compartment cover.

#### 6.2.3 Mounting the measuring device

► Install the measuring device or turn the transmitter housing so that the cable entries do not point upwards.

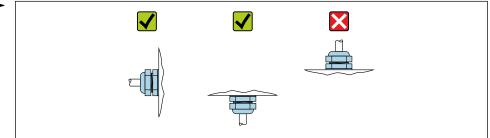

A0029263

#### 6.2.4 Mounting the sensor

#### **A** WARNING

#### Risk of injury when mounting sensors and strapping bands!

► Suitable gloves and goggles must be worn due to the increased risk of cuts.

#### **▲** DANGER

#### Risk of burns from hot surfaces!

- ► Wear suitable protective equipment such as temperature-resistant protective gloves, clothing or protective visors.
- ▶ Before commencing work: allow the system and measuring device to cool to a touch-safe temperature.

# | High-temperature applications (> 170°C)

- Order code for "Process temperature", options H, I, J
- Installation for high-temperature applications may only be performed by Endress +Hauser staff or by individuals authorized and trained by Endress+Hauser.

#### Notes on mounting

#### Mounting the high-temperature sensors CH-050/CH-100

For detailed information on mounting the CH-050/CH-100 high-temperature sensors (order code for "Sensor version", options AG, AH), see Special Documentation on "High-temperature applications  $\rightarrow \triangleq 214$ ".

#### Sensor configuration and settings

DN 15 to 65 (½ to 2½")	DN 50 to 4000 (2 to 160")			
Strapping band	Strapping	j band	Weld	ed bolt
2 traverses [mm (in)]	1 traverse 2 traverses [mm (in)] [mm (in)]		1 traverse [mm (in)]	2 traverses [mm (in)]
Sensor distance 1)	Sensor distance 1)	Sensor distance 1)	Sensor distance 1)	Sensor distance 1)

- Depends on the conditions at the measuring point (e.g. measuring pipe, medium). The dimension can be determined via FieldCare or Applicator. See also Result sensor distance / measuring aid parameter in Measuring point submenu
- 2) Up to DN 600 (24")


#### Determining the mounting positions of the sensor

Sensor holder with U-shaped screws )

- Can be used for
  - Measuring devices with measuring range DN 15 to 65 (½ to 2½")
  - Mounting on pipes DN 15 to 32 ( $\frac{1}{2}$  to  $\frac{1}{4}$ ")

#### Procedure:

- 1. Disconnect the sensor from the sensor holder.
- 2. Position the sensor holder on the measuring pipe.
- 3. Insert the U-shaped screws through the sensor holder and lightly grease the threads.
- 4. Screw the nuts onto the U-shaped screws.
- 5. Position the sensor holder exactly and tighten the nuts evenly.

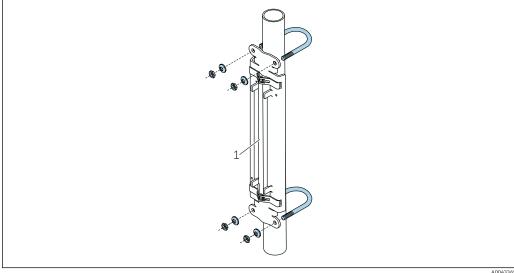

 $\blacksquare$  22 Holder with U-shaped screws

1 Sensor holder

AUU43:

#### **A** CAUTION

# Damage to the plastic, copper or glass pipes due to overtightening the nuts of the U-shaped screws!


- ► The use of a metal half-shell (on the opposite side of the sensor) is recommended for plastic, copper or glass pipes.
- To ensure good acoustic contact, the visible measuring pipe surface must be clean and free from flaking paint and/or rust.

Sensor holder with strapping bands (small nominal diameters) )

- Can be used for
  - Measuring devices with measuring range DN 15 to 65 (½ to 2½")
  - Mounting on pipes DN > 32 (11/4")


#### Procedure:

- 1. Disconnect the sensor from the sensor holder.
- 2. Position the sensor holder on the measuring pipe.
- 3. Wrap the strapping bands around the sensor holder and measuring pipe without twisting them.

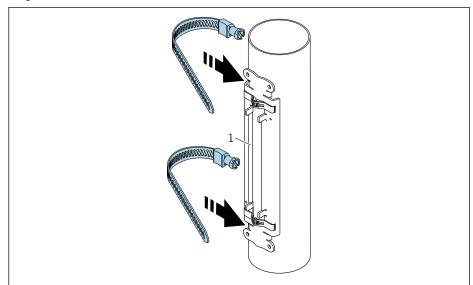

■ 23 Position the sensor holder and fit the strapping bands.

- Sensor holder
- 4. Guide the strapping bands through the strapping band locks.
- 5. Tighten the strapping bands as tightly as possible by hand.
- 6. Align the sensor holder in the desired position.

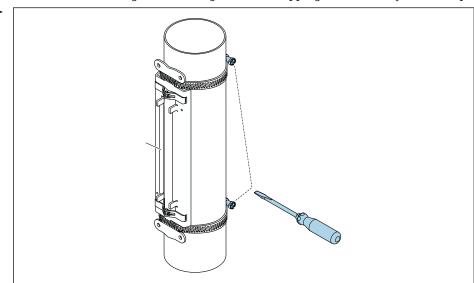

7. Push down the tensioning screw and tighten the strapping bands so they cannot slip.

■ 24 Tighten the tensioning screws of the strapping bands.

8. If necessary, shorten the strapping bands and trim the cut edges.

#### **A** WARNING

#### Risk of injury due to sharp edges!

- ▶ After shortening the strapping bands, trim the cut edges.
- Wear suitable protective goggles and safety gloves.
- To ensure good acoustic contact, the visible measuring pipe surface must be clean and free from flaking paint and/or rust.

Sensor holder with strapping bands (medium nominal diameters))

- Can be used for
  - Measuring devices with measuring range DN 50 to 4000 (2 to 160")
  - Mounting on pipes DN ≤ 600 (24")

#### Procedure:


- 1. Fit the mounting bolt over strapping band 1.
- 2. Position strapping band 1 as perpendicular as possible to the measuring pipe axis without twisting it.
- 3. Guide the end of strapping band 1 through the strapping band lock.
- 4. Tighten strapping band 1 as tightly as possible by hand.
- 5. Align strapping band 1 in the desired position.
- 6. Push down the tensioning screw and tighten strapping band 1 so it cannot slip.
- 7. Strapping band 2: proceed as for strapping band 1 (steps 1 to 6).
- 8. Slightly tighten strapping band 2 for final assembly. It must be possible to move strapping band 2 for final alignment.
- 9. If necessary, shorten the strapping bands and trim the cut edges.

#### **WARNING**

#### Risk of injury due to sharp edges!


- ▶ After shortening the strapping bands, trim the cut edges.
- ▶ Wear suitable protective goggles and safety gloves.

32

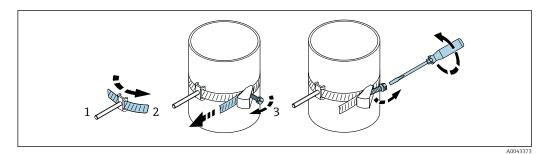

■ 25 Holder with strapping bands (medium nominal diameters), with hinged screw

- 123 Holder with strupping burius (medium nominal diameters), with ninged screw
- 1 Mounting bolts
- 2 Strapping band
- 3 Tensioning screw

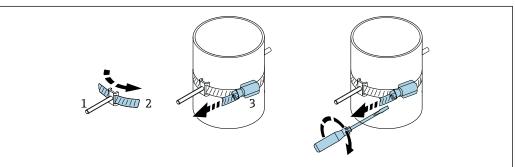


A0044350


■ 26 Holder with strapping bands (medium nominal diameters), without hinged screw

- 1 Mounting bolts
- 2 Strapping band
- 3 Tensioning screw

Sensor holder with strapping bands (large nominal diameters) )

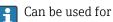

- Measuring devices with measuring range DN 50 to 4000 (2 to 160")
- Mounting on pipes DN > 600 (24")
- 1-traverse mounting or 2-traverse mounting with 180° arrangement
- 2-traverse mounting with two-path measurement and 90° arrangement (instead of 180°)

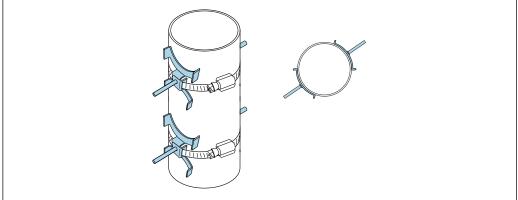

Δ004464

#### Procedure:


- 1. Measure the pipe circumference. Note down the full/half or quarter circumference.
- 2. Shorten the strapping bands to the required length (= measuring pipe circumference + 30 mm (1.18 in)) and trim the cut edges.

- 3. Select the mounting location of the sensors with the given sensor distance and optimum inlet run conditions,. In doing so, ensure there is nothing impeding sensor mounting over the entire circumference of the measuring pipe.
- 4. Fit two strap bolts over strapping band 1 and guide approx. 50 mm (2 in) of one of the strapping band ends into one of the two strapping band locks and into the lock. Then guide the protective flap over this strapping band end and lock in place.
- 5. Position strapping band 1 as perpendicular as possible to the measuring pipe axis without twisting it.
- 6. Guide the second strapping band end through the strapping band lock that is still free and proceed in the same way as for the first strapping band end. Guide the protective flap over the second strapping band end and lock in place.
- 7. Tighten strapping band 1 as tightly as possible by hand.
- 8. Align strapping band 1 in the desired position and place it as perpendicular as possible to the measuring pipe axis.
- 9. Position the two strap bolts on strapping band 1, arranging them at a half circumference in relation to one another (180° arrangement, e.g. 7:30 o'clock and 1:30 o'clock) or quarter circumference (90° arrangement, e.g. 10 o'clock and 7 o'clock).
- 10. Tighten strapping band 1 so that it cannot slip.
- **11.** Strapping band 2: proceed as for strapping band 1 (steps 4 to 8).
- 12. Slightly tighten strapping band 2 for final assembly. It must be possible to move strapping band 2 for final alignment. The distance/offset from the center of strapping band 2 to the center of strapping band 1 is indicated by the sensor distance of the device.
- **13.** Align strapping band 2 so that it is perpendicular to the measuring pipe axis and parallel to strapping band 1.
- 14. Position the two strap bolts on strapping band 2 on the measuring pipe so they are parallel to one another and offset at the same height/clock position (e. g. 10 o'clock and 4 o'clock) in relation to the two strap bolts on strapping band 1. A line drawn on the measuring pipe wall that is parallel to the measuring pipe axis can be helpful here. Now set the distance between the center of the strap bolts at the same level so that it exactly matches the sensor distance. Alternatively, you can use the wire length here  $\rightarrow \blacksquare 39$ .
- 15. Tighten strapping band 2 so that it cannot slip.

#### **A** WARNING

#### Risk of injury due to sharp edges!

- ► After shortening the strapping bands, trim the cut edges.
- ▶ Wear suitable protective goggles and safety gloves.

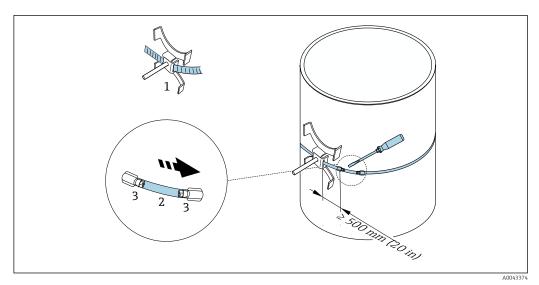

**■** 27 Holder with strapping bands (large nominal diameters)

- 1 Strap bolt with guide\*
- 2 Strapping band\*
- 3 Tensioning screw

- For 1-traverse mounting with  $180^\circ$  (opposite) →  $\blacksquare$  11,  $\blacksquare$  23 (single-path measurement, A0044304),  $\rightarrow$   $\blacksquare$  15,  $\blacksquare$  24(two-path measurement, A0043168)
  - For 2-traverse mounting  $\rightarrow$   $\blacksquare$  12,  $\boxminus$  23 (single-path measurement, A0044305),  $\rightarrow$   $\blacksquare$  16,  $\trianglerighteq$  24(two-path measurement, A0043309)
  - Electrical connection


Sensor holder with welded bolts )

- Can be used for
  - Measuring devices with measuring range DN 50 to 4000 (2 to 160")
  - Mounting on pipes DN 50 to 4000 (2 to 160")

#### Procedure:

- The welded bolts must be fastened with the same installation distances as the mounting bolts with strapping bands. The following sections explain how to align the mounting bolts, depending on the mounting method and measurement method:
  - Installation for measurement via 1 traverse → 🖺 37
- The sensor holder is fastened as standard using a locking nut with a metric M6 ISO thread. If a different thread is to be used for fastening, a sensor holder with a detachable locking nut must be used.

<sup>\*</sup>The distance between the strap bolts and strapping band lock must be at least 500 mm (20 in).

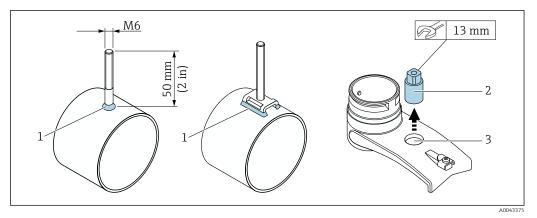

■ 28 Holder with welded bolts

- 1 Welding seam
- 2 Locking nut
- 3 Hole diameter max. 8.7 mm (0.34 in)

#### Installing sensor – small nominal diameters DN 15 to 65 (1/2 to 21/2")

#### Requirements

- The installation distance is known.  $\rightarrow$   $\triangleq$  30
- Sensor holder is pre-assembled.


#### Material

The following material is required for mounting:

- Sensor incl. adapter cable
- Sensor cable for connection to the transmitter
- Coupling medium (coupling pad or coupling gel) for an acoustic connection between the sensor and pipe

#### Procedure:


1. Set the distance between the sensors to the value determined for the sensor distance. Press the movable sensor down slightly to move it.

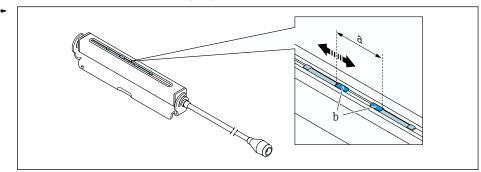

■ 29 Distance between sensors as per the installation distance  $\rightarrow$   $\triangleq$  30


- a Sensor distance (back of sensor must touch the surface)
- b Sensor contact surfaces
- 2. Stick the coupling pad under the sensor onto the measuring pipe. Alternatively, coat the contact surfaces of the sensor (b) evenly with coupling gel (approx. 0.5 to 1 mm (0.02 to 0.04 in)).

3. Position the sensor housing on the sensor holder.

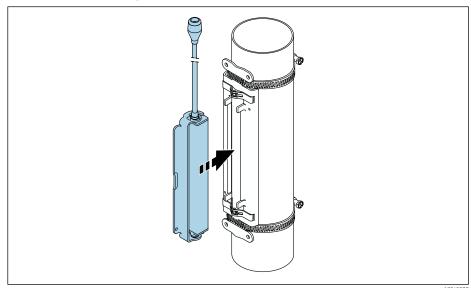

30 Positioning the sensor housing

4. Attach the sensor housing to the sensor holder by locking the bracket into place.

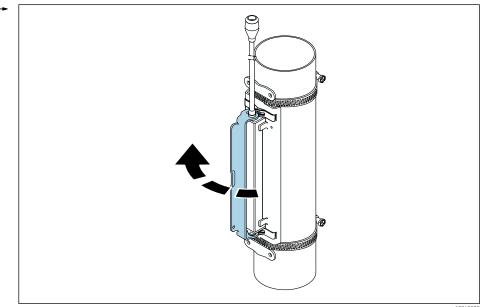

 $\blacksquare$  31 Fastening the sensor housing

- 5. Connect the sensor cable to the adapter cable.
  - This completes the mounting procedure. The sensors can be connected to the transmitter via the connecting cables.
- To ensure good acoustic contact, the visible measuring pipe surface must be clean and free from flaking paint and/or rust.
  - If necessary, the holder and sensor housing can be secured with a screw/nut or a lead seal (not supplied).
  - The bracket can only be released using an auxiliary tool e.g. screwdriver).

#### Installing sensors – medium/large nominal diameters DN 50 to 4000 (2 to 160")

Installation for measurement via 1 traverse

#### Requirements

- Strapping bands are pre-assembled

Endress+Hauser 37

10043378


#### Material

The following material is required for mounting:

- Two strapping bands incl. mounting bolts and centering plates where necessary (already pre-assembled  $\rightarrow \triangleq 32, \rightarrow \triangleq 33$ )
- Two measuring wires, each with a cable lug and a fixer to fix the strapping bands
- Two sensor holders
- Coupling medium (coupling pad or coupling gel) for the acoustic connection between the sensor and pipe
- Two sensors incl. connecting cables
- Installation is unproblematic up to DN 400 (16"); as of DN 400 (16") check the distance and angle  $(180^{\circ}, \pm 5^{\circ})$  diagonally with the wire length.


Procedure for using measuring wires:

1. Prepare the two measuring wires: arrange the cable lugs and fixer such that the distance they are apart corresponds to the wire length (SL). Screw the fixer onto the measuring wire.

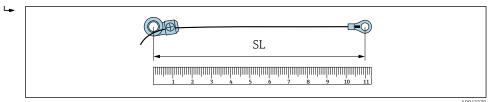

■ 32 Fixer and cable lugs at a distance that corresponds to the wire length (SL)

- 2. With measuring wire 1: fit the fixer over the mounting bolt of strapping band 1 that is already securely mounted. Run measuring wire 1 clockwise around the measuring pipe. Fit the cable lug over the mounting bolt of strapping band 2 that can still be moved.
- 3. With measuring wire 2: fit the cable lug over the mounting bolt of strapping band 1 that is already securely mounted. Run measuring wire 2 counterclockwise around the measuring pipe. Fit the fixer over the mounting bolt of strapping band 2, which can still be moved.
- 4. Take the still movable strapping band 2, including the mounting bolt, and move it until both measuring wires are evenly tensioned and then tighten strapping band 2 so that it cannot slip. Then check the sensor distance from the middle of the strapping bands. If the distance is too small, release strapping band 2 again and position it better. The two strapping bands should be as perpendicular as possible to the measuring pipe axis and parallel to one another.

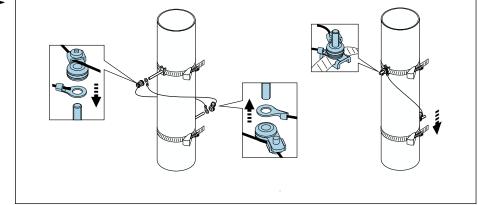


■ 33 Positioning the strapping bands (steps 2 to 4)

5. Loosen the screws of the fixers on the measuring wires and remove the measuring wires from the mounting bolts.

Procedure with a tape measure:


- 1. Use a tape measure to determine the pipe diameter d.
- 2. Mount the opposite mounting bolt at d/2 from the front mounting bolt. The distance must be d/2 = d/2 on both sides.
- 3. Check distance B.

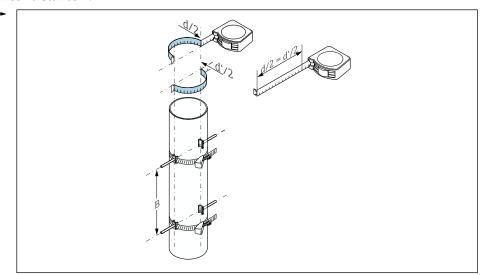


 $\blacksquare$  34 Positioning the strapping bands and mounting bolts with a tape measure (steps 2 to 4)

#### Fastening the sensors:

1. Fit the sensor holders over the individual mounting bolts and tighten securely with the locking nut.

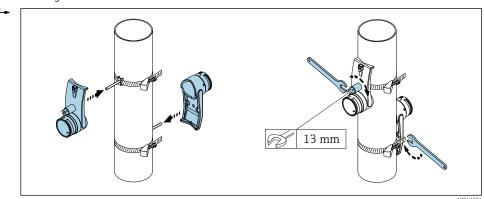


35 Mounting the sensor holders

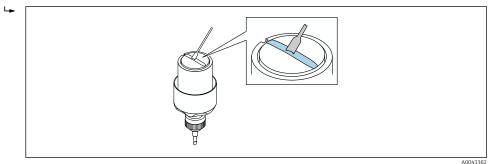

ightharpoonup 36 Coating the contact surfaces of the sensor with coupling gel (if there is no coupling pad)

3. Insert the sensor into the sensor holder.

- 4. Fit the sensor cover on the sensor holder and turn until the sensor cover engages with a click and the arrows (▲ / ▼ "close") are pointing towards one another.
- 5. Insert the sensor cable into each individual sensor until the end stop.

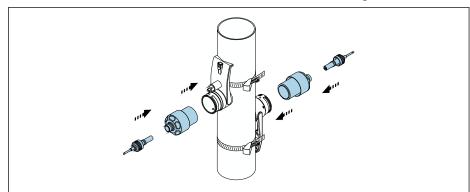

 $\blacksquare$  37 Mounting the sensors and connecting the sensor cables

This completes the mounting procedure. The sensors can now be connected to the transmitter via the sensor cables and the error message can be checked in the sensor check function.

■ To ensure good acoustic contact, the visible measuring pipe surface must be clean and free from flaking paint and/or rust.

- If the sensor is removed from the measuring pipe, it must be cleaned and new coupling gel applied (if there is no coupling pad).
- On rough measuring pipe surfaces, the gaps in the rough surface must be filled with sufficient amounts of coupling gel if use of the coupling pad does not suffice (installation quality check).

Installation for measurement via 2 traverses

#### Requirements

- The installation distance is known.  $\rightarrow$  🖺 30
- Strapping bands are pre-assembled


#### Material

The following material is required for mounting:

- Two strapping bands incl. mounting bolts and centering plates where necessary (already pre-assembled  $\rightarrow \triangleq 32, \rightarrow \triangleq 33$ )
- A mounting rail to position the strapping bands:
  - Short rail up to DN 200 (8")
  - Long rail up to DN 600 (24")
  - No rail > DN 600 (24"), as distance measured by sensor distance between the mounting bolts
- Two mounting rail holders
- Two sensor holders
- Coupling medium (coupling pad or coupling gel) for an acoustic connection between the sensor and pipe
- Two sensors incl. connecting cables
- Open-ended wrench (13 mm)
- Screw driver


#### Procedure:

1. Position the strapping bands using the mounting rail [only DN50 to 600 (2 to 24"), for larger nominal diameters, measure the distance between the center of the strap bolts directly]: Fit the mounting rail with the bore identified by the letter (from the Result sensor distance / measuring aid parameter) over the mounting bolt of strapping band 1 that is fixed in place. Position the adjustable strapping band 2 and fit the mounting rail with the bore identified by the numerical value over the mounting bolt.

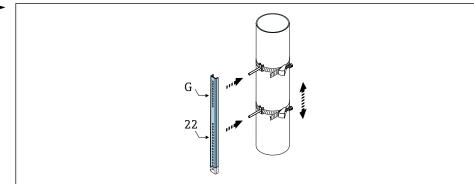

Determining the distance in accordance with the mounting rail (e.g. G22).


- 2. Tighten strapping band 2 so that it cannot slip.
- 3. Remove the mounting rail from the mounting bolt.
- 4. Fit the sensor holders over the individual mounting bolts and tighten securely with the locking nut.
- 5. Place the coupling pad under the sensor  $\rightarrow \stackrel{\triangle}{=} 214$ . Alternatively, coat the contact surfaces of the sensor evenly with coupling gel (approx. 1 mm (0.04 in)). In doing so, start from the groove through the center to the opposite edge.

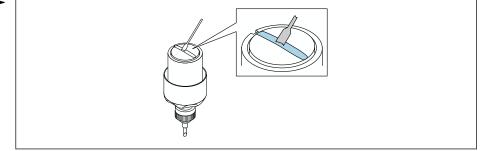

Coating the contact surfaces of the sensor with coupling gel (if there is no coupling pad)

- 6. Insert the sensor into the sensor holder.
- 7. Fit the sensor cover on the sensor holder and turn until the sensor cover engages with a click and the arrows (▲ / ▼ "close") are pointing towards one another.

8. Insert the sensor cable into each individual sensor until the end stop and tighten the locking nut.

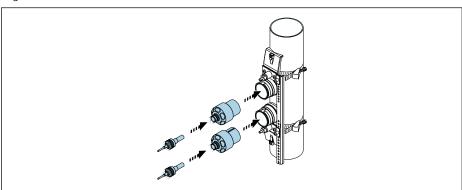

■ 40 Mounting the sensors and connecting the sensor cables

A0043386

This completes the mounting procedure. The sensors can now be connected to the transmitter via the sensor cables and the error message can be checked in the sensor check function.

- To ensure good acoustic contact, the visible measuring pipe surface must be clean and free from flaking paint and/or rust.
  - If the sensor is removed from the measuring pipe, it must be cleaned and new coupling gel applied (if there is no coupling pad).
  - On rough measuring pipe surfaces, the gaps in the rough surface must be filled with sufficient amounts of coupling gel if use of the coupling pad does not suffice (installation quality check).

## 6.2.5 Mounting the transmitter housing: Proline 500

#### **A** CAUTION

#### Ambient temperature too high!

Danger of electronics overheating and housing deformation.

- ▶ Do not exceed the permitted maximum ambient temperature  $\rightarrow$   $\blacksquare$  27.
- ► If operating outdoors: Avoid direct sunlight and exposure to weathering, particularly in warm climatic regions.

#### **A** CAUTION

#### Excessive force can damage the housing!

► Avoid excessive mechanical stress.


The transmitter can be mounted in the following ways:

- Post mounting
- Wall mounting

#### Wall mounting

Required tools

Drill with drill bit Ø 6.0 mm

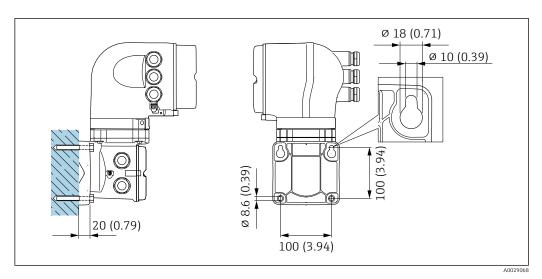

■ 41 Engineering unit mm (in)

- 1. Drill the holes.
- 2. Insert wall plugs into the drilled holes.
- 3. Screw in the fixing screws slightly.
- 4. Fit the transmitter housing over the fixing screws and mount in place.
- 5. Tighten the fixing screws.

#### Pipe mounting


Required tools Open-ended wrench AF 13

#### **A** WARNING

Order code for "Transmitter housing", option L "Cast, stainless": cast transmitters are very heavy.

They are unstable if they are not mounted on a secure, fixed post.

▶ Only mount the transmitter on a secure, fixed post on a stable surface.

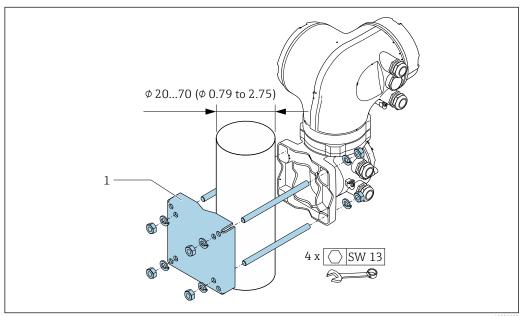


■ 42 Engineering unit mm (in)


A00290

#### 6.2.6 Turning the transmitter housing: Proline 500

To provide easier access to the connection compartment or display module, the transmitter housing can be turned.

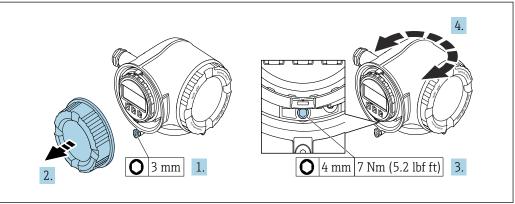


- Non-Ex housing
- 1. Depending on the device version: Loosen the securing clamp of the connection compartment cover.
- 2. Unscrew the connection compartment cover.
- 3. Loosen the securing screw.
- 4. Turn the housing to the desired position.
- 5. Tighten the securing screw.
- 6. Screw on the connection compartment cover.
- 7. Depending on the device version: Attach the securing clamp of the connection compartment cover.

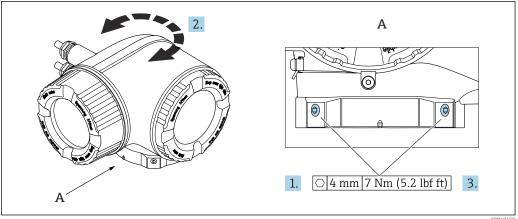

- € 44 Ex housing
- 1. Loosen the fixing screws.
- Turn the housing to the desired position.
- 3. Tighten the securing screws.

#### 6.2.7 Turning the display module: Proline 500

The display module can be turned to optimize display readability and operability.

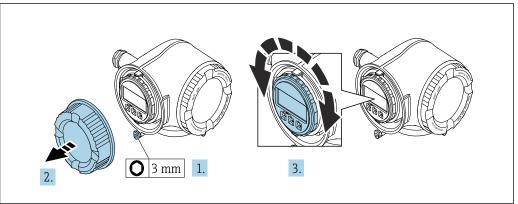

V003003

- 1. Depending on the device version: Loosen the securing clamp of the connection compartment cover.
- 2. Unscrew the connection compartment cover.
- 3. Turn the display module to the desired position: max.  $8 \times 45^{\circ}$  in each direction.
- 4. Screw on the connection compartment cover.
- 5. Depending on the device version: Attach the securing clamp of the connection compartment cover.

# 6.3 Post-mounting check

Is the measuring device undamaged (visual inspection)?	
Does the measuring device correspond to the measuring point specifications?  For example:  Process temperature →  204  Inlet run conditions  Ambient temperature  Measuring range	
Has the correct orientation for the sensor been selected → 🗎 19?  According to sensor type  According to medium temperature  According to medium properties (outgassing, with entrained solids)	
Are the sensors correctly connected to the transmitter (upstream/downstream) ?	
Are the sensors correctly mounted (distance, 1 traverse, 2 traverses) → 🖺 22?	
Is the tag name and labeling correct (visual inspection)?	
Is the device sufficiently protected from precipitation and direct sunlight?	
Are the securing screw and securing clamp tightened securely?	
Is the sensor holder properly grounded (in the event of different potential between the sensor holder and transmitter)?	

## 7 Electrical connection

#### **▲** WARNING

Live parts! Incorrect work performed on the electrical connections can result in an electric shock.

- ► Set up a disconnecting device (switch or power-circuit breaker) to easily disconnect the device from the supply voltage.
- ► In addition to the device fuse, include an overcurrent protection unit with max. 10 A in the plant installation.

# 7.1 Electrical safety

In accordance with applicable national regulations.

# 7.2 Connecting requirements

#### 7.2.1 Required tools

- For cable entries: use appropriate tool
- For securing clamp: Allen key 3 mm
- Wire stripper
- When using stranded cables: crimper for wire end ferrule
- For removing cables from terminal: flat blade screwdriver ≤ 3 mm (0.12 in)

#### 7.2.2 Requirements for connection cable

The connecting cables provided by the customer must fulfill the following requirements.

#### Protective grounding cable for the outer ground terminal

Conductor cross-section < 2.1 mm<sup>2</sup> (14 AWG)

The use of a cable lug enables the connection of larger cross-sections.

The grounding impedance must be less than 2  $\Omega$ .

#### Permitted temperature range

- The installation quidelines that apply in the country of installation must be observed.
- The cables must be suitable for the minimum and maximum temperatures to be expected.

#### Power supply cable (incl. conductor for the inner ground terminal)

Standard installation cable is sufficient.

#### Signal cable

Modbus RS485

The EIA/TIA-485 standard specifies two types of cable (A and B) for the bus line which can be used for every transmission rate. Cable type A is recommended.

Cable type	A
Characteristic impedance	135 to 165 $\Omega$ at a measuring frequency of 3 to 20 MHz
Cable capacitance	< 30 pF/m
Wire cross-section	> 0.34 mm <sup>2</sup> (22 AWG)

Cable type	Twisted pairs
Loop resistance	≤110 Ω/km
Signal damping	Max. 9 dB over the entire length of the cable cross-section
Shield	Copper braided shielding or braided shielding with foil shield. When grounding the cable shield, observe the grounding concept of the plant.

Current output 0/4 to 20 mA

Standard installation cable is sufficient

*Pulse / frequency / switch output* 

Standard installation cable is sufficient

Pulse output, phase-shifted

Standard installation cable is sufficient.

Relay output

Standard installation cable is sufficient.

Current input 0/4 to 20 mA

Standard installation cable is sufficient

Status input

Standard installation cable is sufficient

#### Cable diameter

- Cable glands supplied: M20 × 1.5 with cable Ø 6 to 12 mm (0.24 to 0.47 in)
- Spring-loaded terminals: Suitable for strands and strands with ferrules.
   Conductor cross-section 0.2 to 2.5 mm<sup>2</sup> (24 to 12 AWG).

#### Connecting cable between the transmitter and sensor

Sensor cable for sensor - transmitter: Proline 500

Standard cable	<ul> <li>TPE: -40 to +80 °C (-40 to +176 °F)</li> <li>TPE armored: -40 to +80 °C (-40 to +176 °F)</li> <li>TPE halogen-free: -40 to +80 °C (-40 to +176 °F)</li> <li>PTFE: -50 to +170 °C (-58 to +338 °F)</li> <li>PTFE armored: -50 to +170 °C (-58 to +338 °F)</li> </ul>
Cable length (max.)	30 m (90 ft)
Cable lengths (available for order)	5 m (15 ft), 10 m (30 ft), 15 m (45 ft), 30 m (90 ft)
Operating temperature	Depends on the device version and how the cable is installed:  Standard version:  Cable - fixed installation 1: minimum -40 °C (-40 °F) or -50 °C (-58 °F)  Cable - movable installation: minimum -25 °C (-13 °F)

1) Compare details under the row "Standard cable"

## 7.2.3 Terminal assignment

#### Transmitter: supply voltage, input/outputs

The terminal assignment of the inputs and outputs depends on the individual order version of the device. The device-specific terminal assignment is documented on an adhesive label in the terminal cover.

Supply	Supply voltage Input/output 1		Input/output 2		Input/output 3		
1 (+)	2 (-)	26 (B)	27 (A)	24 (+)	25 (-)	22 (+)	23 (-)
		Device-specific terminal assignment: adhesive label in terminal cover.					

#### Transmitter and sensor connection housing: connecting cable

The sensor and transmitter, which are mounted in separate locations, are interconnected by a connecting cable. The cable is connected via the sensor connection housing and the transmitter housing.

Terminal assignment and connection of the connecting cable: Proline  $500 \rightarrow \blacksquare 50$ 

#### 7.2.4 Shielding and grounding

#### Shielding and grounding concept

- 1. Maintain electromagnetic compatibility (EMC).
- 2. Take explosion protection into consideration.
- 3. Pay attention to the protection of persons.
- 4. Comply with national installation regulations and guidelines.
- 5. Observe cable specifications.
- 6. Keep the stripped and twisted lengths of cable shield to the ground terminal as short as possible.
- 7. Shield cables fully.

#### Grounding of the cable shield

#### **NOTICE**

In systems without potential matching, the multiple grounding of the cable shield causes mains frequency equalizing currents!

Damage to the bus cable shield.

- Only ground the bus cable shield to either the local ground or the protective ground at one end.
- ▶ Insulate the shield that is not connected.

To comply with EMC requirements:

- 1. Ensure the cable shield is grounded to the potential matching line at multiple points.
- 2. Connect every local ground terminal to the potential matching line.

#### 7.2.5 Preparing the measuring device

Carry out the steps in the following order:

- 1. Mount the sensor and transmitter.
- 2. Sensor connection housing: Connect connecting cable.
- 3. Transmitter: Connect connecting cable.

4. Transmitter: Connect signal cable and cable for supply voltage.

#### **NOTICE**

#### Insufficient sealing of the housing!

Operational reliability of the measuring device could be compromised.

- ▶ Use suitable cable glands corresponding to the degree of protection.
- 1. Remove dummy plug if present.
- 2. If the measuring device is supplied without cable glands:
  Provide suitable cable gland for corresponding connecting cable.
- 3. If the measuring device is supplied with cable glands:

  Observe requirements for connecting cables → 

  46.

#### Connecting the measuring device: Proline 500 7.3

#### NOTICE

#### An incorrect connection compromises electrical safety!

- ► Have electrical connection work carried out by appropriately trained specialists only.
- ▶ Observe applicable federal/national installation codes and regulations.
- ► Comply with local workplace safety regulations.
- ► Always connect the protective ground cable ⊕ before connecting additional cables.
- ▶ When using in potentially explosive atmospheres, observe the information in the device-specific Ex documentation.

#### 7.3.1 Connecting the connecting cable

#### **A** WARNING

#### Risk of damaging electronic components!


- ► Connect the sensor and transmitter to the same potential equalization.
- ▶ Only connect the sensor to a transmitter with the same serial number.

#### **A** CAUTION

#### Measurement error due to shortening of the connecting cable

▶ The connecting cable is ready for installation and must be used in the length supplied. Shortening the connecting cable can affect the sensor's measurement accuracy.

#### Connecting cable terminal assignment

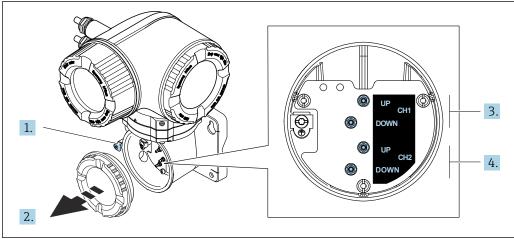

- Securing clamp
- 2 Connection compartment cover: sensor cable connection
- Channel 1 upstream/downstream
- Channel 2 upstream/downstream

# 

#### Connecting the sensor cable to the transmitter

A0044340

2.

1. Loosen the securing clamp of the connection compartment cover.

7.


- 2. Unscrew the connection compartment cover.
- 3. Route the two sensor cables of channel 1 through the slackened top union nut of the cable entry. To ensure tight sealing, mount a sealing insert on the sensor cables.

1.

- 4. Mount the screw part of the cable entry in the top housing opening and then guide both sensor cables through the entry. Then fit the coupling nut with the sealing insert on the screw part and tighten. Ensure that the sensor cables are positioned in the cut-outs provided in the screw part.
- 5. Connect sensor cable to channel 1 upstream.
- 6. Connect sensor cable to channel 1 downstream.
- 7. For a two-path measurement: proceed as per steps 3+4
- 8. Connect sensor cable to channel 2 upstream.
- 9. Connect sensor cable to channel 2 downstream.
- **10.** Tighten the cable gland(s).
  - ► This concludes the process for connecting the sensor cable(s).
- 11. Screw on the connection compartment cover.
- 12. Tighten the securing clamp of the connection compartment cover.
- 13. After connecting the sensor cable(s):Connect the signal cable and the supply voltage cable → 


  52.

# 7.3.2 Connecting the signal cable and the supply voltage cable

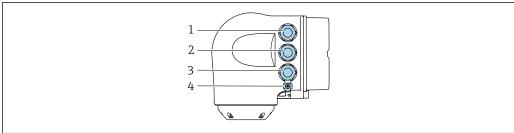


A002678

- 1 Terminal connection for supply voltage
- 2 Terminal connection for signal transmission, input/output
- 3 Terminal connection for signal transmission, input/output or terminal connection for network connection via service interface (CDI-RJ45; non-Ex)
- 4 Protective earth (PE)

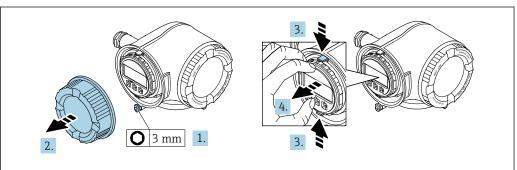


A0029813

- 1. Loosen the securing clamp of the connection compartment cover.
- 2. Unscrew the connection compartment cover.
- 3. Squeeze the tabs of the display module holder together.
- 4. Remove the display module holder.

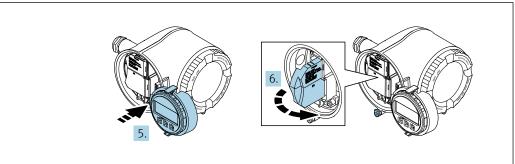


A0029814

- 5. Attach the holder to the edge of the electronics compartment.
- 6. Open the terminal cover.

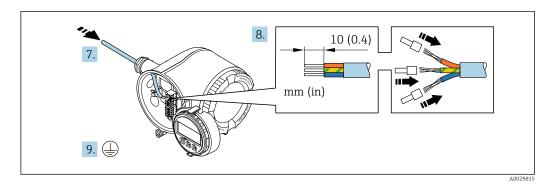

7. Push the cable through the cable entry. To ensure tight sealing, do not remove the sealing ring from the cable entry.


- 8. Strip the cable and cable ends. In the case of stranded cables, also fit ferrules.
- 9. Connect the protective ground.

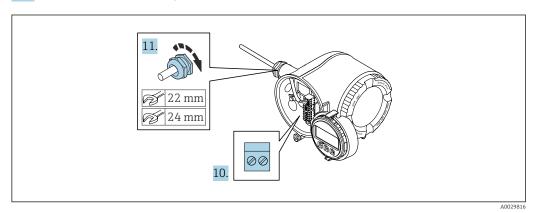

- 10. Connect the cable according to the terminal assignment.
  - Signal cable terminal assignment: The device-specific terminal assignment is documented on an adhesive label in the terminal cover.
     Supply voltage connection terminal assignment: Adhesive label in the terminal cover or → ≅ 48.
- 11. Firmly tighten the cable glands.
  - ► This concludes the cable connection process.
- 12. Close the terminal cover.
- 13. Fit the display module holder in the electronics compartment.
- 14. Screw on the connection compartment cover.
- **15.** Secure the securing clamp of the connection compartment cover.

#### Removing a cable

To remove a cable from the terminal:

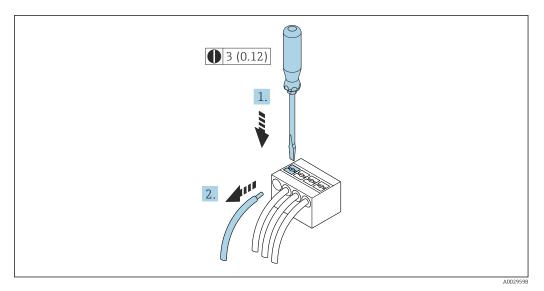

■ 45 Engineering unit mm (in)

- 1. Use a flat-blade screwdriver to press down on the slot between the two terminal holes.
- 2. Remove the cable end from the terminal.

## 7.3.3 Integrating the transmitter into a network


This section only presents the basic options for integrating the device into a network. For information on the procedure to follow to connect the transmitter correctly  $\rightarrow \implies 50$ .

#### Integrating via the service interface

The device is integrated via the connection to the service interface (CDI-RJ45).

Note the following when connecting:

- Recommended cable: CAT 5e, CAT 6 or CAT 7, with shielded connector (e.g. brand: YAMAICHI; Part No Y-ConProfixPlug63 / Prod. ID: 82-006660)
- Maximum cable thickness: 6 mm
- Length of plug including anti-bend protection: 42 mm
- Bending radius: 5 x cable thickness

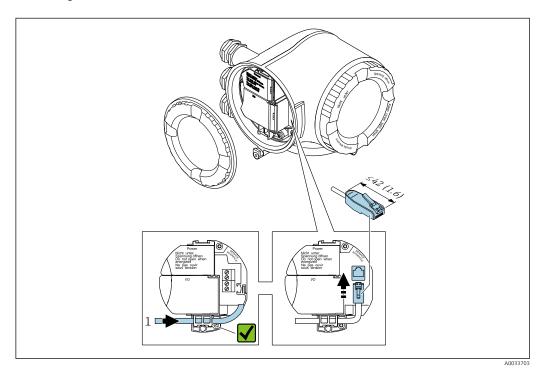

1 Service interface (CDI-RJ45)

An adapter for the RJ45 (non-Ex) to the M12 plug is optionally available: Order code for "Accessories", option **NB**: "Adapter RJ45 M12 (service interface)"

The adapter connects the service interface (CDI-RJ45; non-Ex) to an M12 plug mounted in the cable entry. The connection to the service interface can therefore be established via an M12 plug without opening the device.

# 7.4 Potential equalization

## 7.4.1 Requirements


For potential equalization:

- Pay attention to in-house grounding concepts
- Take account of operating conditions like the pipe material and grounding
- Medium, Connect the sensor and transmitter to the same electric potential <sup>4)</sup>
- Use a ground cable with a minimum cross-section of 6 mm<sup>2</sup> (10 AWG) and a cable lug for potential equalization connections

# 7.5 Special connection instructions

#### 7.5.1 Connection examples


#### Modbus RS485

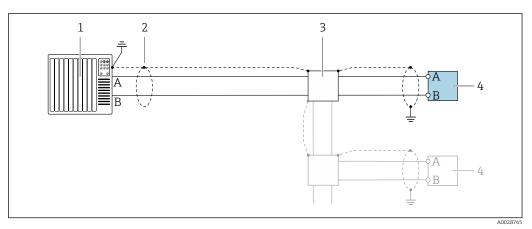

 $\blacksquare$  46 Connection example for Modbus RS485, non-hazardous area and Zone 2; Class I, Division 2

- 1 Control system (e.g. PLC)
- 2 Cable shield provided at one end. The cable shield must be grounded at both ends to comply with EMC requirements; observe cable specifications
- 3 Distribution box
- 4 Transmitter


#### Current output 4-20 mA

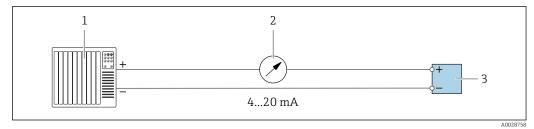

47 Connection example for 4-20 mA current output (active)

- 1 Automation system with current input (e.g. PLC)
- 2 Analog display unit: observe maximum load
- 3 Transmitter


4)

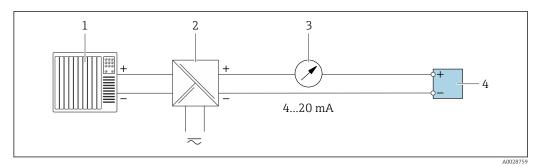

■ 48 Connection example for 4-20 mA current output (passive)

- 1 Automation system with current input (e.g. PLC)
- 2 Active barrier for power supply (e.g. RN221N)
- 3 Analog display unit: observe maximum load
- 4 Transmitter


#### Pulse/frequency output

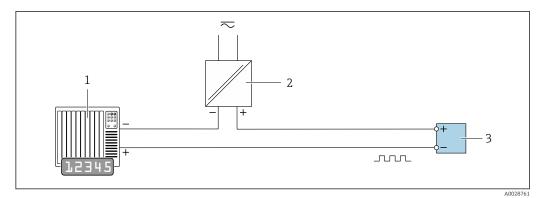

49 Connection example for pulse/frequency output (passive)

- Automation system with pulse/frequency input (e.g. PLC with 10 k $\Omega$  pull-up or pull-down resistor)
- 2 Power supply


#### Switch output

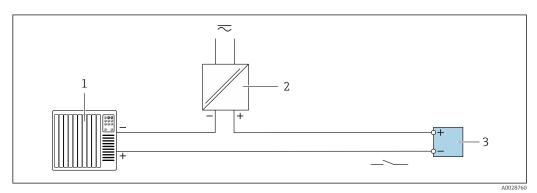

■ 50 Connection example for switch output (passive)


- 1 Automation system with switch input (e.g. PLC with a 10 k $\Omega$  pull-up or pull-down resistor)
- 2 Power supply
- 3 Transmitter: observe input values → 🖺 194

#### Pulse output, phase-shifted

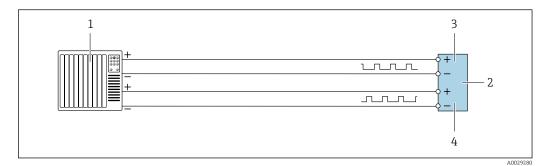

■ 51 Connection example for pulse output, phase-shifted (active)


- 1 Automation system with pulse input, phase-shifted (e.g. PLC)
- 2 Transmitter: observe input values
- 3 Pulse output
- 4 Pulse output (slave), phase-shifted

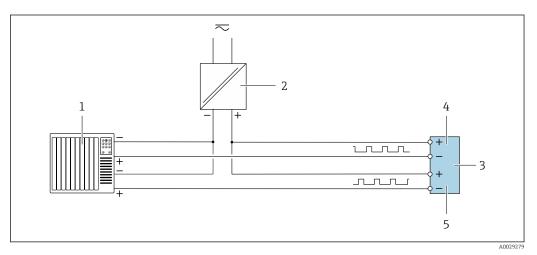

52 Connection example for pulse output, phase-shifted (passive)

- 1 Automation system with pulse output, phase-shifted (e.g. PLC)
- 2 Power supply
- *3 Transmitter: observe input values*
- 4 Pulse output
- 5 Pulse output (slave), phase-shifted


#### Relay output

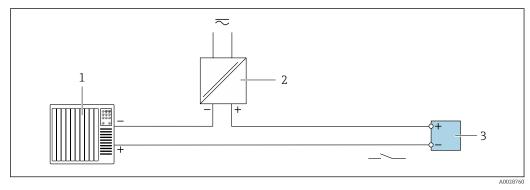

**■** 53 Connection example for relay output (passive)

- 1 Automation system with relay input (e.g. PLC)
- 2 Power supply


#### **Current input**

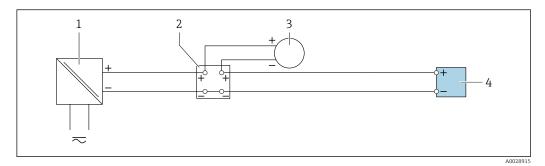

■ 54 Connection example for 4 to 20 mA current input

- 1 Power supply
- 2 Terminal box
- 3 External measuring device (to read in pressure or temperature, for instance)
- 4 Transmitter

#### Status input

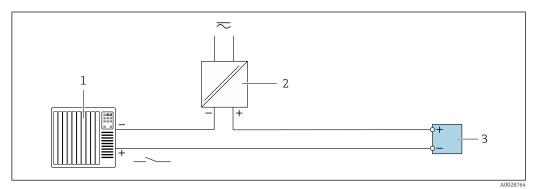

■ 55 Connection example for status input


- 1 Automation system with status output (e.g. PLC)
- 2 Power supply
- 3 Transmitter

# 7.6 Hardware settings

## 7.6.1 Setting the device address


The device address must always be configured for a Modbus slave. The valid device addresses are in the range from 1 to 247. Each address may only be assigned once in a Modbus RS485 network. If an address is not configured correctly, the measuring device is not recognized by the Modbus master. All measuring devices are delivered from the factory with the device address 247 and with the "software addressing" address mode.

#### Hardware addressing

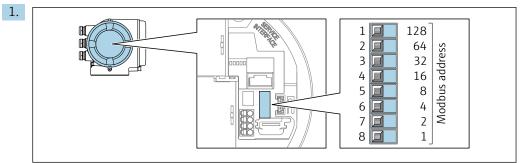

A0029634

Set the desired device address using the DIP switches in the connection compartment.

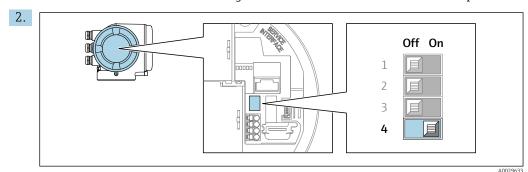

To switch addressing from software addressing to hardware addressing: set the DIP switch to  $\mathbf{On}$ .


► The change of device address takes effect after 10 seconds.

#### Software addressing

- ► To switch addressing from hardware addressing to software addressing: set the DIP switch to **Off**.
  - The device address configured in the **Device address** parameter takes effect after 10 seconds.

#### 7.6.2 Activating the terminating resistor

To avoid incorrect communication transmission caused by impedance mismatch, terminate the Modbus RS485 cable correctly at the start and end of the bus segment.

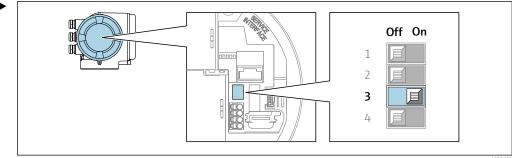

A0029632

Switch DIP switch no. 3 to **On**.


# 7.7 Ensuring the degree of protection

The measuring device fulfills all the requirements for the degree of protection IP66/67, Type 4X enclosure.

To guarantee the degree of protection IP66/67, Type 4X enclosure, carry out the following steps after electrical connection:

- 1. Check that the housing seals are clean and fitted correctly.
- 2. Dry, clean or replace the seals if necessary.
- 3. Tighten all housing screws and screw covers.
- 4. Firmly tighten the cable glands.
- 5. To ensure that moisture does not enter the cable entry:

  Route the cable so that it loops down before the cable entry ("water trap").

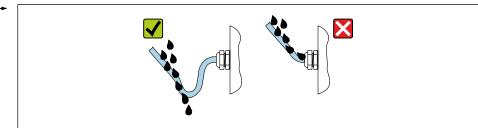

A0029278


6. The cable glands supplied do not ensure housing protection when not in use. They must therefore be replaced by dummy plus corresponding to the housing protection.

#### 7.8 Post-connection check

Are cables or the device undamaged (visual inspection)?	
Is the protective earthing established correctly?	
Do the cables used comply with the requirements ?	
Are the mounted cables relieved of tension?	
Are all cable glands installed, securely tightened and leak-tight? Cable run with "water trap" $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $	
Is the terminal assignment correct ?	
Are dummy plugs inserted in unused cable entries and have transportation plugs been replaced with dummy plugs?	

# **8** Operation options

# 8.1 Overview of operation options

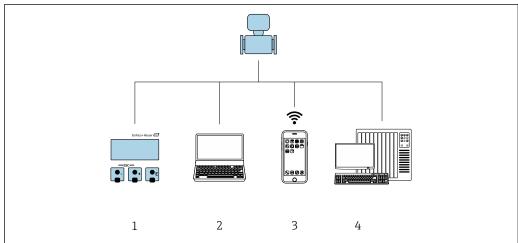


A003021

- 1 Local operation via display module
- 2 Computer with Web browser (e.g. Internet Explorer) or with operating tool (e.g. FieldCare, DeviceCare, AMS Device Manager, SIMATIC PDM)
- 3 Mobile handheld terminal with SmartBlue App
- 4 Control system (e.g. PLC)

62

# 8.2 Structure and function of the operating menu

# 8.2.1 Structure of the operating menu

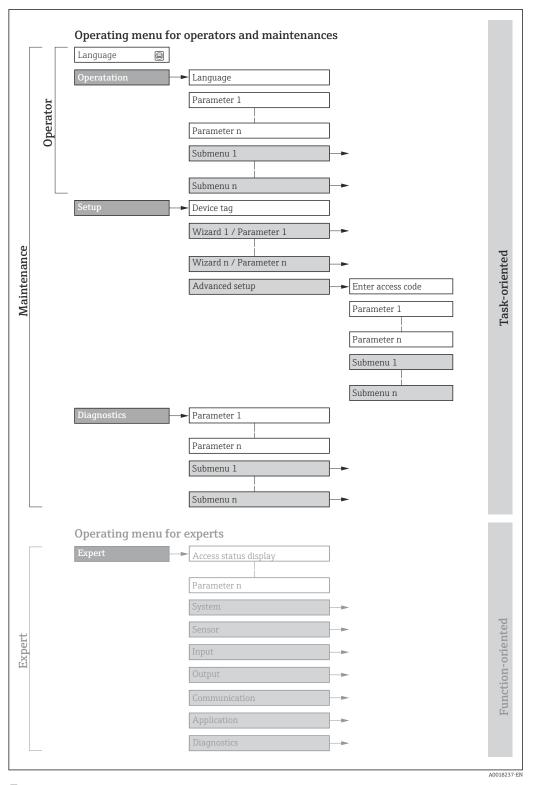

 $\blacksquare$  56 Schematic structure of the operating menu


# 8.2.2 Operating philosophy

The individual parts of the operating menu are assigned to certain user roles (e.g. operator, maintenance etc.). Each user role contains typical tasks within the device life cycle.

Menu/parameter		User role and tasks	Content/meaning		
Language	Task- oriented	Role "Operator", "Maintenance" Tasks during operation: Configuration of the operational	<ul> <li>Defining the operating language</li> <li>Defining the Web server operating language</li> <li>Resetting and controlling totalizers</li> </ul>		
Operation		display  Reading measured values	<ul> <li>Configuring the operational display (e.g. display format, display contrast)</li> <li>Resetting and controlling totalizers</li> </ul>		
Setup		"Maintenance" role Commissioning:  Configuration of the measurement  Configuration of the inputs and outputs  Configuration of the communication interface	Wizards for fast commissioning:  Configuration of the system units Displaying the I/O configuration Configuring the measuring point Configuration of the inputs Configuration of the outputs Configuration of the operational display Configuration of the low flow cut off Advanced setup For more customized configuration of the measurement (adaptation to special measuring conditions) Configuration of totalizers Configuration of WLAN settings Administration (define access code, reset measuring device)		
Diagnostics		"Maintenance" role Troubleshooting: Diagnostics and elimination of process and device errors Measured value simulation	Contains all parameters for error detection and analyzing process and device errors:  Diagnostic list Contains up to 5 currently pending diagnostic messages.  Event logbook Contains event messages that have occurred.  Device information Contains information for identifying the device  Measured values Contains all current measured values.  Data logging submenu with the "Extended HistoROM" order option Storage and visualization of measured values  Heartbeat Technology The functionality of the device is checked on demand and the verification results are documented.  Simulation Used to simulate measured values or output values.		
Expert	Function- oriented	Tasks that require detailed knowledge of the function of the device:  Commissioning measurements under difficult conditions  Optimal adaptation of the measurement to difficult conditions  Detailed configuration of the communication interface  Error diagnostics in difficult cases	Contains all of the device parameters and allows direct access to these by means of an access code. The structure of this menu is based on the function blocks of the device:  System Contains all higher-level device parameters that do not affect measurement or measured value communication  Sensor Configuration of the measurement  Input Configuration of the status input  Output Configuration of the analog current outputs as well as the pulse/frequency and switch output  Communication Configuration of the digital communication interface and the web server  Application Configuration of the functions that go beyond the actual measurement (e.g. totalizer).  Diagnostics Error detection and analysis of process and device errors and for device simulation and Heartbeat Technology.		

# 8.3 Access to operating menu via local display

## 8.3.1 Operational display

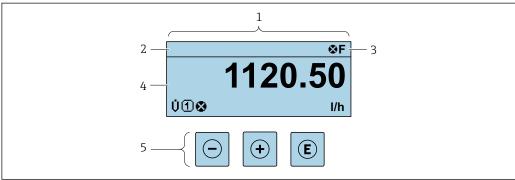

A002934

- 1 Operational display
- 3 Status area
- 4 Display range for measured values (up to 4 lines)
- 5 Operating elements  $\rightarrow$   $\stackrel{\triangle}{=}$  71


#### Status area

The following symbols appear in the status area of the operational display at the top right:

- Status signals → 🖺 166
  - **F**: Failure
  - C: Function check
  - **S**: Out of specification
  - **M**: Maintenance required
- Diagnostic behavior → 🖺 167
  - Alarm
  - <u>M</u>: Warning
- 🖆: Locking (the device is locked via the hardware )
- ←: Communication (communication via remote operation is active)

#### Display area

In the display area, each measured value is prefaced by certain symbol types for further description:

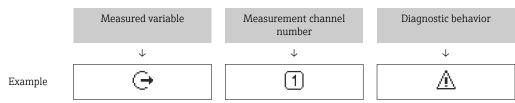

Appears only if a diagnostics event is present for this measured variable.

#### Measured variables

Symbol	Meaning
ṁ	Mass flow
C	Sound velocity

ΰ	Flow velocity
4	Temperature
P	<ul><li>Density</li><li>Reference density</li></ul>
SNR	Signal to noise ratio
1/4	Acceptance rate
Т	Turbulence
	Signal strength
° <b>A</b> PI	°API

The number and display format of the measured variables can be configured via the **Format display** parameter ( $\Rightarrow \triangleq 122$ ).

#### Totalizer

Symbol	Meaning
Σ	Totalizer  The measurement channel number indicates which of the three totalizers is displayed.

#### Output

Symbol	Meaning
<b>(-)</b>	Output  The measurement channel number indicates which of the outputs is displayed.

#### Input

Symbol	Meaning
€	Status input

#### Measurement channel numbers


Symbol	Meaning
14	Measurement channel 1 to 4
	The measurement channel number is displayed only if more than one channel is present for the same measured variable type (e.g. totalizer 1 to 3).

#### Diagnostic behavior

Symbol	Meaning
8	<ul> <li>Alarm</li> <li>Measurement is interrupted.</li> <li>Signal outputs and totalizers assume the defined alarm condition.</li> <li>A diagnostic message is generated.</li> </ul>
Δ	<ul> <li>Warning</li> <li>Measurement is resumed.</li> <li>The signal outputs and totalizers are not affected.</li> <li>A diagnostic message is generated.</li> </ul>

The diagnostic behavior pertains to a diagnostic event that is relevant to the displayed measured variable.


## 8.3.2 Navigation view

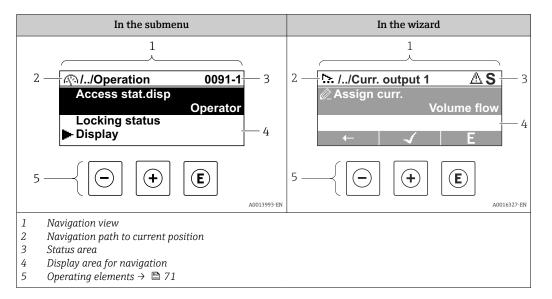


#### Navigation path

The navigation path to the current position is displayed at the top left in the navigation view and consists of the following elements:

- The display symbol for the menu/submenu (►) or the wizard (►).
- An omission symbol (/ ../) for operating menu levels in between.
- Name of the current submenu, wizard or parameter

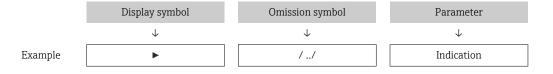

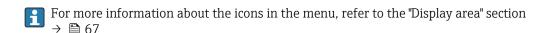

#### Status area

The following appears in the status area of the navigation view in the top right corner:

- In the submenu
  - The direct access code to the parameter (e.g., 0022-1)
  - If a diagnostic event is present, the diagnostic behavior and status signal
- In the wizard

If a diagnostic event is present, the diagnostic behavior and status signal



- For information on the diagnostic behavior and status signal  $\rightarrow$  🖺 166
- For information on the function and entry of the direct access code  $\rightarrow$   $\stackrel{\triangle}{=}$  73

## Display area

#### Menus

Symbol	Meaning
P	Operation Is displayed: In the menu next to the "Operation" selection At the left in the navigation path in the Operation menu

۶	Setup Is displayed: In the menu next to the "Setup" selection At the left in the navigation path in the Setup menu
ਪ੍ਰ	Diagnosis Is displayed: ■ In the menu next to the "Diagnostics" selection ■ At the left in the navigation path in the Diagnostics menu
₹.	Expert Is displayed: In the menu next to the "Expert" selection At the left in the navigation path in the Expert menu

## Submenus, wizards, parameters

Symbol	Meaning
•	Submenu
1>.	Wizards
Ø.	Parameters within a wizard  No display symbol exists for parameters in submenus.

# Locking procedure


Symbol	Meaning
â	Parameter locked When displayed in front of a parameter name, indicates that the parameter is locked.  By a user-specific access code  By the hardware write protection switch

#### Wizards

Symbol	Meaning
<b>←</b>	Switches to the previous parameter.
<b>√</b>	Confirms the parameter value and switches to the next parameter.
E	Opens the editing view of the parameter.

#### 8.3.3 **Editing view**


#### Numeric editor

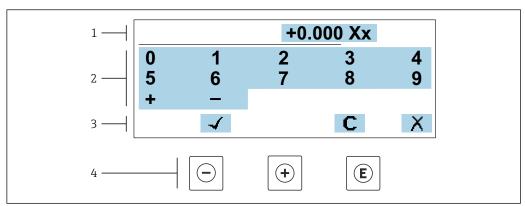

■ 57 For entering values in parameters (e.g. limit values)

- 1 Entry display area
- 2 Input screen
- 3 Confirm, delete or reject entry
- Operating elements

#### Text editor

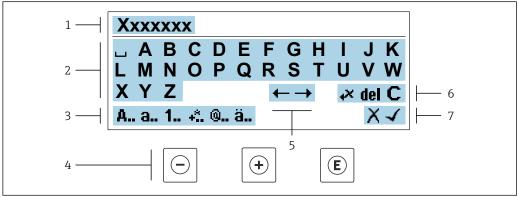

For entering text in parameters (e.g. device tag)

- Entry display area
- 2 Current input screen
- 3 Change input screen
- Operating elements
- 5 Move entry position
- Delete entry
- Reject or confirm entry

Using the operating elements in the editing view

Operating key	Meaning
	Minus key Move the entry position to the left.
+	Plus key Move the entry position to the right.

Operating key	Meaning
E	<ul> <li>Enter key</li> <li>Pressing the key briefly confirms your selection.</li> <li>Pressing the key for 2 s confirms your entry.</li> </ul>
-++	Escape key combination (press keys simultaneously) Close the editing view without accepting a change.

## *Input screens*

Symbol	Meaning
Α	Upper case
а	Lower case
1	Numbers
+*	Punctuation marks and special characters: = + - * / $^2$ $^3$ $^1$ /4 $^1$ /2 $^3$ /4 ( ) [ ] < > { }
<b>@</b>	Punctuation marks and special characters:
ä	Umlauts and accents

## Controlling data entries

Symbol	Meaning
←→	Move entry position
X	Reject entry
4	Confirm entry
**	Delete character immediately to the left of the entry position
del	Delete character immediately to the right of the entry position
С	Clear all the characters entered

70

# 8.3.4 Operating elements

Operating key	Meaning
	Minus key
	In menu, submenu Moves the selection bar upwards in a picklist
	In wizards Goes to previous parameter
	In the text and numeric editor  Move the entry position to the left.
	Plus key
	In menu, submenu Moves the selection bar downwards in a picklist
(+)	In wizards Goes to the next parameter
	In the text and numeric editor  Move the entry position to the right.
	Enter key
	In the operational display Pressing the key briefly opens the operating menu.
E	<ul> <li>In menu, submenu</li> <li>Pressing the key briefly:</li> <li>Opens the selected menu, submenu or parameter.</li> <li>Starts the wizard.</li> <li>If help text is open, closes the help text of the parameter.</li> <li>Pressing the key for 2 s in a parameter:</li> <li>If present, opens the help text for the function of the parameter.</li> </ul>
	In wizards Opens the editing view of the parameter and confirms the parameter value
	<ul> <li>In the text and numeric editor</li> <li>Pressing the key briefly confirms your selection.</li> <li>Pressing the key for 2 s confirms your entry.</li> </ul>
	Escape key combination (press keys simultaneously)
( <u></u> ++	<ul> <li>In menu, submenu</li> <li>Pressing the key briefly:</li> <li>Exits the current menu level and takes you to the next higher level.</li> <li>If help text is open, closes the help text of the parameter.</li> <li>Pressing the key for 2 s returns you to the operational display ("home position").</li> </ul>
	In wizards Exits the wizard and takes you to the next higher level
	In the text and numeric editor Exits the Editing view without applying the changes.
	Minus/Enter key combination (press and hold down the keys simultaneously)
-+E	<ul> <li>If keypad lock is active:         Pressing the key for 3 s deactivates the keypad lock.     </li> <li>If keypad lock is not active:         Pressing the key for 3 s opens the context menu including the option for activating the     </li> </ul>
	keypad lock.

# 8.3.5 Opening the context menu

Using the context menu, the user can call up the following menus quickly and directly from the operational display:

- Setup
- Data backup
- Simulation

#### Calling up and closing the context menu

The user is in the operational display.

- 1. Press the  $\Box$  and  $\Box$  keys for longer than 3 seconds.
  - ► The context menu opens.



A0034608-EN

- 2. Press  $\Box$  +  $\pm$  simultaneously.
  - The context menu is closed and the operational display appears.

#### Calling up the menu via the context menu


- 1. Open the context menu.
- 2. Press 🛨 to navigate to the desired menu.
- 3. Press **E** to confirm the selection.
  - ► The selected menu opens.

# 8.3.6 Navigating and selecting from list

Different operating elements are used to navigate through the operating menu. The navigation path is displayed on the left in the header. Icons are displayed in front of the individual menus. These icons are also shown in the header during navigation.

For an explanation of the navigation view with symbols and operating elements  $\Rightarrow \triangleq 67$ 

Example: Setting the number of displayed measured values to "2 values"

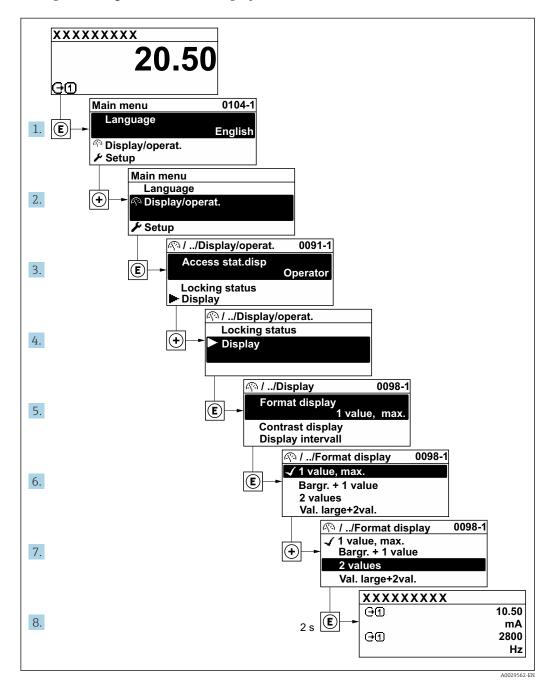


# 8.3.7 Calling the parameter directly

A parameter number is assigned to every parameter to be able to access a parameter directly via the onsite display. Entering this access code in the **Direct access** parameter calls up the desired parameter directly.

# Navigation path

Expert → Direct access

The direct access code consists of a 5-digit number (at maximum) and the channel number, which identifies the channel of a process variable: e.g. 00914-2. In the navigation view, this appears on the right-hand side in the header of the selected parameter.

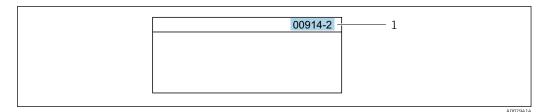

1 Direct access code

Note the following when entering the direct access code:

- The leading zeros in the direct access code do not have to be entered. Example: Enter "914" instead of "00914"
- If no channel number is entered, channel 1 is opened automatically.
   Example: Enter 00914 → Assign process variable parameter
- If a different channel is opened: Enter the direct access code with the corresponding channel number.

Example: Enter **00914-2** → **Assign process variable** parameter

For the direct access codes of the individual parameters, see the "Description of Device Parameters" document for the device


# 8.3.8 Calling up help text

Help text is available for some parameters and can be called up from the navigation view. The help text provides a brief explanation of the parameter function and thereby supports swift and safe commissioning.

#### Calling up and closing the help text

The user is in the navigation view and the selection bar is on a parameter.

- 1. Press E for 2 s.
  - ► The help text for the selected parameter opens.

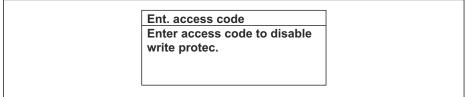

A0014002-EN

- 59 Example: Help text for parameter "Enter access code"
- 2. Press  $\Box$  +  $\pm$  simultaneously.
  - ► The help text is closed.

# 8.3.9 Changing the parameters

Parameters can be changed via the numeric editor or text editor.

- Numeric editor: Change values in a parameter, e.g. specifications for limit values.
- Text editor: Enter text in a parameter, e.g. tag name.

A message is displayed if the value entered is outside the permitted value range.

Ent. access code
Invalid or out of range input
value
Min:0
Max:9999

A0014049-EN

For a description of the editing view - consisting of the text editor and numeric editor - with symbols  $\rightarrow \bigcirc$  69, for a description of the operating elements  $\rightarrow \bigcirc$  71

#### 8.3.10 User roles and related access authorization

#### Defining access authorization for user roles

An access code is not yet defined when the device is delivered from the factory. Access authorization (read and write access) to the device is not restricted and corresponds to the "Maintenance" user role.

- ▶ Define the access code.
  - The "Operator" user role is redefined in addition to the "Maintenance" user role. Access authorization differs for the two user roles.

Access authorization to parameters: "Maintenance" user role

Access code status	Read access	Write access
An access code has not yet been defined (factory setting).	V	V
After an access code has been defined.	V	<b>✓</b> 1)

1) The user only has write access after entering the access code.

Access authorization to parameters: "Operator" user role

Access code status	Read access	Write access
After an access code has been defined.	~	_ 1)

- The user role with which the user is currently logged on is indicated by the **Access status** parameter. Navigation path: Operation → Access status

### 8.3.11 Disabling write protection via access code

Parameter write protection via local operation can be disabled by entering the user-specific access code in the **Enter access code** parameter ( $\rightarrow \implies 126$ ) via the respective access option.

1. After you press ©, the input prompt for the access code appears.

- 2. Enter the access code.
  - The \( \bar{\mathbb{O}}\) -symbol in front of the parameters disappears; all previously write-protected parameters are now re-enabled.

### 8.3.12 Enabling and disabling the keypad lock

The keypad lock makes it possible to block access to the entire operating menu via local operation. As a result, it is no longer possible to navigate through the operating menu or change the values of individual parameters. Users can only read the measured values on the operational display.

The keypad lock is switched on and off via the context menu.

#### Switching on the keypad lock

- The keypad lock is switched on automatically:
  - If the device has not been operated via the display for > 1 minute.
  - Each time the device is restarted.

#### To activate the keylock manually:

- 1. The device is in the measured value display.

  Press the □ and □ keys for 3 seconds.
  - ► A context menu appears.
- 2. In the context menu select the **Keylock on** option.
  - ► The keypad lock is switched on.
- If the user attempts to access the operating menu while the keypad lock is active, the **Keylock on** message appears.

# Switching off the keypad lock

- ► The keypad lock is switched on. Press the □ and □ keys for 3 seconds.
  - ► The keypad lock is switched off.

# 8.4 Access to operating menu via web browser

#### 8.4.1 Function range

With the integrated web server, the device can be operated and configured via a web browser service interface (CDI-RJ45) or WLAN interface. The structure of the operating menu is the same as for the local display. In addition to the measured values, status information on the device is displayed and can be used to monitor device health. Furthermore the device data can be managed and the network parameters can be configured.

A device that has a WLAN interface (can be ordered as an option) is required for the WLAN connection: order code for "Display; operation", option G "4-line, illuminated; touch control + WLAN". The device acts as an Access Point and enables communication by computer or a mobile handheld terminal.

# 8.4.2 Requirements

# Computer hardware

Hardware	Interface	
	CDI-RJ45	WLAN
Interface	The computer must have a RJ45 interface. <sup>1)</sup>	The operating unit must have a WLAN interface.
Connection	Standard Ethernet cable	Connection via Wireless LAN.
Screen	Recommended size: ≥12" (depends on the screen resolution)	

<sup>1)</sup> Recommended cable: CAT5e, CAT6 or CAT7, with shielded plug (e.g. YAMAICHI product; part no. Y-ConProfixPlug63/Prod. ID: 82-006660)

# Computer software

Software	Interface		Interface	
	CDI-RJ45	WLAN		
Recommended operating systems	<ul> <li>Microsoft Windows 8 or higher.</li> <li>Mobile operating systems: <ul> <li>iOS</li> <li>Android</li> </ul> </li> <li>Microsoft Windows XP and Windows 7 is supported.</li> </ul>			
Web browsers supported	<ul> <li>Microsoft Internet Explorer 8 or higher</li> <li>Microsoft Edge</li> <li>Mozilla Firefox</li> <li>Google Chrome</li> <li>Safari</li> </ul>			

# Computer settings

Settings	Interface	
	CDI-RJ45	WLAN
User rights	Appropriate user rights (e.g. administrator rights) for TCP/IP and proxy server settings are necessary (e.g. for adjusting the IP address, subnet mask etc.).	
Proxy server settings of the web browser	The web browser setting <i>Use a proxy server for your LAN</i> must be <b>disabled</b> .	
JavaScript	JavaScript must be enabled.	JavaScript must be enabled.
	If JavaScript cannot be enabled: Enter http://192.168.1.212/servlet/ basic.html in the address bar of the web browser. A fully functional but simplified version of the operating menu structure starts in the web browser.	The WLAN display requires JavaScript support.
	When installing a new firmware version: To enable correct data display, clear the temporary memory (cache) under Internet options in the web browser.	
Network connections	Only use the active network connections to the measuring device.	
	Switch off all other network connections such as WLAN for example.	Switch off all other network connections.

#### Measuring device: Via CDI-RJ45 service interface

Device	CDI-RJ45 service interface	
Measuring device	The measuring device has an RJ45 interface.	
Web server	Web server must be enabled; factory setting: ON	
	For information on enabling the Web server $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $	

#### Measuring device: via WLAN interface

Device	WLAN interface	
Measuring device	The measuring device has a WLAN antenna:  Transmitter with integrated WLAN antenna  Transmitter with external WLAN antenna	
Web server	Web server and WLAN must be enabled; factory setting: ON  For information on enabling the Web server →   82	

# 8.4.3 Connecting the device

### Via service interface (CDI-RJ45)

Preparing the measuring device

Proline 500

- 1. Depending on the housing version:

  Loosen the securing clamp or fixing screw of the housing cover.
- 2. Depending on the housing version:
  Unscrew or open the housing cover.
- 3. Connect the computer to the RJ45 plug via the standard Ethernet cable.

Configuring the Internet protocol of the computer

The following information refers to the default Ethernet settings of the device.

IP address of the device: 192.168.1.212 (factory setting)

- 1. Switch on the measuring device.
- 2. Connect the computer to the RJ45 plug via the standard Ethernet cable  $\rightarrow \triangleq 83$ .
- 3. If a 2nd network card is not used, close all the applications on the notebook.
  - Applications requiring Internet or a network, such as e-mail, SAP applications, Internet or Windows Explorer.
- 4. Close any open Internet browsers.
- 5. Configure the properties of the Internet protocol (TCP/IP) as defined in the table:

IP address	192.168.1.XXX; for XXX all numerical sequences except: 0, 212 and 255 $\rightarrow$ e.g. 192.168.1.213
Subnet mask	255.255.255.0
Default gateway	192.168.1.212 or leave cells empty

#### Via WLAN interface

Configuring the Internet protocol of the mobile terminal

#### NOTICE

### If the WLAN connection is lost during the configuration, settings made may be lost.

Make sure that the WLAN connection is not disconnected while configuring the device.

#### **NOTICE**

#### Note the following to avoid a network conflict:

- ► Avoid accessing the measuring device simultaneously from the same mobile terminal via the service interface (CDI-RJ45) and the WLAN interface.
- ▶ Only activate one service interface (CDI-RJ45 or WLAN interface).
- ► If simultaneous communication is necessary: configure different IP address ranges, e.g. 192.168.0.1 (WLAN interface) and 192.168.1.212 (CDI-RJ45 service interface).

Preparing the mobile terminal

► Enable WLAN on the mobile terminal.

Establishing a WLAN connection from the mobile terminal to the measuring device

- 1. In the WLAN settings of the mobile terminal: Select the measuring device using the SSID (e.g. EH\_Prosonic Flow\_500\_A802000).
- 2. If necessary, select the WPA2 encryption method.
- 3. Enter the password:

Serial number of the measuring device ex-works (e.g. L100A802000).

- The LED on the display module flashes. It is now possible to operate the measuring device with the web browser, FieldCare or DeviceCare.
- The serial number can be found on the nameplate.
- To ensure the safe and swift assignment of the WLAN network to the measuring point, it is advisable to change the SSID name. It should be possible to clearly assign the new SSID name to the measuring point (e.g. tag name) because it is displayed as the WLAN network.


Terminating the WLAN connection

► After configuring the device: Terminate the WLAN connection between the mobile terminal and measuring device.

#### Starting the web browser

1. Start the web browser on the computer.

- 2. Enter the IP address of the web server in the address line of the web browser: 192.168.1.212
  - ► The login page appears.

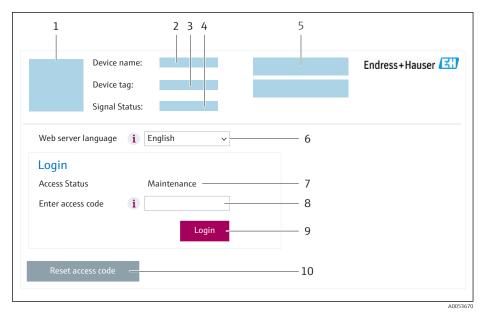

- 1 Picture of device
- 2 Device name
- 3 Device tag
- 4 Status signal
- 5 Current measured values
- 6 Operating language
- 7 User role
- 8 Access code
- 9 Login
- 10 Reset access code (→ 🖺 140)
- If a login page does not appear, or if the page is incomplete  $\rightarrow \triangleq 163$

# 8.4.4 Logging on


- 1. Select the preferred operating language for the Web browser.
- 2. Enter the user-specific access code.
- 3. Press **OK** to confirm your entry.

Access code 0000 (factory setting); can be changed by customer

If no action is performed for 10 minutes, the Web browser automatically returns to the login page.

80

# 8.4.5 User interface

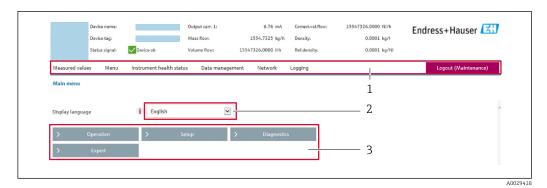

- 1 Function row
- 2 Local display language
- 3 Navigation area

#### Header

The following information appears in the header:

- Device name
- Device tag
- Device status with status signal  $\rightarrow$  🖺 169
- Current measured values

### **Function row**

Functions	Meaning
Measured values	Displays the measured values of the device
Menu	<ul> <li>Access to the operating menu from the measuring device</li> <li>The structure of the operating menu is the same as for the local display</li> <li>Detailed information on the operating menu structure: Description of Device Parameters</li> </ul>
Device status	Displays the diagnostic messages currently pending, listed in order of priority
Data management	Data exchange between computer and measuring device:  Device configuration:  Load settings from the device (XML format, save configuration)  Save settings to the device (XML format, restore configuration)  Logbook - Export Event logbook (.csv file)  Documents - Export documents:  Export backup data record (.csv file, create documentation of the measuring point configuration)  Verification report (PDF file, only available with the "Heartbeat Verification" application package)  Firmware update - Flashing a firmware version
Network	Configuration and checking of all the parameters required for establishing the connection to the measuring device:  Network settings (e.g. IP address, MAC address)  Device information (e.g. serial number, firmware version)
Logout	End the operation and call up the login page

### Navigation area

The menus, the associated submenus and parameters can be selected in the navigation area.

#### Working area

Depending on the selected function and the related submenus, various actions can be performed in this area:

- Configuring parameters
- Reading measured values
- Calling up help text
- Starting an upload/download

### 8.4.6 Disabling the Web server

The Web server of the measuring device can be switched on and off as required using the **Web server functionality** parameter.

#### **Navigation**

"Expert" menu  $\rightarrow$  Communication  $\rightarrow$  Web server

#### Parameter overview with brief description

Parameter	Description	Selection	Factory setting
Web server functionality	Switch the Web server on and off.	<ul><li>Off</li><li>HTML Off</li><li>On</li></ul>	On

### Function scope of the "Web server functionality" parameter

Option	Description
Off	<ul><li>The Web server is completely disabled.</li><li>Port 80 is locked.</li></ul>
On	<ul> <li>The complete Web server functionality is available.</li> <li>JavaScript is used.</li> <li>The password is transferred in an encrypted state.</li> <li>Any change to the password is also transferred in an encrypted state.</li> </ul>

#### Enabling the Web server

If the Web server is disabled it can only be re-enabled with the **Web server functionality** parameter via the following operating options:

- Via local display
- Via Bedientool "FieldCare"
- Via "DeviceCare" operating tool

# 8.4.7 Logging out

- Before logging out, perform a data backup via the **Data management** function (upload configuration from device) if necessary.
- 1. Select the **Logout** entry in the function row.
  - ► The home page with the Login box appears.
- 2. Close the Web browser.
- 3. If no longer needed:

  Reset the modified properties of the Internet protocol (TCP/IP) → □ 78.


# 8.5 Access to the operating menu via the operating tool

The structure of the operating menu in the operating tools is the same as for operation via the local display.

# 8.5.1 Connecting the operating tool

#### Via Modbus RS485 protocol

This communication interface is available in device versions with a Modbus RS485 output.

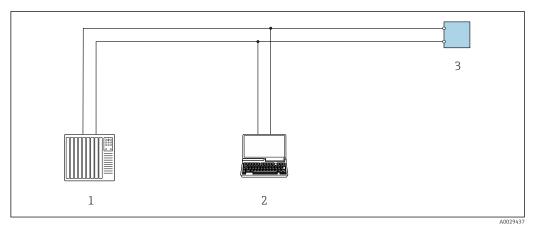

■ 60 Options for remote operation via Modbus RS485 protocol (active)

- 1 Control system (e.g. PLC)
- 2 Computer with web browser (e.g. Microsoft Edge) to access the integrated device web server or with operating tool (e.g. FieldCare, DeviceCare) with COM DTM "CDI Communication TCP/IP" or Modbus DTM
- 3 Transmitter

#### Service interface

Via service interface (CDI-RJ45)


A point-to-point connection can be established to configure the device on site. With the housing open, the connection is established directly via the service interface (CDI-RJ45) of the device.

An adapter for the RJ45 to the M12 plug is optionally available for the non-hazardous area:

Order code for "Accessories", option NB: "Adapter RJ45 M12 (service interface)"

The adapter connects the service interface (CDI-RJ45) to an M12 plug mounted in the cable entry. The connection to the service interface can be established via an M12 plug without opening the device.

#### Proline 500 transmitter

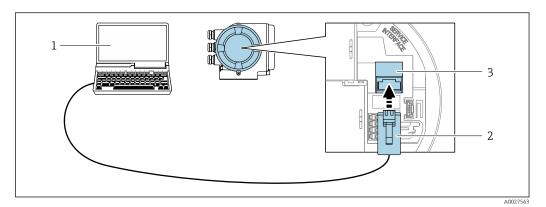


**■** 61 Connection via service interface (CDI-RJ45)

- Computer with web browser (e.q. Microsoft Internet Explorer, Microsoft Edge) to access the integrated web server or with an operating tool "FieldCare", "DeviceCare" with COM DTM "CDI Communication TCP/IP" or Modbus DTM
- Standard Ethernet connecting cable with RJ45 plug
- Service interface (CDI-RJ45) of the measuring device with access to the integrated web server

### Via WLAN interface

The optional WLAN interface is available on the following device version: Order code for "Display; operation", option G "4-line, illuminated; touch control + WLAN"

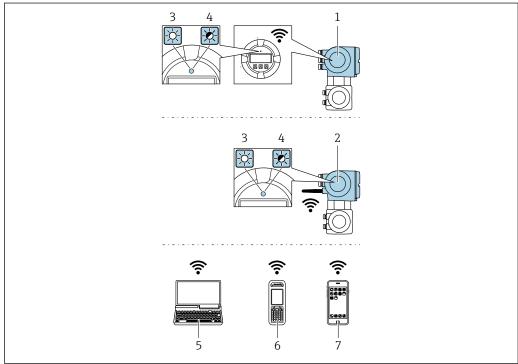

- Transmitter with integrated WLAN antenna
- 2 Transmitter with external WLAN antenna
- LED lit constantly: WLAN reception is enabled on measuring device 3
- LED flashing: WLAN connection established between operating unit and measuring device
- Computer with WLAN interface and web browser (e.g. Microsoft Internet Explorer, Microsoft Edge) for accessing the integrated device web server or with operating tool (e.g. FieldCare, DeviceCare)
- Mobile handheld terminal with WLAN interface and web browser (e.g. Microsoft Internet Explorer, Microsoft Edge) for accessing the integrated device web server or operating tool (e.g. FieldCare, DeviceCare)

Smart phone or tablet (e.g. Field Xpert SMT70)

Function	WLAN: IEEE 802.11 b/g (2.4 GHz)	
Encryption	WPA2-PSK AES-128 (in accordance with IEEE 802.11i)	
Configurable WLAN channels	1 to 11	
Degree of protection	IP67	
Available antennas	<ul> <li>Internal antenna</li> <li>External antenna (optional)         In the event of poor transmission/reception conditions at the place of installation.     </li> <li>Only 1 antenna is active at any one time!</li> </ul>	
Range	<ul> <li>Internal antenna: typically 10 m (32 ft)</li> <li>External antenna: typically 50 m (164 ft)</li> </ul>	
Materials (external antenna)	<ul> <li>Antenna: ASA plastic (acrylonitrile styrene acrylate) and nickel-plated brass</li> <li>Adapter: Stainless steel and nickel-plated brass</li> <li>Cable: Polyethylene</li> <li>Plug: Nickel-plated brass</li> <li>Angle bracket: Stainless steel</li> </ul>	

Configuring the Internet protocol of the mobile terminal

#### NOTICE

#### If the WLAN connection is lost during the configuration, settings made may be lost.

▶ Make sure that the WLAN connection is not disconnected while configuring the device.

# NOTICE

#### Note the following to avoid a network conflict:

- ► Avoid accessing the measuring device simultaneously from the same mobile terminal via the service interface (CDI-RJ45) and the WLAN interface.
- ▶ Only activate one service interface (CDI-RJ45 or WLAN interface).
- ► If simultaneous communication is necessary: configure different IP address ranges, e.g. 192.168.0.1 (WLAN interface) and 192.168.1.212 (CDI-RJ45 service interface).

#### Preparing the mobile terminal

► Enable WLAN on the mobile terminal.

Establishing a WLAN connection from the mobile terminal to the measuring device

- In the WLAN settings of the mobile terminal:
   Select the measuring device using the SSID (e.g. EH\_Prosonic Flow\_500\_A802000).
- 2. If necessary, select the WPA2 encryption method.
- 3. Enter the password:

Serial number of the measuring device ex-works (e.g. L100A802000).

- The LED on the display module flashes. It is now possible to operate the measuring device with the web browser, FieldCare or DeviceCare.
- The serial number can be found on the nameplate.
- To ensure the safe and swift assignment of the WLAN network to the measuring point, it is advisable to change the SSID name. It should be possible to clearly assign the new SSID name to the measuring point (e.g. tag name) because it is displayed as the WLAN network.

#### Terminating the WLAN connection

► After configuring the device:

Terminate the WLAN connection between the mobile terminal and measuring device.

### 8.5.2 FieldCare

#### **Function range**

FDT-based (Field Device Technology) plant asset management tool from Endress+Hauser. It can configure all smart field units in a system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition.

#### Access is via:

- CDI-RJ45 service interface → 🖺 83

#### Typical functions:

- Transmitter parameter configuration
- Loading and saving of device data (upload/download)
- Documentation of the measuring point
- Visualization of the measured value memory (line recorder) and event logbook




- Operating Instructions BA00027S
- Operating Instructions BA00059S
- Source for device description files  $\rightarrow \triangleq 88$

### Establishing a connection



- Operating Instructions BA00027S
- Operating Instructions BA00059S

#### User interface

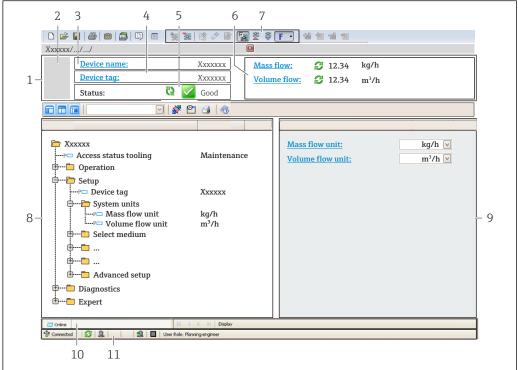

A00210E1 EX


- 1 Header
- 2 Picture of device
- 3 Device name
- 4 Device tag
- 5 Status area with status signal  $\rightarrow \Box$  169
- 6 Display area for current measured values
- 7 Editing toolbar with additional functions such as save/load, event list and create documentation
- 8 Navigation area with operating menu structure
- 9 Work area
- 10 Action area
- 11 Status area

#### 8.5.3 DeviceCare

#### Function range

Tool for connecting and configuring Endress+Hauser field devices.

The fastest way to configure Endress+Hauser field devices is with the dedicated "DeviceCare" tool. Together with the device type managers (DTMs) it presents a convenient, comprehensive solution.

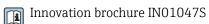

Source for device description files  $\rightarrow \triangleq 88$ 

# 9 System integration

# 9.1 Overview of device description files

# 9.1.1 Current version data for the device

Firmware Version	01.02.zz	<ul> <li>On the title page of the manual</li> <li>On the transmitter nameplate</li> <li>Firmware version         Diagnostics → Device information → Firmware version     </li> </ul>
Release date of firmware version	01.2024	

For an overview of the various firmware versions for the device  $\rightarrow \triangleq 183$ 

# 9.1.2 Operating tools

The suitable device description file for the individual operating tools is listed in the table below, along with information on where the file can be acquired.

Operating tool via service interface (CDI) or Modbus interface	Sources for obtaining device descriptions
FieldCare	<ul> <li>www.endress.com → Downloads area</li> <li>USB stick (contact Endress+Hauser)</li> <li>DVD (contact Endress+Hauser)</li> </ul>
DeviceCare	<ul> <li>www.endress.com → Downloads area</li> <li>CD-ROM (contact Endress+Hauser)</li> <li>DVD (contact Endress+Hauser)</li> </ul>

# 9.2 Modbus RS485 information

# 9.2.1 Function codes

Function codes are used to define which read or write action is carried out via the Modbus protocol. The measuring device supports the following function codes:

Code	Name	Description	Application
03	Read holding register	Master reads one or more Modbus registers from the device. A maximum of 125 consecutive registers can be read with 1 telegram: 1 register = 2 bytes  The measuring device does not make a distinction between function codes 03 and 04; these codes therefore	Read device parameters with read and write access Example: Read volume flow
04	Read input register	yield the same result.  Master reads one or more Modbus registers from the device.  A maximum of 125 consecutive registers can be read with 1 telegram: 1 register = 2 bytes  The measuring device does not make a distinction between function codes 03 and 04; these codes therefore yield the same result.	Read device parameters with read access Example: Read totalizer value
06	Write single registers	Master writes a new value to <b>one</b> Modbus register of the measuring device.  Use function code 16 to write multiple registers with just 1 telegram.	Write only 1 device parameter Example: reset totalizer
08	Diagnostics	Master checks the communication connection to the measuring device.  The following "Diagnostics codes" are supported:  Sub-function 00 = Return query data (loopback test)  Sub-function 02 = Return diagnostics register	
16	Write multiple registers	Master writes a new value to multiple Modbus registers of the device.  A maximum of 120 consecutive registers can be written with 1 telegram.  If the required device parameters are not available as a group, yet must nevertheless be addressed with a single telegram, use Modbus data map → ■ 91	Write multiple device parameters
23	Read/Write multiple registers	Master reads and writes a maximum of 118 Modbus registers of the measuring device simultaneously with 1 telegram. Write access is executed <b>before</b> read access.	Write and read multiple device parameters  Example:  Read mass flow  Reset totalizer

Broadcast messages are only allowed with function codes 06, 16 and 23.

#### 9.2.2 **Register information**

For an overview of device parameters and their corresponding Modbus register information, refer to the "Modbus RS485 register information" section in the 

# 9.2.3 Response time

Response time of the measuring device to the request telegram of the Modbus master: typically 3 to 5 ms  $\,$ 

# 9.2.4 Data types

The measuring device supports the following data types:

<b>FLOAT</b> (floating po Data length = 4 byt	int number IEEE 754) es (2 registers)			
Byte 3	Byte 2 Byte 1 Byte 0			
SEEEEEE EMMMMMM MMMMMMMM MMMMMMMM				
S = sign, E = exponent, M = mantissa				

INTEGER Data length = 2 bytes (1 register)	
Byte 1	Byte 0
Most significant byte (MSB)	Least significant byte (LSB)

STRING Data length = depends on the bytes (9 registers)	device parameter, e	.g. presentatio	on of a device para	meter with a data length = 18
Byte 17	Byte 16 Byte 1 Byte 0			
Most significant byte (MSB)				Least significant byte (LSB)

# 9.2.5 Byte transmission sequence

Byte addressing, i.e. the transmission sequence of the bytes, is not specified in the Modbus specification. For this reason, it is important to coordinate or match the addressing method between the master and slave during commissioning. This can be configured in the measuring device using the **Byte order** parameter.

The bytes are transmitted depending on the selection in the **Byte order** parameter:

FLOAT				
	Sequence			
Options	1.	1. 2. 3. 4.		
1-0-3-2*	Byte 1 (MMMMMMMM)	Byte 0 (MMMMMMMM)	Byte 3 (SEEEEEEE)	Byte 2 (EMMMMMMM)
0 - 1 - 2 - 3	Byte 0 (MMMMMMMM)	Byte 1 (MMMMMMMM)	Byte 2 (EMMMMMMM)	Byte 3 (SEEEEEEE)
2 - 3 - 0 - 1	Byte 2 (EMMMMMMM)	Byte 3 (SEEEEEEE)	Byte 0 (MMMMMMM)	Byte 1 (MMMMMMM)
3 - 2 - 1 - 0	Byte 3 (SEEEEEEE)	Byte 2 (EMMMMMMM)	Byte 1 (MMMMMMMM)	Byte 0 (MMMMMMMM)
* = factory setting, S = sign, E = exponent, M = mantissa				

INTEGER		
	Sequence	
Options	1.	2.

1-0-3-2*	Byte 1	Byte 0
3-2-1-0	(MSB)	(LSB)
0-1-2-3	Byte 0	Byte 1
2-3-0-1	(LSB)	(MSB)
* = factory setting, MSB = most significant byte, LSB = least significant byte		

STRING Presentation taking the example of a device parameter with a data length of 18 bytes.					
	Sequence	Sequence			
Options	1.	2.		17.	18.
1 - 0 - 3 - 2 * 3 - 2 - 1 - 0	Byte 17 (MSB)	Byte 16		Byte 1	Byte 0 (LSB)
0 - 1 - 2 - 3       Byte 16       Byte 17        Byte 0       Byte 1         2 - 3 - 0 - 1       (MSB)       (LSB)       Byte 1					Byte 1
* = factory setting, MSB = most significant byte, LSB = least significant byte					

# 9.2.6 Modbus data map

#### Function of the Modbus data map

The device offers a special memory area, the Modbus data map (for a maximum of 16 device parameters), to allow users to call up multiple device parameters via Modbus RS485 and not only individual device parameters or a group of consecutive device parameters.

Grouping of device parameters is flexible and the Modbus master can read or write to the entire data block simultaneously with a single request telegram.

#### Structure of the Modbus data map

The Modbus data map consists of two data sets:

- Scan list: Configuration area
   The device parameters to be grouped are defined in a list by entering their Modbus RS485 register addresses in the list.
- Data area

The measuring device reads out the register addresses entered in the scan list cyclically and writes the associated device data (values) to the data area.



### Scan list configuration

For configuration, the Modbus RS485 register addresses of the device parameters to be grouped must be entered in the scan list. Please note the following basic requirements of the scan list:

Max. entries	16 device parameters
Supported device parameters	Only parameters with the following characteristics are supported:  • Access type: read or write access  • Data type: float or integer

Configuration of the scan list via FieldCare or DeviceCare

Carried out using the operating menu of the measuring device: Expert  $\rightarrow$  Communication  $\rightarrow$  Modbus data map  $\rightarrow$  Scan list register 0 to 15

Scan list	
No. Configuration register	
0	Scan list register 0
15	Scan list register 15

Configuration of the scan list via Modbus RS485

Carried out using register addresses 5001 - 5016

Scan list				
No. Modbus RS485 register Data type Configuration register				
0	5001	Integer	Scan list register 0	
		Integer		
15	5016	Integer	Scan list register 15	

# Reading out data via Modbus RS485

The Modbus master accesses the data area of the Modbus data map to read out the current values of the device parameters defined in the scan list.

Master access to data area	Via register addresses 5051-5081
----------------------------	----------------------------------

Data area					
Device parameter value	Modbus RS485 r	5 register Data type* Acces		Access**	
	Start register	End register (Float only)			
Value of scan list register 0	5051	5052	Integer/float	Read/write	
Value of scan list register 1	5053	5054	Integer/float	Read/write	
Value of scan list register					
Value of scan list register 15	5081	5082	Integer/float	Read/write	

 $<sup>\</sup>ensuremath{^{\bigstar}}$  Data type depends on the device parameters entered in the scan list.

92

<sup>\*\*</sup> Data access depends on the device parameters entered in the scan list. If the device parameter entered supports read and write access, the parameter can also be accessed via the data area.

#### 10 Commissioning

#### 10.1 Post-mounting and post-connection check

Before commissioning the device:


- ▶ Make sure that the post-installation and post-connection checks have been performed successfully.
- Checklist for "Post-mounting" check → 🖺 45
- Checklist for "Post-connection check" → 🖺 61

#### 10.2 Switching on the measuring device

- ▶ Switch on the device upon successful completion of the post-mounting and postconnection check.
  - ► After a successful startup, the local display switches automatically from the startup display to the operational display.
- If nothing appears on the local display or if a diagnostic message is displayed, refer to the section on "Diagnostics and troubleshooting"  $\rightarrow \square$  162.
  - If diagnostic information 104, 105 or 106 appears on the local display, then the measuring point is not yet correctly mounted/configured  $\rightarrow \triangleq 172$ .

#### 10.3 Setting the operating language


Factory setting: English or ordered local language

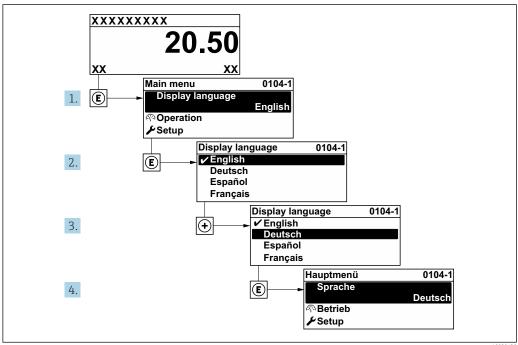

Taking the example of the local display

#### 10.4 Configuring the measuring device

The Setup menu with its guided wizards contains all the parameters needed for standard operation.

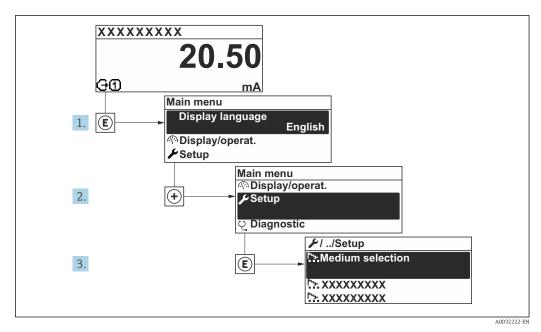


 $\blacksquare$  63 Navigation to "Setup" menu using the example of the local display

The number of submenus and parameters can vary depending on the device version. Certain submenus and parameters in these submenus are not described in the Operating Instructions. Instead a description is provided in the Special Documentation for the device ("Supplementary documentation").

#### **Navigation**


"Setup" menu

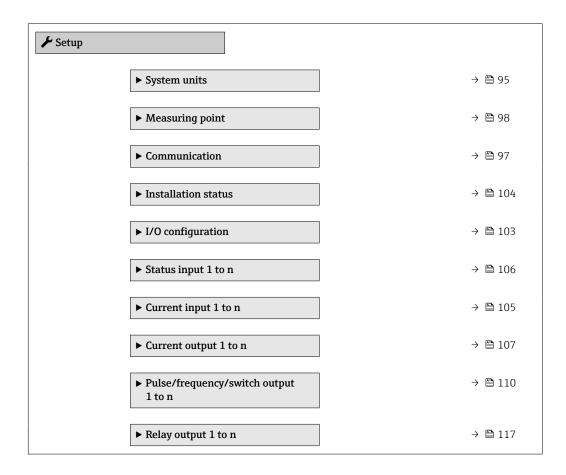

► Double pulse output	→ 🖺 119
► Display	→ 🖺 120
► Low flow cut off	→ 🖺 123
► Advanced setup	→ 🖺 125

# 10.4.1 Defining the tag name

To enable fast identification of the measuring point within the system, you can enter a unique designation using the **Device tag** parameter and thus change the factory setting.

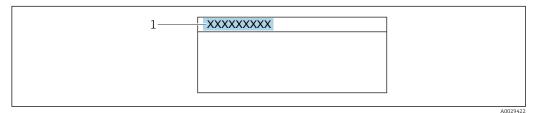

 $\blacksquare$  64 Header of the operational display with tag name

1 Tag name

Enter the tag name in the "FieldCare" operating tool  $\rightarrow \triangleq 87$ 

#### Navigation

"Setup" menu → Device tag

### Parameter overview with brief description


Parameter	Description	User entry	Factory setting
Device tag		Max. 32 characters, such as letters, numbers or special characters (e.g. @, %, /).	Promag

# 10.4.2 Setting the system units

In the **System units** submenu the units of all the measured values can be set.

# Navigation

"Setup" menu → System units

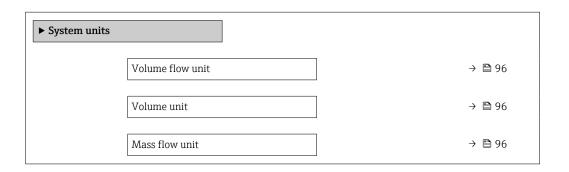

Mass unit	→ 🖺 96
Velocity unit	→ 🖺 96
Temperature unit	→ 🗎 96
Density unit	→ 🗎 96
Reference density unit	→ 🖺 97
Length unit	→ 🖺 97

Parameter	Description	Selection	Factory setting
Volume flow unit	Select volume flow unit.  Effect  The selected unit applies to:  Output  Low flow cut off Simulation process variable	Unit choose list	Depends on country:  m³/h  ft³/min
Volume unit	Select volume unit.	Unit choose list	Depends on country:  • m³  • ft³
Mass flow unit	Select mass flow unit.  Result  The selected unit applies to:  Output  Low flow cut off Simulation process variable	Unit choose list	Depends on country:  • kg/h • lb/min
Mass unit	Select mass unit.	Unit choose list	Country-specific:    kg    lb
Velocity unit	Select velocity unit.  Effect  The selected unit applies for:  Flow velocity  Sound velocity	Unit choose list	Country-specific:  m/s ft/s
Temperature unit	Select temperature unit.  Effect  The selected unit applies for:  Temperature  Electronic temperature parameter (6053)  External temperature parameter (6080)  Reference temperature parameter (1816)	Unit choose list	Country-specific: ■ °C ■ °F
Density unit	Select density unit.  Effect  The selected unit applies for:  Output  Simulation process variable	Unit choose list	Country-specific: • kg/dm³ • lb/ft³


Parameter	Description	Selection	Factory setting
Reference density unit	Select reference density unit.	Unit choose list	kg/Nm³
Length unit	Select the unit of length.	Unit choose list	Country-specific:  mm  in

# 10.4.3 Configuring the communication interface

The **Communication** submenu guides you systematically through all the parameters that have to be configured for selecting and setting the communication interface.

### Navigation

"Setup" menu  $\rightarrow$  Communication

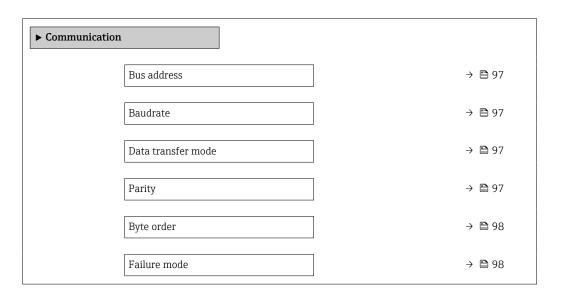

# Parameter overview with brief description

Parameter	Description	User entry / Selection	Factory setting
Bus address	Enter device address.	1 to 247	247
Baudrate	Define data transfer speed.	<ul> <li>1200 BAUD</li> <li>2400 BAUD</li> <li>4800 BAUD</li> <li>9600 BAUD</li> <li>19200 BAUD</li> <li>38400 BAUD</li> <li>57600 BAUD</li> <li>115200 BAUD</li> <li>230400 BAUD</li> </ul>	19200 BAUD
Data transfer mode	Select data transfer mode.	• ASCII • RTU	RTU
Parity	Select parity bits.	Picklist ASCII option:  ■ 0 = Even option  ■ 1 = Odd option  Picklist RTU option:  ■ 0 = Even option  ■ 1 = Odd option  ■ 2 = None / 1 stop bit option  ■ 3 = None / 2 stop bits option	Even

Parameter	Description	User entry / Selection	Factory setting
Byte order	Select byte transmission sequence.	<ul> <li>0-1-2-3</li> <li>3-2-1-0</li> <li>1-0-3-2</li> <li>2-3-0-1</li> </ul>	1-0-3-2
Failure mode	Select measured value output behavior when a diagnostic message occurs via Modbus communication.  NaN <sup>1)</sup>	<ul><li>NaN value</li><li>Last valid value</li></ul>	NaN value

### 1) Not a Number

# 10.4.4 Configuring the measuring point

The **"Measuring point" wizard** guides you systematically through all the parameters that must be set for the configuration of the measuring point.

### Navigation

"Setup" menu  $\rightarrow$  Measuring point

► Measuring po	pint	
	Measuring point configuration	→ 🖺 100
	Medium	→ 🖺 100
	Medium temperature	→ 🖺 100
	Sound velocity calculation mode	→ 🖺 100
	Sound velocity	→ 🖺 100
	API commodity group	→ 🖺 100
	API gravity	→ 🖺 100
	Density	→ 🖺 100
	Reference density	→ 🗎 100
	Pressure	→ 🗎 101
	API table selection	→ 🖺 101
	Alternative pressure value	→ 🖺 101
	Alternative temperature value	→ 🖺 101
	Viscosity	→ 🖺 101
	Pipe material	→ 🖺 101

Pipe sound velocity	=	→ 🗎 101
Pipe dimensions	<del>-</del>	→ 🖺 101
Pipe circumference	<del>-</del>	→ 🗎 101
Pipe outer diameter	<del>-</del>	→ 🖺 101
Pipe wall thickness	=	→ 🖺 102
Liner material	<del>-</del>	→ 🖺 102
Liner sound velocity	<del>-</del>	→ 🖺 102
Liner thickness	<del>-</del>	→ 🖺 102
Sensor type	=	→ 🖺 102
Sensor coupling	<del>-</del>	→ 🖺 102
Mounting type	<del>-</del>	→ 🖺 102
Cable length	=	→ 🖺 102
FlowDC inlet configuration	=	→ 🖺 102
Intermediate pipe length		→ 🖺 103
Inlet diameter		103
Transition length		→ 🖺 103
Inlet run		→ 🖺 103
Relative sensor position		→ 🖺 103
Result sensor type / mounting type	<del>-</del>	→ 🖺 103
Result sensor distance / measuring aid	<del>-</del>	→ 🖺 103

Parameter	Prerequisite	Description	Selection / User entry / User interface	Factory setting
Measuring point configuration	-	Select configuration for the measuring point.	<ul> <li>1 measuring point</li> <li>signal path 1</li> <li>1 measuring point</li> <li>signal path 2*</li> <li>1 measuring point</li> <li>2 signal paths*</li> </ul>	Depending on the sensor version
Medium	_	Select the medium.	<ul> <li>Water</li> <li>Sea water</li> <li>Distilled water</li> <li>Ammonia NH3</li> <li>Benzene</li> <li>Ethanol</li> <li>Glycol</li> <li>Kerosene</li> <li>Milk</li> <li>Methanol</li> <li>User-specific liquid</li> <li>Air</li> <li>Liquid hydrocarbons</li> </ul>	Water
Medium temperature	-	Enter the medium temperature for the installation.	−200 to 550 °C	20℃
Sound velocity calculation mode	The <b>Liquid hydrocarbons</b> option is selected in <b>Medium</b> parameter.	Select the process variable to use to calculate the sound velocity at installation.	<ul><li>Fixed value</li><li>API gravity</li><li>Density</li><li>Reference density</li></ul>	API gravity
Sound velocity	The <b>User-specific liquid</b> option is selected in <b>Medium</b> parameter.	Enter the medium's sound velocity for the installation.	200 to 3 000 m/s	1482.4 m/s
API commodity group	The Liquid hydrocarbons option is selected in the Medium parameter and the API gravity option or Density option or Reference density option is selected in the Sound velocity calculation mode parameter.	Select the medium's API commodity group.	<ul> <li>A - crude oil</li> <li>B - refined products</li> <li>D - lubricating oils</li> </ul>	A - crude oil
API gravity	The Liquid hydrocarbons option is selected in the Medium parameter and the API gravity option is selected in the Sound velocity calculation mode parameter.	Enter the medium's API gravity for the installation.	0.0 to 100.0 °API	10.0 °API
Density	The Liquid hydrocarbons option is selected in the Medium parameter and the Density option is selected in the Sound velocity calculation mode parameter.	Enter the medium's density for the installation.	Signed floating-point number	1000 kg/m³
Reference density	The Liquid hydrocarbons option is selected in the Medium parameter and the Reference density option is selected in the Sound velocity calculation mode parameter.	Enter the medium's reference density for the installation.	Signed floating-point number	1000 kg/m <sup>3</sup>

Parameter	Prerequisite	Description	Selection / User entry / User interface	Factory setting
Pressure	The Liquid hydrocarbons option is selected in the Medium parameter and the API gravity option, Density option or Reference density option is selected in the Sound velocity calculation mode parameter.	Enter the process pressure for the installation.	0.8 to 110 bar	1.01325 bar
API table selection	The Liquid hydrocarbons option is selected in the Medium parameter and the API gravity option, Density option or Reference density option is selected in the Sound velocity calculation mode parameter.	Select the API reference conditions (temperature and pressure) that apply for the reference density specified.	<ul> <li>API table 5/6</li> <li>API table 23/24</li> <li>API table 53/54</li> <li>API table 59/60</li> <li>Other</li> </ul>	API table 23/24
Alternative pressure value	-	Enter an alternative user-defined reference value for the pressure.	0.8 to 110 bar	1.01325 bar
Alternative temperature value	-	Enter an alternative user- defined reference value for the temperature.	−10 to 110 °C	29.5 ℃
Viscosity	The <b>User-specific liquid</b> option is selected in <b>Medium</b> parameter.	Enter medium viscosity at installation temperature.	0.01 to 10 000 mm <sup>2</sup> /s	1 mm²/s
Pipe material		Select pipe material.	Carbon steel Ductile cast iron Stainless steel 1.4301 (UNS S30400) 1.4401 (UNS S31600) 1.4550 (UNS S34700) Hastelloy C PVC PE LDPE HDPE HDPE GRP PVDF PA PP PTFE Pyrex glass Asbestos cement Copper Unknown pipe material	Stainless steel
Pipe sound velocity	The <b>Unknown pipe material</b> option is selected in the <b>Pipe material</b> parameter.	Enter sound velocity of pipe material.	800.0 to 3 800.0 m/s	3 120.0 m/s
Pipe dimensions	-	Select if pipe dimensions are defined by diameter or circumference.	<ul><li>Diameter</li><li>Pipe circumference</li></ul>	Diameter
Pipe circumference	The <b>Pipe circumference</b> option is selected in the <b>Pipe dimensions</b> parameter.	Define the pipe circumference.	30 to 62 800 mm	314.159 mm
Pipe outer diameter	The <b>Diameter</b> option is selected in <b>Pipe dimensions</b> parameter.	Define the outer diameter of the pipe.	0 to 20 000 mm	100 mm

Parameter	Prerequisite	Description	Selection / User entry / User interface	Factory setting
Pipe wall thickness	-	Enter the pipe wall thickness.	Positive floating point number	3 mm
Liner material	-	Select liner material.	<ul> <li>None</li> <li>Cement</li> <li>Rubber</li> <li>Epoxy resin</li> <li>Unknown liner material</li> </ul>	None
Liner sound velocity	The <b>Unknown liner material</b> option is selected in the <b>Liner material</b> parameter.	Define the sound velocity of liner material.	800.0 to 3 800.0 m/s	2400.0 m/s
Liner thickness	-	Define the thickness of liner.	0 to 100 mm	0 mm
Sensor type	-	Select sensor type.	■ C-030-A ■ C-050-A ■ C-100-B ■ C-100-C ■ C-200-A ■ C-200-B ■ C-200-C ■ C-500-A ■ CH-050-A* ■ CH-100-A*	As per order
Sensor coupling	The following option is selected in Sensor type parameter:  C-030-A C-050-A C-100-A C-100-B C-100-C C-200-A C-200-B C-200-C	Select coupling medium.	<ul><li>Coupling pad</li><li>Coupling paste</li></ul>	Coupling pad
Mounting type	-	Select how the sensors are arranged to each other.  • (1) direct option: sensor arrangement with 1 traverse • (2) V-mounting option: sensor arrangement with 2 traverses • (3) Z-Mounting option: sensor arrangement with 3 traverses • (4) W-mounting option: sensor arrangement with 4 traverses	<ul> <li>(1) direct</li> <li>(2) V-mounting</li> <li>(3) Z-Mounting</li> <li>(4) W-mounting</li> <li>Automatic</li> </ul>	Automatic
Cable length	-	Enter length of sensor cables.	0 to 200 000 mm	As per order
FlowDC inlet configuration	The 1 measuring point - 2 signal paths option is selected in the Measuring point configuration parameter.	Select FlowDC inlet configuration.	<ul> <li>Off</li> <li>Single elbow</li> <li>Double elbow 3D</li> <li>45° bend</li> <li>2 x 45° bend</li> <li>Concentric diameter change</li> <li>Reduction</li> <li>Other*</li> </ul>	Off

Parameter	Prerequisite	Description	Selection / User entry / User interface	Factory setting
Intermediate pipe length	The 1 measuring point - 2 signal paths option is selected in Measuring point configuration parameter.	Enter the length of the intermediate pipe between the two bends.	Positive floating- point number	0 mm
Inlet diameter	<ul> <li>The 1 measuring point - 2 signal paths option is selected in the Measuring point configuration parameter.</li> <li>The Concentric diameter change option is selected in the Inlet configuration parameter.</li> </ul>	Enter the outer diameter of the pipe before the cross-section change. For convenience, the same measuring pipe wall thickness as for the clamp-on system is applied.	1 to 10 000 mm	88.9 mm
Transition length	<ul> <li>In the Measuring point configuration parameter, the 1 measuring point - 2 signal paths option is selected.</li> <li>In the Inlet configuration parameter, the Concentric diameter change option is selected.</li> </ul>	Enter length of the concentric diameter change.	0 to 20 000 mm	0 mm
Inlet run	The 1 measuring point - 2 signal paths option is selected in Measuring point configuration parameter.	Enter length of the available straight inlet run.	0 to 300 000 mm	0 mm
Relative sensor position	The 1 measuring point - 2 signal paths option is selected in the Measuring point configuration parameter and the Off option is not selected in FlowDC inlet configuration parameter.	Shows the correct position for the sensor.	• 90° • 180°	-
Result sensor type / mounting type	-	Shows the selected sensor type and (if applicable automatically) selected mounting type.	e.g. C-100-A option / (2) V-mounting option	-
Result sensor distance / measuring aid	-	Shows the calculated sensor distance and vernier or wire length (if applicable) required for installation.	e.g. 201.3 mm / B 21	-


<sup>\*</sup> Visibility depends on order options or device settings

# 10.4.5 Displaying the I/O configuration

The I/O configuration submenu guides the user systematically through all the parameters in which the configuration of the I/O modules is displayed.

#### Navigation

"Setup" menu  $\rightarrow$  I/O configuration

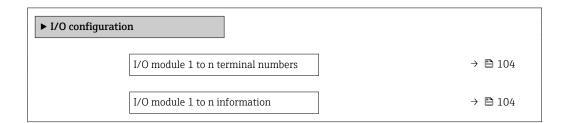

I/O module 1 to n type	→ 🖺 104
Apply I/O configuration	→ 🖺 104
I/O alteration code	→ 🖺 104

Parameter	Description	User interface / Selection / User entry	Factory setting
I/O module 1 to n terminal numbers	Shows the terminal numbers used by the I/O module.	<ul> <li>Not used</li> <li>26-27 (I/O 1)</li> <li>24-25 (I/O 2)</li> <li>22-23 (I/O 3)</li> </ul>	-
I/O module 1 to n information	Shows information of the plugged I/O module.	<ul><li>Not plugged</li><li>Invalid</li><li>Not configurable</li><li>Configurable</li><li>MODBUS</li></ul>	-
I/O module 1 to n type	Shows the I/O module type.	<ul> <li>Off</li> <li>Current output *</li> <li>Current input *</li> <li>Status input *</li> <li>Pulse/frequency/switch output *</li> <li>Double pulse output *</li> <li>Relay output *</li> </ul>	Off
Apply I/O configuration	Apply parameterization of the freely configurable I/O module.	■ No ■ Yes	No
I/O alteration code	Enter the code in order to change the I/O configuration.	Positive integer	0


<sup>\*</sup> Visibility depends on order options or device settings

# 10.4.6 Checking the installation status

The status of individual parameters can be checked in the **Installation status** submenu.

# Navigation

"Setup" menu  $\rightarrow$  Installation status

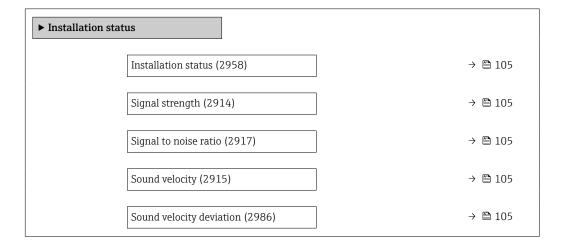

104


Parameter	Description	User interface	Factory setting
Installation status	Shows the device status on installation based on the measured values displayed.  Displays the device status after installation according to the displayed measured values.  Good option: No further optimization required  Acceptable option: Measuring performance ok, optimize if possible. You should always aim for the status Good option.  Bad option: Optimization is required. Poor and unstable measuring performance.  Check the following points to optimize the sensor installation:  Sensor distance  Alignment of sensors  Check the measuring point parameters in the configuration	<ul> <li>Good</li> <li>Acceptable</li> <li>Bad</li> </ul>	Good
Signal strength	Displays the current signal strength (0 to 100 dB).  Assessment of the signal strength: <ul> <li>&lt; 10 dB: bad</li> <li>&gt; 90 dB: very good</li> </ul>	Signed floating-point number	-
Signal to noise ratio	Displays the current signal to noise ratio (0 to 100 dB).  Assessment of the signal-to-noise ratio:  < 20 dB: bad  > 50 dB: very good	Signed floating-point number	_
Sound velocity	Displays the sound velocity that is currently measured.  Deviation of the measured sound velocity from the expected sound velocity:  < 1 %: good  1 to 2 %: acceptable  > 2 %: bad	Signed floating-point number	_
Sound velocity deviation	Shows the deviation of the installation sound velocity from the measured sound velocity.	Signed floating-point number	0 %

# 10.4.7 Configuring the current input

The **"Current input" wizard** guides the user systematically through all the parameters that have to be set for configuring the current input.

# Navigation

"Setup" menu  $\rightarrow$  Current input

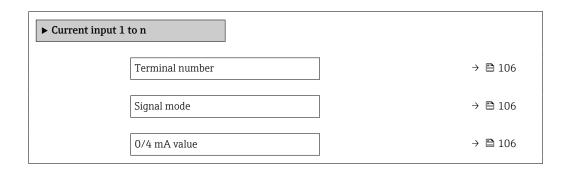

20 mA value	→ 🖺 106
Current span	→ 🖺 106
Failure mode	→ 🖺 106
Failure value	→ 🖺 106

Parameter	Prerequisite	Description	User interface / Selection / User entry	Factory setting
Terminal number	-	Shows the terminal numbers used by the current input module.	<ul><li>Not used</li><li>24-25 (I/O 2)</li><li>22-23 (I/O 3)</li></ul>	-
Signal mode	-	Select the signal mode for the current input.	<ul><li>Passive</li><li>Active*</li></ul>	Passive
0/4 mA value	-	Enter 4 mA value.	Signed floating-point number	0
20 mA value	-	Enter 20 mA value.	Signed floating-point number	Depends on country and nominal diameter
Current span	-	Select current range for process value output and upper/lower level for alarm signal.	<ul> <li>420 mA (420.5 mA)</li> <li>420 mA NE (3.820.5 mA)</li> <li>420 mA US (3.920.8 mA)</li> <li>020 mA (020.5 mA)</li> </ul>	Country-specific:  420 mA NE (3.820.5 mA)  420 mA US (3.920.8 mA)
Failure mode	-	Define input behavior in alarm condition.	<ul><li>Alarm</li><li>Last valid value</li><li>Defined value</li></ul>	Alarm
Failure value	In the <b>Failure mode</b> parameter, the <b>Defined value</b> option is selected.	Enter value to be used by the device if input value from external device is missing.	Signed floating-point number	0

<sup>\*</sup> Visibility depends on order options or device settings

# 10.4.8 Configuring the status input

The **Status input** submenu guides the user systematically through all the parameters that have to be set for configuring the status input.

# Navigation

"Setup" menu  $\rightarrow$  Status input 1 to n

► Status input 1 to n	
Assign status input	→ 🖺 107
Terminal number	→ 🖺 107

106

Active level	→ 🖺 107
Terminal number	→ 🖺 107
Response time status input	→ 🖺 107
Terminal number	→ 🖺 107


Parameter	Description	Selection / User interface / User entry	Factory setting
Assign status input	Select function for the status input.	<ul> <li>Off</li> <li>Reset totalizer 1</li> <li>Reset totalizer 2</li> <li>Reset totalizer 3</li> <li>Reset all totalizers</li> <li>Flow override</li> </ul>	Off
Terminal number	Shows the terminal numbers used by the status input module.	<ul> <li>Not used</li> <li>24-25 (I/O 2)</li> <li>22-23 (I/O 3)</li> </ul>	-
Active level	Define input signal level at which the assigned function is triggered.	■ High ■ Low	High
Response time status input	Define the minimum amount of time the input signal level must be present before the selected function is triggered.	5 to 200 ms	50 ms

# 10.4.9 Configuring the current output

The **Current output** wizard guides you systematically through all the parameters that have to be set for configuring the current output.

### Navigation

"Setup" menu  $\rightarrow$  Current output

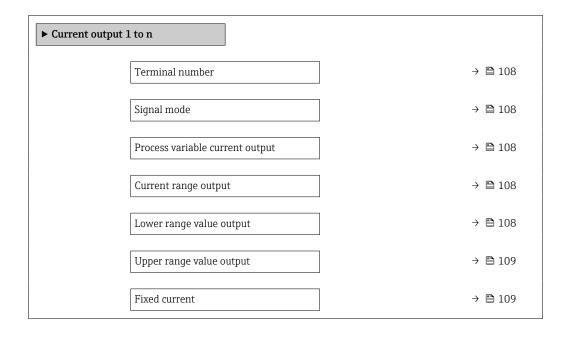

# Parameter overview with brief description

Parameter	Prerequisite	Description	User interface / Selection / User entry	Factory setting
Terminal number	-	Shows the terminal numbers used by the current output module.	<ul><li>Not used</li><li>24-25 (I/O 2)</li><li>22-23 (I/O 3)</li></ul>	-
Signal mode	-	Select the signal mode for the current output.	<ul><li>Active *</li><li>Passive *</li></ul>	Active
Process variable current output	-	Select the process variable for the current output.	■ Off* ■ Volume flow ■ Mass flow ■ Flow velocity ■ Sound velocity ■ Temperature* ■ Pressure* ■ Density* ■ Reference density* ■ S&W volume flow* ■ GSV flow* ■ NSV flow* ■ API gravity* ■ API slope* ■ Signal strength* ■ Signal to noise ratio* ■ Acceptance rate* ■ Turbulence* ■ Electronics temperature ■ Profile factor* ■ Cross flow factor*	Volume flow
Current range output	-	Select current range for process value output and upper/lower level for alarm signal.	<ul> <li>420 mA NE (3.820.5 mA)</li> <li>420 mA US (3.920.8 mA)</li> <li>420 mA (420.5 mA)</li> <li>020 mA (020.5 mA)</li> <li>Fixed value</li> </ul>	Depends on country:  420 mA NE (3.820.5 mA)  420 mA US (3.920.8 mA)
Lower range value output	In <b>Current span</b> parameter (→ ■ 108), one of the following options is selected:  • 420 mA NE (3.820.5 mA)  • 420 mA US (3.920.8 mA)  • 420 mA (420.5 mA)  • 020 mA (020.5 mA)	Enter lower range value for the measured value range.	Signed floating-point number	Depends on country:  • m³/h  • ft³/h

108

Parameter	Prerequisite	Description	User interface / Selection / User entry	Factory setting
Upper range value output	In <b>Current span</b> parameter (→ ≦ 108), one of the following options is selected:  • 420 mA NE (3.820.5 mA)  • 420 mA US (3.920.8 mA)  • 420 mA (420.5 mA)  • 020 mA (020.5 mA)	Enter upper range value for the measured value range.	Signed floating-point number	Depends on country and nominal diameter
Fixed current	The <b>Fixed current</b> option is selected in the <b>Current span</b> parameter (→ 🖺 108).	Defines the fixed output current.	0 to 22.5 mA	22.5 mA
Damping current output	A process variable is selected in the <b>Assign current output</b> parameter (→ 🖹 108) and one of the following options is selected in the <b>Current span</b> parameter (→ 🖺 108):  • 420 mA NE (3.820.5 mA)  • 420 mA US (3.920.8 mA)  • 420 mA (420.5 mA)  • 020 mA (020.5 mA)	Enter time constant for output damping (PT1 element).  Damping reduces the effect of fluctuations in the measured value on the output signal.	0.0 to 999.9 s	1.0 s
Failure behavior current output	A process variable is selected in the <b>Assign current output</b> parameter (→ ■ 108) and one of the following options is selected in the <b>Current span</b> parameter (→ ■ 108):  ■ 420 mA NE (3.820.5 mA)  ■ 420 mA US (3.920.8 mA)  ■ 420 mA (420.5 mA)  ■ 020 mA (020.5 mA)	Select output behavior in the event of a device alarm.	<ul> <li>Min.</li> <li>Max.</li> <li>Last valid value</li> <li>Actual value</li> <li>Fixed value</li> </ul>	Max.
Failure current	The <b>Defined value</b> option is selected in the <b>Failure mode</b> parameter.	Enter current output value in alarm condition.	0 to 22.5 mA	22.5 mA

<sup>\*</sup> Visibility depends on order options or device settings

### 10.4.10 Configuring the pulse/frequency/switch output

The **Pulse/frequency/switch output** wizard guides you systematically through all the parameters that can be set for configuring the selected output type.

#### Navigation

"Setup" menu  $\rightarrow$  Advanced setup  $\rightarrow$  Pulse/frequency/switch output




#### Parameter overview with brief description

Parameter	Description	Selection	Factory setting
Operating mode	Define the output as a pulse, frequency or switch output.	<ul><li>Pulse</li><li>Frequency</li><li>Switch</li></ul>	Pulse

#### Configuring the pulse output

#### Navigation

"Setup" menu → Pulse/frequency/switch output

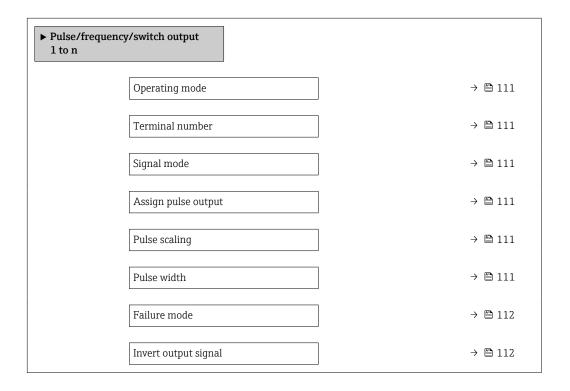

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Operating mode	-	Define the output as a pulse, frequency or switch output.	<ul><li>Pulse</li><li>Frequency</li><li>Switch</li></ul>	Pulse
Terminal number	-	Shows the terminal numbers used by the PFS output module.	<ul> <li>Not used</li> <li>24-25 (I/O 2)</li> <li>22-23 (I/O 3)</li> </ul>	-
Signal mode	-	Select the signal mode for the PFS output.	<ul> <li>Passive</li> <li>Active*</li> <li>Passive NE</li> </ul>	Passive
Assign pulse output	The <b>Pulse</b> option is selected in <b>Operating mode</b> parameter.	Select process variable for pulse output.	Off Volume flow Mass flow GSV flow* NSV flow* S&W volume flow* Product 1 volume flow* Product 3 volume flow* Product 5 volume flow* Product 5 volume flow* Product 1 mass flow* Product 1 mass flow* Product 2 mass flow* Product 3 mass flow* Product 4 mass flow* Product 5 mass flow* Product 5 mass flow* Product 5 mass flow* Product 1 NSV flow* Product 1 NSV flow* Product 4 NSV flow* Product 5 NSV flow* Product 5 NSV flow*	Off
Pulse scaling	The <b>Pulse</b> option is selected in the <b>Operating mode</b> parameter (→ 🖺 110) and a process variable is selected in the <b>Assign pulse output</b> parameter (→ 🖺 111).	Enter quantity for measured value at which a pulse is output.	Positive floating point number	Depends on country and nominal diameter
Pulse width	The <b>Pulse</b> option is selected in the <b>Operating mode</b> parameter (→ 🖺 110) and a process variable is selected in the <b>Assign pulse output</b> parameter (→ 🖺 111).	Define time width of the output pulse.	0.05 to 2 000 ms	100 ms

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Failure mode	The <b>Pulse</b> option is selected in the <b>Operating mode</b> parameter (→ 🗎 110) and a process variable is selected in the <b>Assign pulse output</b> parameter (→ 🖺 111).	Select output behavior in the event of a device alarm.	<ul><li>Actual value</li><li>No pulses</li></ul>	No pulses
Invert output signal	-	Invert the output signal.	<ul><li>No</li><li>Yes</li></ul>	No

Visibility depends on order options or device settings

# Configuring the frequency output

# Navigation

"Setup" menu → Pulse/frequency/switch output

► Pulse/freq 1 to n	uency/switch output	
	Operating mode	→ 🖺 113
	Terminal number	→ 🖺 113
	Signal mode	→ 🗎 113
	Assign frequency output	→ 🖺 113
	Minimum frequency value	→ 🖺 113
	Maximum frequency value	→ 🖺 113
	Measuring value at minimum frequency	→ 🗎 113
	Measuring value at maximum frequency	→ 🗎 113
	Failure mode	→ 🖺 114
	Failure frequency	→ 🖺 114
	Invert output signal	→ 🖺 114

112

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Operating mode	-	Define the output as a pulse, frequency or switch output.	<ul><li>Pulse</li><li>Frequency</li><li>Switch</li></ul>	Pulse
Terminal number	-	Shows the terminal numbers used by the PFS output module.	<ul> <li>Not used</li> <li>24-25 (I/O 2)</li> <li>22-23 (I/O 3)</li> </ul>	-
Signal mode	-	Select the signal mode for the PFS output.	<ul> <li>Passive</li> <li>Active *</li> <li>Passive NE</li> </ul>	Passive
Assign frequency output	The <b>Frequency</b> option is selected in <b>Operating mode</b> parameter (→ 🗎 110).	Select process variable for frequency output.	Off Volume flow Mass flow Flow velocity Sound velocity Temperature Pressure Density Reference density S&W volume flow GSV flow NSV flow API gravity API slope Signal strength Signal to noise ratio Acceptance rate Turbulence Electronics temperature Profile factor Cross flow factor	Off
Minimum frequency value	The <b>Frequency</b> option is selected in the <b>Operating mode</b> parameter (→ 🖺 110) and a process variable is selected in the <b>Assign frequency output</b> parameter (→ 🖺 113).	Enter minimum frequency.	0.0 to 10 000.0 Hz	0.0 Hz
Maximum frequency value	The <b>Frequency</b> option is selected in the <b>Operating mode</b> parameter (→ 🖺 110) and a process variable is selected in the <b>Assign frequency output</b> parameter (→ 🖺 113).	Enter maximum frequency.	0.0 to 10 000.0 Hz	10 000.0 Hz
Measuring value at minimum frequency	The <b>Frequency</b> option is selected in the <b>Operating mode</b> parameter (→ 🖺 110) and a process variable is selected in the <b>Assign frequency output</b> parameter (→ 🖺 113).	Enter measured value for minimum frequency.	Signed floating-point number	Depends on country and nominal diameter
Measuring value at maximum frequency	The <b>Frequency</b> option is selected in the <b>Operating mode</b> parameter (→ 🖺 110) and a process variable is selected in the <b>Assign frequency output</b> parameter (→ 🖺 113).	Enter measured value for maximum frequency.	Signed floating-point number	Depends on country and nominal diameter

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Failure mode	The <b>Frequency</b> option is selected in the <b>Operating mode</b> parameter (→ 🗎 110) and a process variable is selected in the <b>Assign frequency output</b> parameter (→ 🖺 113).	Select output behavior in the event of a device alarm.	<ul><li>Actual value</li><li>Defined value</li><li>0 Hz</li></ul>	0 Hz
Failure frequency	In the <b>Operating mode</b> parameter (→ 🖺 110), the <b>Frequency</b> option is selected, in the <b>Assign frequency output</b> parameter (→ 🖺 113) a process variable is selected, and in the <b>Failure mode</b> parameter, the <b>Defined value</b> option is selected.	Enter frequency output value in alarm condition.	0.0 to 12 500.0 Hz	0.0 Hz
Invert output signal	-	Invert the output signal.	<ul><li>No</li><li>Yes</li></ul>	No

<sup>\*</sup> Visibility depends on order options or device settings

# Configuring the switch output

### Navigation

"Setup" menu → Pulse/frequency/switch output

► Pulse/frequent 1 to n	uency/switch output	
	Operating mode	→ 🖺 115
	Terminal number	→ 🖺 115
	Signal mode	→ 🖺 115
	Switch output function	→ 🖺 116
	Assign diagnostic behavior	→ 🖺 116
	Assign limit	→ 🖺 116
	Assign flow direction check	→ 🖺 116
	Assign status	→ 🖺 116
	Switch-on value	→ 🖺 116
	Switch-off value	→ 🖺 117
	Switch-on delay	→ 🖺 117
	Switch-off delay	→ 🖺 117
	Failure mode	→ 🖺 117
	Invert output signal	→ 🖺 117

### Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Operating mode	-	Define the output as a pulse, frequency or switch output.	<ul><li>Pulse</li><li>Frequency</li><li>Switch</li></ul>	Pulse
Terminal number	-	Shows the terminal numbers used by the PFS output module.	<ul><li>Not used</li><li>24-25 (I/O 2)</li><li>22-23 (I/O 3)</li></ul>	_
Signal mode	-	Select the signal mode for the PFS output.	<ul> <li>Passive</li> <li>Active *</li> <li>Passive NE</li> </ul>	Passive

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Switch output function	The <b>Switch</b> option is selected in the <b>Operating mode</b> parameter.	Select function for switch output.	<ul> <li>Off</li> <li>On</li> <li>Diagnostic behavior</li> <li>Limit</li> <li>Flow direction check</li> <li>Status</li> </ul>	Off
Assign diagnostic behavior	<ul> <li>In the Operating mode parameter, the Switch option is selected.</li> <li>In the Switch output function parameter, the Diagnostic behavior option is selected.</li> </ul>	The output is switched on (closed, conductive), if there is a pending diagnostic event of the assigned behavioral category.	<ul><li>Alarm</li><li>Alarm or warning</li><li>Warning</li></ul>	Alarm
Assign limit	<ul> <li>The Switch option is selected in the Operating mode parameter.</li> <li>The Limit option is selected in the Switch output function parameter.</li> </ul>	Select the variable to monitor in case the specified limit value is exceeded. If a limit value is exceeded, the output is switched on (conductive).	■ Off ■ Volume flow ■ Mass flow ■ Flow velocity ■ Sound velocity ■ Temperature ■ Pressure ■ Density ■ Reference density ■ S&W volume flow ■ GSV flow ■ NSV flow ■ API gravity ■ API slope ■ Signal strength ■ Signal to noise ratio ■ Acceptance rate ■ Turbulence ■ Electronics temperature ■ Totalizer 1 ■ Totalizer 2 ■ Totalizer 3 ■ Profile factor ■ Cross flow factor	Volume flow
Assign flow direction check	<ul> <li>The Switch option is selected in the Operating mode parameter.</li> <li>The Flow direction check option is selected in the Switch output function parameter.</li> </ul>	Select process variable for flow direction monitoring.	<ul><li>Off</li><li>Volume flow</li><li>Mass flow</li><li>Flow velocity</li></ul>	Volume flow
Assign status	<ul> <li>The Switch option is selected in the Operating mode parameter.</li> <li>The Status option is selected in the Switch output function parameter.</li> </ul>	Select the device function for which to report the status. If the function is triggered, the output is closed and conductive (standard configuration).	Off     Low flow cut off     Product identification*	Low flow cut off
Switch-on value	<ul> <li>The Switch option is selected in the Operating mode parameter.</li> <li>The Limit option is selected in the Switch output function parameter.</li> </ul>	Enter limit value for switch-on point (process variable > switch-on value = closed, conductive).	Signed floating-point number	Depends on country

Parameter	Prerequisite	Description	Selection / User interface / User entry	Factory setting
Switch-off value	<ul> <li>The Switch option is selected in the Operating mode parameter.</li> <li>The Limit option is selected in the Switch output function parameter.</li> </ul>	Enter limit value for switch-off point (process variable < switch-off value = open, nonconductive).	Signed floating-point number	Depends on country
Switch-on delay	<ul> <li>The Switch option is selected in the Operating mode parameter.</li> <li>The Limit option is selected in the Switch output function parameter.</li> </ul>	Enter a delay before the output is switched on.	0.0 to 100.0 s	0.0 s
Switch-off delay	<ul> <li>The Switch option is selected in the Operating mode parameter.</li> <li>The Limit option is selected in the Switch output function parameter.</li> </ul>	Enter a delay before the output is switched off.	0.0 to 100.0 s	0.0 s
Failure mode	-	Select output behavior in the event of a device alarm.	<ul><li>Actual status</li><li>Open</li><li>Closed</li></ul>	Open
Invert output signal	-	Invert the output signal.	<ul><li>No</li><li>Yes</li></ul>	No


<sup>\*</sup> Visibility depends on order options or device settings

### 10.4.11 Configuring the relay output

The **Relay output** wizard guides the user systematically through all the parameters that have to be set for configuring the relay output.

### Navigation

"Setup" menu  $\rightarrow$  Relay output 1 to n

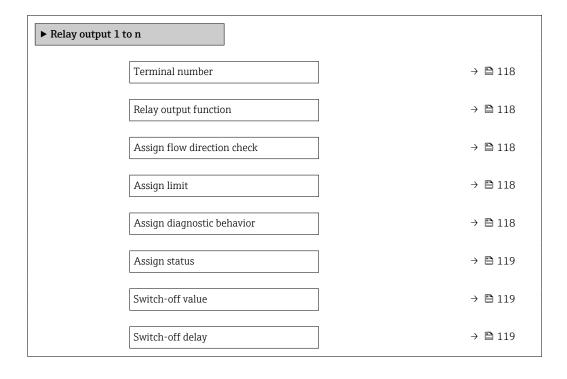

Switch-on value	→ 🖺 119
Switch-on delay	→ 🖺 119
Failure mode	→ 🖺 119
Switch state	→ 🖺 119
Powerless relay status	→ 🖺 119

Parameter	Prerequisite	Description	User interface / Selection / User entry	Factory setting
Terminal number	-	Shows the terminal numbers used by the relay output module.	<ul><li>Not used</li><li>24-25 (I/O 2)</li><li>22-23 (I/O 3)</li></ul>	_
Relay output function	-	Select the function for the relay output.	<ul> <li>Closed</li> <li>Open</li> <li>Diagnostic behavior</li> <li>Limit</li> <li>Flow direction check</li> <li>Status</li> </ul>	Closed
Assign flow direction check	The Flow direction check option is selected in the Relay output function parameter.	Select process variable for flow direction monitoring.	<ul><li> Off</li><li> Volume flow</li><li> Mass flow</li><li> Flow velocity</li></ul>	Volume flow
Assign limit	The <b>Limit</b> option is selected in the <b>Relay output function</b> parameter.	Select the variable to monitor in case the specified limit value is exceeded. If a limit value is exceeded, the output is switched on (conductive).	■ Off ■ Volume flow ■ Mass flow ■ Flow velocity ■ Sound velocity ■ Temperature ■ Pressure ■ Density ■ Reference density ■ S&W volume flow ■ GSV flow ■ NSV flow ■ API gravity ■ API slope ■ Signal strength ■ Signal to noise ratio ■ Acceptance rate ■ Turbulence ■ Electronics temperature ■ Totalizer 1 ■ Totalizer 2 ■ Totalizer 3 ■ Profile factor ■ Cross flow factor	Volume flow
Assign diagnostic behavior	In the <b>Relay output function</b> parameter, the <b>Diagnostic behavior</b> option is selected.	The output is switched on (closed, conductive), if there is a pending diagnostic event of the assigned behavioral category.	<ul><li>Alarm</li><li>Alarm or warning</li><li>Warning</li></ul>	Alarm

Parameter	Prerequisite	Description	User interface / Selection / User entry	Factory setting		
Assign status	In the <b>Relay output function</b> parameter, the <b>Digital Output</b> option is selected.	Select the device function for which to display the status. If the switch on point is reached, the output is switched on (closed, conductive).	<ul> <li>Off</li> <li>Low flow cut off</li> <li>Product identification*</li> </ul>	Off		
Switch-off value	The <b>Limit</b> option is selected in the <b>Relay output function</b> parameter.	Enter limit value for switch-off point (process variable < switch-off value = open, nonconductive).	oint (process variable < number number		ple < number	
Switch-off delay	In the <b>Relay output function</b> parameter, the <b>Limit</b> option is selected.	Enter a delay before the output is switched off.	0.0 to 100.0 s	0.0 s		
Switch-on value	The <b>Limit</b> option is selected in the <b>Relay output function</b> parameter.	Enter measured value for the switch-on point.	Signed floating-point number	0 m <sup>3</sup> /h		
Switch-on delay	In the <b>Relay output function</b> parameter, the <b>Limit</b> option is selected.	Enter a delay before the output is switched on.	0.0 to 100.0 s	0.0 s		
Failure mode	-	Select output behavior in the event of a device alarm.	<ul><li>Actual status</li><li>Open</li><li>Closed</li></ul>	Open		
Switch state	-	Indicates the current switch state of the output.	<ul><li>Open</li><li>Closed</li></ul>	-		
Powerless relay status	-	Select quiescent state for relay.	<ul><li>Open</li><li>Closed</li></ul>	Open		


<sup>\*</sup> Visibility depends on order options or device settings

# 10.4.12 Configuring the double pulse output

The **Double pulse output** submenu guides the user systematically through all the parameters that have to be set for configuring the double pulse output.

### Navigation

"Setup" menu  $\rightarrow$  Double pulse output

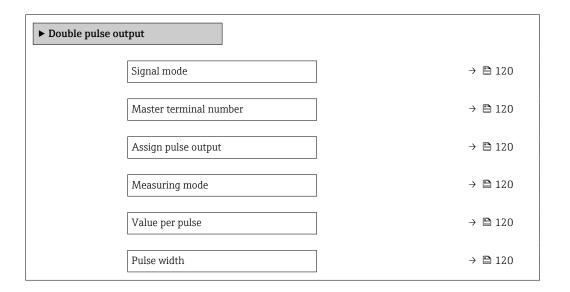

Failure mode	→ 🖺 120
Invert output signal	→ 🖺 120

Parameter	Description	Selection / User interface / User entry	Factory setting
Signal mode	Select the signal mode for the double pulse output.	<ul> <li>Passive</li> <li>Active*</li> <li>Passive NE</li> </ul>	Passive
Master terminal number	Shows the terminal numbers used by the master of the double pulse output module.	<ul><li>Not used</li><li>24-25 (I/O 2)</li><li>22-23 (I/O 3)</li></ul>	-
Assign pulse output	Select process variable for pulse output.	Off Volume flow Mass flow GSV flow* S&W volume flow* Product 1 volume flow* Product 3 volume flow* Product 5 volume flow* Product 1 mass flow* Product 1 mass flow* Product 1 mass flow* Product 1 mass flow* Product 2 mass flow* Product 3 mass flow* Product 4 volume flow* Product 1 mass flow* Product 1 mass flow* Product 2 mass flow* Product 3 mass flow* Product 4 mass flow* Product 5 mass flow* Product 1 NSV flow* Product 3 NSV flow* Product 4 NSV flow* Product 4 NSV flow* Product 5 NSV flow*	Off
Measuring mode	Select measuring mode for pulse output.	<ul> <li>Forward flow</li> <li>Forward/Reverse flow</li> <li>Reverse flow</li> <li>Reverse flow compensation</li> </ul>	Forward flow
Value per pulse	Enter measured value at which a pulse is output.	Signed floating-point number	Depends on country and nominal diameter
Pulse width	Define time width of the output pulse.	0.5 to 2 000 ms	0.5 ms
Failure mode	Select output behavior in the event of a device alarm.	<ul><li>Actual value</li><li>No pulses</li></ul>	No pulses
Invert output signal	Invert the output signal.	■ No ■ Yes	No

<sup>\*</sup> Visibility depends on order options or device settings

# 10.4.13 Configuring the local display

The **Display** wizard guides you systematically through all the parameters that can configured for configuring the local display.

120

 $\begin{array}{l} \textbf{Navigation} \\ \textbf{"Setup" menu} \rightarrow \textbf{Display} \end{array}$ 

► Display			
	Format display		→ 🖺 122
	Value 1 display	ı	→ 🖺 122
	0% bargraph value 1	ı	→ 🖺 122
	100% bargraph value 1	ı	→ 🖺 122
	Value 2 display		→ 🖺 122
	Value 3 display		→ 🖺 122
	0% bargraph value 3		→ 🖺 122
	100% bargraph value 3		→ 🖺 122
	Value 4 display	1	→ 🖺 122

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Format display	A local display is provided.	Select how measured values are shown on the display.	<ul> <li>1 value, max. size</li> <li>1 bargraph + 1 value</li> <li>2 values</li> <li>1 value large + 2 values</li> <li>4 values</li> </ul>	1 value, max. size
Value 1 display	A local display is provided.	Select the measured value that is shown on the local display.	Mass flow Flow velocity Sound velocity Volume flow Density Reference density S&W volume flow GSV flow NSV flow API gravity API slope Signal strength Signal to noise ratio Acceptance rate Turbulence Electronics temperature Temperature Temperature Totalizer 1 Totalizer 2 Totalizer 3 Current output 1 Current output 3 Profile factor Cross flow factor	Volume flow
0% bargraph value 1	A local display is provided.	Enter 0 % value for bar graph display.	Signed floating-point number	Country-specific
100% bargraph value 1	A local display is provided.	Enter 100 % value for bar graph display.	Signed floating-point number	Depends on country and nominal diameter
Value 2 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see  Value 1 display parameter (→ 🖺 122)	None
Value 3 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see  Value 1 display parameter (→   122)	None
0% bargraph value 3	A selection was made in the <b>Value 3 display</b> parameter.	Enter 0 % value for bar graph display.	Signed floating-point number	Country-specific
100% bargraph value 3	A selection was made in the <b>Value 3 display</b> parameter.	Enter 100 % value for bar graph display.	Signed floating-point number	0
Value 4 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see  Value 1 display parameter (→ 🖺 122)	None
Value 5 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see  Value 1 display parameter (→   122)	None


Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Value 6 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see  Value 1 display parameter (→ 🖺 122)	None
Value 7 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see  Value 1 display parameter (→ 🖺 122)	None
Value 8 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see  Value 1 display parameter (→ 🖺 122)	None

<sup>\*</sup> Visibility depends on order options or device settings

### 10.4.14 Configuring the low flow cut off

The **Low flow cut off** wizard systematically guides the user through all the parameters that must be set to configure low flow cut off.


#### Structure of the wizard

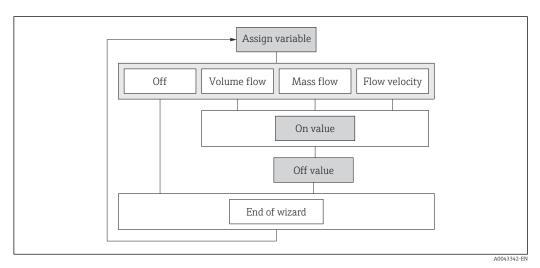

■ 65 "Low flow cutoff" wizard in the "Setup" menu

#### **Navigation**

"Setup" menu  $\rightarrow$  Low flow cut off

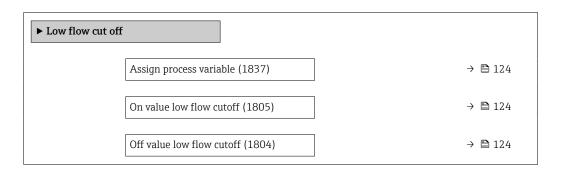


Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Assign process variable	-	Select process variable for low flow cut off.	<ul><li> Off</li><li> Volume flow</li><li> Mass flow</li><li> Flow velocity</li></ul>	Flow velocity
On value low flow cutoff	A process variable is selected in the <b>Assign process variable</b> parameter (→ 🖺 124).	Enter on value for low flow cut off.	Positive floating- point number	Depends on country and nominal diameter
Off value low flow cutoff	A process variable is selected in the <b>Assign process variable</b> parameter ( $\Rightarrow$ 🖺 124).	Enter off value for low flow cut off.	0 to 100.0 %	50 %

# 10.5 Advanced settings

The **Advanced setup** submenu with its submenus contains parameters for specific settings.


Navigation to the "Advanced setup" submenu

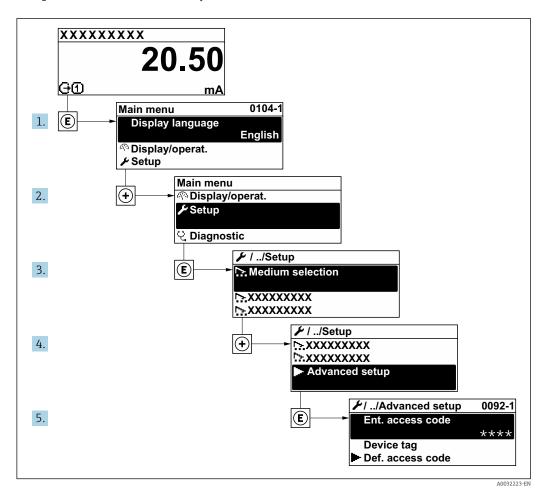


The number of submenus and parameters can vary depending on the device version. Certain submenus and parameters in these submenus are not described in the Operating Instructions. Instead a description is provided in the Special Documentation for the device ("Supplementary documentation").

#### **Navigation**

"Setup" menu → Advanced setup

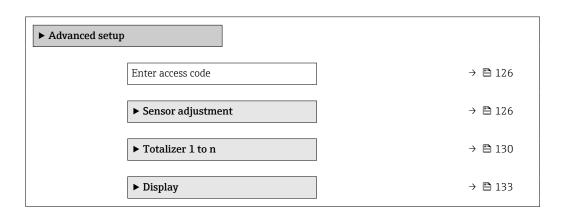

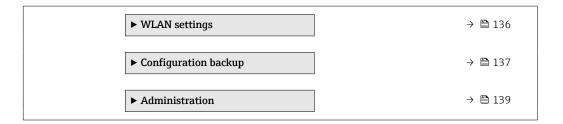

### 10.5.1 Using the parameter to enter the access code

### Navigation

"Setup" menu → Advanced setup

### Parameter overview with brief description

Parameter	Description	User entry
Enter access code	1	Max. 16-digit character string comprising numbers, letters and special characters

### 10.5.2 Carrying out a sensor adjustment

The **Sensor adjustment** submenu contains parameters that pertain to the functionality of the sensor.

#### **Navigation**

"Setup" menu → Advanced setup → Sensor adjustment



#### Parameter overview with brief description


Parameter	Description	Selection	Factory setting
Installation direction	Select sign of flow direction.	<ul><li>Forward flow</li><li>Reverse flow</li></ul>	Forward flow

### 10.5.3 Performing the sensor setup

The **Sensor setup** submenu contains parameters that concern the sensor setup.

#### **Navigation**

"Setup" menu → Advanced setup → Sensor setup

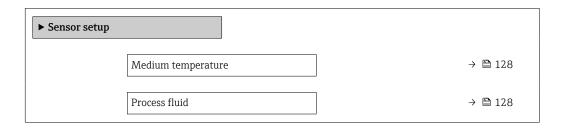

Sound velocity	-	<del>)</del> [	<b>1</b>	128
Viscosity	-	<del>)</del> [	<b>1</b>	.28
Minimum sound velocity	-	<del>)</del> [	∄ 1	128
Maximum sound velocity	-	<b>&gt;</b> [	<b>1</b>	128
Pipe material	-	<del>)</del> [	<b>1</b>	128
Pipe sound velocity	-	<del>)</del> [	<b>1</b>	128
Pipe dimensions	-	<b>&gt;</b> [	<b>1</b>	128
Pipe circumference	-	<b>&gt;</b> [	<b>1</b>	128
Pipe outer diameter	-	<del>)</del> [	<b>a</b> 1	.29
Pipe wall thickness	-	<b>&gt;</b> [	<b>1</b>	.29
Liner material	-	<b>&gt;</b> [	<b>1</b>	.29
Liner sound velocity	-	<b>&gt;</b> [	<b>1</b>	129
Liner thickness	-	<b>&gt;</b> [	<b>1</b>	.29
Sensor type	-	<del>)</del> [	<b>1</b>	L29
Mounting type	-	<del>)</del> [	<b>1</b>	.29
Cable length	-	<del>)</del> [	<b>1</b>	.29
Wire length	-	<del>)</del> [	<b>a</b> 1	.29
Sensor distance	-	<del>)</del> [	<b>a</b> 1	129
Signal path length	-	<del>)</del> [	<b>1</b>	129
Arc length	-	<del>)</del> [	<b>1</b>	.29
Sensor distance deviation	-	<del>)</del> [	<b>1</b>	.29
Arc length deviation	-	<del>)</del> [	<b>1</b>	.29
Sensor setup result 1	-	<del>)</del> [	<b>1</b>	.30
Sensor setup result 2	-	<del>)</del> [	<b>a</b> 1	130

Parameter	Prerequisite	Description	User entry / Selection / User interface	Factory setting
Medium temperature	_	Enter the medium temperature for the installation.	−200 to 550 °C	20 °C
Medium	-	Select the medium.	<ul> <li>Water</li> <li>Sea water</li> <li>Distilled water</li> <li>Ammonia NH3</li> <li>Benzene</li> <li>Ethanol</li> <li>Glycol</li> <li>Kerosene</li> <li>Milk</li> <li>Methanol</li> <li>User-specific liquid</li> <li>Air</li> <li>Liquid hydrocarbons</li> </ul>	Water
Sound velocity	The <b>User-specific liquid</b> option is selected in <b>Medium</b> parameter.	Enter the medium's sound velocity for the installation.	200 to 3 000 m/s	1482.4 m/s
Viscosity	The <b>User-specific liquid</b> option is selected in <b>Medium</b> parameter.	Enter medium viscosity at installation temperature.	0.01 to 10 000 mm <sup>2</sup> /s	1 mm <sup>2</sup> /s
Minimum sound velocity	-	Enter the minimum deviation of sound velocity.	0.0 to 1000.0 m/s	500 m/s
Maximum sound velocity	-	Enter the maximum deviation of sound velocity.	0.0 to 1000.0 m/s	300 m/s
Pipe material		Select pipe material.	■ Carbon steel ■ Ductile cast iron ■ Stainless steel ■ 1.4301 (UNS	Stainless steel
Pipe sound velocity	The <b>Unknown pipe material</b> option is selected in the <b>Pipe material</b> parameter.	Enter sound velocity of pipe material.	800.0 to 3 800.0 m/s	3 120.0 m/s
Pipe dimensions	-	Select if pipe dimensions are defined by diameter or circumference.	<ul><li>Diameter</li><li>Pipe circumference</li></ul>	Diameter
Pipe circumference	The <b>Pipe circumference</b> option is selected in the <b>Pipe dimensions</b> parameter.	Define the pipe circumference.	30 to 62 800 mm	314.159 mm

Parameter	Prerequisite	Description	User entry / Selection / User interface	Factory setting
Pipe outer diameter	The <b>Diameter</b> option is selected in <b>Pipe dimensions</b> parameter.	Define the outer diameter of the pipe.	0 to 20 000 mm	100 mm
Pipe wall thickness	-	Enter the pipe wall thickness.	Positive floating point number	3 mm
Liner material	-	Select liner material.	<ul> <li>None</li> <li>Cement</li> <li>Rubber</li> <li>Epoxy resin</li> <li>Unknown liner material</li> </ul>	None
Liner sound velocity	The <b>Unknown liner material</b> option is selected in the <b>Liner material</b> parameter.	Define the sound velocity of liner material.	800.0 to 3 800.0 m/s	2 400.0 m/s
Liner thickness	-	Define the thickness of liner.	0 to 100 mm	0 mm
Sensor type	_	Select sensor type.	• C-030-A • C-050-A • C-100-B • C-100-C • C-200-A • C-200-B • C-200-C • C-500-A • CH-050-A*	As per order
Mounting type	_	Select how the sensors are arranged to each other.  (1) direct option: sensor arrangement with 1 traverse (2) V-mounting option: sensor arrangement with 2 traverses (3) Z-Mounting option: sensor arrangement with 3 traverses (4) W-mounting option: sensor arrangement with 4 traverses	• (1) direct • (2) V-mounting • (3) Z-Mounting • (4) W-mounting • Automatic	Automatic
Cable length	_	Enter length of sensor cables.	0 to 200 000 mm	As per order
Wire length	-	Shows wire length of installation kit.	Signed floating-point number	0 mm
Sensor distance	-	Shows the distance between the sensors.	Signed floating-point number	80 mm
Signal path length	-	Shows signal path length.	Signed floating-point number	0 mm
Arc length	-	Shows the given radial distance for the mounting position of the sensor.	Signed floating-point number	0 mm
Sensor distance deviation	-	Enter the deviation between the nominal sensor distance and the welded position.	Signed floating-point number	0 mm
Arc length deviation	-	Enter the radial deviation between given radial distance and the real mounting position of the sensor.	Signed floating-point number	0 mm

Parameter	Prerequisite	Description	User entry / Selection / User interface	Factory setting
Result sensor type / mounting type	-	Shows the selected sensor type and (if applicable automatically) selected mounting type.	e.g. C-100-A option / (2) V-mounting option	-
Result sensor distance / measuring aid	-	Shows the calculated sensor distance and vernier or wire length (if applicable) required for installation.	e.g. 201.3 mm / B 21	-


Visibility depends on order options or device settings

# 10.5.4 Configuring the totalizer

In the **"Totalizer 1 to n" submenu** the individual totalizer can be configured.

#### Navigation

"Setup" menu  $\rightarrow$  Advanced setup  $\rightarrow$  Totalizer 1 to n

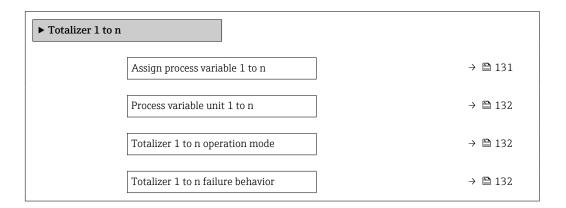

Parameter	Prerequisite	Description	Selection	Factory setting
Assign process variable 1 to n		Select process variable for totalizer.	<ul> <li>Off</li> <li>Volume flow</li> <li>Mass flow</li> <li>S&amp;W volume flow*</li> <li>GSV flow*</li> <li>Product 1 volume flow*</li> <li>Product 2 volume flow*</li> <li>Product 3 volume flow*</li> <li>Product 4 volume flow*</li> <li>Product 5 volume flow*</li> <li>Product 1 mass flow*</li> <li>Product 1 mass flow*</li> <li>Product 2 mass flow</li> <li>Product 3 mass flow</li> <li>Product 3 mass flow</li> <li>Product 4 mass flow</li> <li>Product 5 mass flow</li> <li>Product 5 mass flow</li> <li>Product 1 NSV flow</li> <li>Product 2 NSV flow</li> <li>Product 3 NSV flow</li> <li>Product 4 NSV flow</li> <li>Product 5 NSV flow</li> <li>Product 5 NSV flow</li> </ul>	Volume flow

Parameter	Prerequisite	Description	Selection	Factory setting
Process variable unit 1 to n	A process variable is selected in the <b>Assign process variable</b> parameter (→ 🖺 131) of the <b>Totalizer 1 to n</b> submenu.	Select the unit for the process variable of the totalizer.	g* kg t* t* oz* lb* STOn* cm³* dm³* m³* ml* l* hl* Ml Mega* af* ft³* Mft³* Mgal (us)* kgal (us)* kgal (us) bbl (us;liq.)* bbl (us;liq.)* bbl (us;dank)* gal (imp) Mgal (imp) Mgal (imp) Mgal (imp) Mgal (imp;beer)* bbl (imp;beer)*	Depends on country:  • m³  • ft³
Totalizer 1 to n operation mode	A process variable is selected in the <b>Assign process variable</b> parameter ( $\rightarrow \boxminus 131$ ) of the <b>Totalizer 1 to n</b> submenu.	Select totalizer operation mode, e.g. only totalize forward flow or only totalize reverse flow.	<ul><li>Net</li><li>Forward</li><li>Reverse</li></ul>	Net flow total
Totalizer 1 to n failure behavior	A process variable is selected in the <b>Assign process variable</b> parameter ( $\rightarrow \boxminus 131$ ) of the <b>Totalizer 1 to n</b> submenu.	Select totalizer behavior in the event of a device alarm.	<ul><li> Hold</li><li> Continue</li><li> Last valid value + continue</li></ul>	Stop

<sup>\*</sup> Visibility depends on order options or device settings

132

# 10.5.5 Carrying out additional display configurations

In the  ${\bf Display}$  submenu you can set all the parameters associated with the configuration of the local display.

### Navigation

"Setup" menu  $\rightarrow$  Advanced setup  $\rightarrow$  Display

► Display		
	Format display	→ 🖺 134
	Value 1 display	→ 🖺 134
	0% bargraph value 1	→ 🖺 134
	100% bargraph value 1	→ 🖺 134
	Decimal places 1	→ 🖺 134
	Value 2 display	→ 🖺 134
	Decimal places 2	→ 🖺 134
	Value 3 display	→ 🖺 134
	0% bargraph value 3	→ 🖺 134
	100% bargraph value 3	→ 🖺 135
	Decimal places 3	→ 🖺 135
	Value 4 display	→ 🖺 135
	Decimal places 4	→ 🖺 135
	Display language	→ 🖺 135
	Display interval	→ 🖺 135
	Display damping	→ 🖺 135
	Header	→ 🖺 135
	Header text	→ 🖺 135
	Separator	→ 🖺 135
	Backlight	→ 🖺 135

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Format display	A local display is provided.	Select how measured values are shown on the display.	<ul> <li>1 value, max. size</li> <li>1 bargraph + 1 value</li> <li>2 values</li> <li>1 value large + 2 values</li> <li>4 values</li> </ul>	1 value, max. size
Value 1 display	A local display is provided.	Select the measured value that is shown on the local display.	Mass flow Flow velocity Sound velocity Volume flow Density Reference density S&W volume flow GSV flow NSV flow API gravity API slope Signal strength Signal to noise ratio Acceptance rate Turbulence Electronics temperature Temperature Tremperature Totalizer 1 Totalizer 2 Totalizer 3 Current output 1 Current output 3 Profile factor Cross flow factor	Volume flow
0% bargraph value 1	A local display is provided.	Enter 0 % value for bar graph display.	Signed floating-point number	Country-specific
100% bargraph value 1	A local display is provided.	Enter 100 % value for bar graph display.	Signed floating-point number	Depends on country and nominal diameter
Decimal places 1	A measured value is specified in the <b>Value 1 display</b> parameter.	Select the number of decimal places for the display value.	<ul><li> X</li><li> X.X</li><li> X.XX</li><li> X.XXX</li><li> X.XXXX</li></ul>	x.xx
Value 2 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see  Value 1 display  parameter  (→ 🖺 122)	None
Decimal places 2	A measured value is specified in the <b>Value 2 display</b> parameter.	Select the number of decimal places for the display value.	• X • X.X • X.XX • X.XXX • X.XXXX	x.xx
Value 3 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see  Value 1 display parameter (→ 🖺 122)	None
0% bargraph value 3	A selection was made in the Value 3 display parameter.	Enter 0 % value for bar graph display.	Signed floating-point number	Country-specific

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
100% bargraph value 3	A selection was made in the <b>Value 3 display</b> parameter.	Enter 100 % value for bar graph display.	Signed floating-point number	0
Decimal places 3	A measured value is specified in the <b>Value 3 display</b> parameter.	Select the number of decimal places for the display value.	• X • X.X • X.XX • X.XXX • X.XXX	x.xx
Value 4 display	A local display is provided.	Select the measured value that is shown on the local display.	For the picklist, see  Value 1 display  parameter  (→ 🖺 122)	None
Decimal places 4	A measured value is specified in the <b>Value 4 display</b> parameter.	Select the number of decimal places for the display value.	• x • x.x • x.xx • x.xxx • x.xxx	x.xx
Display language	A local display is provided.	Set display language.	<ul> <li>English</li> <li>Deutsch</li> <li>Français</li> <li>Español</li> <li>Italiano</li> <li>Nederlands</li> <li>Portuguesa</li> <li>Polski</li> <li>русский язык (Russian)</li> <li>Svenska</li> <li>Türkçe</li> <li>中文 (Chinese)</li> <li>日本語 (Japanese)</li> <li>한국어 (Korean)</li> <li>tiếng Việt (Vietnamese)</li> <li>čeština (Czech)</li> </ul>	English (alternatively, the ordered language is preset in the device)
Display interval	A local display is provided.	Set time measured values are shown on display if display alternates between values.	1 to 10 s	5 s
Display damping	A local display is provided.	Set display reaction time to fluctuations in the measured value.	0.0 to 999.9 s	0.0 s
Header	A local display is provided.	Select header contents on local display.	<ul><li>Device tag</li><li>Free text</li></ul>	Device tag
Header text	The <b>Free text</b> option is selected in the <b>Header</b> parameter.	Enter display header text.	Max. 12 characters, such as letters, numbers or special characters (e.g. @, %, /)	
Separator	A local display is provided.	Select decimal separator for displaying numerical values.	• . (point) • , (comma)	. (point)
Backlight	One of the following conditions is met:  Order code for "Display; operation", option F "4-line, illum.; touch control"  Order code for "Display; operation", option G "4-line, illum.; touch control +WLAN"	Switch the local display backlight on and off.	<ul><li>Disable</li><li>Enable</li></ul>	Enable

<sup>\*</sup> Visibility depends on order options or device settings

# 10.5.6 WLAN configuration

The **WLAN Settings** submenu guides the user systematically through all the parameters that have to be set for the WLAN configuration.

### Navigation

"Setup" menu  $\rightarrow$  Advanced setup  $\rightarrow$  WLAN settings

► WLAN settings		
	WLAN	→ 🖺 136
	WLAN mode	→ 🖺 136
	SSID name	→ 🖺 136
	Network security	→ 🖺 137
	Security identification	→ 🖺 137
	User name	→ 🖺 137
	WLAN password	→ 🖺 137
	WLAN IP address	→ 🖺 137
	WLAN MAC address	→ 🖺 137
	WLAN passphrase	→ 🖺 137
	Assign SSID name	→ 🖺 137
	SSID name	→ 🗎 137
	Connection state	→ 🖺 137
	Received signal strength	→ 🖺 137

# Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry / User interface	Factory setting
WLAN	-	Switch WLAN on and off.	<ul><li>Disable</li><li>Enable</li></ul>	Enable
WLAN mode	-	Select WLAN mode.	<ul><li>WLAN access point</li><li>WLAN Client</li></ul>	WLAN access point
SSID name	The client is activated.	Enter the user-defined SSID name (max. 32 characters).	-	-

136

Parameter	Prerequisite	Description	Selection / User entry / User interface	Factory setting
Network security	-	Select the security type of the WLAN network.	<ul> <li>Unsecured</li> <li>WPA2-PSK</li> <li>EAP-PEAP with MSCHAPv2*</li> <li>EAP-PEAP MSCHAPv2 no server authentic.*</li> <li>EAP-TLS*</li> </ul>	WPA2-PSK
Security identification	-	Select security settings and download these settings via menu Data management > Security > WLAN.	<ul><li>Trusted issuer certificate</li><li>Device certificate</li><li>Device private key</li></ul>	-
User name	-	Enter user name.	_	-
WLAN password	-	Enter WLAN password.	_	-
WLAN IP address	-	Enter IP address of the WLAN interface of the device.	4 octet: 0 to 255 (in the particular octet)	192.168.1.212
WLAN MAC address	-	Enter MAC address of the WLAN interface of the device.	Unique 12-digit character string comprising letters and numbers	Each measuring device is given an individual address.
WLAN passphrase	The WPA2-PSK option is selected in the Security type parameter.	Enter the network key (8 to 32 characters).  The network key supplied with the device should be changed during commissioning for security reasons.	8 to 32-digit character string comprising numbers, letters and special characters (without spaces)	Serial number of the measuring device (e.g. L100A802000)
Assign SSID name	-	Select which name will be used for SSID: device tag or user-defined name.	<ul><li>Device tag</li><li>User-defined</li></ul>	User-defined
SSID name	<ul> <li>The User-defined option is selected in the Assign SSID name parameter.</li> <li>The WLAN access point option is selected in the WLAN mode parameter.</li> </ul>	Enter the user-defined SSID name (max. 32 characters).  The user-defined SSID name may only be assigned once. If the SSID name is assigned more than once, the devices can interfere with one another.	Max. 32-digit character string comprising numbers, letters and special characters	EH_device designation_last 7 digits of the serial number (e.g. EH_Prosonic_Flow_5 00_A802000)
Connection state	_	Displays the connection status.	<ul><li>Connected</li><li>Not connected</li></ul>	Not connected
Received signal strength	-	Shows the received signal strength.	<ul><li>Low</li><li>Medium</li><li>High</li></ul>	High

<sup>\*</sup> Visibility depends on order options or device settings

# 10.5.7 Configuration management

After commissioning, you can save the current device configurationor restore the previous device configuration. The device configuration is managed via the **Configuration management** parameter.

### Navigation

"Setup" menu  $\rightarrow$  Advanced setup  $\rightarrow$  Configuration backup

► Configuration backup	
Operating time	→ 🖺 138
Last backup	→ 🖺 138
Configuration management	→ 🖺 138
Backup state	→ 🖺 138
Comparison result	→ 🖺 138

### Parameter overview with brief description

Parameter	Description	User interface / Selection	Factory setting
Operating time	Indicates how long the device has been in operation.	Days (d), hours (h), minutes (m) and seconds (s)	-
Last backup	Shows when the last data backup was saved to HistoROM backup.	Days (d), hours (h), minutes (m) and seconds (s)	-
Configuration management	Select action for managing the device data in the HistoROM backup.	<ul> <li>Cancel</li> <li>Execute backup</li> <li>Restore*</li> <li>Compare*</li> <li>Clear backup data</li> </ul>	Cancel
Backup state	Shows the current status of data saving or restoring.	<ul> <li>None</li> <li>Backup in progress</li> <li>Restoring in progress</li> <li>Delete in progress</li> <li>Compare in progress</li> <li>Restoring failed</li> <li>Backup failed</li> </ul>	None
Comparison result	Comparison of current device data with HistoROM backup.	<ul> <li>Settings identical</li> <li>Settings not identical</li> <li>No backup available</li> <li>Backup settings corrupt</li> <li>Check not done</li> <li>Dataset incompatible</li> </ul>	Check not done

Visibility depends on order options or device settings

### Function scope of the "Configuration management" parameter

Options	Description		
Cancel	No action is executed and the user exits the parameter.		
Execute backup	A backup copy of the current device configuration is saved from the HistoROM backup to the memory of the device. The backup copy includes the transmitter data of the device.		
Restore	The last backup copy of the device configuration is restored from the device memory to the device's HistoROM backup. The backup copy includes the transmitter data of the device.		

138

Options	Description
Compare	The device configuration saved in the device memory is compared with the current device configuration of the HistoROM backup.
Clear backup data	The backup copy of the device configuration is deleted from the memory of the device.

HistoROM backup

A HistoROM is a "non-volatile" device memory in the form of an EEPROM.


While this action is in progress, the configuration cannot be edited via the local display and a message on the processing status appears on the display.

### 10.5.8 Using parameters for device administration

The **Administration** submenu systematically guides the user through all the parameters that can be used for device administration purposes.

#### **Navigation**

"Setup" menu → Advanced setup → Administration

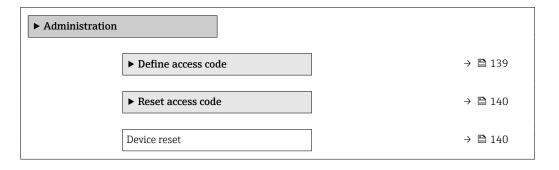


### Using the parameter to define the access code

Complete this wizard to specify an access code for the Maintenance role.

#### **Navigation**

"Setup" menu  $\rightarrow$  Advanced setup  $\rightarrow$  Administration  $\rightarrow$  Define access code

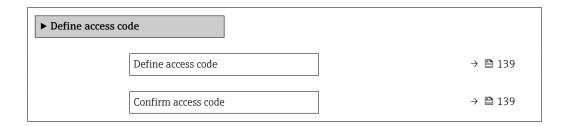


#### Parameter overview with brief description

Parameter	Description	User entry	
Define access code	Specify an access code that is required to obtain the access rights for the Maintenance role.	Max. 16-digit character string comprising numbers, letters and special characters	
Confirm access code	Confirm the access code entered for the Maintenance role.	Max. 16-digit character string comprising numbers, letters and special characters	

#### Using the parameter to reset the access code

#### **Navigation**

"Setup" menu  $\rightarrow$  Advanced setup  $\rightarrow$  Administration  $\rightarrow$  Reset access code

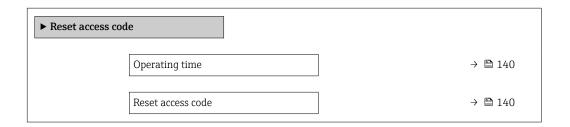

#### Parameter overview with brief description

Parameter	Description	User interface / User entry	Factory setting
Operating time	Indicates how long the device has been in operation.	Days (d), hours (h), minutes (m) and seconds (s)	-
Reset access code	Enter the code provided by Endress+Hauser Technical Support to reset the Maintenance code.	Character string comprising numbers, letters and special characters	0x00
	For a reset code, contact your Endress+Hauser service organization.		
	The reset code can only be entered via:  Web browser  DeviceCare, FieldCare (via CDI-RJ45 service interface)  Fieldbus		

#### Using the parameter to reset the device

#### Navigation

"Setup" menu → Advanced setup → Administration

#### Parameter overview with brief description

Parameter	Description	Selection	Factory setting
Device reset	Reset the device configuration - either entirely or in part - to a defined state.	<ul> <li>Cancel</li> <li>To delivery settings</li> <li>Restart device</li> <li>Restore S-DAT backup *</li> </ul>	Cancel

Visibility depends on order options or device settings

### 10.6 Simulation

Via the **Simulation** submenu, it is possible to simulate various process variables in the process and the device alarm mode and verify downstream signal chains (switching valves or closed-control loops). The simulation can be performed without a real measurement (no flow of medium through the device).

 $\begin{tabular}{ll} \textbf{Navigation} \\ "Diagnostics" menu $\rightarrow$ Simulation \\ \end{tabular}$ 

► Simulation		
	Assign simulation process variable	→ 🖺 142
	Process variable value	→ 🖺 142
	Current input 1 to n simulation	→ 🖺 143
	Value current input 1 to n	→ 🖺 143
	Status input 1 to n simulation	→ 🖺 143
	Input signal level 1 to n	→ 🖺 143
	Current output 1 to n simulation	→ 🗎 142
	Current output value	→ 🗎 142
	Frequency output 1 to n simulation	→ 🗎 142
	Frequency output 1 to n value	→ 🗎 142
	Pulse output simulation 1 to n	→ 🗎 142
	Pulse value 1 to n	→ 🗎 142
	Switch output simulation 1 to n	→ 🖺 142
	Switch state 1 to n	→ 🖺 142
	Relay output 1 to n simulation	→ 🗎 142
	Switch state 1 to n	→ 🗎 142
	Pulse output simulation	→ 🖺 142
	Pulse value	→ 🖺 143
	Device alarm simulation	→ 🖺 143
	Diagnostic event category	→ 🖺 143
	Diagnostic event simulation	→ 🖺 143

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Assign simulation process variable	-	Select a process variable for the simulation process that is activated.	<ul> <li>Off</li> <li>Volume flow</li> <li>Mass flow</li> <li>Flow velocity</li> <li>Sound velocity</li> <li>Temperature</li> <li>Pressure*</li> <li>Density*</li> <li>Reference density*</li> <li>S&amp;W volume flow*</li> <li>GSV flow*</li> <li>NSV flow*</li> <li>API gravity</li> <li>API slope*</li> </ul>	Off
Process variable value	A process variable is selected in the <b>Assign simulation process variable</b> parameter (→ 🖺 142).	Enter the simulation value for the selected process variable.	Depends on the process variable selected	0
Current output 1 to n simulation	-	Switch the simulation of the current output on and off.	Off On	Off
Current output value	In the Current output 1 to n simulation parameter, the On option is selected.	Enter the current value for simulation.	3.59 to 22.5 mA	3.59 mA
Frequency output 1 to n simulation	In the <b>Operating mode</b> parameter, the <b>Frequency</b> option is selected.	Switch the simulation of the frequency output on and off.	Off On	Off
Frequency output 1 to n value	In the <b>Frequency simulation 1 to n</b> parameter, the <b>On</b> option is selected.	Enter the frequency value for the simulation.	0.0 to 12 500.0 Hz	0.0 Hz
Pulse output simulation 1 to n	In the <b>Operating mode</b> parameter, the <b>Pulse</b> option is selected.	Set and switch off the pulse output simulation.  For Fixed value option: Pulse width parameter (→  111) defines the pulse width of the pulses output.	<ul><li>Off</li><li>Fixed value</li><li>Down-counting value</li></ul>	Off
Pulse value 1 to n	In the Pulse output simulation 1 to n parameter, the Down-counting value option is selected.	Enter the number of pulses for simulation.	0 to 65 535	0
Switch output simulation 1 to n	In the <b>Operating mode</b> parameter, the <b>Switch</b> option is selected.	Switch the simulation of the switch output on and off.	• Off • On	Off
Switch state 1 to n	-	Select the status of the status output for the simulation.	<ul><li>Open</li><li>Closed</li></ul>	Open
Relay output 1 to n simulation	-	Switch simulation of the relay output on and off.	Off On	Off
Switch state 1 to n	The <b>On</b> option is selected in the <b>Switch output simulation 1 to n</b> parameter parameter.	Select status of the relay output for the simulation.	<ul><li>Open</li><li>Closed</li></ul>	Open
Pulse output simulation	-	Set and switch off the pulse output simulation.  For Fixed value option: Pulse width parameter defines the pulse width of the pulses output.	<ul><li>Off</li><li>Fixed value</li><li>Down-counting value</li></ul>	Off

Parameter	Prerequisite	Description	Selection / User entry	Factory setting
Pulse value	In the <b>Pulse output</b> simulation parameter, the <b>Down-counting value</b> option is selected.	Set and switch off the pulse output simulation.	0 to 65 535	0
Device alarm simulation	-	Switch the device alarm on and off.	Off On	Off
Diagnostic event category	-	Select a diagnostic event category.	<ul><li>Sensor</li><li>Electronics</li><li>Configuration</li><li>Process</li></ul>	Process
Diagnostic event simulation	-	Select a diagnostic event to simulate this event.	Off     Diagnostic event picklist (depends on the category selected)	Off
Current input 1 to n simulation	-	Switch simulation of the current input on and off.	Off On	Off
Value current input 1 to n	In the Current input 1 to n simulation parameter, the On option is selected.	Enter the current value for simulation.	0 to 22.5 mA	0 mA
Status input 1 to n simulation	-	Switch simulation of the status input on and off.	Off On	Off
Input signal level 1 to n	In the <b>Status input simulation</b> parameter, the <b>On</b> option is selected.	Select the signal level for the simulation of the status input.	■ High ■ Low	High

<sup>\*</sup> Visibility depends on order options or device settings

# 10.7 Protecting settings from unauthorized access

The following write protection options exist in order to protect the configuration of the measuring device from unintentional modification:

- Protect access to parameters via access code → 143
- Protect access to measuring device via write protection switch  $\rightarrow$  🖺 145

#### 10.7.1 Write protection via access code

The effects of the user-specific access code are as follows:

- Via local operation, the parameters for the measuring device configuration are write-protected and their values can no longer be changed.
- Device access is protected via the Web browser, as are the parameters for the measuring device configuration.
- Device access is protected via FieldCare or DeviceCare (via CDI-RJ45 service interface), as are the parameters for the measuring device configuration.


#### Defining the access code via the local display

- 1. Navigate to the **Define access code** parameter ( $\rightarrow \triangleq 139$ ).
- 2. Maximum of 16-digit character string comprising numbers, letters and special characters as the access code.

- 3. Enter the access code again in the **Confirm access code** parameter ( $\rightarrow \implies 139$ ) to confirm.
  - ► The 🗈 symbol appears in front of all write-protected parameters.
- - If the access code is lost: Resetting the access code  $\rightarrow \triangleq 144$ .
  - The user role with which the user is currently logged in is displayed in Access status parameter.
    - Navigation path: Operation → Access status
    - User roles and their access rights  $\rightarrow \triangleq 75$
- The device automatically locks the write-protected parameters again if a key is not pressed for 10 minutes in the navigation and editing view.
- The device locks the write-protected parameters automatically after 60 s if the user skips back to the operational display mode from the navigation and editing view.

#### Parameters which can always be modified via the local display

Certain parameters that do not affect the measurement are excepted from parameter write protection via the local display. Despite the user-specific access code, they can always be modified, even if the other parameters are locked.

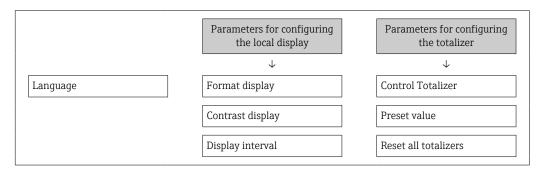

#### Defining the access code via the web browser

- 1. Navigate to the **Define access code** parameter ( $\rightarrow \implies 139$ ).
- 2. Define a 16-digit (max.) numeric code as the access code.
- 3. Enter the access code again in the **Confirm access code** parameter ( $\rightarrow \implies 139$ ) to confirm.
  - ► The web browser switches to the login page.
- $\blacksquare$  Disabling parameter write protection via access code  $\Rightarrow \blacksquare$  75.
  - If the access code is lost: Resetting the access code  $\rightarrow = 144$ .
  - The Access status parameter shows which user role the user is currently logged in with.
    - Navigation path: Operation → Access status
    - User roles and their access rights  $\rightarrow \triangleq 75$

If no action is performed for 10 minutes, the web browser automatically returns to the login page.

#### Resetting the access code

If you misplace the user-specific access code, it is possible to reset the code to the factory setting. A reset code must be entered for this purpose. The user-specific access code can then be defined again afterwards.

Via Web browser, FieldCare, DeviceCare (via CDI-RJ45 service interface), fieldbus

- You can only obtain a reset code from your local Endress+Hauser service organization. The code must be calculated explicitly for every device.
- 1. Note down the serial number of the device.
- 2. Read off the **Operating time** parameter.
- 3. Contact the local Endress+Hauser service organization and tell them the serial number and the operating time.
  - ► Get the calculated reset code.
- 4. Enter the reset code in the **Reset access code** parameter ( $\Rightarrow \triangleq 140$ ).
  - The access code has been reset to the factory setting **0000**. It can be redefined  $\rightarrow \boxminus 143$ .
- For IT security reasons, the calculated reset code is only valid for 96 hours from the specified operating time and for the specific serial number. If you cannot return to the device within 96 hours, you should either increase the operating time you read out by a few days or switch off the device.


### 10.7.2 Write protection via write protection switch

Unlike parameter write protection via a user-specific access code, this allows the user to lock write access to the entire operating menu - apart from the **"Contrast display"** parameter.

The parameter values are now read only and cannot be edited any more (exception "Contrast display" parameter):

- Via local display
- Via MODBUS RS485 protocol


### Proline 500

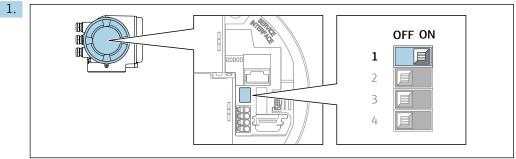

A0029630

Setting the write protection (WP) switch on the main electronics module to the **ON** position enables hardware write protection.

In the **Locking status** parameter, the **Hardware locked** option is displayed  $\rightarrow \stackrel{\triangle}{=} 147$ . In addition, on the local display the  $\stackrel{\triangle}{=}$  symbol appears in front of the parameters in the header of the operational display and in the navigation view.

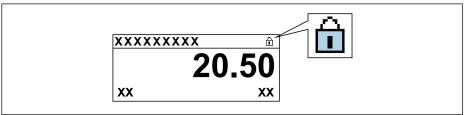

A002942

- 2. Setting the write protection (WP) switch on the main electronics module to the **OFF** position (factory setting) disables hardware write protection.

### 11 **Operation**

### 11.1 Reading off the device locking status

Device active write protection: Locking status parameter

Operation → Locking status

Function scope of the "Locking status" parameter

Options	Description
None	The access authorization displayed in the <b>Access status</b> parameter applies → 🖺 75. Only appears on local display.
Hardware locked	The DIP switch for hardware locking is activated on the PCB board. This locks write access to the parameters (e.g. via local display or operating tool) $\rightarrow$ $\  \   \  \   \   \   \   \   \$
Temporarily locked	Write access to the parameters is temporarily locked on account of internal processes running in the device (e.g. data upload/download, reset, etc.). Once the internal processing has been completed, the parameters can be changed once again.

### Adjusting the operating language 11.2



Petailed information:

- To configure the operating language → 🗎 93
- For information on the operating languages supported by the measuring device → 🖺 207

### 11.3 Configuring the display

Detailed information:


- On the advanced settings for the local display  $\rightarrow \implies 133$

### 11.4 Reading off measured values

With the **Measured values** submenu, it is possible to read all the measured values.

### **Navigation**

"Diagnostics" menu → Measured values

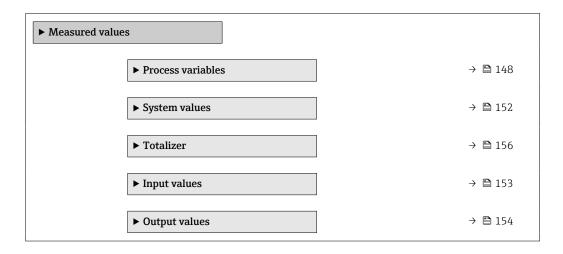


### 11.4.1 Process variables

The **Process variables** submenu contains all the parameters needed to display the current measured values for each process variable.

### Navigation

"Diagnostics" menu  $\rightarrow$  Measured values  $\rightarrow$  Process variables

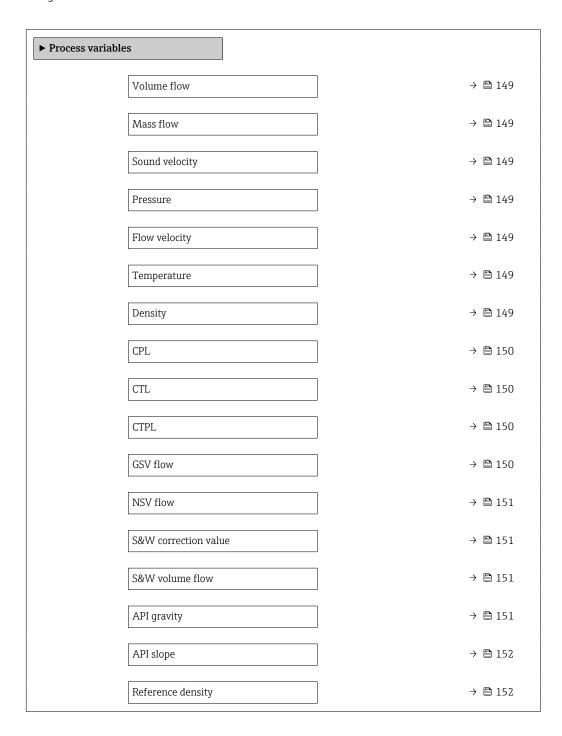

Parameter	Prerequisite	Description	User interface	Factory setting
Volume flow	-	Displays the volume flow that is currently measured.  Dependency The unit is taken from:  Volume flow unit parameter (→ 🖺 96)	Signed floating-point number	-
Mass flow	_	Displays the mass flow that is currently calculated.  Dependency The unit is taken from the Mass flow unit parameter (→   96).	Signed floating-point number	_
Sound velocity	-	Displays the sound velocity that is currently measured.  Dependency The unit is taken from the Velocity unit parameter.	Signed floating-point number	-
Pressure	For the following order code:  "Application package", option EJ "Petroleum"  The API referenced correction option is selected in the Petroleum mode parameter.  The software options currently enabled are displayed in the Software option overview parameter.	Shows depending on the setting the external, entered or measured pressure value.	Signed floating-point number	
Flow velocity	-	Displays the average flow velocity that is currently calculated.  Dependency The unit is taken from:  Velocity unit parameter	Signed floating-point number	-
Temperature	For the following order code:  "Application package", option EJ "Petroleum"  The API referenced correction option is selected in the Petroleum mode parameter.  The software options currently enabled are displayed in the Software option overview parameter.	Displays the temperature that is currently measured.  Dependency The unit is taken from: Temperature unit parameter	Signed floating-point number	_
Density	-	Displays the density that is currently calculated.  Dependency The unit is taken from: Density unit parameter	Signed floating-point number	-

Parameter	Prerequisite	Description	User interface	Factory setting
CPL	For the following order code:  "Application package", option EJ "Petroleum"  "Application package", option EQ "Petroleum & Product identification"  The API referenced correction option is selected in Petroleum mode parameter.  The software options currently enabled are displayed in the Software option overview parameter.	Displays the calibration factor which represents the effect of pressure on the fluid. This is used to convert the measured volume flow and the measured density to values at reference pressure.	Positive floating- point number	
CTL	For the following order code:  "Application package", option EJ "Petroleum"  "Application package", option EQ "Petroleum & Product identification"  The API referenced correction option is selected in Petroleum mode parameter.  The software options currently enabled are displayed in the Software option overview parameter.	Displays the calibration factor which represents the effect of temperature on the fluid. This is used to convert the measured volume flow and the measured density to values at reference temperature.	Positive floating- point number	
CTPL	For the following order code:  "Application package", option EJ "Petroleum"  "Application package", option EQ "Petroleum & Product identification"  The API referenced correction option is selected in Petroleum mode parameter.  The software options currently enabled are displayed in the Software option overview parameter.	Displays the combined calibration factor which represents the effect of temperature and pressure on the fluid This is used to convert the measured volume flow and the measured density to values at reference temperature and reference pressure.	Positive floating- point number	
GSV flow	For the following order code:  "Application package", option EJ "Petroleum"  "Application package", option EQ "Petroleum & Product identification"  The API referenced correction option is selected in Petroleum mode parameter.  The software options currently enabled are displayed in the Software option overview parameter.	Displays the measured total volume flow, corrected to the reference temperature and the reference pressure.  Dependency The unit is taken from: Corrected volume flow unit parameter	Signed floating-point number	

Parameter	Prerequisite	Description	User interface	Factory setting
NSV flow	For the following order code:  "Application package", option EJ "Petroleum"  "Application package", option EQ "Petroleum & Product identification"  The API referenced correction option is selected in Petroleum mode parameter.  The software options currently enabled are displayed in the Software option overview parameter.	Displays the net volume flow which is calculated from the measured total volume flow minus the value for sediment & water and minus the shrinkage.  Dependency The unit is taken from: Corrected volume flow unit parameter	Signed floating-point number	_
S&W correction value	For the following order code:  "Application package", option EJ "Petroleum"  "Application package", option EQ "Petroleum & Product identification"  The External value option or Current input 1n option is selected in the S&W input mode parameter.  The software options currently enabled are displayed in the Software option overview parameter.	Shows the correction value for sediment and water.	Positive floating- point number	
S&W volume flow	For the following order code:  "Application package", option EJ "Petroleum"  "Application package", option EQ "Petroleum & Product identification"  The API referenced correction option is selected in Petroleum mode parameter.  The software options currently enabled are displayed in the Software option overview parameter.	Displays the S&W volume flow which is calculated from the measured total volume flow minus the net volume flow.  Dependency The unit is taken from:  Volume flow unit parameter	Signed floating-point number	
API gravity	For the following order code:  "Application package", option EJ "Petroleum"  "Application package", option EQ "Petroleum & Product identification"  The API referenced correction option is selected in Petroleum mode parameter.  The software options currently enabled are displayed in the Software option overview parameter.	Displays the reference density in API degrees (specified depending on the option, or read in by an external device).	0.0 to 100.0 °API	-


Parameter	Prerequisite	Description	User interface	Factory setting
API slope	For the following order code:  "Application package", option EJ "Petroleum"  "Application package", option EQ "Petroleum & Product identification"  The API referenced correction option is selected in Petroleum mode parameter.  The software options currently enabled are displayed in the Software option overview parameter.	Shows the API slope (change of API over time). Can be used e.g. to detect different products.	-10 to 100 °API/s	-
Reference density	For the following order code:  "Application package", option EJ "Petroleum"  "Application package", option EQ "Petroleum & Product identification"  The API referenced correction option is selected in Petroleum mode parameter.  The software options currently enabled are displayed in the Software option overview parameter.	Shows the reference density at the API reference conditions specified for temperature and pressure.	0 to 30 kg/Nm <sup>3</sup>	_

# 11.4.2 System values

The **System values** submenu contains all the parameters needed to display the current measured values for every system value.

### Navigation

"Diagnostics" menu → Measured values → System values

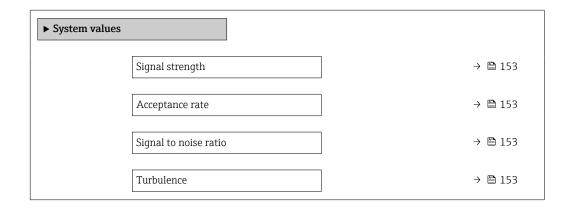

152


Parameter	Description	User interface
Signal strength	Displays the current signal strength (0 to 100 dB).  Assessment of the signal strength: <ul> <li>&lt; 10 dB: bad</li> <li>&gt; 90 dB: very good</li> </ul>	Signed floating-point number
Acceptance rate	Displays the ratio of the number of ultrasonic signals accepted for flow calculation and the total number of ultrasonic signals emitted.	0 to 100 %
Signal to noise ratio	Displays the current signal to noise ratio (0 to 100 dB).  Assessment of the signal-to-noise ratio:  < 20 dB: bad  > 50 dB: very good	Signed floating-point number
Turbulence	Displays the current turbulence.	Signed floating-point number

### 11.4.3 "Input values" submenu

The **Input values** submenu quides you systematically to the individual input values.

### **Navigation**

"Diagnostics" menu  $\rightarrow$  Measured values  $\rightarrow$  Input values

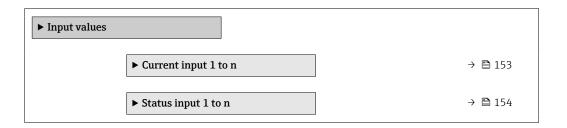


### Input values of current input

The Current input 1 to n submenu contains all the parameters needed to display the current measured values for every current input.

### Navigation

"Diagnostics" menu  $\rightarrow$  Measured values  $\rightarrow$  Input values  $\rightarrow$  Current input 1 to n

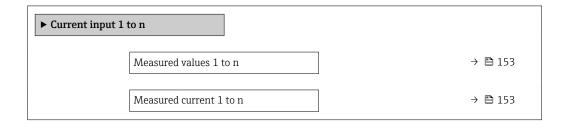

### Parameter overview with brief description

Parameter	Description	User interface
Measured values 1 to n	Displays the current input value.	Signed floating-point number
	Dependency  The unit is taken from the <b>Pressure unit</b> parameter	
Measured current 1 to n	Displays the current value of the current input.	0 to 22.5 mA

### Input values of status input

The **Status input 1 to n** submenu contains all the parameters needed to display the current measured values for every status input.

### Navigation

"Diagnostics" menu  $\rightarrow$  Measured values  $\rightarrow$  Input values  $\rightarrow$  Status input 1 to n



### Parameter overview with brief description


Parameter	Description	User interface
Value status input	Shows the current input signal level.	High Low

### 11.4.4 Output values

The **Output values** submenu contains all the parameters needed to display the current measured values for every output.

### **Navigation**

"Diagnostics" menu → Measured values → Output values

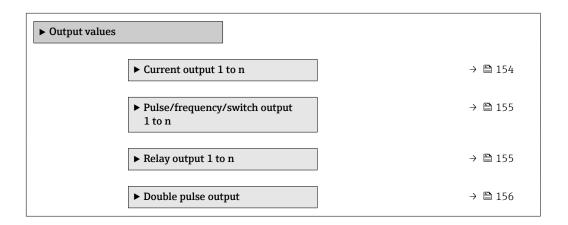


### Output values of current output

The **Value current output** submenu contains all the parameters needed to display the current measured values for every current output.

### Navigation

"Diagnostics" menu  $\rightarrow$  Measured values  $\rightarrow$  Output values  $\rightarrow$  Value current output 1 to n

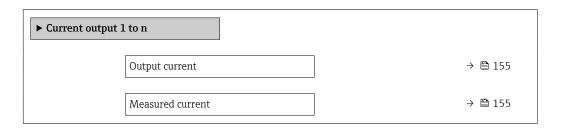


Parameter	Description	User interface
Output current	Displays the current value currently calculated for the current output.	3.59 to 22.5 mA
Measured current	Displays the current value currently measured for the current output.	0 to 30 mA

### Output values for pulse/frequency/switch output

The **Pulse/frequency/switch output 1 to n** submenu contains all the parameters needed to display the current measured values for every pulse/frequency/switch output.

### Navigation

"Diagnostics" menu  $\rightarrow$  Measured values  $\rightarrow$  Output values  $\rightarrow$  Pulse/frequency/switch output 1 to n

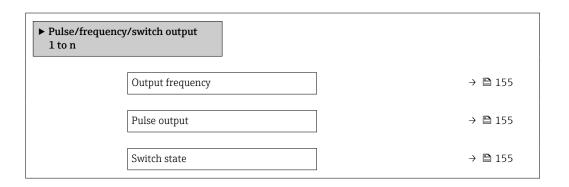

### Parameter overview with brief description


Parameter	Prerequisite	Description	User interface
Output frequency	In the <b>Operating mode</b> parameter, the <b>Frequency</b> option is selected.	Displays the value currently measured for the frequency output.	0.0 to 12 500.0 Hz
Pulse output	The <b>Pulse</b> option is selected in the <b>Operating mode</b> parameter parameter.	Displays the pulse frequency currently output.	Positive floating-point number
Switch state	The <b>Switch</b> option is selected in the <b>Operating mode</b> parameter.	Displays the current switch output status.	■ Open ■ Closed

### Output values for relay output

The **Relay output 1 to n** submenu contains all the parameters needed to display the current measured values for every relay output.

### Navigation

"Diagnostics" menu  $\rightarrow$  Measured values  $\rightarrow$  Output values  $\rightarrow$  Relay output 1 to n

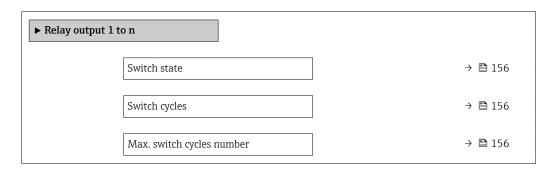

Parameter	Description	User interface
Switch state	Indicates the current switch state of the output.	<ul><li>Open</li><li>Closed</li></ul>
Switch cycles	Shows number of all performed switch cycles.	Positive integer
Max. switch cycles number	Shows the maximal number of guaranteed switch cycles.	Positive integer

### Output values for double pulse output

The **Double pulse output** submenu contains all the parameters needed to display the current measured values for every double pulse output.

### **Navigation**

"Diagnostics" menu  $\rightarrow$  Measured values  $\rightarrow$  Output values  $\rightarrow$  Double pulse output



### Parameter overview with brief description


Parameter	Description	User interface
Pulse output	Shows the currently output pulse frequency.	Positive floating-point number

### 11.4.5 "Totalizer" submenu

The **Totalizer** submenu contains all the parameters needed to display the current measured values for every totalizer.

### **Navigation**

"Diagnostics" menu  $\rightarrow$  Measured values  $\rightarrow$  Totalizer

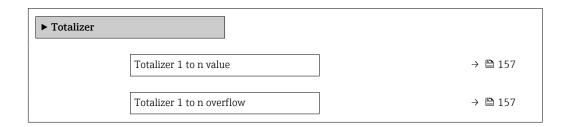

Parameter	Prerequisite	Description	User interface
Totalizer 1 to n value	One of the following options is selected in the <b>Assign process variable</b> parameter (→ 🖺 131) of the <b>Totalizer</b> 1 to n submenu:  Volume flow  Mass flow	Displays the current totalizer counter value.	Signed floating-point number
Totalizer 1 to n overflow	One of the following options is selected in the <b>Assign process variable</b> parameter (→ 🖺 131) of the <b>Totalizer</b> 1 to n submenu:  Volume flow  Mass flow	Displays the current totalizer overflow.	Integer with sign

# 11.5 Adapting the measuring device to the process conditions

The following are available for this purpose:

- Basic settings using the **Setup** menu (→ 🗎 93)
- Advanced settings using the Advanced setup submenu (→ 🗎 125)


# 11.6 Performing a totalizer reset

The totalizers are reset in the **Operation** submenu:

- Control Totalizer
- Reset all totalizers

### Navigation

"Operation" menu → Totalizer handling

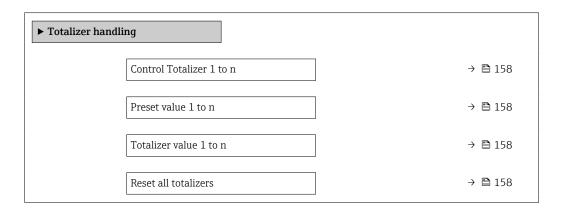

Parameter	Prerequisite	Description	Selection / User entry / User interface	Factory setting
Control Totalizer 1 to n	A process variable is selected in the <b>Assign process variable</b> parameter (→ 🖺 131) of the <b>Totalizer 1 to n</b> submenu.	Control totalizer value.	<ul> <li>Totalize</li> <li>Reset + hold</li> <li>Preset + hold</li> <li>Reset + totalize</li> <li>Preset + totalize</li> <li>Hold</li> </ul>	Totalize
Preset value 1 to n	A process variable is selected in the <b>Assign process variable</b> parameter ( $\rightarrow \bigcirc 131$ ) of the <b>Totalizer 1 to n</b> submenu.	Specify start value for totalizer.  Dependency  The unit of the selected process variable is defined in the Unit totalizer parameter (→   132) for the totalizer.	Signed floating-point number	Depends on country:  • 0 m³  • 0 ft³
Totalizer value	One of the following options is selected in the Assign process variable parameter (→ 🖺 131) of the Totalizer 1 to n submenu:  Volume flow Mass flow	Displays the current totalizer counter value.	Signed floating-point number	-
Reset all totalizers	-	Reset all totalizers to 0 and start.	<ul><li>Cancel</li><li>Reset + totalize</li></ul>	Cancel

# 11.6.1 Function scope of "Control Totalizer" parameter

Options	Description
Totalize	The totalizer is started or continues running.
Reset + hold	The totaling process is stopped and the totalizer is reset to 0.
Preset + hold <sup>1)</sup>	The totaling process is stopped and the totalizer is set to its defined start value from the <b>Preset value</b> parameter.
Reset + totalize	The totalizer is reset to 0 and the totaling process is restarted.
Preset + totalize 1)	The totalizer is set to the defined start value in the <b>Preset value</b> parameter and the totaling process is restarted.
Hold	Totalizing is stopped.

1) Visible depending on the order options or device settings

# 11.6.2 Function range of "Reset all totalizers" parameter

Options	Description
Cancel	No action is executed and the user exits the parameter.
Reset + totalize	Resets all totalizers to 0 and restarts the totaling process. This deletes all the previously aggregated flow values.

### Displaying the measured value history 11.7


The **Extended HistoROM** application package must be enabled in the device (order option) for the Data logging submenu to appear. This contains all the parameters for the measured value history.



Pata logging is also available via:

### Function range

- A total of 1000 measured values can be stored
- 4 logging channels
- Adjustable logging interval for data logging
- Measured value trend for each logging channel displayed in the form of a chart

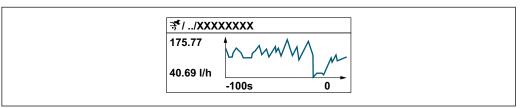

- x-axis: depending on the number of channels selected displays 250 to 1000 measured values of a process variable.
- y-axis: displays the approximate measured value span and constantly adapts this to the ongoing measurement.
- If the length of the logging interval or the assignment of the process variables to the channels is changed, the content of the data logging is deleted.

"Diagnostics" menu → Data logging

► Data loggi	ng	
	Assign channel 1	→ 🖺 160
	Assign channel 2	→ 🖺 160
	Assign channel 3	→ 🖺 160
	Assign channel 4	→ 🖺 160
	Logging interval	→ 🖺 161
	Clear logging data	→ 🖺 161
	Data logging	→ 🖺 161
	Logging delay	→ 🖺 161
	Data logging control	→ 🖺 161

# Parameter overview with brief description

Parameter	Prerequisite	Description	Selection / User entry / User interface	Factory setting
Assign channel 1	The Extended HistoROM application package is available.	Assign process variable to logging channel.	• Off • Volume flow • Mass flow • Flow velocity • Sound velocity • Temperature* • Pressure • Density • Current output 2* • Current output 3* • Reference density • S&W volume flow • GSV flow* • NSV flow* • API gravity • API slope • Signal strength • Signal to noise ratio* • Acceptance rate • Turbulence* • Electronics temperature • Current output 1 • Profile factor* • Cross flow factor	Off
Assign channel 2	The Extended HistoROM application package is available.  The software options currently enabled are displayed in the Software option overview parameter.	Assign a process variable to logging channel.	For the picklist, see  Assign channel 1 parameter (→ 🖺 160)	Off
Assign channel 3	The Extended HistoROM application package is available.  The software options currently enabled are displayed in the Software option overview parameter.	Assign a process variable to logging channel.	For the picklist, see Assign channel 1 parameter (→ 🖺 160)	Off
Assign channel 4	The Extended HistoROM application package is available.  The software options currently enabled are displayed in the Software option overview parameter.	Assign a process variable to logging channel.	For the picklist, see  Assign channel 1 parameter (→   160)	Off

160

Parameter	Prerequisite	Description	Selection / User entry / User interface	Factory setting
Logging interval	The <b>Extended HistoROM</b> application package is available.	Define the logging interval for data logging. This value defines the time interval between the individual data points in the memory.	0.1 to 3 600.0 s	1.0 s
Clear logging data	The <b>Extended HistoROM</b> application package is available.	Clear the entire logging data.	Cancel Clear data	Cancel
Data logging	-	Select the type of data logging.	<ul><li>Overwriting</li><li>Not overwriting</li></ul>	Overwriting
Logging delay	In the <b>Data logging</b> parameter, the <b>Not overwriting</b> option is selected.	Enter the time delay for measured value logging.	0 to 999 h	0 h
Data logging control	In the <b>Data logging</b> parameter, the <b>Not overwriting</b> option is selected.	Start and stop measured value logging.	<ul><li>None</li><li>Delete + start</li><li>Stop</li></ul>	None
Data logging status	In the <b>Data logging</b> parameter, the <b>Not overwriting</b> option is selected.	Displays the measured value logging status.	<ul><li>Done</li><li>Delay active</li><li>Active</li><li>Stopped</li></ul>	Done
Entire logging duration	In the <b>Data logging</b> parameter, the <b>Not overwriting</b> option is selected.	Displays the total logging duration.	Positive floating- point number	0 s

<sup>\*</sup> Visibility depends on order options or device settings

# 12 Diagnosis and troubleshooting

# 12.1 General troubleshooting

### For local display

Error	Possible causes	Remedial action
Local display is dark, but signal output is within the valid range	The cable of the display module is not plugged in correctly.	Insert the plug correctly into the main electronics module and display module.
Local display dark and no output signals	Supply voltage does not match the voltage specified on the nameplate.	Apply the correct supply voltage $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $
Local display dark and no output signals	Supply voltage has incorrect polarity.	Reverse polarity of supply voltage.
Local display dark and no output signals	No contact between connecting cables and terminals.	Ensure electrical contact between the cable and the terminal.
Local display dark and no output signals	<ul> <li>Terminals are not plugged into the I/O electronics module correctly.</li> <li>Terminals are not plugged into the main electronics module correctly.</li> </ul>	Check terminals.
Local display dark and no output signals	<ul><li>I/O electronics module is defective.</li><li>Main electronics module is defective.</li></ul>	Order spare part → 🗎 185.
Local display dark and no output signals	The connector between the main electronics module and display module is not plugged in correctly.	Check the connection and correct if necessary.
Local display cannot be read, but signal output is within the valid range	Display is set too bright or too dark.	■ Set the display brighter by simultaneously pressing
Local display is dark, but signal output is within the valid range	Display module is defective.	Order spare part → 🖺 185.
Backlighting of local display is red	Diagnostic event with "Alarm" diagnostic behavior has occurred.	Take remedial measures → 🖺 172
Text on local display appears in a language that cannot be understood.	The selected operating language cannot be understood.	1. Press □ + □ for 2 s ("home position"). 2. Press □. 3. Configure the required language in the Display language parameter (→ □ 135).
Message on local display: "Communication Error" "Check Electronics"	Communication between the display module and the electronics is interrupted.	<ul> <li>Check the cable and the connector between the main electronics module and display module.</li> <li>Order spare part → ■ 185.</li> </ul>

### For output signals

Error	Possible causes	Remedial action
Signal output outside the valid range	Main electronics module is defective.	Order spare part → 🖺 185.
Device shows correct value on local display, but signal output is incorrect, though in the valid range.	Parameter configuration error	Check and adjust parameter configuration.
Device measures incorrectly.	Configuration error or device is operated outside the application.	Check and correct parameter configuration.     Observe limit values specified in the "Technical Data".  "Technical Data".

### For access

Fault	Possible causes	Remedial action
Write access to parameters is not possible.	Hardware write protection is enabled.	Set the write protection switch on the main electronics module to the <b>OFF</b> position → 🗎 145.
Write access to parameters is not possible.	Current user role has limited access authorization.	<ol> <li>Check user role → □ 75.</li> <li>Enter correct customer-specific access code → □ 75.</li> </ol>
Connection via Modbus RS485 is not possible.	Modbus RS485 bus cable is connected incorrectly.	Check the terminal assignment $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $
Connection via Modbus RS485 is not possible.	Modbus RS485 cable is incorrectly terminated.	Check the terminating resistor $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $
Connection via Modbus RS485 is not possible.	Settings for the communication interface are incorrect.	Check the Modbus RS485 configuration  → 🖺 97.
Unable to connect to the web server.	Web server is disabled.	Using the "FieldCare" or "DeviceCare" operating tool, check whether the web server of the measuring device is enabled, and enable it if necessary → 🖺 82.
	The Ethernet interface on the PC is incorrectly configured.	<ul> <li>Check the properties of the Internet protocol (TCP/IP)→ ≅ 78.</li> <li>Check the network settings with the IT manager.</li> </ul>
Unable to connect to the web server.	The IP address on the PC is incorrectly configured.	Check the IP address: 192.168.1.212 → 🗎 78
Unable to connect to the web server.	WLAN access data are incorrect.	<ul> <li>Check WLAN network status.</li> <li>Log on to the device again using WLAN access data.</li> <li>Check that WLAN is enabled on the measuring device and operating unit → ≅ 78.</li> </ul>
	WLAN communication is disabled.	-
Unable to connect to web server, FieldCare or DeviceCare.	WLAN network is not available.	<ul> <li>Check if WLAN reception is present: LED on display module is lit blue.</li> <li>Check if WLAN connection is enabled: LED on display module flashes blue.</li> <li>Switch on instrument function.</li> </ul>
Network connection not present or unstable	WLAN network is weak.	<ul> <li>Operating unit outside reception range: Check network status on operating unit.</li> <li>To improve network performance, use an external WLAN antenna.</li> </ul>
	Parallel WLAN and Ethernet communication	<ul> <li>Check network settings.</li> <li>Temporarily enable only the WLAN as an interface.</li> </ul>
Web browser frozen and operation no longer possible	Data transfer is active.	Wait until data transfer or current action is finished.
	Connection lost	<ul> <li>Check cable connection and power supply.</li> <li>Refresh the web browser and restart if necessary.</li> </ul>
Display of web browser content is difficult to read or incomplete.	Web browser version used is not optimal.	<ul> <li>Use correct web browser version → ≅ 77.</li> <li>Empty the web browser cache.</li> <li>Restart the web browser.</li> </ul>
	Unsuitable view settings.	Change the font size/display ratio of the web browser.
Incomplete or no display of content in the web browser	<ul><li>JavaScript is not enabled.</li><li>JavaScript cannot be enabled.</li></ul>	<ul> <li>Enable JavaScript.</li> <li>Enter http://XXX.XXX.X.X.XX/servlet/basic.html as the IP address.</li> </ul>


Fault	Possible causes	Remedial action
Operation with FieldCare or DeviceCare via service interface CDI-RJ45 (port 8000) is not possible.	Firewall of the PC or network is blocking communication.	Depending on the settings of the firewall used on the PC or in the network, the firewall must be adapted or disabled to allow FieldCare/ DeviceCare access.
Flashing the firmware with FieldCare or DeviceCare via service interface CDI-RJ45 (port 8000 or TFTP ports) is not possible.	Firewall of the PC or network is blocking communication.	Depending on the settings of the firewall used on the PC or in the network, the firewall must be adapted or disabled to allow FieldCare/ DeviceCare access.

### 12.2 Diagnostic information via LEDs

#### 12.2.1 Transmitter

### Proline 500

Different LEDs in the transmitter provide information on the device status.

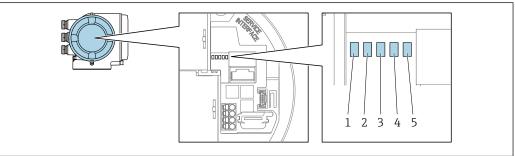

- Supply voltage Device status
- 2
- Not used
- CommunicationService interface (CDI) active


LED		Color	Meaning
1	Supply voltage	Off	Supply voltage is off or too low.
		Green	Supply voltage is ok.
2	Device status (normal	Off	Firmware error
	operation)	Green	Device status is ok.
		Flashing green	Device is not configured.
		Red	A diagnostic event with "Alarm" diagnostic behavior has occurred.
		Flashing red	A diagnostic event with "Warning" diagnostic behavior has occurred.
		Flashing red/green	The device restarts.
2	Device status (during	Flashes red slowly	If > 30 seconds: problem with the boot loader.
	start-up)	Flashes red quickly	If > 30 seconds: compatibility problem when reading the firmware.
3	Not used	_	-
4	Communication	Off	Communication not active.
		White	Communication active.
5	Service interface (CDI)	Off	Not connected or no connection established.

ED Color A		Meaning	
	Yellow	Connected and connection established.	
	Flashing yellow	Service interface active.	

# 12.3 Diagnostic information on local display

### 12.3.1 Diagnostic message

Faults detected by the self-monitoring system of the measuring device are displayed as a diagnostic message in alternation with the operational display.

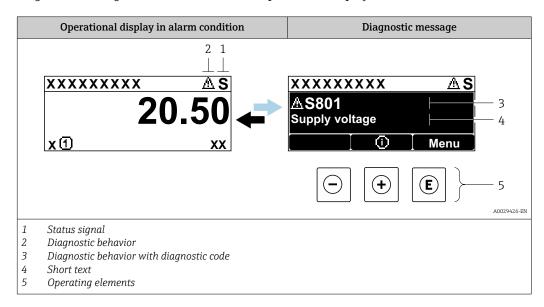

If two or more diagnostic events are pending simultaneously, only the message of the diagnostic event with the highest priority is shown.

- Other diagnostic events that have occurred can be displayed in the **Diagnostics** menu:

  - Via submenus  $\rightarrow$  🗎 178

### Status signals

The status signals provide information on the state and reliability of the device by categorizing the cause of the diagnostic information (diagnostic event).

The status signals are categorized according to VDI/VDE 2650 and NAMUR Recommendation NE 107: F = Failure, C = Function Check, S = Out of Specification, M = Maintenance Required


Symbol	Meaning
F	Failure A device error has occurred. The measured value is no longer valid.
С	<b>Function check</b> The device is in service mode (e.g. during a simulation).
S	Out of specification The device is being operated: Outside its technical specification limits (e.g. outside the process temperature range)
М	Maintenance required Maintenance is required. The measured value remains valid.

### Diagnostic behavior

Symbol	Meaning
*	<ul> <li>Alarm</li> <li>Measurement is interrupted.</li> <li>Signal outputs and totalizers assume the defined alarm condition.</li> <li>A diagnostic message is generated.</li> </ul>
Δ	<ul> <li>Warning</li> <li>Measurement is resumed.</li> <li>The signal outputs and totalizers are not affected.</li> <li>A diagnostic message is generated.</li> </ul>

### Diagnostic information


The fault can be identified using the diagnostic information. The short text helps you by providing information about the fault. In addition, the corresponding symbol for the diagnostic behavior is displayed in front of the diagnostic information on the local display.

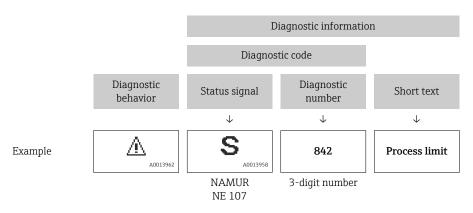

### Operating elements

Operating key	Meaning
	Plus key
(+)	In menu, submenu Opens the message about the remedial measures.
	Enter key
E	In menu, submenu Opens the operating menu.

### 12.3.2 Calling up remedial measures

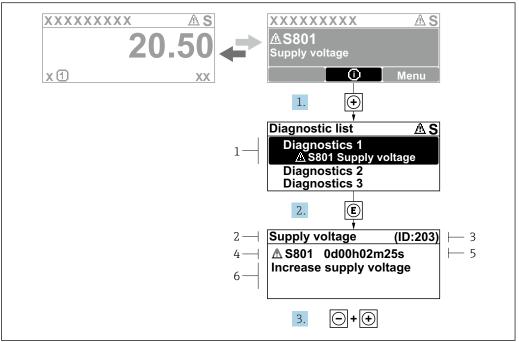

A0029431-EN

- 66 Message for remedial measures
- 1 Diagnostic information
- 2 Short text
- 3 Service ID
- 4 Diagnostic behavior with diagnostic code
- 5 Operation time when error occurred
- 6 Remedial measures
- 1. The user is in the diagnostic message.

Press ± (① symbol).

- The **Diagnostic list** submenu opens.
- 2. Select the desired diagnostic event with  $\pm$  or  $\Box$  and press  $\Box$ .
  - └ The message about the remedial measures opens.
- 3. Press  $\Box$  +  $\pm$  simultaneously.
  - ► The message about the remedial measures closes.


The user is in the **Diagnostics** menu at an entry for a diagnostics event, e.g. in the **Diagnostic list** submenu or **Previous diagnostics** parameter.

- 1. Press E.
  - ► The message for the remedial measures for the selected diagnostic event opens.
- 2. Press  $\Box$  +  $\pm$  simultaneously.
  - ► The message for the remedial measures closes.

# 12.4 Diagnostic information in the web browser

### 12.4.1 Diagnostic options

Any faults detected by the measuring device are displayed in the Web browser on the home page once the user has logged on.

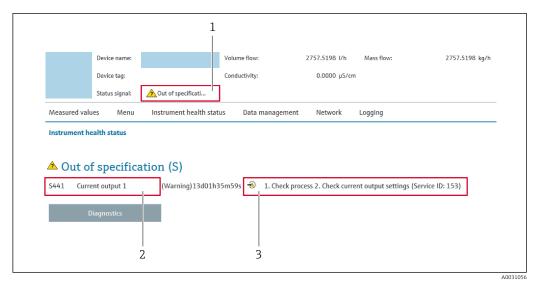

- 1 Status area with status signal
- 2 Diagnostic information
- 3 Remedial measures with service ID
- In addition, diagnostic events which have occurred can be shown in the **Diagnostics** menu:

  - Via submenu → 🖺 178

### Status signals

The status signals provide information on the state and reliability of the device by categorizing the cause of the diagnostic information (diagnostic event).

Symbol	Meaning
8	Failure A device error has occurred. The measured value is no longer valid.
7	Function check The device is in service mode (e.g. during a simulation).
<u>^</u> ?	Out of specification The device is being operated: Outside its technical specification limits (e.g. outside the process temperature range)
<b>&amp;</b>	Maintenance required Maintenance is required. The measured value remains valid.

The status signals are categorized in accordance with VDI/VDE 2650 and NAMUR Recommendation NE 107.


### 12.4.2 Calling up remedy information

Remedy information is provided for every diagnostic event to ensure that problems can be rectified quickly. These measures are displayed in red along with the diagnostic event and the related diagnostic information.

# 12.5 Diagnostic information in FieldCare or DeviceCare

### 12.5.1 Diagnostic options


Any faults detected by the measuring device are displayed on the home page of the operating tool once the connection has been established.

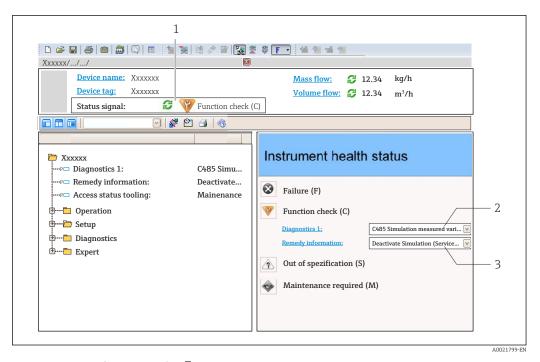

- *2 Diagnostic information* → 🖺 167
- 3 Remedial measures with service ID
- In addition, diagnostic events which have occurred can be shown in the **Diagnostics** menu:
  - Via parameter  $\rightarrow \triangleq 177$
  - Via submenu  $\rightarrow \blacksquare 178$

### **Diagnostic information**

The fault can be identified using the diagnostic information. The short text helps you by providing information about the fault. In addition, the corresponding symbol for the diagnostic behavior is displayed in front of the diagnostic information on the local display.

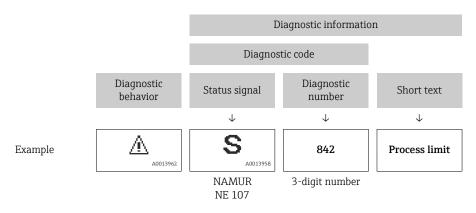

### 12.5.2 Calling up remedy information

Remedy information is provided for every diagnostic event to ensure that problems can be rectified quickly:

• On the home page Remedy information is displayed in a separate field below the diagnostics information.

Endress+Hauser

■ In the **Diagnostics** menu Remedy information can be called up in the working area of the user interface.

170

The user is in the **Diagnostics** menu.

- 1. Call up the desired parameter.
- 2. On the right in the working area, mouse over the parameter.
  - ► A tool tip with remedy information for the diagnostic event appears.

## 12.6 Diagnostic information via communication interface

### 12.6.1 Reading out diagnostic information

Diagnostic information can be read out via Modbus RS485 register addresses.

- Via register address **6801** (data type = string): diagnosis code, e.g. F270
- Via register address **6821** (data type = string): diagnosis code, e.g. F270
- For an overview of diagnostic events with diagnosis number and diagnosis code  $\Rightarrow \implies 172$

### 12.6.2 Configuring error response mode

The error response mode for Modbus RS485 communication can be configured in the **Communication** submenu using 2 parameters.

### Navigation path

Setup → Communication

Parameter overview with brief description

Parameters	Description	Selection	Factory setting	
Failure mode	Select measured value output behavior when a diagnostic message occurs via Modbus communication.  The effect of this parameter depends on the option selected in the Assign diagnostic behavior parameter.	<ul> <li>NaN value</li> <li>Last valid value</li> <li>NaN = not a number</li> </ul>	NaN value	

# 12.7 Adapting the diagnostic information

### 12.7.1 Adapting the diagnostic behavior

Each item of diagnostic information is assigned a specific diagnostic behavior at the factory. The user can change this assignment for specific diagnostic information in the **Diagnostic behavior** submenu.

Expert  $\rightarrow$  System  $\rightarrow$  Diagnostic handling  $\rightarrow$  Diagnostic behavior

You can assign the following options to the diagnostic number as the diagnostic behavior:

Options	Description
Alarm	The device stops measurement. The measured value output via Modbus RS485 and the totalizers assume the defined alarm condition. A diagnostic message is generated. The background lighting changes to red.
Warning	The device continues to measure. The measured value output via Modbus RS485 and the totalizers are not affected. A diagnostic message is generated.

Options	Description
Logbook entry only	The device continues to measure. The diagnostic message is only displayed in the <b>Event logbook</b> submenu ( <b>Event list</b> submenu) and is not displayed in alternating sequence with the operational display.
Off	The diagnostic event is ignored, and no diagnostic message is generated or entered.

# 12.8 Overview of diagnostic information

- The amount of diagnostic information and the number of measured variables affected increase if the measuring device has one or more application packages.
- Not all the diagnostics information is available for the device.

Diagnostic number	Short text	Remedy instructions	Status signal [from the factory]	Diagnostic behavior [from the factory]
Diagnostic of	sensor			
019	Device initialization active	Device initialization in progress, please wait	S	Warning 1)
022	Temperature sensor defective	Replace sensor electronic module (ISEM)	F	Alarm
082	Data storage inconsistent	Check module connections	F	Alarm
083	Memory content inconsistent	Restart device     Restore S-DAT data     Replace S-DAT	F	Alarm
104	Sensor signal path 1 to n	Check process conditions     Clean or replace transducers     Replace sensor electronic module (ISEM)	F	Alarm
105	Downstream transducer path 1 to n defective	Check connection to the downstream transducer     Replace downstream transducer	F	Alarm
106	Upstream transducer path 1 defective	Check connection to the upstream transducer     Replace upstream transducer	F	Alarm
124	Relative signal strength	Check process conditions     Clean or replace transducers     Replace sensor electronic module (ISEM)	М	Warning <sup>1)</sup>
125	Relative sound velocity	Check process conditions     Clean or replace transducers     Replace sensor electronic module (ISEM)	М	Warning <sup>1)</sup>
160	Signal path switched off	Contact service	М	Warning 1)
170	Pressure cell connection defective	Check plug connections     Replace pressure cell	F	Alarm
171	Ambient temperature too low	Increase ambient temperature	S	Warning
172	Ambient temperature too high	Reduce ambient temperature	S	Warning
173	Pressure cell range exceeded	Check process conditions     Adapt process pressure	S	Warning

Diagnostic number	Short text	Remedy instructions	Status signal [from the factory]	Diagnostic behavior [from the factory]
174	Pressure cell electronics defective	Replace pressure cell	F	Alarm
175	Pressure cell deactivated	Enable pressure cell	M	Warning
Diagnostic of	electronic			
201	Electronics faulty	Restart device     Replace electronics	F	Alarm
242	Firmware incompatible	Check firmware version     Flash or replace electronic module	F	Alarm
252	Module incompatible	Check electronic modules     Check if correct modules are available (e.g. NEx, Ex)     Replace electronic modules	F	Alarm
262	Module connection interrupted	Check or replace connection cable between sensor electronic module (ISEM) and main electronics     Check or replace ISEM or main electronics	F	Alarm
270	Main electronics defective	Restart device     Replace main electronic module	F	Alarm
271	Main electronics faulty	Restart device     Replace main electronic module	F	Alarm
272	Main electronics faulty	Restart device	F	Alarm
273	Main electronics defective	Pay attention to display emergency operation     Replace main electronics	F	Alarm
275	I/O module defective	Change I/O module	F	Alarm
276	I/O module faulty	Restart device     Change I/O module	F	Alarm
281	Electronic initialization active	Firmware update active, please wait!	F	Alarm
283	Memory content inconsistent	Restart device	F	Alarm
302	Device verification active	Device verification active, please wait.	С	Warning 1)
303	I/O 1 to n configuration changed	Apply I/O module configuration     (parameter "Apply I/O     configuration")     Afterwards reload device description     and check wiring	M	Warning
311	Sensor electronics (ISEM) faulty	Maintenance required! Do not reset device	M	Warning
330	Flash file invalid	Update firmware of device     Restart device	М	Warning
331	Firmware update failed	Update firmware of device     Restart device	F	Warning
332	Writing in HistoROM backup failed	Replace user interface board     Ex d/XP: replace transmitter	F	Alarm
361	I/O module 1 to n faulty	Restart device     Check electronic modules     Change I/O module or main electronics	F	Alarm

Diagnostic number	Short text	Remedy instructions	Status signal [from the factory]	Diagnostic behavior [from the factory]
372	Sensor electronics (ISEM) faulty	Restart device     Check if failure recurs     Replace sensor electronic module (ISEM)	F	Alarm
373	Sensor electronics (ISEM) faulty	Transfer data or reset device	F	Alarm
375	I/O- 1 to n communication failed	Restart device     Check if failure recurs     Replace module rack inclusive electronic modules	F	Alarm
378	Supply voltage ISEM faulty	If available: Check connection cable between sensor and transmitter     Replace main electronic module     Replace sensor electronic module (ISEM)	F	Alarm
382	Data storage	Insert T-DAT     Replace T-DAT	F	Alarm
383	Memory content	Reset device	F	Alarm
384	Transmitter circuit	Restart device     Check if failure recurs     Replace sensor electronic module (ISEM)	F	Alarm
385	Amplifier circuit	Restart device     Check if failure recurs     Replace sensor electronic module (ISEM)	F	Alarm
386	Time of flight	Restart device     Check if failure recurs     Replace sensor electronic module (ISEM)	F	Alarm
387	HistoROM data faulty	Contact service organization	F	Alarm
Diagnostic of	configuration			
410	Data transfer failed	Retry data transfer     Check connection	F	Alarm
412	Processing download	Download active, please wait	С	Warning
431	Trim 1 to n required	Carry out trim	M	Warning
437	Configuration incompatible	Update firmware     Execute factory reset	F	Alarm
438	Dataset different	Check dataset file     Check device parameterization     Download new device     parameterization	M	Warning
441	Current output 1 to n saturated	Check current output settings     Check process	S	Warning 1)
442	Frequency output 1 to n saturated	Check frequency output settings     Check process	S	Warning 1)
443	Pulse output 1 to n saturated	Check pulse output settings     Check process	S	Warning 1)
444	Current input 1 to n saturated	Check current input settings     Check connected device     Check process	S	Warning <sup>1)</sup>
452	Calculation error detected	Check device configuration     Check process conditions	S	Warning <sup>1)</sup>

Diagnostic number	Short text	Remedy instructions	Status signal [from the factory]	Diagnostic behavior [from the factory]
453	Flow override active	Deactivate flow override	С	Warning
484	Failure mode simulation active	Deactivate simulation	С	Alarm
485	Process variable simulation active	Deactivate simulation	С	Warning
486	Current input 1 to n simulation active	Deactivate simulation	С	Warning
491	Current output 1 to n simulation active	Deactivate simulation	С	Warning
492	Frequency output 1 to n simulation active	Deactivate simulation frequency output	С	Warning
493	Pulse output simulation active	Deactivate simulation pulse output	С	Warning
494	Switch output 1 to n simulation active	Deactivate simulation switch output	С	Warning
495	Diagnostic event simulation active	Deactivate simulation	С	Warning
496	Status input 1 to n simulation active	Deactivate simulation status input	С	Warning
502	CT activation/ deactivation failed	Follow the sequence of the custody transfer activation/deactivation: First authorized user login, then set the DIP switch on the main electonic module	С	Warning
520	I/O 1 to n hardware configuration invalid	Check I/O hardware configuration     Replace wrong I/O module     Plug the module of double pulse output on correct slot	F	Alarm
537	Configuration	Check IP addresses in network     Change IP address	F	Warning
538	Flow computer configuration incorrect	Check input value (pressure, temperature)	S	Warning
539	Flow computer configuration incorrect	Check input value (pressure, temperature)     Check allowed values of the medium properties	S	Alarm
540	Custody transfer mode failed	Power off device and toggle DIP switch     Deactivate custody transfer mode     Reactivate custody transfer mode     Check electronic components	F	Alarm
541	Flow computer configuration incorrect	Check entered reference value using the document Operating Instructions	S	Warning
543	Double pulse output	Check process     Check pulse output settings	S	Warning 1)
593	Double pulse output 1 simulation	Deactivate simulation pulse output	С	Warning
594	Relay output 1 to n simulation active	Deactivate simulation switch output	С	Warning
599	Custody transfer logbook full	Deactivate custody transfer mode     Clear custody transfer logbook (all 30 entries)     Activate custody transfer mode	F	Warning

Diagnostic number	Short text	Remedy instructions	Status signal [from the factory]	Diagnostic behavior [from the factory]
Diagnostic of	process		l	
803	Loop current 1 faulty	Check wiring     Change I/O module	F	Alarm
832	Electronics temperature too high	Reduce ambient temperature	S	Warning 1)
833	Electronics temperature too low	Increase ambient temperature	S	Warning 1)
834	Process temperature too high	Reduce process temperature	S	Warning 1)
835	Process temperature too low	Increase process temperature	S	Warning 1)
836	Process pressure above limit	Reduce process pressure	S	Alarm
837	Process pressure below limit	Increase process pressure	S	Warning 1)
841	Flow velocity too high	Reduce flow rate	S	Warning 1)
842	Process value below limit	Low flow cut off active! Check low flow cut off configuration	S	Warning 1)
870	Measuring inaccuracy increased	Check process     Increase flow volume	F	Alarm 1)
881	Signal to noise ratio too low	Check process conditions     Clean/repl. transd. (inline) / check sensor pos. and coupling (clamp on)     Replace sensor electronic module (ISEM)	F	Alarm
882	Input signal faulty	<ol> <li>Check input signal parameterization</li> <li>Check external device</li> <li>Check process conditions</li> </ol>	F	Alarm
930	Sound velocity too high	Check process conditions     Clean/repl. transd. (inline) / check sensor pos. and coupling (clamp on)     Replace sensor electronic module (ISEM)	S	Warning 1)
931	Sound velocity too low	Check process conditions     Clean/repl. transd. (inline) / check sensor pos. and coupling (clamp on)     Replace sensor electronic module (ISEM)	S	Warning 1)
941	API/ASTM temperature out of specificat.	Check process temperature with selected API/ASTM commodity group     Check API/ASTM-related parameters	S	Warning 1)
942	API/ASTM density out of specification	Check process density with selected API/ASTM commodity group     Check API/ASTM-related parameters	S	Warning 1)
943	API pressure out of specification	Check process pressure with selected API commodity group     Check API related parameters	S	Warning <sup>1)</sup>

Diagnostic number	Short text	Remedy instructions	Status signal [from the factory]	Diagnostic behavior [from the factory]
953	Asymmetry noise signal too high path 1 to n	Check process conditions     Clean or replace transducers     Replace sensor electronic module     (ISEM)	M	Alarm
954	Sound velocity deviation too high	Check medium configuration     Check process conditions     Clean or replace transducers	S	Warning <sup>1)</sup>

1) Diagnostic behavior can be changed.

# 12.9 Pending diagnostic events


The **Diagnostics** menu allows the user to view the current diagnostic event and the previous diagnostic event separately.

- To call up the measures to rectify a diagnostic event:

  - Via web browser → 🗎 169
  - Via "FieldCare" operating tool → 🗎 170
  - Via "DeviceCare" operating tool → 🖺 170
- Other pending diagnostic events can be displayed in the **Diagnostic list** submenu  $\rightarrow \stackrel{\square}{=} 178$

### Navigation

"Diagnostics" menu

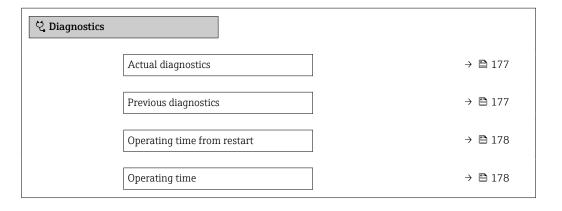

### Parameter overview with brief description

Parameter	Prerequisite	Description	User interface
Actual diagnostics	A diagnostic event has occurred.	Shows the current occured diagnostic event along with its diagnostic information.	Symbol for diagnostic behavior, diagnostic code and short message.
		If two or more messages occur simultaneously, the message with the highest priority is shown on the display.	
Previous diagnostics	Two diagnostic events have already occurred.	Shows the diagnostic event that occurred prior to the current diagnostic event along with its diagnostic information.	Symbol for diagnostic behavior, diagnostic code and short message.


Parameter	Prerequisite	Description	User interface
Operating time from restart	-	Shows the time the device has been in operation since the last device restart.	Days (d), hours (h), minutes (m) and seconds (s)
Operating time	-	Indicates how long the device has been in operation.	Days (d), hours (h), minutes (m) and seconds (s)

# 12.10 Diagnostics list

Up to 5 currently pending diagnostic events can be displayed in the Diagnostic list submenu along with the associated diagnostic information. If more than 5 diagnostic events are pending, the events with the highest priority are shown on the display.

### Navigation path

Diagnostics → Diagnostic list

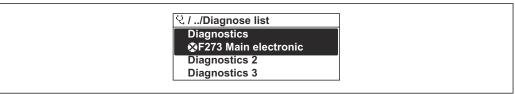

Using the example of the local display

- To call up the measures to rectify a diagnostic event:

  - Via web browser → 🗎 169
  - Via "FieldCare" operating tool → 🖺 170


# 12.11 Event logbook

### 12.11.1 Reading out the event logbook

A chronological overview of the event messages that have occurred is provided in the Events list submenu.

### Navigation path

**Diagnostics** menu → **Event logbook** submenu → Events list

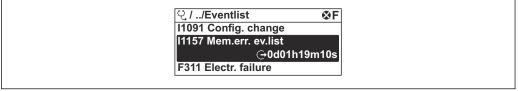

A0014008-EN

€ 68 Using the example of the local display

- A maximum of 20 event messages can be displayed in chronological order.
- If the **Extended HistoROM** application package (order option) is enabled in the device, the event list can contain up to 100 entries.

The event history includes entries for:

- Diagnostic events  $\rightarrow$  🗎 172
- Information events  $\rightarrow$  🗎 179

178

In addition to the operating time when the event occurred, each event is also assigned a symbol that indicates whether the event has occurred or is finished:

- Diagnostics event
  - ①: Occurrence of the event
  - 🕒: End of the event
- Information event
  - €: Occurrence of the event
- To call up the measures to rectify a diagnostic event:
  - Via local display → 168
    - Via web browser → 🖺 169
    - Via "FieldCare" operating tool → 

      170
    - Via "DeviceCare" operating tool → 🗎 170
- For filtering the displayed event messages  $\rightarrow = 179$

### 12.11.2 Filtering the event logbook

Using the **Filter options** parameter you can define which category of event message is displayed in the **Events list** submenu.

### Navigation path

Diagnostics → Event logbook → Filter options

### Filter categories

- All
- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- Information (I)

### 12.11.3 Overview of information events

Unlike a diagnostic event, an information event is displayed in the event logbook only and not in the diagnostic list.

Info number	Info name
I1000	(Device ok)
I1079	Sensor changed
I1089	Power on
I1090	Configuration reset
I1091	Configuration changed
I1092	HistoROM backup deleted
I1137	Electronics changed
I1151	History reset
I1155	Reset electronics temperature
I1156	Memory error trend
I1157	Memory error event list
I1256	Display: access status changed
I1264	Safety sequence aborted
I1278	I/O module restarted
I1327	Zero point adjust failed signal path
I1335	Firmware changed

Info number	Info name
I1361	Web server: login failed
I1397	Fieldbus: access status changed
I1398	CDI: access status changed
I1444	Device verification passed
I1445	Device verification failed
I1457	Measurement error verification failed
I1459	I/O module verification failed
I1461	Sensor verification failed
I1462	Sensor electronic module verific. failed
I1512	Download started
I1513	Download finished
I1514	Upload started
I1515	Upload finished
I1517	Custody transfer active
I1518	Custody transfer inactive
I1554	Safety sequence started
I1555	Safety sequence confirmed
I1556	Safety mode off
I1618	I/O module 2 replaced
I1619	I/O module 3 replaced
I1621	I/O module 4 replaced
I1622	Calibration changed
I1624	Reset all totalizers
I1625	Write protection activated
I1626	Write protection deactivated
I1627	Web server: login successful
I1628	Display: login successful
I1629	CDI: login successful
I1631	Web server access changed
I1632	Display: login failed
I1633	CDI: login failed
I1634	Reset to factory settings
I1635	Reset to delivery settings
I1639	Max. switch cycles number reached
I1643	Custody transfer logbook cleared
I1649	Hardware write protection activated
I1650	Hardware write protection deactivated
I1651	Custody transfer parameter changed
I1712	New flash file received
I1725	Sensor electronic module (ISEM) changed
I1726	Configuration backup failed

# 12.12 Resetting the measuring device

The entire device configuration or some of the configuration can be reset to a defined state with the **Device reset** parameter ( $\Rightarrow \triangleq 140$ ).

# 12.12.1 Function range of "Device reset" parameter


Options	Description	
Cancel	No action is executed and the user exits the parameter.	
To delivery settings	Every parameter for which a customer-specific default setting was ordered is reset to the customer-specific value. All other parameters are reset to the factory setting.	
Restart device	The restart resets every parameter with data stored in volatile memory (RAM) to the factory setting (e.g. measured value data). The device configuration remains unchanged.	
Restore S-DAT backup	Restores the data that is saved on the S-DAT. Additional information: This function can be used to resolve the memory issue "083 Memory content inconsistent" or to restore the S-DAT data when a new S-DAT has been installed.  This option is displayed only in an alarm condition.	

# 12.13 Device information

The **Device information** submenu contains all parameters that display different information for device identification.

#### Navigation

"Diagnostics" menu → Device information

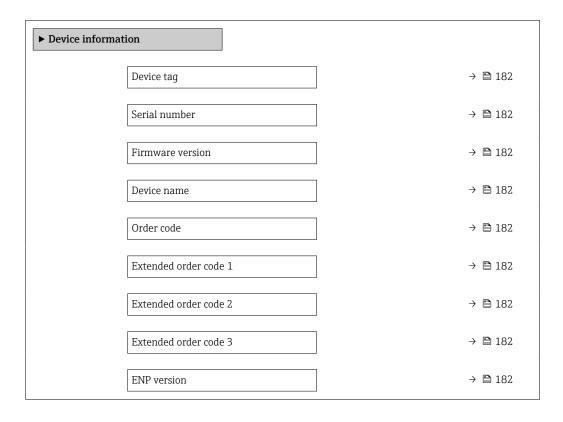

# Parameter overview with brief description

Parameter	Description	User interface	Factory setting
Device tag	Shows name of measuring point.	Max. 32 characters, such as letters, numbers or special characters (e.g. @, %, /).	Prosonic Flow
Serial number	Shows the serial number of the measuring device.	Max. 11-digit character string comprising letters and numbers.	-
Firmware version	Shows the device firmware version installed.	Character string in the format xx.yy.zz	-
Device name	Shows the name of the transmitter.  The name can be found on the nameplate of the transmitter.	Prosonic Flow 500	-
Order code	Shows the device order code.  The order code can be found on the nameplate of the sensor and transmitter in the "Order code" field.	Character string composed of letters, numbers and certain punctuation marks (e.g. /).	-
Extended order code 1	Shows the 1st part of the extended order code.  The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.	Character string	-
Extended order code 2	Shows the 2nd part of the extended order code.  The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.	Character string	-
Extended order code 3	Shows the 3rd part of the extended order code.  The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.	Character string	-
ENP version	Shows the version of the electronic nameplate (ENP).	Character string	2.02.00

# 12.14 Firmware history

Release date	Firmware Version	Order code for "Firmware version"	Firmware changes	Documentation type	Documentation
01.2024	01.02.zz	Option 73	<ul> <li>High temperature sensors</li> <li>Petroleum application package</li> <li>Mounting type A0 - 1 set</li> </ul>	Operating instructions	BA02026D/06/EN/02.24
05.2021	01.01.zz	Option <b>76</b>	Original firmware	Operating instructions	BA02026D/06/EN/01.21

- It is possible to flash the firmware to the current version or the previous version using the service interface.
- For the compatibility of the firmware version with the previous version, the installed device description files and operating tools, observe the information about the device in the "Manufacturer's information" document.
- The manufacturer's information is available:
  - $\bullet$  In the Download Area of the Endress+Hauser web site: www.endress.com  $\to$  Downloads
  - Specify the following details:
    - Product root: e.g. 9P5B
       The product root is the first part of the order code: see the nameplate on the device.
    - Text search: Manufacturer's information
    - Media type: Documentation Technical Documentation

# 13 Maintenance

# 13.1 Maintenance tasks

No special maintenance work is required.

# 13.1.1 Exterior cleaning

When cleaning the exterior of measuring devices, always use cleaning agents that do not attack the surface of the housing or the seals.

# 13.2 Measuring and test equipment

Endress+Hauser offers a variety of measuring and testing equipment, such as Netilion or device tests.

Your Endress+Hauser Sales Center can provide detailed information on the services.

List of some of the measuring and testing equipment:  $\rightarrow \implies 189$ 

## 13.3 Endress+Hauser services

Endress+Hauser offers a wide variety of services for maintenance such as recalibration, maintenance service or device tests.

Your Endress+Hauser Sales Center can provide detailed information on the services.

# 14 Repair

# 14.1 General notes

## 14.1.1 Repair and conversion concept

The Endress+Hauser repair and conversion concept provides for the following:

- The measuring devices have a modular design.
- Spare parts are grouped into logical kits with the associated Installation Instructions.
- Repairs are carried out by Endress+Hauser Service or by appropriately trained customers.
- Certified devices can only be converted to other certified devices by Endress+Hauser Service or at the factory.

## 14.1.2 Notes for repair and conversion

For repair and conversion of a measuring device, observe the following notes:

- ▶ Use only original Endress+Hauser spare parts.
- ▶ Carry out the repair according to the Installation Instructions.
- ▶ Observe the applicable standards, federal/national regulations, Ex documentation (XA) and certificates.
- ▶ Document all repairs and conversions and enter the details in Netilion Analytics.

# 14.2 Spare parts

Device Viewer (www.endress.com/deviceviewer):

All the spare parts for the measuring device, along with the order code, are listed here and can be ordered. If available, users can also download the associated Installation Instructions.

- 🚹 Measuring device serial number:
  - Is located on the nameplate of the device.

### 14.3 Endress+Hauser services

Endress+Hauser offers a wide range of services.

Your Endress+Hauser Sales Center can provide detailed information on the services.

## 14.4 Return

The requirements for safe device return can vary depending on the device type and national legislation.

- 1. Refer to the web page for information: http://www.endress.com/support/return-material
  - ► Select the region.
- 2. Return the device if repairs or a factory calibration are required, or if the wrong device was ordered or delivered.

# 14.5 Disposal



If required by the Directive 2012/19/EU on waste electrical and electronic equipment (WEEE), the product is marked with the depicted symbol in order to minimize the disposal of WEEE as unsorted municipal waste. Do not dispose of products bearing this marking as unsorted municipal waste. Instead, return them to the manufacturer for disposal under the applicable conditions.

# 14.5.1 Removing the measuring device

1. Switch off the device.

# **A** WARNING

## Danger to persons from process conditions!

- ► Pay attention to high temperatures.
- 2. Carry out the mounting and connection steps from the "Mounting the measuring device" and "Connecting the measuring device" sections in reverse order. Observe the safety instructions.

# 14.5.2 Disposing of the measuring device

Observe the following notes during disposal:

- ▶ Observe valid federal/national regulations.
- ► Ensure proper separation and reuse of the device components.

# 15 Accessories

Various accessories, which can be ordered with the device or subsequently from Endress +Hauser, are available for the device. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: www.endress.com.

# 15.1 Device-specific accessories

## 15.1.1 For the transmitter

Accessories	Description	
Transmitter Proline 500	Transmitter for replacement or storage. Use the order code to define the following specifications:  Approvals Output Input Display/operation Housing Software	
	Proline 500 transmitter: Order number: 9X5BXX-******B	
	Proline 500 transmitter for replacement: It is essential to specify the serial number of the current transmitter when ordering. On the basis of the serial number, the device-specific data of the replaced device can be used for the new transmitter.	
	Proline 500 transmitter: Installation Instructions EA01152D	
External WLAN antenna	External WLAN antenna with 1.5 m (59.1 in) connecting cable and two angle brackets. Order code for "Accessory enclosed", option P8 "Wireless antenna wide area".	
	The external WLAN antenna is not suitable for use in hygienic applications.	
	<ul> <li>Additional information regarding the WLAN interface →</li></ul>	
	Installation Instructions EA01238D	
Pipe mounting set	Pipe mounting set for transmitter.	
	Installation Instructions EA01195D	
	Proline 500 transmitter Order number: 71346428	

Weather protection cover Transmitter Proline 500	Is used to protect the measuring device from the effects of the weather: e.g. rainwater, excess heating from direct sunlight.  Proline 500 transmitter Order number: 71343505  Installation Instructions EA01191D
Sensor cables Proline 500 Sensor – Transmitter	The sensor cable can be ordered directly with the measuring device (order code for "Cable") or as an accessory (order number DK9012).  The following cable lengths are available:  Temperature: -40 to +80 °C (-40 to +176 °F)  Option AA: 5 m (15 ft)  Option AB: 10 m (30 ft)  Option AD: 30 m (90 ft)  Temperature: -50 to +170 °C (-58 to +338 °F)  Option BA: 5 m (15 ft)  Option BB: 10 m (30 ft)  Option BC: 15 m (45 ft)  Option BD: 30 m (90 ft)  Armored; temperature: -40 to +80 °C (-40 to +176 °F)  Option CA: 5 m (15 ft)  Option CB: 10 m (30 ft)  Option CD: 30 m (90 ft)  Armored; temperature: -50 to +170 °C (-58 to +338 °F)  Option DA: 5 m (15 ft)  Option DA: 5 m (15 ft)  Option DA: 5 m (45 ft)  Option DB: 10 m (30 ft)  Option DB: 10 m (30 ft)  Option DB: 10 m (30 ft)  Option DC: 15 m (45 ft)  Option DD: 30 m (90 ft)  Possible cable length for a Proline 500 sensor cable: max. 30 m (100 ft)

# 15.1.2 For the sensor

Accessories	Description
Sensor set (DK9013)	<ul> <li>Sensor set 0.3 MHz (C-030)</li> <li>Sensor set 0.5 MHz (C-050, CH-050)</li> <li>Sensor set 1 MHz (C-100, CH-100)</li> <li>Sensor set 2 MHz (C-200)</li> <li>Sensor set 5 MHz (C-500)</li> </ul>
Sensor holder set (DK9014)	<ul> <li>Sensor holder set 0.3 to 2 MHz</li> <li>Sensor holder set, high-temperature version 0.5 to 1 MHz</li> <li>Sensor holder set 5 MHz</li> </ul>
Installation set (DK9015)	<ul> <li>Installation set, DN15-DN32, 1/2-1 1/4"</li> <li>Installation set, DN32-DN65, 1 1/4-2 1/2"</li> <li>Installation set, DN50-DN150, 2"-6"</li> <li>Installation set, DN150-DN200, 6"-8"</li> <li>Installation set, DN200-DN600, 8"-24"</li> <li>Installation set, DN2000-DN2000, 24"-80"</li> <li>Installation set, DN2000-DN4000, 80"-160"</li> <li>Installation set, high-temperature version, DN50-DN80, 2"-3"</li> <li>Installation set, high-temperature version, DN80-DN200, 3"-8"</li> <li>Installation set, high-temperature version, DN200-DN300, 8"-12"</li> <li>Installation set, high-temperature version, DN200-DN300, 8"-12"</li> <li>Installation set, high-temperature version, DN300-DN600, 12"-24"</li> </ul>
Conduit adapter set (DK9003)	<ul> <li>Conduit adapter M20x1.5 + sensor cable gland</li> <li>Conduit adapter NPT1/2* + sensor cable gland</li> <li>Conduit adapter G1/2* + sensor cable gland</li> </ul>
Coupling medium (DK9CM)	<ul><li>Coupling pad</li><li>Coupling foil</li><li>Coupling gel</li></ul>

188

# 15.2 Communication-specific accessories

Description
Transmission of the measured values of connected 4 to 20 mA analog measuring devices, as well as digital measuring devices
<ul> <li>Technical Information TI01297S</li> <li>Operating Instructions BA01778S</li> <li>Product page: www.endress.com/fxa42</li> </ul>
The Field Xpert SMT50 table PC for device configuration enables mobile plant asset management. It is suitable for commissioning and maintenance staff to manage field instruments with a digital communication interface and to record progress. This tablet PC is designed as an all-in-one solution with a preinstalled driver library and is an easy-to-use, touch-sensitive tool which can be used to manage field instruments throughout their entire life cycle.
<ul> <li>Technical Information TI01555S</li> <li>Operating Instructions BA02053S</li> <li>Product page: www.endress.com/smt50</li> </ul>
The Field Xpert SMT70 tablet PC for device configuration enables mobile plant asset management in hazardous and non-hazardous areas. It is suitable for commissioning and maintenance staff to manage field instruments with a digital communication interface and to record progress.  This tablet PC is designed as an all-in-one solution with a preinstalled driver library and is an easy-to-use, touch-sensitive tool which can be used to manage field instruments throughout their entire life cycle.
<ul> <li>Technical Information TI01342S</li> <li>Operating Instructions BA01709S</li> <li>Product page: www.endress.com/smt70</li> </ul>
The Field Xpert SMT77 tablet PC for device configuration enables mobile plant asset management in areas categorized as Ex Zone 1.  Technical Information TI01418S Operating Instructions BA01923S Product page: www.endress.com/smt77

# 15.3 Service-specific accessories

Accessories	Description
Applicator	Software for selecting and sizing Endress+Hauser measuring devices:  Choice of measuring devices for industrial requirements  Calculation of all the necessary data for identifying the optimum flowmeter: e.g. nominal diameter, pressure loss, flow velocity and accuracy.  Graphic illustration of the calculation results  Determination of the partial order code, administration, documentation and access to all project-related data and parameters over the entire life cycle of a project.  Applicator is available:  Via the Internet: https://portal.endress.com/webapp/applicator  As a downloadable DVD for local PC installation.
Netilion	lloT Ecosystem: Unlock knowledge With the Netilion lloT Ecosystem, Endress+Hauser enables you to optimize your plant performance by digitizing workflows, creating knowledge and establishing new levels of collaboration. Building decades of expertise in process automation, Endress+Hauser provides the process industry with an lloT Ecosystem that allows data-driven insights. These insights can be applied to optimize processes resulting in increased plant up-time, efficiency, reliability – and ultimately, a more profitable plant. www.netilion.endress.com

Accessories	Description
FieldCare	FDT-based plant asset management tool from Endress+Hauser. It can configure all smart field units in your system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition.  Operating Instructions BA00027S and BA00059S
DeviceCare	Tool to connect and configure Endress+Hauser field devices.  Innovation brochure IN01047S

# 15.4 System components

Accessories	Description
Memograph M graphic data manager	The Memograph M graphic data manager provides information on all the relevant measured variables. Measured values are recorded correctly, limit values are monitored and measuring points analyzed. The data are stored in the 256 MB internal memory and also on a SD card or USB stick.
	<ul> <li>Technical Information TI00133R</li> <li>Operating Instructions BA00247R</li> </ul>
iTEMP	The temperature transmitters can be used in all applications and are suitable for the measurement of gases, steam and liquids. They can be used to read in the medium temperature.
	"Fields of Activity" document FA00006T

# 16 Technical data

# 16.1 Application

The measuring device is intended only for the flow measurement of liquids.

To ensure that the device remains in proper operating condition for its service life, use the measuring device only for media against which the process-wetted materials are sufficiently resistant.

# 16.2 Function and system design

Measuring principle Prosonic Flow uses a measurement method based on the transit time difference.

Measuring system The measuring system consists of a transmitter and two or one sensor sets. The transmitter and sensor sets are mounted in physically separate locations. They are

interconnected by sensor cables.

The measuring system uses a measurement method based on the transit time difference. Here, the sensors function as sound generators and sound receivers. Depending on the application and version, the sensors can be arranged for a measurement via 1, 2, 3 or 4

The transmitter serves to control the sensor sets, to prepare, process and evaluate the measuring signals, and to convert the signals to the desired output variable.

Information on the structure of the device  $\rightarrow \implies 13$ 

# **16.3** Input

#### Measured variable

#### Direct measured variables

- Volume flow
- Flow velocity
- Sound velocity

#### Calculated measured variables

Mass flow

## Measuring range

v = 0 to 15 m/s (0 to 50 ft/s)



Measuring range depending on the sensor version.

### Operable flow range


Over 150:1

## Input signal

#### External measured values

The measuring device provides optional interface that enable the transmission of externally measured variables (temperature, density) to the measuring device:

- Analog inputs 4-20 mA
- Digital inputs (via HART input or Modbus)

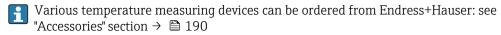

# Current input

#### Digital communication

The measured values are written by the automation system via Modbus RS485.

# Current input 0/4 to 20 mA

Current input	0/4 to 20 mA (active/passive)
Current span	<ul> <li>4 to 20 mA (active)</li> <li>0/4 to 20 mA (passive)</li> </ul>
Resolution	1 μΑ
Voltage drop	Typically: 0.6 to 2 V for 3.6 to 22 mA (passive)
Maximum input voltage	≤ 30 V (passive)
Open-circuit voltage	≤ 28.8 V (active)
Possible input variables	<ul><li>Temperature</li><li>Density</li></ul>

# Status input

Maximum input values	■ DC –3 to 30 V ■ If status input is active (ON): $R_i > 3 \text{ k}\Omega$
Response time	Configurable: 5 to 200 ms

Input signal level	<ul> <li>Low signal: DC -3 to +5 V</li> <li>High signal: DC 12 to 30 V</li> </ul>
Assignable functions	<ul> <li>Off</li> <li>Reset the individual totalizers separately</li> <li>Reset all totalizers</li> <li>Flow override</li> </ul>

# 16.4 Output

# Output signal

# Modbus RS485

Physical interface	RS485 in accordance with EIA/TIA-485 standard
Terminating resistor	Integrated, can be activated via DIP switches

# Current output 4 to 20 mA

Signal mode	Can be set to: Active Passive
Current range	Can be set to:  4 to 20 mA NAMUR  4 to 20 mA US  4 to 20 mA  0 to 20 mA (only if the signal mode is active)  Fixed current
Maximum output values	22.5 mA
Open-circuit voltage	DC 28.8 V (active)
Maximum input voltage	DC 30 V (passive)
Load	$0$ to $700~\Omega$
Resolution	0.38 μΑ
Damping	Configurable: 0 to 999.9 s
Assignable measured variables	<ul> <li>Volume flow</li> <li>Mass flow</li> <li>Sound velocity</li> <li>Flow velocity</li> <li>Electronics temperature</li> <li>The range of options increases if the measuring device has one or more application packages.</li> </ul>

# Pulse/frequency/switch output

Function	Can be configured as pulse, frequency or switch output
Version	Open collector
	Can be set to: Active Passive
Maximum input values	DC 30 V, 250 mA (passive)
Open-circuit voltage	DC 28.8 V (active)
Voltage drop	For 22.5 mA: ≤ DC 2 V
Pulse output	
Maximum input values	DC 30 V, 250 mA (passive)
Maximum output current	22.5 mA (active)
Open-circuit voltage	DC 28.8 V (active)
Pulse width	Configurable: 0.05 to 2 000 ms
Maximum pulse rate	10 000 Impulse/s
Pulse value	Configurable

Assignable measured	■ Volume flow
variables	Mass flow
	The range of options increases if the measuring device has one or more application packages.
Frequency output	
Maximum input values	DC 30 V, 250 mA (passive)
Maximum output current	22.5 mA (active)
Open-circuit voltage	DC 28.8 V (active)
Output frequency	Configurable: end value frequency 2 to $10000\text{Hz}(f_{max}=12500\text{Hz})$
Damping	Configurable: 0 to 999.9 s
Pulse/pause ratio	1:1
Assignable measured variables	<ul> <li>Volume flow</li> <li>Mass flow</li> <li>Sound velocity</li> <li>Flow velocity</li> <li>Electronics temperature</li> </ul>
	The range of options increases if the measuring device has one or more application packages.
Switch output	
Maximum input values	DC 30 V, 250 mA (passive)
Open-circuit voltage	DC 28.8 V (active)
Switching behavior	Binary, conductive or non-conductive
Switching delay	Configurable: 0 to 100 s
Number of switching cycles	Unlimited
Assignable functions	<ul> <li>Disable</li> <li>On</li> <li>Diagnostic behavior</li> <li>Limit</li> <li>Volume flow</li> <li>Mass flow</li> <li>Flow velocity</li> <li>Electronics temperature</li> <li>Sound velocity</li> <li>Totalizer 1-3</li> <li>Flow direction monitoring</li> <li>Status         Low flow cut off     </li> <li>The range of options increases if the measuring device has one or more application packages.</li> </ul>

# Double pulse output

Function	Double pulse
Version	Open collector
	Can be set to:  Active Passive Passive NAMUR
Maximum input values	DC 30 V, 250 mA (passive)
Open-circuit voltage	DC 28.8 V (active)
Voltage drop	For 22.5 mA: ≤ DC 2 V
Output frequency	Configurable: 0 to 1000 Hz
Damping	Configurable: 0 to 999 s

Pulse/pause ratio	1:1
Assignable measured variables	<ul><li>Volume flow</li><li>Mass flow</li></ul>
	The range of options increases if the measuring device has one or more application packages.

## Relay output

Function	Switch output
Version	Relay output, galvanically isolated
Switching behavior	Can be set to: NO (normally open), factory setting NC (normally closed)
Maximum switching capacity (passive)	■ DC 30 V, 0.1 A ■ AC 30 V, 0.5 A
Assignable functions	<ul> <li>Disable</li> <li>On</li> <li>Diagnostic behavior</li> <li>Limit</li> <li>Volume flow</li> <li>Mass flow</li> <li>Flow velocity</li> <li>Electronics temperature</li> <li>Sound velocity</li> <li>Totalizer 1-3</li> <li>Flow direction monitoring</li> <li>Status         Low flow cut off     </li> <li>The range of options increases if the measuring device has one or more application packages.</li> </ul>

# User-configurable input/output

**One** specific input or output is assigned to a user-configurable input/output (configurable I/O) during device commissioning.

The following inputs and outputs are available for assignment:

- Choice of current output: 4 to 20 mA (active), 0/4 to 20 mA (passive)
- Pulse/frequency/switch output
- Choice of current input: 4 to 20 mA (active), 0/4 to 20 mA (passive)
- Status input

## Signal on alarm

Depending on the interface, failure information is displayed as follows:

#### Modbus RS485

Failure mode Choose fr	om:
■ NaN va	lue instead of current value
■ Last va	id value

196

# Current output 0/4 to 20 mA

# 4 to 20 mA

<ul> <li>4 to 20 mA in accordance with NAMUR recommendation NE 43</li> <li>4 to 20 mA in accordance with US</li> <li>Min. value: 3.59 mA</li> <li>Max. value: 22.5 mA</li> <li>Definable value between: 3.59 to 22.5 mA</li> <li>Actual value</li> <li>Last valid value</li> </ul>	ailure mode
--	-------------

#### 0 to 20 mA

Failure mode	Choose from:
	<ul> <li>Maximum alarm: 22 mA</li> <li>Definable value between: 0 to 20.5 mA</li> </ul>
	- Definable value between 0 to 20.5 mm

# Pulse/frequency/switch output

Pulse output	
Fault mode	Choose from:  Actual value  No pulses
Frequency output	
Fault mode	Choose from:  Actual value  O Hz  Definable value between: 2 to 12 500 Hz
Switch output	
Fault mode	Choose from:  Current status  Open Closed

# Relay output

Failure mode	Choose from:	
	<ul><li>Current status</li></ul>	
	■ Open	
	■ Closed	

# Local display

Plain text display	With information on cause and remedial measures
Backlight	Red lighting indicates a device error.

Status signal as per NAMUR recommendation NE 107

# Interface/protocol

- Via digital communication: Modbus RS485
- Via service interface
  - CDI-RJ45 service interface
  - WLAN interface

Plain text display	With information on cause and remedial measures
--------------------	---

#### Web browser

Plain text display	With information on cause and remedial measures
--------------------	---

## Light emitting diodes (LED)

Status information	Status indicated by various light emitting diodes
	The following information is displayed depending on the device version:  ■ Supply voltage active  ■ Data transmission active  ■ Device alarm/error has occurred  Diagnostic information via light emitting diodes → 🖺 164

Low flow cut off

The switch points for low flow cut off are user-selectable.

#### Galvanic isolation

The outputs are galvanically isolated:

- from the power supply
- from one another
- from the potential equalization (PE) terminal

DN 50 to 4000 (2 to 160") and non-hazardous area: The clamp-on sensors can also be mounted on cathodically protected pipes. Solution available on request. Not applicable to order code for "Sensor version", options AG, AH.

## protocol-specific data

Protocol	Modbus Applications Protocol Specification V1.1				
Response times	<ul> <li>Direct data access: typically 25 to 50 ms</li> <li>Auto-scan buffer (data range): typically 3 to 5 ms</li> </ul>				
Device type	Slave				
Slave address range	1 to 247				
Broadcast address range	0				
Function codes	<ul> <li>03: Read holding register</li> <li>04: Read input register</li> <li>06: Write single registers</li> <li>08: Diagnostics</li> <li>16: Write multiple registers</li> <li>23: Read/write multiple registers</li> </ul>				
Broadcast messages	Supported by the following function codes:  O6: Write single registers  16: Write multiple registers  23: Read/write multiple registers				

198

Supported baud rate	1 200 BAUD 2 400 BAUD 4 800 BAUD 9 600 BAUD 19 200 BAUD 38 400 BAUD 57 600 BAUD 115 200 BAUD				
Data transmission mode	ASCII     RTU				
Data access	Each device parameter can be accessed via Modbus RS485.  For Modbus register information				
System integration	Information regarding system integration → 🗎 88.  ■ Modbus RS485 information  ■ Function codes  ■ Register information  ■ Response time  ■ Modbus data map				

# 16.5 Power supply

# Terminal assignment

→ 🖺 48

## Supply voltage

Order code "Power supply"	Terminal voltage	!	Frequency range
Option <b>D</b>	DC 24 V	±20%	_
Option <b>E</b>	AC 100 to 240 V	-15+10%	50/60 Hz, ±4 Hz
	DC 24 V	±20%	-
ption <b>I</b>	AC 100 to 240 V	-15+10%	■ 50/60 Hz ■ 50/60 Hz, ±4 Hz

## Power consumption

#### Transmitter

Max. 10 W (active power)

switch-on current	Max. 36 A (<5 ms) as per NAMUR Recommendation NE 21

#### Current consumption

#### Transmitter

- Max. 400 mA (24 V)
- Max. 200 mA (110 V, 50/60 Hz; 230 V, 50/60 Hz)

#### Power supply failure

- Totalizers stop at the last value measured.
- Depending on the device version, the configuration is retained in the device memory or in the pluggable data memory (HistoROM DAT).
- Error messages (incl. total operated hours) are stored.

# Overcurrent protection element

The device must be operated with a dedicated circuit breaker, as it does not have an ON/OFF switch of its own.

- The circuit breaker must be easy to reach and labeled accordingly.
- Permitted nominal current of the circuit breaker: 2 A up to maximum 10 A.

Electrical connection	→ 🖺 50			
Potential equalization	→ 🗎 56			
Terminals	Spring-loaded terminals: Suitable for strands and strands with ferrules. Conductor cross-section 0.2 to 2.5 mm <sup>2</sup> (24 to 12 AWG).			
Cable entries	<ul> <li>Cable gland: M20 × 1.5 with cable Ø 6 to 12 mm (0.24 to 0.47 in)</li> <li>Thread for cable entry:</li> <li>NPT ½"</li> <li>G ½"</li> <li>M20</li> <li>Device plug for digital communication: M12</li> </ul>			
Cable specification	→ 🗎 46			
Overvoltage protection	Mains voltage fluctuations	→ 🖺 199		
	Overvoltage category	Overvoltage category II		
	Short-term, temporary overvoltage	Between cable and ground up to 1200 V, for max. 5 s		

# 16.6 Performance characteristics

# Reference operating conditions

- Maximum permissible error according to ISO/DIN 11631
- Specifications as per measurement report

Long-term, temporary overvoltage

 Accuracy information is based on accredited calibration rigs that are traced to ISO 17025.

Between cable and ground up to 500 V

To obtain measured errors, use the *Applicator* sizing tool  $\rightarrow \triangleq 189$ 

# Maximum measurement error

o.r. = of reading


The measurement error depends on a number of factors. A distinction is made between the measurement error of the measuring device and an additional installation-specific measurement error that is independent of the measuring device.

The installation-specific measurement error depends on the installation conditions on site, such as the nominal diameter, wall thickness, real pipe geometry or medium. The sum of the two measurement errors is the measurement error at the measuring point.

Nominal diameter	Maximum permissible errors for device	+	Installation-specific maximum permissible errors (typical)	→	Maximum permissible errors at the measuring point (typical)	Field calibration 1)
DN 15 (½")	±0.5% o.r. ± 5 mm/s (0.20 in/s)	+	±2.5% o.r.	$\rightarrow$	±3% o.r. ± 5 mm/s (0.20 in/s)	±0.5% o.r. ± 5 mm/s (0.20 in/s)
DN 25 to 200 (1 to 8")	±0.5% o.r. ± 7.5 mm/s (0.30 in/s)	+	±1.5% o.r.	$\rightarrow$	±2% o.r. ± 7.5 mm/s (0.30 in/s)	±0.5% o.r. ± 7.5 mm/s (0.30 in/s)
> DN 200 (8")	±0.5% o.r. ± 3 mm/s (0.12 in/s)	+	±1.5% o.r.	$\rightarrow$	±2% o.r. ± 3 mm/s (0.12 in/s)	±0.5% o.r. ± 3 mm/s (0.12 in/s)

1) Adjustment in relation to a reference value with correction values written back to the transmitter

The specification applies to Reynolds numbers  $Re \ge 10\,000$  and flow velocities v > 0.3 m/s (1 ft/s). Larger measurement errors may occur for Reynolds numbers  $Re < 10\,000$  and flow velocities v < 0.3 m/s (1 ft/s).

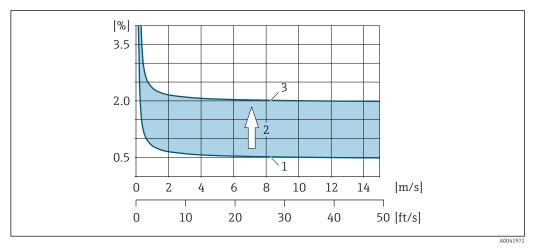

■ 69 Example of the absolute value of the measurement error in a pipe with nominal diameter DN > 200 (8")

- 1 Measurement error of measuring device:  $\pm 0.5\%$  o.r.  $\pm$  3 mm/s (0.12 in/s)
- Measurement error due to installation conditions: typically  $\pm 1.5\%$  o.r.
- 3 Measurement error at the measuring point:  $\pm 0.5\%$  o.r.  $\pm 3$  mm/s (0.12 in/s) $\pm 1.5\%$  o.r.  $\pm 2\%$  o.r.  $\pm 3\%$  mm/s (0.12 in/s)

### Measurement report

If required, the device can be supplied with a factory measurement report. A measurement is performed under reference conditions to verify the performance of the device. The sensors are mounted on an appropriate stainless steel pipe in this case.

The measurement report shows the following maximum permissible errors:

Sensor type	Nominal diameter	Maximum permissible errors for device
C-500 (5 MHz)	DN 50 (2")	±0.5% o.r. ± 5 mm/s (0.20 in/s)
C-200 (2 MHz) C-100 (1 MHz) C-050 (0.5 MHz) CH-100 (1 MHz)	DN 100 (4")	±0.5% o.r. ± 7.5 mm/s (0.30 in/s)
C-030 (0.3 MHz) CH-050 (0.5 MHz)	DN 250 (10")	±0.5% o.r. ± 7.5 mm/s (0.30 in/s)

# Accuracy of outputs

The outputs have the following base accuracy specifications.

Current output

Accuracy	±5 μA	
----------	-------	--

Pulse/frequency output

o.r. = of reading

Accuracy	Max. ±50 ppm o.r. (over the entire ambient temperature range)
----------	---

Repeatability

o.r. = of reading

 $\pm 0.3\%$  for flow velocities >0.3 m/s (1 ft/s)

Influence of ambient temperature

# **Current output**

Temperature coefficient	Max. 1 μA/°C
-------------------------	--------------

## Pulse/frequency output

Temperature coefficient
-------------------------

# 16.7 Mounting

Mounting requirements

→ 🖺 19

# 16.8 Environment

Ambient temperature range

→ 🖺 27

202

#### Temperature tables



Observe the interdependencies between the permitted ambient and fluid temperatures when operating the device in hazardous areas.



For detailed information on the temperature tables, see the separate document entitled "Safety Instructions" (XA) for the device.

#### Storage temperature

The storage temperature for all components (except display modules and order code for "Sensor version", options AG, AH) corresponds to the ambient temperature range → \(\text{\emperature}\) 27.

Order code for "Sensor version", options AG, AH: -50 to +80 °C (-58 to +176 °F)

#### Display modules

 $-40 \text{ to } +80 ^{\circ}\text{C} (-40 \text{ to } +176 ^{\circ}\text{F})$ 

#### Relative humidity

The device is suitable for use in outdoor and indoor areas with a relative humidity of 5 to 40%

#### Operating height

According to EN 61010-1

- $\le 2000 \text{ m} (6562 \text{ ft})$
- > 2 000 m (6 562 ft) with additional overvoltage protection (e.g. Endress+Hauser HAW Series)

#### Degree of protection

#### Transmitter

- IP66/67, Type 4X enclosure, suitable for pollution degree 4
- When the housing is open: IP20, Type 1 enclosure, suitable for pollution degree 2
- Display module: IP20, Type 1 enclosure, suitable for pollution degree 2

#### Sensor

Order code for "Sensor version", options AA, AB, AC, AD, AE:

- IP68, Type 6P enclosure, suitable for pollution degree 4
- For the operation of the device under water
- Operating duration at a maximum depth of:
  - 3 m (10 ft): permanent use
  - 10 m (30 ft): maximum 48 hours

Order code for "Sensor version", options AG, AH:

IP66/67, Type 4X enclosure, suitable for pollution degree 4

When the housing is open: IP20, Type 1 enclosure, suitable for pollution degree 2

Optional

#### External WLAN antenna

IP67

# Shock and vibration resistance

#### Vibration sinusoidal, in accordance with IEC 60068-2-6

- 2 to 8.4 Hz, 7.5 mm peak
- 8.4 to 2000 Hz, 2 g peak

## Vibration broad-band random, according to IEC 60068-2-64

- 10 to 200 Hz,  $0.01 \, \text{g}^2/\text{Hz}$
- 200 to 2000 Hz,  $0.003 \text{ g}^2/\text{Hz}$
- Total: 2.70 g rms

Shock half-sine, according to IEC 60068-2-27

6 ms 50 g

Rough handling shocks according to IEC 60068-2-31

# Electromagnetic compatibility (EMC)

As per IEC/EN 61326 and NAMUR Recommendation 21 (NE 21) and 43 (NE43)

Details are provided in the Declaration of Conformity.

This unit is not intended for use in residential environments and cannot guarantee adequate protection of the radio reception in such environments.

## 16.9 Process

Sensor version	Frequency	Temperature
C-030-A	0.3 MHz	-40 to +100 °C (-40 to +212 °F)
C-050-A	0.5 MHz	−20 to +80 °C (−4 to +176 °F)
C-100-A	1 MHz	−20 to +80 °C (−4 to +176 °F)
C-200-A	2 MHz	−20 to +80 °C (−4 to +176 °F)
C-500-A	5 MHz	-40 to +150 °C (-40 to +302 °F)
C-100-B	1 MHz	-40 to +80 °C (-40 to +176 °F)
C-200-B	2 MHz	-40 to +80 °C (-40 to +176 °F)
C-100-C	1 MHz	0 to +170 °C (+32 to +338 °F)
C-200-C	2 MHz	0 to +170 °C (+32 to +338 °F)
CH-050-A	0.5 MHz	<ul> <li>+150 to +220 °C (302 to +428 °F): Order code for "Process temperature", option H</li> <li>+210 to +370 °C (410 to +698 °F): Order code for "Process temperature", option I</li> <li>+350 to +550 °C (+662 to +1022 °F): Order code for "Process temperature", option J</li> </ul>
CH-100-A	1 MHz	<ul> <li>+150 to +220 °C (302 to +428 °F): Order code for "Process temperature", option H</li> <li>+210 to +370 °C (410 to +698 °F): Order code for "Process temperature", option I</li> <li>+350 to +550 °C (+662 to +1022 °F): Order code for "Process temperature", option J</li> </ul>

Sound velocity range	600 to 3 000 m/s (1 969 to 9 843 ft/s)
Medium pressure range	No pressure limitation For correct measurement, the static pressure of the medium must be higher than the vapor pressure.
Pressure loss	There is no pressure loss.

# 16.10 Mechanical construction

Design, dimensions

For the dimensions and installation lengths of the device, see the "Technical Information" document, "Mechanical construction" section .

## Weight

Weight specifications exclusive of packaging material.

### Transmitter

- Proline 500 aluminum: 6.5 kg (14.3 lbs)
- Proline 500 cast, stainless: 15.6 kg (34.4 lbs)

#### Sensor

Including mounting material

- DN 15 to 65 (½ to 2½"): 1.2 kg (2.65 lb)
- DN 50 to 4000 (2 to 160"): 2.8 kg (6.17 lb)
- DN 50 to 600 (2 to 24") order code for "Sensor version", options AG, AH
  - 9.8 kg (21.6 lb)
  - Long rail (DN 300 to 600 (12 to 24)): 10.7 kg (23.6 lb)

#### Materials

#### Transmitter housing

Housing of Proline 500 transmitter

Order code for "Transmitter housing":


- Option A "Aluminum coated": aluminum, AlSi10Mq, coated
- Option L "Cast, stainless": cast, stainless steel, 1.4409 (CF3M) corresponds to the properties of 316L

Window material

Order code for "Transmitter housing":

- Option **A** "Aluminum, coated": glass
- Option L "Cast, stainless": glass

#### Cable entries/cable glands

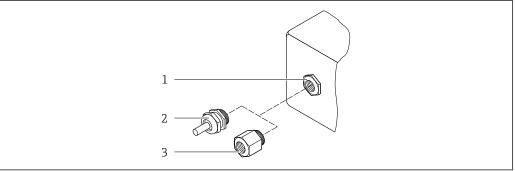

**№** 70 Possible cable entries/cable glands

- Female thread M20  $\times$  1.5
- Cable gland  $M20 \times 1.5$
- Adapter for cable entry with female thread G 1/2" or NPT 1/2"

Cable entries and adapters	Material
Cable gland of sensor cable	Brass or stainless steel 1.4404
Power cable gland	Plastic

Cable entries and adapters	Material
<ul> <li>Adapter for cable entry with female thread G ½"</li> <li>Adapter for cable entry with female thread NPT ½"</li> </ul>	Nickel-plated brass
Only available for certain device versions: Order code for "Transmitter housing": Option A "Aluminum, coated"	
<ul> <li>Adapter for cable entry with female thread G ½"</li> <li>Adapter for cable entry with female thread NPT ½"</li> </ul>	Stainless steel, 1.4404 (316L)
Only available for certain device versions: Order code for "Transmitter housing": Option L "Cast, stainless"	

#### Sensor cables



UV rays can impair the cable outer sheath. Protect the cable from exposure to sun as much as possible.

Sensor cable for sensor - Proline 500 transmitter

DN 15 to 65 (½ to 2½"):

Sensor cable: TPE 5)

- Cable sheath: TPE
- Cable plug: stainless steel 1.4301 (304), 1.4404 (316L), nickel-plated brass

DN 50 to 4000 (2 to 160"):

- Sensor cable, TPE halogen-free
  - Cable sheath: TPE halogen-free
  - Cable connector: nickel-plated brass
- PTFE sensor cable <sup>5)</sup>
  - Cable sheath: PTFE
  - Cable plug: stainless steel 1.4301 (304), 1.4404 (316L)

## Ultrasonic transducer

- Holder: stainless steel 1.4301 (304), 1.4404 (316L)
- Housing: stainless steel 1.4301 (304), 1.4404 (316L)
- Strapping bands/bracket: stainless steel 1.4301 (304), 1.4404 (316L)
- Contact surfaces: chemically stable plastic

### Coupling pads

- $-40 \text{ to } +100 ^{\circ}\text{C} (-40 \text{ to } +212 ^{\circ}\text{F})$ : silicon-based thermal pad H48.2 (0.5 mm (0.02 in))
- $-40 \text{ to } +170 \,^{\circ}\text{C} \, (-40 \text{ to } +338 \,^{\circ}\text{F})$ : VMQ-silicone-rubber (vinyl methyl silicone) (0.5 mm (0.02 in))

# Coupling foil

- 150 to 220 °C (302 to 428 °F): tin
- 210 to 370 °C (410 to 698 °F): zinc
- 350 to 550 °C (662 to 1022 °F): aluminum

#### Coupling paste

Coupling grease

<sup>5)</sup> Also available in optional armored version (316L)

#### Accessories

Protective cover

Stainless steel, 1.4404 (316L)

#### External WLAN antenna

- Antenna: ASA plastic (acrylonitrile styrene acrylate) and nickel-plated brass
- Adapter: Stainless steel and nickel-plated brass
- Cable: Polyethylene
- Plug: Nickel-plated brass
- Angle bracket: Stainless steel

# 16.11 Display and user interface

### Languages

Can be operated in the following languages:

- Via local operation
   English, German, French, Spanish, Italian, Dutch, Portuguese, Polish, Russian, Turkish,
   Chinese, Japanese, Korean, Vietnamese, Czech, Swedish
- Via web browser
   English, German, French, Spanish, Italian, Dutch, Portuguese, Polish, Russian, Turkish,
   Chinese, Japanese, Vietnamese, Czech, Swedish
- Via "FieldCare", "DeviceCare" operating tool: English, German, French, Spanish, Italian, Chinese, Japanese


#### Local operation

#### Via display module

## Equipment:

- Order code for "Display; operation", option F "4-line, illuminated, graphic display; touch control"
- Order code for "Display; operation", option G "4-line, illuminated, graphic display; touch control + WLAN"



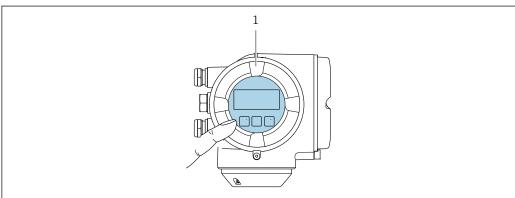

A004132

- 71 Operation with touch control
- 1 Proline 500

# Display elements

- 4-line, illuminated, graphic display
- White background lighting; switches to red in event of device errors
- Format for displaying measured variables and status variables can be individually configured

## Operating elements

- External operation via touch control (3 optical keys) without opening the housing: ±,
   □. □
- Operating elements also accessible in the various zones of the hazardous area

# Supported operating tools

Different operating tools can be used for local or remote access to the measuring device. Depending on the operating tool used, access is possible with different operating units and via a variety of interfaces.

Supported operating tools	Operating unit	Interface	Additional information
Web browser	Notebook, PC or tablet with web browser	<ul><li>CDI-RJ45 service interface</li><li>WLAN interface</li></ul>	Special Documentation for device
DeviceCare SFE100	Notebook, PC or tablet with Microsoft Windows system	<ul><li>CDI-RJ45 service interface</li><li>WLAN interface</li><li>Fieldbus protocol</li></ul>	→ 🖺 189
FieldCare SFE500	Notebook, PC or tablet with Microsoft Windows system	<ul><li>CDI-RJ45 service interface</li><li>WLAN interface</li><li>Fieldbus protocol</li></ul>	→ 🖺 189
Field Xpert	SMT70/77/50		Operating Instructions BA01202S Device description files: Use update function of handheld terminal
SmartBlue App	Smart phone or tablet with iOs or Android	WLAN	→ 🖺 189

- Other operating tools based on FDT technology with a device driver such as DTM/iDTM or DD/EDD can be used for device operation. These operating tools are available from the individual manufacturers. Integration into the following operating tools, among others, is supported:
  - Field Device Manager (FDM) from Honeywell → www.process.honeywell.com
  - FieldMate from Yokogawa → www.yokogawa.com
  - PACTWare → www.pactware.com

The related device description files are available: www.endress.com → Download Area

## Web server

With the integrated web server, the device can be operated and configured via a web browser service interface (CDI-RJ45) or WLAN interface. The structure of the operating menu is the same as for the local display. In addition to the measured values, status information on the device is displayed and can be used to monitor device health. Furthermore the device data can be managed and the network parameters can be configured.

A device that has a WLAN interface (can be ordered as an option) is required for the WLAN connection: order code for "Display; operation", option G "4-line, illuminated; touch control + WLAN". The device acts as an Access Point and enables communication by computer or a mobile handheld terminal.

#### Supported functions

Data exchange between the operating unit (such as a notebook, for example,) and measuring device:

- Upload the configuration from the measuring device (XML format, configuration backup).
- Save the configuration to the measuring device (XML format, restore configuration).
- Export event list (.csv file)
- Export parameter settings (.csv file or PDF file, document the measuring point configuration)
- Export the Heartbeat verification report (PDF file, only available with the Heartbeat
   Verification → 
   □ 212 application package)
- Flash firmware version for device firmware upgrade, for example
- Download driver for system integration
- Visualize up to 1000 saved measured values (only available with the Extended HistoROM application package → ≅ 212)

# HistoROM data management

The measuring device features HistoROM data management. HistoROM data management comprises both the storage and import/export of key device and process data, making operation and servicing far more reliable, secure and efficient.



When the device is delivered, the factory settings of the configuration data are stored as a backup in the device memory. This memory can be overwritten with an updated data record, for example after commissioning.

## Additional information on the data storage concept

There are different types of data storage units in which device data are stored and used by the device:

	HistoROM backup	T-DAT	S-DAT
Available data	<ul> <li>Event logbook, e.g. diagnostic events</li> <li>Parameter data record backup</li> <li>Device firmware package</li> </ul>	<ul> <li>Measured value logging ("Extended HistoROM" order option)</li> <li>Current parameter data record (used by firmware at run time)</li> <li>Indicator (minimum/maximum values)</li> <li>Totalizer value</li> </ul>	<ul> <li>Sensor data: e.g. measuring point configuration</li> <li>Serial number</li> <li>Device configuration (e.g. SW options, fixed I/O or multi I/O)</li> </ul>
Storage location	Fixed on the user interface PC board in the connection compartment	Can be plugged into the user interface PC board in the connection compartment	In the sensor plug in the transmitter neck part

#### Data backup

#### Automatic

- The most important device data (sensor and transmitter) are automatically saved in the DAT modules
- If the transmitter or measuring device is replaced: once the T-DAT containing the previous device data has been exchanged, the new measuring device is ready for operation again immediately without any errors
- If the sensor is replaced: once the sensor has been replaced, new sensor data are transferred from the S-DAT in the measuring device and the measuring device is ready for operation again immediately without any errors
- If exchanging the electronics module (e.g. I/O electronics module): Once the electronics module has been replaced, the software of the module is compared against the current device firmware. The module software is upgraded or downgraded where necessary. The electronics module is available for use immediately afterwards and no compatibility problems occur.

#### Manual

Additional parameter data record (complete parameter settings) in the integrated device memory HistoROM backup for:

- Data backup function
   Backup and subsequent restoration of a device configuration in the device memory
   HistoROM backup
- Data comparison function
   Comparison of the current device configuration with the device configuration saved in the device memory HistoROM backup

#### Data transmission

#### Manual

Transfer of a device configuration to another device using the export function of the specific operating tool, e.g. with FieldCare, DeviceCare or Web server: to duplicate the configuration or to store in an archive (e.g. for backup purposes)

#### Event list

#### Automatic

- Chronological display of up to 20 event messages in the events list
- If the Extended HistoROM application package (order option) is enabled: up to 100
  event messages are displayed in the events list along with a time stamp, plain text
  description and remedial measures
- The events list can be exported and displayed via a variety of interfaces and operating tools e.q. DeviceCare, FieldCare or Web server

#### Data logging

#### Manual

If the **Extended HistoROM** application package (order option) is enabled:

- Recording of 1 to 4 channels of up to 1000 measured values (up to 250 measured values per channel)
- User configurable recording interval
- Export the measured value log via a variety of interfaces and operating tools e.g. FieldCare, DeviceCare or web server

# 16.12 Certificates and approvals

Current certificates and approvals for the product are available at <a href="https://www.endress.com">www.endress.com</a> on the relevant product page:

- 1. Select the product using the filters and search field.
- 2. Open the product page.
- 3. Select **Downloads**.

CE mark

The device meets the legal requirements of the applicable EU Directives. These are listed in the corresponding EU Declaration of Conformity along with the standards applied.

Endress+Hauser confirms successful testing of the device by affixing to it the CE mark.

**UKCA** marking

The device meets the legal requirements of the applicable UK regulations (Statutory Instruments). These are listed in the UKCA Declaration of Conformity along with the designated standards. By selecting the order option for UKCA marking, Endress+Hauser confirms a successful evaluation and testing of the device by affixing the UKCA mark.

210

Contact address Endress+Hauser UK: Endress+Hauser Ltd. Floats Road Manchester M23 9NF United Kingdom

www.uk.endress.com

### RCM marking

The measuring system meets the EMC requirements of the "Australian Communications and Media Authority (ACMA)".

#### Ex approval

The devices are certified for use in hazardous areas and the relevant safety instructions are provided in the separate "Safety Instructions" (XA) document. Reference is made to this document on the nameplate.

#### Radio approval

The measuring device has radio approval.



For detailed information on the radio approval, see the Special Documentation  $\Rightarrow \stackrel{\square}{=} 214$ 

#### Additional certification

#### Tests and certificates

- Ambient temperature −50 °C (−58 °F) (order code for "Test, certificate", option JN)
- EN10204-2.1 confirmation of compliance with the order and EN10204-2.2 test report

# External standards and quidelines

#### ■ EN 60529

Degrees of protection provided by enclosure (IP code)

■ EN 61010-1

Safety requirements for electrical equipment for measurement, control and laboratory use - general requirements

■ IEC/EN 61326-2-3

Emission in accordance with Class A requirements. Electromagnetic compatibility (EMC requirements).

■ NAMUR NE 21

Electromagnetic compatibility (EMC) of industrial process and laboratory control equipment

■ NAMUR NE 32

Data retention in the event of a power failure in field and control instruments with microprocessors

NAMUR NE 43

Standardization of the signal level for the breakdown information of digital transmitters with analog output signal.

■ NAMUR NE 53

Software of field devices and signal-processing devices with digital electronics

NAMUR NE 105

Specifications for integrating fieldbus devices in engineering tools for field devices

■ NAMUR NE 107

Self-monitoring and diagnosis of field devices

■ NAMUR NE 131

Requirements for field devices for standard applications

ETSI EN 300 328

Guidelines for 2.4 GHz radio components.

■ EN 301489

Electromagnetic compatibility and radio spectrum matters (ERM).

# 16.13 Application packages

Many different application packages are available to enhance the functionality of the device. Such packages might be needed to address safety aspects or specific application requirements.

The application packages can be ordered with the device or subsequently from Endress+Hauser. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: www.endress.com.



#### Diagnostic functionality

Order code for "Application package", option EA "Extended HistoROM"

Comprises extended functions concerning the event log and the activation of the measured value memory.

#### Event log:

Memory volume is extended from 20 message entries (standard version) to up to 100 entries.

Data logging (line recorder):

- Memory capacity for up to 1000 measured values is activated.
- 250 measured values can be output via each of the 4 memory channels. The recording interval can be defined and configured by the user.
- Measured value logs can be accessed via the local display or operating tool e.g. FieldCare, DeviceCare or Web server.



For detailed information, see the Operating Instructions for the device.

## Heartbeat Technology

Order code for "Application package", option EB "Heartbeat Verification + Monitoring"

## **Heartbeat Verification**

Meets the requirement for traceable verification to DIN ISO 9001:2008 Chapter 7.6 a) "Control of monitoring and measuring equipment".

- Functional testing in the installed state without interrupting the process.
- Traceable verification results on request, including a report.
- Simple testing process via local operation or other operating interfaces.
- Clear measuring point assessment (pass/fail) with high total test coverage within the framework of manufacturer specifications.
- Extension of calibration intervals according to operator's risk evaluation.

#### **Heartbeat Monitoring**

Continuously supplies data, which are characteristic of the measuring principle, to an external condition monitoring system for the purpose of preventive maintenance or process analysis. These data enable the operator to:

- Draw conclusions using these data and other information about the impact the measuring application has on the measuring performance over time.
- Schedule servicing in time.
- Monitor the process or product quality, e.g. gas pockets.



For detailed information, see the Special Documentation for the device.


#### Petroleum

Order code for "Application package", option EJ "Petroleum"

The most important parameters for the Oil & Gas Industry can be calculated and displayed with this application package.

212

- Corrected volume flow and calculated reference density in accordance with the "API Manual of Petroleum Measurement Standards, Chapter 11.1"
- A temperature measurement is required to calculate the corrected volume. The measured values can be read in via the 4-20 mA input on the device, for example. As a temperature measuring device, the resistance thermometer TST602 is recommended. TMT82 is recommended for use in hazardous areas.

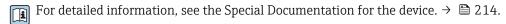

### Petroleum & Product identification

Order code for "Application package", option EQ "Petroleum& Product identification"

The most important parameters for the Oil & Gas Industry can be calculated and displayed with this application package. It is also possible to identify the product based on the sound velocity or the reference density.

- Corrected volume flow and calculated reference density in accordance with the "API Manual of Petroleum Measurement Standards, Chapter 11.1"
- A temperature measurement is required to calculate the corrected volume. The measured values can be read in via the 4-20 mA input on the device, for example. As a temperature measuring device, the resistance thermometer TST602 is recommended. TMT82 is recommended for use in hazardous areas.

## 16.14 Accessories



Overview of accessories available for order  $\rightarrow \implies 187$ 

#### 16.15 Supplemental documentation

- For an overview of the scope of the associated Technical Documentation, refer to the following:
  - Device Viewer (www.endress.com/deviceviewer): Enter the serial number from the nameplate
  - Endress+Hauser Operations app: Enter serial number from nameplate or scan matrix code on nameplate.

#### Standard documentation

#### **Brief Operating Instructions**

Brief Operating Instructions for the sensor

Measuring device	Documentation code
Proline Prosonic Flow P	KA01474D

#### *Brief Operating Instructions for the transmitter*

Measuring device	Documentation code
Proline 500	KA01476D

#### **Technical Information**

Measuring device	Documentation code
Prosonic Flow P 500	TI01504D

# **Description of Device Parameters**

	Documentation code	
Measuring device	HART	Modbus RS485
Prosonic Flow P 500	GP01147D	GP01148D

Supplementary devicedependent documentation **Safety Instructions** 

Safety instructions for electrical equipment for hazardous areas.

Contents	Documentation code
ATEX/IECEx Ex ia	XA02091D
ATEX/IECEx Ex ec	XA02092D
cCSAus Ex ia	XA02093D
cCSAus Ex ec	XA02094D
cCSAus XP	XA02095D
EAC Ex ia	XA03018D
EAC Ex nA	XA03019D
JPN Ex d	XA02617D
KCs Ex d	XA03194D
INMETRO Ex ia	XA02650D
INMETRO Ex ec	XA02651D
NEPSI Ex ia	XA02652D
NEPSI Ex nA	XA02653D
UKEX Ex ia	XA02578D
UKEX Ex ec	XA02579D

# **Special Documentation**

Contents	Documentation code
Radio approvals for WLAN interface for A309/A310 display module	SD01793D
FlowDC	SD02674D
Heartbeat Technology	SD02594D
High-temperature sensors	SD03088D
Petroleum & product identification	SD03108D
Web server	SD02604D

# **Installation Instructions**

Contents	Comment
Installation instructions for spare part sets and accessories	<ul> <li>Access the overview of all the available spare part sets via Device Viewer → 185</li> <li>Accessories available for order with Installation Instructions → 187</li> </ul>

# Index

A	Context menu
Access authorization to parameters	Calling up
Read access	Closing
Write access	Explanation
Access code	Coupling medium
Incorrect input	Coupling pad or coupling gel 36, 37, 40
Adapting the diagnostic behavior 171	Current consumption
Additional certification	D
Ambient conditions	D
Operating height	Date of manufacture
Relative humidity	Declaration of Conformity
Shock and vibration resistance 203	Defining the access code
Storage temperature	Degree of protection 61, 203
Ambient temperature	Design
Influence	Measuring device
Ambient temperature range 27, 203	Operating menu
Application	Device components
Application packages	Device description files
Applicator	Device locking, status
Approvals	Device name
Auto scan buffer	Sensor
see Modbus RS485 Modbus data map	Transmitter
	Device repair
C	Device revision
Cable entries	Device type code
Technical data	Device Viewer
Cable entry	DeviceCare
Degree of protection 61	Device description file
CE mark	Diagnosis
Certificates	Symbols
Check	Diagnostic behavior
Connection	Explanation
Installation status	Symbols
Mounting	Diagnostic information
Checklist	Communication interface
Post-connection check 61	Design, description
Post-mounting check 45	DeviceCare
Cleaning	FieldCare
Exterior cleaning	LEDs
Commissioning	Local display
Advanced settings	Overview
Configuring the measuring device 93	Remedial measures
Configuring error response mode, Modbus RS485 171	Web browser
Connecting the connecting cable	Diagnostic message
Proline 500 terminal assignment 50	Diagnostics list
Connecting the measuring device	Dimensions
Proline 500	DIP switch
Connecting the sensor cable	see Write protection switch
Proline 500 transmitter	Direct access
Connecting the signal cable/supply voltage cable	Disabling write protection
Proline 500 transmitter	Display
Connection	see Local display
see Electrical connection	Display area
Connection cable	For operational display
Connection preparations	In the navigation view 67
Connection tools	

Display values	Functions
For locking status	see Parameters
Displaying the measured value history 159	
Disposal	G
Document	Galvanic isolation
Function 6	11
Symbols	H
Document function 6	Hardware write protection
	Help text
E	Calling up
Editing view	Closing
Input screen	Explanation
Using operating elements 69, 70	HistoROM
Electrical connection	ī
Computer with web browser (e.g. Microsoft Edge) 83	I
Degree of protection 61	Identifying the measuring device
Measuring device	Incoming acceptance
Operating tool (e.g. FieldCare, DeviceCare, AMS	Indication
Device Manager, SIMATIC PDM) 83	Current diagnostic event
Operating tools	Previous diagnostic event 177
Via Modbus RS485 protocol 83	Influence
Via service interface (CDI-RJ45) 83	Ambient temperature
Via WLAN interface 84	Information about this document 6
Web server	Inlet runs
WLAN interface	Input
Electromagnetic compatibility 204	Inspection
Electronics module	Received goods
Enabling write protection	Intended use
Enabling/disabling the keypad lock 76	•
Endress+Hauser services	L
Maintenance	Languages, operation options 207
Repair	Line recorder
Error messages	Local display
see Diagnostic messages	Navigation view 67
Event logbook	see Diagnostic message
Events list	see In alarm condition
Ex approval	see Operational display
Extended order code	Text editor 69
Sensor	Low flow cut off
Transmitter	7.5
Exterior cleaning	M
Exterior cicuming	Main electronics module
F	Maintenance
Field of application	Maintenance tasks
Residual risks	Managing the device configuration 137
FieldCare	Manufacturer ID
Device description file	Materials
Establishing a connection	Maximum measurement error 200
Function	Measured variables
User interface	Calculated
Filtering the event logbook	Direct
Firmware	see Process variables
Release date	Measuring and test equipment 184
Version	Measuring device
Firmware history	Configuring
Flow direction	Conversion
FlowDC	Design
	Disposal
Function codes	Mounting the sensor
	Preparing for electrical connection

Preparing for mounting 29	Menus, submenus 63
Removing	Submenus and user roles 64
Repairs	Operating philosophy 64
Switching on	Operation
Measuring mode	Operation options
Measuring principle	Operational display
Measuring range	Operational safety
	Order code
Measuring system	
	Orientation (vertical, horizontal)
Diagnostics	Outlet runs
Setup	Output signal
Menus	Output variables
For measuring device configuration 93	P
For specific settings	<del>-</del>
Modbus RS485	Packaging disposal
Configuring error response mode 171	Parameter
Diagnostic information	Changing
Function codes	Entering values or text
Modbus data map	Parameter settings
Read access	Administration (Submenu) 140
Reading out data	Advanced setup (Submenu) 126
Register addresses	Communication (Submenu) 97
Register information 89	Configuration backup (Submenu) 137
Response time	Current input
Scan list	Current input (Wizard)
Write access	Current input 1 to n (Submenu)
Mounting	Current output
Mounting dimensions	Current output (Wizard)
see Dimensions	Data logging (Submenu)
Mounting location	Define access code (Wizard)
Mounting preparations	Device information (Submenu)
	Diagnostics (Menu)
Mounting requirements	Display (Submenu)
Dimensions	Display (Wizard)
Inlet and outlet runs	Double pulse output
Mounting location	Double pulse output (Submenu)
Orientation	Double pulse output (Wizard)
Mounting tool	
N	I/O configuration
	I/O configuration (Submenu)
Nameplate	Installation status (Submenu)
Sensor	Low flow cut off (Wizard)
Transmitter	Measuring point (Wizard)
Navigation path (navigation view) 67	Process variables (Submenu)
Navigation view	Pulse/frequency/switch output
In the submenu 67	Pulse/frequency/switch output (Wizard)
In the wizard 67	110, 112, 115
Netilion	Pulse/frequency/switch output 1 to n (Submenu) 155
Numeric editor 69	Relay output
	Relay output 1 to n (Submenu) 155
0	Relay output 1 to n (Wizard)
Onsite display	Reset access code (Submenu) 140
Numeric editor 69	Sensor adjustment (Submenu) 126
Operable flow range	Sensor setup (Submenu)
Operating elements 71, 167	Setup (Menu)
Operating height	Simulation (Submenu)
Operating keys	Status input
see Operating elements	Status input 1 to n (Submenu)
Operating menu	Status input 1 to n (Wizard)
Design	System units (Submenu)
5	- , - : - : : : : : : : : : : : : : : :

System values (Submenu)	Current output	107
Totalizer (Submenu)	Double pulse output	119
Totalizer 1 to n (Submenu) 130	I/O configuration	103
Totalizer handling (Submenu) 157	Local display	120
Value current output 1 to n (Submenu) 154	Low flow cut off	123
Web server (Submenu) 82	Managing the device configuration	137
WLAN settings (Wizard) 136	Measuring point	98
Performance characteristics 200	Operating language	93
Post-connection check	Pulse output	
Post-connection check (checklist) 61	Pulse/frequency/switch output 1	10, 112
Post-mounting check	Relay output	117
Post-mounting check (checklist) 45	Resetting the device	181
Potential equalization	Resetting the totalizer	157
Power consumption	Sensor adjustment	
Power supply failure	Sensor setup	
Pressure loss	Simulation	
Product safety	Status input	
Proline 500 connecting cable terminal assignment	Switch output	
Sensor connection housing 50	System units	
Proline 500 transmitter	Tag name	
Connecting the signal cable/supply voltage cable 52	Totalizer	
Protecting parameter settings	Totalizer reset	
31 3	WLAN	
?	Shock and vibration resistance	
Radio approval	Signal on alarm	
RCM marking	Software release	
Read access	Sound velocity range	
Reading off measured values 147	Spare part	
Reading out diagnostic information, Modbus RS485 171	Spare parts	
Recalibration	Special connection instructions	
Reference operating conditions 200	Standards and quidelines	
Registered trademarks	Status area	
Remedial measures	For operational display	65
Calling up	In the navigation view	
Closing	Status signals	
Remote operation	Storage concept	
Repair	Storage conditions	
Notes	Storage temperature	
Repair of a device	Storage temperature range	
Repeatability	Submenu	
Replacement	Administration	39. 140
Device components	Advanced setup 1	
Requirements for personnel	Communication	
Return	Configuration backup	
	Current input 1 to n	
5	Data logging	
Safety	Device information	
Sensor	Display	
Mounting	Double pulse output	
Sensor set selection and arrangement	Events list	
Serial number	I/O configuration	
Setting the operating language	Input values	
Settings	Installation status	
Adapting the measuring device to the process	Measured values	
conditions	Output values	
Administration	Overview	
Advanced display configurations 133	Process variables	
Communication interface 97	Pulse/frequency/switch output 1 to n	
Current input	Relay output 1 to n	

	140
Sensor adjustment	126
Sensor setup	126
	140
	154
System units	95
	152
Totalizer	156
	130
	157
	154
Web server	82
	199
- 11.7	196
Symbols	
Controlling data entries	70
For communication	65
For diagnostic behavior	65
For locking	
For measured variable	. 65
For measurement channel number	
For menus	
	-
For parameters	
For submonia	. 65 67
For submenu	67
For wizards	_
In the status area of the local display	
Input screen	
Operating elements	69
System design	
Measiiring system	101
Measuring system	191
see Measuring device design	
see Measuring device design System integration	
see Measuring device design	88
see Measuring device design System integration	
see Measuring device design System integration	88 191
see Measuring device design System integration	88 191 27
see Measuring device design System integration	88 191 27 207
see Measuring device design System integration	88 191 27 207 204
see Measuring device design System integration	88 191 27 207 204 . 18
see Measuring device design System integration	88 191 27 207 204 . 18 . 48
see Measuring device design System integration	88 191 27 207 204 . 18 . 48 200
see Measuring device design  System integration	88 191 27 207 204 . 18 . 48 200 211
see Measuring device design  System integration	88 191 27 207 204 . 18 . 48 200 211
see Measuring device design  System integration	88 191 27 207 204 . 18 . 48 200 211 69
see Measuring device design System integration	88 191 27 207 204 . 18 . 48 200 211 69
see Measuring device design  System integration	88 191 27 207 204 . 18 . 48 200 211 69
see Measuring device design System integration	88 191 27 207 204 . 18 . 48 200 211 69
see Measuring device design System integration  T Technical data, overview Temperature range Ambient temperature range Ambient temperature range for display Medium temperature Storage temperature Terminal assignment Terminals Tests and certificates Text editor Tool For mounting Tool tip see Help text Tools	88 191 27 207 204 . 18 . 48 200 211 69
see Measuring device design System integration  T Technical data, overview Temperature range Ambient temperature range Ambient temperature range for display Medium temperature Storage temperature Terminal assignment Terminals Tests and certificates Text editor Tool For mounting Tool tip see Help text Tools For electrical connection	88 191 27 207 204 . 18 . 48 200 211 69 . 29
see Measuring device design System integration  T Technical data, overview Temperature range Ambient temperature range Ambient temperature range for display Medium temperature Storage temperature Terminal assignment Terminals Tests and certificates Text editor Tool For mounting Tool tip see Help text Tools	88 191 27 207 204 . 18 . 48 200 211 69 . 29
see Measuring device design System integration  T Technical data, overview Temperature range Ambient temperature range Ambient temperature range for display Medium temperature Storage temperature Terminal assignment Terminals Tests and certificates Text editor Tool For mounting Tool tip see Help text Tools For electrical connection	88 191 27 207 204 . 18 . 48 200 211 69 . 29
see Measuring device design  System integration	88 191 27 204 . 18 . 48 200 211 69 . 29
see Measuring device design System integration  T Technical data, overview Temperature range    Ambient temperature range for display    Medium temperature    Storage temperature Terminal assignment Terminals Tests and certificates Text editor Tool    For mounting Tool tip    see Help text Tools    For electrical connection    Transportation Totalizer	88 191 27 204 . 18 . 48 200 211 69 . 29
see Measuring device design  System integration	88 191 27 207 204 . 18 . 48 200 211 69 . 29 . 46 . 18
see Measuring device design  System integration  T  Technical data, overview  Temperature range  Ambient temperature range  Ambient temperature range for display  Medium temperature  Storage temperature  Terminal assignment  Terminals  Tests and certificates  Text editor  Tool  For mounting  Tool tip  see Help text  Tools  For electrical connection  Transportation  Totalizer  Configuring  Transmitter	88 191 27 207 204 . 18 . 48 200 211 69 . 29 . 46 . 18 130 44
see Measuring device design System integration  T Technical data, overview Temperature range Ambient temperature range Ambient temperature range for display Medium temperature Storage temperature Terminal assignment Terminals Tests and certificates Text editor Tool For mounting Tool tip see Help text Tools For electrical connection Transportation Totalizer Configuring Transmitter Turning the display module	88 191 27 207 204 . 18 200 211 69 . 29 . 46 . 18 130 44 . 44

Troubleshooting	
General	
Turning the display module	44
Turning the electronics housing	
see Turning the transmitter housing	
Turning the transmitter housing	44
U	
UKCA marking	210
Use of measuring device	210
Borderline cases	9
Incorrect use	
see Intended use	
User roles	64
V	
Version data for the device	88
version data for the device	
W	
Weight	
Transport (notes)	18
Wizard	
Current input	
Current output	
Define access code	
Display	
Double pulse output	
Low flow cut off	
Measuring point	
Pulse/frequency/switch output 110, 1	
Relay output 1 to n	
Status input 1 to n	
WLAN settings	
WLAN settings	
Workplace safety	
Write access	/5
Write protection	17.5
Via access code	
Via write protection switch	



www.addresses.endress.com