

Brief Operating Instructions

Micropilot FMR43

IO-Link

Free space radar



These Instructions are Brief Operating Instructions; they are not a substitute for the Operating Instructions pertaining to the device.

Detailed information about the device can be found in the Operating Instructions and the other documentation:

Available for all device versions via:

- Internet: www.endress.com/deviceviewer
- Smart phone/tablet: *Endress+Hauser Operations App*

1 Associated documentation



2 About this document

2.1 Document function

The Brief Operating Instructions contain all the essential information from incoming acceptance to initial commissioning.

2.2 Symbols

2.2.1 Safety symbols

DANGER

This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury.

WARNING

This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.

CAUTION

This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or medium injury.

NOTICE

This symbol contains information on procedures and other facts which do not result in personal injury.

2.2.2 Communication-specific symbols

Bluetooth®:

Wireless data transmission between devices over a short distance.

IO-Link: **IO-Link**

Communications system for connecting intelligent sensors and actuators to an automation system. In the IEC 61131-9 standard, IO-Link is standardized under the description "Single-drop digital communication interface for small sensors and actuators (SDCI)".


2.2.3 Symbols for certain types of Information

Permitted:


Procedures, processes or actions that are permitted.

Forbidden:


Procedures, processes or actions that are forbidden.

Additional information: 

Reference to documentation: 

Reference to page: 

Series of steps: [1.](#), [2.](#), [3.](#)

Result of an individual step: 

2.2.4 Symbols in graphics

Item numbers: 1, 2, 3 ...

Series of steps: [1.](#), [2.](#), [3.](#)

Views: A, B, C, ...

2.3 Documentation

 For an overview of the scope of the associated Technical Documentation, refer to the following:

- *Device Viewer* (www.endress.com/deviceviewer): Enter the serial number from the nameplate
- *Endress+Hauser Operations app*: Enter serial number from nameplate or scan matrix code on nameplate.

2.4 Registered trademarks

Apple®

Apple, the Apple logo, iPhone, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc.

Android®

Android, Google Play and the Google Play logo are trademarks of Google Inc.

Bluetooth®

The *Bluetooth*® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Endress+Hauser is under license. Other trademarks and trade names are those of their respective owners.

IO-Link®

Is a registered trademark. It may only be used in conjunction with products and services by members of the IO-Link Community or by non-members who hold an appropriate license. For more detailed information on its use, refer to the rules of the IO-Link Community at:

www.io.link.com.

3 Basic safety instructions

3.1 Requirements for the personnel

The personnel must fulfill the following requirements for its tasks:

- ▶ Trained, qualified specialists must have a relevant qualification for this specific function and task.
- ▶ Are authorized by the plant owner/operator.
- ▶ Are familiar with federal/national regulations.
- ▶ Before starting work, read and understand the instructions in the manual and supplementary documentation as well as the certificates (depending on the application).
- ▶ Follow instructions and comply with basic conditions.

3.2 Intended use

The measuring device described in these Operating Instructions is intended for continuous, non-contact level measurement in liquids, pastes, sludges and bulk solids.

Incorrect use

The manufacturer is not liable for damage caused by improper or unintended use.

Avoid mechanical damage:

- ▶ Do not touch or clean device surfaces with pointed or hard objects.

Clarification for borderline cases:

- ▶ For special media and fluids for cleaning, Endress+Hauser is glad to provide assistance in verifying the corrosion resistance of fluid-wetted materials, but does not accept any warranty or liability.

Residual risks

Due to the transfer of heat from the process and power dissipation within the electronics, the temperature of the housing may increase to up to 80 °C (176 °F) during operation. When in operation, the sensor can reach a temperature close to the medium temperature.

Danger of burns from contact with surfaces!

- ▶ In the event of elevated fluid temperatures, ensure protection against contact to prevent burns.

3.3 Workplace safety

When working on and with the device:

- ▶ Wear the required personal protective equipment as per national regulations.
- ▶ Switch off the supply voltage before connecting the device.

3.4 Operational safety

Risk of injury!

- ▶ Operate the device only if it is in proper technical condition, free from errors and faults.
- ▶ The operator is responsible for trouble-free operation of the device.

Modifications to the device

Unauthorized modifications to the device are not permitted and can lead to unforeseeable dangers:

- ▶ If modifications are nevertheless required, consult with the manufacturer.

Repair

To ensure continued operational safety and reliability:

- ▶ Only use original accessories.

Hazardous area

To eliminate the risk of danger to persons or the facility when the device is used in the approval-related area (e.g. explosion protection, pressure equipment safety):

- ▶ Check the nameplate to verify if the device ordered can be put to its intended use in the hazardous area.
- ▶ Comply with the instructions in the separate supplementary documentation, which is an integral part of this manual.

3.5 Product security

This state-of-the-art device is designed and tested in accordance with good engineering practice to meet operational safety standards. It left the factory in a condition in which it is safe to operate.

The device fulfills general safety requirements and legal requirements. It also complies with the EU directives listed in the device-specific EU Declaration of Conformity. Endress+Hauser confirms this fact by affixing the CE marking.

3.6 IT security

Our warranty is valid only if the product is installed and used as described in the Operating Instructions. The product is equipped with security mechanisms to protect it against any inadvertent changes to the settings.

IT security measures, which provide additional protection for the product and associated data transfer, must be implemented by the operators themselves in line with their security standards.

3.7 Device-specific IT security

The device offers specific functions to support protective measures by the operator. These functions can be configured by the user and guarantee greater in-operation safety if used correctly. The user role can be changed with an access code (applies to operation via the onsite display, Bluetooth or FieldCare, DeviceCare, asset management tools e.g. AMS, PDM).


3.7.1 Access via Bluetooth® wireless technology

Secure signal transmission via Bluetooth® wireless technology uses an encryption method tested by the Fraunhofer Institute.

- Without the SmartBlue app, the device is not visible via Bluetooth® wireless technology.
- Only one point-to-point connection is established between the device and a smartphone or tablet.
- The Bluetooth® wireless technology interface can be disabled via local operation or via SmartBlue/FieldCare/DeviceCare.

4 Incoming acceptance and product identification

4.1 Incoming acceptance

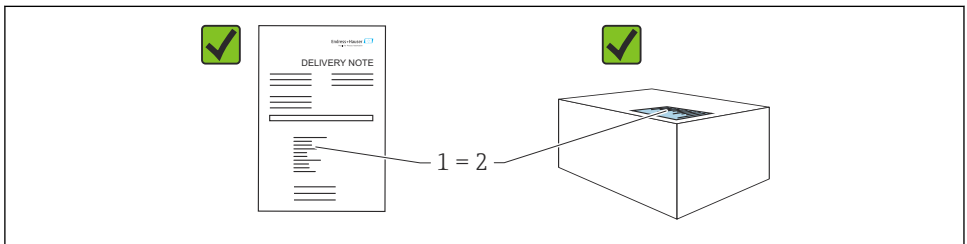

A0016870

Check the following during incoming acceptance:

- Is the order code on the delivery note (1) identical to the order code on the product sticker (2)?
- Are the goods undamaged?
- Do the data on the nameplate correspond to the order specifications and the delivery note?
- Is the documentation provided?



If one of these conditions is not met, please contact the manufacturer's sales office.

4.2 Product identification

The following options are available for identification of the device:

- Nameplate specifications
- Order code with breakdown of the device features on the delivery note
- Enter the serial numbers from the nameplates in *Device Viewer* (www.endress.com/deviceviewer): all the information about the device is displayed.

4.2.1 Nameplate

The information that is required by law and is relevant to the device is shown on the nameplate, e.g.:

- Manufacturer identification
- Order number, extended order code, serial number
- Technical data, degree of protection

- Firmware version, hardware version
- Approval-specific information
- DataMatrix code (information about the device)

Compare the data on the nameplate with your order.

4.2.2 Manufacturer address

Endress+Hauser SE+Co. KG

Hauptstraße 1

79689 Maulburg, Germany

Place of manufacture: See nameplate.

4.3 Storage and transport

4.3.1 Storage conditions

- Use the original packaging
- Store the device in clean and dry conditions and protect from damage caused by shocks

Storage temperature

-40 to +85 °C (-40 to +185 °F)

4.3.2 Transporting the product to the measuring point



WARNING

Incorrect transport!


The housing or sensor can be damaged or pull off. Risk of injury!


- ▶ Transport the device to the measuring point in its original packaging or by the process connection.

5 Mounting


5.1 Mounting requirements

5.1.1 Mounting instructions

 During installation, it is important to ensure that the sealing element used has an operating temperature that corresponds to the maximum temperature of the process.

- Devices with CSA approval are intended for indoor use
- Devices are suitable for use in wet environments in accordance with IEC/EN 61010-1
- Use the operating menu to orient the onsite display to ensure optimum readability
- The onsite display can be adapted to the lighting conditions (color scheme, see  operating menu)
- Protect the housing against impact

5.1.2 Internal vessel fittings

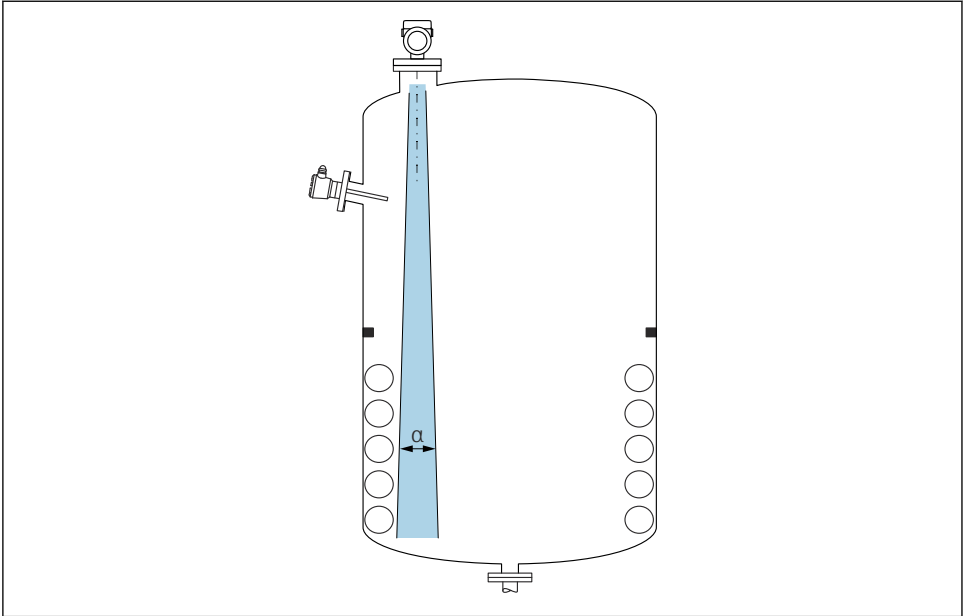

A0031777

Avoid internal fittings (point level switches, temperature sensors, struts, vacuum rings, heating coils, baffles etc.) inside the signal beam. Pay attention to the beam angle α .


5.1.3 Aligning the antenna axes

See Operating Instructions.


5.2 Mounting the device

5.2.1 Screwing in the device

- Turn by the hex bolt only; max. torque 50 Nm (37 lbf ft)
- M24 sensors: Mount with tool only on the parallel spanner flat, max. torque 30 Nm (22 lbf ft)
- Do not turn at the housing!

 Open-ended wrench 32 mm

 Open-ended wrench 55 mm (for process connections MNPT/G 1½)

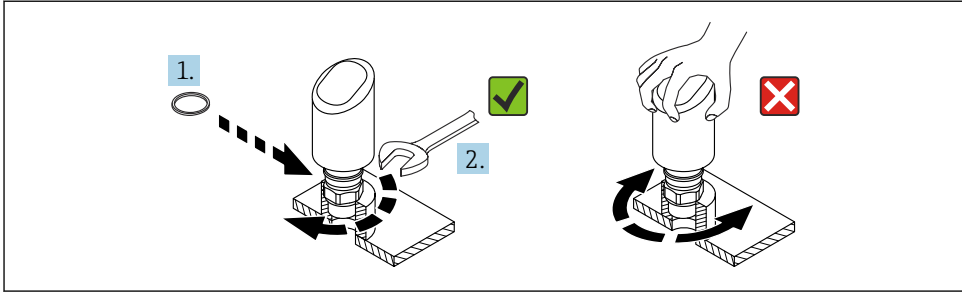

A0054233

1 Screwing in the device

5.2.2 Information concerning threaded connections

i In the case of longer nozzles, reduced measuring performance must be expected.

Please note the following:

- The end of the nozzle must be smooth and free from burrs.
- The edge of the nozzle should be rounded.
- Mapping must be performed.
- Please contact the manufacturer's support department for applications with nozzles that are higher than indicated in the table.

5.2.3 Process connections

See Operating Instructions.

5.2.4 Post-mounting checks

- Is the device undamaged (visual inspection)?
- Are the measuring point identification and labeling correct (visual inspection)?
- Is the device properly secured?
- Does the device comply with the measuring point specifications?

For example:

- Process temperature
- Process pressure
- Ambient temperature
- Measuring range

6 Electrical connection

6.1 Connecting the device

6.1.1 Potential equalization

If necessary, establish potential equalization using the process connection or the grounding clamp supplied by the customer.

6.1.2 Supply voltage

12 to 30 V_{DC} on a direct current power unit
IO-Link communication is guaranteed only if the supply voltage is at least 18 V.



The power unit must be safety-approved (e.g. PELV, SELV, Class 2) and must comply with the relevant protocol specifications.

Protective circuits against reverse polarity, HF influences and overvoltage peaks are installed.

6.1.3 Power consumption

To meet device safety specifications according to the IEC/EN 61010 standard, the installation must ensure that the maximum current is limited to 500 mA.

6.1.4 Overvoltage protection

The device satisfies the IEC/DIN EN IEC 61326-1 product standard (Table 2 Industrial environment). Depending on the type of port (DC supply, input/output port) different test levels against transient overvoltages (IEC/DIN EN 61000-4-5 Surge) are applied according to IEC/DIN EN 61326-1: Test level on DC power ports and input/output ports is 1000 V line to earth.

Overvoltage protection category

According to IEC/DIN EN 61010-1, the device is intended for use in overvoltage protection category II networks.

6.1.5 Range of adjustment

Switch points can be configured via IO-Link.

6.1.6 Switching capacity

- Switch status ON: $I_a \leq 200 \text{ mA}$ ¹⁾; Switch status OFF: $I_a < 0.1 \text{ mA}$ ²⁾
- Switch cycles: $> 1 \cdot 10^7$
- Voltage drop PNP: $\leq 2 \text{ V}$
- Overload protection: Automatic load testing of switching current;
 - Max. capacitive load: $1 \mu\text{F}$ at max. supply voltage (without resistive load)
 - Max. cycle duration: 0.5 s ; min. t_{on} : $40 \mu\text{s}$
 - Periodic disconnection from protective circuit in the event of overcurrent ($f = 1 \text{ Hz}$)

6.1.7 Terminal assignment

⚠ WARNING

Supply voltage might be connected!

Risk of electric shock and/or explosion

- ▶ Ensure that no supply voltage is applied when connecting.
- ▶ The supply voltage must match the specifications on the nameplate.
- ▶ A suitable circuit breaker should be provided for the device in accordance with IEC/EN 61010.
- ▶ The cables must be adequately insulated, with due consideration given to the supply voltage and the overvoltage category.
- ▶ The connecting cables must offer adequate temperature stability, with due consideration given to the ambient temperature.
- ▶ Protective circuits against reverse polarity, HF influences and overvoltage peaks are installed.

⚠ WARNING

An incorrect connection compromises electrical safety!

- ▶ Non-hazardous area: To meet device safety specifications according to the IEC/EN 61010 standard, the installation must ensure that the maximum current is limited to 500 mA.

NOTICE

Damage to analog input of PLC resulting from incorrect connection


- ▶ Do not connect the active PNP switch output of the device to the 4 to 20 mA input of a PLC.

Connect the device in the following order:

1. Check that the supply voltage corresponds to the supply voltage indicated on the nameplate.
2. Connect the device as indicated in the following diagram.
3. Switch on the supply voltage.

-
- 1) If the "1 x PNP + 4 to 20 mA" outputs are used at the same time, the switch output OUT1 can be loaded with up to 100 mA load current over the entire temperature range. The switching current may be up to 200 mA up to an ambient temperature of $50 \text{ }^\circ\text{C}$ ($122 \text{ }^\circ\text{F}$) and up to a process temperature of $85 \text{ }^\circ\text{C}$ ($185 \text{ }^\circ\text{F}$). If the "1 x PNP" or "2 x PNP" configuration is used, the switch outputs can be loaded with a total of up to 200 mA over the entire temperature range.
 - 2) Different for switch output OUT2, for switch status OFF: $I_a < 3.6 \text{ mA}$ and $U_a < 2 \text{ V}$ and for switch status ON: voltage drop PNP: $\leq 2.5 \text{ V}$


2-wire

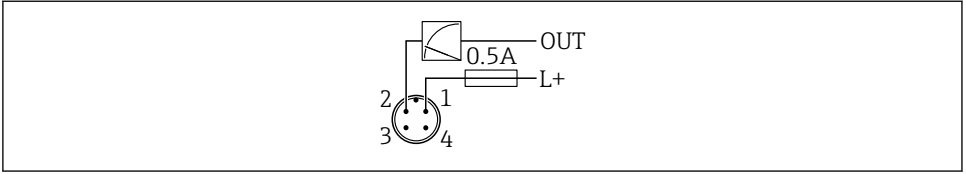

A0052660

- 1 Supply voltage L+, brown wire (BN)
- 2 OUT (L-), white wire (WH)

3-wire or 4-wire

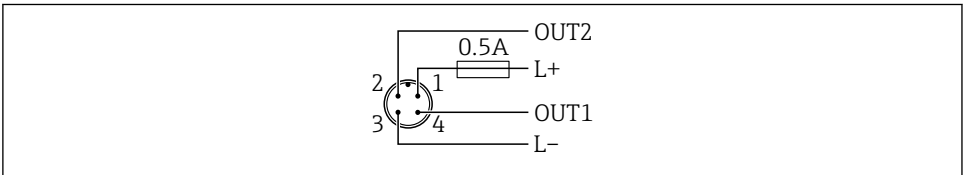


A0052457

- 1 Supply voltage L+, brown wire (BN)
- 2 Switch or analog output (OUT2), white wire (WH)
- 3 Supply voltage L-, blue wire (BU)
- 4 Switching or IO-Link output (OUT1), black wire (BK)

The functionality of output 1 and 2 can be configured.

Connection examples

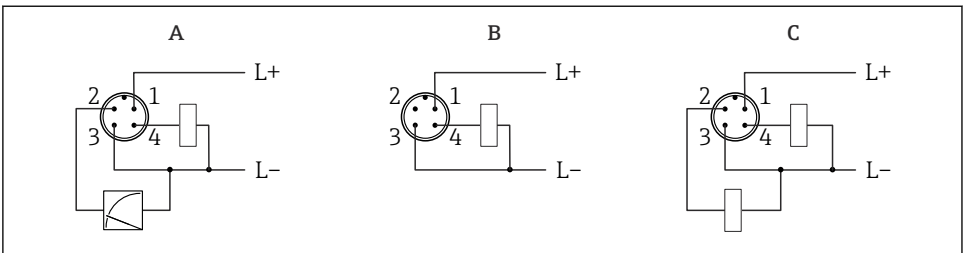

A0052458

- A 1 x PNP switch and analog output (default setting)
- B 1 x PNP switch output (current output must be deactivated. If the current output has not been deactivated, a message appears. In the case of onsite display: error is displayed. In the case of LED indicator: operating status LED permanently red.)
- C 2 x PNP switch output (set second output to switch output)

6.2 Ensuring the degree of protection

For mounted M12 connecting cable: IP66/68/69, NEMA type 4X/6P

NOTICE

Loss of IP protection class due to incorrect installation!

- ▶ The degree of protection only applies if the connecting cable used is plugged in and screwed tight.
- ▶ The degree of protection only applies if the connecting cable used is specified according to the intended protection class.

6.3 Post-connection check

- Is the device or cable undamaged (visual check)?
- Does the cable used comply with the requirements?
- Is the mounted cable strain-relieved?
- Is the screw connection properly mounted?
- Does the supply voltage match the specifications on the nameplate?
- No reverse polarity, terminal assignment correct?
- If supply voltage is present: is the device ready for operation and does an indication appear on the onsite display or is the green operating status LED lit?

7 Operation options

See Operating Instructions.

8 Commissioning

8.1 Preliminaries

WARNING

Settings on the current output can result in a safety-related condition (e.g., product overflow)!

- ▶ Check current output settings.
- ▶ The setting of the current output depends on the setting in the **Measuring mode current output** parameter.

8.2 Installation and function check

Before commissioning the measuring point, check that the post-installation and post-connection checks (checklist) have been performed, see Operating Instructions.

8.3 Switching on the device

Once the supply voltage has been switched on, the device adopts the normal mode after a maximum of 4 s. During the start-up phase, the outputs are in the same state as when switched off.

8.4 Overview of commissioning options


- Commissioning via LED indicator operating key
- Commissioning via onsite display
- Commissioning with the SmartBlue app
- Commissioning via FieldCare/DeviceCare/Field Xpert
- Commissioning via additional operating tools (AMS, PDM, etc.)

8.5 Commissioning via LED indicator operating key

One-key commissioning is an easy way to commission the device when the vessel is empty. In this case, the vessel floor is measured and set to 0 %. 100 % corresponds to 95 % of the measured distance.

Prerequisites:

- Empty, flat, metallic tank floor or minimum level at 0 % with highly reflective (water-based) medium
- No interfering installations in field of vision
- Vessel height: 0.2 to 15 m

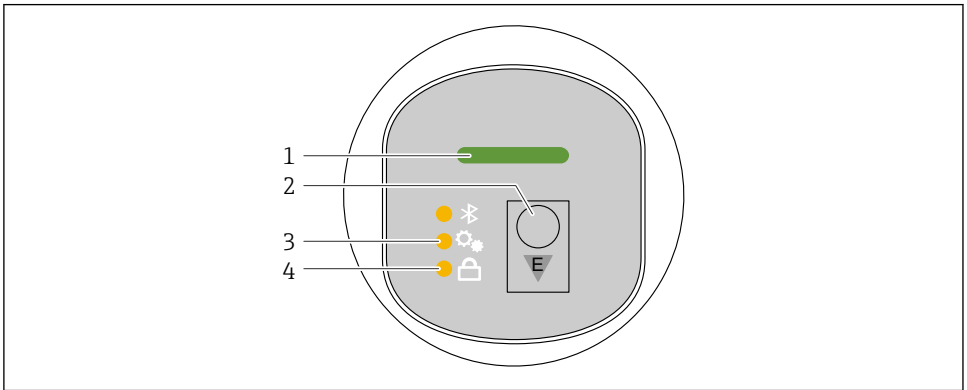

A0053357

- 1 *Operating status LED*
- 2 *Operating key "E"*
- 3 *One-key commissioning LED*
- 4 *Keypad lock LED*

1. If necessary, disable the keypad lock (see Operating Instructions)
2. Repeatedly press the "E" key briefly until the one-key commissioning LED flashes.

3. Press and hold the "E" key for longer than 4 seconds.
 - ↳ The one-key commissioning LED is executed.
The one-key commissioning LED flashes during this operation. The keypad lock LED and Bluetooth LED are off.

Once the operation is complete, the one-key commissioning LED is lit continuously for 12 seconds. The keypad lock LED and Bluetooth LED are off.

If the operation does not complete successfully, the one-key commissioning LED flashes quickly for 12 seconds. The keypad lock LED and Bluetooth LED are off.


8.5.1 Operation

The device is operated by pressing operating key "E" briefly (< 2 s) or pressing and holding it (> 2 s).

Navigation

- The LED for the selected function flashes
- Press the "E" operating key briefly to switch between the functions
- Press and hold down the "E" operating key to select a particular function

Flashing behavior of LEDs (active/inactive)

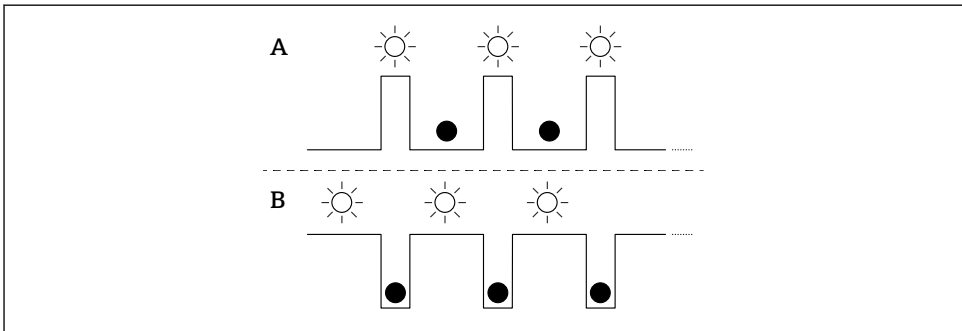

- A Function selected but not active
 B Function selected and active

Disabling the keypad lock

1. Press and hold down operating key "E".
 - ↳ Bluetooth LED flashes.
2. Briefly press operating key "E" repeatedly until the keypad lock LED flashes.
3. Press and hold down operating key "E".
 - ↳ Keypad lock is disabled.


Enabling or disabling Bluetooth

1. If necessary, disable the keypad lock.

2. Repeatedly press the "E" key briefly until the Bluetooth LED flashes.
3. Press and hold down operating key "E".
 - ↳ Bluetooth is enabled (Bluetooth LED is lit) or Bluetooth is disabled (Bluetooth LED goes out).

8.6 Commissioning via onsite display

1. If necessary, enable operation (see Operating Instructions).
2. Start **Commissioning** wizard (see graphic below)

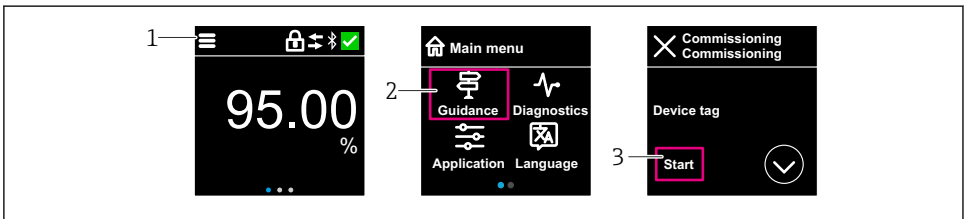

A0053355

- 1 *Press the menu icon*
- 2 *Press the "Guidance" menu*
- 3 *Start the "Commissioning" wizard*

8.6.1 Notes on the "Commissioning" wizard

The **Commissioning** wizard allows you to carry out easy, user-guided commissioning.

1. Once you have started the **Commissioning** wizard, enter the appropriate value in each parameter or select the appropriate option. These values are written directly to the device.
2. Click > to go to the next page.
3. Once all the pages have been completed, click > to close the **Commissioning** wizard.



If the **Commissioning** wizard is cancelled before all necessary parameters have been configured, the device may be in an undefined state. In such situations, it is advisable to reset the device to the factory default settings.

8.6.2 Operation

Navigation


Navigation by swiping with finger.



Operation via the LED indicator is not possible if the Bluetooth connection is enabled.

Selecting option and confirming


Select the required option and confirm using the checkmark at the top right (see screens below).

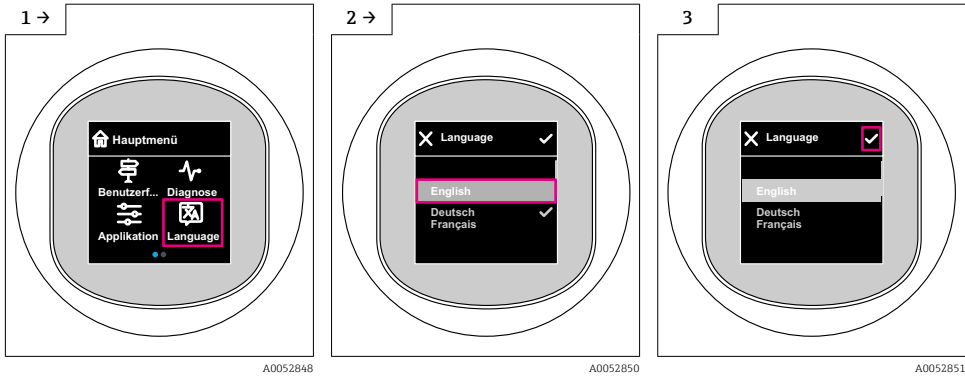

8.6.3 Onsite display, locking or unlocking procedure

Unlocking procedure

1. Tap the center of the display for the following view:

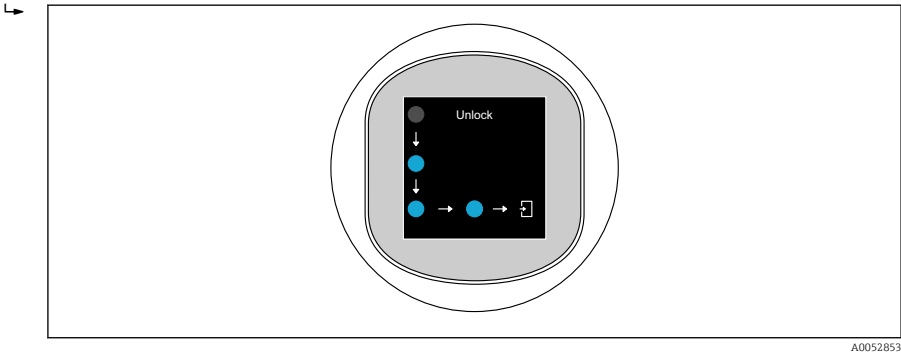

2. Use a finger to follow the arrows without interruption.
 - ↳ The display is unlocked.

Locking procedure


- i** Operation locks automatically (except in **Safety mode** wizard):
 - after 1 min on the main page
 - after 10 min within the operating menu

8.7 Commissioning via FieldCare/DeviceCare

1. Download IO-Link IODD Interpreter DTM: <http://www.endress.com/download>.
Download IO-DD: <https://ioddfinder.io-link.com/>.

2. Integrate the IODD (IO Device Description) in IODD Interpreter. Then start FieldCare and update the DTM catalog.

8.7.1 Establishing a connection via FieldCare, DeviceCare and FieldXpert

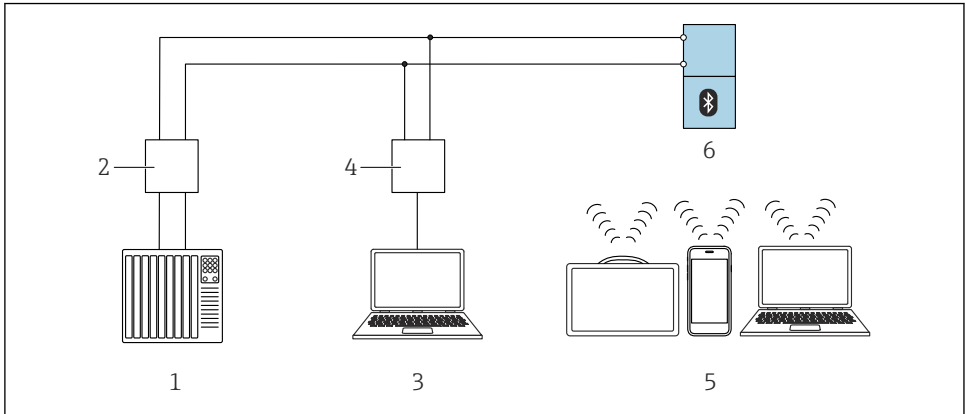

A0053130

2 Options for remote operation via IO-Link

- 1 PLC (programmable logic controller)
- 2 IO-Link master
- 3 Computer with operating tool e.g. DeviceCare/FieldCare)
- 4 FieldPort SFP20
- 5 Field Xpert SMT70/SMT77, smartphone or computer with operating tool (e.g. DeviceCare/FieldCare)
- 6 Transmitter

8.7.2 Information on the IODD

The following parameters are relevant for basic commissioning:

"Basic settings" submenu

Medium type parameter

Empty calibration parameter

Full calibration parameter

Application parameter

8.7.3 Operation

See Operating Instructions.

8.8 Commissioning via additional operating tools (AMS, PDM, etc.)


Download the device-specific drivers: <https://www.endress.com/en/downloads>

For more details, see the help for the relevant operating tool.


8.9 Configuring the operating language

8.9.1 Onsite display

Configuring the operating language

 Before you can set the operating language, you must first unlock the onsite display:

1. Open the operating menu.
2. Select the Language button.

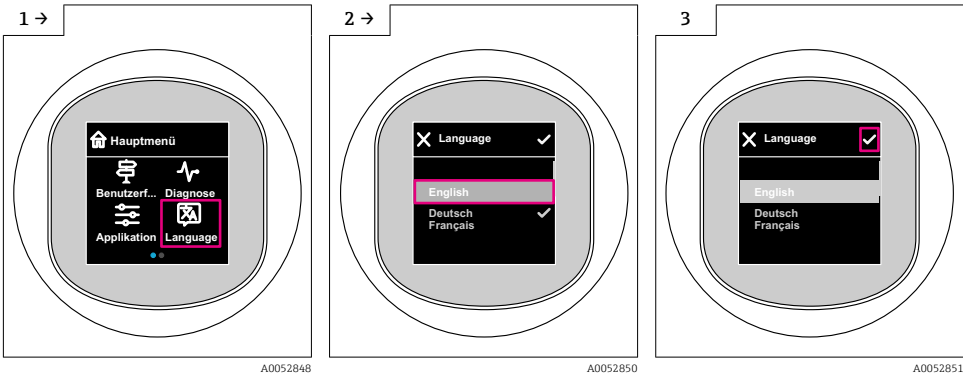

8.9.2 Operating tool

Set display language

System → Display → Language


8.10 Configuring the device

 Commissioning wizard recommended for commissioning.

See  "Commissioning via onsite display" section

For commissioning parameters, see  "Commissioning via FieldCare/DeviceCare" > "Information on IODD"

8.10.1 Level measurement in liquids

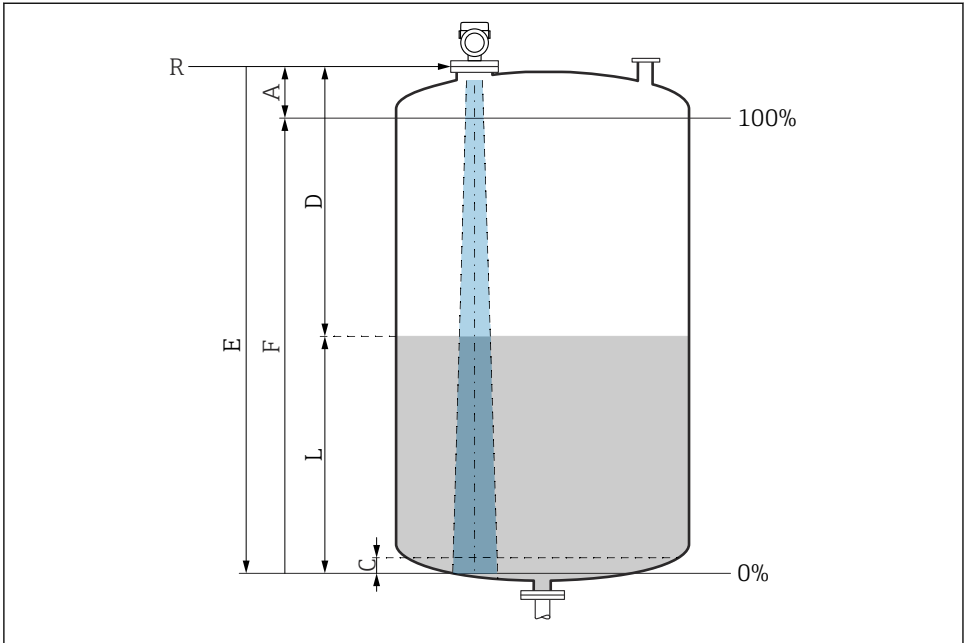


A0016933

3 Configuration parameters for level measurement in liquids

- R* Reference point of measurement
- A* Length of antenna + 10 mm (0.4 in)
- C* 50 to 80 mm (1.97 to 3.15 in); medium $\epsilon_r < 2$
- D* Distance
- L* Level
- E* "Empty calibration" parameter (= 0 %)
- F* "Full calibration" parameter (= 100 %)

In the case of media with a low dielectric constant, $\epsilon_r < 2$, the tank floor may be visible through the medium at very low levels (lower than level C). Reduced accuracy must be expected in this range. If this is not acceptable, the zero point should be positioned at a distance C above the tank floor for these applications (see figure).

8.10.2 Level measurement in bulk solids

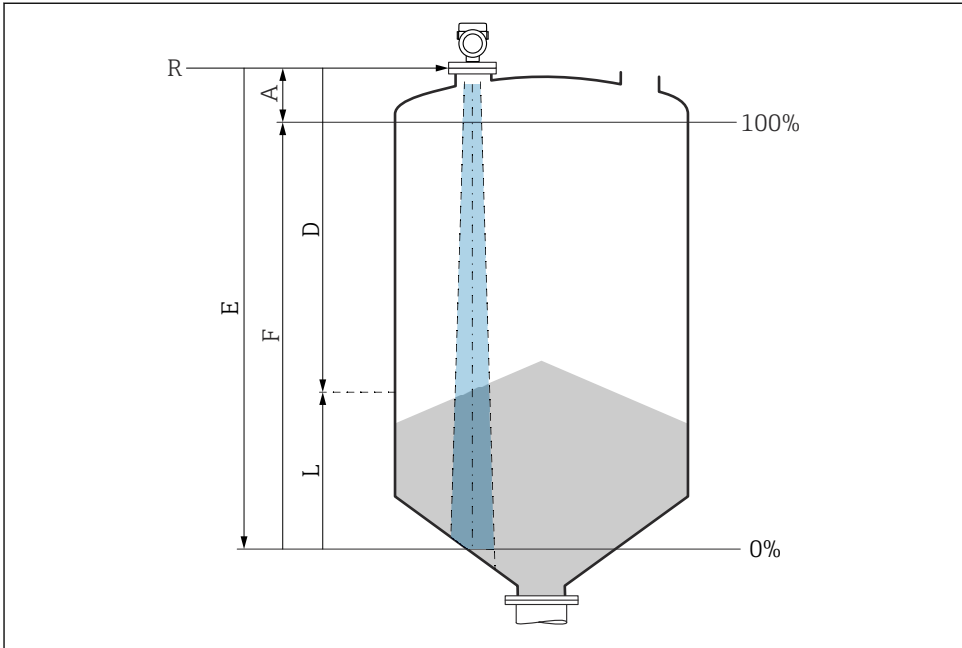

A0016994

4 Configuration parameters for level measurement in bulk solids

- R Reference point of measurement
- A Length of antenna + 10 mm (0.4 in)
- D Distance
- L Level
- E "Empty calibration" parameter (= 0 %)
- F "Full calibration" parameter (= 100 %)

8.10.3 Configuring the "Frequency mode" parameter

Country- or region-specific settings are defined for the radar signals via the **Frequency mode** parameter.

i The **Frequency mode** parameter must be configured in the operating menu using the relevant operating tool at the start of commissioning.

Application → Sensor → Advanced settings → Frequency mode

Operating frequency 80 GHz:

- **Mode 1** option: Continent of Europe, USA, Australia, New Zealand, Canada
- **Mode 2** option: Brazil, Japan, South Korea, Taiwan, Thailand
- **Mode 3** option: Russia, Kazakhstan
- **Mode 4** option: Mexico
- **Mode 5** option: India, Malaysia, South Africa, Indonesia

Operating frequency 180 GHz:

- **Mode 9** option: Continent of Europe
- **Mode 10** option: USA



The measuring properties of the device can change depending on the configured mode. The specified measuring properties are related to the as-delivered state (at operating frequency 80 GHz: mode 1 and at operating frequency 180 GHz: mode 9).

8.10.4 Configuring process monitoring

Digital process monitoring (switch output)


It is possible to select defined switch points and switchback points which act as NO or NC contacts depending on whether a window function or hysteresis function is configured.

Possible setting				Output (OUT1/OUT2)
Function (Config. Mode)	Invert (Config. Logic)	Switch points (Param.SPx)	Hysteresis (Config. Hyst)	
Two point	High active (MIN)	SP1 (float32)	N/A	Normally open contact (NO ¹⁾)
		SP2 (float32)		
	Low active (MAX)	SP1 (float32)	N/A	
		SP2 (float32)		
Window	High active	SP1 (float32)	Hyst (float32)	Normally open contact (NO ¹⁾)
		SP2 (float32)		
	Low active	SP1 (float32)	Hyst (float32)	
		SP2 (float32)		
Single point	High active (MIN)	SP1 (float32)	Hyst (float32)	Normally open contact (NO ¹⁾)
	Low active (MAX)	SP2 (float32)	Hyst (float32)	Normally closed contact (NC ²⁾)

1) NO = normally open

2) NC = normally closed

If the device is restarted within the given hysteresis, the switch output is open (0 V present at the output).

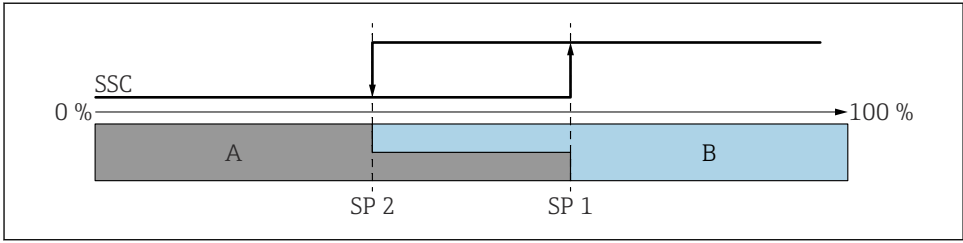

A0054230


5 SSC, Two-point

SP 2 Switch point with lower measured value

SP 1 Switch point with higher measured value

A Inactive

B Active

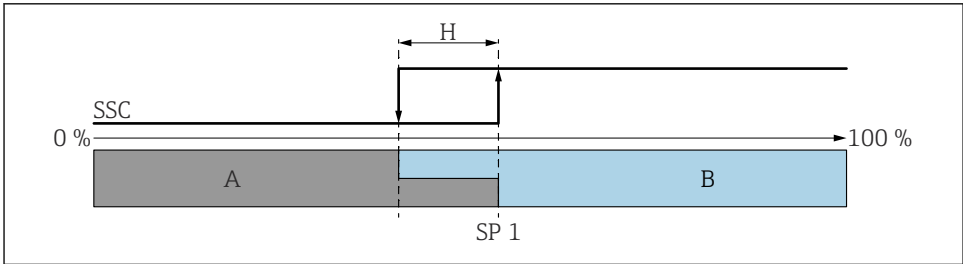

A0054231


6 SSC, single point

H Hysteresis

SP 1 Switch point

A Inactive

B Active

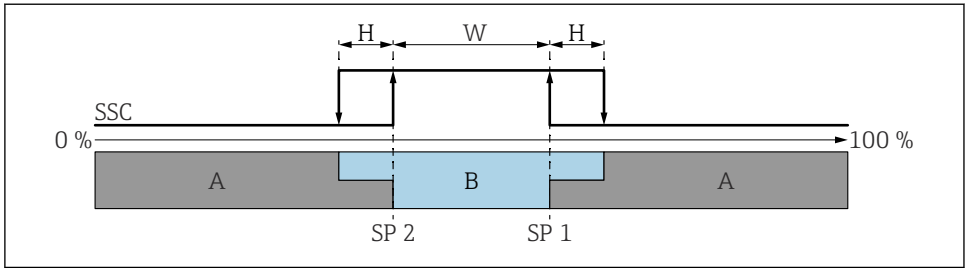

A0054232

7 SSC, window

H Hysteresis

W Window

SP 2 Switch point with lower measured value

SP 1 Switch point with higher measured value

A Inactive

B Active

Teach process (IODD)

A switch point is not entered manually for the teach process, but is defined by assigning the current process value of a switching signal channel (SSC) to the switch point. To assign the process value, the corresponding switch point, e.g. "SP 1", is selected in the next step in the "System command" parameter.

By activating "Teach SP 1" or "Teach SP 2", the current process measured values can be adopted as switch point SP 1 or SP 2. The hysteresis is entered manually for both!

8.11 Protecting settings from unauthorized access

8.11.1 Software locking or unlocking

Locking via password in FieldCare/DeviceCare/SmartBlue app

Access to parameter configuration of the device can be locked by assigning a password. When the device is delivered from the factory, the user role is set to **Maintenance** option. The device parameters can be fully configured with the **Maintenance** option user role. Afterwards, access to the configuration can be locked by assigning a password. The **Maintenance** option switches to the **Operator** option as a result of this locking. The configuration can be accessed by entering the password.

The password is defined under:

System menu **User management** submenu

The user role is changed from the **Maintenance** option to **Operator** option under:

System → User management

Canceling the locking procedure via onsite display/FieldCare/DeviceCare/SmartBlue

After entering the password, you can enable parameter configuration of the device as an **Operator** option with the password. The user role then changes to the **Maintenance** option.

If necessary, the password can be deleted in User management: System → User management



71645868

www.addresses.endress.com
