


# Brief Operating Instructions

## Magphant


Electromagnetic flowmeter

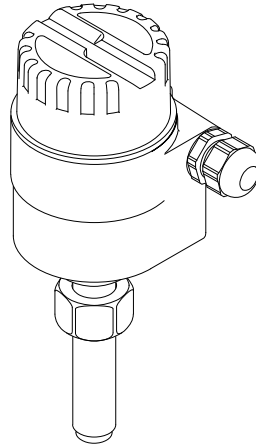

These Instructions are Brief Operating Instructions; they are not a substitute for the Operating Instructions pertaining to the device.

Detailed information about the device can be found in the Operating Instructions and the other documentation:

- On the CD-ROM supplied (not included in the delivery for all device versions).
- Available for all device versions via:
  - Internet: [www.endress.com/deviceviewer](http://www.endress.com/deviceviewer)
  - Smart phone/tablet: *Endress+Hauser Operations App*

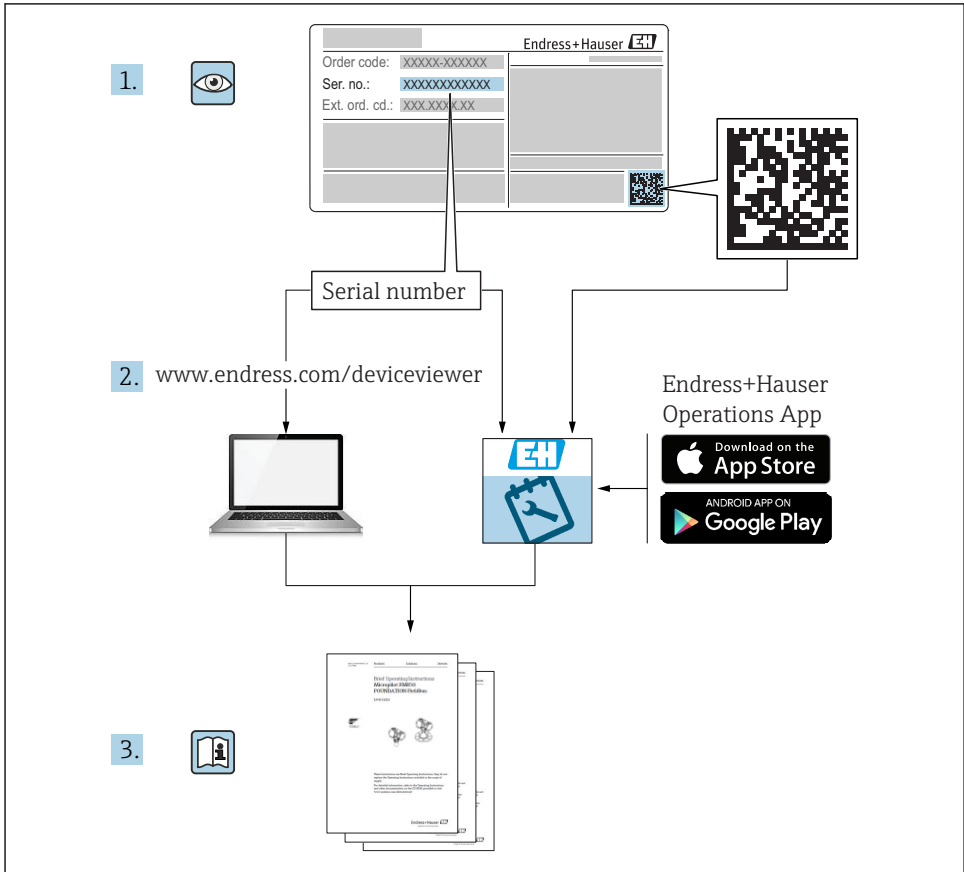

A0023555

# Table of contents

<b>1</b>	<b>About this document</b> .....	<b>4</b>
1.1	Symbols used .....	4
<b>2</b>	<b>Basic safety instructions</b> .....	<b>5</b>
2.1	Requirements for the personnel .....	5
2.2	Designated use .....	6
2.3	Workplace safety .....	7
2.4	Operational safety .....	7
2.5	Product safety .....	7
<b>3</b>	<b>Product description</b> .....	<b>7</b>
3.1	Product design .....	8
<b>4</b>	<b>Installation</b> .....	<b>9</b>
4.1	Installation conditions .....	9
4.2	Mounting the measuring device .....	15
4.3	Post-installation check .....	17
<b>5</b>	<b>Electrical connection</b> .....	<b>18</b>
5.1	Connection conditions .....	18
5.2	Connecting the measuring device .....	19
5.3	Ensuring potential equalization .....	20
5.4	Ensuring the degree of protection .....	21
5.5	Post-connection check .....	22
<b>6</b>	<b>Operation options</b> .....	<b>22</b>
6.1	Access via local display .....	22
<b>7</b>	<b>Commissioning</b> .....	<b>24</b>
7.1	Function check .....	24
7.2	Switching on the measuring device .....	24
7.3	Configuring the measuring device .....	24
<b>8</b>	<b>Diagnostics and troubleshooting</b> .....	<b>25</b>
8.1	Diagnostic behavior .....	25
8.2	Test mode .....	25
8.3	Replacing the electronics module .....	25

# 1 About this document

## 1.1 Symbols used

### 1.1.1 Safety symbols

#### DANGER

This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury.

#### WARNING

This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.











#### CAUTION

This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or medium injury.





#### NOTICE


This symbol contains information on procedures and other facts which do not result in personal injury.

### 1.1.2 Symbols for certain types of information






Symbol	Meaning	Symbol	Meaning
	<b>Permitted</b> Procedures, processes or actions that are permitted.		<b>Preferred</b> Procedures, processes or actions that are preferred.
	<b>Forbidden</b> Procedures, processes or actions that are forbidden.		<b>Tip</b> Indicates additional information.
	Reference to documentation		Reference to page
	Reference to graphic		Series of steps
	Result of a step		Visual inspection

### 1.1.3 Electrical symbols





Symbol	Meaning	Symbol	Meaning
	Direct current		Alternating current
	Direct current and alternating current		<b>Ground connection</b> A grounded terminal which, as far as the operator is concerned, is grounded via a grounding system.

Symbol	Meaning
	<p><b>Protective Earth (PE)</b> A terminal which must be connected to ground prior to establishing any other connections.</p> <p>The ground terminals are situated inside and outside the device:</p> <ul style="list-style-type: none"> <li>▪ Inner ground terminal: Connects the protective earth to the mains supply.</li> <li>▪ Outer ground terminal: Connects the device to the plant grounding system.</li> </ul>

#### 1.1.4 Tool symbols

Symbol	Meaning	Symbol	Meaning
	Torx screwdriver		Flat blade screwdriver
	Cross-head screwdriver		Allen key
	Open-ended wrench		

#### 1.1.5 Symbols in graphics

Symbol	Meaning	Symbol	Meaning
1, 2, 3,...	Item numbers		Series of steps
A, B, C, ...	Views	A-A, B-B, C-C, ...	Sections
	Hazardous area		Safe area (non-hazardous area)
	Flow direction		

## 2 Basic safety instructions

### 2.1 Requirements for the personnel

The personnel must fulfill the following requirements for its tasks:

- ▶ Trained, qualified specialists must have a relevant qualification for this specific function and task.
- ▶ Are authorized by the plant owner/operator.
- ▶ Are familiar with federal/national regulations.
- ▶ Before starting work, read and understand the instructions in the manual and supplementary documentation as well as the certificates (depending on the application).
- ▶ Follow instructions and comply with basic conditions.

## 2.2 Designated use

### Application and media

Depending on the version ordered, the measuring device can also measure potentially explosive, flammable, poisonous and oxidizing media.

Measuring devices for use in hazardous areas, or where there is an increased risk due to process pressure, are labeled accordingly on the nameplate.

To ensure that the measuring device remains in proper condition for the operation time:

- ▶ Keep within the specified pressure and temperature range.
- ▶ Only use the measuring device in full compliance with the data on the nameplate and the general conditions listed in the Operating Instructions and supplementary documentation.
- ▶ Based on the nameplate, check whether the ordered device is permitted for the intended use in the hazardous area (e.g. explosion protection, pressure vessel safety).
- ▶ Use the measuring device only for media to which the process-wetted materials are sufficiently resistant.
- ▶ If the ambient temperature of the measuring device is outside the atmospheric temperature, it is absolutely essential to comply with the relevant basic conditions as specified in the device documentation.
- ▶ Protect the measuring device permanently against corrosion from environmental influences.

### Incorrect use

Non-designated use can compromise safety. The manufacturer is not liable for damage caused by improper or non-designated use.

#### WARNING

### Danger of breakage due to corrosive or abrasive fluids and ambient conditions!

- ▶ Verify the compatibility of the process fluid with the sensor material.
- ▶ Ensure the resistance of all fluid-wetted materials in the process.
- ▶ Keep within the specified pressure and temperature range.

#### NOTICE

### Verification for borderline cases:

- ▶ For special fluids and fluids for cleaning, Endress+Hauser is glad to provide assistance in verifying the corrosion resistance of fluid-wetted materials, but does not accept any warranty or liability as minute changes in the temperature, concentration or level of contamination in the process can alter the corrosion resistance properties.

#### WARNING

### Risk of injury if the process connection and sensor gland are opened under pressure.

- ▶ The process connection and sensor gland should be opened only when in an unpressurized state.

## Residual risks

### WARNING

**The electronics and the medium may cause the surfaces to heat up. This presents a burn hazard!**

- ▶ For elevated fluid temperatures, ensure protection against contact to prevent burns.

## 2.3 Workplace safety

For work on and with the device:

- ▶ Wear the required personal protective equipment according to federal/national regulations.

For welding work on the piping:

- ▶ Do not ground the welding unit via the measuring device.

## 2.4 Operational safety

Risk of injury!

- ▶ Operate the device in proper technical condition and fail-safe condition only.
- ▶ The operator is responsible for interference-free operation of the device.

## 2.5 Product safety

This measuring device is designed in accordance with good engineering practice to meet state-of-the-art safety requirements, has been tested, and left the factory in a condition in which it is safe to operate.

It meets general safety standards and legal requirements. It also complies with the EU directives listed in the device-specific EU Declaration of Conformity.


# 3 Product description

The device consists of a transmitter and a sensor.

The device is available as a compact version:

The transmitter and sensor form a mechanical unit.

### 3.1 Product design

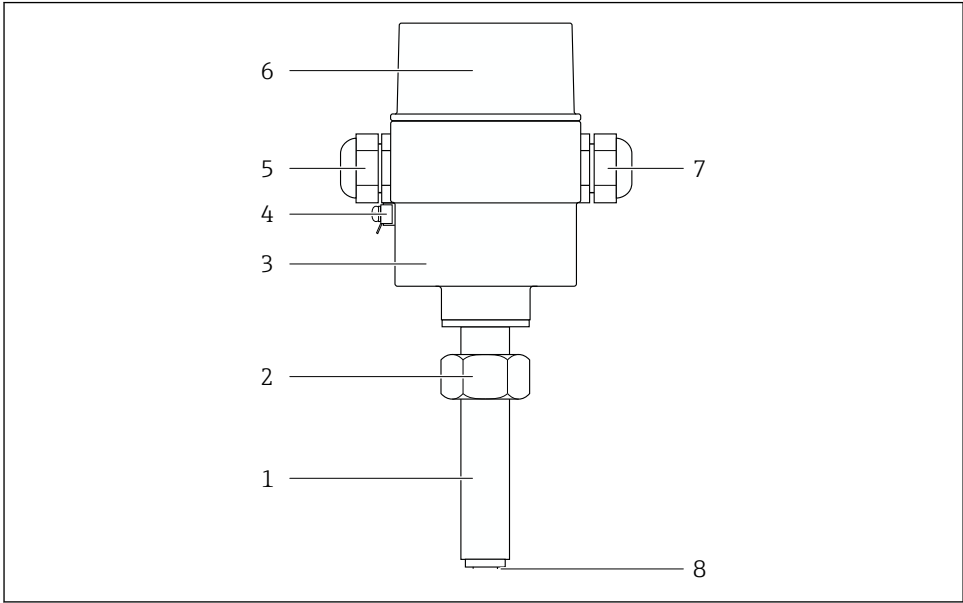

A0040146

1 Important components of a measuring device

- 1 Sensor
- 2 Union nut M30x2 with clamping ring
- 3 Transmitter housing
- 4 Ground terminal
- 5 Signal cable
- 6 Connection compartment cover
- 7 Power supply
- 8 Electrode




## 4 Installation

### 4.1 Installation conditions

#### 4.1.1 Mounting position





##### Mounting location

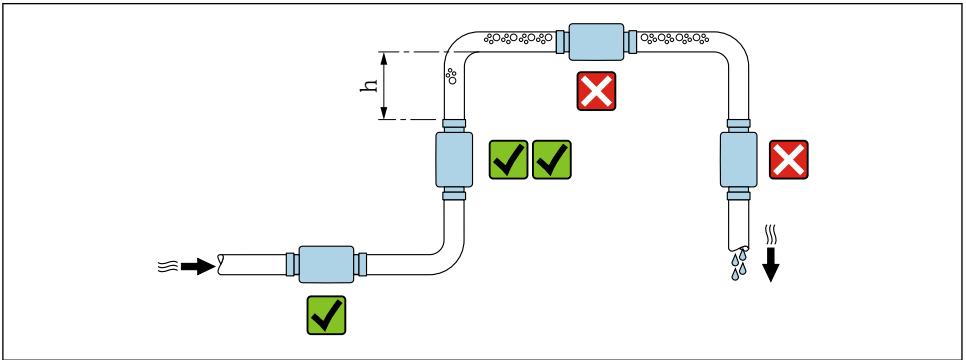

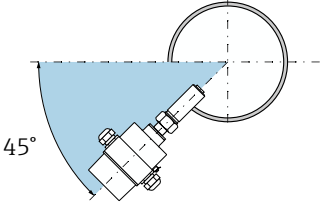



A0032998

Preferably install the sensor in an ascending pipe, and ensure a sufficient distance to the next pipe elbow:  $h \geq 5 \times DN$

##### Installation position


Installation position		Recommendation
Vertical orientation	 <p style="text-align: right; font-size: small;">A0017337</p>	
Horizontal orientation, transmitter head up	 <p style="text-align: right; font-size: small;">A0015589</p>	 <sup>1)</sup>

Installation position		Recommendation
Horizontal orientation, transmitter head down	 <p>A0015590</p>	 2)
Horizontal orientation, transmitter head at side	 <p>A0040154</p>	 3)


- 1) Risk of air pockets.
- 2) Risk of build-up of solids.
- 3) This installation method in horizontal pipes ensures that the electrodes are always immersed in the flowing medium.

*Alignment with flow direction*

The sensor must be installed in such a way that the electrode axis is always at a 90° angle to the flow direction. The cable glands, which are located on the same axis, serve as a visual aid.

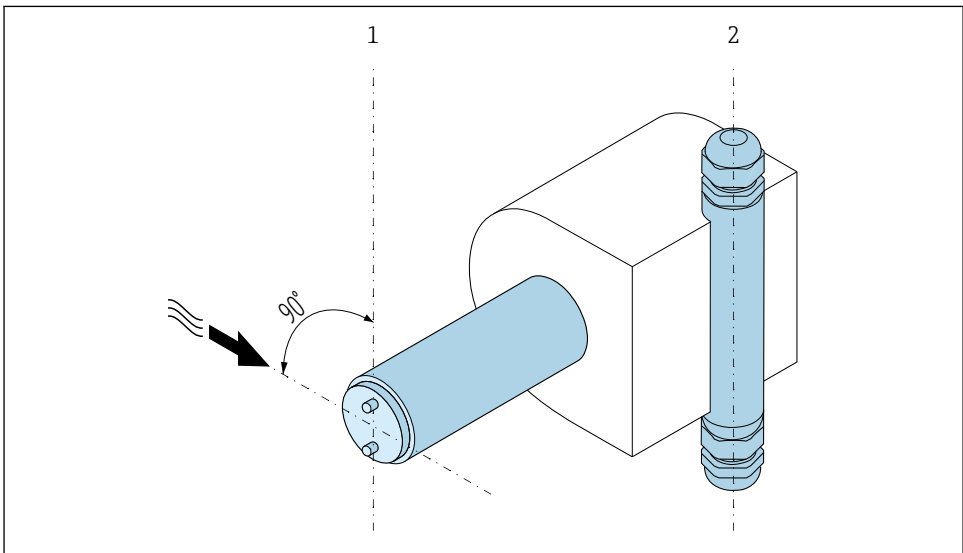


A0040155

 2 Position of electrode axis

- 1 Axis of electrodes
- 2 Axis of cable glands

## Inlet and outlet runs

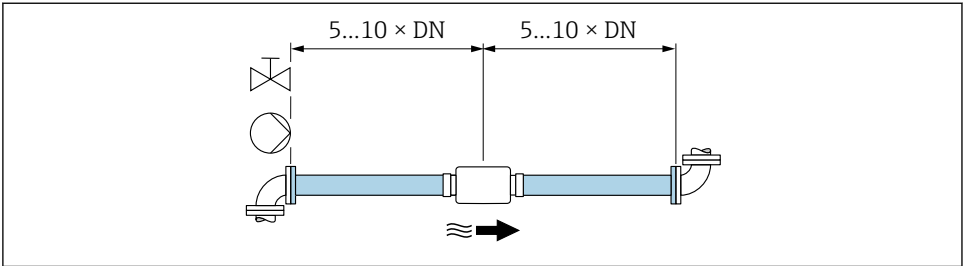

A0041744



For the dimensions and installation lengths of the device, see the "Technical Information" document, "Mechanical construction" section.

### Mounting conditions for welding socket

#### Installation in steel pipes


The measuring device is mounted in steel pipes using the welding socket supplied. Two different types of welding socket are available, depending on the nominal diameter:

- Welding socket for pipes DN 25
- Welding socket for pipes  $\geq$ DN 40

#### NOTICE

#### Damage to the measuring device


- ▶ Only weld the welding socket when the measuring device is not installed.
- ▶ Pipe DN 25: Weld the welding socket at right angles to the axis of the piping.

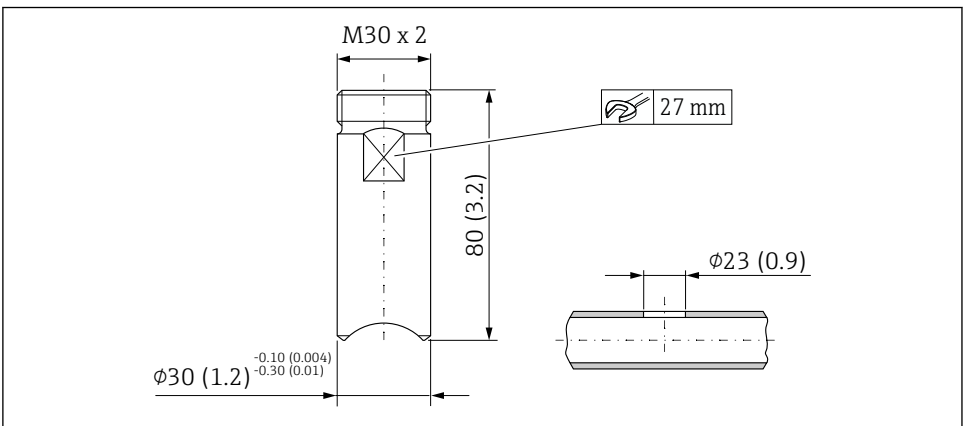

A0040150

- 3 Welding socket for pipes DN 25. Engineering unit mm (in)

- ▶ Pipe  $\geq$ DN 40: With the marking (according to the nominal diameter) flush against the outer wall of the pipe, weld the welding socket at right angles to the axis of the piping. The DN 300 marking must be used for nominal diameters  $>$ DN 300.

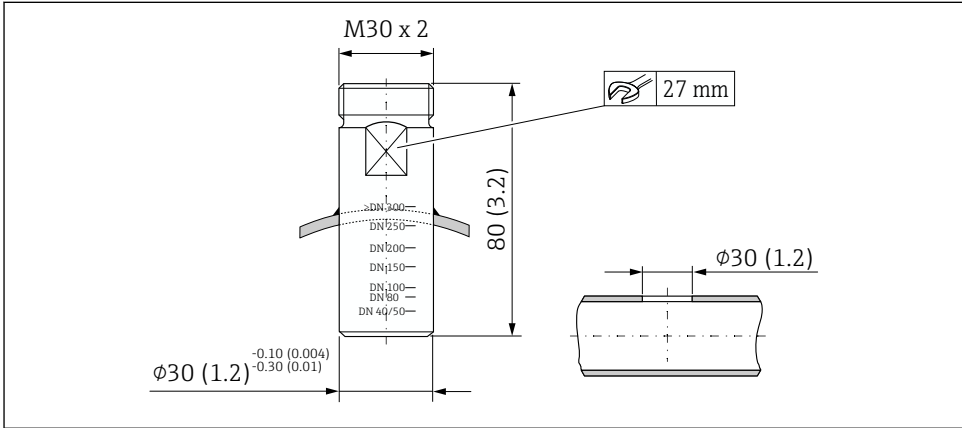

4 Welding socket for piping  $\geq$ DN 40. Engineering unit mm (in)

### Installation in plastic pipe


For pipe sizes  $\geq$ DN 65, the measuring device is mounted in plastic pipes using a plastic welding socket. The plastic welding socket can be purchased from the Georg Fischer company. PVC, PP and PE sockets are available. Depending on the outer diameter of the pipe, the dimension L must be adjusted accordingly by the client onsite. Perform the following steps when installing a plastic welding socket:

#### NOTICE

##### Damage to the measuring device

- ▶ Only weld the welding socket when the measuring device is not installed.

1. Determine dimension L:  $L = 40 - S - E$ .
2. Determine the welding socket taking dimension L into account.
3. Taking immersion depth E into account, weld the welding socket at right angles to the axis of the piping.

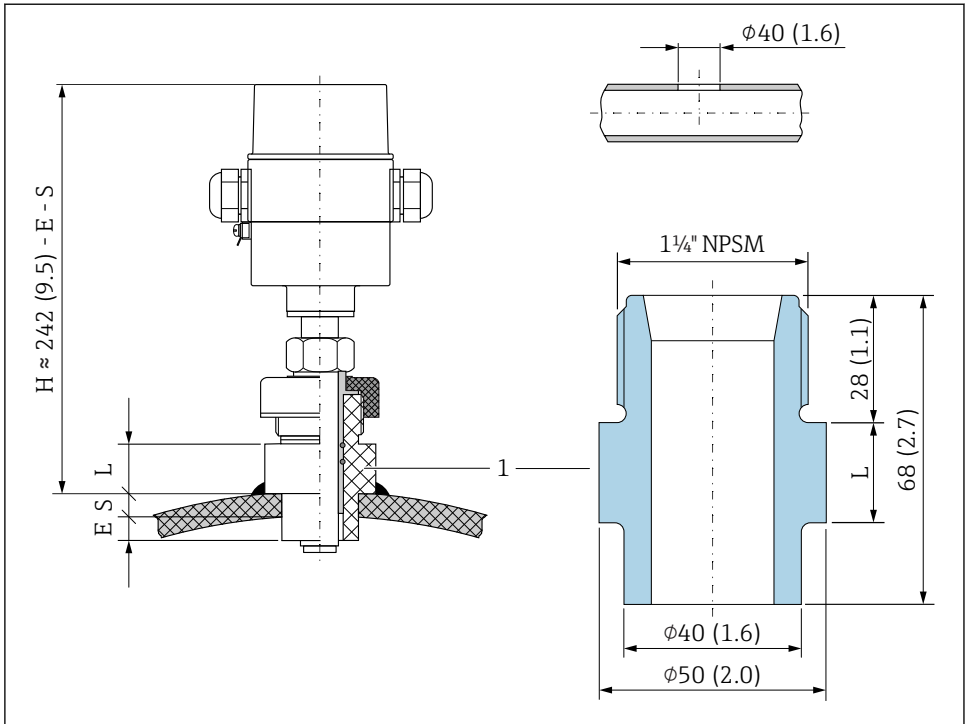

A0040243

5 Installation conditions for plastic welding socket. Engineering unit mm (in)

1 Plastic welding socket

L To be determined

S Pipe wall thickness

E Immersion depth of plastic welding socket (please refer to the table below for dimension E)

Immersion depth depending on the pipe outer diameter


Pipe outer diameter mm (in)	Immersion depth E mm (in)
65 (2.6)	6.9 (0.27)
75 (3.0)	8.3 (0.33)
110 (4.33)	11.4 (0.45)
125 (4.92)	14.4 (0.57)
140 (5.51)	17.7 (0.70)
160 (6.30)	17.7 (0.70)
200 (7.87)	12.0 (0.47)
225 (8.86)	10.0 (0.39)

Pipe outer diameter mm (in)	Immersion depth E mm (in)
250 (9.84)	10.0 (0.39)
280 (11.,0)	10.0 (0.39)
315 (12.4)	10.0 (0.39)
355 (14.0)	10.0 (0.39)
400 (17.8)	10.0 (0.39)
450 (17.7)	5.0 (0.20)
500 (19.7)	5.0 (0.20)
630 (24.8)	5.0 (0.20)

**Installation conditions for T-fitting**

For pipe sizes DN 15 to 50, the measuring device is mounted in plastic pipes using a standard T-fitting. The T-fitting can be purchased from the Georg Fischer company. PVC, PP and PE T-fittings are available.

**i** Only use the Magphant version for device installation in plastic pipes (order code for "Process connection", option 5 "Adapter, plastic pipe, 316L, NBR").

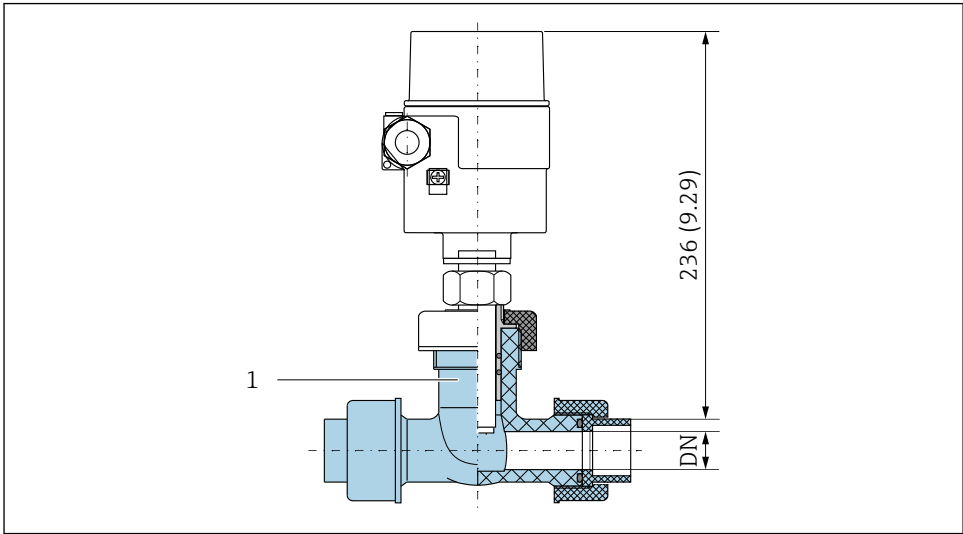

A0040255

**6** Installation conditions for T-fitting. Engineering unit mm (in)

1 Standard T-fitting

### 4.1.2 Environment and process requirements

#### Ambient temperature range

-20 to +60 °C (-4 to +140 °F)

If operating outdoors:

- Install the measuring device in a shady location.
- Avoid direct sunlight, particularly in warm climatic regions.
- Avoid direct exposure to weather conditions.

## 4.2 Mounting the measuring device

### 4.2.1 Required tool

#### For sensing element

For the gland of the sensing element: use the appropriate installation tool.

### 4.2.2 Preparing the measuring device


1. Remove all remaining transport packaging.
2. Remove any protective covers or protective caps present from the sensor.
3. Remove stick-on label on the electronics compartment cover.


### 4.2.3 Mounting the sensor

#### Mounting the sensor in a steel pipe

##### NOTICE

#### Damage to the sensor tip.

- ▶ When inserting the sensor into the welding socket, care must be taken to ensure the sensor tip is not damaged.
1. Taking the flow direction →  10 into consideration, insert the sensor into the welding socket and tighten the metal union nut by hand.
  2. Hold the welding socket steady with an open-ended wrench, size 27 mm AF.
  3. Tighten the union nut a further ½ turn approximately with an open-ended wrench, size 36 mm AF.

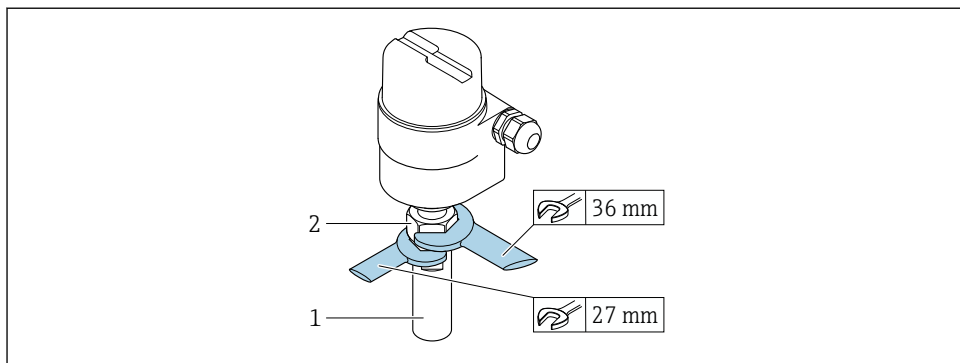

A0040152

### 7 Mounting the sensor in a steel pipe

- 1 Welding socket
- 2 Metal union nut



### Mounting the sensor in a plastic pipe

The measuring device for installation in plastic piping is delivered as part of a set. The set consists of the measuring device, an adapter piece and a plastic union nut.


#### NOTICE

#### Damage to the sensor tip.

- ▶ When inserting the sensor into the adapter piece, care must be taken to ensure the sensor tip is not damaged.

1. Place the plastic union nut over the adapter piece.
2. Carefully insert the sensor into the adapter piece and tighten the metal union nut by hand.
3. Hold the adapter piece steady with an open-ended wrench, size 25 mm AF.
4. Tighten the union nut a further ½ turn approximately with an open-ended wrench, size 36 mm AF.
5. **For pipes DN 15-50:** Taking the flow direction →  10 into consideration, insert the adapter piece mounted on the sensor into the standard T-fitting and tighten the plastic union nut firmly by hand.
6. **For pipes ≥DN 65:** Taking the flow direction →  10 into consideration, insert the adapter piece mounted on the sensor into the plastic welding socket and tighten the plastic union nut firmly by hand.



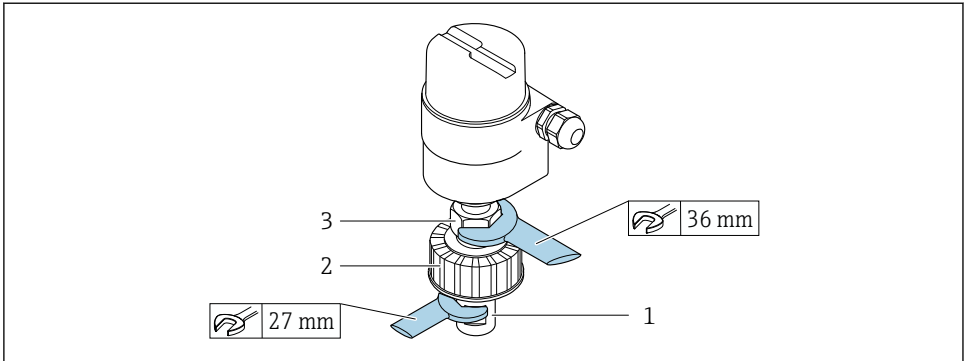

A0040153

#### 8 Mounting the adapter piece on the sensor

- 1 Adapter piece made of stainless steel, 1.4435 (F316L)
- 2 Plastic union nut
- 3 Metal union nut

### 4.3 Post-installation check

Is the device undamaged (visual inspection)?	<input type="checkbox"/>
Does the measuring device conform to the measuring point specifications? For example: <ul style="list-style-type: none"> <li>▪ Process temperature</li> <li>▪ Process pressure (refer to the section on "Pressure-temperature ratings" in the "Technical Information" document)</li> <li>▪ Ambient temperature</li> <li>▪ Measuring range</li> </ul>	<input type="checkbox"/>
Is there sufficient distance between the sensor and the next pipe bend?	<input type="checkbox"/>
Is the electrode axis at a 90° angle to the flow direction?	<input type="checkbox"/>
Is the sensor area fully immersed in the liquid?	<input type="checkbox"/>
Has the correct orientation for the sensor been selected? <ul style="list-style-type: none"> <li>▪ According to medium temperature</li> <li>▪ According to medium properties (risk of air pockets and build-up of solids)</li> </ul>	<input type="checkbox"/>
Is the measuring device adequately protected against precipitation and direct sunlight?	<input type="checkbox"/>

## 5 Electrical connection

### NOTICE

**The measuring device does not have an internal circuit breaker.**

- ▶ For this reason, assign the measuring device a switch or power-circuit breaker so that the power supply line can be easily disconnected from the mains.

### 5.1 Connection conditions

#### 5.1.1 Required tool

- For cable entries: use appropriate tool
- Wire stripper
- When using stranded cables: crimper for wire end ferrule

#### 5.1.2 Requirements for connecting cable

The connecting cables provided by the customer must fulfill the following requirements.

#### Electrical safety

In accordance with applicable federal/national regulations.

#### Protective ground cable

Cable  $\leq 2.08 \text{ mm}^2$  (14 AWG)

The grounding impedance must be less than  $1 \Omega$ .

#### Permitted temperature range

- The installation guidelines that apply in the country of installation must be observed.
- The cables must be suitable for the minimum and maximum temperatures to be expected.

#### Power supply cable

Standard installation cable is sufficient.

#### Signal cable

*Current output*

Standard installation cable is sufficient.

*Relay output*

Standard installation cable is sufficient.

#### Cable diameter

With M20  $\times$  1.5 cable glands:

- Conductor cross-section: max.  $0.2$  to  $1.5 \text{ mm}^2$  (24 to 16 AWG).
- Cable diameter:  $7$  to  $12 \text{ mm}$  ( $0.28$  to  $0.47 \text{ in}$ )

### 5.1.3 Terminal assignment

Supply voltage		Relay output			Current output 4 to 20 mA	
1 (+)	2 (-)	23	24	25	26 (+)	27 (-)


### 5.1.4 Preparing the measuring device

#### NOTICE

#### Insufficient sealing of the housing!

Operational reliability of the measuring device could be compromised.

- ▶ Use suitable cable glands corresponding to the degree of protection.

1. Remove dummy plug if present.
2. If the measuring device is supplied without cable glands:  
Provide suitable cable gland for corresponding connecting cable.
3. If the measuring device is supplied with cable glands:  
Observe requirements for connecting cables →  18.

## 5.2 Connecting the measuring device


#### NOTICE

#### Limitation of electrical safety due to incorrect connection!

- ▶ Have electrical connection work carried out by appropriately trained specialists only.
- ▶ Observe applicable federal/national installation codes and regulations.
- ▶ Comply with local workplace safety regulations.

### 5.2.1 Connecting the transmitter

- ▶ Tighten the screw terminals. Recommended tightening torque: 0.5 Nm (0.37 lbf ft)

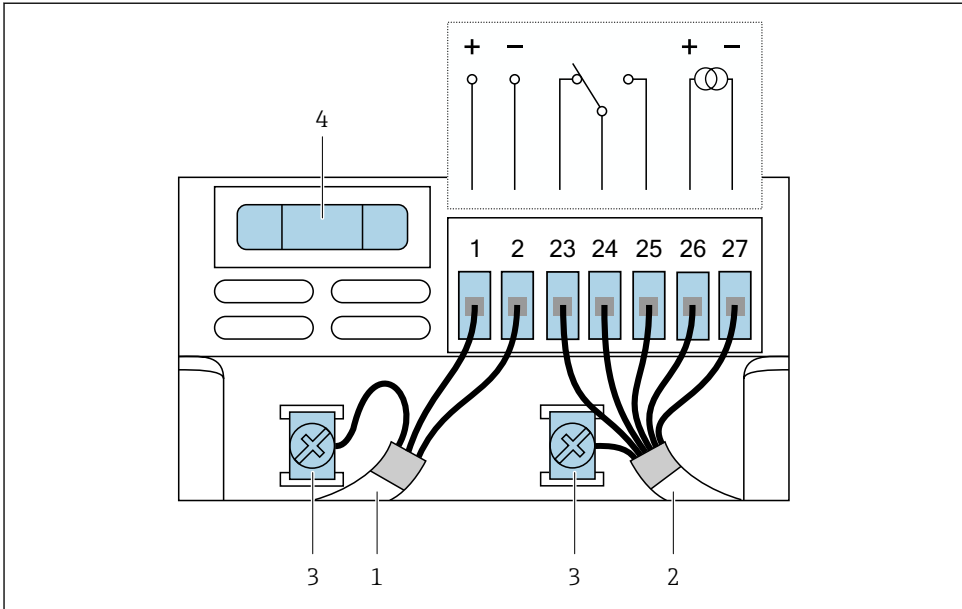

A0040168

### 9 Connecting the transmitter

- 1 Power supply cable
- 2 Signal cable
- 3 Ground terminals for cable shield
- 4 160 mA fuse, slow-blow

## 5.3 Ensuring potential equalization

### 5.3.1 Requirements


#### ⚠ CAUTION

**Electrode damage can result in the complete failure of the device!**

- ▶ Same electrical potential for the fluid and sensor
- ▶ Company-internal grounding concepts
- ▶ Pipe material and grounding
- ▶ Keep the grounding cable as short as possible

### 5.3.2 Connection example, standard scenario

In order to ensure electromagnetic compatibility (EMC), we recommend connecting the measuring device to ground via the ground terminal on the housing.

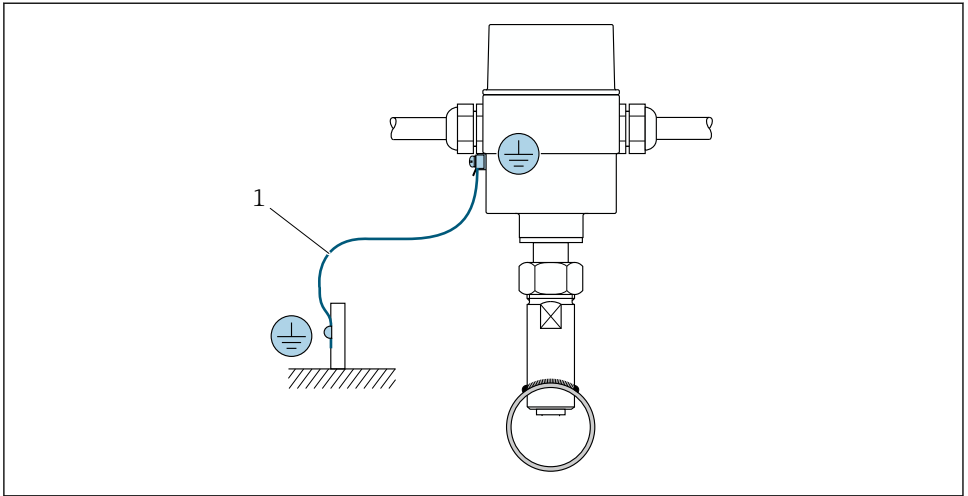

A0040156

10 Connection example, potential equalization


1 Copper wire,  $\leq 2.08 \text{ mm}^2$  (14 AWG)

## 5.4 Ensuring the degree of protection

The measuring device fulfills all the requirements for degree of protection IP66.

To guarantee degree of protection IP66, carry out the following steps after the electrical connection:

1. Check that the housing seals are clean and fitted correctly.
2. Dry, clean or replace the seals if necessary.
3. Tighten all housing screws and screw covers.
4. Firmly tighten the cable glands.
5. To ensure that moisture does not enter the cable entry:  
Route the cable so that it loops down before the cable entry ("water trap").

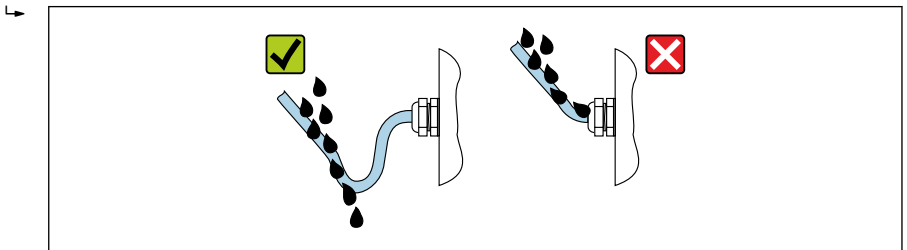

A0029278

6. Insert dummy plugs into unused cable entries.

## 5.5 Post-connection check


Are cables or the device undamaged (visual inspection)?	<input type="checkbox"/>
Are the power supply and signal cables correctly connected?	<input type="checkbox"/>
Do the cables used meet the requirements → 18?	<input type="checkbox"/>
Do the cables have adequate strain relief?	<input type="checkbox"/>
Are all the cable glands installed, firmly tightened and leak-tight? Cable run with "water trap" → 21?	<input type="checkbox"/>
Is the potential equalization established correctly → 20?	<input type="checkbox"/>

## 6 Operation options

### 6.1 Access via local display

 Customized settings can be recorded on the operating and display interface.



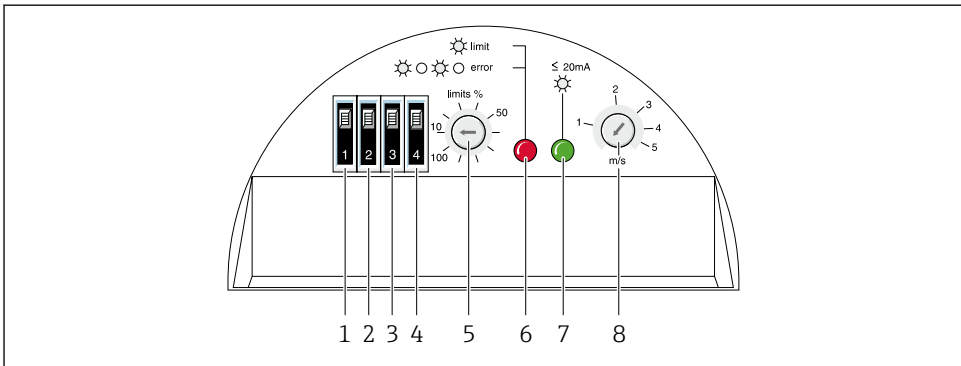


#### 6.1.1 Operating and display elements





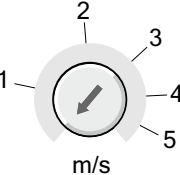


A0040158

#### 11 Operating and display elements

- 1 Test mode
- 2 Current output time constant and relay hold time
- 3 Relay functions
- 4 Min./max. safety setting
- 5 Limit value setting
- 6 Limit value or error indicator
- 7 Indicator for full scale setting
- 8 Full scale value scaling

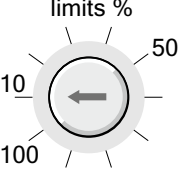

Operating and display element	Meaning
 <p style="text-align: right;">A0040159</p>	<p><b>Test mode</b></p> <p><i>"Test off" switch position</i> Test mode is switched off.</p> <p><i>"Test" switch position</i> Test mode is switched on.</p> <p><i>Factory setting</i> "Test off" switch position.</p> <p>Check the electronics with the test mode: →  25</p>
 <p style="text-align: right;">A0040160</p>	<p><b>Current output time constant and relay hold time</b></p> <p>The switch positions <math>t = 3</math> s and <math>t = 10</math> s correspond to the time constant of the current output:</p> <p><i>Switch position "t = 3s"</i> The relay switches immediately and remains in this state for 3 seconds. Changes to the flow are not considered during this time.</p> <p><i>Switch position "t = 10s"</i> The relay only switches if the limit value is exceeded or undershot continuously for a period of at least 10 seconds and then maintains this state for 10 seconds.</p> <p><i>Factory setting</i> Switch position "t = 3s".</p>
 <p style="text-align: right;">A0040161</p>	<p><b>Relay functions</b></p> <p>If all functions are operating correctly, the relay is energized. The relay is de-energized as soon as an error or alarm occurs:</p> <p><i>"Limit" switch position</i> The relay is de-energized and the red LED is lit if the limit value is exceeded or undershot (this depends on the min./max. safety setting).</p> <p><i>"Limit+error" switch position</i> The same function as the "limit" function but in addition: The relay is de-energized if the flow velocity is greater than the measurable value of the measuring device or if a device error occurs. The red LED flashes. "Error" has a higher priority than "limit".</p> <p><i>Factory setting</i> "Limit" switch position.</p>
 <p style="text-align: right;">A0040162</p>	<p><b>Min./max. safety setting</b></p> <p><i>"Min." switch position</i> The relay is de-energized if the signal drops below the limit value. The red LED lights up.</p> <p><i>"Max." switch position</i> The relay is de-energized if the signal exceeds the limit value. The red LED lights up.</p> <p><i>Factory setting</i> "Limit" switch position.</p>

Operating and display element	Meaning
 <p style="text-align: center;">limits %</p> <p style="text-align: center;">A0040165</p>	<p><b>Limit value setting</b></p> <p>The limit value is defined as a % of the full scale value using this switch. It can be set in increments of 10%, from 10% to 100%.</p>
 <p style="text-align: center;">A0040167</p>	<p><b>Limit value or error indicator</b></p> <p><i>LED is lit red</i> Limit value is reached.</p> <p><i>LED flashes red</i> Fault condition →  25</p>
 <p style="text-align: center;">A0040166</p>	<p><b>Indicator for full scale setting</b></p> <p><i>LED is lit green</i> The current flow is lower than the configured full scale value, i.e. <math>I = \geq 20</math> mA</p>
 <p style="text-align: center;">m/s</p> <p style="text-align: center;">A0040164</p>	<p><b>Full scale value scaling</b></p> <p>Full scale value scaling can be adjusted continuously between 1 and 5 m/s via this potentiometer.</p> <p><i>Full scale setting:</i> The change from an unlit green LED to a lit green LED indicates that the full scale value matches the current flow velocity, with the current output set to 20 mA.</p>

## 7 Commissioning

### 7.1 Function check


Before commissioning the measuring device:

- ▶ Make sure that the post-installation and post-connection checks have been performed.
  - "Post-installation check" checklist →  17
  - "Post-connection check" checklist →  22

### 7.2 Switching on the measuring device

Once the supply voltage has been switched on, the measuring device adopts the normal mode.

### 7.3 Configuring the measuring device

Settings can be made at the measuring device with the operating and display interface.  
Description of the operating and display elements →  22.




## 8 Diagnostics and troubleshooting

### 8.1 Diagnostic behavior

Error messages are reported via the current output and relay output (depending on the relay function that is configured). In addition, the red LED flashes to indicate the limit value or error condition.


Type of error	Relay output	Current output	Red LED
Amplifier error, EEPROM error (system error)	De-energized	2 mA	Flashing
Overflow (process error)	De-energized	2 mA	Lit

### 8.2 Test mode

The miniature switch for the test mode (→  22, No. 1) allows the user to test the electronics.

#### Testing the electronics

1. Set the test mode switch to the "test" position.

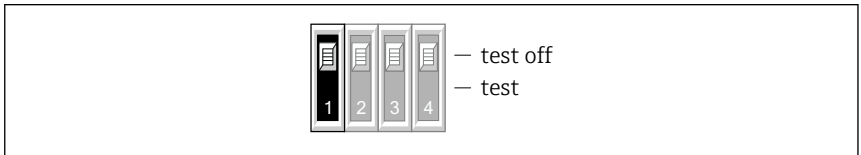

A0040159

2. Turn the potentiometer for full scale value scaling counterclockwise to the end stop.
  - ↳ The current output must now be exactly 20 mA.
3. If this is not the case, then replace the electronics module.

### 8.3 Replacing the electronics module


#### WARNING

**Death or serious injury from electric shock when replacing the electronics module!**

- ▶ Switch off the power supply before opening the electronics compartment cover.

1. Switch off the power supply.
2. Unscrew the cover from the housing.
3. Release the connecting cable from the terminal block.
4. Release the Phillips screw of the board support plate.
5. Release the securing screw of the ground wire (cable lug).
6. Carefully remove the board support plate from the housing.

7. Disconnect the plug of the coil current cable from the power supply board.
8. Disconnect the plug of the electrode signal cable from the amplifier board.

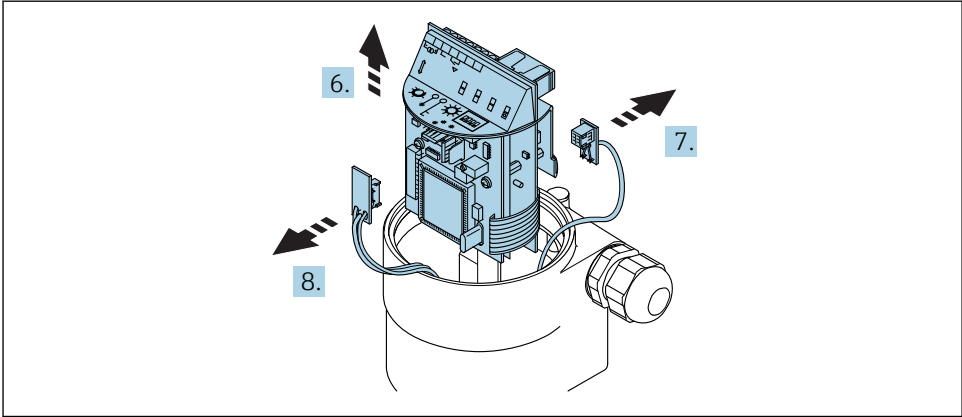

A0040157

9. Release the ground cable.
10. Replace the electronics module.
11. Install the new electronics module in the reverse order.



[www.addresses.endress.com](http://www.addresses.endress.com)

---