Products

Valid as of version 01.01 (device version)

Operating Instructions **iTEMP TMT72**

Temperature transmitter







iTEMP TMT72 Table of contents

Table of contents

1	About this document	4	8	Commissioning	36
1.1	Document function	4	8.1	Post-installation check	36
1.2	Safety instructions (XA)	4	8.2	Switching on the transmitter	36
1.3	Symbols used		8.3	Configuring the measuring device	
1.4	Tool symbols		8.4	Protecting settings from unauthorized access .	38
1.5	Documentation				
1.6	Registered trademarks	6	9	Diagnostics and troubleshooting	40
2	Basic safety instructions	7	9.1 9.2	General troubleshooting	
2.1	Requirements for the personnel	7	9.3	Diagnostic information via communication	42
2.2	Intended use			interface	42
2.3	Operational safety	7	9.4	Diagnostic list	
			9.5	Event logbook	
3	Incoming acceptance and product		9.6	Overview of diagnostic events	
	identification	9	9.7	Firmware history	45
3.1	Incoming acceptance		10	Maintenance	45
3.2	Product identification				
3.3	Name and address of manufacturer	10	11	Repair	46
3.4 3.5	Scope of delivery	10		_	
3.6	Storage and transport	10 11	11.1 11.2	General information	46 46
ال.ر	Storage and transport	11	11.2	Spare parts	
4	Installation	12	11.4	Disposal	46
			11.1	21000001	10
4.1 4.2	Installation conditions	12 12	12	Accessories	46
4.3	Post-installation check		12.1	Device-specific accessories	Δ7
			12.2	Communication-specific accessories	
5	Electrical connection	18	12.3	Service-specific accessories	
			12.4	System components	
5.1 5.2	Connecting requirements	18 19			
5.2 5.3	Quick wiring guide	20	13	Technical data	50
5.4	Connecting the transmitter	20	13.1	Input	
5.5	Special connection instructions		13.1	Output	
5.6	Ensuring the degree of protection		13.3	Power supply	
5.7	Post-connection check		13.4	Performance characteristics	
			13.5	Environment	60
6	Operation options	23	13.6	Mechanical construction	61
	Overview of operation options	23	13.7	Certificates and approvals	65
6.1 6.2	Structure and function of the operating		13.8	Documentation	67
6.2	menu	26	14	Operating menu and parameter	
6.3	Access to the operating menu via the	28			60
6.4	operating tool	20		description	
0.4	SmartBlue app	31	14.1	Menu: Diagnostics	
	Since app		14.2	Menu: Application	
7	System integration	33	14.3	Menu: System	88
7.1	Overview of device description files	33	Inde	x	L04
7.2	Measured variables via HART protocol				1
7.3	Supported HART® commands				
			1		

About this document iTEMP TMT72

1 About this document

1.1 Document function

These Operating Instructions contain all the information required in the various life cycle phases of the device: from product identification, incoming acceptance and storage, to installation, connection, operation and commissioning, through to troubleshooting, maintenance and disposal.

1.2 Safety instructions (XA)

When using in hazardous areas, compliance with national regulations is mandatory. Separate Ex-specific documentation is provided for measuring systems that are used in hazardous areas. This documentation is an integral part of these Operating Instructions. The installation specifications, connection data and safety instructions it contains must be strictly observed! Make sure that you use the right Ex-specific documentation for the right device with approval for use in hazardous areas! The number of the specific Ex documentation (XA...) is provided on the nameplate. If the two numbers (on the Ex documentation and the nameplate) are identical, then you may use this Ex-specific documentation.

1.3 Symbols used

1.3.1 Safety symbols

A DANGER

This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury.

WARNING

This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.

A CAUTION

This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or medium injury.

NOTICE

This symbol contains information on procedures and other facts which do not result in personal injury.

1.3.2 Electrical symbols

Symbol	Meaning
===	Direct current
~	Alternating current
$\overline{\sim}$	Direct current and alternating current

iTEMP TMT72 About this document

Symbol	Meaning
=	Ground connection A grounded terminal which, as far as the operator is concerned, is grounded via a grounding system.
	Potential equalization connection (PE: protective earth) Ground terminals that must be connected to ground prior to establishing any other connections.
	The ground terminals are located on the interior and exterior of the device: Interior ground terminal: potential equalization is connected to the supply network. Exterior ground terminal: device is connected to the plant grounding system.

1.3.3 Symbols for certain types of information

Symbol	Meaning
✓	Permitted Procedures, processes or actions that are permitted.
	Preferred Procedures, processes or actions that are preferred.
X	Forbidden Procedures, processes or actions that are forbidden.
i	Tip Indicates additional information.
<u> </u>	Reference to documentation
	Reference to page
	Reference to graphic
•	Notice or individual step to be observed
1., 2., 3	Series of steps
L	Result of a step
?	Help in the event of a problem
	Visual inspection

1.3.4 Symbols in graphics

Symbol	Meaning	Symbol	Meaning
1, 2, 3,	Item numbers	1., 2., 3	Series of steps
A, B, C,	Views	A-A, B-B, C-C,	Sections
EX	Hazardous area	×	Safe area (non-hazardous area)

About this document iTEMP TMT72

1.4 Tool symbols

Symbol	Meaning
	Flat blade screwdriver
A0011220	
06	Phillips head screwdriver
A0011219	
	Allen key
A0011221	
AS .	Open-ended wrench
A0011222	
0	Torx screwdriver
A0013442	

1.5 Documentation

Document	Purpose and content of the document
Technical Information TI01392T	Planning aid for your device The document contains all the technical data on the device and provides an overview of the accessories and other products that can be ordered for the device.
Brief Operating Instructions KA01414T	Guide that takes you quickly to the 1st measured value The Brief Operating Instructions contain all the essential information from incoming acceptance to initial commissioning.

The document types listed are available:
In the Download Area of the Endress+Hauser Internet site: www.endress.com →
Download

1.6 Registered trademarks

HART®

Registered trademark of the FieldComm Group, Austin, Texas, USA

Bluetooth®

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Endress+Hauser is under license. Other trademarks and trade names are those of their respective owners.

iTEMP TMT72 Basic safety instructions

2 Basic safety instructions

2.1 Requirements for the personnel

The personnel for installation, commissioning, diagnostics and maintenance must fulfill the following requirements:

- ► Trained, qualified specialists must have a relevant qualification for this specific function and task
- ► Are authorized by the plant owner/operator
- ► Are familiar with federal/national regulations
- ► They must have read and understood the instructions in the manual, supplementary documentation and certificates (depending on the application) prior to starting work
- ▶ Follow instructions and comply with basic conditions

The operating personnel must fulfill the following requirements:

- Must be suitably trained and authorized by the plant operator to meet the requirements of the task
- Follow the instructions in this manual

2.2 Intended use

The device is a universal and user-configurable temperature transmitter with one sensor input for resistance thermometers (RTD), thermocouples (TC), resistance and voltage transmitters. The head transmitter version of the device is intended for mounting in a terminal head (flat face) as per DIN EN 50446. It is also possible to mount the device on a DIN rail using the optional DIN rail clip. The device is also optionally available in a version suitable for DIN rail mounting as per IEC 60715 (TH35).

If the device is used in a manner not specified by the manufacturer, the protection provided by the device may be impaired.

The manufacturer is not liable for damage caused by improper or non-intended use.

The head transmitter must not be operated as a DIN rail substitute in a cabinet by using the DIN rail clip with remote sensors.

2.3 Operational safety

- ▶ Operate the device only if it is in proper technical condition, free from errors and faults.
- ► The operator is responsible for the interference-free operation of the device.

Hazardous area

To eliminate a danger for persons or for the facility when the device is used in the hazardous area (e.g. explosion protection or safety equipment):

- ▶ Based on the technical data on the nameplate, check whether the ordered device is permitted for the intended use in the hazardous area. The nameplate can be found on the side of the transmitter housing.
- ▶ Observe the specifications in the separate supplementary documentation that is an integral part of these instructions.

Electromagnetic compatibility

The measuring system complies with the general safety requirements as per EN 61010-1, the EMC requirements as per the IEC/EN 61326 series and the NAMUR recommendations NE 21.

Basic safety instructions iTEMP TMT72

NOTICE

► The device must only be powered by a power unit that operates using an energy-limited electric circuit according to UL/EN/IEC 61010-1, Section 9.4 and the requirements in Table 18.

3 Incoming acceptance and product identification

3.1 Incoming acceptance

- 1. Unpack the temperature transmitter carefully. Is the packaging or content free from damage?
 - Damaged components must not be installed as the manufacturer can otherwise not guarantee compliance with the original safety requirements or the material resistance, and can therefore not be held responsible for any resulting damage.
- 2. Is the delivery complete or is anything missing? Check the scope of delivery against your order.
- 3. Does the nameplate match the ordering information on the delivery note?
- 4. Are the technical documentation and all other necessary documents provided? If applicable: are the Safety Instructions (e.g. XA) for hazardous areas provided?
- If one of these conditions is not satisfied, contact your Endress+Hauser Sales Center.

3.2 Product identification


The following options are available for the identification of the device:

- Nameplate specifications
- Extended order code with breakdown of the device features on the delivery note
- Enter the serial number from the nameplate in the *W@M Device Viewer* (www.endress.com/deviceviewer): All data relating to the device and an overview of the Technical Documentation supplied with the device are displayed.
- Enter the serial number on the nameplate into the *Endress+Hauser Operations App* or scan the 2-D matrix code (QR code) on the nameplate with the *Endress+Hauser Operations App*: all the information about the device and the technical documentation pertaining to the device is displayed.

3.2.1 Nameplate


The right device?

Compare and check the data on the nameplate of the device against the requirements of the measuring point:

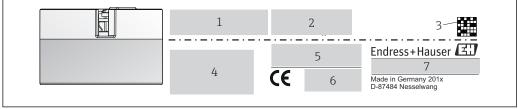

A001456

- $\blacksquare 1$ Nameplate of the head transmitter (example, Ex version)
- 1 Power supply, current consumption and radio approval (Bluetooth)
- 2 Serial number, device revision, firmware version and hardware version
- 3 Data Matrix 2D code
- 4 2 lines for the TAG name and extended order code
- 5 Approval in hazardous area with number of the relevant Ex documentation (XA...)
- 6 Approvals with symbols
- 7 Order code and manufacturer ID

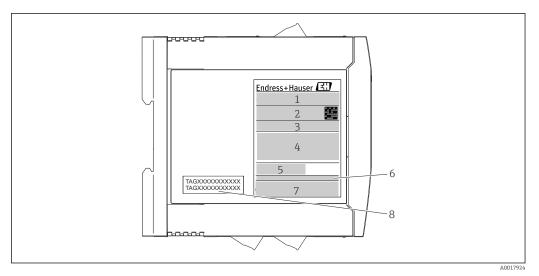

■ 2 Nameplate of DIN rail transmitter (example, Ex version)

- 1 Product name and manufacturer ID
- 2 Order code, extended order code and serial number, DataMatrix 2D code, FCC-ID (if applicable)
- 3 Power supply and current consumption, output
- 4 Approval in hazardous area with number of the relevant Ex documentation (XA...)
- 5 Fieldbus communication logo
- 6 Firmware version and device revision
- 7 Approval logos
- 8 2 lines for the TAG name

3.3 Name and address of manufacturer

Name of manufacturer:	Endress+Hauser Wetzer GmbH + Co. KG	
Address of manufacturer:	Obere Wank 1, D-87484 Nesselwang or www.endress.com	
Address of manufacturing plant:	See nameplate	

3.4 Scope of delivery

The scope of delivery of the device comprises:

- Temperature transmitter
- Mounting material (head transmitter), optional

•

 Additional documentation for devices which are suitable for use in the hazardous area (ATEX, FM, CSA)

3.5 Certificates and approvals

The device left the factory in a safe operating condition. The device complies with the requirements of the standards EN 61010-1 "Safety Requirements for Electrical Equipment for Measurement, Control, and Laboratory Use" and with the EMC requirements as per the IEC/EN 61326 series.

3.5.1 CE/EAC mark, Declaration of Conformity

The device meets the legal requirements of the EU/EEU guidelines. The manufacturer confirms that the device is compliant with the relevant guidelines by applying the CE/EAC mark.

3.5.2 HART® protocol certification

The temperature transmitter is registered by the HART $^{\circ}$ FieldComm Group. The device meets the requirements of the HART $^{\circ}$ Communication Protocol Specifications, Revision 7 (HCF 7.6).

3.6 Storage and transport

Dimensions: (device-specific), $\rightarrow \triangleq 61$

Storage temperature

- Head transmitter: -50 to +100 °C (-58 to +212 °F)
- DIN rail device: -50 to +100 °C (-58 to +212 °F)
- Humidity: (device-specific): max. rel. humidity: 95 % as per IEC 60068-2-30
- Pack the device for storage and transportation in such a way that it is reliably protected against impact and external influences. The original packaging offers the best protection.

Avoid the following environmental influences during storage:

- Direct sunlight
- Vibration
- Aggressive media

Installation iTEMP TMT72

4 Installation

4.1 Installation conditions

4.1.1 Dimensions

The dimensions of the device are provided in the "Technical data" section $\rightarrow \triangleq 61$.

4.1.2 Mounting location

- Head transmitter:
 - In the terminal head, flat face, as per DIN EN 50446, direct mounting on insert with cable entry (middle hole 7 mm)
- DIN rail transmitter:

Designed for mounting on a DIN rail (IEC 60715 TH35).

Information about the conditions (such as the ambient temperature, degree of protection, climate class etc.) that must be present at the installation point so that the device can be mounted correctly is provided in the "Technical data" section $\Rightarrow \triangleq 60$.

When using in hazardous areas, the limit values of the certificates and approvals must be observed (see Ex Safety Instructions).

NOTICE

When using DIN rail transmitters with a thermocouple/mV measurement, increased measurement deviations may occur depending on the installation situation and ambient conditions.

▶ If the DIN rail transmitter is mounted on the DIN rail without any adjacent devices, this may result in deviations of up to \pm 1.34 °C. If the DIN rail transmitter is mounted in series between other DIN rail devices (reference operating conditions: 24 V, 12 mA), deviations of up to \pm 2.94 °C may occur.


4.2 Installation

A Phillips head screwdriver is required to mount the head transmitter.

- Maximum torque for securing screws = 1 Nm (¾ foot-pound), screwdriver: Pozidriv Z2
- Maximum torque for screw terminals = 0.35 Nm (¼ foot-pound), screwdriver: Pozidriv Z1

iTEMP TMT72 Installation

4.2.1 Mounting the head transmitter

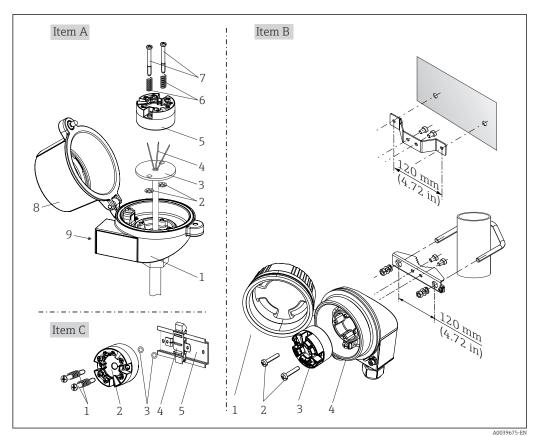

 \blacksquare 3 Head transmitter mounting (three versions)


Fig. A	Mounting in a terminal head (terminal head flat face as per DIN 43729)
1	Terminal head
2	Circlips
3	Insert
4	Connection wires
5	Head transmitter
6	Mounting springs
7	Mounting screws
8	Terminal head cover
9	Cable entry

Procedure for mounting in a terminal head, Fig. A:

- 1. Open the terminal head cover (8) on the terminal head.
- 2. Guide the connection wires (4) of the insert (3) through the center hole in the head transmitter (5).
- 3. Fit the mounting springs (6) on the mounting screws (7).
- 4. Guide the mounting screws (7) through the side boreholes of the head transmitter and the insert (3). Then fix both mounting screws with the snap rings (2).
- 5. Then tighten the head transmitter (5) along with the insert (3) in the terminal head.

Installation iTEMP TMT72

Fig. B	Mounting in a field housing
1	Field housing cover
2	Mounting screws with springs
3	Head transmitter
5	Field housing

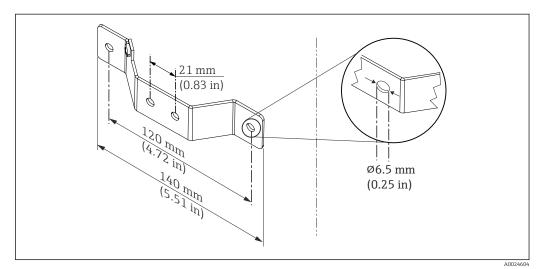

■ 4 Dimensions of angle bracket for wall mount (complete wall mounting set available as accessory)

Procedure for mounting in a field housing, Fig. B:

- 1. Open the cover (1) of the field housing (4).
- **2.** Guide the mounting screws (2) through the lateral bores in the head transmitter (3).
- 3. Screw the head transmitter to the field housing.
- 4. After wiring, close the field housing cover $(1) \rightarrow \square$ 18again.

Fig. C	Mounting on DIN rail (DIN rail as per IEC 60715)
1	Mounting screws with springs
2	Head transmitter
3	Circlips
4	DIN rail clip
5	DIN rail


Procedure for mounting on a DIN rail, Fig. C:

- 1. Press the DIN rail clip (4) onto the DIN rail (5) until it engages with a click.
- 2. Fit the mounting springs on the mounting screws (1) and guide the screws through the side boreholes of the head transmitter (2). Then fix both mounting screws with the snap rings (3).

3. Screw the head transmitter (2) onto the DIN rail clip (4).

iTEMP TMT72 Installation

Mounting typical of North America

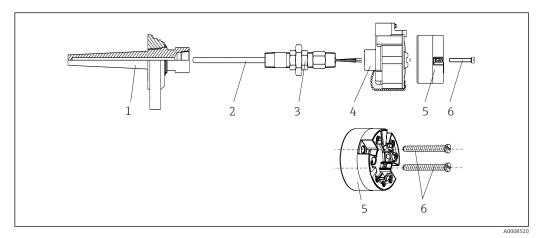

■ 5 Head transmitter mounting

- 1 Thermowell
- 2 Insert
- 3 Adapter, coupling
- 4 Terminal head
- 5 Head transmitter
- 6 Mounting screws

Thermometer design with thermocouples or RTD sensors and head transmitter:

- 1. Fit the thermowell (1) on the process pipe or the container wall. Secure the thermowell according to the instructions before the process pressure is applied.
- 2. Fit the necessary neck tube nipples and adapter (3) on the thermowell.
- 3. Make sure sealing rings are installed if such rings are needed for harsh environmental conditions or special regulations.
- 4. Guide the mounting screws (6) through the lateral bores of the head transmitter (5).
- 5. Position the head transmitter (5) in the terminal head (4) in such a way that the bus cable (terminals 1 and 2) point to the cable entry.
- 6. Using a screwdriver, screw down the head transmitter (5) in the terminal head (4).
- 7. Guide the connection wires of the insert (3) through the lower cable entry of the terminal head (4) and through the middle hole in the head transmitter (5). Wire the connection wires up to the transmitter $\rightarrow \implies 19$.
- 8. Screw the terminal head (4), with the integrated and wired head transmitter, onto the ready-mounted nipple and adapter (3).


NOTICE

The terminal head cover must be secured properly to meet the requirements for explosion protection.

► After wiring, securely screw the terminal head cover back on.

Installation iTEMP TMT72

Mounting the display on the head transmitter

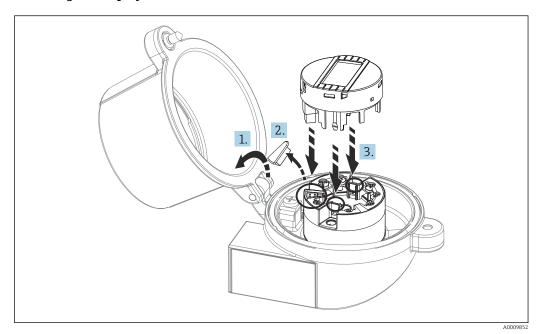

■ 6 Mounting the display

- 1. Loosen the screw on the terminal head cover. Flip back the terminal head cover.
- 2. Remove the cover of the display connection area.
- 3. Fit the display module onto the mounted and wired head transmitter. The fastening pins must click securely into place on the head transmitter. After mounting, securely tighten the terminal head cover.
- The display can be used only with the appropriate terminal heads cover with viewing window (e.g. TA30 from Endress+Hauser).


4.2.2 Mounting the DIN rail transmitter

NOTICE

Wrong orientation

Measurement deviates from the maximum accuracy rating when a thermocouple is connected and the internal reference junction is used.

► Mount the device vertically and ensure it is oriented correctly!

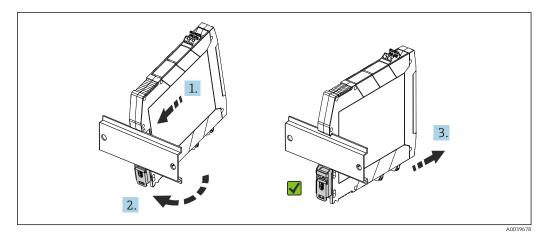


 \blacksquare 7 Mounting the DIN rail transmitter

iTEMP TMT72 Installation

- 1. Position the top DIN rail groove at the top end of the DIN rail.
- 2. Slide the bottom of the device over the bottom end of the DIN rail until you can hear the lower DIN rail clip click into place on the DIN rail.
- 3. Pull gently on the device to check if it is correctly mounted on the DIN rail.

If it doesn't move, the DIN rail transmitter is correctly mounted.

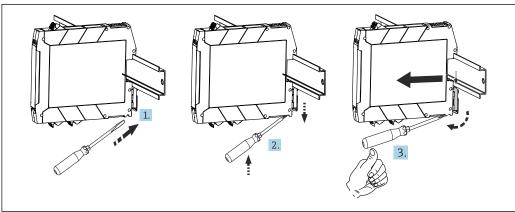

■ 8 Dismantling the DIN rail transmitter

V0030404

Dismantling the DIN rail transmitter:

- 1. Insert a screwdriver into the tab of the DIN rail clip.
- 2. Use the screwdriver to pull down on the DIN rail clip as shown in the diagram.
- 3. Hold down the screwdriver to remove the device from the DIN rail.

4.3 Post-installation check

After installing the device, always run the following final checks:

Device condition and specifications	Notes
Is the device undamaged (visual inspection)?	-
Do the ambient conditions match the device specification (e.g. ambient temperature, measuring range, etc.)?	See Technical data' section

Electrical connection iTEMP TMT72

5 Electrical connection

A CAUTION

► Switch off the power supply before installing or connecting the device. Failure to observe this may result in the destruction of parts of the electronics.

▶ Do not occupy the display connection. An incorrect connection can destroy the electronics.

NOTICE

Do not overtighten the screw terminals, as this could damage the transmitter.

► Maximum tightening torque = $1 \text{ Nm} (\frac{3}{4} \text{ lbf ft})$.

5.1 Connecting requirements

A Phillips head screwdriver is required to wire the head transmitter with screw terminals. Use a flat blade screwdriver for the DIN rail housing version with screw terminals. The push-in terminal version can be wired without any tools.


Proceed as follows to wire a head transmitter mounted in the terminal head or field housing:

- 1. Open the cable gland and the housing cover on the terminal head or the field housing.
- 2. Feed the cables through the opening in the cable gland.
- 4. Tighten the cable gland again and close the housing cover.

In order to avoid connection errors always follow the instructions in the post-connection check section before commissioning!


iTEMP TMT72 Electrical connection

5.2 Quick wiring quide

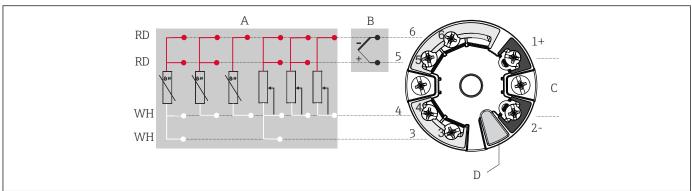

A0047635

- 9 Assignment of terminal connections for head transmitter
- A Sensor input, RTD and Ω , 4-, 3- and 2-wire
- B Sensor input, TC and mV
- C Bus terminator and power supply
- D Display connection and CDI interface

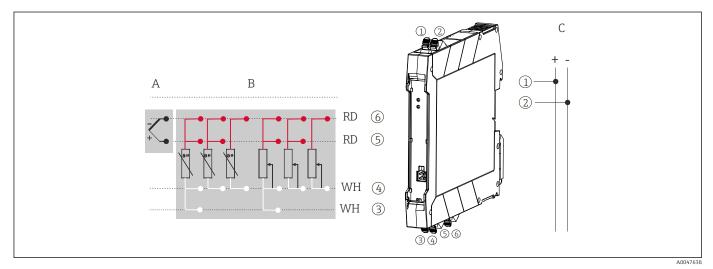

 $\blacksquare 10$ Assignment of terminal connections for DIN rail transmitter

- A Sensor input, TC and mV
- B Sensor input, RTD and Ω , 4-, 3- and 2-wire
- C Power supply 4 to 20 mA

A minimum load of 250 Ω is required in the signal circuit in order to operate the HART[®] transmitter via the HART[®] protocol (terminals 1 and 2).

In the case of a thermocouple measurement (TC), a 2-wire RTD can be connected to measure the reference junction temperature. This is connected to terminals 4 and 6.

NOTICE


► ▲ ESD – Electrostatic discharge. Protect the terminals from electrostatic discharge. Failure to observe this may result in the destruction or malfunction of parts of the electronics.

Electrical connection iTEMP TMT72

5.3 Connecting the sensor cables

Terminal assignment of the sensor connections .

5.3.1 Connecting to push-in terminals

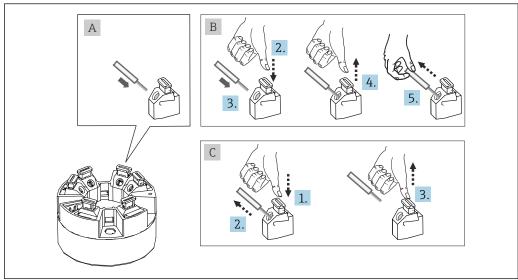

lacktriangledown 11 Push-in terminal connection, using the example of a head transmitter

A0039468

Fig. A, solid wire:

- 1. Strip wire end. Minimum stripping length 10 mm (0.39 in).
- 2. Insert the wire end into the terminal.
- 3. Pull the wire gently to ensure it is connected correctly. Repeat starting from step 1 if necessary.

Fig. B, fine-strand wire without ferrule:

- 1. Strip wire end. Minimum stripping length 10 mm (0.39 in).
- 2. Press down on the lever opener.
- 3. Insert the wire end into the terminal.
- 4. Release lever opener.
- 5. Pull the wire gently to ensure it is connected correctly. Repeat starting from step 1 if necessary.

Fig. C, releasing the connection:

- 1. Press down on the lever opener.
- 2. Remove the wire from the terminal.
- 3. Release lever opener.


5.4 Connecting the transmitter

Cable specification

- A normal device cable suffices if only the analog signal is used.
- \blacksquare A shielded cable is recommended for HART $^{\! \circ}$ communication. Observe grounding concept of the plant.

Also observe the general procedure on $\rightarrow \triangleq 18$.

iTEMP TMT72 Electrical connection

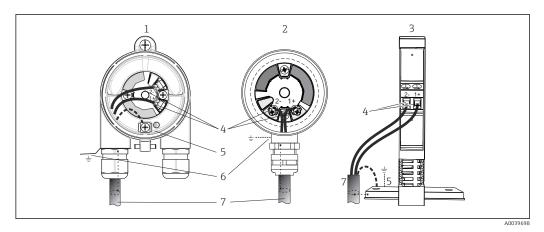

lacksquare 12 Connecting the signal cables and power supply

- 1 Head transmitter installed in field housing
- 2 Head transmitter installed in terminal head
- 3 DIN rail transmitter mounted on DIN rail
- 4 Terminals for HART® protocol and power supply
- 5 Internal ground connection
- 6 External ground connection
- 7 Shielded signal cable (recommended for HART® protocol)




- The terminals for the signal cable connection (1+ and 2-) are protected against reverse polarity.
- Conductor cross-section:
 - Max. 2.5 mm² for screw terminals
 - Max. 1.5 mm² for push-in terminals. Stripping length of wire at least 10 mm (0.39 in).

5.5 Special connection instructions

Shielding and grounding

The specifications of the $HART^{\circ}$ FieldComm Group must be observed when installing a $HART^{\circ}$ transmitter.

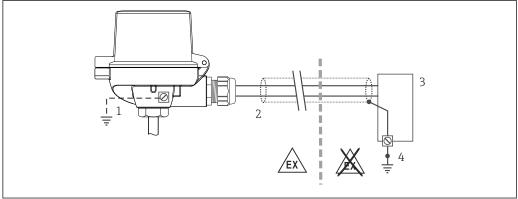

A001446

 \blacksquare 13 Shielding and grounding the signal cable at one end with HART $^{\circ}$ communication


- 1 Optional grounding of the field device, isolated from cable shielding
- 2 Grounding of the cable shield at one end
- 3 Supply unit
- 4 Grounding point for HART® communication cable shield

Electrical connection iTEMP TMT72

5.6 Ensuring the degree of protection

Compliance with the following points is mandatory following installation in the field or servicing in order to ensure that IP67 protection is maintained:

- The transmitter must be mounted in a terminal head with the appropriate degree of protection.
- The housing seals must be clean and undamaged when inserted into their grooves. The seals must be dried, cleaned or replaced if necessary.
- The connecting cables used must have the specified external diameter (e.g. M20x1.5, cable diameter 8 to 12 mm).
- Firmly tighten the cable gland. → 🖸 14, 🖺 22
- The cables must loop down before they enter the cable glands ("water trap"). This means that any moisture that may form cannot enter the gland. Install the device in such a way that the cable glands are not facing upwards. $\rightarrow \blacksquare 14$, $\trianglerighteq 22$
- Replace unused cable glands with dummy plugs.
- Do not remove the grommet from the cable gland.

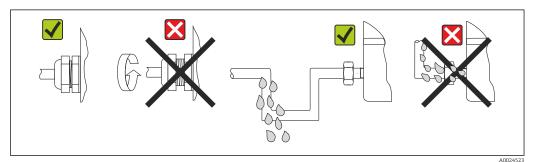

■ 14 Connection tips to retain IP67 protection


5.7 Post-connection check

Device condition and specifications	Notes
Is the device or cable undamaged (visual check)?	
Electrical connection	Notes
Does the supply voltage match the specifications on the nameplate?	 Head transmitter: U = 10 to 36 V_{DC} DIN rail transmitter: U = 11 to 36 V_{DC} Other values apply in the hazardous area, see the corresponding Ex Safety Instructions (XA).
Are the mounted cables relieved of tension?	
Are the power supply and signal cables connected correctly?	→ 🖺 19
Are all the screw terminals firmly tightened and have the push-in terminal connections been checked?	
Are all the cable entries installed, tightened and leaktight?	
Are all housing covers installed and firmly tightened?	

iTEMP TMT72 Operation options

6 Operation options

6.1 Overview of operation options

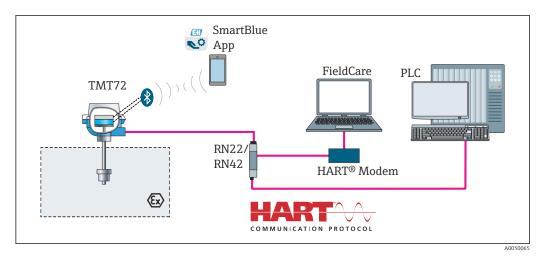


■ 15 Operation options for the transmitter via HART® communication

The transmitter's optional Bluetooth interface is only active if a display unit is not attached or the CDI interface is not used for device configuration.

6.1.1 Measured value display and operating elements

Option: Display TID10 for head transmitter


The display may also be subsequently ordered at any time after purchasing the transmitter, see the 'Accessories' section in the Operating Instructions for the device.

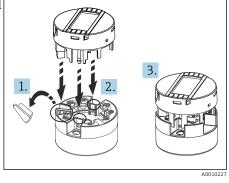

■ 16 Attach the display to the transmitter

Display elements

Head transmitter

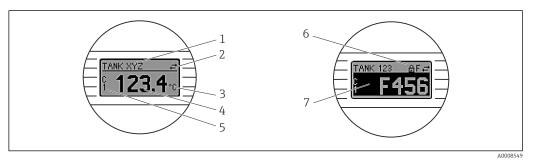

 \blacksquare 17 Optional LC display for head transmitter

Operation options iTEMP TMT72

Item no.	Function	Description	
1	Displays the TAG	TAG, 32 characters long.	
2	'Communication' symbol	The communication symbol appears when read and write-accessing via the fieldbus protocol.	
3	Unit display	Unit display for the measured value displayed.	
4	Measured value display	Displays the current measured value.	
5	Value/channel display DT, PV, I, %	e.g. PV for a measured value from channel 1 or DT for the device temperature	
6	'Configuration locked' symbol	The 'configuration locked' symbol appears when configuration is locked via the hardware.	
7	Status signals		
	Symbols	Meaning	
	F	Error message "Failure detected" An operating error has occurred. The measured value is no longer valid.	
		The display alternates between the error message and "" (no valid measured value present), see "Diagnostics events" section $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $	
	С	"Service mode" The device is in the service mode (e.g. during a simulation).	
	S	"Out of specification" The device is being operated outside its technical specifications (e.g. during startup or cleaning processes).	
	М	"Maintenance required" Maintenance is required. The measured value is still valid.	
		The display alternates between the measured value and the status message.	

DIN rail transmitter

Two LEDs on the front indicate the device status.

Туре	Function and characteristic
Status LED (red)	When the device is operating without errors, the device status is displayed. This function can no longer be guaranteed in the event of an error.
	 LED off: without diagnostic message LED is lit: diagnostics display, category F LED flashing: diagnostics display of categories C, S or M
Power LED (green) 'ON'	When the device is operating without errors, the operating status is displayed. This function can no longer be guaranteed in the event of an error.
	 LED off: Power failure or insufficient supply voltage LED is lit: Supply voltage is OK (either via CDI or via supply voltage, terminals 1+, 2-)

The DIN rail transmitter version does not have an interface to the LC display and therefore does not have a local display either.

Local operation


You can make various hardware settings using miniature switches (DIP switches) on the rear of the optional display.

Optionally, the display can be ordered with the head transmitter, or as an accessory for subsequent mounting. $\rightarrow \stackrel{\square}{=} 46$

iTEMP TMT72 Operation options

NOTICE

► ▲ ESD - Electrostatic discharge. Protect the terminals from electrostatic discharge. Failure to observe this may result in the destruction or malfunction of parts of the electronics.

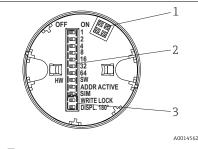

■ 18 Hardware settings via DIP switches

- 1. Connection to head transmitter
- 2: DIP switches (1 64, SW/HW, ADDR and SIM = simulation mode) have **no function** for this head transmitter
- 3: DIP switch (WRITE LOCK = write protection; DISPL. 180° = switch, turn the display monitor 180°)

Procedure for setting the DIP switch:

- 1. Open the cover of the terminal head or field housing.
- 2. Remove the attached display from the head transmitter.
- 3. Configure the DIP switch on the rear of the display accordingly. In general: switch to ON = function enabled, switch to OFF = function disabled.
- 4. Fit the display onto the head transmitter in the correct position. The head transmitter accepts the settings within one second.
- 5. Secure the cover back onto the terminal head or field housing.

Switching write protection on/off

Write protection is switched on and off via a DIP switch on the rear of the optional attachable display. When write protection is active, parameters cannot be modified. A lock symbol on the display indicates that write protection is on. Write protection prevents any write access to the parameters. Write protection remains active even when the display is removed. To deactivate write protection, the display must be attached to the transmitter with the DIP switch switched off (WRITE LOCK = OFF). The transmitter adopts the setting during operation and does not need to be restarted.


Turning the display

The display can be rotated 180° using the "DISPL. 180° " DIP switch.

Operation options iTEMP TMT72

6.2 Structure and function of the operating menu

6.2.1 Structure of the operating menu

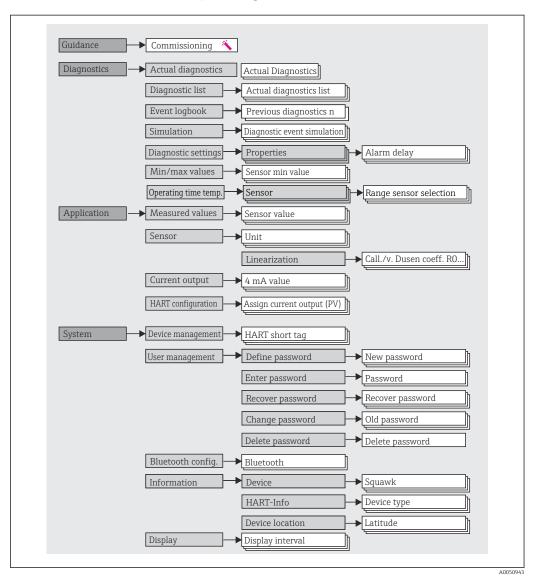

User roles

Endress+Hauser's role-based access concept consists of two hierarchical levels for the user and presents the various user roles with defined read/write authorizations derived from the NAMUR shell model.

iTEMP TMT72 Operation options

Operator

The plant operator can only change settings that do not affect the application - and particularly the measuring path - and simple, application-specific functions that are used during operation. The operator is able to read all the parameters, however.

Maintenance

The **Maintenance** user role refers to configuration situations: commissioning and process adaptations as well as troubleshooting. It allows the user to configure and modify all available parameters. In contrast to the **Operator** user role, in the Maintenance role the user has read and write access to all the parameters.

Changing the user role

A user role - and therefore existing read and write authorization - is changed by selecting the desired user role (already pre-selected depending on the operating tool) and entering the correct password when subsequently prompted. When a user logs out, system access always returns to the lowest level in the hierarchy. A user is logged out either by actively selecting the logout function when operating the device or is logged out automatically if the device is not operated for a period of over 600 seconds. Irrespective of this, actions that are already in progress (e.g. active upload/download, data logging, etc.) continue to be executed in the background.

As-delivered state

The **Operator** user role is not enabled when the device is delivered from the factory, i.e. the **Maintenance** role is the lowest level in the hierarchy ex-works. This state makes it possible to commission the device and make other process adaptations without having to enter a password. Afterwards, a password can be assigned for the **Maintenance** user role to protect this configuration. The **Operator** user role is not visible when the device is delivered from the factory.

Password

The **Maintenance** user role can assign a password in order to restrict access to device functions. This activates the **Operator** user role, which is now the lowest hierarchy level where the user is not asked to enter a password. The password can only be changed or disabled in the **Maintenance** user role. A password can be defined at different points in the operation of the device:

In the menu: Guidance \rightarrow Commissioning wizard: as part of guided device operation

In the menu: System → User management

Operation options iTEMP TMT72

Submenus

Menu	Typical tasks	Content/meaning
"Diagnostics"	Troubleshooting: Diagnosing and eliminating process errors. Error diagnostics in difficult cases. Interpretation of device error messages and correcting associated errors.	Contains all parameters for detecting and analyzing errors: Diagnostic list Contains up to 3 error messages currently pending Event logbook Contains the last 10 error messages "Simulation" submenu Used to simulate measured values, output values or diagnostic messages "Diagnostic settings" submenu Contains all the parameters for configuring error events "Min/max values" submenu Contains the minimum/maximum indicator and the reset option
"Application"	Commissioning: Configuration of the measurement. Configuration of data processing (scaling, linearization, etc.). Configuration of the analog measured value output. Tasks during operation: Reading measured values.	Contains all parameters for commissioning: "Measured values" submenu Contains all the current measured values "Sensor" submenu Contains all the parameters for configuring the measurement "Output" submenu Contains all the parameters for configuring the analog current output "HART configuration" submenu Contains the settings and the most important parameters for HART communication
"System"	Tasks that require detailed knowledge of the system administration of the device: Optimum adaptation of the measurement for system integration. Detailed configuration of the communication interface. User and access administration, password control Information for device identification, HART infos and display configuration	Contains all the higher-level device parameters that are assigned for system, device and user management, including Bluetooth configuration. "Device management" submenu Contains parameters for general device management "Bluetooth configuration" submenu (option) Contains the function for enabling/disabling the Bluetooth interface "Device and user management" submenus Parameters for access authorization, password assignment, etc. "Information" submenu Contains all the parameters for the unique identification of the device "Display" submenu Configuration of the display

6.3 Access to the operating menu via the operating tool

6.3.1 DeviceCare

Function scope

DeviceCare is a free configuration tool for Endress+Hauser devices. It supports devices with the following protocols, provided a suitable device driver (DTM) is installed: HART, PROFIBUS, FOUNDATION Fieldbus, Ethernet/IP, Modbus, CDI, ISS, IPC and PCP. The target group comprises customers without a digital network in plants and service centers as well as Endress+Hauser service technicians. The devices can be connected directly via a modem (point-to-point) or a bus system. DeviceCare is fast, easy and intuitive to use. It can run on a PC, laptop or tablet with a Windows operating system.

Source for device description files

See information $\rightarrow \implies 33$

iTEMP TMT72 Operation options


6.3.2 FieldCare

Function scope

FDT/DTM-based plant asset management tool from Endress+Hauser. It can configure all smart field units in a system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition. Access is via the HART® protocol, CDI (= Endress+Hauser Common Data Interface). It also supports devices with the following protocols, provided a suitable device driver (DTM) is installed: PROFIBUS, FOUNDATION Fieldbus.

Typical functions:

- Parameterization of transmitters
- Loading and saving of device data (upload/download)
- Documentation of the measuring point
- Visualization of the measured value memory (line recorder) and event logbook

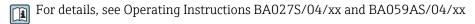

Source for device description files

See information $\rightarrow \implies 33$


Establishing a connection

Example: HART® modem Commubox FXA195 (USB)

- 1. Make sure that the DTM library is updated for all the connected devices (e.g. FXA19x, TMTxy).
- 2. Start FieldCare and create a project.
- 3. Go to View --> Network: right-click **Host PC** Add device...
 - ► The **Add new device** window opens.
- 4. Select the **HART communication** option from the list and press **OK** to confirm.
- 5. Double-click **HART communication** DTM instance.
 - Check whether the correct modem is connected to the serial interface connection and press **OK** to confirm.
- 6. Right-click **HART communication** and select the **Add device...** option in the context menu that opens.
- 7. Select the desired device from the list and press **OK** to confirm.
 - └ The device now appears in the network list.
- 8. Right-click the device and select the **Connect** option in the context menu.
 - ► The CommDTM is displayed in green.
- 9. Double-click the device in the network to establish the online connection to the device.
 - ► The online configuration is available.
- If transferring the device parameters following an offline configuration, the password for **Maintenance** if assigned must first be entered in the "User management" menu.

Operation options iTEMP TMT72

User interface

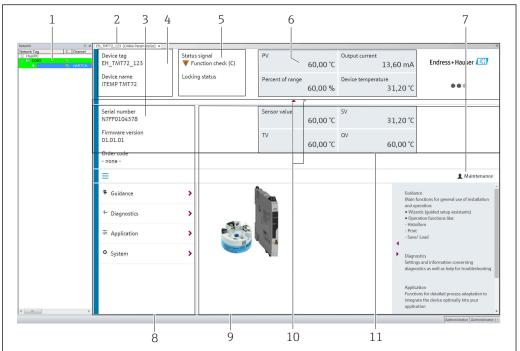

A0037232-EN

■ 19 FieldCare user interface with device information

- 1 Network view
- 2 Header
- 3 Extended header
- 4 Tag name and device name
- 5 Status signal
- 6 Measured values with device and measured value status information, simple presentation, e.g. PV, output current, % span, device temperature
- 7 Current user role (with direct link to user management)
- 8 Navigation area with operating menu structure
- 9 Work area and help section that can be shown/hidden
- 10 Navigation arrow to show/hide the extended header
- 11 Extended display of device and measured value information, e.g. sensor value, SV (TV, QV)

6.3.3 Field Xpert

Function scope

Field Xpert for mobile plant asset management is available as both a tablet PC and an industrial PDA with an integrated touch screen for the commissioning and maintenance of field devices in hazardous and non-hazardous areas. It enables the efficient configuration of FOUNDATION fieldbus, HART and WirelessHART devices. Communication is wireless via Bluetooth or WiFi interfaces.

Source for device description files

See information $\rightarrow \blacksquare 33$.

6.3.4 AMS Device Manager

Function scope

Program from Emerson Process Management for operating and configuring measuring devices via the HART® protocol.

iTEMP TMT72 Operation options

Source for device description files

See information $\rightarrow \blacksquare 33$.

6.3.5 SIMATIC PDM

Function scope

SIMATIC PDM is a standardized, vendor-independent program from Siemens for the operation, configuration, maintenance and diagnosis of intelligent field devices via the HART® protocol.

Source for device description files

See information $\rightarrow \blacksquare 33$.

6.3.6 Field Communicator 375/475

Function scope

Industrial handheld terminal from Emerson Process Management for remote configuration and measured value display via the HART $^{\circ}$ protocol.

Source for device description files

See information $\rightarrow \blacksquare 33$.

6.4 Access to the operating menu via the SmartBlue app

The device can be operated and configured via the SmartBlue app. The connection is established via the Bluetooth® interface.

Prerequisite:

- The device has the optional Bluetooth interface: order code "Communication; output signal; operation", option P: "HART; 4-20 mA; HART/Bluetooth (app) configuration"
- A smartphone or tablet with the SmartBlue app installed.

Supported functions

- Device selection in Live List and access to the device (login)
- Configuration of the device
- Access to measured values, device status and diagnostics information

The SmartBlue app is available for free download for Android devices (Google Playstore) and iOS devices (iTunes Apple Shop): *Endress+Hauser SmartBlue*

Directly to the app with the QR code:



A0037924

Operation options iTEMP TMT72

System requirements

- Devices with iOS:
 - iPhone 4S or higher, from iOS9.0
 - iPad2 or higher, from iOS9.0
 - iPod Touch 5th generation or higher, from iOS9.0
- Devices with Android:

Android 4.4 KitKat or higher

Download the SmartBlue app:

- 1. Install and start the SmartBlue app.
 - ► A Live List shows all the devices available.
- 2. Select the device from the Live List.
 - ► The Login dialog box opens.

Logging in:

- 3. Enter the user name: **admin**
- 4. Enter the initial password: serial number of the device.
- 5. Confirm your entry.
 - The device information opens.
- Navigate through the various items of information about the device: swipe the screen to the side.
- The range under reference conditions is:
 - 10 m (33 ft) when installed in the terminal head or field housing with a display window or DIN rail transmitter
 - 5 m (16.4 ft) when installed in the terminal head or field housing
- Incorrect operation by unauthorized persons is prevented by means of encrypted communication and password encryption
- The Bluetooth® interface can be deactivated.
- The transmitter's optional Bluetooth interface is only active if a display unit is not attached or the CDI interface is not used for device configuration.

iTEMP TMT72 System integration

7 **System integration**

7.1 Overview of device description files

Version data for the device

Firmware version	01.01.zz	 On the title page of the Operating instructions On the nameplate → 1, 9 Firmware version parameter System → Information → Device → Firmware version
Manufacturer ID	0x11	Manufacturer ID parameter System → Information → HART info → Manufacturer ID
Device type ID	0x11D0	Device type parameter System → Information → HART info → Device type
HART protocol revision	7	
Device revision	1	 On the transmitter nameplate → ■ 1, ■ 9 Device revision parameter System → Information → HART info → Device revision

The suitable device driver software (DD/DTM) for the individual operating tools can be acquired from a variety of sources:

- www.endress.com --> Downloads --> Search field: Software --> Software type: Device
- www.endress.com --> Products: Individual product page, e.g. TMTxy --> Documents/ Manuals/Software: Electronic Data Description (EDD) or Device Type Manager (DTM).

Endress+Hauser supports all common operating tools from a variety of manufacturers (e.g. Emerson Process Management, ABB, Siemens, Yokogawa, Honeywell and many others). Endress+Hauser's FieldCare and DeviceCare operating tools are also available for download (www. endress.com --> Downloads --> Search field: Software --> Application software) or on the data storage medium which you can obtain from your local Endress+Hauser sales organization.

7.2 Measured variables via HART protocol

The following measured values are assigned to the device variables at the factory:

Device variable	Measured value
Primary device variable (PV)	Sensor
Secondary device variable (SV)	Device temperature
Tertiary device variable (TV)	Sensor
Quaternary device variable (QV)	Sensor

Supported HART® commands 7.3



The HART® protocol enables the transfer of measuring data and device data between the HART® master and the field device for configuration and diagnostics purposes. HART® masters such as the handheld terminal or PC-based operating programs (e.g. FieldCare) need device description files (DD, DTM) which are used to access all the information in a HART® device. This information is transmitted exclusively via "commands".

System integration iTEMP TMT72

There are three different types of command

• Universal commands:

All ${\rm HART}^{\circ}$ devices support and use universal commands. These are associated with the following functionalities for example:

- Recognition of HART® devices
- Reading digital measured values
- Common practice commands:

Common practice commands offer functions which are supported and can be executed by many but not all field devices.

Device-specific commands:

These commands allow access to device-specific functions which are not HART® standard. Such commands access individual field device information, among other things.

Command No.	Designation		
Universal command	Universal commands		
0, Cmd0	Read unique identifier		
1, Cmd001	Read primary variable		
2, Cmd002	Read loop current and percent of range		
3, Cmd003	Read dynamic variables and loop current		
6, Cmd006	Write polling address		
7, Cmd007	Read loop configuration		
8, Cmd008	Read dynamic variable classifications		
9, Cmd009	Read device variables with status		
11, Cmd011	Read unique identifier associated with TAG		
12, Cmd012	Read message		
13, Cmd013	Read TAG, descriptor, date		
14, Cmd014	Read primary variable transducer information		
15, Cmd015	Read device information		
16, Cmd016	Read final assembly number		
17, Cmd017	Write message		
18, Cmd018	Write TAG, descriptor, date		
19, Cmd019	Write final assembly number		
20, Cmd020	Read long TAG (32-byte TAG)		
21, Cmd021	Read unique identifier associated with long TAG		
22, Cmd022	Write long TAG (32-byte TAG)		
38, Cmd038	Reset configuration changed flag		
48, Cmd048	Read additional device status		
Common practice co	ommands		
33, Cmd033	Read device variables		
34, Cmd034	Write primary variable damping value		
35, Cmd035	Write primary variable range values		
40, Cmd040	Enter/Exit fixed current mode		
42, Cmd042	Perform device reset		
44, Cmd044	Write primary variable units		
45, Cmd045	Trim loop current zero		
46, Cmd046	Trim loop current gain		

iTEMP TMT72 System integration

Command No.	Designation
50, Cmd050	Read dynamic variable assignments
54, Cmd054	Read device variable information
59, Cmd059	Write number of response preambles
72, Cmd072	Squawk
95, Cmd095	Read device communications statistics
100, Cmd100	Write primary variable alarm code
516, Cmd516	Read device location
517, Cmd517	Write device location
518, Cmd518	Read location description
519, Cmd519	Write location description
520, Cmd520	Read process unit tag
521, Cmd521	Write process unit tag
523, Cmd523	Read condensed status mapping array
524, Cmd524	Write condensed status mapping array
525, Cmd525	Reset condensed status mapping array
526, Cmd526	Write simulation mode
527, Cmd527	Simulate status bit

Commissioning iTEMP TMT72

8 Commissioning

8.1 Post-installation check

Before commissioning the measuring point make sure that all final checks have been carried out:

- "Post-mounting check" checklist → 🖺 17
- "Post-connection check" checklist → 🗎 22

8.2 Switching on the transmitter

Once you have completed the post-connection checks, switch on the supply voltage. The transmitter performs a number of internal test functions after power-up. During this process, the following sequence of messages appears on the display:

Step	Display	
1	"Display" text and firmware version of the display	
2	Device name with firmware version, hardware version and device revision	
3	Displays the sensor configuration (sensor type and type of connection) along with the configured measuring range	
4a	Current measured value or	
4b	Current status message	
	If the switch-on procedure is not successful, the relevant diagnostic event, depending on the cause, is displayed. A detailed list of diagnostic events and the corresponding troubleshooting instructions can be found in the "Diagnostics and troubleshooting" section $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $	

The device works after approx. 7 seconds, including the attached display. Normal measuring mode commences as soon as the switch-on procedure is completed. Measured values and status values appear on the display.



If the display is attached when the Bluetooth interface is activated, display initialization is performed twice and Bluetooth communication is disabled simultaneously.

8.3 Configuring the measuring device

Wizards

The starting point for device wizards is in the **Guidance** menu. Wizards not only query individual parameters but also guide the user through the configuration and/or verification of entire sets of parameters with step-by-step instructions, including questions, that are comprehensible for the user. The "Start" button can be disabled for wizards that require specific access authorization (lock symbol appears on the screen).

iTEMP TMT72 Commissioning

The following five operating elements are supported for navigation in the wizards:

Start

Only on the initial page: start the wizard and go to the first section

Next

Go to the next page of the wizard. Is not enabled until parameters are entered or confirmed.

Back

Return to the previous page

Cancel

If Cancel is selected, the status before the wizard was started is restored

Finish

Closes the wizard and possibility of making additional parameter settings on the device. Only enabled on the final page.


8.3.1 Commissioning wizard

Commissioning is the first step towards using the device for the designated application. The Commissioning wizard contains an introductory page (with the "Start" operating element) and a short description of the content. The wizard consists of several sections in which the user is guided step-by-step through the commissioning of the device.

"Device management" is the first section that appears when the user runs the wizard, and contains the following parameters. Its main purpose is to provide information about the device:



The second section, "Sensor", takes the user through all the relevant settings for the sensor. The number of parameters displayed depends on the corresponding settings. The following parameters can be configured:

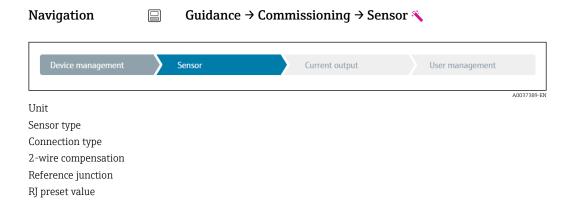

Commissioning iTEMP TMT72

In the third section, the settings are made for the analog output and the output's alarm response. The following parameters can be configured:

Navigation \Box Guidance \Rightarrow Commissioning \Rightarrow Current output \nwarrow



4 mA value

20 mA value

Failure mode

Failure current

In the final section, a password can be defined for the "Maintenance" user role. This is strongly recommended to protect the device against unauthorized access. The following steps describe how to configure a password for the "Maintenance" role for the first time.

Navigation ☐ Guidance → Commissioning → User management 🔦



Access status

New password

Confirm new password

- 1. The **Maintenance** role appears in the "Access status" picklist. The **Maintenance** user role must first be selected when operating the device with the SmartBlue app.
 - → Afterwards, the **New password** and **Confirm new password** input boxes appear.
- 2. Enter a user-defined password that meets the password rules indicated in the online help.
- 3. Enter the password again in the **Confirm new password** input box.

Once the password has been entered successfully, parameter changes, particularly those that are needed for commissioning, process adaptation/optimization and troubleshooting, can only be implemented in the **Maintenance** user role and if the password is entered successfully.

8.4 Protecting settings from unauthorized access

8.4.1 Hardware locking

8.4.2 Software locking

By assigning a password for the **Maintenance** user role, it is possible to restrict access authorization and protect the device against unauthorized access.

See the Commissioning wizard $\rightarrow \stackrel{\triangle}{=} 37$

iTEMP TMT72 Commissioning

> The parameters are also protected against modification by logging out of the Maintenance user role and switching to the Operator role. No lock symbol appears, however.

To disable the write protection, the user must log on with the **Maintenance** user role via the relevant operating tool.



User role concept → 🗎 26

Diagnostics and troubleshooting 9

General troubleshooting 9.1

Always start troubleshooting with the checklists below if faults occur after startup or during operation. The checklists take you directly (via various queries) to the cause of the problem and the appropriate remedial measures.

Due to its design, the device cannot be repaired. However, it is possible to send the

General errors

Problem	Possible cause Remedy			
Device is not responding.	Supply voltage does not match the voltage specified on the nameplate.	Check the voltage at the transmitter directly using a voltmeter and correct.		
	Connecting cables are not in contact with the terminals.	Ensure electrical contact between the cable and the terminal.		
	Electronics unit is defective.	Replace the device.		
Output current < 3.6 mA	Signal line is not wired correctly.	Check wiring.		
	Electronics unit is defective.	Replace the device.		
HART® communication is not working.	Missing or incorrectly installed communication resistor.	Install the communication resistor (250 Ω) correctly.		
	Commubox is connected incorrectly.	Connect Commubox correctly.		
	Commubox is not set to "HART®".	Set Commubox selector switch to "HART®".		

|

Check display (optional in conjunction with head transmitter)

Problem	Possible cause	Remedy	
Display is blank	No supply voltage	 Check the supply voltage at the head transmitter, terminals + and Ensure that the display module holders are correctly seated and that the display module is properly connected to the head transmitter, →	
	The display module is defective.	Replace the module.	
	The electronics of the head transmitter are defective.	Replace the head transmitter.	

 \blacksquare

Local error messages on the display	
→ 🖺 42	

↓

Faulty connection to the fieldbus host system				
Problem	Possible cause	Remedy		
HART® communication is not working.	Missing or incorrectly installed communication resistor.	Install the communication resistor (250 $\Omega)$ correctly.		
	Commubox is connected incorrectly.	Connect Commubox correctly.		

↓

Error messages in the configuration software	
→ 🗎 42	

Application errors without status messages for RTD sensor connection

Problem	Possible cause	Remedy			
	Incorrect sensor orientation.	Install the sensor correctly.			
	Heat conducted by sensor.	Observe the installed length of the sensor.			
	Device programming is incorrect (number of wires).	Change the Connection type device function.			
Measured value is incorrect/	Device programming is incorrect (scaling).	Change scaling.			
maccurate	Incorrect RTD configured.	Change the Sensor type device function.			
	Sensor connection.	Check that the sensor is connected correctly.			
	The cable resistance of the sensor (2-wire) was not compensated.	Compensate the cable resistance.			
	Offset incorrectly set.	Check offset.			
	Faulty sensor.	Check the sensor.			
Failure current (\leq 3.6 mA or \geq 21 mA)	RTD connected incorrectly.	Connect the connecting cables correctly (terminal diagram).			
	Device programming is incorrect (e.g. number of wires).	Change the Connection type device function.			
	Incorrect programming.	Incorrect sensor type set in the Sensor type device function. Set the correct sensor type.			


lacksquare

$Application\ errors\ without\ status\ messages\ for\ TC\ sensor\ connection$

Problem	Possible cause Remedy			
Measured value is incorrect/inaccurate	Incorrect sensor orientation.	Install the sensor correctly.		
	Heat conducted by sensor.	Observe the installed length of the sensor.		
	Device programming is incorrect (scaling).	Change scaling.		
	Incorrect thermocouple type (TC) configured.	Change the Sensor type device function.		
	Incorrect reference junction set.	Set the correct reference junction .		

Problem	Possible cause	Remedy		
	Interference via the thermocouple wire welded in the thermowell (interference voltage coupling).	Use a sensor where the thermocouple wire is not welded.		
	Offset incorrectly set.	Check offset.		
Failure current (≤ 3.6 mA or ≥ 21 mA)	Faulty sensor.	Check the sensor.		
	Sensor is connected incorrectly.	Connect the connecting cables correctly (terminal diagram).		
	Incorrect programming.	Incorrect sensor type set in the Sensor type device function. Set the correct sensor type.		

9.2 Diagnostic information on local display

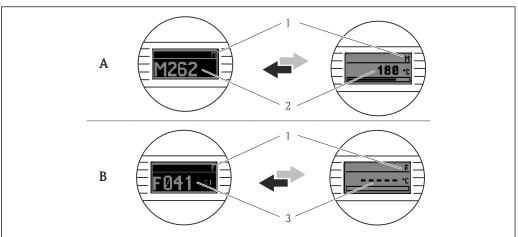

A0014837

- A Display in the event of a warning
- B Display in the event of an alarm
- 1 Status signal in the header
- The display alternates between the primary measured value and the status indicated by the appropriate letter (M, C or S) plus the defined error number.
- 3 The display alternates between "- - -" (no valid measured value) and the status indicated by the appropriate letter (F) plus the defined error number.

9.3 Diagnostic information via communication interface

NOTICE

Status signals and diagnostic behavior can be configured manually for certain diagnostic events. If a diagnostic event occurs, however, it is not guaranteed that the measured values are valid for the event and comply with the process for the status signals S and M and the diagnostic behavior: 'Warning' and Disabled'.

▶ Reset the status signal assignment to the factory setting.

Status signals

Letter/ symbol 1)	Event category	Meaning
F 🚫	Operating error	An operating error has occurred.
C 🔻	Service mode	The device is in the service mode (e.g. during a simulation).
S	Out of specification	The device is being operated outside its technical specifications (e.g. during startup or cleaning processes).

Letter/ symbol 1)	Event category	Meaning
M♠	Maintenance required	Maintenance is required.
N -	Not categorized	

1) As per NAMUR NE107

Diagnostic behavior

Alarm	Measurement is interrupted. The signal outputs adopt the defined alarm state. A diagnostic message is generated.
Warning	The device continues to measure. A diagnostic message is generated.
Disabled	The diagnosis is completely disabled even if the device is not recording a measured value.

9.4 Diagnostic list

If two or more diagnostic events occur simultaneously, only the diagnostic message with the highest priority is shown. Additional pending diagnostic messages are shown in the **Diagnostic list** submenu . The status signal dictates the priority in which the diagnostic messages are displayed. The following order of priority applies: F, C, S, M. If two or more diagnostic events with the same status signal are active simultaneously, the numerical order of the event number dictates the order of priority in which the events are displayed, e.g.: F042 appears before F044 and before S044.

9.5 Event logbook

Previous diagnostic messages are displayed in the **Event logbook** submenu. $\rightarrow \triangleq 73$

9.6 Overview of diagnostic events

Each diagnostic event is assigned a certain event behavior at the factory. The user can change this assignment for certain diagnostic events.

Example:

		Settings		Device behavior			
Configuration examples	Diagnostic number	Status signal	Diagnostic behavior from the factory	Status signal (output via HART® communication)	Current output	PV,status	Display
1. Default setting	047	S	Warning	S	Measured value	Measured value, UNCERTAIN	S047
2. Manual setting: status signal S changed to F	047	F	Warning	F	Measured value	Measured value, UNCERTAIN	F047

		Settings	ttings Device behavior				
Configuration examples	Diagnostic number	Status signal	Diagnostic behavior from the factory	Status signal (output via HART® communication)	Current output	PV,status	Display
3. Manual setting: Warning diagnostic behavior changed to Alarm	047	S	Alarm	S	Configured failure current	Measured value, BAD	S047
4. Manual setting: Warning changed to Disabled	047	S 1)	Disabled	_ 2)	Last valid measured value ³⁾	Last valid measured value, GOOD	S047

- 1)
- 2)
- Setting is not relevant. Status signal is not displayed. The failure current is output if no valid measured value is available.

Diagnostic number	Short text	Corrective measure	Status signal from the factory	Customizable Not customizable	Diagnosti c behavior from the factory	Customizable Not customizable
		Diagnostics for the sensor				
041	Sensor interrupted	Check electrical wiring. Replace sensor. Check connection type.	F	✓	Alarm	✓
042	Sensor corroded	1. Check sensor. 2. Replace sensor.	M	✓	Warning	✓
043	Short-circuit	Check electrical connection. Check sensor. Replace sensor or cable.	F	✓	Alarm	~
047	Sensor limit reached, sensor n	Check sensor. Check process conditions.	S	✓	Warning	✓
145	Compensation reference point	Check terminal temperature. Check external reference point.	F	✓	Alarm	✓
		Diagnostics for the electronics				
201	Electronics faulty	1. Restart device. 2. Replace electronics.	F	X	Alarm	X
221	Reference sensor defective	Replace device.	M	✓	Alarm	×
		Diagnostics for the configuration	1			
401	Factory reset active	Factory reset active, please wait.	С	X	Warning	×
402	Initialization is active	Initialization active, please wait.	С	X	Warning	×
410	Data transfer failed	1. Check connection. 2. Retry data transfer.	F	X	Alarm	X
411	Upload/download active	Upload/download active, please wait.	С	X	Warning	X
435	Linearization incorrect	Check linearization.	F	X	Alarm	×
485	Simulation of the process variable is active	Deactivate simulation.	С	X	Warning	X

iTEMP TMT72 Maintenance

Diagnostic number	Short text	Corrective measure	Status signal from the factory	Customizable 1) Not customizable	Diagnosti c behavior from the factory	Customizable 2) Not customizable
491	Current output simulation	Deactivate simulation.	С	\checkmark	Warning	\checkmark
495	Diagnostic event simulation active	Deactivate simulation.	С	✓	Warning	✓
531	Factory calibration missing	1. Contact service. 2. Replace device.	F	X	Alarm	×
537	Configuration	Check device configuration Upload and download new configuration. (In case of current output: check configuration of analog output.)	F	X	Alarm	X
582	Sensor diagnostics TC deactivated	Switch on diagnostics for thermocouple measurement	С	X	Warning	X
		Diagnostics for the process				
801	Supply voltage too low 3)	Increase supply voltage.	S	✓	Alarm	×
825	Operating temperature	Check ambient temperature. Check process temperature.	S	✓	Warning	\checkmark
844	Process value out of specification	Check process value. Check application. Check sensor. Check scaling of analog output	S	✓	Warning	

- 1) Can be set to F, C, S, M, N
- 2) Can be set to 'Alarm', 'Warning' and 'Disabled'
- 3) With this diagnostic event, the device always outputs a "low" alarm status (output current \leq 3.6 mA).

9.7 Firmware history

Revision history

The firmware version (FW) on the nameplate and in the Operating Instructions indicates the device release: XX.YY.ZZ (example 01.02.01).

XX Change to main version. No longer compatible. The device and

Operating Instructions change.

YY Change to functions and operation. Compatible. The Operating

Instructions change.

ZZ Fixes and internal changes. No changes to the Operating Instructions.

Date	Firmware version	Changes	Documentation
11/2018	01.01.zz	Original firmware	BA01854T/09/en/01.18
08/2020	01.01.zz	Bluetooth optimization	BA01854T/09/EN/05.22

10 Maintenance

No special maintenance work is required for the device.

Repair iTEMP TMT72

Cleaning

A clean, dry cloth can be used to clean the device.

11 Repair

11.1 General information

Due to its design, the device cannot be repaired.

11.2 Spare parts

Spare parts currently available for the device can be found online at: http://www.products.endress.com/spareparts_consumables. Always quote the serial number of the device when ordering spare parts!

Туре	Order number
Standard - DIN securing set (2 screws and springs, 4 shaft lock-down rings, 1 plug for the display interface)	71044061
US - M4 securing set (2 screws and 1 plug for the display interface)	71044062
Commubox FXA195 HART®, For intrinsically safe HART® communication with FieldCare via the USB interface.	FXA195

11.3 Return

The requirements for safe device return can vary depending on the device type and national legislation.

- 1. Refer to the web page for information: http://www.endress.com/support/return-material
 - Select the region.
- 2. Return the device if repairs or a factory calibration are required, or if the wrong device was ordered or delivered.

11.4 Disposal



If required by the Directive 2012/19/EU on waste electrical and electronic equipment (WEEE), the product is marked with the depicted symbol in order to minimize the disposal of WEEE as unsorted municipal waste. Do not dispose of products bearing this marking as unsorted municipal waste. Instead, return them to the manufacturer for disposal under the applicable conditions.

12 Accessories

Various accessories, which can be ordered with the device or subsequently from Endress +Hauser, are available for the device. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: www.endress.com.

iTEMP TMT72 Accessories

Accessories included in the scope of delivery:

- Printed version of Brief Operating Instructions in English
- ATEX supplementary documentation: ATEX Safety instructions (XA), Control Drawings
 (CD)
- Mounting material for head transmitter

12.1 Device-specific accessories

Accessories for the head transmitter
TID10 display unit for Endress+Hauser head transmitter iTEMP TMT8x $^{1)}$ or TMT7x, attachable
TID10 service cable; connecting cable for service interface, 40 cm
Field housing TA30x for Endress+Hauser head transmitter
Adapter for DIN rail mounting, clip as per IEC 60715 (TH35) without securing screws
Standard - DIN mounting kit (2 screws + springs, 4 securing disks and 1 display connector cover)
US - M4 mounting screws (2 M4 screws and 1 display connector cover)
Stainless steel wall mounting bracket Stainless steel pipe mounting bracket

1) Without TMT80

12.2 Communication-specific accessories

Accessories	Description
Commubox FXA195 HART	For intrinsically safe HART® communication with FieldCare via the USB interface. For details, see Technical Information TI404F/00
Commubox FXA291	Connects Endress+Hauser field devices with a CDI interface (= Endress+Hauser Common Data Interface) and the USB port of a computer or laptop. For details, see Technical Information TI405C/07
WirelessHART adapter	Is used for the wireless connection of field devices. The WirelessHART® adapter can be easily integrated into field devices and existing infrastructures, offers data protection and transmission safety and can be operated in parallel with other wireless networks. For details, see Operating Instructions BA061S/04
Field Xpert SMT70	Universal, high-performance tablet PC for device configuration The tablet PC enables mobile plant asset management in hazardous and non- hazardous areas. It is suitable for commissioning and maintenance staff to manage field instruments with a digital communication interface and to record progress. This tablet PC is designed as a comprehensive, all-in-one solution. With a pre- installed driver library, it is an easy-to-use, touch-sensitive tool which can be used to manage field instruments throughout their entire life cycle. For details, see Technical Information TIO1342S/04

Accessories iTEMP TMT72

12.3 Service-specific accessories

Accessories	Description
Applicator	Software for selecting and sizing Endress+Hauser measuring devices: Calculation of all the necessary data for identifying the optimum measuring device: e.g. pressure loss, accuracy or process connections. Graphic illustration of the calculation results
	Administration, documentation and access to all project-related data and parameters over the entire life cycle of a project.
	Applicator is available: Via the Internet: https://portal.endress.com/webapp/applicator
Accessories	Description
Configurator	Product Configurator - the tool for individual product configuration • Up-to-the-minute configuration data • Depending on the device: Direct input of measuring point-specific information such as measuring range or operating language • Automatic verification of exclusion criteria • Automatic creation of the order code and its breakdown in PDF or Excel output format • Ability to order directly in the Endress+Hauser Online Shop The Configurator is available on the Endress+Hauser website at: www.endress.com -> Click "Corporate" -> Select your country -> Click "Products" -> Select the product using the filters and search field -> Open product page -> The "Configure" button to the right of the product image opens the Product Configurator.
DeviceCare SFE100	Configuration tool for devices via fieldbus protocols and Endress+Hauser service protocols. DeviceCare is the tool developed by Endress+Hauser for the configuration of Endress+Hauser devices. All smart devices in a plant can be configured via a point-to-point or point-to-bus connection. The user-friendly menus enable transparent and intuitive access to the field devices. For details, see Operating Instructions BA00027S
FieldCare SFE500	FDT-based plant asset management tool from Endress+Hauser. It can configure all smart field units in your system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition. For details, see Operating Instructions BA00027S and BA00065S
Accessories	Description
W@M	Life cycle management for your plant W@M offers assistance with a wide range of software applications over the entire process: from planning and procurement to the installation, commissioning and operation of the measuring devices. All the relevant information is available for every measuring device over the entire life cycle, such as the device status, device-specific documentation, spare parts etc. The application already contains the data of your Endress+Hauser device. Endress+Hauser also takes care of maintaining and updating the data records. W@M is available: Via the Internet: www.endress.com/lifecyclemanagement

iTEMP TMT72 Accessories

12.4 System components

Accessories	Description
RN22	Single- or two-channel active barrier for safe separation of 0/4 to 20 mA standard signal circuits with bidirectional HART® transmission. In the signal duplicator option, the input signal is transmitted to two galvanically isolated outputs. The device has one active and one passive current input; the outputs can be operated actively or passively. The RN22 requires a supply voltage of 24 V_{DC} . For details, see Technical Information TI01515K
RN42	Single-channel active barrier for safe separation of 0/4 to 20 mA standard signal circuits with bidirectional HART® transmission. The device has one active and one passive current input; the outputs can be operated actively or passively. The RN42 can be powered with a wide range voltage of 24 to 230 V _{AC/DC} . For details, see Technical Information TI01584K
RIA15	Process display, digital, loop-powered display unit for 4 to 20 mA circuits, panel mounting, with optional HART® communication. Displays 4 to 20 mA or up to 4 HART® process variables For details, see Technical Information TI01043K
Graphic Data Manager Memograph M	The Advanced Data Manager Memograph M is a flexible and powerful system for organizing process values. Optional HART® input cards are available, each providing four inputs (4/8/12/16/20). They transmit highly accurate process values from the directly connected HART® devices, so that they are available for calculation and data logging. The measured process values are clearly presented on the display and logged safely, monitored for limit values and analyzed. Via common communication protocols, the measured and calculated values can be very easily communicated to higher-level systems or individual plant modules can be interconnected.
	For details, see Technical Information TI01180R

13 Technical data

13.1 Input

Measured variable

Temperature (temperature-linear transmission behavior), resistance and voltage.

Resistance thermometer (RTD) as per standard	Designation	α	Measuring range limits	Min. span	
IEC 60751:2008	Pt100 (1) Pt200 (2) Pt500 (3) Pt1000 (4)	0.003851	-200 to +850 °C (-328 to +1562 °F) -200 to +850 °C (-328 to +1562 °F) -200 to +500 °C (-328 to +932 °F) -200 to +250 °C (-328 to +482 °F)	10 K (18°F)	
JIS C1604:1984	Pt100 (5)	0.003916	−200 to +510 °C (−328 to +950 °F)	10 K (18 °F)	
DIN 43760 IPTS-68	Ni100 (6) Ni120 (7)	0.006180	-60 to +250 °C (-76 to +482 °F) -60 to +250 °C (-76 to +482 °F)	10 K (18 °F)	
GOST 6651-94	Pt50 (8) Pt100 (9)	0.003910	-185 to +1100 °C (-301 to +2012 °F) -200 to +850 °C (-328 to +1562 °F)	10 K (18 °F)	
OIML R84: 2003.	Cu50 (10) Cu100 (11)	0.004280	-180 to +200 °C (-292 to +392 °F) -180 to +200 °C (-292 to +392 °F)	10 K (18 °F)	
GOST 6651-2009	Ni100 (12) Ni120 (13)	0.006170	-60 to +180 °C (-76 to +356 °F) -60 to +180 °C (-76 to +356 °F)	10 K (18 °F)	
OIML R84: 2003, GOST 6651-94	Cu50 (14)	0.004260	-50 to +200 °C (−58 to +392 °F)	10 K (18 °F)	
-	Pt100 (Callendar van Dusen) Nickel polynomial Copper polynomial	-	The measuring range limits are specified by entering the limit values that depend on the coefficients A to C and RO.	10 K (18 °F)	
■ Connection type: 2-wire, 3-wire or 4-wire connection, sensor current: \leq 0.3 mA ■ With 2-wire circuit, compensation of wire resistance possible (0 to 30 Ω) ■ With 3-wire and 4-wire connection, sensor wire resistance up to max. 50 Ω per wire					
Resistance transmitter	Resistance Ω		10 to 400 Ω 10 to 2000 Ω	10 Ω 10 Ω	

Thermocouples as per standard	Designation	Measuring range limits		Min. span
IEC 60584, Part 1 ASTM E230-3	Type A (W5Re-W20Re) (30) Type B (PtRh30-PtRh6) (31) Type E (NiCr-CuNi) (34) Type J (Fe-CuNi) (35) Type K (NiCr-Ni) (36) Type N (NiCrSi-NiSi) (37) Type R (PtRh13-Pt) (38) Type S (PtRh10-Pt) (39) Type T (Cu-CuNi) (40)	0 to +2500 °C (+32 to +4532 °F) +40 to +1820 °C (+104 to +3308 °F) -250 to +1000 °C (-482 to +1832 °F) -210 to +1200 °C (-346 to +2192 °F) -270 to +1372 °C (-454 to +2501 °F) -270 to +1300 °C (-454 to +2372 °F) -50 to +1768 °C (-58 to +3214 °F) -50 to +1768 °C (-58 to +3214 °F) -200 to +400 °C (-328 to +752 °F)	Recommended temperature range: 0 to +2500 °C (+32 to +4532 °F) +500 to +1820 °C (+932 to +3308 °F) -150 to +1000 °C (-238 to +1832 °F) -150 to +1200 °C (-238 to +2192 °F) -150 to +1200 °C (-238 to +2192 °F) -150 to +1300 °C (-238 to +2372 °F) +50 to +1768 °C (+122 to +3214 °F) +50 to +1768 °C (+122 to +3214 °F) -150 to +400 °C (-238 to +752 °F)	50 K (90 °F) 50 K (90 °F)
IEC 60584, Part 1 ASTM E230-3 ASTM E988-96	Type C (W5Re-W26Re) (32)	0 to +2 315 °C (+32 to +4 199 °F)	0 to +2 000 °C (+32 to +3 632 °F)	50 K (90 °F)
ASTM E988-96	Type D (W3Re-W25Re) (33)	0 to +2 315 °C (+32 to +4 199 °F)	0 to +2 000 °C (+32 to +3 632 °F)	50 K (90 °F)
DIN 43710	Type L (Fe-CuNi) (41) Type U (Cu-CuNi) (42)	-200 to +900 °C (-328 to +1652 °F) -200 to +600 °C (-328 to +1112 °F)	-150 to +900 °C (-238 to +1652 °F) -150 to +600 °C (-238 to +1112 °F)	50 K (90 °F)
GOST R8.585-2001	Type L (NiCr-CuNi) (43)	-200 to +800 °C (-328 to +1472 °F)	-200 to +800 °C (+328 to +1472 °F)	50 K (90 °F)

iTEMP TMT72 Technical data

Thermocouples as per standard	• Designation Measuring range limits		Min. span			
	 Internal reference junction (Pt100) External preset value: configurable value -40 to +85 °C (-40 to +185 °F) Maximum sensor wire resistance 10 kΩ (If the sensor wire resistance is greater than 10 kΩ, an error message is output in accordance with NAMUR NE89.) 					
Voltage transmitter (mV)	Millivolt transmitter (mV)	-20 to 100 mV	5 mV			

13.2 Output

Output signal	Analog output	4 to 20 mA, 20 to 4 mA (can be inverted)
	Signal encoding	FSK ±0.5 mA via current signal
	Data transmission rate	1200 baud
	Galvanic isolation	U = 2 kV AC for 1 minute (input/output)


Failure information

Failure information as per NAMUR NE43:

Failure information is created if the measuring information is missing or not valid. A complete list of all the errors occurring in the measuring system is created.

Underranging	Linear decrease from 4.0 to 3.8 mA
Overranging	Linear increase from 20.0 to 20.5 mA
Failure e.g. sensor failure; sensor short-circuit	\leq 3.6 mA ("low") or \geq 21 mA ("high"), can be selected The "high" alarm setting can be set between 21.5 mA and 23 mA, thus providing the flexibility needed to meet the requirements of various control systems.



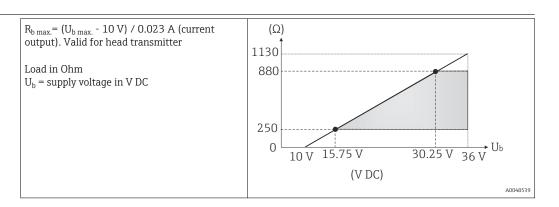

Linearization/transmission behavior

Temperature-linear, resistance-linear, voltage-linear

Mains filter 50/60 Hz

Filter 1st order digital filter: 0 to 120 s

Protocol-specific data

Manufacturer ID

Device type ID

17 (0x11)

0x11D0

HART® specification	7
Device address in multi-drop mode	Software setting addresses 0 to 63
Device description files (DTM, DD)	Information and files available at: www.endress.com www.fieldcommgroup.org
HART load	min. 250 Ω
HART device variables	Measured value for primary value (PV) Sensor (measured value)
	Measured values for SV, TV, QV (secondary, tertiary and quaternary variable) SV: device temperature TV: sensor (measured value) QV: sensor (measured value)
Supported functions	■ Squawk ■ Condensed status

Wireless HART data

Minimum starting voltage	10 V _{DC}
Start-up current	3.58 mA
Starting time	7 s
Minimum operating voltage	10 V _{DC}
Multidrop current	4.0 mA
Time for connection setup	9 s

Write protection for device parameters

- Hardware: Write protection for head transmitter on optional display using DIP switch
- Software: user role concept (password assignment)

Switch-on delay

 ≤ 7 s, until the first measured value signal is present at the current output and until start of HART® communication. While switch-on delay = $I_a \leq 3.8~mA$

13.3 Power supply

Supply voltage

Values for non-hazardous areas, protected against polarity reversal:

Head transmitter: 10 V ≤ Vcc ≤ 36 V
 DIN rail device: 11 V ≤ Vcc ≤ 36 V

Values for the hazardous area, see Ex documentation.

Current consumption

- 3.6 to 23 mA
- Minimum current consumption 3.5 mA
- Current limit ≤ 23 mA

iTEMP TMT72 Technical data

Terminal

Choice of screw terminals or push-in terminals for sensor and power supply cables:

Terminal design	Cable version	Cable cross-section
Screw terminals	Rigid or flexible	≤ 2.5 mm² (14 AWG)
Push-in terminals (cable version,	Rigid or flexible	0.2 to 1.5 mm ² (24 to 16 AWG)
stripping length = min. 10 mm (0.39 in)	Flexible with wire end ferrules with/without plastic ferrule	0.25 to 1.5 mm ² (24 to 16 AWG)

Ferrules must be used with push-in terminals and when using flexible cables with a cable cross-section of ≤ 0.3 mm². Otherwise, the use of ferrules when connecting flexible cables to push-in terminals is not recommended.

13.4 Performance characteristics

Response time

Resistance thermometer (RTD) and resistance transmitter (Ω measurement)	≤1 s
Thermocouples (TC) and voltage transmitters (mV)	≤1 s
Reference temperature	≤ 1 s



When recording step responses, it must be taken into account that the times for the internal reference measuring point may be added to the specified times.

Refresh time

approx. 100 ms

Reference operating conditions

- Calibration temperature: +25 °C ±3 K (77 °F ±5.4 °F)
- Supply voltage: 24 V DC
- 4-wire circuit for resistance adjustment

Maximum measured error

In accordance with DIN EN 60770 and the reference conditions specified above. The measured error data correspond to $\pm 2~\sigma$ (Gaussian distribution). The data include nonlinearities and repeatability.

MV = measured value

LRV = lower range value of the sensor in question

Typical

Standard	Designation	Measuring range	Typical measured error (±)		
Resistance thermometer (RTD)) as per standard	Digital value ¹⁾	Value at current output		
IEC 60751:2008	Pt100 (1)		0.07 °C (0.13 °F)	0.10 °C (0.18 °F)	
IEC 60751:2008	Pt1000 (4)	0 to +200 °C (32 to +392 °F)	0.05 °C (0.09 °F)	0.08 °C (0.14 °F)	
GOST 6651-94 Pt100 (9)			0.06 °C (0.11 °F)	0.09 °C (0.16 °F)	
				Value at current	
Thermocouples (TC) as per standard			Digital value ¹⁾	output	
IEC 60584, Part 1 Type K (NiCr-Ni) (36)		0 to +800 °C (32 to +1472 °F)	0.60 °C (1.08 °F)	0.64 °C (1.15 °F)	

Standard	Designation	Measuring range	Typical measured error (±)	
IEC 60584, Part 1	Type S (PtRh10-Pt) (39)		1.83 °C (3.29 °F)	1.84 °C (3.31 °F)
GOST R8.585-2001	Type L (NiCr-CuNi) (43)		2.45 °C (4.41 °F)	2.46 °C (4.43 °F)

1) Measured value transmitted via HART®.

Measured error for resistance thermometers (RTD) and resistance transmitters

Standard	Designation	Measuring range	Measured error (±)		
			Digital ¹⁾		D/A ²⁾
			Maximum ³⁾	Based on measured value 4)	
	Pt100 (1)	−200 to +850 °C	≤ 0.1 °C (0.19 °F)	$ME = \pm (0.05 ^{\circ}\text{C} (0.09 ^{\circ}\text{F}) + 0.006\% ^{*} (MV - LRV))$	
IEC 60751:2008	Pt200 (2)	(−328 to +1562 °F)	≤ 0.20 °C (0.36 °F)	ME = ± (0.08 °C (0.14 °F) + 0.011% * (MV - LRV))	
IEC 00731.2000	Pt500 (3)	−200 to +510 °C (−328 to +950 °F)	≤ 0.1 °C (0.19 °F)	ME = ± (0.035 °C (0.063 °F) + 0.008% * (MV - LRV))	0.03 % (=
	Pt1000 (4)	−200 to +250 °C (−328 to +482 °F)	≤ 0.06 °C (0.11 °F)	ME = ± (0.02 °C (0.04 °F) + 0.007% * (MV - LRV))	4.8 μΑ)
JIS C1604:1984	Pt100 (5)	−200 to +510 °C (−328 to +950 °F)	≤ 0.09 °C (0.16 °F)	ME = ± (0.05 °C (0.09 °F) + 0.006% * (MV - LRV))	
GOST 6651-94	Pt50 (8)	−185 to +1100 °C (−301 to +2012 °F)	≤0.18 °C (0.32 °F)	ME = ± (0.07 °C (0.13 °F) + 0.008% * (MV - LRV))	
GUS1 0051-94	Pt100 (9)	−200 to +850 °C (−328 to +1562 °F)	≤ 0.11 °C (0.2 °F)	ME = ± (0.05 °C (0.09 °F) + 0.006% * (MV - LRV))	
DIN 43760 IPTS-68	Ni100 (6)	-60 to +250 °C (−76 to +482 °F)	≤ 0.04 °C (0.07 °F)	ME = ± (0.04 °C (0.07 °F) -	
DIN 43700 IF 13-00	Ni120 (7)		≤ 0.04 C (0.07 F)	0.004% * (MV- LRV))	
	Cu50 (10)	-180 to +200 °C (-292 to +392 °F)	≤ 0.10 °C (0.19 °F)	ME = ± (0.08 °C (0.14 °F) + 0.006% * (MV - LRV))	0.03 % (=
OIML R84: 2003 / GOST 6651-2009	Cu100 (11)	−180 to +200 °C (−292 to +392 °F)	≤ 0.06 °C (0.11 °F)	ME = ± (0.04 °C (0.07 °F) + 0.003% * (MV - LRV))	4.8 μΑ)
	Ni100 (12)	60 to 1100 °C / 76 to 1256 °E)	4 0 0 4 °C 40 0 7 °F)	$ME = \pm (0.04 ^{\circ}\text{C} (0.07 ^{\circ}\text{F}) -$	
	Ni120 (13)	- −60 to +180 °C (−76 to +356 °F)	≤ 0.04 °C (0.07 °F)	0.004% * (MV- LRV))	
OIML R84: 2003, GOST 6651-94	Cu50 (14)	-50 to +200 °C (−58 to +392 °F)	≤ 0.10 °C (0.18 °F)	ME = ± (0.09 °C (0.16 °F) + 0.004% * (MV - LRV))	
Resistance transmitter	Resistance Ω	10 to 400 Ω	29.5mΩ	$ME = \pm 17 \text{ m}\Omega + 0.0034 \%$ * MV	0.03 % (=
		10 to 2 000 Ω	179.4mΩ	$ME = \pm 60 \text{ m}\Omega + 0.006 \% *$	4.8 μΑ)

- 1) Measured value transmitted via HART®.
- 2) Percentages based on the configured span of the analog output signal.
- 3) Maximum measured error for the specified measuring range.
- 4) Deviations from maximum measured error possible due to rounding.

Measured error for thermocouples (TC) and voltage transmitters

Standard	Designation	Measuring range	Measured error (±)		
			Digital ¹⁾		D/A ²⁾
			Maximum ³⁾	Based on measured value 4)	
IEC 60584-1 ASTM E230-3	Туре А (30)	0 to +2 500 °C (+32 to +4 532 °F)	≤ 1.65 °C (2.97 °F)	ME = ± (1.0 °C (1.8 °F) + 0.018% * (MV - LRV))	0.03 % (≘ 4.8 µA)

iTEMP TMT72 Technical data

Standard	Designation	Measuring range	Measured error (±)		
			Di	gital ¹⁾	D/A ²⁾
	Type B (31)	+500 to +1820 ℃ (+932 to +3308 ℉)	≤ 2.1 °C (3.8 °F)	ME = ± (2.1 °C (3.8 °F) - 0.055% * (MV-LRV))	
IEC 60584-1 ASTM E230-3 ASTM E988-96	Type C (32)	0 to +2 000 °C (+32 to +3 632 °F)	≤ 0.86 °C (1.55 °F)	ME = ± (0.75 °C (1.35 °F) + 0.0055% * (MV - LRV))	
ASTM E988-96	Type D (33)		≤ 1.1 °C (1.98 °F)	ME = ± (1.1 °C (1.98 °F) - 0.008% * (MV-LRV))	
	Туре Е (34)	−150 to +1 000 °C (−238 to +1 832 °F)	≤ 0.3 °C (0.54 °F)	ME = ± (0.3 °C (0.54 °F) - 0.006% * (MV-LRV))	
	Type J (35)	−150 to +1 200 °C	≤ 0.36 °C (0.65 °F)	ME = ± (0.36 °C (0.65 °F) - 0.005% * (MV-LRV))	
	Туре К (36)	(−238 to +2 192 °F)	≤ 0.5 °C (0.9 °F)	ME = ± (0.5 °C (0.9 °F) - 0.005% * (MV-LRV))	
IEC 60584-1	Туре N (37)	−150 to +1 300 °C (−238 to +2 372 °F)	≤ 0.7 °C (1.26 °F)	ME = ± (0.7 °C (1.26 °F) - 0.014% * (MV-LRV))	
	Type R (38)	+50 to +1768 °C (+122 to +3214 °F)	≤ 1.6 °C (2.88 °F)	ME = ± (1.6 °C (2.88 °F) - 0.026% * (MV-LRV))	
	Type S (39)		≤ 1.6 °C (2.88 °F)	ME = ± (1.6 °C (2.88 °F) - 0.022% * (MV-LRV))	
	Туре Т (40)	-150 to +400 °C (-238 to +752 °F)	≤ 0.5 °C (0.9 °F)	ME = ± (0.5 °C (0.9 °F) - 0.04% * (MV- LRV))	0.03 % (≘ 4.8 µA)
DIN 42710	Type L (41)	−150 to +900 °C (−238 to +1652 °F)	≤ 0.39 °C (0.7 °F)	ME = ± (0.39 °C (0.7 °F) - 0.008% * (MV-LRV))	
DIN 43710	Type U (42)	−150 to +600 °C (−238 to +1112 °F)	≤ 0.45 °C (0.81 °F)	ME = ± (0.45 °C (0.81 °F) - 0.025% * (MV-LRV))	
GOST R8.585-2001	Type L (43)	−200 to +800 °C (−328 to +1472 °F)	≤ 2.30 °C (4.14 °F)	ME = ± (2.3 °C (4.14 °F) - 0.015% * (MV-LRV))	
Voltage transmitter (mV)		-20 to +100 mV	10.0 μV	ME = \pm 10.0 μ V	4.8 μΑ

Measured value transmitted via HART®. 1)

Total measured error of transmitter at current output = $\sqrt{\text{(Measured error digital}^2 +)}$ Measured error D/A²)

Sample calculation with Pt100, measuring range 0 to +200 $^{\circ}$ C (+32 to +392 $^{\circ}$ F), ambient temperature +25 °C (+77 °F), supply voltage 24 V:

Measured error digital = $0.05 ^{\circ}\text{C} + 0.006\% ^{\circ}\text{x} (200 ^{\circ}\text{C} - (-200 ^{\circ}\text{C}))$:	0.07 °C (0.126 °F)
Measured error D/A = 0.03 % x 200 °C (360 °F)	0.06 °C (0.108 °F)
Measured error digital value (HART):	0.07 °C (0.126 °F)
Measured error analog value (current output): $\sqrt{\text{(Measured error digital}^2 + Measured error D/A}^2)}$	0.10 °C (0.18 °F)

Percentages based on the configured span of the analog output signal. Maximum measured error for the specified measuring range. 2)

³⁾

Deviations from maximum measured error possible due to rounding. 4)

Sample calculation with Pt100, measuring range 0 to +200 $^{\circ}$ C (+32 to +392 $^{\circ}$ F), ambient
temperature $+35$ °C ($+95$ °F), supply voltage 30 V:

Measured error digital = 0.04 °C + 0.006% x (200 °C - (-200 °C)):	0.07 °C (0.126 °F)
Measured error D/A = 0.03 % x 200 °C (360 °F)	0.06 °C (0.108 °F)
Influence of ambient temperature (digital) = (35 - 25) x (0.0013 % x 200 °C - (-200 °C)), min. 0.003 °C	0.05 °C (0.09 °F)
Influence of ambient temperature (D/A) = $(35 - 25) \times (0.003\% \times 200 ^{\circ}\text{C})$	0.06 °C (0.108 °F)
Influence of supply voltage (digital) = (30 - 24) x (0.0007% x 200 °C - (-200 °C)), min. 0.005 °C	0.02 °C (0.036 °F)
Influence of supply voltage (D/A) = (30 - 24) x (0.003% x 200 °C)	0.04 °C (0.72 °F)
Measured error digital value (HART): $\sqrt{\text{(Measured error digital)}^2 + \text{Influence of supply voltage (digital)}^2}$	0.10 °C (0.18 °F)
Measured error analog value (current output): $\sqrt{\text{(Measured error D/A}^2 + Influence of ambient temperature (digital)}^2 + Influence of ambient temperature (D/A)}^2 + Influence of supply voltage (digital)}^2 + Influence of supply voltage (D/A)}^2$	0.13 °C (0.23 °F)

The measured error data corresponds to 2 σ (Gaussian distribution).

Physical input measuring range of sensors				
10 to 400 Ω	10 to 400 Ω Cu50, Cu100, polynomial RTD, Pt50, Pt100, Ni100, Ni120			
10 to 2 000 Ω	Pt200, Pt500, Pt1000			
-20 to 100 mV Thermocouples type: A, B, C, D, E, J, K, L, N, R, S, T, U				

Sensor adjustment

Sensor-transmitter matching

RTD sensors are one of the most linear temperature measuring elements. Nevertheless, the output must be linearized. To significantly improve temperature measurement accuracy, the device allows the use of two methods:

■ Callendar-Van Dusen coefficients (Pt100 resistance thermometer) The Callendar-Van Dusen equation is described as: $R_T = R_0[1+AT+BT^2+C(T-100)T^3]$

The coefficients A, B and C are used to match the sensor (platinum) and transmitter in order to improve the accuracy of the measuring system. The coefficients for a standard sensor are specified in IEC 751. If no standard sensor is available or if greater accuracy is required, the coefficients for each sensor can be determined specifically with the aid of sensor calibration.

■ Linearization for copper/nickel resistance thermometers (RTD) The polynomial equation for copper/nickel is as follows: $R_T = R_0(1+AT+BT^2)$

The coefficients A and B are used for the linearization of nickel or copper resistance thermometers (RTD). The exact values of the coefficients derive from the calibration data and are specific to each sensor. The sensor-specific coefficients are then sent to the transmitter.

Sensor-transmitter matching using one of the methods mentioned above significantly improves the temperature measurement accuracy of the entire system. This is because the transmitter uses the specific data pertaining to the connected sensor to calculate the measured temperature, instead of using the standardized sensor curve data.

iTEMP TMT72 Technical data

1-point adjustment (offset)

Shifts the sensor value

Current output adjustment Correction of the 4 or 20 mA current output value.

Operating influences The measured error data corresponds to 2 σ (Gaussian distribution).

Influence of ambient temperature and supply voltage on operation for resistance thermometers (RTD) and resistance transmitters

Designation	Standard	Influe	Ambient temperature: ence (±) per 1 °C (1.8 °F) chang	je		Supply voltage: Influence (±) per V change	
			Digital ¹⁾		Digital ¹⁾		D/A ²⁾
		Maximum	Based on measured value		Maximum	Based on measured value	
Pt100 (1)		≤ 0.013 °C (0.023 °F)	0.0013% * (MV - LRV), at least 0.003 °C (0.005 °F)		≤ 0.007 °C (0.013 °F)	0.0007% * (MV - LRV), at least 0.003 °C (0.005 °F)	
Pt200 (2)	IEC	≤ 0.017 °C (0.031 °F)	-		≤ 0.009 °C (0.016 °F)	-	
Pt500 (3)	60751:2008	≤ 0.008 °C (0.014 °F)	0.0013% * (MV - LRV), at least 0.006 °C (0.011 °F)		≤ 0.004 °C (0.007 °F)	0.0007% * (MV - LRV), at least 0.006 °C (0.011 °F)	
Pt1000 (4)		≤ 0.005 °C (0.009 °F)	-	0.003 %	≤ 0.003 °C (0.005 °F)	-	0.003 %
Pt100 (5)	JIS C1604:1984	≤ 0.009 °C (0.016 °F)	0.0013% * (MV - LRV), at least 0.003 °C (0.005 °F)		≤ 0.004 °C (0.007 °F)	0.0007% * (MV - LRV), at least 0.003 °C (0.005 °F)	
Pt50 (8)	- GOST 6651-94	≤ 0.017 °C (0.031 °F)	0.0015% * (MV - LRV), at least 0.01 °C (0.018 °F)		≤ 0.009 °C (0.016 °F)	0.0007% * (MV - LRV), at least 0.01 °C (0.018 °F)	
Pt100 (9)	- GOS1 6651-94	≤ 0.013 °C (0.023 °F)	0.0013% * (MV - LRV), at least 0.003 °C (0.005 °F)		≤ 0.007 °C (0.013 °F)	0.0007% * (MV - LRV), at least 0.003 °C (0.005 °F)	
Ni100 (6)	DIN 43760	≤ 0.003 °C	-		≤ 0.001 °C	-	
Ni120 (7)	IPTS-68	(0.005 °F)	-		(0.002 °F)	-	
Cu50 (10)	OWN DO	≤ 0.005 °C (0.009 °F)	-		≤ 0.005 °C (0.009 °F)	-	
Cu100 (11)	OIML R84: 2003 / GOST	≤ 0.004 °C (0.007 °F)	-	0.003 %	≤ 0.004 °C (0.007 °F)	-	0.003 %
Ni100 (12)	6651-2009	≤ 0.003 °C	-		≤ 0.003 °C	-	
Ni120 (13)	1	(0.005 °F)	-		(0.005 °F)	-	
Cu50 (14)	OIML R84: 2003 / GOST 6651-94	≤ 0.005 °C (0.009 °F)	-		≤ 0.005 °C (0.009 °F)	-	
Resistance tran	smitter (Ω)						
10 to 400 Ω		≤ 4 mΩ	0.001% * MV, at least 1 mΩ	0.000.31	≤ 2 mΩ	0.0005% * MV, at least 1 mΩ	0.000.3
10 to 2 000 Ω		≤ 20 mΩ	0.001% * MV, at least $10~\text{m}\Omega$	0.003 %	≤ 10 mΩ	0.0005% * MV, at least 5 mΩ	0.003 %

¹⁾ Measured value transmitted via HART®.

²⁾ Percentages based on the configured span of the analog output signal

Influence of ambient temperature and supply voltage on operation for thermocouples (TC) and voltage transmitters

Designation	Standard	Influe	Ambient temperature: ence (±) per 1 °C (1.8 °F) chang	Je		Supply voltage: Influence (±) per V change	
			Digital ¹⁾	D/A ²⁾		Digital	D/A ²⁾
		Maximum	Based on measured value		Maximum	Based on measured value	
Type A (30)	IEC 60584-1	≤ 0.07 °C (0.126 °F)	0.003% * (MV - LRV), at least 0.01 °C (0.018 °F)		≤ 0.03 °C (0.054 °F)	0.0012% * (MV - LRV), at least 0.013 °C (0.023 °F)	
Туре В (31)	ASTM E230-3	≤ 0.04 °C (0.072 °F)	-		≤ 0.02 °C (0.036 °F)	-	
Type C (32)	IEC 60584-1 ASTM E230-3 ASTM E988-96	≤ 0.04 °C (0.072 °F)	0.0021% * (MV - LRV), at least 0.01 °C (0.018 °F)		≤ 0.02 °C (0.036 °F)	0.0012% * (MV - LRV), at least 0.013 °C (0.023 °F)	
Type D (33)	ASTM E988-96	≤ 0.04 °C (0.072 °F)	0.0019% * (MV - LRV), at least 0.01 °C (0.018 °F)	0.003 %	≤ 0.02 °C (0.036 °F)	0.0011% * (MV - LRV), at least 0.0 °C (0.0 °F)	0.003 %
Туре Е (34)		≤ 0.02 °C	0.0014% * (MV - LRV), at least 0.0 °C (0.0 °F)		≤ 0.01 °C (0.018 °F)	0.0008% * (MV - LRV), at least 0.0 °C (0.0 °F)	
Type J (35)		(0.036°F)	0.0014% * (MV - LRV), at least 0.0 °C (0.0 °F)			0.0008% * MV, at least 0.0 °C (0.0 °F)	
Туре К (36)		≤ 0.02 °C	0.0015% * (MV - LRV), at least 0.0 °C (0.0 °F)		≤ 0.01 °C	0.0009% * (MV - LRV), at least 0.0 °C (0.0 °F)	
Type N (37)	IEC 60584-1	(0.036°F)	0.0014% * (MV - LRV), at least 0.010 °C (0.018 °F)		(0.018°F)	0.0008% * MV, at least 0.0 °C (0.0 °F)	
Type R (38)		≤ 0.03 °C	-		≤ 0.02 °C	-	
Type S (39)		(0.054 °F)	-		(0.036 °F)	-	
Туре Т (40)			-	0.003 %	0.0 °C (0.0 °F)	-	0.003 %
Type L (41)	DIN 42710	≤ 0.01 °C	-		≤ 0.01 °C (0.018 °F)	-	
Type U (42)	DIN 43710	(0.018°F)	-		0.0 °C (0.0 °F)	-	
Type L (43)	GOST R8.585-2001	_		≤ 0.01 °C (0.018 °F)	-		
Voltage transmi	tter (mV)						
-20 to 100 mV	-	≤ 1.5 µV	0.0015% * MV	0.003 %	≤ 0.8 µV	0.0008% * MV	0.003 %

- 1) Measured value transmitted via HART®.
- 2) Percentages based on the configured span of the analog output signal

MV = measured value

LRV = lower range value of the sensor in question

Total measured error of transmitter at current output = $\sqrt{(Measured\ error\ digital^2 + Measured\ error\ D/A^2)}$

Long-term drift, resistance thermometers (RTD) and resistance transmitters

Designation	Standard	Long-term drift (±) 1)				
		after 1 month	after 6 months	after 1 year	after 3 years	after 5 years
		Based on measured value	2			
Pt100 (1)	IEC 60751:2008	≤ 0.039% * (MV - LRV) or 0.01 °C (0.02 °F)	≤ 0.061% * (MV - LRV) or 0.02 °C (0.04 °F)	≤ 0.007% * (MV - LRV) or 0.02 °C (0.04 °F)	≤ 0.0093% * (MV - LRV) or 0.03 °C (0.05 °F)	≤ 0.0102% * (MV - LRV) or 0.03 °C (0.05 °F)
Pt200 (2)		0.05 °C (0.09 °F)	0.05 °C (0.09 °F)	0.09 °C (0.17 °F)	0.12 °C (0.27 °F)	0.13 °C (0.24 °F)

iTEMP TMT72 Technical data

Designation	Standard	Long-term drift (±) 1)				
Pt500 (3)		≤ 0.048% * (MV - LRV)	≤ 0.0075% * (MV - LRV) or 0.02 °C (0.04 °F)	≤ 0.068% * (MV - LRV) or 0.03 °C (0.06 °F)	≤ 0.011% * (MV - LRV) or 0.03 °C (0.05 °F)	≤ 0.0124% * (MV - LRV) or 0.04 °C (0.07 °F)
Pt1000 (4)		or 0.01 °C (0.02 °F)	≤ 0.0077% * (MV - LRV) or 0.02 °C (0.04 °F)	≤ 0.0088% * (MV - LRV) or 0.02 °C (0.04 °F)	≤ 0.0114% * (MV - LRV) or 0.03 °C (0.05 °F)	≤ 0.013% * (MV - LRV) or 0.03 °C (0.05 °F)
Pt100 (5)	JIS C1604:1984	<pre></pre>	≤ 0.0061% * (MV - LRV) or 0.02 °C (0.04 °F)	≤ 0.007% * (MV - LRV) or 0.02 °C (0.04 °F)	≤ 0.0093% * (MV - LRV) or 0.03 °C (0.05 °F)	≤ 0.0102% * (MV - LRV) or 0.03 °C (0.05 °F)
Pt50 (8)	GOST	≤ 0.042% * (MV - LRV) or 0.02 °C (0.04 °F)	≤ 0.0068% * (MV - LRV) or 0.04 °C (0.07 °F)	≤ 0.0076% * (MV - LRV) or 0.04 °C (0.08 °F)	≤ 0.01% * (MV - LRV) or 0.06 °C (0.11 °F)	≤ 0.011% * (MV - LRV) or 0.07 °C (0.12 °F)
Pt100 (9)	6651-94	≤ 0.016% * (MV - LRV) or 0.04 °C (0.07 °F)	≤ 0.0061% * (MV - LRV) or 0.02 °C (0.04 °F)	≤ 0.007% * (MV - LRV) or 0.02 °C (0.04 °F)	≤ 0.0093% * (MV - LRV) or 0.03 °C (0.05 °F)	≤ 0.0102% * (MV - LRV) or 0.03 °C (0.05 °F)
Ni100 (6)	DIN 43760	0.01 °C (0.02 °F)	0.01 °C (0.02 °F)	0.02 °C (0.04 °F)	0.02 °C (0.04 °F)	0.02 °C (0.04 °F)
Ni120 (7)	IPTS-68	0.01 C (0.02 1)	0.01 C (0.02 1)	0.02 C (0.04 F)	0.02 C (0.04 F)	0.02 C (0.04 F)
Cu50 (10)	OIMI DO	0.02 °C (0.04 °F)	0.03 °C (0.05 °F)	0.04 °C (0.07 °F)	0.05 °C (0.09 °F)	0.05 °C (0.09 °F)
Cu100 (11)	OIML R84: 2003 /		0.02 °C (0.04 °F)	0.02 °C (0.04 °F)	0.03 °C (0.05 °F)	0.04 °C (0.07 °F)
Ni100 (12)	GOST 6651-2009	0.01 °C (0.02 °F)	0.01 °C (0.02 °F)	0.02 °C (0.04 °F)	0.02 °C (0.04 °F)	0.02 °C (0.04 °F)
Ni120 (13)	0031 2003		0.01 C (0.02 F)	0.02 C (0.04 F)	0.02 C (0.04 F)	0.02 C (0.04 F)
Cu50 (14)	OIML R84: 2003 / GOST 6651-94	0.02 °C (0.04 °F)	0.03 °C (0.05 °F)	0.04 °C (0.07 °F)	0.05 °C (0.09 °F)	0.05 °C (0.09 °F)
Resistance tra	Resistance transmitter					
10 to 400 Ω		≤ 0.003% * MV or 4 mΩ	≤ 0.0048% * MV or 6 mΩ	$\leq 0.0055\%$ * MV or 7 m Ω	$\leq 0.0073\%$ * MV or $10 \text{ m}\Omega$	≤ 0.008% * (MV - LRV) or 11 mΩ
10 to 2 000 Ω		≤ 0.0038% * MV or 25 mΩ	≤ 0.006% * MV or 40 mΩ	\leq 0.007% * (MV - LRV) or 47 m Ω	≤ 0.009% * (MV - LRV) or 60 mΩ	\leq 0.0067% * (MV - LRV) or 67 m Ω

1) Whichever is greater

Long-term drift, thermocouples (TC) and voltage transmitters

Designation	Standard	Long-term drift (±) 1)	Long-term drift (±) 1)				
		after 1 month	after 6 months	after 1 year	after 3 years	after 5 years	
		Based on measured value					
Type A (30)	IEC 60584-1 ASTM	≤ 0.021% * (MV - LRV) or 0.34 °C (0.61 °F)	≤ 0.037% * (MV - LRV) or 0.59 °C (1.06 °F)	≤ 0.044% * (MV - LRV) or 0.70 °C (1.26 °F)	≤ 0.058% * (MV - LRV) or 0.93 °C (1.67 °F)	≤ 0.063% * (MV - LRV) or 1.01 °C (1.82 °F)	
Туре В (31)	E230-3	0.80 °C (1.44 °F)	1.40 °C (2.52 °F)	1.66 °C (2.99 °F)	2.19 °C (3.94 °F)	2.39 °C (4.30 °F)	
Type C (32)	IEC 60584-1 ASTM E230-3 ASTM E988-96	0.34 °C (0.61 °F)	0.58 °C (1.04 °F)	0.70 °C (1.26 °F)	0.92 °C (1.66 °F)	1.00 °C (1.80 °F)	
Type D (33)	ASTM E988-96	0.42 °C (0.76 °F)	0.73 °C (1.31 °F)	0.87 °C (1.57 °F)	1.15 °C (2.07 °F)	1.26 °C (2.27 °F)	
Type E (34)		0.13 °C (0.23 °F)	0.22 °C (0.40 °F)	0.26 °C (0.47 °F)	0.34 °C (0.61 °F)	0.37 °C (0.67 °F)	
Type J (35)	IEC 60584-1	0.15 °C (0.27 °F)	0.26 °C (0.47 °F)	0.31 °C (0.56 °F)	0.41 °C (0.74 °F)	0.44 °C (0.79 °F)	
Туре К (36)		0.17 °C (0.31 °F)	0.30 °C (0.54 °F)	0.36 °C (0.65 °F)	0.47 °C (0.85 °F)	0.51 °C (0.92 °F)	

Designation	Standard	Long-term drift (±) 1)				
Type N (37)		0.25 °C (0.45 °F)	0.44 °C (0.79 °F)	0.52 °C (0.94 °F)	0.69 °C (1.24 °F)	0.75 °C (1.35 °F)
Type R (38)		0.62°C (1.12°E)	1.09°C (1.04°E)	1.28 °C (2.30 °F)	1.69 °C (3.04 °F)	1 0E °C (2 22 °E)
Type S (39)		0.62 °C (1.12 °F)	1.08 °C (1.94 °F)	1.29 °C (2.32 °F)	1.70 °C (3.06 °F)	- 1.85 °C (3.33 °F)
Type T (40)		0.18 °C (0.32 °F)	0.32 °C (0.58 °F)	0.38°C (0.68°F)	0.50 °C (0.90 °F)	0.54 °C (0.97 °F)
Type L (41)	DIN 43710	0.12 °C (0.22 °F)	0.21 °C (0.38 °F)	0.25 °C (0.45 °F)	0.33 °C (0.59 °F)	0.36 °C (0.65 °F)
Type U (42)	DIN 43710	0.18°C (0.32°F)	0.31 °C (0.56 °F)	0.37 °C (0.67 °F)	0.49 °C (0.88 °F)	0.53 °C (0.95 °F)
Type L (43)	GOST R8.585-2001	0.15 °C (0.27 °F)	0.26 °C (0.47 °F)	0.31 °C (0.56 °F)	0.41 °C (0.74 °F)	0.44 °C (0.79 °F)
Voltage transr	nitter (mV)					
- 20 to 100 mV		≤ 0.012% * MV or 4 μV	≤ 0.021% * MV or 7 μV	≤ 0.025% * MV or 8 μV	≤ 0.033% * MV or 11 µV	≤ 0.036% * MV or 12 μV

1) Whichever is greater

Analog output long-term drift

D/A long-term drift $^{1)}$ (±)				
after 1 month after 6 months after 1 year after 3 years after 5 years				
0.018%	0.026%	0.030%	0.036%	0.038%

1) Percentages based on the configured span of the analog output signal.

Influence of the reference junction

Pt100 DIN IEC 60751 Cl. B (internal reference junction with thermocouples TC)

If an external 2-wire Pt100 is used for the reference junction measurement, the measured error caused by the transmitter is < 0.5 $^{\circ}$ C (0.9 $^{\circ}$ F). The measured error of the sensor element also needs to be added.

13.5 Environment

Ambient temperature range	−40 to +85 °C (−40 to +185 °F), for hazardous areas see Ex documentation
Storage temperature	 Head transmitter: -50 to +100 °C (-58 to +212 °F) DIN rail device: -40 to +100 °C (-40 to +212 °F)
Altitude	Up to 4000 m (4374.5 yards) above mean sea level.
Humidity	 Condensation: Head transmitter permitted DIN rail transmitter not permitted Max. rel. humidity: 95% as per IEC 60068-2-30
Climate class	 Head transmitter: climate class C1 as per IEC 60654-1 DIN rail device: climate class B2 as per IEC 60654-1

iTEMP TMT72 Technical data

Degree of protection

■ Head transmitter with screw terminals: IP 00, with push-in terminals: IP 30. In installed state, depends on the terminal head or field housing used.

■ When installing in field housing TA30A, TA30D or TA30H: IP 66/68 (NEMA Type 4x encl.)

■ DIN rail device: IP 20

Shock and vibration resistance

Vibration resistance as per DNVGL-CG-0339: 2015 and DIN EN 60068-2-27

- Head transmitter: 2 to 100 Hz at 4g (increased vibration stress)
- DIN rail device: 2 to 100 Hz at 0.7q (general vibration stress)

Shock resistance as per KTA 3505 (section 5.8.4 Shock test)

Electromagnetic compatibility (EMC)

CE compliance

Electromagnetic compatibility in accordance with all the relevant requirements of the IEC/EN 61326 series and NAMUR Recommendation EMC (NE21). For details, refer to the Declaration of Conformity. All tests were passed both with and without ongoing digital HART®-communication.

Maximum measured error <1% of measuring range.

Interference immunity as per IEC/EN 61326 series, industrial requirements

Interference emission as per IEC/EN 61326 series, Class B equipment

Overvoltage category

Overvoltage category II

Degree of contamination


Pollution degree 2

Mechanical construction 13.6

Design, dimensions


Dimensions in mm (in)

Head transmitter

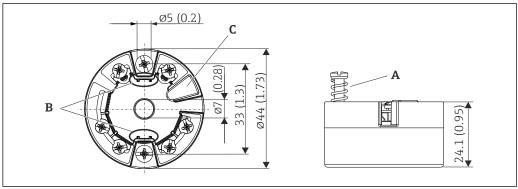


■ 20 Version with screw terminals

- *Spring travel L* \geq 5 mm (not for US M4 securing screws)
- Mounting elements for attachable measured value display TID10
- Interface for connecting measured value display or configuration tool

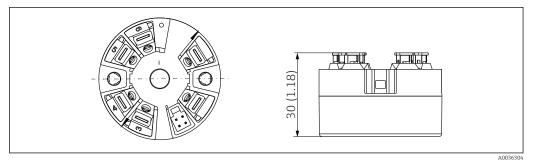

■ 21 Version with push-in terminals. Dimensions are identical to the version with screw terminals, apart from housing height.

DIN rail device/version with power supply source at the bottom

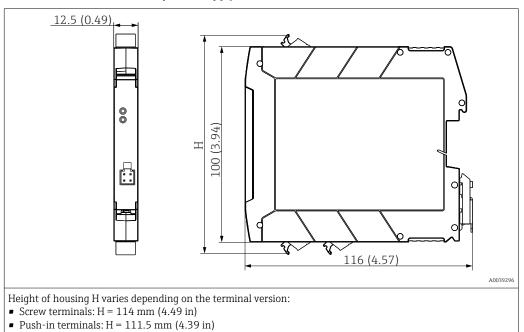



Field housing


All field housings have an internal geometry in accordance with DIN EN 50446, form B (flat face). Cable glands in the diagrams: M20x1.5


Maximum ambient temperatures for cable glands		
Туре	Temperature range	
Polyamide cable gland ½" NPT, M20x1.5 (non-Ex)	-40 to +100 °C (-40 to 212 °F)	
Polyamide cable gland M20x1.5 (for dust ignition-proof area)	−20 to +95 °C (−4 to 203 °F)	
Brass cable gland 1/2" NPT, M20x1.5 (for dust ignition-proof area)	-20 to +130 °C (-4 to +266 °F)	


iTEMP TMT72 Technical data

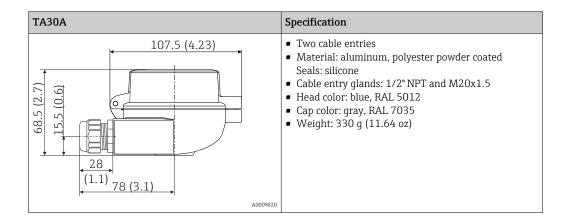

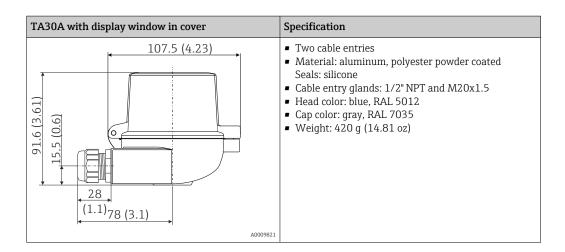

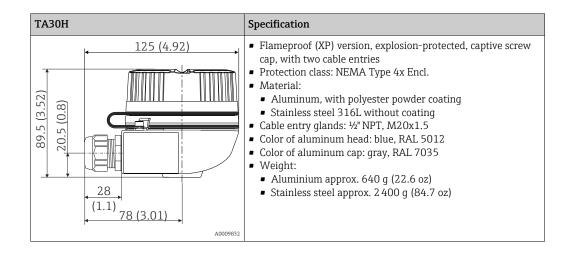

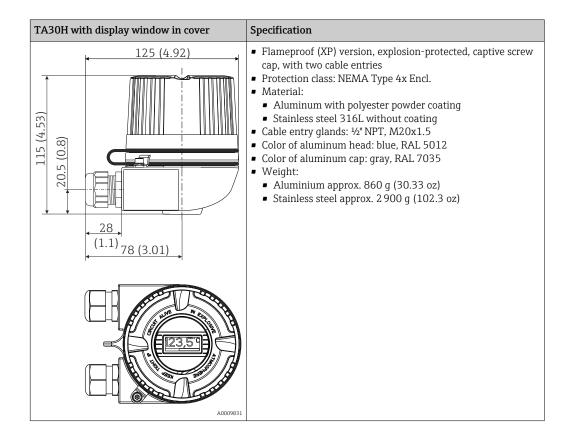

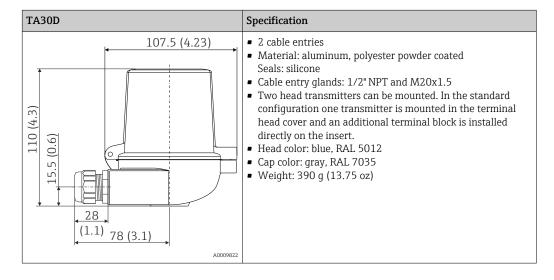

Weight

- Head transmitter: approx. 40 to 50 g (1.4 to 1.8 oz)
- Field housing: see specifications
- DIN rail device: approx. 100 g (3.53 oz)

Materials

64

All the materials used are RoHS-compliant.

- Housing: polycarbonate (PC)
- Terminals:
 - Screw terminals: nickel-plated brass and gold-plated or tin-plated contacts
 - Push-in terminals: tin-plated brass, contact springs 1.4310, 301 (AISI)
- Potting compound:
 - Head transmitter: QSIL 553DIN rail housing: Silgel612EH

iTEMP TMT72 Technical data

Field housing: see specifications

13.7 Certificates and approvals

CE mark	The product meets the requirements of the harmonized European standar complies with the legal specifications of the EC directives. The manufactu successful testing of the product by affixing to it the CE-mark.		
EAC mark	The product meets the legal requirements of the EEU guidelines. The manufacturer confirms the successful testing of the product by affixing the EAC mark.		
Ex approval	Information about currently available Ex versions (ATEX, FM, CSA, etc.) c your E+H Sales Center on request. All explosion protection data are given documentation which is available upon request.	11 /	
CSA C/US	The device meets the requirements of "CLASS 2252 06 - Process Control E "CLASS 2252 86 - Process Control Equipment (Certified to US Standards)"		
HART® certification	The temperature transmitter is registered by the HART® Communication I device meets the requirements of the HART® Communication Protocol Spe Revision 7.	Foundation. The ecifications,	
Marine approvals	For the type approval certificates (DNVGL, etc.) currently available, please Sales Center for information. All data relating to shipbuilding can be foun type approval certificates which can be requested as needed.		
Radio approval	The device has Bluetooth® radio approval in accordance with the Radio Ed Directive (RED) and the Federal Communications Commission (FCC) 15.2		
	Europe		
	This device meets the requirements of the Radio Equipment Directive RED 2014/53/EU:	EN 300 328EN 301 489-1EN 301 489-17	

Canada and United States

English:

This device complies with Part 15 of the FCC Rules and with Industry Canada licenceexempt RSS standard(s).

Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications made to this equipment not expressly approved by Endress+Hauser may void the user's authorization to operate this equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC and IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

Français:

Le présent appareil est conforme aux CNR d'industrie Canada applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes :

- L'appareil ne doit pas produire de brouillage, et
- L'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Les changements ou modifications apportées à cet appareil non expressément approuvée par Endress +Hauser peut annuler l'autorisation de l'utilisateur d'opérer cet appareil.

Déclaration d'exposition aux radiations: Cet équipement est conforme aux limites d'exposition aux rayonnements IC établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec un minimum de 20 cm de distance entre la source de rayonnement et votre corps.

MTTF

- Without Bluetooth® wireless technology: 168 years
- With Bluetooth® wireless technology: 123 years

The mean time to failure (MTTF) denotes the theoretically expected time until the device fails during normal operation. The term MTTF is used for systems that cannot be repaired, e.g. temperature transmitters.

Other standards and guidelines

■ IEC 60529:

Degrees of protection provided by enclosures (IP code)

■ IEC/EN 61010-1:

Safety requirements for electrical equipment for measurement, control and laboratory

■ IEC/EN 61326 series:

Electromagnetic compatibility (EMC requirements)

■ This Class B digital apparatus complies with Canadian ICES-003 Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada. Compliance Label: CAN ICES-3 (B)/NMB-3(B)

iTEMP TMT72 Technical data

13.8 Documentation

Document	Purpose and content of the document
Technical Information (TI)	Planning aid for your device The document contains all the technical data on the device and provides an overview of the accessories and other products that can be ordered for the device.
Brief Operating Instructions (KA)	Guide that takes you quickly to the 1st measured value The Brief Operating Instructions contain all the essential information from incoming acceptance to initial commissioning.
Operating Instructions (BA)	Your reference document The Operating Instructions contain all the information that is required in various phases of the life cycle of the device: from product identification, incoming acceptance and storage, to mounting, connection, operation and commissioning through to troubleshooting, maintenance and disposal.
Description of Device Parameters (GP)	Reference for your parameters The document provides a detailed explanation of each individual parameter. The description is aimed at those who work with the device over the entire life cycle and perform specific configurations.
Safety Instructions (XA)	Depending on the approval, Safety Instructions (XA) are supplied with the device. The Safety Instructions are an integral part of the Operating Instructions. Information on the Safety Instructions (XA) that are relevant for the device is provided on the nameplate.
Supplementary device-dependent documentation (SD/FY)	Additional documents are supplied depending on the device version ordered: Always comply strictly with the instructions in the supplementary documentation. The supplementary documentation is an integral part of the device documentation.

- The document types listed are available:
 - \blacksquare In the Download Area of the Endress+Hauser Internet site: www.endress.com \Rightarrow Download
 - Enter the serial number from the nameplate in the W@M Device Viewer (www.endress.com/deviceviewer): all data relating to the device and an overview of the Technical Documentation supplied with the device are displayed.
 - Enter the serial number on the nameplate into the Endress+Hauser Operations app or scan the 2-D matrix code (QR code) on the nameplate with the Endress+Hauser Operations app: all data relating to the device and the Technical Documentation pertaining to the device is displayed.

→ 🖺 74

14 Operating menu and parameter description

i

The following tables list all the parameters in the "Guidance, Diagnostics, Application and System" operating menus. The page number refers to where a description of the parameter can be found.

Depending on the parameter configuration, not all submenus and parameters are available in every device. Information on this can be found in the parameter description under "Prerequisite".

This symbol \square indicates how to navigate to the parameter using operating tools (e.g. FieldCare).

	rieldcare).		
Guidance →	Commissioning →	Commissioning wizard	→ 🖺 37
		Start	
	1)		
Guidance →	Create documentation 1)		
	Save / restore 1)		
	Compare 1)		
$Diagnostics \rightarrow$	Actual diagnostics \rightarrow	Actual diagnostics 1	→ 🖺 72
Diagnostics →	Actual diagnostics →	-	
		Operating time	→ 🗎 72
Diagnostics →	Diagnostic list →	Actual diagnostics 1, 2, 3	→ 🖺 72
		Actual diag channel 1, 2, 3	→ 🖺 72
		Time stamp 1, 2, 3	→ 🗎 73
Diagnostics →	Event logbook →	Previous diagnostics n	→ 🖺 73
		Previous diag n channel	→ 🖺 73

Diagnostics →	Simulation →	Diagnostic event simulation	→ 🖺 74
		Current output simulation	→ 🖺 74
		Value current output	→ 🖺 74
		Sensor simulation	→ 🖺 75
		Sensor simulation value	→ 🖺 75

Time stamp n

Diagnostics →	Diagnostic settings →	Properties →	Alarm delay	→ 🖺 75
			Limit corrosion detection	→ 🖺 76
			Sensor line resistance	→ 🖺 76
			Thermocouple diagnostic	→ 🖺 76
		Diagnostic behavior Sensor, electronics, p		→ 🖺 76
		Status signal → Sensor, electronics, p	rocess, configuration	→ 🖺 77

Diagnostics →	Min/max values →	Sensor min value		→ 🖺 77
Zinghobeles :	The state of the s	Sensor max value		→ 🖺 77
		Reset sensor min/max valu	es	→ 🖺 78
		Device temperature min.		→ 🖺 78
		Device temperature max.		→ 🖺 78
		Reset device temp. min/ma	x values	→ 🖺 78
		•		
Application →	Measured values →	Sensor value		→ 🖺 78
		Sensor raw value		→ 🖺 78
		Output current		→ 🖺 78
		Percent of range		→ 🖺 78
		Device temperature		→ 🖺 78
		PV		→ 🖺 79
		SV		→ 🖺 79
		TV		→ 🖺 80
		QV		→ 🖺 80
Application \rightarrow	Sensor →	Unit		→ 🖺 80
		Sensor type		→ 🖺 80
		Connection type		→ 🖺 81
		2-wire compensation		→ 🖺 81
		Reference junction		→ 🖺 81
		RJ preset value		→ 🖺 82
		Sensor offset		→ 🖺 82
Application \rightarrow	Sensor →	Linearization →	Call./v. Dusen coeff. R0, A, B, C	→ 🖺 82
			Polynomial coeff. R0, A, B	→ 🖺 83
			Sensor lower limit	→ 🖺 84
			Sensor upper limit	→ 🖺 84
Application →	Current output →	(ma A realise		→ 🖺 84
Application 7	current output 7	4mA value 20mA value		→ 🖺 84
		Failure mode		→ 🖺 85
		Failure current		→ 🖺 85
				→ 🖺 86
		Current trimming 4 mA Current trimming 20 mA		→ 🗎 86 → 🖺 86
				→ 🖺 86
		Damping		/ ⊌ 00
Application →	HART configuration →	Assign current output (PV)		→ 🖺 87
		Assign SV		→ 🖺 87
		Assign TV		→ 🖺 87
		Assign QV		→ 🖺 87

HART address	→ 🖺 88
No. of preambles	→ 🖺 88

System →	Device management \rightarrow	HART short tag	→ 🖺 88
		Device tag	→ 🖺 89
		Mains filter	→ 🖺 89
		Locking status	→ 🖺 89
		Device reset	→ 🖺 89
		Configuration counter	→ 🖺 90
		Configuration changed	→ 🖺 90
		Reset configuration changed flag	→ 🖺 90

System →	User management →	Define password →	New password	→ 🖺 91
System 7	Oser management 7	Define password 7	new password	/ 🛮 /1
			Confirm new password	→ 🖺 92
			Status password entry	→ 🖺 92
		Change user role →	Password 1)	→ 🖺 92
			Status password entry	→ 🖺 92
		Reset password →	Reset password	→ 🖺 93
			Status password entry	→ 🖺 93
		Change password \rightarrow	Old password	→ 🖺 94
			New password	→ 🖺 94
			Confirm new password	→ 🖺 94
			Status password entry	→ 🖺 94
		Delete password →	Delete password	→ 🖺 94

1) The required user role must first be selected here when operating the device via the SmartBlue app.

System →	Bluetooth configuration \rightarrow	Bluetooth	→ 🖺 94	
		Change Bluetooth password ¹⁾	→ 🖺 95	

1) Function is only visible in the SmartBlue app

System →	Information \rightarrow	Device →	Squawk	→ 🖺 95
			Serial number	→ 🖺 95
			Order code	→ 🖺 96
			Firmware version	→ 🖺 96
			Hardware revision	→ 🖺 96
			Extended order code (n) 1)	→ 🖺 96
			Device name	→ 🖺 97
			Manufacturer	→ 🖺 97

1) n = 1, 2, 3

System →	Information →	Device location →	Latitude	→ 🖺 97
			Longitude	→ 🖺 97

Altitude	→ 🖺 97	
Location method	→ 🖺 98	
Location description	→ 🖺 98	
Process unit TAG	→ 🖺 98	

System →	Information →	HART info →	Device type	→ 🖺 99
			Device revision	→ 🖺 99
			HART revision	→ 🖺 99
			HART descriptor	→ 🖺 99
			HART message	→ 🖺 100
			Hardware revision	→ 🖺 100
			Software revision	→ 🖺 100
			HART date code	→ 🖺 100
			Manufacturer ID	→ 🖺 100
			Device ID	→ 🖺 101

System →	Display →	Display interval	→ 🖺 101
		Format display	→ 🖺 101
		Value 1 display	→ 🖺 102
		Decimal places 1	→ 🖺 102
		Value 2 display	→ 🖺 102
		Decimal places 2	→ 🖺 102
		Value 3 display	→ 🖺 102
		Decimal places 3	→ 🖺 102

14.1 Menu: Diagnostics

14.1.1 Submenu: Actual diagnostics

Actual diagnostics 1		
Navigation	☐ Diagnostics → Actual diagnostics → Actual diagnostics 1	
Description	Displays the current diagnostic message. If two or more messages occur simultaneously, the message with the highest priority is shown on the display.	
Additional information	Example for display format: F041-Sensor interrupted	
Operating time		
Navigation	☐ Diagnostics → Actual diagnostics → Operating time	
Description	Displays the length of time the device has been in operation.	
User interface	Hours (h)	
Actual diagnostics n	n = Number of diagnostic messages (n = 1 to 3)	
Navigation	□ Diagnostics → Actual diagnostics → Actual diagnostics n	
Description	Displays the current diagnostic message. If two or more messages occur simultaneously, the message with the highest priority is shown on the display.	
Additional information	Example for display format: F041-Sensor interrupted	
Actual diag channel n		
Navigation	\square Diagnostics \rightarrow Actual diagnostics \rightarrow Actual diag channel n	

User interface

- Device
- Sensor
- Device temperature
- Current output
- Sensor RJ

Time stamp n

Navigation \Box Diagnostics \rightarrow Actual diagnostics \rightarrow Time stamp n

Description Displays the time stamp of the current diagnostic message in relation to the operating

time.

User interface Hours (h)

14.1.3 "Event logbook" submenu

i

n = Number of diagnostic messages (n = 1 to 10). The last 10 messages are listed in chronological order.

Previous diagnostics n

Navigation Diagnostics \rightarrow Event logbook \rightarrow Previous diagnostics n

Description Displays the diagnostic messages that occurred in the past. The last 10 messages are listed

in chronological order.

User interface Symbol for event behavior and diagnostic event.

Additional information Example for display format:

F201-Electronics faulty

Previous diag n channel

Navigation \Box Diagnostics \rightarrow Event logbook \rightarrow Previous diag n channel

Description Displays the function module to which the diagnostic message refers.

User interface ■ Device

- Sensor
- Device temperature
- Current output
- Sensor RJ

Time stamp n	
Navigation	
Description	Displays the time stamp of the current diagnostic message in relation to the operating time.
User interface	Hours (h)
	14.1.4 "Simulation" submenu
Diagnostic event simu	ılation
Navigation	
Description	Switches diagnostic simulation on and off.
Selection	Enter one of the diagnostic events using the dropdown menu $\Rightarrow \triangleq 43$. The assigned status signals and diagnostic behaviors are used in the simulation mode. Select 'Off' to quit the simulation. Example: x043 Short circuit
Factory setting	Off
Current output simula	ation
Navigation	
Description	Use this function to switch simulation of the current output on and off. The status signal indicates a category "C" diagnostic message ("function check") while the simulation is running.
Selection	■ Off ■ On
Factory setting	Off
Value current output	
Navigation	☐ Diagnostics → Simulation → Value current output

Description Use this function to set a current value for the simulation. In this way, users can verify the

correct adjustment of the current output and the correct function of downstream switching

units.

User entry 3.58 to 23 mA

Factory setting 3.58 mA

Sensor simulation

Navigation \square Diagnostics \rightarrow Simulation \rightarrow Sensor simulation

Description Use this function to enable the simulation of the process variable. The simulation value of

the process variable is defined in the **Sensor simulation value** parameter.

Selection ■ Off

On

Factory setting Off

Sensor simulation value

Navigation \square Diagnostics \rightarrow Simulation \rightarrow Sensor simulation value

Description Use this function to enter a simulation value for the process variable. Subsequent

measured value processing and the signal output use this simulation value. In this way,

users can verify whether the measuring device has been configured correctly.

User entry $-1.0 \cdot 10^{20} \text{ to } +1.0 \cdot 10^{20} \,^{\circ}\text{C}$

Factory setting 0.00 °C

14.1.5 "Diagnostic settings" submenu

Submenu: Properties

Alarm delay

Navigation □ Diagnostics → Diagnostic settings → Properties → Alarm delay

Description Use this function to set the delay time during which a diagnostics signal is suppressed

before it is output.

User entry 0 to 5 s

Factory setting

2. s

Limit corrosion detection

Navigation Diagnostics \rightarrow Diagnostic settings \rightarrow Properties \rightarrow Limit corrosion detection

Prerequisite A 4-wire RTD or TC must be selected as the sensor type or connection type. $\rightarrow \triangleq 80$

Description Use this function to enter the limit value for corrosion detection. If this value is exceeded,

the device behaves as defined in the diagnostic settings.

User entry 5 to $10000 \,\Omega$

Factory setting • 50.0 Ω for 4-wire RTD connection type

• 5000Ω for TC connection type

Sensor line resistance

Navigation Diagnostics → Diagnostic settings → Properties → Sensor line resistance

A 4-wire RTD or TC must be selected as the sensor type or connection type. $\rightarrow \triangleq 80$ **Prerequisite**

Description Displays the highest measured resistance value of the sensor lines.

 $-1.0 \cdot 10^{20}$ to $+1.0 \cdot 10^{20}$ Ω User interface

Thermocouple diagnostic

Navigation Diagnostics → Diagnostic settings → Properties → Thermocouple diagnostic

Description Use this function to switch off the "Sensor corrosion" and "Sensor break" diagnostic functions during thermocouple measurement.

This may be necessary in order to connect electronic simulators (e.g. calibrators) during a thermocouple measurement. The accuracy of the transmitter is not influenced by either the activation or deactivation of the thermocouple diagnostics

function.

Selection On

Off

Factory setting On

Diagnostic behavior

Navigation Diagnostics → Diagnostic settings → Diagnostic behavior Description Each diagnostic event is assigned a certain diagnostic behavior. The user can change this assignment for certain diagnostic events. $\rightarrow \triangleq 43$ Selection Alarm Warning Disabled **Factory setting** See the list of diagnostic events $\rightarrow \triangleq 44$ Status signal **Navigation** Diagnostics → Diagnostic settings → Status signal Each diagnostic event is assigned a certain status signal at the factory ¹⁾. The user can Description change this assignment for certain diagnostic events. $\rightarrow \triangleq 43$ Digital information available via HART® communication 1) Selection ■ Failure (F) Function check (C) Out of specification (S) Maintenance required (M) ■ No effect (N) See the list of diagnostic events $\rightarrow \triangleq 43$ **Factory setting** 14.1.6 "Min/max values" submenu Sensor min value **Navigation** Diagnostics \rightarrow Min/max values \rightarrow Sensor min value Description Displays the minimum temperature measured in the past at the sensor input (minimum indicator). Sensor max value **Navigation** Diagnostics → Min/max values → Sensor max value Description Displays the maximum temperature measured in the past at the sensor input (maximum indicator).

Reset sensor min/max val	ues
Navigation	☐ Diagnostics → Min/max values → Reset sensor min/max values
Description	Resets the min/max values of the sensor to their default values.
User entry	Clicking the Reset sensor min/max values button activates the reset function. As a result of this action, the min/max values of the sensor only display the reset, temporary values.
Device temperature min.	
Navigation	
Description	Displays the minimum electronics temperature measured in the past (minimum indicator)
Device temperature max.	
Navigation	□ Diagnostics → Min/max values → Device temperature max.
Description	Displays the maximum electronics temperature measured in the past (maximum indicator).
Reset device temp. min/m	ax values
Navigation	☐ Diagnostics \rightarrow Min/max values \rightarrow Reset device temp. min/max values
Description	Resets the peakhold indicators for the minimum and maximum electronic temperatures measured.
User entry	Clicking the Reset device temperature min/max values button activates the reset function. As a result of this action, the min/max values for the device temperature only display the reset, temporary values.
	14.2 Menu: Application
	14.2.1 Submenu: Measured values
Sensor value	

Navigation	\square Application \rightarrow Measured values \rightarrow Sensor value
Description	Displays the current measured value at the sensor input.
Sensor raw value	
Navigation	☐ Application → Measured values → Sensor raw value
Description	Displays the non-linearized mV/Ohm value at the specific sensor input.
Output current	
Navigation	□ Application → Measured values → Output current
Description	Displays the calculated output current in mA.
Percent of range	
Navigation	□ Application → Measured values → Percent of range
Description	Displays the measured value in percentage of the span
Device temperature	
Navigation	
Description	Displays the current electronics temperature.
PV	
Navigation	\square Application \rightarrow Measured values \rightarrow PV
Description	Displays the primary device variable.
SV	

Navigation \square Application \rightarrow Measured values \rightarrow SV Description Displays the secondary device variable. TV **Navigation** \square Application \rightarrow Measured values \rightarrow TV Description Displays the tertiary device variable. QV **Navigation** \square Application \rightarrow Measured values \rightarrow QV Description Displays the quaternary (fourth) device variable. 14.2.2 Submenu: Sensor Unit **Navigation** Application \rightarrow Sensor \rightarrow Unit Description Use this function to select the engineering unit for all the measured values. ■ °C Selection • °F ■ K O mV °C **Factory setting** Additional information Please note: If another unit has been selected instead of the factory setting (°C), all the set temperature values are converted to correspond to the configured temperature unit. Example: 150 °C is set as the upper range value. Following the selection of °F as the engineering unit, the new (converted) upper range value = 302 °F. Sensor type Navigation Application \rightarrow Sensor \rightarrow Sensor type

Description Use this function to select the sensor type for the sensor input.

Please observe the terminal assignment when connecting the sensors. $\rightarrow = 19$

Selection A list of all the possible sensor types is provided in the Technical data' section. $\rightarrow \triangleq 50$

Factory setting Pt100 IEC751

Connection type

Navigation \square Application \rightarrow Sensor \rightarrow Connection type

Prerequisite An RTD sensor or a resistance transmitter must be specified as the sensor type.

Description Use this function to select the connection type for the sensor.

Selection 2-wire, 3-wire, 4-wire

Factory setting 4-wire

2-wire compensation

Navigation Application \rightarrow Sensor \rightarrow 2-wire compensation

Prerequisite An RTD sensor or a resistance transmitter with a **2-wire** connection type must be specified

as the sensor type.

Description Use this function to specify the resistance value for two-wire compensation in RTDs.

User entry 0 to 30 Ω

Factory setting 0Ω

Reference junction

Navigation Application \rightarrow Sensor \rightarrow Reference junction

Prerequisite A thermocouple (TC) sensor must be selected as the sensor type.

Description Use this function to select reference junction measurement for temperature compensation

of thermocouples (TC).

If **Preset value** is selected, the compensation value is specified via the **RJ preset value** parameter.

Selection • Internal measurement: the internal reference junction temperature is used.

• Fixed value: a fixed value is used.

 Measured value of external sensor: The measured value of an RTD Pt100 2-wire sensor which is connected to terminals 1 and 3 is used.

Factory setting Internal measurement

RJ preset value

Navigation Application \rightarrow Sensor \rightarrow RJ preset value

Prerequisite The **Preset value** parameter must be set if the **Reference junction** option is selected.

Description Use this function to define the fixed preset value for temperature compensation.

User entry -58 to +360

Factory setting 0,00

Sensor offset

Navigation \square Application \rightarrow Sensor \rightarrow Sensor offset

Description Use this function to set the zero point correction (offset) of the sensor measured value.

The value indicated is added to the measured value.

User entry -18.0 to +18.0

Factory setting 0,0

14.2.3 Submenu: Linearization

Call./v. Dusen coeff. RO

Navigation Application \rightarrow Sensor \rightarrow Linearization \rightarrow Call./v. Dusen coeff. R0

Prerequisite The RTD platinum (Callendar/Van Dusen) option is enabled in the **Sensor type** parameter.

Description Use this function to set the RO Value only for linearization with the Callendar/Van Dusen

polynomial.

User entry $10 \text{ to } 2000 \Omega$

Factory setting 100.000Ω

Call./v. Dusen coeff. A, B and C

Navigation Application \rightarrow Sensor \rightarrow Linearization \rightarrow Call./v. Dusen coeff. A, B and C

Prerequisite The RTD platinum (Callendar/Van Dusen) option is enabled in the **Sensor type** parameter.

Description Use this function to set the coefficients for sensor linearization based on the

Callendar/Van Dusen method.

User entry ■ A: 3.0e-003 to 4.0e-003

B: -2.0e-006 to 2.0e-006C: -1.0e-009 to 1.0e-009

Factory setting ■ A: 3.90830e-003

B: -5.77500e-007C: -4.18300e-012

Polynomial coeff. R0

Navigation Application \rightarrow Sensor \rightarrow Linearization \rightarrow Polynomial coeff. RO

Prerequisite The RTD poly nickel or RTD copper polynomial option is enabled in the **Sensor type**

parameter.

Description Use this function to set the RO Value only for linearization of nickel/copper sensors.

User entry $10 \text{ to } 2000 \Omega$

Factory setting 100.00Ω

Polynomial coeff. A, B

Navigation Application \rightarrow Sensor \rightarrow Linearization \rightarrow Polynomial coeff. Polynomial coeff. A, B

Prerequisite The RTD poly nickel or RTD copper polynomial option is enabled in the **Sensor type**

parameter.

Description Use this function to set the coefficients for sensor linearization of copper/nickel resistance

thermometers.

User entry ■ Polynomial coeff. A: 4.0e-003 to 6.0e-003

■ Polynomial coeff. B: -2.0e-005 to 2.0e-005

Factory setting Polynomial coeff. A = 5.49630e-003

Polynomial coeff. B = 6.75560e-006

84

Sensor lower limit	
Navigation	
Prerequisite	The RTD platinum, RTD poly nickel or RTD copper polynomial option is enabled in the Sensor type parameter.
Description	Use this function to set the lower calculation limit for special sensor linearization.
User entry	Depends on the sensor type selected.
Factory setting	Depends on the sensor type selected.
Sensor upper limit	
Navigation	
Prerequisite	The RTD platinum, RTD poly nickel or RTD copper polynomial option is enabled in the Sensor type parameter.
Description	Use this function to set the upper calculation limit for special sensor linearization.
User entry	Depends on the sensor type selected.
Factory setting	Depends on the sensor type selected.
	14.2.4 Submenu: Current output
4mA value	
Navigation	
Description	Use this function to assign a measured value to the current value 4 mA.
Factory setting	0 ℃
20mA value	
Navigation	
Description	Use this function to assign a measured value to the current value 20 mA.
Factory setting	100 ℃

Failure mode

Navigation \Box Application \rightarrow Current output \rightarrow Failure mode

Description Use this function to select the signal on alarm level of the current output in the event of an

error

Selection ■ High alarm

Low alarm

Factory setting Low alarm

Failure current

Navigation Application \rightarrow Current output \rightarrow Failure current

Prerequisite The **High alarm** option is enabled in the "Failure mode" parameter.

Description Use this function to set the value the current output adopts in an alarm condition.

User entry 21.5 to 23 mA

Factory setting 22.5 mA

Adjustment of the analog output (4 and 20 mA current trimming)

Current trimming is used to compensate the analog output (D/A conversion). Here, the output current of the transmitter can be adapted so that it suits the value expected at the higher-level system.

Current trimming does not affect the digital HART® value. This can cause the measured value shown on the locally installed display to differ marginally from the value displayed in the higher-level system.

Procedure

1. Start
\
2. Install an accurate ammeter (more accurate than the transmitter) in the current loop.
\
3. Switch on current output simulation and set the simulation value to 4 mA.
\
4. Measure the loop current with the ammeter and make a note of the value.
↓
5. Set the simulation value to 20 mA.
\
6. Measure the loop current with the ammeter and make a note of the value.
\

7. Enter the current values determined as adjustment values in the **Current trimming 4 mA / 20 mA**parameters

↓
8. Deactivate simulation

↓
9. End

Current trimming 4 mA

Navigation Application \rightarrow Current output \rightarrow Current trimming 4 mA

Description Use this function to set the correction value for the current output at the start of the

measuring range at 4 mA.

User entry 3.85 to 4.15 mA

Factory setting 4 mA

Additional information The trimming only affects the current loop values from 3.8 to 20.5 mA. The failure mode

with Low Alarm and High Alarm current values is not subject to trimming.

Current trimming 20 mA

Navigation Application \rightarrow Current output \rightarrow Current trimming 20 mA

Description Use this function to set the correction value for the current output at the end of the

measuring range at 20 mA.

User entry 19.85 to 20.15 mA

Factory setting 20.000 mA

Additional information The trimming only affects the current loop values from 3.8 to 20.5 mA. The failure mode

with **Low Alarm** and **High Alarm** current values is not subject to trimming.

Damping

Navigation Application \rightarrow Current output \rightarrow Damping

Description Use this function to set the time constant for current output damping.

User entry 0 to 120 s

Factory setting 0 s

Additional information

The current output responds to fluctuations in the measured value with an exponential delay. The time constant of this delay is defined by this parameter. If a low time constant is entered, the current output responds quickly to the measured value. On the other hand, the response of the current output is delayed significantly if a high time constant is entered.

14.2.5 Submenu: HART configuration

Assign current output (PV)	
Navigation	
Description	Use this function to assign the measured variables to the primary HART® value (PV).
User interface	Sensor
Factory setting	Sensor (fixed assignment)
Assign SV	
Navigation	
Description	Use this function to assign the measured variable to the secondary HART value (SV).
User interface	Device temperature (fixed assignment)
Factory setting	Device temperature (fixed assignment)
Assign TV	
Navigation	
Description	Use this function to assign the measured variable to the tertiary HART value (TV).
User interface	Sensor (fixed assignment)
Factory setting	Sensor (fixed assignment)
Assign QV	
Navigation	\square Application \rightarrow HART configuration \rightarrow Assign QV

Description Use this function to assign the measured variable to the quaternary (fourth) HART value

(QV).

User interface Sensor (fixed assignment)

Factory setting Sensor (fixed assignment)

HART address

Navigation \square Application \rightarrow HART configuration \rightarrow HART address

Description Use this function to define the HART address of the device.

It is not possible to write to the parameter. The HART address can be set in FDT/DTM-based operating tools, such as Endress+Hauser's FieldCare or DeviceCare, via the CommDTM. ¹⁾

1) It cannot be set via the SmartBlue app, however.

Factory setting 0

Additional information The measured value can only be transmitted via the current value if the address is set to

"O". The current is fixed at 4.0 mA for all other addresses (Multidrop mode).

No. of preambles

Navigation \square Application \rightarrow HART configuration \rightarrow No. of preambles

Description Use this function to define the number of preambles in the HART telegram.

User entry 5 to 20

Factory setting 5

14.3 Menu: System

14.3.1 Submenu: Device management

HART short tag

Navigation System \rightarrow Device management \rightarrow HART short tag

Description Use this function to define a short tag for the measuring point.

User entry Up to 8 alphanumeric characters (letters, numbers and special characters).

Navigation

Description

state.

Factory setting 8	8 x '?'
-------------------	---------

Device tag	
Navigation	
Description	Use this function to enter a unique name for the measuring point so it can be identified quickly within the plant.
User entry	Max. 32 characters, such as letters, numbers or special characters (e.g. @, %, /)
Factory setting	Depends on the product root and serial number EH_TMT72_serial number (TMT72)
Mains filter	
Navigation	
Description	Use this function to select the mains filter for A/D conversion.
Selection	■ 50 Hz ■ 60 Hz
Factory setting	50 Hz
Locking status	
Navigation	System → Device management → Locking status
Description	Displays the device locking status. When write protection is activated, write access to the parameters is disabled.
User interface	Enabled or disabled check box: Locked by hardware
Device reset	

Endress+Hauser 89

 $System \rightarrow Device \ management \rightarrow Device \ reset$

Use this function to reset the device configuration - either entirely or in part - to a defined

Selection

Not active

No action is executed and the user exits the parameter.

■ To factory defaults

All the parameters are reset to the factory setting.

■ To delivery settings

All the parameters are reset to the order configuration. The order configuration can differ from the factory setting if customer-specific parameter values were defined when the device was ordered.

Restart device

The device is restarted but the device configuration remains unchanged.

Factory setting

Not active

Configuration counter

Navigation

System → Device management → Configuration counter

Description

Displays the counter reading for changes to device parameters.



Static parameters, whose values change during optimization or configuration, cause this parameter to increase by 1. This supports parameter version management. If several parameters change, e. g. due to loading of parameters from FieldCare etc. in the device, the counter can show a higher value. The counter cannot be reset and is also not reset to the default value when the device is reset. If the counter overflows, (16 bit), it starts again at 1.

Configuration changed

Navigation

System → Device management → Configuration changed

Description

Displays whether the configuration of the device has been changed by a master (primary or secondary).

Reset configuration changed flag

Navigation

 \square System \rightarrow Device management \rightarrow Reset configuration changed flag

Description

The **Configuration changed** information is reset by a master (primary or secondary).

14.3.2 User management submenu

Define password → Maintenance	New password
	Confirm new password
	Status password entry

Change user role → Operator	Password ¹⁾
	Status password entry
Reset password → Operator	Reset password
	Status password entry
Change password → Maintenance	Old password
	New password
	Confirm new password
	Status password entry
Delete password → Maintenance	Delete password

1) The required user role must first be selected here when operating the device via the SmartBlue app.

Navigation in the submenu is supported by the following operating elements:

Back

Return to the previous page

Cancel

If Cancel is selected, the status before the submenu was started is restored

Define password	
Navigation	System → User management → Define password
Description	Use this function to start password definition
User entry	Activate the button
New password	

Navigation System \rightarrow User management \rightarrow Define password \rightarrow New password

Description Use this function to enter a password for the **Maintenance** user role to gain access to the relevant functions.

Additional information

If the factory setting is not changed, the device is set to the **Maintenance** user role. This means that the device's configuration data are not write-protected and can be edited at all times.

Once a password has been defined, devices can be switched to the **Maintenance** user role if the correct password is entered in the **Password** parameter. A new password becomes valid once it has been verified after being entered in the **Confirm new password** parameter.

i

The password must contain a minimum of 4 and a maximum of 16 characters and can consist of both letters and numbers. Leading and trailing spaces not used as part of the password. If you lose your password, please contact your Endress+Hauser Sales Center.

User entry	(enter the password)
Confirm new password	
Navigation	
Description	Use this function to confirm the new password that has been defined.
Additional information	A new password becomes valid once it has been verified after being entered in the Confirm new password parameter. The password must contain a minimum of 4 and a maximum of 16 characters and can consist of both letters and numbers. If you lose your password, please contact your Endress +Hauser Sales Center.
User entry	(enter the password)
Status password entry	
Navigation	
Description	Displays the status of the password verification. Password accepted Wrong password Password rules violated Permission denied Incorrect input sequence Invalid user role Confirm PW mismatch Reset password accepted
Enter password	
Navigation	System → User management → Enter password
Prerequisite	The Operator user role is active and a password has been defined.
Description	Use this function to enter a password for the selected user role to gain access to the functions of this role.
User entry	Enter the defined password.
Status password entry	

Navigation System \rightarrow User management \rightarrow Enter password \rightarrow Status password entry

Description $\rightarrow \triangle$ 92

Reset password

Navigation System \rightarrow User management \rightarrow Reset password

Prerequisite The **Operator** user role is active and a password has already been defined.

Description Use this function to enter the reset code to reset the current password.

A CAUTION

Current password is lost.

► Only use the reset code if you have lost the current password. Contact the Endress +Hauser Sales Center.

User entry Activate the text box and enter the reset code.

Status password entry

Navigation System \rightarrow User management \rightarrow Reset password \rightarrow Status password entry

Description $\rightarrow \stackrel{\triangle}{=} 92$

Logout

Navigation System \rightarrow User management \rightarrow Logout

Prerequisite The **Maintenance** user role must be active.

Description The **Maintenance** user role is exited and the system switches to the **Operator** user role.

User entry Activate the button.

Change password

Navigation System \rightarrow User management \rightarrow Change password

Prerequisite The **Maintenance** user role must be active.

Description Old password: Use this function to enter the current password to then be able to make changes to the existing password. ■ New password: \rightarrow $\stackrel{\triangle}{=}$ 90 ■ Confirm new password: → 🖺 90 **User entry** • (enter the old password) • (enter the new password) • (confirm the new password) Status password entry **Navigation** System → User management → Change password → Status password entry → 🖺 92 Description Delete password **Navigation** System → User management → Delete password **Prerequisite** The **Maintenance** user role must be active. The password currently valid is deleted. Description The **Define password** button appears. User entry Activate the **Delete password** button. 14.3.3 Bluetooth configuration submenu Bluetooth **Navigation** System \rightarrow Bluetooth configuration \rightarrow Bluetooth Use this function to enable or disable the Bluetooth function. Description • Off: The Bluetooth interface is disabled immediately. • On: The Bluetooth interface is enabled and a connection to the device can be established. Bluetooth communication is only possible if the CDI and display interface is not used. Selection Off ■ On

Factory setting

On

Change Bluetooth password 1)

1) Function is only visible in the SmartBlue app

Navigation System \rightarrow Bluetooth configuration \rightarrow Change Bluetooth password

Description Use this function to change the Bluetooth password. This function is visible in the

SmartBlue app only.

Prerequisite The Bluetooth interface is enabled (ON) and a connection to the device is established.

User entry Enter:

User name

Current password

New password

Confirm new password

Press OK to confirm your entries.

14.3.4 Information submenu

Device submenu

Squawk	C
--------	---

Navigation \square System \rightarrow Information \rightarrow Device \rightarrow Squawk

Description This function can be used locally to facilitate the identification of the device in the field.

Once the Squawk function has been activated, all the segments flash on the display.

Selection • **Squawk once**: Display of device flashes for 60 seconds and then returns to normal operation.

Squawk on: Display of device flashes continuously.

• **Squawk off**: Squawk is switched off and the display returns to normal operation.

User entry Activate the relevant button

Serial number

Navigation System \rightarrow Information \rightarrow Device \rightarrow Serial number

Description Displays the serial number of the device. It can also be found on the nameplate.

Uses of the serial number

- To identify the measuring device quickly, e.g. when contacting Endress+Hauser.
- To obtain specific information on the measuring device using the Device Viewer: www.endress.com/deviceviewer

User interface

Max. 11-digit character string comprising letters and numbers.

Order code

Navigation

System → Information → Device → Order code

Description

Displays the order code of the device. It can also be found on the nameplate. The order code is generated from the extended order code, which defines all the device features of the product structure. In contrast, the device features cannot be read directly from the order code.



Uses of the order code

- To order an identical spare device.
- To identify the device quickly and easily, e.g. when contacting Endress+Hauser.

Firmware version

Navigation System \rightarrow Information \rightarrow Device \rightarrow Firmware version

Description Displays the device firmware version that is installed.

User interface Max. 6-digit character string in the format xx.yy.zz

Hardware revision

Navigation System \rightarrow Information \rightarrow Device \rightarrow Hardware revision

Description Displays the hardware revision of the device.

Extended order code (n)

n = Number of parts of the extended order code (n = 1 to 3)

Navigation

System \rightarrow Information \rightarrow Device \rightarrow Extended order code n

Description

Displays the first, second and/or third part of the extended order code. On account of length restrictions, the extended order code is split into a maximum of 3 parameters. The extended order code indicates the version of all the features of the product structure for the device and thus uniquely identifies the device. It can also be found on the nameplate.

- Uses of the extended order code
- To order an identical spare device.
- To check the ordered device features using the delivery note.

Navigation

Device name	
Navigation	
Description	Displays the device name. It can also be found on the nameplate.
Manufacturer	
Navigation	
Description	Displays the name of the manufacturer.
	Device location submenu
Latitude	
Navigation	
Description	Use this function to enter the latitude coordinates that describe the device location.
User entry	-90.000 to +90.000 °
Factory setting	0
Longitude	
Navigation	
Description	Use this function to enter the longitude coordinates that describe the device location.
User entry	-180.000 to +180.000 °
Factory setting	0
Altitude	

Endress+Hauser 97

Description Use this function to enter the altitude data that describe the device location.

User entry $-1.0 \cdot 10^{+20} \text{ to } +1.0 \cdot 10^{+20} \text{ m}$

Factory setting 0 m

Location method

Navigation \square System \rightarrow Information \rightarrow Device location \rightarrow Location method

Description Use this function to select the data format for specifying the geographic location. The

codes for specifying the location are based on the US National Marine Electronics

Association (NMEA) Standard NMEA 0183.

Selection ■ No fix

• GPS or Standard Positioning Service (SPS) fix

■ Differential PGS fix

Precise positioning service (PPS)

■ Real Time Kinetic (RTK) fixed solution

■ Real Time Kinetic (RTK) float solution

Estimated dead reckoning

■ Manual input mode

Simulation mode

Factory setting Manual input mode

Location description

Navigation \square System \rightarrow Information \rightarrow Device location \rightarrow Location description

Description Use this function to enter a description of the location so that the device can be located in

the plant.

User entry Up to 32 alphanumeric characters (letters, numbers and special characters)

Factory setting $32 \times ?'$

Process unit tag

Navigation System \rightarrow Information \rightarrow Device location \rightarrow Process unit tag

Description Use this function to enter the process unit in which the device is installed.

User entry Up to 32 alphanumeric characters (letters, numbers and special characters)

Factory setting $32 \times ?'$

HART info submenu

Device type System \rightarrow Information \rightarrow HART info \rightarrow Device type **Navigation** Description Displays the device type with which the device is registered with the HART FieldComm Group. The device type is specified by the manufacturer. It is needed to assign the appropriate device description file (DD) to the device. User interface 4-digit hexadecimal number **Factory setting** 0x11D0 Device revision **Navigation** System \rightarrow Information \rightarrow HART info \rightarrow Device revision Description Displays the device revision with which the device is reqistered with the HART® FieldComm Group. It is needed to assign the appropriate device description file (DD) to the device. User interface Revision in hexadecimal format 0x01 **Factory setting HART** revision **Navigation** \square System → Information → HART info → HART revision Description Displays the HART revision of the device **HART** descriptor **Navigation** \square System → Information → HART info → HART descriptor Description Use this function to define a description for the measuring point. Up to 16 alphanumeric characters (uppercase letters, numbers and special characters) User entry

Endress+Hauser 99

16 x '?'

Factory setting

HART message Navigation Description Use this function to define a HART message which is sent via the HART protocol when requested by the master. **User entry** Up to 32 alphanumeric characters (uppercase letters, numbers and special characters) **Factory setting** 32 x '?' Hardware revision → 🗎 96 Navigation System \rightarrow Information \rightarrow HART info \rightarrow Hardware revision Software revision **Navigation** Description Displays the software revision of the device. HART date code **Navigation** Description Use this function to define date information for individual use. **User entry** Date in the format year-month-day (YYYY-MM-DD)

Manufacturer ID

Factory setting

Navigation System \rightarrow Information \rightarrow HART info \rightarrow Manufacturer ID

Description Displays the manufacturer ID with which the device is registered with the HART

FieldComm Group.

2010-01-01 1)

Also 01.01.2010 depending on the operating tool

User interface 4-digit hexadecimal number

Factory setting 0x0011

Device ID

Navigation System \rightarrow Information \rightarrow HART info \rightarrow Device ID

Description A unique HART identifier is saved in the device ID and used by the control systems to

identify the device. The device $\ensuremath{\mathsf{ID}}$ is also transmitted in command 0. The device $\ensuremath{\mathsf{ID}}$ is

determined unambiguously from the serial number of the device.

User interface ID generated for specific serial number

14.3.5 Display submenu

Display interval

Navigation System \rightarrow Display \rightarrow Display interval

Description Set the display duration of the measured values on the local display if they are displayed in alternation. This type of change is only generated automatically if several measured values

are specified.

■ The Value 1 display - Value 3 display parameters are used to specify which measured values are shown on the local display.

The display format of the displayed measured values is specified using the Format display parameter.

User entry 4 to 20 s

Factory setting 4 s

Format display

Navigation System \rightarrow Display \rightarrow Format display

Description Use this function to select how the measured value is shown on the local display. The

display format **Measured value** or **Measured value with bar graph** can be configured.


Selection • Value

■ Value + bar graph


Factory setting Value

Additional information

Value

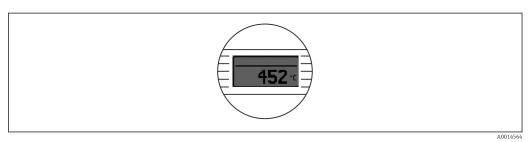

Value + bar graph

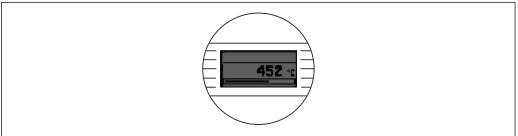

Δ0014563

Value 1 display (Value 2 or 3 display)

Navigation

System \rightarrow Display \rightarrow Format display \rightarrow Value 1 display (Value 2 or 3 display)

Description

Use this function to select a measured value that is shown on the local display.

i

The **Format display** parameter is used to specify how the measured values are displayed.

Selection

- Process value
- Device temperature
- Output current
- Percent of range
- Off

Factory setting

Process value

Decimal places 1 (decimal places 2 or 3)

Navigation

 $System \rightarrow Display \rightarrow Format\ display \rightarrow Decimal\ places\ 1\ (Decimal\ places\ 2\ or\ 3)$

Prerequisite

A measured value is defined in the parameter **Value 1 display** (Value 2 or 3 display).

Description

Use this function to select the number of decimal places for the display value. This setting does not affect the accuracy of the device for measuring or calculating the value.

i

If ${\bf Automatic}$ is selected, the maximum possible number of decimal places is always shown on the display.

Selection

■ X

■ X.X

■ X.XX

X.XXXX.XXXX

Automatic

Factory setting

Automatic

Index iTEMP TMT72

Index

0 9	Device type
2-wire compensation (parameter) 81	Device variables
4mA value (parameter)	Diagnostic behavior (parameter)
20mA value (parameter)	Diagnostic event simulation (parameter) 74
	Diagnostic events
Α	Diagnostic behavior 43
Accessories	Overview
Communication-specific 47	Status signals
Device-specific 47	Diagnostic list (submenu)
System components 49	Diagnostic settings (submenu)
Actual diag channel n	Display (submenu)
Actual diagnostics (submenu)	Display interval (parameter)
Actual diagnostics 1	Disposal
Actual diagnostics n	Document
Alarm delay (parameter)	Function
Altitude (parameter)	Document function
Assign current output (PV) (parameter) 87	E
Assign QV (parameter)	E
Assign SV (parameter)	Enter password (parameter)
Assign TV (parameter)	Event logbook (submenu)
D	F
B	Failure current (parameter)
Bluetooth (parameter)	Failure mode (parameter)
Bluetooth configuration (submenu) 94	FieldCare
С	Function scope
Cable specification	User interface
Cable specification	Firmware version
Call./v. Dusen coeff. R0 (parameter)	Format display (parameter)
CE mark	romat display (parameter) 101
Change Bluetooth password (parameter) 95	Н
Change password (parameter)	Hardware revision
Configuration changed (parameter) 90	HART address (parameter)
Configuration counter (parameter) 90	HART configuration (submenu)
Confirm new password (parameter)	HART date code (parameter) 100
Connection type (parameter)	HART descriptor (parameter)
Current output (submenu)	HART info (submenu)
Current output simulation (parameter)	HART message (parameter) 100
Current trimming 4 mA (parameter)	HART revision
Current trimming 20 mA (parameter)	HART short tag (parameter)
ourient trimming 20 mm (parameter)	J 11 ,
D	I
Damping (parameter)	Information (submenu)
Decimal point (parameter)	Intended use
Define password (parameter)	
Delete password (parameter)	L
Device (submenu)	Latitude (parameter)
Device ID	Limit corrosion detection (parameter)
Device location (submenu)	Linearization (submenu)
Device management (submenu)	Location description (parameter)
Device name	Location method (parameter)
Device reset (parameter)	Locking status
Device revision	Logout (parameter)
Device tag (parameter)	Longitude (parameter)
Device temperature	М
Device temperature max. (parameter) 78	M
Device temperature min. (parameter) 78	Mains filter (parameter)

iTEMP TMT72 Index

Manufacturer (parameter)	.00 78 77
Nameplate	
0	
Operating time	72 23
Operating tool	23 23
SmartBlue app	31 96 96
Other standards and guidelines Output current	66 79
Percent of range	79 83 83
Previous diag n channel	73 73 98 75 79
Q QV	80
R	
Reference junction (parameter)	81 90 78 93 78 46 82
Sensor (submenu)	80 76 84 77 77 82 79 75 80 84

Serial number
Simulation (submenu)
Software revision
Solid wire
Squawk (Assistant) 95
Status password entry (parameter) 92, 93, 94
Status signal (parameter)
Structure of the operating menu 26
SV
System (menu)
System components
T
Terminal assignment
Thermocouple diagnostic (parameter)
Time stamp $n \dots 73,74$
Troubleshooting
Application error with RTD sensor connection 41
Application error with TC sensor connection 41
Checking the display
General errors
TV
U
Unit (parameter)
User management (submenu) 90
V
Value current output (parameter)
Value display (parameter)
Version data for the device
W
Wire without wire and farrule



www.addresses.endress.com