

Operating Instructions

Turbimax CUS51D

Sensor for turbidity and solids content







Table of contents









1	About this document	4		
1.1	Safety information	4	11.2	Spare parts
1.2	Symbols used	4	11.3	Return
1.3	Symbols on the device	4	11.4	Disposal
1.4	Documentation	5		
2	Basic safety instructions	6	12	Accessories
2.1	Requirements of the personnel	6	12.1	Device-specific accessories
2.2	Intended use	6		
2.3	Workplace safety	6	13	Technical data
2.4	Operational safety	7	13.1	Input
2.5	Product safety	7	13.2	Energy supply
3	Product description	8	13.3	Performance characteristics
3.1	Product design	8	13.4	Environment
4	Incoming acceptance and product identification	13	13.5	Process
4.1	Incoming acceptance	13	13.6	Mechanical construction
4.2	Product identification	13		
4.3	Scope of delivery	14	Index	46
4.4	Certificates and approvals	14		
5	Mounting	15		
5.1	Mounting requirements	15		
5.2	Mounting the sensor	16		
5.3	Post-mounting check	23		
6	Electrical connection	24		
6.1	Connecting the sensor	24		
6.2	Ensuring the degree of protection	25		
6.3	Post-connection check	26		
7	Commissioning	27		
7.1	Function check	27		
8	Operation	28		
8.1	Adapting the measuring device to the process conditions	28		
9	Diagnostics and troubleshooting ...	38		
9.1	General troubleshooting	38		
10	Maintenance	39		
10.1	Maintenance tasks	39		
11	Repair	40		
11.1	General notes	40		

1 About this document



1.1 Safety information

Structure of information	Meaning
 Causes (/consequences) If necessary, Consequences of non-compliance (if applicable) ▶ Corrective action	This symbol alerts you to a dangerous situation. Failure to avoid the dangerous situation will result in a fatal or serious injury.
 Causes (/consequences) If necessary, Consequences of non-compliance (if applicable) ▶ Corrective action	This symbol alerts you to a dangerous situation. Failure to avoid the dangerous situation can result in a fatal or serious injury.
 Causes (/consequences) If necessary, Consequences of non-compliance (if applicable) ▶ Corrective action	This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or more serious injuries.
 Cause/situation If necessary, Consequences of non-compliance (if applicable) ▶ Action/note	This symbol alerts you to situations which may result in damage to property.

1.2 Symbols used

	Additional information, tips
	Permitted
	Recommended
	Forbidden or not recommended
	Reference to device documentation
	Reference to page
	Reference to graphic
	Result of a step

1.3 Symbols on the device

Symbol	Meaning
	Reference to device documentation
	Do not dispose of products bearing this marking as unsorted municipal waste. Instead, return them to the manufacturer for disposal under the applicable conditions.

1.4 Documentation

The following manuals, which complement these Operating Instructions, can be found on the product pages on the Internet:




Technical Information Turbimax CUS51D, TI00461C

2 Basic safety instructions

2.1 Requirements of the personnel

- Installation, commissioning, operation and maintenance of the measuring system may be carried out only by specially trained technical personnel.
- The technical personnel must be authorized by the plant operator to carry out the specified activities.
- The electrical connection may be performed only by an electrical technician.
- The technical personnel must have read and understood these Operating Instructions and must follow the instructions contained therein.
- Faults at the measuring point may only be rectified by authorized and specially trained personnel.

 Repairs not described in the Operating Instructions provided must be carried out only directly at the manufacturer's site or by the service organization.

2.2 Intended use

The sensor is used to measure turbidity and solids content in water and wastewater.

The sensor is particularly suited for use in the following applications:

- Turbidity measurement in the outlet
- Solids content in activated sludge and recirculation
- Solids content in sludge treatment
- Filterable matter in outlet of WWTPs

Use of the device for any purpose other than that described, poses a threat to the safety of people and of the entire measuring system and is therefore not permitted.

The manufacturer is not liable for damage caused by improper or non-designated use.

2.3 Workplace safety

As the user, you are responsible for complying with the following safety conditions:

- Installation guidelines
- Local standards and regulations
- Regulations for explosion protection

Electromagnetic compatibility

- The product has been tested for electromagnetic compatibility in accordance with the applicable international standards for industrial applications.
- The electromagnetic compatibility indicated applies only to a product that has been connected in accordance with these Operating Instructions.

2.4 Operational safety

Before commissioning the entire measuring point:

1. Verify that all connections are correct.
2. Ensure that electrical cables and hose connections are undamaged.
3. Do not operate damaged products, and protect them against unintentional operation.
4. Label damaged products as defective.

During operation:

- If faults cannot be rectified:
products must be taken out of service and protected against unintentional operation.

2.5 Product safety

The product is designed to meet state-of-the-art safety requirements, has been tested, and left the factory in a condition in which it is safe to operate. The relevant regulations and international standards have been observed.

3 Product description

3.1 Product design

The sensor is designed for continuous in-situ determination of turbidity and solids content.

The sensor with the 40 mm (1.57 in) diameter can be operated directly and completely in the process without the need for further sampling (in-situ).


The sensor includes all necessary modules:

- Power supply
- Light sources
- Detectors
 - Detectors detect the measuring signals, digitize them and process them to form a measured value.
- Sensor microcontroller
 - This is responsible for controlling internal processes and transmitting data.

All data - including the calibration data - are stored in the sensor. The sensor can be precalibrated and used at a measuring point, calibrated externally, or used for several measuring points with different calibrations.

3.1.1 Measuring principle

For turbidity measurement a light beam is directed through the medium and is deflected from its original direction by optically denser particles, e.g. particles of solid matter. This process is also called scattering.

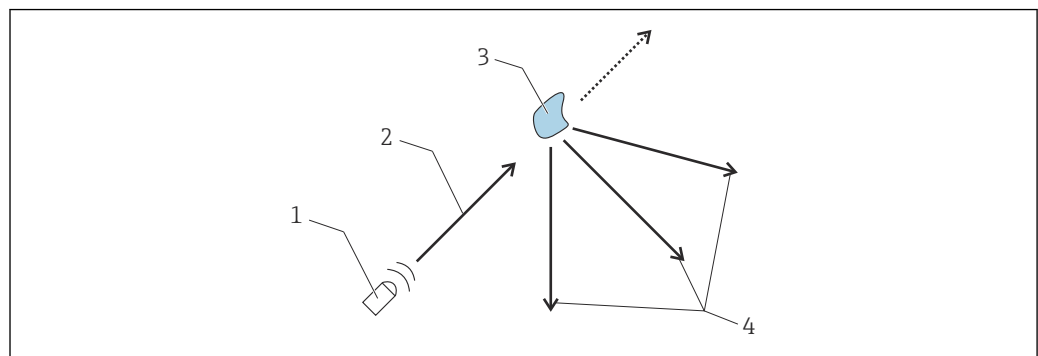


 1 Deflection of light

- 1 Light source
- 2 Light beam
- 3 Particle
- 4 Scattered light

The incident light is scattered in many directions, i.e. at different angles to the direction of propagation. 2 angle ranges are of particular interest here:

- Light scattered at a 90° angle is used primarily for turbidity measurement in drinking water.
- Light scattered at a 135° angle extends the dynamic range for high particle densities.

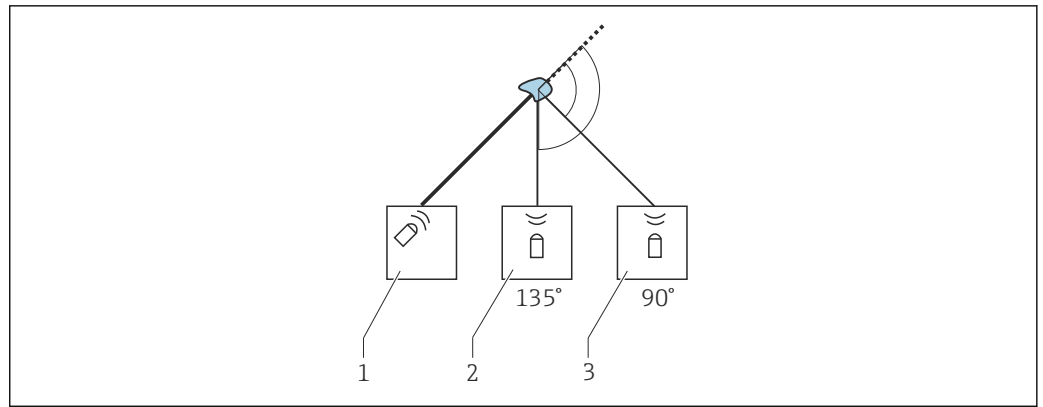


A0030846

2 Principle mode of operation of turbidity sensor

- 1 Light source
- 2 135° light receiver
- 3 90° light receiver

If the particle density in the medium is low, most of the light is scattered in the 90° channel and a small amount of light is scattered in the 135° channel. As the particle density increases, this ratio shifts (more light in the 135° channel, less light in the 90° channel).

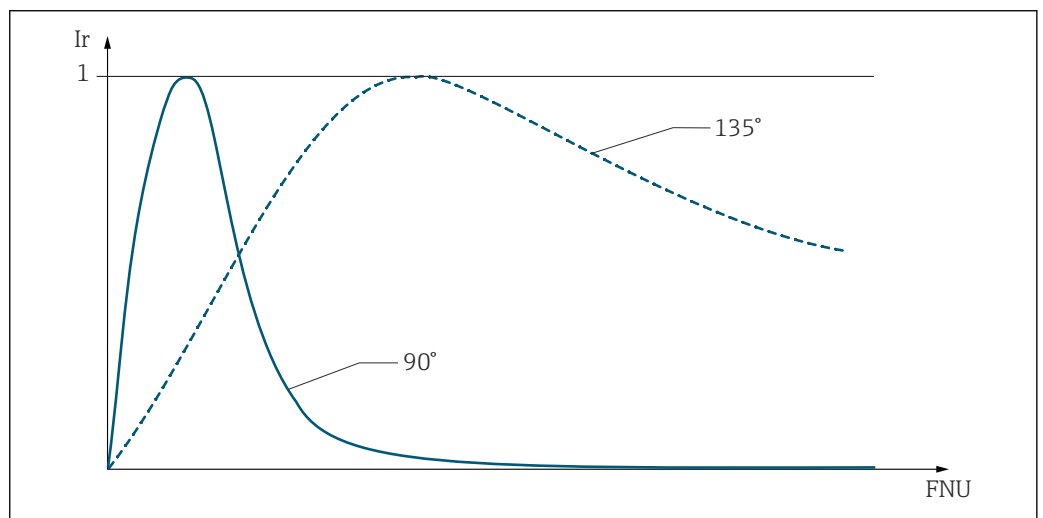


A0030849

3 Signal distribution as a function of the particle density

- I_r Relative intensity
- FNU Turbidity unit

The CUS51D turbidity sensor has 2 sensor units, which are independent of each other and arranged in parallel. The application-dependent evaluation of both signals leads to stable measured values.

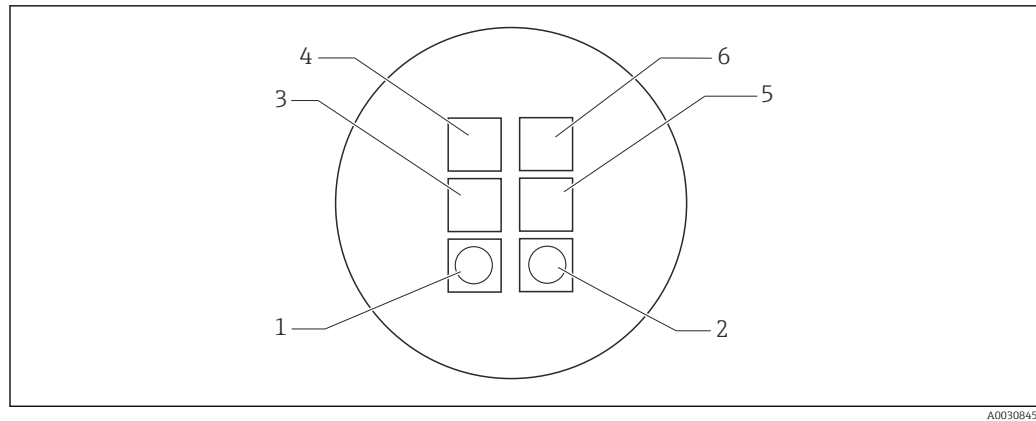

A0030845


 4 Arrangement of light sources and light receivers


1, 2 Light sources 1 and 2

3, 5 135° light receiver

4, 6 90° light receiver

The sensor covers a broad range of turbidity and solids measurements thanks to the optical arrangement with 2 light sources, each with 2 light receivers placed at different angles (90° and 135°).

- As soon as the customer selects an application, e.g. **Activated sludge**, the optical method best suited for the particular measuring task is automatically activated in the sensor (e.g. 90° measurements with both light sources).
- The double sensing system (2 light sources with 2 receivers per source) largely compensates for measurement errors caused by fouling (4-beam pulsed light method →  10).


 The sensor types available vary in terms of their measuring ranges and therefore the range of available applications.

3.1.2 Measuring methods

4-beam pulsed light method

The method is based on 2 light sources and 4 light receivers. Long-life LEDs are used as monochromatic light sources. These LEDs are pulsed alternately and generate 4 scattered light signals per LED pulse at the receivers.

This offsets interference influences such as extraneous light, LED aging, fouling of windows and absorption in the medium. Depending on the chosen application, different scattered light signals are processed. The signal type, number and calculation are stored in the sensor.

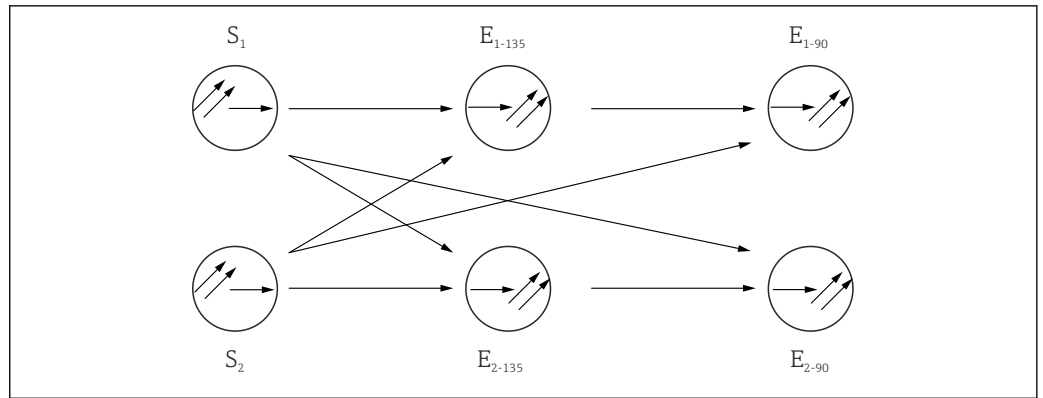

A0030847

5 4-beam pulsed light method

$S_1 S_2$ Light source


E_{90} Light receiver for 90° scattered light

E_{135} Light receiver for 135° scattered light

90° scattered light method

Measurement is performed with a wavelength of 860 nm, as described in ISO 7027/EN 27027.

The emitted light beam is scattered by the solid particles in the medium. The scattered radiation generated in this way is measured by scattered light receivers, which are arranged at an angle of 90° to the light sources. The turbidity of the medium is determined by the amount of scattered light.

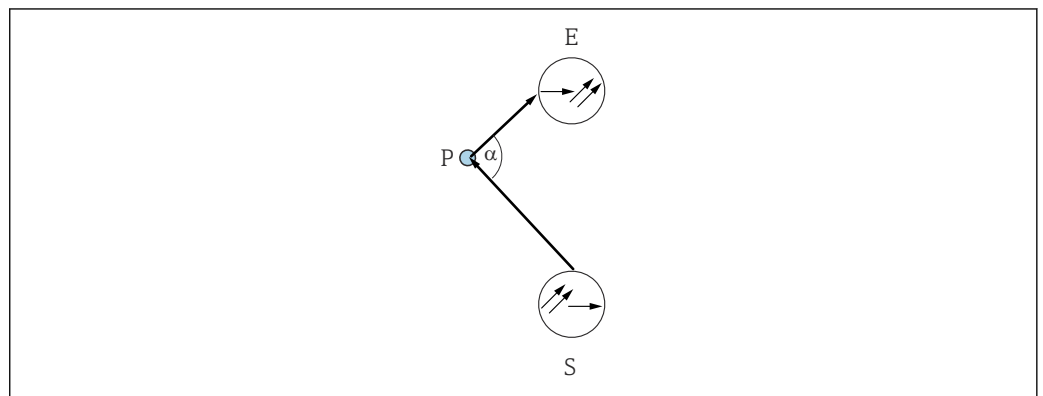

A0030852

6 90° scattered light method


S Light source

E Receiver

P Particle

135° backscattered light method

The emitted light beam is scattered by the solid particles in the medium. The backscattering generated is measured by scattered light receivers, which are arranged next to the light sources. The turbidity of the medium is determined based on the quantity of back-scattered light. It is possible to measure very high turbidity values with this type of scattered light measurement.

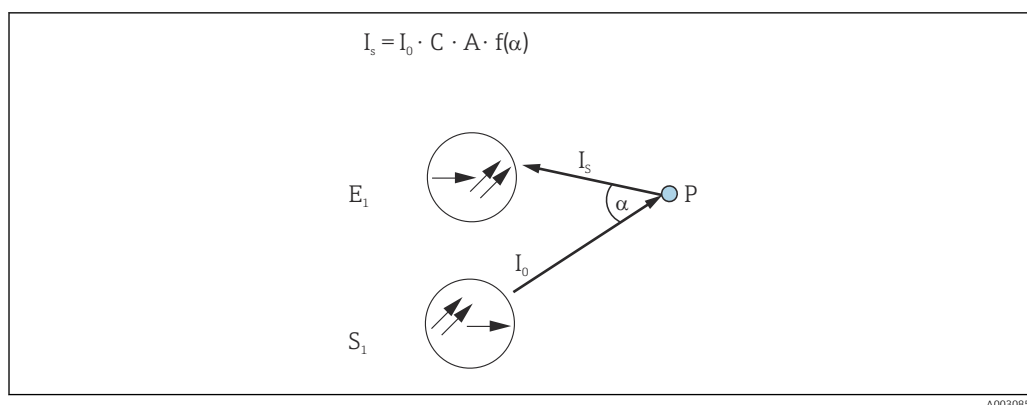

A0030855

7 Principle of backscattered light method

I_0 Intensity of transmitted light

I_s Intensity of scattered light

A Geometric factor

C Concentration

P Particle

$f(\alpha)$ Angle correlation

4 Incoming acceptance and product identification

4.1 Incoming acceptance

1. Verify that the packaging is undamaged.
 - ↳ Notify the supplier of any damage to the packaging.
Keep the damaged packaging until the issue has been resolved.
2. Verify that the contents are undamaged.
 - ↳ Notify the supplier of any damage to the delivery contents.
Keep the damaged goods until the issue has been resolved.
3. Check that the delivery is complete and nothing is missing.
 - ↳ Compare the shipping documents with your order.
4. Pack the product for storage and transportation in such a way that it is protected against impact and moisture.
 - ↳ The original packaging offers the best protection.
Make sure to comply with the permitted ambient conditions.

If you have any questions, please contact your supplier or your local Sales Center.

4.2 Product identification

4.2.1 Nameplate

The nameplate provides you with the following information on your device:

- Manufacturer identification
- Order code
- Extended order code
- Serial number
- Safety information and warnings

- Compare the information on the nameplate with the order.

4.2.2 Identifying the product

Product page

www.endress.com/cus51d

Interpreting the order code

The order code and serial number of your product can be found in the following locations:

- On the nameplate
- In the delivery papers

Obtaining information on the product

1. Go to www.endress.com.
2. Page search (magnifying glass symbol): Enter valid serial number.
3. Search (magnifying glass).
 - ↳ The product structure is displayed in a popup window.
4. Click the product overview.
 - ↳ A new window opens. Here you fill information pertaining to your device, including the product documentation.

Manufacturer's address

Endress+Hauser Conducta GmbH+Co. KG
Dieselstraße 24
70839 Gerlingen
Germany

4.3 Scope of delivery

The scope of delivery comprises:

- 1 sensor, version as ordered
- 1 x Operating Instructions
- If you have any queries:
Please contact your supplier or local sales center.

4.4 Certificates and approvals


Current certificates and approvals for the product are available at www.endress.com on the relevant product page:

1. Select the product using the filters and search field.
2. Open the product page.
3. Select **Downloads**.

5 Mounting


5.1 Mounting requirements

5.1.1 Dimensions

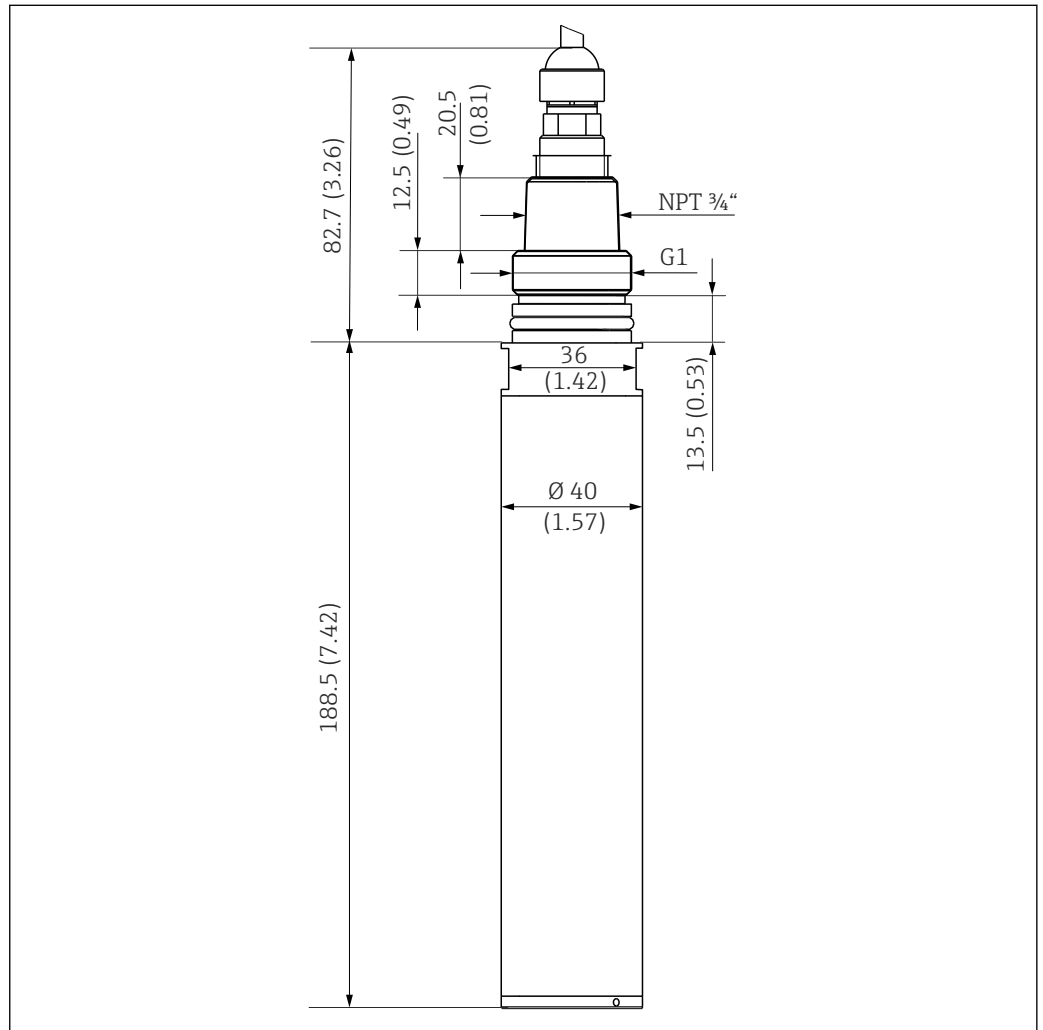

8 Dimensions. Engineering unit: mm (in)

A0030853

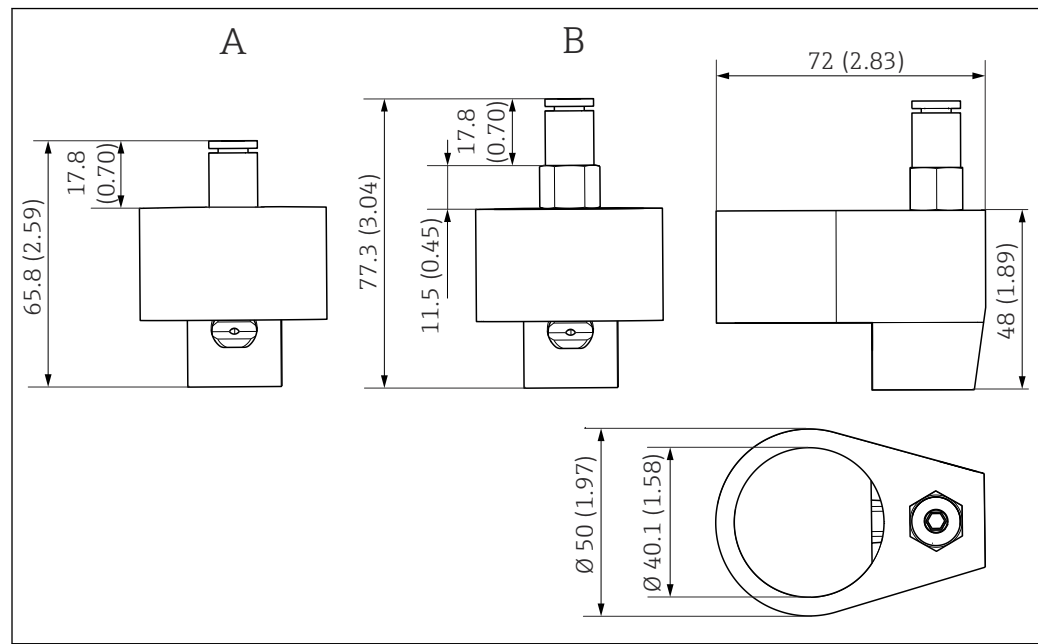Compressed air cleaning

9 Compressed air cleaning. Engineering unit: mm (in)

A Version 6 mm (0.24 in)

B Version 6.35 mm (0.25 in)


5.2 Mounting the sensor

The sensor can be installed with different assemblies or directly in a pipe connection. However, the CYA112 immersion assembly must be used for continuous operation of the sensor under water.

5.2.1 Measuring system

A complete measuring system comprises:


- Turbimax CUS51D turbidity sensor
- Liquiline CM44x multi-channel transmitter
- Assembly:
 - Flexdip CYA112 assembly and Flexdip CYH112 holder or
 - Retractable assembly, e.g. Cleanfit CUA451

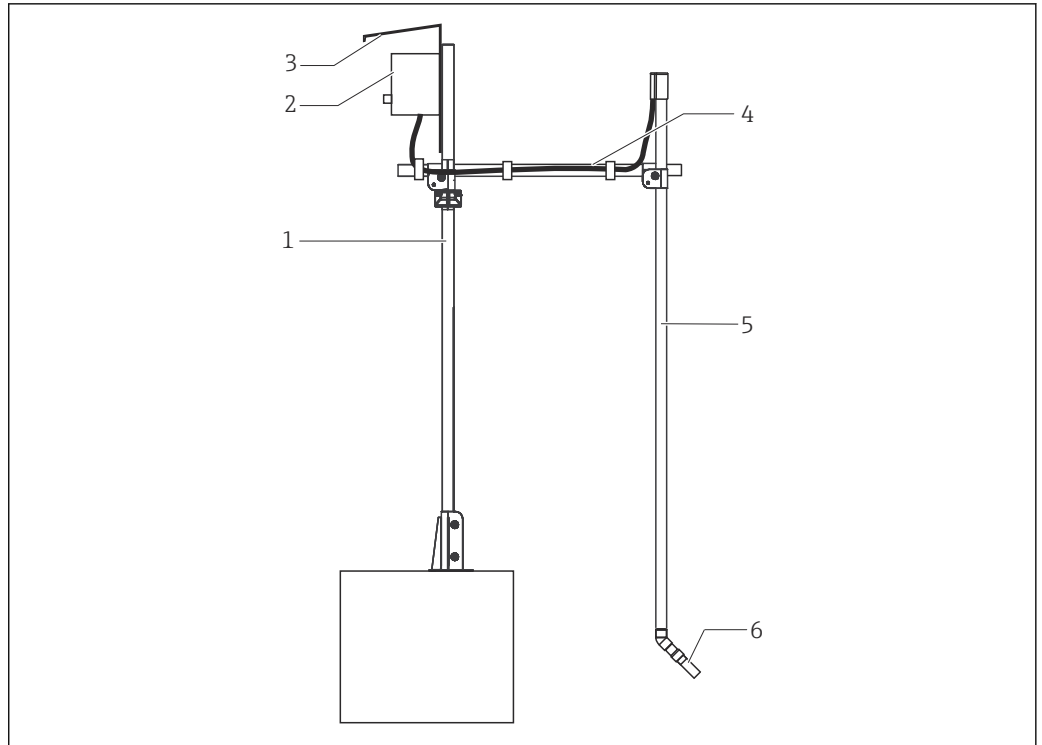

A0051207

10 Measuring system with immersion assembly (example)


- 1 Main pipe, Flexdip CYH112 holder
- 2 Liquiline CM44x multi-channel transmitter
- 3 Weather protection cover
- 4 Transverse pipe, Flexdip CYH112 holder
- 5 Wastewater assembly Flexdip CYA112
- 6 Turbimax CUS51D turbidity sensor

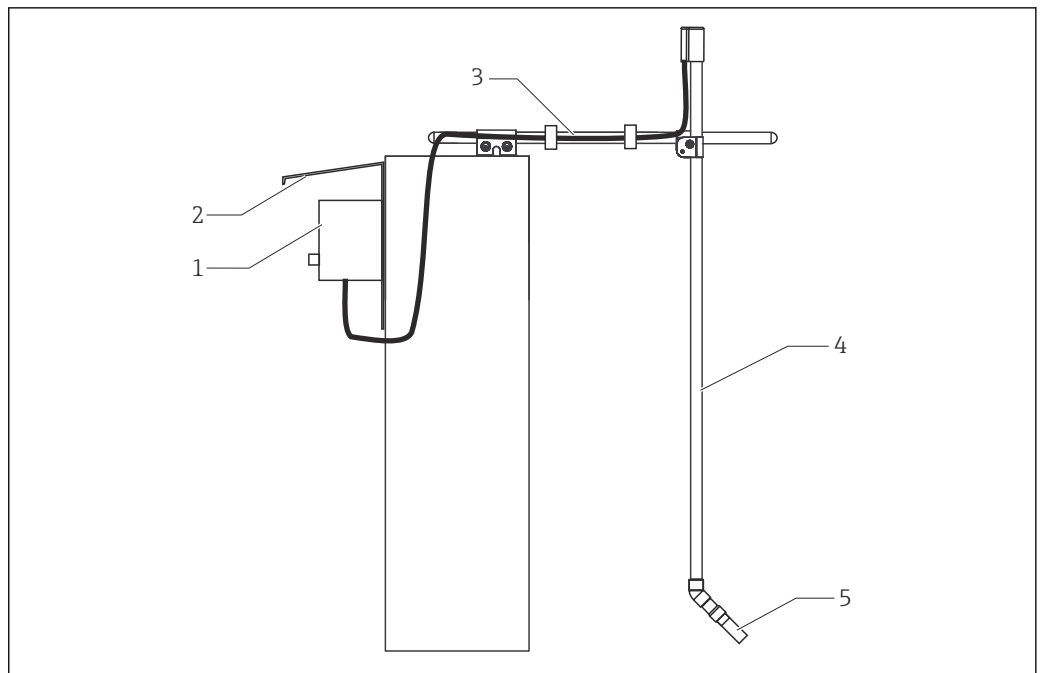

A0030856

11 Measuring system with immersion assembly (example)

- 1 Liquiline CM44x multi-channel transmitter
- 2 Weather protection cover
- 3 Transverse pipe, Flexdip CYH112 holder
- 4 Wastewater assembly Flexdip CYA112
- 5 Turbimax CUS51D turbidity sensor

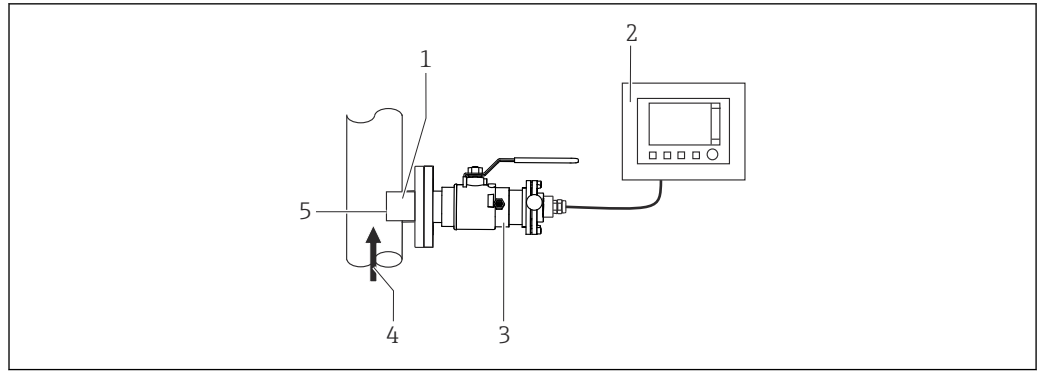


12 Measuring system with retractable assembly (example)

- 1 Turbimax CUS51D turbidity sensor
- 2 Liquiline CM44x multi-channel transmitter
- 3 Cleanfit CUA451 retractable assembly
- 4 Flow direction
- 5 Optical windows

5.2.2 Installation examples

Pipe installation

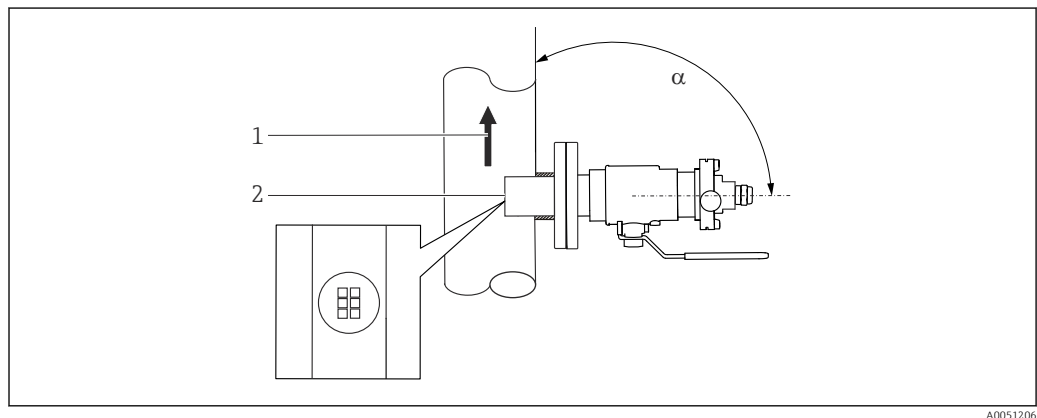


13 Installing with retractable assembly

- 1 Flow direction
- 2 Optical windows

The installation angle α must not exceed $90^\circ \rightarrow$ 13, 18. The recommended installation angle is 75° . The optical windows of the sensor must be aligned along the flow direction.

The medium pressure may not exceed 2 bar (29 psi) for manual assembly retraction.

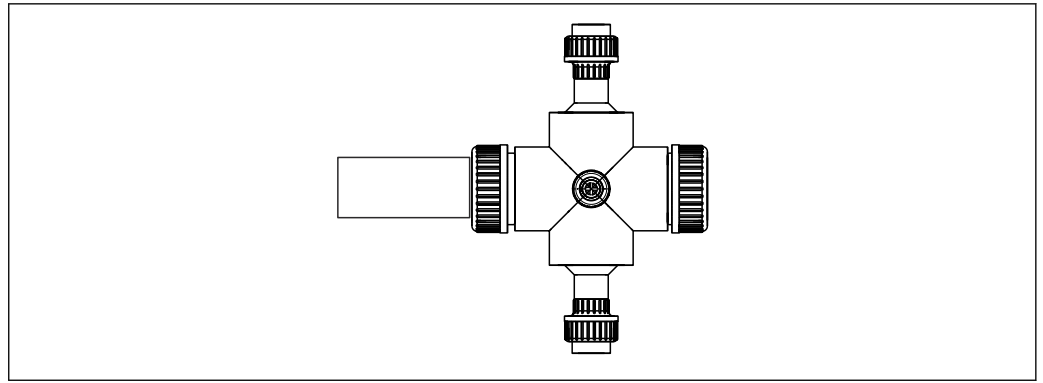


A0035858

14 Installing with CYA251 flow assembly

The installation angle is 90°. For turbidity measurements < 200 FNU, the backscattering of the internal surfaces of the assembly causes distortions in the measured values.


The following diagram shows different installation scenarios in pipes, indicating whether or not they are permitted.

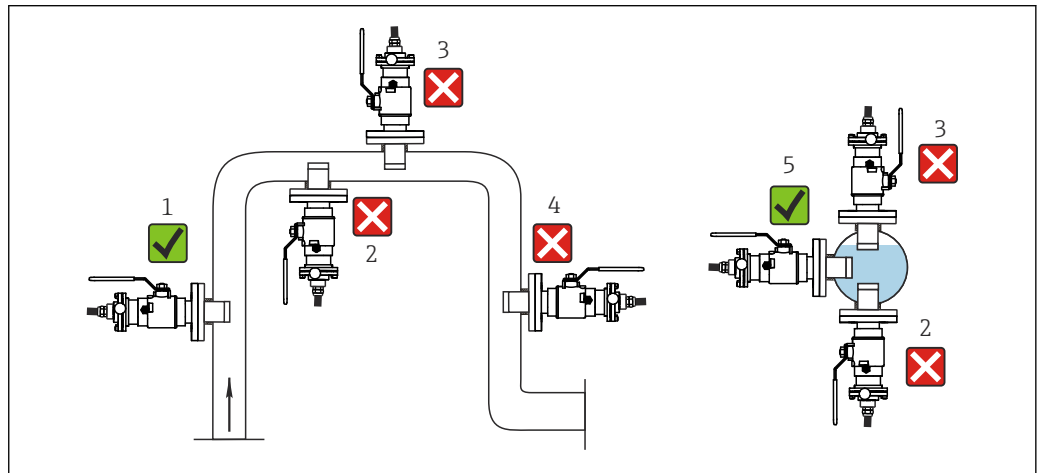

A0030848

15 Orientations and positions (with CUA451 retractable assembly)


- When using reflective materials (e.g. stainless steel), the pipe diameter must be at least 100 mm (3.9 in). An onsite calibration is recommended.
- Install the sensor in places with consistent flow conditions.
- The best installation location is in the ascending pipe (item 1). Installation is also possible in the horizontal pipe (item 5).
- Do not install in places where air spaces or bubbles occur (item 3) or where sedimentation may occur (item 2).
- Avoid installation in the down pipe (item 4).
- When measuring turbidity < 200 FNU, the backscattering of the pipe wall causes distortions in the measured values. For this reason, measured value adjustment with an offset is recommended here.
- Avoid fittings downstream from pressure reduction stages which can lead to outgassing.

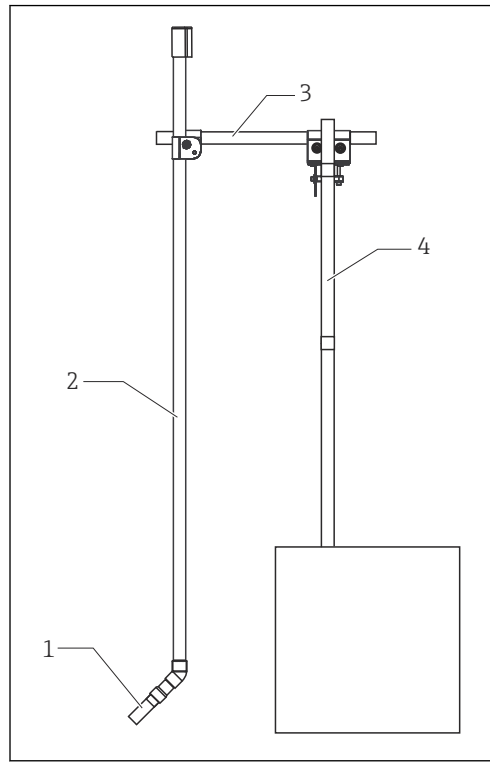Immersion operation*Fixed installation with wastewater assembly*

A0013383

16 Installation on railing

- 1 Turbimax CUS51D turbidity sensor
- 2 Wastewater assembly Flexdip CYA112
- 3 Transverse pipe, Flexdip CYH112 holder
- 4 Main pipe, Flexdip CYH112 holder

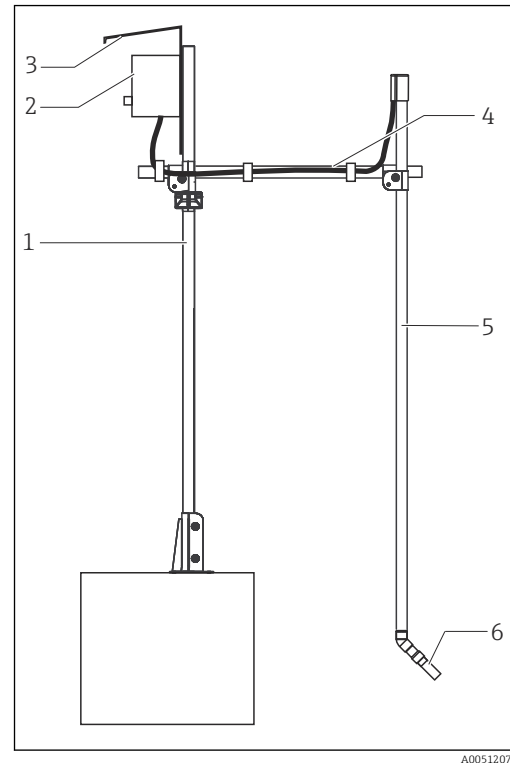


A0051207

17 Installation with upright post

- 1 Main pipe, Flexdip CYH112 holder
- 2 Liquiline CM44x multi-channel transmitter
- 3 Weather protection cover
- 4 Transverse pipe, Flexdip CYH112 holder
- 5 Wastewater assembly Flexdip CYA112
- 6 Turbimax CUS51D turbidity sensor

This type of installation is particularly suitable for strong or turbulent flow ($> 0.5 \text{ m/s}$ (1.6 ft/s)) in basins or channels.


Installation with chain retainer

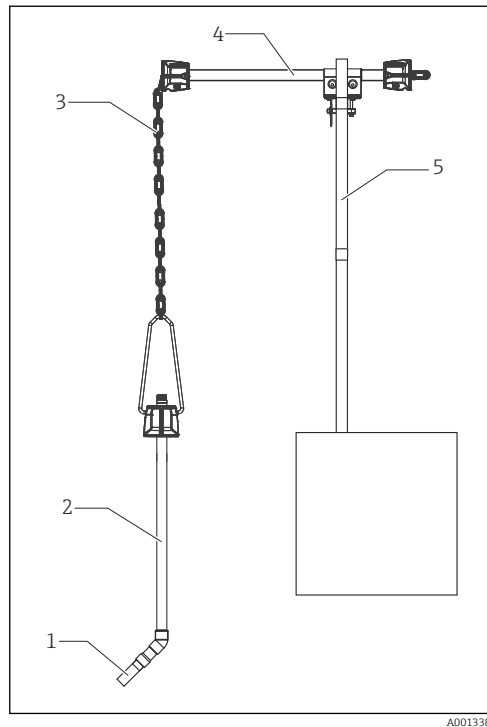

A0013384

18 Chain retainer on railing

- 1 Turbimax CUS51D turbidity sensor
- 2 Wastewater assembly Flexdip CYA112
- 3 Chain of Flexdip CYH112 holder
- 4 Transverse pipe, Flexdip CYH112 holder
- 5 Main pipe, Flexdip CYH112 holder

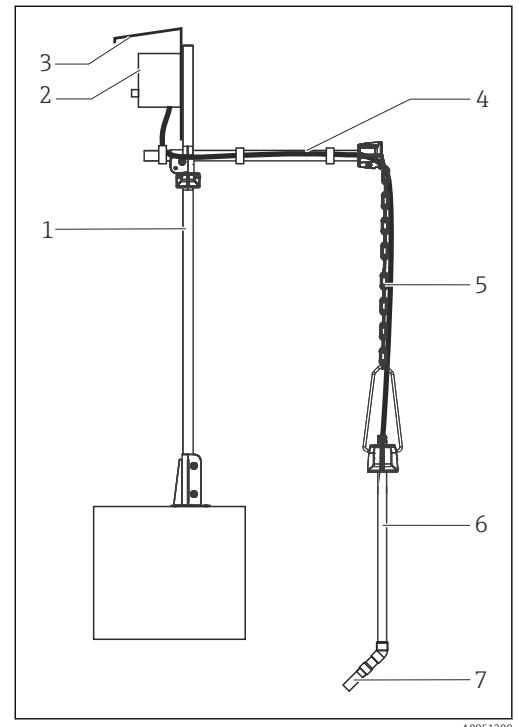

A0051208

19 Chain retainer on upright post


- 1 Main pipe, Flexdip CYH112 holder
- 2 Liquiline CM44x multi-channel transmitter
- 3 Weather protection cover
- 4 Transverse pipe, Flexdip CYH112 holder
- 5 Chain of Flexdip CYH112 holder
- 6 Wastewater assembly Flexdip CYA112
- 7 Turbimax CUS51D turbidity sensor

The chain retainer is particularly suitable for applications that require a sufficient distance between the mounting location and the wall of the aeration basin. As the assembly is freely suspended, any vibration of the upright post is avoided. The swinging of the chain enhances the self-cleaning effect of the optics.



For detailed information on mounting with the wastewater assembly, see the Operating Instructions BA00432C


Mounting the cleaning unit

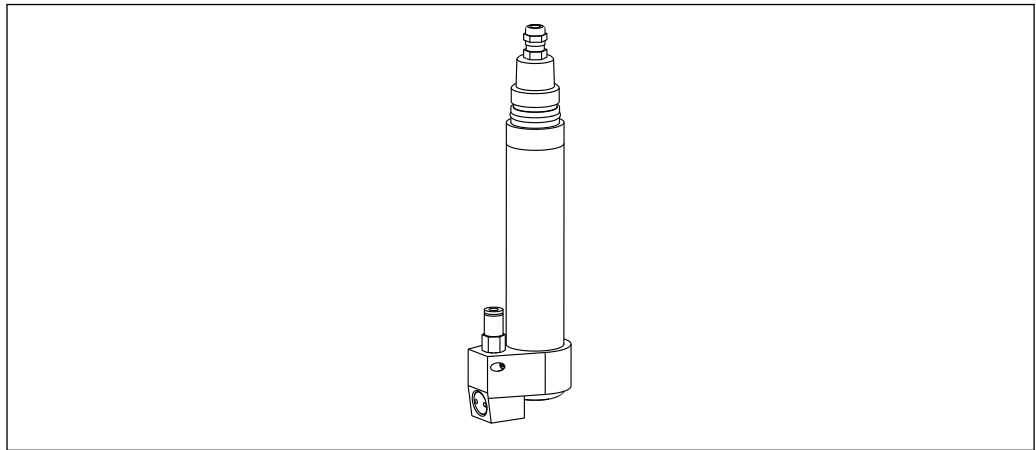

A0031105

20 Turbimax CUS51D sensor with cleaning unit


The cleaning unit is particularly suitable for clear water or media with a high fat content that tend to cause heavy buildup.

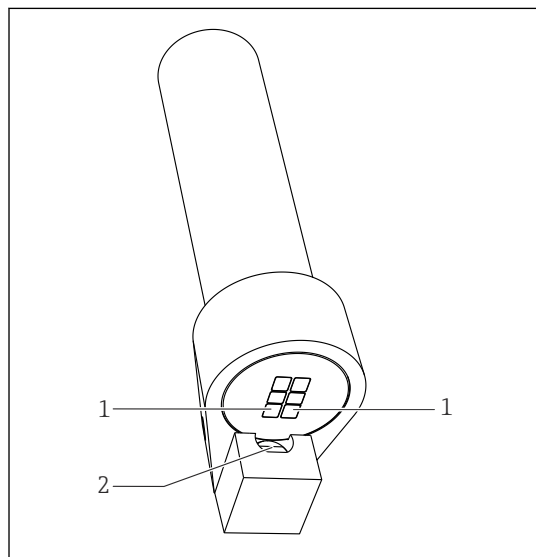

A0030860

21 Aligning the cleaning unit

- 1 LEDs
- 2 Nozzle

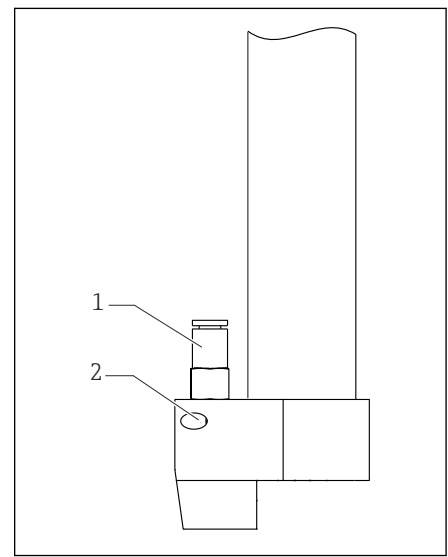

A0030861

22 Fixing the cleaning unit

- 1 Hose connection
- 2 Fixing screw

Mount the cleaning unit as follows:

1. Fit the cleaning unit onto the sensor as far as possible.
2. Locate the two LEDs (they are installed at an angle and have a bright background).
3. Position the cleaning unit in such a way that the nozzle is located at the side of the two LEDs (→ 21).
4. Fix the cleaning unit in place with the securing screw using an Allen key 2.5 mm (0.1 in) (max. torque: 0.5 Nm (0.37 lbf ft)).
5. Insert the compressed air hose of the compressor into the hose connection.

5.3 Post-mounting check

Put the sensor into operation only if the following questions can be answered with "yes":

- Are the sensor and cable undamaged?
- Is the orientation correct?
- Has the sensor been installed in the process connection, and does not suspend freely from the cable?

6 Electrical connection

⚠ WARNING

Device is live!


Incorrect connection may result in injury or death!

- ▶ The electrical connection may be performed only by an electrical technician.
- ▶ The electrical technician must have read and understood these Operating Instructions and must follow the instructions contained therein.
- ▶ **Prior** to commencing connection work, ensure that no voltage is present on any cable.

6.1 Connecting the sensor

The following connection options are available:

- Via M12 plug (version: fixed cable, M12 plug)
- Via sensor cable to the plug-in terminals of a sensor input on the transmitter (version: fixed cable, end sleeves)

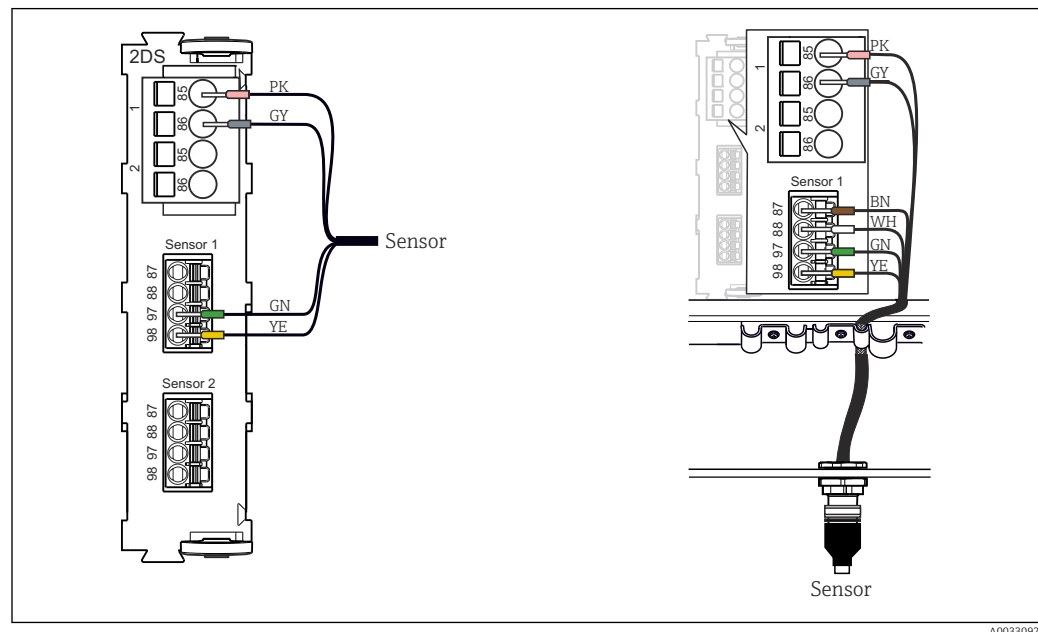

23 Sensor connection to sensor input (left) or via M12 plug (right)

The maximum cable length is 100 m (328.1 ft).


6.1.1 Connecting the cable shield

Device cable must be shielded cables.

- i** Only use terminated original cables where possible.


Clamping range of cable clamps: 4 to 11 mm (0.16 to 0.43 in)

Cable sample (does not necessarily correspond to the original cable supplied)

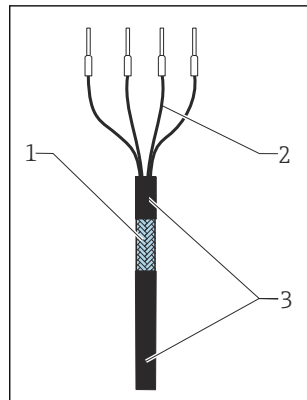


24 Terminated cable

- 1 Outer shield (exposed)
- 2 Cable cores with ferrules
- 3 Cable sheath (insulation)

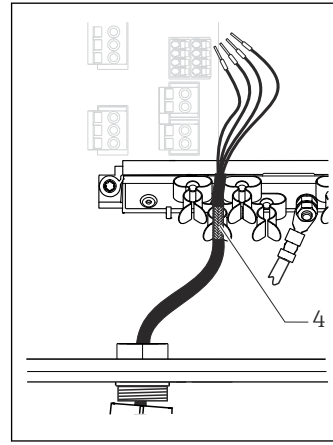

25 Connect the cable to the grounding clamp

- 4 Grounding clamp

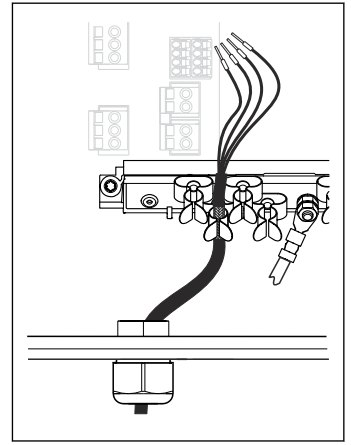

26 Press the cable into the grounding clamp

The cable shield is grounded using the grounding clamp ¹⁾

1) Please note the instructions in the "Ensuring the degree of protection" section

1. Loosen a suitable cable gland on the bottom of the housing.
2. Remove the dummy plug.
3. Attach the gland to the cable end, making sure the gland is facing the right direction.
4. Pull the cable through the gland and into the housing.
5. Route the cable in the housing in such a way that the **exposed** cable shield fits into one of the cable clamps and the cable cores can be easily routed as far as the connection plug on the electronics module.
6. Connect the cable to the cable clamp.
7. Clamp the cable.
8. Connect cable cores as per the wiring diagram.
9. Tighten the cable gland from outside.

6.2 Ensuring the degree of protection

Only the mechanical and electrical connections which are described in these instructions and which are necessary for the required, designated use, may be carried out on the device delivered.

- Exercise care when carrying out the work.

Individual types of protection permitted for this product (impermeability (IP), electrical safety, EMC interference immunity) can no longer be guaranteed if, for example :

- Covers are left off
- Different power units to the ones supplied are used
- Cable glands are not sufficiently tightened (must be tightened with 2 Nm (1.5 lbf ft) for the permitted level of IP protection)
- Unsuitable cable diameters are used for the cable glands
- Modules are not fully secured
- The display is not fully secured (risk of moisture entering due to inadequate sealing)
- Loose or insufficiently tightened cables/cable ends
- Conductive cable strands are left in the device

6.3 Post-connection check

Device health and specifications	Action
Is the outside of the sensor, assembly or cable free from damage?	► Perform a visual inspection.
Electrical connection	Action
Are the mounted cables strain-relieved and not twisted?	► Perform a visual inspection. ► Untwist the cables.
Is a sufficient length of the cable cores stripped, and are the cores positioned in the terminal correctly?	► Perform a visual inspection. ► Pull gently to check they are seated correctly.
Are the power supply and signal lines connected correctly?	► Use the transmitter wiring diagram.
Are all screw terminals tightened?	► Tighten the screw terminals.
Are all cable entries mounted, firmly tightened and leak-tight?	► Perform a visual inspection.
Are all cable entries mounted on the side or pointing downwards?	In the case of lateral cable entries: ► Point cable loops downward so that water can drip off.

7 Commissioning

7.1 Function check

Prior to initial commissioning, ensure that:

- The sensor is correctly installed
- The electrical connection is correct

8 Operation


8.1 Adapting the measuring device to the process conditions

8.1.1 Applications

The sensor permits measurements in a wide variety of applications. The measuring method is set automatically by selecting the relevant application.

Clear water application type

Application	Method	Measuring range
Formazine	135° - single-channel measurement	0 to 4000 FNU Display range up to 9999 FNU
Kaolin	135° - single-channel measurement	0 to 5 g/l
TiO ₂	135°, 4-beam pulsed light	0.2 to 150 g/l
SiO ₂	135°, 4-beam pulsed light	5 to 100 g/l

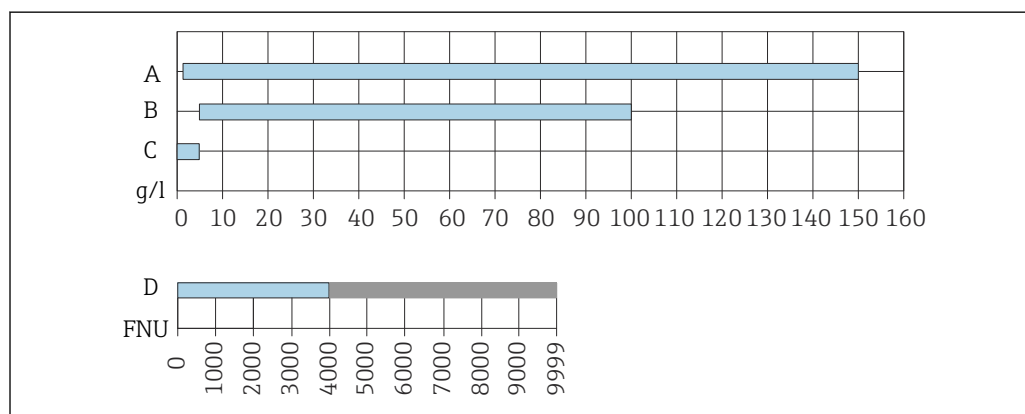


A0050651

27 Clear water application type

- A TiO₂
- B SiO₂
- C Kaolin
- D Formazine

Solid application type

Application	Method	Measuring range
Thin sludge	135° turbidity, single-channel	0 to 5 g/l
Activated sludge	90°, 4-beam pulsed light	2 to 15 g/l
Excess sludge	135°, 4-beam pulsed light	3 to 50 g/l
Sludge, general	135°, single-channel (for low TS content)	0 to 50 g/l
	135°, 4-beam pulsed light (for high TS content)	
Digested sludge	135° turbidity, single-channel	5 to 100 g/l / 300 g/l

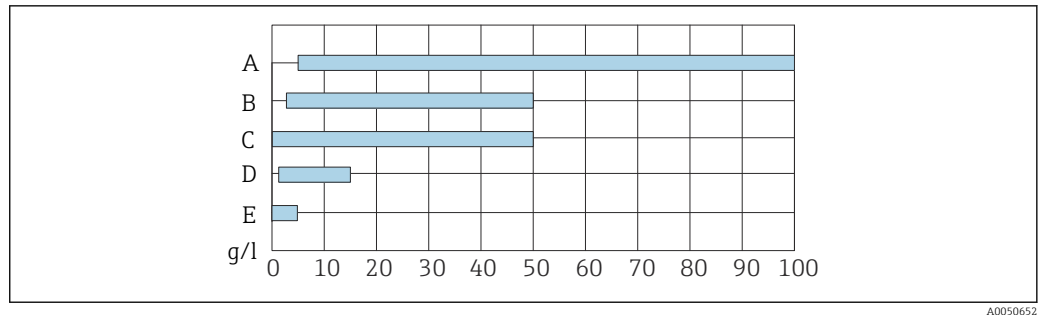

28 Solid application type

- A Digested sludge
- B Excess sludge
- C **Sludge, general** (mainly for SBR applications)
- D **Activated sludge** (only for TS ranges > 2 g/l)
- E Thin sludge

The **Thin sludge** application enables measurements in any sludge applications from 0 to 5 g/l (0 to 0.04 lb/gal). Measurements in numerous sludge applications from 0 to 50 g/l (0 to 0.4 lb/ga) (e.g. SBR) are possible with the **Sludge, general** application. These applications can be calibrated at a single point in the process during operation.

i Fields of use and associated applications → 29

NOTICE

Multiple scattering in the following applications: formazine, kaolin and thin sludge

If the specific operational range is exceeded, the measured value displayed by the sensor can decrease despite increasing turbidity or increasing TS content. The indicated operational range is reduced in the case of highly absorbing (e.g. dark) media.

- In the case of highly absorbing (e.g. dark) media, determine the operational range experimentally beforehand.

8.1.2 Calibration

The sensor is precalibrated on leaving the factory. As such, it can be used in a wide range of applications (e.g. clear water measurement) without any further calibration. The factory calibrations are based on a three-point calibration in each case. The **Formazine** application is already fully calibrated and can be used without any further calibration.

All other applications are precalibrated with reference samples and require calibration to the corresponding application.

In addition to the factory calibration data, which cannot be modified, the sensor has five other data records to be used for storing process calibrations.

Application selection

- During initial commissioning or calibration at the transmitter, select the appropriate application for your field of application and measuring range.

Application: Wastewater

Field of application	Range	Application	Recommended type of calibration
Inlet	< 5 g/l	Thin sludge [mg/l, g/l] Formazine [FNU, NTU]	Single-point (in the process)
	> 5 g/l	Excess sludge [g/l, %TS]	Two-point (outside the process)

Field of application	Range	Application	Recommended type of calibration
Primary sludge extraction, primary clarification	3 to approx. 50 g/l	Excess sludge [g/l, %TS]	Two-point (outside the process)
	> approx. 50 g/l	Digested sludge [g/l, %TS]	Two-point (outside the process)
Aeration basin	0 to 5 g/l	Thin sludge [mg/l, g/l]	Single-point (in the process)
	2 to 15 g/l	Activated sludge [mg/l, g/l] Excess sludge [g/l, %Ts]	Two-point (outside the process)
Sequencing batch reactors	0 to approx. 50 g/l	Sludge, general [mg/l, g/l, %TS] For applications with wide dynamic range, from clear water to high solids content	Single-point (in the process)
Recirculation pipe	3 to approx. 50 g/l	Excess sludge [g/l, %TS]	Two-point (outside the process)
Waste activated sludge extraction	3 to approx. 50 g/l	Excess sludge [g/l, %TS]	Two-point (outside the process)
	> approx. 50 g/l	Digested sludge [g/l, %TS]	Two-point (outside the process)
Sludge thickener (primary sludge)	3 to approx. 50 g/l	Excess sludge [g/l, %TS]	Two-point (outside the process)
	> approx. 50 g/l	Digested sludge [g/l, %TS]	Two-point (outside the process)
Digester inlet	3 to approx. 50 g/l	Excess sludge [g/l, %TS]	Two-point (outside the process)
	> approx. 50 g/l	Digested sludge [g/l, %TS]	Two-point (outside the process)
Digester outlet (sludge)	> 5 g/l	Digested sludge [g/l, %TS]	Two-point (outside the process)
	3 to maximum 50 g/l	Excess sludge [g/l, %TS]	Two-point (outside the process)
WWTP outlet	0 to 5 g/l	Formazine [FNU, NTU], Thin sludge [mg/l, g/l] Kaolin [mg/l, g/l]	Single-point (in the process)
Sand filter monitoring	0 to 5 g/l	Formazine [FNU, NTU], Thin sludge [mg/l, g/l]	Single-point (in the process)

Preferred applications are highlighted in bold.

Application: process water


Field of application	Range	Application	Recommended type of calibration
Silicon dioxide process water	0 to 5 g/l	Formazine [FNU, NTU], Thin sludge [mg/l, g/l], Kaolin [mg/l, g/l]	Single-point (in the process)
Silicon dioxide process sludges	5 to 100 g/l	SiO₂ [ppm, g/l]	Two-point (outside the process)
Titanium dioxide process water	0 to 1 g/l	Formazine [FNU, NTU], Thin sludge (mg/l, g/l), Kaolin [mg/l, g/l]	Single-point (in the process)

Field of application	Range	Application	Recommended type of calibration
Titanium dioxide process sludges	1 to 150 g/l	TiO₂ [ppm, g/l]	Two-point (outside the process)
Kaolin process water/ process water sludges	0 to 5 g/l	Kaolin [mg/l, g/l]	Single-point (in the process)

Preferred applications are highlighted in bold.

Type of calibration (number of calibration points)

One-point calibration

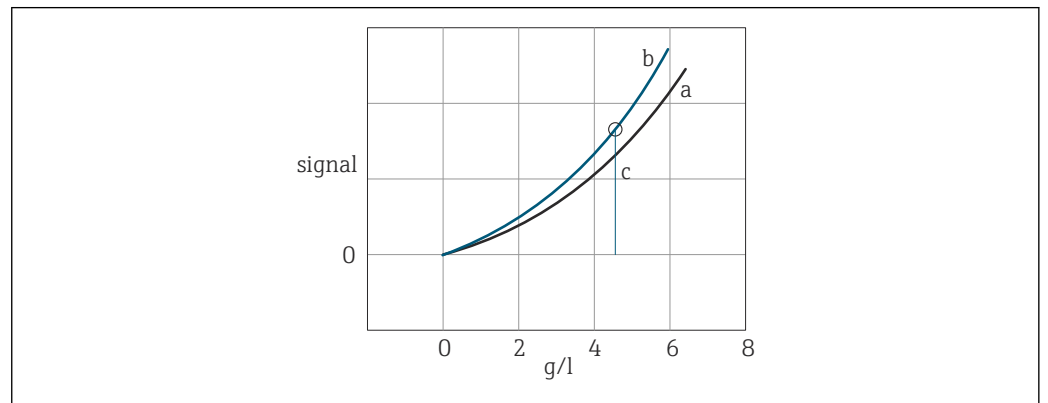


A0050659

29 Single-point calibration

- a* Factory calibration curve
- b* New calibration curve
- c* Calibration point

A single-point calibration causes a change in the slope of the factory calibration curve programmed into the device.

Two-point calibration

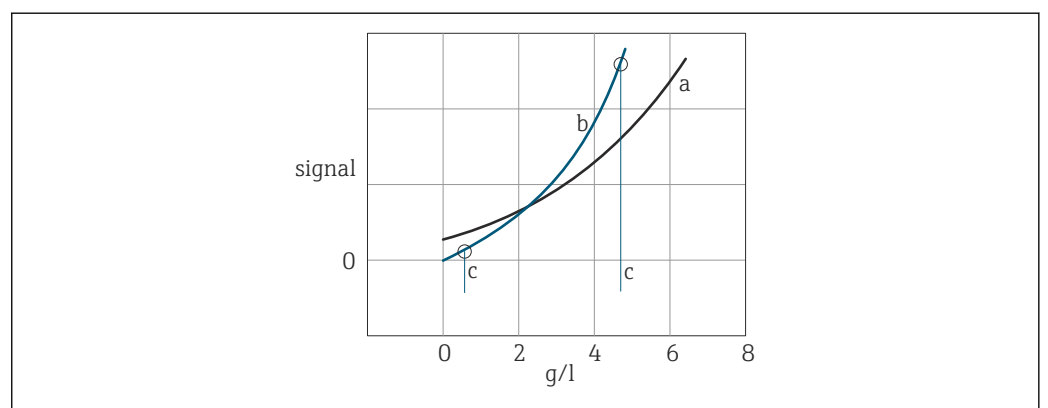

A0050661

30 Two-point calibration


- a* Factory calibration curve
- b* New calibration curve
- c* Calibration points

A two-point calibration causes a change in the slope and zero point of the factory calibration curve programmed into the device. This type of calibration is recommended as

the standard method as it produces robust calibration curves and good measurement results with minimum calibration effort.

1. Select the two calibration points at the limits of the expected measuring range.
2. Do not select any calibration points outside the specified measuring range for the application.

Three-point calibration

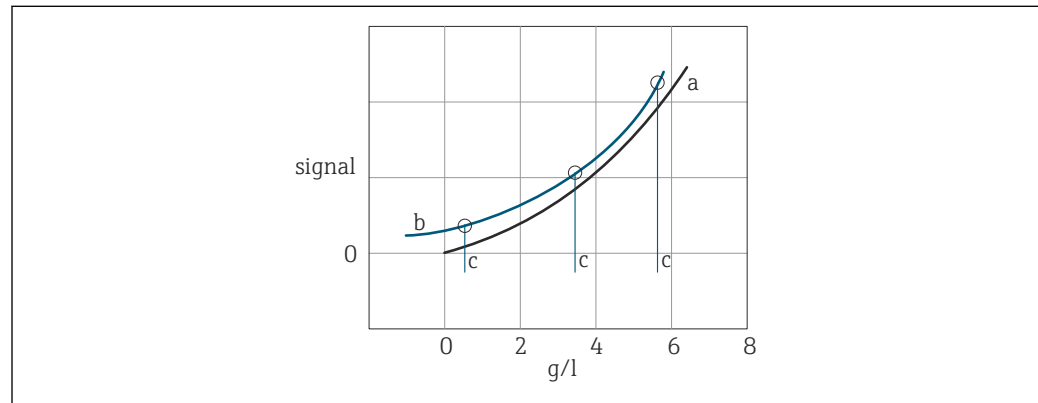

31 Three-point calibration


- a Factory calibration curve
- b New calibration curve
- c Calibration points

With a three-point calibration, a new calibration curve is plotted through all 3 calibration points, resulting in a high level of accuracy in the calibrated range.

1. Within the measuring range, select calibration points that are as far apart as possible.
2. Do not select any calibration points outside the specified measuring range for the application.

i If the calibration points selected are inappropriate, the curve profile will be distorted to an extent that could result in implausible measured values.

Five-point calibration

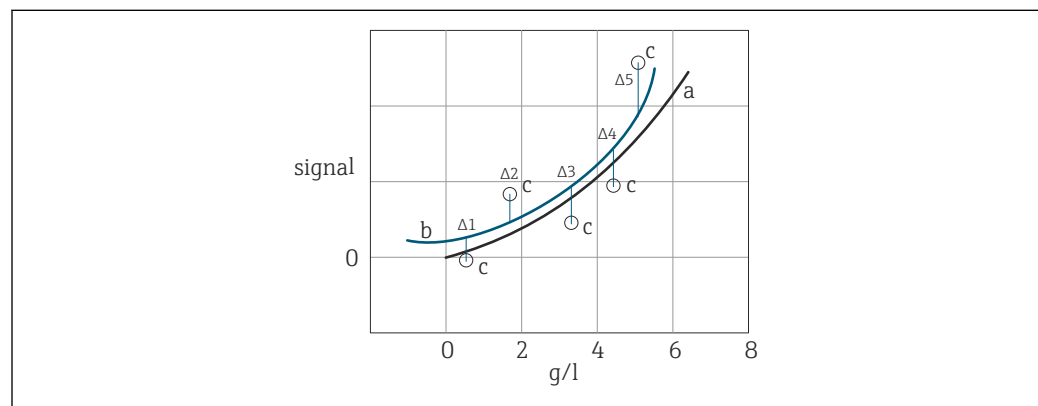


32 Five-point calibration

- a Factory calibration curve
- b New calibration curve
- c Calibration points

With a four- or five-point calibration, the calibration curve is plotted between the calibration points. Avoid this type of calibration if possible, as it does not significantly improve accuracy.

Explanation on the type of calibration

Single-point and two-point calibrations are based on the factory data record stored internally in the device. In the case of a calibration at 3 points or more, the original factory calibration curve is always rejected and a completely new calibration curve is calculated.

 For multipoint calibrations, the calibration points should always cover the complete measuring range of the application.

A calibration with zero water (0 g/l) will result in unusable calibrations for the following applications:

- Activated sludge
- Excess sludge
- Digested sludge
- SiO₂
- TiO₂

Procedure for one-point calibration

With 1-point calibration, the sensor can remain immersed in the process medium.

1. For the laboratory measurement, take a sample of the medium in the direct vicinity of the sensor.
2. Give the sample to the laboratory so that the turbidity or solids content can be determined.
3. Select a data record on the CM44x transmitter.
4. If possible, start the calibration at the same time as the sampling procedure and enter the laboratory value of the sample as the set point.
5. Enter an approximate value as the set point if no laboratory value is available during calibration.
 - ↳ As soon as the laboratory value is available, amend the set point on the transmitter.

Procedure for multipoint calibration

CAUTION


Acid or medium

Risk of injury, damage to clothing and the system!

- ▶ Switch off the cleaning unit before removing the sensor from the medium.
- ▶ Wear protective goggles and safety gloves.
- ▶ Clean away splashes on clothes and other objects.


Sample preparation of the calibration solutions:

In the case of multipoint calibrations, the calibration takes place outside the process. For this, a sample is taken from the process and prepared accordingly.

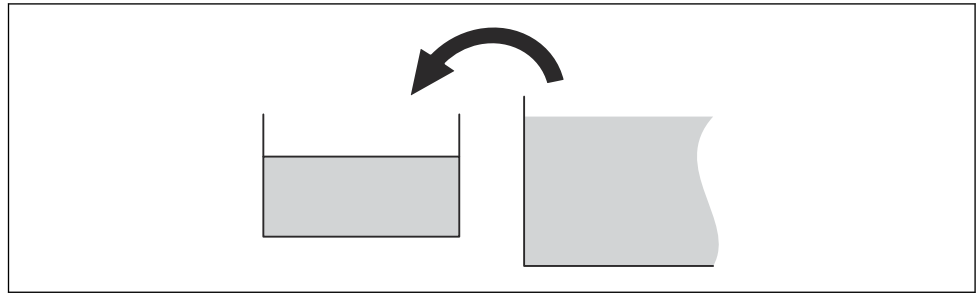1.


A0020482

Take a sample from the process (e.g. 10 l (2.6 gal) bucket).

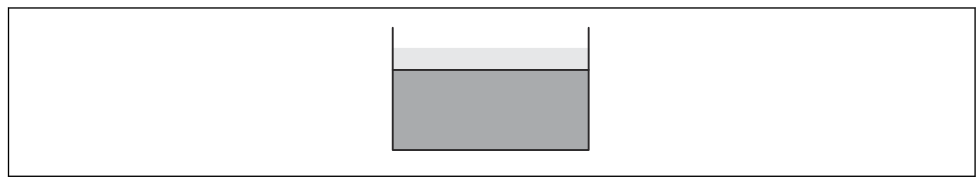2.

A0035855

Wait until the sludge components have settled.

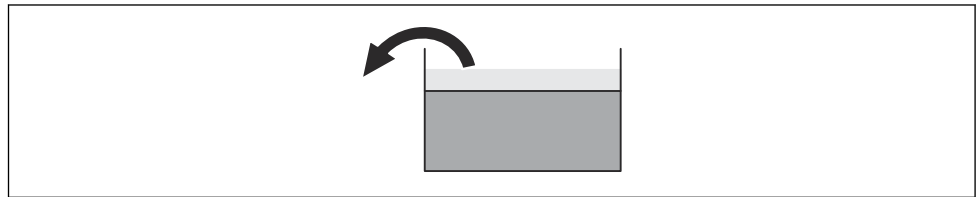
3.

A0035856

Siphon off the excess water (if possible) in order to increase the concentration of the sample.


4.

Stir the sample to make it more homogeneous.

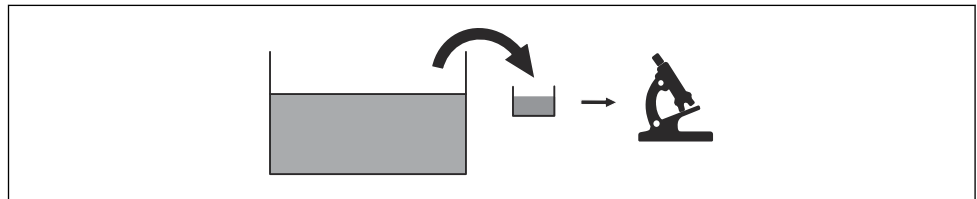5.

A0020485

Remove a portion of the sample for laboratory analysis.

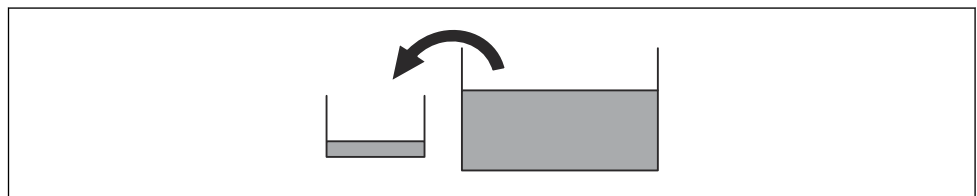6.


A0020486

Transfer a defined amount of the sample (e.g. 2 l (0.5 gal)) to the calibration vessel (bucket).

7.

Continue stirring the sample to maintain homogeneity.

Calibration of the sensor

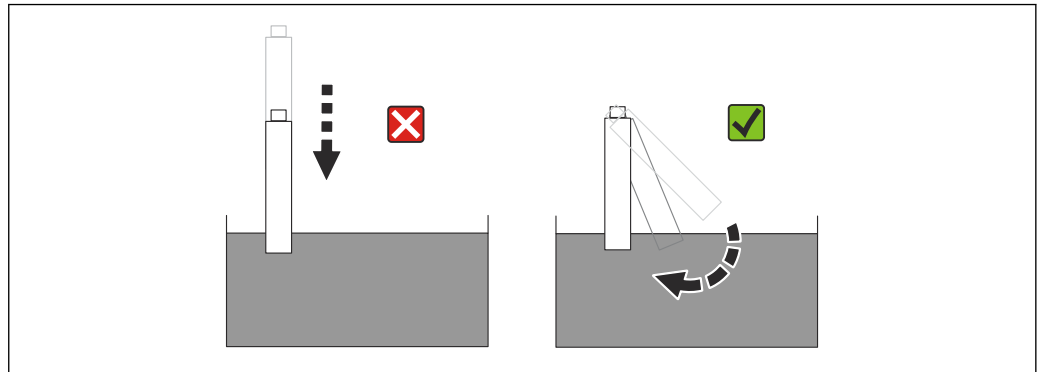


33 Immersing the sensor

Preparing the sensor for calibration:

1. Clean the optical components (windows) of the sensor with water and a brush or sponge.
2. Place the sensor into the calibration vessel.
3. The sensor must be placed in the sample at an angle, not vertically. → 33, 35
 ↳ This prevents air bubbles from adhering to the windows.

Observe the following:

- Sensor LEDs are directed at the center of the calibration vessel.
 - The minimum distance of the sensor to the vessel wall is 10 mm (0.4 in).
 - The distance to the vessel floor is as large as possible. The sensor must be immersed in at least 10 mm (0.4 in) of the medium, however.
- Secure the sensor in this position (ideally using a laboratory stand).

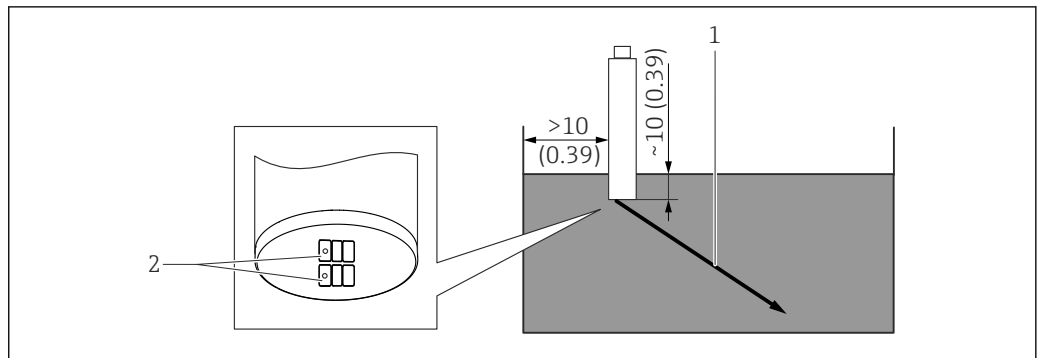

34 Positioning the sensor. Dimensions: mm (in)

- 1 Beam direction of LEDs
 2 LEDs

Note the following during calibration:


- The calibration points should cover the complete measuring range.
- During calibration, ensure that the medium is well homogenized (use a magnetic stirrer).
- Determine the laboratory measured values with utmost care (the quality of the laboratory measurement has a direct influence on the accuracy of the sensor).
- Apply maximum precision when dosing volumes for the sample and the dilution water (use a graduated cylinder).
- Air bubbles on optical components significantly interfere with the calibration result. For this reason, remove air bubbles before every calibration action.

- Make sure the medium is always well mixed (homogeneity).
- Avoid temperature changes during the calibration.
Ensure that the temperatures of the dilution water and the medium are as identical as possible.
- Do not alter the position of the sensor during calibration.
- It is also possible to edit the calibration set points in the CM44x at a later stage (e.g. if the reference value of the laboratory measurement is not yet known at the time of calibration).

Performing a calibration:

Using the example of a two-point calibration in the expected measuring range 2 to 6 g/l.


1. At the CM44x transmitter, select a free data record and the suitable application.
2. Wait at least 1 minute (to stabilize).
- 3.

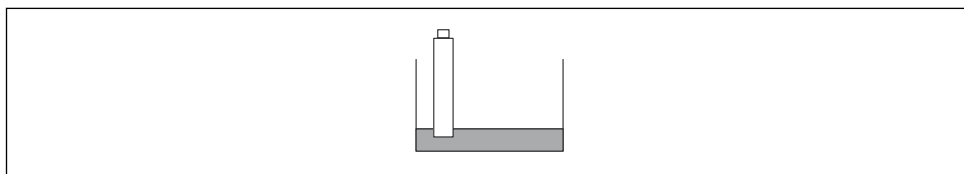

A0020489


Start the calibration for measuring point 1 (e.g. 2 l (0.5 gal)). Sample with a concentration of 6 g/l (0.05 lb/gal).

4. Enter the value of the sample determined in the laboratory as the set point (e.g. 6 g/l (0.05 lb/gal)) or edit the value later.
- 5.

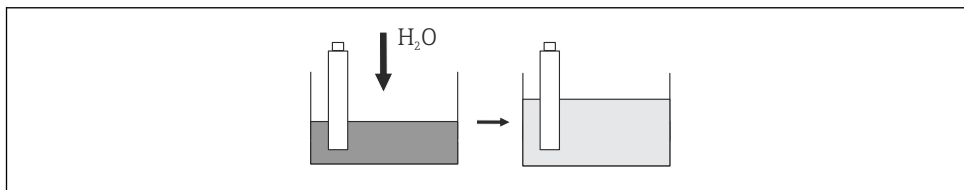

A0030902

Perform a 1:3 dilution of the sample. Add water (4 l (1.1 gal)); in the example this results in 2 g/l (0.02 lb/gal).

6. Avoid air bubbles beneath the sensor.
 7. Calibrate measuring point 2. Enter a third of the laboratory value as the set point.
-  The calibration can also be performed in increasing concentrations (less advisable).

Stability criterion

During calibration, the measured values provided by the sensor are checked to ensure they are constant. The maximum deviations that may occur in measured values during a calibration are defined in the stability criterion.

The specifications comprise the following:

- The maximum permitted deviation in temperature measurement
- The maximum permitted deviation in measured value as a %
- The minimum time frame in which these values must be maintained

The calibration resumes as soon as the stability criteria for signal values and temperature have been reached. If these criteria are not met in the maximum time frame of 5 minutes, no calibration is performed - a warning is issued.

The stability criteria are used to monitor the quality of the individual calibration points in the course of the calibration process. The aim is to achieve the highest possible calibration quality in the shortest possible time frame while taking external conditions into account.



For calibrations in the field in adverse weather and environmental conditions, the measured value windows selected can be suitably large and the time frame selected can be suitably short.

8.1.3 Cyclic cleaning

For cyclic cleaning, compressed air is the most suitable option. The cleaning unit is either supplied or can be retrofitted, and is attached to the sensor head. The following settings are recommended for the cleaning unit:

Type of fouling	Cleaning interval	Cleaning duration
Severe fouling with rapid buildup of deposits	5 minutes	10 seconds
Low degree of fouling	10 minutes	10 seconds

8.1.4 Signal filter

The sensor is fitted with an internal signal filter function in order to adapt the measurement flexibly to different measuring requirements. Turbidity measurements based on the principle of scattered light may have a low signal-to-noise ratio. In addition, there may be disturbances from air bubbles or contamination for example.

However, a high level of damping affects the sensitivity of the measured value required in applications.

Measured value filter

The following filter settings are available:

Measured value filter	Description
Weak	Low filtering, high sensitivity, fast response to changes (2 seconds)
Normal (default)	Medium filtering, 10-second response time
Strong	Strong filtering, low sensitivity, slow response to changes (25 seconds)
Specialist	This menu is designed for the Endress+Hauser Service Department.

9 Diagnostics and troubleshooting

9.1 General troubleshooting

When troubleshooting, the entire measuring point must be taken into account:

- Transmitter
- Electrical connections and cables
- Assembly
- Sensor

The possible causes of error in the following table refer primarily to the sensor.

Problem	Check	Remedial action
Blank display, no sensor reaction	<ul style="list-style-type: none"> ■ Line voltage at transmitter? ■ Sensor connected correctly? ■ Buildup on optical windows? 	<ul style="list-style-type: none"> ▶ Connect mains voltage. ▶ Establish correct connection. ▶ Clean sensor.
Display value too high or too low	<ul style="list-style-type: none"> ■ Buildup on optical windows? ■ Sensor calibrated? 	<ul style="list-style-type: none"> ▶ Clean device. ▶ Calibrate device.
Display value fluctuating greatly	Is the mounting location correct?	<ul style="list-style-type: none"> ▶ Select a different mounting location. ▶ Adjust measured value filter.



Pay attention to the troubleshooting information in the Operating Instructions for the transmitter. Check the transmitter if necessary.

10 Maintenance

CAUTION

Acid or medium

Risk of injury, damage to clothing and the system!

- ▶ Switch off cleaning before the sensor is removed from the medium.
- ▶ Wear protective goggles and safety gloves.
- ▶ Clean away splashes on clothes and other objects.

- ▶ You must perform maintenance tasks at regular intervals.

We recommend setting the maintenance times in advance in an operations journal or log.

The maintenance cycle primarily depends on the following:

- The system
- The installation conditions
- The medium in which measurement takes place

10.1 Maintenance tasks

NOTICE

Disassembly at sensor head

Sensor can leak!

- ▶ Turn by the shaft only.
- ▶ Never turn by the sensor head!

10.1.1 Cleaning the sensor

Sensor fouling can affect the measurement results and even cause a malfunction.

- ▶ To ensure reliable measurements, clean the sensor at regular intervals. The frequency and intensity of the cleaning depend on the medium.

Clean the sensor:

- As specified in the maintenance schedule
- Before every calibration
- Before returning it for repairs

Type of fouling	Cleaning measure
Lime deposits	▶ Immerse the sensor in 1 to 5% hydrochloric acid (for several minutes).
Dirt particles on the optics	▶ Clean the optics with a cleaning cloth.

After cleaning:

- ▶ Rinse the sensor thoroughly with water.

11 Repair

11.1 General notes

- Only use spare parts from Endress + Hauser to guarantee the safe and stable functioning of the device.

Detailed information on the spare parts is available at:

www.endress.com/device-viewer

11.2 Spare parts

For more detailed information on spare parts kits, please refer to the "Spare Part Finding Tool" on the Internet:

www.products.endress.com/spareparts_consumables

11.3 Return

The product must be returned if repairs or a factory calibration are required, or if the wrong product was ordered or delivered. As an ISO-certified company and also due to legal regulations, Endress+Hauser is obliged to follow certain procedures when handling any returned products that have been in contact with medium.

To ensure the swift, safe and professional return of the device:

- Refer to the website www.endress.com/support/return-material for information on the procedure and conditions for returning devices.

11.4 Disposal

The device contains electronic components. The product must be disposed of as electronic waste.

- Observe the local regulations.



If required by the Directive 2012/19/EU on waste electrical and electronic equipment (WEEE), the product is marked with the depicted symbol in order to minimize the disposal of WEEE as unsorted municipal waste. Do not dispose of products bearing this marking as unsorted municipal waste. Instead, return them to the manufacturer for disposal under the applicable conditions.

12 Accessories

The following are the most important accessories available at the time this documentation was issued.

Listed accessories are technically compatible with the product in the instructions.

1. Application-specific restrictions of the product combination are possible.
Ensure conformity of the measuring point to the application. This is the responsibility of the operator of the measuring point.
2. Pay attention to the information in the instructions for all products, particularly the technical data.
3. For accessories not listed here, please contact your Service or Sales Center.

12.1 Device-specific accessories

12.1.1 Assemblies

FlowFit CUA120

- Flange adapter for mounting turbidity sensors
- Product Configurator on the product page: www.endress.com/cua120



Technical Information TI096C

Flexdip CYA112

- Immersion assembly for water and wastewater
- Modular assembly system for sensors in open basins, channels and tanks
- Material: PVC or stainless steel
- Product Configurator on the product page: www.endress.com/cya112



Technical Information TI00432C

Cleanfit CUA451

- Manual retractable assembly made of stainless steel with ball valve shut-off for turbidity sensors
- Product Configurator on the product page: www.endress.com/cua451



Technical Information TI00369C

Flowfit CYA251

- Connection: See product structure
- Material: PVC-U
- Product Configurator on the product page: www.endress.com/cya251



Technical Information TI00495C

12.1.2 Cable

Memosens data cable CYK11

- Extension cable for digital sensors with Memosens protocol
- Product Configurator on the product page: www.endress.com/cyk11



Technical Information TI00118C

12.1.3 Holder

Flexdip CYH112

- Modular holder system for sensors and assemblies in open basins, channels and tanks
- For Flexdip CYA112 water and wastewater assemblies
- Can be affixed anywhere: on the ground, on the coping stone, on the wall or directly onto railings.
- Stainless steel version
- Product Configurator on the product page: www.endress.com/cyh112



Technical Information TI00430C

12.1.4 Compressed air cleaning

Compressed air cleaning for CUS51D

- Connection: 6 mm (0.24 in) or 8 mm (0.31 in) (metric) or 6.35 mm (0.25 in)
- Materials: POM/V4A
- Consumption: 50 l/min (13.2 gal/min)
- 6 mm (0.24 in) or 8 mm (0.31 in) order number: 71110782
- 6.35 mm (0.25 in) Order number: 71110783

Compressor

- For compressed air cleaning
- 230 V AC, order number: 71072583
- 115 V AC, order number: 71194623

12.1.5 Cable

Memosens data cable CYK11

- Extension cable for digital sensors with Memosens protocol
- Product Configurator on the product page: www.endress.com/cyk11



Technical Information TI00118C

13 Technical data

13.1 Input

Measured variable	<ul style="list-style-type: none"> ■ Turbidity ■ Solids content ■ Temperature
-------------------	--

Measuring range	CUS51D-**C1		Application
	Turbidity	0.000 to 4000 FNU Display range up to 9999 FNU	Formazine
	Solids content	0 to 5 g/l	Kaolin Filterable matter
	Temperature	–20 to 80 °C (–4 to 176 °F)	

	CUS51D-**D1		Application
	Turbidity	0.000 to 4000 FNU Display range up to 9999 FNU	Formazine
	Solids content	0 to 300 g/l (0 to 2.5 lb/gal) 0 to 30 %	Solids content depending on the selected application (see list)
	Temperature	–20 to 80 °C (–4 to 176 °F)	



Measuring range with solids content:

For solids, the achievable ranges depend very much on the media that are actually present and may differ from the recommended operating ranges. Extremely inhomogeneous media may cause fluctuations in measured values, thus narrowing the measuring range.


13.2 Energy supply


Power consumption	24V DC (–15 %/+ 20 %), 1.8 watt
-------------------	---------------------------------

13.3 Performance characteristics

Reference operating conditions	20 °C (68 °F), 1013 hPa (15 psi)
--------------------------------	----------------------------------

Maximum measured error	Turbidity	< 2 % of measured value or 0.1 FNU (the greater value applies in each case).
	Solids	< 5 % of the measured value or 1 % of the upper range value (the greater value applies in each case); applies to sensors that are calibrated for the observed measuring range.

 The measurement error encompasses all inaccuracies of the measuring chain (sensor and transmitter). However, it does not include the inaccuracy of the reference material used for calibration.

 For solids, the achievable measurement errors depend very much on the media that are actually present and may differ from the specified values. Extremely inhomogeneous media cause the measured value to fluctuate and increase the measurement error.

Repeatability	< 0.2 % of reading
---------------	--------------------

Factory calibration	FNU and NTU in accordance with application table Standard: 3 points
---------------------	--

Drift	Working on the basis of electronic controls, the sensor is largely free of drifts.
-------	--

Detection limits	Application	Measuring range	Limit of detection
	Formazine	0 to 50 FNU	0.006 FNU
		0 to 4000 FNU	0.4 FNU
	Kaolin	0 to 5000 mg/l	0.85 mg/l

13.4 Environment



Ambient temperature range	–20 to 60 °C (–4 to 140 °F)
---------------------------	-----------------------------

Storage temperature	–20 to 70 °C (–4 to 158 °F)
---------------------	-----------------------------

Relative humidity	Humidity 0 to 100 %
-------------------	---------------------

Operating height	3 000 m (9 842.5 ft) maximum
------------------	------------------------------

Fouling	Degree of fouling 2 (micro environment)
---------	---

Ambient conditions	<ul style="list-style-type: none"> ■ For use in indoor and outdoor areas ■ For use in wet environments
	 For continuous operation underwater →  16

Degree of protection	<ul style="list-style-type: none"> ■ IP 68 (1.83 m (6 ft) water column over 24 hours) ■ IP 66 ■ Type 6P
----------------------	--

Electromagnetic compatibility (EMC)	Interference emission and interference immunity according to: <ul style="list-style-type: none"> ■ EN 61326-1:2013 ■ EN 61326-2-3:2013 ■ NAMUR NE21: 2012
-------------------------------------	--


13.5 Process

Process temperature range	-5 to 50 °C (23 to 122 °F) Up to 80 °C (176 °F) for a short period of time (1 h)
---------------------------	---

Process pressure range	0.5 to 10 bar (7.3 to 145 psi) (abs.)
------------------------	---------------------------------------

Compressed air cleaning

Pressure: 1.5 to 2 bar (21.8 to 29 psi)

Minimum flow	No minimum flow required.  For solids which have a tendency to form deposits, ensure that sufficient mixing is performed.
--------------	---

13.6 Mechanical construction

Dimensions	→ Section "Installation"
------------	--------------------------

Weight	Approx. 0.7 kg (1.5 lb) without cable
--------	---------------------------------------

Materials	Sensor	Stainless steel 1.4404 (AISI 316 L)
		Stainless steel 1.4571 (AISI 316 Ti)
	Optical windows	Sapphire
	O-rings	EPDM

Process connections	G1 and NPT ¾"
	Compressed air cleaning
	6 mm (0.24 in) or 8 mm (0.31 in) or 6.35 mm (0.25 in) (¼")

Index

0 ... 9	
4-beam pulsed light method	10
90° scattered light method	11
135° backscattered light method	11
A	
Accessories	41
Applications	29
C	
Calibration	29
Certificates, approvals	14
Cleaning	37, 39
Cyclic cleaning	37
D	
Diagnostics	38
Dimensions	15
Disposal	40
E	
Electrical connection	24
Energy supply	43
Environment	44
F	
Function check	27
I	
Immersion operation	20
Incoming acceptance	13
Input	43
Installation	16
Installation examples	18
Intended use	6
M	
Maintenance	39
Measuring methods	10
Measuring principle	8
Measuring system	16
Mechanical construction	45
Mounting	15
N	
Nameplate	13
P	
Performance characteristics	43
Pipe installation	18
Post-connection check	26
Post-installation check	23
Process	45
Product description	8
Product design	8
Product identification	13
Product safety	7
R	
Repair	40
Return	40
S	
Safety information	4
Safety instructions	6
Scope of delivery	14
Sensor structure	8
Signal filter	37
Spare parts	40
Stability criterion	36
Symbols	4
T	
Technical data	43
Troubleshooting	38
U	
Use	6
W	
Wiring	24



www.addresses.endress.com
