

# Safety Instructions

## Deltabar PMD50

ATEX, IECEx: Ex db IIC T6 Gb





# Deltabar PMD50

## Table of contents

About this document .....	4
Associated documentation .....	4
Supplementary documentation .....	4
Certificates and declarations .....	4
Manufacturer address .....	5
Other standards .....	5
Extended order code .....	5
Safety instructions: General .....	7
Safety instructions: Specific conditions of use .....	7
Safety instructions: Installation .....	8
Safety instructions: Ex d joints .....	9
Temperature tables .....	9
Connection data .....	9

**About this document**

The document number of these Safety Instructions (XA) must match the information on the nameplate.

**Associated documentation**

All documentation is available on the Internet:

[www.endress.com/Deviceviewer](http://www.endress.com/Deviceviewer)  
(enter the serial number from the nameplate).



If not yet available, a translation into EU languages can be ordered.

To commission the device, please observe the Operating Instructions pertaining to the device:

BA02333P

**Supplementary documentation**

Explosion protection brochure: CP00021Z

The explosion protection brochure is available on the Internet:  
[www.endress.com/Downloads](http://www.endress.com/Downloads)

**Certificates and declarations****EU Declaration of Conformity**

Declaration Number:

EU\_01182

The EU Declaration of Conformity is available on the Internet:

[www.endress.com/Downloads](http://www.endress.com/Downloads)

**EU type-examination certificate**

Certificate number:

FM24ATEX0010X

List of applied standards: See EU Declaration of Conformity.

**IEC Declaration of Conformity**

Certificate number:

IECEx FMG 24.0008X

Affixing the certificate number certifies conformity with the following standards (depending on the device version):

- IEC 60079-0 : 2017
- IEC 60079-1 : 2014



More detailed information about the device is provided in the following tables. These tables describe the individual positions and IDs in the extended order code which are relevant to hazardous locations.

### Extended order code: Deltabar



The following specifications reproduce an extract from the product structure and are used to assign:

- This documentation to the device (using the extended order code on the nameplate).
- The device options cited in the document.

#### *Device type*

PMD50

#### *Basic specifications*

Position 1, 2 (Approval)		
Selected option		Description
PMD50	BF	ATEX II 2 G Ex db IIC T6...T1 Gb IECEX Ex db IIC T6...T1 Gb

Position 6 (Housing, Material)		
Selected option		Description
PMD50	J	Dual compartment; Alu, coated
	K	Dual compartment; 316L

Position 7 (Electrical Connection)		
Selected option		Description
PMD50	F	Thread M20, IP66/68 NEMA Type 4X/6P
	G	Thread G1/2, IP66/68 NEMA Type 4X/6P
	H	Thread NPT1/2, IP66/68 NEMA Type 4X/6P

#### *Optional specifications*

No options specific to hazardous locations are available.


**Safety instructions:  
General**

- The device is intended to be used in explosive atmospheres as defined in the scope of IEC 60079-0 or equivalent national standards. If no potentially explosive atmospheres are present or if additional protective measures have been taken: The device may be operated according to the manufacturer's specifications.
- Comply with the installation and safety instructions in the Operating Instructions.
- Staff must meet the following conditions for mounting, electrical installation, commissioning and maintenance of the device:
  - Be suitably qualified for their role and the tasks they perform
  - Be trained in explosion protection
  - Be familiar with national regulations
- Install the device according to the manufacturer's instructions and national regulations.
- Do not operate the device outside the specified electrical, thermal and mechanical parameters.
- Only use the device in media to which the wetted materials have sufficient durability.
- Avoid electrostatic charging:
  - Of plastic surfaces (e.g. enclosure, sensor element, special varnishing, attached additional plates, ...)
  - Of isolated capacities (e.g. isolated metallic plates)
- Alterations to the device can affect the explosion protection and must be carried out by staff authorized to perform such work by Endress+Hauser.

**Safety instructions:  
Specific conditions of use**

- In the case of process connections made of polymeric material or with polymeric coatings, avoid electrostatic charging of the plastic surfaces.
- For light metal flanges or flange faces (e.g. titanium, zirconium), avoid sparks caused by impact and friction.
- To avoid electrostatic charging: Do not rub surfaces with a dry cloth.
- In the event of additional or alternative special varnishing on the enclosure or other metal parts or for adhesive plates:
  - Observe the danger of electrostatic charging and discharge.
  - Do not install in the vicinity of processes ( $\leq 0.5$  m) generating strong electrostatic charges.
- Avoid sparks caused by impact and friction.
- Refer to the temperature tables for various ambient and process temperature ranges.
- Flameproof joints are not intended to be repaired.

## Safety instructions: Installation

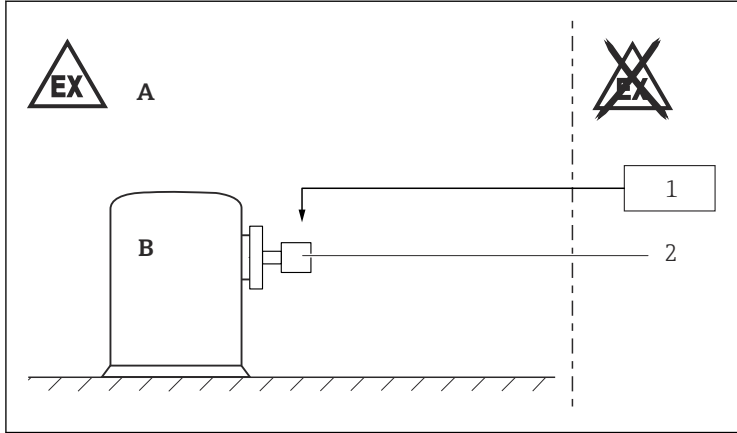

A0041997

- A Zone 1, Electronic  
 B Zone 1, Process  
 1 Power supply  
 2 PMD50

- After aligning (rotating) the enclosure, retighten the fixing screw.
- Do not open the covers in a potentially explosive atmosphere.
- Before operation:
  - Screw in the cover all the way.
  - Tighten the securing screw on the cover.
- Connect the device:
  - Using suitable cable and wire entries of protection type "Flameproof Enclosure (Ex db)".
  - Using piping systems of protection type "Flameproof Enclosure (Ex db)".
- When connecting through a conduit entry approved for this purpose, mount the associated sealing unit directly at the enclosure.
- Seal unused entry glands with approved sealing plugs that correspond to the type of protection. The plastic transport sealing plug does not meet this requirement and must therefore be replaced during installation.
- Only use certified cable entries or sealing plugs. The metal sealing plugs supplied meet this requirement.
- Only use genuine spare parts from Endress+Hauser which are specified for the device.

*Basic specification, Position 7 = G*

Flameproof equipment with G threaded holes is not intended for new installations, but only for replacing equipment in existing installations. Use of this equipment shall comply with the local installation requirements.



## Safety instructions: Ex d joints

- Flameproof joints are not intended to be repaired.
- If required or if in doubt: ask manufacturer for specifications.

## Temperature tables



- The specified ambient and process temperature ranges exclusively refer to the explosion protection and must not be exceeded. Operationally permitted ambient temperature ranges can be restricted depending on the version: See Operating Instructions.
- Do not exceed the max. ambient temperature at the enclosure.
- The process temperatures refer to the temperature at the separation membrane.

For detailed information see Technical Information.

Temperature class	Process temperature $T_p$ (process)	Ambient temperature range
T6	+80 °C	-40 to +60 °C
T4...T1	+85 °C	-40 to +60 °C
	+100 °C	-40 to +55 °C

## Connection data

Power supply
$U \leq 35 \text{ V}_{\text{DC}}$ $P \leq 1 \text{ W}$







71640831

[www.addresses.endress.com](http://www.addresses.endress.com)

---