
Operating Instructions Proline Promag H 200 PROFIBUS PA

Electromagnetic flowmeter

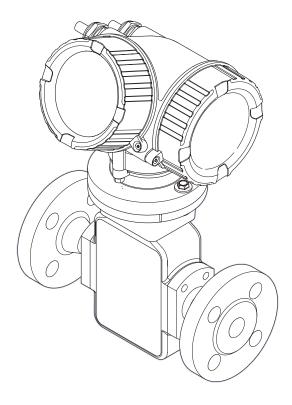

- Make sure the document is stored in a safe place such that it is always available when working on or with the device.
- To avoid danger to individuals or the facility, read the "Basic safety instructions" section carefully, as well as all other safety instructions in the document that are specific to working procedures.
- The manufacturer reserves the right to modify technical data without prior notice. Your Endress+Hauser Sales Center will supply you with current information and updates to these instructions.

Table of contents

1	Document information 6		6.2.2 Preparing the measuring device	
1.1 1.2	Document function 6 Symbols used 6 1.2.1 Safety symbols 6 1.2.2 Electrical symbols 6	6.3	6.2.3 Mounting the sensor	26 27
	1.2.3 Tool symbols 61.2.4 Symbols for certain types of	7	Electrical connection	28
1.3 1.4	information	7.1	Connection conditions	28 28 31 31 31
2	Basic safety instructions 9	7.2	7.1.7 Preparing the measuring device Connecting the measuring device	33
2.1 2.2 2.3 2.4 2.5 2.6	Requirements for the personnel 9 Designated use 9 Workplace safety 10 Operational safety 10 Product safety 10 IT security 11	7.3 7.4 7.5 7.6	7.2.1 Connecting the transmitter	33 35 37 37 38 38 39
3	Product description 12			
3.1	Product design	8	Operating options	41
4	Incoming acceptance and product	8.1 8.2	Overview of operating options Structure and function of the operating	
	identification		menu	42 42
4.1 4.2	Incoming acceptance13Product identification134.2.1 Transmitter nameplate144.2.2 Sensor nameplate154.2.3 Symbols on measuring device16	8.3	8.2.2 Operating philosophy	43 44 44 45
5	Storage and transport 17		8.3.3 Editing view	47 49
5.1 5.2	Storage conditions		 8.3.5 Opening the context menu	51 51 52 53
5.3	5.2.2 Measuring devices with lifting lugs 18 5.2.3 Transporting with a fork lift 18 Packaging disposal		8.3.10 User roles and related access authorization	54
6	Installation		code	54
6.1	Installation conditions	8.4	lock	54 55
	process		8.4.1 Connecting the operating tool	55
	6.1.3 Special mounting instructions 22		8.4.2 FieldCare	57

9	System integration	59	12	Diagnostics and troubleshooting	100
9.1	Overview of device description files	59	12.1	General troubleshooting	100
	9.1.1 Current version data for the device		12.2	Diagnostic information on local display	
	9.1.2 Operating tools	59		12.2.1 Diagnostic message	102
9.2	Device master file (GSD)	59		12.2.2 Calling up remedial measures	104
	9.2.1 Manufacturer-specific GSD	60	12.3	Diagnostic information in FieldCare	104
	9.2.2 Profile GSD	60		12.3.1 Diagnostic options	
9.3	Cyclic data transmission	60		12.3.2 Calling up remedy information	105
	9.3.1 Block model	60	12.4	Adapting the diagnostic information	106
	9.3.2 Description of the modules	61		12.4.1 Adapting the measured value and	100
				device status	
10	Commissioning	66	10 F	12.4.2 Adapting the diagnostic behavior	
10.1	Function check	66	12.5	Overview of diagnostic information	
10.2	Switching on the measuring device	1		12.5.1 Diagnostic of sensor	110 110
10.3	Configuring the device address via software	66		12.5.2 Diagnostic of electronic	110
	10.3.1 PROFIBUS network	66		12.5.4 Diagnostic of process	
10.4	Setting the operating language	66	12.6	Pending diagnostic events	121
10.5	Configuring the measuring device	67	12.7	Diagnostic list	122
	10.5.1 Defining the tag name	68	12.8	Event logbook	123
	10.5.2 Setting the system units	68		12.8.1 Event history	
	10.5.3 Configuring communication			12.8.2 Filtering the event logbook	123
	interface			12.8.3 Overview of information events	123
	10.5.4 Configuring the analog inputs	71	12.9	Resetting the measuring device	124
	10.5.5 Configuring the local display	71		12.9.1 Function scope of the "Device reset"	
	10.5.6 Configuring the low flow cut off			parameter	125
10 6	10.5.7 Configuring empty pipe detection	75		Device information	125
10.6	Advanced settings	76 77	12.11	Firmware history	127
	10.6.1 Carrying out a sensor adjustment10.6.2 Configuring the pulse/frequency/	′′			
	switch output	77	13	Maintenance	128
	10.6.3 Configuring the totalizer	84	13.1	Maintenance tasks	128
	10.6.4 Carrying out additional display			13.1.1 Exterior cleaning	
	configurations	86		13.1.2 Interior cleaning	
	10.6.5 Administration configuration	88		13.1.3 Replacing seals	128
10.7	Configuration management	89	13.2	Measuring and test equipment	128
	10.7.1 Function scope of the "Configuration		13.3	Endress+Hauser services	128
	management" parameter	1			
10.8	Simulation	90	14	Repair	129
10.9	Protecting settings from unauthorized			-	120
			141	General notes	17.9
	access	1	14.1 14.2	General notes	129 129
	10.9.1 Write protection via access code	1	14.2	Spare parts	129
	10.9.1 Write protection via access code10.9.2 Write protection via write protection	92		Spare parts	129 130
	10.9.1 Write protection via access code	92	14.2 14.3	Spare parts	129 130
	10.9.1 Write protection via access code10.9.2 Write protection via write protection switch	92 93	14.2 14.3 14.4	Spare parts	129 130 130 130
11	10.9.1 Write protection via access code10.9.2 Write protection via write protection	92 93	14.2 14.3 14.4	Spare parts	129 130 130 130 130
11 11.1	10.9.1 Write protection via access code10.9.2 Write protection via write protection switch	929395	14.2 14.3 14.4	Spare parts	129 130 130 130 130
	10.9.1 Write protection via access code 10.9.2 Write protection via write protection switch	92 93 95 95	14.2 14.3 14.4 14.5	Spare parts	129 130 130 130 130 131
11.1 11.2 11.3	10.9.1 Write protection via access code 10.9.2 Write protection via write protection switch	92 93 95 95 95 95	14.2 14.3 14.4 14.5	Spare parts	129 130 130 130 131 131
11.1 11.2	10.9.1 Write protection via access code 10.9.2 Write protection via write protection switch	92 93 95 95 95 95 95	14.2 14.3 14.4 14.5	Spare parts	129 130 130 130 131 131 132
11.1 11.2 11.3	10.9.1 Write protection via access code	92 93 95 95 95 95 95	14.2 14.3 14.4 14.5	Spare parts	129 130 130 130 131 131 132 132
11.1 11.2 11.3 11.4	10.9.1 Write protection via access code 10.9.2 Write protection via write protection switch	92 93 95 95 95 95 95	14.2 14.3 14.4 14.5	Spare parts	129 130 130 130 131 131 132 132 132
11.1 11.2 11.3	10.9.1 Write protection via access code 10.9.2 Write protection via write protection switch	92 93 95 95 95 95 95 95 96	14.2 14.3 14.4 14.5 15 15.1	Spare parts	129 130 130 130 131 132 132 132 132 133
11.1 11.2 11.3 11.4	10.9.1 Write protection via access code 10.9.2 Write protection via write protection switch	92 93 95 95 95 95 95 96 97	14.2 14.3 14.4 14.5	Spare parts	129 130 130 130 131 132 132 132 132 133
11.1 11.2 11.3 11.4 11.5	10.9.1 Write protection via access code	92 93 95 95 95 95 95 96 97	14.2 14.3 14.4 14.5 15 15.1 15.2 15.3	Spare parts	129 130 130 130 131 132 132 132 133 133
11.1 11.2 11.3 11.4	10.9.1 Write protection via access code 10.9.2 Write protection via write protection switch	92 93 95 95 95 95 95 96 97	14.2 14.3 14.4 14.5 15 15.1 15.2 15.3	Spare parts	129 130 130 130 131 132 132 132 133 133
11.1 11.2 11.3 11.4 11.5	10.9.1 Write protection via access code	92 93 95 95 95 95 95 96 97	14.2 14.3 14.4 14.5 15 15.1 15.2 15.3	Spare parts	129 130 130 130 131 132 132 132 133 133 134

16.3	Input	134
16.4	Output	135
16.5	Power supply	138
16.6	Performance characteristics	139
16.7	Installation	140
16.8	Environment	140
16.9	Process	141
16.10	Mechanical construction	142
16.11	Operability	146
16.12	Certificates and approvals	148
16.13	Application packages	149
16.14	Accessories	150
16.15	Documentation	150
Index	ζ	152

1 Document information

1.1 Document function

These Operating Instructions contain all the information that is required in various phases of the life cycle of the device: from product identification, incoming acceptance and storage, to mounting, connection, operation and commissioning through to troubleshooting, maintenance and disposal.

1.2 Symbols used

1.2.1 Safety symbols

Symbol	Meaning
▲ DANGER	DANGER! This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury.
▲ WARNING	WARNING! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.
▲ CAUTION	CAUTION! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or medium injury.
NOTICE	NOTE! This symbol contains information on procedures and other facts which do not result in personal injury.

1.2.2 Electrical symbols

Symbol	Meaning	Symbol	Meaning
	Direct current	~	Alternating current
≂	Direct current and alternating current	- 11	Ground connection A grounded terminal which, as far as the operator is concerned, is grounded via a grounding system.
	Protective ground connection A terminal which must be connected to ground prior to establishing any other connections.	♦	Equipotential connection A connection that has to be connected to the plant grounding system: This may be a potential equalization line or a star grounding system depending on national or company codes of practice.

1.2.3 Tool symbols

Symbol	Meaning
00	Flat blade screwdriver
0 6	Allen key
Ó	Open-ended wrench

1.2.4 Symbols for certain types of information

Symbol	Meaning
✓	Permitted Procedures, processes or actions that are permitted.
✓	Preferred Procedures, processes or actions that are preferred.
X	Forbidden Procedures, processes or actions that are forbidden.
i	Tip Indicates additional information.
	Reference to documentation
A	Reference to page
	Reference to graphic
1. , 2. , 3	Series of steps
L.	Result of a step
?	Help in the event of a problem
	Visual inspection

1.2.5 Symbols in graphics

Symbol	Meaning	Symbol	Meaning
1, 2, 3,	Item numbers	1. , 2. , 3	Series of steps
A, B, C,	Views	A-A, B-B, C-C,	Sections
EX	Hazardous area	×	Safe area (non-hazardous area)
≋➡	Flow direction		

1.3 Documentation

- For an overview of the scope of the associated Technical Documentation, refer to the following:
 - The CD-ROM provided for the device (depending on the device version, the CD-ROM might not be part of the delivery!)
 - The *W@M Device Viewer*: Enter the serial number from the nameplate (www.endress.com/deviceviewer)
 - The *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the 2-D matrix code (QR code) on the nameplate.
- For a detailed list of the individual documents along with the documentation code

1.3.1 Standard documentation

Document type	Purpose and content of the document
Technical Information	Planning aid for your device The document contains all the technical data on the device and provides an overview of the accessories and other products that can be ordered for the device.
Brief Operating Instructions	Guide that takes you quickly to the 1st measured value The Brief Operating Instructions contain all the essential information from incoming acceptance to initial commissioning.

1.3.2 Supplementary device-dependent documentation

Additional documents are supplied depending on the device version ordered: Always comply strictly with the instructions in the supplementary documentation. The supplementary documentation is an integral part of the device documentation.

1.4 Registered trademarks

PROFIBUS®

Registered trademark of the PROFIBUS User Organization, Karlsruhe, Germany

Applicator®, FieldCare®, Field XpertTM, HistoROM®, Heartbeat TechnologyTM Registered or registration-pending trademarks of the Endress+Hauser Group

2 Basic safety instructions

2.1 Requirements for the personnel

The personnel for installation, commissioning, diagnostics and maintenance must fulfill the following requirements:

- ► Trained, qualified specialists must have a relevant qualification for this specific function and task
- ► Are authorized by the plant owner/operator
- ► Are familiar with federal/national regulations
- ▶ Before beginning work, the specialist staff must have read and understood the instructions in the Operating Instructions and supplementary documentation as well as in the certificates (depending on the application)
- ▶ Following instructions and basic conditions

The operating personnel must fulfill the following requirements:

- ► Being instructed and authorized according to the requirements of the task by the facility's owner-operator
- ► Following the instructions in these Operating Instructions

2.2 Designated use

Application and media

The measuring device is only suitable for flow measurement of liquids with a minimum conductivity of 20 μ S/cm.

Depending on the version ordered, the measuring device can also measure potentially explosive, flammable, poisonous and oxidizing media.

Measuring devices for use in hazardous areas, in hygienic applications or in applications where there is an increased risk due to process pressure, are labeled accordingly on the nameplate.

To ensure that the measuring device remains in proper condition for the operation time:

- Only use the measuring device in full compliance with the data on the nameplate and the general conditions listed in the Operating Instructions and supplementary documentation.
- ► Check the nameplate to verify if the device ordered can be put to its intended use in the approval-related area (e.g. explosion protection, pressure vessel safety).
- ▶ Use the measuring device only for media against which the process-wetted materials are adequately resistant.
- ▶ If the measuring device is not operated at atmospheric temperature, compliance with the relevant basic conditions specified in the associated device documentation is absolutely essential: "Documentation" section $\rightarrow \boxdot$ 7.
- ► Protect the measuring device permanently against corrosion from environmental influences.

Incorrect use

Non-designated use can compromise safety. The manufacturer is not liable for damage caused by improper or non-designated use.

A WARNING

Danger of breakage of the sensor due to corrosive or abrasive fluids or from environmental conditions!

- ▶ Verify the compatibility of the process fluid with the sensor material.
- ▶ Ensure the resistance of all fluid-wetted materials in the process.
- ► Keep within the specified pressure and temperature range.

Verification for borderline cases:

► For special fluids and fluids for cleaning, Endress+Hauser is glad to provide assistance in verifying the corrosion resistance of fluid-wetted materials, but does not accept any warranty or liability as minute changes in the temperature, concentration or level of contamination in the process can alter the corrosion resistance properties.

Residual risks

The external surface temperature of the housing can increase by max. 10 K due to the power consumption of the electronic components. Hot process fluids passing through the measuring device will further increase the surface temperature of the housing. The surface of the sensor, in particular, can reach temperatures which are close to the fluid temperature.

Possible burn hazard due to fluid temperatures!

► For elevated fluid temperature, ensure protection against contact to prevent burns.

2.3 Workplace safety

For work on and with the device:

► Wear the required personal protective equipment according to federal/national regulations.

For welding work on the piping:

▶ Do not ground the welding unit via the measuring device.

If working on and with the device with wet hands:

▶ It is recommended to wear gloves on account of the higher risk of electric shock.

2.4 Operational safety

Risk of injury.

- ▶ Operate the device in proper technical condition and fail-safe condition only.
- ► The operator is responsible for interference-free operation of the device.

Conversions to the device

Unauthorized modifications to the device are not permitted and can lead to unforeseeable dangers.

▶ If, despite this, modifications are required, consult with Endress+Hauser.

Repair

To ensure continued operational safety and reliability,

- ► Carry out repairs on the device only if they are expressly permitted.
- ▶ Observe federal/national regulations pertaining to repair of an electrical device.
- ▶ Use original spare parts and accessories from Endress+Hauser only.

2.5 Product safety

This measuring device is designed in accordance with good engineering practice to meet state-of-the-art safety requirements, has been tested, and left the factory in a condition in which it is safe to operate.

It meets general safety standards and legal requirements. It also complies with the EC directives listed in the device-specific EC Declaration of Conformity. Endress+Hauser confirms this by affixing the CE mark to the device.

2.6 IT security

We only provide a warranty if the device is installed and used as described in the Operating Instructions. The device is equipped with security mechanisms to protect it against any inadvertent changes to the device settings.

IT security measures in line with operators' security standards and designed to provide additional protection for the device and device data transfer must be implemented by the operators themselves.


3 Product description

The device consists of a transmitter and a sensor.

The device is available as a compact version:

The transmitter and sensor form a mechanical unit.

3.1 Product design

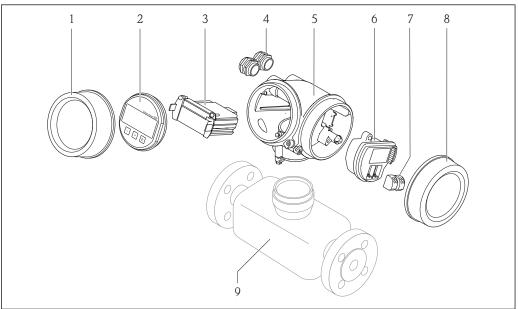


A0014056

- \blacksquare 1 Important components of a measuring device
- 1 Electronics compartment cover
- 2 Display module
- 3 Main electronics module
- 4 Cable glands
- 5 Transmitter housing (incl. integrated HistoROM)
- 6 I/O electronics module
- 7 Terminals (pluggable spring terminals)
- 8 Connection compartment cover
- 9 Sensor

4 Incoming acceptance and product identification

4.1 Incoming acceptance

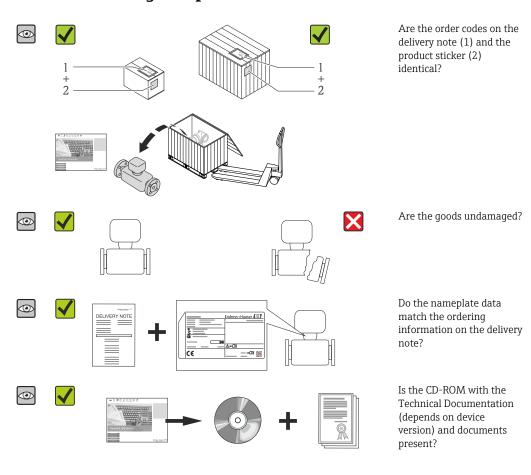

- If one of the conditions is not satisfied, contact your Endress+Hauser Sales Center.
 Depending on the device version, the CD-ROM might not be part of the delivery!
 - Depending on the device version, the CD-ROM might not be part of the delivery!
 The Technical Documentation is available via the Internet or via the Endress+Hauser Operations App, see the "Product identification" section → 14.

4.2 Product identification


The following options are available for identification of the measuring device:

- Nameplate specifications
- Order code with breakdown of the device features on the delivery note
- Enter serial numbers from nameplates in *W@M Device Viewer* (www.endress.com/deviceviewer): All information about the measuring device is displayed.
- Enter the serial number from the nameplates into the *Endress+Hauser Operations App* or scan the 2-D matrix code (QR code) on the nameplate with the *Endress+Hauser Operations App*: all the information for the measuring device is displayed.

For an overview of the scope of the associated Technical Documentation, refer to the following:

- The chapters "Additional standard documentation on the device" \rightarrow \blacksquare 8 and "Supplementary device-dependent documentation" \rightarrow \blacksquare 8
- The *W@M Device Viewer*: Enter the serial number from the nameplate (www.endress.com/deviceviewer)
- The *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the 2-D matrix code (QR code) on the nameplate.


4.2.1 Transmitter nameplate

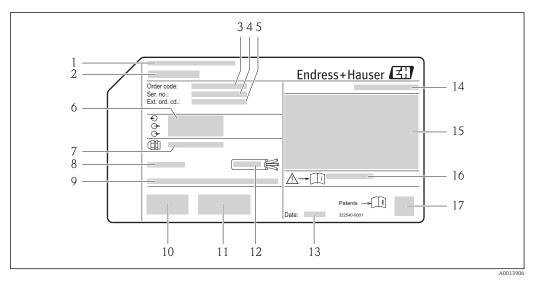

■ 2 Example of a transmitter nameplate

- 1 Manufacturing location
- 2 Name of the transmitter
- 3 Order code
- 4 Serial number (Ser. no.)
- 5 Extended order code (Ext. ord. cd.)
- 6 Electrical connection data, e.g. available inputs and outputs, supply voltage
- 7 Type of cable glands
- 8 Permitted ambient temperature (T_a)
- *9* Firmware version (FW) from the factory
- 10 CE mark, C-Tick
- 11 Additional information on version: certificates, approvals
- 12 Permitted temperature range for cable
- 13 Manufacturing date: year-month
- 14 Degree of protection
- 15 Approval information for explosion protection
- 16 Document number of safety-related supplementary documentation
- 17 2-D matrix code

4.2.2 Sensor nameplate

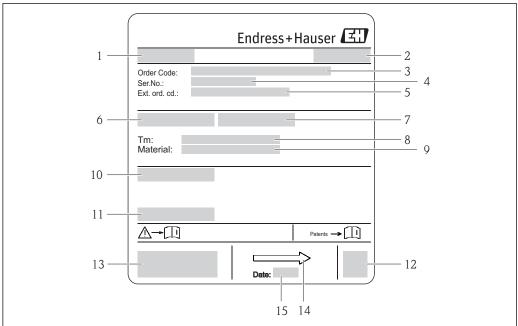

A0017186

■ 3 Example of sensor nameplate

- 1 Name of the sensor
- 2 Manufacturing location
- 3 Order code
- 4 Serial number (ser. no.)
- 5 Extended order code (ext. ord. cd.)
- 6 Nominal diameter of sensor
- 7 Test pressure of the sensor
- 8 Fluid temperature range
- 9 Material of lining and electrodes
- 10 Degree of protection: e.g. IP, NEMA
- 11 Permitted ambient temperature (T_a)
- 12 2-D matrix code
- 13 CE mark, C-Tick
- 14 Flow direction
- 15 Manufacturing date: year-month

Order code

The measuring device is reordered using the order code.

Extended order code

- The device type (product root) and basic specifications (mandatory features) are always listed.
- Of the optional specifications (optional features), only the safety and approvalrelated specifications are listed (e.g. LA). If other optional specifications are also ordered, these are indicated collectively using the # placeholder symbol (e.g. #LA#).
- If the ordered optional specifications do not include any safety and approval-related specifications, they are indicated by the + placeholder symbol (e.g. XXXXXX-ABCDE +).

4.2.3 Symbols on measuring device

Symbol	Meaning
Δ	WARNING! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.
[ji	Reference to documentation Refers to the corresponding device documentation.
	Protective ground connection A terminal which must be connected to ground prior to establishing any other connections.

5 Storage and transport

5.1 Storage conditions


Observe the following notes for storage:

- Store in the original packaging to ensure protection from shock.
- Do not remove protective covers or protective caps installed on process connections.
 They prevent mechanical damage to the sealing surfaces and contamination in the measuring tube.
- Protect from direct sunlight to avoid unacceptably high surface temperatures.
- Select a storage location where moisture cannot collect in the measuring device as fungus and bacteria infestation can damage the lining.
- Store in a dry and dust-free place.
- Do not store outdoors.

Storage temperature → 🖺 140

5.2 Transporting the product

Transport the measuring device to the measuring point in the original packaging.

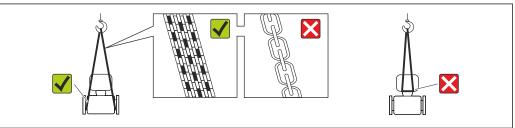

A0015604

Do not remove protective covers or caps installed on process connections. They prevent mechanical damage to the sealing surfaces and contamination in the measuring tube.


5.2.1 Measuring devices without lifting lugs

A WARNING

Center of gravity of the measuring device is higher than the suspension points of the webbing slings.

Risk of injury if the measuring device slips.

- ► Secure the measuring device against slipping or turning.
- ▶ Observe the weight specified on the packaging (stick-on label).

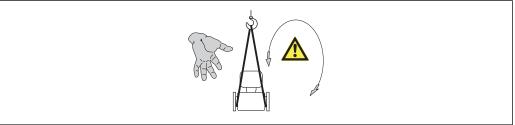

A001560

5.2.2 Measuring devices with lifting lugs

A CAUTION

Special transportation instructions for devices with lifting lugs

- ▶ Only use the lifting lugs fitted on the device or flanges to transport the device.
- ► The device must always be secured at two lifting lugs at least.


5.2.3 Transporting with a fork lift

If transporting in wood crates, the floor structure enables the crates to be lifted lengthwise or at both sides using a forklift.

A CAUTION

Risk of damaging the magnetic coil

- ► If transporting by forklift, do not lift the sensor by the metal casing.
- ▶ This would buckle the casing and damage the internal magnetic coils.

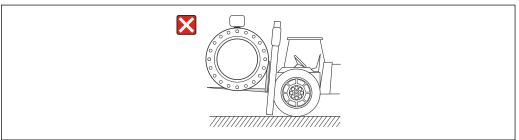

A0023726

5.3 Packaging disposal

All packaging materials are environmentally friendly and 100% recyclable:

- Measuring device secondary packaging: polymer stretch film that conforms to EC Directive 2002/95/EC (RoHS).
- Packaging:
 - $\,$ Wood crate, treated in accordance with ISPM 15 standard, which is confirmed by the affixed IPPC logo.

or


- Carton in accordance with European Packaging Directive 94/62EC; recyclability is confirmed by the affixed RESY symbol.
- Seaworthy packaging (optional): Wood crate, treated in accordance with ISPM 15 standard, which is confirmed by the affixed IPPC logo.
- Carrying and mounting hardware:
 - Disposable plastic pallet
 - Plastic straps
 - Plastic adhesive strips
- Dunnage: Paper cushion

6 Installation

6.1 Installation conditions

6.1.1 Mounting position

Mounting location

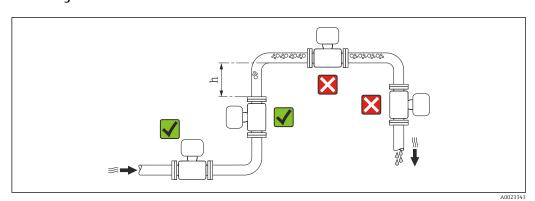

Preferably install the sensor in an ascending pipe, and ensure a sufficient distance to the next pipe elbow: $h \ge 2 \times DN$


To prevent measuring errors arising from accumulation of gas bubbles in the measuring tube, avoid the following mounting locations in the pipe:

- Highest point of a pipeline.
- Directly upstream of a free pipe outlet in a down pipe.

Installation in down pipes

Install a siphon with a vent valve downstream of the sensor in down pipes whose length h ≥ 5 m (16.4 ft). This precaution is to avoid low pressure and the consequent risk of damage to the measuring tube. This measure also prevents the system losing prime.


For information on the liner's resistance to partial vacuum

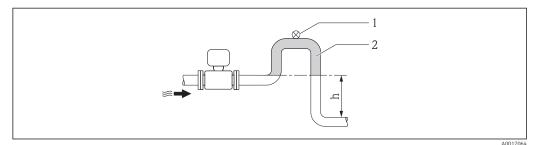

- 4 Installation in a down pipe
- Vent valve
- 2 Pipe siphon
- h Length of down pipe

Installation in partially filled pipes

A partially filled pipe with a gradient necessitates a drain-type configuration.

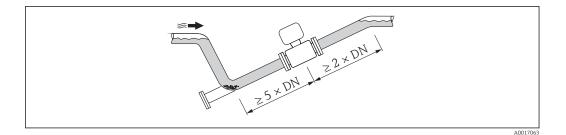


Orientation

The direction of the arrow on the sensor nameplate helps you to install the sensor according to the flow direction (direction of medium flow through the piping).

An optimum orientation position helps avoid gas and air accumulations and deposits in the measuring tube.

The measuring device also offers the empty pipe detection function to detect partially filled measuring pipes in the event of outgassing fluids or variable process pressures.


Vertical

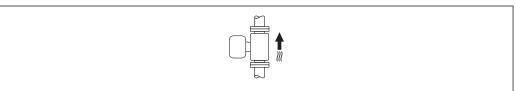

A0015591

Optimum for self-emptying pipe systems and for use in conjunction with empty pipe detection.

Horizontal

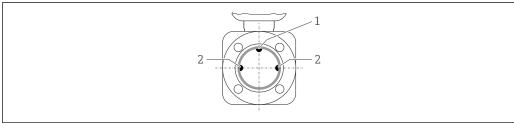

A0019602


- 1 EPD electrode for empty pipe detection
- 2 Measuring electrodes for signal detection



- The measuring electrode plane must be horizontal. This prevents brief insulation of the two measuring electrodes by entrained air bubbles.
- Empty pipe detection only works if the transmitter housing is pointing upwards as otherwise there is no guarantee that the empty pipe detection function will actually respond to a partially filled or empty measuring tube.

Inlet and outlet runs

If possible, install the sensor upstream from fittings such as valves, T-pieces or elbows. Observe the following inlet and outlet runs to comply with accuracy specifications:

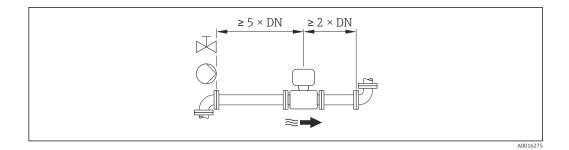

Installation dimensions

6.1.2 Requirements from environment and process

Ambient temperature range


Transmitter	-40 to +60 °C (-40 to +140 °F)
Local display	-20 to $+60$ °C (-4 to $+140$ °F), the readability of the display may be impaired at temperatures outside the temperature range.
Sensor	-20 to +60 °C (-4 to +140 °F)
Liner	Do not exceed or fall below the permitted temperature range of the liner .

If operating outdoors:


- Install the measuring device in a shady location.
- Avoid direct sunlight, particularly in warm climatic regions.
- Avoid direct exposure to weather conditions.

Temperature tables

Observe the interdependencies between the permitted ambient and fluid temperatures when operating the device in hazardous areas.

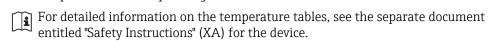

System pressure

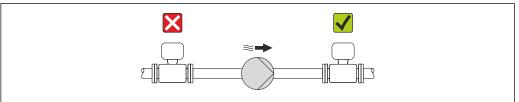

A0015594

Never install the sensor on the pump suction side in order to avoid the risk of low pressure, and thus damage to the liner.

Furthermore, install pulse dampers if reciprocating, diaphragm or peristaltic pumps are used.


For information on the liner's resistance to partial vacuum $\rightarrow \stackrel{ riangle}{=} 142$

- For information on the vibration resistance of the measuring system $\rightarrow \triangleq 141$

Vibrations

In the event of very strong vibrations, the pipe and sensor must be supported and fixed.

- For information on the shock resistance of the measuring system $\rightarrow = 141$

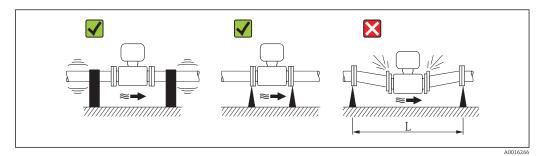


■ 5 Measures to avoid device vibrations (L > 10 m (33 ft))

Adapters

Suitable adapters to DIN EN 545 (double-flange reducers) can be used to install the sensor in larger-diameter pipes. The resultant increase in the rate of flow improves measuring accuracy with very slow-moving fluids. The nomogram shown here can be used to calculate the pressure loss caused by reducers and expanders.

- The nomogram only applies to liquids with a viscosity similar to that of water.
- 1. Calculate the ratio of the diameters d/D.
- 2. From the nomogram read off the pressure loss as a function of flow velocity (downstream from the reduction) and the d/D ratio.

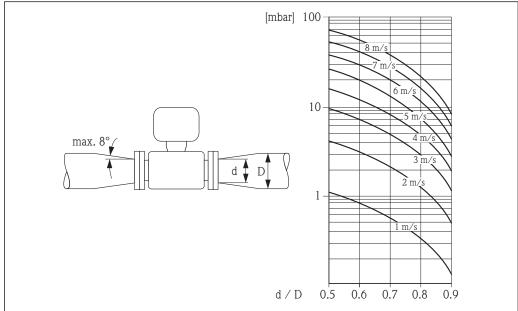

A0016359

6.1.3 Special mounting instructions

Display protection

To ensure that the optional display protection can be easily opened, maintain the following minimum head clearance: 350 mm (13.8 in)

6.2 Mounting the measuring device

6.2.1 Required tools

For transmitter

- For turning the transmitter housing: Open-ended wrench8 mm
- For opening the securing clamps: Allen key3 mm

For sensor

For flanges and other process connections:

- Screws, nuts, seals etc. are not included in the scope of supply and must be provided by the customer.
- Appropriate mounting tools

6.2.2 Preparing the measuring device


- 1. Remove all remaining transport packaging.
- 2. Remove any protective covers or protective caps present from the sensor.
- 3. Remove stick-on label on the electronics compartment cover.

6.2.3 Mounting the sensor

A WARNING

Danger due to improper process sealing!


- ▶ Ensure that the inside diameters of the gaskets are greater than or equal to that of the process connections and piping.
- ► Ensure that the gaskets are clean and undamaged.
- ► Install the gaskets correctly.
- 1. Ensure that the direction of the arrow on the sensor matches the flow direction of the medium.
- 2. To ensure compliance with device specifications, install the measuring device between the pipe flanges in a way that it is centered in the measurement section.
- 3. Install the measuring device or turn the transmitter housing so that the cable entries do not point upwards.

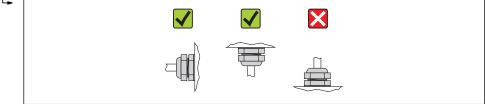

A0013964

The sensor is supplied to order, with or without pre-installed process connections. Pre-installed process connections are firmly secured to the sensor by 4 or 6 hexagonal-headed bolts.

The sensor may need to be supported or additionally secured depending on the application and pipe length. In particular, it is absolutely essential to secure the sensor additionally if plastic process connections are used. An appropriate wall mounting kit can be ordered separately as an accessory from Endress+Hauser $\rightarrow \blacksquare$ 150.

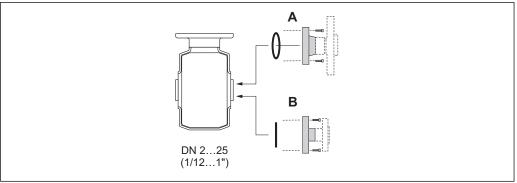

A00

- 6 Process connection seals
- A Process connections with O-ring seal
- B Process connections with aseptic molded seal

Welding the sensor into the pipe (welding connections)

A WARNING

Risk of destroying the electronics!

- ▶ Make sure that the welding system is not grounded via the sensor or transmitter.
- 1. Tack-weld the sensor to secure it in the pipe. A suitable welding aid can be ordered separately as an accessory $\rightarrow \triangleq 150$.
- 2. Release the screws on the process connection flange and remove the sensor, along with the seal, from the pipe.
- 3. Weld the process connection into the pipe.
- 4. Reinstall the sensor in the pipe, and in doing so make sure that the seal is clean and in the right position.
- If thin-walled pipes carrying food are welded correctly, the seal is not damaged by the heat even when mounted. However, it is recommended to disassemble the sensor and seal.
 - It must be possible to open the pipe by approx. 8 mm (0.31 in) in total to permit disassembly.

Cleaning with pigs

It is essential to take the internal diameters of the measuring tube and process connection into account when cleaning with pigs. All the dimensions and lengths of the sensor and transmitter are provided in the separate "Technical Information" document.

Mounting the seals

A CAUTION


An electrically conductive layer could form on the inside of the measuring tube! Risk of measuring signal short circuit.

▶ Do not use electrically conductive sealing compounds such as graphite.

Comply with the following instructions when installing seals:

- Make sure that the seals do not protrude into the piping cross-section.
- In the case of metal process connections, the screws must be tightened securely. The process connection forms a metal connection with the sensor, which ensures a defined compression of the seal.
- In the case of plastic process connections, comply with the max. screw tightening torques for lubricated threads: 7 Nm (5.2 lbf ft). In the case of plastic flanges, always insert a seal between the connection and the counterflange.
- For "PFA" lining: additional seals are **always** required.
- Depending on the application the seals should be replaced periodically, particularly if molded seals are used (aseptic version)! The interval between changes depends on the frequency of the cleaning cycles, the cleaning temperature and the medium temperature. Replacement seals can be ordered as an accessory → 150.


Mounting grounding rings (DN 2 to 25 (1/12 to 1"))

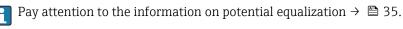

In the case of plastic process connections (e.g. flange connections or adhesive fittings), additional ground rings must be used to ensure potential matching between the sensor and the fluid. If grounding rings are not installed, this can affect the measuring accuracy or cause the destruction of the sensor as a result of the electrochemical decomposition of the electrodes.



- Depending on the option ordered, plastic disks are used instead of grounding rings on some process connections. These plastic disks only act as "spacers" and do not have any potential matching function. Furthermore, they also perform a significant sealing function at the sensor/process connection interface. Therefore, in the case of process connections without metal grounding rings, these plastic disks/seals should never be removed and should always be installed!
- Grounding rings, including seals, are mounted inside the process connections.
 Therefore the installation length is not affected.

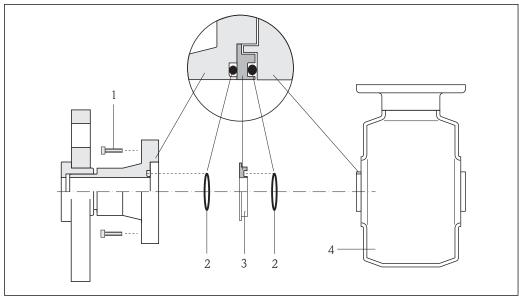


A000265

- 7 Installing grounding rings
- 1 Hexagonal-headed bolts of process connection
- 2 O-ring seals
- 3 Grounding ring or plastic disk (spacer)
- 4 Sensor
- 1. Release the 4 or 6 hexagonal-headed bolts (1) and remove the process connection from the sensor (4).
- 2. Remove the plastic disk (3), along with the two O-ring seals (2), from the process connection.
- 3. Place the first O-ring seal (2) back into the groove of the process connection.
- 4. Fit the metal grounding ring (3) in the process connection as illustrated.
- 5. Place the second O-ring seal (2) into the groove of the grounding ring.
- 6. Mount the process connection back on the sensor. In doing so, make sure to observe the maximum screw tightening torques for lubricated threads: 7 Nm (5.2 lbf ft)

6.2.4 Turning the transmitter housing

To provide easier access to the connection compartment or display module, the transmitter housing can be turned.

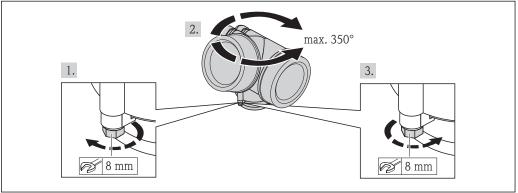


A00137

- 1. Release the fixing screw.
- 2. Turn the housing to the desired position.

3. Firmly tighten the securing screw.

6.2.5 Turning the display module

The display module can be turned to optimize display readability and operability.

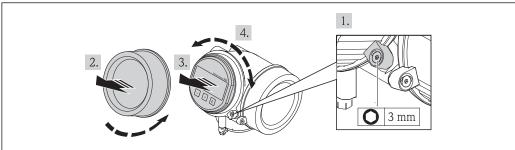

A0013905

- 1. Loosen the securing clamp of the electronics compartment cover using an Allen key.
- 2. Unscrew cover of the electronics compartment from the transmitter housing.
- 3. Optional: pull out the display module with a gentle rotational movement.
- 4. Rotate the display module into the desired position: Max. $8 \times 45^{\circ}$ in each direction.
- 5. Without display module pulled out:
 Allow display module to engage at desired position.
- 6. With display module pulled out:

 Feed the cable into the gap between the housing and main electronics module and plug the display module into the electronics compartment until it engages.
- 7. Reverse the removal procedure to reassemble the transmitter.

6.3 Post-installation check

Is the device undamaged (visual inspection)?	
Does the measuring device conform to the measuring point specifications? For example: Process temperature Process pressure (refer to the section on "Pressure-temperature ratings" in the "Technical Information" document) Ambient temperature Measuring range	
Has the correct orientation for the sensor been selected? According to sensor type According to medium temperature According to medium properties (outgassing, with entrained solids)	
Does the arrow on the sensor nameplate match the direction of flow of the fluid through the piping ?	
Are the measuring point identification and labeling correct (visual inspection)?	
Is the device adequately protected from precipitation and direct sunlight?	
Have the fixing screws been tightened with the correct tightening torque?	

7 Electrical connection

The measuring device does not have an internal circuit breaker. For this reason, assign the measuring device a switch or power-circuit breaker so that the power supply line can be easily disconnected from the mains.

7.1 Connection conditions

7.1.1 Required tools

- For cable entries: Use corresponding tools
- For securing clamp: Allen key 3 mm
- Wire stripper
- When using stranded cables: crimping tool for ferrule
- For removing cables from terminal: flat blade screwdriver ≤3 mm (0.12 in)

7.1.2 Connecting cable requirements

The connecting cables provided by the customer must fulfill the following requirements.

Electrical safety


In accordance with applicable federal/national regulations.

Permitted temperature range

- -40 °C (-40 °F) to +80 °C (+176 °F)
- Minimum requirement: cable temperature range ≥ ambient temperature +20 K

Signal cable

PROFIBUS PA

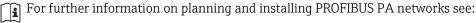

- Operating Instructions "PROFIBUS DP/PA: Guidelines for planning and commissioning" (BA00034S)
- PNO Directive 2.092 "PROFIBUS PA User and Installation Guideline"
- IEC 61158-2 (MBP)

Pulse/frequency/switch output

Standard installation cable is sufficient.

Cable diameter

- Cable glands supplied: M20 \times 1.5 with cable ϕ 6 to 12 mm (0.24 to 0.47 in)
- Plug-in spring terminals for device version without integrated overvoltage protection: wire cross-sections 0.5 to 2.5 mm² (20 to 14 AWG)
- Screw terminals for device version with integrated overvoltage protection: wire crosssections 0.2 to 2.5 mm² (24 to 14 AWG)

Fieldbus cable specification

PROFIBUS PA

Cable type

In accordance with IEC 61158-2 (MBP), cable type A is recommended. Cable type A has a cable shielding that guarantees adequate protection from electromagnetic interference and thus the most reliable data transfer.

The electrical data of the fieldbus cable have not been specified but determine important characteristics of the design of the fieldbus, such as distances bridged, number of users, electromagnetic compatibility, etc.

Cable type	A			
Cable structure	Twisted, shielded twin-core cable			
Wire cross-section	0.8 mm ² (AWG 18)			
Loop resistance (direct current)	44 Ω/km			
Characteristic impedance at 31.25 kHz	100 Ω ±20%			
Attenuation constant at 39.0 kHz	3 dB/km			
Capacitive asymmetry	2 nF/km			
Envelope delay distortion (7.9 to 39 kHz)	1.7 ms/km			
Shield coverage	90 %			

The following are examples of suitable cable types:

Non-hazardous area:

- Siemens 6XV1 830-5BH10
- Belden 3076F
- Kerpen CEL-PE/OSCR/PVC/FRLA FB-02YS(ST)YFL

Maximum overall cable length

The maximum network expansion depends on the type of protection and the cable specifications. The overall cable length combines the length of the main cable and the length of all spurs >1 m (3.28 ft).

The maximum overall cable length for cable type A: 1900 m (6200 ft)

If repeaters are used, the maximum permissible cable length is doubled. A maximum of three repeaters are permitted between the user and master.

Maximum spur length

The line between the distribution box and field device is described as a spur. In the case of non-Ex applications, the max. length of a spur depends on the number of spurs >1 m (3.28 ft):

Number of spurs	Max. length per spur		
112	120 m (400 ft)		
1314	90 m (300 ft)		
1518	60 m (200 ft)		
1924	30 m (100 ft)		
2532	1 m (3 ft)		

Number of field devices

In the case of systems in accordance with the Fieldbus Intrinsically Safe Concept (FISCO) with EEx ia explosion protection, the cable length is limited to a maximum length of $1000 \, \mathrm{m}$ (3300 ft). A maximum of 32 users per segment in non-Ex areas or a maximum of 10 users in an Ex-area (EEx ia IIC) is possible. The actual number of users must be determined during the planning stage.

Bus termination

The start and end of each fieldbus segment must always be terminated by a bus terminator. With various junction boxes (non-Ex), the bus termination can be activated via a switch. If this is not the case, a separate bus terminator must be installed. Please also note the following:


- In the case of a branched bus segment, the device furthest from the segment coupler represents the end of the bus.
- If the fieldbus is extended with a repeater then the extension must also be terminated at both ends.

30

7.1.3 Terminal assignment

Transmitter

Connection version for PROFIBUS PA, pulse/frequency/switch output

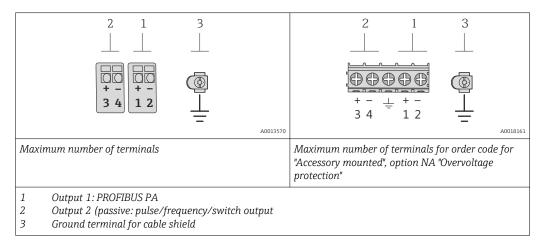

Order code for "Output"	Terminal numbers			
	Output 1		Output 2	
	1 (+)	2 (-)	3 (+)	4 (-)
Option G ^{1) 2)}	PROFIBUS PA		Pulse/frequency/switch output (passive)	

- Output 1 must always be used; output 2 is optional.
- 2) PROFIBUS PA with integrated reverse polarity protection.

7.1.4 Pin assignment, device plug

PROFIBUS PA

Device plug for signal transmission (device side)

	Pin	Assignment		Coding	Plug/socket
$2 \longrightarrow 3$	1	+	PROFIBUS PA +	A	Plug
1 4	2		Grounding		
A0019021	3	-	PROFIBUS PA -		
	4		Not assigned		

7.1.5 Shielding and grounding

PROFIBUS PA

Optimum electromagnetic compatibility (EMC) of the fieldbus system can only be guaranteed if the system components and, in particular, the lines are shielded and the shield forms as complete a cover as possible. A shield coverage of 90% is ideal.

- To ensure an optimum EMC protective effect, connect the shield as often as possible to the reference ground.
- For reasons of explosion protection, you should refrain from grounding however.

To comply with both requirements, the fieldbus system allows three different types of shielding:

- Shielding at both ends.
- Shielding at one end on the feed side with capacitance termination at the field device.
- Shielding at one end on the feed side.

Experience shows that the best results with regard to EMC are achieved in most cases in installations with one-sided shielding on the feed side (without capacitance termination at the field device). Appropriate measures with regard to input wiring must be taken to allow unrestricted operation when EMC interference is present. These measures have been taken into account for this device. Operation in the event of disturbance variables as per NAMUR NE21 is thus quaranteed.

Where applicable, national installation regulations and guidelines must be observed during the installation!


Where there are large differences in potential between the individual grounding points, only one point of the shielding is connected directly with the reference ground. In systems without potential equalization, therefore, cable shielding of fieldbus systems should only be grounded on one side, for example at the fieldbus supply unit or at safety barriers.

NOTICE

In systems without potential matching, the multiple grounding of the cable shield causes mains frequency equalizing currents!

Damage to the bus cable shield.

▶ Only ground the bus cable shield to either the local ground or the protective ground at one end. Insulate the shield that is not connected.

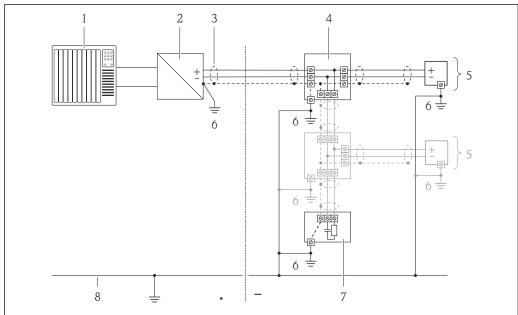

A001900

- 1 Controller (e.g. PLC)
- 2 Segment coupler PROFIBUS DP/PA
- 3 Cable shield
- 4 T-box
- 5 Measuring device
- 6 Local grounding
- 7 Bus terminator
- 8 Potential matching line

32

7.1.6 Requirements for the supply unit

Supply voltage

Transmitter

An external power supply is required for each output.

The following supply voltage values apply for the outputs available:

Order code for "Output"	Minimum terminal voltage	Maximum terminal voltage
Option G : PROFIBUS PA, pulse/frequency/switch output	≥ DC 9 V	DC 32 V

7.1.7 Preparing the measuring device

- 1. Remove dummy plug if present.
- 2. **NOTICE!** Insufficient sealing of the housing! Operational reliability of the measuring device could be compromised. Use suitable cable glands corresponding to the degree of protection.

If measuring device is delivered without cable glands:

Provide suitable cable gland for corresponding connecting cable .

3. If measuring device is delivered with cable glands: Observe cable specification .

7.2 Connecting the measuring device

NOTICE

Limitation of electrical safety due to incorrect connection!


- ▶ Have electrical connection work carried out by correspondingly trained specialists only.
- ▶ Observe applicable federal/national installation codes and regulations.
- ► Comply with local workplace safety regulations.
- ► For use in potentially explosive atmospheres, observe the information in the device-specific Ex documentation.

7.2.1 Connecting the transmitter

The connection of the transmitter depends on the following order codes:

Connection version: terminals or device plug

Connection via terminals

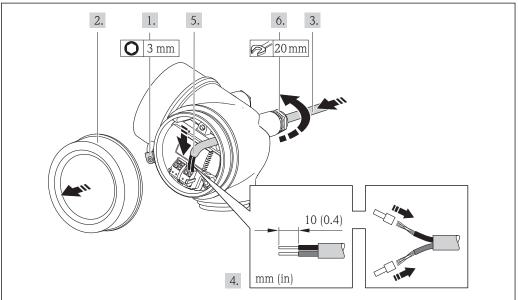


A0013836

- 1. Loosen the securing clamp of the connection compartment cover.
- 2. Unscrew the connection compartment cover.
- 3. Push the cable through the cable entry . To ensure tight sealing, do not remove the sealing ring from the cable entry.
- 4. Strip the cable and cable ends. In the case of stranded cables, also fit ferrules.
- 5. Connect the cable in accordance with the terminal assignment .
- 6. **WARNING!** Housing degree of protection may be voided due to insufficient sealing of the housing. Screw in the screw without using any lubricant. The threads on the cover are coated with a dry lubricant.

Reverse the removal procedure to reassemble the transmitter.


Connection via device plug

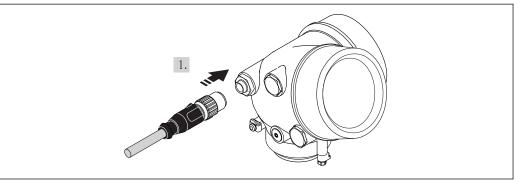

A001914

▶ Plug in the device plug and tighten firmly.

Removing a cable

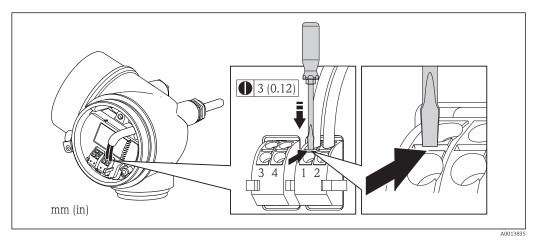

➤ To remove a cable from the terminal, use a flat-blade screwdriver to push the slot between the two terminal holes while simultaneously pulling the cable end out of the terminal.

7.2.2 Ensuring potential equalization

Requirements

A CAUTION

Electrode damage can result in the complete failure of the device!

- ▶ Same electrical potential for the fluid and sensor
- ► Company-internal grounding concepts
- ▶ Pipe material and grounding

For devices intended for use in hazardous locations, please observe the guidelines in the Ex documentation (XA).

Connection example, standard scenario

Metal process connections

Potential equalization is generally via the metal process connections that are in contact with the medium and mounted directly on the sensor. Therefore there is generally no need for additional potential equalization measures.

Connection example in special situations


Plastic process connections

In the case of plastic process connections, additional grounding rings or process connections with an integrated grounding electrode must be used to ensure potential matching between the sensor and the fluid. If there is no potential matching, this can affect the measuring accuracy or cause the destruction of the sensor as a result of the electrochemical decomposition of the electrodes.

Note the following when using grounding rings:

- Depending on the option ordered, plastic disks are used instead of grounding rings on some process connections. These plastic disks only act as "spacers" and do not have any potential matching function. Furthermore, they also perform a significant sealing function at the sensor/connection interface. Therefore, in the case of process connections without metal grounding rings, these plastic disks/seals should never be removed and should always be installed!
- Grounding rings can be ordered separately as an accessory from Endress+Hauser. When ordering make sure that the grounding rings are compatible with the material used for the electrodes, as otherwise there is the danger that the electrodes could be destroyed by electrochemical corrosion!
- Grounding rings, including seals, are mounted inside the process connections. Therefore the installation length is not affected.


Potential equalization via additional grounding ring

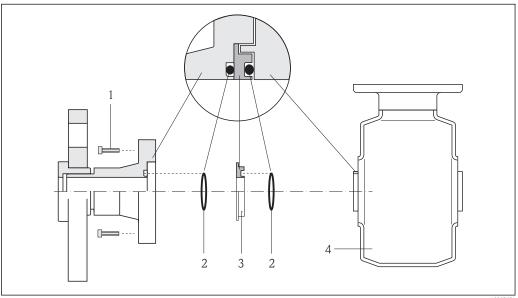

A00026

- 1 Hexagonal-headed bolts of process connection
- 2 O-ring seals
- 3 Plastic disk (spacer) or grounding ring
- 4 Sensor

Potential equalization via grounding electrodes on process connection

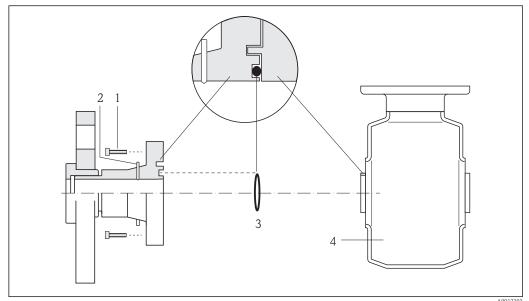


- l Hexagonal-headed bolts of process connection
- 2 Integrated grounding electrodes
- 3 O-ring seal
- 4 Sensor

7.3 Special connection instructions

7.3.1 Connection examples

Pulse/frequency output

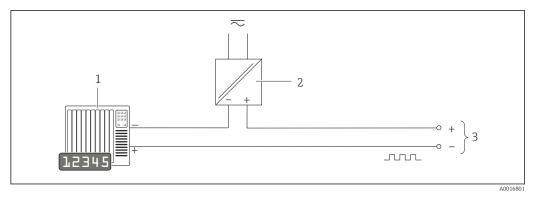


■ 8 Connection example for pulse/frequency output (passive)

- Automation system with pulse/frequency input (e.g. PLC)
- 2 Power supply
- 3 Transmitter: observe input values $\rightarrow \blacksquare 135$

Endress+Hauser 37

A0017293

PROFIBUS-PA

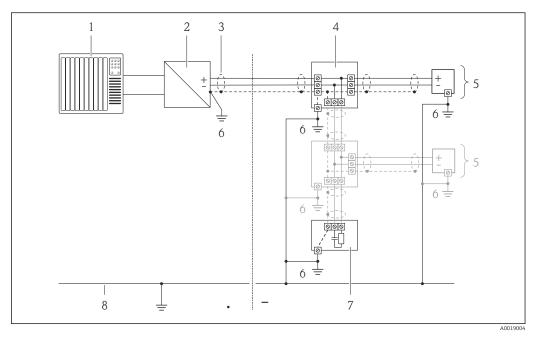

■ 9 Connection example for PROFIBUS-PA


- 1 Control system (e.g. PLC)
- 2 Segment coupler PROFIBUS DP/PA
- 3 Cable shield
- 4 T-box
- 5 Measuring device
- 6 Local grounding
- 7 Bus terminator
- 8 Potential matching line

7.4 Hardware settings

7.4.1 Setting the device address

PROFIBUS PA

The address must always be configured for a PROFIBUS DP/PA device. The valid address range is between 1 and 126. In a PROFIBUS DP/PA network, each address can only be assigned once. If an address is not configured correctly, the device is not recognized by the master. All measuring devices are delivered from the factory with the device address 126 and with the software addressing method.

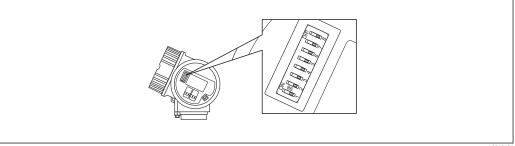

■ 10 Address switch in the connection compartment

38 Endress+Hauser


A001568

Hardware addressing

- 1. Set switch 8 to the "OFF" position.
- 2. Using switches 1 to 7, set the address as indicated in the table below.

The change of address takes effect after 10 seconds. The device is restarted.


Switch	1	2	3	4	5	6	7
Value in "ON" position	1	2	4	8	16	32	64
Value in "OFF" position		0	0	0	0	0	0

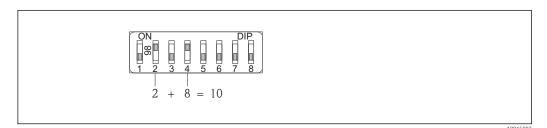

ceil 11 Example of hardware addressing; switch 8 is set to the "OFF" position; switches 1 to 7 define the address.

Software addressing

- 1. Set switch 8 to "ON".
 - The device restarts automatically and reports the current address (factory setting: 126).
- 2. Configuring the address via the operating menu: **Setup** menu→**Communication** submenu→**Device address** parameter

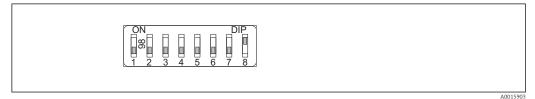

■ 12 Example of software addressing; switch 8 is set to the "ON" position; the address is defined in the operating menu ("Setup" menu "Communication" submenu "Device address" parameter).


7.5 Ensuring the degree of protection

The measuring device fulfills all the requirements for the IP66/67 degree of protection, Type 4X enclosure.

To guarantee IP66/67 degree of protection, Type 4X enclosure, carry out the following steps after the electrical connection:

- 1. Check that the housing seals are clean and fitted correctly. Dry, clean or replace the seals if necessary.
- 2. Tighten all housing screws and screw covers.
- 3. Firmly tighten the cable glands.

4. To ensure that moisture does not enter the cable entry, route the cable so that it loops down before the cable entry ("water trap").

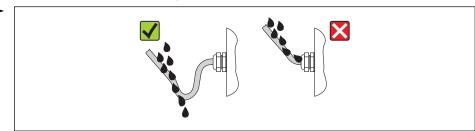

A0013960


5. Insert dummy plugs into unused cable entries.

7.6 Post-connection check

Are cables or the device undamaged (visual inspection)?	
Do the cables comply with the requirements ?	
Do the cables have adequate strain relief?	
Are all the cable glands installed, firmly tightened and leak-tight? Cable run with "water trap" $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $	
Depending on the device version: are all the device plugs firmly tightened ?	
Does the supply voltage match the specifications on the transmitter nameplate ?	
Is the terminal assignment correct ?	
Is the terminal assignment or the pin assignment of the device plug correct?	
If supply voltage is present, do values appear on the display module?	
Is the potential equalization established correctly → 🖺 35?	
Are all housing covers installed and firmly tightened?	
Is the securing clamp tightened correctly?	

Operating options 8

Overview of operating options 8.1

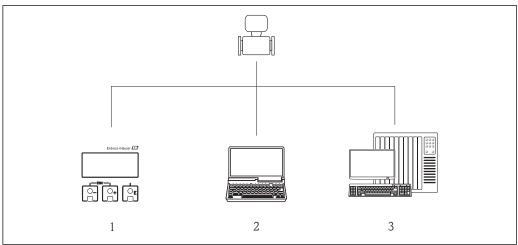


- Local operation via display module Computer with operating tool (e.g. FieldCare, SIMATIC PDM) Automation system (e.g. PLC)

8.2 Structure and function of the operating menu

8.2.1 Structure of the operating menu

For an overview of the operating menu with menus and parameters

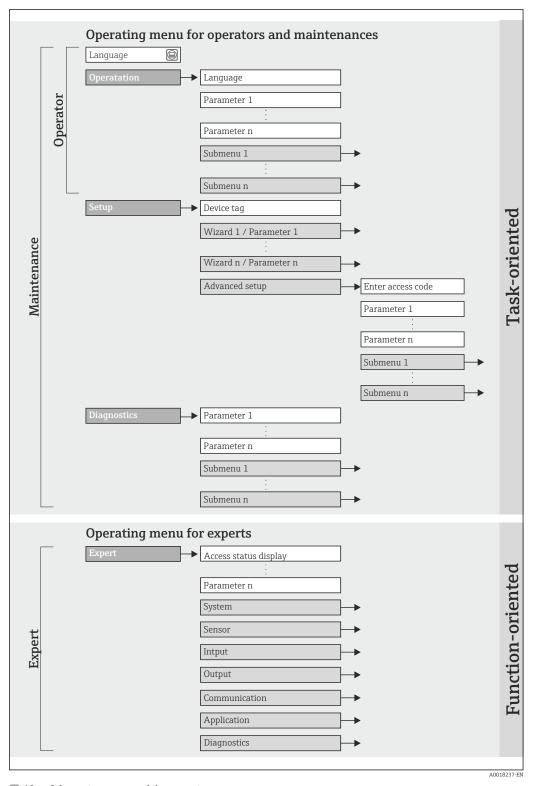

 $\blacksquare 13$ Schematic structure of the operating menu


8.2.2 Operating philosophy

The individual parts of the operating menu are assigned to certain user roles (operator, maintenance etc.). Each user role contains typical tasks within the device lifecycle.

Menu/parameter		User role and tasks	Content/meaning
Language	task-oriented	Role "Operator", "Maintenance"	Defining the operating language
Operation		Tasks during operation: Configuring the operational display Reading measured values	 Configuring the operational display (e.g. display format, display contrast) Resetting and controlling totalizers
Setup		"Maintenance" role Commissioning: Configuration of the measurement Configuration of the inputs and outputs	Wizards for fast commissioning: Configure the outputs Configuring the operational display Define the output conditioning Empty pipe detection Set the low flow cut off
			Advanced setup For more customized configuration of the measurement (adaptation to special measuring conditions) Configuration of totalizers Configuration of electrode cleaning (optional) Administration (define access code, reset measuring device)
Diagnostics		"Maintenance" role Fault elimination: Diagnostics and elimination of process and device errors Measured value simulation	Contains all parameters for error detection and analyzing process and device errors: Diagnostic list Contains up to 5 currently pending diagnostic messages. Event logbook Contains up to 20 or 100 (order option "Extended HistoROM") event messages that have occurred. Device information Contains information for identifying the device. Measured values Contains all current measured values. Analog inputs Is used to display the analog input. Data logging (Order option "Extended HistoROM") Storage and visualization of up to 1000 measured values Heartbeat The functionality of the device is checked on demand and the verification results are documented. Simulation Is used to simulate measured values or output values.
Expert	function-oriented	Tasks that require detailed knowledge of the function of the device: Commissioning measurements under difficult conditions Optimal adaptation of the measurement to difficult conditions Detailed configuration of the communication interface Error diagnostics in difficult cases	Contains all the parameters of the device and makes it possible to access these parameters directly using an access code. The structure of this menu is based on the function blocks of the device: System Contains all higher-order device parameters which do not concern the measurement or the communication interface. Sensor Configuration of the measurement. Output Configuration of the pulse/frequency/status output. Communication Configuration of the digital communication interface. Submenus for function blocks (e.g. "Analog Inputs") Configuration of function blocks. Application Configuration of the functions that go beyond the actual measurement (e.g. totalizer). Diagnostics Error detection and analysis of process and device errors and for device simulation and Heartbeat Technology.

8.3 Access to the operating menu via the local display

8.3.1 Operational display

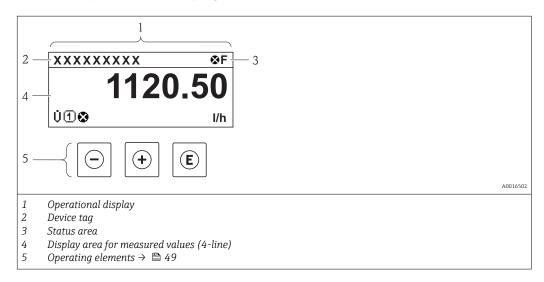


Status area

The following symbols appear in the status area of the operational display at the top right:

- Status signals → 🗎 102
 - **F**: Failure
 - **C**: Function check
 - **S**: Out of specification
 - **M**: Maintenance required
- Diagnostic behavior → 🗎 103
 - 💸: Alarm
 - $-\underline{\Lambda}$: Warning
- 🛱: Locking (the device is locked via the hardware)
- ←: Communication (communication via remote operation is active)

Display area

In the display area, each measured value is prefaced by certain symbol types for further description:

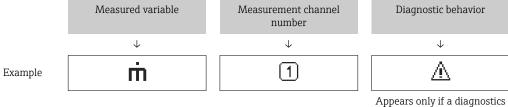

event is present for this measured variable.

Measured variables

Symbol	Meaning
Ü	Volume flow

ṁ	Mass flow
Σ	Totalizer The measurement channel number indicates which of the three totalizers is displayed.

Measurement channel numbers


Symbol	Meaning
14	Measurement channel 1 to 4

The measurement channel number is displayed only if more than one channel is present for the same measured variable type (e.g. totalizer 1-3).

Diagnostic behavior


The number and display format of the measured values can be configured via the "Format display" parameter → 🖺 71. "Operation" menu → Display → Format display

8.3.2 Navigation view

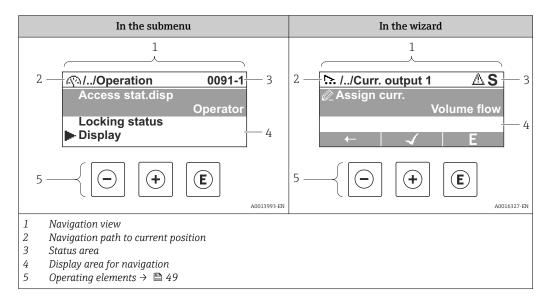

Navigation path

The navigation path - displayed at the top left in the navigation view - consists of the following elements:

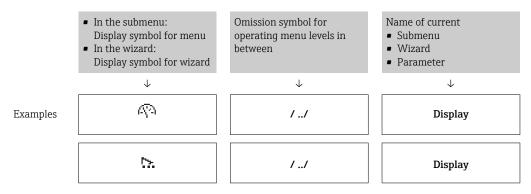

For more information about the menu icons, refer to the "Display area" section $\rightarrow \implies 46$

Status area

The following appears in the status area of the navigation view in the top right corner:

- Of the submenu
 - The direct access code for the parameter you are navigating to (e.g. 0022-1)
 - If a diagnostic event is present, the diagnostic behavior and status signal
- In the wizard

If a diagnostic event is present, the diagnostic behavior and status signal

- i

Display area

Menus

Symbol	Meaning
P	Operation Appears: In the menu next to the "Operation" selection At the left in the navigation path in the "Operation" menu
۶	Setup Appears: In the menu next to the "Setup" selection At the left in the navigation path in the "Setup" menu
્ય	Diagnostics Appears: In the menu next to the "Diagnostics" selection At the left in the navigation path in the "Diagnostics" menu
÷,***	Expert Appears: In the menu next to the "Expert" selection At the left in the navigation path in the "Expert" menu

Submenus, wizards, parameters

Symbol	Meaning
•	Submenu
15.	Wizard
Ø	Parameters within a wizard No display symbol exists for parameters in submenus.


Locking

Symbol	Meaning
û	Parameter locked When displayed in front of a parameter name, indicates that the parameter is locked. By a user-specific access code By the hardware write protection switch

Wizard operation

Symbol	Meaning
—	Switches to the previous parameter.
√	Confirms the parameter value and switches to the next parameter.
E	Opens the editing view of the parameter.

8.3.3 Editing view

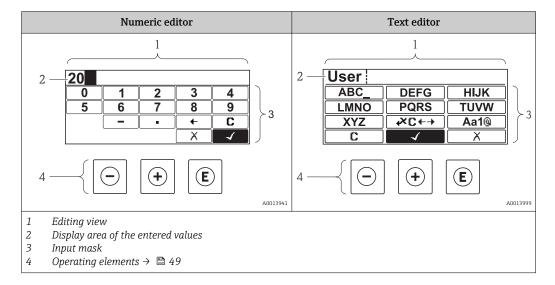

Input mask

The following input symbols are available in the input mask of the numeric and text editor:

Numeric editor

Symbol	Meaning
9	Selection of numbers from 0 to 9.
·	Inserts decimal separator at the input position.
_	Inserts minus sign at the input position.
√	Confirms selection.
+	Moves the input position one position to the left.
X	Exits the input without applying the changes.
С	Clears all entered characters.

Text editor

Symbol	Meaning
(Aa1@)	Toggle Between upper-case and lower-case letters For entering numbers For entering special characters
ABC_ XYZ	Selection of letters from A to Z.
abc _ xyz	Selection of letters from a to z.
····^ ~&	Selection of special characters.
√	Confirms selection.
€×C←→	Switches to the selection of the correction tools.
X	Exits the input without applying the changes.
C	Clears all entered characters.

Correction symbols under \bowtie

Symbol	Meaning		
C	Clears all entered characters.		
\rightarrow	Moves the input position one position to the right.		
€	Moves the input position one position to the left.		
**	Deletes one character immediately to the left of the input position.		

8.3.4 Operating elements

Key	Meaning
	Minus key
	In a menu, submenu Moves the selection bar upwards in a choose list.
	With a Wizard Confirms the parameter value and goes to the previous parameter.
	With a text and numeric editor In the input mask, moves the selection bar to the left (backwards).
	Plus key
	In a menu, submenu Moves the selection bar downwards in a choose list.
(+)	With a Wizard Confirms the parameter value and goes to the next parameter.
	With a text and numeric editor Moves the selection bar to the right (forwards) in an input screen.
	Enter key
	For operational display Pressing the key briefly opens the operating menu. Pressing the key for 2 s opens the context menu.
E	 In a menu, submenu Pressing the key briefly: Opens the selected menu, submenu or parameter. Starts the wizard. If help text is open, closes the help text of the parameter. Pressing the key for 2 s for parameter: If present, opens the help text for the function of the parameter.
	With a Wizard Opens the editing view of the parameter.
	With a text and numeric editor ■ Pressing the key briefly: - Opens the selected group. - Carries out the selected action. ■ Pressing the key for 2 s confirms the edited parameter value.
	Escape key combination (press keys simultaneously)
(a)+(+)	 In a menu, submenu Pressing the key briefly: Exits the current menu level and takes you to the next higher level. If help text is open, closes the help text of the parameter. Pressing the key for 2 s returns you to the operational display ("home position").
	With a Wizard Exits the wizard and takes you to the next higher level.
	With a text and numeric editor Closes the text or numeric editor without applying changes.
	Minus/Enter key combination (press the keys simultaneously)
- + E	Reduces the contrast (brighter setting).
(A)+(E)	Plus/Enter key combination (press and hold down the keys simultaneously)
(+)+(E)	Increases the contrast (darker setting).
-++E	Minus/Plus/Enter key combination (press the keys simultaneously) For operational display Enables or disables the keypad lock (only SD02 display module).

8.3.5 Opening the context menu


Using the context menu, the user can call up the following menus quickly and directly from the operational display: $\frac{1}{2} \left(\frac{1}{2} \right) = \frac{1}{2} \left(\frac{1}{2} \right) \left(\frac{$

- Setup
- Conf. backup disp.
- Simulation

Calling up and closing the context menu

The user is in the operational display.

- 1. Press E for 2 s.
 - └ The context menu opens.

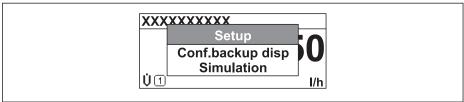

A0016326-l

- 2. Press \Box + \pm simultaneously.
 - $\begin{tabular}{ll} \end{tabular}$ The context menu is closed and the operational display appears.

Calling up the menu via the context menu


- 1. Open the context menu.
- 2. Press 🛨 to navigate to the desired menu.
- 3. Press **E** to confirm the selection.
 - ► The selected menu opens.

8.3.6 Navigating and selecting from list

Different operating elements are used to navigate through the operating menu. The navigation path is displayed on the left in the header. Icons are displayed in front of the individual menus. These icons are also shown in the header during navigation.

For an explanation of the navigation view with symbols and operating elements $\Rightarrow \triangleq 45$

Example: Setting the number of displayed measured values to "2 values"

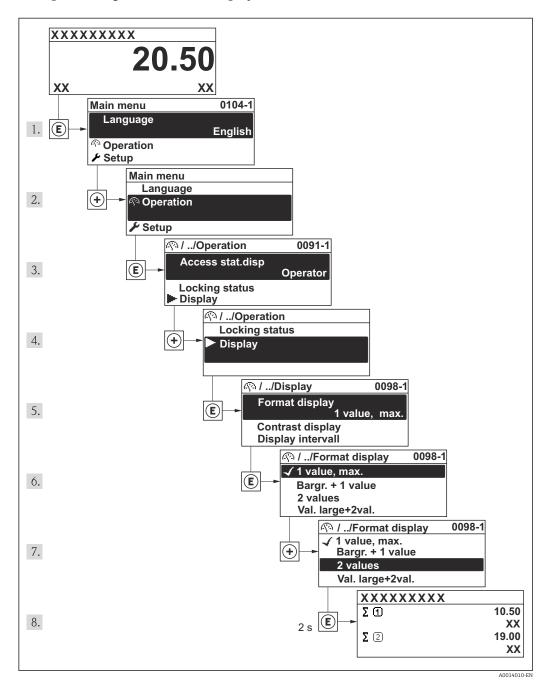


8.3.7 Calling the parameter directly

A parameter number is assigned to every parameter to be able to access a parameter directly via the onsite display. Entering this access code in the **Direct access** parameter calls up the desired parameter directly.

Navigation path

"Expert" menu → Direct access

The direct access code consists of a 4-digit number and the channel number, which identifies the channel of a process variable: e.g. 0914-1. In the navigation view, this appears on the right-hand side in the header of the selected parameter.

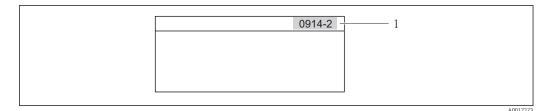

1 Direct access code

Note the following when entering the direct access code:

- The leading zeros in the direct access code do not have to be entered. Example: Input of "914" instead of "0914"
- If no channel number is entered, channel 1 is jumped to automatically.
 Example: Input of "0914" → Parameter Totalizer 1
- If a different channel is jumped to: Enter the direct access code with the corresponding channel number.

Example: Input of "0914-2" → Parameter **Totalizer 2**

For the direct access codes of the individual parameters


8.3.8 Calling up help text

For some parameters, help texts exist, which the user can call up from the navigation view. These briefly describe the function of the parameter and thus support fast and reliable commissioning.

Calling up and closing the help text

The user is in the navigation view and the selection bar is on a parameter.

- 1. Press E for 2 s.
 - └ The help text for the selected parameter opens.

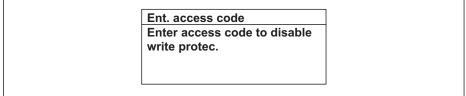

A0014002-E


■ 14 Example: Help text for parameter "Enter access code"

- 2. Press \Box + \pm simultaneously.
 - ► The help text is closed.

8.3.9 Changing the parameters

For a description of the editing display - consisting of text editor and numeric editor - with symbols $\rightarrow \stackrel{\triangle}{=} 47$, for a description of the operating elements $\rightarrow \stackrel{\triangle}{=} 49$

Example: Changing the tag name in the "Tag description" parameter from 001-FT-101 to 001-FT-102

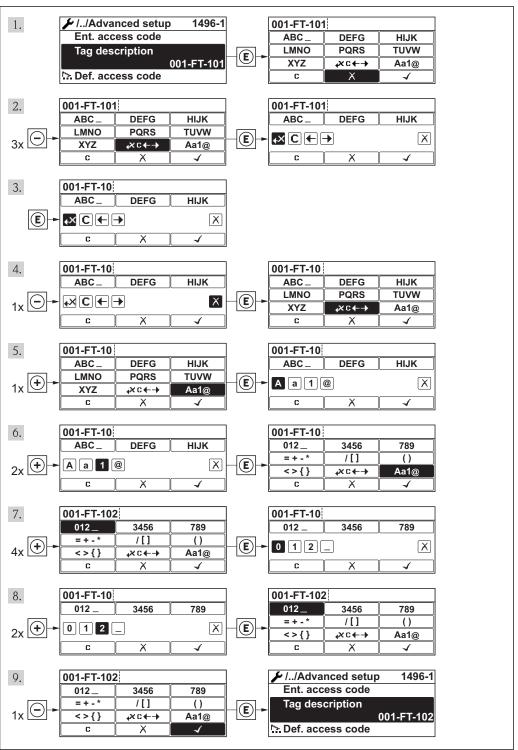

A0014020-EN

A message is displayed if the value entered is outside the permitted value range.

Ent. access code
Invalid or out of range input
value
Min:0
Max:9999

A0014049-E

8.3.10 User roles and related access authorization


The two user roles "Operator" and "Maintenance" have different write access to the parameters if the customer defines a user-specific access code. This protects the device configuration via the local display from unauthorized access .

Access authorization to parameters

User role	Read access		Write	access
	Without access code (from the factory)		Without access code (from the factory)	With access code
Operator	V	V	V	1)
Maintenance	V	V	V	V

 Despite the defined access code, certain parameters can always be modified and thus are excepted from the write protection, as they do not affect the measurement. Refer to the "Write protection via access code" section

If an incorrect access code is entered, the user obtains the access rights of the "Operator" role.

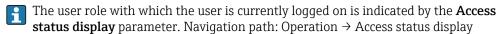

8.3.11 Disabling write protection via access code

If the $\widehat{\mathbb{H}}$ -symbol appears on the local display in front of a parameter, the parameter is write-protected by a user-specific access code and its value cannot be changed at the moment using the local display .

The locking of the write access via local operation can be disabled by entering the customer-defined access code via the respective access option.

- 1. After you press **E**, the input prompt for the access code appears.
- 2. Enter the access code.

8.3.12 Enabling and disabling the keypad lock

The keypad lock makes it possible to block access to the entire operating menu via local operation. As a result, it is no longer possible to navigate through the operating menu or change the values of individual parameters. Users can only read the measured values on the operational display.

Local operation with mechanical push buttons (display module SD02)

🚹 Display module SD02: order characteristic "Display; Operation", option **C**

The keypad lock is switched on and off in the same way:

Switching on the keypad lock

- lacktriangle The device is in the measured value display.
 - Press the \Box + \pm + \blacksquare keys simultaneously.
 - $\begin{tabular}{ll} \label{table} \end{tabular}$ The message **Keylock on** appears on the display: The keypad lock is switched on.
- If the user attempts to access the operating menu while the keypad lock is active, the message **Keylock on** appears.

Switching off the keypad lock

- ► The keypad lock is switched on.
 - Press the \Box + \pm + \blacksquare keys simultaneously.
 - The message **Keylock off** appears on the display: The keypad lock is switched off.

Local operation with touch control (display module SD03)

Display module SD03: Order characteristic "Display; Operation", option **E**

The keypad lock is switched on and off via the context menu.

Switching on the keypad lock

The keypad lock is switched on automatically:

- Each time the device is restarted.
- If the device has not been operated for longer than one minute in the measured value display.
- 1. The device is in the measured value display.
 - Press the E key for longer than 2 seconds.
 - ► A context menu appears.
- 2. In the context menu, select the **Keylock on** option.
 - ► The keypad lock is switched on.
- If the user attempts to access the operating menu while the keypad lock is active, the message **Keylock on** appears.

Switching off the keypad lock

- 1. The keypad lock is switched on.
 - Press the E key for longer than 2 seconds.
 - ► A context menu appears.
- 2. In the context menu, select the **Keylock off** option.
 - ► The keypad lock is switched off.


8.4 Access to the operating menu via the operating tool

The structure of the operating menu in the operating tools is the same as for operation via the local display.

8.4.1 Connecting the operating tool

Via PROFIBUS PA network


This communication interface is available in device versions with PROFIBUS PA.

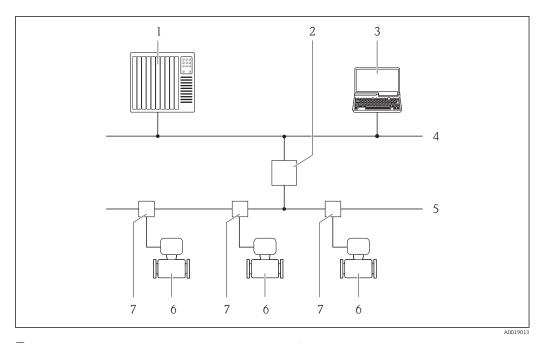

■ 15 Options for remote operation via PROFIBUS PA network

- 1 Automation system
- 2 Segment coupler PROFIBUS DP/PA
- 3 Computer with PROFIBUS network card
- 4 PROFIBUS DP network
- 5 PROFIBUS PA network
- 6 Measuring device
- 7 T-box

Via service interface (CDI)

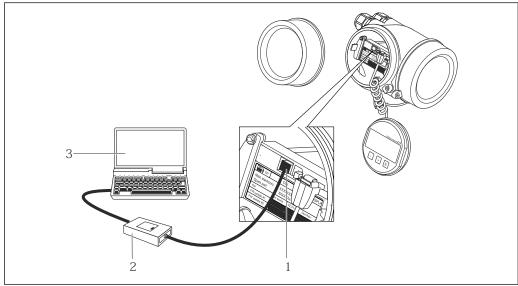

- A001401
- 1 Service interface (CDI = Endress+Hauser Common Data Interface) of the measuring device
- 2 Commubox FXA291
- 3 Computer with "FieldCare" operating tool with COM DTM "CDI Communication FXA291"

8.4.2 FieldCare

Function scope

FDT-based plant asset management tool from Endress+Hauser. It can configure all smart field devices in a system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition.

Access is via:

- PROFIBUS PA protocol → 15, 56
- Service interface CDI → 🖺 56

Typical functions:


- Configuring parameters of transmitters
- Loading and saving device data (upload/download)
- Documentation of the measuring point
- Visualization of the measured value memory (line recorder) and event logbook
- For details, see Operating Instructions BA00027S and BA00059S

Source for device description files

Establishing a connection

For details, see Operating Instructions BA00027S and BA00059S

User interface

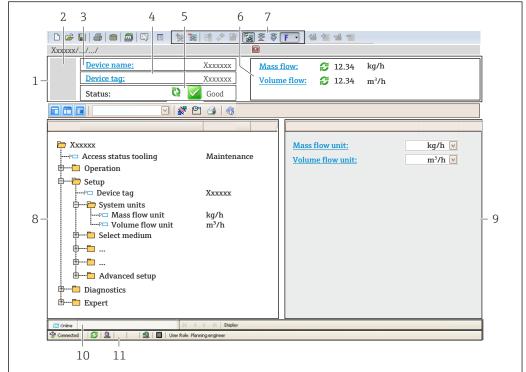

A0021051-EN

- 1 Header
- 2 Picture of device
- 3 Device name
- 4 Tag name
- 5 Status area with status signal
- 6 Display area for current measured values
- 7 Edit toolbar with additional functions such as save/restore, event list and create documentation
- 8 Navigation area with operating menu structure
- 9 Working area
- 10 Range of action
- 11 Status area

8.4.3 SIMATIC PDM

Function scope

SIMATIC PDM is a standardized, manufacturer-independent program from Siemens for the operation, configuration, maintenance and diagnosis of intelligent field devices via PROFIBUS PA protocol.

Source for device description files

See data $\rightarrow \blacksquare 59$

9 System integration

9.1 Overview of device description files

9.1.1 Current version data for the device

Firmware version	01.01.zz	 On the title page of the Operating instructions On the transmitter nameplate →
Release date of firmware version	06.2015	
Manufacturer ID	0x11	Manufacturer ID "Diagnostics" menu → Device information → Manufacturer ID
Device type ID	0x1563	Device type "Diagnostics" menu → Device information → Device type
Profile version	3.02	

For an overview of the different firmware versions for the device $\rightarrow \stackrel{\triangle}{=} 127$

9.1.2 Operating tools

The suitable device description file for the individual operating tools is listed in the table below, along with information on where the file can be acquired.

Operating tool via PROFIBUS protocol	Sources for obtaining device descriptions	
FieldCare	 www.endress.com → Download Area CD-ROM (contact Endress+Hauser) DVD (contact Endress+Hauser) 	
SIMATIC PDM (Siemens)	www.endress.com → Download Area	

9.2 Device master file (GSD)

In order to integrate field devices into a bus system, the PROFIBUS system needs a description of the device parameters, such as output data, input data, data format, data volume and supported transmission rate.

These data are available in the device master file (GSD) which is provided to the PROFIBUS Master when the communication system is commissioned. In addition device bit maps, which appear as icons in the network structure, can also be integrated.

With the Profile 3.0 device master file (GSD) it is possible to exchange field devices made by different manufacturers without having to reconfigure.

Generally speaking two different GSD versions are possible with Profile 3.0 and higher.

- Before configuring, the user must decide which GSD should be used to operate the system.
 - The setting can be changed via a Class 2 master.

9.2.1 Manufacturer-specific GSD

This GSD guarantees the unrestricted functionality of the measuring device. Device-specific process parameters and functions are therefore available.

Manufacturer-specific GSD	ID number	File name
PROFIBUS PA	0x1564	EH3x1564.gsd

The fact that the manufacturer-specific GSD should be used is specified in the **Ident number selector** parameter by selecting the **Manufacturer** option.

A

Where to acquire the manufacturer-specific GSD:

www.endress.com → Download Area

9.2.2 Profile GSD

Differs in terms of the number of Analog Input blocks (AI) and the measured values. If a system is configured with a Profile GSD, it is possible to exchange devices made by different manufacturers. However, it is essential to ensure that the order of the cyclic process values is correct.

ID number	Supported blocks	Supported channels	
0x9740	1 Analog Input1 Totalizer	Channel Analog Input: volume flowChannel totalizer: volume flow	
0x9741	2 Analog Input1 Totalizer	 Channel Analog Input 1: volume flow Channel Analog Input 2: mass flow Channel totalizer: volume flow 	
0x9742	3 Analog Input1 Totalizer	 Channel Analog Input 1: volume flow Channel Analog Input 2: mass flow Channel Analog Input 3: corrected volume flow Channel totalizer: volume flow 	

The Profile GSD that is to be used is specified in the **Ident number selector** parameter by selecting the **Profile 0x9740** option, **Profile 0x9741** option or **Profile 0x9742** option.

9.3 Cyclic data transmission

Cyclic data transmission when using the device master file (GSD).

9.3.1 Block model

The block model shows which input and output data the measuring device makes available for cyclic data exchange. Cyclic data exchange takes place with a PROFIBUS master (Class 1), e.g. a control system etc.

Measuring device				Control system	
	Analog Input block 1 to 2	→ 🖺 61	Output value AI	\rightarrow	
			Output value TOTAL	\rightarrow	
Transducer	Totalizer block 1 to 3	→ 🖺 62	Controller SETTOT	←	
Block			Configuration MODETOT	←	PROFIBUS PA
	Discrete Input block 1 to 2	→ 🖺 64	Output values DI	\rightarrow	
	Discrete Output block 1 to 3	→ 🖺 64	Input values DO	+	

Defined order of modules

The measuring device works as a modular PROFIBUS slave. In contrast to a compact slave, a modular slave has a variable design and consists of several individual modules. The device master file (GSD) contains a description of the individual modules (input and output data) along with their individual properties.

The modules are permanently assigned to the slots, i.e. when configuring the modules, the order and the arrangement of the modules must be respected.

Slot	Module	Function block
12	AI	Analog Input block 1 to 2
3	TOTAL or SETTOT_TOTAL or SETOT MODETOT TOTAL	Totalizer block 1
4		Totalizer block 2
5		Totalizer block 3
67	DI	Discrete Input block 1 to 2
810	DO	Discrete Output block 1 to 3

To optimize the data throughput rate of the PROFIBUS network, it is advisable to only configure modules that are processed in the PROFIBUS master system. If this results in gaps between the configured modules, these gaps must be assigned to the EMPTY_MODULE.

9.3.2 Description of the modules



The data structure is described from the perspective of the PROFIBUS master:

- Input data: Are sent from the measuring device to the PROFIBUS master.
- Output data: Are sent from the PROFIBUS master to the measuring device.

AI module (Analog Input)

Transmit an input variable from the measuring device to the PROFIBUS master (Class 1).

The selected input variable, along with the status, is cyclically transmitted to the PROFIBUS Master (Class 1) via the AI module. The input variable is depicted in the first four bytes in the form of a floating point number as per the IEEE 754 standard. The fifth byte contains standardized status information pertaining to the input variable.

Four Analog Input blocks are available (slot 1 to 2).

Selection: input variable

The input variable can be specified using the CHANNEL parameter.

CHANNEL	Input variable
9	Volume flow
11	Mass flow

Factory setting

Function block	Factory setting
AI 1	Volume flow
AI 2	Mass flow

Data structure

Input data of Analog Input

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5
Measure	Measured value: floating point number (IEEE 754)			

TOTAL module

Transmit a totalizer value from the measuring device to the PROFIBUS master (Class 1).

A selected totalizer value, along with the status, is cyclically transmitted to a PROFIBUS Master (Class 1) via the TOTAL module. The totalizer value is depicted in the first four bytes in the form of a floating point number as per the IEEE 754 standard. The fifth byte contains standardized status information pertaining to the totalizer value.

Three Totalizer blocks are available (slot 3 to 5).

Selection: totalizer value

The totalizer value can be specified using the CHANNEL parameter.

CHANNEL	Input variable
9	Mass flow
11	Volume flow

Factory setting

Function block	Factory setting: TOTAL
Totalizer 1, 2 and 3	Volume flow

Data structure

Input data of TOTAL

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5
Measured value: floating point number			EEE 754)	Status

SETTOT_TOTAL module

The module combination consists of the SETTOT and TOTAL functions:

- SETTOT: Control the totalizers via the PROFIBUS master.
- TOTAL: Transmit totalizer value, along with the status, to the PROFIBUS master.

Three Totalizer blocks are available (slot 3 to 5).

Selection: control totalizer

Value SETTOT	Control totalizer	
0	Totalize	
1	Resetting	
2	Adopt totalizer initial setting	

Factory setting

Function block	Factory setting: Value SETTOT (meaning)
Totalizer 1, 2 and 3	0 (totalizing)

Data structure

Output data of SETTOT

Byte 1
Control variable 1

Input data of TOTAL

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5
Measured value: floating po		point number (IE	EEE 754)	Status

SETTOT_MODETOT_TOTAL module

The module combination consists of the SETTOT, MODETOT and TOTAL functions:

- SETTOT: Control the totalizers via the PROFIBUS master.
- MODETOT: Configure the totalizers via the PROFIBUS master.
- TOTAL: Transmit totalizer value, along with the status, to the PROFIBUS master.

Three Totalizer blocks are available (slot 3 to 5).

Selection: totalizer configuration

MODETOT value	Totalizer configuration
0	Balancing
1	Balance the positive flow
2	Balance the negative flow
3	Stop totalizing

Factory setting

Function block	Factory setting: Value MODETOT (meaning)
Totalizer 1, 2 and 3	0 (balancing)

Data structure

Output data of SETTOT and MODETOT

Byte 1	Byte 2	
Control variable 1: SETTOT	Control variable 2: MODETOT	

Input data of TOTAL

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5
Measured value: floating p		point number (IE	EEE 754)	Status

DI module (Discrete Input)

Transmit discrete input values from the measuring device to the PROFIBUS master (Class 1). Discrete input values are used by the measuring device to transmit the state of device functions to the PROFIBUS master (Class 1).

The DI module cyclically transmits the discrete input value, along with the status, to the PROFIBUS Master (Class 1). The discrete input value is depicted in the first byte. The second byte contains standardized status information pertaining to the input value.

Two Discrete Input blocks are available (slot 6 to 7).

Selection: device function

The device function can be specified using the CHANNEL parameter.

CHANNEL	Device function	Factory setting: Status (meaning)
893	Status switch output	
894	Empty pipe detection	 0 (device function not active) 1 (device function active)
895	Low flow cut off	
1430	Status verification 1)	

1) Only available with the Heartbeat Verification application package

Factory setting

Function block	Factory setting
DI 1	Empty pipe detection
DI 2	Low flow cut off

Data structure

Input data of Discrete Input

	Byte 1	Byte 2	
ſ	Discrete	Status	

DO module (Discrete Output)

Transmit discrete output values from the PROFIBUS master (Class 1) to the measuring device. Discrete output values are used by the PROFIBUS master (Class 1) to enable and disable device functions.

The DO module cyclically transmits the discrete output value, along with the status, to the measuring device. The discrete output value is depicted in the first byte. The second byte contains standardized status information pertaining to the output value.

Three Discrete Output blocks are available (slot 8 to 10).

Assigned device functions

A device function is permanently assigned to the individual Discrete Output blocks.

CHANNEL	Function block	Device function	Values: control (meaning)
891	DO 1	Flow override	
253	DO 2	Pulse/freq./switch output	0 (disable device function)1 (enable device function)
1429	DO 3	Start verification 1)	

¹⁾ Only available with the Heartbeat Verification application package

Data structure

Output data of Discrete Output

Byte 1	Byte 2
Discrete	Status

EMPTY_MODULE module

10 Commissioning

10.1 Function check

Before commissioning the measuring device:

- ▶ Make sure that the post-installation and post-connection checks have been performed.
- "Post-installation check" checklist → 🖺 27
- "Post-connection check" checklist → 🖺 40

10.2 Switching on the measuring device

- ▶ After a successful function check, switch on the measuring device.
 - After a successful startup, the local display switches automatically from the startup display to the operational display.

10.3 Configuring the device address via software

In the "Communication" submenu the device address can be set.

Navigation

"Setup" menu \rightarrow Communication \rightarrow Device address


10.3.1 PROFIBUS network

At time of delivery, the measuring device has the following factory setting:

🚹 If hardware addressing is active, software addressing is blocked → 🖺 38

10.4 Setting the operating language

Factory setting: English or ordered local language

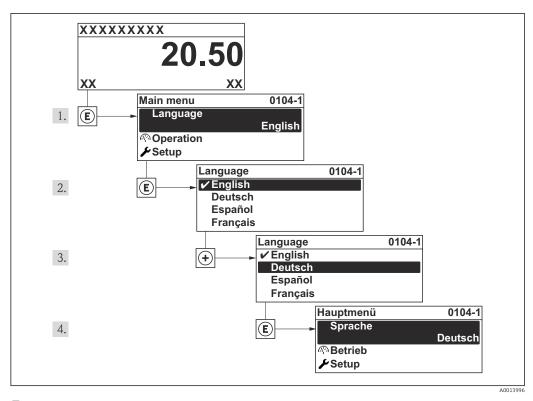


Taking the example of the local display

10.5 Configuring the measuring device

The **Setup** menuwith its guided wizards contains all the parameters needed for standard operation.


Navigation to the **Setup** menu

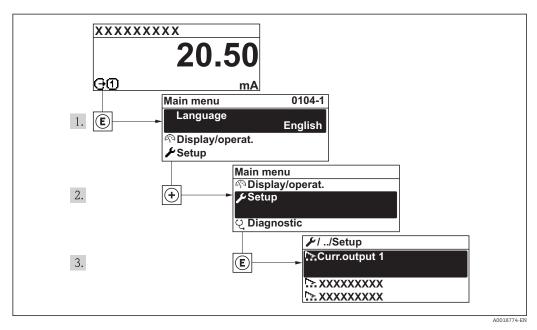

Illustrated using the example of the local display


Navigation

"Setup" menu

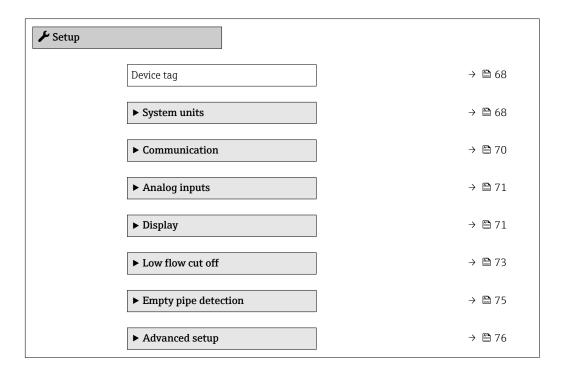

10.5.1 Defining the tag name

To enable fast identification of the measuring point within the system, you can enter a unique designation using the **Device tag** parameter and thus change the factory setting.

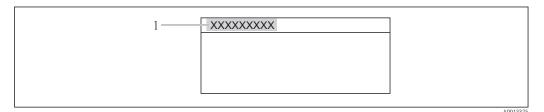

■ 18 Header of the operational display with tag name

1 Device tag

➡ The number of characters displayed depends on the characters used.

■ Enter the tag name in the "FieldCare" operating tool → 🖺 58

Navigation

"Setup" menu → Device tag

Parameter overview with brief description

Parameter	Description	User entry	Factory setting
Device tag	31	Max. 32 characters such as letters, numbers or special characters (e.g. @, %, /).	Promag 200 PA

10.5.2 Setting the system units

In the **System units** submenu the units of all the measured values can be set.

 $\begin{array}{l} \textbf{Navigation} \\ \text{"Setup" menu} \rightarrow \text{System units} \end{array}$

► System units	
Volume flow unit	
Volume unit	
Mass flow unit	
Mass unit	
Density unit	
Temperature unit	

Parameter overview with brief description

Parameter	Description	Selection	Factory setting
Volume flow unit	Select volume flow unit. Result The selected unit applies for: Output Low flow cut off Simulation process variable	Unit choose list	Country-specific: l/h gal/min (us)
Volume unit	Select volume unit.	Unit choose list	Country-specific: m³ gal (us)
Mass flow unit	Select mass flow unit. Result The selected unit applies for: Output Low flow cut off Simulation process variable	Unit choose list	Country-specific: kg/h lb/min
Mass unit	Select mass unit.	Unit choose list	Country-specific: kg lb
Density unit	Select density unit. Result The selected unit applies for: Output Simulation process variable	Unit choose list	Country-specific: kg/l lb/ft ³
Temperature unit	Select temperature unit. Result The selected unit applies for: Maximum value Minimum value Maximum value Minimum value Average value	Unit choose list	Country-specific: • °C • °F

10.5.3 Configuring communication interface

The **Communication** submenu guides you systematically through all the parameters that have to be configured for selecting and setting the communication interface.

Navigation

"Setup" menu \rightarrow Communication




Parameter overview with brief description

Parameter	Description	User entry	Factory setting
Device address	Enter device address.	0 to 126	126

10.5.4 Configuring the analog inputs

Navigation

"Setup" menu \rightarrow Analog inputs

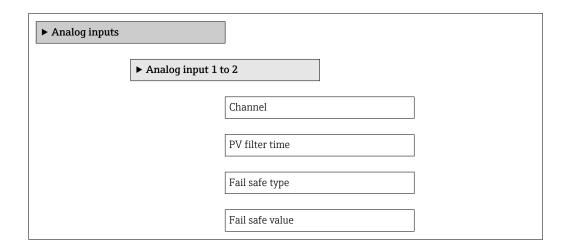

Parameter overview with brief description

Parameter	Prerequsite	Description	Selection / User entry	Factory setting
Channel	-	Select the process variable.	Volume flowMass flow	Volume flow
PV filter time	-	Specify the time to suppress signal peaks. During the specified time the analog input does not respond to an erratic increase in the process variable.	Positive floating- point number	0
Fail safe type	-	Select the failure mode.	Fail safe valueFallback valueOff	Off
Fail safe value	In Fail safe type parameter, the Fail safe value option is selected.	Specify the values to be output when an error occurs.	Signed floating-point number	0


10.5.5 Configuring the local display

The **Display** wizard guides you systematically through all the parameters that can configured for configuring the local display.

Navigation

"Setup" menu → Display

Structure of the wizard

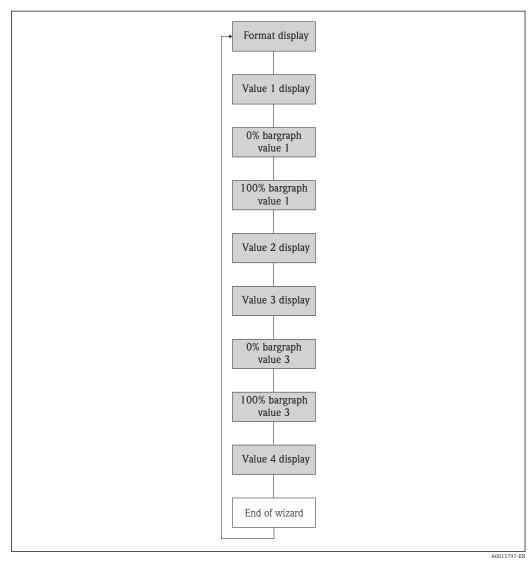

■ 19 "Display" wizard in the "Setup" menu

Parameter overview with brief description

Parameter	Prerequsite	Description	Selection / User entry	Factory setting
Format display	A local display is provided.	Select how measured values are shown on the display.	 1 value, max. size 1 bargraph + 1 value 2 values 1 value large + 2 values 4 values 	1 value, max. size
Value 1 display	A local display is provided.	Select the measured value that is shown on the local display.	 Volume flow Mass flow Totalizer 1 Totalizer 2 Totalizer 3 	Volume flow

Parameter	Prerequsite	Description	Selection / User entry	Factory setting
0% bargraph value 1	A local display is provided.	Enter 0% value for bar graph display.	Signed floating-point number	Country-specific: 0 1/h 0 gal/min (us)
100% bargraph value 1	A local display is provided.	Enter 100% value for bar graph display.	Signed floating-point number	Depends on country and nominal diameter
Value 2 display	A local display is provided.	Select the measured value that is shown on the local display.	Picklist see Value 1 display parameter	None
Value 3 display	A local display is provided.	Select the measured value that is shown on the local display.	Picklist see Value 1 display parameter	None
0% bargraph value 3	A selection has been made in the Value 3 display parameter.	Enter 0% value for bar graph display.	Signed floating-point number	Country-specific: • 0 l/h • 0 gal/min (us)
100% bargraph value 3	An option was selected in the Value 3 display parameter.	Enter 100% value for bar graph display.	Signed floating-point number	Depends on country and nominal diameter
Value 4 display	A local display is provided.	Select the measured value that is shown on the local display.	Picklist see Value 1 display parameter	None


10.5.6 Configuring the low flow cut off

The **Low flow cut off** wizard guides you systematically through all the parameters that have to be set for configuring the low flow cut off.

Navigation

"Setup" menu \rightarrow Low flow cut off

Structure of the wizard

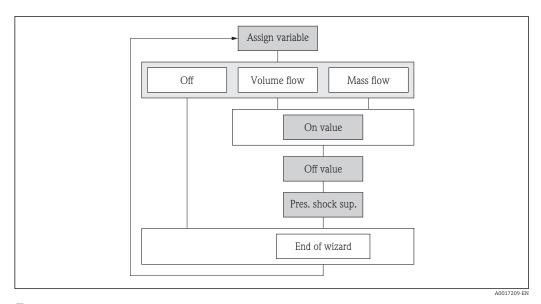

■ 20 "Low flow cut off" wizard in the "Setup" menu

Parameter overview with brief description

Parameter	Prerequsite	Description	Selection / User entry	Factory setting
Assign process variable	-	Select process variable for low flow cut off.	 Off Volume flow Mass flow	Volume flow
On value low flow cutoff	One of the following options is selected in the Assign process variable parameter (→ 🖺 74): • Volume flow • Mass flow	Enter on value for low flow cut off.	Signed floating-point number	Depends on country and nominal diameter
Off value low flow cutoff	One of the following options is selected in the Assign process variable parameter (→ 🗎 74): Volume flow Mass flow	Enter off value for low flow cut off.	0 to 100.0 %	50 %
Pressure shock suppression	One of the following options is selected in the Assign process variable parameter (→ 🗎 74): • Volume flow • Mass flow	Enter time frame for signal suppression (= active pressure shock suppression).	0 to 100 s	0 s

74


10.5.7 Configuring empty pipe detection

The **Empty pipe detection** wizard guides you systematically through all the parameters that have to be set for configuring empty pipe detection.

Navigation

"Setup" menu \rightarrow Empty pipe detection

Structure of the wizard

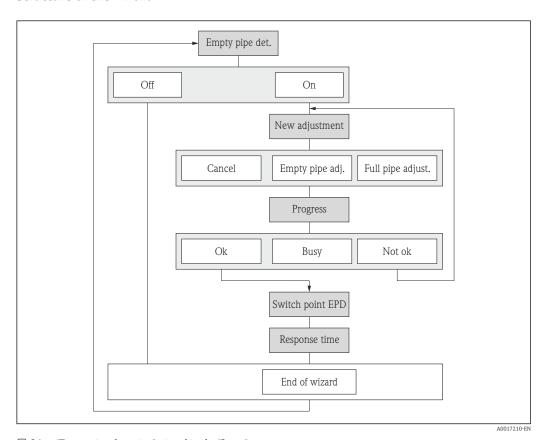

 \blacksquare 21 "Empty pipe detection" wizard in the "Setup" menu


Parameter overview with brief description

Parameter	Prerequsite	Description	Selection / User interface / User entry	Factory setting
Empty pipe detection	-	Switch empty pipe detection on and off.	OffOn	Off
New adjustment	The On option is selected in the Empty pipe detection parameter.	Select type of adjustment.	CancelEmpty pipe adjustFull pipe adjust	Cancel
Progress	The On option is selected in the Empty pipe detection parameter.	Shows the progress.	OkBusyNot ok	-
Switch point empty pipe detection	The On option is selected in the Empty pipe detection parameter.	Enter hysteresis in %, below this value the measuring tube will detected as empty.	1 to 99 %	10 %
Response time empty pipe detection	In the Empty pipe detection parameter, the On option is selected.	Enter the time before diagnostic message S862 'Pipe empty' is displayed for empty pipe detection.	0 to 100 s	1 s

10.6 Advanced settings

The **Advanced setup** submenu with its submenus contains parameters for specific settings.

Navigation to the "Advanced setup" submenu

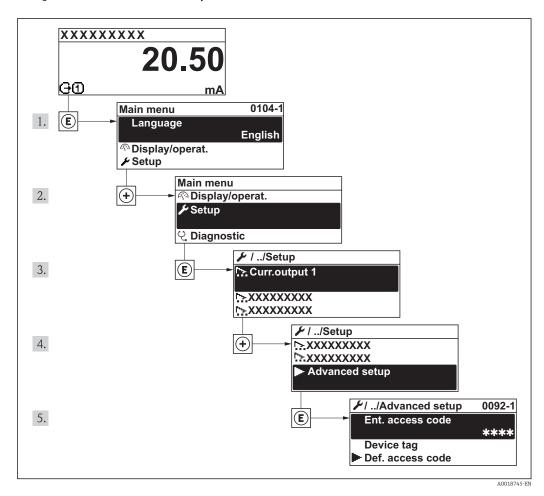


For detailed information on the parameter descriptions of the **Heartbeat Verification** application package, see the Special Documentation for the device

Navigation

"Setup" menu → Advanced setup

► Advanced setup	
Enter access code	
► Sensor adjustment	→ 🖺 77
► Pulse/frequency/switch output	→ 🖺 78
► Totalizer 1 to 3	→ 🖺 84
► Display	→ 🖺 86

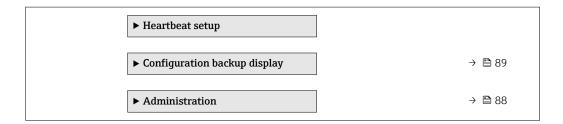

10.6.1 Carrying out a sensor adjustment

The **Sensor adjustment** submenu contains parameters that pertain to the functionality of the sensor.

Navigation

"Setup" menu → Advanced setup → Sensor adjustment



Parameter overview with brief description

Parameter	Description	Selection	Factory setting
Installation direction	Set sign of flow direction to match the direction of the arrow on the sensor.	Flow in arrow directionFlow against arrow direction	Flow in arrow direction

10.6.2 Configuring the pulse/frequency/switch output


The **Pulse/frequency/switch output** wizard guides you systematically through all the parameters that can be set for configuring the selected output type.

Configuring the pulse output

Navigation

"Setup" menu → Pulse/frequency/switch output

Structure of the wizard for the pulse output

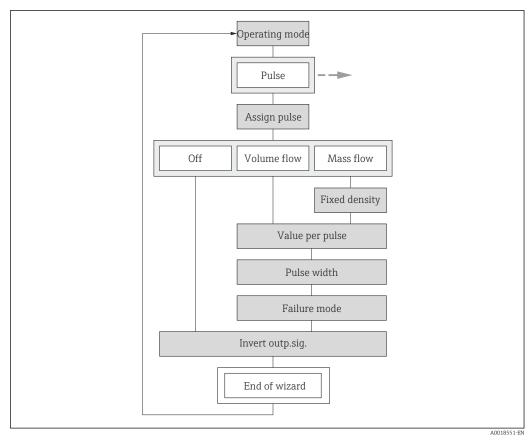

 \blacksquare 22 "Pulse/frequency/switch output" wizard in the "Setup" menu: "Operating mode" parameter "Pulse" option

Parameter overview with brief description

Parameter	Prerequsite	Description	Selection / User entry	Factory setting
Operating mode	-	Define the output as a pulse, frequency or switch output.	PulseFrequencySwitch	Pulse
Assign pulse output	In Operating mode parameter, the Pulse option is selected.	Select process variable for pulse output.	OffMass flowVolume flow	Off
Value per pulse	In the Operating mode parameter, the Pulse option is selected and one of the following options is selected in the Assign pulse output parameter (→ 🗎 78): ■ Mass flow ■ Volume flow	Enter measured value at which a pulse is output.	Signed floating-point number	0


Parameter	Prerequsite	Description	Selection / User entry	Factory setting
Pulse width	In the Operating mode parameter, the Pulse option is selected and one of the following options is selected in the Assign pulse output parameter (→ 🗎 78): ■ Mass flow ■ Volume flow	Define time width of the output pulse.	5 to 2 000 ms	100 ms
Failure mode	In the Operating mode parameter, the Pulse option is selected and one of the following options is selected in the Assign pulse output parameter (→ 🗎 78): ■ Mass flow ■ Volume flow	Define output behavior in alarm condition.	Actual valueNo pulses	No pulses
Invert output signal	-	Invert the output signal.	■ No ■ Yes	No

Configuring the frequency output

Navigation

"Setup" menu → Advanced setup → Pulse/frequency/switch output

Structure of the wizard for the frequency output

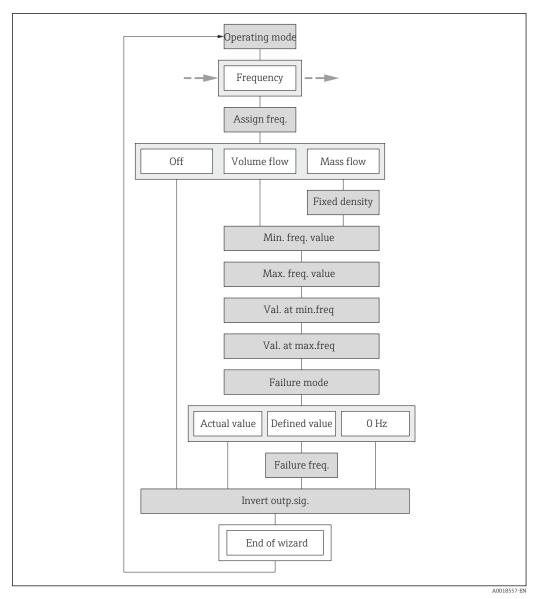

23 "Pulse/frequency/switch output" wizard in the "Advanced setup" submenu: "Operating mode" parameter"Frequency" option

Parameter overview with brief description

Parameter	Prerequsite	Description	Selection / User entry	Factory setting
Operating mode	-	Define the output as a pulse, frequency or switch output.	PulseFrequencySwitch	Pulse
Assign frequency output	In Operating mode parameter $(\Rightarrow \boxminus 78)$, the Frequency option is selected.	Select process variable for frequency output.	OffVolume flowMass flow	Off


Parameter	Prerequsite	Description	Selection / User entry	Factory setting
Minimum frequency value	In the Operating mode parameter, the Frequency option is selected and one of the following options is selected in the Assign frequency output parameter (→ ≧ 80): ■ Volume flow ■ Mass flow	Enter minimum frequency.	0 to 1000 Hz	0 Hz
Maximum frequency value	In the Operating mode parameter, the Frequency option is selected and one of the following options is selected in the Assign frequency output parameter (→ 80): Volume flow Mass flow	Enter maximum frequency.	0 to 1000 Hz	1000 Hz
Measuring value at minimum frequency	In the Operating mode parameter, the Frequency option is selected and one of the following options is selected in the Assign frequency output parameter (→ 🖺 80): ■ Volume flow ■ Mass flow	Enter measured value for minmum frequency.	Signed floating-point number	Depends on country and nominal diameter
Measuring value at maximum frequency	In the Operating mode parameter, the Frequency option is selected and one of the following options is selected in the Assign frequency output parameter (→ 🖺 80): ■ Volume flow ■ Mass flow	Enter measured value for maximum frequency.	Signed floating-point number	Depends on country and nominal diameter
Failure mode	In the Operating mode parameter (→ 🖺 78), the Frequency option is selected and one of the following options is selected in the Assign frequency output parameter (→ 🖺 80): ■ Volume flow ■ Mass flow	Define output behavior in alarm condition.	Actual valueDefined value0 Hz	0 Hz
Failure frequency	In the Operating mode parameter (→ 🗎 78), the Frequency option is selected and one of the following options is selected in the Assign frequency output parameter (→ 🖺 80): ■ Volume flow ■ Mass flow	Enter frequency output value in alarm condition.	0.0 to 1250.0 Hz	0.0 Hz
Invert output signal	-	Invert the output signal.	■ No ■ Yes	No

Configuring the switch output

Navigation


"Setup" menu → Advanced setup → Pulse/frequency/switch output

Structure of the wizard for the switch output

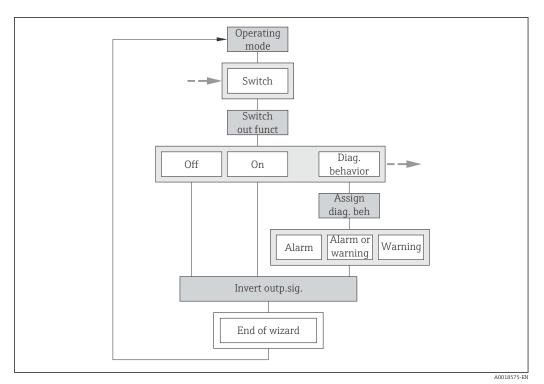

■ 24 "Pulse/frequency/switch output" wizard in the "Advanced setup" submenu: "Operating mode" parameter"Switch" option (part 1)

82

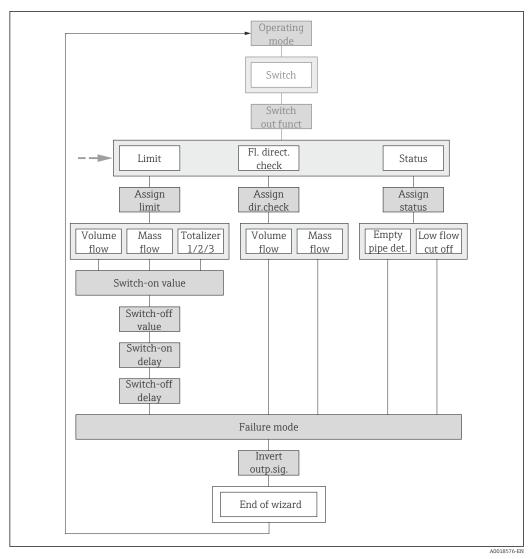

■ 25 "Pulse/frequency/switch output" wizard in the "Advanced setup" submenu: "Operating mode" parameter"Switch" option (part 2)

Parameter overview with brief description

Parameter	Prerequsite	Description	Selection / User entry	Factory setting
Operating mode	-	Define the output as a pulse, frequency or switch output.	PulseFrequencySwitch	Pulse
Switch output function	The Switch option is selected in the Operating mode parameter.	Select function for switch output.	 Off On Diagnostic behavior Limit Flow direction check Status 	Off
Assign diagnostic behavior	The Diagnostic behavior option is selected in the Switch output function parameter.	Select diagnostic behavior for switch output.	AlarmAlarm or warningWarning	Alarm


Parameter	Prerequsite	Description	Selection / User entry	Factory setting
Assign limit	In Switch output function parameter, the Limit option is selected.	Select process variable for limit function.	 Volume flow Mass flow Totalizer 1 Totalizer 2 Totalizer 3 	Volume flow
Assign flow direction check	The Flow direction check option is selected in the Switch output function parameter.	Select process variable for flow direction monitoring.	Volume flowMass flow	Volume flow
Assign status	The Status option is selected in the Switch output function parameter.	Select device status for switch output.	Empty pipe detectionLow flow cut offDigital output 2	Empty pipe detection
Switch-on value	In Switch output function parameter, the Limit option is selected.	Enter measured value for the switch-on point.	Signed floating-point number	Country-specific: • 0 l/h • 0 gal/min (us)
Switch-off value	In Switch output function parameter, the Limit option is selected.	Enter measured value for the switch-off point.	Signed floating-point number	Country-specific: • 0 l/h • 0 gal/min (us)
Switch-on delay	The Limit option is selected in the Switch output function parameter.	Define delay for the switch-on of status output.	0.0 to 100.0 s	0.0 s
Switch-off delay	The Limit option is selected in the Switch output function parameter.	Define delay for the switch-off of status output.	0.0 to 100.0 s	0.0 s
Failure mode	_	Define output behavior in alarm condition.	Actual statusOpenClosed	Open
Invert output signal	-	Invert the output signal.	■ No ■ Yes	No

10.6.3 Configuring the totalizer

In the **"Totalizer 1 to 3" submenu** the individual totalizer can be configured.

Navigation

"Setup" menu \rightarrow Advanced setup \rightarrow Totalizer 1 to 3

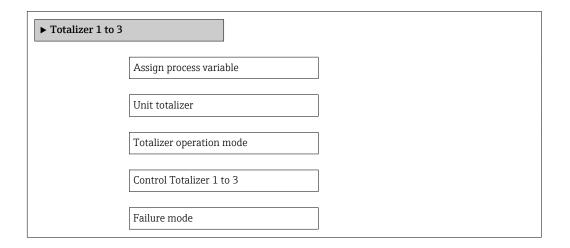

Parameter overview with brief description

Parameter	Prerequsite	Description	Selection	Factory setting
Assign process variable	-	Select process variable for totalizer.	Volume flowMass flow	Volume flow
Unit totalizer	One of the following options is selected in the Assign process variable parameter: Volume flow Mass flow	Select the unit for the process variable of the totalizer.	Unit choose list	Country-specific: • m³ • ft³
Control Totalizer 1 to 3	One of the following options is selected in the Assign process variable parameter: Volume flow Mass flow	Control totalizer value.	TotalizeReset + holdPreset + hold	Totalize
Totalizer operation mode	One of the following options is selected in the Assign process variable parameter: Volume flow Mass flow	Select totalizer calculation mode.	 Net flow total Forward flow total Reverse flow total Last valid value 	Net flow total
Failure mode	One of the following options is selected in the Assign process variable parameter: Volume flow Mass flow	Define the totalizer behavior in the event of a device alarm.	StopActual valueLast valid value	Actual value

10.6.4 Carrying out additional display configurations

In the ${f Display}$ submenu you can set all the parameters associated with the configuration of the local display.

Navigation

"Setup" menu \rightarrow Advanced setup \rightarrow Display

► Display		
	Format display	
	Value 1 display	
	0% bargraph value 1	
	100% bargraph value 1	
	Decimal places 1	
	Value 2 display	
	Decimal places 2	
	Value 3 display	
	0% bargraph value 3	
	100% bargraph value 3	
	Decimal places 3	
	Value 4 display	
	Decimal places 4	
	Language	
	Display interval	
	Display damping	
	Header	
	Header text	
	Separator	
	Backlight	

Parameter overview with brief description

Parameter	Prerequsite	Description	Selection / User entry	Factory setting
Format display	A local display is provided.	Select how measured values are shown on the display.	 1 value, max. size 1 bargraph + 1 value 2 values 1 value large + 2 values 4 values 	1 value, max. size
Value 1 display	A local display is provided.	Select the measured value that is shown on the local display.	 Volume flow Mass flow Totalizer 1 Totalizer 2 Totalizer 3 	Volume flow
0% bargraph value 1	A local display is provided.	Enter 0% value for bar graph display.	Signed floating-point number	Country-specific: 0 l/h 0 gal/min (us)
100% bargraph value 1	A local display is provided.	Enter 100% value for bar graph display.	Signed floating-point number	Depends on country and nominal diameter
Decimal places 1	A measured value is specified in the Value 1 display parameter.	Select the number of decimal places for the display value.	• x • x.x • x.xx • x.xxx	x.xx
Value 2 display	A local display is provided.	Select the measured value that is shown on the local display.	Picklist see Value 1 display parameter	None
Decimal places 2	A measured value is specified in the Value 2 display parameter.	Select the number of decimal places for the display value.	• x • x.x • x.xx • x.xxx • x.xxx	x.xx
Value 3 display	A local display is provided.	Select the measured value that is shown on the local display.	Picklist see Value 1 display parameter	None
0% bargraph value 3	A selection has been made in the Value 3 display parameter.	Enter 0% value for bar graph display.	Signed floating-point number	Country-specific: 0 l/h 0 gal/min (us)
100% bargraph value 3	An option was selected in the Value 3 display parameter.	Enter 100% value for bar graph display.	Signed floating-point number	Depends on country and nominal diameter
Decimal places 3	A measured value is specified in the Value 3 display parameter.	Select the number of decimal places for the display value.	• X • X.X • X.XX • X.XXX • X.XXXX	x.xx
Value 4 display	A local display is provided.	Select the measured value that is shown on the local display.	Picklist see Value 1 display parameter	None
Decimal places 4	A measured value is specified in the Value 4 display parameter.	Select the number of decimal places for the display value.	 x x.x x.xx x.xx x.xxx	x.xx

Parameter	Prerequsite	Description	Selection / User entry	Factory setting
Language	A local display is provided.	Set display language.	 English Deutsch* Français* Español* Italiano* Nederlands* Portuguesa* Polski* pyсский язык (Russian)* Svenska* Türkçe* 中文 (Chinese)* 日本語 (Japanese)* 한국어 (Korean)* 誠立山 (Arabic)* Bahasa Indonesia* ภาษาไทย (Thai)* tiếng Việt (Vietnamese)* čeština (Czech)* 	English (alternatively, the ordered language is preset in the device)
Display interval	A local display is provided.	Set time measured values are shown on display if display alternates between values.	1 to 10 s	5 s
Display damping	A local display is provided.	Set display reaction time to fluctuations in the measured value.	0.0 to 999.9 s	0.0 s
Header	A local display is provided.	Select header contents on local display.	Device tagFree text	Device tag
Header text	The Free text option is selected in the Header parameter.	Enter display header text.	Max. 12 characters such as letters, numbers or special characters (e.g. @, %, /)	
Separator	A local display is provided.	Select decimal separator for displaying numerical values.	• . (point) • , (comma)	. (point)
Backlight	-	Switch the local display backlight on and off. Only for device version with local display SD03 (touch control)	DisableEnable	Disable

^{*} Visibility depends on order options or device settings

10.6.5 Administration configuration

The **Administration** submenu contains administrative parameters.

Navigation

"Setup" menu \rightarrow Advanced setup \rightarrow Administration

► Administration		
Define access code		
Device reset		

Parameter overview with brief description

Parameter	Description	User entry / Selection	Factory setting
Define access code	Restrict write-access to parameters to protect the configuration of the device against unintentional changes via the local display.	0 to 9 999	0
Device reset	Reset the device configuration - either entirely or in part - to a defined state.	 Cancel To fieldbus defaults To factory defaults To delivery settings Restart device 	Cancel

^{*} Visibility depends on communication


10.7 Configuration management

After commissioning, you can save the current device configuration, copy it to another measuring point or restore the previous device configuration.

You can do so using the **Configuration management** parameter and the related options found in the **Configuration backup display** submenu.

Navigation

"Setup" menu \rightarrow Advanced setup \rightarrow Configuration backup display

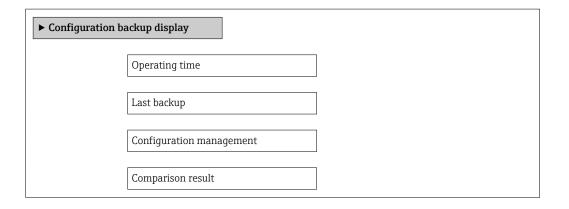

Parameter overview with brief description

Parameter	Prerequsite	Description	User interface / Selection	Factory setting
Operating time	-	Indicates how long the device has been in operation.	Days (d), hours (h), minutes (m) and seconds (s)	_
Last backup	A local display is provided.	Indicates when the last data backup was saved to the display module.	Days (d), hours (h), minutes (m) and seconds (s)	_

Parameter	Prerequsite	Description	User interface / Selection	Factory setting
Configuration management	A local display is provided.	Select action for managing the device data in the display module.	 Cancel Execute backup Restore Duplicate Compare Clear backup data 	Cancel
Comparison result	A local display is provided.	Comparison between present device data and display backup.	 Settings identical Settings not identical No backup available Backup settings corrupt Check not done Dataset incompatible 	Check not done

10.7.1 Function scope of the "Configuration management" parameter

Options	Description
Execute backup	The current device configuration is backed up from the integrated HistoROM to the device's display module. The backup copy includes the transmitter data of the device.
Restore	The last backup copy of the device configuration is restored from the display module to the device's integrated HistoROM. The backup copy includes the transmitter data of the device.
Duplicate	The transmitter configuration from another device is duplicated to the device using the display module.
Compare	The device configuration saved in the display module is compared with the current device configuration of the integrated HistoROM.
Clear backup data	The backup copy of the device configuration is deleted from the display module of the device.

- Integrated HistoROM
 A HistoROM is a "non-volatile" device memory in the form of an EEPROM.
- While this action is in progress, the configuration cannot be edited via the local display and a message on the processing status appears on the display.

10.8 Simulation

The **Simulation** submenu enables you to simulate, without a real flow situation, various process variables in the process and the device alarm mode and to verify downstream signal chains (switching valves or closed-control loops).

Navigation

"Diagnostics" menu \rightarrow Simulation

▶ Simulation	
	Assign simulation process variable
	Process variable value

Simulation current output 1 to 2
Value current output 1 to 2
Frequency output simulation
Frequency value
Pulse output simulation
Pulse value
Switch output simulation
Switch status
Simulation device alarm
Diagnostic event category
Diagnostic event simulation
 2 agricolo e con ominination

Parameter overview with brief description

Parameter	Prerequsite	Description	Selection / User entry	Factory setting
Assign simulation process variable	-	Select a process variable for the simulation process that is activated.	 Off Volume flow Mass flow	Off
Process variable value	One of the following options is selected in the Assign simulation process variable parameter (→ 🖺 91): Volume flow Mass flow	Enter the simulation value for the selected process variable.	Depends on the process variable selected	0
Simulation current output 1 to 2	-		Off On	Off
Value current output 1 to 2	In the Simulation current output 1 to 2 parameter, the On option is selected.		3.59 to 22.5 mA	3.59 mA
Frequency output simulation	The Frequency option is selected in the Operating mode parameter.	Switch the simulation of the frequency output on and off.	• Off • On	Off
Frequency value	The On option is selected in the Frequency output simulation parameter.	Enter the frequency value for the simulation.	0.0 to 1250.0 Hz	0.0 Hz
Pulse output simulation	The Pulse option is selected in the Operating mode parameter.	Set and switch off the pulse output simulation. For Fixed value option: Pulse width parameter (> 79) defines the pulse width of the pulses output.	Off Fixed value Down-counting value	Off

Parameter	Prerequsite	Description	Selection / User entry	Factory setting
Pulse value	In the Pulse output simulation parameter (→ 🖺 91), the Down- counting value option is selected.	Enter the number of pulses for simulation.	0 to 65 535	0
Switch output simulation	The Switch option is selected in the Operating mode parameter.	Switch the simulation of the switch output on and off.	• Off • On	Off
Switch status	The On option is selected in the Switch output simulation parameter $(\rightarrow \ \ \ \ \ \ \ \ \ \ \ \)$.	Select the status of the status output for the simulation.	OpenClosed	Open
Simulation device alarm	-	Switch the device alarm on and off.	Off On	Off
Diagnostic event category	-	Select a diagnostic event category.	SensorElectronicsConfigurationProcess	Process
Diagnostic event simulation	-	Select a diagnostic event to simulate this event.	Off Diagnostic event picklist (depends on the category selected)	Off

10.9 Protecting settings from unauthorized access

The following options exist for protecting the configuration of the measuring device from unintentional modification after commissioning:


- Write protection via access code
- Write protection via write protection switch

10.9.1 Write protection via access code

With the customer-specific access code, the parameters for the measuring device configuration are write-protected and their values can no longer be changed via local operation.

Navigation

"Setup" menu \rightarrow Advanced setup \rightarrow Administration \rightarrow Define access code

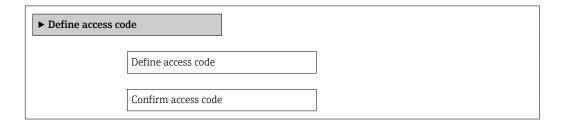

Defining the access code via local display

- 1. Navigate to the **Enter access code** parameter.
- 2. Max. Define a max. 4-digit numeric code as an access code.
- 3. Enter the access code again to confirm the code.
 - ► The 🖻-symbol appears in front of all write-protected parameters.


The device automatically locks the write-protected parameters again if a key is not pressed for 10 minutes in the navigation and editing view. The device locks the write-protected parameters automatically after 60 s if the user skips back to the operational display mode from the navigation and editing view.



- If write access is activated via access code, it can be also be deactivated only via the access code $\rightarrow \triangleq 54$.
- The user role with which the user is currently logged on via the local display → 🖺 54 is indicated by the **Access status display** parameter. Navigation path: "Operation" menu → Access status display

Parameters which can always be modified via the local display

Certain parameters that do not affect the measurement are excepted from write protection via the local display. Despite the defined access code, these parameters can always be modified even if the other parameters are locked.

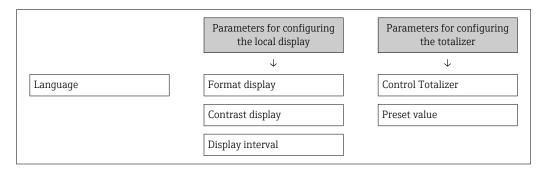


10.9.2 Write protection via write protection switch

Unlike write protection via a user-specific access code, this allows write access to the entire operating menu - other than the "Contrast display" parameter - to be locked.


The parameter values are now read only and cannot be edited any more (exception "Contrast display" parameter):

- Via local display
- Via PROFIBUS PA protocol

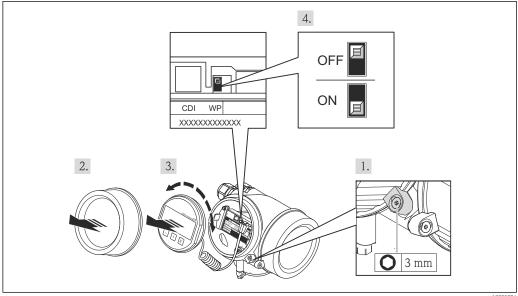


- 1. Loosen the securing clamp.
- 2. Unscrew the electronics compartment cover.

- 3. Pull out the display module with a gentle rotational movement. To make it easier to access the write protection switch, attach the display module to the edge of the electronics compartment.
 - └ Display module is attached to the edge of the electronics compartment.

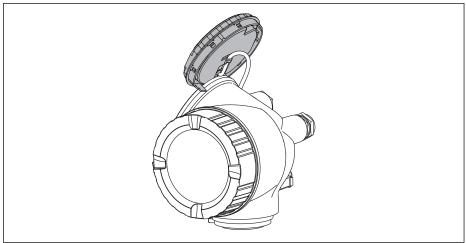

- 4. Setting the write protection switch (WP) on the main electronics module to the **ON** position enables hardware write protection. Setting the write protection switch (WP) on the main electronics module to the **OFF** position (factory setting) disables hardware write protection.
 - └ If hardware write protection is enabled, the **Locking status** parameter displays the **Hardware locked** option . In addition, on the local display the 🛍-symbol appears in front of the parameters in the header of the operational display and in the navigation view.

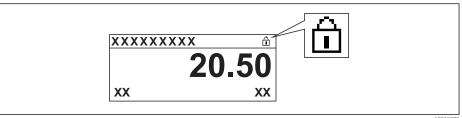

If hardware write protection is disabled, no option is displayed in the **Locking status** parameter . On the local display, the $factbf{B}$ -symbol disappears from in front of the parameters in the header of the operational display and in the navigation

- 5. Feed the cable into the gap between the housing and main electronics module and plug the display module into the electronics compartment in the desired direction until it engages.
- 6. Reverse the removal procedure to reassemble the transmitter.

11 Operation

11.1 Reading the device locking status

Device active write protection: Locking status parameter

Navigation

"Operation" menu → Locking status

Function scope of the "Locking status" parameter

Options	Description
None	The access status displayed in "Access status display" parameter applies $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $
Hardware locked	The DIP switch for hardware locking is activated on the main electronics module. This prevents write access to the parameters .
Temporarily locked	Write access to the parameters is temporarily lock due to device-internal processing (e.g. data upload/download, reset). Once the internal processing has been completed, the parameters can be changed once again.

11.2 Adjusting the operating language

Information → 🖺 66

For information on the operating languages supported by the measuring device ightarrow \cong 148

11.3 Configuring the display

- Basic settings for local display → 🗎 71

11.4 Reading measured values


With the **Measured values** submenu, it is possible to read all the measured values.

11.4.1 Process variables

The **Process variables** submenu contains all the parameters needed to display the current measured values for every process variable.

Navigation

"Diagnostics" menu \rightarrow Measured values \rightarrow Process variables

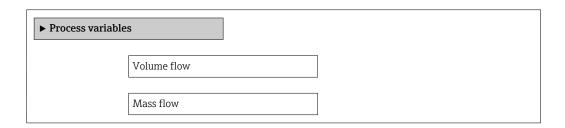

Parameter overview with brief description


Parameter	Description	User interface
Volume flow	Displays the volume flow currently measured.	Signed floating-point number
	Dependency The unit is taken from the Volume flow unit parameter	
Mass flow	Displays the mass flow currently calculated.	Signed floating-point number
	Dependency The unit is taken from the Mass flow unit parameter	

11.4.2 Totalizer

The **Totalizer** submenu contains all the parameters needed to display the current measured values for every totalizer.

Navigation

"Diagnostics" menu \rightarrow Measured values \rightarrow Totalizer 1 to 3

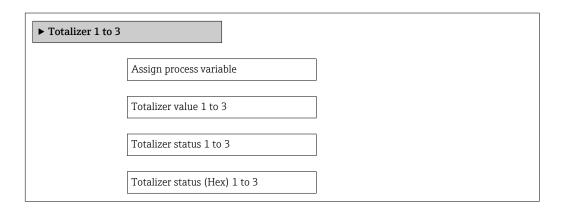

Parameter overview with brief description

Parameter	Prerequsite	Description	Selection / User entry / User interface	Factory setting
Assign process variable	-	Select process variable for totalizer.	Volume flowMass flow	Volume flow
Totalizer value 1 to 3	In the Assign process variable parameter one of the following options is selected: Volume flow Mass flow Corrected volume flow Total mass flow Condensate mass flow Energy flow Heat flow difference	Displays the current totalizer counter value.	Signed floating-point number	0 m ³
Totalizer status 1 to 3	-	Displays the current totalizer status.	GoodUncertainBad	-
Totalizer status (Hex) 1 to 3	In Target mode parameter, the Auto option is selected.	Displays the current status value (hex) of the totalizer.	0 to 0xFF	-

11.5 Adapting the measuring device to the process conditions

The following are available for this purpose:

- Basic settings using the **Setup** menu
- Advanced settings using the Advanced setup submenu

11.6 Performing a totalizer reset


In the **Operation** submenu the totalizers are reset: Control Totalizer

Function scope of the "Control Totalizer" parameter

Options	Description
Totalize	The totalizer is started.
Reset + hold	The totaling process is stopped and the totalizer is reset to 0.
Preset + hold	The totaling process is stopped and the totalizer is set to its defined start value from the Preset value 1 to 3 parameter.
Stop totalizing option	Totalizing is stopped.

Navigation

"Operation" menu → Operation

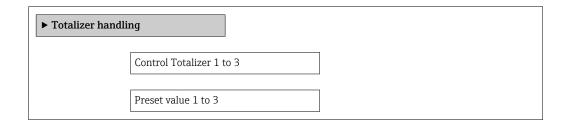

Parameter overview with brief description


Parameter	Prerequsite	Description	Selection / User entry	Factory setting
Control Totalizer	One of the following options is selected in the Assign process variable parameter: Volume flow Mass flow	Control totalizer value.	TotalizeReset + holdPreset + hold	Totalize
Preset value	In the Assign process variable parameter one of the following options is selected: Volume flow Mass flow Corrected volume flow Total mass flow Condensate mass flow Energy flow Heat flow difference	Specify start value for totalizer.	Signed floating-point number	0 m³
Reset all totalizers	-	Reset all totalizers to 0 and start.	CancelReset + totalize	Cancel

11.7 Showing data logging

The **Extended HistoROM** application package must be enabled in the device (order option) for the **Data logging** submenu to appear. This contains all the parameters for the measured value history.

Function scope

- A total of 1000 measured values can be stored
- 4 logging channels
- Adjustable logging interval for data logging
- Display of the measured value trend for each logging channel in the form of a chart

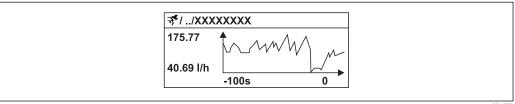

■ 26 Chart of a measured value trend

A001622

- x-axis: depending on the number of channels selected displays 250 to 1000 measured values of a process variable.
- y-axis: displays the approximate measured value span and constantly adapts this to the ongoing measurement.
- If the length of the logging interval or the assignment of the process variables to the channels is changed, the content of the data logging is deleted.

Navigation

"Diagnostics" menu → Data logging

"Data logging" submenu

► Data logging	
	Assign channel 1
	Assign channel 2
	Assign channel 3
	Assign channel 4
	Logging interval
	Clear logging data
	▶ Display channel 1
	▶ Display channel 2

▶ Display channel 3

▶ Display channel 4

Parameter overview with brief description

Parameter	Prerequsite	Description	Selection / User entry	Factory setting
Assign channel 1 to 4	The Extended HistoROM application package is available. The software options currently enabled are displayed in the Software option overview parameter.	Assign process variable to logging channel.	Off Volume flow Mass flow Electronic temperature Current difference potential	Off
Logging interval	The Extended HistoROM application package is available. The software options currently enabled are displayed in the Software option overview parameter.	Define the logging interval for data logging. This value defines the time interval between the individual data points in the memory.	1.0 to 3 600.0 s	10.0 s
Clear logging data	The Extended HistoROM application package is available. The software options currently enabled are displayed in the Software option overview parameter.	Clear the entire logging data.	Cancel Clear data	Cancel

12 Diagnostics and troubleshooting

12.1 General troubleshooting

For local display

Problem	Possible causes	Remedy
Local display dark and no output signals	Supply voltage does not match the value indicated on the nameplate.	Apply the correct supply voltage .
Local display dark and no output signals	The polarity of the supply voltage is wrong.	Correct the polarity.
Local display dark and no output signals	No contact between connecting cables and terminals.	Check the connection of the cables and correct if necessary.
Local display dark and no output signals	Terminals are not plugged into the I/O electronics module correctly.	Check terminals.
Local display dark and no output signals	I/O electronics module is defective.	Order spare part → 🖺 129.
Local display is dark, but signal output is within the valid range	Display is set too bright or too dark.	 Set the display brighter by simultaneously pressing ± + E. Set the display darker by simultaneously pressing □+ E.
Local display is dark, but signal output is within the valid range	The cable of the display module is not plugged in correctly.	Insert the plug correctly into the main electronics module and display module.
Local display is dark, but signal output is within the valid range	Display module is defective.	Order spare part → 🖺 129.
Backlighting of local display is red	Diagnostic event with "Alarm" diagnostic behavior has occurred.	Perform remedial measures → 🖺 109
Text on local display appears in a foreign language and cannot be understood.	Incorrect operating language is configured.	1. Press 2 s □ + ± ("home position"). 2. Press Ē. 3. Set the desired language in the Language parameter.
Message on local display: "Communication Error" "Check Electronics"	Communication between the display module and the electronics is interrupted.	 Check the cable and the connector between the main electronics module and display module. Order spare part → 129.

For output signals

Problem	Possible causes	Remedy
Signal output outside the valid range	Main electronics module is defective.	Order spare part → 🖺 129.
Device shows correct value on local display, but signal output is incorrect, though in the valid range.	Configuration error	Check and correct the parameter configuration.
Device measures incorrectly.	Configuration error or device is operated outside the application.	Check and correct parameter configuration. Observe limit values specified in the "Technical Data".


For access

Problem	Possible causes	Remedy
No write access to parameters	Hardware write protection enabled	Set the write protection switch on the main electronics module to the OFF position .
No write access to parameters	Current user role has limited access authorization	1. Check user role → 🗎 54. 2. Enter correct customer-specific access code → 🖺 54.
No connection via service interface	Incorrect configuration of USB interface on PC or driver not installed correctly.	Observe the documentation for the Commubox. FXA291: Document "Technical Information" T100405C

12.2 Diagnostic information on local display

12.2.1 Diagnostic message

Faults detected by the self-monitoring system of the measuring device are displayed as a diagnostic message in alternation with the operational display.

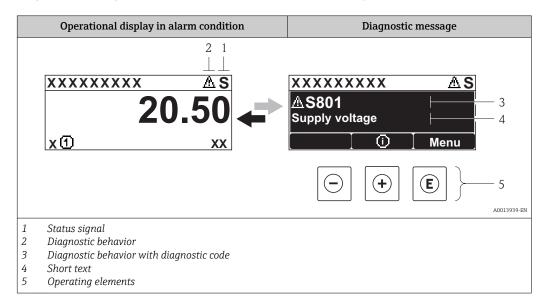

If two or more diagnostic events are pending simultaneously, only the message of the diagnostic event with the highest priority is shown.

- Other diagnostic events that have occurred can be called up in the **Diagnostics** menu:
 - Via parameters → 🖺 121
 - Via submenus → 🖺 122

Status signals

The status signals provide information on the state and reliability of the device by categorizing the cause of the diagnostic information (diagnostic event).

The status signals are categorized according to VDI/VDE 2650 and NAMUR Recommendation NE 107: F = Failure, C = Function Check, S = Out of Specification, M = Maintenance Required


Symbol	Meaning
A0013956	Failure A device error has occurred. The measured value is no longer valid.
C	Function check The device is in service mode (e.g. during a simulation).
S	Out of specification The device is operated: Outside its technical specification limits (e.g. outside the process temperature range)
A0013957	Maintenance required Maintenance is required. The measured value remains valid.

Diagnostic behavior

Symbol	Meaning
A0013961	Alarm Measurement is interrupted. Signal outputs and totalizers assume the defined alarm condition. A diagnostic message is generated. For local display with touch control: the background lighting changes to red.
A0013962	Warning Measurement is resumed. The signal outputs and totalizers are not affected. A diagnostic message is generated.

Diagnostic information

The fault can be identified using the diagnostic information. The short text helps you by providing information about the fault. In addition, the corresponding symbol for the diagnostic behavior is displayed in front of the diagnostic information on the local display.

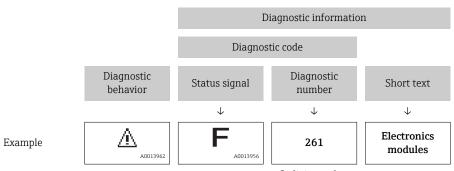


3-digit number

Operating elements

Key	Meaning
	Plus key
A0013970	In a menu, submenu Opens the message about remedy information.
	Enter key
A0013952	In a menu, submenu Opens the operating menu.

12.2.2 Calling up remedial measures

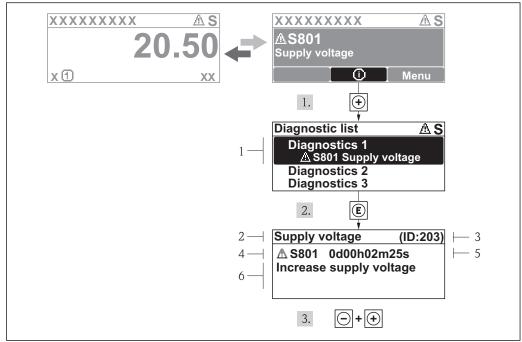

A0013940-EN

- 27 Message for remedial measures
- 1 Diagnostic information
- 2 Short text
- 3 Service ID
- 4 Diagnostic behavior with diagnostic code
- 5 Operation time of occurrence
- 6 Remedial measures

The user is in the diagnostic message.

- 1. Press ± (i) symbol).
 - ► The **Diagnostic list** submenu opens.
- 2. Select the desired diagnostic event with \pm or \Box and press \Box .
 - ► The message for the remedial measures for the selected diagnostic event opens.
- 3. Press \Box + \pm simultaneously.
 - ► The message for the remedial measures closes.


The user is in the **Diagnostics** menu at an entry for a diagnostics event, e.g. in the **Diagnostic list** submenu or the **Previous diagnostics** parameter.

- 1. Press E.
 - └ The message for the remedial measures for the selected diagnostic event opens.
- 2. Press \Box + \pm simultaneously.
 - ► The message for the remedial measures closes.

12.3 Diagnostic information in FieldCare

12.3.1 Diagnostic options


Any faults detected by the measuring device are displayed on the home page of the operating tool once the connection has been established.

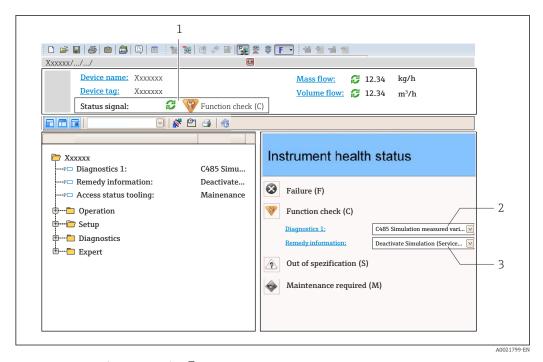

- 1 Status area with status signal $\rightarrow \implies 102$
- *2* Diagnostic information \rightarrow $\stackrel{\triangle}{=}$ 103
- Remedy information with Service ID
- Furthermore, diagnostic events that have occurred can be viewed in the **Diagnostics** menu:
 - Via parameter \rightarrow 🗎 121
 - Via submenu → 🖺 122

Diagnostic information

The fault can be identified using the diagnostic information. The short text helps you by providing information about the fault. In addition, the corresponding symbol for the diagnostic behavior is displayed in front of the diagnostic information on the local display.

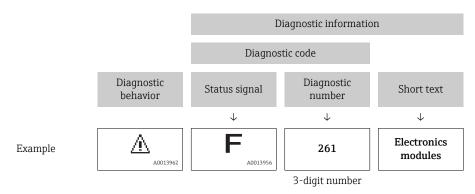

12.3.2 Calling up remedy information

Remedy information is provided for every diagnostic event to ensure that problems can be rectified quickly:

- On the home page
 Remedy information is displayed in a separate field below the diagnostics information.
- In the **Diagnostics** menu
 Remedy information can be called up in the working area of the user interface.

The user is in the **Diagnostics** menu.

- 1. Call up the desired parameter.
- 2. On the right in the working area, mouse over the parameter.
 - ► A tool tip with remedy information for the diagnostic event appears.

12.4 Adapting the diagnostic information


12.4.1 Adapting the measured value and device status

Measured value status

Each diagnostic number is assigned a specific measured value status at the factory. The user can change this assignment for specific diagnostic numbers via the **Var. status xx** parameter.

Navigation path

"Expert" menu \rightarrow System \rightarrow Diagnostic handling \rightarrow Condensed status \rightarrow Assign behavior of measured value status xx

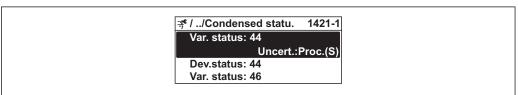

A0019175-EN


Quality	Substatus	Status (hex)	Event category	Event class
GOOD	None	0x80	-	_
GOOD	Maintenance required	0xA4	M	Warning
GOOD	Maintenance demanded	0xA8	M	Warning
GOOD	Function check	0xBC	-	-
BAD	Maintenance alarm	0x24	F	Alarm
BAD	Process related, no maintenance	0x28	F	Alarm
BAD	Function check	0x3C	С	Warning
UNCERTAIN	Maintenance demanded	0x68	М	Warning
UNCERTAIN	Process related, no maintenance	0x78	S	Warning

Device status

Each diagnostic number is assigned a specific device status at the factory. The user can change this assignment for specific diagnostic numbers via the **Dev. status xx** parameter.

Navigation path

"Expert" menu \rightarrow System \rightarrow Diagnostic handling \rightarrow Condensed status \rightarrow Assign behavior of device status xx

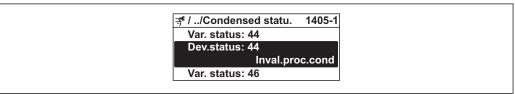

A0019186-EN

Mnemonic	Octet	Bit
Maintenance required	2	5
Maintenance alarm	3	0
Maintenance demanded	3	1
Function check	3	2
Invalid process conditions	3	3


12.4.2 Adapting the diagnostic behavior

Each item of diagnostic information is assigned a specific diagnostic behavior at the factory. The user can change this assignment for certain diagnostic information in the Diagnostic behavior submenu.



Piagnostic behavior in accordance with Specification PROFIBUS Profile 3.02, Condensed Status.

"Expert" menu \rightarrow System \rightarrow Diagnostic handling \rightarrow Diagnostic behavior

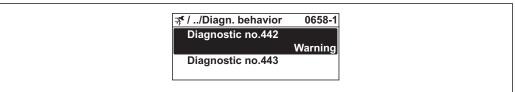


Available diagnostic behaviors

The following diagnostic behaviors can be assigned:

Diagnostic behavior	Description
Alarm	Measurement is interrupted. The totalizers assume the defined alarm condition. A diagnostic message is generated. For local display with touch control: the background lighting changes to red.
Warning	Measurement is resumed. Measured value output via PROFIBUS and totalizers are not affected. A diagnostic message is generated.
Logbook entry only	The device continues to measure. The diagnostic message is entered in the Event logbook (events list) submenu only and is not displayed in alternation with the measured value display.
Off	The diagnostic event is ignored, and no diagnostic message is generated or entered.

Displaying the measured value status

If the Analog Input, Digital Input and Totalizer function blocks are configured for cyclic data transmission, the device status is coded as per PROFIBUS Profile Specification 3.02 and transmitted along with the measured value to the PROFIBUS Master (Class 1) via the coding byte (byte 5). The coding byte is split into three segments: Quality, Quality Substatus and Limits.

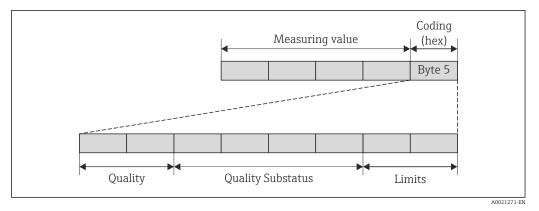

■ 28 Structure of the coding byte

The content of the coding byte depends on the configured failsafe mode in the particular function block. Depending on which failsafe mode has been configured, status information in accordance with PROFIBUS Profile Specification 3.02 is transmitted to the PROFIBUS Master (Class 1) via the coding byte.

Determining the measured value status and device status via the diagnostic behavior

When the diagnostic behavior is assigned, this also changes the measured value status and device status for the diagnostic information. The measured value status and device status depend on the choice of diagnostic behavior and the group in which the diagnostic information is located. The measured value status and device status are firmly assigned to the particular diagnostic behavior and cannot be changed individually.

The diagnostic information is grouped as follows:

- Diagnostic information pertaining to the sensor: diagnostic number 000 to 199 \rightarrow 🖺 108
- Diagnostic information pertaining to the configuration: diagnostic number 400 to 599
 → 109
- Diagnostic information pertaining to the process: diagnostic number 800 to 999 \rightarrow 🖺 109

Depending on the group in which diagnostic information is located, the following measured value status and device status are firmly assigned to the particular diagnostic behavior:

Diagnostic information pertaining to the sensor (diagnostic no.: 000 to 199)

Diagnostic behavior	Measured value status (fixed assignment)				Device diagnostics	
(configurable)	Quality	Quality Substatus	Coding (hex)	Category (NE107)	(fixed assignment)	
Alarm	BAD	Maintenance alarm	0x24 to 0x27	F (Failure)	Maintenance alarm	
Warning	GOOD	Maintenance demanded	0xA8 to 0xAB	M (Maintenance)	Maintenance demanded	
Logbook entry only	GOOD	ok	0x80 to 0x8E -	_		
Off	ОООД	ÜK.		·	_	

Diagnostic information	pertaining to the	electronics (diagnostic no.	: 200 to 399)

Dia an actic behavior	Measured value status (fixed assignment)				Device dia succetica
Diagnostic behavior (configurable)	Quality	Quality Substatus	Coding (hex)	Category (NE107)	Device diagnostics (fixed assignment)
Alarm	BAD	Maintenance	0x24 to 0x27	F	Maintenance
Warning	BAD	alarm	0.24 (0.0.27	(Failure)	alarm
Logbook entry only	COOD	ok	0.00.4.0.05		
Off	GOOD		0x80 to 0x8E	_	_

Diagnostic information pertaining to the configuration (diagnostic no.: 400 to 599)

Measured value status (fixed assignment					Device diagnostics
Diagnostic behavior (configurable)	Quality	Quality Substatus	Coding (hex)	Category (NE107)	(fixed assignment)
Alarm	BAD	Process related	0x28 to 0x2B	F (Failure)	Invalid process condition
Warning	UNCERTA IN	Process related	0x78 to 0x7B	S (Out of specification)	Invalid process condition
Logbook entry only	GOOD	ok	0x80 to 0x8E		_
Off	GOOD	OK .	ONOU TO UNUL		

Diagnostic information pertaining to the process (diagnostic no.: 800 to 999)

Diagnostis hohovion	Measured value status (fixed assignment)				
Diagnostic behavior (configurable)	Quality	Quality Substatus	Coding (hex)	Category (NE107)	Device diagnostics (fixed assignment)
Alarm	BAD	Process related	0x28 to 0x2B	F (Failure)	Invalid process condition
Warning	UNCERTA IN	Process related	0x78 to 0x7B	S (Out of specification)	Invalid process condition
Logbook entry only	GOOD	-1-	0x80 to 0x8E		_
Off	GOOD	ok	OXOO TO OXOE	_	

12.5 Overview of diagnostic information

- The amount of diagnostic information and the number of measured variables affected increase if the measuring device has one or more application packages.

12.5.1 Diagnostic of sensor

	Diagnostic	information	Remedy instructions	Influenced measuring
No.	Short text			variables
004	Sensor		1. Change sensor	Empty pipe detection
	Measuring variable status [from the factory] 1)		2. Contact service	Low flow cut offMass flow
	Quality	Uncertain		Switch output statusVolume flow
	Quality substatus	Process related		
	Coding (hex) 0x78 to 0x7B			
	Status signal	S		
	Diagnostic behavior	Warning		

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

	Diagnostic	information	Remedy instructions	Influenced measuring
No.	SI	hort text		variables
082	Data storage		Change main electronic module	 Empty pipe detection Low flow cut off Mass flow Switch output status Volume flow
	Measuring variable status		2. Change sensor	
	Quality	Bad		
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F		
	Diagnostic behavior	Alarm		

	Diagnostic	information	Remedy instructions	Influenced measuring
No.	Short text			variables
083	Memory content Measuring variable status		1. Restart device	■ Empty pipe detection
			2. Restore S-Dat data 3. Change sensor	Low flow cut offMass flow
	Quality	Bad		Switch output statusVolume flow
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F		
	Diagnostic behavior	Alarm		

12.5.2 Diagnostic of electronic

	Diagnostic	information	Remedy instructions	Influenced measuring
No.	S	hort text		variables
222	Electronic drift		Change main electronic module	Empty pipe detection
	Measuring variable status			Low flow cut offMass flow
	Quality	Bad		Switch output statusVolume flow
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F		
	Diagnostic behavior	Alarm		

	Diagnostic	information	Remedy instructions	Influenced measuring
No.	Short text			variables
242	Software incompatible Measuring variable status		1. Check software	Empty pipe detectionLow flow cut offMass flow
			2. Flash or change main electronics module	
	Quality	Bad		Switch output statusVolume flow
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F		
	Diagnostic behavior	Alarm		

	Diagnostic i	information	Remedy instructions	Influenced measuring
No.	SI	hort text		variables
252	Modules incompatible		1. Check electronic modules	■ Empty pipe detection
	Measuring variable status		2. Change I/O or main electronic module	Low flow cut offMass flowSwitch output statusVolume flow
	Quality	Bad		
	Quality substatus	Maintenance alarm		• volume now
	Coding (hex) 0x24	0x24 to 0x27		
	Status signal	F		
	Diagnostic behavior	Alarm		

	Diagnostic	information	Remedy instructions	Influenced measuring
No.	Short text			variables
261	Electronic modules		1. Restart device	 Empty pipe detection Low flow cut off Mass flow Switch output status Volume flow
	Measuring variable status		Check electronic modules Change I/O Modul or main electronics	
	Quality	Bad		
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal F			
	Diagnostic behavior	Alarm		

	Diagnostic	information	Remedy instructions	Influenced measuring
No.	SI	hort text		variables
262	Module connection Measuring variable status		1. Check module connections	■ Empty pipe detection
			2. Change electronic modules	Low flow cut offMass flow
	Quality	Bad		Switch output statusVolume flow
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F		
	Diagnostic behavior Alarm			

	Diagnostic	information	Remedy instructions	Influenced measuring	
No.	. Short text			variables	
270	Main electronic failure		Change main electronic module	■ Empty pipe detection	
	Measuring variable status			 Low flow cut off Mass flow Switch output status Status Volume flow 	
	Quality	Bad			
	Quality substatus	Maintenance alarm			
	Coding (hex)	0x24 to 0x27			
	Status signal	F			
	Diagnostic behavior	Alarm			

	Diagnostic information		Remedy instructions	Influenced measuring
No.	Short text			variables
271	Main electronic failure		1. Restart device	Empty pipe detection
	Measuring variable status		2. Change main electronic module	Low flow cut offMass flow
	Quality	Bad		Switch output statusVolume flow
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F		
	Diagnostic behavior	Alarm		

	Diagnostic information		Remedy instructions	Influenced measuring
No.	Short text			variables
272	Main electronic failure		1. Restart device	Empty pipe detection
	Measuring variable status		2. Contact service	 Low flow cut off Mass flow Switch output status Volume flow
	Quality	Bad		
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F		
	Diagnostic behavior	Alarm		

	Diagnostic information		Remedy instructions	Influenced measuring
No.	Short text			variables
273	Main electronic failure		1. Emergency operation via display	■ Empty pipe detection
	Measuring variable status		2. Change main electronics	Low flow cut offMass flow
	Quality	Bad		Switch output statusVolume flow
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F		
	Diagnostic behavior	Alarm		

	Diagnostic information		Remedy instructions	Influenced measuring
No.	o. Short text			variables
275	I/O module failure		Change I/O module	■ Empty pipe detection
	Measuring variable status		Low flow cut offMass flow	
	Quality	Bad		Switch output statusVolume flow
	Quality substatus	Maintenance alarm		- volume now
	Coding (hex)	0x24 to 0x27		
	Status signal	F		
	Diagnostic behavior	Alarm		

	Diagnostic information		Remedy instructions	Influenced measuring
No.	SI	hort text		variables
276	I/O module failure		1. Restart device	■ Empty pipe detection
	Measuring variable status	2. Change I/O module	Low flow cut offMass flow	
	Quality	Bad		Switch output statusVolume flow
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F		
	Diagnostic behavior	Alarm		

	Diagnostic information		Remedy instructions	Influenced measuring
No.	Short text			variables
282	2 Data storage		1. Restart device	■ Empty pipe detection
	Measuring variable status		2. Contact service	Low flow cut offMass flow
	Quality	Bad		Switch output statusVolume flow
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F		
	Diagnostic behavior	Alarm		

	Diagnostic information		Remedy instructions	Influenced measuring
No.	SI	hort text		variables
283			1. Transfer data or reset device	Empty pipe detection
	Measuring variable status		2. Contact service	Low flow cut offMass flow
	Quality	Bad		Switch output statusVolume flow
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F		
	Diagnostic behavior	Alarm		

	Diagnostic	information	Remedy instructions	Influenced measuring	
No.	Short text			variables	
302	Device verification active			Empty pipe detection	
	Measuring variable status			Mass flowSwitch output statusStatusVolume flow	
	Quality	Good			
	Quality substatus	Function check			
	Coding (hex)	0xBC to 0xBF			
	Status signal	С			
	Diagnostic behavior	Warning			

	Diagnostic information		Remedy instructions	Influenced measuring
No.	SI	hort text		variables
311	Electronic failure		1. Transfer data or reset device	Empty pipe detection
	Measuring variable status		■ Mass flow	Low flow cut offMass flow
	Quality	Bad		Switch output statusVolume flow
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F		
	Diagnostic behavior	Alarm		

	Diagnostic information		Remedy instructions	Influenced measuring
No.	Short text			variables
311	Electronic failure		Maintenance required!	Empty pipe detection
	Measuring variable status		Low flow cut off Mass flow Switch output status Volume flow	
	Quality	Bad		
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	M		
	Diagnostic behavior	Warning		

	Diagnostic information		Remedy instructions	Influenced measuring
No.	Si	hort text		variables
323			1. Perform verification manually	-
	Measuring variable status		2. Change electronic	
-	Quality	Good		
	Quality substatus	Ok		
	Coding (hex)	0x80 to 0x83		
	Status signal	F		
	Diagnostic behavior	Alarm		

12.5.3 Diagnostic of configuration

	Diagnostic information		Remedy instructions	Influenced measuring
No.	Short text			variables
410	Data transfer		1. Check connection	■ Empty pipe detection
	Measuring variable status		2. Retry data transfer	Low flow cut offMass flow
	Quality	Bad		Switch output statusVolume flow
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F		
	Diagnostic behavior	Alarm		

	Diagnostic	information	Remedy instructions	Influenced measuring
No.	Short text			variables
411	Up-/download active		Up-/download active, please wait	Empty pipe detection
	Measuring variable status			Low flow cut offMass flow
	Quality	Bad		Switch output statusVolume flow
	Quality substatus	Function check		
	Coding (hex)	0x3C to 0x3F		
	Status signal	С		
	Diagnostic behavior	Warning		

	Diagnostic information		Remedy instructions	Influenced measuring
No.	Short text			variables
412	2 Processing Download		Download active, please wait	■ Empty pipe detection
	Measuring variable status			Low flow cut offMass flow
	Quality	Uncertain		Switch output statusVolume flow
	Quality substatus	Initial value		
	Coding (hex)	0x4C to 0x4F		
	Status signal	С		
	Diagnostic behavior	Warning		

	Diagnostic information		Remedy instructions	Influenced measuring
No.	Short text			variables
437	Configuration incompatible		1. Restart device	■ Empty pipe detection
	Measuring variable status		2. Contact service	Low flow cut offMass flow
	Quality	Bad		Switch output statusVolume flow
	Quality substatus	Maintenance alarm		
	Coding (hex)	0x24 to 0x27		
	Status signal	F		
	Diagnostic behavior	Alarm		

	Diagnostic	information	Remedy instructions	Influenced measuring
No.	Short text			variables
438	Dataset		1. Check data set file	Empty pipe detection
	Measuring variable status		Check device configuration Up- and download new configuration	Low flow cut offMass flow
	Quality	Uncertain		Switch output statusVolume flow
	Quality substatus	Maintenance demanded		
	Coding (hex)	0x68 to 0x6B		
	Status signal	M		
	Diagnostic behavior	Warning		

	Diagnostic	information	Remedy instructions	Influenced measuring
No.	Si	hort text		variables
442	Frequency output		1. Check process	-
	Measuring variable status [fi	rom the factory] 1)	2. Check frequency output settings	
	Quality	Good		
	Quality substatus	Ok		
	Coding (hex)	0x80 to 0x83		
	Status signal	S		
	Diagnostic behavior	Warning		

	Diagnostic	information	Remedy instructions	Influenced measuring
No.	S	hort text		variables
443	Pulse output		1. Check process	-
	Measuring variable status [from the factory] 1)		2. Check pulse output settings	
	Quality	Good		
	Quality substatus	Ok		
	Coding (hex)	0x80 to 0x83		
	Status signal	S		
	Diagnostic behavior	Warning		

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

	Diagnostic	information	Remedy instructions	Influenced measuring
No.	Short text			variables
453	Flow override		Deactivate flow override	Empty pipe detection
	Measuring variable status			Low flow cut offMass flow
	Quality	Good		Switch output statusVolume flow
	Quality substatus	Function check		- volume now
	Coding (hex)	0xBC to 0xBF		
	Status signal	С		
	Diagnostic behavior	Warning		

	Diagnostic information		Remedy instructions	Influenced measuring
No.	Short text			variables
482	FB not Auto/Cas		Set Block in AUTO mode	_
	Measuring variable status			
	Quality	Good		
	Quality substatus	Ok		
	Coding (hex)	0x80 to 0x83		
	Status signal	F		
	Diagnostic behavior	Alarm		

	Diagnostic	information	Remedy instructions	Influenced measuring
No.	Short text			variables
484	Simulation failure mode		Deactivate simulation	Empty pipe detection
	Measuring variable status		■ Mass flow	Low flow cut offMass flow
	Quality	Bad		Switch output statusVolume flow
	Quality substatus	Function check		
	Coding (hex)	0x3C to 0x3F		
	Status signal	С		
	Diagnostic behavior	Alarm		

	Diagnostic information		Remedy instructions	Influenced measuring
No.	Short text			variables
485	Simulation measured variable		Deactivate simulation	■ Empty pipe detection
	Measuring variable status			Low flow cut offMass flow
	Quality	Good		Switch output statusVolume flow
	Quality substatus	Function check		
	Coding (hex)	0xBC to 0xBF		
	Status signal	С		
	Diagnostic behavior	Warning		

	Diagnostic information		Remedy instructions	Influenced measuring
No.	SI	hort text		variables
492	Simulation frequency output		Deactivate simulation frequency output	■ Empty pipe detection
	Measuring variable status			Low flow cut offMass flow
	Quality	Good		Switch output statusVolume flow
	Quality substatus	Ok		- volume now
	Coding (hex)	0x80 to 0x83		
	Status signal	С		
	Diagnostic behavior	Warning		

	Diagnostic i	information	Remedy instructions	Influenced measuring
No.	SI	hort text		variables
493	Simulation pulse output Measuring variable status		Deactivate simulation pulse output	■ Empty pipe detection
				Low flow cut offMass flow
	Quality	Good		Switch output statusVolume flow
	Quality substatus	Ok		- volume now
	Coding (hex)	0x80 to 0x83		
	Status signal	С		
	Diagnostic behavior	Warning		

	Diagnostic information		Remedy instructions	Influenced measuring
No.	SI	hort text		variables
494	Switch output simulation Measuring variable status		Deactivate simulation switch output	Empty pipe detection
				Low flow cut offMass flow
	Quality	Good		 Switch output status Volume flow
	Quality substatus	Function check		
	Coding (hex)	0xBC to 0xBF		
	Status signal	С		
	Diagnostic behavior	Warning		

	Diagnostic information		Remedy instructions	Influenced measuring
No.	SI	hort text		variables
495	Diagnostic event simulation		Deactivate simulation	-
	Measuring variable status			
	Quality	Good		
	Quality substatus	Ok		
	Coding (hex)	0x80 to 0x83		
	Status signal	С		
	Diagnostic behavior	Warning		

	Diagnostic information		Remedy instructions	Influenced measuring
No.	SI	hort text		variables
497	Simulation block output		Deactivate simulation	_
	Measuring variable status			
	Quality	Good		
	Quality substatus	Ok		
	Coding (hex)	0x80 to 0x83		
	Status signal	С		
	Diagnostic behavior	Warning		

	Diagnostic information		Remedy instructions	Influenced measuring
No.	SI	hort text		variables
531	Empty pipe detection Measuring variable status [from the factory] 1)		Execute EPD adjustment	■ Empty pipe detection
				Low flow cut offMass flow
	Quality	Uncertain		Switch output statusVolume flow
	Quality substatus	Process related		
	Coding (hex)	0x78 to 0x7B		
	Status signal	S		
	Diagnostic behavior	Warning		

12.5.4 Diagnostic of process

	Diagnostic information		Remedy instructions	Influenced measuring
No.	SI	hort text		variables
801	Supply voltage too low		Increase supply voltage	■ Empty pipe detection
	Measuring variable status [fr	rom the factory] 1)		 Low flow cut off Mass flow Switch output status Volume flow
	Quality	Uncertain		
	Quality substatus	Process related		
	Coding (hex)	0x78 to 0x7B		
	Status signal	S		
	Diagnostic behavior	Warning		

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

	Diagnostic information		Remedy instructions	Influenced measuring
No.	S	hort text		variables
832	Electronic temperature too high Measuring variable status [from the factory] 1)		Reduce ambient temperature	■ Empty pipe detection
				Low flow cut offMass flow
	Quality	Uncertain		Switch output statusVolume flow
	Quality substatus	Process related		
	Coding (hex)	0x78 to 0x7B		
	Status signal	S		
	Diagnostic behavior	Warning		

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

	Diagnostic	information	Remedy instructions	Influenced measuring
No.	SI	hort text		variables
833	Electronic temperature too low		Increase ambient temperature	■ Empty pipe detection
	Measuring variable status [from the factory] 1)		Low flow cut offMass flow	
	Quality	Uncertain		Switch output statusVolume flow
	Quality substatus	Process related		- volume now
	Coding (hex)	0x78 to 0x7B		
	Status signal	S		
	Diagnostic behavior	Warning		

	Diagnostic information		Remedy instructions	Influenced measuring
No.	S	hort text		variables
842	Process limit	Low flow cut off active!	Empty pipe detection	
	Measuring variable status		Mass flow	Low flow cut offMass flow
	Quality	Good		Switch output statusVolume flow
	Quality substatus	Ok		
	Coding (hex)	0x80 to 0x83		
	Status signal	S		
	Diagnostic behavior	Warning		

	Diagnostic information		Remedy instructions	Influenced measuring
No.	S	hort text		variables
861	Process fluid		Check process conditions	■ Empty pipe detection
	Measuring variable status [fi	com the factory] 1)		Low flow cut offMass flow
	Quality	Bad		Switch output statusVolume flow
	Quality substatus	Process related		
	Coding (hex)	0x28 to 0x2B		
	Status signal	F		
	Diagnostic behavior	Alarm		

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

	Diagnostic information		Remedy instructions	Influenced measuring
No.	Short text			variables
862	Empty pipe		1. Check for gas in process	Empty pipe detection
	Measuring variable status [fi	rom the factory] ¹⁾	2. Adjust empty pipe detection	Low flow cut offMass flow
	Quality	Uncertain		Switch output statusVolume flow
	Quality substatus	Process related		
	Coding (hex)	0x78 to 0x7B		
	Status signal	S		
	Diagnostic behavior	Warning		

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

	Diagnostic information		Remedy instructions	Influenced measuring
No.	S	hort text		variables
937	EMC interference		Change main electronic module	■ Empty pipe detection
	Measuring variable status [from the factory] 1)		Low flow cut offMass flow	
	Quality	Uncertain		Switch output statusVolume flow
	Quality substatus	Process related		- Volume now
	Coding (hex)	0x78 to 0x7B		
	Status signal	S		
	Diagnostic behavior	Warning		

	Diagnostic	information	Remedy instructions	Influenced measuring
No.	. Short text			variables
937	EMC interference		Change main electronic module	Empty pipe detectionMass flowSwitch output status
	Measuring variable status [from the factory] 1)			
	Quality	Uncertain		■ Volume flow
	Quality substatus	Process related		
	Coding (hex)	0x78 to 0x7B		
	Status signal	S		
	Diagnostic behavior	Warning		

1) Diagnostic behavior can be changed. This causes the overall status of the measured variable to change.

12.6 Pending diagnostic events


The **Diagnostics** menu allows the user to view the current diagnostic event and the previous diagnostic event separately.

- To call up the measures to rectify a diagnostic event:
 - Via local display → 🖺 104
 - Via "FieldCare" operating tool → 🖺 105
- Other pending diagnostic events can be displayed in the **Diagnostic list** submenu $\rightarrow \ \cong \ 122$

Navigation

"Diagnostics" menu

Structure of the submenu

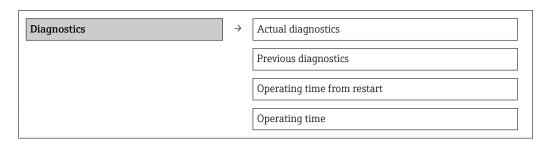

Parameter overview with brief description


Parameter	Prerequsite	Description	User interface
Actual diagnostics	A diagnostic event has occurred.	Shows the current occured diagnostic event along with its diagnostic information.	Symbol for diagnostic behavior, diagnostic code and short message.
		If two or more messages occur simultaneously, the message with the highest priority is shown on the display.	
Previous diagnostics	Two diagnostic events have already occurred.	Shows the diagnostic event that occurred prior to the current diagnostic event along with its diagnostic information.	Symbol for diagnostic behavior, diagnostic code and short message.
Operating time from restart	-	Shows the time the device has been in operation since the last device restart.	Days (d), hours (h), minutes (m) and seconds (s)
Operating time	-	Indicates how long the device has been in operation.	Days (d), hours (h), minutes (m) and seconds (s)

12.7 Diagnostic list

In the **Diagnostic list** submenu, up to 5 currently pending diagnostic events can be displayed along with the related diagnostic information. If more than 5 diagnostic events are pending, the events with the highest priority are shown on the display.

Navigation path

 $\textbf{Diagnostics} \ menu \rightarrow \textbf{Diagnostic list} \ submenu$

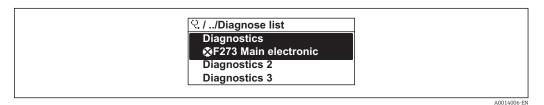


 \blacksquare 29 Illustrated using the example of the local display

To call up the measures to rectify a diagnostic event:

- Via local display \rightarrow 🗎 104
- Via "FieldCare" operating tool → 🗎 105

12.8 Event logbook

12.8.1 Event history

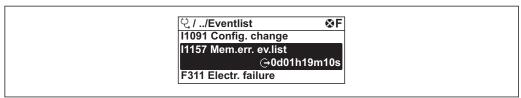

A0014008-E

■ 30 Taking the example of the local display

- To call up the measures to rectify a diagnostic event:
 - Via local display → 🖺 104
 - Via "FieldCare" operating tool → 🗎 105
- For filtering the displayed event messages → 🖺 123

12.8.2 Filtering the event logbook

Using the **Filter options** parameter, you can define which category of event messages is displayed in the **Events list** submenu.

Navigation path

"Diagnostics" menu → Event logbook → Filter options

Filter categories

- All
- Failure (F)
- Function check (C)
- Out of specification (S)
- Maintenance required (M)
- Information (I)

12.8.3 Overview of information events

Unlike a diagnostic event, an information event is displayed in the event logbook only and not in the diagnostic list.

Info number	Info name		
I1000	(Device ok)		
I1079	Sensor changed		
I1089	Power on		
I1090	Configuration reset		
I1091	Configuration changed		
I1092	Trend data deleted		
I1110	Write protection switch changed		
I1137	Electronic changed		
I1151	History reset		
I1154	Reset terminal voltage min/max		
I1155	Reset electronic temperature		
I1156	Memory error trend		
I1157	Memory error event list		


Info number	Info name	
I1185	Display backup done	
I1186	Restore via display done	
I1187	Settings downloaded with display	
I1188	Display data cleared	
I1189	Backup compared	
I1227	Sensor emergency mode activated	
I1228	Sensor emergency mode failed	
I1256	Display: access status changed	
I1264	Safety sequence aborted	
I1335	Firmware changed	
I1351	Empty pipe detection adjustment failure	
I1353	Empty pipe detection adjustment ok	
I1397	Fieldbus: access status changed	
I1398	CDI: access status changed	
I1440	Main electronic module changed	
I1442	I/O module changed	
I1444	Device verification passed	
I1445	Device verification failed	
I1459	Failed: I/O module verification	
I1461	Failed: Sensor verification	
I1512	Download started	
I1513	Download finished	
I1514	Upload started	
I1515	Upload finished	
I1552	Failed: Main electronic verification	
I1554	Safety sequence started	
I1555	Safety sequence confirmed	
I1556	Safety mode off	

12.9 Resetting the measuring device

Using the **Device reset** parameter it is possible to reset the entire device configuration or some of the configuration to a defined state.

Navigation

"Setup" menu \rightarrow Advanced setup \rightarrow Administration \rightarrow Device reset

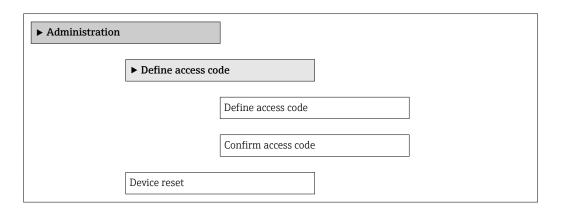

Parameter overview with brief description

Parameter	Description	Selection	Factory setting
Device reset	Reset the device configuration - either entirely or in part - to a defined state.	 Cancel To fieldbus defaults To factory defaults To delivery settings Restart device 	Cancel

^{*} Visibility depends on communication

12.9.1 Function scope of the "Device reset" parameter


Options	Description	
Cancel	No action is executed and the user exits the parameter.	
To delivery settings	Every parameter for which a customer-specific default setting was ordered is reset to this customer-specific value. All other parameters are reset to the factory setting.	
Restart device	The restart resets every parameter whose data are in the volatile memory (RAM) to the factory setting (e.g. measured value data). The device configuration remains unchanged.	
History reset	Every parameter is reset to the factory setting.	

12.10 Device information

The **Device information** submenu contains all the parameters that display different information for identifying the device.

Navigation

"Diagnostics" menu \rightarrow Device information

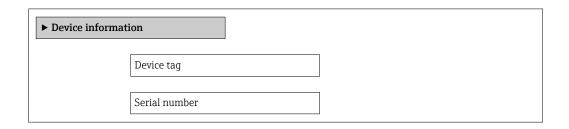

Firmware version	
Device name	
Device nume	
Order code	
Extended order code 1	
Extended order code 2	
Extended order code 3	
ENP version	

Parameter overview with brief description

Parameter	Description	User interface	Factory setting
Device tag	Display the name for the measuring point.	Max. 32 characters such as letters, numbers or special characters (e.g. @, %, /)	Promag 200 PA
Serial number	Shows the serial number of the measuring device.		-
Firmware version	Shows the device firmware version installed. Character string with the following format: xx.yy.zz		01.01.zz
Device name	Shows the name of the transmitter. The name can be found on the nameplate of the transmitter.	Promag 200	-
Order code	Shows the device order code. The order code can be found on the nameplate of the sensor and transmitter in the "Order code" field. Character string composed of letters, numbers and certain punctuation marks (e.g. /).		-
Extended order code 1	Shows the 1st part of the extended order code. The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.	Character string	-
Extended order code 2	Shows the 2nd part of the extended order code. The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.	Character string	-
Extended order code 3	Shows the 3rd part of the extended order code. The extended order code can also be found on the nameplate of the sensor and transmitter in the "Ext. ord. cd." field.	Character string	-
ENP version	Shows the version of the electronic nameplate (ENP).		2.02.00

Parameter	Description	User interface	Factory setting
PROFIBUS ident number	Displays the PROFIBUS identification number.	0 to FFFF	0x1563
Status PROFIBUS Master Config	Displays the status of the PROFIBUS Master configuration.	ActiveNot active	Not active

12.11 Firmware history

Release date	Firmwar e version	Order code for "Firmware version"	Firmware changes	Documentation type	Documentation
06.2015	01.00.zz	Option 77	Original firmware	Operating Instructions	BA01375D/06/EN/ 01.15

- Flashing the firmware to the current version or to the previous version is possible via the service interface (CDI) .
- For the compatibility of the firmware version with the previous version, the installed device description files and operating tools, observe the information about the device in the "Manufacturer's information" document.
- The manufacturer's information is available:
 - \bullet In the Download Area of the Endress+Hauser Internet site: www.endress.com \to Download
 - Specify the following details:
 - Text search: Manufacturer's information
 - Search range: documentation

13 Maintenance

13.1 Maintenance tasks

No special maintenance work is required.

13.1.1 Exterior cleaning

When cleaning the exterior of measuring devices, always use cleaning agents that do not attack the surface of the housing or the seals.

13.1.2 Interior cleaning

No interior cleaning is planned for the device.

13.1.3 Replacing seals


The sensor's seals (particularly aseptic molded seals) must be replaced periodically.

The interval between changes depends on the frequency of the cleaning cycles, the cleaning temperature and the medium temperature.

Replacement seals (accessory) $\rightarrow \triangleq 150$

13.2 Measuring and test equipment

Endress+Hauser offers a wide variety of measuring and test equipment, such as W@M or device tests.

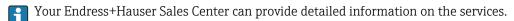

For a list of some of the measuring and test equipment, refer to the "Accessories" chapter of the "Technical Information" document for the device.

13.3 Endress+Hauser services

Endress+Hauser offers a wide variety of services for maintenance such as recalibration, maintenance service or device tests.

Your Endress+Hauser Sales Center can provide detailed information on the services.

14 Repair

14.1 General notes

Repair and conversion concept

The Endress+Hauser repair and conversion concept provides for the following:

- The measuring devices have a modular design.
- Spare parts are grouped into logical kits with the associated Installation Instructions.
- Repairs are carried out by Endress+Hauser Service or by correspondingly trained customers.
- Certified devices can be converted into other certified devices by Endress+Hauser Service or at the factory only.

Notes for repair and conversion

For repair and modification of a measuring device, observe the following notes:


- Use only original Endress+Hauser spare parts.
- Carry out the repair according to the Installation Instructions.
- Observe the applicable standards, federal/national regulations, Ex documentation (XA) and certificates.
- Document every repair and each conversion and enter them into the W@M life cycle management database.

14.2 Spare parts

Some interchangeable measuring device components are listed on an overview sign in the connection compartment cover.

The spare part overview sign contains the following information:

- A list of the most important spare parts for the measuring device, including their ordering information.
- The URL for the *W@M Device Viewer* (www.endress.com/deviceviewer):
 All the spare parts for the measuring device, along with the order code, are listed here and can be ordered. If available, users can also download the associated Installation Instructions.

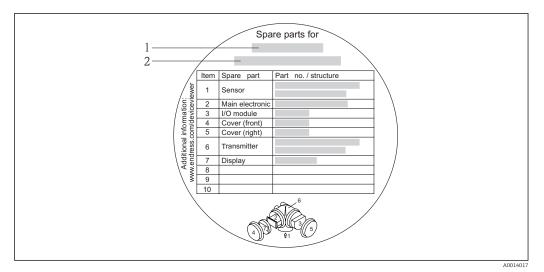

■ 31 Example for "Spare part overview sign" in connection compartment cover

- 1 Measuring device name
- 2 Measuring device serial number
- Measuring device serial number:
 - Is located on the device nameplate and the spare part overview sign.
 - Can be read out via the Serial number parameter in the Device information submenu.

14.3 Endress+Hauser services

Endress+Hauser offers a wide range of services.

Your Endress+Hauser Sales Center can provide detailed information on the services.

14.4 Return

The measuring device must be returned if it is need of repair or a factory calibration, or if the wrong measuring device has been delivered or ordered. Legal specifications require Endress+Hauser, as an ISO-certified company, to follow certain procedures when handling products that are in contact with the medium.

To ensure safe, swift and professional device returns, please refer to the procedure and conditions for returning devices provided on the Endress+Hauser website at http://www.endress.com/support/return-material

14.5 Disposal

14.5.1 Removing the measuring device

- 1. Switch off the device.
- 2. **WARNING!** Danger to persons from process conditions. Beware of hazardous process conditions such as pressure in the measuring device, high temperatures or aggressive fluids.

Carry out the mounting and connection steps from the chapters "Mounting the measuring device" and "Connecting the measuring device" in the logically reverse sequence. Observe the safety instructions.

14.5.2 Disposing of the measuring device

A WARNING

Danger to personnel and environment from fluids that are hazardous to health.

► Ensure that the measuring device and all cavities are free of fluid residues that are hazardous to health or the environment, e.g. substances that have permeated into crevices or diffused through plastic.

Observe the following notes during disposal:

- Observe valid federal/national regulations.
- Ensure proper separation and reuse of the device components.

15 Accessories

Various accessories, which can be ordered with the device or subsequently from Endress +Hauser, are available for the device. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: www.endress.com.

15.1 Device-specific accessories

15.1.1 For the transmitter

Accessories	Description
Remote display FHX50	FHX50 housing to accommodate a display module → 🗎 147. ■ FHX50 housing suitable for: — SD02 display module (push buttons)
	 SD03 display module (touch control) Housing material: Plastic PBT Stainless steel CF-3M (316L, 1.4404)
	■ Length of connecting cable: up to max. 60 m (196 ft) (cable lengths available for order: 5 m (16 ft), 10 m (32 ft), 20 m (65 ft), 30 m (98 ft))
	The measuring device can be ordered with the FHX50 housing and a display module. The following options must be selected in the separate order codes: Order code for measuring device, feature 030: Option L or M "Prepared for FHX50 display" Order code for FHX50 housing, feature 050 (device version): Option A "Prepared for FHX50 display" Order code for FHX50 housing, depends on the desired display module in feature 020 (display, operation): Option C: for an SD02 display module (push buttons) Option E: for an SD03 display module (touch control)
	The FHX50 housing can also be ordered as a retrofit kit. The measuring device display module is used in the FHX50 housing. The following options must be selected in the order code for the FHX50 housing: Feature 050 (measuring device version): option B "Not prepared for FHX50 display" Feature 020 (display, operation): option A "None, existing displayed used"
	For details, see Special Documentation SD01007F
Overvoltage protection for 2-wire devices	Ideally, the overvoltage protection module should be ordered directly with the device. See product structure, characteristic 610 "Accessory mounted", option NA "Overvoltage protection". Separate order necessary only if retrofitting.
	 OVP10: For 1-channel devices (characteristic 020, option A): OVP20: For 2-channel devices (characteristic 020, options B, C, E or G)
	For details, see Special Documentation SD01090F.
Weather protection cover	Is used to protect the measuring device from the effects of the weather: e.g. rainwater, excess heating from direct sunlight or extreme cold in winter.
	For details, see Special Documentation SD00333F

15.1.2 For the sensor

Accessories	Description	
Seal set	For the regular replacement of seals for the sensor.	
Welding jig	Welded connection as process connection: welding jig for installation in pipe.	

132

Grounding rings	Are used to ground the fluid in lined measuring tubes to ensure proper measurement. For details, see Installation Instructions EA00070D
Mounting kit	Consists of: 2 process connections Screws Seals

15.2 Service-specific accessories

Accessories	Description
Applicator	Software for selecting and sizing Endress+Hauser measuring devices: Calculation of all the data needed to determine the optimum flowmeter: e.g. nominal diameter, pressure drop, performance characteristics or process connections. Graphic illustration of the calculation results
	Administration, documentation and access to all project-related data and parameters throughout the entire life cycle of a project.
	Applicator is available: • Via the Internet: https://wapps.endress.com/applicator • On CD-ROM for local PC installation.
W@M	Life cycle management for your plant W@M supports you with a wide range of software applications over the entire process: from planning and procurement, to the installation, commissioning and operation of the measuring devices. All the relevant information is available for every measuring device over time entire life cycle, such as the device status, spare parts, device-specific documentation, etc. The application already contains the data of your Endress+Hauser device. Endress +Hauser also takes care of maintaining and updating the data records. W@M is available: Via the Internet: www.endress.com/lifecyclemanagement On CD-ROM for local PC installation.
FieldCare	FDT-based plant asset management tool from Endress+Hauser. It can configure all smart field units in your system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition.
	For details, see Operating Instructions BA00027S and BA00059S

15.3 System components

Accessories	Description
Memograph M graphic display recorder	The Memograph M graphic display recorder provides information on all relevant measured variables. Measured values are recorded correctly, limit values are monitored and measuring points analyzed. The data are stored in the 256 MB internal memory and also on a SD card or USB stick. For details, see "Technical Information" TI00133R and Operating Instructions BA00247R

16 Technical data

16.1 Application

The measuring device is only suitable for flow measurement of liquids with a minimum conductivity of 20 μ S/cm.

Depending on the version ordered, the measuring device can also measure potentially explosive, flammable, poisonous and oxidizing media.

To ensure that the device remains in proper operating condition for its service life, use the measuring device only for media against which the process-wetted materials are adequately resistant.

16.2 Function and system design

Measuring principle

Electromagnetic flow measurement on the basis of *Faraday's law of magnetic induction*.

Measuring system

The device consists of a transmitter and a sensor.

The device is available as a compact version:

The transmitter and sensor form a mechanical unit.

For information on the structure of the measuring device $\rightarrow = 12$

16.3 Input

Measured variable

Direct measured variables

Volume flow (proportional to induced voltage)

Calculated measured variables

Mass flow

Measuring range

Typically v = 0.01 to 10 m/s (0.03 to 33 ft/s) with the specified accuracy

Flow characteristic values in SI units

Nominal diameter		Recommended flow	Factory settings		
		Min./max. full scale value (v ~ 0.3/10 m/s)	Full scale value current output (v ~ 2.5 m/s)	Pulse value (~ 2 pulse/s)	Low flow cut off (v ~ 0.04 m/s)
[mm]	[in]	[dm³/min]	[dm³/min]	[dm³]	[dm³/min]
2	1/12	0.06 to 1.8	0,5	0.005	0,01
4	1/8	0.25 to 7	2	0.025	0,05
8	3/8	1 to 30	8	0.1	0,1
15	1/2	4 to 100	25	0.2	0,5
25	1	9 to 300	75	0.5	1

134

Flow characteristic values in US units

Nominal diameter		Recommended flow	Factory settings		
		Min./max. full scale value (v ~ 0.3/10 m/s)	Full scale value current output (v ~ 2.5 m/s)	Pulse value (~ 2 pulse/s)	Low flow cut off (v ~ 0.04 m/s)
[in]	[mm]	[gal/min]	[gal/min]	[gal]	[gal/min]
1/12	2	0.015 to 0.5	0,1	0,001	0,002
1/8	4	0.07 to 2	0,5	0,005	0,008
3/8	8	0.25 to 8	2	0,02	0,025
1/2	15	1 to 27	6	0,05	0,1
1	25	2.5 to 80	18	0,2	0,25

Recommended measuring range

"Flow limit" section \rightarrow \blacksquare 142

Operable flow range

Over 1000:1

16.4 Output

Output signal

Pulse/frequency/switch output

Function	Can be set to pulse, frequency or switch output
Version	Passive, open collector
Maximum input values	■ DC 35 V ■ 50 mA
Voltage drop	 For ≤ 2 mA: 2 V For 10 mA: 8 V
Residual current	≤ 0.05 mA
Pulse output	
Pulse width	Adjustable: 5 to 2 000 ms
Maximum pulse rate	100 Impulse/s
Pulse value	Adjustable
Assignable measured variables	Volume flowMass flow
Frequency output	
Output frequency	Adjustable: 0 to 1000 Hz
Damping	Adjustable: 0 to 999 s
Pulse/pause ratio	1:1
Assignable measured variables	Volume flowMass flow
Switch output	
Switching behavior	Binary, conductive or non-conductive
Switching delay	Adjustable: 0 to 100 s

Number of switching cycles	Unlimited
Assignable functions	 Off On Diagnostic behavior Limit value Volume flow Mass flow Flow direction monitoring Status Empty pipe detection Low flow cut off

PROFIBUS PA

Signal encoding	Manchester Bus Powered (MBP)
Data transfer	31.25 KBit/s, Voltage mode

Signal on alarm

Depending on the interface, failure information is displayed as follows:

Pulse/frequency/switch output

Pulse output

Failure mode	Choose from:
	Actual value
	■ No pulses

Frequency output

Failure mode	Choose from:
	Actual value
	■ 0 Hz
	■ Defined value: 0 to 1250 Hz

Switch output

Failure mode	Choose from:
	 Current status
	■ Open
	■ Closed

PROFIBUS PA

Status and alarm messages	Diagnostics in accordance with PROFIBUS PA Profile 3.02
Error current FDE (Fault Disconnection Electronic)	0 mA

136

Local display

Plain text display	With information on cause and remedial measures	
Backlight	Additionally for device version with SD03 local display: red lighting indicates a device error.	



Status signal as per NAMUR recommendation NE 107

Operating tool

- Via digital communication: PROFIBUS PA
- Via service interface

Plain text d	lisplay	With information on cause and remedial measures
--------------	---------	---

Low flow cut off

The switch points for low flow cut off are user-selectable.

Galvanic isolation

All outputs are galvanically isolated from one another.

Protocol-specific data

PROFIBUS PA

Manufacturer ID	0x11		
Ident number	0x1563		
Profile version	3.02		
Device description files (GSD, DTM, DD)	Information and files under: www.endress.com www.profibus.org		
Output values (from measuring device to automation system)	Analog input 1 to 2 ■ Mass flow ■ Volume flow		
	Digital input 1 to 2 Empty pipe detection Low flow cut off Status switch output Status verification		
	Totalizer 1 to 3 ■ Mass flow ■ Volume flow ■ Corrected volume flow		
Input values (from automation system to measuring device)	Digital output 1 to 3 (fixed assignment) Digital output 1: switch positive zero return on/off Digital output 2: switch switch output on/off Digital output 3: start verification		
	Totalizer 1 to 3 ■ Totalize ■ Reset and hold ■ Preset and hold ■ Operating mode configuration: - Net flow total - Forward flow total - Reverse flow total		

Supported functions	Identification & Maintenance Simplest device identification on the part of the control system and nameplate PROFIBUS upload/download Reading and writing parameters is up to ten times faster with PROFIBUS upload/download Condensed status Simplest and self-explanatory diagnostic information by categorizing diagnostic messages that occur
Configuration of the device address	 DIP switches on the I/O electronics module Local display via operating tools (e.g. FieldCare)

16.5 Power supply

Terminal assignment $\rightarrow \stackrel{ riangle}{=} 31$ Pin assignment, device plug $\rightarrow \stackrel{ riangle}{=} 31$

Supply voltage

Transmitter

An external power supply is required for each output.

The following supply voltage values apply for the outputs available:

Order code for "Output"	Minimum terminal voltage	Maximum terminal voltage
Option G : PROFIBUS PA, pulse/frequency/switch output	≥ DC 9 V	DC 32 V

Power consumption

Transmitter

Order code for "Output"	Maximum power consumption
Option G : PROFIBUS PA, pulse/frequency/switch output	 Operation with output 1: 512 mW Operation with output 1 and 2: 2512 mW

Current consumption PROFIBUS PA 16 mA Power supply failure ■ Totalizers stop at the last value measured. ■ Configuration is retained in the device memory (HistoROM). ■ Error messages (incl. total operated hours) are stored. Electrical connection → ■ 33 Potential equalization → ■ 35

Terminals

- For device version without integrated overvoltage protection: plug-in spring terminals for wire cross-sections 0.5 to 2.5 mm² (20 to 14 AWG)
- For device version with integrated overvoltage protection: screw terminals for wire cross-sections 0.2 to 2.5 mm² (24 to 14 AWG)

Cable entries

- Cable gland: M20 \times 1.5 with cable ϕ 6 to 12 mm (0.24 to 0.47 in)
- Thread for cable entry:
 - NPT 1/2"
 - G ½"

Cable specification

→ 🖺 28

Overvoltage protection

The device can be ordered with integrated overvoltage protection for diverse approvals: Order code for "Accessory mounted", option NA "Overvoltage protection"

Input voltage range	Values correspond to supply voltage specifications 1)
Resistance per channel	2 · 0.5 Ω max
DC sparkover voltage	400 to 700 V
Trip surge voltage	< 800 V
Capacitance at 1 MHz	< 1.5 pF
Nominal discharge current (8/20 μs)	10 kA
Temperature range	-40 to +85 °C (-40 to +185 °F)

1) The voltage is reduced by the amount of the internal resistance I_{min} $\cdot R_i$



Depending on the temperature class, restrictions apply to the ambient temperature for device versions with overvoltage protection.



For detailed information on the temperature tables, see the separate document entitled "Safety Instructions" (XA) for the device.

Performance characteristics 16.6

Reference operating conditions

In accordance with DIN EN 29104

- Water, typically 15 to 45 °C (59 to 113 °F); 2 to 6 bar (29 to 87 psi)
- Data as indicated in the calibration protocol ± 5 °C (± 41 °F) and ± 2 bar (± 29 psi)
- Accuracy based on accredited calibration rigs traced to ISO 17025
- Medium temperature: $+28 \pm 2$ °C ($+82 \pm 4$ °F)
- Ambient temperature: $+22 \pm 2$ °C ($+72 \pm 4$ °F)
- Warm-up period: 30 min

Installation

- Inlet run > 10 × DN
- Outlet run > 5 × DN
- Sensor and transmitter grounded.
- The sensor is centered in the pipe.

Maximum measured error


Error limits under reference operating conditions

o.r. = of reading

Volume flow

 ± 0.5 % o.r. ± 2 mm/s (0.08 in/s)

Fluctuations in the supply voltage do not have any effect within the specified range.

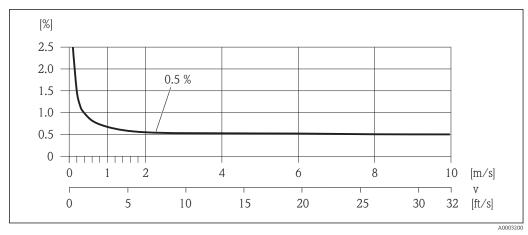

■ 32 Maximum measured error in % o.r.

Accuracy of outputs

The outputs have the following base accuracy specifications.

Pulse/frequency output

o.r. = of reading

Accuracy Max. ±100 ppm o.r.	
-----------------------------	--

Repeatability

o.r. = of reading

Volume flow

Max. ± 0.2 % o.r. ± 2 mm/s (0.08 in/s)

Influence of ambient temperature

Pulse/frequency output

o.r. = of reading

Temperature coefficient	Max. ±100 ppm o.r.
-------------------------	--------------------

16.7 Installation

"Mounting requirements" $\rightarrow \equiv 19$

16.8 Environment

Ambient temperature range

→ 🖺 21

Temperature tables

Observe the interdependencies between the permitted ambient and fluid temperatures when operating the device in hazardous areas.

For detailed information on the temperature tables, see the separate document entitled "Safety Instructions" (XA) for the device.

Storage temperature

The storage temperature corresponds to the operating temperature range of the measuring transmitter and the appropriate measuring sensors.

- Protect the measuring device against direct sunlight during storage in order to avoid unacceptably high surface temperatures.
- Select a storage location where moisture cannot collect in the measuring device as fungus or bacteria infestation can damage the liner.
- If protection caps or protective covers are mounted these should never be removed before installing the measuring device.

Degree of protection

Transmitter

- As standard: IP66/67, type 4X enclosure
- When housing is open: IP20, type 1 enclosure
- Display module: IP20, type 1 enclosure

Sensor

IP66/67, type 4X enclosure

Connector


IP67, only in screwed situation

Shock resistance	As per IEC/EN 60068-2-31
Vibration resistance	Acceleration up to 2 g, according to IEC 60068-2-6
Mechanical load	 Protect the transmitter housing against mechanical effects, such as shock or impact. Never use the transmitter housing as a ladder or climbing aid.
Electromagnetic compatibility (EMC)	As per IEC/EN 61326 and NAMUR Recommendation 21 (NE 21) For details, refer to the Declaration of Conformity.

16.9 Process

Medium temperature range

 $-20 \text{ to } +150 \,^{\circ}\text{C} \, (-4 \text{ to } +302 \,^{\circ}\text{F}) \text{ for PFA}$

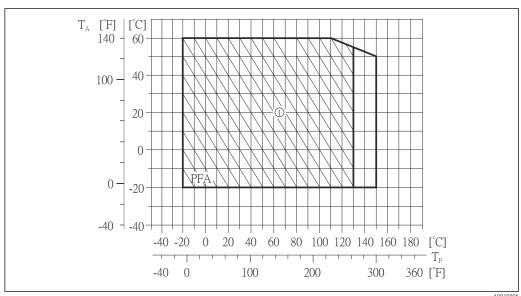

A001980

141

- T_A Ambient temperature
- T_F Medium temperature
- 1 Hatched area: harsh environment only up to +130 °C (+266 °F)

Conductivity

 \geq 20 µS/cm for liquids in general

Pressure-temperature ratings

An overview of the pressure-temperature ratings for the process connections is provided in the "Technical Information" document

Pressure tightness

Liner: PFA

Nominal	diameter	Limit values for absolute pressure in [mbar] ([psi]) for fluid temperatures:				
[mm]	[in]	+25 ℃ (+77 ℉)	+80 °C (+176 °F)	+100 °C (+212 °F)	+130 °C (+266 °F)	+150 °C (+302 °F)
2 to 25	½ to 1	0 (0)	0 (0)	0 (0)	0 (0)	0 (0)

Flow limit

The diameter of the pipe and the flow rate determine the nominal diameter of the sensor. The optimum velocity of flow is between 2 to 3 m/s (6.56 to 9.84 ft/s). Also match the velocity of flow (v) to the physical properties of the fluid:

- v < 2 m/s (6.56 ft/s): for abrasive fluids
- v > 2 m/s (6.56 ft/s): for fluids producing buildup
- A necessary increase in the flow velocity can be achieved by reducing the sensor nominal diameter.
- For an overview of the measuring range full scale values, see the "Measuring range" section → 134

Pressure loss

- No pressure loss occurs as of nominal diameter DN 8 (3/8") if the sensor is installed in a pipe with the same nominal diameter.
- Pressure losses for configurations incorporating adapters according to DIN EN 545
 → 22

System pressure

→ 🖺 21

Vibrations

→ \(\bigsize 22\)

16.10 Mechanical construction

Design, dimensions

For the dimensions and installation lengths of the device, see the "Technical Information" document, "Mechanical construction" section

Weight

Compact version

- Including the transmitter (1.9 kg (4.2 lbs))
- Weight specifications apply to standard pressure ratings and without packaging material.

Nominal diameter		Weight		
[mm]	[in]	[kg]	[lbs]	
2	1/12	3.7	8.2	
4	1/8	3.7	8.2	
8	3/8	3.8	8.4	
15	1/2	3.9	8.6	
25	1	4.0	8.8	

Measuring tube specification

Nominal diameter		Pressure rating ¹⁾ EN (DIN)	Process connection internal diameter PFA	
[mm]	[in]	[bar]	[mm]	[in]
2	1/12	PN 16/40	2.25	0.09
4	1/8	PN 16/40	4.5	0.18
8	3/8	PN 16/40	9.0	0.35
15	1/2	PN 16/40	16.0	0.63
_	1	PN 16/40	22.6	0.89
25	-	PN 16/40	26.0	1.02


1) Depending on process connection and seals used

Materials

Transmitter housing

- Order code for "Housing", option **C** "Compact, aluminum coated": Aluminum, AlSi10Mg, coated
- Window material: glass

Cable entries/cable glands

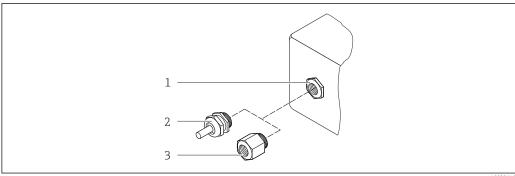

- 33 Possible cable entries/cable glands
- Cable entry in transmitter housing with internal thread M20 x 1.5 Cable gland M20 x 1.5
- Adapter for cable entry with internal thread G $\frac{1}{2}$ " or NPT $\frac{1}{2}$ "

Order code for "Housing", option C "GT20 two-chamber, aluminum coated"

Cable entry/cable gland	Type of protection	Material
Cable gland M20 × 1.5	Non-ExEx iaEx ic	Plastic
	Adapter for cable entry with internal thread G ½"	Nickel-plated brass
Adapter for cable entry with internal thread NPT ½"	For non-Ex and Ex (except for CSA Ex d/XP)	Nickel-plated brass
Thread NPT ½" via adapter	For non-Ex and Ex	

Device plug

Electrical connection	Material	
Plug M12x1	 Socket: stainless steel, 1.4401/316 Contact housing: plastic, PUR, black Contacts: metal, CuZn, gold-plated Threaded connection seal: NBR 	

Sensor housing

Stainless steel 1.4301 (304)

Measuring tubes

Stainless steel 1.4301 (304)

Liner

PFA (USP Class VI, FDA 21 CFR 177.1550, 3A)

Process connections

- Stainless steel 1.4404 (F316L)
- PVDF
- PVC adhesive sleeve

Electrodes

- Standard: 1.4435 (316L)
- Optional: Alloy C22, tantalum, platinum

Seals

- O-ring seal: EPDM, FKM, Kalrez
- Aseptic molded seal: EPDM ¹⁾, FKM, silicone ¹⁾

Accessories

Weather protection cover

Stainless steel 1.4404 (316L)

USP Class VI, FDA 21 CFR 177.2600, 3A

Grounding rings

Standard: 1.4435 (F316L)Optional: Alloy C22, tantalum

Wall mounting kit

Stainless steel 1.4301 (304)

Fitted electrodes

Measuring electrodes and empty pipe detection electrodes (only DN 25 (1")): 1.4435 (316L), Alloy C22, platinum, tantalum

Process connections

With O-ring seal

- Weld-in nipple (DIN EN ISO 1127, ODT/SMS, ISO 2037)
- Flange (EN (DIN), ASME, JIS)
- Flange from PVDF (EN (DIN), ASME, JIS)
- External thread
- Internal thread
- Hose connection
- PVC adhesive sleeve

With aseptic molded seal:

- Weld-in nipple (EN 10357 (DIN 11850), ODT/SMS, ISO 2037)
- Clamp (ISO 2852, DIN 32676, L14 AM7)
- Coupling (DIN 11851, DIN 11864-1, ISO 2853, SMS 1145)
- Flange DIN 11864-2
- For information on the materials of the process connections $\rightarrow \, \stackrel{ riangle}{=} \, 144$

Surface roughness

Stainless steel electrodes, 1.4435 (F316L); Alloy C22, 2.4602 (UNS N06022); platinum; tantalum:

 ≤ 0.3 to 0.5 µm (11.8 to 19.7 µin)

(All data relate to parts in contact with fluid)

Liner with PFA:

 $\leq 0.4 \ \mu m \ (15.7 \ \mu in)$

(All data relate to parts in contact with fluid)

Stainless steel process connections:


 $\leq 0.8 \, \mu \text{m} \, (31 \, \mu \text{in})$

(All data relate to parts in contact with fluid)

16.11 Operability

Local operation

Via display module

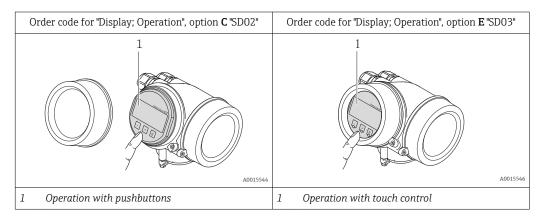

Display elements

- 4-line display
- With order code for "Display; operation", option **E**: White background lighting; switches to red in event of device errors
- Format for displaying measured variables and status variables can be individually configured
- Permitted ambient temperature for the display: -20 to +60 °C (-4 to +140 °F) The readability of the display may be impaired at temperatures outside the temperature range.


Operating elements

- With order code for "Display; operation", option **C**: Local operation with 3 push buttons: ①, ②, ⑥
- With order code for "Display; operation", option **E**: External operation via touch control; 3 optical keys: ①, ②, ⑤
- Operating elements also accessible in various hazardous areas

Additional functionality

- Data backup function
 - The device configuration can be saved in the display module.
- Data comparison function
 - The device configuration saved in the display module can be compared to the current device configuration.
- Data transfer function
 - The transmitter configuration can be transmitted to another device using the display module.

Via remote display and operating module FHX50

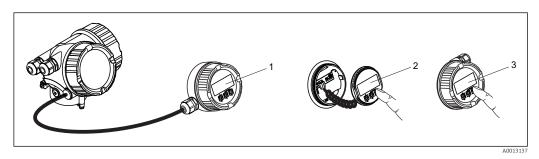


■ 34 Operating options via FHX50

- 1 Housing of remote display and operating module FHX50
- 2 SD02 display and operating module, push buttons: cover must be opened for operation
- 3 SD03 display and operating module, optical buttons: operation possible through cover glass

Remote operation

Via PROFIBUS PA network

This communication interface is available in device versions with PROFIBUS PA.

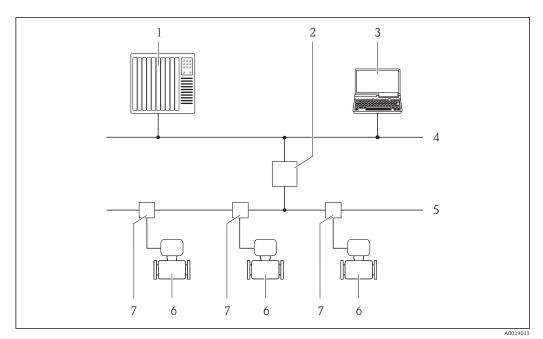


■ 35 Options for remote operation via PROFIBUS PA network

- 1 Automation system
- 2 Segment coupler PROFIBUS DP/PA
- 3 Computer with PROFIBUS network card
- 4 PROFIBUS DP network
- 5 PROFIBUS PA network
- 6 Measuring device
- 7 T-box

Service interface

Via service interface (CDI)

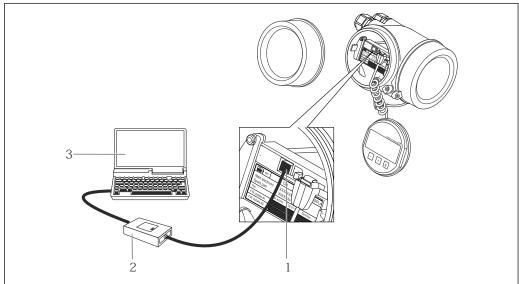

A001401

- 1 Service interface (CDI = Endress+Hauser Common Data Interface) of the measuring device
- 2 Commubox FXA291
- 3 Computer with "FieldCare" operating tool with COM DTM "CDI Communication FXA291"

Languages

Can be operated in the following languages:

- Via local display:
 English, German, French, Spanish, Italian, Dutch, Portuguese, Polish, Russian, Swedish,
 Turkish, Chinese, Japanese, Bahasa (Indonesian), Vietnamese, Czech
- Via "FieldCare" operating tool:
 English, German, French, Spanish, Italian, Chinese, Japanese

16.12 Certificates and approvals

The measuring system is in conformity with the statutory requirements of the applicable EC Directives. These are listed in the corresponding EC Declaration of Conformity along with the standards applied. Endress+Hauser confirms successful testing of the device by affixing to it the CE mark. C-Tick symbol The measuring system meets the EMC requirements of the "Australian Communications and Media Authority (ACMA)". Ex approval The devices are certified for use in hazardous areas and the relevant safety instructions are provided in the separate "Safety Instructions" (XA) document. Reference is made to this document on the nameplate.

■ Seals → in conformity with FDA (apart from Kalrez seals)

148

Certification PROFIBUS

PROFIBUS interface

The measuring device is certified and registered by the PROFIBUS User Organization (PNO). The measuring system meets all the requirements of the following specifications:

- Certified in accordance with PROFIBUS PA Profile 3.02
- The device can also be operated with certified devices of other manufacturers (interoperability)

Other standards and guidelines

■ EN 60529

Degrees of protection provided by enclosures (IP code)

■ EN 61010-1

Safety requirements for electrical equipment for measurement, control and laboratory use

■ IEC/EN 61326

Emission in accordance with Class A requirements. Electromagnetic compatibility (EMC requirements).

■ ANSI/ISA-61010-1 (82.02.01): 2004

Safety Requirements for Electrical Equipment for Measurement, Control and Laboratory Use - Part 1 General Requirements

• CAN/CSA-C22.2 No. 61010-1-04

Safety Requirements for Electrical Equipment for Measurement, Control and Laboratory Use - Part 1 General Requirements

■ NAMUR NE 21

Electromagnetic compatibility (EMC) of industrial process and laboratory control equipment

■ NAMUR NE 32

Data retention in the event of a power failure in field and control instruments with microprocessors

■ NAMUR NE 43

Standardization of the signal level for the breakdown information of digital transmitters with analog output signal.

■ NAMUR NE 53

Software of field devices and signal-processing devices with digital electronics

■ NAMUR NE 105

Specifications for integrating fieldbus devices in engineering tools for field devices

■ NAMUR NE 107

Self-monitoring and diagnosis of field devices

■ NAMUR NE 131

Requirements for field devices for standard applications

16.13 Application packages

Many different application packages are available to enhance the functionality of the device. Such packages might be needed to address safety aspects or specific application requirements.

The application packages can be ordered with the device or subsequently from Endress+Hauser. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: www.endress.com.

Diagnostics functions

Package	Description
HistoROM extended function	Comprises extended functions concerning the event log and the activation of the measured value memory.
	Event log: Memory volume is extended from 20 message entries (basic version) to up to 100 entries.
	 Data logging (line recorder): Memory capacity for up to 1000 measured values is activated. 250 measured values can be output via each of the 4 memory channels. The recording interval can be defined and configured by the user. Data logging is visualized via the local display or FieldCare.

Heartbeat Technology

Package	Description
Heartbeat Verification	 Heartbeat Verification: Makes it possible to check the device functionality on demand when the device is installed, without having to interrupt the process. Access via local operation or other operating interfaces, such as FieldCare for instance. Documentation of device functionality within the framework of manufacturer specifications, for proof testing for instance. End-to-end, traceable documentation of the verification results, including report. Makes it possible to extend calibration intervals in accordance with operator's risk assessment.

16.14 Accessories

16.15 Documentation

- For an overview of the scope of the associated Technical Documentation, refer to the following:
 - The CD-ROM provided for the device (depending on the device version, the CD-ROM might not be part of the delivery!)
 - The *W@M Device Viewer*: Enter the serial number from the nameplate (www.endress.com/deviceviewer)
 - The *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the 2-D matrix code (QR code) on the nameplate.

Standard documentation

Brief Operating Instructions

Measuring device	Documentation code
Promag H 200	KA01120D

Device Parameters

Measuring device	Documentation code		
	HART	FOUNDATION Fieldbus	PROFIBUS PA
Promag 200	GP01026D	GP01028D	GP01027D

Technical Information

Measuring device	Documentation code
Promag H 200	TI01061D

Supplementary devicedependent documentation

Safety Instructions

Contents	Documentation code
ATEX/IECEx Ex d[ia], Ex tb	XA01015D
ATEX/IECEx Ex ia, Ex tb	XA01016D
ATEX/IECEx Ex nA, Ex ic	XA01017D
cCSAus XP (Ex d)	XA01018D
cCSAus IS (Ex i)	XA01019D
NEPSI Ex d	XA01179D
NEPSI Ex i	XA01178D
NEPSI Ex nA, Ex ic	XA01180D
INMETRO Ex d	XA01309D
INMETRO Ex i	XA01310D
INMETRO Ex nA	XA01311D

Special Documentation

Contents	Documentation code
Heartbeat Technology	SD01452D

Installation Instructions

Contents	Documentation code
Installation Instructions for spare part sets	Overview of accessories available for order → 🗎 132

Index

A	Device components
Access authorization to parameters	Device description files
Read access	Device documentation
Write access	Supplementary documentation 8
Access code	Device locking, status
Incorrect input	Device master file
Adapters	GSD
Adapting the device status	Device name
Adapting the diagnostic behavior 107	Sensor
Adapting the measured value status 106	Transmitter
Ambient temperature	Device repair
Influence	Device revision
Ambient temperature range 21	Device type ID
Application	Diagnostic behavior
Applicator	Explanation
Approvals	Symbols
	Diagnostic information
C	Design, description
C-Tick symbol	FieldCare
Cable entries	Local display
Technical data	Overview
Cable entry	Remedy information
Degree of protection	Diagnostic list
CE mark	Diagnostic message
Certificates	Diagnostics
Certification PROFIBUS	Symbols
Checklist	DIP switches
Post-connection check 40	see Write protection switch
Post-installation check 27	Direct access
Cleaning	Direct access code
Exterior cleaning	Disabling write protection
Interior cleaning	Display
Commissioning	Current diagnostic event
Advanced settings	Previous diagnostic event 121
Configuring the measuring device 67	see Local display
Compatibility with earlier model 59	Display area
Conductivity	For operational display
Connecting cable	In the navigation view 46
Connecting the measuring device	Display values
Connection	For locking status
see Electrical connection	Disposal
Connection examples, potential equalization 35	Document
Connection preparations	Function
Connection tools	Symbols used
Context menu	Document function
Closing	Documentation
Explanation	Down pipe
Opening	E
Current consumption	
Cyclic data transmission 60	Electrical connection
n	Commubox FXA291
D Declaration of Conformity	Degree of protection
Declaration of Conformity	Measuring device
Define access code	Operating tools
Degree of protection	Via PROFIBUS PA network
Designated use	Via service interface (CDI) 56, 148

152

Electromagnetic compatibility	Information on the document 6
Enabling write protection	Inlet runs
Endress+Hauser services	Input
Maintenance	Input mask 47
Repair	Inspection
Environment	Installation
Ambient temperature	Received goods
Mechanical load	Inspection check
Shock resistance	Connection
Storage temperature	Installation
Vibration resistance	Installation conditions
Error messages	Adapters
see Diagnostic messages	Down pipe
Event history	Inlet and outlet runs 20
Events list	Mounting location
Ex approval	Orientation
Extended order code	Partially filled pipe
Sensor	System pressure
Transmitter	Vibrations
Exterior cleaning	Installation dimensions
	Interior cleaning
F	, and the second
Field of application	K
Residual risks	Keypad lock
FieldCare	Disabling
Device description file	Enabling
Establishing a connection 57	Ç
Function	L
User interface	Languages, operation options
Filtering the event logbook	Line recorder
Firmware	Local display
Release date	Editing view 47
Version	Navigation view 45
Firmware history	see Diagnostic message
Fitted electrodes	see In alarm condition
Flow direction	see Operational display
Flow limit	Low flow cut off
Function check	
Function scope	M
SIMATIC PDM	Main electronics module
Functions	Maintenance tasks
see Parameter	Replacing seals
See I didilictel	Managing the device configuration 89
G	Manufacturer ID
Galvanic isolation	Manufacturing date
Gaivanie isolation	Materials
H	Maximum measured error
Hardware write protection	Measured variables
Help text	Calculated
Calling up	Measured
Close	see Process variables
Explanation	Measuring and test equipment
HistoROM	Measuring device
	Configuration
I	Conversion
I/O electronics module	Disposal
Identifying the measuring device	Integrating via communication protocol 59
Incoming acceptance	Mounting the sensor
Influence	Cleaning with pigs
Ambient temperature	Cicaining with pigs
1	

Mounting grounding rings 25	Output signal
Mounting the seals 24	
Welding nipples 24	P
Preparing for electrical connection	Packaging disposal 18
Preparing for mounting 23	Parameter
Removing	Changing
Repair	Enter a value
Structure	Parameter settings
Switch-on	Administration (Submenu) 88, 124
Measuring principle	Analog inputs (Submenu) 71
Measuring range	Communication (Submenu) 70
Measuring system	Configuration backup display (Submenu) 89
Measuring tube specification	Data logging (Submenu) 98
Mechanical load	Device information (Submenu)
Media	Diagnostics (Menu)
Medium temperature range	Display (Submenu)
Menu	Display (Wizard)
Diagnostics	Empty pipe detection (Wizard)
Operation	Low flow cut off (Wizard)
Setup	Operation (Submenu)
Menus	Process variables (Submenu)
For measuring device configuration 67	Pulse/frequency/switch output (Wizard) 78, 80, 82
For specific settings	Sensor adjustment (Submenu)
Mounting dimensions	Setup (Menu)
see Installation dimensions	Simulation (Submenu)
Mounting location	System units (Submenu)
Mounting preparations	Totalizer 1 to 3 (Submenu)
Mounting requirements	Partially filled pipe
Installation dimensions	Performance characteristics
Mounting tools	Post-connection check (checklist)
N	Post-installation check
	Post-installation check (checklist)
Nameplate Sensor	Potential equalization
Transmitter	Power consumption
Navigation path (navigation view)	Pressure loss
Navigation view	Pressure tightness
In the submenu	Pressure-temperature ratings
In the wizard	Process conditions
Numeric editor	Conductivity
rumene cuitor	Flow limit
0	Medium temperature
Operable flow range	Pressure loss
Operating elements	Pressure tightness
Operating keys	Process connections
see Operating elements	Product safety
Operating menu	Protecting parameter settings
Menus, submenus 42	
Structure	R
Submenus and user roles 43	Read access
Operating options	Reading measured values
Operating philosophy 43	Recalibration
Operation	Reference operating conditions
Operational display	Registered trademarks
Operational safety	Remedial measures
Order code	Calling up
Orientation (vertical, horizontal) 20	Closing
Outlet runs	Remote operation
Output	

Repair	Operating menu 42
Notes	Submenu
Repair of a device	Administration
Repeatability	Advanced setup
Replacement	Analog inputs
Device components	Communication
Replacing seals	Configuration backup display
Requirements for personnel	Data logging
Return	Display
S	Events list
	Operation
Sanitary compatibility	Overview
Sensor	Process variables
Mounting	Sensor adjustment
Serial number	Simulation
Setting the operating language 66	System units 68
Settings	Totalizer 1 to 3
Adapting the measuring device to the process	Supply unit
conditions	Requirements
Administration	Supply voltage
Advanced display configurations 86	Surface roughness
Analog input	Symbols
Communication interface	For communication
Device reset	For correction
Device tag	For diagnostic behavior 44
Empty pipe detection (EPD)	For locking
Local display	For measured variable
Low flow cut off	For measurement channel number
Managing the device configuration	For menus
Operating language	For parameters
Pulse output	For status signal
Resetting the totalizer	For submenu
Sensor adjustment	For wizard
Simulation	In the status area of the local display
Switch output	System design
System units	Measuring system
Totalizer	see Measuring device design
Totalizer reset	System integration
Shock resistance	System pressure
Showing data logging	5)516 p. 2556 c 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
Signal on alarm	T
SIMATIC PDM	Technical data, overview
Function	Temperature range
Software release	Ambient temperature range for display 146
Spare part	Storage temperature
Spare parts	Terminal assignment
Special connection instructions	Terminals
Standards and guidelines	Text editor
Status area	Tool tip
For operational display	see Help text
In the navigation view	Tools
Status signals	Electrical connection
Storage conditions	For mounting
Storage temperature	Transport
Storage temperature range	Transmitter Connecting the signal cables
Structure 12	Connecting the signal cables
Measuring device	Turning the display module 27

Transporting the measuring device
Troubleshooting General
Turning the electronics housing see Turning the transmitter housing Turning the transmitter housing 26
U
Use of the measuring device Borderline cases
V
Version data for the device
W W@M 128, 129 W@M Device Viewer 13, 129 Weight Transport (notes) 17
Wizard Define access code 92 Display 7 Empty pipe detection 7 Low flow cut off 7 Pulse/frequency/switch output 78, 80, 82
Workplace safety
Write protection Via access code



