
Brief Operating Instructions Proline Prowirl R 200

Vortex flowmeter

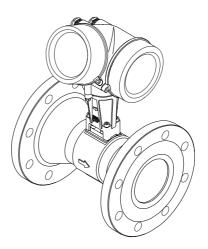

These Instructions are Brief Operating Instructions; they are not a substitute for the Operating Instructions pertaining to the device.

Detailed information about the device can be found in the Operating Instructions and the other documentation:

- On the CD-ROM supplied (not included in the delivery for all device versions).
- Available for all device versions via:
 - Internet: www.endress.com/deviceviewer
 - Smart phone/tablet: Endress+Hauser Operations App



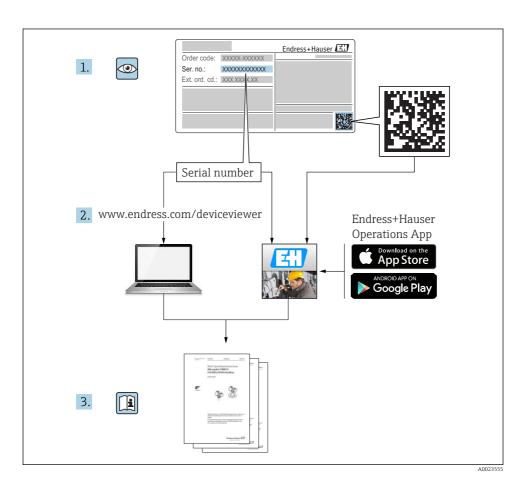


Table of contents

1.1	Symbols used	
2	Basic safety instructions	5
2.1	Requirements for the personnel	
2.2	Designated use	
2.3	Workplace safety	. 6
2.4	Operational safety	. 7
2.5	Product safety	
2.6	IT security	
3	Product description	. 7
4	Incoming acceptance and product identification	. 8
4.1	Incoming acceptance	
4.2	Product identification	. 9
5	Storage and transport	. 9
5.1	Storage conditions	. 9
5.2	Transporting the product	. 9
6	Installation	11
6.1	Installation conditions	
6.2	Mounting the measuring device	
6.3	Post-installation check	22
7	Electrical connection	24
7.1	Connection conditions	
7.2	Connecting the measuring device	
7.3	Hardware settings	
7.4 7.5	Ensuring the degree of protection	
7.5	Post-connection check	40
8	Operation options	41
8.1	Structure and function of the operating menu	
8.2	Access to the operating menu via the local display	
8.3	Access to the operating menu via the operating tool	46
9	System integration	50
10	Commissioning	50
10.1	Function check	
10.2	Switching on the measuring device	50
10.3		50
10.4		51
10.5 10.6	Defining the tag name Protecting settings from unauthorized access	52 52
11	Diagnostic information	- 2
11	Constant translation	24
11.1	General troubleshooting	54
12	Maintenance	
	Maintenance tasks	
	Measuring and test equipment	
12.3	Endress+Hauser services	56

Document information Proline Prowirl R 200

1 Document information

1.1 Symbols used

1.1.1 Safety symbols

Symbol	Meaning
⚠ DANGER	DANGER! This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury.
▲ WARNING	WARNING! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.
▲ CAUTION	CAUTION! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or medium injury.
NOTICE	NOTE! This symbol contains information on procedures and other facts which do not result in personal injury.

1.1.2 Electrical symbols

Symbol	Meaning	Symbol	Meaning
	Direct current	~	Alternating current
≂	Direct current and alternating current	÷	Ground connection A grounded terminal which, as far as the operator is concerned, is grounded via a grounding system.
	Protective ground connection A terminal which must be connected to ground prior to establishing any other connections.	\$	Equipotential connection A connection that has to be connected to the plant grounding system: This may be a potential equalization line or a star grounding system depending on national or company codes of practice.

1.1.3 Tool symbols

Symbol	Meaning	Symbol	Meaning
O	Torx screwdriver	0	Flat blade screwdriver
96	Phillips head screwdriver	06	Allen key
Ø.	Open-ended wrench		

Proline Prowirl R 200 Basic safety instructions

1.1.4 Symbols for certain types of information

Symbol	Meaning	Symbol	Meaning
✓	Permitted Procedures, processes or actions that are permitted.	✓ ✓	Preferred Procedures, processes or actions that are preferred.
×	Forbidden Procedures, processes or actions that are forbidden.	i	Tip Indicates additional information.
[i	Reference to documentation	A=	Reference to page
	Reference to graphic	1. , 2. , 3	Series of steps
L-	Result of a step	(Visual inspection

1.1.5 Symbols in graphics

Symbol	Meaning	Symbol	Meaning
1, 2, 3,	Item numbers	1. , 2. , 3	Series of steps
A, B, C,	Views	A-A, B-B, C-C,	Sections
EX	Hazardous area	×	Safe area (non-hazardous area)
≋➡	Flow direction		

2 Basic safety instructions

2.1 Requirements for the personnel

The personnel must fulfill the following requirements for its tasks:

- ► Trained, qualified specialists must have a relevant qualification for this specific function and task
- ► Are authorized by the plant owner/operator
- ► Are familiar with federal/national regulations
- ▶ Before beginning work, the specialist staff must have read and understood the instructions in the Operating Instructions and supplementary documentation as well as in the certificates (depending on the application)

▶ Following instructions and basic conditions

Basic safety instructions Proline Prowirl R 200

2.2 Designated use

Application and media

Depending on the version ordered, the measuring device can also measure potentially explosive, flammable, poisonous and oxidizing media.

Measuring devices for use in hazardous areas, in hygienic applications or in applications where there is an increased risk due to process pressure, are labeled accordingly on the nameplate.

To ensure that the measuring device remains in proper condition for the operation time:

- ► Only use the measuring device in full compliance with the data on the nameplate and the general conditions listed in the Operating Instructions and supplementary documentation.
- ► Check the nameplate to verify if the device ordered can be put to its intended use in the approval-related area (e.q. explosion protection, pressure vessel safety).
- ► Use the measuring device only for media against which the process-wetted materials are adequately resistant.
- ▶ If the measuring device is not operated at atmospheric temperature, compliance with the relevant basic conditions specified in the associated device documentation is absolutely essential.
- Protect the measuring device permanently against corrosion from environmental influences.

Incorrect use

Non-designated use can compromise safety. The manufacturer is not liable for damage caused by improper or non-designated use.

A WARNING

Danger of breakage of the sensor due to corrosive or abrasive fluids or from environmental conditions!

- ▶ Verify the compatibility of the process fluid with the sensor material.
- ► Ensure the resistance of all fluid-wetted materials in the process.
- ► Keep within the specified pressure and temperature range.

Verification for borderline cases:

► For special fluids and fluids for cleaning, Endress+Hauser is glad to provide assistance in verifying the corrosion resistance of fluid-wetted materials, but does not accept any warranty or liability as minute changes in the temperature, concentration or level of contamination in the process can alter the corrosion resistance properties.

Residual risks

Possible burn hazard due to fluid temperatures!

► For elevated fluid temperature, ensure protection against contact to prevent burns.

2.3 Workplace safety

For work on and with the device:

 Wear the required personal protective equipment according to federal/national regulations.

Proline Prowirl R 200 Product description

For welding work on the piping:

▶ Do not ground the welding unit via the measuring device.

If working on and with the device with wet hands:

▶ It is recommended to wear gloves on account of the higher risk of electric shock.

2.4 Operational safety

Risk of injury.

- ▶ Operate the device in proper technical condition and fail-safe condition only.
- ► The operator is responsible for interference-free operation of the device.

2.5 Product safety

This measuring device is designed in accordance with good engineering practice to meet state-of-the-art safety requirements, has been tested, and left the factory in a condition in which it is safe to operate.

It meets general safety standards and legal requirements. It also complies with the EC directives listed in the device-specific EC Declaration of Conformity. Endress+Hauser confirms this by affixing the CE mark to the device.

2.6 IT security

We only provide a warranty if the device is installed and used as described in the Operating Instructions. The device is equipped with security mechanisms to protect it against any inadvertent changes to the device settings.


IT security measures in line with operators' security standards and designed to provide additional protection for the device and device data transfer must be implemented by the operators themselves.

3 Product description

The device consists of a transmitter and a sensor.

Two device versions are available:

- Compact version transmitter and sensor form a mechanical unit.
- Remote version transmitter and sensor are mounted in separate locations.




Endress+Hauser

4 Incoming acceptance and product identification

4.1 Incoming acceptance

Operations App.

8

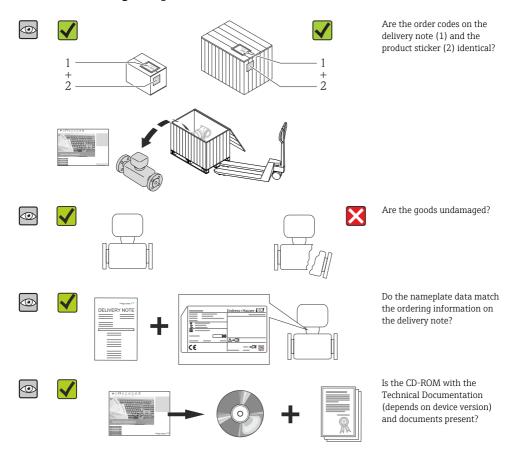


If one of the conditions is not satisfied, contact your Endress+Hauser Sales Center.
 Depending on the device version, the CD-ROM might not be part of the delivery! The Technical Documentation is available via the Internet or via the Endress+Hauser

Proline Prowirl R 200 Storage and transport

4.2 Product identification

The following options are available for identification of the measuring device:

- Nameplate specifications
- Order code with breakdown of the device features on the delivery note
- Enter serial numbers from nameplates in W@M Device Viewer
 (www.endress.com/deviceviewer): All information about the measuring device is displayed.
- Enter the serial number from the nameplates into the *Endress+Hauser Operations App* or scan the 2-D matrix code (QR code) on the nameplate with the *Endress+Hauser Operations App*: all the information for the measuring device is displayed.



A0021952

■ 1 Example of a nameplate

- 1 Order code
- 2 Serial number (Ser. no.)
- 3 Extended order code (Ext. ord. cd.)
- 4 2-D matrix code (OR code)



For detailed information on the breakdown of the specifications on the nameplate, see the Operating Instructions for the device .

5 Storage and transport

5.1 Storage conditions

Observe the following notes for storage:

- Store in original packaging.
- Do not remove protective covers or protective caps installed on process connections.
- Protect from direct sunlight.
- Store in a dry and dust-free place.
- Do not store outdoors.


Storage temperature:

- All components apart from the display modules: -50 to +80 °C (-58 to +176 °F)
- Display modules: $-40 \text{ to } +80 \,^{\circ}\text{C} \ (-40 \text{ to } +176 \,^{\circ}\text{F})$

5.2 Transporting the product

Transport the measuring device to the measuring point in the original packaging.

Storage and transport Proline Prowirl R 200

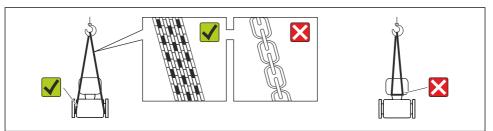

A0015604

Do not remove protective covers or caps installed on process connections. They prevent mechanical damage to the sealing surfaces and contamination in the measuring tube.


5.2.1 Measuring devices without lifting lugs

WARNING

Center of gravity of the measuring device is higher than the suspension points of the webbing slings.

Risk of injury if the measuring device slips.

- ► Secure the measuring device against slipping or turning.
- ▶ Observe the weight specified on the packaging (stick-on label).

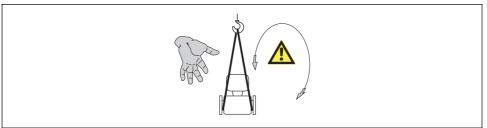

A0015606

5.2.2 Measuring devices with lifting lugs

A CAUTION

Special transportation instructions for devices with lifting lugs

- ▶ Only use the lifting lugs fitted on the device or flanges to transport the device.
- ► The device must always be secured at two lifting lugs at least.

5.2.3 Transporting with a fork lift

If transporting in wood crates, the floor structure enables the crates to be lifted lengthwise or at both sides using a forklift.


Proline Prowirl R 200 Installation

6 Installation

6.1 Installation conditions

6.1.1 Mounting position

Mounting location

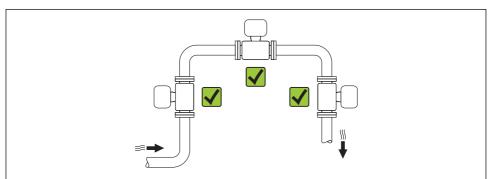

A0015543

Orientation

The direction of the arrow on the sensor nameplate helps you to install the sensor according to the flow direction.

Vortex meters require a fully developed flow profile as a prerequisite for correct volume flow measurement. Therefore, please note the following:


	Orientation	Compact version	Remote version	
A	Vertical orientation	A0015545	VV ¹⁾	VV
В	Horizontal orientation, transmitter head up	A0015589	VV ^{2) 3)}	VV

Installation Proline Prowirl R 200

	Orientation	Compact version	Remote version	
С	Horizontal orientation, transmitter head down	A0015590	νν ^{4) 5)}	<i>VV</i>
D	Horizontal orientation, transmitter head at side	A0015592	VV 4)	VV

- In the case of liquids, there should be upward flow in vertical pipes to avoid partial pipe filling (Fig. A). Disruption
 in flow measurement! In the case of vertical orientation and downward flowing liquid, the pipe always needs to
 be completely filled to ensure correct liquid flow measurement.
- 2) Danger of electronics overheating! If the fluid temperature is ≥ 200 °C (392 °F) orientation B is not permitted for the wafer version (Prowirl D) with nominal diameters DN 100 (4") and DN 150 (6").
- 3) In the case of hot media (e.g. steam or fluid temperature (TM) ≥ 200 °C (392 °F): orientation C or D
- 4) In the case of very cold media (e.g. liquid nitrogen): orientation B or D
- 5) For "wet steam detection/measurement" option: orientation C

Minimum spacing and cable length

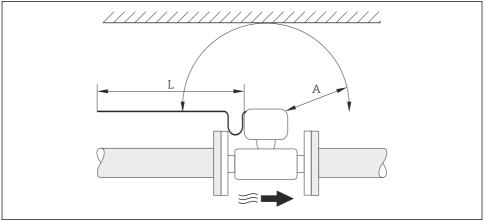

A0019211

- A Minimum spacing in all directions
- L Required cable length

The following dimensions must be observed to guarantee problem-free access to the device for service purposes:

- \bullet A = 100 mm (3.94 in)
- L = L + 150 mm (5.91 in)

Rotating the electronics housing and the display


The electronics housing can be rotated continuously by 360 $^{\circ}$ on the housing support. The display unit can be rotated in 45 $^{\circ}$ stages. This means you can read the display comfortably from all directions.

Proline Prowirl R 200 Installation

Inlet and outlet runs

To attain the specified level of accuracy of the measuring device, the inlet and outlet runs mentioned below must be maintained at the very minimum.

Installation Proline Prowirl R 200

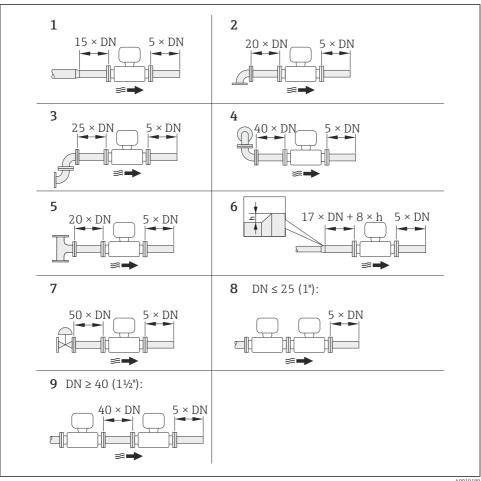

A0019189

₽ 2 Minimum inlet and outlet runs with various flow obstructions


- Difference in expansion h
- Reduction by one nominal diameter size 1
- 2 Single elbow (90° elbow)
- Double elbow $(2 \times 90^{\circ} \text{ elbows, opposite})$ 3
- 4 Double elbow 3D ($2 \times 90^{\circ}$ elbows, opposite, not on one plane)
- 5 T-piece
- Expansion


Proline Prowirl R 200 Installation

- 7 Control valve
- 8 Two measuring devices in a row where DN \leq 25 (1"): directly flange on flange
- *Two measuring devices in a row where DN* \geq 40 (1½"): for spacing, see graphic




- If there are several flow disturbances present, the longest specified inlet run must be maintained.





Flow conditioner

If the required inlet runs cannot be observed, it is possible to install a specially designed flow conditioner which can be ordered from Endress+Hauser. The flow conditioner is fitted between two pipe flanges and centered by the mounting bolts. Generally this reduces the inlet run needed to $10 \times DN$ with full accuracy.

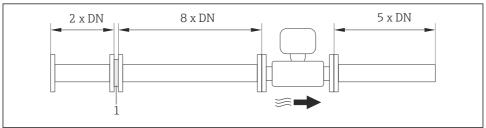

A0019208

1 Flow conditioner

The pressure loss for flow conditioners is calculated as follows: $\Delta p \text{ [mbar]} = 0.0085 \cdot \rho \text{ [kg/m}^3] \cdot v^2 \text{ [m/s]}$

Example for Steam Example for H $_2$ O condensate (80 °C) $p = 10 \text{ bar abs.} \qquad \qquad \rho = 965 \text{ kg/m}^3$ $t = 240 \text{ °C} \rightarrow \rho = 4.39 \text{ kg/m}^3 \qquad \qquad v = 2.5 \text{ m/s}$ $v = 40 \text{ m/s} \qquad \qquad \Delta p = 0.0085 \cdot 4.394.39 \cdot 40^2 = 59.7 \text{ mbar}$

 $\boldsymbol{\rho}$: density of the process medium

v: average flow velocity

Installation Proline Prowirl R 200


abs. = absolute



For the dimensions of the flow conditioner, see the "Technical Information" document, "Mechanical construction" section

Outlet runs when installing external devices

If installing an external device, observe the specified distance.

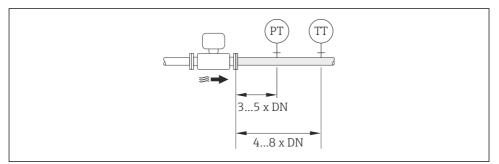

A0019205

- PT Pressure transmitter
- TT Temperature transmitter

6.1.2 Requirements from environment and process

Ambient temperature range

Compact version

Measuring device	Non-Ex:	-40 to +80 °C (-40 to +176 °F) ¹⁾
	Ex i:	-40 to +70 °C (-40 to +158 °F) ¹⁾
	EEx d/XP version:	-40 to +60 °C (-40 to +140 °F) ¹⁾
	ATEX II1/2G Ex d, Ex ia:	-40 to +60 °C (-40 to +140 °F) ¹⁾
Local display		-20 to +70 °C (-4 to +158 °F) ¹⁾

¹⁾ Additionally available as order code for "Test, certificate", option JN "Transmitter ambient temperature -50 °C (-58 °F)".

Remote version

Transmitter	Non-Ex:	-40 to +80 °C (-40 to +176 °F) ¹⁾
	Ex i:	-40 to +80 °C (-40 to +176 °F) 1)
	Ex d:	-40 to +60 °C (-40 to +140 °F) ¹⁾
	ATEX II1/2G Ex d, Ex ia:	-40 to +60 °C (-40 to +140 °F) ¹⁾
Sensor	Non-Ex:	-40 to +85 °C (-40 to +185 °F) 1)

Proline Prowirl R 200 Installation

	Ex i:	-40 to +85 °C (-40 to +185 °F) 1)
	Ex d:	-40 to +85 °C (-40 to +185 °F) ¹⁾
	ATEX II1/2G Ex d, Ex ia:	-40 to +85 °C (-40 to +185 °F) 1)
Local display		-20 to +70 °C (-4 to +158 °F) ¹⁾

- 1) Additionally available as order code for "Test, certificate", option JN "Transmitter ambient temperature -50 °C (-58 °F)".
- ► If operating outdoors:

Avoid direct sunlight, particularly in warm climatic regions.


Thermal insulation

For optimum temperature measurement and mass calculation, heat transfer at the sensor must be avoided for some fluids. This can be ensured by installing thermal insulation. A wide range of materials can be used for the required insulation.

This applies for:

- Compact version
- Remote sensor version

The maximum insulation height permitted is illustrated in the diagram:

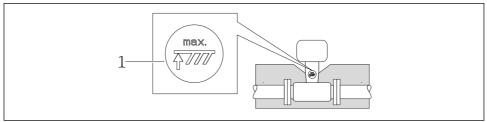

A0019212

- 1 Maximum insulation height
- When insulating, ensure that a sufficiently large area of the housing support remains exposed.

The uncovered part serves as a radiator and protects the electronics from overheating and excessive cooling.

Installation Proline Prowirl R 200

NOTICE

Electronics overheating on account of thermal insulation!

▶ Observe the maximum permitted insulation height of the transmitter neck so that the transmitter head and/or the connection housing of the remote version is completely free.

- ▶ Observe information on the permissible temperature ranges .
- ▶ Note that a certain orientation might be required, depending on the fluid temperature → 🖺 11.



For detailed information about the fluid temperature, orientations and permitted temperature ranges, refer to the Operating Instructions for the device

Vibrations

The correct operation of the measuring system is not affected by plant vibrations up to 1 q, 10 to 500 Hz. Therefore no special measures are needed to secure the sensors.

6.1.3 Special mounting instructions


Installation for delta heat measurements

Order code for "Sensor version", option 3 "Mass flow (integrated temperature measurement)"

The second temperature measurement is taken using a separate temperature sensor. The measuring device reads in this value via a communication interface.

- In the case of saturated steam delta heat measurements, the Prowirl 200 must be installed on the steam side.
- In the case of water delta heat measurements, the Prowirl 200 can be installed on the cold or warm side.

Proline Prowirl R 200 Installation

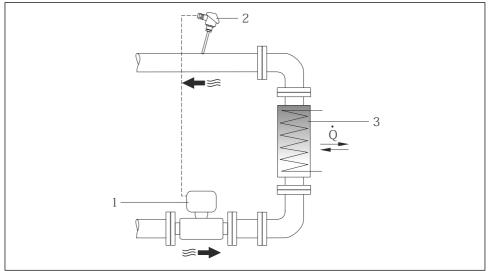

A0019209

- 3 Layout for delta heat measurement of saturated steam and water
- 1 Prowirl
- 2 Temperature sensor
- 3 Heat exchanger
- O Heat flow

Weather protection cover

Observe the following minimum head clearance: 222 mm (8.74 in)

6.2 Mounting the measuring device

6.2.1 Required tools

For transmitter

- For turning the transmitter housing: Open-ended wrench8 mm
- For opening the securing clamps: Allen key3 mm

For sensor

For flanges and other process connections: Corresponding mounting tools

6.2.2 Preparing the measuring device

- 1. Remove all remaining transport packaging.
- 2. Remove any protective covers or protective caps present from the sensor.
- 3. Remove stick-on label on the electronics compartment cover.


Installation Proline Prowirl R 200

6.2.3 Mounting the sensor

A WARNING

Danger due to improper process sealing!

- ► Ensure that the inside diameters of the gaskets are greater than or equal to that of the process connections and piping.
- ► Ensure that the gaskets are clean and undamaged.
- ► Install the gaskets correctly.
- 1. Ensure that the direction of the arrow on the sensor matches the flow direction of the medium.
- 2. To ensure compliance with device specifications, install the measuring device between the pipe flanges in a way that it is centered in the measurement section.
- 3. Install the measuring device or turn the transmitter housing so that the cable entries do not point upwards.



A0013964

6.2.4 Mounting the transmitter of the remote version

A CAUTION

Ambient temperature too high!

Danger of electronics overheating and housing deformation.

- ▶ Do not exceed the permitted maximum ambient temperature .
- ► If operating outdoors: Avoid direct sunlight and exposure to weathering, particularly in warm climatic regions.


A CAUTION

Excessive force can damage the housing!

► Avoid excessive mechanical stress.


Proline Prowirl R 200 Installation

Wall mounting

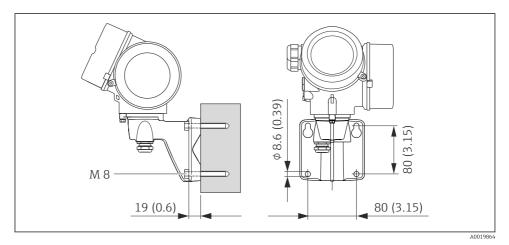

■ 4 Engineering unit mm (in)

Post mounting

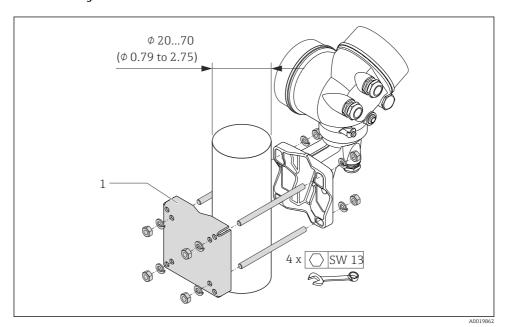


■ 5 Engineering unit mm (in)

1 Post retainer kit for post mounting

Installation Proline Prowirl R 200


6.2.5 Turning the transmitter housing

To provide easier access to the connection compartment or display module, the transmitter housing can be turned.

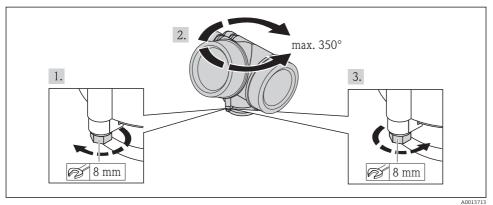

6.2.6 Turning the display module

The display module can be turned to optimize display readability and operability.

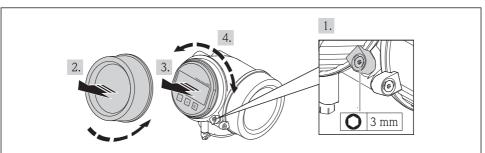

A0013905

6.3 Post-installation check

Is the device undamaged (visual inspection)?	
Does the measuring device conform to the measuring point specifications?	
For example: Process temperature Process pressure (refer to the section on "Pressure-temperature ratings" in the "Technical Information" document) Ambient temperature	
Measuring range	

Proline Prowirl R 200 Installation

Has the correct orientation for the sensor been selected $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $			
According to sensor type			
According to medium temperature			
According to medium properties (outgassing, with entrained solids)			
Does the arrow on the sensor nameplate match the direction of flow of the fluid through the piping \rightarrow \bigcirc 11?			
Are the measuring point identification and labeling correct (visual inspection)?			
Is the device adequately protected from precipitation and direct sunlight?			
Are the securing screw and securing clamp tightened securely?			

Electrical connection Proline Prowirl R 200

7 Electrical connection



The measuring device does not have an internal circuit breaker. For this reason, assign the measuring device a switch or power-circuit breaker so that the power supply line can be easily disconnected from the mains.

7.1 Connection conditions

7.1.1 Required tools

- For cable entries: Use corresponding tools
- For securing clamp: Allen key 3 mm
- Wire stripper
- When using stranded cables: crimping tool for ferrule
- For removing cables from terminal: flat blade screwdriver ≤3 mm (0.12 in)

7.1.2 Connecting cable requirements

The connecting cables provided by the customer must fulfill the following requirements.

Electrical safety

In accordance with applicable federal/national regulations.

Permitted temperature range

- -40 °C (-40 °F) to +80 °C (+176 °F)
- Minimum requirement: cable temperature range ≥ ambient temperature +20 K

Signal cable

Current output

- For 4-20 mA: standard installation cable is sufficient.
- For 4-20 mA HART: Shielded cable recommended. Observe grounding concept of the plant.

Pulse/frequency/switch output

Standard installation cable is sufficient.

Current input

Standard installation cable is sufficient.

FOUNDATION Fieldhus

Twisted, shielded two-wire cable.



For further information on planning and installing FOUNDATION Fieldbus networks see:

- Operating Instructions for "FOUNDATION Fieldbus Overview" (BA00013S)
- FOUNDATION Fieldbus Guideline
- IEC 61158-2 (MBP)

Proline Prowirl R 200 Electrical connection

PROFIBUS PA

Twisted, shielded two-wire cable. Cable type A is recommended.



For further information on planning and installing PROFIBUS PA networks see:

- Operating Instructions "PROFIBUS DP/PA: Guidelines for planning and commissioning" (BA00034S)
- PNO Directive 2.092 "PROFIBUS PA User and Installation Guideline"
- IEC 61158-2 (MBP)

Connecting cable for remote version

Connecting cable (standard)

Standard cable	$2 \times 2 \times 0.34 \text{ mm}^2$ (22 AWG) PVC cable with common shield (2 pairs, pair-stranded)			
Flame resistance	According to DIN EN 60332-1-2			
Oil-resistance	According to DIN EN 60811-2-1			
Shielding	Galvanized copper-braid, opt. density approx. 85%			
Cable length	5 m (16 ft), 10 m (32 ft), 20 m (65 ft), 30 m (98 ft)			
Operating temperature	When mounted in a fixed position: -50 to $+105$ °C (-58 to $+221$ °F); when cable can move freely: -25 to $+105$ °C (-13 to $+221$ °F)			

Connecting cable (reinforced)

Cable, reinforced	$2\times2\times0.34~mm^2$ (22 AWG) PVC cable with common shield (2 pairs, pair-strand and additional steel-wire braided sheath			
Flame resistance	According to DIN EN 60332-1-2			
Oil-resistance	According to DIN EN 60811-2-1			
Shielding	Galvanized copper-braid, opt. density approx. 85%			
Strain relief and reinforcement	Steel-wire braid, galvanized			
Cable length	5 m (16 ft), 10 m (32 ft), 20 m (65 ft), 30 m (98 ft)			
Operating temperature	When mounted in a fixed position: -50 to $+105$ °C (-58 to $+221$ °F); when cable can move freely: -25 to $+105$ °C (-13 to $+221$ °F)			

Cable diameter


- Cable glands supplied:
 M20 × 1.5 with cable Φ 6 to 12 mm (0.24 to 0.47 in)
- Plug-in spring terminals for device version without integrated overvoltage protection: wire cross-sections 0.5 to 2.5 mm² (20 to 14 AWG)
- Screw terminals for device version with integrated overvoltage protection: wire crosssections 0.2 to 2.5 mm² (24 to 14 AWG)

Electrical connection Proline Prowirl R 200

7.1.3 Terminal assignment

Transmitter

Connection versions

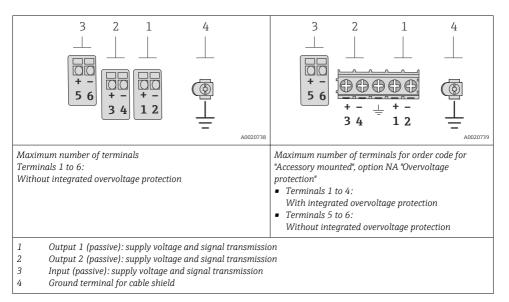

Order code for "Output"	Terminal numbers					
	Output 1		Output 2		Input	
	1 (+) 2 (-)		3 (+)	4 (-)	5 (+)	6 (-)
Option A	4-20 mA HART (passive)		-		-	
Option B 1)	4-20 mA HART (passive)		Pulse/frequency/switch output (passive)		-	
Option C 1)	4-20 mA HART (passive)		4-20 mA analog (passive)		-	
Option D ^{1) 2)}	4-20 mA HART (passive)		Pulse/frequency/switch output (passive)		4-20 mA current input (passive)	
Option E ^{1) 3)}	FOUNDATION Fieldbus		Pulse/frequency/switch output (passive)		-	
Option G ^{1) 4)}	PROFIBUS PA		Pulse/frequency/switch output (passive)		-	

- 1) Output 1 must always be used; output 2 is optional.
- The integrated overvoltage protection is not used with option D: Terminals 5 and 6 (current input) are not protected against overvoltage.
- 3) FOUNDATION Fieldbus with integrated reverse polarity protection.

4) PROFIBUS PA with integrated reverse polarity protection.

Proline Prowirl R 200 Electrical connection

Remote version

In the case of the remote version, the sensor and transmitter are mounted separately from one another and connected by a connecting cable. The sensor is connected via the connection housing while the transmitter is connected via the connection compartment of the wall holder unit.



The way the transmitter wall holder is connected depends on the measuring device approval and the version of the connecting cable used.


Connection is only possible via terminals:

- For approvals Ex n, Ex tb and cCSAus Div. 1
- If a reinforced connecting cable is used

The connection is via an M12 connector:

- For all other approvals
- If the standard connecting cable is used

Connection to the connection housing of the sensor is always via the terminals (tightening torque for terminals: 1.2 to 1.7 Nm).

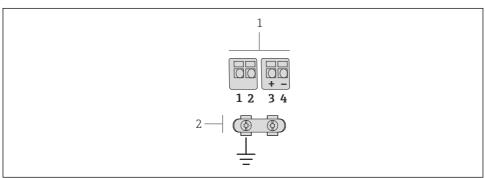

A0019335

- Terminals for connection compartment in the transmitter wall holder and the sensor connection housing
- 1 Terminals for connecting cable
- 2 Grounding via the cable strain relief

Terminal number	Assignment	Cable color Connecting cable
1	Supply voltage	Brown
2	Grounding	White
3	RS485 (+)	Yellow
4	RS485 (-)	Green

Electrical connection Proline Prowirl R 200

7.1.4 Pin assignment, device plug

PROFIBUS PA

Device plug for signal transmission (device side)

	Pin	Assignment		Coding	Plug/socket
$2 \longrightarrow 3$	1	+	PROFIBUS PA +	А	Plug
	2		Grounding		
1 4	3	-	PROFIBUS PA -		
	4		Not assigned		
A0019021					

FOUNDATION Fieldbus

Device plug for signal transmission (device side)

	Pin	Assignment		Coding	Plug/socket
$2 \longrightarrow 3$	1	+	Signal +	A	Plug
	2	-	Signal –		
1 4	3		Not assigned		
	4		Grounding		
A0019021					

7.1.5 Shielding and grounding

PROFIBUS PA and FOUNDATION Fieldbus

Optimum electromagnetic compatibility (EMC) of the fieldbus system can only be guaranteed if the system components and, in particular, the lines are shielded and the shield forms as complete a cover as possible. A shield coverage of 90% is ideal.

- To ensure an optimum EMC protective effect, connect the shield as often as possible to the reference ground.
- For reasons of explosion protection, you should refrain from grounding however.

To comply with both requirements, the fieldbus system allows three different types of shielding:

- Shielding at both ends.
- Shielding at one end on the feed side with capacitance termination at the field device.
- Shielding at one end on the feed side.

Experience shows that the best results with regard to EMC are achieved in most cases in installations with one-sided shielding on the feed side (without capacitance termination at the field device). Appropriate measures with regard to input wiring must be taken to allow unrestricted operation when EMC interference is present. These measures have been taken into account for this device. Operation in the event of disturbance variables as per NAMUR NE21 is thus quaranteed.

Where applicable, national installation regulations and guidelines must be observed during the installation!

Where there are large differences in potential between the individual grounding points, only one point of the shielding is connected directly with the reference ground. In systems without

Proline Prowirl R 200 Electrical connection


potential equalization, therefore, cable shielding of fieldbus systems should only be grounded on one side, for example at the fieldbus supply unit or at safety barriers.

NOTICE

In systems without potential matching, the multiple grounding of the cable shield causes mains frequency equalizing currents!

Damage to the bus cable shield.

► Only ground the bus cable shield to either the local ground or the protective ground at one end. Insulate the shield that is not connected.

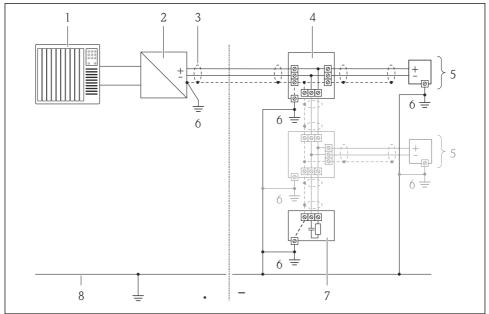

A001900

- 1 Controller (e.g. PLC)
- 2 Segment coupler PROFIBUS DP/PA or Power Conditioner (FOUNDATION Fieldbus)
- 3 Cable shield
- 4 T-box
- 5 Measuring device
- 6 Local grounding
- 7 Bus terminator
- 8 Potential matching line

Electrical connection Proline Prowirl R 200

7.1.6 Requirements for the supply unit

Supply voltage

Transmitter

Increase in minimum terminal voltage

Local operation	Increase in minimum terminal voltage
Order code for "Display; Operation", option C: Local operation SD02	+ DC 1 V
Order code for "Display; Operation", option E: Local operation SD03 with lighting (backlighting not used)	+ DC 1 V
Order code for "Display; Operation", option E : Local operation SD03 with lighting (backlighting used)	+ DC 3 V

Load

Load for current output: 0 to 500 Ω , depending on the external supply voltage of the power supply unit


Calculation of the maximum load

Depending on the supply voltage of the power supply unit (U_s) , the maximum load (R_B) including line resistance must be observed to ensure adequate terminal voltage at the device. In doing so, observe the minimum terminal voltage

■ $R_B \le (U_S - U_{term, min}): 0.022 A$

■ $R_B \le 500 \Omega$

Proline Prowirl R 200 Electrical connection

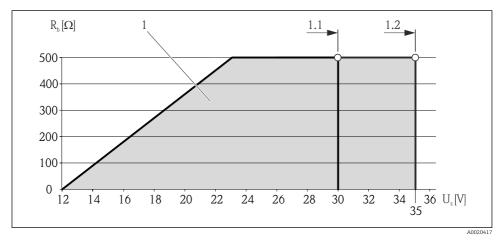

■ 7 Load for a compact version without local operation

1 Operating range

- 1.1 For order code for "Output", option A "4-20 mA HART"/option B "4-20 mA HART, pulse/frequency/switch output" with Ex i and option C "4-20 mA HART + 4-20 mA analog"
- 1.2 For order code for "Output", option A "4-20 mA HART"/option B "4-20 mA HART, pulse/frequency/ switch output" with non-Ex and Ex d

Sample calculation

Supply voltage of the supply unit:

- $U_S = 19 V$
- $U_{\text{term. min}}$ = 12 V (measuring device) + 1 V (local operation without lighting) = 13 V

Maximum load: $R_B \le$ (19 V - 13 V): 0.022 A = 273 Ω

The minimum terminal voltage ($U_{term. min}$) increases if local operation is used (Verweisziel existiert nicht, aber @y.link.required='true').

7.1.7 Preparing the measuring device

- 1. Remove dummy plug if present.
- 2. NOTICE

Insufficient sealing of the housing!

Operational reliability of the measuring device could be compromised.

▶ Use suitable cable glands corresponding to the degree of protection.

If measuring device is delivered without cable glands:

Provide suitable cable gland for corresponding connecting cable .

3. If measuring device is delivered with cable glands: Observe cable specification .

Electrical connection Proline Prowirl R 200

7.2 Connecting the measuring device

NOTICE

Limitation of electrical safety due to incorrect connection!

► For use in potentially explosive atmospheres, observe the information in the device-specific Ex documentation.

7.2.1 Connecting the remote version

A WARNING

Risk of damaging the electronic components!

- ► Ground the remote version and in doing so connect the sensor and transmitter to the same potential equalization.
- ▶ Only connect the sensor to a transmitter with the same serial number.

The following procedure (in the action sequence given) is recommended for the remote version:

- 1. Mount the transmitter and sensor.
- 2. Connect the connecting cable.
- 3. Connect the transmitter.
- The way the transmitter wall holder is connected depends on the measuring device approval and the version of the connecting cable used.

Connection is only possible via terminals:

- For approvals Ex n, Ex tb and cCSAus Div. 1
- If a reinforced connecting cable is used


The connection is via an M12 connector:

- For all other approvals
- If the standard connecting cable is used

Connection to the connection housing of the sensor is always via the terminals (tightening torque for terminals: 1.2 to 1.7 Nm).

Proline Prowirl R 200 Electrical connection

Connecting the sensor connection housing

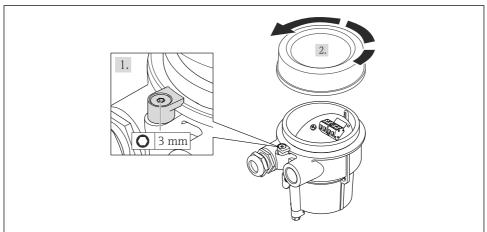

A0020410



A0020411

1. NOTICE

Terminals tightened with an incorrect tightening torque.

Incorrect connection or damaged terminal.

 $\blacktriangleright\,$ Tighten the terminals with a tightening torque in the 1.2 to 1.7 Nm range.

Wire the connecting cable:

► Terminal 1 = brown cable

Terminal 2 =white cable

Terminal 3 = yellow cable


Terminal 4 = green cable

2. Connect the cable shield via the cable strain relief.

Electrical connection Proline Prowirl R 200


Connection to the wall holder of the transmitter

Connecting the transmitter via plug

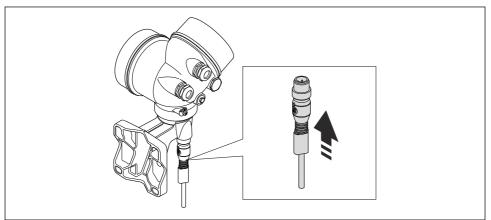


A0020412

Connecting the transmitter via terminals

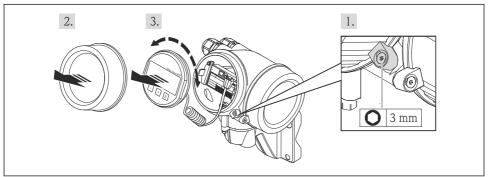


A0020404

Proline Prowirl R 200 Electrical connection

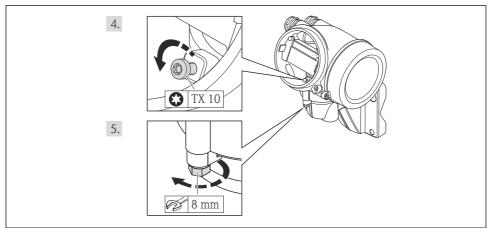


A0020405

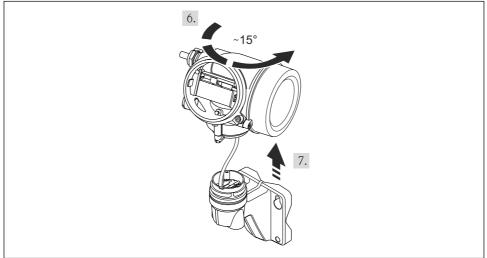


A0020406

Electrical connection Proline Prowirl R 200

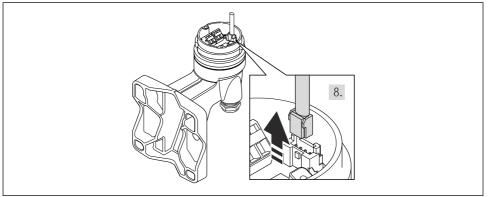

A0020407

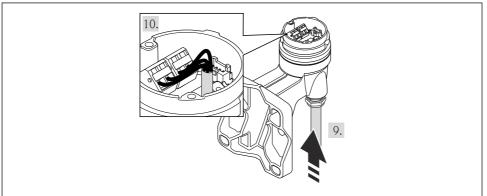

A0020409

1. Wire the connecting cable:

► Terminal 1 = brown cable

Terminal 2 = white cable Terminal 3 = yellow cable

Terminal 4 = green cable

2. Connect the cable shield via the cable strain relief.


7.2.2 Connecting the transmitter

The connection of the transmitter depends on the following order codes:

Connection version: terminals or device plug

Proline Prowirl R 200 Electrical connection


Connection via terminals

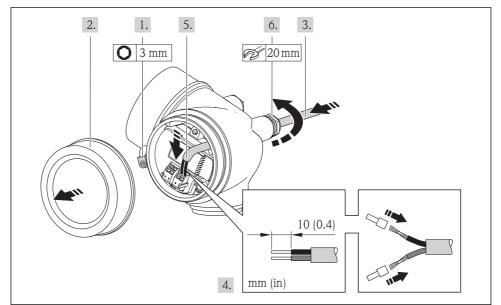

A0013836

► Connect the cable in accordance with the terminal assignment . For HART communication: when connecting the cable shielding to the ground terminal, observe the grounding concept of the facility.

Connection via device plug

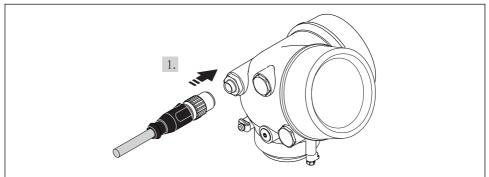

A0019147

▶ Plug in the device plug and tighten firmly.

Electrical connection Proline Prowirl R 200

7.2.3 Ensuring potential equalization

Requirements

Please consider the following to ensure correct measurement:

- Same electrical potential for the fluid and sensor
- Remote version: same electrical potential for the sensor and transmitter
- Company-internal grounding concepts
- Pipe material and grounding




For devices intended for use in hazardous locations, please observe the guidelines in the Ex documentation (XA).

7.3 Hardware settings

7.3.1 Setting the device address

PROFIBUS PA

The address must always be configured for a PROFIBUS DP/PA device. The valid address range is between 1 and 126. In a PROFIBUS DP/PA network, each address can only be assigned once. If an address is not configured correctly, the device is not recognized by the master. All measuring devices are delivered from the factory with the device address 126 and with the software addressing method.

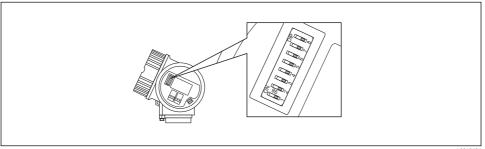

A0015686

■ 8 Address switch in the connection compartment

Hardware addressing


1. Set switch 8 to the "OFF" position.

2. Using switches 1 to 7, set the address as indicated in the table below.

The change of address takes effect after $10\ \text{seconds}$. The device is restarted.

Switch	1	2	3	4	5	6	7
Value in "ON" position	1	2	4	8	16	32	64
Value in "OFF" position	0	0	0	0	0	0	0

Proline Prowirl R 200 Electrical connection



Δ0015902

₩ 9 Example of hardware addressing; switch 8 is set to the "OFF" position; switches 1 to 7 define the address

Software addressing

- 1. Set switch 8 to "ON".
 - The device restarts automatically and reports the current address (factory setting: 126).
- Configure the address via the operating menu: **Setup** menu→**Communication** $submenu \rightarrow Device address parameter$



A0015903

■ 10 Example of software addressing; switch 8 is set to the "ON" position; the address is defined in the operating menu ("Setup" menu→"Communication" submenu→"Device address" parameter).

Ensuring the degree of protection 7.4


The measuring device fulfills all the requirements for the IP66/67 degree of protection, Type 4X enclosure.

To quarantee IP66/67 degree of protection, Type 4X enclosure, carry out the following steps after the electrical connection:

- 1. Check that the housing seals are clean and fitted correctly. Dry, clean or replace the seals if necessary.
- 2. Tighten all housing screws and screw covers.
- Firmly tighten the cable glands.

Electrical connection Proline Prowirl R 200

4. To ensure that moisture does not enter the cable entry, route the cable so that it loops down before the cable entry ("water trap").

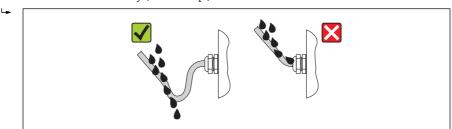

A0013960

5. Insert dummy plugs into unused cable entries.


7.5 Post-connection check

Are cables or the device undamaged (visual inspection)?	
Do the cables comply with the requirements ?	
Do the cables have adequate strain relief?	
Are all the cable glands installed, firmly tightened and leak-tight? Cable run with "water trap" → 🖺 39?	
Depending on the device version: are all the device plugs firmly tightened ?	
Does the supply voltage match the specifications on the transmitter nameplate?	
Is the terminal assignment correct ?	
Is the terminal assignment or the pin assignment of the device plug correct?	
If supply voltage is present, do values appear on the display module?	
Are all housing covers installed and firmly tightened?	
Is the securing clamp tightened correctly?	

8 Operation options

8.1 Structure and function of the operating menu

8.1.1 Structure of the operating menu

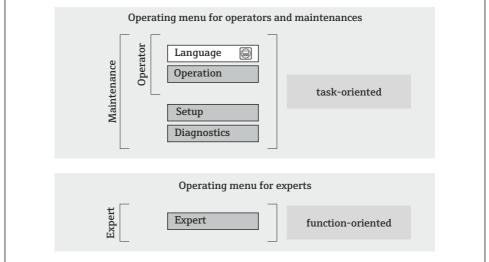

A0014058-EN

■ 11 Schematic structure of the operating menu


8.1.2 Operating philosophy

The individual parts of the operating menu are assigned to certain user roles (operator, maintenance etc.). Each user role contains typical tasks within the device lifecycle.



Operation options Proline Prowirl R 200

8.2 Access to the operating menu via the local display

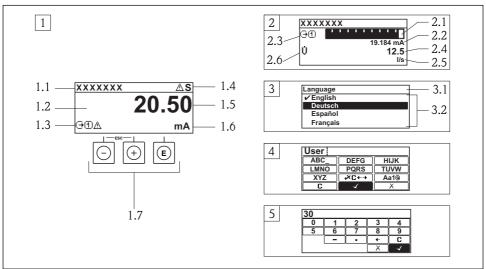

A001401

- 1 Operational display with measured value shown as "1 value, max." (example)
- 1.1 Device tag
- 1.2 Display area for measured values (4-line)
- 1.3 Explanatory symbols for measured value: Measured value type, measuring channel number, symbol for diagnostic behavior
- 1.4 Status area
- 1.5 Measured value
- 1.6 Unit for the measured value
- 1.7 Operating elements
- 2 Operational display with measured value shown as "1 bar graph + 1 value" (example)
- 2.1 Bar graph display for measured value 1
- 2.2 Measured value 1 with unit
- 2.3 Explanatory symbols for measured value 1: measured value type, measuring channel number
- 2.4 Measured value 2
- 2.5 Unit for measured value 2
- 2.6 Explanatory symbols for measured value 2: measured value type, measuring channel number
- 3 Navigation view: picklist of a parameter
- 3.1 Navigation path and status area
- 3.2 Display area for navigation: ✔ designates the current parameter value
- 4 Editing view: text editor with input mask
- 5 Editing view: numeric editor with input mask

8.2.1 Operational display

Status area

The following symbols appear in the status area of the operational display at the top right:

- Status signals
 - F: Failure
 - C: Function check
 - **S**: Out of specification
 - **M**: Maintenance required
- Diagnostic behavior
 - 🐼: Alarm
 - <u>M</u>: Warning
- fi: Locking (the device is locked via the hardware)
- ←: Communication (communication via remote operation is active)

Display area

- Measured variables (depending on the device version), e.g.:
 - **Ü**: Volume flow
 - in: Mass flow
 - Density
 - G: Conductivity
 - **▮**: Temperature
- ∑: Totalizer (the measurement channel number indicates which totalizer is displayed)
- 🕒: Output (the measurement channel number indicates which output is displayed)
- **■ →**: Input
- 1 ... (4): Measurement channel number (if more than one channel is present for the same measured variable type)
- Diagnostic behavior (for a diagnostic event that concerns the displayed measured variable)
 - 🔉: Alarm
 - <u>M</u>: Warning

8.2.2 Navigation view

Status area

The following appears in the status area of the navigation view in the top right corner:

- Of the submenu
 - The direct access code for the parameter you are navigating to (e.g. 0022-1)
 - If a diagnostic event is present, the diagnostic behavior and status signal
- In the wizard

If a diagnostic event is present, the diagnostic behavior and status signal

Operation options Proline Prowirl R 200

Display area

- Icons for menus
 - ♠: Operation
 - ≯: Setup
 - 및: Diagnostics
 - ₹: Expert
- : Submenus
- 🗠 : Wizards
- @: Parameters within a wizard
- 🔂: Parameter locked

8.2.3 Editing view

Input mask

Operating symbols in the numeric editor

Key	Meaning	Key	Meaning
4	Confirms selection.	+	Moves the input position one position to the left.
X	Exits the input without applying the changes.	·	Inserts decimal separator at the input position.
_	Inserts minus sign at the input position.	C	Clears all entered characters.

Operating symbols in the text editor

Key	Meaning	Key	Meaning
4	Confirms selection.	₩C←→	Switches to the selection of the correction tools.
X	Exits the input without applying the changes.	C	Clears all entered characters.
Toggle Between upper-case and lower-case letters For entering numbers For entering special characters			

Correction symbols under \nearrow

Key	Meaning	Key	Meaning
C	Clears all entered characters.	+	Moves the input position one position to the left.
-	Moves the input position one position to the right.	₽ X	Deletes one character immediately to the left of the input position.

8.2.4 Operating elements

Keys and meaning

Minus key

- *In a menu, submenu*: Moves the selection bar upwards in a choose list.
- *With a wizard:* Confirms the parameter value and goes to the previous parameter.
- With a text and numeric editor: Moves the selection bar to the left (backwards) in an input screen.

Plus key

- In a menu, submenu: Moves the selection bar downwards in a choose list.
- *With a wizard*: Confirms the parameter value and goes to the next parameter.
- With a text and numeric editor: Moves the selection bar to the right (forwards) in an input screen.

© Enter key

For operational display

- Pressing the key briefly opens the operating menu.
- Pressing the key for 2 s opens the context menu.

In a menu, submenu

- Pressing the key briefly:
 - Opens the selected menu, submenu or parameter.
 - Starts the wizard.
 - If help text is open, closes the help text of the parameter.
- Pressing the key for 2 s for parameter: If present, opens the help text for the function of the parameter.

With a wizard: Opens the editing view of the parameter.

With a text and numeric editor:

- Pressing the key briefly:
 - Opens the selected group.
 - Carries out the selected action.
- Pressing the key for 2 s confirms the edited parameter value.

⊕+⊝ Escape key combination (press keys simultaneously)

In a menu, submenu

- Pressing the key briefly:
 - Exits the current menu level and takes you to the next higher level.
 - If help text is open, closes the help text of the parameter.
- Pressing the key for 2 s for the parameter: Returns you to the operational display ("home position").

With a wizard: Exits the wizard and takes you to the next higher level.

With a text and numeric editor: Closes the text or numeric editor without applying changes.

Reduces the contrast (brighter setting).

①+© Plus/Enter key combination (press and hold down the keys simultaneously)

Increases the contrast (darker setting).

For operational display: Enables or disables the keypad lock (only SD02 display module).

Operation options Proline Prowirl R 200

8.2.5 Further information



For further information on the following topics, see the Operating Instructions for the device


- Calling up help text
- User roles and related access authorization
- Disabling write protection via access code
- Enabling and disabling the keypad lock

8.3 Access to the operating menu via the operating tool

8.3.1 Connecting the operating tool

Via FOUNDATION Fieldbus network

This communication interface is available in device versions with FOLINDATION Fieldbus.

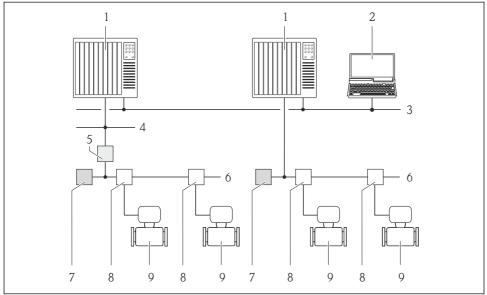


■ 12 Options for remote operation via FOUNDATION Fieldbus network

- 1 Automation system
- 2 Computer with FOUNDATION Fieldbus network card
- 3 Industry network
- 4 High Speed Ethernet FF-HSE network
- Segment coupler FF-HSE/FF-H1 5
- FOUNDATION Fieldbus FF-H1 network 6
- Power supply FF-H1 network 7
- 8 T-hox
- Measuring device

Via PROFIBUS PA network

This communication interface is available in device versions with PROFIBUS PA.

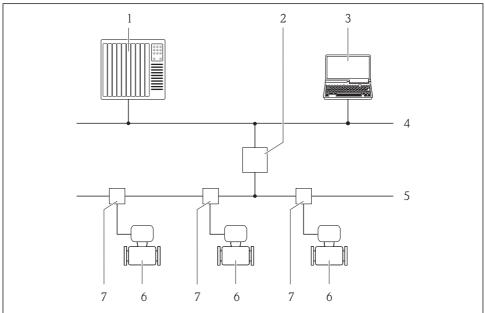


A001901

■ 13 Options for remote operation via PROFIBUS PA network

- 1 Automation system
- 2 Segment coupler PROFIBUS DP/PA
- 3 Computer with PROFIBUS network card
- 4 PROFIBUS DP network
- 5 PROFIBUS PA network
- 6 Measuring device
- 7 T-box

Operation options Proline Prowirl R 200

Via service interface (CDI)

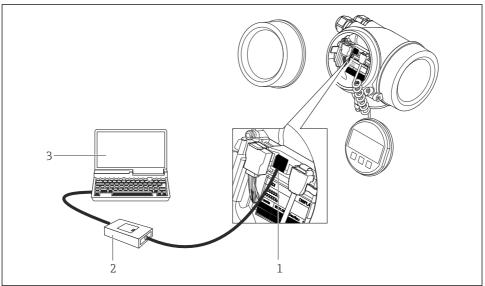

A0020545

- 1 Service interface (CDI = Endress+Hauser Common Data Interface) of the measuring device
- 2 Commubox FXA291
- 3 Computer with "FieldCare" operating tool with COM DTM "CDI Communication FXA291"

8.3.2 FieldCare

Function scope

FDT-based plant asset management tool from Endress+Hauser. It can configure all smart field devices in a system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition.

Typical functions:

- Configuring parameters of transmitters
- Loading and saving device data (upload/download)
- Documentation of the measuring point
- Visualization of the measured value memory (line recorder) and event logbook

For additional information about FieldCare, see Operating Instructions BA00027S and BA00059S

Source for device description files


- www.endress.com → Downloads
- CD-ROM (contact Endress+Hauser)
- DVD (contact Endress+Hauser)

Establishing a connection



For additional information, see Operating Instructions BA00027S and BA00059S

User interface

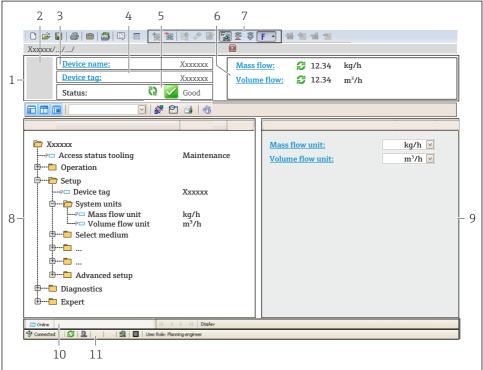

A0021051-EN

- 1 Header
- 2 Picture of device
- 3 Device name
- 4 Tag name
- 5 Status area with status signal
- 6 Display area for current measured values
- 7 Edit toolbar with additional functions such as save/restore, event list and create documentation
- 8 Navigation area with operating menu structure
- 9 Working area
- 10 Range of action
- 11 Status area

System integration Proline Prowirl R 200

9 **System integration**



For detailed information on system integration, see the Operating Instructions for the device.

10 Commissioning

10.1 Function check

Before commissioning the measuring device:

- ▶ Make sure that the post-installation and post-connection checks have been performed.
- "Post-installation check" checklist → 🖺 22
- "Post-connection check" checklist > \(\bigsim 40 \)

Switching on the measuring device 10.2

- ▶ After a successful function check, switch on the measuring device.
 - After a successful startup, the local display switches automatically from the startup display to the operational display.




If nothing appears on the local display or a diagnostic message is displayed, refer to the Operating Instructions for the device

10.3 Setting the operating language

Factory setting: English or ordered local language

Proline Prowirl R 200 Commissioning

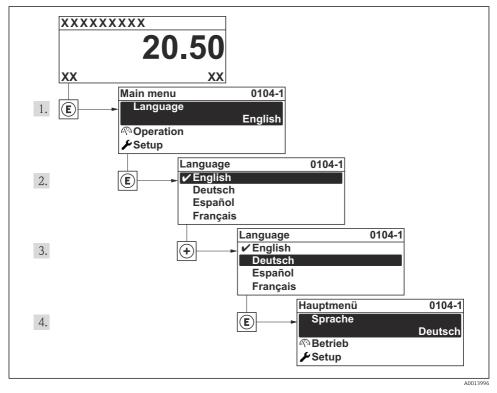

■ 14 Taking the example of the local display

10.4 Configuring the measuring device

The **Setup** menu with its **System units** submenu and various guided wizards enable fast commissioning of the measuring device.

The desired units can be selected in the **System units** submenu. The wizards systematically guide the user through all the parameters required for configuration, such as parameters for measurement or outputs.

The wizards available in the particular device can vary on account of the device version (e.g. communication method).

Wizard	Meaning
Current input	Configure the current input
Current output 1 to n	Set current output 1-2
Pulse/frequency/switch output	Configure the selected output type
Analog inputs	Configure the analog inputs

Diagnostic information Proline Prowirl R 200

Wizard	Meaning
Display	Configure the measured value display
Output conditioning	Define the output conditioning
Low flow cut off	Set the low flow cut off

10.5 Defining the tag name

To enable fast identification of the measuring point within the system, you can enter a unique designation using the **Device tag** parameter and thus change the factory setting.

Navigation

"Setup" menu → Device tag

Parameter overview with brief description

Parameter	Description	User entry	Factory setting
Device tag	Enter the name for the measuring point.	Max. 32 characters such as letters, numbers or special characters (e.g. @, %, /).	Prowirl

10.6 Protecting settings from unauthorized access

The following options exist for protecting the configuration of the measuring device from unintentional modification after commissioning:

- Write protection via access code
- Write protection via write protection switch
- Write protection via keypad lock
- FOUNDATION Fieldbus: write protection via block operation




For detailed information on protecting the settings against unauthorized access, see the Operating Instructions for the device.

11 Diagnostic information

Faults detected by the self-monitoring system of the measuring device are displayed as a diagnostic message in alternation with the operational display. The message on remedial measures can be called up from the diagnostic message, and contains important information on the fault.

Proline Prowirl R 200 Diagnostic information

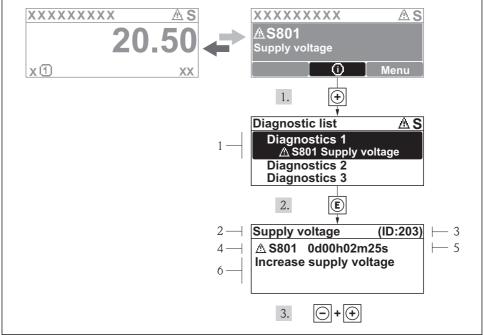

A0013940-EN

■ 15 Message for remedial measures

- 1 Diagnostic information
- 2 Short text
- 3 Service ID
- 4 Diagnostic behavior with diagnostic code
- 5 Operation time of occurrence
- 6 Remedial measures

The user is in the diagnostic message.

- 1. Press 🛨 (🕦 symbol).
 - └ The **Diagnostic list** submenu opens.
- 2. Select the desired diagnostic event with \pm or \Box and press \Box .
 - $\begin{tabular}{ll} \end{tabular}$ The message for the remedial measures for the selected diagnostic event opens.
- 3. Press □ + ± simultaneously.
 - ► The message for the remedial measures closes.

Diagnostic information Proline Prowirl R 200

11.1 General troubleshooting

For local display

Problem	Possible causes	Remedy
Local display dark and no output signals	Supply voltage does not match the value indicated on the nameplate.	Apply the correct supply voltage .
Local display dark and no output signals	The polarity of the supply voltage is wrong.	Correct the polarity.
Local display dark and no output signals	No contact between connecting cables and terminals.	Check the connection of the cables and correct if necessary.
Local display dark and no output signals	Terminals are not plugged into the I/O electronics module correctly.	Check terminals.
Local display dark and no output signals	I/O electronics module is defective.	Order spare part .
Local display is dark, but signal output is within the valid range	Display is set too bright or too dark.	■ Set the display brighter by simultaneously pressing + + E. ■ Set the display darker by simultaneously pressing - + E.
Local display is dark, but signal output is within the valid range	The cable of the display module is not plugged in correctly.	Insert the plug correctly into the main electronics module and display module.
Local display is dark, but signal output is within the valid range	Display module is defective.	Order spare part .
Backlighting of local display is red	Diagnostic event with "Alarm" diagnostic behavior has occurred.	Take remedial measures
Text on local display appears in a foreign language and cannot be understood.	Incorrect operating language is configured.	1. Press □ + ⊕ for 2 s ("home position"). 2. Press □. 3. Set the desired language in the Language parameter.
Message on local display: "Communication Error" "Check Electronics"	Communication between the display module and the electronics is interrupted.	Check the cable and the connector between the main electronics module and display module. Order spare part.

For output signals

Problem	Possible causes	Remedy
Signal output outside the valid range	Main electronics module is defective.	Order spare part .
Signal output outside the valid current range (< 3.6 mA or > 22 mA)	I/O electronics module is defective.	Order spare part .

Proline Prowirl R 200 Maintenance

Problem	Possible causes	Remedy
Device shows correct value on local display, but signal output is incorrect, though in the valid range.	Configuration error	Check and correct the parameter configuration.
Device measures incorrectly.	Configuration error or device is operated outside the application.	Check and correct parameter configuration. Observe limit values specified in the "Technical Data".

For access

Problem	Possible causes	Remedy
No write access to parameters	Hardware write protection enabled	Set the write protection switch on the main electronics module to the OFF position .
No write access to parameters	Current user role has limited access authorization	Check user role . Enter correct customer-specific access code .
No connection via HART protocol	Communication resistor missing or incorrectly installed.	Install the communication resistor (250 Ω) correctly. Observe the maximum load $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $
No connection via HART protocol	Commubox Connected incorrectly Configured incorrectly Drivers not installed correctly USB interface on computer configured incorrectly	Observe the documentation for the Commubox. FXA195 HART: Document Technical Information" T100404F
No connection via service interface	Incorrect configuration of USB interface on PC or driver not installed correctly.	Observe the documentation for the Commubox. FXA291: Document "Technical Information" TI00405C

12 Maintenance

12.1 Maintenance tasks

No special maintenance work is required.

12.1.1 Exterior cleaning

When cleaning the exterior of measuring devices, always use cleaning agents that do not attack the surface of the housing or the seals.

Maintenance Proline Prowirl R 200

12.1.2 Interior cleaning

NOTICE

The use of unsuitable equipment or cleaning liquids can damage the transducer.

▶ Do not use pigs to clean the pipe.

12.1.3 Replacing seals

Replacing sensor seals

NOTICE

Under normal circumstances, wetted seals must not be replaced.

Replacement is necessary only in special circumstances, for example if aggressive or corrosive fluids are incompatible with the seal material.

- ► The time span between the individual replacement procedures depends on the fluid properties.
- ▶ Only Endress+Hauser sensor seals may be used: replacement seals

Replacing housing seals

The housing seals must be clean and undamaged when inserted into their grooves. Dry, clean or replace the seals if necessary.


NOTICE


When the measuring device is used in a dusty atmosphere:

▶ only use the associated Endress+Hauser housing seals.

12.2 Measuring and test equipment

Endress+Hauser offers a wide variety of measuring and test equipment, such as W@M or device tests.





12.3 Endress+Hauser services

Endress+Hauser offers a wide variety of services for maintenance such as recalibration, maintenance service or device tests.

Your Endress+Hauser Sales Center can provide detailed information on the services.





www.addresses.endress.com

