


## Description of Device Functions

# Proline Promass 84

Coriolis Mass Flow Measuring System  
for Custody Transfer

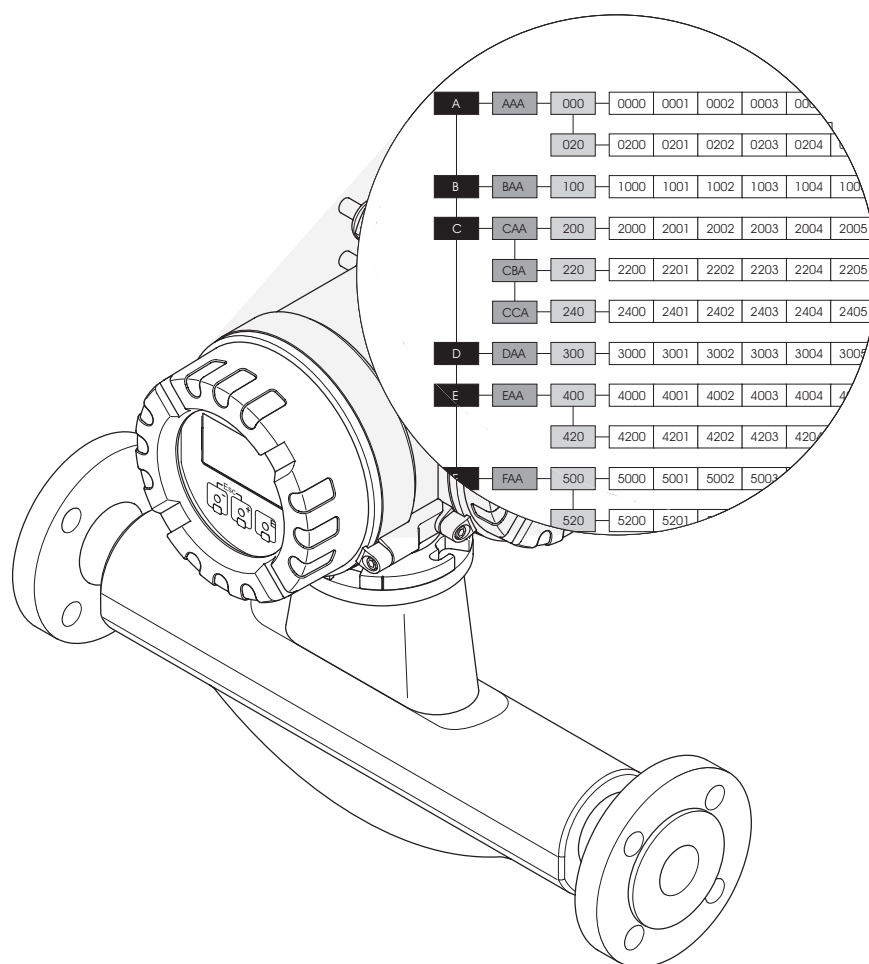



## Table of contents

<b>1</b>	<b>Notes on using this Manual</b>	<b>7</b>
1.1	Using the table of contents to locate a function description	7
1.2	Using the graphic of the function matrix to locate a function description	7
1.3	Using the index of the function matrix to locate a function description	7
<b>2</b>	<b>Function matrix</b>	<b>8</b>
2.1	General layout of the function matrix	8
2.1.1	Blocks (A, B, C, etc.)	8
2.1.2	Groups (AAA, AEA, CAA, etc.)	8
2.1.3	Function groups (000, 020, 060, etc.)	8
2.1.4	Functions (0000, 0001, 0002, etc.)	8
2.1.5	Codes identifying cells	9
2.2	Function matrix Promass 84	10
<b>3</b>	<b>Block CUSTODY TRANSFER</b>	<b>11</b>
<b>4</b>	<b>Block MEASURED VARIABLES</b>	<b>13</b>
4.1	Group MEASURING VALUES	14
4.1.1	Function group MAIN VALUES	14
4.2	Group SYSTEM UNITS	15
4.2.1	Function group CONFIGURATION	15
4.2.2	Function group ADDITIONAL CONFIGURATION	18
4.3	Group SPECIAL-UNITS	20
4.3.1	Function group ARBITRARY UNIT	20
<b>5</b>	<b>Block QUICK SETUP</b>	<b>22</b>
5.1	Quick Setup	24
5.1.1	Quick Setup Commissioning	24
5.1.2	Quick Setup Pulsating Flow	26
5.1.3	Quick Setup Gas Measurement	28
5.2	Data back-up/transfer	29
<b>6</b>	<b>Block DISPLAY</b>	<b>30</b>
6.1	Group CONTROL	31
6.1.1	Function group BASIC CONFIG.	31
6.1.2	Function group UNLOCKING/LOCKING	33
6.1.3	Function group OPERATION	34
6.2	Group MAIN LINE	35
6.2.1	Function group CONFIGURATION	35
6.2.2	Function group MULTIPLEX	37
6.3	Group ADDITION LINE	38
6.3.1	Function group CONFIGURATION	38
6.3.2	Function group MULTIPLEX	40
6.4	Group INFORMATION LINE	42
6.4.1	Function group CONFIGURATION	42
6.4.2	Function group MULTIPLEX	44
<b>7</b>	<b>Block TOTALIZER</b>	<b>46</b>
7.1	Group TOTALIZER (1 to 3)	47
7.1.1	Function group CONFIGURATION	47
7.1.2	Function group OPERATION	49
7.2	Group HANDLING TOTAL.	50

<b>8</b>	<b>Block OUTPUTS</b>	<b>51</b>
8.1	Group CURRENT OUTPUT 1 to 2	52
8.1.1	Function group CONFIGURATION	52
8.1.2	Function group OPERATION	61
8.1.3	Function group INFORMATION	62
8.2	Group PULSE/FREQUENCY OUTPUT (1 to 2)	63
8.2.1	Function group CONFIGURATION	63
8.2.2	Function group OPERATION	83
8.2.3	Function group INFORMATION	88
8.3	Group RELAY OUTPUT	89
8.3.1	Function group CONFIGURATION	89
8.3.2	Function group OPERATION	93
8.3.3	Function group INFORMATION	95
8.4	Behavior of status output	96
8.5	Status output switching behavior	97
<b>9</b>	<b>Block INPUTS</b>	<b>99</b>
9.1	Group STATUS INPUT	100
9.1.1	Function group CONFIGURATION	100
9.1.2	Function group OPERATION	101
9.1.3	Function group INFORMATION	102
<b>10</b>	<b>Block BASIC FUNCTION</b>	<b>103</b>
10.1	Group HART	104
10.1.1	Function group CONFIGURATION	104
10.1.2	Function group INFORMATION	105
10.2	Group PROCESSPARAMETER	106
10.2.1	Function group CONFIGURATION	106
10.2.2	Function group EPD PARAMETER	108
10.2.3	Function group REFERENCE PARAMETER	110
10.2.4	Function group ADJUSTMENT	112
10.2.5	Function group PRESSURE CORRECTION	114
10.3	Group SYSTEM PARAMETERS	115
10.3.1	Function group CONFIGURATION	115
10.4	Group SENSOR DATA	116
10.4.1	Function group CONFIGURATION	116
10.4.2	Function group FLOW COEFFICIENT	117
10.4.3	Function group DENSITY COEFFICIENT	118
10.4.4	Function group ADDITIONAL COEFFICIENT	119
<b>11</b>	<b>Block SUPERVISION</b>	<b>120</b>
11.1	Group SYSTEM	121
11.1.1	Functions group CONFIGURATION	121
11.1.2	Function group OPERATION	123
11.2	Group VERSION-INFO	125
11.2.1	Function group DEVICE	125
11.2.2	Function group SENSOR	125
11.2.3	Function group AMPLIFIER	126
11.2.4	Function group F-CHIP	127
11.2.5	Function group I/O MODULE	127
11.2.6	Function groups INPUT/OUTPUT 1 to 4	128

**12 Factory settings ..... 129**

12.1 SI units (not for USA and Canada) ..... 129

12.1.1 Low flow cut off, full scale value, pulse value – Liquid ..... 129

12.1.2 Low flow cut off, full scale value, pulse value – Gas ..... 129

12.1.3 Language ..... 130

12.1.4 Density, length, temperature ..... 130

12.2 US units (only for USA and Canada) ..... 131

12.2.1 Low flow cut off, full scale value, pulse value – Liquid ..... 131

12.2.2 Low flow cut off, full scale value, pulse value – Gas ..... 131

12.2.3 Language, density, length, temperature ..... 131

**Index of function matrix ..... 133**

**Index ..... 137**



# 1 Notes on using this Manual

There are various ways of locating the description of a function of your choice in the manual:

## 1.1 Using the table of contents to locate a function description

The designations of all the cells in the function matrix are listed in the table of contents. You can use these unambiguous designations (such as USER INTERFACE, INPUTS, OUTPUTS, etc.) to choose whichever functions are applicable to a particular set of conditions. The page references show you exactly where to find the detailed descriptions of the functions in question.

The table of contents is on page 3.

## 1.2 Using the graphic of the function matrix to locate a function description



This step-by-step, top-down approach starts with the blocks, the highest level, and factory down through the matrix to the description of the function you need:

1. All blocks available, and their related groups, are illustrated on Page 10. Select the block (or the group within the block) which you need for your application and use the page reference to locate the information corresponding to the next level.
2. The page in question contains a graphic showing of the block with all its subordinate groups, function groups and functions. Select the function which you need for your application and use the page reference to locate the detailed function description.

## 1.3 Using the index of the function matrix to locate a function description

Each "cell" in the function matrix (blocks, groups, function groups, functions) has a unique identifier in the form of a code consisting of one or three letters or a three- or four-digit number. The code identifying a selected "cell" appears at the top right on the local display.

Example:

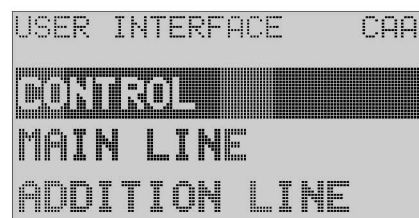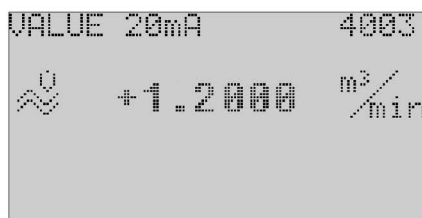

A0001653-EN

The function matrix index lists the codes for all the available "cells" in alphabetic and consecutive order, complete with the page references for the corresponding functions.


The index to the function matrix is on Page 133.

## 2 Function matrix

### 2.1 General layout of the function matrix

The function matrix consists of four levels:

**Blocks → Groups → Function groups → Functions**

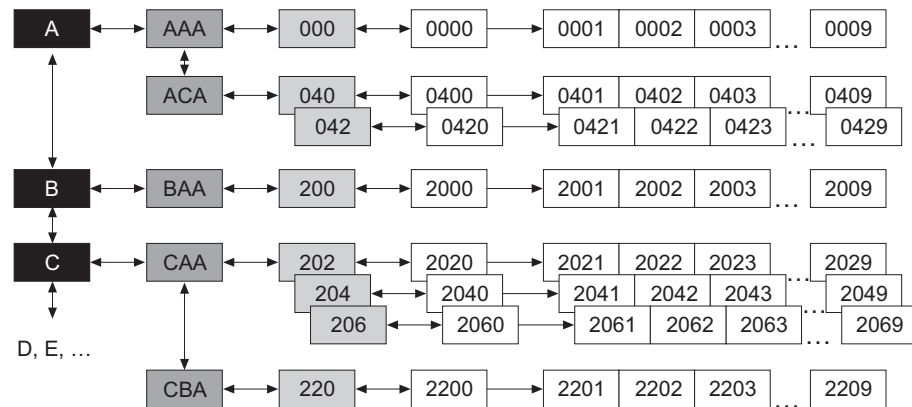

A0000961

#### 2.1.1 Blocks (A, B, C, etc.)

The blocks are the highest-level grouping of the operation options for the device.

The blocks include, for example: MEASURED VARIABLES, QUICK SETUP, USER INTERFACE, TOTALIZER, etc.

#### 2.1.2 Groups (AAA, AEA, CAA, etc.)

A block consists of one or more groups.

Each group represents a more detailed selection of the operation options in the higher-order block.

The groups in the "USER INTERFACE" block, for example, include: CONTROL, MAIN LINE, ADDITION LINE, etc.

#### 2.1.3 Function groups (000, 020, 060, etc.)

A group consists of one or more function groups.

Each function group represents a more detailed selection of the operation options in the higher-order group. The function groups in the "CONTROL" group, for example, include: BASIC CONFIG., UNLOCKING/LOCKING, CONTROL, etc.

#### 2.1.4 Functions (0000, 0001, 0002, etc.)

Each function group consists of one or more functions. The functions are used to operate and parameterize the measuring instrument. Numerical values can be entered or parameters selected and saved.

Available functions of the function group "BASIC CONFIG." are: LANGUAGE, DISPLAY DAMPING, CONTRAST LCD, etc.

The procedure for changing the language of the user interface, for example, is as follows:

1. Select the block "USER INTERFACE".
2. Select the group "CONTROL".
3. Select the function group "BASIC CONFIG.".
4. Select the function "LANGUAGE" (here you can set the language required).



### 2.1.5 Codes identifying cells

Each cell (block, group, function group and function) in the function matrix has an individual, unique code.

**Blocks:**

The code is a letter (A, B, C, etc.)

**Groups:**

The code consists of three letters (AAA, ABA, BAA, etc.).

The first letter matches the block code (i.e. each group in block A has a code starting with an A \_\_; the codes of the groups in block B start with a B \_\_, etc.). The other two letters are for identifying the group within the respective block.

**Function groups:**


The code consists of three digits (000, 001, 100, etc.).

**Functions:**

The code consists of four digits (0000, 0001, 0201, etc.).


The first three digits are the same as the code for the function group.

The last digit counts the functions in the function group, counting up from 0 to 9 (for example, function 0005 is the sixth function in the group 000).

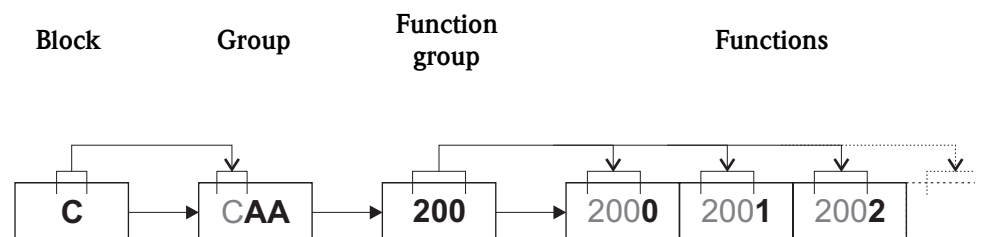

A0001251


## 2.2 Function matrix Promass 84

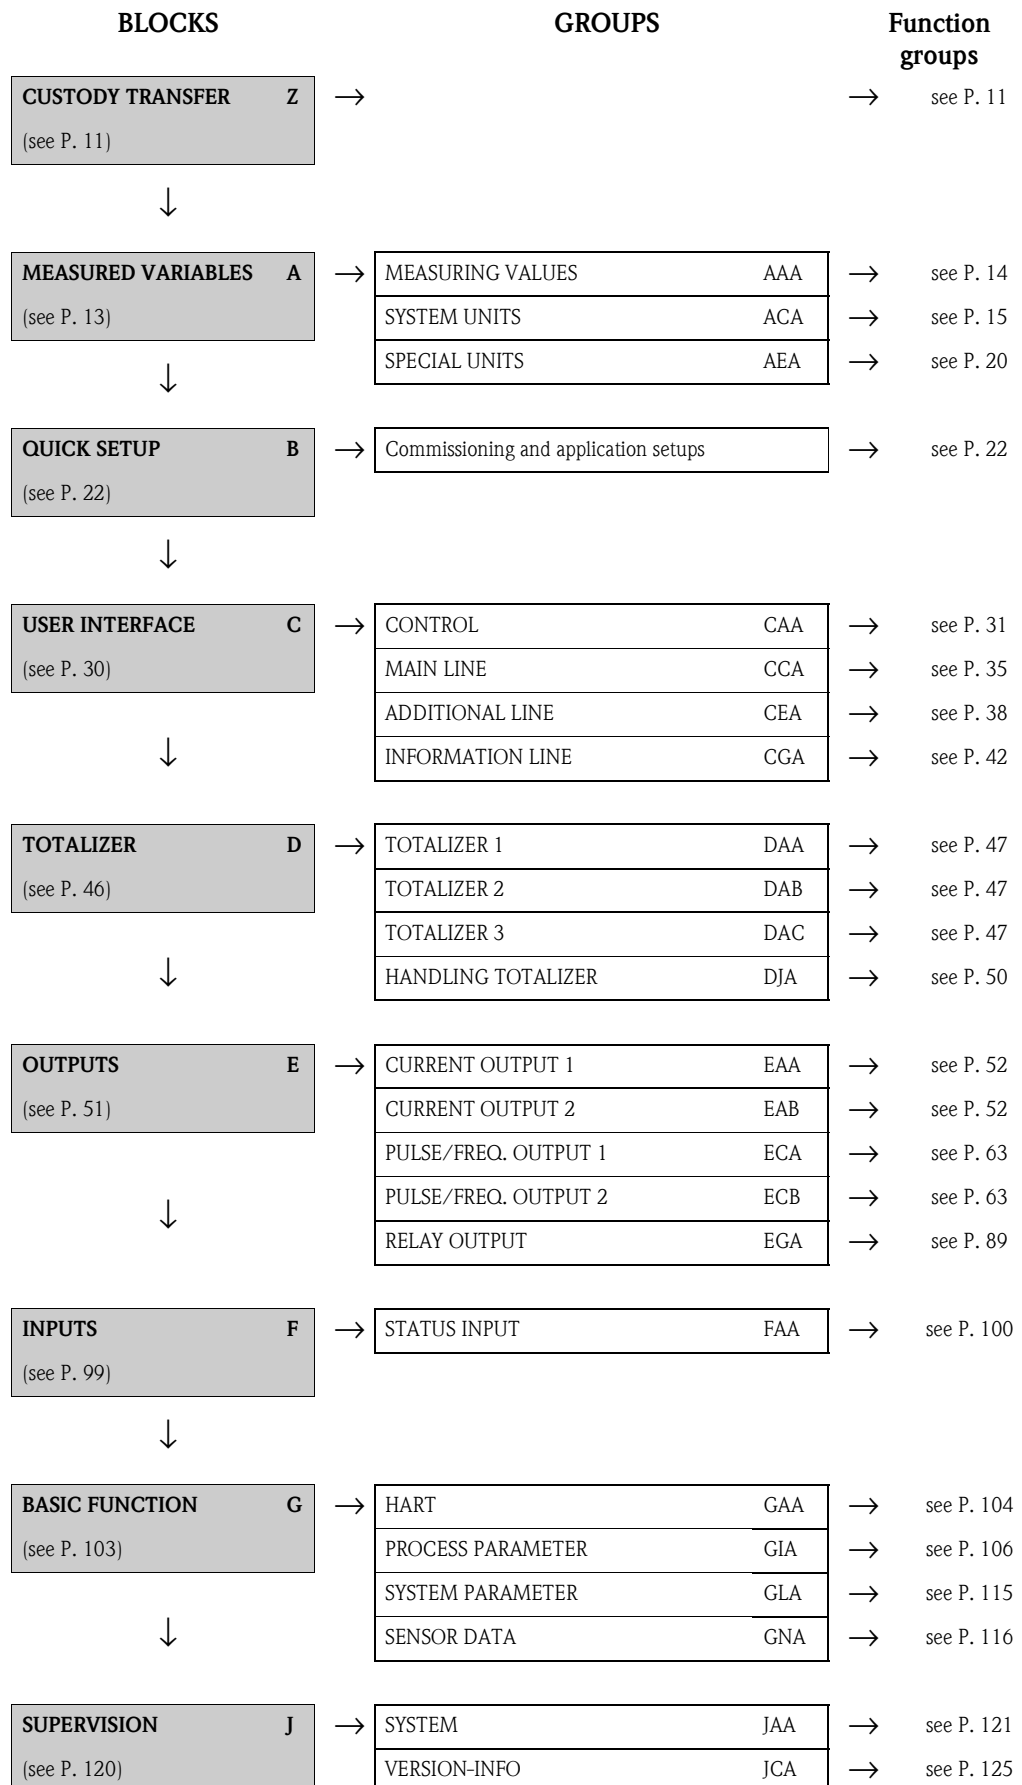






### 3 Block CUSTODY TRANSFER






Block	Group	Function groups	Functions			
CUSTODY TRANSFER (Z)	⇒	⇒	CUSTODY TRANSFER (Z000) P. 11	PULSE OUT.1 C.T. (Z001) P. 11	PULSE OUT.2 C.T. (Z002) P. 11	CURR. OUT. 1 C.T. (Z003) P. 11
			TOTALIZER 1 C.T. (Z006) P. 11	TOTALIZER 2 C.T. (Z007) P. 11	TOTALIZER 3 C.T. (Z008) P. 11	

#### Function description CUSTODY TRANSFER

 Note!

- If the measuring device is configured in accordance with the NTEP or MC approvals, this block (CUSTODY TRANSFER) is not available.
- If the measuring system is set to custody transfer and the hardware is sealed, then all the measuring instrument functions marked with a lock symbol  are protected against access. For additional information on this topic, refer to the Operating Instructions for the Promass 84 (BA109D) in Chapter 7.3.1, "Setting up custody transfer measurement".
- These functions are not available to be used again until you disable custody transfer mode of the measuring system. For additional information on this topic, refer to the Operating Instructions for the Promass 84 (BA109D) in Chapter 7.3.2, "Disabling custody transfer measurement".

<b>CUSTODY TRANSFER (Z000)</b>	<p>Use this function to check whether the measuring point is set to custody transfer.</p> <p><b>Display:</b> C.T. NO C.T. YES</p> <p><b>Factory setting:</b> C.T. NO</p>
<b>PULSE OUTPUT 1 CUSTODY TRANSFER (Z001)</b> 	<p> Note! This function is available only if the measuring instrument has a pulse output 1.</p> <p>Selection of the pulse output 1 for transferring the calibrated signal.</p> <p><b>Options:</b> NO YES</p> <p><b>Factory setting:</b> NO</p>
<b>PULSE OUTPUT 2 CUSTODY TRANSFER (Z002)</b> 	<p> Note! This function is available only if the measuring instrument has a pulse output 2.</p> <p>Selection of the pulse output 2 for transferring the calibrated signal.</p> <p><b>Options:</b> NO YES</p> <p><b>Factory setting:</b> NO</p>

Function description CUSTODY TRANSFER	
<b>CURRENT OUTPUT 1 CUSTODY TRANSFER (Z003)</b> 	 <b>Note!</b> This function is available only if the measuring instrument has a current output 1. Selection of the current output 1 for transferring the calibrated signal. <b>Options:</b> NO YES <b>Factory setting:</b> NO
<b>TOTALIZER 1 CUSTODY TRANSFER (Z006)</b> 	Selection of the totalizer 1 for transferring the calibrated signal. <b>Options:</b> NO YES <b>Factory setting:</b> NO
<b>TOTALIZER 2 CUSTODY TRANSFER (Z007)</b> 	Selection of the totalizer 2 for transferring the calibrated signal. <b>Options:</b> NO YES <b>Factory setting:</b> NO
<b>TOTALIZER 3 CUSTODY TRANSFER (Z008)</b> 	Selection of the totalizer 3 for transferring the calibrated signal. <b>Options:</b> NO YES <b>Factory setting:</b> NO


## 13

Block	Groups	Function groups	Functions
MEASURED VARIABLES (A)	MEASURING VALUES	MAIN VALUES (000) P. 14	<div>MASS FLOW (0000) P. 14</div> <div>VOLUME FLOW (0001) P. 14</div> <div>CORRECTED VOL. FLOW (0004) P. 14</div> <div>DENSITY (0005) P. 14</div> <div>REFERENCE DENSITY (0006) P. 14</div> <div>TEMPERATURE (0008) P. 14</div>
	SYSTEM UNITS (ACA) P. 15	CONFIGURATION (040) P. 15	<div>UNIT MASS FLOW (0400) P. 15</div> <div>UNIT CORR. VOL. FLOW (0403) P. 16</div> <div>UNIT CORR. VOLUME (0405) P. 17</div>
		ADDITIONAL CONFIGURATION (042) P. 18	<div>UNIT DENSITY (0420) P. 18</div> <div>UNIT TEMPERATURE (0422) P. 19</div> <div>UNIT LENGTH (0424) P. 19</div> <div>UNIT PRESSURE (0426) P. 19</div>
	SPECIAL UNITS (AEA) P. 20	ARBITRARY UNIT (060) P. 20	<div>TEXT MASS UNIT (0600) P. 20</div> <div>TEXT ARB. VOLUME (0602) P. 20</div> <div>FACTOR ARB. VOLUME (0603) P. 21</div> <div>TEXT DENSITY UNIT (0604) P. 21</div> <div>FACTOR DENSITY UNIT (0605) P. 21</div>

## 4.1 Group MEASURING VALUES


### 4.1.1 Function group MAIN VALUES






MEAS. VARIABLES	A	⇒	MEASURING VALUES	AAA	⇒	MAIN VALUES	000
-----------------	---	---	------------------	-----	---	-------------	-----






Function description	
MEASURED VARIABLES → MEASURING VALUES → MAIN VALUES	
<p> Note!</p> <ul style="list-style-type: none"> <li>■ The units of all the measured variables shown here can be set in the SYSTEM UNITS group.</li> <li>■ If the fluid in the pipe flows backwards, a negative sign prefixes the flow reading on the display.</li> </ul>	
<b>MASS FLOW</b> (0000)	<p>The currently measured mass flow appears on the display.</p> <p><b>Display:</b> 5-digit floating-point number, including unit and sign (e.g. 462.87 kg/h; -731.63 lb/min; etc.)</p>
<b>VOLUME FLOW</b> (0001)	<p>The calculated volume flow appears on the display. The volume flow is derived from the measured mass flow and the measured density of the fluid.</p> <p><b>Display:</b> 5-digit floating-point number, including unit and sign (e.g. 5.5445 dm<sup>3</sup>/min; 1.4359 m<sup>3</sup>/h; -731.63 gal/d; etc.)</p>
<b>CORRECTED VOLUME FLOW</b> (0004)	<p>The calculated corrected volume flow appears on the display. The calculated corrected volume flow is derived from the measured mass flow and the reference density of the fluid (density at reference temperature, measured or fixed entry).</p> <p><b>Display:</b> 5-digit floating-point number, including unit and sign (e.g. 1.3549 Nm<sup>3</sup>/h; 7.9846 scm/day; etc.)</p>
<b>DENSITY</b> (0005)	<p>The currently measured density or its specific gravity appears on the display.</p> <p><b>Display:</b> 5-digit floating-point number, including unit (e.g. 1.2345 kg/dm<sup>3</sup>; 993.5 kg/m<sup>3</sup>; 1.0015 SG_20 °C; etc.)</p>
<b>REFERENCE DENSITY</b> (0006)	<p>The density of the fluid, at reference temperature, appears on the display. The reference density can be calculated using the measured density or specified using the FIXED REFERENCE DENSITY function (see Page 110).</p> <p><b>Display:</b> 5-digit floating-point number, including unit (e.g. 1.2345 kg/dm<sup>3</sup>; 993.5 kg/m<sup>3</sup>; 1.0015 SG_20 °C; etc.)</p>
<b>TEMPERATURE</b> (0008)	<p>The currently measured temperature appears on the display.</p> <p><b>Display:</b> max. 4-digit fixed-point number, including unit and sign (e.g. -23.4 °C; 160.0 °F; 295.4 K; etc.)</p>

## 4.2 Group SYSTEM UNITS





### 4.2.1 Function group CONFIGURATION




Function description MEASURED VARIABLES → SYSTEM UNITS → CONFIGURATION	
You can select the units for measured variables in this function group.	
<b>UNIT MASS FLOW (0400)</b> 	<p>For selecting the unit for displaying the mass flow.</p> <p>The unit you select here is also valid for:</p> <ul style="list-style-type: none"> <li>■ Current outputs</li> <li>■ Frequency outputs</li> <li>■ Status output switch point (limit value for mass flow, flow direction)</li> <li>■ Low flow cut off</li> </ul> <p> <b>Note!</b>          You can select the following time units:          s = seconds, m = minutes, h = hours, d = day</p> <p><b>Options:</b>          Metric:          Gram → g/time unit          Kilogram → kg/time unit          Ton → t/time unit</p> <p>US:          ounce → oz/time unit          pound → lb/time unit          ton → ton/time unit</p> <p>For arbitrary units (see function TEXT ARBITRARY MASS on Page 20)          _ _ _ _ → _ _ _ _/time unit</p> <p><b>Factory setting:</b>          Country-dependent (kg/h or US-lb/min)</p> <p> <b>Note!</b>          If you defined a unit of mass in the function group ARBITRARY UNIT 060 (see Page 20), the unit in question is shown here.</p>
<b>UNIT MASS (0401)</b> 	<p>For selecting the unit for displaying the mass.</p> <p>The unit you select here is also valid for:</p> <ul style="list-style-type: none"> <li>■ Pulse value (e.g. kg/p)</li> </ul> <p><b>Options:</b>          Metric → g; kg; t          US → oz; lb; ton</p> <p>For free selectable units → _ _ _ _ (see function TEXT ARBITRARY MASS on Page 20)</p> <p><b>Factory setting:</b>          Country-dependent (kg or US-lb)</p> <p> <b>Note!</b></p> <ul style="list-style-type: none"> <li>■ If you defined a unit of mass in the function group ARBITRARY UNIT 060 (see Page 20), the unit in question is shown here.</li> <li>■ The unit for the totalizers is independent of the selection made here and is selected separately for each totalizer.</li> </ul>



<b>Function description</b> MEASURED VARIABLES → SYSTEM UNITS → CONFIGURATION	
<b>UNIT VOLUME FLOW (0402)</b> 	<p>For selecting the unit for displaying the volume flow. The unit you select here is also valid for:</p> <ul style="list-style-type: none"> <li>■ Current outputs</li> <li>■ Frequency outputs</li> <li>■ Status output switch point (limit value for volume flow, flow direction)</li> <li>■ Low flow cut off</li> </ul> <p> <b>Note!</b> You can select the following time units: s = seconds, m = minutes, h = hours, d = day</p> <p><b>Options:</b> Metric: Cubic centimeter → cm<sup>3</sup>/time unit Cubic decimeter → dm<sup>3</sup>/time unit Cubic meter → m<sup>3</sup>/time unit Milliliter → ml/time unit Liter → l/time unit Hectoliter → hl/time unit Megaliter → Ml/time unit</p> <p>US: Cubic centimeter → cc/time unit Acre foot → af/time unit Cubic foot → ft<sup>3</sup>/time unit Fluid ounce → fl oz/time unit Gallon → gal/time unit Kilogallon → Kgal/time unit Million gallon → Mgal/time unit Barrel (normal fluids: 31.5 gal/bbl) → bbl/time unit Barrel (beer: 31.0 gal/bbl) → bbl/time unit Barrel (petrochemicals: 42.0 gal/bbl) → bbl/time unit Barrel (filling tanks: 55.0 gal/bbl) → bbl/time unit</p> <p>Imperial Gallon → gal/time unit Mega gallon → Mgal/time unit Barrel (beer: 36.0 gal/bbl) → bbl/time unit Barrel (petrochemicals: 34.97 gal/bbl) → bbl/time unit</p> <p>Arbitrary unit (see function TEXT ARBITRARY VOLUME on Page 20) ____ → ____/time unit</p> <p><b>Factory setting:</b> Country-dependent (m<sup>3</sup>/h or US-Mgal/day)</p> <p> <b>Note!</b> If you defined a unit of volume in the function group ARBITRARY UNIT 4060 (see Page 20), the unit in question is shown here.</p>
<b>UNIT VOLUME (0403)</b> 	<p>For selecting the unit for displaying the volume. The unit you select here is also valid for: Pulse value (e.g. m<sup>3</sup>/p)</p> <p><b>Options:</b> Metric → cm<sup>3</sup>; dm<sup>3</sup>; m<sup>3</sup>; ml; l; hl; Ml Mega US → cc; af; ft<sup>3</sup>; oz f; gal; Kgal; Mgal; bbl (normal fluids); bbl (beer); bbl (petrochemicals) → bbl (filling tanks) Imperial → gal; Mgal; bbl (beer); bbl (petrochemicals) Arbitrary unit → ____ (see function TEXT ARBITRARY VOLUME on Page 20)</p> <p><b>Factory setting:</b> m<sup>3</sup></p> <p> <b>Note!</b></p> <ul style="list-style-type: none"> <li>■ If you defined a unit of volume in the function group ARBITRARY UNIT 4060 (see Page 20), the unit in question is shown here.</li> <li>■ The unit of the totalizers is independent of the selection made here and is selected separately for each totalizer.</li> </ul>



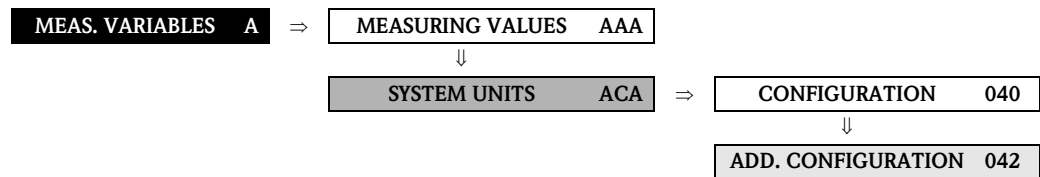


Function description	
MEASURED VARIABLES → SYSTEM UNITS → CONFIGURATION	
<div>UNIT CORRECTED VOLUME FLOW</div> <div>(0404)</div> <div></div>	<div>For selecting the unit for displaying the corrected volume flow.</div> <div>The unit you select here is also valid for:</div> <div><ul style="list-style-type: none"><li>■ Current outputs</li><li>■ Frequency outputs</li><li>■ Status output switch point (limit value for corrected volume flow, flow direction)</li><li>■ Low flow cut off</li></ul></div> <div> Note!</div> <div>You can select the following time units: s = seconds, m = minutes, h = hours, d = day</div> <div><b>Options:</b></div> <div>Metric:</div> <div>Nl/time unit</div> <div>Nm<sup>3</sup>/time unit</div> <div>US:</div> <div>Sm<sup>3</sup>/time unit</div> <div>Scf/time unit</div> <div><b>Factory setting:</b></div> <div>Nm<sup>3</sup>/h</div>
<div>UNIT CORRECTED VOLUME</div> <div>(0405)</div> <div></div>	<div>For selecting the unit for displaying the corrected volume.</div> <div>The unit you select here is also valid for:</div> <div><ul style="list-style-type: none"><li>■ Pulse value (e.g. Nm<sup>3</sup>/p)</li></ul></div> <div><b>Options:</b></div> <div>Metric:</div> <div>Nm<sup>3</sup></div> <div>Nl</div> <div>US:</div> <div>Sm<sup>3</sup></div> <div>Scf</div> <div><b>Factory setting:</b></div> <div>Nm<sup>3</sup></div> <div> Note!</div> <div>The unit of the totalizers is independent of the selection made here and is selected separately for each totalizer.</div>

## 4.2.2 Function group ADDITIONAL CONFIGURATION







Function description	
MEASURED VARIABLES → SYSTEM UNITS → ADDITIONAL CONFIGURATION	
<b>UNIT DENSITY (0420)</b> 	<p>For selecting the unit for displaying the density.</p> <p>The unit you select here is also valid for:</p> <ul style="list-style-type: none"> <li>■ Current outputs</li> <li>■ Frequency outputs</li> <li>■ Status output switch point (limit value for density)</li> <li>■ Density response value for EPD</li> <li>■ Density adjustment value</li> </ul> <p><b>Options:</b></p> <p>Metric:  g/cm<sup>3</sup>; g/cc; kg/dm<sup>3</sup>; kg/l; kg/m<sup>3</sup>;  SD 4 °C, SD 15 °C, SD 20 °C; SG 4 °C, SG 15 °C, SG 20 °C</p> <p>US:  lb/ft<sup>3</sup>; lb/gal; lb/bbl (normal fluids); lb/bbl (beer); lb/bbl (petrochemicals); lb/bbl (filling tanks)</p> <p>Imperial:  lb/gal; lb/bbl (beer); lb/bbl (petrochemicals)</p> <p><b>Factory setting:</b>  kg/l</p> <p>SD = Specific Density, SG = Specific Gravity  The specific density is the ratio of fluid density to water density (at water temperature = 4, 15, 20 °C).</p>
<b>UNIT REFERENCE DENSITY (0421)</b> 	<p>For selecting the unit for displaying the reference density.</p> <p>The unit you select here is also valid for:</p> <ul style="list-style-type: none"> <li>■ Current outputs</li> <li>■ Frequency outputs</li> <li>■ Status output switch point (limit value for standard density)</li> <li>■ Fixed reference density (for calculation of corrected volume flow)</li> </ul> <p><b>Options:</b></p> <p>Metric:  kg/Nm<sup>3</sup>  kg/Nl</p> <p>US:  g/Scf  kg/Sm<sup>3</sup>  lb/Scf</p> <p><b>Factory setting:</b>  kg/Nl</p>




<b>Function description</b> MEASURED VARIABLES → SYSTEM UNITS → ADDITIONAL CONFIGURATION	
<b>UNIT TEMPERATURE (0422)</b> 	<p>For selecting the unit for displaying the temperature.</p> <p>The unit you select here is also valid for:</p> <ul style="list-style-type: none"> <li>■ Current outputs</li> <li>■ Frequency outputs</li> <li>■ Status output switch point (limit value for temperature)</li> <li>■ Reference temperature (for corrected volume measurement with measured reference density)</li> </ul> <p><b>Options:</b>            °C (Celsius)            K (Kelvin)            °F (Fahrenheit)            °R (Rankine)</p> <p><b>Factory setting:</b>            °C</p>
<b>UNIT LENGTH (0424)</b> 	<p>For selecting the unit for displaying the length of the nominal diameter.</p> <p>The unit you select here is valid for:</p> <ul style="list-style-type: none"> <li>■ Nominal diameter of sensor (function NOMINAL DIAMETER (6804) on Page 116)</li> </ul> <p><b>Options:</b>            MILLIMETER            INCH</p> <p><b>Factory setting:</b>            MILLIMETER</p>
<b>UNIT PRESSURE (0426)</b> 	<p>For selecting the unit for displaying the pressure.</p> <p>The unit you select here is valid for:</p> <ul style="list-style-type: none"> <li>■ Specified pressure (see function PRESSURE (6501) on Page 114)</li> </ul> <p><b>Options:</b>            bar a            bar g            psi a            psi g</p> <p><b>Factory setting:</b>            bar g</p>
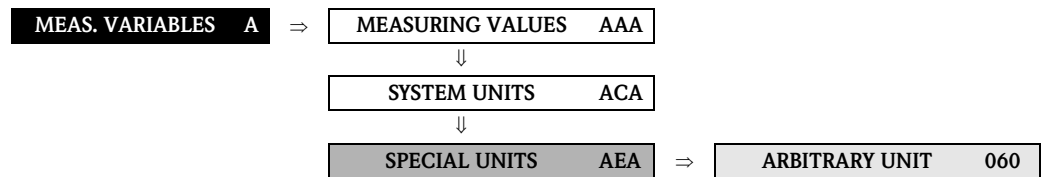
## 4.3 Group SPECIAL-UNITS

### 4.3.1 Function group ARBITRARY UNIT











Function description MEASURED VARIABLES → SPECIAL-UNITS → ARBITRARY UNIT	
Use this function group to define a selectable unit for mass, mass flow, volume, volume flow and density (optional).	
<b>TEXT ARBITRARY MASS (0600)</b> 	<p>Use this function to enter a text for the selectable mass unit / mass flow unit. You define only the text, the unit of time is provided from a choice of options (s, min, h, day).</p> <p><b>User input:</b>  xxxx (max. 4 characters)  Valid characters are A-Z, 0-9, +, -, decimal point, white space or underscore</p> <p><b>Factory setting:</b>  " _ _ _ _ " (No text)</p> <p>Example:  If your text entry is "CENT" (for centner), this text string appears on the display complete with the unit of time, e.g. "CENT/min":  CENT = Mass (text input)  CENT / min = Mass flow as shown (on the display)</p>
<b>FACTOR ARBITRARY MASS (0601)</b> 	<p>Use this function to define a quantity factor (without time) for the selectable mass-/ mass flow unit. The mass unit on which this factor is based is one kilogram.</p> <p><b>User input:</b>  7-digit floating-point number</p> <p><b>Factory setting:</b>  1</p> <p><b>Reference quantity:</b>  kg</p> <p>Example:  One centner is equivalent to 50 kg → 0.02 centner = 1 kg  User input: 0.02</p>
<b>TEXT ARBITRARY VOLUME (0602)</b> 	<p>Use this function to enter a text for the selectable volume unit / volume flow unit. You define only the text, the unit of time is provided from a choice of options (s, min, h, day).</p> <p><b>User input:</b>  xxxx (max. 4 characters)  Valid characters are A-Z, 0-9, +, -, decimal point, white space or underscore</p> <p><b>Factory setting:</b>  " _ _ _ _ " (No text)</p> <p>Example:  If your text entry is "GLAS", this text string appears on the display complete with the unit of time, e.g. "GLAS/min":  GLAS = Volume (text input)  GLAS / min = Volume flow as shown (on the display)</p>

<b>Function description</b> MEASURED VARIABLES → SPECIAL-UNITS → ARBITRARY UNIT	
<b>FACTOR ARBITRARY VOLUME (0603)</b> 	Use this function to define a quantity factor (without time) for the selectable unit. The volume unit on which this factor is based is one liter.  <b>User input:</b> 7-digit floating-point number  <b>Factory setting:</b> 1  <b>Reference quantity:</b> Liter  Example: The volume of a glass is 0.5 l → 2 glasses = 1 liter User input: 2
<b>TEXT ARBITRARY DENSITY (0604)</b> 	Use this function to enter a text for the selectable density unit.  <b>User input:</b> xxxx (max. 4 characters) Valid characters are A-Z, 0-9, +,-, decimal point, white space or underscore  <b>Factory setting:</b> " _ _ _ _ " (No text)  Example: Enter text "CE_L" (for centner per liter).
<b>FACTOR ARBITRARY DENSITY (0605)</b> 	Use this function to define a quantity factor for the selectable density unit. The density unit on which this factor is based is one kg/l.  <b>User input:</b> 7-digit floating-point number  <b>Factory setting:</b> 1  <b>Reference quantity:</b> kg/l  Example: One centner per liter is equivalent to 50 kg/l → 0.02 centner/l = 1 kg/l User input: 0.02

## 5 Block QUICK SETUP

Block	Group	Function groups	Functions
QUICK SETUP (B)	⇒	⇒	<div>OS COMMISS. (1002) P. 22</div> ⇒ <div>OS PULS. FLOW (1003) P. 22</div> <div>SETUP GAS MEASUREMENT (1004) P. 22</div> <div>T-DAT SAVE/LOAD (1009) P. 23</div>

Function description QUICK SETUP	
<b>QUICK SETUP COMMISSIONING (1002)</b> 	<p>Start the setup for commissioning.</p> <p><b>Options:</b> YES NO</p> <p><b>Factory setting:</b> NO</p> <p> <b>Note!</b></p> <ul style="list-style-type: none"> <li>■ You will find the flowchart of the Setup menu on Page 24.</li> <li>■ For additional information on Setups, refer to the Operating Instructions for the Promass 84 (BA109D).</li> </ul>
<b>QUICK SETUP PULSATING FLOW (1003)</b> 	<p>Start the application-specific Setup menu for pulsating flow.</p> <p><b>Options:</b> YES NO</p> <p><b>Factory setting:</b> NO</p> <p> <b>Note!</b></p> <ul style="list-style-type: none"> <li>■ You will find the flowchart of the Setup menu on Page 26.</li> <li>■ For additional information on Setups, refer to the Operating Instructions for the Promass 84 (BA109D).</li> </ul>
<b>QUICK SETUP GAS MEASUREMENT (1004)</b> 	<p>Start the application-specific Setup menu for gas measurement.</p> <p><b>Options:</b> YES NO</p> <p><b>Factory setting:</b> NO</p> <p> <b>Note!</b></p> <ul style="list-style-type: none"> <li>■ You will find the flowchart of the Setup menu on Page 28.</li> <li>■ For additional information on Setups, refer to the Operating Instructions for the Promass 84 (BA109D).</li> </ul>

Function description	
QUICK SETUP	
<div><div><div>T-DAT SAVE/LOAD</div><div>(1009)</div><div></div></div></div>	<div><p>Use this function to save the parameter settings / configuration of the <b>transmitter</b> in a transmitter DAT (T-DAT), or to load the parameter settings from the T-DAT into the EEPROM (<b>manual</b> backup function).</p><p>Application examples:</p><ul style="list-style-type: none"><li>■ After commissioning, the current measuring point parameters can be saved to the T-DAT as a backup.</li><li>■ If the transmitter is replaced for some reason, the data from the T-DAT can be loaded into the new transmitter (EEPROM).</li></ul><p><b>Options:</b> CANCEL SAVE (from EEPROM to T-DAT) LOAD (from the T-DAT into EEPROM)</p><p><b>Factory setting:</b> CANCEL</p><p> Note!</p><ul style="list-style-type: none"><li>■ If the target device has an older software version, the message "TRANSM. SW-DAT" is displayed during startup. Then only the SAVE function is available.</li></ul><p>■ <b>LOAD</b> This function is only possible if the target device has the same software version as, or a more recent software version than, the source device.</p><p>■ <b>SAVE</b> This function is always available.</p></div>

## 5.1 Quick Setup

In the case of measuring devices without a local display, the individual parameters and functions must be configured via the configuration program, e.g. FieldCare.

If the measuring device is equipped with a local display, all the important device parameters for standard operation can be configured quickly and easily by means of the "Commissioning" Quick Setup menu.

- Quick Setup Commissioning, see below
- Quick Setup Pulsating Flow → Page 26
- Quick Setup Gas Measurement → Page 28

### 5.1.1 Quick Setup Commissioning


- ① The DELIVERY SETTING option sets every selected unit to the factory setting.  
The ACTUAL SETTING option accepts the units you previously configured.
- ② Only units not yet configured in the current Setup are offered for selection in each cycle. The unit for mass, volume and corrected volume is derived from the corresponding flow unit.
- ③ The YES option remains visible until all the units have been configured. NO is the only option displayed when no further units are available.
- ④ Only the outputs not yet configured in the current Setup are offered for selection in each cycle.
- ⑤ The YES option remains visible until all the outputs have been configured. NO is the only option displayed when no further outputs are available.
- ⑥ The "automatic parameterization of the display" option contains the following basic settings/factory settings:  
YES: Main line = Mass flow; Additional line = Totalizer 1; Information line = Operating/system conditions  
NO: The existing (selected) settings remain.
- ⑦ The DOUBLE PULS 90° or DOUBLE PULS 180° can only be selected for frequency/pulse output 2 and only if the PULSE operating mode was selected for frequency/pulse output 1.  
The frequency/pulse output 2 then works with the parameters selected by frequency/pulse output 1, but phase-shifted by 90° or 180°.



#### Note!

The display returns to the function QUICK SETUP COMMISSIONING (1002) if you press the  key combination during parameter interrogation. The stored parameters remain valid.




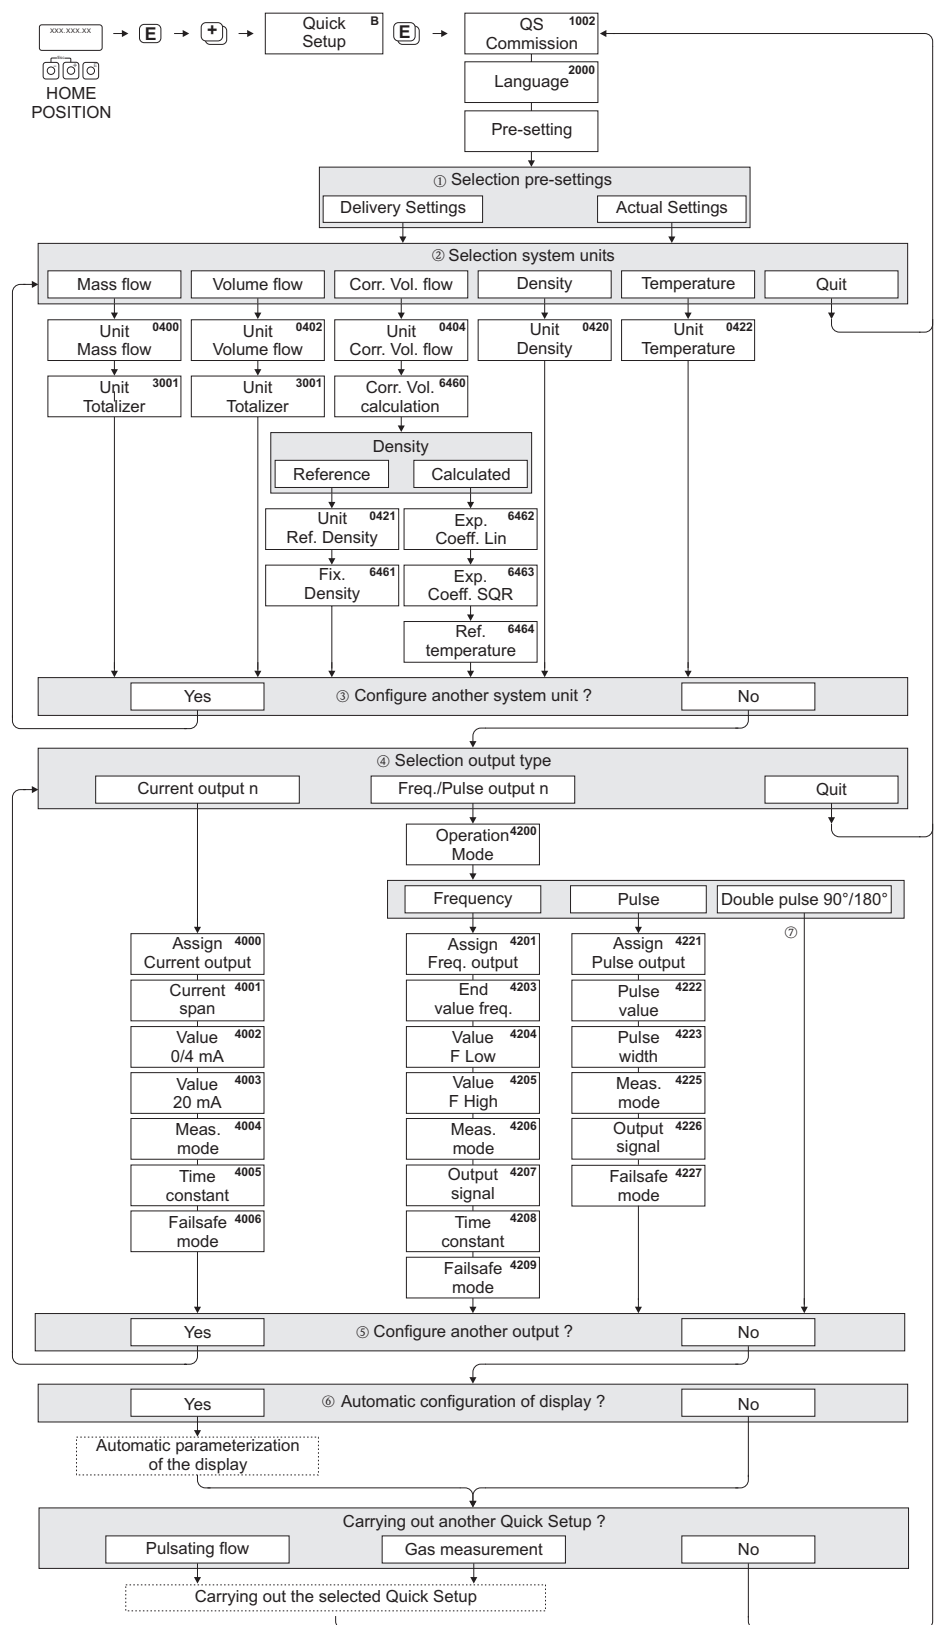

a0001786-en

Fig. 1: QUICK SETUP COMMISSIONING menu for straightforward configuration of the major device functions

### 5.1.2 Quick Setup Pulsating Flow

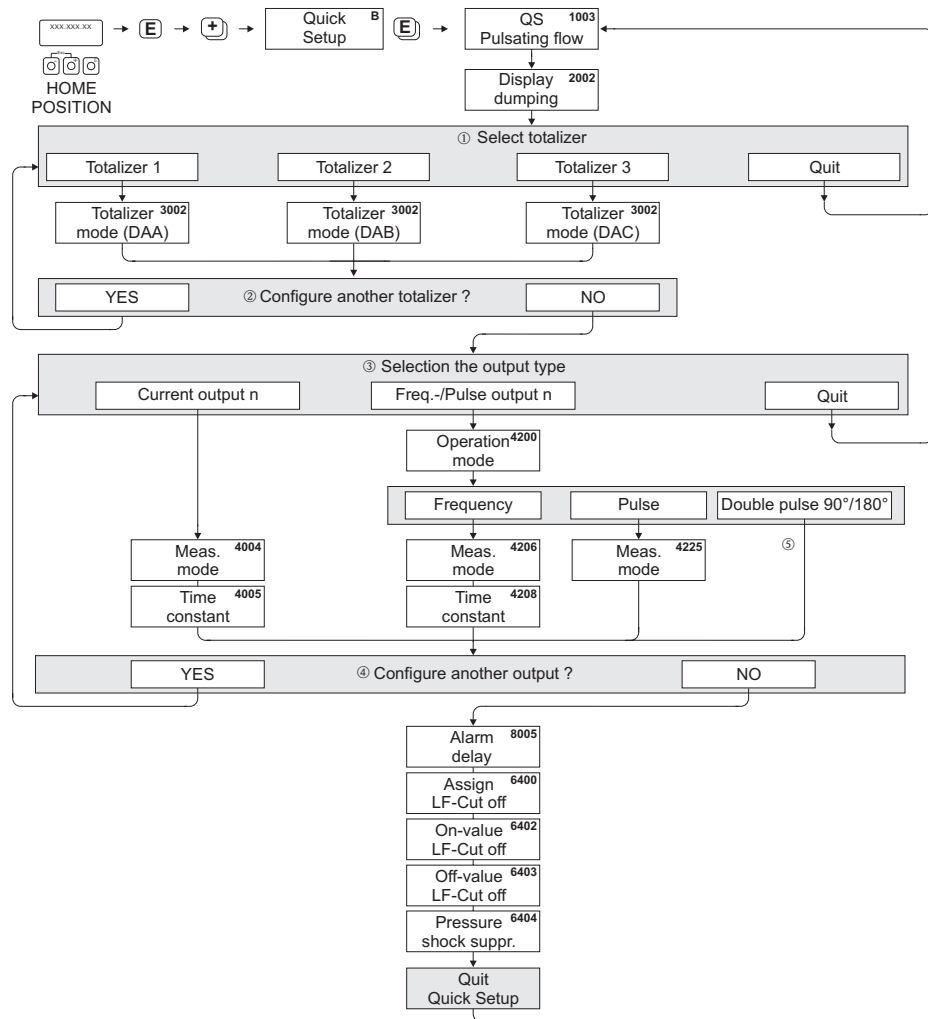

a0002131-en








Fig. 2: QUICK SETUP PULSATING FLOW menu for operation with severely pulsating flow. Recommended settings are found on the following page.

- ① Only totalizers not yet configured in the current Setup are offered for selection in each cycle.
- ② The YES option remains visible until all the totalizers have been configured. NO is the only option displayed when no further totalizers are available.
- ③ Only the outputs not yet configured in the current Quick Setup are offered for selection in each cycle.
- ④ The YES option remains visible until all the outputs have been configured. NO is the only option displayed when no further outputs are available.
- ⑤ The DOUBLE PULS 90° or DOUBLE PULS 180° can only be selected for frequency/pulse output 2 and only if the PULSE operating mode was selected for frequency/pulse output 1. The frequency/pulse output 2 then works with the parameters selected by frequency/pulse output 1, but phase-shifted by 90° or 180°.




#### Note!

- The display returns to the function QUICK SETUP PULSATING FLOW (1003) if you press the key combination during parameter interrogation. The stored parameters remain valid.
- You can call up this Setup menu either directly from the COMMISSIONING Setup menu or manually by means of the function QUICK SETUP PULSATING FLOW (1003).

Quick Setup Pulsating Flow		
HOME position →  → MEASURED VARIABLE (A) MEASURED VARIABLE →  → QUICK SETUP (B) QUICK SETUP →  → QS PULS. FLOW (1003)		
Function No.	Function name	Selection with (  )
1003	QS PULS. FLOW	YES After  is pressed by way of confirmation, the Quick Setup menu calls up all the subsequent functions in succession.
▼		
Basic configuration		
2002	DISPLAY DAMPING	1 s
3002	TOTALIZER MODE (DAA)	BALANCE (Totalizer 1)
3002	TOTALIZER MODE (DAB)	BALANCE (Totalizer 2)
3002	TOTALIZER MODE (DAC)	BALANCE (Totalizer 3)
Signal type for CURRENT OUTPUT 1 to n		
4004	MEASURING MODE	PULS. FLOW
4005	TIME CONSTANT	1 s
Signal type for FREQ./PULSE OUTPUT 1 to n (for FREQUENCY mode of operation)		
4206	MEASURING MODE	PULS. FLOW
4208	TIME CONSTANT	0 s
Signal type for FREQ./PULSE OUTPUT 1 to n (for PULSE mode of operation)		
4225	MEASURING MODE	PULS. FLOW
Other settings		
8005	ALARM DELAY	0 s
6400	ASSIGN LOW FLOW CUTOFF	MASS FLOW
6402	ON-VALUE LOW FLOW CUT OFF	Setting depends on diameter: DN 1 = 0.02 [kg/h] or [l/h] DN 2 = 0.10 [kg/h] or [l/h] DN 4 = 0.45 [kg/h] or [l/h] DN 8 = 2.0 [kg/h] or [l/h] DN 15 = 6.5 [kg/h] or [l/h] DN 25 = 18 [kg/h] or [l/h] DN 40 = 45 [kg/h] or [l/h] DN 50 = 70 [kg/h] or [l/h] DN 80 = 180 [kg/h] or [l/h] DN 100 = 350 [kg/h] or [l/h] DN 150 = 650 [kg/h] or [l/h] DN 250 = 1800 [kg/h] or [l/h]
6403	OFF-VALUE LOW FLOW CUTOFF	50%
6404	PRESSURE SHOCK SUPPRESSION	0 s
▼		
Back to the HOME position: → Press and hold down Esc key  for longer than three seconds or → Repeatedly press and release Esc key  → Exit the function matrix step by step		

### 5.1.3 Quick Setup Gas Measurement

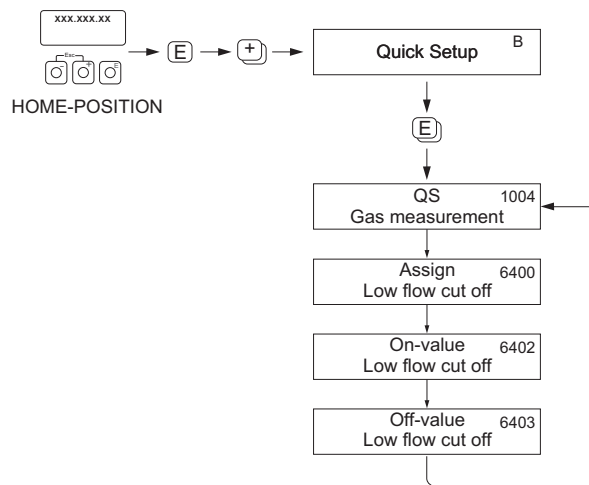

a0002502-en

Fig. 3: QUICK SETUP GAS MEASUREMENT menu

Quick Setup Gas Measurement		
HOME position →  → MEASURED VARIABLE (A)		
MEASURED VARIABLE →  → QUICK SETUP (B)		
QUICK SETUP →  → QS-GAS MEASUREMENT (1004)		
Function No.	Function name	Setting to be selected (  ) (to next function with  )
1004	QS GAS MEASUREMENT	YES After  is pressed by way of confirmation, the Quick Setup menu calls up all the subsequent functions in succession.
▼		
6400	ASSIGN LOW FLOW CUTOFF	On account of the low mass flow involved when gas flows are measured, it is advisable not use a low flow cutoff. Setting: OFF
6402	ON-VALUE LOW FLOW CUT OFF	If the ASSIGNMENT LOW FLOW CUTOFF function was not set to OFF, the following applies: Setting: 0.0000 [unit] User input: Flow rates for gas measurements are low, so the value for the switch-on point (= low flow cutoff) must be correspondingly low.
6403	OFF-VALUE LOW FLOW CUTOFF	If the ASSIGNMENT LOW FLOW CUTOFF function was not set to OFF, the following applies: Setting: 50% User input: Enter the switch-off point as a positive hysteresis in %, referenced to the switch-on point.
▼		
Back to the HOME position: → Press and hold down Esc key  for longer than three seconds or → Repeatedly press and release Esc key  → Exit the function matrix step by step		



#### Note!

Quick Setup automatically deactivates the function EMPTY PIPE DETECTION (6420) is automatically switched off by the Quick Setup.

## 5.2 Data back-up/transfer

You can use the T-DAT SAVE/LOAD function to transfer data (device parameters and settings) between the T-DAT (removable memory) and the EEPROM (device memory).


This is required for the following applications:

- Creating a backup: current data are transmitted from an EEPROM to the T-DAT.
- Replacing a transmitter: current data are copied from an EEPROM to the T-DAT, then transmitted to the EEPROM of the new transmitter.
- Duplicating data: current data are copied from an EEPROM to the T-DAT, then transmitted to EEPROMs of identical measuring points.



Note!

Installing and removing the T-DAT → Operating Instructions of the Promass 84 (BA109D)

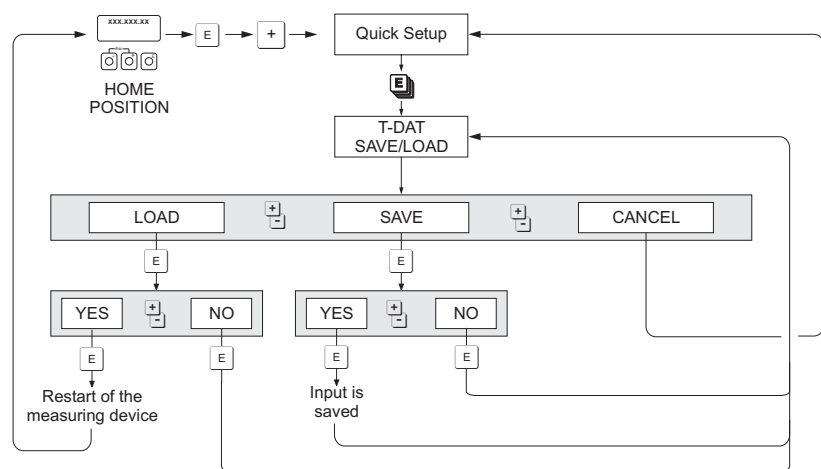

Data storage/transmission with T-DAT SAVE/LOAD

a0001221-en

Notes on the LOAD and SAVE options:

LOAD:

Data are transmitted from the T-DAT to the EEPROM.



Note!

- Previously saved settings on the EEPROM are deleted.
- This selection is available only if the T-DAT contains valid data.
- This selection can be made only if the software version of the T-DAT is the same or newer than that of the EEPROM. Otherwise, the error message "TRANSM. SW-DAT" appears after the restart and the LOAD function is subsequently no longer available.

SAVE:

Data are transmitted from the EEPROM to the T-DAT.

## 6 Block DISPLAY

Block	Groups	Function groups	Functions
USER INTERFACE (C)	OPERATION (CAA) P. 31	⇒	BASIC CONFIG. (200) P. 31 ⇒ LANGUAGE (2000) P. 31 ⇒ DISPLAY DAMPING (2002) P. 31 ⇒ CONTRAST LCD (2003) P. 31 ⇒ BACKLIGHT (2004) P. 32
			⇕
		⇕	UNLOCKING/LOCKING (202) P. 33 ⇒ ACCESS CODE (2020) P. 33 ⇒ DEFINE PRIVATE CODE (2021) P. 33 ⇒ STATUS ACCESS (2022) P. 33 ⇒ ACCESS CODE COUNTER (2023) P. 33
			⇕
	MAIN LINE (CCA) P. 35	⇒	OPERATION (204) P. 34 ⇒ TEST DISPLAY (2040) P. 34
			⇕
		⇕	CONFIGURATION (220) P. 35 ⇒ ASSIGN (2200) P. 35 ⇒ 100% VALUE (2201) P. 35 ⇒ FORMAT (2202) P. 36
			⇕
	ADDITIONAL LINE (CEA) P. 38	⇒	MULTIPLY (222) P. 37 ⇒ ASSIGN (2220) P. 37 ⇒ 100% VALUE (2221) P. 37 ⇒ FORMAT (2222) P. 37
			⇕
		⇕	CONFIGURATION (240) P. 38 ⇒ ASSIGN (2400) P. 38 ⇒ 100% VALUE (2401) P. 38 ⇒ FORMAT (2402) P. 39 ⇒ DISPLAY MODE (2403) P. 39
			⇕
	INFORMATION LINE (CGA) P. 42	⇒	MULTIPLY (242) P. 40 ⇒ ASSIGN (2420) P. 40 ⇒ 100% VALUE (2421) P. 41 ⇒ FORMAT (2422) P. 41 ⇒ DISPLAY MODE (2423) P. 41
			⇕
		⇕	CONFIGURATION (260) P. 42 ⇒ ASSIGN (2600) P. 42 ⇒ 100% VALUE (2601) P. 43 ⇒ FORMAT (2602) P. 43 ⇒ DISPLAY MODE (2603) P. 43
			⇕
		⇒	MULTIPLY (262) P. 44 ⇒ ASSIGN (2620) P. 44 ⇒ 100% VALUE (2621) P. 45 ⇒ FORMAT (2622) P. 45 ⇒ DISPLAY MODE (2623) P. 45
			⇕
		⇕	

## 6.1 Group CONTROL

### 6.1.1 Function group BASIC CONFIG.

USER INTERFACE C












CONTROL

CAA




BASIC CONFIGURATION 200







Function description DISPLAY → CONTROL → BASIC CONFIG.	
<b>LANGUAGE (2000)</b>  (only for NTEP, MC)	<p>For selecting the language for all texts, parameters and messages shown on the local display.</p> <p> <b>Note!</b> The displayed options depend on the available language group shown in the LANGUAGE GROUP ((8226) → Page 126) function.</p> <p><b>Options:</b> Language group WEST EU / USA: ENGLISH DEUTSCH FRANCAIS ESPANOL ITALIANO NEDERLANDS PORTUGUESE  Language group EAST EU / SCAND: ENGLISH NORSK SVENSKA SUOMI POLISH RUSSIAN CZECH  Language group ASIA: ENGLISH BAHASA INDONESIA JAPANESE (syllabary)  Language group CHINA: ENGLISH CHINESE</p> <p><b>Factory setting:</b> Country-dependent (Page 130)</p> <p> <b>Note!</b></p> <ul style="list-style-type: none"> <li>■ If you press the  keys simultaneously at startup, the language defaults to ENGLISH.</li> <li>■ You can change the language group via the configuration software FieldCare. Please do not hesitate to contact your Endress+Hauser sales office if you have any questions.</li> </ul>
<b>DISPLAY DAMPING (2002)</b>  (only for NTEP, MC)	<p>For entering a time constant which defines how the display reacts to severely fluctuating flow variables, either very quickly (enter a low time constant) or with damping (enter a high time constant).</p> <p><b>User input:</b> 0 to 100 seconds</p> <p><b>Factory setting:</b> 1 s</p> <p> <b>Note!</b> Setting the time constant to zero seconds switches off damping.</p>
<b>CONTRAST LCD (2003)</b>  (only for NTEP, MC)	<p>For adjusting the display contrast to suit local operating conditions.</p> <p><b>User input:</b> 10 to 100%</p> <p><b>Factory setting:</b> 50%</p>

<b>Function description</b> DISPLAY → CONTROL → BASIC CONFIG.	
<b>BACKLIGHT (2004)</b>  (only for NTEP, MC)	<p>For adjusting the backlight to suit local operating conditions.</p> <p><b>User input:</b> 0 to 100%</p> <p> <b>Note!</b> Entering the value 0 means that the backlight is switched off. The display then no longer emits any light, i.e. the display texts can no longer be read in the dark.</p> <p><b>Factory setting:</b> 50%</p>




## 6.1.2 Function group UNLOCKING/LOCKING



Function description	
USER INTERFACE → CONTROL → UNLOCKING/LOCKING	
<b>ACCESS CODE (2020)</b>	<p>All data of the measuring system are protected against inadvertent change. Programming is disabled and the settings cannot be changed until a code is entered in this function.</p> <p>If you press the  or  keys in any function, the measuring system automatically goes to this function and the prompt to enter the code appears on the display (when programming is disabled).</p> <p>You can enable programming by entering your personal code (Factory setting = <b>84</b>, see function DEFINE PRIVATE CODE (2021)).</p> <p>To set the measuring instrument to access-protection mode, enter the <b>custody code 8400</b> here. This locks all the functions that are marked with a keyhole symbol ().</p> <p><b>User input:</b> max. 4-digit number: 0 to 9999</p> <p> <b>Note!</b></p> <ul style="list-style-type: none"> <li>■ Programming is disabled if you do not press a key within 60 seconds following automatic return to the HOME position.</li> <li>■ You can also disable programming in this function by entering any number (other than the defined private code).</li> <li>■ The Endress+Hauser service organization can be of assistance if you mislay your personal code.</li> </ul>
<b>DEFINE PRIVATE CODE (2021)</b>  (only for NTEP, MC)	<p>For specifying a personal code for enabling programming in the function ACCESS CODE.</p> <p><b>User input:</b> 0 to 9999 (max. 4-digit number)</p> <p><b>Factory setting:</b> 84</p> <p> <b>Note!</b></p> <ul style="list-style-type: none"> <li>■ Programming is always enabled with the code 0.</li> <li>■ Programming has to be enabled before this code can be changed. When programming is disabled this function is not available, thus preventing others from accessing your personal code.</li> </ul>
<b>STATUS ACCESS (2022)</b>	<p>Indicates whether access to the function matrix is currently possible (ACCESS CUSTOMER) or whether configuration is locked (LOCKED).</p> <p><b>Display:</b> ACCESS CUSTOMER (parameterization possible) LOCKED (parameterization disabled)</p>
<b>ACCESS CODE COUNTER (2023)</b>	<p>Displays how often the customer code, service code or the digit "0" (code-free) has been entered to gain access to the function matrix.</p> <p><b>Display:</b> max. 7-digit number: 0 to 9999999</p> <p><b>Factory setting:</b> 0</p>


### 6.1.3 Function group OPERATION

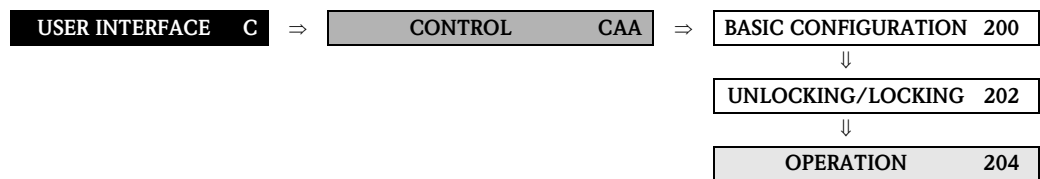







Function description USER INTERFACE → CONTROL → OPERATION	
<b>TEST DISPLAY (2040)</b>	<p>For testing the operability of the local display and its pixels.</p> <p><b>Options:</b> OFF ON</p> <p><b>Factory setting:</b> OFF</p> <p><b>Test sequence:</b></p> <ol style="list-style-type: none"> <li>1. Start the test by selecting ON.</li> <li>2. All pixels of the main line, additional line and information line are darkened for minimum 0.75 second.</li> <li>3. Main line, additional line and information line show an "8" in each field for minimum 0.75 seconds.</li> <li>4. Main line, additional line and information line show a "0" in each field for minimum 0.75 seconds.</li> <li>5. Main line, additional line and information line show nothing (blank display) for minimum 0.75 second.</li> </ol> <p>When the test is completed, the local display returns to its initial state and the setting changes to OFF.</p>

## 6.2 Group MAIN LINE

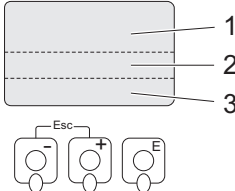
### 6.2.1 Function group CONFIGURATION



Function description	
USER INTERFACE → MAIN LINE → CONFIGURATION	
<div>1 = Main line 2 = Addition line 3 = Information line</div> <div></div> <div>A0001253</div>	
<div>ASSIGN (2200)</div> <div></div>	<p>For assigning a value to be displayed to the main line (top line in the local display). This value is displayed during normal operation.</p> <p><b>Options:</b> OFF MASS FLOW MASS FLOW IN % VOLUME FLOW VOLUME FLOW IN % CORRECTED VOLUME FLOW CORRECTED VOLUME FLOW IN % DENSITY REFERENCE DENSITY TEMPERATURE ACTUAL CURRENT ACTUAL VALUE FREQUENCY (1 to 2) TOTALIZER (1 to 3) CUSTODY TRANSFER</p> <p><b>Factory setting:</b> MASS FLOW</p>
<div>100% VALUE (2201)</div> <div></div>	<p> Note! This function is not available unless one of the following was selected in the ASSIGN function (2200):</p> <ul style="list-style-type: none"><li>■ MASS FLOW IN %</li><li>■ VOLUME FLOW IN %</li><li>■ CORRECTED VOLUME FLOW IN %</li></ul> <p>For specifying the value to be shown on the display as the 100% value.</p> <p><b>User input:</b> 5-digit floating-point number</p> <p><b>Factory setting:</b> depends on nominal diameter and country → Page 129 ff.</p>

<b>Function description</b> USER INTERFACE → MAIN LINE → CONFIGURATION	
<b>FORMAT (2202)</b> 	<p>Select the number of places after the decimal point displayed for the reading in the main line.</p> <p><b>Options:</b>            XXXXX, - XXXX.X - XXX.XX - XX.XXX -X.XXXX</p> <p><b>Factory setting:</b>            X.XXXX</p> <p> <b>Note!</b></p> <ul style="list-style-type: none"> <li>■ Note that this setting only affects the reading as it appears on the display, it has no influence on the accuracy of the system's calculations.</li> <li>■ The places after the decimal point as computed by the measuring device cannot always be displayed, depending on this setting and the engineering unit. In such instances an arrow appears on the display between the measuring value and the engineering unit (e.g. 1.2 → kg/h), indicating that the measuring system is computing with more decimal places than can be shown on the display.</li> </ul>


## 6.2.2 Function group MULTIPLEX

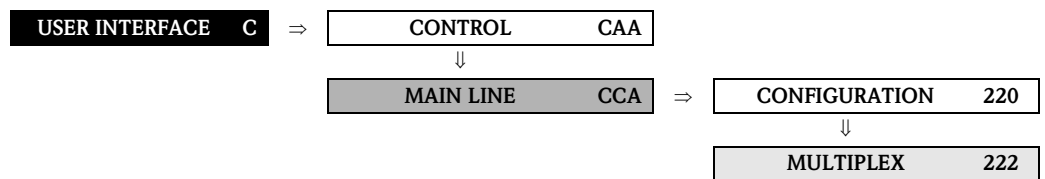



Function description USER INTERFACE → MAIN LINE → MULTIPLEX	
<b>ASSIGN (2220)</b> 	<p>For assigning a second reading to the main line, to be displayed in the main line alternately (every 10 seconds) with the value defined in the ASSIGN function (2200).</p> <p><b>Options:</b>            OFF            MASS FLOW            MASS FLOW IN %            VOLUME FLOW            VOLUME FLOW IN %            CORRECTED VOLUME FLOW            CORRECTED VOLUME FLOW IN %            DENSITY            REFERENCE DENSITY            TEMPERATURE            ACTUAL CURRENT            ACTUAL VALUE FREQUENCY (1 to 2)            TOTALIZER (1 to 3)            CUSTODY TRANSFER</p> <p><b>Factory setting:</b>            OFF</p>
<b>100% VALUE (2221)</b> 	<p> <b>Note!</b>            This function is not available unless one of the following was selected in the ASSIGN function (2220):</p> <ul style="list-style-type: none"> <li>■ MASS FLOW IN %</li> <li>■ VOLUME FLOW IN %</li> <li>■ CORRECTED VOLUME FLOW IN %</li> </ul> <p>For specifying the value to be shown on the display as the 100% value.</p> <p><b>User input:</b>            5-digit floating-point number</p> <p><b>Factory setting:</b>            depends on nominal diameter and country → Page 129 ff.</p>
<b>FORMAT (2222)</b> 	<p>Select the number of places after the decimal point displayed for the second reading in the main line.</p> <p><b>Options:</b>            XXXXX. - XXXX.X - XXX.XX - XX.XXX -X.XXXX</p> <p><b>Factory setting:</b>            X.XXXX</p> <p> <b>Note!</b></p> <ul style="list-style-type: none"> <li>■ Note that this setting only affects the reading as it appears on the display, it has no influence on the accuracy of the system's calculations.</li> <li>■ The places after the decimal point as computed by the measuring device cannot always be displayed, depending on this setting and the engineering unit. In such instances an arrow appears on the display between the measuring value and the engineering unit (e.g. 1.2 → kg/h), indicating that the measuring system is computing with more decimal places than can be shown on the display.</li> </ul>

## 6.3 Group ADDITION LINE


### 6.3.1 Function group CONFIGURATION

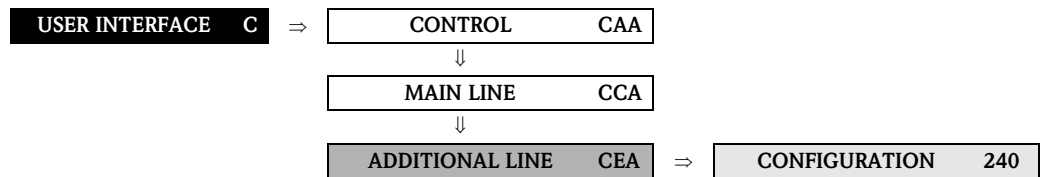

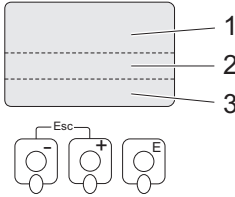Function description	
USER INTERFACE → ADDITION LINE → CONFIGURATION	
<p>1 = Main line 2 = Addition line 3 = Information line</p>  <p>A0001253</p>	
<p><b>ASSIGN (2400)</b></p> <p>①</p>	<p>For assigning a value to be displayed to the additional line (middle line in the local display). This value is displayed during normal operation.</p> <p><b>Options:</b>  OFF  MASS FLOW  MASS FLOW IN %  VOLUME FLOW  VOLUME FLOW IN %  CORRECTED VOLUME FLOW  CORRECTED VOLUME FLOW IN %  DENSITY  REFERENCE DENSITY  TEMPERATURE  MASS FLOW BARGRAPH IN %  VOLUME FLOW BARGRAPH IN %  CORRECTED VOLUME FLOW BARGRAPH IN %  ACTUAL CURRENT  ACTUAL VALUE FREQUENCY (1 to 2)  TOTALIZER (1 to 3)  TAG NAME  CUSTODY TRANSFER</p> <p><b>Factory setting:</b>  TOTALIZER 1</p>
<p><b>100% VALUE (2401)</b></p> <p>①</p>	<p> Note!</p> <p>This function is not available unless one of the following was selected in the ASSIGN function (2400):</p> <ul style="list-style-type: none"> <li>■ MASS FLOW IN %</li> <li>■ VOLUME FLOW IN %</li> <li>■ CORRECTED VOLUME FLOW IN %</li> <li>■ MASS FLOW BARGRAPH IN %</li> <li>■ VOLUME FLOW BARGRAPH IN %</li> <li>■ CORRECTED VOLUME FLOW BARGRAPH IN %</li> </ul> <p>For specifying the value to be shown on the display as the 100% value.</p> <p><b>User input:</b>  5-digit floating-point number</p> <p><b>Factory setting:</b>  depends on nominal diameter and country → Page 129 ff.</p>





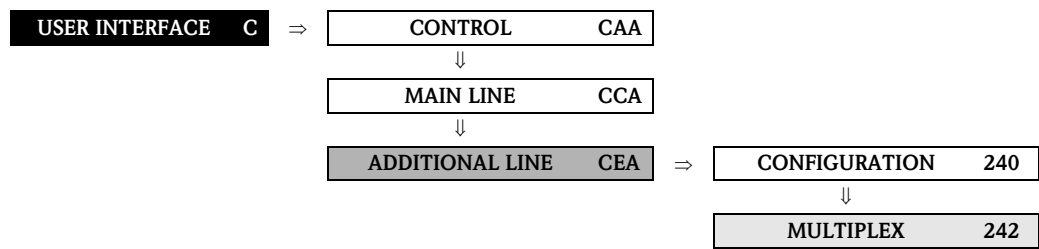




Function description	
USER INTERFACE → ADDITION LINE → CONFIGURATION	
<div>FORMAT</div> <div>(2402)</div> <div></div>	<div><div></div> Note!</div> <div>This function is not available unless a number was selected in the ASSIGN function (2400).</div> <div>Select the number of places after the decimal point displayed for the reading in the addition line.</div> <div><b>Options:</b> XXXXX. - XXXX.X - XXX.XX - XX.XXX -X.XXXX</div> <div><b>Factory setting:</b> X.XXXX</div> <div><div></div> Note!</div> <div><div>■</div> Note that this setting only affects the reading as it appears on the display, it has no influence on the accuracy of the system's calculations.</div> <div>■ The places after the decimal point as computed by the measuring device cannot always be displayed, depending on this setting and the engineering unit. In such instances an arrow appears on the display between the measuring value and the engineering unit (e.g. 1.2 → kg/h), indicating that the measuring system is computing with more decimal places than can be shown on the display.</div>

### 6.3.2 Function group MULTIPLEX




Function description	
USER INTERFACE → ADDITION LINE → MULTIPLEX	
<b>ASSIGN (2420)</b> 	<p>For assigning a second reading to the addition line, to be displayed in the addition line alternately (every 10 seconds) with the value defined in the ASSIGN function (2400).</p> <p><b>Options:</b>            OFF            MASS FLOW            MASS FLOW IN %            VOLUME FLOW            VOLUME FLOW IN %            CORRECTED VOLUME FLOW            CORRECTED VOLUME FLOW IN %            DENSITY            REFERENCE DENSITY            TEMPERATURE            MASS FLOW BARGRAPH IN %            VOLUME FLOW BARGRAPH IN %            CORRECTED VOLUME FLOW BARGRAPH IN %            ACTUAL CURRENT            ACTUAL VALUE FREQUENCY (1 to 2)            TOTALIZER (1 to 3)            TAG NAME            CUSTODY TRANSFER</p> <p><b>Factory setting:</b>            OFF</p> <p> <b>Note!</b>            Multiplex mode is suspended as soon as a fault / notice message is generated. The message in question appears on the display.</p> <ul style="list-style-type: none"> <li>■ Fault message (identified by a lightning icon):               <ul style="list-style-type: none"> <li>– If ON was selected in the ACKNOWLEDGE FAULTS (8004) function, multiplex mode is continued as soon as the fault has been acknowledged and is no longer active.</li> <li>– If OFF has been selected in the ACKNOWLEDGE FAULTS (8004) function, multiplex mode is continued as soon as the fault is no longer active.</li> </ul> </li> <li>■ Notice message (identified by an exclamation mark):               <ul style="list-style-type: none"> <li>– Multiplex mode is continued as soon as the notice message is no longer active.</li> </ul> </li> </ul>










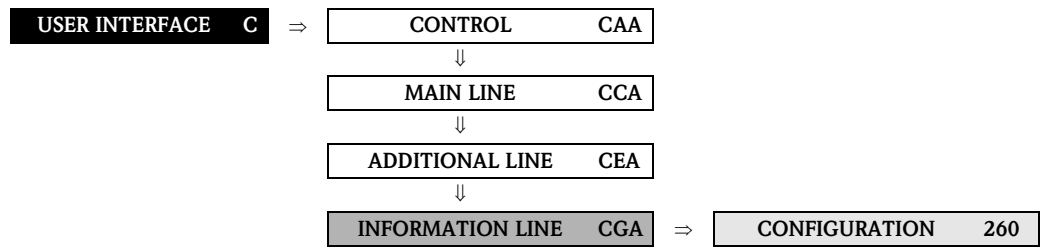

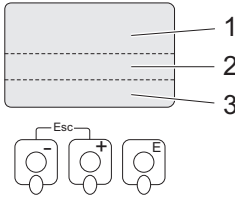
Function description	
USER INTERFACE → ADDITION LINE → MULTIPLEX	
<div>100% VALUE</div> <div>(2421)</div> <div></div>	<div> Note!</div> <div>This function is not available unless one of the following was selected in the ASSIGN function (2420):</div> <div><ul style="list-style-type: none"><li>■ MASS FLOW IN %</li><li>■ VOLUME FLOW IN %</li><li>■ CORRECTED VOLUME FLOW IN %</li><li>■ MASS FLOW BARGRAPH IN %</li><li>■ VOLUME FLOW BARGRAPH IN %</li><li>■ CORRECTED VOLUME FLOW BARGRAPH IN %</li></ul></div> <div>For specifying the value to be shown on the display as the 100% value.</div> <div><b>User input:</b> 5-digit floating-point number</div> <div><b>Factory setting:</b> depends on nominal diameter and country → Page 129 ff.</div>
<div>FORMAT</div> <div>(2422)</div> <div></div>	<div> Note!</div> <div>This function is not available unless a number was selected in the ASSIGN function (2420).</div> <div>Select the number of places after the decimal point displayed for the second reading in the addition line.</div> <div><b>Options:</b> XXXXX. - XXXX.X - XXX.XX - XX.XXX -X.XXXX</div> <div><b>Factory setting:</b> X.XXXX</div> <div> Note!</div> <div><ul style="list-style-type: none"><li>■ Note that this setting only affects the reading as it appears on the display, it has no influence on the accuracy of the system's calculations.</li><li>■ The places after the decimal point as computed by the measuring device cannot always be displayed, depending on this setting and the engineering unit. In such instances an arrow appears on the display between the measuring value and the engineering unit (e.g. 1.2 → kg/h), indicating that the measuring system is computing with more decimal places than can be shown on the display.</li></ul></div>
<div>DISPLAY MODE</div> <div>(2423)</div> <div></div>	<div> Note!</div> <div>This function is not available unless one of the following was selected in the ASSIGN function (2420):</div> <div><ul style="list-style-type: none"><li>■ MASS FLOW BARGRAPH IN %</li><li>■ VOLUME FLOW BARGRAPH IN %</li><li>■ CORRECTED VOLUME FLOW BARGRAPH IN %</li></ul></div> <div>Use this function to define the format of the bar graph.</div> <div><b>Options:</b> STANDARD Simple bar graph with 25 / 50 / 75% gradations and integrated sign.</div> <div></div> <div><div>A0001258</div></div> <div><b>SYMMETRY</b> Symmetrical bar graph for positive and negative directions of flow, with -50 / 0 / +50% gradations and integrated sign..</div> <div></div> <div><div>A0001259</div></div> <div><b>Factory setting:</b> STANDARD</div>

## 6.4 Group INFORMATION LINE


### 6.4.1 Function group CONFIGURATION









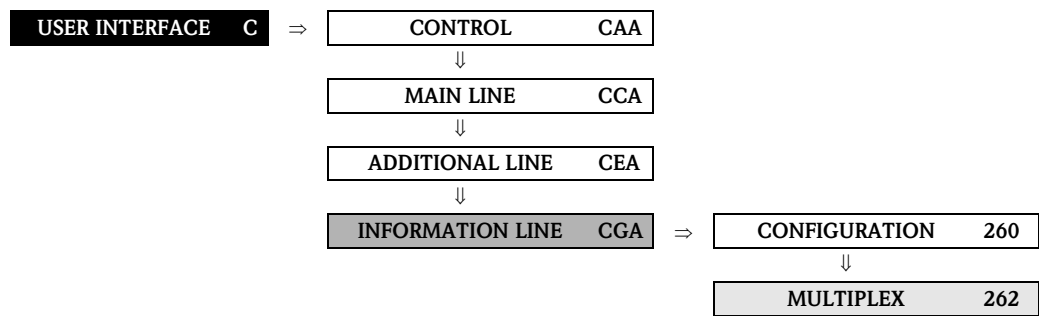


Function description	
USER INTERFACE → INFORMATION LINE → CONFIGURATION	
<p>1 = Main line 2 = Addition line 3 = Information line</p> 	A0001253
<p><b>ASSIGN</b> <b>(2600)</b></p> <p>①</p>	<p>For assigning a value to be displayed to the information line (bottom line in the local display). This value is displayed during normal operation.</p> <p><b>Options:</b>  OFF  MASS FLOW  MASS FLOW IN %  VOLUME FLOW  VOLUME FLOW IN %  CORRECTED VOLUME FLOW  CORRECTED VOLUME FLOW IN %  DENSITY  REFERENCE DENSITY  TEMPERATURE  MASS FLOW BARGRAPH IN %  VOLUME FLOW BARGRAPH IN %  CORRECTED VOLUME FLOW BARGRAPH IN %  ACTUAL CURRENT  ACTUAL VALUE FREQUENCY (1 to 2)  TOTALIZER (1 to 3)  TAG NAME  OPERATING/SYSTEM CONDITIONS  FLOW DIRECTION READING  CUSTODY TRANSFER</p> <p><b>Factory setting:</b>  OPERATING/SYSTEM CONDITIONS</p>

Function description	
USER INTERFACE → INFORMATION LINE → CONFIGURATION	
<div>100% VALUE</div> <div>(2601)</div> <div></div>	<div> Note!</div> <div>This function is not available unless one of the following was selected in the ASSIGN function (2600):</div> <div><ul style="list-style-type: none"><li>■ MASS FLOW IN %</li><li>■ VOLUME FLOW IN %</li><li>■ CORRECTED VOLUME FLOW IN %</li><li>■ MASS FLOW BARGRAPH IN %</li><li>■ VOLUME FLOW BARGRAPH IN %</li><li>■ CORRECTED VOLUME FLOW BARGRAPH IN %</li></ul></div> <div>For specifying the value to be shown on the display as the 100% value.</div> <div><b>User input:</b> 5-digit floating-point number</div> <div><b>Factory setting:</b> depends on nominal diameter and country → Page 129 ff.</div>
<div>FORMAT</div> <div>(2602)</div> <div></div>	<div> Note!</div> <div>This function is not available unless a number was selected in the ASSIGN function (2600).</div> <div>Select the number of places after the decimal point displayed for the reading in the information line.</div> <div><b>Options:</b> XXXXX. - XXXX.X - XXX.XX - XX.XXX -X.XXXX</div> <div><b>Factory setting:</b> X.XXXX</div> <div> Note!</div> <div><ul style="list-style-type: none"><li>■ Note that this setting only affects the reading as it appears on the display, it has no influence on the accuracy of the system's calculations.</li><li>■ The places after the decimal point as computed by the measuring device cannot always be displayed, depending on this setting and the engineering unit. In such instances an arrow appears on the display between the measuring value and the engineering unit (e.g. 1.2 → kg/h), indicating that the measuring system is computing with more decimal places than can be shown on the display.</li></ul></div>
<div>DISPLAY MODE</div> <div>(2603)</div> <div></div>	<div> Note!</div> <div>This function is not available unless one of the following was selected in the ASSIGN (2600) function:</div> <div><ul style="list-style-type: none"><li>■ MASS FLOW BARGRAPH IN %</li><li>■ VOLUME FLOW BARGRAPH IN %</li><li>■ CORRECTED VOLUME FLOW BARGRAPH IN %</li></ul></div> <div>Use this function to define the format of the bar graph.</div> <div><b>Options:</b> STANDARD Simple bar graph with 25 / 50 / 75% gradations and integrated sign.</div> <div></div> <div><div>A0001258</div></div> <div><b>SYMMETRY</b> Symmetrical bar graph for positive and negative directions of flow, with -50 / 0 / +50% gradations and integrated sign..</div> <div></div> <div><div>A0001259</div></div> <div><b>Factory setting:</b> STANDARD</div>


## 6.4.2 Function group MULTIPLEX



Function description	
USER INTERFACE → INFORMATION LINE → MULTIPLEX	
<b>ASSIGN (2620)</b> 	<p>For assigning a second reading to the information line, to be displayed in the information line alternately (every 10 seconds) with the value defined in the ASSIGN function (2600).</p> <p><b>Options:</b>  OFF  MASS FLOW  MASS FLOW IN %  VOLUME FLOW  VOLUME FLOW IN %  CORRECTED VOLUME FLOW  CORRECTED VOLUME FLOW IN %  DENSITY  REFERENCE DENSITY  TEMPERATURE  MASS FLOW BARGRAPH IN %  VOLUME FLOW BARGRAPH IN %  CORRECTED VOLUME FLOW BARGRAPH IN %  ACTUAL CURRENT  ACTUAL VALUE FREQUENCY (1 to 2)  TOTALIZER (1 to 3)  TAG NAME  OPERATING/SYSTEM CONDITIONS  FLOW DIRECTION READING  CUSTODY TRANSFER</p> <p><b>Factory setting:</b>  OFF</p> <p> <b>Note!</b>  Multiplex mode is suspended as soon as a fault / notice message is generated. The message in question appears on the display.</p> <ul style="list-style-type: none"> <li>■ Fault message (identified by a lightning icon): <ul style="list-style-type: none"> <li>– If ON was selected in the ACKNOWLEDGE FAULTS (8004) function, multiplex mode is continued as soon as the fault has been acknowledged and is no longer active.</li> <li>– If OFF has been selected in the ACKNOWLEDGE FAULTS (8004) function, multiplex mode is continued as soon as the fault is no longer active.</li> </ul> </li> <li>■ Notice message (identified by an exclamation mark): <ul style="list-style-type: none"> <li>– Multiplex mode is continued as soon as the notice message is no longer active.</li> </ul> </li> </ul>


Function description	
USER INTERFACE → INFORMATION LINE → MULTIPLEX	
<div>100% VALUE</div> <div>(2621)</div> <div></div>	<div> Note!</div> <div>This function is not available unless one of the following was selected in the ASSIGN function (2620):</div> <div><ul style="list-style-type: none"><li>■ MASS FLOW IN %</li><li>■ VOLUME FLOW IN %</li><li>■ CORRECTED VOLUME FLOW IN %</li><li>■ MASS FLOW BARGRAPH IN %</li><li>■ VOLUME FLOW BARGRAPH IN %</li><li>■ CORRECTED VOLUME FLOW BARGRAPH IN %</li></ul></div> <div>For specifying the value to be shown on the display as the 100% value.</div> <div><b>User input:</b> 5-digit floating-point number</div> <div><b>Factory setting:</b> depends on nominal diameter and country → Page 129 ff.</div>
<div>FORMAT</div> <div>(2622)</div> <div></div>	<div> Note!</div> <div>This function is not available unless a number was selected in the ASSIGN function (2620).</div> <div>Select the number of places after the decimal point displayed for the second reading in the information line.</div> <div><b>Options:</b> XXXXX. - XXXX.X - XXX.XX - XX.XXX -X.XXXX</div> <div><b>Factory setting:</b> X.XXXX</div> <div> Note!</div> <div><ul style="list-style-type: none"><li>■ Note that this setting only affects the reading as it appears on the display, it has no influence on the accuracy of the system's calculations.</li><li>■ The places after the decimal point as computed by the measuring device cannot always be displayed, depending on this setting and the engineering unit. In such instances an arrow appears on the display between the measuring value and the engineering unit (e.g. 1.2 → kg/h), indicating that the measuring system is computing with more decimal places than can be shown on the display.</li></ul></div>
<div>DISPLAY MODE</div> <div>(2623)</div> <div></div>	<div> Note!</div> <div>This function is not available unless one of the following was selected in the ASSIGN function (2620):</div> <div><ul style="list-style-type: none"><li>■ MASS FLOW BARGRAPH IN %</li><li>■ VOLUME FLOW BARGRAPH IN %</li><li>■ CORRECTED VOLUME FLOW BARGRAPH IN %</li></ul></div> <div>Use this function to define the format of the bar graph.</div> <div><b>Options:</b> STANDARD Simple bar graph with 25 / 50 / 75% gradations and integrated sign.</div> <div></div> <div><div>A0001258</div></div> <div><b>SYMMETRY</b> Symmetrical bar graph for positive and negative directions of flow, with -50 / 0 / +50% gradations and integrated sign..</div> <div></div> <div><div>A0001259</div></div> <div><b>Factory setting:</b> STANDARD</div>

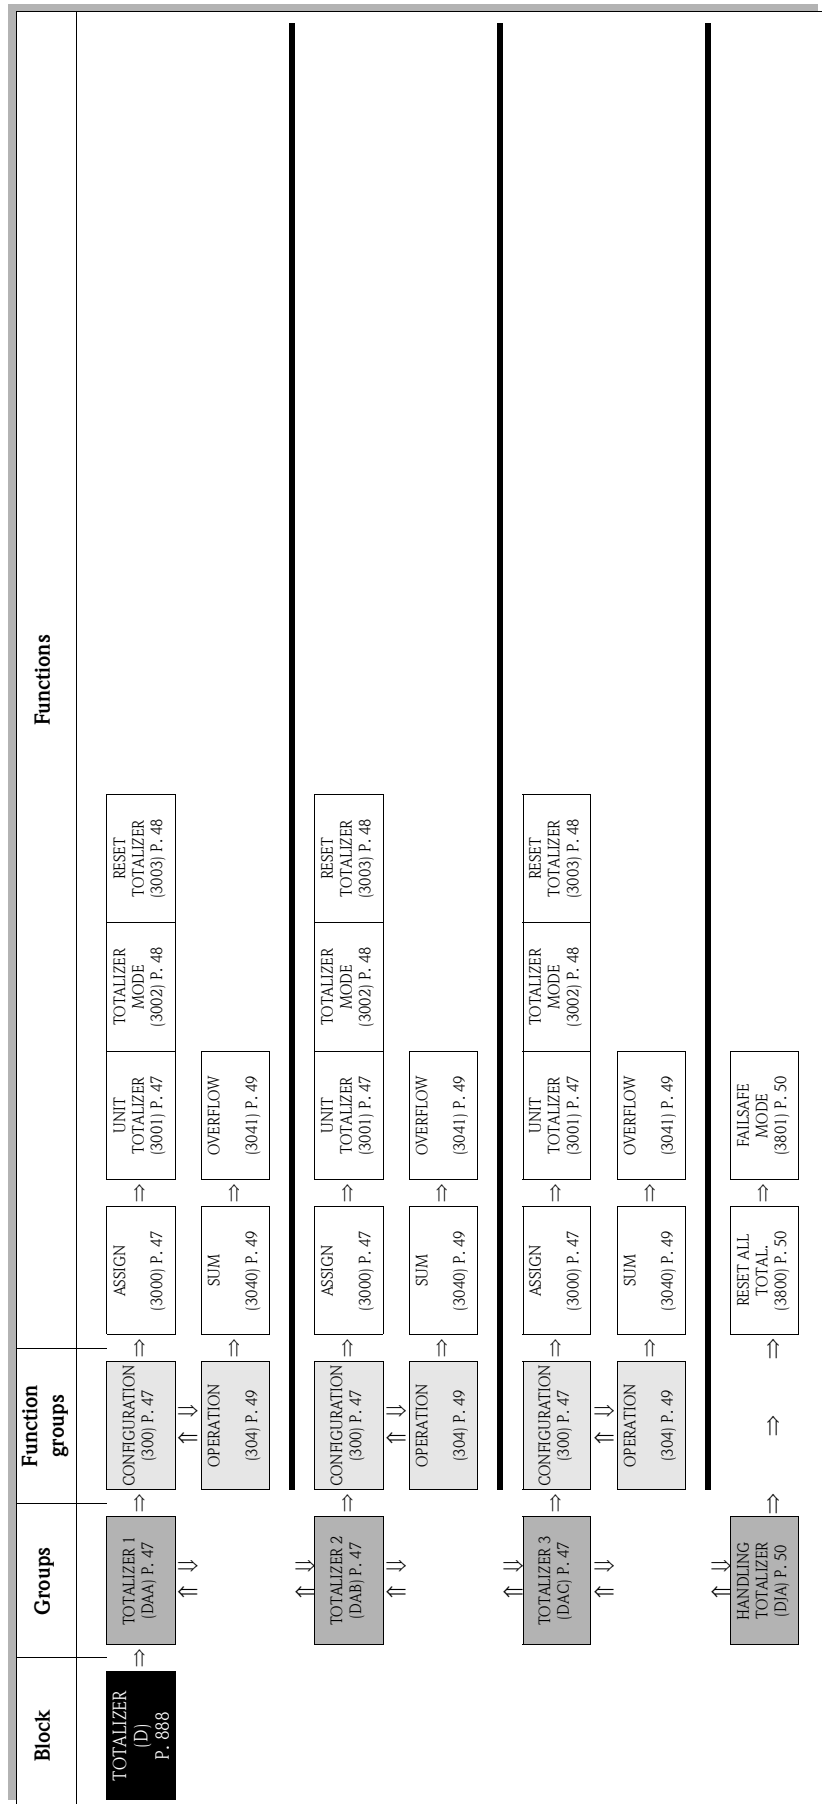


## 7 Block TOTALIZER





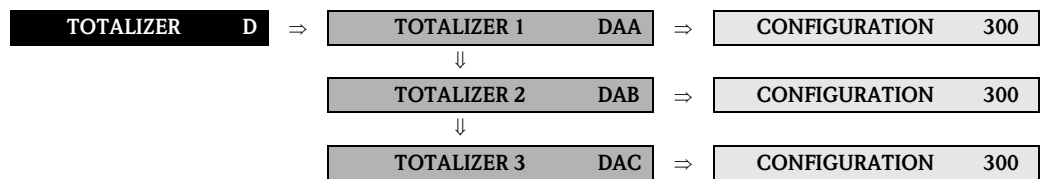


## 7.1 Group TOTALIZER (1 to 3)

### 7.1.1 Function group CONFIGURATION





Function description	
TOTALIZER → TOTALIZER (1 to 3) → CONFIGURATION	
The function descriptions below apply to totalizers 1 to 3; the totalizers are independently configurable.	
<b>ASSIGN (3000)</b> 	<p>For assigning a measured variable to the totalizer in question.</p> <p><b>Options (standard):</b>  OFF  MASS FLOW  VOLUME FLOW  CORRECTED VOLUME FLOW</p> <p><b>Factory setting:</b>  MASS FLOW</p> <p> <b>Note!</b></p> <ul style="list-style-type: none"> <li>■ This function <b>cannot</b> be changed if: <ul style="list-style-type: none"> <li>– The measuring device has been configured in accordance with NTEP or MC approval.</li> <li>– The measuring device has been configured in accordance with PTB, NMi, METAS or BEV approval and YES has been selected for the available functions Z006 to Z008 in the CUSTODY TRANSFER block.</li> </ul> </li> <li>■ The totalizer is reset to 0 as soon as the selection is changed.</li> <li>■ If you select OFF in the function group of the totalizer in question, only the ASSIGN (ASSIGN(3000)) function remains visible.</li> </ul>
<b>UNIT TOTALIZER (3001)</b> 	<p>For selecting the unit for the measured variable assigned in the function ASSIGN (3000).</p> <p><b>Options:</b> for the MASS FLOW assignment  Metric → g; kg; t  US → oz; lb; ton  Arbitrary unit → _ _ _ _</p> <p><b>Factory setting:</b>  kg</p> <p><b>Options:</b> for the VOLUME FLOW assignment  Metric → cm<sup>3</sup>; dm<sup>3</sup>; m<sup>3</sup>; ml; l; hl; Ml Mega  US → cc; af; ft<sup>3</sup>; oz f; gal; Kgal; Mgal; bbl (normal fluids); bbl (beer); bbl (petrochemicals); bbl (filling tanks)  Imperial → gal; Mgal; bbl (beer); bbl (petrochemicals)  Arbitrary unit → _ _ _ _</p> <p><b>Factory setting:</b>  m<sup>3</sup></p> <p>(continued on next page)</p>

<b>Function description</b> TOTALIZER → TOTALIZER (1 to 3) → CONFIGURATION	
<b>UNIT TOTALIZER</b> (continued)	<p><b>Options:</b> for the CORRECTED VOLUME FLOW assignment  Metric → Nl; Nm<sup>3</sup>  US → Sm<sup>3</sup>; Scf</p> <p><b>Factory setting:</b>  Nm<sup>3</sup></p> <p> <b>Note!</b>  This function <b>cannot</b> be changed if:</p> <ul style="list-style-type: none"> <li>■ The measuring device has been configured in accordance with NTEP or MC approval.</li> <li>■ The measuring device has been configured in accordance with PTB, NMI, METAS or BEV approval and YES has been selected for the available functions Z006 to Z008 in the CUSTODY TRANSFER block.</li> </ul>
<b>TOTALIZER MODE</b> <b>(3002)</b> 	<p>For selecting how the totalizer should operate.</p> <p><b>Options:</b>  BALANCE  Positive and negative flow components. The positive and negative flow components are balanced. In other words, net flow in the flow direction is registered.</p> <p>FORWARD  Only positive flow components</p> <p>REVERSE  Only negative flow components</p> <p><b>Factory setting:</b>  Totalizer 1 = BALANCE  Totalizer 2 = FORWARD  Totalizer 3 = REVERSE</p> <p> <b>Note!</b>  This function <b>cannot</b> be changed if:</p> <ul style="list-style-type: none"> <li>■ The measuring device has been configured in accordance with NTEP or MC approval.</li> <li>■ The measuring device has been configured in accordance with PTB, NMI, METAS or BEV approval and YES has been selected for the available functions Z006 to Z008 in the CUSTODY TRANSFER block.</li> </ul>
<b>RESET TOTALIZER</b> <b>(3003)</b> 	<p>Resets the total and the overflow of the totalizer to zero.</p> <p><b>Options:</b>  NO  YES</p> <p><b>Factory setting:</b>  NO</p> <p> <b>Note!</b></p> <ul style="list-style-type: none"> <li>■ This function <b>cannot</b> be changed if: <ul style="list-style-type: none"> <li>– The measuring device has been configured in accordance with NTEP or MC approval.</li> <li>– The measuring device has been configured in accordance with PTB, NMI, METAS or BEV approval and YES has been selected for the available functions Z006 to Z008 in the CUSTODY TRANSFER block.</li> </ul> </li> <li>■ If the measuring instrument is equipped with a status input, with the appropriate configuration a reset for each individual totalizer can also be triggered by a pulse (see the function ASSIGN STATUS INPUT (5000) on Page 100).</li> </ul>




## 7.1.2 Function group OPERATION

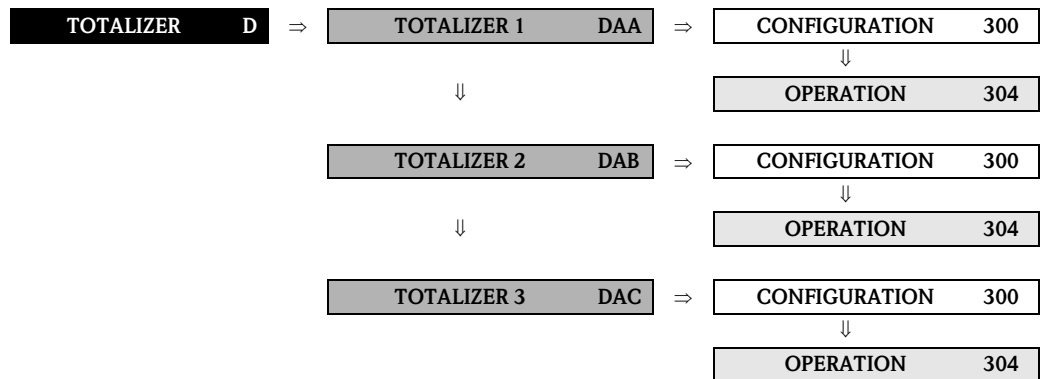

Function description	
TOTALIZER → TOTALIZER (1 to 3) → OPERATION	
The function descriptions below apply to totalizers 1 to 3; the totalizers are independently configurable.	
<b>SUM (3040)</b>	<p>Displays the total for the totalizer's measured variable aggregated since measuring began. The value can be positive or negative, depending on the setting selected in the function TOTALIZER MODE (3002), and the direction of flow.</p> <p><b>Display:</b> max. 7-digit floating-point number, including sign and unit (e.g. 15467.04 m<sup>3</sup>; -4925.631 kg)</p> <p> <b>Note!</b></p> <ul style="list-style-type: none"> <li>■ The effect of the setting in the TOTALIZER MODE function (see Page 48) is as follows: <ul style="list-style-type: none"> <li>– If the setting is BALANCE, the totalizer balances flow in the positive and negative directions.</li> <li>– If the setting is FORWARD, the totalizer registers only flow in the positive direction.</li> <li>– If the setting is REVERSE, the totalizer registers only flow in the negative direction.</li> </ul> </li> <li>■ The totalizer's response to faults is defined in the FAILSAFE MODE (3801) function (see Page 50).</li> </ul>
<b>OVERFLOW (3041)</b>	<p>Displays the total for the totalizer's overflow aggregated since measuring began.</p> <p>Total flow quantity is represented by a floating-point number consisting of max. 7 digits. You can use this function to view higher numerical values (&gt;9,999,999) as overflows. The effective quantity is thus the total of OVERFLOW plus the value returned by the SUM function.</p> <p>Example: Reading for 2 overflows: <math>2 \cdot 10^7</math> kg (= 20,000,000 kg) The value displayed in the function SUM = 196,845.7 kg Effective total quantity = 20,196,845.7 kg</p> <p><b>Display:</b> integer with exponent, including sign and unit, e.g. <math>2 \cdot 10^7</math> kg</p>

## 7.2 Group HANDLING TOTAL.

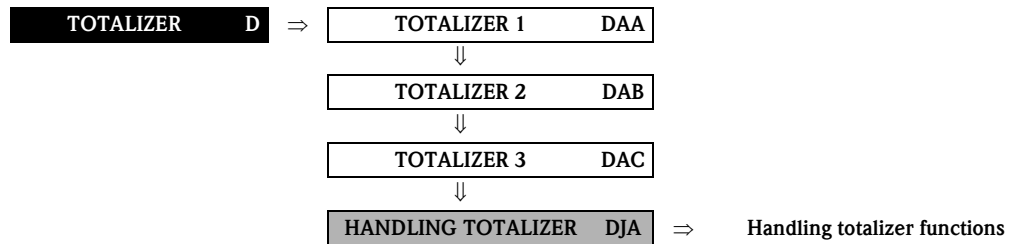


Function description TOTALIZER → HANDLING TOTAL. → Handling totalizer functions	
<b>RESET ALL TOTALIZERS (3800)</b> 	<p>Resets the totals and the overflows of all totalizers to zero.</p> <p><b>Options:</b> NO YES</p> <p><b>Factory setting:</b> NO</p> <p> Note!</p> <ul style="list-style-type: none"> <li>■ This function <b>cannot</b> be changed if:             <ul style="list-style-type: none"> <li>– The measuring device has been configured in accordance with NTEP or MC approval.</li> <li>– The measuring device has been configured in accordance with PTB, NMi, METAS or BEV approval and YES has been selected for the available functions Z006 to Z008 in the CUSTODY TRANSFER block.</li> </ul> </li> <li>■ If the measuring instrument has a status input and if it is appropriately configured, a reset for the totalizer (1 to 3) can also be triggered by a pulse (see the ASSIGN STATUS INPUT function ((5000) on → Page 100).</li> </ul>
<b>FAILSAFE MODE (3801)</b> 	<p>Use this function to define the common response of all totalizers (1 to 3) in case of error.</p> <p><b>Options:</b> STOP The totalizer is paused until the fault is rectified.</p> <p>ACTUAL VALUE The totalizer continues to count based on the current flow measuring value. The fault is ignored.</p> <p>HOLD VALUE The totalizer continues to count the flow that based on the last valid flow value (before the fault occurred).</p> <p><b>Factory setting:</b> STOP</p> <p> Note!</p> <p>This function <b>cannot</b> be changed if:</p> <ul style="list-style-type: none"> <li>■ The measuring device has been configured in accordance with NTEP or MC approval.</li> <li>■ The measuring device has been configured in accordance with PTB, NMi, METAS or BEV approval and YES has been selected for the available functions Z006 to Z008 in the CUSTODY TRANSFER block.</li> </ul>



## 8 Block OUTPUTS





Block	Groups	Function groups	Functions									
OUTPUTS (E)	CURRENT OUTPUT 1 to 2 (EAA, EAB) P. 52	⇒	CONFIGURATION (400) P. 52	⇒	ASSIGN CURRENT (4000) P. 52	⇒	CURRENT SPAN (4001) P. 53	VALUE 0...4 mA (4002) P. 54	VALUE 20 mA (4003) P. 56	MEASURING MODE (4004) P. 56	TIME CONSTANT (4005) P. 59	FAILSAFE MODE (4006) P. 60
			↑ ↓	↑ ↓	↑ ↓	↑ ↓	SIMULATION CURRENT (4041) P. 61	VALUE SIMUL. CURRENT (4042) P. 61				
		⇒	OPERATION (404) P. 61	⇒	ACTUAL CURRENT (4040) P. 61	⇒						
			↑ ↓	↑ ↓	↑ ↓	↑ ↓	TERMINAL NUMBER (4080) P. 62					
	PUL./FREQ. 1 to 2 (ECA, ECB) P. 63	⇒	CONFIGURATION (420) P. 63	⇒	MODE OF OPERATION (4200) P. 63	⇒	ASSIGN FREQUENCY (4201) P. 64	START VALUE FREQUENCY (4202) P. 64	END VALUE FREQUENCY (4203) P. 65	VALUE f MIN (4204) P. 65	VALUE f HIGH (4205) P. 66	MEASURING MODE (4206) P. 67
			↑ ↓	↑ ↓	↑ ↓	↑ ↓						TIME CONSTANT (4208) P. 71
		⇒										OUTPUT SIGNAL (4207) P. 69
												FAILSAFE MODE (4209) P. 72
		⇒										
		⇒										
		⇒										
		⇒										
	RELAY OUTPUT (EGA) P. 89	⇒	CONFIGURATION (470) P. 89	⇒	ASSIGN RELAY (4700) P. 89	⇒	ON-VALUE (4701) P. 90	SWITCH-ON DELAY (4702) P. 90	OFF VALUE (4703) P. 90	SWITCH-OFF DELAY (4704) P. 91	MEASURING MODE (4705) P. 91	TIME CONSTANT (4706) P. 92
			↑ ↓	↑ ↓	↑ ↓	↑ ↓	VALUE SIM. SWITCH POINT (4742) P. 94					
		⇒	OPERATION (474) P. 93	⇒	ACTUAL STATUS RELAY (4740) P. 93	⇒						
			↑ ↓	↑ ↓	↑ ↓	↑ ↓	TERMINAL NUMBER (4780) P. 95					

## 8.1 Group CURRENT OUTPUT 1 to 2





### 8.1.1 Function group CONFIGURATION








Function description	
OUTPUTS → CURRENT OUTPUT 1 to 2 → CONFIGURATION	
<b>ASSIGN CURRENT OUTPUT (4000)</b> 	<p>For assigning a measured variable to the current output.</p> <p><b>Options:</b>  OFF  MASS FLOW  VOLUME FLOW  CORRECTED VOLUME FLOW  DENSITY  REFERENCE DENSITY  TEMPERATURE</p> <p><b>Factory setting:</b>  MASS FLOW</p> <p> <b>Note!</b></p> <ul style="list-style-type: none"> <li>■ This function <b>cannot</b> be changed if: <ul style="list-style-type: none"> <li>– The measuring device has been configured in accordance with NTEP or MC approval.</li> <li>– The measuring device has been configured in accordance with PTB, NMI, METAS or BEV approval and YES has been selected for function Z003 in the CUSTODY TRANSFER block.</li> </ul> </li> <li>■ If you select OFF, the only function shown in the CONFIGURATION function group is this function, in other words ASSIGN CURRENT OUTPUT (4000).</li> </ul>

Function description																																													
OUTPUTS → CURRENT OUTPUT 1 to 2 → CONFIGURATION																																													
<div>CURRENT SPAN (4001)</div> <div></div>	<div>For selecting the current span. The selection specifies the operational range and the lower and upper signal on alarm. For the current output 1 the option HART can be defined additionally.</div> <div><b>Options:</b> 0–20 mA 4–20 mA 4–20 mA HART 4–20 mA NAMUR 4–20 mA HART NAMUR 4–20 mA US 4–20 mA HART US 0–20 mA (25 mA) 4–20 mA (25 mA) 4–20 mA (25 mA) HART</div> <div><b>Factory setting:</b> Country-specific 4–20 mA HART NAMUR or 4–20 mA HART US (for current output 1) 4–20 mA NAMUR or 4–20 mA US (for all other current outputs)</div> <div> Note!</div> <div><ul style="list-style-type: none"><li>■ This function <b>cannot</b> be changed if:<ul style="list-style-type: none"><li>– The measuring device has been configured in accordance with NTEP or MC approval.</li><li>– The measuring device has been configured in accordance with PTB, NMI, METAS or BEV approval and YES has been selected for function Z003 in the CUSTODY TRANSFER block.</li></ul></li><li>■ The option HART is only supported by the current output designated as current output 1 in the device software (terminals 26 and 27, see function (4080) ( → Page 62) on TERMINAL NUMBER).</li><li>■ When switching the hardware from an active (factory setting) to a passive output signal select a current span of 4–20 mA.</li></ul></div> <div><b>Current span, operational range and signal on alarm level</b></div> <div></div> <div><table><tr><th>a</th><th>1</th><th>2</th><th>3</th></tr><tr><td>0-20 mA</td><td>0 - 20.5 mA</td><td>0</td><td>22</td></tr><tr><td>4-20 mA</td><td>4 - 20.5 mA</td><td>2</td><td>22</td></tr><tr><td>4-20 mA HART</td><td>4 - 20.5 mA</td><td>2</td><td>22</td></tr><tr><td>4-20 mA NAMUR</td><td>3.8 - 20.5 mA</td><td>3.5</td><td>22.6</td></tr><tr><td>4-20 mA HART NAMUR</td><td>3.8 - 20.5 mA</td><td>3.5</td><td>22.6</td></tr><tr><td>4-20 mA US</td><td>3.9 - 20.8 mA</td><td>3.75</td><td>22.6</td></tr><tr><td>4-20 mA HART US</td><td>3.9 - 20.8 mA</td><td>3.75</td><td>22.6</td></tr><tr><td>0-20 mA (25 mA)</td><td>0 - 24 mA</td><td>0</td><td>25</td></tr><tr><td>4-20 mA (25 mA)</td><td>4 - 24 mA</td><td>2</td><td>25</td></tr><tr><td>4-20 mA (25 mA) HART</td><td>4 - 24 mA</td><td>2</td><td>25</td></tr></table></div> <div><div>A0001222</div><div><i>a = Current span</i> <i>1 = Operational range (measuring information)</i> <i>2 = Lower signal on alarm level</i> <i>3 = Upper signal on alarm level</i></div></div> <div><div> Note!</div><div><ul style="list-style-type: none"><li>■ If the measured value is outside the measuring range (defined in the functions VALUE 0_4 mA (4002) and VALUE 20 mA (4003)), a notice message is displayed.</li><li>■ In case of a fault the behavior of the current output is according to the selected option in the function FAILSAFE MODE (4006). Change the error category in the function ASSIGN SYSTEM ERROR ((8000) → Page 121) to generate a fault message instead of a notice message.</li></ul></div></div>	a	1	2	3	0-20 mA	0 - 20.5 mA	0	22	4-20 mA	4 - 20.5 mA	2	22	4-20 mA HART	4 - 20.5 mA	2	22	4-20 mA NAMUR	3.8 - 20.5 mA	3.5	22.6	4-20 mA HART NAMUR	3.8 - 20.5 mA	3.5	22.6	4-20 mA US	3.9 - 20.8 mA	3.75	22.6	4-20 mA HART US	3.9 - 20.8 mA	3.75	22.6	0-20 mA (25 mA)	0 - 24 mA	0	25	4-20 mA (25 mA)	4 - 24 mA	2	25	4-20 mA (25 mA) HART	4 - 24 mA	2	25
a	1	2	3																																										
0-20 mA	0 - 20.5 mA	0	22																																										
4-20 mA	4 - 20.5 mA	2	22																																										
4-20 mA HART	4 - 20.5 mA	2	22																																										
4-20 mA NAMUR	3.8 - 20.5 mA	3.5	22.6																																										
4-20 mA HART NAMUR	3.8 - 20.5 mA	3.5	22.6																																										
4-20 mA US	3.9 - 20.8 mA	3.75	22.6																																										
4-20 mA HART US	3.9 - 20.8 mA	3.75	22.6																																										
0-20 mA (25 mA)	0 - 24 mA	0	25																																										
4-20 mA (25 mA)	4 - 24 mA	2	25																																										
4-20 mA (25 mA) HART	4 - 24 mA	2	25																																										

A0001222








Function description	
OUTPUTS → CURRENT OUTPUT 1 to 2 → CONFIGURATION	
<b>VALUE 0_4 mA (4002)</b> 	<p>Use this function to assign the 0/4 mA current a value.  The value can be higher or lower than the value assigned to 20 mA (function VALUE 20 mA (4003) → Page 56). Positive and negative values are permissible, depending on the measured variable in question (e.g. mass flow).</p> <p>Example:  4 mA assigned value = - 250 kg/h  20 mA assigned value = +750 kg/h  Calculated current value = 8 mA (at zero flow)</p> <p> <b>Note!</b></p> <ul style="list-style-type: none"> <li>■ This function <b>cannot</b> be changed if: <ul style="list-style-type: none"> <li>– The measuring device has been configured in accordance with NTEP or MC approval.</li> <li>– The measuring device has been configured in accordance with PTB, NMI, METAS or BEV approval and YES has been selected for function Z003 in the CUSTODY TRANSFER block.</li> </ul> </li> <li>■ Note that values with different signs cannot be entered for 0/4 mA and 20 mA if SYMMETRY is the setting selected for the MEASURING MODE function (4004). In this case, the message "INPUT RANGE EXCEEDED" appears on the display.</li> </ul> <p>Example for STANDARD measuring mode:</p> <p style="text-align: right;">A0001223</p> <p>① = Lower range-value (0 to 20 mA)  ② = Lower signal on alarm level: depends on the setting in the function CURRENT SPAN  ③ = Lower range-value (4 to 20 mA): depends on the setting in the function CURRENT SPAN  ④ = Full scale value (0/4 to 20 mA): depends on the setting in the function CURRENT SPAN  ⑤ = Maximum current value: depends on the setting in the function CURRENT SPAN  ⑥ = Failsafe mode (upper signal on alarm level): depends on the setting in the functions CURRENT SPAN (see Page 53) and FAILSAFE MODE (see Page 50)  A = Measuring range</p> <p><b>User input:</b>  5-digit floating-point number, with sign</p> <p><b>Factory setting:</b>  0 [kg/h] or 0.5 [kg/l] or -50 [°C]</p> <p> <b>Note!</b></p> <ul style="list-style-type: none"> <li>■ The appropriate unit is taken from the following functions: <ul style="list-style-type: none"> <li>– UNIT MASS FLOW (0400)</li> <li>– UNIT VOLUME FLOW (0402)</li> <li>– UNIT CORRECTED VOLUME FLOW (0404)</li> <li>– UNIT DENSITY (0420)</li> <li>– UNIT REFERENCE DENSITY (0421)</li> <li>– UNIT TEMPERATURE (0422)</li> </ul> (see Page 15 to Page 19).</li> </ul> <p> <b>Caution!</b>  The current output responds differently, depending on the parameters set in the various functions. Some examples of parameter settings and their effect on the current output are given in the following section.</p> <p>(continued on next page)</p>





Function description	
OUTPUTS → CURRENT OUTPUT 1 to 2 → CONFIGURATION	
<b>VALUE 0_4 mA</b> (continued)	<p><b>Parameter setting example A:</b></p> <ol style="list-style-type: none"><li>VALUE 0_4 mA (4002) = not equal to zero flow (e.g. -5 kg/h) VALUE 20 mA (4003) = not equal to zero flow (e.g. 10 kg/h) or</li><li>VALUE 0_4 mA (4002) = not equal to zero flow (e.g. 100 kg/h) VALUE 20 mA (4003) = not equal to zero flow (e.g. -40 kg/h)</li></ol> <p>and MEASURING MODE (4004) = STANDARD</p> <p>When you enter the values for 0/4 mA and 20 mA, the working range of the measuring device is defined. If the effective flow drops below or exceeds this working range (see ①), a fault/notice message is generated (#351 to 354, current range) and the current output responds in accordance with the parameter settings in the function FAILSAFE MODE (4006).</p> <div><div>1)</div><div>2)</div></div> <p>A0001262</p> <p><b>Parameter setting example B:</b></p> <ol style="list-style-type: none"><li>VALUE 0_4 mA (4002) = equal to zero flow (e.g. 0 kg/h) VALUE 20 mA (4003) = not equal to zero flow (e.g. 10 kg/h) or</li><li>VALUE 0_4 mA (4002) = not equal to zero flow (e.g. 100 kg/h) VALUE 20 mA (4003) = equal to zero flow (e.g. 0 kg/h)</li></ol> <p>and MEASURING MODE (4004) = STANDARD</p> <p>When you enter the values for 0/4 mA and 20 mA, the working range of the measuring device is defined. In doing so, one of the two values is parameterized as zero flow (e.g. 0 kg/h).</p> <p>If the effective flow drops below or exceeds the value parameterized as the zero flow, no fault/notice message is generated and the current output retains its value.</p> <p>If the effective flow drops below or exceeds the other value, a fault/notice message is generated (#351 to 354, current range) and the current output responds in accordance with the parameter settings in the function FAILSAFE MODE (4006).</p> <div><div>1)</div><div>2)</div></div> <p>A0001264</p> <p>Deliberately only one flow direction is output with this setting and flow values in the other flow direction are suppressed.</p> <p><b>Parameter setting example C:</b> MEASURING MODE (4004)= SYMMETRY</p> <p>The current output signal is independent of the direction of flow (absolute amount of the measured variable). The 0_4 mA value ① and the 20 mA value ② must have the same sign (+ or -). The 20 mA VALUE ③ (e.g. backflow) corresponds to the mirrored 20 mA VALUE ② (e.g. flow).</p> <div></div> <p>A0001249</p> <p>ASSIGN STATUS (4241) = FLOW DIRECTION</p> <p>With this setting e.g. the flow direction output via a switching contact can be made.</p> <p><b>Parameter setting example D:</b> MEASURING MODE (4004)= PULSATING FLOW → Page 56 ff.</p>



<b>Function description</b> OUTPUTS → CURRENT OUTPUT 1 to 2 → CONFIGURATION	
<b>VALUE 20 mA (4003)</b> 	<p>Use this function to assign the 20 mA current a value. The value can be higher or lower than the value assigned to 0/4 mA (function VALUE 0_4 mA (4002) → Page 54). Positive and negative values are permissible, depending on the measured variable in question (e.g. mass flow).</p> <p>Example:            4 mA assigned value = - 250 kg/h            20 mA assigned value = +750 kg/h            Calculated current value = 8 mA (at zero flow)</p> <p>Note that values with different signs cannot be entered for 0/4 mA and 20 mA, if SYMMETRY is the setting selected in the function MEASURING MODE (4004). In this case, the message "INPUT RANGE EXCEEDED" appears.</p> <p><b>User input:</b>            5-digit floating-point number, with sign</p> <p><b>Factory setting:</b>            Depends on nominal diameter [kg/h] or 2 [kg/l] or 200 [°C]</p> <p> <b>Note!</b></p> <ul style="list-style-type: none"> <li>■ This function <b>cannot</b> be changed if:               <ul style="list-style-type: none"> <li>– The measuring device has been configured in accordance with NTEP or MC approval.</li> <li>– The measuring device has been configured in accordance with PTB, NMI, METAS or BEV approval and YES has been selected for function Z003 in the CUSTODY TRANSFER block.</li> </ul> </li> <li>■ The appropriate unit is taken from the following functions:               <ul style="list-style-type: none"> <li>– UNIT MASS FLOW (0400)</li> <li>– UNIT VOLUME FLOW (0402)</li> <li>– UNIT CORRECTED VOLUME FLOW (0404)</li> <li>– UNIT DENSITY (0420)</li> <li>– UNIT REFERENCE DENSITY (0421)</li> <li>– UNIT TEMPERATURE (0422)</li> </ul>               (see Page 15 to Page 19).             </li> <li>■ Example for selection STANDARD in the function MEASURING MODE (4004) → Page 56.</li> </ul> <p> <b>Caution!</b>            It is very important to read and comply with the information in the function VALUE 0_4 mA (4002) (under "⚠ Caution", examples of parameter settings) on Page 54.</p>
<b>MEASURING MODE (4004)</b> 	<p>Use this function to define the measuring mode for the current output.</p> <p><b>Options:</b>            STANDARD            SYMMETRY            PULSATING FLOW</p> <p><b>Factory setting:</b>            STANDARD</p> <p> <b>Note!</b>            This function <b>cannot</b> be changed if:</p> <ul style="list-style-type: none"> <li>■ The measuring device has been configured in accordance with NTEP or MC approval.</li> <li>■ The measuring device has been configured in accordance with PTB, NMI, METAS or BEV approval and YES has been selected for function Z003 in the CUSTODY TRANSFER block.</li> </ul> <p>(continued on next page)</p>

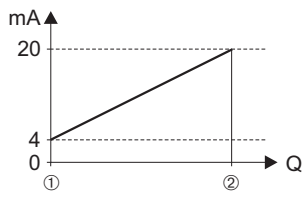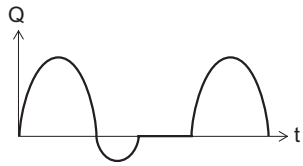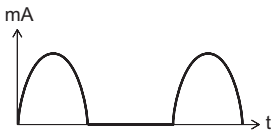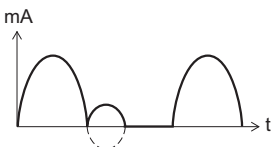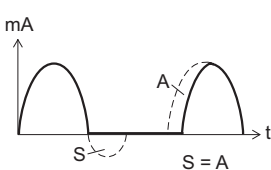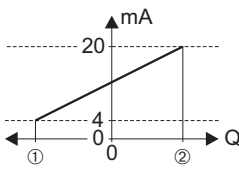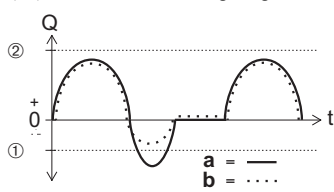

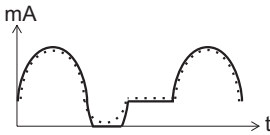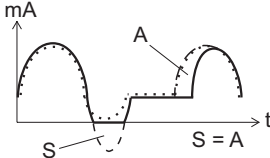
Function description	
OUTPUTS → CURRENT OUTPUT 1 to 2 → CONFIGURATION	
MEASURING MODE (continued)	<p><b>Description of the individual options:</b></p> <p><b>STANDARD</b> The current output signal is proportional to the measured variable. The flow components outside the scaled measuring range (defined by the 0_4 mA VALUE ① and the 20 mA VALUE ②) are taken into account as follows for signal output.</p> <ul style="list-style-type: none"><li>■ If one of the values is defined as equal to the zero flow (e.g. VALUE 0_4 mA = 0 kg/h), no message is given if this value is exceeded or not achieved and the current output retains its value (in example 4 mA). If the other value is exceeded or not achieved, the message "CURRENT OUTPUT AT FULL SCALE VALUE" appears and the current output responds in accordance with the parameter setting in the function FAILSAFE MODE (4006).</li><li>■ If both values defined are not equal to the zero flow (for example VALUE 0_4 mA = -5 kg/h, VALUE 20 mA = 10 kg/h), the message "CURRENT OUTPUT AT FULL SCALE VALUE" appears if the measuring range is exceeded or not achieved and the current output responds in accordance with the parameter settings in the function FAILSAFE MODE (4006).</li></ul> <div></div> <p>A0001248</p> <p><b>SYMMETRY</b> The current output signal is independent of the direction of flow (absolute amount of the measured variable). The 0_4 mA value ① and the 20 mA value ② must have the same sign (+ or -). The 20 mA VALUE ③ (e.g. backflow) corresponds to the mirrored 20 mA VALUE ② (e.g. flow).</p> <div></div> <p>A0001249</p> <p> <b>Note!</b></p> <ul style="list-style-type: none"><li>■ The direction of flow can be output via the configurable status outputs.</li><li>■ SYMMETRY cannot be selected unless the values in the VALUE 0_4 mA (4002) and VALUE 20 mA (4003) functions have the same sign or one of the values is zero. If the values have different signs, SYMMETRY cannot be selected and an "ASSIGNMENT NOT POSSIBLE" message is displayed.</li></ul> <p><b>PULSATING FLOW</b> If flow is characterized by severe fluctuations as is the case, for example, with reciprocating pumps, flow components outside the measuring range are buffered, balanced and output after a maximum delay of 60 seconds. If the buffered data cannot be processed within approx. 60 seconds, a fault/notice message appears. Under certain plant conditions, flow values can aggregate in the buffer, for example in the case of prolonged and unwanted fluid backflow. However, this buffer is reset in all relevant programming adjustments which affect the current output.</p>

<b>Function description</b> OUTPUTS → CURRENT OUTPUT 1 to 2 → CONFIGURATION	
Detailed explanations and information	<p><b>How the current output responds under the following postulated conditions:</b></p> <p>1. Defined measuring range (①–②): ① and ② have the <b>same sign</b></p>  <p style="text-align: right;">A0001248</p> <p>and the following flow behavior:</p>  <p style="text-align: right;">A0001265</p> <p>■ <b>STANDARD</b> The current output signal is proportional to the measured variable. The flow components outside the scaled measuring range are not taken into account for signal output.</p>  <p style="text-align: right;">A0001267</p> <p>■ <b>SYMMETRY</b> The current output signal is independent of the direction of flow.</p>  <p style="text-align: right;">A0001268</p> <p>■ <b>PULSATING FLOW</b> Flow components outside the measuring range are buffered, balanced and output after a maximum delay of 60 seconds.</p>  <p style="text-align: right;">A0001269</p> <p>2. Defined measuring range (①–②): ① and ② do <b>not have the same sign</b>.</p>  <p style="text-align: right;">A0001272</p> <p>Flow a (—) outside, b (---) within the measuring range.</p>  <p style="text-align: right;">A0001273</p> <p>(continued on next page)</p>

Function description	
OUTPUTS → CURRENT OUTPUT 1 to 2 → CONFIGURATION	
Detailed explanations and information (continued)	<div><div><div><div>■ STANDARD</div><div>a (—): The flow components outside the scaled measuring range cannot be taken into account for signal output. A fault message is generated (# 351 to 354, current range) and the current output responds in accordance with the parameter settings in the function FAILSAFE MODE (4006). b (—): The current output signal is proportional to the measured variable assigned.</div></div></div><div></div><div><div>A0001274</div></div><div><div><div>■ SYMMETRY</div><div>This option is not available under these circumstances, because the 0_4 mA value and the 20 mA value have different signs.</div></div></div><div><div><div>■ PULSATING FLOW</div><div>Flow components outside the measuring range are buffered, balanced and output after a maximum delay of 60 seconds.</div></div></div><div></div><div><div>A0001275</div></div></div>
<div><div><div>TIME CONSTANT</div><div>(4005)</div></div><div></div></div>	<div><div>Entering a time constant defines how the current output signal reacts to severely fluctuating measured variables, either very quickly (enter a low time constant) or with damping (enter a high time constant).</div><div><div>User input:</div><div>Fixed-point number 0.01 to 100.00 s</div></div><div><div>Factory setting:</div><div>1.00 s</div></div><div><div> Note!</div><div>This function <b>cannot</b> be changed if:</div><div><div>■ The measuring device has been configured in accordance with NTEP or MC approval.</div><div>■ The measuring device has been configured in accordance with PTB, NMI, METAS or BEV approval and YES has been selected for function Z003 in the CUSTODY TRANSFER block.</div></div></div></div>


<b>Function description</b> OUTPUTS → CURRENT OUTPUT 1 to 2 → CONFIGURATION	
<b>FAILSAFE MODE (4006)</b> 	<p>For safety reasons it is advisable to ensure that the current output assumes a predefined state in the event of a fault. The setting you select here affects only the current output. It has no effect on other outputs and the display (e.g. totalizers).</p> <p><b>Options:</b></p> <p><b>MIN. CURRENT</b>            The current output adopts the value of the lower signal on alarm level (as defined in the function (4001) ( → Page 53), see CURRENT SPAN.</p> <p><b>MAX. CURRENT</b>            The current output adopts the value of the upper signal on alarm level (as defined in the function CURRENT SPAN (4001), → Page 53).</p> <p><b>HOLD VALUE (not recommended)</b>            Measuring value output is based on the last measuring value saved before the error occurred.</p> <p><b>ACTUAL VALUE</b>            Measured value output is based on the current flow measurement.            The fault is ignored.</p> <p><b>Factory setting:</b>            MIN. CURRENT</p> <p> <b>Note!</b>            This function <b>cannot</b> be changed if:</p> <ul style="list-style-type: none"> <li>■ The measuring device has been configured in accordance with NTEP or MC approval.</li> <li>■ The measuring device has been configured in accordance with PTB, NMI, METAS or BEV approval and YES has been selected for function Z003 in the CUSTODY TRANSFER block.</li> </ul>

## 8.1.2 Function group OPERATION

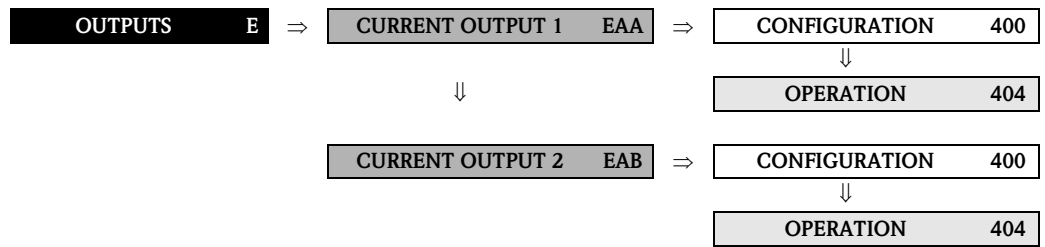

Function description	
OUTPUTS → CURRENT OUTPUT → OPERATION	
<b>ACTUAL CURRENT (4040)</b>	<p>Use this function to view the computed actual value of the output current.</p> <p><b>Display:</b> 0.00 to 25.00 mA</p> <p> <b>Note!</b> This function is not locked unless the YES was selected under Block Z (custody transfer measurement) in the function CURRENT OUTPUT 1 CUSTODY TRANSFER (Z003).</p>
<b>SIMULATION CURRENT (4041)</b> 	<p>Activates simulation of the current output.</p> <p><b>Options:</b> OFF ON</p> <p><b>Factory setting:</b> OFF</p> <p> <b>Note!</b></p> <ul style="list-style-type: none"> <li>■ This function <b>cannot</b> be changed if:             <ul style="list-style-type: none"> <li>– The measuring device has been configured in accordance with NTEP or MC approval.</li> <li>– The measuring device has been configured in accordance with PTB, NMI, METAS or BEV approval and YES has been selected for function Z003 in the CUSTODY TRANSFER block.</li> </ul> </li> <li>■ The "SIMULATION CURRENT OUTPUT" message indicates that simulation is active.</li> <li>■ The measuring device continues to measure while simulation is in progress, i.e. the current measured values are output correctly via the other outputs.</li> </ul> <p> <b>Caution!</b> The setting is not saved in the event of a power failure.</p>
<b>VALUE SIMULATION CURRENT (4042)</b> 	<p>Use this function to define a freely selectable value (e.g. 12 mA) to be output at the current output. This value is used to test downstream devices and the measuring device itself.</p> <p><b>User input:</b> 0.00 to 25.00 mA</p> <p><b>Factory setting:</b> 0.00 mA</p> <p> <b>Note!</b></p> <ul style="list-style-type: none"> <li>■ This function <b>cannot</b> be changed if:             <ul style="list-style-type: none"> <li>– The measuring device has been configured in accordance with NTEP or MC approval.</li> <li>– The measuring device has been configured in accordance with PTB, NMI, METAS or BEV approval and YES has been selected for function Z003 in the CUSTODY TRANSFER block.</li> </ul> </li> <li>■ This function is displayed only if the function SIMULATION CURR. (4041) is active (= ON).</li> </ul> <p> <b>Caution!</b> The setting is not saved in the event of a power failure.</p>


8.1.3      Function group INFORMATION

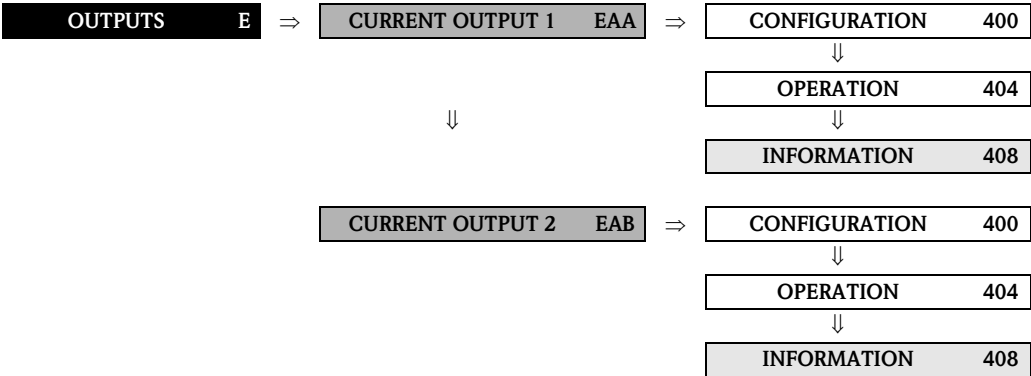





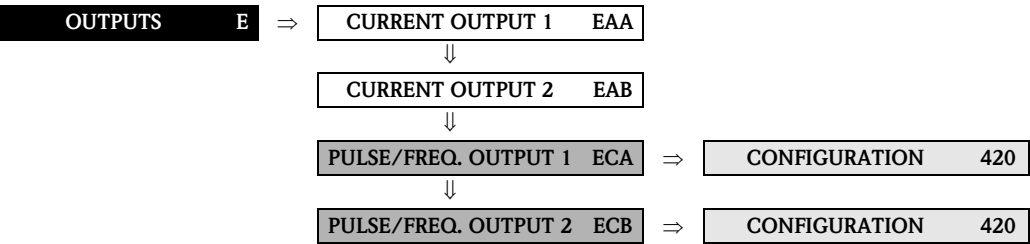

Function description	
OUTPUTS → CURRENT OUTPUT 1 → INFORMATION	
TERMINAL NUMBER (4080)	Use this function to view the numbers of the terminals (in the connection compartment) and the polarity used by the current output.

8.2 Group PULSE/FREQUENCY OUTPUT (1 to 2)





8.2.1 Function group CONFIGURATION








Function description	
OUTPUTS → PULSE/FREQ. OUTPUT (1 to 2) → CONFIGURATION (GENERAL)	
<div>MODE OF OPERATION</div> <div>(4200)</div> <div></div>	<div>Configuration of the output as a pulse, frequency or status output.</div> <div>The functions available in this function group vary, depending on which option you select here.</div> <div><b>Options:</b></div> <div>PULSE</div> <div>FREQUENCY</div> <div>STATUS</div> <div>DOUBLE PULS 90° (only with pulse output 2)</div> <div>DOUBLE PULS 180° (only with pulse output 2)</div> <div><b>Factory setting:</b></div> <div>PULSE</div> <div> Note!</div> <div>The selection DOUBLE PULS 90° and DOUBLE PULS 180° can be changed only if:</div> <div><div><div>■ Two pulse/frequency outputs are available</div><div>■ The operating mode of the first pulse/frequency output is set to PULSE</div></div><div>With this setting, the two pulse/frequency outputs are operated with the configuration of the first but the second lags behind the first as follows:</div><div><div>– For DOUBLE PULS 90°, half a pulse width</div><div>– For DOUBLE PULS 180°, half a pulse width</div></div></div>




Function description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1 to 2) → CONFIGURATION (FREQUENCY)	
<b>ASSIGN FREQUENCY (4201)</b> 	<p>For assigning a measured variable to the frequency output.</p> <p><b>Options:</b>  OFF  MASS FLOW  VOLUME FLOW  CORRECTED VOLUME FLOW  DENSITY  REFERENCE DENSITY  TEMPERATURE</p> <p><b>Factory setting:</b>  MASS FLOW</p> <p> <b>Note!</b></p> <ul style="list-style-type: none"> <li>■ This function <b>cannot</b> be changed if: <ul style="list-style-type: none"> <li>– The measuring device has been configured in accordance with NTEP or MC approval.</li> <li>– The measuring device has been configured in accordance with PTB, NMI, METAS or BEV approval and YES has been selected for the available functions Z001 to Z002 in the CUSTODY TRANSFER block.</li> </ul> </li> <li>■ This function cannot be changed unless the FREQUENCY setting was selected in the OPERATION MODE (4200) function.</li> <li>■ If you select OFF, the only function shown in the CONFIGURATION function group is ASSIGN FREQUENCY (4201).</li> </ul>
<b>START VALUE FREQUENCY (4202)</b> 	<p>For defining an initial frequency for the frequency output. You define the associated measured value of the measuring range in the function VALUE f MIN (4204) → Page 65.</p> <p><b>User input:</b>  5-digit fixed-point number: 0 to 10000 Hz</p> <p><b>Factory setting:</b>  0 Hz</p> <p>Example:</p> <ul style="list-style-type: none"> <li>■ VALUE f LOW= 0 kg/h, start value frequency = 0 Hz  This means that at a flow rate of 0 kg/h, a frequency of 0 Hz is output.</li> <li>■ VALUE F MIN. = 1 kg/h, start value frequency = 10 Hz  This means that at a flow rate of 1 kg/h, a frequency of 10 Hz is output.</li> </ul> <p> <b>Note!</b></p> <ul style="list-style-type: none"> <li>■ This function <b>cannot</b> be changed if: <ul style="list-style-type: none"> <li>– The measuring device has been configured in accordance with NTEP or MC approval.</li> <li>– The measuring device has been configured in accordance with PTB, NMI, METAS or BEV approval and YES has been selected for the available functions Z001 to Z002 in the CUSTODY TRANSFER block.</li> </ul> </li> <li>■ This function is not available unless the PULSE option was selected in the MODE OF OPERATION(4200) function.</li> </ul>








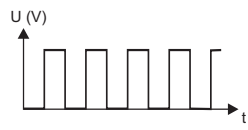
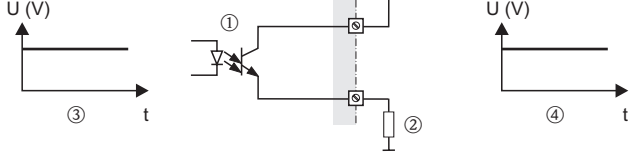
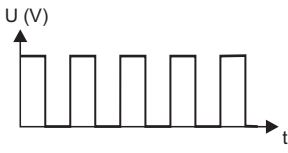
Function description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1 to 2) → CONFIGURATION (FREQUENCY)	
<b>END VALUE FREQUENCY (4203)</b> 	<p>For defining a full scale frequency for the frequency output. You define the associated measured value of the measuring range in the function VALUE f HIGH (4205) → Page 66.</p> <p><b>User input:</b> 5-digit fixed-point number: 2 to 10000 Hz</p> <p><b>Factory setting:</b> 10000 Hz</p> <p>Example:</p> <ul style="list-style-type: none"> <li>■ VALUE f HIGH = 10000 kg/h, full scale value = 10000 Hz This means that at a flow rate of 10000 kg/h, a freq. of 10000 Hz is output.</li> <li>■ VALUE f HIGH = 3600 kg/h, full scale value = 10000 Hz This means that at a flow rate of 3600 kg/h, a frequency of 10000 Hz is output.</li> </ul> <p> <b>Note!</b></p> <ul style="list-style-type: none"> <li>■ This function <b>cannot</b> be changed if: <ul style="list-style-type: none"> <li>– The measuring device has been configured in accordance with NTEP or MC approval.</li> <li>– The measuring device has been configured in accordance with PTB, NMi, METAS or BEV approval and YES has been selected for the available functions Z001 to Z002 in the CUSTODY TRANSFER block.</li> </ul> </li> <li>■ This function is not available unless the PULSE option was selected in the MODE OF OPERATION(4200) function.</li> <li>■ In the FREQUENCY operating mode the output signal is symmetrical (on/off ratio = 1:1). At low frequencies the pulse duration is limited to a maximum of 2 seconds, i.e. the on/off ratio is no longer symmetrical.</li> </ul>
<b>VALUE f MIN (4204)</b> 	<p>Use this function to assign a variable to the start value frequency ((4202) → Page 64). The value can be higher or lower than the value assigned to the VALUE f HIGH. Positive and negative values are permissible, depending on the measured variable in question (e.g. mass flow). You define a measuring range by defining the VALUE f LOW and VALUE f HIGH values.</p> <p><b>User input:</b> 5-digit floating-point number</p> <p><b>Factory setting:</b> 0 [kg/h] or 0 [kg/l] or -50 [°C]</p> <p> <b>Note!</b></p> <ul style="list-style-type: none"> <li>■ This function <b>cannot</b> be changed if: <ul style="list-style-type: none"> <li>– The measuring device has been configured in accordance with NTEP or MC approval.</li> <li>– The measuring device has been configured in accordance with PTB, NMi, METAS or BEV approval and YES has been selected for the available functions Z001 to Z002 in the CUSTODY TRANSFER block.</li> </ul> </li> <li>■ This function is not available unless the PULSE option was selected in the MODE OF OPERATION(4200) function.</li> <li>■ For a graphic illustration of the VALUE f LOW, see the VALUE f HIGH (4205) function.</li> <li>■ Note that values with different signs cannot be entered for VALUE f LOW and VALUE f HIGH, if SYMMETRY is the setting selected for the MEASURING MODE function (4206). In this case, the message "INPUT RANGE EXCEEDED" appears on the display.</li> <li>■ The appropriate unit is taken from the following functions: <ul style="list-style-type: none"> <li>– UNIT MASS FLOW (0400)</li> <li>– UNIT VOLUME FLOW (0402)</li> <li>– UNIT CORRECTED VOLUME FLOW (0404)</li> <li>– UNIT DENSITY (0420)</li> <li>– UNIT REFERENCE DENSITY (0421)</li> <li>– UNIT TEMPERATURE (0422)</li> </ul>           (see P. 15 to P. 19). </li> </ul>

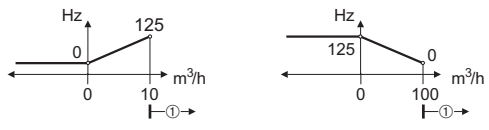Function description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1 to 2) → CONFIGURATION (FREQUENCY)	
<b>VALUE f HIGH (4205)</b> 	<p>Use this function to assign a variable to the end value frequency ((4203) → Page 65). The value can be higher or lower than the value assigned to the VALUE F LOW. Positive and negative values are permissible, depending on the measured variable in question (e.g. mass flow). You define a measuring range by defining the VALUE f LOW and VALUE f HIGH values.</p> <p><b>User input:</b> 5-digit floating-point number</p> <p><b>Factory setting:</b> Depends on nominal diameter [kg/h] or 2 [kg/l] or 200 [°C]</p> <p> <b>Note!</b></p> <ul style="list-style-type: none"> <li>■ This function <b>cannot</b> be changed if: <ul style="list-style-type: none"> <li>– The measuring device has been configured in accordance with NTEP or MC approval.</li> <li>– The measuring device has been configured in accordance with PTB, NMI, METAS or BEV approval and YES has been selected for the available functions Z001 to Z002 in the CUSTODY TRANSFER block.</li> </ul> </li> <li>■ This function is not available unless the FREQUENCY option was selected in the MODE OF OPERATION(4200) function.</li> <li>■ Note that values with different signs cannot be entered for VALUE f LOW and VALUE f HIGH, if SYMMETRY is the setting selected for the MEASURING MODE function (4206). In this case, the message "INPUT RANGE EXCEEDED" appears on the display.</li> </ul> <div data-bbox="850 907 1153 1111"> </div> <p style="text-align: right;">A0001279</p> <p>① = Value f min ② = Value f max</p> <p><b>Parameter setting example 1:</b></p> <ol style="list-style-type: none"> <li>1. VALUE f MIN (4204) = not equal to zero flow (e.g. -5 kg/h) VALUE f HIGH (4205) = not equal to zero flow (e.g. 10 kg/h) or</li> <li>2. VALUE f MIN (4204) = not equal to zero flow (e.g. 100 kg/h) VALUE f HIGH (4205) = not equal to zero flow (e.g. -40 kg/h)</li> </ol> <p>and MEASURING MODE (4206) = STANDARD</p> <p>When you enter the values for VALUE f LOW and VALUE f HIGH the working range of the measuring device is defined. If the effective flow drops below or exceeds this working range (see ①), a fault or notice message is generated (#355 to 358, frequency area) and the frequency output responds in accordance with the parameter settings in the function FAILSAFE MODE (4209).</p> <div data-bbox="817 1583 1297 1700"> </div> <p style="text-align: right;">A0001276</p> <p>(continued on next page)</p>

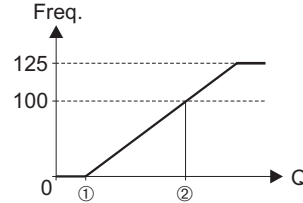
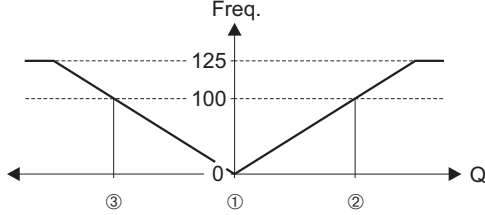


Function description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1 to 2) → CONFIGURATION (FREQUENCY)	
<b>VALUE f HIGH</b> (continued)	<p><b>Parameter setting example 2:</b></p> <ol style="list-style-type: none"> <li>VALUE f MIN (4204) = not equal to zero flow (e.g. 0 kg/h)              VALUE f HIGH (4205) = not equal to zero flow (e.g. 10 kg/h) or</li> <li>VALUE f MIN (4204) = not equal to zero flow (e.g. 100 kg/h)              VALUE f HIGH (4205) = not equal to zero flow (e.g. 0 kg/h)</li> </ol> <p>and          MEASURING MODE (4206) = STANDARD</p> <p>When you enter the values for VALUE f LOW and VALUE f HIGH the working range of the measuring device is defined. In doing so, one of the two values is parameterized as zero flow (e.g. 0 kg/h).</p> <p>If the effective flow drops below or exceeds the value parameterized as the zero flow, no fault/notice message is generated and the frequency output retains its value.</p> <p>If the effective flow drops below or exceeds the other value, a fault/notice message is generated (#355 to 358, frequency area) and the frequency output responds in accordance with the FAILSAFE MODE (4209) function.</p> <div style="display: flex; justify-content: space-around; align-items: flex-end;">  <div style="text-align: right; font-size: small;">A0001277</div> </div> <p>Deliberately only one flow direction is output with this setting and flow values in the other flow direction are suppressed.</p> <p><b>Parameter setting example 3:</b>          MEASURING MODE (4206) = SYMMETRY</p> <p>The frequency output signal is independent of the direction of flow (absolute amount of the measured variable). The VALUE f LOW ① and VALUE f HIGH ② must have the same sign (+ or -). The VALUE f HIGH ③ (e.g. backflow) corresponds to the mirrored VALUE f MAX ② (e.g. flow).</p> <div style="display: flex; justify-content: center; align-items: center;">  <div style="text-align: right; font-size: small;">A0001278</div> </div> <p>ASSIGN STATUS (4241) = FLOW DIRECTION</p> <p>With this setting e.g. the flow direction output via a switching contact can be made.</p> <p><b>Parameter setting example 4:</b>          MEASURING MODE (4206) = PULSATING FLOW → Page 67 ff.</p>
<b>MEASURING MODE (4206)</b> ⓘ	<p>Use this function to define the measuring mode for the frequency output.</p> <p><b>Options:</b>          STANDARD          SYMMETRY          PULSATING FLOW</p> <p><b>Factory setting:</b>          STANDARD</p> <p> <b>Note!</b></p> <p>This function <b>cannot</b> be changed if:</p> <ul style="list-style-type: none"> <li>The measuring device has been configured in accordance with NTEP or MC approval.</li> <li>The measuring device has been configured in accordance with PTB, NMI, METAS or BEV approval and YES has been selected for the available functions Z001 to Z002 in the CUSTODY TRANSFER block.</li> </ul> <p>(continued on next page)</p>

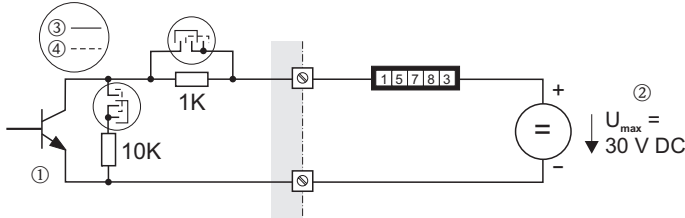



Function description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1 to 2) → CONFIGURATION (FREQUENCY)	
<b>MEASURING MODE</b> (continued)	<b>Description of the individual options:</b> <b>STANDARD</b> <p>The frequency output signal is proportional to the measured variable. The flow components outside the scaled measuring range (defined by the VALUE f LOW ① and the VALUE f HIGH ②) are not taken into account for signal output.</p> <ul style="list-style-type: none"> <li>■ If one of the values is defined as equal to the zero flow (e.g. VALUE f LOW = 0 kg/h), no message is given if this value is exceeded or not achieved and the frequency output retains its value (0 Hz in the example). If the other value is exceeded or not achieved, the message "FREQUENCY OUTPUT AT FULL SCALE VALUE" appears and the frequency output responds in accordance with the parameter setting in the function FAILSAFE MODE (4209).</li> <li>■ If both values defined are not equal to the zero flow (for example VALUE f LOW = -5 kg/h; VALUE f MAX = 10kg/h) the message "FREQUENCY OUTPUT AT FULL SCALE VALUE" appears if the measuring range is exceeded or not achieved and the frequency output responds in accordance with the parameter settings in the function FAILSAFE MODE (4209).</li> </ul>  <p style="text-align: right;">A0001279</p>
	<b>SYMMETRY</b> <p>The frequency output signal is independent of the direction of flow (absolute amount of the measured variable). The VALUE f LOW ① and VALUE f HIGH ② must have the same sign (+ or -). The VALUE f HIGH ③ (e.g. backflow) corresponds to the mirrored VALUE f HIGH ② (e.g. flow).</p>  <p style="text-align: right;">A0001280</p>
	<p> <b>Note!</b></p> <ul style="list-style-type: none"> <li>■ This function is not available unless the PULSE option was selected in the MODE OF OPERATION(4200) function.</li> <li>■ The direction of flow can be output via the configurable status outputs.</li> <li>■ SYMMETRY cannot be selected unless the values in the VALUE f MIN (4204) and VALUE f HIGH (4205) functions have the same sign or one of the values is zero. If the values have different signs, SYMMETRY cannot be selected and an "ASSIGNMENT NOT POSSIBLE" message is displayed.</li> </ul> <p><b>PULSATING FLOW</b>  <p>If flow is characterized by severe fluctuations as is the case, for example, with reciprocating pumps, flow components outside the measuring range are buffered, balanced and output after a maximum delay of 60 seconds. If the buffered data cannot be processed within approx. 60 seconds, a fault/notice message appears.</p> <p>Under certain plant conditions, flow values can aggregate in the buffer, for example in the case of prolonged and unwanted fluid backflow. However, this buffer is reset in all relevant programming adjustments which affect the frequency output.</p> </p>

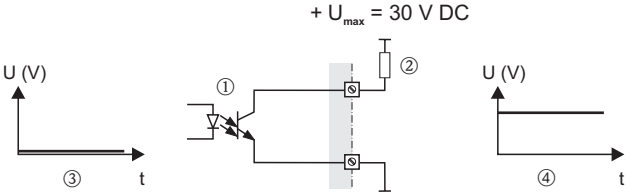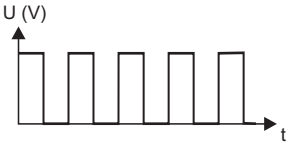Function description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1 to 2) → CONFIGURATION (FREQUENCY)	
<div>OUTPUT SIGNAL</div> <div>(4207)</div> <div></div>	<div>For selecting the output configuration of the frequency output.</div> <div><b>Options:</b> 0 = PASSIVE - POSITIVE 1 = PASSIVE - NEGATIVE 2 = ACTIVE - POSITIVE (this selection is not supported) 3 = ACTIVE - NEGATIVE (this selection is not supported)</div> <div><b>Factory setting:</b> PASSIVE - POSITIVE</div> <div><b>Explanation</b> PASSIVE = power is supplied to the frequency output by means of an external power supply.  Configuring the output signal level (POSITIVE or NEGATIVE) determines the quiescent behavior (at zero flow) of the frequency output. The internal transistor is activated as follows: ■ If POSITIVE is selected, the internal transistor is activated with a <b>positive</b> signal level. ■ If NEGATIVE is selected, the internal transistor is activated with a <b>negative</b> signal level (0 V).</div> <div> <b>Note!</b> ■ This function <b>cannot</b> be changed if: – The measuring device has been configured in accordance with NTEP or MC approval. – The measuring device has been configured in accordance with PTB, NMi, METAS or BEV approval and YES has been selected for the available functions Z001 to Z002 in the CUSTODY TRANSFER block. ■ Function is not available unless the FREQUENCY setting was selected in the MODE OF OPERATION function. ■ With the passive output configuration, the output signal levels of the frequency output depend on the external circuit (see examples).</div> <div><b>Example for passive output circuit (PASSIVE)</b> If PASSIVE is selected, the frequency output is configured as an open collector.</div> <div></div> <div><div>① = Open collector</div><div>② = External power supply</div><div>③ = Line monitoring off</div><div>④ = Line monitoring on (default)</div></div> <div> <b>Note!</b> For continuous currents up to 25 mA (<math>I_{\text{max}} = 250 \text{ mA} / 20 \text{ ms}</math>).</div> <div>(continued on next page)</div>





Function description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1 to 2) → CONFIGURATION (FREQUENCY)	
<b>OUTPUT SIGNAL</b> (continued)	<p><b>Example for output configuration PASSIVE-POSITIVE:</b>          Output configuration with an external pull-up resistance.          In the quiescent state (at zero flow), the output signal level at the terminals is 0 V.</p> <p style="text-align: center;"><math>+ U_{\max} = 30 \text{ V DC}</math></p>  <p>① = Open collector          ② = Pull-Up-Resistance          ③ = Transistor activation in <i>POSITIVE</i> quiescent state (at zero flow)          ④ = Output signal level in quiescent state (at zero flow)</p> <p>In the operating status (flow present), the output signal level changes from 0 V to a positive voltage level</p>  <p style="text-align: right;">a0004687</p>
	<p><b>Example for output configuration PASSIVE-POSITIVE:</b>          Output configuration with an external pull-down resistance.          In the quiescent state (at zero flow), a positive voltage level is measured via the pull-down resistance.</p> <p style="text-align: center;"><math>+ U_{\max} = 30 \text{ V DC}</math></p>  <p>① = Open collector          ② = Pull-Down-Resistance          ③ = Transistor activation in <i>POSITIVE</i> quiescent state (at zero flow)          ④ = Output signal level in quiescent state (at zero flow)</p> <p>In the operating status (flow present), the output signal level changes from a positive voltage level to 0 V.</p>  <p style="text-align: right;">a0004689</p> <p style="text-align: right;">A0001981</p>


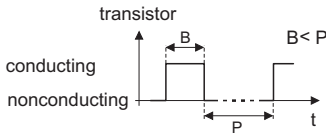
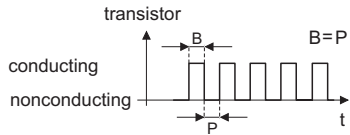


(continued on next page)




Function description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1 to 2) → CONFIGURATION (FREQUENCY)	
OUTPUT SIGNAL (continued)	<p><b>Example for output configuration PASSIVE-NEGATIVE:</b> Output configuration with an external pull-up resistance. In the quiescent state (at zero flow), the output signal level at the terminals is at a positive voltage level.</p> <div></div> <p>① = Open collector ② = Pull-Up-Resistance ③ = Transistor activation in <b>NEGATIVE</b> quiescent state (at zero flow) ④ = Output signal level in quiescent state (at zero flow)</p> <p>In the operating status (flow present), the output signal level changes from a positive voltage level to 0 V.</p> <div></div> <p>a0004690</p> <p>A0001981</p>
TIME CONSTANT (4208) 	<p>Entering a time constant defines how the frequency output signal reacts to severely fluctuating measured variables, either very quickly (enter a low time constant) or with damping (enter a high time constant).</p> <p><b>User input:</b> Fixed-point number 0.00 to 100.00 s</p> <p><b>Factory setting:</b> 0.00 s</p> <p> <b>Note!</b></p> <ul style="list-style-type: none"><li>■ This function <b>cannot</b> be changed if:<ul style="list-style-type: none"><li>– The measuring device has been configured in accordance with NTEP or MC approval.</li><li>– The measuring device has been configured in accordance with PTB, NMI, METAS or BEV approval and YES has been selected for the available functions Z001 to Z002 in the CUSTODY TRANSFER block.</li></ul></li><li>■ This function is not available unless the PULSE option was selected in the MODE OF OPERATION (4200) function.</li></ul>





Function description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1 to 2) → CONFIGURATION (FREQUENCY)	
<b>FAILSAFE MODE (4209)</b> 	<p>For safety reasons it is advisable to ensure that the frequency output assumes a predefined state in the event of a fault. The setting you select here affects only the frequency output. It has no effect on other outputs and the display (e.g. totalizers).</p> <p><b>Options:</b></p> <p>FALLBACK VALUE Output is 0 Hz.</p> <p>FAILSAFE VALUE Output is the frequency specified in the FAILSAFE VALUE function (4211).</p> <p>HOLD VALUE Measured value output is based on the last measured value saved before the error occurred.</p> <p>ACTUAL VALUE Measured value output is based on the current flow measurement. The fault is ignored.</p> <p><b>Factory setting:</b> FALLBACK VALUE</p> <p> Note!</p> <ul style="list-style-type: none"> <li>■ This function <b>cannot</b> be changed if: <ul style="list-style-type: none"> <li>– The measuring device has been configured in accordance with NTEP or MC approval.</li> <li>– The measuring device has been configured in accordance with PTB, NMi, METAS or BEV approval and YES has been selected for the available functions Z001 to Z002 in the CUSTODY TRANSFER block.</li> </ul> </li> <li>■ This function is not available unless the FREQUENCY option was selected in the MODE OF OPERATION (4200) function.</li> </ul>
<b>FAILSAFE VALUE (4211)</b> 	<p>For specifying the frequency that the measuring device outputs in the event of an error.</p> <p><b>User input:</b> max. 5-digit number: 0 to 12500 Hz</p> <p><b>Factory setting:</b> 12500 Hz</p> <p> Note!</p> <ul style="list-style-type: none"> <li>■ This function <b>cannot</b> be changed if: <ul style="list-style-type: none"> <li>– The measuring device has been configured in accordance with NTEP or MC approval.</li> <li>– The measuring device has been configured in accordance with PTB, NMi, METAS or BEV approval and YES has been selected for the available functions Z001 to Z002 in the CUSTODY TRANSFER block.</li> </ul> </li> <li>■ This function is not available unless FREQUENCY was selected in the MODE OF OPERATION function (4200) and FAILSAFE LEVEL was selected in the FAILSAFE MODE function (4209).</li> </ul>










Function description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1 to 2) → CONFIGURATION (FREQUENCY)	
<b>ASSIGN PULSE (4221)</b> 	<p>Use this function to assign a measured variable to the pulse output.</p> <p><b>Options:</b>  OFF  MASS FLOW  VOLUME FLOW  CORRECTED VOLUME FLOW</p> <p><b>Factory setting:</b>  MASS FLOW</p> <p> <b>Note!</b></p> <ul style="list-style-type: none"> <li>■ This function <b>cannot</b> be changed if: <ul style="list-style-type: none"> <li>– The measuring device has been configured in accordance with NTEP or MC approval.</li> <li>– The measuring device has been configured in accordance with PTB, NMI, METAS or BEV approval and YES has been selected for the available functions Z001 to Z002 in the CUSTODY TRANSFER block.</li> </ul> </li> <li>■ This function is not available unless the PULSE option was selected in the MODE OF OPERATION(4200) function.</li> <li>■ If you select OFF, the only function shown in the CONFIGURATION function group is this function, in other words ASSIGN PULSE (4221).</li> </ul>
<b>PULSE VALUE (4222)</b> 	<p>Use this function to define the flow at which a pulse is triggered. These pulses can be totaled by an external totalizer, and the total flow quantity since measuring started can be registered in this way.</p> <p><b>User input:</b>  5-digit floating-point number [unit]</p> <p><b>Factory setting:</b>  depends on nominal diameter and country,  [value] [kg or lb] / pulse;  corresponds to the factory setting for the pulse value (see Page 129 ff.).</p> <p> <b>Note!</b></p> <ul style="list-style-type: none"> <li>■ This function <b>cannot</b> be changed if: <ul style="list-style-type: none"> <li>– The measuring device has been configured in accordance with NTEP or MC approval.</li> <li>– The measuring device has been configured in accordance with PTB, NMI, METAS or BEV approval and YES has been selected for the available functions Z001 to Z002 in the CUSTODY TRANSFER block.</li> </ul> </li> <li>■ This function is not available unless the PULSE option was selected in the MODE OF OPERATION(4200) function.</li> <li>■ The appropriate unit is taken from the following functions: <ul style="list-style-type: none"> <li>– UNIT MASS (0401)</li> <li>– UNIT VOLUME (0403)</li> <li>– UNIT STANDARD VOLUME (0405)</li> </ul> (see Page 15 or Page 17).</li> </ul>



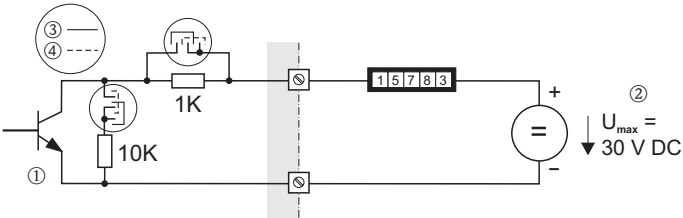

Function description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1 to 2) → CONFIGURATION (PULSE)	
<b>PULSE WIDTH (4223)</b> 	<p>Use this function to enter the pulse width of the output pulse.</p> <p><b>User input:</b> 0.05 to 2000 ms</p> <p><b>Factory setting:</b> 100 ms</p> <p>Pulse output is <b>always</b> with the pulse width (B) entered in this function. The pauses (P) between the individual pulses are automatically configured. However, they must at least correspond to the pulse width (<math>B = P</math>).</p> <div style="display: flex; justify-content: space-around; align-items: flex-end;"> <div style="text-align: center;">  <p><math>B &lt; P</math></p> </div> <div style="text-align: center;">  <p><math>B = P</math></p> </div> </div> <p style="text-align: right; font-size: small;">A0001233-en</p> <p>B = Pulse width entered (the illustration applies to positive pulses) P = Pauses between the individual pulses</p> <p> <b>Note!</b></p> <ul style="list-style-type: none"> <li>■ This function <b>cannot</b> be changed if: <ul style="list-style-type: none"> <li>– The measuring device has been configured in accordance with NTEP or MC approval.</li> <li>– The measuring device has been configured in accordance with PTB, NMi, METAS or BEV approval and YES has been selected for the available functions Z001 to Z002 in the CUSTODY TRANSFER block.</li> </ul> </li> <li>■ This function is not available unless the PULSE option was selected in the MODE OF OPERATION(4200) function.</li> <li>■ When entering the pulse width, select a value that can still be processed by an external totalizer (e.g. mechanical totalizer, PLC, etc.).</li> </ul> <p> <b>Caution!</b></p> <p>If the pulse number or frequency resulting from the pulse value entered (see function PULSE VALUE (4222) → Page 73) and from the current flow is too large to maintain the pulse width selected (the time interval is smaller than the pulse width B entered), a system error message is generated (# 359 to 362, pulse buffer) after approx. 5 seconds buffer/balance time.</p>

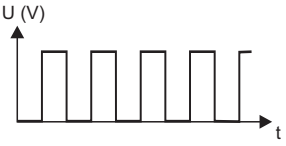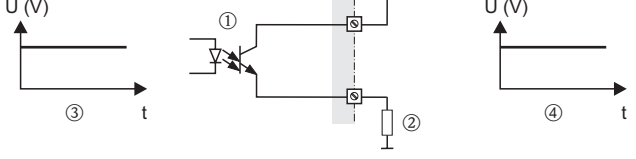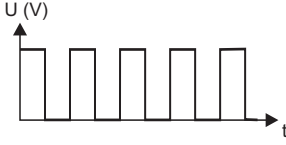

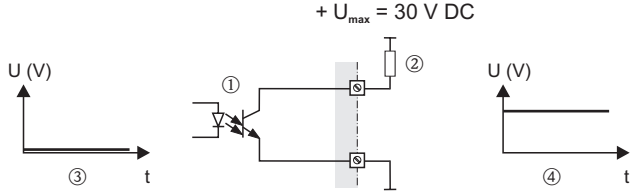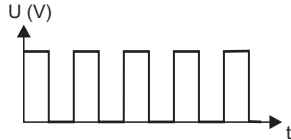

Function description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1 to 2) → CONFIGURATION (PULSE)	
<b>MEASURING MODE (4225)</b> 	<p>Use this function to define the measuring mode for the pulse output.</p> <p><b>Options:</b>  <b>STANDARD</b>  Only positive flow components are totaled. Negative components are not taken into account.</p> <p><b>SYMMETRY</b>  Positive and negative flow components are taken into account.</p> <p> <b>Note!</b>  The direction of flow can be output via the status outputs.</p> <p><b>PULSATING FLOW</b>  If flow is characterized by severe fluctuations, as is the case, for example, with reciprocating pumps, the positive and negative flow components are totaled, with the signs taken into account (e.g. <math>-10\text{ l}</math> and <math>+25\text{ l} = 15\text{ l}</math>).</p> <p>Flow components outside the maximum pulse number per second (value/width) are buffered, balanced and output after a maximum delay of 60 seconds. If the buffered data cannot be processed within approx. 60 seconds, a fault/notice message appears.</p> <p>Under certain plant conditions, flow values can aggregate in the buffer, for example in the case of prolonged and unwanted fluid backflow. However, this buffer is reset in all relevant programming adjustments which affect the pulse output.</p> <p><b>STANDARD REVERSE</b>  Only negative flow components are totaled. Positive components are not taken into account.</p> <p><b>Factory setting:</b>  <b>STANDARD</b></p> <p> <b>Note!</b></p> <ul style="list-style-type: none"> <li>■ This function <b>cannot</b> be changed if: <ul style="list-style-type: none"> <li>– The measuring device has been configured in accordance with NTEP or MC approval.</li> <li>– The measuring device has been configured in accordance with PTB, NMi, METAS or BEV approval and YES has been selected for the available functions Z001 to Z002 in the CUSTODY TRANSFER block.</li> </ul> </li> <li>■ This function is not available unless the PULSE option was selected in the MODE OF OPERATION (4200) function.</li> </ul>

Function description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1 to 2) → CONFIGURATION (PULSE)	
<b>OUTPUT SIGNAL (4226)</b> 	<p>For selecting the output configuration of the pulse output.</p> <p><b>Options:</b>            0 = PASSIVE - POSITIVE            1 = PASSIVE - NEGATIVE            2 = ACTIVE - POSITIVE (this selection is not supported)            3 = ACTIVE - NEGATIVE (this selection is not supported)</p> <p><b>Factory setting:</b> PASSIVE - POSITIVE</p> <p><b>Explanation</b>            PASSIVE = power is supplied to the pulse output by means of an external power supply.</p> <p>Configuring the output signal level (POSITIVE or NEGATIVE) determines the quiescent behavior (at zero flow) of the pulse output.</p> <p>The internal transistor is activated as follows:</p> <ul style="list-style-type: none"> <li>■ If POSITIVE is selected, the internal transistor is activated with a <b>positive</b> signal level.</li> <li>■ If NEGATIVE is selected, the internal transistor is activated with a <b>negative</b> signal level (0 V).</li> </ul> <p> <b>Note!</b></p> <ul style="list-style-type: none"> <li>■ This function <b>cannot</b> be changed if:               <ul style="list-style-type: none"> <li>– The measuring device has been configured in accordance with NTEP or MC approval.</li> <li>– The measuring device has been configured in accordance with PTB, NMi, METAS or BEV approval and YES has been selected for the available functions Z001 to Z002 in the CUSTODY TRANSFER block.</li> </ul> </li> <li>■ Function is not available unless the PULSE setting was selected in the MODE OF OPERATION(4200) function.</li> <li>■ With the passive output configuration, the output signal levels of the pulse output depend on the external circuit (see examples).</li> </ul> <p><b>Example for passive output circuit (PASSIVE)</b>            If PASSIVE is selected, the pulse output is configured as an open collector.</p>  <p style="text-align: right;">A0002147</p> <p>① = Open collector            ② = External power supply            ③ = Line monitoring off            ④ = Line monitoring on (default)</p> <p> <b>Note!</b>            For continuous currents up to 25 mA (<math>I_{\max} = 250 \text{ mA} / 20 \text{ ms}</math>).</p> <p>(continued on next page)</p>




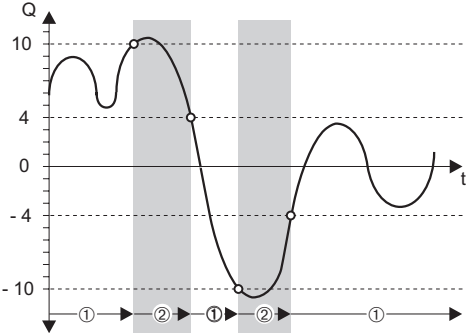

Function description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1 to 2) → CONFIGURATION (PULSE)	
OUTPUT SIGNAL (continued)	<p><b>Example for output configuration PASSIVE-POSITIVE:</b> Output configuration with an external pull-up resistance. In the quiescent state (at zero flow), the output signal level at the terminals is 0 V.</p> <p>+ U<sub>max</sub> = 30 V DC</p> <div></div> <p>① = Open collector ② = Pull-Up-Resistance ③ = Transistor activation in POSITIVE quiescent state (at zero flow) ④ = Output signal level in quiescent state (at zero flow)</p> <p>In the operating status (flow present), the output signal level changes from 0 V to a positive voltage level.</p> <div></div> <p>A0004687</p> <p><b>Example for output configuration PASSIVE-POSITIVE:</b> Output configuration with an external pull-down resistance. In the quiescent state (at zero flow), a positive voltage level is measured via the pull-down resistance.</p> <p>+ U<sub>max</sub> = 30 V DC</p> <div></div> <p>① = Open collector ② = Pull-Down-Resistance ③ = Transistor activation in POSITIVE quiescent state (at zero flow) ④ = Output signal level in quiescent state (at zero flow)</p> <p>In the operating status (flow present), the output signal level changes from a positive voltage level to 0 V.</p> <div></div> <p>A0004689</p> <p>A0001975</p> <p>A0001981</p> <p>(continued on next page)</p>

<b>Function description</b> OUTPUTS → PULSE/FREQUENCY OUTPUT (1 to 2) → CONFIGURATION (PULSE)	
<b>OUTPUT SIGNAL</b> (continued)	<p><b>Example for output configuration PASSIVE-NEGATIVE:</b>            Output configuration with an external pull-up resistance.            In the quiescent state (at zero flow), the output signal level at the terminals is at a positive voltage level.</p>  <p>① = Open collector            ② = Pull-Up-Resistance            ③ = Transistor activation in <i>NEGATIVE</i> quiescent state (at zero flow)            ④ = Output signal level in quiescent state (at zero flow)</p> <p>In the operating status (flow present), the output signal level changes from a positive voltage level to 0 V.</p>  <p style="text-align: right;">a0004690</p>
<b>FAILSAFE MODE (4227)</b> ⓘ	<p>For safety reasons it is advisable to ensure that the pulse output assumes a predefined state in the event of a fault. The setting you select here affects only the pulse output. It has no effect on other outputs and the display (e.g. totalizers).</p> <p><b>Options:</b>  <b>FALLBACK VALUE</b>            Output is 0 pulse.</p> <p><b>ACTUAL VALUE</b>            Measured value output is based on the current flow measurement. The fault is ignored.</p> <p><b>MAX. PULSE RATE</b>            Outputs the maximum pulse rate <math>f = 1/(2 \times T)</math></p> <p><b>Factory setting:</b>            FALLBACK VALUE</p> <p> <b>Note!</b></p> <ul style="list-style-type: none"> <li>■ This function <b>cannot</b> be changed if:               <ul style="list-style-type: none"> <li>– The measuring device has been configured in accordance with NTEP or MC approval.</li> <li>– The measuring device has been configured in accordance with PTB, NMi, METAS or BEV approval and YES has been selected for the available functions Z001 to Z002 in the CUSTODY TRANSFER block.</li> </ul> </li> <li>■ This function is not available unless the PULSE option was selected in the MODE OF OPERATION(4200) function.</li> <li>■ If the selection MAX. PULSE RATE is made under pulse output 1 and the OPERATION MODE of pulse output 2 is set to DOUBLE PULS 90° or DOUBLE PULS 180°, the failsafe mode of pulse output 2 is automatically FALLBACK VALUE.</li> </ul> <p style="text-align: right;">A0001981</p>



<b>Function description</b> OUTPUTS → PULSE/FREQUENCY OUTPUT (1 to 2) → CONFIGURATION (STATUS)	
<b>ASSIGN STATUS (4241)</b> 	<p>Use this function to assign a switching function to the status output.</p> <p><b>Options:</b>            OFF            ON (operation)            FAULT MESSAGE            NOTICE MESSAGE            FAULT MESSAGE or NOTICE MESSAGE            EMPTY PIPE DETECTION (only with active function)            FLOW DIRECTION            LIMIT MASS FLOW            LIMIT VOLUME FLOW            CORRECTED VOLUME FLOW LIMIT VALUE            DENSITY LIMIT VALUE            REFERENCE DENSITY LIMIT VALUE            TEMPERATURE LIMIT VALUE            TOTALIZER 1 LIMIT VALUE            TOTALIZER 2 LIMIT VALUE            TOTALIZER 3 LIMIT VALUE</p> <p><b>Factory setting:</b>            FAULT MESSAGE</p> <p> <b>Note!</b></p> <ul style="list-style-type: none"> <li>■ This function <b>cannot</b> be changed if:               <ul style="list-style-type: none"> <li>– The measuring device has been configured in accordance with NTEP or MC approval.</li> <li>– The measuring device has been configured in accordance with PTB, NMI, METAS or BEV approval and YES has been selected for the available functions Z001 to Z002 in the CUSTODY TRANSFER block.</li> </ul> </li> <li>■ This function is not available unless the STATUS option was selected in the MODE OF OPERATION(4200) function.</li> <li>■ The behavior of the status output is a normally closed behavior, in other words the output is closed (transistor conductive) when normal, error-free measuring is in progress. "normal, error-free" operation: Flow direction = forwards; limit values = not exceeded; no empty or partially filled measuring tube (EPD/OED); no fault or notice message present.</li> <li>■ If you select OFF, the only function shown in the CONFIGURATION function group is this function, in other words ASSIGN STATUS (4241).</li> <li>■ Switching response like status output, s. Page 97</li> </ul>
<b>ON-VALUE (4242)</b> 	<p>Use this function to assign a value to the switch-on point (activation of the status output). The value can be higher or lower than the switch-off point. Positive or negative values are permissible, depending on the measured variable in question (e.g. mass flow, totalizer reading).</p> <p><b>User input:</b>            5-digit floating-point number [unit]</p> <p><b>Factory setting:</b>            0 [kg/h] or 2 [kg/l] or 200 [°C]</p> <p> <b>Note!</b></p> <ul style="list-style-type: none"> <li>■ This function <b>cannot</b> be changed if:               <ul style="list-style-type: none"> <li>– The measuring device has been configured in accordance with NTEP or MC approval.</li> <li>– The measuring device has been configured in accordance with PTB, NMI, METAS or BEV approval and YES has been selected for the available functions Z001 to Z002 in the CUSTODY TRANSFER block.</li> </ul> </li> <li>■ This function is not available unless STATUS was selected in the MODE OF OPERATION function (4200) and LIMIT VALUE or FLOW DIRECTION was selected in the ASSIGN STATUS function (4241).</li> <li>■ If SYMMETRY is selected in the function MEASURING MODE (4246) and values with different signs are entered for the switch-on and switch-off points, the notice message "INPUT RANGE EXCEEDED" appears.</li> <li>■ Only the switch-on point is available for flow direction output (no switch-off point). If you enter a value not equal to the zero flow (e.g. 5), the difference between the zero flow and the value entered corresponds to half the switchover hysteresis.</li> </ul>

Function description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1 to 2) → CONFIGURATION (STATUS)	
<b>SWITCH-ON DELAY (4243)</b> 	<p>Use this function to define a delay (0 to 100 seconds) for the switch-on (i.e. signal changes from "not conductive" to "conductive") of the status output. The delay starts when the limit value is reached.</p> <p>The status output does switch when the delay has timed out and the switch on condition has been valid over the delay time.</p> <p><b>User input:</b> Fixed-point number 0.0 to 100.0 s</p> <p><b>Factory setting:</b> 0.0 s</p> <p> <b>Note!</b></p> <ul style="list-style-type: none"> <li>■ This function <b>cannot</b> be changed if: <ul style="list-style-type: none"> <li>– The measuring device has been configured in accordance with NTEP or MC approval.</li> <li>– The measuring device has been configured in accordance with PTB, NMi, METAS or BEV approval and YES has been selected for the available functions Z001 to Z002 in the CUSTODY TRANSFER block.</li> </ul> </li> <li>■ This function is not available unless STATUS was selected in the MODE OF OPERATION function (4200) and LIMIT VALUE or FLOW DIRECTION was selected in the ASSIGN STATUS function (4241).</li> </ul>
<b>OFF VALUE (4244)</b> 	<p>Use this function to assign a value to the switch-off point (deactivation of the status output). The value can be higher or lower than the switch-on point.</p> <p>Positive and negative values are permissible, depending on the measured variable in question (e.g. mass flow, totalizer reading).</p> <p><b>User input:</b> 5-digit floating-point number [unit]</p> <p><b>Factory setting:</b> 0 [kg/h] or 2 [kg/l] or 200 [°C]</p> <p> <b>Note!</b></p> <ul style="list-style-type: none"> <li>■ This function <b>cannot</b> be changed if: <ul style="list-style-type: none"> <li>– The measuring device has been configured in accordance with NTEP or MC approval.</li> <li>– The measuring device has been configured in accordance with PTB, NMi, METAS or BEV approval and YES has been selected for the available functions Z001 to Z002 in the CUSTODY TRANSFER block.</li> </ul> </li> <li>■ This function is not available unless STATUS was selected in the MODE OF OPERATION function (4200) and a LIMIT VALUE was selected in the ASSIGN STATUS function (4241).</li> <li>■ The associated unit is taken from the function UNIT VOLUME FLOW (0402) or UNIT MASS FLOW (0400).</li> <li>■ If SYMMETRY is selected in the function MEASURING MODE (4246) and values with different signs are entered for the switch-on and switch-off points, the notice message "INPUT RANGE EXCEEDED" appears.</li> </ul>








Function description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1 to 2) → CONFIGURATION (STATUS)	
<div>SWITCH-OFF DELAY (4245)</div> <div></div>	<p>Use this function to define a delay (0 to 100 seconds) for the switch-off (i.e. signal changes from "conductive" to "not conductive") of the status output. The delay starts when the limit value is reached. The status output does switch when the delay has timed out and the switch off condition has been valid over the delay time.</p> <p><b>User input:</b> Fixed-point number 0.0 to 100.0 s</p> <p><b>Factory setting:</b> 0.0 s</p> <p> <b>Note!</b></p> <ul style="list-style-type: none"><li>■ This function <b>cannot</b> be changed if:<ul style="list-style-type: none"><li>– The measuring device has been configured in accordance with NTEP or MC approval.</li><li>– The measuring device has been configured in accordance with PTB, NMi, METAS or BEV approval and YES has been selected for the available functions Z001 to Z002 in the CUSTODY TRANSFER block.</li></ul></li><li>■ This function is not available unless the STATUS option was selected in the MODE OF OPERATION (4200) function.</li></ul>
<div>MEASURING MODE (4246)</div> <div></div>	<p>Use this function to define the measuring mode for the status output.</p> <p><b>Options:</b> STANDARD The status output signal switches at the defined switch points.</p> <p>SYMMETRY The status output signal switches at the defined switch points, irrespective of the sign. If you define a switch point with a positive sign, the status output signal switches as soon as the value is reached in the negative direction (negative sign), (see illustration).</p> <p><b>Factory setting:</b> STANDARD</p> <p>Example for the SYMMETRY measuring mode: Switch-on point Q = 4, Switch-off point Q = 10 ① = Status output switched on (conductive) ② = Status output switched off (non-conductive)</p> <div></div> <p> <b>Note!</b></p> <ul style="list-style-type: none"><li>■ This function <b>cannot</b> be changed if:<ul style="list-style-type: none"><li>– The measuring device has been configured in accordance with NTEP or MC approval.</li><li>– The measuring device has been configured in accordance with PTB, NMi, METAS or BEV approval and YES has been selected for the available functions Z001 to Z002 in the CUSTODY TRANSFER block.</li></ul></li><li>■ This function is not available unless STATUS was selected in the MODE OF OPERATION function (4200) and the status output was assigned a limit value.</li><li>■ SYMMETRY cannot be selected unless the values in the ON-VALUE (4242) and OFF VALUE (4244) functions have the same sign or one of the values is zero.</li><li>■ If the values have different signs, SYMMETRY cannot be selected and an "ASSIGNMENT NOT POSSIBLE" message is displayed.</li></ul>

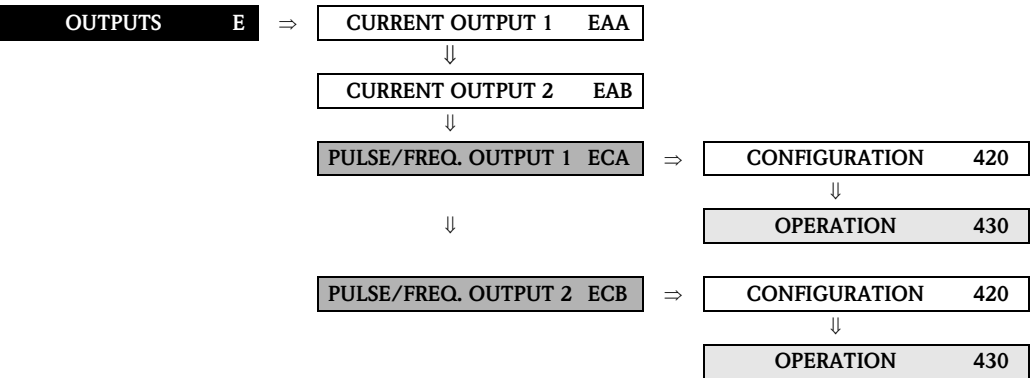


A0001247







Function description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1 to 2) → CONFIGURATION (STATUS)	
<b>TIME CONSTANT (4247)</b> 	<p>Entering a time constant defines how the measuring signal reacts to severely fluctuating measured variables, either very quickly (enter a low time constant) or with damping (enter a high time constant). Damping acts on the measuring signal before the switch status changes, and consequently before switch-on or switch-off delay is activated. The purpose of damping, therefore, is to prevent the status output changing state continuously in response to fluctuations in flow.</p> <p><b>User input:</b> Fixed-point number 0.00 to 100.00 s</p> <p><b>Factory setting:</b> 0.00 s</p> <p> <b>Note!</b></p> <ul style="list-style-type: none"> <li>■ This function <b>cannot</b> be changed if: <ul style="list-style-type: none"> <li>– The measuring device has been configured in accordance with NTEP or MC approval.</li> <li>– The measuring device has been configured in accordance with PTB, NMi, METAS or BEV approval and YES has been selected for the available functions Z001 to Z002 in the CUSTODY TRANSFER block.</li> </ul> </li> <li>■ This function is not available unless the STATUS option was selected in the MODE OF OPERATION(4200) function.</li> </ul>






8.2.2 Function group OPERATION










Function description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1 to 2) → OPERATION (FREQUENCY)	
ACTUAL FREQUENCY (4301)	<p>Use this function to view the computed actual value of the output frequency.</p> <p><b>Display:</b> 0 to 12500 Hz</p> <p> <b>Note!</b> This function is not available unless the PULSE option was selected in the MODE OF OPERATION(4200) function.</p>
SIMULATION FREQUENCY (4302) 	<p>Activates simulation of the frequency output.</p> <p><b>Options:</b> OFF ON</p> <p><b>Factory setting:</b> OFF</p> <p> <b>Note!</b></p> <ul style="list-style-type: none"><li>■ This function <b>cannot</b> be changed if:<ul style="list-style-type: none"><li>– The measuring device has been configured in accordance with NTEP or MC approval.</li><li>– The measuring device has been configured in accordance with PTB, NMi, METAS or BEV approval and YES has been selected for the available function Z001 or Z002 in the CUSTODY TRANSFER block.</li></ul></li><li>■ This function is available only if the FREQUENCY setting was selected in the OPERATION MODE (4200) function.</li><li>■ The "SIMULATION FREQUENCY OUTPUT" message indicates that simulation is active.</li><li>■ The measuring device continues to measure while simulation is in progress, i.e. the current measured values are output correctly via the other outputs.</li></ul> <p> <b>Caution!</b> The setting is not saved in the event of a power failure.</p>


Function description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1 to 2) → OPERATION (FREQUENCY)	
<b>VALUE SIMULATION FREQUENCY (4303)</b>  	<p>Define a selectable frequency value (e.g. 500 Hz) which should be output at the frequency output (with maximum pulse frequency or shortened minimum pulse width). This value is used to test downstream devices and the measuring device itself.</p> <p><b>User input:</b> 0 to 12500 Hz</p> <p><b>Factory setting:</b> 0 Hz</p> <p> <b>Note!</b></p> <ul style="list-style-type: none"> <li>■ This function <b>cannot</b> be changed if: <ul style="list-style-type: none"> <li>– The measuring device has been configured in accordance with NTEP or MC approval.</li> <li>– The measuring device has been configured in accordance with PTB, NMI, METAS or BEV approval and YES has been selected for the available function Z001 or Z002 in the CUSTODY TRANSFER block.</li> </ul> </li> <li>■ This function is not available unless FREQUENCY was selected in the MODE OF OPERATION function (4200) and the SIMULATION FREQUENCY function (4302) is active (= ON).</li> </ul> <p> <b>Caution!</b> The setting is not saved in the event of a power failure.</p>

Function description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1 to 2) → OPERATION (PULSE)	
<div><div><div>SIMULATION PULSE</div><div>(4322)</div><div></div></div></div>	<div><div>Activates simulation of the pulse output.</div><div><b>Options:</b> OFF  COUNTDOWN The pulses specified in the VALUE SIMULATION PULSE function are output.  CONTINUOUSLY Pulses are continuously output with the pulse width specified in the PULSE WIDTH function. Simulation is started once the CONTINUOUSLY option is confirmed with the  key.</div><div><div> Note!</div><div>Simulation is started by confirming the CONTINUOUSLY option with the  key. The simulation can be switched off again via the SIMULATION PULSE function.</div></div><div><b>Factory setting:</b> OFF  <div><div> Note!</div><div><div><div>■ This function <b>cannot</b> be changed if:</div><div><div>– The measuring device has been configured in accordance with NTEP or MC approval.</div><div>– The measuring device has been configured in accordance with PTB, NMi, METAS or BEV approval and YES has been selected for the available function Z001 or Z002 in the CUSTODY TRANSFER block.</div></div><div>■ This function is not available unless the PULSE option was selected in the MODE OF OPERATION(4200) function.</div><div>■ The notice message #631 "SIM. PULSE" indicates that simulation is active.</div><div>■ The on/off ratio is 1:1 for both types of simulation.</div><div>■ The measuring device continues to measure while simulation is in progress, i.e. the current measured values are output correctly via the other outputs.</div></div></div><div><div> Caution!</div><div>The setting is not saved in the event of a power failure.</div></div></div></div></div>

Function description	
OUTPUTS → PULSE/FREQUENCY OUTPUT (1 to 2) → OPERATION (PULSE)	
<b>VALUE SIMULATION PULSE (4323)</b> 	<p>Specify the number of pulses (e.g. 50) to be output during the simulation. This value is used to test downstream devices and the measuring device itself. The pulses are output with the pulse width specified in the PULSE WIDTH function. The on/off ratio is 1:1.</p> <p>Simulation is started once the specified value is confirmed with the  key. The display remains at 0 if the specified pulses have been output.</p> <p><b>User input:</b> 0 to 10,000</p> <p><b>Factory setting:</b> 0</p> <p> <b>Note!</b></p> <ul style="list-style-type: none"> <li>■ This function <b>cannot</b> be changed if: <ul style="list-style-type: none"> <li>– The measuring device has been configured in accordance with NTEP or MC approval.</li> <li>– The measuring device has been configured in accordance with PTB, NMI, METAS or BEV approval and YES has been selected for the available function Z001 or Z002 in the CUSTODY TRANSFER block.</li> </ul> </li> <li>■ This function is not available unless the COUNTDOWN setting was selected in the function SIMULATION PULSE.</li> <li>■ Simulation is started by confirming the simulation value with the  key. The simulation can be switched off again via the SIMULATION PULSE function.</li> </ul> <p> <b>Caution!</b> The setting is not saved in the event of a power failure.</p>

<b>Function description</b> OUTPUTS → PULSE/FREQUENCY OUTPUT (1 to 2) → OPERATION (STATUS)	
<b>ACTUAL STATUS (4341)</b>	<p>Use this function to check the current status of the status output.</p> <p><b>Display:</b> NOT CONDUCTIVE CONDUCTIVE</p> <p> <b>Note!</b> This function is not available unless the STATUS option was selected in the MODE OF OPERATION (4200) function.</p>
<b>SIMULATION SWITCH POINT (4342)</b> 	<p>Use this function to activate simulation of the status output.</p> <p><b>Options:</b> OFF ON</p> <p><b>Factory setting:</b> OFF</p> <p> <b>Note!</b></p> <ul style="list-style-type: none"> <li>■ This function <b>cannot</b> be changed if:             <ul style="list-style-type: none"> <li>– The measuring device has been configured in accordance with NTEP or MC approval.</li> <li>– The measuring device has been configured in accordance with PTB, NMi, METAS or BEV approval and YES has been selected for the available functions Z001 to Z002 in the CUSTODY TRANSFER block.</li> </ul> </li> <li>■ This function is not available unless the STATUS option was selected in the MODE OF OPERATION (4200) function.</li> <li>■ The "SIMULATION STATUS OUTPUT" message indicates that simulation is active.</li> <li>■ The measuring device continues to measure while simulation is in progress, i.e. the current measured values are output correctly via the other outputs.</li> </ul> <p> <b>Caution!</b> The setting is not saved in the event of a power failure.</p>
<b>VALUE SIMULATION SWITCH POINT (4343)</b> 	<p>Use this function to define the switching response of the status output during the simulation. This value is used to test downstream devices and the measuring device itself.</p> <p><b>Options:</b> NOT CONDUCTIVE CONDUCTIVE</p> <p><b>Factory setting:</b> NOT CONDUCTIVE</p> <p> <b>Note!</b></p> <ul style="list-style-type: none"> <li>■ This function <b>cannot</b> be changed if:             <ul style="list-style-type: none"> <li>– The measuring device has been configured in accordance with NTEP or MC approval.</li> <li>– The measuring device has been configured in accordance with PTB, NMi, METAS or BEV approval and YES has been selected for the available functions Z001 to Z002 in the CUSTODY TRANSFER block.</li> </ul> </li> <li>■ This function is not available unless STATUS was selected in the MODE OF OPERATION function (4200) and the SIMULATION SWITCH POINT function (4342) is active (= ON).</li> </ul> <p> <b>Caution!</b> The setting is not saved in the event of a power failure.</p>

### 8.2.3 Function group INFORMATION

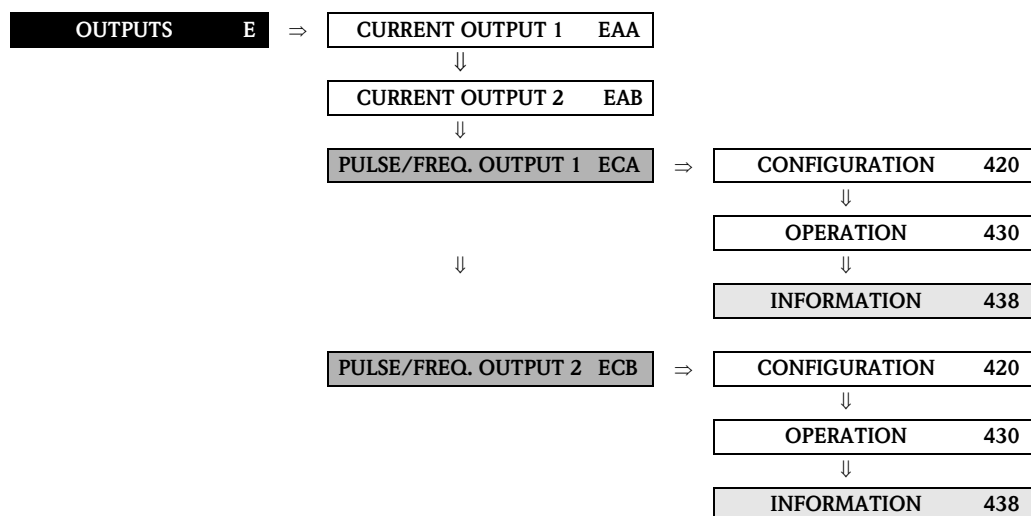




Function description	
OUTPUTS → PULSE/FREQ. OUTPUT(1 to 2) → INFORMATION	
<b>TERMINAL NUMBER (4380)</b>	Use this function to view the numbers of the terminals (in the connection compartment) and the polarity used by the pulse/frequency output.





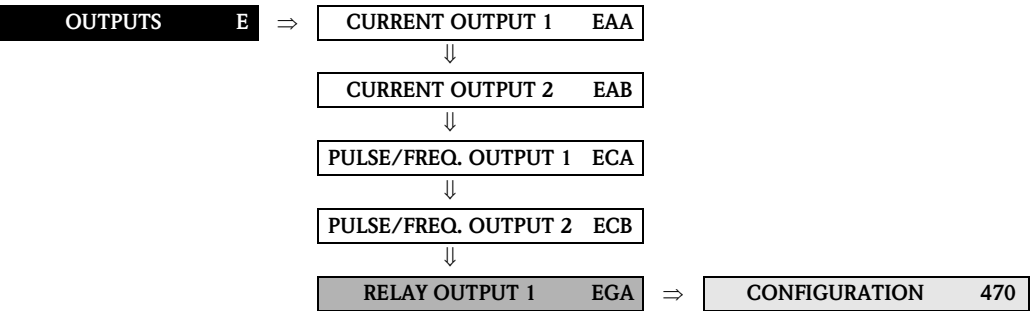











### 8.3 Group RELAY OUTPUT

#### 8.3.1 Function group CONFIGURATION




Function description	
OUTPUTS → RELAY OUTPUT → CONFIGURATION	
ASSIGN RELAY (4700) 	<p>Use this function to assign a switching function to the relay output.</p> <p><b>Options (standard):</b> OFF ON (operation) FAULT MESSAGE NOTICE MESSAGE FAULT MESSAGE or NOTICE MESSAGE EPD (Empty pipe detection, only if active) FLOW DIRECTION LIMIT MASS FLOW LIMIT VOLUME FLOW CORRECTED VOLUME FLOW LIMIT VALUE DENSITY LIMIT VALUE REFERENCE DENSITY LIMIT VALUE TEMPERATURE LIMIT VALUE LIMIT TOTALIZER 1 to 3</p> <p><b>Factory setting:</b> FAULT MESSAGE</p> <p> <b>Note!</b></p> <ul style="list-style-type: none"><li>■ It is very important to read and comply with the information on the switching characteristics of the relay output, (see Page 96).</li><li>■ It is advisable to configure at least one relay output as a fault output and define the outputs' failsafe mode.</li><li>■ The relay output is configured as a normally open (NO or make) contact by default. It can be reconfigured as a normally closed (NC or break) contact by means of a jumper on the relay module (see Operating Instructions Proline Promass 84, BA109D).</li><li>■ If you select OFF or ON, the only function shown in the CONFIGURATION function group is this function ASSIGN RELAY (4700).</li></ul>


<b>Function description</b> OUTPUTS → RELAY OUTPUT → CONFIGURATION	
<b>ON-VALUE (4701)</b> 	 <b>Note!</b> This function is not available unless LIMIT VALUE or FLOW DIRECTION was selected in the ASSIGN RELAY function (4700).  Use this function to assign a value to the switch-on point (relay output pulls up). The value can be higher or lower than the switch-off point. Positive or negative values are permissible, depending on the measured variable in question (e.g. mass flow, totalizer reading).  <b>User input:</b> 5-digit floating-point number [unit]  <b>Factory setting:</b> 0 [kg/h] or 2 [kg/l] or 200 [°C]   <b>Note!</b> <ul style="list-style-type: none"> <li>■ The appropriate unit is taken from the function UNIT MASS FLOW ((0400)) or UNIT VOLUME FLOW (0402).</li> <li>■ Only the switch-on point is available for flow direction output (no switch-off point). If you enter a value not equal to the zero flow (e.g. 5), the difference between the zero flow and the value entered corresponds to half the switchover hysteresis.</li> </ul>
<b>SWITCH-ON DELAY (4702)</b> 	 <b>Note!</b> This function is not available unless LIMIT VALUE or FLOW DIRECTION was selected in the ASSIGN RELAY function (4700).  Use this function to define a delay (0 to 100 seconds) for pull-up (i.e. signal changes from 0 to 1) of the relay output. The delay starts when the limit value is reached. The relay output does switch when the delay has timed out and the switch on condition has been valid over the delay time.  <b>User input:</b> fixed-point number 0.0 to 100.0 s  <b>Factory setting:</b> 0.0 s
<b>OFF VALUE (4703)</b> 	 <b>Note!</b> This function is not available unless a number was selected in the ASSIGN RELAY function (4700).  Use this function to assign a value to the switch-off point (relay drops out). The value can be higher or lower than the switch-on point. Positive or negative values are permissible, depending on the measured variable in question (e.g. mass flow, totalizer reading).  <b>User input:</b> 5-digit floating-point number [unit]  <b>Factory setting:</b> 0 [kg/h] or 2 [kg/l] or 200 [°C]   <b>Note!</b> <ul style="list-style-type: none"> <li>■ The appropriate unit is taken from the function UNIT MASS FLOW ((0400)) or UNIT VOLUME FLOW (0402).</li> <li>■ If SYMMETRY is selected in the function MEASURING MODE (4705) and values with different signs are entered for the switch-on and switch-off points, the notice message "INPUT RANGE EXCEEDED" appears.</li> </ul>

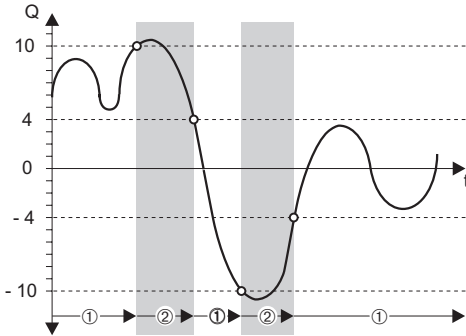



Function description	
OUTPUTS → RELAY OUTPUT → CONFIGURATION	
<div>SWITCH-OFF DELAY</div> <div>(4704)</div> <div></div>	<div> Note!</div> <div>This function is not available unless a number was selected in the ASSIGN RELAY function (4700).</div> <div>Use this function to define a delay (0 to 100 seconds) for dropout (i.e. signal changes from 1 to 0) of the relay output. The delay starts when the limit value is reached. The relay output does switch when the delay has timed out and the switch off condition has been valid over the delay time.</div> <div><b>User input:</b> fixed-point number 0.0 to 100.0 s</div> <div><b>Factory setting:</b> 0.0 s</div>
<div>MEASURING MODE</div> <div>(4705)</div> <div></div>	<div> Note!</div> <div>This function is not visible unless a limit value was assigned to the relay output.</div> <div>Use this function to define the measuring mode for the relay output.</div> <div><b>Options:</b> STANDARD The relay output signal switches at the defined switch points.</div> <div>SYMMETRY The relay output signal switches at the defined switch points, irrespective of the sign. If you define a switch point with a positive sign, the relay output switches as soon as the value is reached in the negative direction (negative sign), (see illustration).</div> <div><b>Factory setting:</b> STANDARD</div> <div>Example for the SYMMETRY measuring mode: Switch-on point Q = 4 Switch-off point Q = 10 ① = Relay energized ② = Relay de-energized</div> <div></div> <div> Note!</div> <div><ul style="list-style-type: none"><li>■ SYMMETRY cannot be selected unless the values in the ON-VALUE (4701) and OFF VALUE (4703) functions have the same sign or one of the values is zero.</li><li>■ If the values have different signs, SYMMETRY cannot be selected and an "ASSIGNMENT NOT POSSIBLE" message is displayed.</li></ul></div>

A0001247
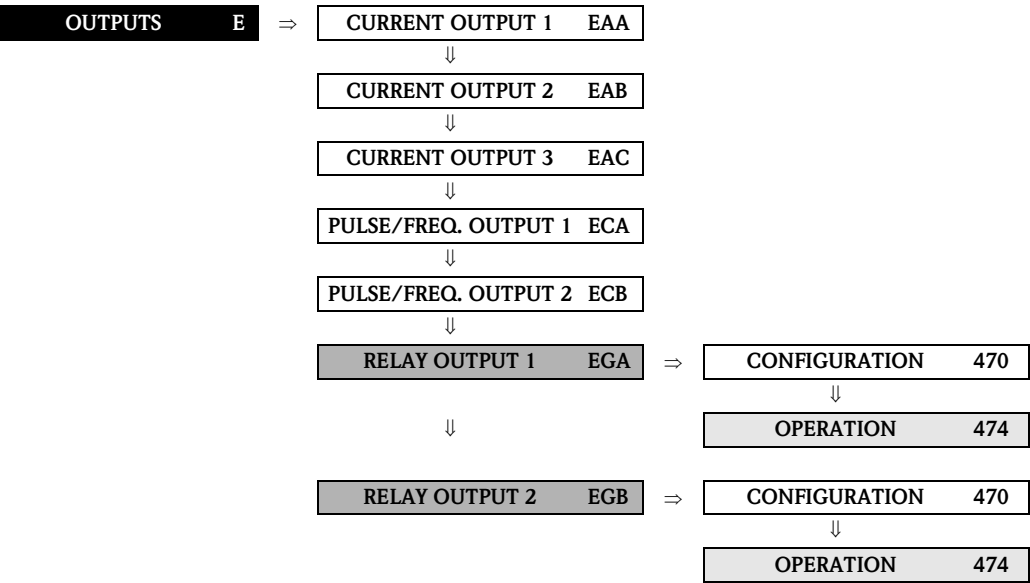
<b>Function description</b>	
OUTPUTS → RELAY OUTPUT → CONFIGURATION	
<b>TIME CONSTANT (4706)</b> 	<p>Entering a time constant defines how the measuring signal reacts to severely fluctuating measured variables, either very quickly (enter a low time constant) or with damping (enter a high time constant). Damping acts on the measuring signal before the switch status changes, and consequently before switch-on or switch-off delay is activated. The purpose of damping, therefore, is to prevent the relay output changing state continuously in response to fluctuations in flow.</p> <p><b>User input:</b> fixed-point number: 0.00 to 100.00 s</p> <p><b>Factory setting:</b> 0.00 s</p>


8.3.2 Function group OPERATION



Function description	
OUTPUTS → RELAY OUTPUT (1 to 2) → OPERATION	
ACTUAL STATUS RELAY (4740)	<p>Use this function to check the current status of the relay output.</p> <p><b>Display:</b> MAKE CONTACT OPEN MAKE CONTACT CLOSED BREAK CONTACT OPEN BREAK CONTACT CLOSED</p> <p> <b>Note!</b> A jumper on the contact side defines the relay output as a normally open (NO or make) or normally closed (NC or break) contact (see Operating Instruction Proline Promass 84, BA109D).</p>
SIMULATION SWITCH POINT (4741) 	<p>Use this function to activate simulation of the relay output.</p> <p><b>Options:</b> OFF ON</p> <p><b>Factory setting:</b> OFF</p> <p> <b>Note!</b></p> <ul style="list-style-type: none"><li>■ The "SIMULATION RELAY" message indicates that simulation is active.</li><li>■ The measuring device continues to measure while simulation is in progress, i.e. the current measured values are output correctly via the other outputs.</li></ul> <p> <b>Caution!</b> The setting is not saved in the event of a power failure.</p>

<b>Function description</b>	
OUTPUTS → RELAY OUTPUT (1 to 2) → OPERATION	
<b>VALUE SIMULATION SWITCH POINT (4742)</b> 	 <b>Note!</b> The function is not visible unless the function SIMULATION SWITCH POINT (4741) is active (= ON).  Use this function to define the status of the relay output during the simulation. This value is used to test downstream devices and the measuring device itself. Depending on the relay configuration (as make or break contact) the following selections are available.  <b>Options:</b> Relay output configured as normally open (make) contact: MAKE CONTACT OPEN MAKE CONTACT CLOSED  Relay output configured as normally closed (break) contact: BREAK CONTACT OPEN BREAK CONTACT CLOSED   <b>Caution!</b> The setting is not saved in the event of a power failure.

8.3.3 Function group INFORMATION

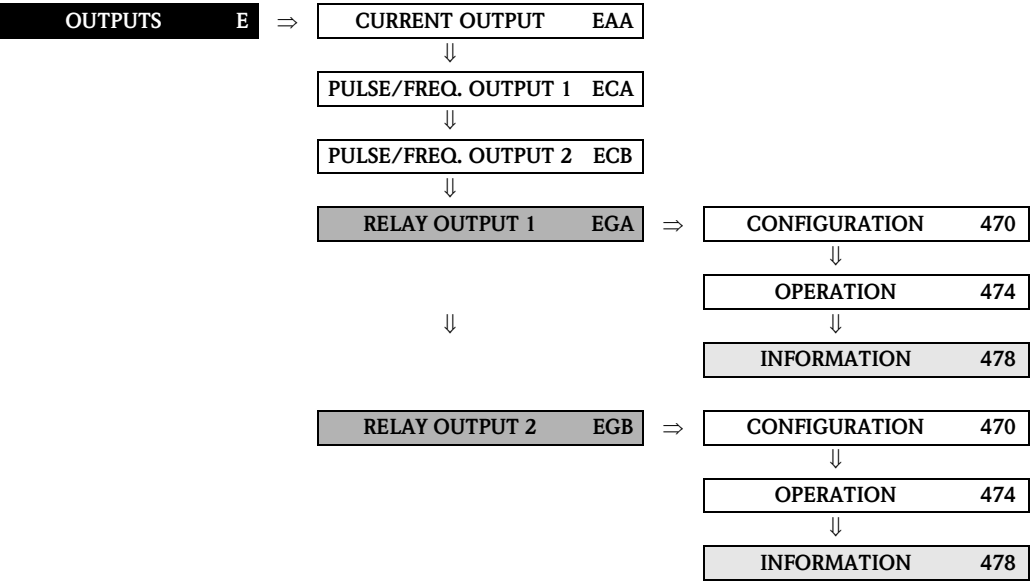

Function description	
OUTPUTS → RELAY OUTPUT (1 to 2) → INFORMATION	
TERMINAL NUMBER (4780)	Use this function to view the numbers of the terminals (in the connection compartment) and the polarity used by the relay output.


## 8.4 Behavior of status output

### General

If you have configured the status output signal for LIMIT VALUE or FLOW DIRECTION, you can define the requisite switch points in the ON-VALUE and OFF-VALUE functions. When the measured variable in question reaches one of these predefined values, the status output switches as shown in the illustrations below.

### Status output configured for flow direction (Fig. 4)

The value you entered in the function ON-VALUE defines the switch point for the positive and negative directions of flow. If, for example, the switch point you define is  $1 \text{ m}^3/\text{h}$ , the status output does not switch off until  $-1 \text{ m}^3/\text{h}$  (non-conductive) and switches on again at  $+1 \text{ m}^3/\text{h}$ . Set the switch point to 0 if your process calls for direct switchover (no switching hysteresis). If low flow cut off is used, it is advisable to set hysteresis to a value higher than or equal to the low flow cut off rate.

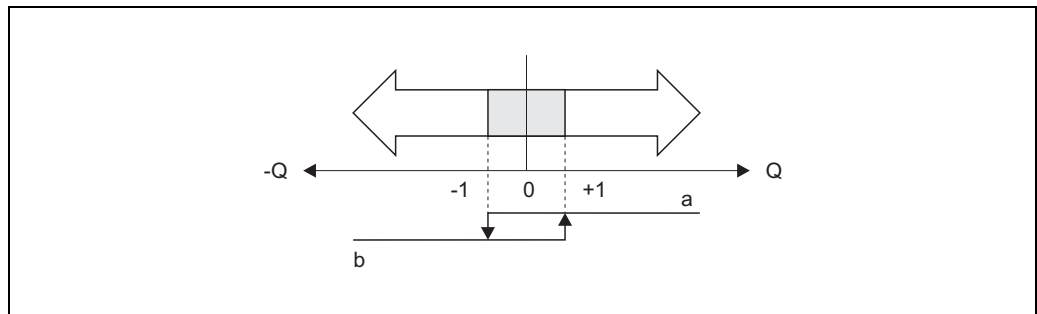


A0001236

Fig. 4: Switching behavior of the status output for flow direction  
a = status output conductive, b = status output non-conductive

### Status output configured for limit value (Fig. 5)

The status output signal switches as soon as the measured variable undershoots or overshoots a defined switch point.

Application: Monitoring flow or process-related boundary conditions.

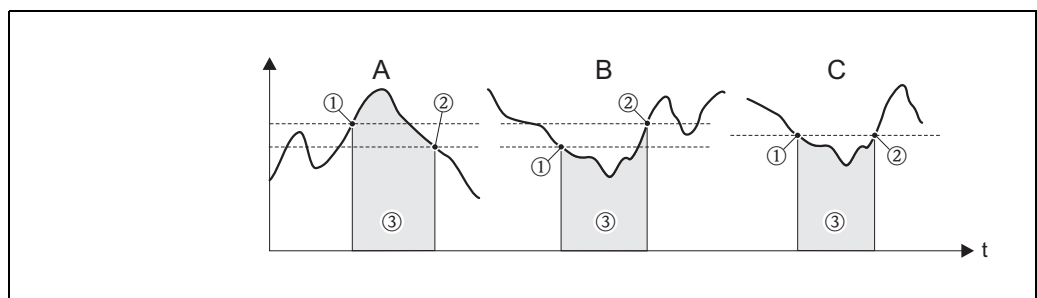

















A0001235













Fig. 5: Switching behavior of the status output for limit value

- ① =  $ON < OFF \text{ VALUE}$  (maximum safety)
- ② =  $ON \geq OFF \text{ VALUE}$  (minimum safety)
- ③ = Status output switched off (non-conductive)




## 8.5 Status output switching behavior

Function	State	Open collector behavior (Transistor)
<b>ON (operation)</b>	System in measuring mode  A0001052	Conductive  A0001237
	System not in measuring mode (power supply failed)  A0001291	Non-conductive  A0001238
<b>Fault message</b>	System OK  A0001052	Conductive  A0001237
	(System or process error) Fault → Failsafe mode, outputs/inputs and totalizers  A0001291	Non-conductive  A0001238
<b>Notice message</b>	System OK  A0001052	Conductive  A0001237
	(System or process error) Fault → Continuation of measuring  A0001291	Non-conductive  A0001238
<b>Fault message or Notice message</b>	System OK  A0001052	Conductive  A0001237
	(System or process error) Fault → Response to error or Note → Continuation of measuring  A0001291	Non-conductive  A0001238

Function	State		Open collector behavior (Transistor)
<b>Empty pipe detection (EPD)</b>	Measuring tube full	 A0001292	Conductive  A0001237
	Measuring tube partially filled / empty measuring tube	 A0001293	Non-conductive  A0001238
<b>Flow direction</b>	forward	 A0001241	Conductive  A0001237
	reverse	 A0001242	Non-conductive  A0001238
<b>Limit value</b> – Mass flow – Volume flow – Corrected volume flow – Density – Reference density – Temperature – Totalizer	Limit value <b>not</b> overshoot or undershot	 A0001243	Conductive  A0001237
	Limit value overshoot or undershot	 A0001244	Non-conductive  A0001238
* Terminal numbers in accordance with the function TERMINAL NO. (4380) on Page 88.			



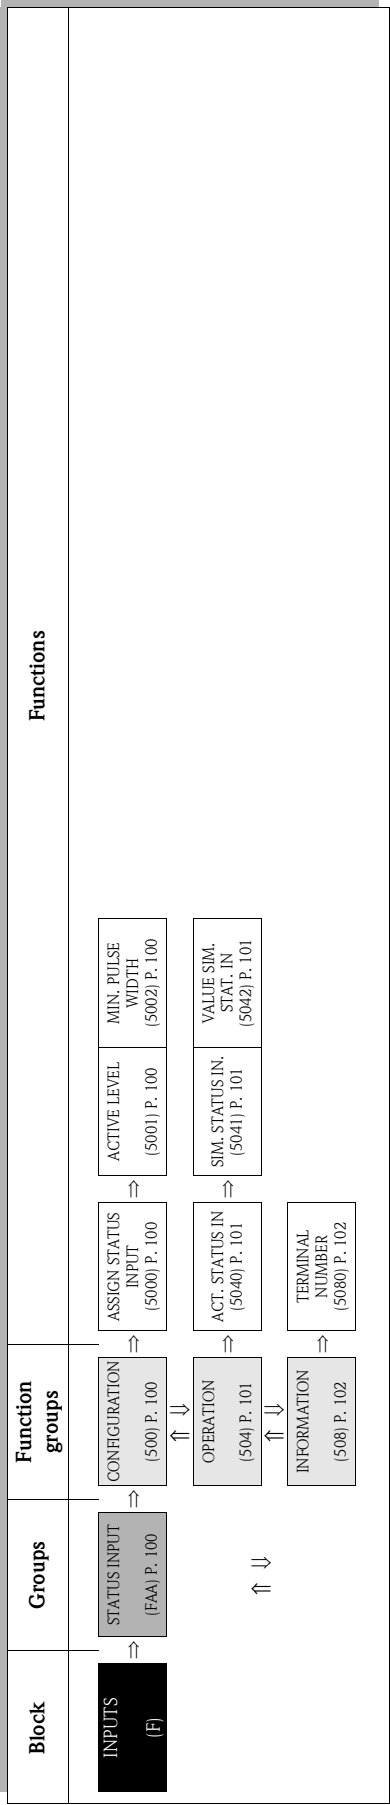

9 Block INPUTS




## 9.1 Group STATUS INPUT







### 9.1.1 Function group CONFIGURATION

INPUTS	F	⇒	STATUS INPUT	FAA	⇒	CONFIGURATION	500
--------	---	---	--------------	-----	---	---------------	-----


Function description INPUTS → STATUS INPUT → CONFIGURATION	
<b>ASSIGN STATUS INPUT (5000)</b> 	<p>Use this function to assign a switching function to the status input.</p> <p><b>Options:</b>            OFF            RESET TOTALIZER 1            RESET TOTALIZER 2            RESET TOTALIZER 3            RESET ALL TOTALIZERS            POSITIVE ZERO RETURN            RESET FAULT MESSAGE            ZERO POINT ADJUSTMENT</p> <p><b>Factory setting:</b>            RESET FAULT MESSAGE</p> <p> <b>Caution!</b>            POSITIVE ZERO RETURN is active as long as the level is available at the status input (continuous signal). All other assignments react to a change in level (pulse) at the status input.</p>
<b>ACTIVE LEVEL (5001)</b> 	<p>Use this function to define whether the assigned function (see function ASSIGN STATUS INPUT(5000)) is released when the signal level is present (HIGH) or not present (LOW).</p> <p><b>Options:</b>            HIGH            LOW</p> <p><b>Factory setting:</b>            HIGH</p>
<b>MINIMUM PULSE WIDTH (5002)</b> 	<p>Use this function to define a minimum pulse width which the input pulse must achieve in order to trigger the selected switching function, (see function ASSIGN STATUS INPUT(5000)).</p> <p><b>User input:</b>            20 to 100 ms</p> <p><b>Factory setting:</b>            50 ms</p>

9.1.2 Function group OPERATION



Function description	
INPUTS → STATUS INPUT → OPERATION	
ACTUAL STATUS INPUT (5040)	Use this function to view the current level of the status input.  <b>Display:</b> HIGH LOW
SIMULATION STATUS INPUT (5041) 	Use this function to simulate the status input, in other words to trigger the function assigned to the status input (ASSIGN STATUS INPUT (5000) → Page 100).  <b>Options:</b> OFF ON  <b>Factory setting:</b> OFF   <b>Note!</b> ■ The "SIMULATION STATUS INPUT" notice message indicates that simulation is active. ■ The measuring device continues to measure while simulation is in progress, i.e. the current measured values are output correctly via the other outputs.   <b>Caution!</b> The setting is not saved in the event of a power failure.
VALUE SIMULATION STATUS INPUT (5042) 	Use this function to define the level to be assumed at the status output during the simulation. This value is used to test downstream devices and the measuring device itself.  <b>Options:</b> HIGH LOW  <b>Factory setting:</b> LOW   <b>Note!</b> The function is not visible unless the function SIMULATION STATUS INPUT (5041) is active (= ON).   <b>Caution!</b> The setting is not saved in the event of a power failure.

9.1.3      Function group INFORMATION

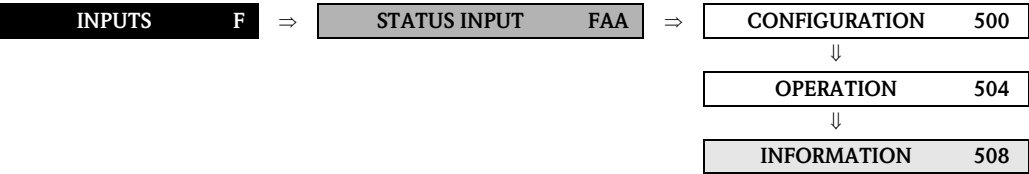

Function description	
INPUTS → STATUS INPUT → INFORMATION	
TERMINAL NUMBER (5080)	Use this function to view the numbers of the terminals (in the connection compartment) and the polarity used by the status input.







# 10 Block BASIC FUNCTION

Block	Groups	Function groups	Functions							
BASIC FUNCTION (G)	HART (GAA) P. 104	⇒	CONFIGURATION (600) P. 104	⇒	TAG NAME (6000) P. 104	⇒	TAG DESCRIPTION (6001) P. 104	BUS ADDRESS (6002) P. 104	HART PROTOCOL (6003) P. 104	WRITE PROTECTION (6004) P. 104
		⇕	⇕							
	PROCESS PARAMETER (GJA) P. 106	⇕	INFORMATION (604) P. 105	⇒	MANUFACTURER ID (6040) P. 105	⇒	DEVICE ID (6041) P. 105	DEVICE REVISION (6042) P. 105		
		⇕								
		⇒	CONFIGURATION (640) P. 106	⇒	ASSIGN LF CUT OFF (6400) P. 106	⇒	ON-VALUE LF CUTOFF (6402) P. 106	OFF-POINT LF CUT OFF (6403) P. 106	PRESS SHOCK SUPPR. (6404) P. 107	
		⇕	⇕							
		⇒	EPD PARAMETER (642) P. 108	⇒	EMPTY PIPE DETECT. (6420) P. 108	⇒	EMPTY PIPE DET. LOW (6423) P. 108	EPD VALUE HIGH (6424) P. 108	EPD RESP. TIME (6425) P. 108	EPD EXC. CURR. (6426) P. 109
		⇕	⇕							
		⇒	REFERENCE PARAMETER (646) P. 110	⇒	CORR. VOL. CALC. (6460) P. 110	⇒	FIXED REF. DENSITY (6461) P. 110	EXPANS. COEFF. (6462) P. 110	EXPAN. COEF. SOR. (6463) P. 110	REFERENCE TEMPERATURE (6464) P. 111
		⇕	⇕							
		⇒	ADJUSTMENT (648) P. 112	⇒	ZERO POINT ADJUST. (6480) P. 112	⇒	DENSITY ADJUST. MODE (6482) P. 112	DENSITY SET VALUE 1 (6483) P. 112	MEASURE FLUID 1 (6484) P. 112	DENSITY SET VALUE 2 (6485) P. 113
		⇕	⇕							
		⇒	PRESSURE CORRECTION (650) P. 114	⇒	PRESSURE MODE (6500) P. 114	⇒	PRESSURE (6501) P. 114			DENSITY ADJUSTMENT (6487) P. 113
		⇕	⇕							RESTORE ORIG. (6488) P. 113
		⇕	⇕							
		SYSTEM PARAMETER (GLA) P. 115	⇒	CONFIGURATION (660) P. 115	⇒	INSTALL. DIR. SENSOR (6600) P. 115	⇒	DENSITY DAMPING (6602) P. 115	FLOW DAMPING (6603) P. 115	POS. ZERO RETURN (6605) P. 115
	⇕		⇕							
	SENSOR DATA (GNA) P. 116	⇒	CONFIGURATION (680) P. 116	⇒	K-FACTOR (6800) P. 116	⇒	ZERO POINT (6803) P. 116	NOMINAL DIAMETER (6804) P. 116		
		⇕	⇕							
		⇒	FLOW COEFF. (684) P. 117	⇒	COEFF. KM (6840) P. 117	⇒	COEFF. KM 2 (6841) P. 117	COEFF. KT (6842) P. 117	COEFF. KD 1 (6843) P. 117	COEFF. KD 2 (6844) P. 117
		⇕	⇕							
		⇒	DENSITY COEFF. (685) P. 118	⇒	COEFF. C0 (6850) P. 118	⇒	COEFF. C1 (6851) P. 118	COEFF. C2 (6852) P. 118	COEFF. C3 (6853) P. 118	COEFF. C4 (6854) P. 118
		⇕	⇕							COEFF. C5 (6855) P. 118
		⇒	ADDITION. COEFF. (686) P. 119	⇒	MIN. FLUID TEMP. (6860) P. 119	⇒	MAX. FLUID TEMP. (6861) P. 119	MIN. CARRIER TEMP. (6862) P. 119	MAX. CARRIER TEMP. (6863) P. 119	
⇕		⇕								

## 10.1 Group HART


### 10.1.1 Function group CONFIGURATION

BASIC FUNCTION	G	⇒	HART	GAA	⇒	CONFIGURATION	600
----------------	---	---	------	-----	---	---------------	-----

Function description	
BASIC FUNCTION → HART → CONFIGURATION	
<b>TAG NAME (6000)</b>  (only for NTEP, MC)	<p>Use this function to enter a tag name for the measuring device. You can edit and read this tag name via the local display or the HART protocol.</p> <p><b>User input:</b> max. 8-character text, permissible: A-Z, 0-9, +, -, punctuation marks</p> <p><b>Factory setting:</b> " _ _ _ _ _ " (no text)</p>
<b>TAG DESCRIPTION (6001)</b>  (only for NTEP, MC)	<p>Use this function to enter a tag description for the measuring device. You can edit and read this tag name via the local display or the HART protocol.</p> <p><b>User input:</b> max. 16-character text, permissible: A-Z, 0-9, +, -, punctuation marks</p> <p><b>Factory setting:</b> " _ _ _ _ _ " (No text)</p>
<b>BUS ADDRESS (6002)</b>  (only for NTEP, MC)	<p>Use this function to define the address for the exchange of data with the HART protocol.</p> <p><b>User input:</b> 0 to 15</p> <p><b>Factory setting:</b> 0</p> <p> Note!</p> <ul style="list-style-type: none"> <li>Addresses 1 to 15: a constant 4 mA current is applied.</li> <li>This function is <b>not</b> changeable if the measuring device is configured according to the PTB, NMI, METAS or BEV approval and YES has been selected in the available functions Z001 to Z003 in the block CUSTODY TRANSFER.</li> </ul>
<b>HART PROTOCOL (6003)</b>	<p>Use this function to display if the HART protocol is active.</p> <p><b>Display:</b> OFF = HART protocol not active ON = HART protocol active</p> <p> Note!</p> <p>The HART protocol can be activated with the selection 4–20 mA HART or 4–20 mA (25 mA) in the function CURRENT SPAN → Page 53.</p>
<b>WRITE PROTECTION (6004)</b>	<p>Use this function to check whether the measuring device can be write-accessed.</p> <p><b>Display:</b> OFF = Data exchange is possible ON = Data exchange disabled</p> <p><b>Factory setting:</b> OFF</p> <p> Note!</p> <p>Write protection is disabled or enabled by means of a jumper on the I/O board. For additional information on write protection, refer to the Operating Instructions for the Promass 84 (BA109D).</p>




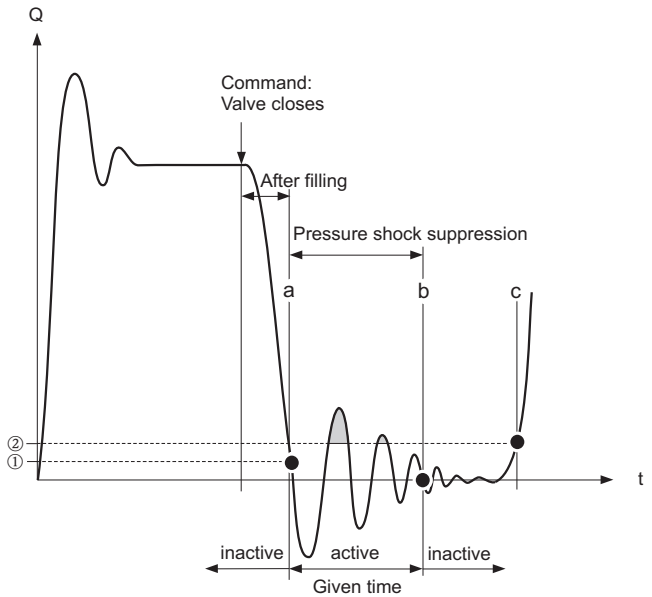


10.1.2 Function group INFORMATION











Function description	
BASIC FUNCTION → HART → OPERATION	
MANUFACTURER ID (6040)	Use this function to view the manufacturer ID in decimal numerical format. <b>Display:</b> <ul style="list-style-type: none"><li>– Endress+Hauser</li><li>– 17 (≅ 11 hex) for Endress+Hauser</li></ul>
DEVICE ID (6041)	Use this function to view the device ID in hexadecimal numerical format. <b>Display:</b> 52 (≅ 82 dez) for Promass 84
DEVICE REVISION (6042)	Displays the device-specific revision of the HART command interface. <b>Display:</b> e.g.: 5

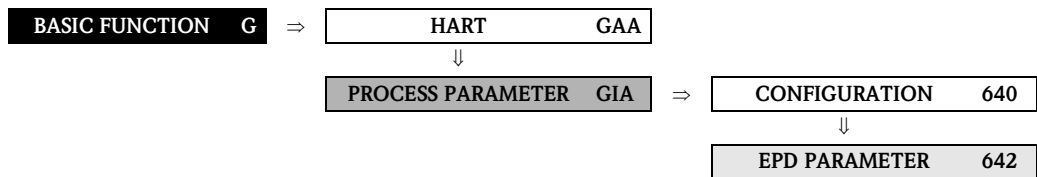



Function description	
BASIC FUNCTION → PROCESSPARAMETER → CONFIGURATION	
<b>PRESSURE SHOCK SUPPRESSION (6404)</b> 	<p>The closure of a valve can cause brief but severe movements of the fluid in the piping system, movements which the measuring system registers. The pulses totaled in this way result in a totalizer reading error, particularly in the case of batching processes. For this reason, the measuring device is equipped with pressure shock suppression (= short-term signal suppression) which can eliminate system-related "disruptions".</p> <p> <b>Note!</b>  Note that pressure shock suppression cannot be used unless the low flow cut off is active, (see function ON-VALUE LOW FLOW CUT OFF on Page 106).</p> <p>Use this function to define the time span for active pressure shock suppression.</p> <p><b>Activation of the pressure shock suppression</b>  Pressure shock suppression is activated after the flow falls below the switch-on point of the low flow cut off (see point <b>a</b> in graphic).</p> <p>While pressure shock suppression is active, the following conditions apply:</p> <ul style="list-style-type: none"> <li>■ Flow reading on display → 0</li> <li>■ Totalizer reading → the totalizers are pegged at the last correct value.</li> </ul> <p><b>Deactivation of the pressure shock suppression</b>  The pressure shock suppression is deactivated after the time interval, set in this function, has passed (see point <b>b</b> in graphic).</p> <p> <b>Note!</b>  The actual flow value is displayed and output, when the time interval for the pressure shock suppression has passed and the flow exceeds the switch-off point of the low flow cut off (see point <b>c</b> in graphic).</p>  <p style="text-align: right;">A0001285-EN</p> <p>① = Off-value (low flow cut off)  ② = On-VALUE (low flow cut off)  a Active when value falls below the on-value of the low flow cut off  b Deactivated after specified time expires  c Flow values are again used to calculate the pulses  ■ Suppressed values  Q Flow</p> <p><b>User input:</b>  max. 4-digit number, incl. unit: 0.00 to 100.0 s</p> <p><b>Factory setting:</b>  0.00 s</p>


## 10.2.2 Function group EPD PARAMETER





Function description	
BASIC FUNCTION → PROCESSPARAMETER → EPD PARAMETER	
<b>EMPTY PIPE DETECTION (6420)</b> 	<p>Use this function to activate the empty pipe detection (EPD). With empty measuring tubes the density of the fluid falls below the value specified in the function EPD VALUE LOW.</p> <p><b>Options:</b> OFF ON</p> <p><b>Factory setting:</b> Liquid: ON Gas: OFF</p> <p> <b>Caution!</b></p> <ul style="list-style-type: none"> <li>■ Select a correspondingly low EPD response value in the function EPD VALUE LOW, so that the difference to the effective density of the fluid is sufficiently large enough. This ensures that totally empty measuring tubes and not partially filled ones are detected.</li> <li>■ For gas measurement we strongly recommend to switch off empty pipe detection.</li> </ul>
<b>EPD VALUE LOW (6423)</b> 	<p> <b>Note!</b> This function is not available unless the ON selection was selected in the EMPTY PIPE DETECTION function.</p> <p>Use this function to set a lower threshold for the measured density value, in order to detect possible problems in the process indicated by too low density.</p> <p><b>User input:</b> 5-digit floating-point number</p> <p><b>Factory setting:</b> 0.2000 kg/l</p>
<b>EPD VALUE HIGH (6424)</b> 	<p> <b>Note!</b> This function is not available unless the ON selection was selected in the EMPTY PIPE DETECTION function.</p> <p>Use this function to set an upper threshold for the measured density value.</p> <p><b>User input:</b> 5-digit floating-point number</p> <p><b>Factory setting:</b> 6.0000 kg/l</p>
<b>EPD RESPONSE TIME (6425)</b> 	<p>Use this function to enter the time span for which the criteria for an empty pipe have to be satisfied without interruption before a notice message or fault message is generated.</p> <p><b>User input:</b> Fixed-point number 1.0 to 100 s</p> <p><b>Factory setting:</b> 1.0 s</p>

Function description	
BASIC FUNCTION → PROCESSPARAMETER → EPD PARAMETER	
<div>EPD EXC.CURR. (6426)</div> <div></div>	<div>Use this function to activate the empty pipe detection (EPD).</div> <div>In the event of inhomogeneous fluids or air bubbles, the exciting current of the measuring pipes increases. If the excitation current set in this function is exceeded, error message #700 is output similar to the function EPD VALUE LOW (6423) and EPD VALUE HIGH (6424).</div> <div><b>User input:</b> 5-digit floating-point number</div> <div><b>Factory setting:</b> 100 mA (deactivated)</div> <div><div> Note!</div><div>The function is not activated until a value under 100 mA is input. Entering the value 100 mA deactivates the function.</div></div>

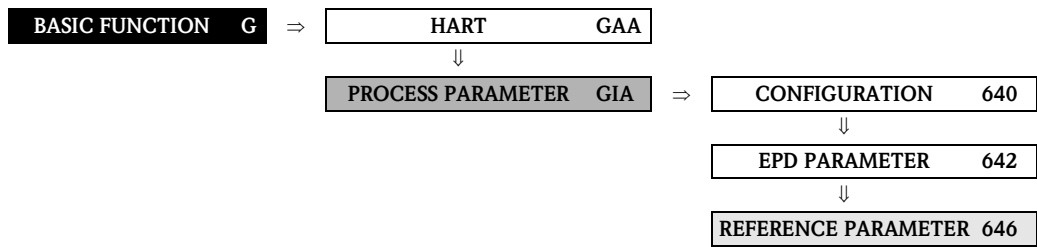
### 10.2.3 Function group REFERENCE PARAMETER



Function description	
BASIC FUNCTION → PROCESSPARAMETER → REFERENCE PARAMETER	
<b>CORRECTED VOLUME CALCULATION (6460)</b> 	<p>This function is used to set the reference density for calculating the corrected volume flow.</p> <p><b>Options:</b>            FIXED REFERENCE DENSITY            CALCULATED REFERENCE DENSITY</p> <p><b>Factory setting:</b>            CALCULATED REFERENCE DENSITY</p>
<b>FIXED REFERENCE DENSITY (6461)</b> 	<p> <b>Note!</b>            This function is not available unless the FIXED REFERENCE DENSITY setting was selected in the CORRECTED VOLUME CALCULATION (6460) function.</p> <p>In this function, a fixed value for the reference density can be entered, with which the corrected volume flow or corrected volume is calculated.</p> <p><b>User input:</b>            5-digit floating-point number</p> <p><b>Factory setting:</b>            1 kg/Nl</p>
<b>EXPANSION COEFFICIENT (6462)</b> 	<p> <b>Note!</b>            This function is not available unless the CALCULATED REFERENCE DENSITY setting was selected in the CORRECTED VOLUME CALCULATION function (6460).</p> <p>For temperature-compensated calculations of the reference density an expansion coefficient specific to the fluid is required and can be entered in this function (see (6464) (→ Page 111) function on REFERENCE TEMPERATURE).</p> <p><b>User input:</b>            5-digit floating-point number</p> <p><b>Factory setting:</b>  <math>0.5000 \text{ e}^{-3} [1/\text{K}]</math></p>
<b>EXPANSION COEFFICIENT SQUARE (6463)</b> 	<p>Use this function to enter a square expansion coefficient if the temperature compensation follows a nonlinear behavior (see REFERENCE TEMPERATURE (6464) function on → Page 111).</p> <p><b>User input:</b>            5-digit floating-point number</p> <p><b>Factory setting:</b>  <math>0 \text{ e}^{-6} [1/\text{K}^2]</math></p>





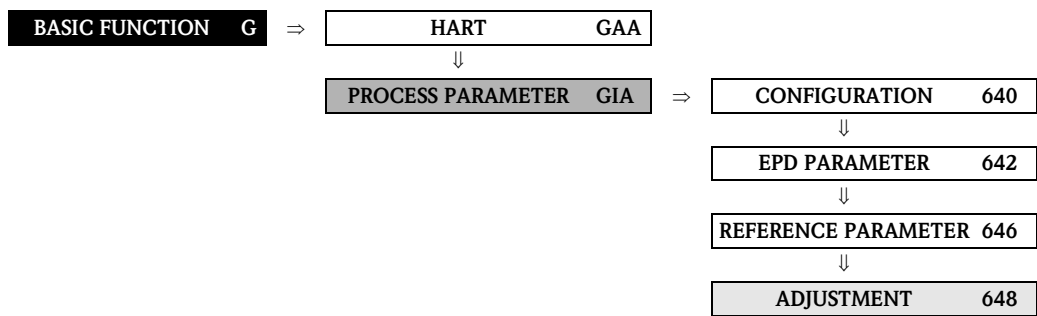

Function description	
BASIC FUNCTION → PROCESSPARAMETER → REFERENCE PARAMETER	
REFERENCE TEMPERATURE (6464) 	<div> <b>Note!</b> This function is not available unless the CALCULATED REFERENCE DENSITY setting was selected in the CORRECTED VOLUME CALCULATION function (6460).  Entering the reference temperature for calculating the corrected volume flow, the corrected volume and the reference density.  <b>User input:</b> 5-digit floating-point number  <b>Factory setting:</b> 20.000 °C  The reference density is calculated as follows: <math>\rho_N = \rho \cdot (1 + \alpha \Delta t + \beta \Delta t^2)</math> ; where <math>\Delta t = t - t_N</math> <math>\rho_N</math> = Reference density <math>\rho</math> = Currently measured fluid density (measuring value of the measuring instrument) <math>t</math> = Actual measured temperature of fluid (measuring value of the measuring instrument) <math>t_N</math> = Reference temperature for calculating the reference density (e.g. 20 °C) <math>\alpha</math> = Volumetric expansion coefficient of the fluid, Unit = [1/K]; K = Kelvin <math>\beta</math> = Square vol. expansion coefficient of the fluid, unit [1/K<sup>2</sup>]</div>

## 10.2.4 Function group ADJUSTMENT




Function description	
BASIC FUNCTION → PROCESSPARAMETER → ADJUSTMENT	
<b>ZERO POINT ADJUSTMENT (6480)</b> 	<p>For starting the zero point adjustment. The new zero point determined by the measuring system is adopted by the function ZERO POINT (6803) → Page 116.</p> <p><b>Options:</b> CANCEL START</p> <p><b>Factory setting:</b> CANCEL</p> <p> <b>Caution!</b> Before carrying this out, please refer to the Operating Instructions of the Promass 84 (BA109D) for a detailed description of the procedure for zero point adjustment.</p> <p> <b>Note!</b></p> <ul style="list-style-type: none"> <li>■ Programming is locked during zero point adjustment. The message "ZERO ADJUST RUNNING" appears on the display.</li> <li>■ If the zero point adjustment is not possible (e.g. if <math>v &gt; 0.1</math> m/s) or has been canceled, the alarm message "ZERO ADJUST NOT POSSIBLE" appears on the display.</li> <li>■ If the Promass 84 measuring electronics are fitted with a status input, then the zero point can also be activated by using this input.</li> </ul>
<b>DENSITY ADJUST MODE (6482)</b> 	<p>Select whether a 1-point or 2-point density adjustment should be carried out.</p> <p><b>Options:</b> CANCEL 1-POINT 2-POINT</p>
<b>DENSITY SET VALUE 1 (6483)</b> 	<p>Use this function to enter the density setpoint value for the first fluid for which you want to carry out a field density adjustment.</p> <p><b>User input:</b> 5-digit floating-point number, incl. units</p> <p> <b>Note!</b></p> <ul style="list-style-type: none"> <li>■ The preset density entered here should not vary from the actual fluid density by a more than <math>\pm 10\%</math>.</li> <li>■ The appropriate unit is taken from the function group SYSTEM UNITS (see Page 15).</li> </ul>
<b>MEASURE FLUID 1 (6484)</b> 	<p>Measure the actual density of the first fluid for the density adjustment.</p> <p><b>Options:</b> CANCEL START</p>



<b>Function description</b> BASIC FUNCTION → PROCESSPARAMETER → ADJUSTMENT	
<b>DENSITY SET VALUE 2 (6485)</b> 	<p>Use this function to enter the density setpoint value for the second fluid for which you want to carry out a field density adjustment.</p> <p><b>User input:</b> 5-digit floating-point number, incl. units</p> <p> <b>Note!</b></p> <ul style="list-style-type: none"> <li>■ The preset density entered here should not vary from the actual fluid density by a more than <math>\pm 10\%</math>.</li> <li>■ The difference between the density setpoint values must be at least 0.2 kg/l.</li> <li>■ The appropriate unit is taken from the function group SYSTEM UNITS (see Page 15).</li> </ul>
<b>MEASURE FLUID 2 (6486)</b> 	<p>Measure the actual density of the second fluid for the density adjustment.</p> <p><b>Options:</b> CANCEL START</p>
<b>DENSITY ADJUSTMENT (6487)</b> 	<p>With this function a density adjustment can be carried out on site. The density adjustment values will thus be recalculated and stored. This ensures that the values dependent on density calculations (e.g. volume flow) are as accurate as possible.</p> <p> <b>Note!</b></p> <p>Before carrying this out, please refer to the Operating Instructions of the Promass 84 (BA109D) for a detailed description of the procedure for density adjustment.</p> <p>Two types of adjustment are possible:</p> <p><b>1-point density adjustment (with one fluid)</b> This type of density adjustment is necessary under the following conditions:</p> <ul style="list-style-type: none"> <li>■ The sensor does not accurately measure the density which the operator expects based on laboratory trials.</li> <li>■ The characteristics of the fluid are outside the measuring points set at the factory or reference conditions under which the flowmeter has been calibrated.</li> <li>■ The plant is used solely for measuring a fluid whose density is to be determined very accurately under constant conditions.</li> </ul> <p><b>2-point density adjustment (with two fluids)</b> This type of adjustment must always be carried out when the measuring tubes are changed mechanically, e.g. due to:</p> <ul style="list-style-type: none"> <li>■ Deposits</li> <li>■ Abrasion</li> <li>■ Corrosion</li> </ul> <p>In such cases, the resonant frequency of the measuring tubes has been affected by these factors and is no longer compatible with the calibration data set at the factory. The 2-point density adjustment takes these mechanically-based changes into account and calculates new, adjusted calibration data.</p> <p><b>Options:</b> CANCEL MEASURE FLUID 1 MEASURE FLUID 2 DENSITY ADJUSTMENT</p> <p><b>Factory setting:</b> CANCEL</p>
<b>RESTORE ORIGINAL (6488)</b> 	<p>Restore the original density coefficients determined at the factory.</p> <p><b>Options:</b> NO YES</p> <p><b>Factory setting:</b> NO</p>

### 10.2.5 Function group PRESSURE CORRECTION

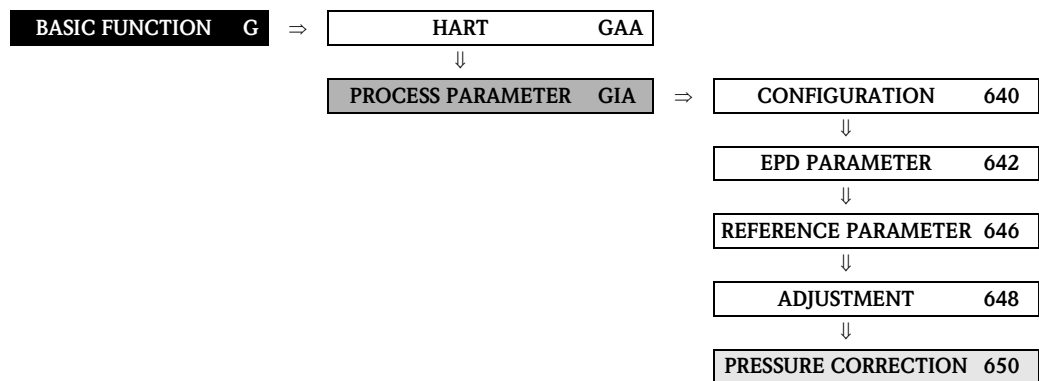







Function description	
BASIC FUNCTION → PROCESSPARAMETER → PRESSURE CORRECTION	
<b>PRESSURE MODE (6500)</b> 	<p>Use this function to configure an automatic pressure correction. In this way, the effect of a pressure deviation between the calibration and process pressures on the measured error for mass flow can be compensated for. For additional information on this topic, refer to the Operating Instructions for the Promass 84 (BA109D) in the chapter on accuracy.</p> <p><b>Options:</b>  OFF  FIX  Enter the fixed value for the process pressure which should be used during pressure correction using the PRESSURE function (6501).</p> <p><b>Factory setting:</b>  OFF</p>
<b>PRESSURE (6501)</b> 	<p> <b>Note!</b>  This function is not available unless the FIX option was selected in the PRESSURE MODE(6500) function.</p> <p>Use this function to enter the value for the process pressure which should be used during pressure correction.</p> <p><b>User input:</b>  7-digit floating-point number</p> <p><b>Factory setting:</b>  0 bar g</p> <p> <b>Note!</b>  The appropriate unit is taken from the function group SYSTEM UNITS (see Page 15).</p>

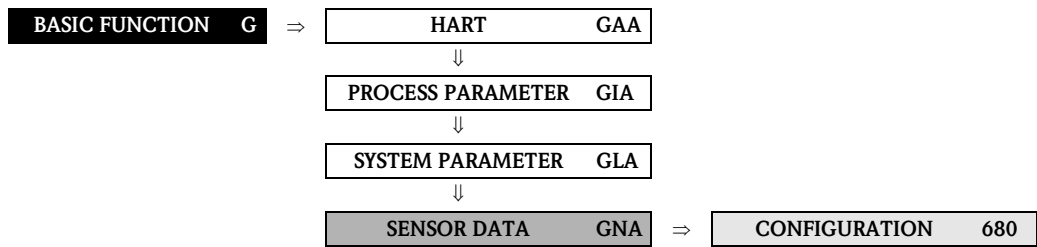


## 10.4 Group SENSOR DATA






### 10.4.1 Function group CONFIGURATION

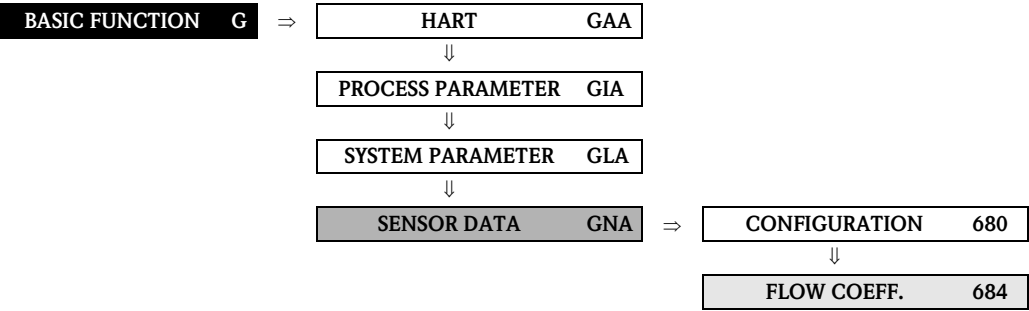


Function description BASIC FUNCTION → SENSOR DATA → CONFIGURATION	
<p>All sensor data (calibration factor, zero point and nominal diameter) are set at the factory and saved on the S-DAT sensor memory chip.</p> <p> <b>Caution!</b> Under normal circumstances you should not change the following parameter settings, because changes affect numerous functions of the entire measuring facility in general and the accuracy of the measuring system in particular. For this reason, the functions described below cannot be changed even when you enter your personal code.</p> <p>Contact your Endress+Hauser service organization if you have any questions about these functions.</p> <p> <b>Note!</b> The individual values of the functions are also provided on the sensor nameplate.</p>	
<b>K-FACTOR</b> (6800) 	<p>This function shows the current calibration factor for the sensor.</p> <p><b>Factory setting:</b> Depends on nominal diameter and calibration</p>
<b>ZERO POINT</b> (6803) 	<p>This function shows the current zero point correction value for the sensor.</p> <p><b>Display:</b> max. 5-digit number: -99999 to +99999</p> <p><b>Factory setting:</b> Depends on calibration</p>
<b>NOMINAL DIAMETER</b> (6804) 	<p>This function shows the nominal diameter for the sensor.</p> <p><b>Factory setting:</b> Depends on nominal diameter</p>









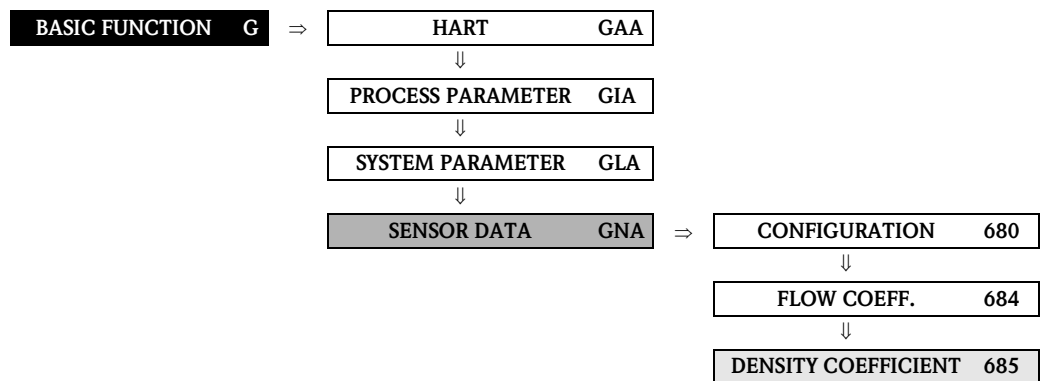



10.4.2 Function group FLOW COEFFICIENT




Function description	
BASIC FUNCTION → SENSOR DATA → FLOW COEFFICIENT	
All flow coefficients are set at the factory. All the sensor's parameter settings are saved on the S-DAT memory chip. Contact your Endress+Hauser service organization if you have any questions about these functions.	
TEMPERATURE COEFFICIENT KM (6840) 	This function shows the temperature coefficient KM.
TEMPERATURE COEFFICIENT KM 2 (6841) 	This function shows the temperature coefficient KM 2.
TEMPERATURE COEFFICIENT KT (6842) 	This function shows the temperature coefficient KT.
CALIBRATION COEFFICIENT KD 1 (6843) 	This function shows the calibration coefficient KD 1.
CALIBRATION COEFFICIENT KD 2 (6844) 	This function shows the calibration coefficient KD 2.


### 10.4.3 Function group DENSITY COEFFICIENT




Function description	
BASIC FUNCTION → SENSOR DATA → DENSITY COEFFICIENT	
All density coefficients are set at the factory. All the sensor's parameter settings are saved on the S-DAT memory chip. Contact your Endress+Hauser service organization if you have any questions about these functions.	
<b>DENSITY COEFFICIENT C0 (6850)</b> 	This function shows the actual density coefficient C0.  <b>Caution!</b> A density adjustment can alter the calibration value of this coefficient.
<b>DENSITY COEFFICIENT C1 (6851)</b> 	This function shows the actual density coefficient C1.  <b>Caution!</b> A density adjustment can alter the calibration value of this coefficient.
<b>DENSITY COEFFICIENT C2 (6852)</b> 	This function shows the actual density coefficient C2.  <b>Caution!</b> A density adjustment can alter the calibration value of this coefficient.
<b>DENSITY COEFFICIENT C3 (6853)</b> 	This function shows the actual density coefficient C3.  <b>Caution!</b> A density adjustment can alter the calibration value of this coefficient.
<b>DENSITY COEFFICIENT C4 (6854)</b> 	This function shows the actual density coefficient C4.  <b>Caution!</b> A density adjustment can alter the calibration value of this coefficient.
<b>DENSITY COEFFICIENT C5 (6855)</b> 	This function shows the actual density coefficient C5.  <b>Caution!</b> A density adjustment can alter the calibration value of this coefficient.

10.4.4 Function group ADDITIONAL COEFFICIENT

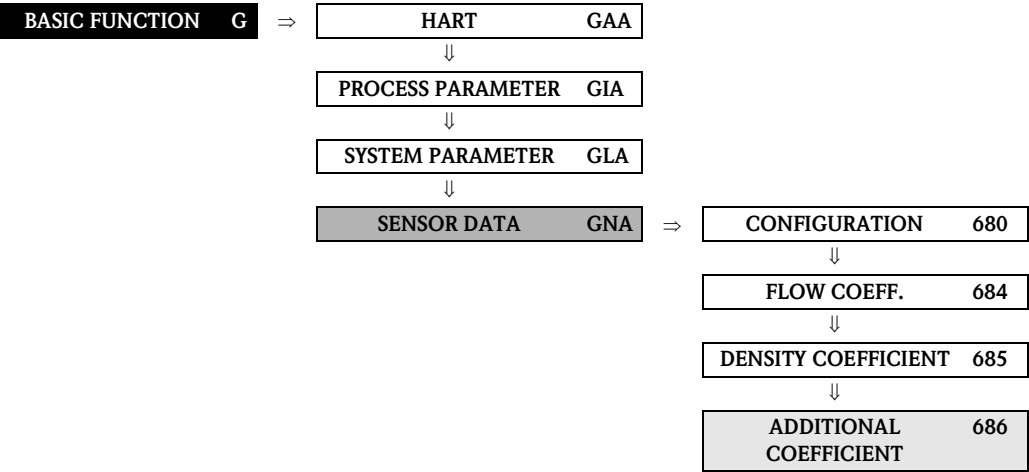

Function description	
BASIC FUNCTION → SENSOR DATA → ADDITIONAL COEFFICIENT	
<p>All sensor data are set at the factory. All the sensor's parameter settings are saved on the S-DAT memory chip.</p> <p> <b>Caution!</b> These functions are used for displaying device parameters only and consequently cannot be accessed. Contact your Endress+Hauser service organization if you have any questions about these functions.</p>	
MINIMUM FLUID TEMPERATURE (6860)	The lowest fluid temperature measured appears on the display.
MAXIMUM FLUID TEMPERATURE (6861)	The highest fluid temperature measured appears on the display.
MINIMUM TEMP. CARRIER TUBE (6862)	The lowest carrier tube temperature measured appears on the display.
MAXIMUM TEMP. CARRIER TUBE (6863)	The highest carrier tube temperature measured appears on the display.

# 11 Block SUPERVISION

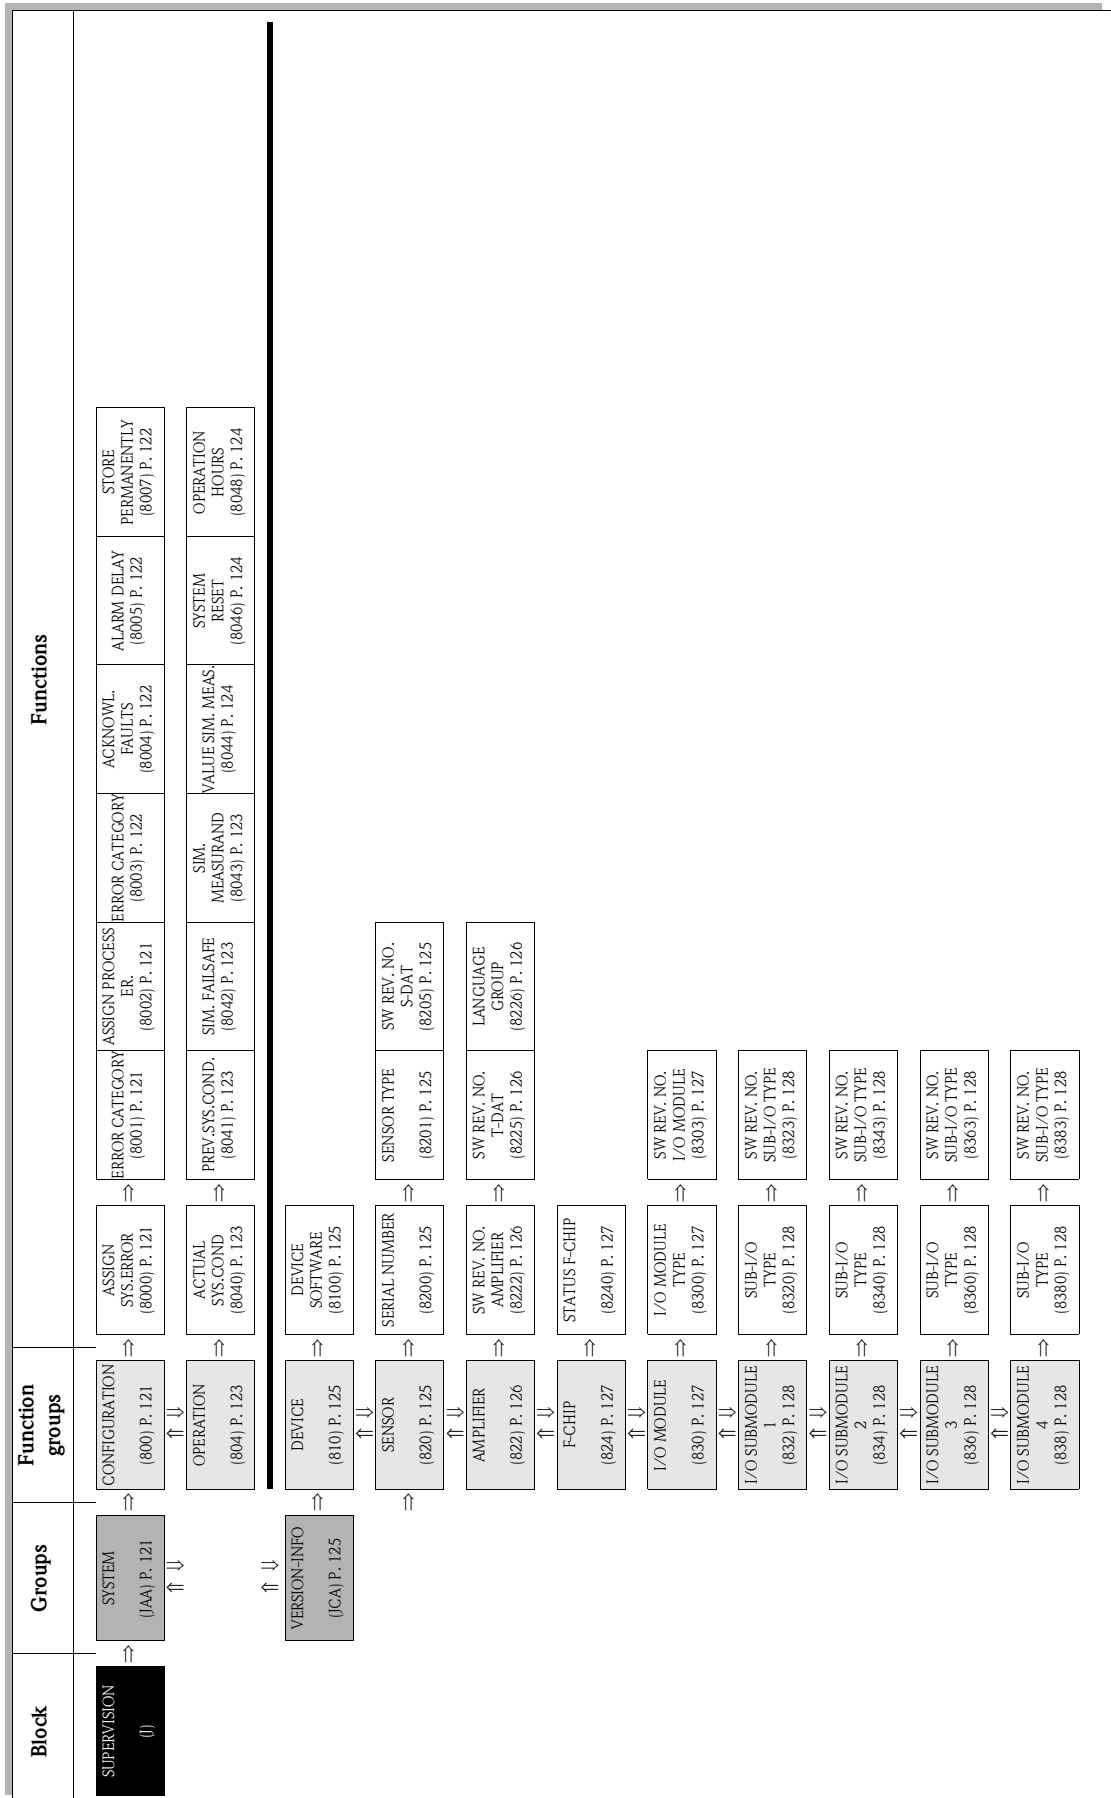























## 11.1 Group SYSTEM


### 11.1.1 Functions group CONFIGURATION




SUPERVISION	J	⇒	SYSTEM	JAA	⇒	CONFIGURATION	800
-------------	---	---	--------	-----	---	---------------	-----





Function description MONITORING → SYSTEM → CONFIGURATION	
<b>ASSIGN SYSTEM ERROR (8000)</b> 	<p>Use this function to view all system errors. By selecting a certain system error, its error category can be changed in the subsequent ERROR CATEGORY function (8001).</p> <p><b>Options:</b> CANCEL List of system errors</p> <p> <b>Note!</b></p> <ul style="list-style-type: none"> <li>■ You can exit this function as follows: select "CANCEL" and confirm with .</li> <li>■ For a list of the possible system errors, refer to the Operating Instructions for the Promass 84 (BA109D).</li> </ul>
<b>ERROR CATEGORY (8001)</b> 	<p> <b>Note!</b> This function is only available if a system error has been selected in the function ASSIGN SYSTEM ERROR (8000).</p> <p>Use this function to define whether a system error triggers a notice message or a fault message. If you select FAULT MESSAGES, all outputs respond to an error in accordance with their defined error response patterns.</p> <p><b>Options:</b> NOTICE MESSAGES (display only) FAULT MESSAGES (outputs and display)</p> <p> <b>Note!</b> Press the  key twice to call up the function ASSIGN SYSTEM ERROR (8000).</p>
<b>ASSIGN PROCESS ERROR (8002)</b> 	<p>Use this function to view all process errors. By selecting an individual process error, its error category can be changed in the subsequent function ERROR CATEGORY (8003).</p> <p><b>Options:</b> CANCEL List of process errors</p> <p> <b>Note!</b></p> <ul style="list-style-type: none"> <li>■ You can exit this function as follows: select "CANCEL" and confirm with .</li> <li>■ For a list of the possible process errors, refer to the Operating Instructions for the Promass 84 (BA109D).</li> </ul>

<b>Function description</b> MONITORING → SYSTEM → CONFIGURATION	
<b>ERROR CATEGORY (8003)</b> 	 <b>Note!</b> This function is only available if a system error has been selected in the function ASSIGN PROCESS ERROR (8002).  Use this function to define whether a process error triggers a notice message or a fault message. If you select FAULT MESSAGES, all outputs respond to an error in accordance with their defined error response patterns.  <b>Options:</b> NOTICE MESSAGES (display only) FAULT MESSAGES (outputs and display)   <b>Note!</b> Press the  key twice to call up the function ASSIGN PROCESS ERROR (8002).
<b>ACKNOWLEDGE FAULTS (8004)</b> 	Use this function to define the measuring device's response to fault messages.  <b>Options:</b> OFF The measuring device resumes normal operation when the fault is rectified.  ON The fault message is shown on the local display or via the status input until the message is acknowledged by pressing the  key.  <b>Factory setting:</b> ON
<b>ALARM DELAY (8005)</b> 	Enter the time span for which the criteria for an error have to be satisfied without interruption before a fault or notice message is generated.  Depending on the setting and type of error, this suppression acts on the display, the current output or the frequency output.  <b>User input:</b> 0 to 100 s (in one-second increments)  <b>Factory setting:</b> 0 s   <b>Caution!</b> If this function is activated, fault and notice messages are delayed by the time corresponding to the setting before being transmitted to the higher-order controller (process controller, etc.). It is therefore imperative to check in advance in order to make sure whether a delay of this nature could affect the safety requirements of the process. If fault and notice messages may not be suppressed, a value of 0 seconds must be entered here.
<b>STORE PERMANENTLY (8007)</b> 	Displays whether the automatic, permanent storage of parameter changes in the EEPROM is switched on or off.  <b>Display:</b> OFF ON  <b>Factory setting:</b> ON   <b>Caution!</b> <ul style="list-style-type: none"> <li>■ The selection in the function can be changed by the Endress+Hauser service organization.</li> <li>■ If you select OFF, all parameter changes are not stored permanently in the EEPROM. This means that these parameter changes are no longer available after a power failure. In this case, the measuring instrument starts up with the last parameter configurations saved in the EEPROM.</li> </ul>

11.1.2 Function group OPERATION




Function description SUPERVISION → SYSTEM → OPERATION	
ACTUAL SYSTEM CONDITION (8040)	Use this function to check the present system condition. <b>Display:</b> "SYSTEM OK" or the fault / notice message with the highest priority.
PREVIOUS SYSTEM CONDITION (8041)	Use this function to view the fifteen most recent fault and notice messages since measuring last started. <b>Display:</b> The 15 most recent fault or notice messages.
SIMULATION FAILSAFE MODE (8042) 	Use this function to set all inputs, outputs and totalizers to their defined failsafe modes, in order to check whether they respond correctly. During this time, the message "SIMULATION FAILSAFE MODE" appears on the display. <b>Options:</b> ON OFF <b>Factory setting:</b> OFF
SIMULATION MEASURAND (8043) 	Use this function to set all inputs, outputs and totalizers to their defined flow-response modes, in order to check whether they respond correctly. During this time, the message "SIMULATION MEASURAND" appears on the display. <b>Options:</b> OFF MASS FLOW VOLUME FLOW CORRECTED VOLUME FLOW DENSITY REFERENCE DENSITY TEMPERATURE <b>Factory setting:</b> OFF   Caution! ■ The measuring device cannot be used for measuring while this simulation is in progress. ■ The setting is not saved in the event of a power failure.

<b>Function description</b> SUPERVISION → SYSTEM → OPERATION	
<b>VALUE SIMULATION MEASURAND (8044)</b> 	 <b>Note!</b> The function is not visible unless the function SIMULATION MEASURAND (8043) is active.  Use this function to define a freely selectable value (e.g. 12 m <sup>3</sup> /s). This is used to test the associated functions in the device itself and downstream signal loops.  <b>User input:</b> 5-digit floating-point number [unit]  <b>Factory setting:</b> 0 [unit]   <b>Caution!</b> <ul style="list-style-type: none"> <li>■ The setting is not saved in the event of a power failure.</li> <li>■ The appropriate unit is taken from the function group SYSTEM UNITS (ACA) (see Page 15).</li> </ul>
<b>SYSTEM RESET (8046)</b> 	Use this function to perform a reset of the measuring system.  <b>Options:</b> NO RESTART SYSTEM (restart without interrupting power supply)  <b>Factory setting:</b> NO
<b>OPERATION HOURS (8048)</b>	The hours of operation of the device appear on the display.  <b>Display:</b> Depends on the number of hours of operation elapsed: Hours of operation < 10 hours → display format = 0:00:00 (hr:min:sec) Hours of operation 10 to 10,000 hours → display format = 0000:00 (hr:min) Hours of operation > 10,000 hours → display format = 000000 (hr)


## 11.2 Group VERSION-INFO

### 11.2.1 Function group DEVICE




Function description	
MONITORING → VERSION-INFO → DEVICE	
DEVICE SOFTWARE (8100)	Displays the current device software version.

### 11.2.2 Function group SENSOR

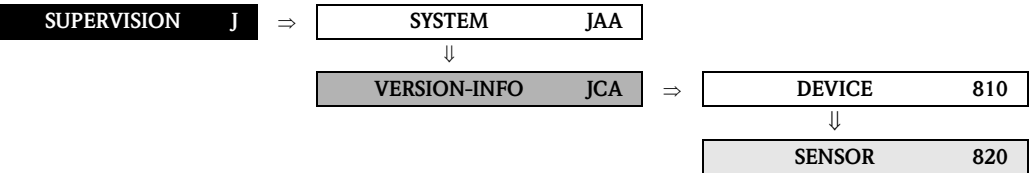


Function description	
MONITORING → VERSION-INFO → SENSOR	
SERIAL NUMBER (8200)	Use this function to view the serial number of the sensor.
SENSOR TYPE (8201)	Use this function to view the sensor type (e.g. Promass F).
SOFTWARE REVISION NUMBER S-DAT (8205)	Use this function to view the software revision number of the software used to create the content of the S-DAT.

### 11.2.3 Function group AMPLIFIER

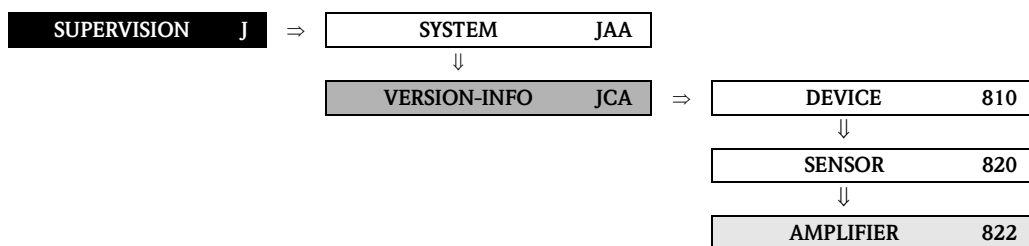


Function description	
MONITORING → VERSION-INFO → AMPLIFIER	
<b>SOFTWARE REVISION NUMBER AMPLIFIER (8222)</b>	Use this function to view the software revision number of the amplifier.
<b>SOFTWARE REVISION NUMBER T-DAT (8225)</b>	Use this function to view the software revision number of the software used to create the content of the T-DAT.
<b>LANGUAGE GROUP (8226)</b>	<p>Use this function to view the language group.</p> <p>The following language groups can be ordered: WEST EU / USA, EAST EU / SCAND., ASIA , CHINA.</p> <p><b>Display:</b> available language group</p> <p> Note!</p> <ul style="list-style-type: none"> <li>■ The language options of the available language group are displayed in the LANGUAGE (2000) function.</li> <li>■ You can change the language group via the configuration software FieldCare. Please do not hesitate to contact your Endress+Hauser sales office if you have any questions.</li> </ul>

11.2.4 Function group F-CHIP

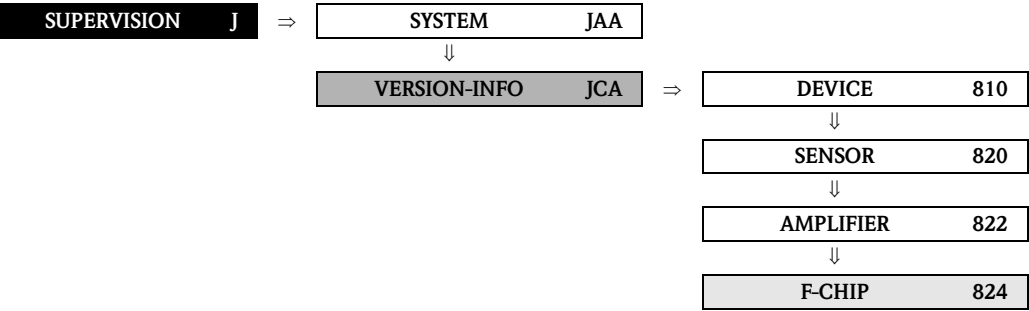


Function description	
SUPERVISION → VERSION-INFO → F-CHIP	
STATUS F-CHIP (8240)	Use this function to check whether an F-CHIP is installed and which software options are available.

11.2.5 Function group I/O MODULE

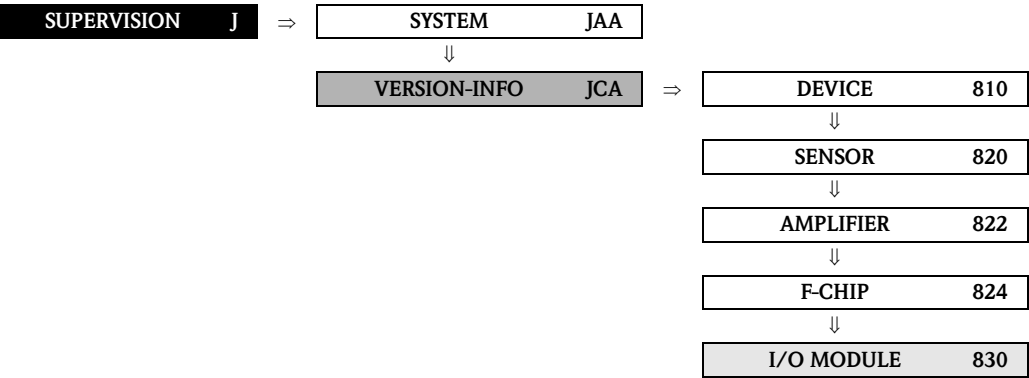

Function description	
SUPERVISION → VERSION-INFO → I/O MODULE	
I/O MODULE TYPE (8300)	Use this function to view the configuration of the I/O module complete with terminal numbers.
SOFTWARE REVISION NUMBER I/O MODULE (8303)	Use this function to view the software revision number of the I/O module.

### 11.2.6 Function groups INPUT/OUTPUT 1 to 4

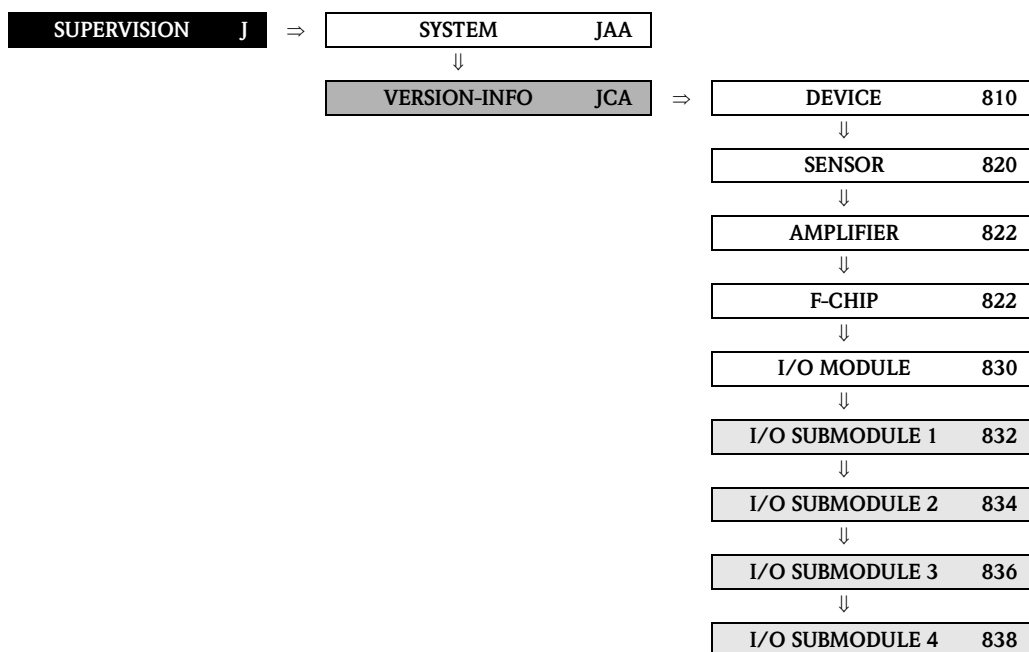

<b>Function description</b> SUPERVISION → VERSION-INFO → I/O SUBMODULE 1 to 4	
<b>SUB-I/O TYPE:</b> 1 = (8320), 2 = (8340), 3 = (8360), 4 = (8380)	Use this function to view the configuration complete with terminal numbers.
<b>SOFTWARE REVISION NUMBER SUB-I/O TYPE</b> 1 = (8323) 2 = (8343) 3 = (8363) 4 = (8383)	Use this function to view the software revision number of the corresponding submodule.



## 12 Factory settings

### 12.1 SI units (not for USA and Canada)

#### 12.1.1 Low flow cut off, full scale value, pulse value – Liquid

Nom. diameter [mm]	Low flow cut off (approx. v = 0.04 m/s)		Full scale value (approx. v = 2 m/s)		Pulse value (approx. 2 pulse/s at 2 m/s)	
1	0.08	kg/h	4	kg/h	0.001	kg/p
2	0.40	kg/h	20	kg/h	0.010	kg/p
4	1.80	kg/h	90	kg/h	0.010	kg/p
8	8.00	kg/h	400	kg/h	0.100	kg/p
15	26.00	kg/h	1300	kg/h	0.100	kg/p
15 FB	72.00	kg/h	3600	kg/h	1.000	kg/p
25	72.00	kg/h	3600	kg/h	1.000	kg/p
25 FB	180.00	kg/h	9000	kg/h	1.000	kg/p
40	180.00	kg/h	9000	kg/h	1.000	kg/p
40 FB	300.00	kg/h	15000	kg/h	10.000	kg/p
50	300.00	kg/h	15000	kg/h	10.000	kg/p
50 FB	720.00	kg/h	36000	kg/h	10.000	kg/p
80	720.00	kg/h	36000	kg/h	10.000	kg/p
100	1200.00	kg/h	60000	kg/h	10.000	kg/p
150	2600.00	kg/h	130000	kg/h	100.000	kg/p
250	7200.00	kg/h	360000	kg/h	100.000	kg/p
DN 15, 25, 40, 50 "FB" = Full bore versions Promass I						

#### 12.1.2 Low flow cut off, full scale value, pulse value – Gas

Nom. diameter [mm]	Low flow cut off (approx. v = 0.01 m/s)		Full scale value (approx. v = 2 m/s)		Pulse value (approx. 2 pulse/s at 2 m/s)	
1	0.02	kg/h	4	kg/h	0.001	kg/p
2	0.10	kg/h	20	kg/h	0.010	kg/p
4	0.45	kg/h	90	kg/h	0.010	kg/p
8	2.00	kg/h	400	kg/h	0.100	kg/p
15	6.50	kg/h	1300	kg/h	0.100	kg/p
15 FB	18.00	kg/h	3600	kg/h	1.000	kg/p
25	18.00	kg/h	3600	kg/h	1.000	kg/p
25 FB	45.00	kg/h	9000	kg/h	1.000	kg/p
40	45.00	kg/h	9000	kg/h	1.000	kg/p
40 FB	75.00	kg/h	15000	kg/h	10.000	kg/p
50	75.00	kg/h	15000	kg/h	10.000	kg/p
50 FB	180.00	kg/h	36000	kg/h	10.000	kg/p
80	180.00	kg/h	36000	kg/h	10.000	kg/p
100	300.00	kg/h	60000	kg/h	10.000	kg/p
150	650.00	kg/h	130000	kg/h	100.000	kg/p
250	1800.00	kg/h	360000	kg/h	100.000	kg/p
DN 15, 25, 40, 50 "FB" = Full bore versions Promass I						

### 12.1.3 Language

Country	Language	Country	Language
Australia	English	Malaysia	English
Belgium	English	Norway	Norsk
China	Chinese	Poland	Polish
Denmark	English	Portugal	Portuguese
Germany	Deutsch	Austria	Deutsch
England	English	Russia	Russian
Finland	Suomi	Sweden	Svenska
France	Francais	Switzerland	Deutsch
Netherlands	Nederlands	Singapore	English
Hong Kong	English	Spain	Espanol
India	English	South Africa	English
Indonesia	Bahasa Indonesia	Thailand	English
Instruments International	English	Czech Republic	Czech
Italy	Italiano	Hungary	English
Japan	Japanese		

### 12.1.4 Density, length, temperature

	Unit
Density	kg/l
Length	mm
Temperature	°C

## 12.2 US units (only for USA and Canada)

### 12.2.1 Low flow cut off, full scale value, pulse value – Liquid

Nominal diameter [mm]	Low flow cut off (approx. v = 0.04 m/s)		Full scale value (approx. v = 2 m/s)		Pulse value (approx. 2 pulse/s at 2 m/s)	
1	0.003	lb/min	0.15	lb/min	0.002	lb/p
2	0.015	lb/min	0.75	lb/min	0.020	lb/p
4	0.066	lb/min	3.30	lb/min	0.020	lb/p
8	0.300	lb/min	15.00	lb/min	0.200	lb/p
15	1.000	lb/min	50.00	lb/min	0.200	lb/p
15 FB	2.600	lb/min	130.00	lb/min	2.000	lb/p
25	2.600	lb/min	130.00	lb/min	2.000	lb/p
25 FB	6.600	lb/min	330.00	lb/min	2.000	lb/p
40	6.600	lb/min	330.00	lb/min	2.000	lb/p
40 FB	11.000	lb/min	550.00	lb/min	20.000	lb/p
50	11.000	lb/min	550.00	lb/min	20.000	lb/p
50 FB	26.000	lb/min	1300.00	lb/min	20.000	lb/p
80	26.000	lb/min	1300.00	lb/min	20.000	lb/p
100	44.000	lb/min	2200.00	lb/min	20.000	lb/p
150	95.000	lb/min	4800.00	lb/min	200.000	lb/p
250	260.00	lb/min	13000.00	lb/min	200.000	lb/p
DN 15, 25, 40, 50 "FB" = Full bore versions Promass I						

### 12.2.2 Low flow cut off, full scale value, pulse value – Gas

Nominal diameter [mm]	Low flow cut off (approx. v = 0.01 m/s)		Full scale value (approx. v = 2 m/s)		Pulse value (approx. 2 pulse/s at 2 m/s)	
1	0.001	lb/min	0.15	lb/min	0.002	lb/p
2	0.004	lb/min	0.75	lb/min	0.020	lb/p
4	0.046	lb/min	3.30	lb/min	0.020	lb/p
8	0.075	lb/min	15.00	lb/min	0.200	lb/p
15	0.250	lb/min	50.00	lb/min	0.200	lb/p
15 FB	0.650	lb/min	130.00	lb/min	2.000	lb/p
25	0.650	lb/min	130.00	lb/min	2.000	lb/p
25 FB	1.650	lb/min	330.00	lb/min	2.000	lb/p
40	1.650	lb/min	330.00	lb/min	2.000	lb/p
40 FB	2.750	lb/min	550.00	lb/min	20.000	lb/p
50	2.750	lb/min	550.00	lb/min	20.000	lb/p
50 FB	6.500	lb/min	1300.00	lb/min	20.000	lb/p
80	6.500	lb/min	1300.00	lb/min	20.000	lb/p
100	11.000	lb/min	2200.00	lb/min	20.000	lb/p
150	23.750	lb/min	4800.00	lb/min	200.000	lb/p
250	65.000	lb/min	13000.00	lb/min	200.000	lb/p
DN 15, 25, 40, 50 "FB" = Full bore versions Promass I						

### 12.2.3 Language, density, length, temperature

	Unit
Language	English
Density	g/cc
Length	INCH
Temperature	°F



## Index of function matrix

### Blocks

A = MEASURED VARIABLES .....	13
B = QUICK SETUP .....	22
C = USER INTERFACE .....	30
D = TOTALIZER .....	46
E = OUTPUT .....	51
F = INPUT .....	99
G = BASIC FUNCTION .....	103
J = SUPERVISION .....	120
Z = CUSTODY TRANSFER .....	11

### Groups

AAA = MEASURING VALUES .....	14
ACA = SYSTEM UNITS .....	15
AEA = SPECIAL UNITS .....	20
CAA = CONTROL .....	31
CCA = MAIN LINE .....	35
CEA = ADDITIONAL LINE .....	38
CGA = INFORMATION LINE .....	42
DAA = TOTALIZER 1 .....	47
DAB = TOTALIZER 2 .....	47
DAC = TOTALIZER 3 .....	47
DJA = HANDLING TOTALIZER .....	50
EAA = CURRENT OUTPUT 1 .....	52
ECA = PULSE/FREQUENCY OUTPUT 1 .....	63
ECB = PULSE/FREQUENCY OUTPUT 2 .....	63
EGA = RELAY OUTPUT .....	89
FAA = STATUS INPUT .....	100
GAA = HART .....	104
GIA = PROCESS PARAMETER .....	106
GLA = SYSTEM PARAMETER .....	115
GNA = SENSOR DATA .....	116
JAA = SYSTEM .....	121
JCA = VERSION INFO .....	125

### Function groups

000 = MAIN VALUES .....	14
040 = CONFIGURATION .....	15
042 = ADDITIONAL CONFIGURATION .....	18
060 = ARBITRARY UNIT .....	20
200 = BASIC CONFIGURATION .....	31
202 = UNLOCKING/LOCKING .....	33
204 = OPERATION .....	34
220 = CONFIGURATION .....	35
222 = MULTIPLEX .....	37
240 = CONFIGURATION .....	38
242 = MULTIPLEX .....	40
260 = CONFIGURATION .....	42
262 = MULTIPLEX .....	44
300 = CONFIGURATION .....	47
304 = OPERATION .....	49
400 = CONFIGURATION .....	52
404 = OPERATION .....	61
408 = INFORMATION .....	62
420 = CONFIGURATION .....	63
430 = OPERATION .....	83

438 = INFORMATION .....	88
470 = CONFIGURATION .....	89
474 = OPERATION .....	93
478 = INFORMATION .....	95
500 = CONFIGURATION .....	100
504 = OPERATION .....	101
508 = INFORMATION .....	102
600 = CONFIGURATION .....	104
604 = INFORMATION .....	105
640 = CONFIGURATION .....	106
642 = EPD PARAMETER .....	108
646 = REFERENCE PARAMETER .....	110
648 = ADJUSTMENT .....	112
650 = PRESSURE CORRECTION .....	114
660 = CONFIGURATION .....	115
680 = CONFIGURATION .....	116
684 = FLOW COEFFICIENT .....	117
685 = DENSITY COEFFICIENT .....	118
686 = ADDITIONAL COEFFICIENT .....	119
800 = CONFIGURATION .....	121
804 = OPERATION .....	123
810 = DEVICE .....	125
820 = SENSOR .....	125
822 = AMPLIFIER .....	126
824 = F-CHIP .....	127
830 = I/O MODULE .....	127
832 = INPUT/OUTPUT 1 .....	128
834 = INPUT/OUTPUT 2 .....	128
836 = INPUT/OUTPUT 3 .....	128
838 = INPUT/OUTPUT 4 .....	128

### Functions Z...

Z000 = CUSTODY TRANSFER .....	11
Z001 = PULS. OUT. 1 C.T. ....	11
Z002 = PULS. OUT. 2 C.T. ....	11
Z003 = CURR. OUT. 1 C.T. ....	12
Z006 = TOTALIZER 1 C.T. ....	12
Z007 = TOTALIZER 2 C.T. ....	12
Z008 = TOTALIZER 3 C.T. ....	12

### 0...

0000 = MASS FLOW .....	14
0001 = VOLUME FLOW .....	14
0004 = CORRECTED VOLUME FLOW .....	14
0005 = DENSITY .....	14
0006 = REFERENCE DENSITY .....	14
0008 = TEMPERATURE .....	14
0400 = UNIT MASS FLOW .....	15
0401 = UNIT MASS .....	15
0402 = UNIT VOLUME FLOW .....	16
0403 = UNIT VOLUME .....	16
0404 = UNIT CORRECTED VOLUME FLOW .....	17
0405 = UNIT CORRECTED VOLUME .....	17
0420 = UNIT DENSITY .....	18
0421 = UNIT REFERENCE DENSITY .....	18
0422 = UNIT TEMPERATURE .....	19

0424 = UNIT LENGTH .....	19
0426 = UNIT PRESSURE .....	19
0600 = TEXT ARBITRARY MASS .....	20
0601 = FACTOR ARBITRARY MASS .....	20
0602 = TEXT ARBITRARY VOLUME .....	20
0603 = FACTOR ARBITRARY VOLUME .....	21
0604 = TEXT ARBITRARY DENSITY .....	21
0605 = FACTOR ARBITRARY DENSITY .....	21

**1...**

1002 = QUICK SETUP COMMISSIONING .....	22
1003 = QUICK SETUP PULSATING FLOW .....	22
1004 = QUICK SETUP GAS MEASUREMENT .....	22
1009 = T DAT SAVE/LOAD .....	23

**2...**

2000 = LANGUAGE .....	31
2002 = DISPLAY DAMPING .....	31
2003 = CONTRAST LCD .....	31
2004 = BACKLIGHT .....	32
2020 = ACCESS CODE .....	33
2021 = DEFINE PRIVATE CODE .....	33
2022 = STATUS ACCESS .....	33
2023 = ACCESS CODE .....	33
2040 = TEST DISPLAY .....	34
2200 = ASSIGN .....	35
2201 = 100% VALUE .....	35
2202 = FORMAT .....	36
2220 = ASSIGN .....	37
2221 = 100% VALUE .....	37
2222 = FORMAT .....	37
2400 = ASSIGN .....	38
2401 = 100% VALUE .....	38
2402 = FORMAT .....	39
2403 = DISPLAY MODE .....	39
2420 = ASSIGN .....	40
2421 = 100% VALUE .....	41
2422 = FORMAT .....	41
2423 = DISPLAY MODE .....	41
2600 = ASSIGN .....	42
2601 = 100% VALUE .....	43
2602 = FORMAT .....	43
2603 = DISPLAY MODE .....	43
2620 = ASSIGN .....	44
2621 = 100% VALUE .....	45
2622 = FORMAT .....	45
2623 = DISPLAY MODE .....	45

**3...**

3000 = ASSIGN .....	47
3001 = UNIT TOTALIZER .....	47
3002 = TOTALIZER MODE .....	48
3003 = RESET TOTALIZER .....	48
3040 = SUM .....	49
3041 = OVERFLOW .....	49
3800 = RESET ALL TOTALIZERS .....	50
3801 = FAILSAFE MODE .....	50

**4...**

4000 = ASSIGN CURRENT OUTPUT .....	52
------------------------------------	----

4001 = CURRENT SPAN .....	53
4002 = VALUE 0_4 mA .....	54
4003 = VALUE 20 mA .....	56
4004 = MEASURING MODE .....	56
4005 = TIME CONSTANT .....	59
4006 = FAILSAFE MODE .....	60
4040 = ACTUAL CURRENT .....	61
4041 = SIMULATION CURRENT .....	61
4042 = VALUE SIMULATION CURRENT .....	61
4080 = TERMINAL NUMBER .....	62
4200 = OPERATION MODE .....	63
4201 = ASSIGN FREQUENCY .....	64
4202 = START VALUE FREQUENCY .....	64
4203 = END VALUE FREQUENCY .....	65
4204 = VALUE f LOW .....	65
4205 = VALUE f HIGH .....	66
4206 = MEASURING MODE .....	67
4207 = OUTPUT SIGNAL .....	69
4208 = TIME CONSTANT .....	71
4209 = FAILSAFE MODE .....	72
4211 = FAILSAFE VALUE .....	72
4221 = ASSIGN PULSE .....	73
4222 = PULSE VALUE .....	73
4223 = PULSE WIDTH .....	74
4225 = MEASURING MODE .....	75
4226 = OUTPUT SIGNAL .....	76
4227 = FAILSAFE MODE .....	78
4241 = ASSIGN STATUS .....	79
4242 = ON-VALUE .....	79
4243 = SWITCH-ON DELAY .....	80
4244 = OFF-VALUE .....	80
4245 = SWITCH-OFF DELAY .....	81
4246 = MEASURING MODE .....	81
4247 = TIME CONSTANT .....	82
4301 = ACTUAL FREQUENCY .....	83
4302 = SIMULATION FREQUENCY .....	83
4303 = VALUE SIMULATION FREQUENCY .....	84
4322 = SIMULATION PULSE .....	85
4323 = VALUE SIMULATION PULSE .....	86
4341 = ACTUAL STATUS .....	87
4342 = SIMULATION SWITCH POINT .....	87
4343 = VALUE SIMULATION SWITCH POINT .....	87
4380 = TERMINAL NUMBER .....	88
4700 = ASSIGN RELAY .....	89
4701 = ON-VALUE .....	90
4702 = SWITCH-ON DELAY .....	90
4703 = OFF-VALUE .....	90
4704 = SWITCH-OFF DELAY .....	91
4705 = MEASURING MODE .....	91
4706 = TIME CONSTANT .....	92
4740 = ACTUAL STATUS RELAY .....	93
4741 = SIMULATION SWITCH POINT .....	93
4742 = VALUE SIMULATION SWITCH POINT .....	94
4780 = TERMINAL NUMBER .....	95

**5...**

5000 = ASSIGN STATUS INPUT .....	100
5001 = ACTIVE LEVEL .....	100
5002 = MINIMUM PULSE WIDTH .....	100

5040 = ACTUAL STATUS INPUT .....	101
5041 = SIMULATION STATUS INPUT .....	101
5042 = VALUE SIMULATION STATUS INPUT .....	101
5080 = TERMINAL NUMBER .....	102

**6...**

6000 = TAG NAME .....	104
6001 = TAG DESCRIPTION .....	104
6002 = BUS ADDRESS .....	104
6003 = HART PROTOCOL .....	104
6004 = WRITE PROTECTION .....	104
6040 = MANUFACTURER ID .....	105
6041 = DEVICE ID .....	105
6042 = DEVICE REVISION .....	105
6400 = ASSIGN LOW FLOW CUT OFF .....	106
6402 = ON-VALUE LOW FLOW CUT OFF .....	106
6403 = OFF-VALUE LOW FLOW CUT OFF .....	106
6404 = PRESSURE SHOCK SUPPRESSION .....	107
6420 = EMPTY PIPE DETECTION .....	108
6423 = EPD VALUE LOW .....	108
6424 = EPD VALUE HIGH .....	108
6425 = EPD RESPONSE TIME .....	108
6426 = EPD EXC.CURR. ....	109
6460 = CORRECTED VOLUME CALCULATION .....	110
6461 = FIXED REFERENCE DENSITY .....	110
6462 = EXPANSION COEFFICIENT .....	110
6463 = EXPANSION COEFF. SQR. ....	110
6464 = REFERENCE TEMPERATURE .....	111
6480 = ZEROPOINT ADJUST .....	112
6482 = DENSITY ADJUST MODE .....	112
6483 = DENSITY SETPOINT 1 .....	112
6484 = MEASURE FLUID 1 .....	112
6485 = DENSITY SETPOINT 2 .....	113
6486 = MEASURE FLUID 2 .....	113
6487 = DENSITY ADJUST .....	113
6488 = RESTORE ORIGINAL .....	113
6500 = PRESSURE MODE .....	114
6501 = PRESSURE .....	114
6600 = INSTALLATION DIRECTION SENSOR .....	115
6602 = DENSITY DAMPING .....	115
6603 = SYSTEM DAMPING .....	115
6605 = POSITIVE ZERO RETURN .....	115
6800 = K-FACTOR .....	116
6803 = ZERO POINT .....	116
6804 = NOMINAL DIAMETER .....	116
6840 = TEMPERATURE COEFFICIENT KM .....	117
6841 = TEMPERATURE COEFFICIENT KM 2 .....	117
6842 = TEMPERATURE COEFFICIENT KT .....	117
6843 = CALIBRATION COEFFICIENT KD 1 .....	117
6844 = CALIBRATION COEFFICIENT KD 2 .....	117
6850 = DENSITY COEFFICIENT C0 .....	118
6851 = DENSITY COEFFICIENT C1 .....	118
6852 = DENSITY COEFFICIENT C2 .....	118
6853 = DENSITY COEFFICIENT C3 .....	118
6854 = DENSITY COEFFICIENT C4 .....	118
6855 = DENSITY COEFFICIENT C5 .....	118
6860 = MINIMAL TEMP. MEASURED .....	119
6861 = MAXIMAL TEMP. MEASURED .....	119
6862 = MINIMAL TEMP. CARRIER TUBE .....	119

6863 = MAXIMAL TEMP. CARRIER TUBE .....	119
---	-----

**8...**

8000 = ASSIGN SYSTEM ERROR .....	121
8001 = ERROR CATEGORY .....	121
8002 = ASSIGN PROCESS ERROR .....	121
8003 = ERROR CATEGORY .....	122
8004 = ACKNOWLEDGE FAULTS .....	122
8005 = ALARM DELAY .....	122
8007 = STORE PERMANENTLY .....	122
8040 = ACTUAL SYSTEM CONDITION .....	123
8041 = PREVIOUS SYSTEM CONDITION .....	123
8042 = SIMULATION FAILSAFE MODE .....	123
8043 = SIMULATION MEASURAND .....	123
8044 = VALUE SIMULATION MEASURAND .....	124
8046 = SYSTEM RESET .....	124
8048 = OPERATION HOURS .....	124
8100 = DEVICE SOFTWARE .....	125
8200 = SERIAL NUMBER .....	125
8201 = SENSOR TYPE .....	125
8205 = SW REV. NO. S-DAT .....	125
8222 = SW REV. NO. AMPLIFIER .....	126
8225 = SOFTWARE REV. NO. T-DAT .....	126
8226 = LANGUAGE GROUP .....	126
8240 = STATUS F-CHIP .....	127
8300 = I/O MODULE TYPE .....	127
8303 = SW REV. NO. I/O MODULE .....	127
8320 = SUB-I/O TYPE .....	128
8323 = SW Rev. No. SUB-I/O TYPE .....	128
8340 = SUB-I/O TYPE .....	128
8343 = SW Rev. No. SUB-I/O TYPE .....	128
8360 = SUB-I/O TYPE .....	128
8363 = SW Rev. No. SUB-I/O TYPE .....	128
8380 = SUB-I/O TYPE .....	128
8383 = SW Rev. No. SUB-I/O TYPE .....	128





# Index

## A

Access code .....	33
Acknowledge faults .....	122
Active level .....	100
Actual	
Current (current output) .....	61
Frequency .....	83
Actual status	
Relay output .....	93
Status input .....	101
Switch point (pulse/frequency output) .....	87
Actual System condition .....	123
Additional configuration .....	18
Additional line	
Configuration .....	38
Multiplex .....	40
Adjustment	
Density .....	113
Zero point .....	112
Alarm delay .....	122
Amplifier (Version Info) .....	126
Arbitrary unit .....	20
Assign	
Additional line .....	38
Additional line (Multiplex) .....	40
Current output .....	52
Frequency (Pulse/Freq. output) .....	64
Information line .....	42
Information line (Multiplex) .....	44
Low flow cut off .....	106
Main line .....	35
Main line (Multiplex) .....	37
Process error .....	121
Pulse .....	73
Relay (relay output) .....	89
Status input .....	100
Status (Pulse/Freq. output) .....	79
System error .....	121
Totalizer .....	47

## B

Backlight (user interface) .....	32
Basic Configuration (user interface) .....	31
Basic functions .....	103
Block	
Basic functions .....	103
Custody transfer .....	11
Display .....	30
Inputs .....	99
Measured variables .....	13
Outputs .....	51
Quick Setup .....	22
Supervision .....	120
Totalizer .....	46
Bus address .....	104

## C

Calibrate	
Coefficient	
KD 1 .....	117
KD 2 .....	117
Coefficient	
Calibration	
KD 1 .....	117
KD 2 .....	117
Density	
C0 to C5 .....	118
Expansion .....	110
Expansion Square .....	110
Temperature	
KM .....	117
KM 2 .....	117
KT .....	117
Commissioning .....	22
Configuration	
Additional line .....	38
Current output .....	52
HART .....	104
Information line .....	42
Main line .....	35
Process parameter .....	106
Pulse/frequency output .....	63
Relay output .....	89
Sensor data .....	116
Status input .....	100
System .....	121
System parameter .....	115
System units .....	15
Totalizer .....	47
Contrast LCD .....	31
Corrected Volume calculation .....	110
Corrected volume flow .....	14
Current output	
Configuration .....	52
Information .....	62
Operation .....	61
Current span	
Current output .....	53
Curr. out. 1 C.T. ....	12
Custody transfer .....	11

## D

Damping	
Density .....	115
System .....	115
Define private code .....	33
Density .....	14
Adjustment .....	113
Coefficient C0 to C5 .....	118
Damping .....	115
Density Adjust mode .....	112
Device ID .....	105

Device revision .....	105
Device (version-info) .....	125
Display .....	30
Display damping .....	31
Display lighting .....	32
Display mode	
Additional line .....	39
Additional line (Multiplex) .....	41
Information line .....	43
Information line (Multiplex) .....	45
<b>E</b>	
Empty pipe detection (EPD) .....	108
End value frequency .....	65
EPD	
Empty pipe detection .....	108
Parameter .....	108
Response time .....	108
Value high .....	108
Value low .....	108
Error category	
Process error .....	122
System error .....	121
Excitation current (EPD) .....	109
Expansion coefficient .....	110
Expansion coefficient Square .....	110
<b>F</b>	
Factor	
Arbitrary density .....	21
Arbitrary mass .....	20
Arbitrary volume .....	21
Factory settings	
Full scale value .....	129
Low flow cut off .....	129
Pulse value .....	129
Failsafe mode	
All totalizers .....	50
Current output .....	60
Frequency output .....	72
Pulse output .....	78
Failsafe value .....	72
F-CHIP (Version Info) .....	127
Fixed Reference density .....	110
Flow direction, see installation direction .....	115
Format	
Additional line .....	39
Additional line (Multiplex) .....	41
Information line .....	43
Information line (Multiplex) .....	45
Main line .....	36
Main line (Multiplex) .....	37
Function group	
Additional coefficient .....	119
Additional configuration .....	18
Adjustment .....	112
Amplifier .....	126
Arbitrary unit .....	20
Basic Configuration (user interface) .....	31

Configuration	
Additional line .....	38
Current output .....	52
HART .....	104
Information line .....	42
Main line .....	35
Process parameter .....	106
Pulse/Freq. output .....	63
Relay output .....	89
Sensor data .....	116
Status input .....	100
System .....	121
System parameter .....	115
System units .....	15
Totalizer .....	47
Density coefficient .....	118
Device .....	125
EPD parameter .....	108
F-CHIP .....	127
Flow coefficient .....	117
Information	
Current output .....	62
HART .....	105
Pulse/Frequency output .....	88
Relay output .....	95
Status input .....	102
Input/Output .....	128
I/O Module .....	127
Main values .....	14
Multiplex	
Additional line .....	40
Information line .....	44
Main line .....	37
Operation	
Current output .....	61
Pulse/frequency output .....	83
Relay output .....	93
Status input .....	101
System .....	123
Totalizer .....	49
Operation (user interface) .....	34
Pressure correction .....	114
Reference parameter .....	110
Sensor .....	125
Unlocking/Locking (user interface) .....	33
Function matrix	
Codes identifying .....	9
General layout .....	8
Overview .....	10
<b>G</b>	
Gas measurement .....	22
Group	
Additional line .....	38
Current output .....	52
Handling Totalizer .....	50
HART .....	104

- Information line .....42
  - Main line .....35
  - Measuring values .....14
  - Operation (user interface).....31
  - Process parameter .....106
  - Pulse/frequency output .....63
  - Relay output .....89
  - Sensor data .....116
  - Special units .....20
  - Status input .....100
  - System .....121
  - System parameter .....115
  - System units .....15
  - Version Info .....125
- H**
- Handling Totalizer .....50
  - HART
    - Configuration .....104
    - Information .....105
  - HART Protocol.....104
- I**
- Information
    - Current output .....62
    - Pulse/Frequency output.....88
    - Relay output .....95
    - Status input .....102
  - Information line
    - Configuration .....42
    - Multiplex .....44
  - Inputs .....99
  - Input/output 1 to 4 .....128
  - Installation direction sensor .....115
  - I/O Module.....127
- K**
- K-Factor .....116
- L**
- Language
    - Factory setting (country) .....130
    - Language group (display) .....126
    - Options .....31
  - LCD contrast .....31
  - Low flow cut off
    - Assign .....106
    - Off value .....106
    - On value .....106
- M**
- Main line
    - Configuration .....35
    - Multiplex .....37
  - Manufacturer ID .....105
  - Mass flow .....14
  - Maximal
    - Temperature carrier tube .....119
    - Temperature measured .....119
  - Measure Fluid 1 .....112
  - Measure Fluid 2 .....113
  - Measured variables .....11,13
  - Measuring mode
    - Current output.....56
    - Frequency (Pulse/Freq. output) .....67
    - Pulse output .....75
    - Relay output .....91
    - Status (Pulse/Freq. output) .....81
  - Measuring values.....14
  - Minimal
    - Temperature carrier tube.....119
    - Temperature measured .....119
  - Minimum Pulse width .....100
  - Multiplex
    - Additional line .....40
    - Information line .....44
    - Main line.....37
- N**
- Nominal diameter .....116
- O**
- Off value
    - Low flow cut off.....106
    - Relay output .....90
    - Status (Pulse/Freq. output) .....80
  - On value
    - Low flow cut off.....106
    - Relay output .....90
    - Status (Pulse/Freq. output) .....79
  - Operation
    - Basic configuration .....31
    - Current output.....61
    - Operation .....34
    - Pulse/frequency output.....63,83
    - Relay output .....93
    - Status input .....101
    - System .....123
    - Totalizer .....49
    - Unlocking/Locking.....33
    - User interface .....34
  - Operation hours .....124
  - Output signal
    - Frequency output.....69
    - Pulse output .....76,77,78
  - Outputs .....51
  - Overflow
    - Totalizer .....49
- P**
- Positive zero return .....115
  - Pressure .....114
  - Pressure correction .....114
  - Pressure Mode .....114
  - Pressure Shock suppression.....107
  - Previous system condition .....123
  - Process parameter
    - Adjustment .....112
    - Configuration.....106
    - EPD parameter.....108

Pressure correction .....	114
Reference parameter .....	110
Pulsating flow .....	22
Pulse out. 1 C.T. ....	11
Pulse out. 2 C.T. ....	11
Pulse value .....	73
Pulse Width .....	74
Pulse/frequency output	
Configuration .....	63
Information .....	88
Operation .....	83
<b>Q</b>	
Quick Setup .....	22
Commissioning .....	22
Gas measurement .....	22
Pulsating flow .....	22
<b>R</b>	
Reference density .....	14
Reference density (fixed) .....	110
Reference Temperature .....	111
Relay output	
Configuration .....	89
Information .....	95
Operation .....	93
Reset	
All totalizers .....	50
System .....	124
Totalizer .....	48
Restore original .....	113
<b>S</b>	
Sensor data	
Additional coefficient .....	119
Configuration .....	116
Density coefficient .....	118
Flow coefficient .....	117
Sensor type .....	125
Sensor (Version info) .....	125
Serial number sensor .....	125
Setpoint	
Density 1 .....	112
Density 2 .....	113
Simulation	
Current (current output) .....	61
Failsafe mode .....	123
Frequency .....	83
Measured variable .....	123
Status input .....	101
Switch point (Relay output) .....	93
Simulation Pulse .....	85
Software revision number	
Amplifier .....	126
I/O Module .....	127
S-DAT .....	125
T-DAT .....	126
Special units	
Arbitrary unit .....	20
Start value frequency .....	64

Status access .....	33
Status F-CHIP .....	127
Status input	
Configuration .....	100
Information .....	102
Operation .....	101
Store permanently .....	122
Sum	
Totalizer .....	49
Supervision .....	120
Switch-off delay	
Relay output .....	91
Status (Pulse/Freq. output) .....	81
Switch-on delay	
Relay output .....	90
Status (Pulse/Freq. output) .....	80
System	
Configuration .....	121
Damping .....	115
Operation .....	123
Operation hours .....	124
Reset .....	124
System condition	
Actual .....	123
Previous .....	123
System parameter	
Configuration .....	115
System units	
Additional configuration .....	18
Configuration .....	15
<b>T</b>	
Tag Description .....	104
Tag Name .....	104
T-DAT Save/Load .....	23
Temperature .....	14
Coefficient	
KM .....	117
KM 2 .....	117
KT .....	117
Terminal number	
Current output .....	62
Pulse/Frequency output .....	88
Relay output .....	95
Status input .....	102
Test display .....	34
Text	
Arbitrary density .....	21
Arbitrary mass .....	20
Arbitrary volume .....	20
Time constant	
Current output .....	59
Frequency output .....	71
Relay output .....	92
Status (Pulse/Freq. output) .....	82
Totalizer .....	46
Configuration .....	47
Operation .....	49
Totalizer Mode .....	48

Totalizer Reset . . . . .	48
Totalizers 1 to 3, custody transfer measurement. . . . .	12
Type	
Input/output 1 to 4. . . . .	128
I/O Module . . . . .	127
Sub-input/output 1 to 4. . . . .	128
<b>U</b>	
Unit	
Corrected volume . . . . .	17
Corrected volume flow . . . . .	17
Density . . . . .	18
Length . . . . .	19
Mass . . . . .	15
Mass flow. . . . .	15
Pressure . . . . .	19
Reference density . . . . .	18
Temperature. . . . .	19
Totalizer. . . . .	47
Volume . . . . .	16
Volume flow. . . . .	16
Unlocking/Locking (user interface). . . . .	33
<b>V</b>	
VALUE f HIGH . . . . .	66
Value F Low . . . . .	65
Value simulation	
Current (current output) . . . . .	61
Frequency . . . . .	84
Measured variable . . . . .	124
Status input . . . . .	101
Switch point (pulse/freq. output) . . . . .	87
Switch point (Relay output) . . . . .	94
Value Simulation Pulse . . . . .	86
Value 0_4 mA . . . . .	54
Value 20 mA . . . . .	56
Version Info	
Amplifier . . . . .	126
F-CHIP . . . . .	127
Input/output 1 to 4. . . . .	128
I/O Module . . . . .	127
Sensor . . . . .	125
Volume flow . . . . .	14
<b>W</b>	
Write protection. . . . .	104
<b>Z</b>	
Zero point . . . . .	116
Zero point adjustment. . . . .	112
<b>Numbers</b>	
100% Value	
Additional line . . . . .	38
Additional line (Multiplex) . . . . .	41
Information line . . . . .	43
Information line (Multiplex) . . . . .	45
Main line . . . . .	35
Main line (Multiplex). . . . .	37

[www.endress.com/worldwide](http://www.endress.com/worldwide)

---

**Endress+Hauser**   
People for Process Automation

---