

Installation Instructions

Replacing RJ45-M12 Adapter

Proline 300, 500, 500-digital



Replacement of RJ45-M12 connector

Proline 300, 500, 500-digital

Table of contents

1	Overview of spare part sets	4
2	Designated use	4
3	Personnel authorized to carry out repairs	5
4	Safety instructions	5
5	Symbols used	6
6	Tool list	7
7	Proline 300, 500 transmitter housing aluminium, non-Ex	8
8	Proline 300 transmitter housing, hygiene, non-Ex	11
9	Proline 500-digital transmitter housing, aluminium, non-Ex	15
10	Disposal	17

1 Overview of spare part sets

The Installation Instructions apply to the following spare part sets:

Order number	Original spare part set	Contents
71450719	Connector set RJ45-M12, L= 80 mm	1 × connector RJ45-M12, (80 mm / 3.1 in)
71450720	Connector set RJ45-M12, L= 120 mm	1 × connector RJ45-M12, (120 mm / 4.7 in)

- 
- The order number of the spare part set (on the product label on the package) can differ from the production number (on the label directly on the spare part)!
 - You can find the order number of the relevant spare part set by entering the production number of the spare part in the spare part search tool.
 - We recommend that you keep the Installation Instructions and packaging together at all times.

2 Designated use

The spare part sets and Installation Instructions are used to replace a faulty unit with a functioning unit of the same type. Only original parts from Endress+Hauser may be used. Only spare parts kits designed by Endress+Hauser for the measuring device can be used at any time.

Inspection is performed using the W@M Device Viewer. The procedure involved is described as follows.

- 
- A spare parts overview is located in the interior of some measuring devices. If the spare parts kit is specified on this list, no inspection is required.

1. www.endress.com/deviceviewer

2. 

3.

Order code	Description

4. 

1. www.endress.com/deviceviewer

2. Enter serial number (ser. no.), search for product data and click Spare Parts.

3. All spare parts for the measuring device are displayed.

4. Determine the order number of the spare parts kit.



The spare parts kit may be used only if the order number of the spare parts kit corresponds to an order number on the spare parts list.

3 Personnel authorized to carry out repairs

Authorization to carry out repairs depends on the measuring device's approval type. The table below shows the authorized group of people in each case.



Whoever carries out the repairs has full responsibility to ensure that work is carried out safely and to the required quality standard. He/she must also guarantee the safety of the device following repair.

Measuring device approval	Personnel authorized to carry out repairs ¹⁾
Without approval	1, 2, 3
With approval (e.g. IECEx)	1, 2, 3
For custody transfer	4

- 1) 1 = Qualified specialist on customer side, 2 = Service technician authorized by Endress+Hauser,
 3 = Endress+Hauser (return measuring device to manufacturer)
 4 = Check with local approval center if installation/alteration must be performed under supervision.

4 Safety instructions

- Check whether the spare part matches the identification labeling on the measuring device, as described on the cover page.
- The spare part set and the Installation Instructions are used to replace a defective unit with a functioning unit of the same type.
Only use original parts from Endress+Hauser.
- Comply with national regulations regarding mounting, electrical installation, commissioning, maintenance and repair.
- The following requirements must be met with regard to specialized technical staff for the mounting, electrical installation, commissioning, maintenance and repair of the measuring devices:
 - Specialized technical staff must be trained in instrument safety.
 - They must be familiar with the individual operating conditions of the devices.
 - In the case of Ex-certified measuring devices, they must also be trained in explosion protection.
- The measuring device is energized! Risk of fatal injury from electric shock. Open the measuring device only when the device is de-energized.
- For measuring devices intended for use in hazardous locations, please observe the guidelines in the Ex documentation (XA).
- For measuring devices in safety-related applications in accordance with IEC 61508 or IEC 61511: following repair, re-commission the device in accordance with the Operating Instructions. Document the repair.
- Before removing the device: set the process to a safe state and purge the pipe of dangerous process substances.
- Danger of burns due to heated surfaces! Before commencing work: allow the system and measuring device to cool down to a touchable temperature.

- In the case of devices in custody transfer, the custody transfer status no longer applies once the seal has been removed.
- The Operating Instructions for the device must be followed.
- Risk of damaging the electronic components! Ensure you have a working environment protected from electrostatic discharge.
- After removing the electronics compartment cover: risk of electrical shock due to missing touch protection!
Turn the measuring device off before removing internal covers.
- Modifications to the measuring device are not permitted.
- Only open the housing for a brief period. Avoid foreign objects, moisture or dirt entering the housing.
- Replace defective seals only with original seals from Endress+Hauser.
- If threads are defective the measuring device must be repaired.
- Threads (e.g. of the electronics compartment cover and connection compartment cover) must be lubricated if an abrasion-proof dry lubricant is not available. Use acid-free, non-hardening lubricant.
- If, during repair work, spacing is reduced or the dielectric strength of the measuring device cannot be guaranteed, perform a test on completion of the work (e.g. high-voltage test in accordance with the manufacturer's instructions).
- Service plug:
 - Do not connect in potentially explosive atmospheres.
 - Only connect to Endress+Hauser service devices.
- Observe the instructions for transporting and returning the device outlined in the Operating Instructions.



Contact Endress+Hauser Service if you have questions: www.addresses.endress.com

5 Symbols used

5.1 Safety symbols

DANGER

This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury.

WARNING

This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.

CAUTION

This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or medium injury.

NOTICE

This symbol contains information on procedures and other facts which do not result in personal injury.

5.2 Symbols for certain types of information

Symbol	Meaning
	Permitted Procedures, processes or actions that are permitted.
	Forbidden Procedures, processes or actions that are forbidden.
	Tip Indicates additional information.
	Series of steps

6 Tool list

 3 mm	 T20	 0.5 × 3.5 mm	 2 mm 24 mm	 Acid-free, non- hardening lubricant
---	--	---	--	--

7 Proline 300, 500 transmitter housing aluminium, non-Ex



7.1 Opening the aluminum transmitter

⚠ WARNING


The measuring device is energized!

Risk of fatal injury from electric shock.

- Open the measuring device only when the device is de-energized.

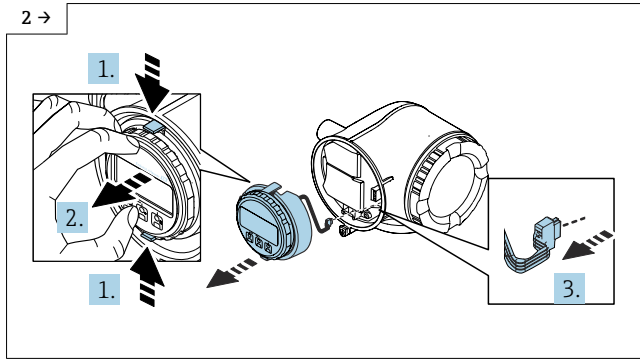
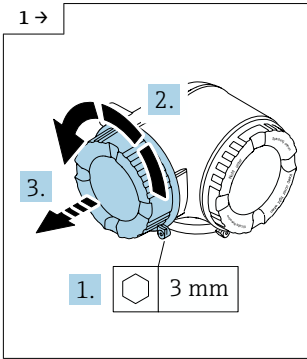


- Remove the display module if present.

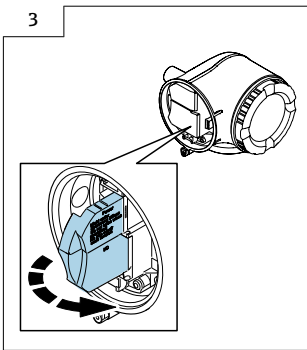


7.2 Replacing the RJ45-M12 connector 120 mm


Proceed as described in Section 7.1 → 8 and as illustrated in the diagrams below.

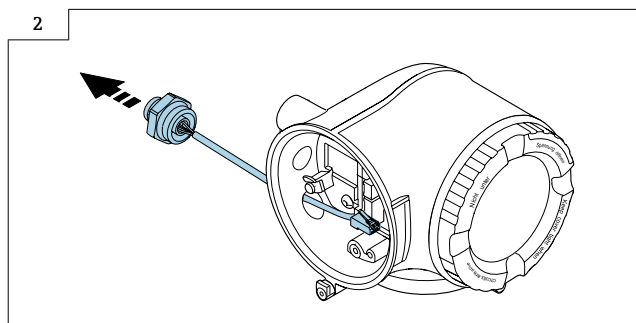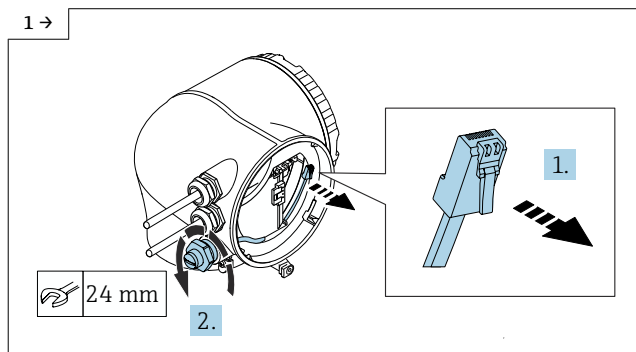

7.3 Replacing the RJ45-M12 connector 80 mm

Proceed as described in Section 7.1 → 8 and as illustrated in the diagrams below.

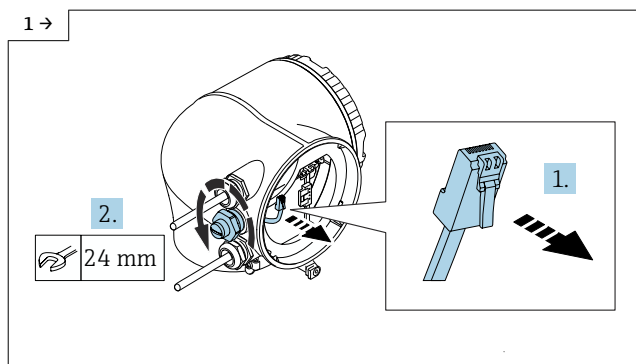


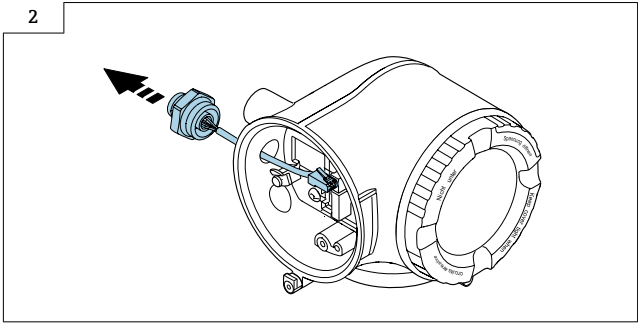


7.4 Reassembling the aluminum transmitter housing

Reassembly is carried out in reverse order. Note the following:

 Lubricate the thread of the cable gland prior to installation!

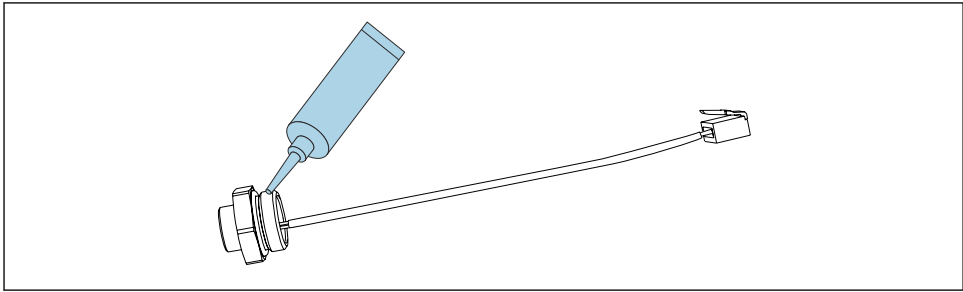

 Ensure that the cable is routed through the cable run provided.

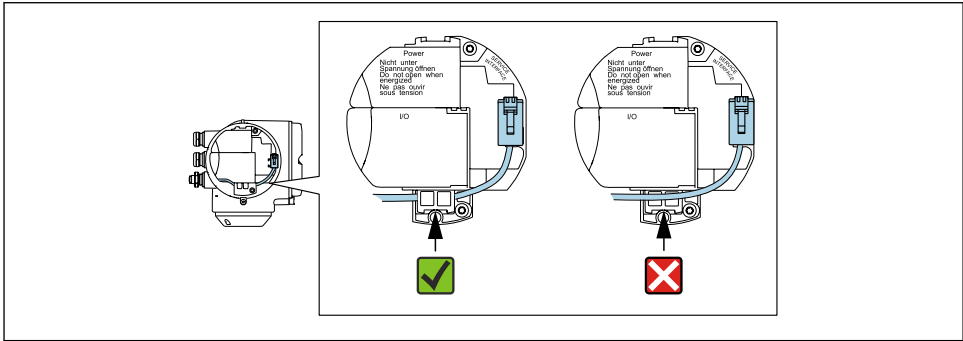




For detailed information on the electrical connection, see the "Electrical connection" section of the Operating Instructions for the device.

8 Proline 300 transmitter housing, hygiene, non-Ex

8.1 Releasing the cover lock for transmitter in Zone 2



A cover lock is located on the connection compartment cover and the electronics compartment cover on devices for Zone 2. The cover lock must be released before the connection compartment cover/electronics compartment cover can be unscrewed.

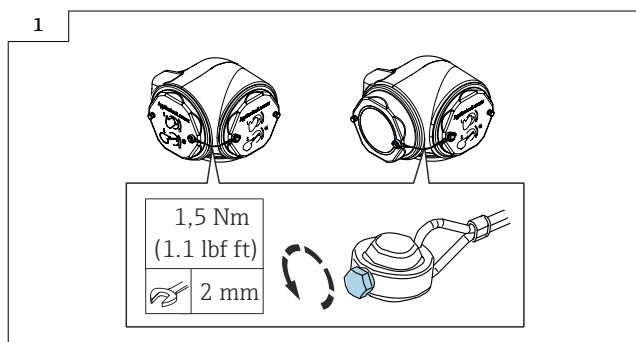

8.2 Opening the hygiene transmitter




The measuring device is energized!


Risk of fatal injury from electric shock.

- Open the measuring device only when the device is de-energized.


Release the cover lock, if available, as described in Section 8.1 → 11. Proceed as illustrated in the diagrams below.

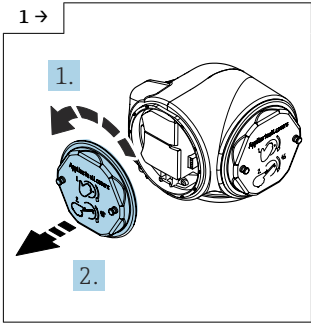


► Opening the blind cover

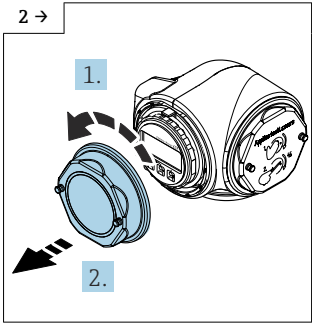

► Opening the cover with display module

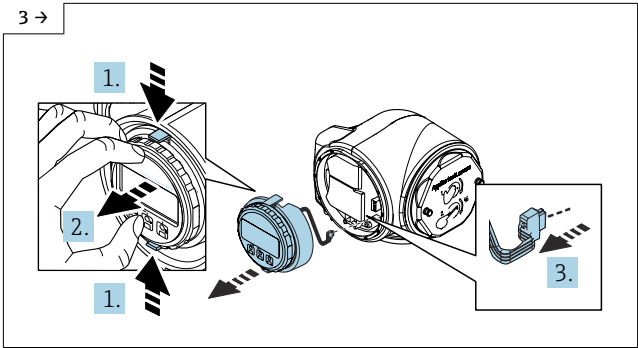



► Remove the display module if present.

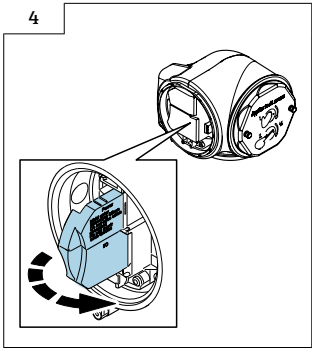

8.3 Replacing the RJ45-M12 connector 120 mm



Proceed as described in Section 8.2 → 11 and as illustrated in the diagrams below.

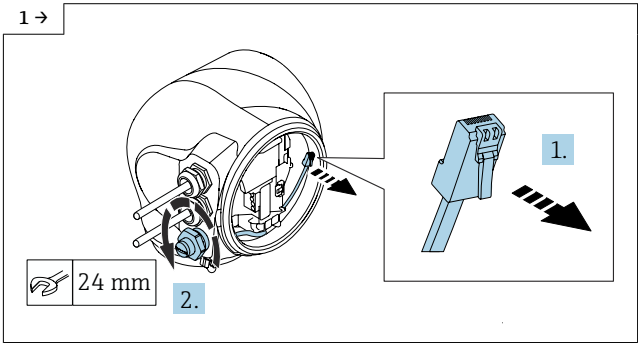

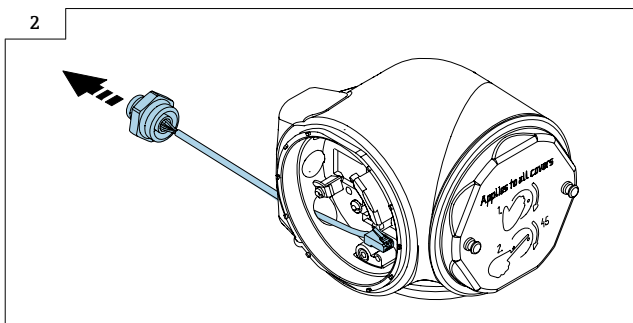

8.4 Replacing the RJ45-M12 connector 80 mm


Proceed as described in Section 8.2 → 11 and as illustrated in the diagrams below.

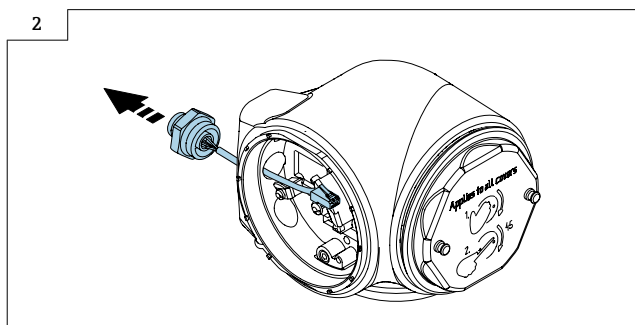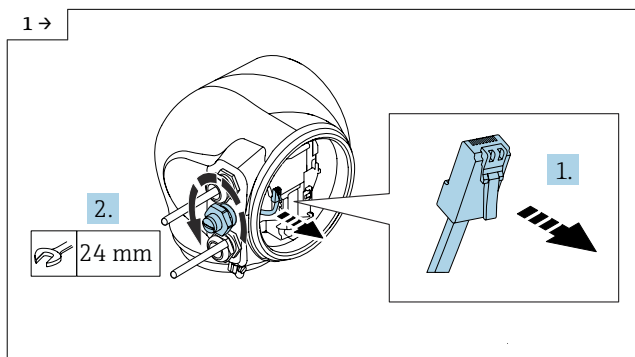


8.5 Reassembling the transmitter housing, hygiene

Reassembly is carried out in reverse order. Note the following:


-  Lubricate the thread of the cable gland prior to installation!

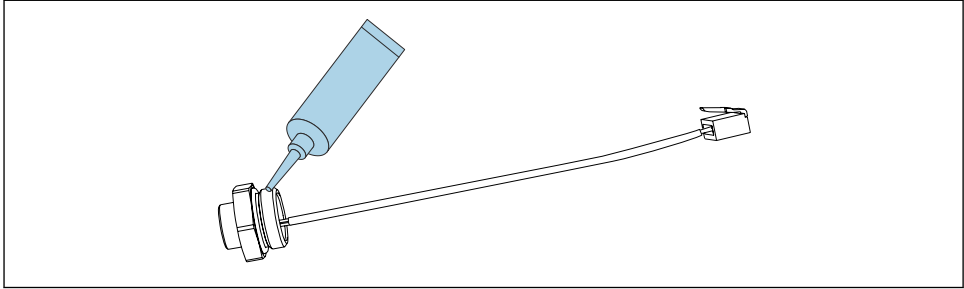

-  Ensure that the cable is routed through the cable run provided.

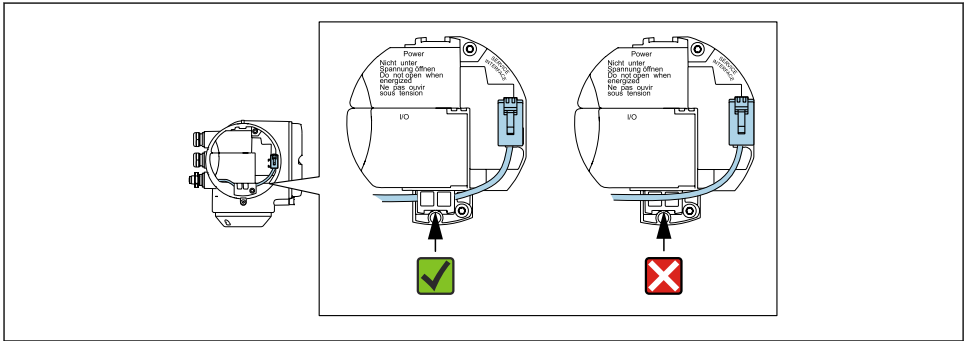

-  For detailed information on the electrical connection, see the "Electrical connection" section of the Operating Instructions for the device.

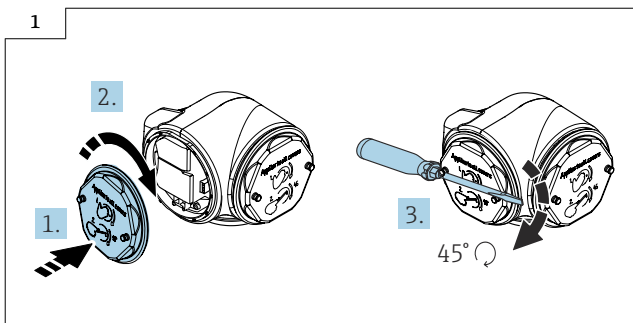

- Fit the cover, tighten by hand and retighten by 45° using a screwdriver.

9 Proline 500-digital transmitter housing, aluminium, non-Ex


9.1 Opening the aluminum transmitter

⚠ WARNING

The measuring device is energized!


Risk of fatal injury from electric shock.

- Open the measuring device only when the device is de-energized.

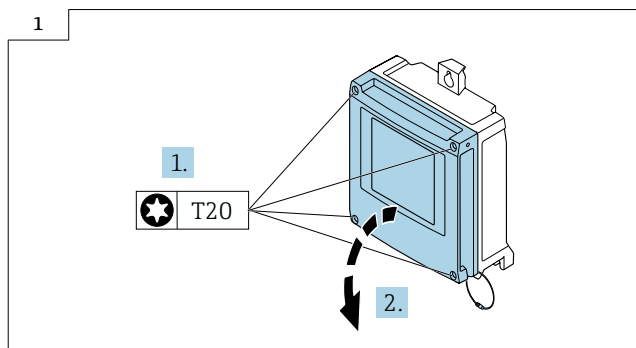


9.2 Replacing the 1 RJ45-M12 connector 80 mm

Proceed as described in Section 9.1 → 15 and as illustrated in the diagrams below.

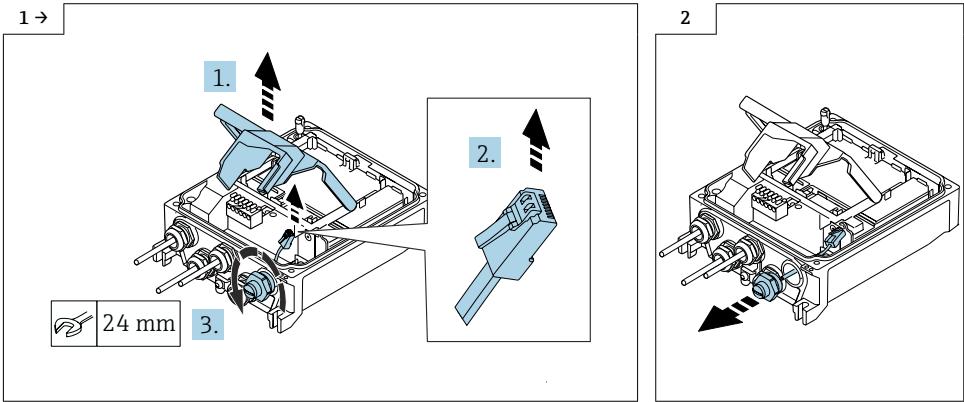

9.3 Replacing the 2 RJ45-M12 connector 80 mm


Proceed as described in Section 9.1 → 15 and as illustrated in the diagrams below.

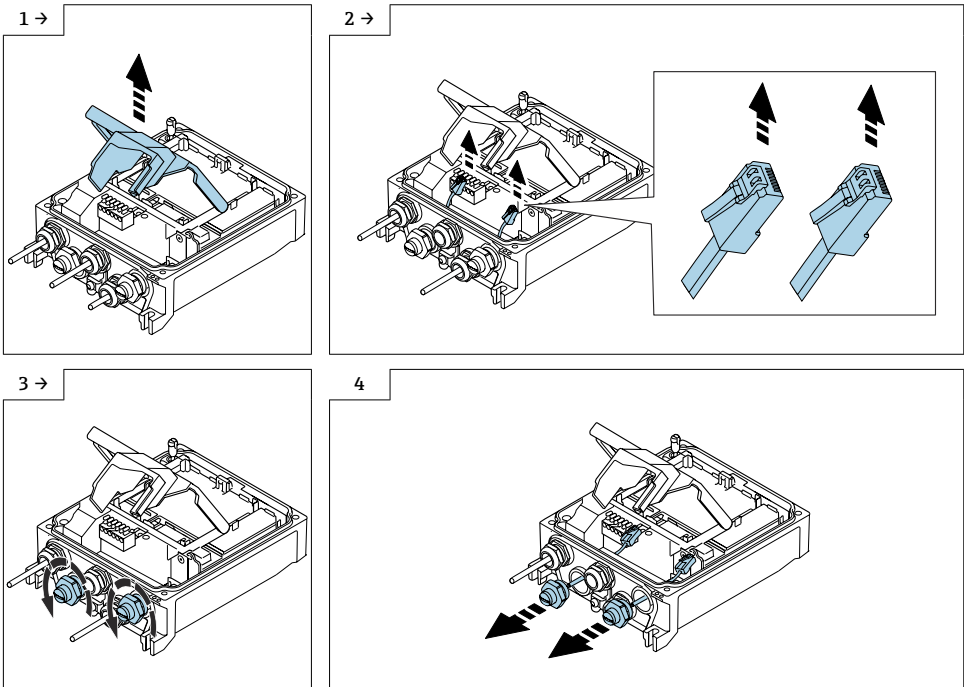

9.4 Reassembling the transmitter housing

Reassembly is carried out in reverse order. Note the following:

 Lubricate the thread of the cable gland prior to installation!

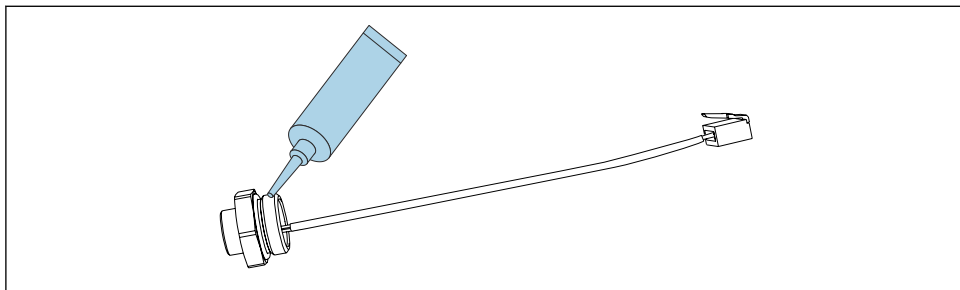

 For detailed information on the electrical connection, see the "Electrical connection" section of the Operating Instructions for the device.

10 Disposal



If required by the Directive 2012/19/EU on waste electrical and electronic equipment (WEEE), the product is marked with the depicted symbol in order to minimize the disposal of WEEE as unsorted municipal waste. Do not dispose of products bearing this marking as unsorted municipal waste. Instead, return them to the manufacturer for disposal under the applicable conditions.

Austausch RJ45-M12 Stecker

Proline 300, 500, 500-digital

Inhaltsverzeichnis

1	Übersicht Ersatzteilsets	20
2	Bestimmungsgemäße Verwendung	20
3	Reparaturberechtigte Personen	21
4	Sicherheitshinweise	21
5	Verwendete Symbole	22
6	Werkzeugliste	23
7	Proline 300, 500 Messumformergehäuse Aluminium Ex-frei	24
8	Proline 300 Messumformergehäuse Hygiene Ex-frei	27
9	Proline 500-digital Messumformergehäuse Aluminium Ex-frei	31
10	Entsorgung	33

1 Übersicht Ersatzteilsets

Die Einbauanleitung ist für folgende Ersatzteilsets gültig:

Bestellnummer	Original Ersatzteilset	Inhalt
71450719	Set Stecker RJ45-M12, L= 80 mm	1 × Stecker RJ45-M12, (80 mm / 3.1 in)
71450720	Set Stecker RJ45-M12, L= 120 mm	1 × Stecker RJ45-M12, (120 mm / 4.7 in)

- 
- Die Bestellnummer des Ersatzteilsets (auf dem Produktaufkleber der Verpackung) kann sich von der Produktionsnummer (auf dem Aufkleber direkt auf dem Ersatzteil) unterscheiden!
 - Durch Eingabe der Produktionsnummer des Ersatzteils im Ersatzteilfindetool kann die Bestellnummer des entsprechenden Ersatzteilsets ermittelt werden.
 - Wir empfehlen Einbauanleitung und Verpackung immer zusammen aufzubewahren.

2 Bestimmungsgemäße Verwendung

Ersatzteilset und Einbauanleitung dienen dazu, eine defekte Einheit gegen eine funktionierende Einheit des gleichen Typs zu ersetzen. Es dürfen nur Originalteile von Endress+Hauser verwendet werden. Grundsätzlich dürfen nur Ersatzteilsets verwendet werden, die von Endress+Hauser für das Messgerät vorgesehen sind.

Die Überprüfung ist via W@M Device Viewer durchzuführen, die Vorgehensweise dazu ist nachfolgend beschrieben.


- 
- Bei einigen Messgeräten befindet sich im Inneren des Gerätes eine Ersatzteilübersicht. Ist das Ersatzteilset dort aufgelistet, entfällt die Überprüfung.

1. www.endress.com/deviceviewer

↓

2. 

→

3. 

↓

4. 

↑



→ ?

1. www.endress.com/deviceviewer

2. Seriennummer (Ser. No.) eingeben, Produktdaten suchen und auf Ersatzteile klicken.

3. Anzeige aller Ersatzteile zum Messgerät.

4. Die Bestellnummer des Ersatzteilsets ermitteln.



Nur wenn die Bestellnummer des Ersatzteilsets mit einer Bestellnummer in der Ersatzteilliste übereinstimmt, darf das Ersatzteilset verwendet werden.

20

Endress+Hauser

3 Reparaturberechtigte Personen

Die Berechtigung zur Durchführung einer Reparatur ist von der Zulassung des Messgeräts abhängig. Die Tabelle zeigt den jeweils berechtigten Personenkreis.



Die Person, die eine Reparatur vornimmt, übernimmt die Verantwortung für die Sicherheit während der Arbeiten, die Qualität der Ausführung und die Sicherheit des Geräts nach der Reparatur.

Zulassung des Messgeräts	Reparaturberechtigter Personenkreis ¹⁾
Ohne Zulassung	1, 2, 3
Mit Zulassung (z.B. IECEx)	1, 2, 3
Bei eichfähigem Verkehr	4

- 1) 1 = Ausgebildete Fachkraft des Kunden, 2 = Von Endress+Hauser autorisierter Servicetechniker, 3 = Endress+Hauser (Messgerät an Hersteller zurücksenden)
4 = Mit der lokalen Zulassungsstelle prüfen, ob ein Ein-/Umbau unter Aufsicht erfolgen muss.

4 Sicherheitshinweise

- Prüfen, ob das vorliegende Ersatzteil zur Kennzeichnung auf dem Messgerät passt, wie auf der Titelseite beschrieben.
- Ersatzteilset und Einbauanleitung dienen dazu, eine defekte Einheit gegen eine funktionierende Einheit des gleichen Typs zu ersetzen.
Nur Originalteile von Endress+Hauser verwenden.
- Nationale Vorschriften bezüglich der Montage, elektrischen Installation, Inbetriebnahme, Wartung und Reparatur einhalten.
- Folgende Anforderungen an das Fachpersonal für Montage, elektrische Installation, Inbetriebnahme, Wartung und Reparatur der Messgeräte müssen erfüllt sein:
 - In Gerätesicherheit ausgebildet.
 - Mit den jeweiligen Einsatzbedingungen der Geräte vertraut.
 - Bei Ex-zertifizierten Messgeräten: zusätzlich im Explosionsschutz ausgebildet.
- Messgerät unter Spannung! Lebensgefahr durch Stromschlag. Messgerät nur im spannungslosen Zustand öffnen.
- Bei Messgeräten für den explosionsgefährdeten Bereich: Hinweise in der Ex-Dokumentation (XA) beachten.
- Bei Messgeräten in sicherheitstechnischen Applikationen gemäß IEC 61508 bzw. IEC 61511: Nach Reparatur Neuinbetriebnahme gemäß Betriebsanleitung durchführen. Reparatur dokumentieren.
- Vor einem Geräteausbau: Prozess in sicheren Zustand bringen und Leitung von gefährlichen Prozessstoffen befreien.
- Verbrennungsgefahr durch heiße Oberflächen! Vor Arbeitsbeginn: Anlage und Messgerät auf berührungssichere Temperatur abkühlen.
- Bei Messgeräten im abrechnungspflichtigen Verkehr: Nach Entfernen der Plombe ist der geeichte Zustand aufgehoben.
- Die Betriebsanleitung zum Messgerät ist zu beachten.

- Beschädigungsgefahr elektronischer Bauteile! Eine ESD-geschützte Arbeitsumgebung herstellen.
- Nach Entfernen der Elektronikabdeckung: Stromschlaggefahr durch aufgehobenen Berührungsschutz!
Messgerät ausschalten, bevor interne Abdeckungen entfernt werden.
- Änderungen am Messgerät sind nicht zulässig.
- Gehäuse nur kurzzeitig öffnen. Eindringen von Fremdkörpern, Feuchtigkeit oder Verunreinigung vermeiden.
- Defekte Dichtungen nur durch Original-Dichtungen von Endress+Hauser ersetzen.
- Defekte Gewinde erfordern eine Instandsetzung des Messgeräts.
- Gewinde (z.B. von Elektronikraum- und Anschlussraumdeckel) müssen geschmiert sein, sofern keine abriebfeste Trockenschmierung vorhanden ist. Säurefreies, nicht härtendes Fett verwenden.
- Wenn bei den Reparaturarbeiten Abstände reduziert oder die Spannungsfestigkeit des Messgeräts nicht sichergestellt werden kann: Prüfung nach Abschluss der Arbeiten durchführen (z.B. Hochspannungstest gemäß Herstellerangaben).
- Servicestecker:
 - Nicht in explosionsfähiger Atmosphäre anschließen.
 - Nur an Servicegeräte von Endress+Hauser anschließen.
- Die in der Betriebsanleitung aufgeführten Hinweise zum Transport und zur Rücksendung beachten.



Bei Fragen Endress+Hauser Service kontaktieren: www.addresses.endress.com

5 Verwendete Symbole

5.1 Warnhinweissymbole

GEFAHR

Dieser Hinweis macht auf eine gefährliche Situation aufmerksam, die, wenn sie nicht vermieden wird, zu Tod oder schwerer Körperverletzung führen wird.

WARNUNG

Dieser Hinweis macht auf eine gefährliche Situation aufmerksam, die, wenn sie nicht vermieden wird, zu Tod oder schwerer Körperverletzung führen kann.

VORSICHT

Dieser Hinweis macht auf eine gefährliche Situation aufmerksam, die, wenn sie nicht vermieden wird, zu leichter oder mittelschwerer Körperverletzung führen kann.

HINWEIS

Dieser Hinweis enthält Informationen zu Vorgehensweisen und weiterführenden Sachverhalten, die keine Körperverletzung nach sich ziehen.

5.2 Symbole für Informationstypen

Symbol	Bedeutung
	Erlaubt Abläufe, Prozesse oder Handlungen, die erlaubt sind.
	Verboten Abläufe, Prozesse oder Handlungen, die verboten sind.
	Tipp Kennzeichnet zusätzliche Informationen.
1., 2., 3...	Handlungsschritte

6 Werkzeugliste

 3 mm	 T20	 0,5 × 3,5 mm	 2 mm 24 mm	säurefreies, nicht härtendes Fett
---	--	---	--	--------------------------------------

7 Proline 300, 500 Messumformergehäuse Aluminium Ex-frei



7.1 Öffnen Messumformer Aluminium

⚠ WARNUNG


Messgerät unter Spannung!

Lebensgefahr durch Stromschlag.

► Messgerät nur im spannungslosen Zustand öffnen.

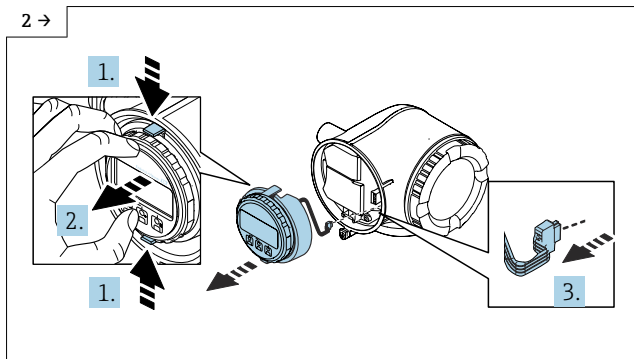
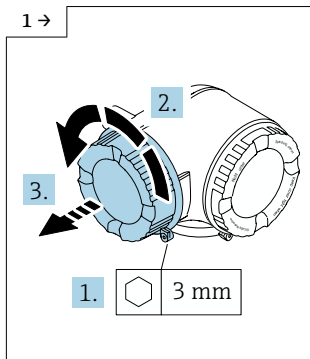


► Anzeigemodul entfernen, falls vorhanden.

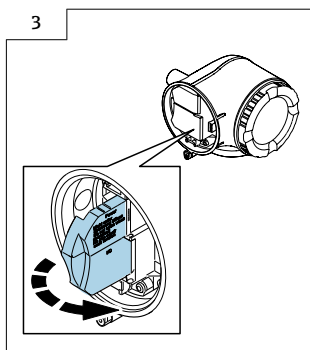


7.2 Austausch RJ45-M12 Stecker 120 mm

Vorgehen wie in Kap. 7.1 → 24 und wie in den Bildern unten.

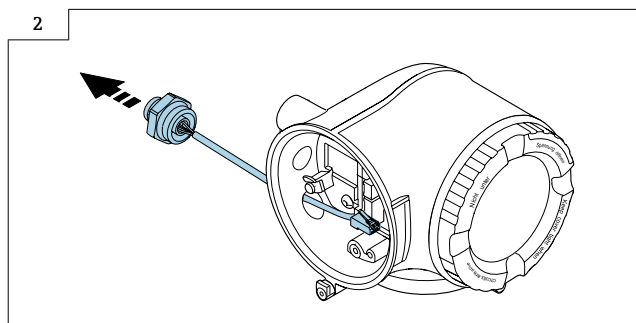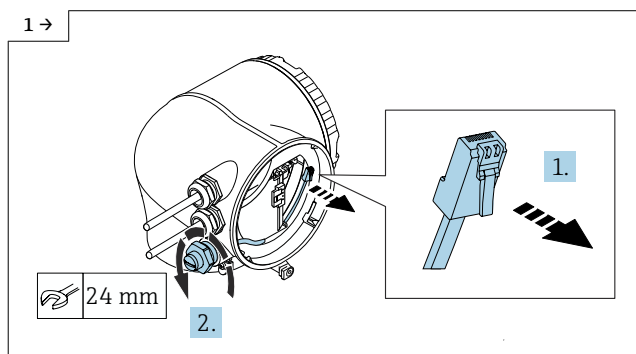


7.3 Austausch RJ45-M12 Stecker 80 mm

Vorgehen wie in Kap. 7.1 → 24 und wie in den Bildern unten.

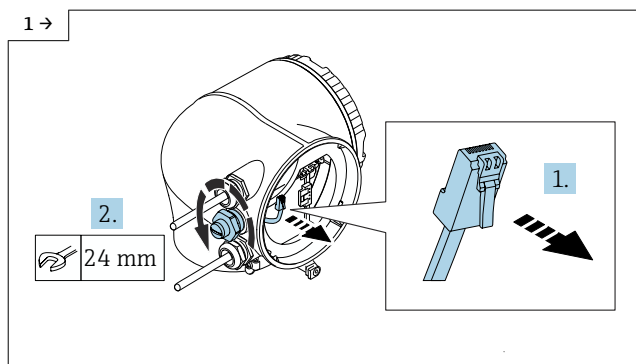

2

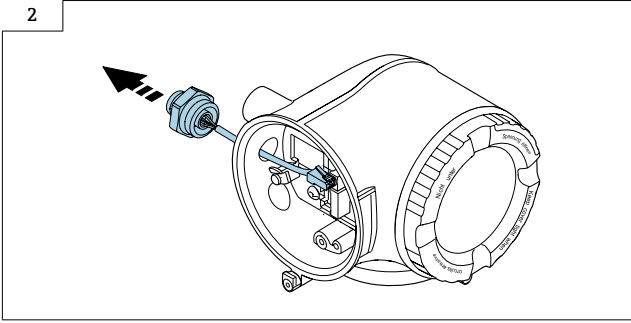


7.4 Zusammenbau Messumformergehäuse Aluminium


Der Zusammenbau erfolgt in umgekehrter Reihenfolge. Folgendes ist zu beachten:



Das Gewinde der Kabelverschraubung vor dem Einbau fetten!

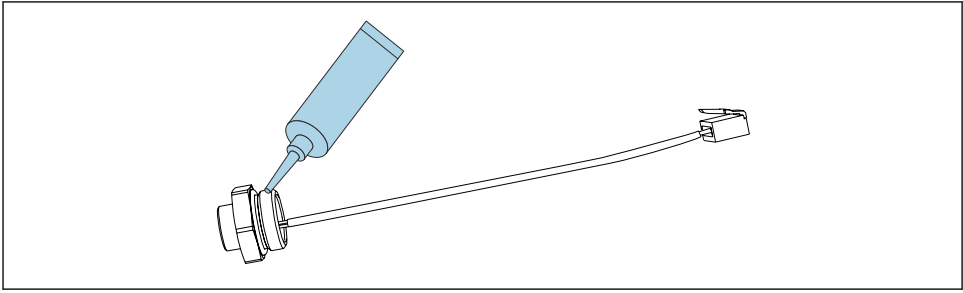

Darauf achten, dass das Kabel in die dafür vorgesehene Kabelführung verlegt wird.

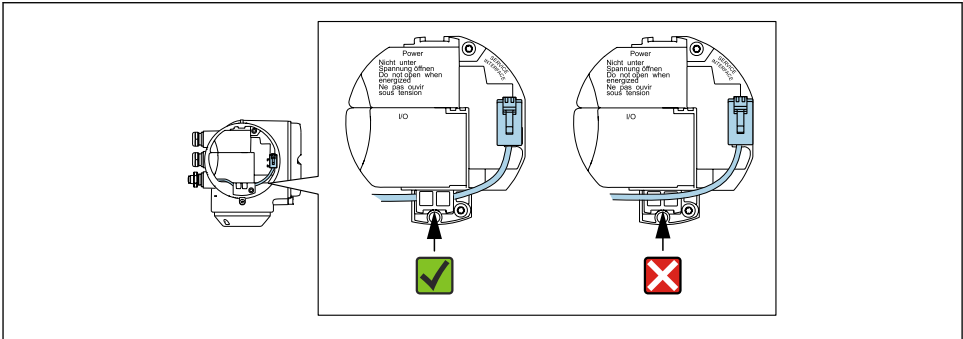




Detaillierte Angaben zum elektrischen Anschluss: Kapitel "Elektrischer Anschluss", Betriebsanleitung zum Gerät.

8 Proline 300 Messumformergehäuse Hygiene Ex-frei

8.1 Lösen der Deckelsicherung für Messumformer in Zone 2



Bei Geräten für Zone 2 befindet sich am Anschlussraumdeckel und am Elektronikraumdeckel eine Deckelsicherung. Die Deckelsicherung muss gelöst werden, bevor man den Anschlussraumdeckel/Elektronikraumdeckel abschrauben kann.

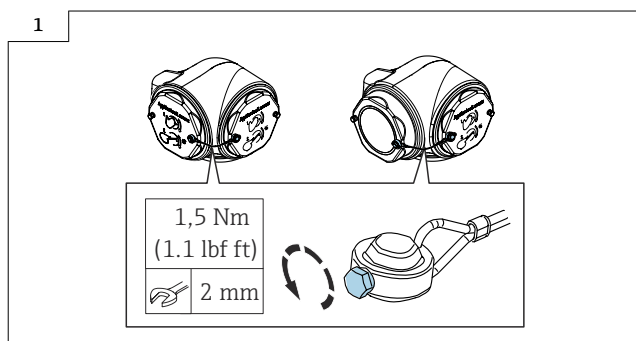

8.2 Öffnen Messumformer Hygiene




Messgerät unter Spannung!


Lebensgefahr durch Stromschlag.

- Messgerät nur im spannungslosen Zustand öffnen.


Falls vorhanden, die Deckelsicherung lösen, wie in Kap. 8.1 → 27 beschrieben. Weiter vorgehen wie in den Bildern unten.

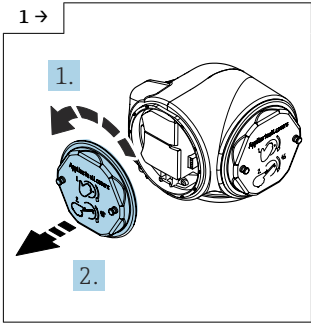


► Öffnen Deckel Blind

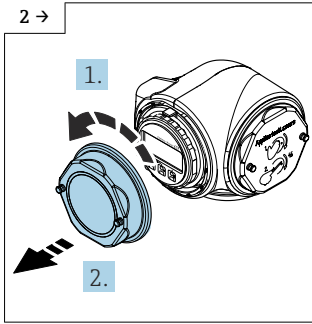

► Öffnen Deckel mit Anzeigemodul

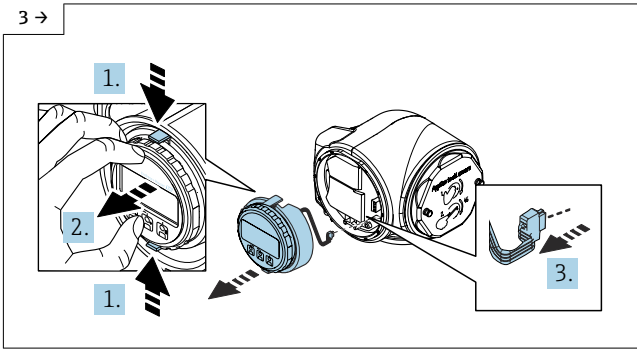



► Anzeigemodul entfernen, falls vorhanden.

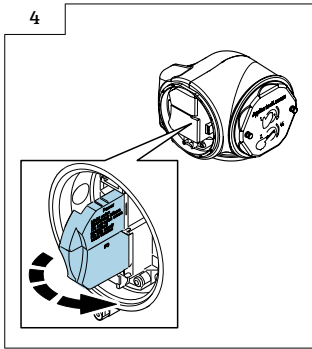

8.3 Austausch RJ45-M12 Stecker 120 mm



Vorgehen wie in Kap. 8.2 → 27 und wie in den Bildern unten.

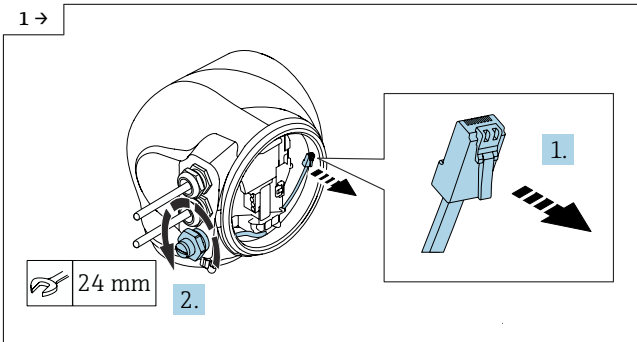

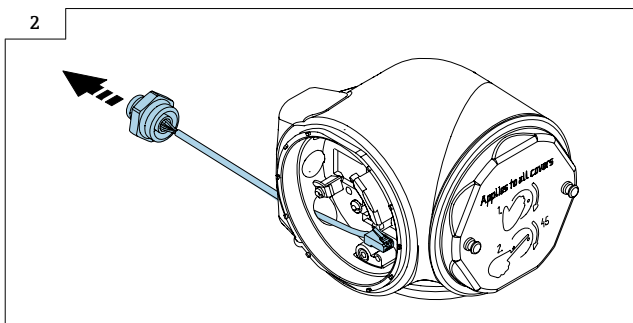

8.4 Austausch RJ45-M12 Stecker 80 mm

Vorgehen wie in Kap. 8.2 →  27 und wie in den Bildern unten.

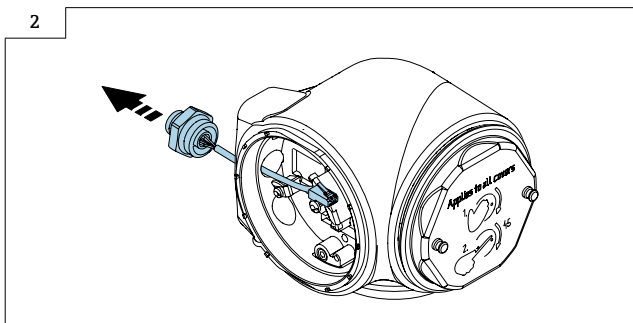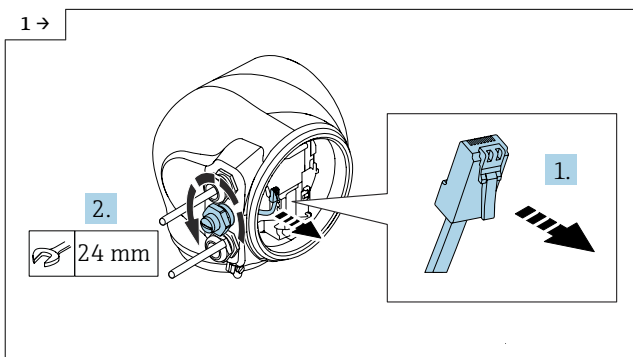


8.5 Zusammenbau Messumformergehäuse Hygiene


Der Zusammenbau erfolgt in umgekehrter Reihenfolge. Folgendes ist zu beachten:




Das Gewinde der Kabelverschraubung vor dem Einbau fetten!

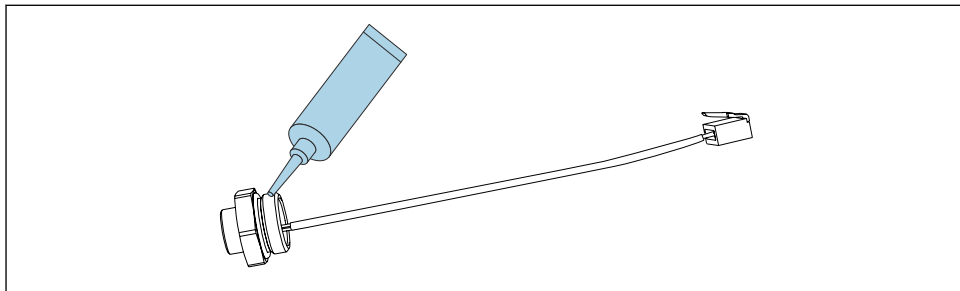

Darauf achten, dass das Kabel in die dafür vorgesehene Kabelführung verlegt wird.

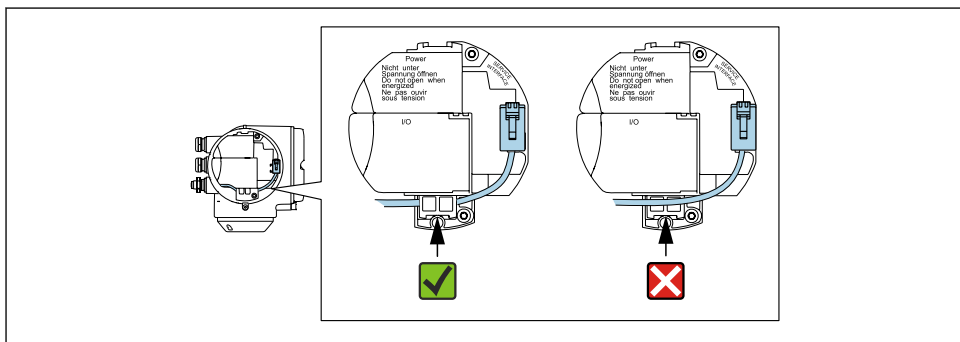

Detaillierte Angaben zum elektrischen Anschluss: Kapitel "Elektrischer Anschluss", Betriebsanleitung zum Gerät.

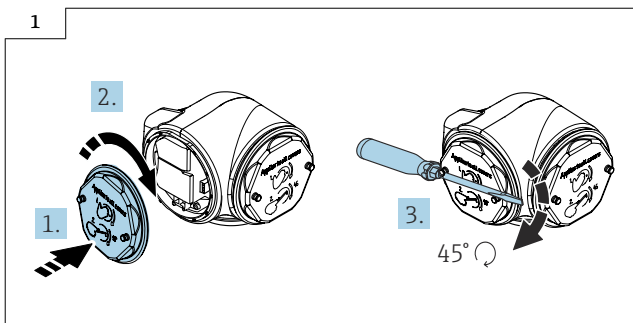

- Deckel aufsetzen, von Hand festziehen und mit einem Schraubendreher um 45° nachziehen.

9 Proline 500-digital Messumformergehäuse Aluminium Ex-frei


9.1 Öffnen Messumformer Aluminium

⚠ WARNING

Messgerät unter Spannung!


Lebensgefahr durch Stromschlag.

- Messgerät nur im spannungslosen Zustand öffnen.

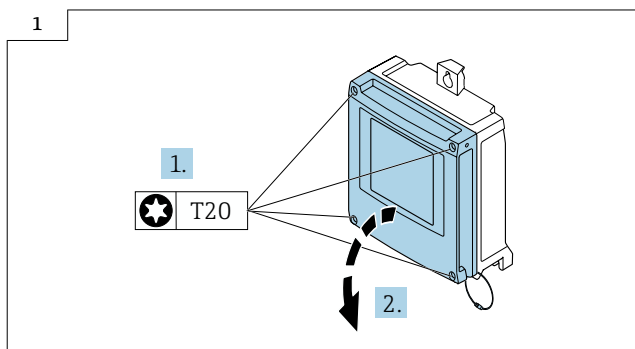


9.2 Austausch 1 × RJ45-M12 Stecker 80 mm

Vorgehen wie in Kap. 9.1 → 31 und wie in den Bildern unten.

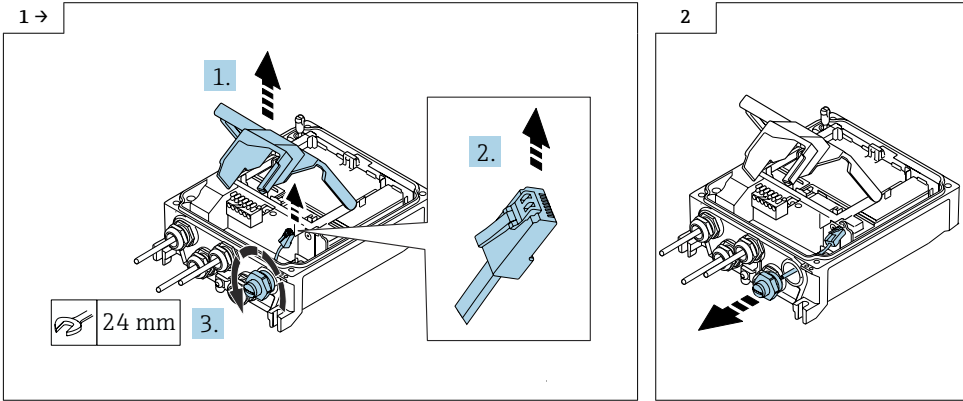

9.3 Austausch 2 × RJ45-M12 Stecker 80 mm

Vorgehen wie in Kap. 9.1 → 31 und wie in den Bildern unten.

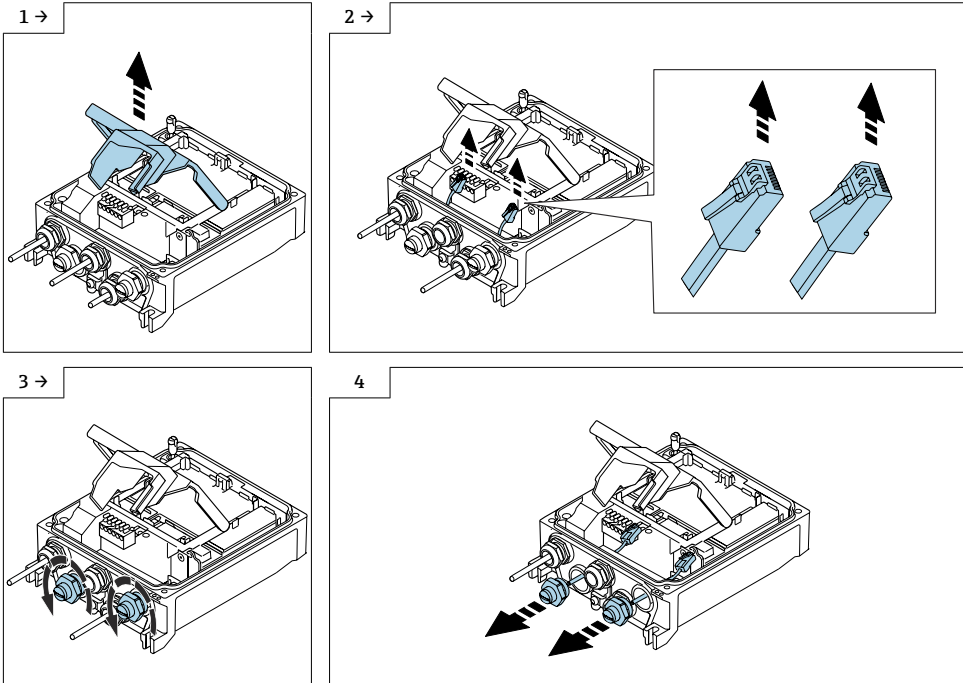


9.4 Zusammenbau Messumformergehäuse

Der Zusammenbau erfolgt in umgekehrter Reihenfolge. Folgendes ist zu beachten:



Das Gewinde der Kabelverschraubung vor dem Einbau fetten!

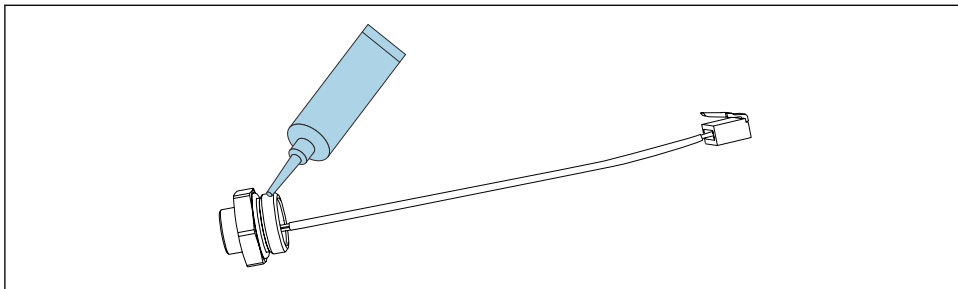

Detaillierte Angaben zum elektrischen Anschluss: Kapitel "Elektrischer Anschluss", Betriebsanleitung zum Gerät.

10 Entsorgung



Gemäß der Richtlinie 2012/19/EU über Elektro- und Elektronik-Altgeräte (WEEE) ist das Produkt mit dem abgebildeten Symbol gekennzeichnet, um die Entsorgung von WEEE als unsortierten Hausmüll zu minimieren. Gekennzeichnete Produkte nicht als unsortierter Hausmüll entsorgen, sondern zu den gültigen Bedingungen an den Hersteller zurückgeben.



71601528

www.addresses.endress.com
