


Installation instruction OTM311 into Pentronic accessories

OTM311 with U=16.5 and Metal to metal sealing 30°, G1/8" cap nut

First check if thermometer will be installed in:

a) a thermowell (e.g. Pentronic 9026015-015; L1=19 mm)

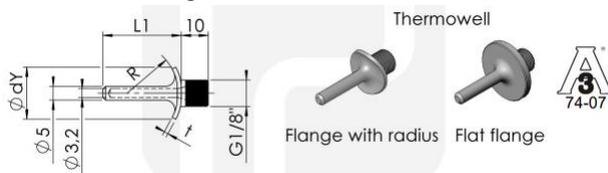

b) welding-boss (Direct contact with the process)



In case of installation in a thermowell:

1. Put the sensor in the thermowell
2. Put some thread glue on the G1/8" thread.
3. **Tighten the G1/8" cap-nut only by hand without any tools!**

In case of installation in a welding-boss:

1. Put the sensor into the welding-boss
2. Tighten the G1/8" cap-nut with 10 Nm.