Safety Instructions **Prosonic M FMU40, FMU41, FMU42, FMU44**

4-20 mA HART

ATEX, IECEx: Ex ia IIC Ga/Gb

Ex ia IIC Gb







	,		

Prosonic M FMU40, FMU41, FMU42, FMU44

4-20 mA HART

Table of contents

About this document	Ŧ
Associated documentation	<u>'</u>
Supplementary documentation	<u>'</u>
Manufacturer's certificates	4
Manufacturer address5	5
Other standards5	5
Extended order code5	ō
Safety instructions: General	7
Safety instructions: Special conditions	7
Safety instructions: Installation 8	3
Temperature tables	9
Connection data)


About this document



This document has been translated into several languages. Legally determined is solely the English source text.

The document translated into EU languages is available:

- In the download area of the Endress+Hauser website:
 www.endress.com -> Downloads -> Manuals and Datasheets ->
 Type: Ex Safety Instruction (XA) -> Text Search: ...
- In the Device Viewer: www.endress.com -> Product tools -> Access device specific information -> Check device features



Associated documentation

This document is an integral part of the following Operating Instructions:

BA00237F/00

Supplementary documentation

Explosion-protection brochure: CP00021Z/11

The Explosion-protection brochure is available:

- In the download area of the Endress+Hauser website: www.endress.com -> Downloads -> Brochures and Catalogs -> Text Search: CP00021Z
- On the CD for devices with CD-based documentation

Manufacturer's certificates

EU Declaration of Conformity

Declaration Number:

EG02007

The EU Declaration of Conformity is available: In the download area of the Endress+Hauser website: www.endress.com -> Downloads -> Declaration -> Type: EU Declaration -> Product Code: ...

EU type-examination certificate

Certificate number: KEMA 02ATEX1006 X

List of applied standards: See EU Declaration of Conformity.

IEC Declaration of Conformity

Certificate number: IFCFx DFK 11 0014X

Affixing the certificate number certifies conformity with the following standards (depending on the device version):

IEC 60079-0:2017
IEC 60079-11:2011
IEC 60079-26:2014
IEC 60529:2013

Manufacturer address

Endress+Hauser SE+Co. KG Hauptstraße 1 79689 Maulburg, Germany

Address of the manufacturing plant: See nameplate.

Other standards

Among other things, the following standards shall be observed in their current version for proper installation:

- IEC/EN 60079-14: "Explosive atmospheres Part 14: Electrical installations design, selection and erection"
- EN 1127-1: "Explosive atmospheres Explosion prevention and protection - Part 1: Basic concepts and methodology"

Extended order code

The extended order code is indicated on the nameplate, which is affixed to the device in such a way that it is clearly visible. Additional information about the nameplate is provided in the associated Operating Instructions.

Structure of the extended order code

FMU4x	_ ********	+	A*B*C*D*E*F*G*.
(Device	(Basic		(Optional
type)	specifications)		specifications)

* = Placeholder

At this position, an option (number or letter) selected from the specification is displayed instead of the placeholders.

Basic specifications

The features that are absolutely essential for the device (mandatory features) are specified in the basic specifications. The number of positions depends on the number of features available. The selected option of a feature can consist of several positions.

Optional specifications

The optional specifications describe additional features for the device (optional features). The number of positions depends on the number of features available. The features have a 2-digit structure to aid identification (e.g. JA). The first digit (ID) stands for the feature group and consists of a number or a letter (e.g. J = Test, Certificate). The second digit constitutes the value that stands for the feature within the group (e.g. A = 3.1 material (wetted parts), inspection certificate).

More detailed information about the device is provided in the following tables. These tables describe the individual positions and IDs in the extended order code which are relevant to hazardous locations.

Extended order code: Prosonic M



The following specifications reproduce an extract from the product structure and are used to assign:

- This documentation to the device (using the extended order code on the nameplate).
- The device options cited in the document.

Device type

FMU40, FMU41, FMU42, FMU44

Basic specifications

Position 1 (Approval)				
Selected option		Description		
		ATEX II 1/2 G Ex ia IIC T6T4 Ga/Gb ATEX II 2 G Ex ia IIC T6T4 Gb		
	С	IECEx Ex ia IIC T6T4 Ga/Gb		

	Position 3 (Power Supply, Output)		
	Selected option		Description
FMU4x B, J, P		В, Ј, Р	2-wire; 4-20 mA HART

Position 4 (Operation)			
Selected option		Description	
FMU4x	1	W/o display, via communication	
2 4-line display VU331, Envelope curve display on site		4-line display VU331, Envelope curve display on site	
	3 1)	Prepared for FHX40, remote display (accessory)	

1) Only in connection with Position 5 = A, Y

Position 5 (Housing)				
Selected option		Description		
FMU4x	A	F12 Alu, coated, IP68 NEMA6P		
	D	T12 Alu, coated, IP68 NEMA6P + OVP, separate conn. compartment, OVP = overvoltage protection		
	Y	Special version F23		

Optional specifications

No options specific to hazardous locations are available.

Safety instructions: General

- The device is intended to be used in explosive atmospheres as defined in the scope of IEC 60079-0 or equivalent national standards. If no potentially explosive atmospheres are present or if additional protective measures have been taken: The device may be operated according to the manufacturer's specifications.
- Staff must meet the following conditions for mounting, electrical installation, commissioning and maintenance of the device:

 - Be trained in explosion protection
 - ullet Be familiar with national regulations
- Install the device according to the manufacturer's instructions and national regulations.
- Avoid electrostatic charging:
 - Of plastic surfaces (e.g. enclosure, sensor element, special varnishing, attached additional plates, ..)
 - Of isolated capacities (e.g. isolated metallic plates)
- Refer to the temperature tables for the relationship between the permitted ambient temperature for the electronics enclosure, depending on the range of application and the temperature class.


Safety instructions: Special conditions Permitted ambient temperature range at the electronics enclosure: $-40\,^{\circ}\text{C} \le T_a \le +80\,^{\circ}\text{C}$

- Observe the information in the temperature tables.
- To avoid electrostatic charging: Do not rub surfaces with a dry cloth.
- In the event of additional or alternative special varnishing on the enclosure or other metal parts or for adhesive plates:
 - Observe the danger of electrostatic charging and discharge.
 - Do not install in the vicinity of processes (≤ 0.5 m) generating strong electrostatic charges.

Device type FMU42, FMU44

Avoid electrostatic charging of the sensor (e.g. do not rub dry and install outside the filling flow).

Safety instructions: Installation

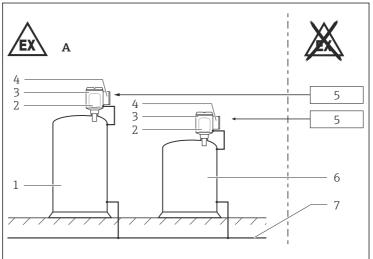

A0035792

₽ 1

- A Zone 1
- 1 Tank, hazardous area Zone 0
- 2 Electronic insert
- 3 Enclosure
- 4 only Basic specification, Position 5 = D: Terminal module with integrated overvoltage protector
- 5 Certified associated apparatus
- 6 Tank, hazardous area Zone 1
- 7 Local potential equalization

- Continuous service temperature of the connecting cable: $\geq T_a + 5$ K.
- When the device is connected to an intrinsically safe circuit Ex ib, the type of protection changes to Ex ib. Do not operate intrinsically safe circuits Ex ib in Zone 0.
- Observe the pertinent quidelines when interconnecting intrinsically safe circuits.

Basic specification, Position 5 = A, Y

- The intrinsically safe input power circuit of the device is isolated from ground. The dielectric strength is at least 500 V_{rms} .
- Option:
 - Remote display, e.g. FHX40 (Observe Safety Instructions)
 - Service interface: Commubox with associated ToF cable (Observe) Safety Instructions)

Basic specification, Position 5 = D

- The intrinsically safe input power circuit of the device is isolated from ground. The dielectric strength to earth is limited by 600 V electrode arresters.
- Option (only for service purposes): Service interface: Commubox with associated ToF cable (Observe Safety Instructions)
- \blacksquare Basic specification, Position 5 = Y
 - Install only in areas without vibration.
 - Install only within vertical mounting position.

Temperature tables

Zone 1 - Application



Observe the permitted temperature range.

Basic specification, Position 5 = A, Y

$ \begin{array}{ c c c c c c } \hline Temperature \ class & Ambient \ temperature \ T_a \\ \hline (ambient) & \\ \hline \end{array} $		Process temperature T _p (process)		
Т6	−40 to +60 °C	max. 80 °C		
T5, T4	−40 to +80 °C			

Basic specification, Position 5 = D

Temperature class	$\begin{array}{c} \textbf{Ambient temperature } T_a \\ \textbf{(ambient)} \end{array}$	$\begin{array}{c} Process \ temperature \ T_p \\ (process) \end{array}$
Т6	−40 to +60 °C	max. 80 °C
T5	−40 to +75 °C	
T4	−40 to +80 °C	

Connection data

Power supply and signal circuit with protection type: intrinsic safety Ex ia IIC. Ex ia IIB.

Certified intrinsically safe circuit with the following maximum values

Basic specification, Position 5 = A, Y

Power supply

 $U_i = 30 \text{ V}$ $I_i = 300 \text{ mA}$

 $P_i = 1 W$

 L_i = negligible

 $C_i = 13 \text{ nF}$

Basic specification, Position 5 = D

Power supply

 $U_i = 30 \text{ V}$ $I_i = 273 \text{ mA}$

 $P_{i} = 1 W$

 $L_i = negligible$

 $C_{i} = 13 \text{ nF}$

Option

Remote display, e.g. FHX40:

Power supply and signal circuit with protection type: intrinsic safety $\mbox{\rm Ex}$ ia IIC, $\mbox{\rm Ex}$ ia IIB.

Basic specification, Position 5 = A, Y

Power supply

 $U_0 = 4.2 \text{ V}$

 $I_0 = 34 \text{ mA}$

 $P_0 = 36 \text{ mW}$

effective inner inductance L_i = negligible effective inner capacitance C_i = negligible

Characteristic curve: linear

Connecting the Commubox service interface with the associated $\operatorname{\mathsf{ToF}}$ cable

Basic specification, Position 5 = A, Y and Basic specification, Position 5 = D (only for service purposes)

Commubox output + ToF cable

 $U_0 = 3.74 \text{ V}$

 $I_0 = 9.9 \text{ mA}$

 $P_0 = 9.2 \text{ mW}$

effective inner inductance L_i = negligible effective inner capacitance C_i = negligible Characteristic curve: linear

For material group IIC:

- permitted outer inductance $L_0 \le 340 \text{ mH}$
- permitted outer capacitance $C_0 \le 100 \mu F$

When interconnected to a Prosonic M, the following results apply:

	L _o =	0.15 mH	0.5 mH	1 mH	2 mH	5 mH
for material group IIC	C _o =	≤ 8 µF	≤ 7 µF	≤ 5.5 µF	≤ 5 µF	≤ 4 µF
for material group IIB	C _o =	10 μF				



www.addresses.endress.com