# Safety Instructions Liquiphant FTL51B, FTL63

II 1/2 G Ex ia IIC T6...T1 Ga/Gb II 2 G Ex ia IIC T6...T1 Gb II 1/2 D Ex ia IIIC Txxx°C Da/Db II 2 D Ex ia IIIC Txxx°C Db









# Liquiphant FTL51B, FTL63

# Table of contents

About this document
Associated documentation
Supplementary documentation
General notes: Combined approval
Certificates and declarations
Manufacturer address 5
Other standards5
Extended order code 5
Safety instructions: General
Safety instructions: Specific conditions of use
Safety instructions: Installation
Safety instructions: Zone 0
Safety instructions: Zone separation Zone 0, Zone 1
Temperature tables
Connection data

# About this document



The document number of these Safety Instructions (XA) must match the information on the nameplate.

# Associated documentation

All documentation is available on the Internet: www.endress.com/Deviceviewer (enter the serial number from the nameplate).

To commission the device, please observe the Operating Instructions pertaining to the device:


- BA01894F (FTL51B)
- BA02286F (FTL63)

# Supplementary documentation

Explosion protection brochure: CP00021Z

The explosion protection brochure is available on the Internet: www.endress.com/Downloads

# General notes: Combined approval

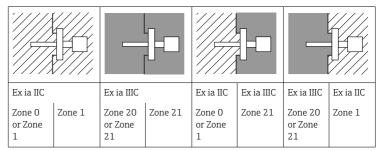

The device is designed for operation in explosive gas or explosive dust atmosphere as shown in the sketch above. In the event of potentially explosive gas-air and dust-air mixtures occurring simultaneously: Suitability requires further assessment.



A sequential change between gas and dust explosion protection is only possible if:

- A period with non-explosive atmosphere is realized during the transition or
- Special examinations are done which are not covered by the certificate

# Certificates and declarations

## **UK Declaration of Conformity**

Declaration Number: UK 00031

The UK Declaration of Conformity is available on the Internet: www.endress.com/Downloads

## UKCA type-examination certificate

Certificate number: CML 25UKEX1021X

List of applied standards: See UK Declaration of Conformity.

# Manufacturer address

Endress+Hauser SE+Co. KG Hauptstraße 1 79689 Maulburg, Germany

Address of the manufacturing plant: See nameplate.

#### Other standards

Among other things, the following standards shall be observed in their current version for proper installation:

- IEC/EN 60079-14: "Explosive atmospheres Part 14: Electrical installations design, selection and erection"
- EN 1127-1: "Explosive atmospheres Explosion prevention and protection - Part 1: Basic concepts and methodology"

# Extended order code

The extended order code is indicated on the nameplate, which is affixed to the device in such a way that it is clearly visible. Additional information about the nameplate is provided in the associated Operating Instructions.

#### Structure of the extended order code

FTL51B, FTL63	-	*****	+	A*B*C*D*E*F*G*.
(Device		(Basic		(Optional
type)		specifications)		specifications)

### \* = Placeholder

At this position, an option (number or letter) selected from the specification is displayed instead of the placeholders.

#### Basic specifications

The features that are absolutely essential for the device (mandatory features) are specified in the basic specifications. The number of

positions depends on the number of features available. The selected option of a feature can consist of several positions.

### Optional specifications

The optional specifications describe additional features for the device (optional features). The number of positions depends on the number of features available. The features have a 2-digit structure to aid identification (e.g. JA). The first digit (ID) stands for the feature group and consists of a number or a letter (e.g. J = Test, Certificate). The second digit constitutes the value that stands for the feature within the group (e.g. A = 3.1 material (wetted parts), inspection certificate).

More detailed information about the device is provided in the following tables. These tables describe the individual positions and IDs in the extended order code which are relevant to hazardous locations.

### Extended order code: Liquiphant



The following specifications reproduce an extract from the product structure and are used to assign:

- This documentation to the device (using the extended order code on the nameplate).
- The device options cited in the document.

Device type FTL51B, FTL63

Basic specifications

Position 1, 2 (Approval)			
Selected option		Description	
FTL51B FTL63	UK 1)	UK II 1/2 G Ex ia IIC T6T1 Ga/Gb UK II 2 G Ex ia IIC T6T1 Gb UK II 1/2 D Ex ia IIIC Txxx°C Da/Db UK II 2 D Ex ia IIIC Txxx°C Db	

1) In connection with Position 3, 4 = A8 and Optional specification, ID Nx, Ox = NG: The temperature classes change to T4...T1

Position 3, 4 (Output)			
Selected option		Description	
FTL51B	A7	FEL67, 2-wire PFM + test button	
FTL63	A8	FEL68, 2-wire NAMUR + test button	
	GA	FEL60D, density/concentration	

Position 6 (Housing, Material)			
Selected opt	ion	Description	
FTL51B B Single compartment; Alu, coated		Single compartment; Alu, coated	
FTL63	С	Single compartment; 316L, cast	
	M	Dual compartment L-shape; Alu, coated	
	n in the te olary as fo	mperature tables llows:	

Position 7 (Electrical Connection)			
Selected option		Description	
FTL51B	B 1)	Gland M20, brass nickel plated, IP66/68 NEMA Type 4X/6P	
FTL63	C 2)	Gland M20, 316L, IP66/68 NEMA Type 4X/6P	
	F	Thread M20, IP66/68 NEMA Type 4X/6P	
	G	Thread G1/2, IP66/68 NEMA Type 4X/6P	
	I	Thread NPT3/4, IP66/68 NEMA Type 4X/6P	
	Y	Special version: Thread NPT1/2, IP66/68 NEMA Type 4X/6P	

- Only in connection with Position 6 = B, M Only in connection with Position 6 = B, C 1)
- 2)

Position 8 (Application)		
Selected option		Description
FTL51B	A 1)	Process max 150°C/302°F, max 64bar
FTL63	B 1)	Process max 150°C/302°F, max 100bar
	C 2)	Process max 80°C/176°F, max 25bar

- Only in connection with Position 3, 4 = A7, A8 Only in connection with Position 3, 4 = GA
- 1) 2)

Position 9 (Surface Refinement)			
Selected option		Description	
FTL51B	Α	Standard Ra <3,2µm/126µin	
FTL63	А	Standard Ra <1,5µm/59µin	
	D	Hygienic Ra <0,3µm/12µin mech. polished	
	Е	Hygienic Ra <0,38µm/15µin electro-polished	

Position 10 (Type of Probe)			
Selected option		Description	
FTL51B	1	Compact version	
FTL63	2	Extension tube	
	3	Short tube version	
	n in the te plary as fo	mperature tables llows:	

# Optional specifications

ID Jx, Kx (Test, Certificate, Declaration)		
Selected option		Description
FTL51B FTL63	JL 1)	Ambient temperature -50°C/-58°F

Only in connection with Position 3, 4 = A7, A8

ID Mx (Sensor Design)		
Selected option		Description
FTL51B	MR	Temperature separator
FTL63	MS	Pressure tight feed through (Second line of defence)

ID Nx, Ox (Accessory Mounted)							
Selected opt	tion	Description					
FTL51B	NF 1)	Bluetooth					
NG <sup>2)</sup> Bluetooth for 1		Bluetooth for NAMUR output					
	NJ	Cover with sight glass, glass					

- 1) Only in connection with Position 3, 4 = A7, Position 6 = B, M
- Only in connection with Position 3, 4 = A8, Position 6 = B, M

ID Px, Rx (Accessory Enclosed)									
Selected opt	ion	Description							
FTL51B	PA 1)	Weather protection cover, 316L							
FTL63	PB <sup>2)</sup>	Weather protection cover, plastic							
	R6 3)	Test magnet							

- 1) Only in connection with Position 6 = M
- 2) Only in connection with Position 6 = B, C
- 3) Only in connection with Position 3, 4 = A8

## Safety instructions: General

- The device is intended to be used in explosive atmospheres as defined in the scope of EN IEC 60079-0 or equivalent national standards. If no potentially explosive atmospheres are present or if additional protective measures have been taken: The device may be operated according to the manufacturer's specifications.
- Devices suitable for zone separation (marked Ga/Gb or Da/Db) are always suitable for installation in the less critical zone (Gb or Db).
   Due to space limitations the corresponding marking maybe not indicated on the nameplate.
- Staff must meet the following conditions for mounting, electrical installation, commissioning and maintenance of the device:
  - Be suitably qualified for their role and the tasks they perform
  - Be trained in explosion protection
  - $\,\blacksquare\,$  Be familiar with national regulations
- Install the device according to the manufacturer's instructions and national regulations.
- Do not operate the device outside the specified electrical, thermal and mechanical parameters.
- Only use the device in media to which the wetted materials have sufficient durability.

- Avoid electrostatic charging:
  - Of plastic surfaces (e.g. enclosure, sensor element, special varnishing, attached additional plates, ...)
  - Of isolated capacities (e.g. isolated metallic plates)
- Refer to the temperature tables for the relationship between the permitted ambient temperature for the sensor and/or transmitter, depending on the range of application and the temperature class.
- Alterations to the device can affect the explosion protection and must be carried out by staff authorized to perform such work by Endress+Hauser.

Safety instructions: Specific conditions of use Permitted ambient temperature range at the electronics enclosure:  $-40\,^{\circ}\text{C} \le T_a \le +70\,^{\circ}\text{C}$ 

- Limitations of the maximum ambient temperature at the electronics enclosure may be required dependent on device configuration, process temperatures and temperature classification.
- Details of limitations: → 🖺 14, "Temperature tables".
- To avoid electrostatic charging: Do not rub surfaces with a dry cloth.
- In the event of additional or alternative special varnishing on the enclosure or other metal parts or for adhesive plates:
  - Observe the danger of electrostatic charging and discharge.
  - Do not install in the vicinity of processes (≤ 0.5 m) generating strong electrostatic charges.


*Basic specification, Position 6 = B, M* Avoid sparks caused by impact and friction.

Optional specification, ID Px, Rx = PAConnect the weather protection cover to the local potential equalization.

*Optional specification, ID Px, Rx = PB*Avoid electrostatic charging of the weather protection cover (e.g. friction, cleaning, maintenance, strong medium flow).

Optional specification, ID Px, Rx = R6Suitable for use in explosion hazardous areas.

## Safety instructions: Installation

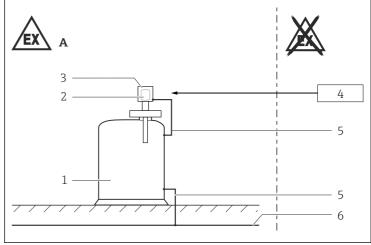

A0025536

- A Zone 1, Zone 21
- 1 Tank; Zone 0, Zone 1, Zone 20, Zone 21
- 2 Electronic insert
- 3 Enclosure
- Basic specification, Position 3, 4 = A7, A8:
   Associated intrinsically safe power supply units
   Basic specification, Position 3, 4 = GA:
   Only associated intrinsically safe power supply unit FML621 from Endress+Hauser
- 5 Potential equalization line
- 6 Local potential equalization
- When the device is connected to certified intrinsically safe circuits of Category Ex ib for Equipment Groups IIC and IIB, the type of protection changes to Ex ib IIC and Ex ib IIB.
- Continuous service temperature of the connecting cable:  $\geq T_a+20$  K.
- Perform the following to achieve the degree of protection IP66/67:
  - Screw the cover tight.
  - Mount the cable entry correctly.
- Seal unused entry glands with approved sealing plugs that correspond to the type of protection.
- Observe the pertinent guidelines when interconnecting intrinsically safe circuits
- Observe the maximum process conditions according to the manufacturer's Operating Instructions.
- At high medium temperatures, note flange pressure load capacity as a factor of temperature.

- Install the device to exclude any mechanical damage or friction during the application. Pay particular attention to flow conditions and tank fittings.
- Support extension tube of the device if a dynamic load is expected.
- The device can be equipped with the Bluetooth® module: refer to the Operating Instructions and specifications in the "Bluetooth® module" chapter.

### Device group III, Application in dust

- To ensure the ingress protection IP66/67: Only use the unit-mounted cable entries, sealing plugs and O-rings.
- Supplied cable glands and metallic sealing plugs comply with the requirements of type of protection marked on the nameplate.
- In case of very strongly abrasive or corrosive media: Additionally
  protect the wetted surface of the sensor in order to avoid abrasion of
  the zone separation wall.

### Permitted ambient conditions

### Ex ia IIIC Txxx°C Da/Db

Process Zone 20	Enclosure Zone 21
Continuous dust submersion	Dust accumulation or temporary explosive dust atmosphere
Continuous explosive dust atmosphere and deposits	Dust accumulation or temporary explosive dust atmosphere

#### Ex ia IIIC Txxx°C Db

Process	Enclosure
Zone 21	Zone 21
Continuous dust deposits or temporary explosive dust atmosphere	Dust accumulation or temporary explosive dust atmosphere

### Accessory high pressure sliding sleeve

The high pressure sliding sleeve can be used for a continuous setting of the switch point and is suited for zone separation if mounted properly (see Operating Instructions).

### Intrinsic safety

- The device is only suitable for connection to certified, intrinsically safe equipment with explosion protection Ex ia / Ex ib.
- $\blacksquare$  The intrinsically safe input power circuit of the device is isolated from ground. The dielectric strength is at least 500  $V_{\rm rms}.$

## Potential equalization

Integrate the device into the local potential equalization.

Optional specification, ID Px, Rx = PA

Connect the weather protection cover to the local potential equalization.

#### Bluetooth® module

Basic specification, Position 3, 4 = A7

If the device is equipped with the Bluetooth® module, no battery is required or allowed.

Basic specification, Position 3, 4 = A8

- If the device is equipped with the Bluetooth® module, a battery is required.
- Removal or replacement of the battery is only permitted in nonhazardous areas.
- Connection or disconnection of the Bluetooth® module is permitted in hazardous areas.

*Only use one of the following battery types:* 

Manufacturer	Battery type
Tadiran	SL-360/S
XENO ENERGY	ER14505 / XL-060F

Safety instructions: Zone 0 When using under non-atmospheric pressures and non-atmospheric temperatures: The sensor part of the device approved for Zone 0 does not cause any ignition hazards.

## Safety instructions: Zone separation Zone 0, Zone 1

Device type FTL51B, FTL63 with Basic specification, Position 9 = AThe zone separation wall of the device is made of stainless steel or high corrosion-resistant alloy of thickness  $\geq 1$  mm.

*Device type FTL63 with Basic specification, Position 9 = D, E* 

- The zone partition wall of the device is made of stainless steel or a highly corrosion-resistant alloy of thickness from 0.2 to 1 mm.
- The probe must not be subjected to abrasive or corrosive medium that may adversely affect the partition for the zone separation.

# Temperature tables


Optional specification, ID Jx, Kx = JLLower limit of the ambient temperature for explosion protection changes to -50 °C.

#### General notes

#### Ex ia IIC

Optional specification, ID Px, Rx = PBWhen using the weather protection cover: Reduce the values  $T_a$  of P1, P2, P3 by 16 K.

#### Ex ia IIIC

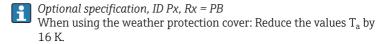

## **Description notes**

Unless otherwise indicated, the positions always refer to the basic specification.


#### Zone 0, Zone 1

1st column: Position 8 = A, B, ...

2nd column: Temperature classes T6 (85 °C) to T1 (450 °C)

Column P1 to P5: Position (temperature value) on the axes of the derating

- T<sub>a</sub>: Ambient temperature in °C
- $T_p$ : Process temperature in °C

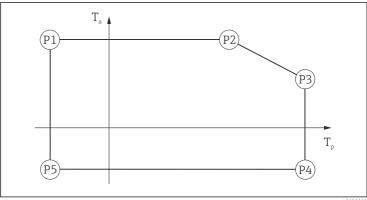


A0033052

Zone 20, Zone 21 or Zone 21

1st column: Position 8 = A, B, ...

2nd column: Process temperature range in °C 3rd column: Ambient temperature range in °C 4th column: Maximum surface temperature in °C

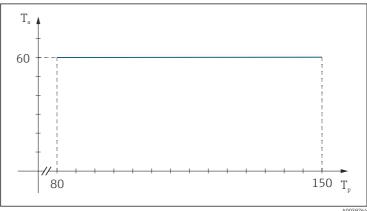


A0039764

 $T_a$ Ambient temperature in  ${}^{\circ}\!C$ 

Process temperature in  ${}^{\circ}\!C$ 

# Zone 0, Zone 1

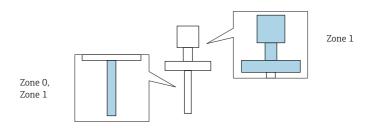

Position 3, 4 = A7

# Without Optional specification, ID Mx = MR, MS

Α,	. B		P1		P2		P3		P4		P5	
			$T_{p}$	T <sub>a</sub>	T <sub>p</sub>	Ta	T <sub>p</sub>	Ta	$T_{p}$	Ta	$T_{p}$	Ta
		Т6	-50	70	73	70	80	67	80	-40 -50 <sup>1)</sup>	-50	-40
		T5	-50	70	94	70	95	70	95	-50 -7	-50	-50 <sup>1)</sup>
		T4	-50	70	94	70	130	55	130		-50	
		T3T1	-50	70	94	70	150	47	150		-50	

1) Only in connection with Optional specification, ID Jx, Kx = JL

# With Optional specification, ID Mx = MR, MS

A, B		P1		P2		P3		P4		P5	
		T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	Ta	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	Ta
	T6	-50	70	80	70	80	70	80	-40 -50 <sup>1)</sup>	-50	-40
	T5	-50	70	95	70	95	70	95	-50 -7	-50	-50 <sup>1)</sup>
	T4	-50	70	130	70	130	70	130		-50	
	T3T1	-50	70	150	70	150	70	150		-50	

1) Only in connection with Optional specification, ID Jx, Kx = JL

## Position 3, 4 = A8

# Without Optional specification, ID Mx = MR, MS

А, В		P1		P2		P3		P4		P5	
		T <sub>p</sub>	T <sub>a</sub>	$T_{p}$	T <sub>a</sub>	T <sub>p</sub>	Ta	$T_p$	Ta	$T_{p}$	T <sub>a</sub>
	T6 1)	-50	70	80	70	80	70	80	-40 -50 <sup>2)</sup>	-50	-40 -50 <sup>2)</sup>
	T5 <sup>1)</sup>	-50	70	95	70	95	70	95	-50-7	-50	-5027
	T4	-50	70	118 70 <sup>1)</sup>	70	130 120 <sup>1)</sup>	62 50 <sup>1)</sup>	130		-50	
	T3T1	-50	70	118 70 <sup>1)</sup>	70	150 120 <sup>1)</sup>	54 50 <sup>1)</sup>	150		-50	

- 1) Only in connection with Optional specification, ID Nx, Ox = NG: Temperature classes only valid for T4...T1
- 2) Only in connection with Optional specification, ID Jx, Kx = JL

# With Optional specification, ID Mx = MR, MS

A, B		P1		P2		P3		P4		P5	
		T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	Ta	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>
	T6 1)	-50	70	80	70	80	70	80	-40 -50 <sup>2)</sup>	-50	-40
	T5 <sup>1)</sup>	-50	70	95	70	95	70	95	-50 27	-50	-50 <sup>2)</sup>
	T4	-50	70 65 <sup>1)</sup>	130	70 65 <sup>1)</sup>	130	70 65 <sup>1)</sup>	130		-50	
	T3T1	-50	70 63 <sup>1)</sup>	150	70 63 <sup>1)</sup>	150	70 63 <sup>1)</sup>	150		-50	

- 1) Only in connection with Optional specification, ID Nx, Ox = NG: Temperature classes only valid for T4...T1
- 2) Only in connection with Optional specification, ID Jx, Kx = JL

# Position 3, 4 = GA


# Without Optional specification, ID Mx = MR, MS

С		P1		P2		P3		P4		P5	
		T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	Ta	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	Ta
	T6	-50	69	80	69	80	69	80	-40	-50	-40
	T5T1	-50	70	80	70	80	70	80	-40	-50	-40

# With Optional specification, ID Mx = MR, MS

	С		P1		P2		P3		P4		P5	
			T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	Ta	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	Ta	$T_{p}$	Ta
Ī		T6	-50	70	80	70	80	70	80	-40	-50	-40
		T5T1	-50	70	80	70	80	70	80	-40	-50	-40

# Zone 20, Zone 21

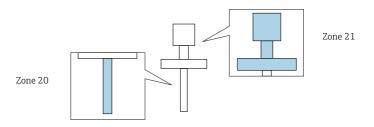


	А, В			
Γ		$-50 \le T_p \le +150$	$-40 \le T_a \le +60$ $-50 \le T_a \le +60^{1}$	Zone 20: T <sub>200</sub> 165 <sup>2)</sup>
			$-50 \le I_a \le +60^{-7}$	Zone 21: T <sub>L</sub> 155 <sup>3)</sup>

- Only in connection with Optional specification, ID Jx, Kx = JL With 200 mm dust deposit With dust accumulation  $T_{\rm L}$
- 1) 2) 3)

С			
	$-50 \le T_p \le +80$	$-40 \le T_a \le +60$	Zone 20: T <sub>200</sub> 95 <sup>1)</sup>
			Zone 21: T <sub>L</sub> 85 <sup>2)</sup>

- With 200 mm dust deposit With dust accumulation  $T_{L} \label{eq:total_continuous}$ 1) 2)

Zone 21

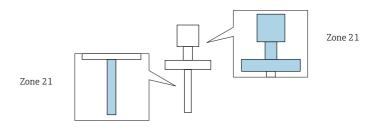

А, В			
	$-50 \le T_p \le +150$	$-40 \le T_a \le +60$ -50 \le T_a \le +60 1)	T <sub>L</sub> 155 <sup>2)</sup>

- Only in connection with Optional specification, ID Jx, Kx = JL With dust accumulation  $\rm T_{\rm L}$ 1) 2)

С			
	$-50 \le T_p \le +80$	$-40 \le T_a \le +60$	T <sub>L</sub> 85 <sup>1)</sup>

1) With dust accumulation  $T_{L}$ 

### Connection data

Optional specification, ID Nx, Ox = NF, NG

When using the Bluetooth® module: No changes to the connection values.

Associated intrinsically safe power supply unit with max. electrical specifications below the characteristic values of the electronic inserts

Basic specification, Position 3, 4	Power supply circuit
A7	$\begin{split} &U_{l} = 14.6 \ V \\ &I_{l} = 100 \ mA \\ &P_{l} = 633 \ mW \\ &L_{l} = 0 \\ &C_{l} = 3 \ nF \end{split}$
A8	$\begin{split} &U_{l} = 16 \text{ V} \\ &I_{l} = 52 \text{ mA} \\ &P_{l} = 170 \text{ mW} \\ &L_{l} = 0 \\ &C_{l} = 30 \text{ nF} \end{split}$

Only associated intrinsically safe power supply unit FML621 from Endress+Hauser

Basic specification, Position 3, 4	Power supply circuit
GA	$\begin{split} &U_{i} = 27.6 \text{ V} \\ &I_{i} = 93 \text{ mA} \\ &P_{i} = 640 \text{ mW} \\ &L_{i} = 3  \mu\text{H} \\ &C_{i} = 3  n\text{F} \end{split}$

## Cable entry parameters

#### Ex ia IIC

Not relevant.

### Ex ia IIIC

Cable gland: *Basic specification, Position 7 = B* 

mandatory for Position 6 = B, M

Thread	Clamping range	Material	Sealing insert	O-ring
M20x1,5	ø 8 to 10.5 mm	Ms, nickel-plated	Silicone	EPDM (ø 17x2)

Cable gland: Basic specification, Position 7 = C

preferably for Position 6 = C and possible for Position 6 = B, M

Thread	Clamping range	Material	Sealing insert	O-ring
M20x1,5	ø 7 to 12 mm	1.4404	NBR	EPDM (ø 17x2)



- The tightening torque refers to cable glands installed by the manufacturer:
  - Recommended torque to connect the cable gland into the enclosure: 3.75 Nm
  - Recommended torque to tighten the cable into the cable gland: 3.5 Nm
  - Maximum torque to tighten the cable into the cable gland: 10 Nm
  - This value may be different depending on the type of cable.
     However, the maximum value must not be exceeded.
- Only suitable for fixed installation. The operator must pay attention to a suitable strain relief of the cable.
- To maintain the ingress protection of the enclosure: Install the enclosure cover, cable glands and blind plugs correctly.
- The cable glands are suitable for a low risk of mechanical danger (4 Joule) and must be mounted in a protected position if larger impact energy levels are expected.





www.addresses.endress.com