

Safety Instructions

Proline Promass 200

KCs: Zone 1, Zone 0/1
Ex d version



Proline Promass 200

Table of contents

About this document	4
Associated documentation	4
Certificates and declarations	4
Manufacturer address	4
Extended order code	5
Safety instructions: General	7
Safety instructions: Installation	8
Temperature tables	8
Explosion hazards arising from gas and dust	18
Connection values: Signal circuits	19

About this document



The document number of these Safety Instructions (XA) must match the information on the nameplate.

Associated documentation

For an overview of the scope of the associated Technical Documentation, refer to the following:

- *Device Viewer* (www.endress.com/deviceviewer): Enter serial number from nameplate.
- *Endress+Hauser Operations app*: Enter serial number from nameplate or scan matrix code on nameplate.

To commission the device, please observe the Operating Instructions pertaining to the device:

Measuring instrument	Documentation code		
	HART	FOUNDATION Fieldbus	PROFIBUS PA
8A2B**-...	BA01821D	BA01827D	BA01828D
8E2C**-...	BA01638D	BA01637D	BA01639D
8F2B**-...	BA01112D	BA01315D	BA01113D

Additional documentation

Contents	Document type	Documentation code
Remote display FHX50	Special documentation	SD01007F
	Safety Instructions Ex ia	XA02277F
Explosion Protection	Brochure	CP00021Z/11

Certificates and declarations

KCs certificate of conformity

- 20-KA4BO-0689 (Ex db [ia] IIC T6...T1 Gb)
- 25-KA4BO-0775 (Ex db [ia] IIB T6...T1 Gb)
- 25-KA4BO-0777 (Ex db [ia] IIC T6...T1 Gb)
- 25-KA4BO-0778 (Ex db [ia] IIB T6...T1 Gb)

Affixing the certificate number certifies conformity with Protection device Safety Certification Notification No. 2021-22.

Manufacturer address

Endress+Hauser Flowtec AG
Kägenstrasse 7
4153 Reinach BL
Switzerland

Endress+Hauser Flowtec (China) Co. Ltd.
 Su-Hong-Zhong-Lu No. 465
 Suzhou Industrial Park
 215021 Suzhou
 Province Jiangsu
 China

Extended order code

The extended order code is indicated on the nameplate, which is affixed to the device in such a way that it is clearly visible. Additional information about the nameplate is provided in the associated Operating Instructions.

Structure of the extended order code

*****	-	***** ... *****	+	A*B*C*D*E*F*G*...
<i>(Device type)</i>		<i>(Basic specifications)</i>		<i>(Optional specifications)</i>

* = Placeholder
 At this position, an option (number or letter) selected from the specification is displayed instead of the placeholders.

Device type

The device and the device design is defined in the "Device type" section (Product root).

Basic specifications

The features that are absolutely essential for the device (mandatory features) are specified in the basic specifications. The number of positions depends on the number of features available. The selected option of a feature can consist of several positions.

Optional specifications

The optional specifications describe additional features for the device (optional features). The number of positions depends on the number of features available. The features have a 2-digit structure to aid identification (e.g. JA). The first digit (ID) stands for the feature group and consists of a number or a letter (e.g. J = Test, Certificate). The second digit constitutes the value that stands for the feature within the group (e.g. A = 3.1 material (wetted parts), inspection certificate).

More detailed information about the device is provided in the following tables. These tables describe the individual positions and IDs in the extended order code which are relevant to hazardous locations.

Device type

Position	Order code for	Selected option	Description
1	Instrument family	8	
2	Sensor	A, E, F ¹⁾	Sensor type
3	Transmitter	2	Transmitter type: 2-wire, compact version
4	Generation index	B, C	Platform generation
5, 6	Nominal diameter	Examples: 02, 04, 40, 50, 1H, 3E ²⁾ ³⁾	Nominal diameter of sensor

- 1) For replacement transmitter only: X
 2) For the exact specification of the nominal diameter, see nameplate
 3) For replacement transmitter only: XX

Basic specifications

Position	Order code for	Selected option	Type of protection
1, 2	Approval	KK	Ex db [ia] IIC T6...T1 Gb
			Ex db [ia] IIB T6...T1 Gb ¹⁾

- 1) Promass F, DN 80 only

Position	Order code for	Selected option	Description
3	Output; Input	A	4-20mA HART
		B	4-20mA HART, Pulse/frequency/switch output
		C	4-20mA HART + 4-20mA analog
		E	FOUNDATION Fieldbus, Pulse/frequency/switch output
		G	PROFIBUS PA, Pulse/frequency/switch output
4	Display; Operation	A	W/o; via communication
		C	SD02 4-line; push buttons + data backup function
		E	SD03 4-line, illum.; touch control + data backup function
		L	Prepared for display FHX50 + M12 connection ¹⁾
		M	Prepared for display FHX50 + custom connection ¹⁾
17, 18 ²⁾	Device Model	A1	1

- 1) FHX50 is separately approved.
 2) Order code for "Device model" only for measuring devices with product code 8A2B, 8E2C

Optional specifications

No options specific to hazardous locations are available.

Safety instructions: General

- Staff must meet the following conditions for mounting, electrical installation, commissioning and maintenance of the device:
 - Be suitably qualified for their role and the tasks they perform
 - Be trained in explosion protection
 - Be familiar with national regulations or guidelines (e.g. KS C IEC 60079-14)
- Install the device according to the manufacturer's instructions and national regulations.
- Do not operate the device outside the specified electrical, thermal and mechanical parameters.
- Use the device only in media where the wetted materials are known to be suitable.
- Refer to the temperature tables for the relationship between the permitted ambient temperature for the sensor and/or transmitter, depending on the range of application, and the temperature classes.
- Alterations to the device can affect the explosion protection and must be carried out by staff authorized to perform such work by Endress+Hauser.
- An additional assessment must be conducted to confirm that the device is suitable for installation in hybrid mixtures (explosive gas and dust occurring simultaneously).
- In devices with damaged Ex d threads:
 - Use in hazardous areas is not permitted.
 - Repair of Ex d threads is not permitted.
- Observe all the technical data of the device (see nameplate).
- Avoid electrostatic charges which could result in electrostatic discharges while installing, operating, cleaning or maintaining:
 - For external non-metallic surfaces, e.g. housing, attached additional plates, RFID tag.
 - For attached external metallic parts that are not integrated into the local potential equalization system, e.g. nameplate tag, RFID tag.
 - Do not use in areas where the devices/electronic housing are exposed to highly charge-generating processes, pneumatically conveyed dusts and/or charge spraying in an electrostatic coating process.
 - Do not rub surfaces dry. Clean only with moist cloth.
 - Information on electrostatic hazards and how to minimize the generation of static electricity can be found in the technical specification IEC/TS 60079-32-1.

Safety instructions: Installation

- Continuous service temperature of the connecting cable: -40 to +80 °C; in accordance with the range of service temperature taking into account additional influences of the process conditions ($T_{a,\min}$ and $T_{a,\max} + 20$ K).
- Only use certified cable glands suitable for the application. Observe selection criteria as per KS C IEC 60079-14. Accordingly, the connection terminal does not include any ignition sources.
- When the measuring device is connected, attention must be paid to the type of protection at the transmitter.
- In potentially explosive atmospheres:
 - Do not disconnect the electrical connection of the power supply circuit when energized.
 - Do not open the connection compartment cover when the device is energized.

Use of blanking elements and sealings

- When connecting through a conduit entry approved for this purpose, mount the associated sealing unit directly at the enclosure.
- Seal unused entries with approved blanking elements that correspond to the type of protection. The plastic transport sealing plug does not meet this requirement and must therefore be replaced during installation.
- Only use certified blanking elements. The metal sealing plugs supplied meet this requirement.

Intrinsic safety

The device can be connected to the remote display FHX50 with explosion protection; refer to the Special Documentation and Ex documentation.

Potential equalization

- The device must be connected to the potential equalization system using designated protective ground terminals.
- It is also possible to integrate the device into the potential equalization system through a pipe system, provided that the pipe system meets the grounding requirements of applicable national regulations.

Temperature tables

Ambient temperature

Minimum ambient temperature:

Basic specification, position 3 (Output; input) = A, B, C, E, G:

$T_{a,\min} = -40$ °C

Maximum ambient temperature:

$T_{a, \max} = +60 \text{ °C}$ depending on the medium temperature and temperature class

Medium temperature

Minimum medium temperature

- Promass 8F2B**... , Promass 8A2B**...
 $T_{m, \min} = -50 \text{ °C}$

- Promass 8E2B**... , Promass 8E2C**... :
 $T_{m, \min} = -40 \text{ °C}$

Maximum medium temperature

$T_{m, \max}$ for T6...T1 depending on the maximum ambient temperature $T_{a, \max}$.

Compact version

Basic specification, position 3 (output; input) = A

Promass A

DN	$T_{m, \max \text{ range}}$ [°C]	$T_{a, \max}$ [°C]	$T_{m, \max}$ [°C]					
			T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
1 to 4	205	40	50	95	130	170	205	205
		60	-	95	130	170	205	205

Promass E (Promass 8E2B**...)

DN	$T_{m, \max \text{ range}}$ [°C]	$T_{a, \max}$ [°C]	$T_{m, \max}$ [°C]					
			T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
8 to 50	140	50	50	95	130	140	140	140
		60	-	95	130	140	140	140

Promass E (Promass 8E2C**...)

DN	$T_{m, \max \text{ range}}^{1)}$ [°C]	$T_{a, \max}$ [°C]	$T_{m, \max}$ [°C]					
			T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
8 to 50	150	40	50	95	130	150	150	150
		60	-	95	130	150	150	150

DN	T _{m, max range} ¹⁾ [°C]	T _{a, max} [°C]	T _{m, max} [°C]					
			T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
	205	40	50	95	130	170	205	205
		60	–	95	130	170	205	205

1) Maximum temperature range, see nameplate

Promass F

DN	T _{m, max range} ¹⁾ [°C]	T _{a, max} [°C]	T _{m, max} [°C]					
			T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
8 to 50	150	40	50	95	130	150	150	150
		60	–	95	130	150	150	150
	205	40	50	95	130	170	205	205
		60	–	95	130	170	205	205
80	150	40	50	85	110	150	150	150
		60	–	85	110	150	150	150
	205	40	50	85	110	170	205	205
		60	–	85	110	170	205	205

1) Maximum temperature range, see nameplate

Basic specification, position 3 (output; input) = B

Promass A

DN	$T_{m, \max \text{ range}}$ [°C]	$T_{a, \max}$ [°C]	$T_{m, \max}$ [°C]					
			T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
1...4	205	35 ^{1) 2)}	50	95	130	170	205	205
		50 ^{1) 3)}	-	95	130	170	205	205
		55	-	-	130	170	205	205
		60	-	-	130	170	205	200

- 1) For installation with overvoltage protection in connection with temperature class T5, T6: $T_a = T_a - 2 \text{ K}$
- 2) $T_{a, \max} = 40 \text{ °C}$ for Impulse/Frequency/Switch output input $P_i \leq 0,85 \text{ W}$
- 3) $T_{a, \max} = 55 \text{ °C}$ for Impulse/Frequency/Switch output input $P_i \leq 0,85 \text{ W}$

Promass E (Promass 8E2B**-...)

DN	$T_{m, \max \text{ range}}$ [°C]	$T_{a, \max}$ [°C]	$T_{m, \max}$ [°C]					
			T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
8...50	150	35 ^{1) 2)}	50	95	130	140	140	140
		50 ^{1) 3)}	-	95	130	140	140	140
		60	-	-	130	140	140	140

- 1) For installation with overvoltage protection in connection with temperature class T5, T6: $T_a = T_a - 2 \text{ K}$
- 2) $T_{a, \max} = 40 \text{ °C}$ for Impulse/Frequency/Switch output input $P_i \leq 0,85 \text{ W}$
- 3) $T_{a, \max} = 55 \text{ °C}$ for Impulse/Frequency/Switch output input $P_i \leq 0,85 \text{ W}$

Promass E (Promass 8E2C**-...)

DN	$T_{m, \max \text{ range}}$ ¹⁾ [°C]	$T_{a, \max}$ [°C]	$T_{m, \max}$ [°C]					
			T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
8...50	150	35 ^{2) 3)}	50	95	130	150	150	150
		50 ^{2) 4)}	-	95	130	150	150	150
		55	-	-	130	150	150	150
		60	-	-	130	150	150	150
	205	35 ^{2) 3)}	50	95	130	170	205	205
		50 ^{2) 4)}	-	95	130	170	205	205

DN	T _{m, max range} ¹⁾ [°C]	T _{a, max} [°C]	T _{m, max} [°C]					
			T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
		55	-	-	130	170	205	205
		60	-	-	130	170	205	200

- 1) Maximum temperature range, see nameplate
- 2) For installation with overvoltage protection in connection with temperature class T5, T6: T_a = T_a - 2 K
- 3) T_{a, max} = 40 °C for Impulse/Frequency/Switch output input P_i ≤ 0,85 W
- 4) T_{a, max} = 55 °C for Impulse/Frequency/Switch output input P_i ≤ 0,85 W

Promass F

DN	T _{m, max range} ¹⁾ [°C]	T _{a, max} [°C]	T _{m, max} [°C]					
			T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
8...50	150	35 ^{2) 3)}	50	95	130	150	150	150
		50 ^{2) 4)}	-	95	130	150	150	150
		55	-	-	130	150	150	150
		60	-	-	130	150	150	150
	205	35 ^{2) 3)}	50	95	130	170	205	205
		50 ^{2) 4)}	-	95	130	170	205	205
		55	-	-	130	170	205	205
		60	-	-	130	170	205	200
80	150	35 ^{2) 3)}	50	85	110	150	150	150
		50 ^{2) 4)}	-	85	110	150	150	150
		55	-	-	110	150	150	150
		60	-	-	110	150	150	150
	205	35 ^{2) 3)}	50	85	110	170	205	205
		50 ^{2) 4)}	-	85	110	170	205	205
		55	-	-	110	170	205	205
		60	-	-	110	170	205	200

- 1) Maximum temperature range, see nameplate
- 2) For installation with overvoltage protection in connection with temperature class T5, T6: T_a = T_a - 2 K
- 3) T_{a, max} = 40 °C for Impulse/Frequency/Switch output input P_i ≤ 0,85 W
- 4) T_{a, max} = 55 °C for Impulse/Frequency/Switch output input P_i ≤ 0,85 W

*Basic specification, position 3 (output; input) = C**Promass A*

DN	T _{m, max range} [°C]	T _{a, max} [°C]	T _{m, max} [°C]					
			T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
1 to 4	205	40	50	95	130	170	205	205
		55	-	95	130	170	205	205
		60	-	-	130	170	205	200

*Promass E (Promass 8E2B**-...)*

DN	T _{m, max range} [°C]	T _{a, max} [°C]	T _{m, max} [°C]					
			T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
8 to 50	150	40	50	95	130	140	140	140
		55	-	95	130	140	140	140
		60	-	-	130	140	140	140

*Promass E (Promass 8E2C**-...)*

DN	T _{m, max range} ¹⁾ [°C]	T _{a, max} [°C]	T _{m, max} [°C]					
			T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
8 to 50	150	40	50	95	130	150	150	150
		55	-	95	130	150	150	150
		60	-	-	130	150	150	150
	205	40	50	95	130	170	205	205
		55	-	95	130	170	205	205
		60	-	-	130	170	205	200

1) Maximum temperature range, see nameplate

Promass F

DN	T _{m, max range} ¹⁾ [°C]	T _{a, max} [°C]	T _{m, max} [°C]					
			T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
8 to 50	150	40	50	95	130	150	150	150
		55	-	95	130	150	150	150

DN	T _{m, max range} ¹⁾ [°C]	T _{a, max} [°C]	T _{m, max} [°C]					
			T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
	205	60	-	-	130	150	150	150
		40	50	95	130	170	205	205
		55	-	95	130	170	205	205
		60	-	-	130	170	205	200
80	150	40	50	85	110	150	150	150
		55	-	85	110	150	150	150
		60	-	-	110	150	150	150
	205	40	50	85	110	170	205	205
		55	-	-	110	170	205	205
		60	-	-	110	170	205	200

1) Maximum temperature range, see nameplate

Basic specification, position 3 (output; input) = E

Promass A

DN	T _{m, max range} [°C]	T _{a, max} [°C]	T _{m, max} [°C]					
			T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
1 to 4	205	40 ¹⁾	50	95	130	170	205	205
		55 ²⁾	-	95	130	170	205	205
		60	-	-	130	170	205	205

- 1) T_a = 50 °C for use without Impulse/Frequency/Switch output
 2) T_a = 60 °C for use without Impulse/Frequency/Switch output

Promass E (Promass 8E2B**-...)

DN	T _{m, max range} [°C]	T _{a, max} [°C]	T _{m, max} [°C]					
			T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
8 to 50	150	40 ¹⁾	50	95	130	140	140	140
		55 ²⁾	-	95	130	140	140	140
		60	-	-	130	140	140	140

- 1) T_a = 50 °C for use without Impulse/Frequency/Switch output
 2) T_a = 60 °C for use without Impulse/Frequency/Switch output

Promass E (Promass 8E2C**-...)

DN	T _{m, max range} ¹⁾ [°C]	T _{a, max} [°C]	T _{m, max} [°C]					
			T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
8 to 50	150	40 ²⁾	50	95	130	150	150	150
		55 ³⁾	-	95	130	150	150	150
		60	-	-	130	150	150	150
	205	40 ²⁾	50	95	130	170	205	205
		55 ³⁾	-	95	130	170	205	205
		60	-	-	130	170	205	205

- 1) Maximum temperature range, see nameplate
 2) T_a = 50 °C for use without Impulse/Frequency/Switch output
 3) T_a = 60 °C for use without Impulse/Frequency/Switch output

Promass F

DN	T _{m, max range} ¹⁾ [°C]	T _{a, max} [°C]	T _{m, max} [°C]					
			T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
8 to 50	150	40 ²⁾	50	95	130	150	150	150
		55 ³⁾	–	95	130	150	150	150
		60	–	–	130	150	150	150
	205	40 ²⁾	50	95	130	170	205	205
		55 ³⁾	–	95	130	170	205	205
		60	–	–	130	170	205	205
80	150	40 ²⁾	50	85	110	150	150	150
		55 ³⁾	–	85	110	150	150	150
		60	–	–	110	150	150	150
	205	40 ²⁾	50	85	110	170	205	205
		55 ³⁾	–	85	110	170	205	205
		60	–	–	110	170	205	205

- 1) Maximum temperature range, see nameplate
 2) T_a = 50 °C for use without Impulse/Frequency/Switch output
 3) T_a = 60 °C for use without Impulse/Frequency/Switch output

Basic specification, position 3 (output; input) = G

Promass A

DN	T _{m, max range} [°C]	T _{a, max} [°C]	T _{m, max} [°C]					
			T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
1 to 4	205	40 ¹⁾	50	95	130	170	205	205
		55 ²⁾	-	95	130	170	205	205
		60	-	-	130	170	205	205

- 1) T_a = 50 °C for use without Impulse/Frequency/Switch output
 2) T_a = 60 °C for use without Impulse/Frequency/Switch output

Promass E (Promass 8E2B**-...)

DN	T _{m, max range} [°C]	T _{a, max} [°C]	T _{m, max} [°C]					
			T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
8 to 50	150	40 ¹⁾	50	95	130	140	140	140
		55 ²⁾	-	95	130	140	140	140
		60	-	-	130	140	140	140

- 1) T_a = 50 °C for use without Impulse/Frequency/Switch output
 2) T_a = 60 °C for use without Impulse/Frequency/Switch output

Promass E (Promass 8E2C**-...)

DN	T _{m, max range} ¹⁾ [°C]	T _{a, max} [°C]	T _{m, max} [°C]					
			T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
8 to 50	150	40 ²⁾	50	95	130	150	150	150
		55 ³⁾	-	95	130	150	150	150
		60	-	-	130	150	150	150
	205	40 ²⁾	50	95	130	170	205	205
		55 ³⁾	-	95	130	170	205	205
		60	-	-	130	170	205	205

- 1) Maximum temperature range, see nameplate
 2) T_a = 50 °C for use without Impulse/Frequency/Switch output
 3) T_a = 60 °C for use without Impulse/Frequency/Switch output

Promass F

DN	$T_{m, \max \text{ range}}^{1)}$ [°C]	$T_{a, \max}$ [°C]	$T_{m, \max}$ [°C]					
			T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
8 to 50	150	40 ²⁾	50	95	130	150	150	150
		55 ³⁾	–	95	130	150	150	150
		60	–	–	130	150	150	150
	205	40 ²⁾	50	95	130	170	205	205
		55 ³⁾	–	95	130	170	205	205
		60	–	–	130	170	205	205
80	150	40 ²⁾	50	85	110	150	150	150
		55 ³⁾	–	85	110	150	150	150
		60	–	–	110	150	150	150
	205	40 ²⁾	50	85	110	170	205	205
		55 ³⁾	–	85	110	170	205	205
		60	–	–	110	170	205	205

1) Maximum temperature range, see nameplate

2) $T_a = 50$ °C for use without Impulse/Frequency/Switch output

3) $T_a = 60$ °C for use without Impulse/Frequency/Switch output

Explosion hazards arising from gas and dust

Determining the temperature class and surface temperature with the temperature table

- In the case of gas: Determine the temperature class as a function of the maximum ambient temperature $T_{a, \max}$ and the maximum medium temperature $T_{m, \max}$.
- In the case of dust: Determine the maximum surface temperature as a function of the maximum ambient temperature $T_{a, \max}$ and the maximum medium temperature $T_{m, \max}$.

Example

- Measured maximum ambient temperature: $T_{a, \max} = 47$ °C
- Measured maximum medium temperature: $T_{m, \max} = 108$ °C

	Ta [°C]	T6 [85° C]	T5 [100° C]	T4 [135° C]	T3 [200° C]	T2 [300° C]	T1 [450° C]
	35	50	85	120	140	140	140
	50	-	85	120	140	140	140
	60	-	-	120	140	140	140
	35	50	85	120	140	140	140
	45	-	85	120	140	140	140
	50	-	-	120	140	140	140

1. 2. 3. 4.

A0031223


1 Procedure for determining the temperature class and surface temperature

1. Select device (optional).
2. In the column for the maximum ambient temperature $T_{a, \max}$ select the temperature that is immediately greater than or equal to the maximum ambient temperature $T_{a, \max}$ that is present.
 - ↳ $T_{a, \max} = 50\text{ °C}$.
The row showing the maximum medium temperature is determined.
3. Select the maximum medium temperature $T_{m, \max}$ of this row, which is immediately greater than or equal to the maximum medium temperature $T_{m, \max}$ that is present.
 - ↳ The column with the temperature class for gas is determined:
 $108\text{ °C} \leq 120\text{ °C} \rightarrow T_4$.
4. The maximum temperature of the temperature class determined corresponds to the maximum surface temperature for dust: $T_4 = 135\text{ °C}$.

Connection values: Signal circuits

The following tables contain specifications which are dependent on the transmitter type and its input and output assignment. Compare the following specifications with those on the nameplate of the transmitter.

Connecting the transmitter

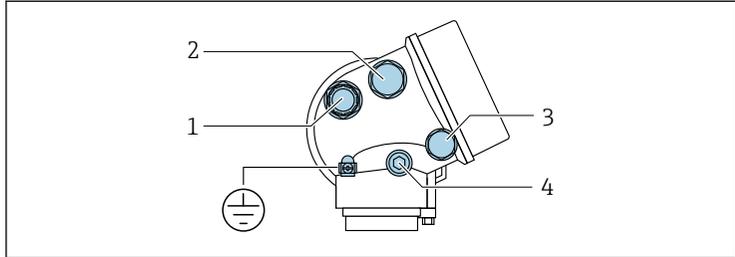

A0023831

Position		Basic specification, Position 1, 2 Approval	Type of protection used for cable entry	Description
1	Cable entry for output 1	KK	Ex db	<p>Plastic sealing plugs act as safeguards during transportation and must be replaced by suitable, individually approved installation material.</p> <p>The metal extensions and dummy plugs supplied are tested and certified as part of the housing for type of protection Ex d IIC. The various threaded versions are labeled as follows for identification purposes:</p> <ul style="list-style-type: none"> ▪ Md: M20 x 1.5 ▪ NPTd: NPT 1/2" ▪ Gd: G 1/2"
2	Cable entry for output 2	KK	Ex db	<p>Plastic sealing plugs act as safeguards during transportation and must be replaced by suitable, individually approved installation material.</p> <p>The metal extensions and dummy plugs supplied are tested and certified as part of the housing for type of protection Ex d IIC. The various threaded versions are labeled as follows for identification purposes:</p> <ul style="list-style-type: none"> ▪ Md: M20 x 1.5 ▪ NPTd: NPT 1/2" ▪ Gd: G 1/2"
3	Optional order code ¹⁾ : Cable entry of the remote display and operating module FHx50	KK	Ex ia	–

Position		Basic specification, Position 1, 2 Approval	Type of protection used for cable entry	Description
Position		Description		
4	Pressure compensation plug			NOTICE Housing degree of protection voided due to insufficient sealing of the housing. ▶ Do not open - not a cable entry.
⊕	Potential equalization			NOTICE Terminal for connection to potential equalization. ▶ Pay attention to the grounding concept of the facility.

1) Basic specification, position 4 (display; operation) = L, M

Terminal assignment

Transmitter



The order code is part of the extended order code. Detailed information on the features of the device and on the structure of the extended order code → 5.

Connection versions

Order code for "Output"	Terminal numbers			
	Output 1		Output 2	
	1 (+)	2 (-)	3 (+)	4 (-)
Option A	4-20mA HART (passive)		-	
Option B ¹⁾	4-20mA HART (passive)		Pulse/frequency/switch output (passive)	
Option C ¹⁾	4-20mA HART (passive)		4-20mA analog (passive)	
Option E ^{1) 2)}	FOUNDATION Fieldbus		Pulse/frequency/switch output (passive)	
Option G ^{1) 3)}	PROFIBUS PA		Pulse/frequency/switch output (passive)	

- 1) Output 1 must always be used; output 2 is optional.
- 2) FOUNDATION Fieldbus with integrated reverse polarity protection.
- 3) PROFIBUS PA with integrated reverse polarity protection.

Safety-related values



The order code is part of the extended order code. Detailed information on the features of the device and on the structure of the extended order code → 5.

Ex d type of protection

Order code for "Output"	Output type	Safety-related values
Option A	4-20mA HART	$U_{nom} = DC\ 35\ V$ $U_{max} = 250\ V$
Option B	4-20mA HART	$U_{nom} = DC\ 35\ V$ $U_{max} = 250\ V$
	Pulse/frequency/switch output	$U_{nom} = DC\ 35\ V$ $U_{max} = 250\ V$ $P_{max} = 1\ W$ ¹⁾
Option C	4-20mA HART	$U_{nom} = DC\ 30\ V$ $U_{max} = 250\ V$
	4-20mA analog	

Order code for "Output"	Output type	Safety-related values
Option E	FOUNDATION Fieldbus	U _{nom} = DC 32 V U _{max} = 250 V P _{max} = 0.88 W
	Pulse/frequency/switch output	U _{nom} = DC 35 V U _{max} = 250 V P _{max} = 1 W ¹⁾
Option G	PROFIBUS PA	U _{nom} = DC 32 V U _{max} = 250 V P _{max} = 0.88 W
	Pulse/frequency/switch output	U _{nom} = DC 35 V U _{max} = 250 V P _{max} = 1 W ¹⁾

1) Internal circuit limited by $R_i = 760.5 \Omega$

Remote display FHX50

Basic specification, position 1, 2 Approval	Cable specification	Basic specification, position 4 Display; operation Option L, M
Option KK	Max. cable length: 60 m (196.85 ft)	U _o = 7.3 V
		I _o = 327 mA
		P _o = 362 mW
		L _o = 149 μH
		C _o = 388 nF
		C _c ≤ 125 nF
		L _c ≤ 149 μH



71705936

www.addresses.endress.com
