

# Safety Instructions

## **Memosens CYK10**

Memosens data cable

CSA IS Cl. I Div. I Gr. A, B, C and D





# Memosens CYK10

Memosens data cable

## Table of contents

Associated documentation .....	4
Supplementary documentation .....	4
Certificates and Declarations .....	4
Identification .....	4
Safety Instructions .....	5
Temperature tables .....	6
Connection .....	6
Installation conditions .....	8

**Associated documentation**

This document is an integral part of Operating Instructions BA00118C.

**Supplementary documentation**



- Competence Brochure CP00021Z
  - Explosion Protection: Guidelines and General Principles
  - [www.endress.com](http://www.endress.com)

**Certificates and Declarations**

The certificates and declarations of conformity are available in the Downloads area of the Endress+Hauser website:

[www.endress.com/download](http://www.endress.com/download)

**CSA Certificate**

CSA 20CA80021719

**Identification**

The nameplate provides you with the following information on your device:

- Manufacturer identification
- Order code
- Extended order code
- Serial number
- Safety information and warnings
- Ex marking on hazardous area versions

► Compare the information on the nameplate with the order.

**Type code**

Type	Version		
CYK10	G, S	**	*
	CL I, Zone 0 AEx ia IIC T6/T4 Ga IS CL I, DIV 1, GP A, B, C, D T6/T4	No Ex relevance	

**Certificates and approvals**

*Ex approvals*

The product meets the requirements of:

- CLASS - C2258 04 - PROCESS CONTROL EQUIPMENT - Intrinsically Safe Entity - For Hazardous Locations
- CLASS - C2258 84 - PROCESS CONTROL EQUIPMENT - Intrinsically Safe Entity - For Hazardous Locations - Certified to US Standards

This is verified by compliance with the following standards:

- CAN/CSA-C22.2 No. 61010-1-12 Safety Requirements for Electrical Equipment for Measurement, Control, and Laboratory Use - Part 1: General Requirements
- CAN/CSA-C22.2 No. 60079-0 Explosive atmospheres – Part 0: Equipment – General requirements
- CAN/CSA-C22.2 No. 60079-11 Explosive atmospheres – Part 11: Equipment protection by intrinsic safety “i”
- UL 61010-1 Safety Requirements for Electrical Equipment for Measurement, Control, and Laboratory Use - Part 1: General Requirements
- UL 60079-0 Explosive atmospheres – Part 0: Equipment – General requirements
- UL 60079-11 Explosive Atmospheres – Part 11: Equipment Protection by Intrinsic Safety “i”

#### **CYK10:**

Ex ia IIC T6/T4 Ga

Class I, Zone 0 AEx ia IIC T6/T4 Ga

IS Class I, Division 1, Groups A, B, C and D T6/T4

## **Safety Instructions**

The Memosens inductive sensor cable connection system, consisting of:

- Approved sensors
- Measuring cable CYK10

is approved for measuring applications in explosive atmospheres.

The sensor must be connected and operated in accordance with its operating instructions and the operating instructions of the connected transmitter. All operational data of the sensor must be observed by the operator.

- Install the device according to the National Electrical Code (NFPA70) or the Canadian Electrical Code, Part 1 (C22.1), where applicable.
- It is not permitted to operate the cable under electrostatically critical process conditions. Significant vapor and dust clouds, which have a direct impact on the connection system, must be avoided.
- The terminal head of the Memosens data cable must be protected against electrostatic charging if it is installed in the areas EPL Ga (Zone 0).
- Ex versions of Memosens cables are marked with an orange-red ring.
- The maximum permitted cable length is 100 m (328.1 ft).
- The regulations for electrical installations in potentially explosive atmospheres (e.g. EN/IEC 60079-14) must be observed when using devices and sensors.

- In order to maintain and guarantee the explosion protection of the device, the user may not modify the configuration in any way. Every change can compromise the safety of the device.
- Overvoltage category specification: I (Supply through limited energy circuit)
- Compliance with the regulations for electrical installations in hazardous areas (e.g. EN/IEC 60079-14) is mandatory when using devices and sensors.



Pay attention to the ex-related safety instructions of the transmitter and sensors when cabling.

- The device must be installed as specified in Control Drawing.
- The associated Control Drawing of the transmitter (e.g. XA01687C) must be observed.

## Temperature tables

Cable Type	Ambient temperature range $T_a$	
	T4	T6
CYK10	$-15\text{ °C (5 °F)} \leq T_a \leq 120\text{ °C (248 °F)}$	$-15\text{ °C (5 °F)} \leq T_a \leq 70\text{ °C (158 °F)}$

If the ambient temperatures specified above are not exceeded, there are no invalid temperatures at the cable according to the temperature class.

## Connection

### Ex specification

The approved CYK10 cable is used to connect to the CSA approved intrinsically safe sensor output circuits of the Liquiline CM42 transmitter (e.g. with sensor module FSDG1), Liquiline CM44 (e.g. with communication module 2DS Ex-i) or the digital sensor interface (Memosens) of the CM42B. The cable can alternatively be used with connectable devices certified with Ex approval. These must have an intrinsically safe Memosens sensor output specified with the following maximum values. In particular, the certified intrinsically safe sensor output may not exceed the effective inner inductance and capacitance of the values indicated below:

1. Entity parameter set	2. Entity parameter set
$U_0 = 5.1\text{ V}$	$U_0 = 5.04\text{ V}$
$I_0 = 130\text{ mA}$	$I_0 = 80\text{ mA}$
$P_0 = 166\text{ mW}$ (linear output curve)	$P_0 = 112\text{ mW}$ (trapezoid output curve)
$C_1 = 15\text{ }\mu\text{F}$	$C_1 = 14.1\text{ }\mu\text{F}$
$L_1 = 95\text{ }\mu\text{H}$	$L_1 = 237.2\text{ }\mu\text{H}$

The connection of energy-limited Memosens sensors (with a defined  $P_i$ ) to the energy-limited Memosens data cable by means of inductive coupling is permitted, taking into consideration the following value:

<b>Maximum output power <math>P_0</math></b>	178 mW
--	--------

The electrical connection must be performed in accordance with the Operating Instructions.




The cable can be connected both Class I Division 1 and Class I Division 2:

Division 1 equipment can be used in Division 2 as long as they are installed in the same manner as they were intended for Division 1 (NEC 500.8 (B)(2)). This is the case for Memosens sensor with inductive coupling between sensor and cable. There are no different installation methods between sensor and cable.



For the cable-transmitter connection the XA of the transmitter must be considered.

**Installation conditions**

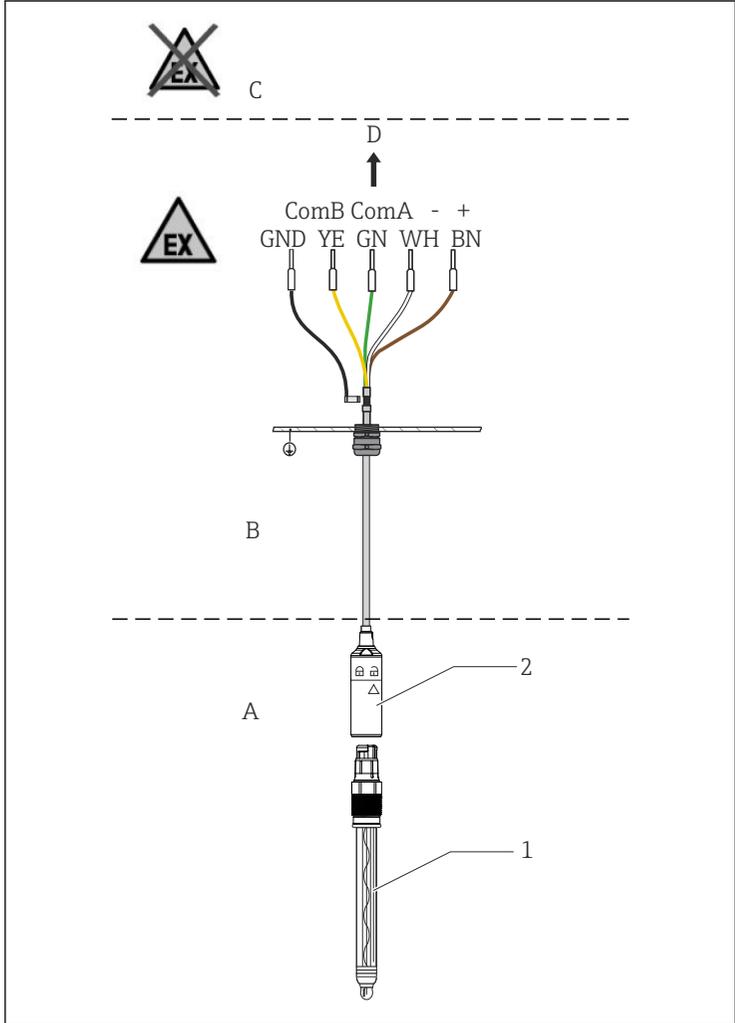

A0031034

1 Memosens data cable in Zone 0

A Hazardous area Zone 0/Class I Div 1


B Hazardous area Zone 1/Class I Div 1

C Non-hazardous area

D Ex-certified transmitter CM42, CM42B or transmitter with an intrinsically safe output power

1 Certified Memosens sensor

2 Memosens data cable,  $P_0 = 178 \text{ mW}$

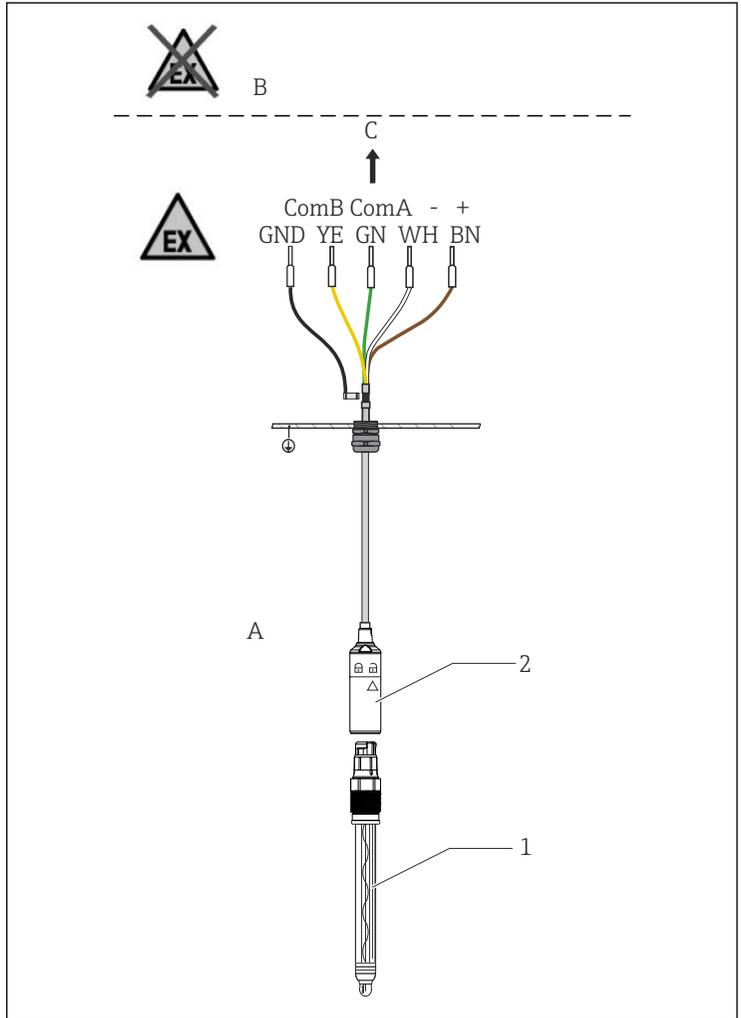

A0044885

**2** Memosens data cable in Zone 1

A Hazardous area Zone 1/Class I Div 1&2

B Non-hazardous area

C Ex-certified transmitter CM42, CM42B or transmitter with an intrinsically safe output power

1 Certified Memosens sensor

2 Memosens data cable,  $P_0 = 178 \text{ mW}$







71712734

[www.addresses.endress.com](http://www.addresses.endress.com)

---