

# Safety Instructions

## Proline Prowirl 200

NEPSI: Zone 2, Zone 0/2



---

# Proline Prowirl 200

## Table of contents

About this document ..... 4

Associated documentation ..... 4

Certificates and declarations ..... 4

Manufacturer address ..... 5

Extended order code ..... 6

Safety instructions: General ..... 9


Safety instructions: Installation ..... 10

Safety instructions: Zone 0 ..... 12

Temperature tables ..... 12

Connection data: Signal circuits ..... 21

About this document

 The document number of these Safety Instructions (XA) must match the information on the nameplate.

Associated documentation

For an overview of the scope of the associated Technical Documentation, refer to the following:

- *Device Viewer* ([www.endress.com/deviceviewer](http://www.endress.com/deviceviewer)): Enter serial number from nameplate.
- *Endress+Hauser Operations app*: Enter serial number from nameplate or scan matrix code on nameplate.

To commission the device, please observe the Operating Instructions pertaining to the device:

| Measuring instrument | Documentation code |                     |             |                            |                              |
|----------------------|--------------------|---------------------|-------------|----------------------------|------------------------------|
|                      | HART               | FOUNDATION Fieldbus | PROFIBUS PA | PROFINET over Ethernet-APL | Modbus TCP over Ethernet-APL |
| Prowirl D 200        | BA01685D           | BA01693D            | BA01689D    | BA02133D                   | BA02397D                     |
| Prowirl F 200        | BA01686D           | BA01694D            | BA01690D    | BA02132D                   | BA02398D                     |
| Prowirl O 200        | BA01687D           | BA01695D            | BA01691D    | BA02134D                   | BA02399D                     |
| Prowirl R 200        | BA01688D           | BA01696D            | BA01692D    | BA02135D                   | BA02400D                     |

Additional documentation

| Contents                     | Document type  | Documentation code  |
|------------------------------|--|---|
| Remote display FHX50         | Special documentation  | SD01007F  |
|                              | Safety Instructions <ul style="list-style-type: none"><li>■ Zone 0, Zone 21; Ex ia</li><li>■ Zone 2; Ex ic</li></ul> | <ul style="list-style-type: none"><li>■ XA01076F</li><li>■ XA01078F</li></ul> |
| Overvoltage Protection (OVP) | Special documentation  | SD01090F  |
| Explosion Protection         | Brochure   | CP00021Z/11   |

Please note the documentation associated with the device.

Certificates and declarations

NEPSI Declaration of Conformity

Certificate number:  
GYJ23.1286X

Affixing the certificate number certifies conformity with the following standards (depending on the device version):

- GB/T 3836.1-2021
- GB/T 3836.3-2021
- GB/T 3836.4-2021
- GB 3836.20-2010


**Manufacturer  
address**

Endress+Hauser Flowtec AG  
Kägenstrasse 7  
4153 Reinach BL  
Switzerland

Extended  
order code

The extended order code is indicated on the nameplate, which is affixed to the device in such a way that it is clearly visible. Additional information about the nameplate is provided in the associated Operating Instructions.

Structure of the extended order code

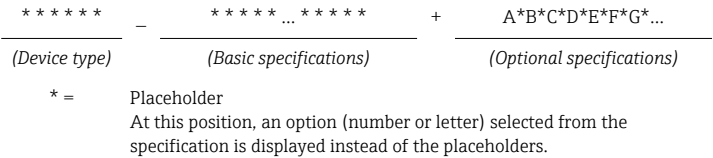

Device type

The device and the device design is defined in the "Device type" section (Product root).

Basic specifications

The features that are absolutely essential for the device (mandatory features) are specified in the basic specifications. The number of positions depends on the number of features available. The selected option of a feature can consist of several positions.

Optional specifications

The optional specifications describe additional features for the device (optional features). The number of positions depends on the number of features available. The features have a 2-digit structure to aid identification (e.g. JA). The first digit (ID) stands for the feature group and consists of a number or a letter (e.g. J = Test, Certificate). The second digit constitutes the value that stands for the feature within the group (e.g. A = 3.1 material (wetted parts), inspection certificate).

More detailed information about the device is provided in the following tables. These tables describe the individual positions and IDs in the extended order code which are relevant to hazardous locations.

Device type

| Position | Order code for    | Selected option | Description  |
|----------|-------------------|-----------------|--|
| 1        | Instrument family | 7               | Vortex flowmeter   |
| 2        | Sensor            | D, F, O, R      | Sensor type  |
| 3        | Transmitter       | 2               | Transmitter type:<br>2-wire, compact version<br>Remote version |

| Position | Order code for   | Selected option  | Description                |
|----------|------------------|--|----------------------------|
| 4        | Generation index | C  | Platform generation        |
| 5, 6     | Nominal diameter | D: DN 15...150<br>F: DN 15...300<br>O: DN 15...300<br><br>R:<br><ul style="list-style-type: none"> <li>■ Reducer<br/>DN 25...200</li> <li>■ Super reducer<br/>DN 40...250</li> </ul> | Nominal diameter of sensor |



### Basic specifications

| Position | Order code for | Selected option | Type of protection  |
|----------|----------------|-----------------|---|
| 1, 2     | Approval       | ND              | Ex ic [ia] IIC T1...T6 Ga/Gc or Ex ic [ia] IIC T1...T6 Gc or Ex ic [ia Ga] IIC T1...T6 Gc |
|          |                | NK              | Ex ec IIC T1...T6 Gc <sup>1)</sup>  |
|          |                | NH              | Ex ic IIC T1...T6 Gc <sup>2)</sup>  |

1) The labeling changes according to whether "Display; operation" = "L" or "M": Ex ec[ia Ga] IIC T1...T6 Gc

2) The labeling changes according to whether "Display; operation" = "L" oder "M": Ex ic[ia Ga] IIC T1...T6 Gc

| Position | Order code for | Selected option | Description  |
|----------|----------------|-----------------|--|
| 3        | Output; Input  | A               | 4-20mA HART  |
|          |                | B               | 4-20mA HART, Pulse/frequency/switch output               |
|          |                | C               | 4-20mA HART + 4-20mA analog                              |
|          |                | D               | 4-20mA HART, pulse/frequency/switch output; 4-20mA input |
|          |                | E               | FOUNDATION Fieldbus, Pulse/frequency/switch output       |
|          |                | G               | PROFIBUS PA, Pulse/frequency/switch output               |
|          |                | S               | PROFINET over Ethernet-APL/SPE, 10Mbit/s                 |
|          |                | T               | Modbus TCP over Ethernet-APL/SPE, 10Mbit/s               |

| Position | Order code for   | Selected option | Description   |
|----------|--|-----------------|---|
| 4        | Display; Operation   | A               | W/o; via communication  |
|          |  | C               | SD02 4-line; push buttons + data backup function  |
|          |  | E               | SD03 4-line, illum.; touch control + data backup function   |
|          |  | L               | Prepared for display FHX50 + M12 connection <sup>1)</sup>   |
|          |  | M               | Prepared for display FHX50 + custom connection <sup>1)</sup>  |
| 8, 9     | Sensor version; DSC sensor; measuring tube<br> Only available for sensors F, O, R with the HART communication protocol. | DA              | Mass steam; 316L; 316L (integrated pressure/temperature measurement), -200 to +400 °C (-328 to +750 °F)         |
|          |  | DB              | Mass gas/liquid; 316L; 316L (integrated pressure/temperature measurement), -40 to +260 °C (-40 to +500 °F)      |
|          |  | DC              | Mass steam; Alloy 718; 316L (integrated pressure/temperature measurement), -200 to +400 °C (-328 to +750 °F)    |
|          |  | DD              | Mass gas/liquid; Alloy 718; 316L (integrated pressure/temperature measurement), -40 to +100 °C (-40 to +212 °F) |
| 11       | Pressure component<br> Only available for sensors F, O, R with the HART communication protocol.                         | A               | Not used  |
|          |  | B               | Pressure measuring cell 2bar/29psi abs  |
|          |  | C               | Pressure measuring cell 4bar/58psi abs  |
|          |  | D               | Pressure measuring cell 10bar/145psi abs  |
|          |  | E               | Pressure measuring cell 40bar/580psi abs  |
|          |  | F               | Pressure measuring cell 100bar/1450psi abs  |
|          |  | G               | Pressure measuring cell 160bar/2320psi abs  |
| 16, 17   | Device Model   | A1              | 1   |

1) FHX50 is separately approved.



## Optional specifications

| ID | Order code for    | Selected option | Description                            |
|----|-------------------|-----------------|--|
| Jx | Test, certificate | JN              | Ambient temperature transmitter -50 °C |
| Nx | Accessory mounted | NA              | Overvoltage Protection (OVP)           |

### Safety instructions: General

- Staff must meet the following conditions for mounting, electrical installation, commissioning and maintenance of the device:
  - Be suitably qualified for their role and the tasks they perform
  - Be trained in explosion protection
  - Be familiar with national regulations or guidelines (e.g. GB/T 3836.15-2017)
- Install the device according to the manufacturer's instructions and the following standards:
  - GB 50257-2014 "Code for construction and acceptance of electric device for explosive atmospheres and fire hazard electrical equipment installation engineering"
  - GB/T 3836.13-2021 "Explosive atmospheres – Part 13: Equipment repair, overhaul, reclamation and modification"
  - GB/T 3836.15-2017 "Explosive atmospheres – Part 15: Electrical installations design, selection and erection"
  - GB/T 3836.16-2022 "Explosive atmospheres – Part 16: Electrical installations inspection and maintenance"
  - GB/T 3836.18-2024 "Explosive atmospheres – Part 18: Intrinsically safe electrical systems"
- Do not operate the device outside the specified electrical, thermal and mechanical parameters.
- Only use the device in media to which the wetted materials have sufficient durability.
- Refer to the temperature tables for the relationship between the permitted ambient temperature for the sensor and/or transmitter, depending on the range of application, and the temperature classes.
- Alterations to the device can affect the explosion protection and must be carried out by staff authorized to perform such work by Endress+Hauser.
- Observe all the technical data of the device (see nameplate).
- Avoid electrostatic charge (e.g. caused by friction, cleaning, maintenance, strong currents in the medium):  
On the attached stainless steel nameplate and on painted metallic housings that are not integrated into the local potential equalization system.

## Safety instructions: Installation

- Continuous service temperature of the connecting cable:  
–40 to +80 °C (–50 to +80 °C for optional specifications, ID Jx (Test, Certificate) = JN); in accordance with the range of service temperature taking into account additional influences of the process conditions ( $T_{a,min}$  and  $T_{a,max} + 20\text{ K}$ ).
- Only use certified cable glands suitable for the application. Observe selection criteria as per GB/T 3836.15-2017.
- When the measuring device is connected, attention must be paid to the type of protection at the transmitter.
- In potentially explosive atmospheres:
  - Do not disconnect the electrical connection of the power supply circuit when energized.
  - Do not open the connection compartment cover when the device is energized.

### Ex ec type of protection

- In potentially explosive atmospheres: Do not disconnect the electrical connection of the power supply circuit when energized.
- Seal unused entries with approved blanking elements that correspond to the type of protection. The plastic transport sealing plug does not meet this requirement and must therefore be replaced during installation.
- Only use certified cable entries and blanking elements. The metal cable entries, extensions and sealing plugs supplied meet this requirement.

*Basic specification, position 3 (Output; Input) = S, T*

- Only install in systems that are limited to safe extra-low voltage such as SELV, PELV, ES1 or Class 2.
- Only one conductor per terminal is allowed.

*Basic specification, position 8, 9 (sensor version; DSC sensor; measuring tube) = DA, DB, DC, DD and position 11 (pressure component) = B, C, D, E, F, G*

- The maximum medium temperature is limited for device versions with a pressure component that is installed directly on the sensor F, O, R:
  - To 40 °C for T6 and T5
  - To 90 °C for T4 and T1
- In the case of T4 ... T1 and medium temperatures > 90 °C the pressure component DPC21 must be installed using a spacer tube between the pressure component and the sensor F, O, R.
  - The spacer tube must have a minimum length of 50 cm (19.7 in).
  - The spacer tube supplied meets this requirement.


## Intrinsic safety

- Observe the guidelines for interconnecting intrinsically safe circuits (e.g. GB/T 3836.15-2017 , proof of intrinsic safety).
- The intrinsically safe input power circuit of the device is isolated from ground. If the device is only equipped with one input, the dielectric strength of the input is at least  $500 V_{\text{rms}}$ . If the device is equipped with more than one input, the dielectric strength of each individual input to ground is at least  $500 V_{\text{rms}}$ , and the dielectric strength of the inputs vis-à-vis one another is also at least  $500 V_{\text{rms}}$ .
- The device can be connected to the Endress+Hauser FXA291 service tool: refer to the Operating Instructions.
- The device can be connected to the remote display FHX50 with Ex ia explosion protection; refer to the Special Documentation and Ex documentation.

*Basic specification, position 3 (Output; input) = A, B, C, D, E, G, S, T:*

When the intrinsically safe Ex ic circuits of the device are connected to certified intrinsically safe circuits of Category Ex ic for Equipment Groups IIB, the type of protection changes from Ex ic IIC to Ex ic IIB.

## Potential equalization

- Integrate the device into the potential equalization →  22.
- If the ground connection has been established via the pipe as specified, it is also possible to integrate the sensor into the potential equalization system via the pipe.

## Overvoltage protection

Optional specification, ID Nx (Accessory Mounted) = NA

- Minimum ambient temperature when using Overvoltage Protection (OVP):  $-40^{\circ}\text{C}$
- When using the internal overvoltage protection: Reduce the admissible ambient temperature at the housing by 2 K.
- For installations which require overvoltage protection to comply with national regulations or standards (e.g. GB/T 3836.15-2017), install the device using overvoltage protection (e.g. HAW56x from Endress+Hauser).
- Observe the safety instructions of the overvoltage protection.
- If an overvoltage protection according to GB/T 3836.15-2017 against atmospheric over voltages is required: no other circuits may leave the housing during normal operation without additional measures.
- The intrinsically safe input power circuit of the device is isolated from ground. If the device is only equipped with one input, the dielectric strength of the input is at least  $290 V_{\text{rms}}$ . If the device is equipped with more than one input, the dielectric strength of each individual input to ground is at least  $290 V_{\text{rms}}$ , and the dielectric strength of the inputs vis-à-vis one another is also at least  $290 V_{\text{rms}}$ .

Safety instructions:  
Zone 0

Basic specification, position 1, 2 (Approval) = ND  
Install the transmitter electronics in Zone 2. For measuring instruments with Ga/Gc the zone 0 is permitted in the measuring tube.

Temperature tables

**Minimum ambient temperature**  
Basic specification, position 3 (Output; input) = A, B, C, D, E, G, S, T:  
 $T_{a, \min} = -40\text{ }^{\circ}\text{C}$   
Basic specification, position 3 (Output; Input) = A, B, D in conjunction with optional specification, ID Jx (Test, Certificate) = JN:  
 $T_{a, \min} = -50\text{ }^{\circ}\text{C}$   
(Not permitted in conjunction with optional specification, ID Nx (Accessory Mounted) = NA → 11)

**Maximum ambient temperature**  
 $T_{a, \max}$  depending on temperature class, maximum medium temperature and device-specific features. See the corresponding temperature tables.

Compact version

|               |        |
|---------------|--------|
| $T_{a, \max}$ | +70 °C |
|---------------|--------|

Sensor remote version

|               |        |
|---------------|--------|
| $T_{a, \max}$ | +85 °C |
|---------------|--------|

Transmitter remote version

| Basic specification,<br>position 3<br>Output; Input <sup>1)</sup> | Basic specification,<br>position 1, 2<br>Approval | $T_{a, \max}$ [°C] |                  |                  |
|---|---|--------------------|------------------|------------------|
|   |   | T6<br>[85 °C]      | T5<br>[100 °C]   | T4<br>[135 °C]   |
| A   | all   | 40                 | 60               | 75               |
| B   | ND, NH  | 35 <sup>2)</sup>   | 50 <sup>3)</sup> | 70 <sup>4)</sup> |
|   | NK  | 40                 | 55               | 70 <sup>4)</sup> |
| C   | all   | 40                 | 55               | 70 <sup>5)</sup> |
| D   | all   | 35                 | 50               | 65               |

| Basic specification,<br>position 3<br>Output; Input <sup>1)</sup> | Basic specification,<br>position 1, 2<br>Approval | T <sub>a, max</sub> [°C] |                |                  |
|---|---|--------------------------|----------------|------------------|
|   |   | T6<br>[85 °C]            | T5<br>[100 °C] | T4<br>[135 °C]   |
| E<br>G  | all   | 40                       | 55             | 70 <sup>5)</sup> |
| S<br>T  | all   | 40                       | 55             | 65               |

- 1) The following applies for installations with overvoltage protection in conjunction with basic specification, position 1, 2 (approval) = ND, NH;  $T_{a, max} = T_{a, max} - 2\text{ K}$
- 2)  $T_{a, max} = 40\text{ °C}$  for pulse/frequency/switch output  $P_i = 0.85\text{ W}$
- 3)  $T_{a, max} = 60\text{ °C}$  for pulse/frequency/switch output  $P_i = 0.85\text{ W}$
- 4)  $T_{a, max} = 75\text{ °C}$  for pulse/frequency/switch output  $P_i = 0.85\text{ W}$
- 5)  $T_{a, max} = 75\text{ °C}$  for pulse/frequency/switch output  $P_i = 0\text{ W}$

Minimum medium temperature

The following relationship of ambient temperature to minimum medium temperature applies when  $T_{m, min} < -50\text{ °C}$

|                          |     |      |      |      |
|--------------------------|-----|------|------|------|
| T <sub>m, min</sub> [°C] | -50 | -100 | -150 | -200 |
| T <sub>a, min</sub> [°C] | -50 | -47  | -44  | -39  |

**Maximum medium temperature compact version**

$T_{m, \max}$  See the corresponding temperature tables.

*Basic specification, position 3 (output; input) = A*

| Version with max. $T_{m, \max}$ range = 280 °C |                  |                     |                   |                   |                   |                   |
|--|------------------|---------------------|-------------------|-------------------|-------------------|-------------------|
| $T_{a, \max}$<br>[°C]                          | $T_{m, \max}$    |                     |                   |                   |                   |                   |
|  | T6<br>[85 °C]    | T5<br>[100 °C]      | T4<br>[135 °C]    | T3<br>[200 °C]    | T2<br>[300 °C]    | T1<br>[450 °C]    |
| 40 <sup>1)</sup>                               | 80 <sup>2)</sup> | 95 <sup>2)</sup>    | 130 <sup>2)</sup> | 195 <sup>2)</sup> | 280 <sup>2)</sup> | 280 <sup>2)</sup> |
| 60 <sup>1)</sup>                               | –                | 95 <sup>3) 2)</sup> | 130 <sup>2)</sup> | 195 <sup>2)</sup> | 280 <sup>2)</sup> | 280 <sup>2)</sup> |
| 65   | –                | –                   | 130 <sup>2)</sup> | 195 <sup>2)</sup> | 280 <sup>2)</sup> | 280 <sup>2)</sup> |
| 70   | –                | –                   | 130 <sup>2)</sup> | 130 <sup>2)</sup> | 130 <sup>2)</sup> | 130 <sup>2)</sup> |

- 1) The following applies for basic specification, position 1, 2 (Approval) = ND, NH: The ambient temperature changes to  $T_{a, \max} = T_{a, \max} - 2$  K for installations with overvoltage protection in conjunction with temperature classes T5 and T6.
- 2) For device versions with a pressure component that is installed directly on the sensor F, O, R, the maximum medium temperature is limited to 40 °C for T6 ...T5 and to 90 °C for T4 ... T1. In the case of T4 ... T1 and medium temperatures > 90 °C, the pressure component DPC21 must be installed using a spacer tube between the pressure component and the sensor F, O, R. The length of the spacer tube must be at least 50 cm (19.7 in).
- 3)  $T_{a, \max} = 55$  °C for device versions with pressure component option DA, DB, DC, DD.

| Version with max. $T_{m, \max}$ range = 440 °C |                  |                     |                   |                   |                   |                   |
|--|------------------|---------------------|-------------------|-------------------|-------------------|-------------------|
| $T_{a, \max}$<br>[°C]                          | $T_{m, \max}$    |                     |                   |                   |                   |                   |
|  | T6<br>[85 °C]    | T5<br>[100 °C]      | T4<br>[135 °C]    | T3<br>[200 °C]    | T2<br>[300 °C]    | T1<br>[450 °C]    |
| 40 <sup>1)</sup>                               | 80 <sup>2)</sup> | 95 <sup>2)</sup>    | 130 <sup>2)</sup> | 195 <sup>2)</sup> | 290 <sup>2)</sup> | 440 <sup>2)</sup> |
| 60 <sup>1)</sup>                               | –                | 95 <sup>3) 2)</sup> | 130 <sup>2)</sup> | 195 <sup>2)</sup> | 290 <sup>2)</sup> | 440 <sup>2)</sup> |
| 70   | –                | –                   | 130 <sup>2)</sup> | 195 <sup>2)</sup> | 290 <sup>2)</sup> | 440 <sup>2)</sup> |

- 1) The following applies for basic specification, position 1, 2 (Approval) = ND, NH: The ambient temperature changes to  $T_{a, \max} = T_{a, \max} - 2$  K for installations with overvoltage protection in conjunction with temperature classes T5 and T6.
- 2) For device versions with a pressure component that is installed directly on the sensor F, O, R, the maximum medium temperature is limited to 40 °C for T6 ...T5 and to 90 °C for T4 ... T1. In the case of T4 ... T1 and medium temperatures > 90 °C, the pressure component DPC21 must be installed using a spacer tube between the pressure component and the sensor F, O, R. The length of the spacer tube must be at least 50 cm (19.7 in).
- 3)  $T_{a, \max} = 55$  °C for device versions with pressure component option DA, DB, DC, DD.

*Basic specification, position 3 (output; input) = B*

| Basic specification, position 1, 2 (Approval) = ND, NH            |                  |                  |                   |                      |                      |                      |
|---|------------------|------------------|-------------------|----------------------|----------------------|----------------------|
| Version with max. $T_{m, \max \text{ range}} = 280^\circ\text{C}$ |                  |                  |                   |                      |                      |                      |
| $T_{a, \max}$<br>[°C]   | $T_{m, \max}$    |                  |                   |                      |                      |                      |
|   | T6<br>[85 °C]    | T5<br>[100 °C]   | T4<br>[135 °C]    | T3<br>[200 °C]       | T2<br>[300 °C]       | T1<br>[450 °C]       |
| 35 <sup>1) 2)</sup>   | 80 <sup>3)</sup> | 95 <sup>3)</sup> | 130 <sup>3)</sup> | 195 <sup>3)</sup>    | 280 <sup>3)</sup>    | 280 <sup>3)</sup>    |
| 50 <sup>1) 4)</sup>   | –                | 95 <sup>3)</sup> | 130 <sup>3)</sup> | 195 <sup>3)</sup>    | 280 <sup>3)</sup>    | 280 <sup>3)</sup>    |
| 60  | –                | –                | 130 <sup>3)</sup> | 195 <sup>3)</sup>    | 280 <sup>3)</sup>    | 280 <sup>3)</sup>    |
| 65  | –                | –                | 130 <sup>3)</sup> | 195 <sup>3)</sup>    | 280 <sup>3) 5)</sup> | 280 <sup>3) 5)</sup> |
| 70  | –                | –                | 130 <sup>3)</sup> | 195 <sup>3) 6)</sup> | 280 <sup>6)</sup>    | 280 <sup>6)</sup>    |

- 1) The ambient temperature changes for installations with overvoltage protection in conjunction with temperature classes T5 and T6:  $T_{a, \max} = T_{a, \max} - 2\text{ K}$
- 2)  $T_{a, \max} = 40^\circ\text{C}$  for pulse/frequency/switch output  $P_i = 0.85\text{ W}$
- 3) For device versions with a pressure component that is installed directly on the sensor F, O, R, the maximum medium temperature is limited to  $40^\circ\text{C}$  for T6 ...T5 and to  $90^\circ\text{C}$  for T4 ... T1. In the case of T4 ... T1 and medium temperatures  $> 90^\circ\text{C}$ , the pressure component DPC21 must be installed using a spacer tube between the pressure component and the sensor F, O, R. The length of the spacer tube must be at least 50 cm (19.7 in).
- 4)  $T_{a, \max} = 55^\circ\text{C}$  for pulse/frequency/switch output  $P_i = 0.85\text{ W}$
- 5)  $T_{a, \max} = 65^\circ\text{C}$  for pulse/frequency/switch output  $P_i = 0.7\text{ W}$
- 6)  $T_{a, \max} = 70^\circ\text{C}$  for pulse/frequency/switch output  $P_i = 0.7\text{ W}$

| Basic specification, position 1, 2 (Approval) = ND, NH            |                  |                  |                   |                      |                      |                      |
|---|------------------|------------------|-------------------|----------------------|----------------------|----------------------|
| Version with max. $T_{m, \max \text{ range}} = 440^\circ\text{C}$ |                  |                  |                   |                      |                      |                      |
| $T_{a, \max}$<br>[°C]   | $T_{m, \max}$    |                  |                   |                      |                      |                      |
|   | T6<br>[85 °C]    | T5<br>[100 °C]   | T4<br>[135 °C]    | T3<br>[200 °C]       | T2<br>[300 °C]       | T1<br>[450 °C]       |
| 35 <sup>1) 2)</sup>   | 80 <sup>3)</sup> | 95 <sup>3)</sup> | 130 <sup>3)</sup> | 195 <sup>3)</sup>    | 290 <sup>3)</sup>    | 440 <sup>3)</sup>    |
| 50 <sup>1) 4)</sup>   | –                | 95 <sup>3)</sup> | 130 <sup>3)</sup> | 195 <sup>3)</sup>    | 290 <sup>3)</sup>    | 440 <sup>3)</sup>    |
| 65  | –                | –                | 130 <sup>3)</sup> | 195 <sup>3)</sup>    | 290 <sup>3)</sup>    | 440 <sup>3)</sup>    |
| 70  | –                | –                | 130 <sup>3)</sup> | 195 <sup>5) 3)</sup> | 290 <sup>3) 5)</sup> | 440 <sup>3) 5)</sup> |

- 1) The ambient temperature changes for installations with overvoltage protection in conjunction with temperature classes T5 and T6:  $T_{a, \max} = T_{a, \max} - 2\text{ K}$
- 2)  $T_{a, \max} = 40^\circ\text{C}$  for pulse/frequency/switch output  $P_i = 0.85\text{ W}$
- 3) For device versions with a pressure component that is installed directly on the sensor F, O, R, the maximum medium temperature is limited to  $40^\circ\text{C}$  for T6 ...T5 and to  $90^\circ\text{C}$  for T4 ... T1. In the case of T4 ... T1 and medium temperatures  $> 90^\circ\text{C}$ , the pressure component DPC21 must be installed using a spacer tube between the

- pressure component and the sensor F, O, R. The length of the spacer tube must be at least 50 cm (19.7 in).
- 4)  $T_{a,max} = 55\text{ °C}$  for pulse/frequency/switch output  $P_i = 0.85\text{ W}$
  - 5)  $T_{a,max} = 70\text{ °C}$  for pulse/frequency/switch output  $P_i = 0.85\text{ W}$

| Basic specification, position 1, 2 (Approval) = NK          |                     |                  |                   |                      |                      |                      |
|---|---------------------|------------------|-------------------|----------------------|----------------------|----------------------|
| Version with max. $T_{m, \text{max range}} = 280\text{ °C}$ |                     |                  |                   |                      |                      |                      |
| $T_{a, \text{max}}$<br>[°C]                                 | $T_{m, \text{max}}$ |                  |                   |                      |                      |                      |
|   | T6<br>[85 °C]       | T5<br>[100 °C]   | T4<br>[135 °C]    | T3<br>[200 °C]       | T2<br>[300 °C]       | T1<br>[450 °C]       |
| 40  | 80 <sup>1)</sup>    | 95 <sup>1)</sup> | 130 <sup>1)</sup> | 195 <sup>1)</sup>    | 280 <sup>1)</sup>    | 280 <sup>1)</sup>    |
| 55  | –                   | 95 <sup>1)</sup> | 130 <sup>1)</sup> | 195 <sup>1)</sup>    | 280 <sup>1)</sup>    | 280 <sup>1)</sup>    |
| 65  | –                   | –                | 130 <sup>1)</sup> | 195 <sup>1)</sup>    | 280 <sup>1) 2)</sup> | 280 <sup>1) 2)</sup> |
| 70  | –                   | –                | 130 <sup>1)</sup> | 195 <sup>1) 3)</sup> | 280 <sup>3) 1)</sup> | 280 <sup>3) 1)</sup> |

- 1) For device versions with a pressure component that is installed directly on the sensor F, O, R, the maximum medium temperature is limited to 40 °C for T6 ...T5 and to 90 °C for T4 ... T1. In the case of T4 ... T1 and medium temperatures > 90 °C, the pressure component DPC21 must be installed using a spacer tube between the pressure component and the sensor F, O, R. The length of the spacer tube must be at least 50 cm (19.7 in).
- 2)  $T_{a,max} = 65\text{ °C}$  for pulse/frequency/switch output  $P_i = 0.7\text{ W}$
- 3)  $T_{a,max} = 70\text{ °C}$  for pulse/frequency/switch output  $P_i = 0.7\text{ W}$

| Basic specification, position 1, 2 (Approval) = NK          |                     |                  |                   |                      |                      |                      |
|---|---------------------|------------------|-------------------|----------------------|----------------------|----------------------|
| Version with max. $T_{m, \text{max range}} = 440\text{ °C}$ |                     |                  |                   |                      |                      |                      |
| $T_{a, \text{max}}$<br>[°C]                                 | $T_{m, \text{max}}$ |                  |                   |                      |                      |                      |
|   | T6<br>[85 °C]       | T5<br>[100 °C]   | T4<br>[135 °C]    | T3<br>[200 °C]       | T2<br>[300 °C]       | T1<br>[450 °C]       |
| 40  | 80 <sup>1)</sup>    | 95 <sup>1)</sup> | 130 <sup>1)</sup> | 195 <sup>1)</sup>    | 290 <sup>1)</sup>    | 440 <sup>1)</sup>    |
| 55  | –                   | 95 <sup>1)</sup> | 130 <sup>1)</sup> | 195 <sup>1)</sup>    | 290 <sup>1)</sup>    | 440 <sup>1)</sup>    |
| 65  | –                   | –                | 130 <sup>1)</sup> | 195 <sup>1)</sup>    | 290 <sup>1)</sup>    | 440 <sup>1)</sup>    |
| 70  | –                   | –                | 130 <sup>1)</sup> | 195 <sup>1) 2)</sup> | 290 <sup>1) 2)</sup> | 440 <sup>1) 2)</sup> |

- 1) For device versions with a pressure component that is installed directly on the sensor F, O, R, the maximum medium temperature is limited to 40 °C for T6 ...T5 and to 90 °C for T4 ... T1. In the case of T4 ... T1 and medium temperatures > 90 °C, the pressure component DPC21 must be installed using a spacer tube between the pressure component and the sensor F, O, R. The length of the spacer tube must be at least 50 cm (19.7 in).
- 2)  $T_{a,max} = 70\text{ °C}$  for pulse/frequency/switch output  $P_i = 0.85\text{ W}$



*Basic specification, position 3 (output; input) = C*

| Version with max. $T_{m, \max \text{ range}} = 280^\circ\text{C}$ |                  |                  |                   |                   |                      |                      |
|---|------------------|------------------|-------------------|-------------------|----------------------|----------------------|
| $T_{a, \max}$<br>[°C]   | $T_{m, \max}$    |                  |                   |                   |                      |                      |
|   | T6<br>[85 °C]    | T5<br>[100 °C]   | T4<br>[135 °C]    | T3<br>[200 °C]    | T2<br>[300 °C]       | T1<br>[450 °C]       |
| 40 <sup>1)</sup>  | 80 <sup>2)</sup> | 95 <sup>2)</sup> | 130 <sup>2)</sup> | 195 <sup>2)</sup> | 280 <sup>2)</sup>    | 280 <sup>2)</sup>    |
| 55 <sup>1)</sup>  | –                | 95 <sup>2)</sup> | 130 <sup>2)</sup> | 195 <sup>2)</sup> | 280 <sup>2)</sup>    | 280 <sup>2)</sup>    |
| 60  | –                | –                | 130 <sup>2)</sup> | 195 <sup>2)</sup> | 280 <sup>2)</sup>    | 280 <sup>2)</sup>    |
| 65  | –                | –                | 130 <sup>2)</sup> | 195 <sup>2)</sup> | 280 <sup>2) 3)</sup> | 280 <sup>2) 3)</sup> |
| 70  | –                | –                | 130 <sup>2)</sup> | 130 <sup>2)</sup> | 130 <sup>2)</sup>    | 130 <sup>2)</sup>    |

- 1) The following applies for basic specification, position 1, 2 (Approval) = ND, NH: The ambient temperature changes to  $T_{a, \max} = T_{a, \max} - 2 \text{ K}$  for installations with overvoltage protection in conjunction with temperature classes T5 and T6.
- 2) For device versions with a pressure component that is installed directly on the sensor F, O, R, the maximum medium temperature is limited to 40 °C for T6 ...T5 and to 90 °C for T4 ... T1. In the case of T4 ... T1 and medium temperatures > 90 °C, the pressure component DPC21 must be installed using a spacer tube between the pressure component and the sensor F, O, R. The length of the spacer tube must be at least 50 cm (19.7 in).
- 3)  $T_{a, \max} = 65^\circ\text{C}$  for pulse/frequency/switch output  $P_1 = 0 \text{ W}$

| Version with max. $T_{m, \max \text{ range}} = 440^\circ\text{C}$ |                  |                  |                   |                      |                      |                      |
|---|------------------|------------------|-------------------|----------------------|----------------------|----------------------|
| $T_{a, \max}$<br>[°C]   | $T_{m, \max}$    |                  |                   |                      |                      |                      |
|   | T6<br>[85 °C]    | T5<br>[100 °C]   | T4<br>[135 °C]    | T3<br>[200 °C]       | T2<br>[300 °C]       | T1<br>[450 °C]       |
| 40 <sup>1)</sup>  | 80 <sup>2)</sup> | 95 <sup>2)</sup> | 130 <sup>2)</sup> | 195 <sup>2)</sup>    | 290 <sup>2)</sup>    | 440 <sup>2)</sup>    |
| 55 <sup>1)</sup>  | –                | 95 <sup>2)</sup> | 130 <sup>2)</sup> | 195 <sup>2)</sup>    | 290 <sup>2)</sup>    | 440 <sup>2)</sup>    |
| 65  | –                | –                | 130 <sup>2)</sup> | 195 <sup>2)</sup>    | 290 <sup>2)</sup>    | 440 <sup>2)</sup>    |
| 70  | –                | –                | 130 <sup>2)</sup> | 195 <sup>2) 3)</sup> | 290 <sup>3) 2)</sup> | 440 <sup>3) 2)</sup> |

- 1) The following applies for basic specification, position 1, 2 (Approval) = ND, NH: The ambient temperature changes to  $T_{a, \max} = T_{a, \max} - 2 \text{ K}$  for installations with overvoltage protection in conjunction with temperature classes T5 and T6.
- 2) For device versions with a pressure component that is installed directly on the sensor F, O, R, the maximum medium temperature is limited to 40 °C for T6 ...T5 and to 90 °C for T4 ... T1. In the case of T4 ... T1 and medium temperatures > 90 °C, the pressure component DPC21 must be installed using a spacer tube between the pressure component and the sensor F, O, R. The length of the spacer tube must be at least 50 cm (19.7 in).
- 3)  $T_{a, \max} = 70^\circ\text{C}$  for pulse/frequency/switch output  $P_1 = 0 \text{ W}$

*Basic specification, position 3 (output; input) = D*

| Version with max. $T_{m, \max}$ range = 280 °C |                  |                  |                   |                   |                   |                   |
|--|------------------|------------------|-------------------|-------------------|-------------------|-------------------|
| $T_{a, \max}$<br>[°C]                          | $T_{m, \max}$    |                  |                   |                   |                   |                   |
|  | T6<br>[85 °C]    | T5<br>[100 °C]   | T4<br>[135 °C]    | T3<br>[200 °C]    | T2<br>[300 °C]    | T1<br>[450 °C]    |
| 35 <sup>1)</sup>                               | 80 <sup>2)</sup> | 95 <sup>2)</sup> | 130 <sup>2)</sup> | 195 <sup>2)</sup> | 280 <sup>2)</sup> | 280 <sup>2)</sup> |
| 50 <sup>1)</sup>                               | –                | 95 <sup>2)</sup> | 130 <sup>2)</sup> | 195 <sup>2)</sup> | 280 <sup>2)</sup> | 280 <sup>2)</sup> |
| 55   | –                | –                | –                 | 195 <sup>2)</sup> | 280 <sup>2)</sup> | 280 <sup>2)</sup> |
| 60   | –                | –                | –                 | 195 <sup>2)</sup> | 195 <sup>2)</sup> | 195 <sup>2)</sup> |

- 1) The following applies for basic specification, position 1, 2 (Approval) = ND, NH: The ambient temperature changes to  $T_{a, \max} = T_{a, \max} - 2$  K for installations with overvoltage protection in conjunction with temperature classes T5 and T6.
- 2) For device versions with a pressure component that is installed directly on the sensor F, O, R, the maximum medium temperature is limited to 40 °C for T6 ...T5 and to 90 °C for T4 ... T1. In the case of T4 ... T1 and medium temperatures > 90 °C, the pressure component DPC21 must be installed using a spacer tube between the pressure component and the sensor F, O, R. The length of the spacer tube must be at least 50 cm (19.7 in).

| Version with max. $T_{m, \max}$ range = 440 °C |                  |                  |                   |                   |                   |                   |
|--|------------------|------------------|-------------------|-------------------|-------------------|-------------------|
| $T_{a, \max}$<br>[°C]                          | $T_{m, \max}$    |                  |                   |                   |                   |                   |
|  | T6<br>[85 °C]    | T5<br>[100 °C]   | T4<br>[135 °C]    | T3<br>[200 °C]    | T2<br>[300 °C]    | T1<br>[450 °C]    |
| 35 <sup>1)</sup>                               | 80 <sup>2)</sup> | 95 <sup>2)</sup> | 130 <sup>2)</sup> | 195 <sup>2)</sup> | 290 <sup>2)</sup> | 440 <sup>2)</sup> |
| 50 <sup>1)</sup>                               | –                | 95 <sup>2)</sup> | 130 <sup>2)</sup> | 195 <sup>2)</sup> | 290 <sup>2)</sup> | 440 <sup>2)</sup> |
| 55   | –                | –                | –                 | 195 <sup>2)</sup> | 290 <sup>2)</sup> | 440 <sup>2)</sup> |
| 60   | –                | –                | –                 | 195 <sup>2)</sup> | 290 <sup>2)</sup> | 440 <sup>2)</sup> |
| 65   | –                | –                | –                 | –                 | 290 <sup>2)</sup> | 290 <sup>2)</sup> |

- 1) The following applies for basic specification, position 1, 2 (Approval) = ND, NH: The ambient temperature changes to  $T_{a, \max} = T_{a, \max} - 2$  K for installations with overvoltage protection in conjunction with temperature classes T5 and T6.
- 2) For device versions with a pressure component that is installed directly on the sensor F, O, R, the maximum medium temperature is limited to 40 °C for T6 ...T5 and to 90 °C for T4 ... T1. In the case of T4 ... T1 and medium temperatures > 90 °C, the pressure component DPC21 must be installed using a spacer tube between the pressure component and the sensor F, O, R. The length of the spacer tube must be at least 50 cm (19.7 in).

*Basic specification, position 3 (output; input) = E, G*

| Version with max. $T_{m, \max}$ range = 280 °C |                  |                  |                      |                      |                      |                      |
|--|------------------|------------------|----------------------|----------------------|----------------------|----------------------|
| $T_{a, \max}$<br>[°C]                          | $T_{m, \max}$    |                  |                      |                      |                      |                      |
|  | T6<br>[85 °C]    | T5<br>[100 °C]   | T4<br>[135 °C]       | T3<br>[200 °C]       | T2<br>[300 °C]       | T1<br>[450 °C]       |
| 40 <sup>1)</sup>                               | 80 <sup>2)</sup> | 95 <sup>2)</sup> | 130 <sup>2)</sup>    | 195 <sup>2)</sup>    | 280 <sup>2)</sup>    | 280 <sup>2)</sup>    |
| 50 <sup>1)</sup>                               | –                | 95 <sup>2)</sup> | 130 <sup>2) 3)</sup> | 195 <sup>2) 3)</sup> | 280 <sup>2) 3)</sup> | 280 <sup>2) 3)</sup> |
| 60   | –                | –                | 130 <sup>2)</sup>    | 195 <sup>2)</sup>    | 280 <sup>2)</sup>    | 280 <sup>2)</sup>    |
| 65   | –                | –                | 130 <sup>2)</sup>    | 195 <sup>2)</sup>    | 280 <sup>2) 4)</sup> | 280 <sup>2) 4)</sup> |
| 70   | –                | –                | 130 <sup>2)</sup>    | 195 <sup>2) 5)</sup> | 280 <sup>2) 5)</sup> | 280 <sup>2) 5)</sup> |

- 1) The following applies for basic specification, position 1, 2 (Approval) = ND, NH: The ambient temperature changes to  $T_{a, \max} = T_{a, \max} - 2 \text{ K}$  for installations with overvoltage protection in conjunction with temperature classes T5 and T6.
- 2) For device versions with a pressure component that is installed directly on the sensor F, O, R, the maximum medium temperature is limited to 40 °C for T6 ...T5 and to 90 °C for T4 ... T1. In the case of T4 ... T1 and medium temperatures > 90 °C, the pressure component DPC21 must be installed using a spacer tube between the pressure component and the sensor F, O, R. The length of the spacer tube must be at least 50 cm (19.7 in).
- 3)  $T_{a, \max} = 60 \text{ °C}$  for pulse/frequency/switch output  $P_1 = 0 \text{ W}$
- 4)  $T_{a, \max} = 65 \text{ °C}$  for pulse/frequency/switch output  $P_1 = 0 \text{ W}$
- 5)  $T_{a, \max} = 70 \text{ °C}$  for pulse/frequency/switch output  $P_1 = 0 \text{ W}$

| Version with max. $T_{m, \max}$ range = 440 °C |                  |                  |                      |                      |                      |                      |
|--|------------------|------------------|----------------------|----------------------|----------------------|----------------------|
| $T_{a, \max}$<br>[°C]                          | $T_{m, \max}$    |                  |                      |                      |                      |                      |
|  | T6<br>[85 °C]    | T5<br>[100 °C]   | T4<br>[135 °C]       | T3<br>[200 °C]       | T2<br>[300 °C]       | T1<br>[450 °C]       |
| 40 <sup>1)</sup>                               | 80 <sup>2)</sup> | 95 <sup>2)</sup> | 130 <sup>2)</sup>    | 195 <sup>2)</sup>    | 290 <sup>2)</sup>    | 440 <sup>2)</sup>    |
| 50 <sup>1)</sup>                               | –                | 95 <sup>2)</sup> | 130 <sup>2) 3)</sup> | 195 <sup>2) 3)</sup> | 290 <sup>2) 3)</sup> | 440 <sup>2) 3)</sup> |
| 65   | –                | –                | 130 <sup>2)</sup>    | 195 <sup>2)</sup>    | 290 <sup>2)</sup>    | 440 <sup>2)</sup>    |
| 70   | –                | –                | 130 <sup>2)</sup>    | 195 <sup>2) 4)</sup> | 290 <sup>4) 2)</sup> | 440 <sup>4) 2)</sup> |

- 1) The following applies for basic specification, position 1, 2 (Approval) = ND, NH: The ambient temperature changes to  $T_{a, \max} = T_{a, \max} - 2 \text{ K}$  for installations with overvoltage protection in conjunction with temperature classes T5 and T6.
- 2) For device versions with a pressure component that is installed directly on the sensor F, O, R, the maximum medium temperature is limited to 40 °C for T6 ...T5 and to 90 °C for T4 ... T1. In the case of T4 ... T1 and medium temperatures > 90 °C, the pressure component DPC21 must be installed using a spacer tube between the pressure component and the sensor F, O, R. The length of the spacer tube must be at least 50 cm (19.7 in).
- 3)  $T_{a, \max} = 60 \text{ °C}$  for pulse/frequency/switch output  $P_1 = 0 \text{ W}$
- 4)  $T_{a, \max} = 70 \text{ °C}$  for pulse/frequency/switch output  $P_1 = 0 \text{ W}$

Basic specification, position 3 (output; input) = S, T

| Version with max. $T_{m, \max \text{ range}} = 280\text{ °C}$ |                  |                  |                   |                   |                   |                   |
|---|------------------|------------------|-------------------|-------------------|-------------------|-------------------|
| $T_{a, \max}$<br>[°C]   | $T_{m, \max}$    |                  |                   |                   |                   |                   |
|   | T6<br>[85 °C]    | T5<br>[100 °C]   | T4<br>[135 °C]    | T3<br>[200 °C]    | T2<br>[300 °C]    | T1<br>[450 °C]    |
| 40 <sup>1)</sup>  | 80 <sup>2)</sup> | 95 <sup>2)</sup> | 130 <sup>2)</sup> | 195 <sup>2)</sup> | 280 <sup>2)</sup> | 280 <sup>2)</sup> |
| 50 <sup>1)</sup>  | –                | 95 <sup>2)</sup> | 130 <sup>2)</sup> | 195 <sup>2)</sup> | 280 <sup>2)</sup> | 280 <sup>2)</sup> |
| 55  | –                | –                | 130 <sup>2)</sup> | 195 <sup>2)</sup> | 280 <sup>2)</sup> | 280 <sup>2)</sup> |
| 60  | –                | –                | 130 <sup>2)</sup> | 195 <sup>2)</sup> | 280 <sup>2)</sup> | 280 <sup>2)</sup> |

- 1) The following applies for basic specification, position 1, 2 (Approval) = ND, NH: The ambient temperature changes to  $T_{a, \max} = T_{a, \max} - 2\text{ K}$  for installations with overvoltage protection in conjunction with temperature classes T5 and T6.
- 2) For device versions with a pressure component that is installed directly on the sensor F, O, R, the maximum medium temperature is limited to 40 °C for T6 ...T5 and to 90 °C for T4 ... T1. In the case of T4 ... T1 and medium temperatures > 90 °C, the pressure component DPC21 must be installed using a spacer tube between the pressure component and the sensor F, O, R. The length of the spacer tube must be at least 50 cm (19.7 in).

| Version with max. $T_{m, \max \text{ range}} = 440\text{ °C}$ |                  |                  |                   |                   |                   |                   |
|---|------------------|------------------|-------------------|-------------------|-------------------|-------------------|
| $T_{a, \max}$<br>[°C]   | $T_{m, \max}$    |                  |                   |                   |                   |                   |
|   | T6<br>[85 °C]    | T5<br>[100 °C]   | T4<br>[135 °C]    | T3<br>[200 °C]    | T2<br>[300 °C]    | T1<br>[450 °C]    |
| 40 <sup>1)</sup>  | 80 <sup>2)</sup> | 95 <sup>2)</sup> | 130 <sup>2)</sup> | 195 <sup>2)</sup> | 290 <sup>2)</sup> | 440 <sup>2)</sup> |
| 50 <sup>1)</sup>  | –                | 95 <sup>2)</sup> | 130 <sup>2)</sup> | 195 <sup>2)</sup> | 290 <sup>2)</sup> | 440 <sup>2)</sup> |
| 60  | –                | –                | 130 <sup>2)</sup> | 195 <sup>2)</sup> | 290 <sup>2)</sup> | 440 <sup>2)</sup> |

- 1) The following applies for basic specification, position 1, 2 (Approval) = ND, NH: The ambient temperature changes to  $T_{a, \max} = T_{a, \max} - 2\text{ K}$  for installations with overvoltage protection in conjunction with temperature classes T5 and T6.
- 2) For device versions with a pressure component that is installed directly on the sensor F, O, R, the maximum medium temperature is limited to 40 °C for T6 ...T5 and to 90 °C for T4 ... T1. In the case of T4 ... T1 and medium temperatures > 90 °C, the pressure component DPC21 must be installed using a spacer tube between the pressure component and the sensor F, O, R. The length of the spacer tube must be at least 50 cm (19.7 in).

## Maximum medium temperature remote version - sensor

$T_{m, \max}$  See the corresponding temperature tables.

| Version with max. $T_{m, \max \text{ range}} = 280^\circ\text{C}$ |                     |                     |                   |                   |                   |                   |
|---|---------------------|---------------------|-------------------|-------------------|-------------------|-------------------|
| $T_{a, \max}$<br>[°C]   | $T_{m, \max}$       |                     |                   |                   |                   |                   |
|   | T6<br>[85 °C]       | T5<br>[100 °C]      | T4<br>[135 °C]    | T3<br>[200 °C]    | T2<br>[300 °C]    | T1<br>[450 °C]    |
| 55  | 80 <sup>1) 2)</sup> | 95 <sup>2)</sup>    | 130 <sup>2)</sup> | 195 <sup>2)</sup> | 280 <sup>2)</sup> | 280 <sup>2)</sup> |
| 70  | –                   | 95 <sup>2) 3)</sup> | 130 <sup>2)</sup> | 195 <sup>2)</sup> | 280 <sup>2)</sup> | 280 <sup>2)</sup> |
| 85  | –                   | –                   | 130 <sup>2)</sup> | 195 <sup>2)</sup> | 280 <sup>2)</sup> | 280 <sup>2)</sup> |

- 1)  $T_{a, \max} = 40^\circ\text{C}$  for device versions with pressure component option DA, DB, DC, DD.
- 2) For device versions with a pressure component that is installed directly on the sensor F, O, R, the maximum medium temperature is limited to  $40^\circ\text{C}$  for T6 ...T5 and to  $90^\circ\text{C}$  for T4 ... T1. In the case of T4 ... T1 and medium temperatures  $> 90^\circ\text{C}$ , the pressure component DPC21 must be installed using a spacer tube between the pressure component and the sensor F, O, R. The length of the spacer tube must be at least 50 cm (19.7 in).
- 3)  $T_{a, \max} = 55^\circ\text{C}$  for device versions with pressure component option DA, DB, DC, DD.

| Version with max. $T_{m, \max \text{ range}} = 440^\circ\text{C}$ |                     |                     |                   |                   |                   |                   |
|---|---------------------|---------------------|-------------------|-------------------|-------------------|-------------------|
| $T_{a, \max}$<br>[°C]   | $T_{m, \max}$       |                     |                   |                   |                   |                   |
|   | T6<br>[85 °C]       | T5<br>[100 °C]      | T4<br>[135 °C]    | T3<br>[200 °C]    | T2<br>[300 °C]    | T1<br>[450 °C]    |
| 55  | 80 <sup>1) 2)</sup> | 95 <sup>2)</sup>    | 130 <sup>2)</sup> | 195 <sup>2)</sup> | 290 <sup>2)</sup> | 440 <sup>2)</sup> |
| 70  | –                   | 95 <sup>2) 3)</sup> | 130 <sup>2)</sup> | 195 <sup>2)</sup> | 290 <sup>2)</sup> | 440 <sup>2)</sup> |
| 85  | –                   | –                   | 130 <sup>2)</sup> | 195 <sup>2)</sup> | 290 <sup>2)</sup> | 440 <sup>2)</sup> |

- 1)  $T_{a, \max} = 40^\circ\text{C}$  for device versions with pressure component option DA, DB, DC, DD.
- 2) For device versions with a pressure component that is installed directly on the sensor F, O, R, the maximum medium temperature is limited to  $40^\circ\text{C}$  for T6 ...T5 and to  $90^\circ\text{C}$  for T4 ... T1. In the case of T4 ... T1 and medium temperatures  $> 90^\circ\text{C}$ , the pressure component DPC21 must be installed using a spacer tube between the pressure component and the sensor F, O, R. The length of the spacer tube must be at least 50 cm (19.7 in).
- 3)  $T_{a, \max} = 55^\circ\text{C}$  for device versions with pressure component option DA, DB, DC, DD.

### Connection data: Signal circuits

The following tables contain specifications which are dependent on the transmitter type and its input and output assignment. Compare the following specifications with those on the nameplate of the transmitter.

### Cable specification: Connecting cable for remote version

Basic specification (approval) 1,2 = ND, NH

The sensor cable connection between the sensor and the transmitter has type of protection Ex ic.

Cable parameter:  $L/R \leq 38.2 \mu\text{H}/\Omega$

The cable supplied by Endress+Hauser complies with the specifications.

### **Cable specification for pressure measuring cell connecting cable**


*Basic specification (approval) 1,2 = ND, NH*

The cable connection between the transmitter and pressure component or between the sensor and pressure component has type of protection Ex ic.

Cable parameter:  $L/R \leq 38.2 \mu\text{H}/\Omega$

The cable supplied by Endress+Hauser complies with the specifications.

### **Connecting the transmitter**

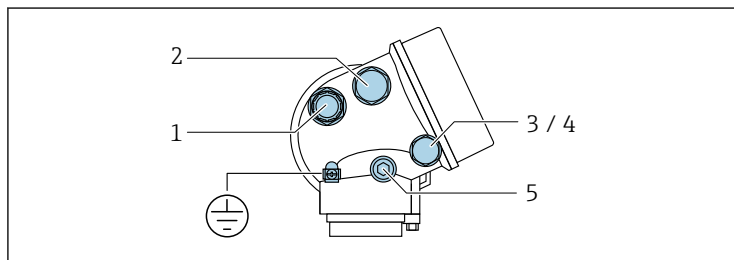

A0034702

| Position |  | Basic specification, position 1, 2: Approval | Type of protection used for cable entry    | Description  |
|----------|--|--|--|--|
| 1        | Cable entry for output 1   | NK<br>ND, NH                                 | Ex ec<br>Ex ic                             | The following applies for devices with basic specification, position 1, 2 (Approval) = NK:<br>In the case of device versions with a plastic transport sealing plug, this plug does not meet the explosion protection requirements and must be replaced during installation by a suitable entry that meets the approval specifications.<br>In the case of device versions with a cable entry, this entry has a separate component approval and meets the requirements of the explosion protection indicated on the nameplate. |
| 2        | Cable entry for output 2   | NK<br>ND, NH                                 | Ex ec<br>Ex ic                             | The following applies for devices with basic specification, position 1, 2 (Approval) = NK:<br>In the case of device versions with metal extensions and sealing plugs, the latter are part of the device approval and meet the requirements of the explosion protection indicated on the nameplate.<br>In the case of device versions with a cable entry, this entry has a separate component approval and meets the requirements of the explosion protection indicated on the nameplate.                                     |
| 3        | Optional order code for <sup>1)</sup> : Cable entry of the remote display and operating module FHX50 | NK<br>ND, NH                                 | Ex ec <sup>2)</sup><br>Ex ic <sup>3)</sup> | The following applies for devices with basic specification, position 1, 2 (Approval) = NK:<br>In the case of device versions with metal extensions and sealing plugs, the latter are part of the device approval and meet the requirements of the explosion protection indicated on the nameplate.<br>In the case of device versions with a cable entry, this entry has a separate component approval and meets the requirements of the explosion protection indicated on the nameplate.                                     |
| 4        | Optional order code for <sup>4)</sup> : Pressure measuring cell cable entry                          | NK<br>ND, NH                                 | Ex ec<br>Ex ic                             | The following applies for devices with basic specification, position 1, 2 (Approval) = NK:<br>In the case of device versions with metal extensions and sealing plugs, the latter are part of the device approval and meet the requirements of the type of protection indicated on the nameplate.<br>In the case of device versions with a cable entry, this entry has a separate component approval and meets the requirements of the type of protection indicated on the nameplate.   |



| Position |                            | Description  |
|----------|----------------------------|--|
| 5        | Pressure compensation plug | <div>NOTICE</div> <b>Housing degree of protection voided due to insufficient sealing of the housing.</b> <div>► Do not open - not a cable entry.</div> |
| ⊕        | Potential equalization     | <div>NOTICE</div> <b>Terminal for connection to potential equalization.</b> <div>► Pay attention to the grounding concept of the facility.</div>       |

- 1) Basic specification, position 4 (display; operation) = L, M
- 2) The labeling changes according to whether "Display; Operation" = "L" or "M": Ex ec[ia Ga] IIC T1...T6 Gc
- 3) For NH: The labeling changes according to whether "Display; Operation" = "L" or "M": Ex ic[ia Ga] IIC T1...T6 Gc.
- 4) Basic specification, position 8, 9 (sensor version; DSC sensor; measuring tube) = DA, DA, DC, DD and position 11 (pressure component) = B, C, D, E, F, G



Terminal assignment

Transmitter



 The order code is part of the extended order code. Detailed information on the features of the device and on the structure of the extended order code →  6.

Connection versions

| Order code for "Output"          | Terminal numbers                           |       |   |       |                                |       |
|----------------------------------|--|-------|---|-------|--------------------------------|-------|
|                                  | Output 1                                   |       | Output 2                                |       | Input                          |       |
|                                  | 1 (+)                                      | 2 (-) | 3 (+)                                   | 4 (-) | 5 (+)                          | 6 (-) |
| Option <b>A</b>                  | 4-20mA HART (passive)                      |       | -                                       |       | -                              |       |
| Option <b>B</b> <sup>1)</sup>    | 4-20mA HART (passive)                      |       | Pulse/frequency/switch output (passive) |       | -                              |       |
| Option <b>C</b> <sup>1)</sup>    | 4-20mA HART (passive)                      |       | 4-20mA analog (passive)                 |       | -                              |       |
| Option <b>D</b> <sup>1) 2)</sup> | 4-20mA HART (passive)                      |       | Pulse/frequency/switch output (passive) |       | 4-20mA current input (passive) |       |
| Option <b>E</b> <sup>1) 3)</sup> | FOUNDATION Fieldbus                        |       | Pulse/frequency/switch output (passive) |       | -                              |       |
| Option <b>G</b> <sup>1) 4)</sup> | PROFIBUS PA                                |       | Pulse/frequency/switch output (passive) |       | -                              |       |
| Option <b>S</b>                  | PROFINET over Ethernet-APL/SPE, 10Mbit/s   |       | -                                       |       | -                              |       |
| Option <b>T</b>                  | Modbus TCP over Ethernet-APL/SPE, 10Mbit/s |       | -                                       |       | -                              |       |

- 1) Output 1 must always be used; output 2 is optional.
- 2) The integrated overvoltage protection is not used with option D: Terminals 5 and 6 (current input) are not protected against overvoltage.
- 3) FOUNDATION Fieldbus with integrated reverse polarity protection.
- 4) PROFIBUS PA with integrated reverse polarity protection.

Intrinsically safe values

 The order code is part of the extended order code. Detailed information on the features of the device and on the structure of the extended order code →  6.

*Type of protection Ex ic*

| Order code for "Output" | Output type                   | Intrinsically safe values  |  |
|-------------------------|-------------------------------|--|--|
| Option A                | 4-20mA HART                   | $U_i = DC\ 35\ V$<br>$I_i = n.a.$<br>$P_i = 1\ W$<br>$L_i = 0\ \mu H$<br>$C_i = 5\ nF$             |  |
| Option B                | 4-20mA HART                   | $U_i = DC\ 35\ V$<br>$I_i = n.a.$<br>$P_i = 1\ W$<br>$L_i = 0\ \mu H$<br>$C_i = 5\ nF$             |  |
|                         | Pulse/frequency/switch output | $U_i = DC\ 35\ V$<br>$I_i = n.a.$<br>$P_i = 1\ W$<br>$L_i = 0\ \mu H$<br>$C_i = 6\ nF$             |  |
| Option C                | 4-20mA HART                   | $U_i = DC\ 30\ V$<br>$I_i = n.a.$<br>$P_i = 1\ W$<br>$L_i = 0\ \mu H$<br>$C_i = 30\ nF$            |  |
|                         | 4-20mA analog                 |  |  |
| Option D                | 4-20mA HART                   | $U_i = DC\ 35\ V$<br>$I_i = n.a.$<br>$P_i = 1\ W$<br>$L_i = 0\ \mu H$<br>$C_i = 5\ nF$             |  |
|                         | Pulse/frequency/switch output | $U_i = DC\ 35\ V$<br>$I_i = n.a.$<br>$P_i = 1\ W$<br>$L_i = 0\ \mu H$<br>$C_i = 6\ nF$             |  |
|                         | 4 to 20 mA current input      | $U_i = DC\ 35\ V$<br>$I_i = n.a.$<br>$P_i = 1\ W$<br>$L_i = 0\ \mu H$<br>$C_i = 5\ nF$             |  |
| Option E                | FOUNDATION Fieldbus           | STANDARD<br>$U_i = 32\ V$<br>$I_i = 300\ mA$<br>$P_i = n.a.$<br>$L_i = 10\ \mu H$<br>$C_i = 5\ nF$ | FISCO<br>$U_i = 17.5\ V$<br>$I_i = n.a.$<br>$P_i = n.a.$<br>$L_i = 10\ \mu H$<br>$C_i = 5\ nF$ |
|                         | Pulse/frequency/switch output | $U_i = 35\ V$<br>$I_i = 300\ mA$<br>$P_i = 1\ W$<br>$L_i = 0\ \mu H$<br>$C_i = 6\ nF$              |  |

| Order code for "Output" | Output type                                | Intrinsically safe values   |  |
|-------------------------|--|---|--|
| Option G                | PROFIBUS PA                                | STANDARD<br>$U_i = 32\text{ V}$<br>$I_i = 300\text{ mA}$<br>$P_i = \text{n.a.}$<br>$L_i = 10\text{ }\mu\text{H}$<br>$C_i = 5\text{ nF}$   | FISCO<br>$U_i = 17.5\text{ V}$<br>$I_i = \text{n.a.}$<br>$P_i = \text{n.a.}$<br>$L_i = 10\text{ }\mu\text{H}$<br>$C_i = 5\text{ nF}$ |
|                         | Pulse/frequency/switch output              | $U_i = 35\text{ V}$<br>$I_i = 300\text{ mA}$<br>$P_i = 1\text{ W}$<br>$L_i = 0\text{ }\mu\text{H}$<br>$C_i = 6\text{ nF}$   |  |
| Option S                | PROFINET over Ethernet-APL/SPE, 10Mbit/s   | <b>2-WISE power load, APL port profile SLAC<sup>1)</sup></b><br><b>Ex ic</b><br>$U_i = 17.5\text{ V}$<br>$I_i = 380\text{ mA}$<br>$P_i = 5.32\text{ W}$<br>$L_i = \text{negligible}$<br>$C_i = 1\text{ nF}$<br><b>Cable specifications according to 2-WISE:</b><br>$R_c = 15\text{ to }150\text{ }\Omega/\text{km}$<br>$L_c = 0.4\text{ to }1\text{ mH/km}$<br>$C_c = 45\text{ to }200\text{ nF/km}$<br>$C_c = C_c \text{ line/line} + 0.5\text{ } C_c \text{ line/screen, if both lines are floating, or}$<br>$C_c = C_c \text{ line/line} + C_c \text{ line/screen, if the screen is connected to one line}$<br>Length of cable (not including cable stubs):<br>$\leq 200\text{ m (656.2)}$<br>Length of cable stubs:<br>$\leq 1\text{ m (3.3 ft)}$ |  |
| Option T                | Modbus TCP over Ethernet-APL/SPE, 10Mbit/s |   |  |

1) For further options see Ethernet-APL Installation Drawing HE\_01622.

### Safety-related values



The order code is part of the extended order code. Detailed information on the features of the device and on the structure of the extended order code → 6.

*Type of protection Ex ec*

| Order code for "Output" | Output type                                | Safety-related values  |
|-------------------------|--|--|
| Option A                | 4-20mA HART                                | $U_{nom} = DC\ 35\ V$<br>$U_{max} = 250\ V$  |
| Option B                | 4-20mA HART                                | $U_{nom} = DC\ 35\ V$<br>$U_{max} = 250\ V$  |
|                         | Pulse/frequency/switch output              | $U_{nom} = DC\ 35\ V$<br>$U_{max} = 250\ V$<br>$P_{max} = 1\ W^{1)}$   |
| Option C                | 4-20mA HART                                | $U_{nom} = DC\ 30\ V$  |
|                         | 4-20mA analog                              | $U_{max} = 250\ V$   |
| Option D                | 4-20mA HART                                | $U_{nom} = DC\ 35\ V$<br>$U_{max} = 250\ V$  |
|                         | Pulse/frequency/switch output              | $U_{nom} = DC\ 35\ V$<br>$U_{max} = 250\ V$<br>$P_{max} = 1\ W^{1)}$   |
|                         | 4 to 20 mA current input                   | $U_{nom} = DC\ 35\ V$<br>$U_{max} = 250\ V$  |
| Option E                | FOUNDATION Fieldbus                        | $U_{nom} = DC\ 32\ V$<br>$U_{max} = 250\ V$<br>$P_{max} = 0.88\ W$   |
|                         | Pulse/frequency/switch output              | $U_{nom} = DC\ 35\ V$<br>$U_{max} = 250\ V$<br>$P_{max} = 1\ W^{1)}$   |
| Option G                | PROFIBUS PA                                | $U_{nom} = DC\ 32\ V$<br>$U_{max} = 250\ V$<br>$P_{max} = 0.88\ W$   |
|                         | Pulse/frequency/switch output              | $U_{nom} = DC\ 35\ V$<br>$U_{max} = 250\ V$<br>$P_{max} = 1\ W^{1)}$   |
| Option S <sup>2)</sup>  | PROFINET over Ethernet-APL/SPE, 10Mbit/s   | <b>2-WISE power load, APL port profile SLAX</b><br>$U_{nom} = DC\ 17.5\ V$<br>$U_{max} = 250\ V$<br>$P_{nom} = 0.9\ W$ |
| Option T <sup>2)</sup>  | Modbus TCP over Ethernet-APL/SPE, 10Mbit/s |  |

1) Internal circuit limited by  $R_i = 760.5\ \Omega$

2) To be installed in systems that are limited to safe extra-low voltage such as SELV, PELV or ES1. Only one conductor per terminal is allowed.

Remote display FHX50

| Basic specification,<br>position 1, 2<br>Approval | Cable specification                    | Basic specification, position 4<br>Display; operation<br>Option L, M |
|---|--|--|
| Option <b>ND, NK, NH</b>                          | Max. cable length:<br>60 m (196.85 ft) | $U_o = 7.3\text{ V}$   |
|   |  | $I_o = 327\text{ mA}$  |
|   |  | $P_o = 362\text{ mW}$  |
|   |  | $L_o = 149\text{ }\mu\text{H}$                                       |
|   |  | $C_o = 388\text{ nF}$  |
|   |  | $C_c \leq 125\text{ nF}$   |
|   |  | $L_c \leq 149\text{ }\mu\text{H}$                                    |

---

---



71685748

[www.addresses.endress.com](http://www.addresses.endress.com)

---