

Safety Instructions

Liquiphant FTL51B

II 1/2 G Ex db IIC T6...T1 Ga/Gb

II 2 G Ex db IIC T6...T1 Gb



Liquiphant FTL51B

Table of contents

Associated documentation	4
Supplementary documentation	4
Manufacturer's certificates	4
Manufacturer address	4
Other standards	4
Extended order code	5
Safety instructions: General	9
Safety instructions: Special conditions	10
Safety instructions: Installation	11
Safety instructions: Ex d joints	13
Safety instructions: Zone 0	13
Temperature tables	13
Connection data	22

Associated documentation	<p>This document is an integral part of the following Operating Instructions: BA01894F/00</p>
Supplementary documentation	<p>Explosion-protection brochure: CP00021Z/11 The Explosion-protection brochure is available:</p> <ul style="list-style-type: none">■ In the download area of the Endress+Hauser website: www.endress.com -> Downloads -> Brochures and Catalogs -> Text Search: CP00021Z■ On the CD for devices with CD-based documentation
Manufacturer's certificates	<p>UK Declaration of Conformity</p> <p>Declaration Number: UK_00031</p> <p>The UK Declaration of Conformity is available: In the download area of the Endress+Hauser website: www.endress.com -> Downloads -> Declaration -> Type: UKCA Declaration -> Product Code: ...</p> <p>UKCA type-examination certificate</p> <p>Certificate number: CSAE 21UKEX1183X</p> <p>List of applied standards: See UK Declaration of Conformity.</p>
Manufacturer address	<p>Endress+Hauser SE+Co. KG Hauptstraße 1 79689 Maulburg, Germany Address of the manufacturing plant: See nameplate.</p>
Other standards	<p>Among other things, the following standards shall be observed in their current version for proper installation:</p> <ul style="list-style-type: none">■ IEC/EN 60079-14: "Explosive atmospheres - Part 14: Electrical installations design, selection and erection"■ EN 1127-1: "Explosive atmospheres - Explosion prevention and protection - Part 1: Basic concepts and methodology"

Extended order code

The extended order code is indicated on the nameplate, which is affixed to the device in such a way that it is clearly visible. Additional information about the nameplate is provided in the associated Operating Instructions.

Structure of the extended order code

FTL51B	-	*****	+	A*B*C*D*E*F*G*..
<i>(Device type)</i>		<i>(Basic specifications)</i>		<i>(Optional specifications)</i>

* = Placeholder

At this position, an option (number or letter) selected from the specification is displayed instead of the placeholders.

Basic specifications

The features that are absolutely essential for the device (mandatory features) are specified in the basic specifications. The number of positions depends on the number of features available. The selected option of a feature can consist of several positions.

Optional specifications

The optional specifications describe additional features for the device (optional features). The number of positions depends on the number of features available. The features have a 2-digit structure to aid identification (e.g. JA). The first digit (ID) stands for the feature group and consists of a number or a letter (e.g. J = Test, Certificate). The second digit constitutes the value that stands for the feature within the group (e.g. A = 3.1 material (wetted parts), inspection certificate).

More detailed information about the device is provided in the following tables. These tables describe the individual positions and IDs in the extended order code which are relevant to hazardous locations.

Extended order code: Liquiphant



The following specifications reproduce an extract from the product structure and are used to assign:

- This documentation to the device (using the extended order code on the nameplate).
- The device options cited in the document.

Device type

FTL51B

Basic specifications


Position 1, 2 (Approval)		
Selected option	Description	
FTL51B	UC	UK Ex II 1/2 G Ex db IIC T6...T1 Ga/Gb UK Ex II 2 G Ex db IIC T6...T1 Gb

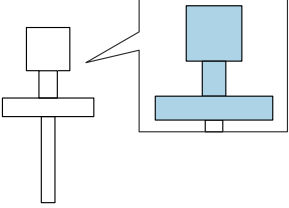
Position 3, 4 (Output)		
Selected option	Description	
FTL51B	A1	FEL61, 2-wire 19-253VAC + test button
	A2	FEL62, 3-wire PNP 10-55VDC + test button
	A3	FEL64DC, relay DPDT 9-20VDC
	A4	FEL64, relay DPDT 19-253VAC/19-55VDC contact 253V/6A + test button
	A7	FEL67, 2-wire PFM + test button
	A8	FEL68, 2-wire NAMUR + test button
	GA	FEL60D, density/concentration

Position 5 (Display, Operation)		
Selected option	Description	
FTL51B	A	W/o; switch
	B ¹⁾	LED module outside visible; switch

1) Only in connection with Position 3, 4 = A2-A4, Position 6 = B, M

Position 6 (Housing, Material)		
Selected option		Description
FTL51B	B	Single compartment; Alu, coated
	C	Single compartment; 316L, cast
	M	Dual compartment L-shape; Alu, coated

 Shown in the temperature tables exemplary as follows:




Position 7 (Electrical Connection)		
Selected option		Description
FTL51B	F	Thread M20, IP66/68 NEMA Type 4X/6P
	G	Thread G1/2 ¹⁾ , IP66/68 NEMA Type 4X/6P
	I	Thread NPT3/4, IP66/68 NEMA Type 4X/6P
	Y	Special version: Thread NPT1/2, IP66/68 NEMA Type 4X/6P

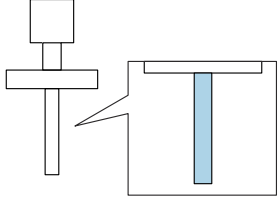
1) Reduction M20x1.5 to G1/2 enclosed

Position 8 (Application)		
Selected option		Description
FTL51B	A ¹⁾	Process max 150°C/302°F, max 64bar
	B ¹⁾	Process max 150°C/302°F, max 100bar
	C ²⁾	Process max 80°C/176°F, max 25bar

1) Only in connection with Position 3, 4 = A1-A4, A7, A8
 2) Only in connection with Position 3, 4 = GA

Position 10 (Type of Probe)		
Selected option	Description	
FTL51B	1	Compact version
	2	Extension tube
	3	Short tube version

 Shown in the temperature tables exemplary as follows:



Position 11, 12 (Sensor Length, Material)		
Selected option	Description	
FTL51B	AC	Compact version; AlloyC22
	AJ	Compact version; 316L
	BC	Short tube version; AlloyC22
	BJ	Short tube version; 316L
	CC mm L, Ra<3,2um/126uin; AlloyC22
	CJ mm L, Ra<3,2um/126uin; 316L
	DC in L, Ra<3,2um/126uin; AlloyC22
	DJ in L, Ra<3,2um/126uin; 316L

Optional specifications

ID Jx, Kx (Test, Certificate, Declaration)		
Selected option	Description	
FTL51B	JL ¹⁾	Ambient temperature -50°C/-58°F
	JN ¹⁾	Ambient temperature -52°C/-62°F
	JT ¹⁾	Ambient temperature -60°C/-76°F

- 1) Only in connection with Position 3, 4 = A2-A4, A7, A8, Position 5 = A

ID Mx (Sensor Design)		
Selected option		Description
FTL51B	MR	Temperature separator
	MS	Pressure tight feed through (Second line of defence)

ID Nx, Ox (Accessory Mounted)		
Selected option		Description
FTL51B	NF ¹⁾	Bluetooth VU121, Labeling: VA13-02
	NG ²⁾	Prepared for Heartbeat Verification + Monitoring + Bluetooth VU121, Labeling: VA13-01

- 1) Only in connection with Position 3, 4 = A1-A4, A7, Position 6 = B, M, Position 5 = A
 2) Only in connection with Position 3, 4 = A8, Position 6 = B, M, Position 5 = A

ID Px, Rx (Accessory Enclosed)		
Selected option		Description
FTL51B	PA ¹⁾	Weather protection cover, 316L
	PB ²⁾	Weather protection cover, plastic
	R6 ³⁾	Test magnet

- 1) Only in connection with Position 6 = M
 2) Only in connection with Position 6 = B, C
 3) Only in connection with Position 3, 4 = A2-A4, A8

Safety instructions: General


- Devices suitable for zone separation (marked Ga/Gb or Da/Db) are always suitable for installation in the less critical zone (Gb or Db). Due to space limitations the corresponding marking maybe not indicated on the nameplate.
- Staff must meet the following conditions for mounting, electrical installation, commissioning and maintenance of the device:
 - Be suitably qualified for their role and the tasks they perform
 - Be trained in explosion protection
 - Be familiar with national regulations
- Install the device according to the manufacturer's instructions and national regulations.
- Do not operate the device outside the specified electrical, thermal and mechanical parameters.
- Only use the device in media to which the wetted materials have sufficient durability.

- Avoid electrostatic charging:
 - Of plastic surfaces (e.g. enclosure, sensor element, special varnishing, attached additional plates, ..)
 - Of isolated capacities (e.g. isolated metallic plates)
- Refer to the temperature tables for the relationship between the permitted ambient temperature for the sensor and/or transmitter, depending on the range of application and the temperature class.
- Modifications to the device can affect the explosion protection and must be carried out by staff authorized to perform such work by Endress+Hauser.

Safety instructions:

Special conditions

Permitted ambient temperature range at the electronics enclosure:
 $-40\text{ °C} \leq T_a \leq +70\text{ °C}$

- Limitations of the maximum ambient temperature at the electronics enclosure may be required dependent on device configuration, process temperatures and temperature classification.
- Details of limitations: →  13, "Temperature tables".
- To avoid electrostatic charging: Do not rub surfaces with a dry cloth.
- In the event of additional or alternative special varnishing on the enclosure or other metal parts or for adhesive plates:
 - Observe the danger of electrostatic charging and discharge.
 - Do not install in the vicinity of processes ($\leq 0.5\text{ m}$) generating strong electrostatic charges.

Basic specification, Position 6 = B, M

- Covers with glass window only permitted for the following ambient temperatures:
 $-50\text{ °C} \leq T_a \leq +70\text{ °C}$
- Avoid sparks caused by impact and friction.

Basic specification, Position 6 = C

Covers with glass window not permitted.

Optional specification, ID Px, Rx = PA

Connect the weather protection cover to the local potential equalization.

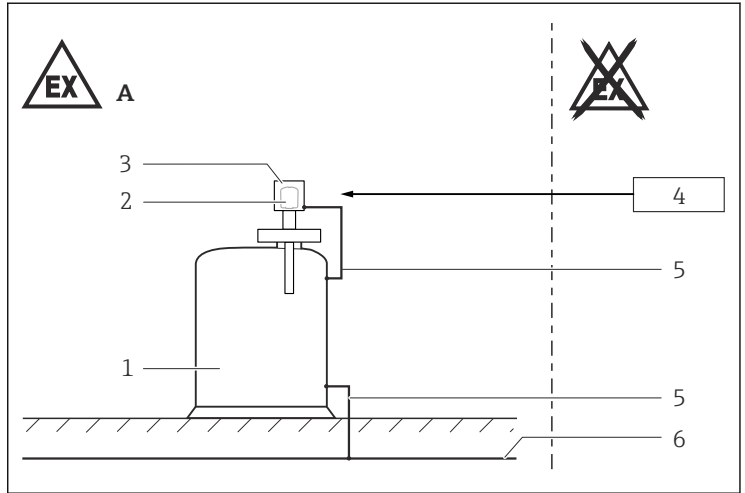
Optional specification, ID Px, Rx = PB

Avoid electrostatic charging of the weather protection cover (e.g. friction, cleaning, maintenance, strong medium flow).

Optional specification, ID Px, Rx = R6

Suitable for use in explosion hazardous areas.

Safety instructions: Installation



A0025536

1

- A Zone 1
- 1 Tank; Zone 0, Zone 1
- 2 Electronic insert
- 3 Enclosure
- 4 Supply unit
- 5 Potential equalization line
- 6 Local potential equalization

- Before operation:
 - Screw in the cover all the way.
 - Tighten the securing clamp on the cover.
- In potentially explosive atmospheres:
 - Do not disconnect the electrical connection of the power supply circuit when energized.
 - Do not open the connection compartment cover and the electronics compartment cover.
- Continuous service temperature of the connecting cable / cable gland / cable entry:
 - Basic specification, Position 3, 4 = GA, A1, A7, A8: $\geq T_a + 20\text{ K}$
 - Basic specification, Position 3, 4 = A2: $\geq T_a + 35\text{ K}$
 - Basic specification, Position 3, 4 = A3, A4: $\geq T_a + 40\text{ K}$
 - Basic specification, Position 3, 4 = A2, A3, A4 in connection with Optional specification, ID Mx = MR, MS: $\geq T_a + 20\text{ K}$
- Perform the following to achieve the degree of protection IP66/68:
 - Screw the cover tight.
 - Mount the cable entry correctly.
- Observe the maximum process conditions according to the manufacturer's Operating Instructions.

- At high medium temperatures, note flange pressure load capacity as a factor of temperature.
- Install the device to exclude any mechanical damage or friction during the application. Pay particular attention to flow conditions and tank fittings.
- Support extension tube of the device if a dynamic load is expected.
- Only use certified cable entries suitable for the application. Observe national regulations and standards. Accordingly, the connection terminal does not include any ignition sources.
- Seal unused entry glands with approved sealing plugs that correspond to the type of protection. The plastic transport sealing plug does not meet this requirement and must therefore be replaced during installation.
- The built-in metallic sealing plug is examined and approved for explosion protection type Ex d with the device.
- When operating the transmitter enclosure at an ambient temperature under $-20\text{ }^{\circ}\text{C}$, use appropriate cables and cable entries permitted for this application.
- When connecting through a conduit entry approved for this purpose, mount the associated sealing unit directly at the enclosure.
- The device can be equipped with the Bluetooth® module: refer to the Operating Instructions and specifications in the "Bluetooth® module" chapter.
- Flameproof equipment with G threaded entry holes is not intended for new installations but only for replacement of equipment in existing installations. Application of this equipment shall comply with the local installation requirements.

Accessory high pressure sliding sleeve

The high pressure sliding sleeve can be used for a continuous setting of the switch point and is suited for zone separation if mounted properly (see Operating Instructions).

Potential equalization

Integrate the device into the local potential equalization.

Optional specification, ID Px, Rx = PA

Connect the weather protection cover to the local potential equalization.

Bluetooth® module

Basic specification, Position 3, 4 = A7

If the device is equipped with the Bluetooth® module, no battery is required or allowed.

Basic specification, Position 3, 4 = A8

- If the device is equipped with the Bluetooth® module, a battery is required.
- Removal or replacement of the battery is only permitted in non-hazardous areas.
- Observe the information in the Safety Instructions (XA) included with the Bluetooth® module.

Safety instructions: Ex d joints

- If required or if in doubt: ask manufacturer for specifications.
- Flameproof joints are not intended to be repaired.

Safety instructions: Zone 0

- In the event of potentially explosive vapor/air mixtures, only operate the device under atmospheric conditions.
 - Temperature: -20 to +60 °C
 - Pressure: 80 to 110 kPa (0.8 to 1.1 bar)
 - Air with normal oxygen content, usually 21 % (V/V)
- If no potentially explosive mixtures are present, or if additional protective measures have been taken, the device may also be operated under non-atmospheric conditions in accordance with the manufacturer's specifications.
- Only use the device in media to which the wetted materials have sufficient durability (e.g. process connection seal).
- When using under non-atmospheric pressures and non-atmospheric temperatures: The sensor part of the device approved for Zone 0 does not cause any ignition hazards.

Temperature tables



Optional specification, ID Jx, Kx = JL

Lower limit of the ambient temperature for explosion protection changes to -50 °C.

Optional specification, ID Jx, Kx = JN

Lower limit of the ambient temperature for explosion protection changes to -52 °C.

Optional specification, ID Jx, Kx = JT

Lower limit of the ambient temperature for explosion protection changes to -60 °C.

General notes



Optional specification, ID Px, Rx = PB

When using the weather protection cover: Reduce the values T_a of P1, P2, P3 by 16 K.

Description notes

i Unless otherwise indicated, the positions always refer to the basic specification.

1st line: Position 6 = A, B, ...

1st column: Position 8 = A, B, ...

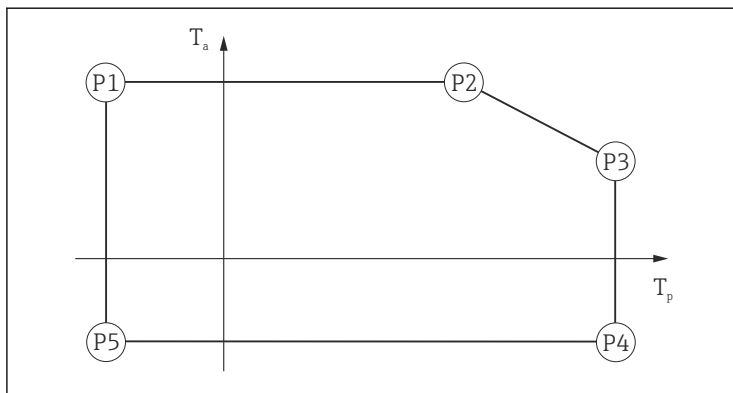
2nd column: With or without Optional Specification, ID Mx = MR, ...

3rd column: Maximum load current

4th column: Temperature classes T6 (85 °C) to T1 (450 °C)

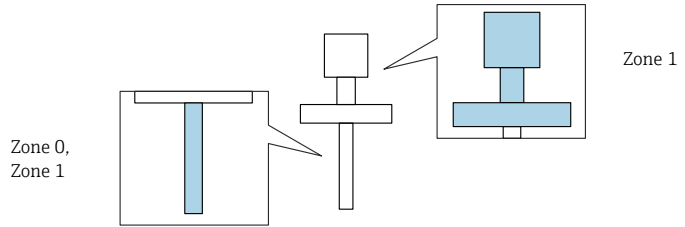
Column P1 to P5: Position (temperature value) on the axes of the derating

- T_a : Ambient temperature in °C
- T_p : Process temperature in °C




A0033052


Zone 0, Zone 1



Position 3, 4 = A1


 = B, C													
A, B				P1		P2		P3		P4		P5	
				T _p	T _a	T _p	T _a	T _p	T _a	T _p	T _a	T _p	T _a
	MR, MS	180 mA											
			T6	-50	70	70	70	75	55	75	-40 -50 ¹⁾	-50	-40 -50 ¹⁾
			T5	-50	70	70	70	90	55	90	-52 ²⁾	-50	-52 ²⁾
			T4	-50	70	70	70	125	40	125	-60 ³⁾	-50	-60 ³⁾
			T3...T1	-50	70	70	70	150	30	150		-50	
	MR, MS	180 mA											
			T6	-50	70	70	70	75	60	75	-40 -50 ¹⁾	-50	-40 -50 ¹⁾
			T5	-50	70	70	70	90	65	90	-52 ²⁾	-50	-52 ²⁾
			T4	-50	70	70	70	125	65	125	-60 ³⁾	-50	-60 ³⁾
			T3...T1	-50	70	70	70	150	65	150		-50	
	MR, MS	350 mA											
			T4	-50	70	70	70	125	55	125	-40 -50 ¹⁾	-50	-40 -50 ¹⁾
			T3...T1	-50	70	70	70	150	55 50 ⁴⁾	150	-52 ²⁾ -60 ³⁾	-50	-52 ²⁾ -60 ³⁾

- 1) Only in connection with Optional specification, ID Jx, Kx = JL
- 2) Only in connection with Optional specification, ID Jx, Kx = JN
- 3) Only in connection with Optional specification, ID Jx, Kx = JT
- 4) If insulated


													
A, B				P1		P2		P3		P4		P5	
				T _p	T _a	T _p	T _a	T _p	T _a	T _p	T _a	T _p	T _a
	MR, MS	180 mA											
			T6	-50	70	70	70	75	59	75	-40 -50 ¹⁾ -52 ²⁾ -60 ³⁾	-50	-40
			T5	-50	70	70	70	90	70	90		-50	-50 ¹⁾
			T4	-50	70	70	70	125	70	125		-50	-60 ³⁾
			T3...T1	-50	70	70	70	150	69	150		-50	
	<i>MR, MS</i>	180 mA											
			T6	-50	70	70	70	75	62	75	-40 -50 ¹⁾ -52 ²⁾ -60 ³⁾	-50	-40
			T5	-50	70	70	70	90	70	90		-50	-50 ¹⁾
			T4	-50	70	70	70	125	70	125		-50	-60 ³⁾
			T3...T1	-50	70	70	70	150	70	150		-50	
	<i>MR, MS</i>	350 mA											
			T4	-50	70	70	70	125	55	125	-40 -50 ¹⁾ -52 ²⁾ -60 ³⁾	-50	-40
			T3...T1	-50	70	70	70	150	54	150		-50	-50 ¹⁾
												-50	-52 ²⁾

- 1) Only in connection with Optional specification, ID Jx, Kx = JL
- 2) Only in connection with Optional specification, ID Jx, Kx = JN
- 3) Only in connection with Optional specification, ID Jx, Kx = JT

Position 3, 4 = A2


														
A, B				P1		P2		P3		P4		P5		
				T _p	T _a	T _p	T _a	T _p	T _a	T _p	T _a	T _p	T _a	
	MR, MS	350 mA												
			T6	-50	70	70	70	75	70	75	-40	-50	-40	
			T5	-50	70	70	70	90	70	90	-50 ¹⁾	-50	-50 ¹⁾	
			T4	-50	70	70	70	125	55	125	-52 ²⁾	-50	-52 ²⁾	
			T3...T1	-50	70	70	70	150	45	150	-60 ³⁾	-50	-60 ³⁾	
	MR, MS	350 mA												
			T6	-50	70	70	70	75	70	75	-40	-50	-40	
			T5	-50	70	70	70	90	70	90	-50 ¹⁾	-50	-50 ¹⁾	
			T4	-50	70	70	70	125	70	125	-52 ²⁾	-50	-52 ²⁾	
			T3...T1	-50	70	70	70	150	70	150	-60 ³⁾	-50	-60 ³⁾	

- 1) Only in connection with Optional specification, ID Jx, Kx = JL
- 2) Only in connection with Optional specification, ID Jx, Kx = JN
- 3) Only in connection with Optional specification, ID Jx, Kx = JT


 = M													
A, B				P1		P2		P3		P4		P5	
				T _p	T _a	T _p	T _a	T _p	T _a	T _p	T _a	T _p	T _a
	MR, MS	350 mA											
			T6	-50	70	70	70	75	70	75	-40 -50 ¹⁾ -52 ²⁾ -60 ³⁾	-50	-40
			T5	-50	70	70	70	90	70	90		-50	-50 ¹⁾
			T4	-50	70	70	70	125	66	125		-50	-52 ²⁾
			T3...T1	-50	70	70	70	150	54	150		-50	-60 ³⁾
	MR, MS	350 mA											
			T6	-50	70	70	70	75	70	75	-40 -50 ¹⁾ -52 ²⁾ -60 ³⁾	-50	-40
			T5	-50	70	70	70	90	70	90		-50	-50 ¹⁾
			T4	-50	70	70	70	125	70	125		-50	-52 ²⁾
			T3...T1	-50	70	70	70	150	70	150		-50	-60 ³⁾

- 1) Only in connection with Optional specification, ID Jx, Kx = JL
 2) Only in connection with Optional specification, ID Jx, Kx = JN
 3) Only in connection with Optional specification, ID Jx, Kx = JT

Position 3, 4 = A3, A4

													
A, B				P1		P2		P3		P4		P5	
				T _p	T _a	T _p	T _a	T _p	T _a	T _p	T _a	T _p	T _a
	MR, MS	2 A											
			T6	-50	52	52	52	75	40	75	-40	-50	-40
			T5	-50	67	67	67	90	55	90	-50 ¹⁾	-50	-50 ¹⁾
			T4	-50	70	70	70	125	47	125	-52 ²⁾	-50	-52 ²⁾
			T3...T1	-50	70	70	70	150	38	150	-60 ³⁾	-50	-60 ³⁾
	MR, MS	2 A											
			T6	-50	52	52	52	75	50	75	-40	-50	-40
			T5	-50	67	67	67	90	65	90	-50 ¹⁾	-50	-50 ¹⁾
			T4	-50	70	70	70	125	67	125	-52 ²⁾	-50	-52 ²⁾
			T3...T1	-50	70	70	70	150	65	150	-60 ³⁾	-50	-60 ³⁾
	MR, MS	4 A											
			T6	-50	43	43	43	75	40	75	-40	-50	-40
			T5	-50	58	58	58	90	55	90	-50 ¹⁾	-50	-50 ¹⁾
			T4	-50	63	63	63	125	58	125	-52 ²⁾	-50	-52 ²⁾
			T3...T1	-50	63	63	63	150	56	150	-60 ³⁾	-50	-60 ³⁾

- 1) Only in connection with Optional specification, ID Jx, Kx = JL
- 2) Only in connection with Optional specification, ID Jx, Kx = JN
- 3) Only in connection with Optional specification, ID Jx, Kx = JT




= M

A, B				P1		P2		P3		P4		P5	
				T _p	T _a	T _p	T _a	T _p	T _a	T _p	T _a	T _p	T _a
	MR, MS	2 A											
			T6	-50	55	55	55	75	50	75	-40	-50	-40
			T5	-50	70	70	70	90	65	90	-50 ¹⁾	-50	-50 ¹⁾
			T4	-50	70	70	70	125	65	125	-52 ²⁾	-50	-52 ²⁾
			T3...T1	-50	70	70	70	150	65	150	-60 ³⁾	-50	-60 ³⁾
	MR, MS	2 A											
			T6	-50	55	55	55	75	54	75	-40	-50	-40
			T5	-50	70	70	70	90	68	90	-50 ¹⁾	-50	-50 ¹⁾
			T4	-50	70	70	70	125	70	125	-52 ²⁾	-50	-52 ²⁾
			T3...T1	-50	70	70	70	150	70	150	-60 ³⁾	-50	-60 ³⁾
	MR, MS	4 A											
			T6	-50	45	45	45	75	44	75	-40	-50	-40
			T5	-50	60	60	60	90	59	90	-50 ¹⁾	-50	-50 ¹⁾
			T4	-50	67	67	67	125	63	125	-52 ²⁾	-50	-52 ²⁾
			T3...T1	-50	67	67	67	150	62	150	-60 ³⁾	-50	-60 ³⁾


- 1) Only in connection with Optional specification, ID Jx, Kx = JL
- 2) Only in connection with Optional specification, ID Jx, Kx = JN
- 3) Only in connection with Optional specification, ID Jx, Kx = JT

Position 3, 4 = A7, A8

													
A, B				P1		P2		P3		P4		P5	
				T _p	T _a	T _p	T _a	T _p	T _a	T _p	T _a	T _p	T _a
			T6	-50	70	70	70	75	70	75	-40	-50	-40
			T5	-50	70	70	70	90	70	90	-50 ¹⁾	-50	-50 ¹⁾
			T4	-50	70	70	70	125	70	125	-52 ²⁾	-50	-52 ²⁾
			T3...T1	-50	70	70	70	150	70	150	-60 ³⁾	-50	-60 ³⁾

- 1) Only in connection with Optional specification, ID Jx, Kx = JL
- 2) Only in connection with Optional specification, ID Jx, Kx = JN
- 3) Only in connection with Optional specification, ID Jx, Kx = JT

Position 3, 4 = GA

													
C				P1		P2		P3		P4		P5	
				T _p	T _a	T _p	T _a	T _p	T _a	T _p	T _a	T _p	T _a
			T6...T1	-50	70	70	70	75	70	75	-40	-50	-40

Connection data

Optional specification, ID Nx, Ox = NF, NG

When using the Bluetooth® module: No changes to the connection values.

<i>Basic specification, Position 3, 4</i>	Power supply circuit	Output
A1	U = 19 to 253 V _{AC} , 50/60 Hz; P _{max} < 2 VA	I _{max} = 180 mA I _{max} = 350 mA ¹⁾
A2	U = 10 to 55 V _{DC} ; P _{max} < 0.5 W, P _{max} < 1.2 W ²⁾	I _{max} = 350 mA
A3	U = 9 to 20 V _{DC} ; P _{max} < 1 W, P _{max} < 1.7 W ²⁾	2 potential free change-over contacts; 2 A Ex d 4 A Ex d ³⁾
A4	U = 19 to 253 V _{AC} , 50/60 Hz or 19 to 55 V _{DC} ; P _{max} < 25 VA or < 1.3 W, P _{max} < 31 VA or < 2 W ²⁾	
A7	U = 9.5 to 12.5 V _{DC} ; PFM; I _{max} = 12 mA Connection only to power supply unit FTL325P or FTL375P from Endress+Hauser.	
A8	U = 4 to 8.2 V _{DC}	NAMUR; I _{max} = 3.8 mA
GA	U = 21 to 26 V _{DC} ; I _{max} = 16 mA Connection only to power supply unit FML621 from Endress+Hauser.	

1) Only in connection with Position 8 = A, B, Optional Specification ID Mx = MR, MS

2) Only in connection with Position 5 = B

3) Only in connection with Optional Specification ID Mx = MR, MS



71540181

www.addresses.endress.com
