

# Safety Instructions

## Proline Promass 200

EAC: Zone 1, Zone 0/1, Zone 21  
Ex d version





# Proline Promass 200

## Table of contents

About this document .....	4
Associated documentation .....	4
Manufacturer's certificates .....	4
Manufacturer address .....	5
Extended order code .....	5
Safety instructions: General .....	8
Safety instructions: Installation .....	9
Safety instructions: Zone 0 .....	10
Safety instructions: Zone 21 .....	10
Temperature tables .....	10
Explosion hazards arising from gas and dust .....	20
Connection data: Signal circuits .....	21

## About this document



The document number of these Safety Instructions (XA) must match the information on the nameplate.

## Associated documentation

For an overview of the scope of the associated Technical Documentation, refer to the following:

- *Device Viewer* ([www.endress.com/deviceviewer](http://www.endress.com/deviceviewer)): Enter serial number from nameplate.
- *Endress+Hauser Operations app*: Enter serial number from nameplate or scan matrix code on nameplate.

To commission the device, please observe the Operating Instructions pertaining to the device:

Measuring device	Documentation code		
	HART	FOUNDATION Fieldbus	PROFIBUS PA
8A2B**-...	BA01821D	BA01827D	BA01828D
8E2B**-...	BA01027D	BA01314D	BA01133D
8E2C**-...	BA01638D	BA01637D	BA01639D
8F2B**-...	BA01112D	BA01315D	BA01113D

## Additional documentation

Contents	Document type	Documentation code
Remote display FHX50	Special documentation	SD01007F
	Safety Instructions <ul style="list-style-type: none"> <li>▪ 0Ex ia IIC T6 Ga X</li> <li>▪ Ex ia IIIC T100° C Db</li> <li>▪ Ex ia IIIC T105° C Db</li> </ul>	XA01601F
Explosion Protection	Brochure	CP00021Z/11

Please note the documentation associated with the device.

## Manufacturer's certificates

Measuring instruments meet the fundamental health and safety requirements for the design and construction of devices and protective systems intended for use in potentially explosive atmospheres in accordance with TR CU 012/2011.

## Certification body

LLP "T-Standard"

**Certificate number**

EA9C KZ 7500525.01.01.01551

Affixing the certificate number certifies conformity with the standards under (depending on the device version).

- GOCT 31610.0-2019 (IEC 60079-0:2017)
- GOCT IEC 60079-1-2013
- GOCT 31610.11-2014 (IEC 60079-11:2011)
- GOCT 31610.26-2016 (IEC 60079-26:2014)
- GOCT IEC 60079-31-2013


**Manufacturer address**

Endress+Hauser Flowtec AG  
 Kägenstrasse 7  
 4153 Reinach BL  
 Switzerland

**Extended order code**

The extended order code is indicated on the nameplate, which is affixed to the device in such a way that it is clearly visible. Additional information about the nameplate is provided in the associated Operating Instructions.

**Structure of the extended order code**



\* = Placeholder  
 At this position, an option (number or letter) selected from the specification is displayed instead of the placeholders.

*Device type*

The device and the device design is defined in the "Device type" section (Product root).

*Basic specifications*

The features that are absolutely essential for the device (mandatory features) are specified in the basic specifications. The number of positions depends on the number of features available. The selected option of a feature can consist of several positions.

*Optional specifications*

The optional specifications describe additional features for the device (optional features). The number of positions depends on the number of features available. The features have a 2-digit structure to aid

identification (e.g. JA). The first digit (ID) stands for the feature group and consists of a number or a letter (e.g. J = Test, Certificate). The second digit constitutes the value that stands for the feature within the group (e.g. A = 3.1 material (wetted parts), inspection certificate).

More detailed information about the device is provided in the following tables. These tables describe the individual positions and IDs in the extended order code which are relevant to hazardous locations.

### Device type

Position	Order code for	Option selected	Description
1	Instrument family	8	Coriolis flowmeter
2	Sensor	A, E, F <sup>1)</sup>	Sensor type
3	Transmitter	2	Transmitter type: 2-wire, compact version
4	Generation index	B, C	Platform generation
5, 6	Nominal diameter	Examples: 02, 04, 40, 50, 1H, 3E <sup>2) 3)</sup>	Nominal diameter of sensor

- 1) For replacement transmitter only: X
- 2) For the exact specification of the nominal diameter, see nameplate
- 3) For replacement transmitter only: XX

## Basic specifications

Position	Order code for	Option selected	Device type		Description	
			Position 2 Sensor	Position 5, 6 Nominal diameter	Transmitter	Sensor
1, 2	Approval	IC, GC	A, E, F	01, 02, 04, 08, 15, 25, 40, 50	Ga/Gb Ex db  ia  IIC T6...T1 <sup>1)</sup>	Ga/Gb Ex ia IIC T6...T1 <sup>1)</sup>
			F	80	Ga/Gb Ex db  ia  IIB T6...T1	Ga/Gb Ex ia IIB T6...T1
		IK, GK	A, E, F	01, 02, 04, 08, 15, 25, 40, 50	1Ex db ia  IIC T6...T1 Gb	1Ex ia IIC T6...T1 Gb
			F	80	1Ex db  ia  IIB T6...T1 Gb	1Ex ia IIB T6...T1 Gb
		I5, G5	A, E, F	01, 02, 04, 08, 15, 25, 40, 50	Ga/Gb Ex db  ia  IIC T6...T1 <sup>1)</sup> Ex tb IIIC T** °C Db <sup>2)</sup>	Ga/Gb Ex ia IIC T6...T1 <sup>1)</sup>
			F	80	Ga/Gb Ex db  ia  IIB T6...T1 Ex tb IIIC T** °C Db <sup>2)</sup>	Ga/Gb Ex ia IIB T6...T1

1) Sensor Promass A DN 1 is only suitable for equipment protection level EPL Gb

2) Marking for versions without remote display FHX50 or pressure tapping

Position	Order code for	Selected option	Description
3	Output; Input	A	4-20mA HART
		B	4-20mA HART, Pulse/frequency/switch output
		C	4-20mA HART + 4-20mA analog
		E	FOUNDATION Fieldbus, Pulse/frequency/switch output
		G	PROFIBUS PA, Pulse/frequency/switch output

Position	Order code for	Selected option	Description
4	Display; Operation	A	W/o; via communication
		C	SD02 4-line; push buttons + data backup function
		E	SD03 4-line, illum.; touch control + data backup function
		L	Prepared for display FHX50 + M12 connection <sup>1)</sup>
		M	Prepared for display FHX50 + custom connection <sup>1)</sup>
17, 18 <sup>2)</sup>	Device Model	A1	1

1) FHX50 is separately approved.

2) Order code for "Device model" only for measuring devices with product code 8A2B, 8E2C

### Optional specifications

No options specific to hazardous locations are available.

### Safety instructions: General

- Staff must meet the following conditions for mounting, electrical installation, commissioning and maintenance of the device:
  - Be suitably qualified for their role and the tasks they perform
  - Be trained in explosion protection
  - Be familiar with national regulations or guidelines (e.g. GOCT IEC 60079-14-2013)
- Install the device according to the manufacturer's instructions and national regulations.
- Do not operate the device outside the specified electrical, thermal and mechanical parameters.
- Only use the device in media to which the wetted materials have sufficient durability.
- Refer to the temperature tables for the relationship between the permitted ambient temperature for the sensor and/or transmitter, depending on the range of application, and the temperature classes.
- Alterations to the device can affect the explosion protection and must be carried out by staff authorized to perform such work by Endress+Hauser.



- When using in hybrid mixtures (gas and dust occurring simultaneously), observe additional measures for explosion protection.
- In devices with damaged Ex d threads:
  - Use in hazardous areas is not permitted.
  - Repair of Ex d threads is not permitted.
- Observe all the technical data of the device (see nameplate).

## **Safety instructions: Installation**

- Continuous service temperature of the connecting cable:  
–40 to +80 °C; in accordance with the range of service temperature taking into account additional influences of the process conditions ( $T_{a,min}$  and  $T_{a,max} + 20$  K).
- Only use certified cable glands suitable for the application. Observe selection criteria as per IEC 60079-14-2013.  
Accordingly, the connection terminal does not include any ignition sources.
- When the measuring device is connected, attention must be paid to the type of protection at the transmitter.
- In potentially explosive atmospheres:
  - Do not disconnect the electrical connection of the power supply circuit when energized.
  - Do not open the connection compartment cover when the device is energized.
- When connecting through a conduit entry approved for this purpose, mount the associated sealing unit directly at the enclosure.
- Seal unused entry glands with approved sealing plugs that correspond to the type of protection. The plastic transport sealing plug does not meet this requirement and must therefore be replaced during installation.
- Only use certified sealing plugs. The metal sealing plugs supplied meet this requirement.

## **Intrinsic safety**

- The device can be connected to the Endress+Hauser FXA291 service tool: refer to the Operating Instructions.
- The device can be connected to the remote display FHX50 with explosion protection; refer to the Special Documentation and Ex documentation.

## **Potential equalization**

- Integrate the device into the potential equalization .
- If the ground connection has been established via the pipe as specified, it is also possible to integrate the sensor into the potential equalization system via the pipe.


**Safety instructions:**  
**Zone 0**

*Basic specification, position 1, 2 (Approval) = GC, IC, G5, I5*

The intrinsically safe version of the device can be used in the measuring pipe in Zone 0.

In Zone 0/1 not permitted: Promass A DN1 (order code for "Diameter", Option 01)

**Safety instructions:**  
**Zone 21**

- To ensure dust-tightness, securely seal all housing openings, cable entries and sealing plugs.
- Only open all housing briefly, ensuring that no dust or moisture enters the housing.
- Only use certified cable entries. The metal cable entries, extensions and sealing plugs supplied meet this requirement.
- If the transmitter is connected to the remote display FHX50, the circuit has type of protection Ex ia IIIC.  
Connection values →  21

**Temperature tables**

**Ambient temperature**

*Minimum ambient temperature*

*Basic specification, position 3 (Output; input) = A, B, C, E, G:*

$$T_{a, \min} = -40 \text{ }^{\circ}\text{C}$$

Maximum ambient temperature:

$T_{a, \max} = +60 \text{ }^{\circ}\text{C}$  depending on the medium temperature and temperature class

**Medium temperature**

*Minimum medium temperature*

- Promass 8F2B\*\*-, Promass 8A2B\*\*-...  
 $T_{m, \min} = -50 \text{ }^{\circ}\text{C}$
- Promass 8E2B\*\*-, Promass 8E2C\*\*-...:  
 $T_{m, \min} = -40 \text{ }^{\circ}\text{C}$

*Maximum medium temperature*

$T_{m, \max}$  for T6...T1 depending on the maximum ambient temperature  $T_{a, \max}$ .

**Compact version**

*Basic specification, position 3 (output; input) = A*

*Basic specification, position 1, 2 (Approval) = IC, IK, I5, GC, GK, G5*

*Promass A*

DN	T <sub>m, max range</sub> [°C]	T <sub>a, max</sub> [°C]	T <sub>m, max</sub> [°C]					
			T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
1 to 4	205	40	50	95	130	170	205	205
		60	-	95	130	170	205	205

*Promass E (Promass 8E2B\*\*-...)*

DN	T <sub>m, max range</sub> [°C]	T <sub>a, max</sub> [°C]	T <sub>m, max</sub> [°C]					
			T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
8 to 50	140	50	50	95	130	140	140	140
		60	-	95	130	140	140	140

*Promass E (Promass 8E2C\*\*-...)*

DN	T <sub>m, max range</sub> <sup>1)</sup> [°C]	T <sub>a, max</sub> [°C]	T <sub>m, max</sub> [°C]					
			T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
8 to 50	150	40	50	95	130	150	150	150
		60	-	95	130	150	150	150
	205	40	50	95	130	170	205	205
		60	-	95	130	170	205	205

1) Maximum temperature range, see nameplate

*Promass F*

DN	T <sub>m, max range</sub> <sup>1)</sup> [°C]	T <sub>a, max</sub> [°C]	T <sub>m, max</sub> [°C]					
			T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
8 to 50	150	40	50	95	130	150	150	150
		60	-	95	130	150	150	150
	205	40	50	95	130	170	205	205
		60	-	95	130	170	205	205
80	150	40	50	85	110	150	150	150
		60	-	85	110	150	150	150

DN	T <sub>m, max range</sub> <sup>1)</sup> [°C]	T <sub>a, max</sub> [°C]	T <sub>m, max</sub> [°C]					
			T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
	205	40	50	85	110	170	205	205
		60	-	85	110	170	205	205

1) Maximum temperature range, see nameplate

Basic specification, position 3 (output; input) = B

Basic specification, position 1, 2 (Approval) = IC, IK, I5, GC, GK, G5

### Promass A

DN	T <sub>m, max range</sub> [°C]	T <sub>a, max</sub> [°C]	T <sub>m, max</sub> [°C]					
			T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
1 to 4	205	40	50	95	130	170	205	205
		50 <sup>1)</sup>	-	95	130	170	205	205
		55	-	-	130	170	205	205
		60	-	-	130	170	205	200

1) T<sub>a, max</sub> = 55 °C for Impulse/Frequency/Switch output input P<sub>1</sub> ≤ 0,85 W

### Promass E (Promass 8E2B\*\*...)

DN	T <sub>m, max range</sub> [°C]	T <sub>a, max</sub> [°C]	T <sub>m, max</sub> [°C]					
			T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
8 to 50	150	40	50	95	130	140	140	140
		50 <sup>1)</sup>	-	95	130	140	140	140
		60	-	-	130	140	140	140

1) T<sub>a, max</sub> = 55 °C for Impulse/Frequency/Switch output input P<sub>1</sub> ≤ 0,85 W

### Promass E (Promass 8E2C\*\*...)

DN	T <sub>m, max range</sub> <sup>1)</sup> [°C]	T <sub>a, max</sub> [°C]	T <sub>m, max</sub> [°C]					
			T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
8 to 50	150	40	50	95	130	150	150	150
		50 <sup>2)</sup>	-	95	130	150	150	150
		55	-	-	130	150	150	150
		60	-	-	130	150	150	150
	205	40	50	95	130	170	205	205
		50	-	95	130	170	205	205
		55	-	-	130	170	205	205
		60	-	-	130	170	205	200

1) Maximum temperature range, see nameplate

2) T<sub>a, max</sub> = 55 °C for Impulse/Frequency/Switch output input P<sub>1</sub> ≤ 0,85 W

## Promass F

DN	T <sub>m, max range</sub> <sup>1)</sup> [°C]	T <sub>a, max</sub> [°C]	T <sub>m, max</sub> [°C]					
			T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
8 to 50	150	40	50	95	130	150	150	150
		50 <sup>2)</sup>	–	95	130	150	150	150
		55	–	–	130	150	150	150
		60	–	–	130	150	150	150
	205	40	50	95	130	170	205	205
		50 <sup>2)</sup>	–	95	130	170	205	205
		55	–	–	130	170	205	205
		60	–	–	130	170	205	200
80	150	40	50	85	110	150	150	150
		50 <sup>2)</sup>	–	85	110	150	150	150
		55	–	–	110	150	150	150
		60	–	–	110	150	150	150
	205	40	50	85	110	170	205	205
		50 <sup>2)</sup>	–	85	110	170	205	205
		55	–	–	110	170	205	205
		60	–	–	110	170	205	200

1) Maximum temperature range, see nameplate

2) T<sub>a, max</sub> = 55 °C for Impulse/Frequency/Switch output input P<sub>i</sub> ≤ 0,85 W

Basic specification, position 3 (output; input) = C

Basic specification, position 1, 2 (Approval) = IC, IK, I5, GC, GK, G5

Promass A

DN	T <sub>m, max range</sub> [°C]	T <sub>a, max</sub> [°C]	T <sub>m, max</sub> [°C]					
			T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
1 to 4	205	40	50	95	130	170	205	205
		55	-	95	130	170	205	205
		60	-	-	130	170	205	200

Promass E (Promass 8E2B\*\*-... )

DN	T <sub>m, max range</sub> [°C]	T <sub>a, max</sub> [°C]	T <sub>m, max</sub> [°C]					
			T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
8 to 50	150	40	50	95	130	140	140	140
		55	-	95	130	140	140	140
		60	-	-	130	140	140	140

Promass E (Promass 8E2C\*\*-... )

DN	T <sub>m, max range</sub> <sup>1)</sup> [°C]	T <sub>a, max</sub> [°C]	T <sub>m, max</sub> [°C]					
			T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
8 to 50	150	40	50	95	130	150	150	150
		55	-	95	130	150	150	150
		60	-	-	130	150	150	150
	205	40	50	95	130	170	205	205
		55	-	95	130	170	205	205
		60	-	-	130	170	205	200

- 1) Maximum temperature range, see nameplate

*Promass F*

DN	T <sub>m, max range</sub> <sup>1)</sup> [°C]	T <sub>a, max</sub> [°C]	T <sub>m, max</sub> [°C]					
			T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
8 to 50	150	40	50	95	130	150	150	150
		55	–	95	130	150	150	150
		60	–	–	130	150	150	150
	205	40	50	95	130	170	205	205
		55	–	95	130	170	205	205
		60	–	–	130	170	205	200
80	150	40	50	85	110	150	150	150
		55	–	85	110	150	150	150
		60	–	–	110	150	150	150
	205	40	50	85	110	170	205	205
		55	–	–	110	170	205	205
		60	–	–	110	170	205	200

1) Maximum temperature range, see nameplate



Basic specification, position 3 (output; input) = E

Basic specification, position 1, 2 (Approval) = IC, IK, I5, GC, GK, G5

Promass A

DN	T <sub>m, max range</sub> [°C]	T <sub>a, max</sub> [°C]	T <sub>m, max</sub> [°C]					
			T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
1 to 4	205	40 <sup>1)</sup>	50	95	130	170	205	205
		55 <sup>2)</sup>	-	95	130	170	205	205
		60	-	-	130	170	205	205

1) T<sub>a</sub> = 50 °C for use without Impulse/Frequency/Switch output

2) T<sub>a</sub> = 60 °C for use without Impulse/Frequency/Switch output

Promass E (Promass 8E2B\*\*...)

DN	T <sub>m, max range</sub> [°C]	T <sub>a, max</sub> [°C]	T <sub>m, max</sub> [°C]					
			T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
8 to 50	150	40 <sup>1)</sup>	50	95	130	140	140	140
		55 <sup>2)</sup>	-	95	130	140	140	140
		60	-	-	130	140	140	140

1) T<sub>a</sub> = 50 °C for use without Impulse/Frequency/Switch output

2) T<sub>a</sub> = 60 °C for use without Impulse/Frequency/Switch output

Promass E (Promass 8E2C\*\*...)

DN	T <sub>m, max range</sub> <sup>1)</sup> [°C]	T <sub>a, max</sub> [°C]	T <sub>m, max</sub> [°C]					
			T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
8 to 50	150	40 <sup>2)</sup>	50	95	130	150	150	150
		55 <sup>3)</sup>	-	95	130	150	150	150
		60	-	-	130	150	150	150
	205	40 <sup>2)</sup>	50	95	130	170	205	205
		55 <sup>3)</sup>	-	95	130	170	205	205
		60	-	-	130	170	205	205

1) Maximum temperature range, see nameplate

2) T<sub>a</sub> = 50 °C for use without Impulse/Frequency/Switch output

3) T<sub>a</sub> = 60 °C for use without Impulse/Frequency/Switch output

*Promass F*

DN	T <sub>m, max range</sub> <sup>1)</sup> [°C]	T <sub>a, max</sub> [°C]	T <sub>m, max</sub> [°C]					
			T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
8 to 50	150	40 <sup>2)</sup>	50	95	130	150	150	150
		55 <sup>3)</sup>	–	95	130	150	150	150
		60	–	–	130	150	150	150
	205	40 <sup>2)</sup>	50	95	130	170	205	205
		55 <sup>3)</sup>	–	95	130	170	205	205
		60	–	–	130	170	205	205
80	150	40 <sup>2)</sup>	50	85	110	150	150	150
		55 <sup>3)</sup>	–	85	110	150	150	150
		60	–	–	110	150	150	150
	205	40 <sup>2)</sup>	50	85	110	170	205	205
		55 <sup>3)</sup>	–	85	110	170	205	205
		60	–	–	110	170	205	205

- 1) Maximum temperature range, see nameplate  
 2) T<sub>a</sub> = 50 °C for use without Impulse/Frequency/Switch output  
 3) T<sub>a</sub> = 60 °C for use without Impulse/Frequency/Switch output

Basic specification, position 3 (output; input) = G

Basic specification, position 1, 2 (Approval) = IC, IK, I5, GC, GK, G5

Promass A

DN	T <sub>m, max range</sub> [°C]	T <sub>a, max</sub> [°C]	T <sub>m, max</sub> [°C]					
			T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
1 to 4	205	40 <sup>1)</sup>	50	95	130	170	205	205
		55 <sup>2)</sup>	-	95	130	170	205	205
		60	-	-	130	170	205	205

1) T<sub>a</sub> = 50 °C for use without Impulse/Frequency/Switch output

2) T<sub>a</sub> = 60 °C for use without Impulse/Frequency/Switch output

Promass E (Promass 8E2B\*\*...)

DN	T <sub>m, max range</sub> [°C]	T <sub>a, max</sub> [°C]	T <sub>m, max</sub> [°C]					
			T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
8 to 50	150	40 <sup>1)</sup>	50	95	130	140	140	140
		55 <sup>2)</sup>	-	95	130	140	140	140
		60	-	-	130	140	140	140

1) T<sub>a</sub> = 50 °C for use without Impulse/Frequency/Switch output

2) T<sub>a</sub> = 60 °C for use without Impulse/Frequency/Switch output

Promass E (Promass 8E2C\*\*...)

DN	T <sub>m, max range</sub> <sup>1)</sup> [°C]	T <sub>a, max</sub> [°C]	T <sub>m, max</sub> [°C]					
			T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
8 to 50	150	40 <sup>2)</sup>	50	95	130	150	150	150
		55 <sup>3)</sup>	-	95	130	150	150	150
		60	-	-	130	150	150	150
	205	40 <sup>2)</sup>	50	95	130	170	205	205
		55 <sup>3)</sup>	-	95	130	170	205	205
		60	-	-	130	170	205	205

1) Maximum temperature range, see nameplate

2) T<sub>a</sub> = 50 °C for use without Impulse/Frequency/Switch output

3) T<sub>a</sub> = 60 °C for use without Impulse/Frequency/Switch output

## Promass F

DN	$T_{m, \max \text{ range}}^{1)}$ [°C]	$T_{a, \max}$ [°C]	$T_{m, \max}$ [°C]					
			T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
8 to 50	150	40 <sup>2)</sup>	50	95	130	150	150	150
		55 <sup>3)</sup>	–	95	130	150	150	150
		60	–	–	130	150	150	150
	205	40 <sup>2)</sup>	50	95	130	170	205	205
		55 <sup>3)</sup>	–	95	130	170	205	205
		60	–	–	130	170	205	205
80	150	40 <sup>2)</sup>	50	85	110	150	150	150
		55 <sup>3)</sup>	–	85	110	150	150	150
		60	–	–	110	150	150	150
	205	40 <sup>2)</sup>	50	85	110	170	205	205
		55 <sup>3)</sup>	–	85	110	170	205	205
		60	–	–	110	170	205	205

1) Maximum temperature range, see nameplate

2)  $T_a = 50$  °C for use without Impulse/Frequency/Switch output

3)  $T_a = 60$  °C for use without Impulse/Frequency/Switch output

### Explosion hazards arising from gas and dust

#### Determining the temperature class and surface temperature with the temperature table

- In the case of gas: Determine the temperature class as a function of the maximum ambient temperature  $T_{a, \max}$  and the maximum medium temperature  $T_{m, \max}$ .
- In the case of dust: Determine the maximum surface temperature as a function of the maximum ambient temperature  $T_{a, \max}$  and the maximum medium temperature  $T_{m, \max}$ .

#### Example

- Measured maximum ambient temperature:  $T_{a, \max} = 47$  °C
- Measured maximum medium temperature:  $T_{m, \max} = 108$  °C

	Ta [°C]	T6 [85° C]	T5 [100° C]	T4 [135° C]	T3 [200° C]	T2 [300° C]	T1 [450° C]
	35	50	85	120	140	140	140
	50	-	85	120	140	140	140
	60	-	-	120	140	140	140
	35	50	85	120	140	140	140
	45	-	85	120	140	140	140
	50	-	-	120	140	140	140


1 Procedure for determining the temperature class and surface temperature

1. Select device (optional).
2. In the column for the maximum ambient temperature  $T_{a, \max}$  select the temperature that is immediately greater than or equal to the maximum ambient temperature  $T_{a, \max}$  that is present.
  - ↳  $T_{a, \max} = 50\text{ °C}$ .  
The row showing the maximum medium temperature is determined.
3. Select the maximum medium temperature  $T_{m, \max}$  of this row, which is immediately greater than or equal to the maximum medium temperature  $T_{m, \max}$  that is present.
  - ↳ The column with the temperature class for gas is determined:  
 $108\text{ °C} \leq 120\text{ °C} \rightarrow T4$ .
4. The maximum temperature of the temperature class determined corresponds to the maximum surface temperature for dust:  $T4 = 135\text{ °C}$ .

**Connection data:  
Signal circuits**

The following tables contain specifications which are dependent on the transmitter type and its input and output assignment. Compare the following specifications with those on the nameplate of the transmitter.

## Connecting the transmitter

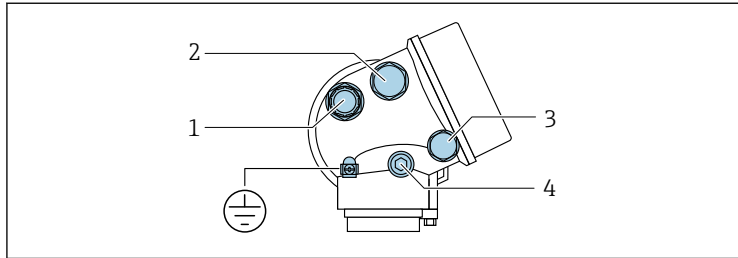

A0023831

Position		Basic specification, position 1, 2: Approval	Type of protection used for cable entry	Description
1	Cable entry for output 1	GC, IC, GK, IK G5, I5	Ex db Ex db/Ex tb	<p>Plastic sealing plugs act as safeguards during transportation and must be replaced by suitable, individually approved installation material.</p> <p>The metal extensions and dummy plugs supplied are tested and certified as part of the housing for type of protection Ex db IIC. The various threaded versions are labeled as follows for identification purposes:</p> <ul style="list-style-type: none"> <li>■ Md: M20 x 1.5</li> <li>■ NPTd: NPT 1/2"</li> <li>■ Gd: G 1/2"</li> </ul>
2	Cable entry for output 2	GC, IC, GK, IK G5, I5	Ex db Ex db/Ex tb	<p>Plastic sealing plugs act as safeguards during transportation and must be replaced by suitable, individually approved installation material.</p> <p>The metal extensions and dummy plugs supplied are tested and certified as part of the housing for type of protection Ex db IIC. The various threaded versions are labeled as follows for identification purposes:</p> <ul style="list-style-type: none"> <li>■ Md: M20 x 1.5</li> <li>■ NPTd: NPT 1/2"</li> <li>■ Gd: G 1/2"</li> </ul>
3	Optional order code <sup>1)</sup> : Cable entry of the remote display and operating module FHX50	GC, IC, GK, IK G5, I5	Ex ia Ex ia/Ex tb	<p>In the case of device versions with a metal sealing plug, this plug is part of the device approval and meets the requirements of the explosion protection indicated on the nameplate.</p> <p>In the case of device versions with a cable entry, this entry has a separate component approval and meets the requirements of the explosion protection indicated on the nameplate.</p>

Position		Basic specification, position 1, 2: Approval	Type of protection used for cable entry	Description
Position		Description		
4	Pressure compensation plug		<b>NOTICE</b>	<b>Housing degree of protection voided due to insufficient sealing of the housing.</b> ▶ Do not open - not a cable entry.
⊕	Potential equalization		<b>NOTICE</b>	<b>Terminal for connection to potential equalization.</b> ▶ Pay attention to the grounding concept of the facility.

1) Basic specification, position 4 (display; operation) = L, M

## Terminal assignment

### Transmitter



The order code is part of the extended order code. Detailed information on the features of the device and on the structure of the extended order code → 5.

### Connection versions

Order code for "Output"	Terminal numbers			
	Output 1		Output 2	
	1 (+)	2 (-)	3 (+)	4 (-)
Option A	4-20mA HART (passive)		-	
Option B <sup>1)</sup>	4-20mA HART (passive)		Pulse/frequency/switch output (passive)	
Option C <sup>1)</sup>	4-20mA HART (passive)		4-20mA analog (passive)	
Option E <sup>2)</sup>	FOUNDATION Fieldbus		Pulse/frequency/switch output (passive)	
Option G <sup>3)</sup>	PROFIBUS PA		Pulse/frequency/switch output (passive)	

- 1) Output 1 must always be used; output 2 is optional.
- 2) FOUNDATION Fieldbus with integrated reverse polarity protection.
- 3) PROFIBUS PA with integrated reverse polarity protection.

## Safety-related values



The order code is part of the extended order code. Detailed information on the features of the device and on the structure of the extended order code → 5.

### Type of protection Ex db

Order code for "Output"	Output type	Safety-related values
Option A	4-20mA HART	$U_{nom} = DC\ 35\ V$ $U_{max} = 250\ V$
Option B	4-20mA HART	$U_{nom} = DC\ 35\ V$ $U_{max} = 250\ V$
	Pulse/frequency/switch output	$U_{nom} = DC\ 35\ V$ $U_{max} = 250\ V$ $P_{max} = 1\ W^{1)}$
Option C	4-20mA HART	$U_{nom} = DC\ 30\ V$ $U_{max} = 250\ V$
	4-20mA analog	



Order code for "Output"	Output type	Safety-related values
Option E	FOUNDATION Fieldbus	U <sub>nom</sub> = DC 32 V U <sub>max</sub> = 250 V P <sub>max</sub> = 0.88 W
	Pulse/frequency/switch output	U <sub>nom</sub> = DC 35 V U <sub>max</sub> = 250 V P <sub>max</sub> = 1 W <sup>1)</sup>
Option G	PROFIBUS PA	U <sub>nom</sub> = DC 32 V U <sub>max</sub> = 250 V P <sub>max</sub> = 0.88 W
	Pulse/frequency/switch output	U <sub>nom</sub> = DC 35 V U <sub>max</sub> = 250 V P <sub>max</sub> = 1 W <sup>1)</sup>

1) Internal circuit limited by  $R_i = 760.5 \Omega$

### Remote display FHX50

Basic specification, position 1, 2 Approval	Cable specification	Basic specification, position 4 Display, Operation Option L, M
Option GC, IC, GK, IK, G5, I5	Max. cable length: 60 m (196.85 ft)	U <sub>o</sub> = 7,3 V
		I <sub>o</sub> = 327 mA
		P <sub>o</sub> = 362 mW
		L <sub>o</sub> = 149 μH
		C <sub>o</sub> = 388 nF
		C <sub>c</sub> ≤ 125 nF
		L <sub>c</sub> ≤ 149 μH







71645819

[www.addresses.endress.com](http://www.addresses.endress.com)

---