

Safety Instructions

Proline Prowirl 200

JPN: Zone 1, Zone 0/1
Zone 21
Ex d version



Proline Prowirl 200

Table of contents

Associated documentation	4
Manufacturer's certificates	4
Manufacturer address	5
Extended order code	5
Safety instructions: General	8
Safety instructions: Installation	9
Safety instructions: Zone 0	10
Safety instructions: Zone 21	10
Temperature tables	10
Explosion hazards arising from gas and dust	17
Connection values: Signal circuits	18

Associated documentation

All documentation is available:

- On the CD-ROM supplied (not included in the delivery for all device versions).
- Available for all device versions via:
 - Internet: www.endress.com/deviceviewer
 - Smart phone/tablet: *Endress+Hauser Operations App*
- In the Download Area of the Endress+Hauser web site: www.endress.com → Download

This document is an integral part of the following Operating Instructions:

Measuring device	Documentation code		
	HART	FOUNDATION Fieldbus	PROFIBUS PA
Prowirl D 200	BA01685D	BA01693D	BA01689D
Prowirl F 200	BA01686D	BA01694D	BA01690D
Prowirl O 200	BA01687D	BA01695D	BA01691D
Prowirl R 200	BA01688D	BA01696D	BA01692D

Additional documentation

Contents	Document type	Documentation code
Remote display FHX50	Special documentation	SD01007F
	Safety Instructions Ex ia	XA01714F
Explosion Protection	Brochure	CP00021Z/11

Manufacturer's certificates

JPN Type Examination Certificate

Certificate number:
CML 18JPN1032X

Affixing the certificate number certifies conformity with the standards (depending on the device version).

- JNIO SH-TR-46-1
- JNIO SH-TR-46-2
- JNIO SH-TR-46-6
- JNIO SH-TR-46-9
- IEC 60079-26

Manufacturer address Endress+Hauser Flowtec AG
Kägenstrasse 7
4153 Reinach BL
Switzerland

Extended order code The extended order code is indicated on the nameplate, which is affixed to the device in such a way that it is clearly visible. Additional information about the nameplate is provided in the associated Operating Instructions.

Structure of the extended order code

* * * * *	-	* * * * * ... * * * * *	+	A*B*C*D*E*F*G*...
<i>(Device type)</i>		<i>(Basic specifications)</i>		<i>(Optional specifications)</i>

* = Placeholder
At this position, an option (number or letter) selected from the specification is displayed instead of the placeholders.

Device type

The device and the device design is defined in the "Device type" section (Product root).

Basic specifications

The features that are absolutely essential for the device (mandatory features) are specified in the basic specifications. The number of positions depends on the number of features available. The selected option of a feature can consist of several positions.

Optional specifications

The optional specifications describe additional features for the device (optional features). The number of positions depends on the number of features available. The features have a 2-digit structure to aid identification (e.g. JA). The first digit (ID) stands for the feature group and consists of a number or a letter (e.g. J = Test, Certificate). The second digit constitutes the value that stands for the feature within the group (e.g. A = 3.1 material (wetted parts), inspection certificate).

More detailed information about the device is provided in the following tables. These tables describe the individual positions and IDs in the extended order code which are relevant to hazardous locations.

Device type

Position	Order code for	Option selected	Description
1	Instrument family	7	Vortex flowmeter
2 ¹⁾	Sensor	D, F, O, R	Sensor type
3	Transmitter	2	Transmitter type: 2-wire, compact version Remote version
4	Generation index	C	Platform generation
5, 6 ²⁾	Nominal diameter	D: DN 15 to 150 F: DN 15 to 300 O: DN 15 to 300 R: <ul style="list-style-type: none"> ■ Reducer DN 25 to 200 ■ Super reducer DN 40 to 250 	Nominal diameter of sensor

1) Transmitter only: X

2) Transmitter only: XX


Basic specifications


Position	Order code for	Selected option	Type of protection		
			Transmitter	Sensor	
				Sensor connection housing	Sensor ¹⁾
1, 2	Approval	JC	Ex db [ia] IIC T6...T1 Ga/Gb	–	Ex ia IIC T6...T1 Ga/Gb
			Ex db [ia] IIC T6...T1 Gb	Ex ia IIC T6...T1 Ga/Gb	Ex ia IIC T6...T1 Ga/Gb
		JK	Ex db [ia] IIC T6...T1 Gb	–	Ex ia IIC T6...T1 Gb
			Ex db [ia] IIC T6...T1 Gb	Ex ia IIC T6...T1 Gb	Ex ia IIC T6...T1 Gb
		J5 ²⁾	Ex db [ia] IIC T6...T1 Gb	–	Ex ia IIC T6...T1 Gb
			Ex tb IIIC Txx°C Db	–	Ex tb IIIC Txx°C Db
			Ex db [ia] IIC T6...T1 Gb	Ex ia IIC T6...T1 Gb	Ex ia IIC T6...T1 Gb
			Ex tb IIIC Txx°C Db ³⁾	Ex tb IIIC Txx°C Db ³⁾	Ex tb IIIC Txx°C Db

1) The marking may not be shown on the sensor nameplate.

2) Not available for versions with pressure sensor (pressure component).

3) The labeling changes according to whether "Display; operation" = "L" or "M": Ex tb[ia Da] IIIC Txx°C Db.

Position	Order code for	Selected option	Description
3	Output; Input	A	4-20mA HART
		B	4-20mA HART, Pulse/frequency/switch output
		C	4-20mA HART + 4-20mA analog
		D	4-20mA HART, Pulse/frequency/switch output, 4-20mA input
		E	FOUNDATION Fieldbus, Pulse/frequency/switch output
		G	PROFIBUS PA, Pulse/frequency/switch output
4	Display; Operation	A	W/o; via communication
		C	SD02 4-line; push buttons + data backup function
		E	SD03 4-line, illum.; touch control + data backup function
		L	Prepared for display FHX50 + M12 connection ¹⁾
		M	Prepared for display FHX50 + custom connection ²⁾
8, 9	Sensor version; DSC sensor; measuring tube  Only available for sensors F, O, R with the HART communication protocol.	DA	Mass steam; 316L; 316L (integrated pressure/temperature measurement), -200 to +400 °C (-328 to +750 °F)
		DB	Mass gas/liquid; 316L; 316L (integrated pressure/temperature measurement), -40 to +260 °C (-40 to +500 °F)
		DC	Mass steam; Alloy 718; 316L (integrated pressure/temperature measurement), -200 to +400 °C (-328 to +750 °F)
		DD	Mass gas/liquid; Alloy 718; 316L (integrated pressure/temperature measurement), -40 to +100 °C (-40 to +212 °F)

Position	Order code for	Selected option	Description
11	Pressure component  Only available for sensors F, O, R with the HART communication protocol.	A	Not used
		B	Pressure measuring cell 2bar/29psi abs
		C	Pressure measuring cell 4bar/58psi abs
		D	Pressure measuring cell 10bar/145psi abs
		E	Pressure measuring cell 40bar/580psi abs
		F	Pressure measuring cell 100bar/1450psi abs
		G	Pressure measuring cell 160bar/2320psi abs
16, 17	Device Model	A1	1

- 1) FHX50 is approved according to CML 17JPN2332X.
- 2) FHX50 is approved according to CML 17JPN2332X.

Optional specifications

ID	Order code for	Option selected	Description
Jx	Test, certificate	JN	Ambient temperature transmitter -50 °C

Safety instructions: General

- Staff must meet the following conditions for mounting, electrical installation, commissioning and maintenance of the device:
 - Be suitably qualified for their role and the tasks they perform
 - Be trained in explosion protection
 - Be familiar with national regulations or guidelines (e.g. JNIOOSH-TR-NO.44)
- Install the device according to the manufacturer's instructions and national regulations.
- Do not operate the device outside the specified electrical, thermal and mechanical parameters.
- Only use the device in media to which the wetted materials have sufficient durability.
- Refer to the temperature tables for the relationship between the permitted ambient temperature for the sensor and/or transmitter, depending on the range of application, and the temperature classes.

- Modifications to the device can affect the explosion protection and must be carried out by staff authorized to perform such work by Endress+Hauser.
- When using in hybrid mixtures (gas and dust occurring simultaneously), observe additional measures for explosion protection.
- Observe all the technical data of the device (see nameplate).

Safety instructions: Installation

In the event of potentially explosive vapor/air mixtures, only operate the device under atmospheric conditions.

- Temperature: -20 to +60 °C
- Pressure: 80 to 110 kPa (0.8 to 1.1 bar)
- Air with normal oxygen content, usually 21 % (V/V)

If no potentially explosive mixtures are present, or if additional protective measures have been taken, the device may also be operated under non-atmospheric conditions in accordance with the manufacturer's specifications.

- Continuous service temperature of the connecting cable: -40 to +80 °C (-50 to +80 °C for optional specifications, ID Jx (Test, Certificate) = JN); in accordance with the range of service temperature taking into account additional influences of the process conditions ($T_{a,min}$ and $T_{a,max} + 20$ K).
- Only use certified cable entries suitable for the application. Observe selection criteria as per JNIOHS-TR-NO.44. Accordingly, the connection terminal does not include any ignition sources.
- When the measuring device is connected, attention must be paid to explosion protection at the transmitter.
- In potentially explosive atmospheres:
 - Do not disconnect the electrical connection of the power supply circuit when energized.
 - Do not open the connection compartment cover when energized.
- When connecting through a conduit entry approved for this purpose, mount the associated sealing unit directly at the housing.
- Seal unused entry glands with approved sealing plugs that correspond to the type of protection. The plastic transport sealing plug supplied does not meet this requirement and must therefore be replaced during installation.
- Only use certified sealing plugs. The metal sealing plugs supplied meet this requirement.

Basic specification, position 8, 9 (sensor version; DSC sensor; measuring tube) = DA, DB, DC, DD and position 11 (pressure component) = B, C, D, E, F, G

- The maximum medium temperature is limited for device versions with a pressure component that is installed directly on the sensor F, O, R:
 - To 40 °C for T6 and T5
 - To 90 °C for T4 and T1
- In the case of T4 ... T1 and medium temperatures > 90 °C the pressure component DPC21 must be installed using a spacer tube between the pressure component and the sensor F, O, R.
 - The spacer tube must have a minimum length of 50 cm (1.97 in).
 - The spacer tube supplied meets this requirement.

Intrinsic safety

The device can be connected to the remote display FHX50 with explosion protection; refer to the Special Documentation and Ex documentation.

Potential equalization


- Integrate the device into the local potential equalization .
- If the ground connection has been established via the pipe as specified, it is also possible to integrate the sensor into the potential equalization system via the pipe.

Safety instructions: Zone 0

Basic specification, position 1, 2 (Approval) = JC, J5

The intrinsically safe version of the device can be used in the measuring pipe in Zone 0.

Safety instructions: Zone 21

- To ensure dust-tightness, securely seal the transmitter housing, cable entries and sealing plugs.
- Only open the transmitter housing briefly, ensuring that no dust or moisture enters the housing.
- If the transmitter is connected to the remote display FHX50, the circuit has type of protection Ex ia IIIC.
Connection values →  18

Temperature tables

Ambient temperature

Minimum ambient temperature

Basic specification, position 3 (Output; Input) = A, B, D in conjunction with optional specification, ID Jx (Test, Certificate) = JN

$T_a = -50\text{ °C}$

Basic specification, position 3 (Output; input) = A, B, C, D, E, G:

$$T_a = -40\text{ °C}$$

Maximum ambient temperature:

- Compact version

$T_a = +70\text{ °C}$ depending on the medium temperature and temperature class

- Transmitter remote version

$T_a = +75\text{ °C}$ depending on the medium temperature and temperature class

- Sensor remote version

$T_a = +85\text{ °C}$ depending on the medium temperature and temperature class

Medium temperature

The following relationship of ambient temperature to medium temperature applies when $T_m < -50\text{ °C}$:

T_m [°C]	-50	-100	-150	-200
T_a [°C]	-50	-47	-44	-39

Compact version

Basic specification, position 3 (output; input) = A

Version with max. $T_m = 280\text{ °C}$						
T_a [°C]	T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
40	80 ¹⁾	95 ¹⁾	130 ¹⁾	195 ¹⁾	280 ¹⁾	-
60	-	95 ^{2) 1)}	130 ¹⁾	195 ¹⁾	280 ¹⁾	-
65	-	-	130 ¹⁾	195 ¹⁾	280 ¹⁾	-
70	-	-	130 ¹⁾	-	-	-

- 1) For device versions with a pressure component that is installed directly on the sensor F, O, R, the maximum medium temperature is limited to 40 °C for T6 ...T5 and to 90 °C for T4 ... T1. In the case of T4 ... T1 and medium temperatures > 90 °C, the pressure component DPC21 must be installed using a spacer tube between the pressure component and the sensor F, O, R. The length of the spacer tube must be at least 50 cm (1.97 in).
- 2) $T_a = 55\text{ °C}$ for device versions with pressure component option DA, DB, DC, DD.

Basic specification, position 3 (output; input) = B

Version with max. $T_m = 280\text{ °C}$						
T_a [°C]	T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
40	80 ¹⁾	95 ¹⁾	130 ¹⁾	195 ¹⁾	280 ¹⁾	–
55	–	95 ¹⁾	130 ¹⁾	195 ¹⁾	280 ¹⁾	–
65	–	–	130 ¹⁾	195 ¹⁾	280 ^{2) 1)}	–
70	–	–	130 ¹⁾	195 ^{3) 1)}	280 ^{3) 1)}	–

- 1) For device versions with a pressure component that is installed directly on the sensor F, O, R, the maximum medium temperature is limited to 40 °C for T6 ...T5 and to 90 °C for T4 ... T1. In the case of T4 ... T1 and medium temperatures > 90 °C, the pressure component DPC21 must be installed using a spacer tube between the pressure component and the sensor F, O, R. The length of the spacer tube must be at least 50 cm (1.97 in).
- 2) $T_a = 65\text{ °C}$ for pulse/frequency/switch output $P_i = 0.7\text{ W}$
- 3) $T_a = 70\text{ °C}$ for pulse/frequency/switch output $P_i = 0.7\text{ W}$

Basic specification, position 3 (output; input) = C

Version with max. $T_m = 280\text{ °C}$						
T_a [°C]	T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
40	80 ¹⁾	95 ¹⁾	130 ¹⁾	195 ¹⁾	280 ¹⁾	–
55	–	95 ¹⁾	130 ¹⁾	195 ¹⁾	280 ¹⁾	–
60	–	–	130 ¹⁾	195 ¹⁾	280 ¹⁾	–
65	–	–	130 ¹⁾	195 ¹⁾	280 ^{2) 1)}	–
70	–	–	130 ¹⁾	–	–	–

- 1) For device versions with a pressure component that is installed directly on the sensor F, O, R, the maximum medium temperature is limited to 40 °C for T6 ...T5 and to 90 °C for T4 ... T1. In the case of T4 ... T1 and medium temperatures > 90 °C, the pressure component DPC21 must be installed using a spacer tube between the pressure component and the sensor F, O, R. The length of the spacer tube must be at least 50 cm (1.97 in).
- 2) $T_a = 65\text{ °C}$ for pulse/frequency/switch output $P_i = 0\text{ W}$

Basic specification, position 3 (output; input) = D

Version with max. $T_m = 280\text{ °C}$						
T_a [°C]	T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
35	80 ¹⁾	95 ¹⁾	130 ¹⁾	195 ¹⁾	280 ¹⁾	–
50	–	95 ¹⁾	130 ¹⁾	195 ¹⁾	280 ¹⁾	–

Version with max. $T_m = 280\text{ °C}$						
T_a [°C]	T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
55	-	-	-	195 ¹⁾	280 ¹⁾	-
60	-	-	-	195 ¹⁾	-	-

- 1) For device versions with a pressure component that is installed directly on the sensor F, O, R, the maximum medium temperature is limited to 40 °C for T6 ...T5 and to 90 °C for T4 ... T1. In the case of T4 ... T1 and medium temperatures > 90 °C, the pressure component DPC21 must be installed using a spacer tube between the pressure component and the sensor F, O, R. The length of the spacer tube must be at least 50 cm (1.97 in).

Basic specification, position 3 (output; input) = E, G

Version with max. $T_m = 280\text{ °C}$						
T_a [°C]	T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
40	80 ¹⁾	95 ¹⁾	130 ¹⁾	195 ¹⁾	280 ¹⁾	-
50	-	95 ¹⁾	130 ^{1) 2)}	195 ^{1) 2)}	280 ^{1) 2)}	-
60	-	-	130 ¹⁾	195 ¹⁾	280 ¹⁾	-
65	-	-	130 ¹⁾	195 ¹⁾	280 ^{3) 1)}	-
70	-	-	130 ¹⁾	195 ^{4) 1)}	280 ^{4) 1)}	-

- 1) For device versions with a pressure component that is installed directly on the sensor F, O, R, the maximum medium temperature is limited to 40 °C for T6 ...T5 and to 90 °C for T4 ... T1. In the case of T4 ... T1 and medium temperatures > 90 °C, the pressure component DPC21 must be installed using a spacer tube between the pressure component and the sensor F, O, R. The length of the spacer tube must be at least 50 cm (1.97 in).
- 2) $T_a = 60\text{ °C}$ for pulse/frequency/switch output $P_1 = 0\text{ W}$
- 3) $T_a = 65\text{ °C}$ for pulse/frequency/switch output $P_1 = 0\text{ W}$
- 4) $T_a = 70\text{ °C}$ for pulse/frequency/switch output $P_1 = 0\text{ W}$

High-temperature version

Basic specification, position 3 (output; input) = A

Version with max. $T_m = 440\text{ °C}$						
T_a [°C]	T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
40	80 ¹⁾	95 ¹⁾	130 ¹⁾	195 ¹⁾	290 ¹⁾	440 ¹⁾
60	–	95 ^{2) 1)}	130 ¹⁾	195 ¹⁾	290 ¹⁾	440 ¹⁾
70	–	–	130 ¹⁾	195 ¹⁾	290 ¹⁾	440 ¹⁾

- 1) For device versions with a pressure component that is installed directly on the sensor F, O, R, the maximum medium temperature is limited to 40 °C for T6 ...T5 and to 90 °C for T4 ... T1. In the case of T4 ... T1 and medium temperatures > 90 °C, the pressure component DPC21 must be installed using a spacer tube between the pressure component and the sensor F, O, R. The length of the spacer tube must be at least 50 cm (1.97 in).
- 2) $T_a = 55\text{ °C}$ for device versions with pressure component option DA, DB, DC, DD.

Basic specification, position 3 (output; input) = B

Version with max. $T_m = 440\text{ °C}$						
T_a [°C]	T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
40	80 ¹⁾	95 ¹⁾	130 ¹⁾	195 ¹⁾	290 ¹⁾	440 ¹⁾
55	–	95 ¹⁾	130 ¹⁾	195 ¹⁾	290 ¹⁾	440 ¹⁾
65	–	–	130 ¹⁾	195 ¹⁾	290 ¹⁾	440 ¹⁾
70	–	–	130 ¹⁾	195 ^{2) 1)}	290 ^{2) 1)}	440 ^{2) 1)}

- 1) For device versions with a pressure component that is installed directly on the sensor F, O, R, the maximum medium temperature is limited to 40 °C for T6 ...T5 and to 90 °C for T4 ... T1. In the case of T4 ... T1 and medium temperatures > 90 °C, the pressure component DPC21 must be installed using a spacer tube between the pressure component and the sensor F, O, R. The length of the spacer tube must be at least 50 cm (1.97 in).
- 2) $T_a = 70\text{ °C}$ for pulse/frequency/switch output $P_1 = 0.85\text{ W}$

Basic specification, position 3 (output; input) = C

Version with max. $T_m = 440\text{ °C}$						
T_a [°C]	T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
40	80 ¹⁾	95 ¹⁾	130 ¹⁾	195 ¹⁾	290 ¹⁾	440 ¹⁾
55	–	95 ¹⁾	130 ¹⁾	195 ¹⁾	290 ¹⁾	440 ¹⁾

Version with max. $T_m = 440\text{ °C}$						
T_a [°C]	T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
65	-	-	130 ¹⁾	195 ¹⁾	290 ¹⁾	440 ¹⁾
70	-	-	130 ¹⁾	195 ^{2) 1)}	290 ^{2) 1)}	440 ^{2) 1)}

- 1) For device versions with a pressure component that is installed directly on the sensor F, O, R, the maximum medium temperature is limited to 40 °C for T6 ...T5 and to 90 °C for T4 ... T1. In the case of T4 ... T1 and medium temperatures > 90 °C, the pressure component DPC21 must be installed using a spacer tube between the pressure component and the sensor F, O, R. The length of the spacer tube must be at least 50 cm (1.97 in).
- 2) $T_a = 70\text{ °C}$ for pulse/frequency/switch output $P_i = 0\text{ W}$

Basic specification, position 3 (output; input) = D

Version with max. $T_m = 440\text{ °C}$						
T_a [°C]	T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
35	80 ¹⁾	95 ¹⁾	130 ¹⁾	195 ¹⁾	290 ¹⁾	440 ¹⁾
50	-	95 ¹⁾	130 ¹⁾	195 ¹⁾	290 ¹⁾	440 ¹⁾
55	-	-	-	195 ¹⁾	290 ¹⁾	440 ¹⁾
60	-	-	-	195 ¹⁾	290 ¹⁾	440 ¹⁾
65	-	-	-	-	290 ¹⁾	-

- 1) For device versions with a pressure component that is installed directly on the sensor F, O, R, the maximum medium temperature is limited to 40 °C for T6 ...T5 and to 90 °C for T4 ... T1. In the case of T4 ... T1 and medium temperatures > 90 °C, the pressure component DPC21 must be installed using a spacer tube between the pressure component and the sensor F, O, R. The length of the spacer tube must be at least 50 cm (1.97 in).

Basic specification, position 3 (output; input) = E, G

Version with max. $T_m = 440\text{ °C}$						
T_a [°C]	T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
40	80 ¹⁾	95 ¹⁾	130 ¹⁾	195 ¹⁾	290 ¹⁾	440 ¹⁾
50	-	95 ¹⁾	130 ^{1) 2)}	195 ^{1) 2)}	290 ^{1) 2)}	440 ^{1) 2)}
65	-	-	130 ¹⁾	195 ¹⁾	290 ¹⁾	440 ¹⁾
70	-	-	130 ¹⁾	195 ^{3) 1)}	290 ^{3) 1)}	440 ^{3) 1)}

- 1) For device versions with a pressure component that is installed directly on the sensor F, O, R, the maximum medium temperature is limited to 40 °C for T6 ...T5 and to 90 °C for T4 ... T1. In the case of T4 ... T1 and medium temperatures > 90 °C, the

pressure component DPC21 must be installed using a spacer tube between the pressure component and the sensor F, O, R. The length of the spacer tube must be at least 50 cm (1.97 in).

- 2) $T_a = 60\text{ °C}$ for pulse/frequency/switch output $P_1 = 0\text{ W}$
- 3) $T_a = 70\text{ °C}$ for pulse/frequency/switch output $P_1 = 0\text{ W}$

Remote version

Transmitter

Basic specification, Position 3 Output; input	Basic specification, position 1, 2 Approval	T6 [85 °C]	T5 [100 °C]	T4 [135 °C]
A	All	40	60	75
B	All	35 ¹⁾	50 ²⁾	70 ³⁾
C	All	40	55	70 ⁴⁾
D	All	35	50	65
E G	All	40	55	70 ⁴⁾

- 1) $T_a = 40\text{ °C}$ for pulse/frequency/switch output $P_1 = 0.85\text{ W}$
- 2) $T_a = 60\text{ °C}$ for pulse/frequency/switch output $P_1 = 0.85\text{ W}$
- 3) $T_a = 75\text{ °C}$ for pulse/frequency/switch output $P_1 = 0.85\text{ W}$
- 4) $T_a = 75\text{ °C}$ for pulse/frequency/switch output $P_1 = 0\text{ W}$

Sensor

Version with max. $T_m = 280\text{ °C}$						
T_a [°C]	T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
55	80 ^{1) 2)}	95 ²⁾	130 ²⁾	195 ²⁾	280 ²⁾	–
70	–	95 ^{3) 2)}	130 ²⁾	195 ²⁾	280 ²⁾	–
85	–	–	130 ²⁾	195 ²⁾	280 ²⁾	–

- 1) $T_a = 40\text{ °C}$ For device versions with pressure component option DA, DB, DC, DD.
- 2) For device versions with a pressure component that is installed directly on the sensor F, O, R, the maximum medium temperature is limited to 40 °C for T6 ... T5 and to and to 90 °C for T4 ... T1. In the case of T4 ... T1 and medium temperatures > 90 °C, the pressure component DPC21 must be installed using a spacer tube between the pressure component and the sensor F, O, R. The length of the spacer tube must be at least 50 cm (1.97 in).
- 3) $T_a = 55\text{ °C}$ for device versions with pressure component option DA, DB, DC, DD.

High-temperature version

Version with max. $T_m = 440\text{ °C}$						
T_a [°C]	T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
55	80 ^{1) 2)}	95 ²⁾	130 ²⁾	195 ²⁾	290 ²⁾	440 ²⁾
70	-	95 ^{3) 2)}	130 ²⁾	195 ²⁾	290 ²⁾	440 ²⁾
85	-	-	130 ²⁾	195 ²⁾	290 ²⁾	440 ²⁾

- 1) $T_a = 40\text{ °C}$ For device versions with pressure component option DA, DB, DC, DD.
- 2) For device versions with a pressure component that is installed directly on the sensor F, O, R, the maximum medium temperature is limited to 40 °C for T6 ...T5 and to and to 90 °C for T4 ... T1. In the case of T4 ... T1 and medium temperatures > 90 °C, the pressure component DPC21 must be installed using a spacer tube between the pressure component and the sensor F, O, R. The length of the spacer tube must be at least 50 cm (1.97 in).
- 3) $T_a = 55\text{ °C}$ for device versions with pressure component option DA, DB, DC, DD.

Explosion hazards arising from gas and dust

Determining the temperature class and surface temperature with the temperature table

- In the case of gas: Determine the temperature class as a function of the maximum ambient temperature T_a and the maximum medium temperature T_m .
- In the case of dust: Determine the maximum surface temperature as a function of the maximum ambient temperature T_a and the maximum medium temperature T_m .

Example

- Measured maximum ambient temperature: $T_{ma} = 58\text{ °C}$
- Measured maximum medium temperature: $T_{mm} = 108\text{ °C}$

T_a [°C]	T6 [85 °C]	T5 [100 °C]	T4 [135 °C]	T3 [200 °C]	T2 [300 °C]	T1 [450 °C]
40	80	95	130	195	280	-
60	-	95	130	195	280	-
65	-	-	130	195	280	-

A0031266

1 Procedure for determining the temperature class and surface temperature

1. In the column for the maximum ambient temperature T_a select the temperature that is immediately greater than or equal to the maximum ambient temperature T_{ma} that is present.

↳ $T_a = 65$ °C.

The row showing the maximum medium temperature is determined.

2. Select the maximum medium temperature T_m of this row, which is immediately greater than or equal to the maximum medium temperature T_{mm} that is present.

↳ The column with the temperature class for gas is determined:
 108 °C ≤ 130 °C → T4.

3. The maximum temperature of the temperature class determined corresponds to the maximum surface temperature for dust: $T_4 = 135$ °C.

Connection values: Signal circuits

The following tables contain specifications which are dependent on the transmitter type and its input and output assignment. Compare the following specifications with those on the nameplate of the transmitter.


Cable specification: Connecting cable for remote version

The sensor cable connection between the sensor and the transmitter has Ex ia type of protection.

Cable parameter: $L/R \leq 38.2$ $\mu\text{H}/\Omega$

The cable supplied by Endress+Hauser complies with this value.

Connecting the transmitter

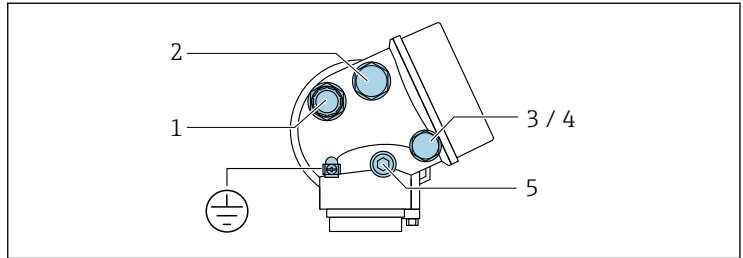

A0034702

Position		Basic specification, Position 1, 2 Approval	Type of protection used for cable entry	Description
1	Cable entry for output 1 ¹⁾	JC, JK J5	Ex db Ex db/Ex tb	<p>Plastic sealing plugs act as safeguards during transportation and must be replaced by suitable, individually approved installation material.</p> <p>The metal extensions and dummy plugs supplied are tested and certified as part of the housing for type of protection Ex d IIC. The various threaded versions are labeled as follows for identification purposes:</p> <ul style="list-style-type: none"> ▪ Md: M20 x 1.5 ▪ NPTd: NPT 1/2" ▪ Gd: G 1/2"
2	Cable entry for output 2 ¹⁾	JC, JK J5	Ex db Ex db/Ex tb	<p>Plastic sealing plugs act as safeguards during transportation and must be replaced by suitable, individually approved installation material.</p> <p>The metal extensions and dummy plugs supplied are tested and certified as part of the housing for type of protection Ex d IIC. The various threaded versions are labeled as follows for identification purposes:</p> <ul style="list-style-type: none"> ▪ Md: M20 x 1.5 ▪ NPTd: NPT 1/2" ▪ Gd: G 1/2"
3	Optional order code ²⁾ : Cable entry of the remote display and operating module FHX50	JC, JK J5	Ex ia Ex ia/Ex tb ³⁾	<p>The following applies for devices with basic specification, position 1, 2 (approval) = J5: In the case of device versions with metal extensions and sealing plugs, the latter are part of the device approval and meet the requirements of the explosion protection indicated on the nameplate.</p> <p>In the case of device versions with a cable entry, this entry has a separate component approval and meets the requirements of the explosion protection indicated on the nameplate.</p>

Position		Basic specification, Position 1, 2 Approval	Type of protection used for cable entry	Description
4	Optional order code ⁴⁾ : Cable entry of pressure measuring cell	JC, JK,	Ex ia	-
Position		Description		
5	Pressure compensation plug	NOTICE Housing degree of protection voided due to insufficient sealing of the housing. ▶ Do not open - not a cable entry.		
⊕	Potential equalization	NOTICE Terminal for connection to potential equalization. ▶ Pay attention to the grounding concept of the facility.		

- 1) Please see below: Further notes on cable glands.
- 2) Basic specification, position 4 (display; operation) = L, M
- 3) The labeling changes according to whether "Display; operation" = "L" or "M": Ex tb|ia Da| IIIC Txx°C Db.
- 4) Basic specification, position 8, 9 (sensor version; DSC sensor; measuring tube) = DA, DA, DC, DD and position 11 (pressure component) = B, C, D, E, F, G

Further notes on cable glands:

Cable Gland code 6 may be selected for following approved cable glands by Ex CBs to be installed on the device with Approval code, JC, JK, J5:

- Cable glands approved suitable for Ex d, Ex t: e.g. EXTC-16MG, KXBC-20-16
- Cable glands suitable for Ex d: e.g. KXBF-20-16

Yellow cap attached to the cable glands is a transportation safety measure only, and is to be removed when the delivered device is installed. If the third cable gland is not used, remove it and seal the thread hole with Ex d blind plug (M20x1.5).

Information on our service center:

Service Desk 5-70-3 Nisshin-cho, Fuchu-shi, Tokyo-to

Tel: 042-314-1919

Fax: 042-314-1941

Terminal assignment

Transmitter



The order code is part of the extended order code. Detailed information on the features of the device and on the structure of the extended order code → 5.

Connection versions

Order code for "Output"	Terminal numbers					
	Output 1		Output 2		Input	
	1 (+)	2 (-)	3 (+)	4 (-)	5 (+)	6 (-)
Option A	4-20mA HART (passive)		-		-	
Option B ¹⁾	4-20mA HART (passive)		Pulse/frequency/switch output (passive)		-	
Option C	4-20mA HART (passive)		4-20mA analog (passive)		-	
Option D ²⁾	4-20mA HART (passive)		Pulse/frequency/switch output (passive)		4-20mA current input (passive)	
Option E ³⁾	FOUNDATION Fieldbus		Pulse/frequency/switch output (passive)		-	
Option G ⁴⁾	PROFIBUS PA		Pulse/frequency/switch output (passive)		-	

- 1) Output 1 must always be used; output 2 is optional.
- 2) The integrated overvoltage protection is not used with option D: Terminals 5 and 6 (current input) are not protected against overvoltage.
- 3) FOUNDATION Fieldbus with integrated reverse polarity protection.
- 4) PROFIBUS PA with integrated reverse polarity protection.

Safety-related values



The order code is part of the extended order code. Detailed information on the features of the device and on the structure of the extended order code → 5.

Type of protection Ex d

Order code for "Output"	Output type	Safety-related values
Option A	4-20mA HART	$U_{nom} = DC 35 V$ $U_{max} = 250 V$
Option B	4-20mA HART	$U_{nom} = DC 35 V$ $U_{max} = 250 V$
	Pulse/frequency/switch output	$U_{nom} = DC 35 V$ $U_{max} = 250 V$ $P_{max} = 1 W^{1)}$
Option C	4-20mA HART	$U_{nom} = DC 30 V$ $U_{max} = 250 V$
	4-20mA analog	
Option D	4-20mA HART	$U_{nom} = DC 35 V$ $U_{max} = 250 V$
	Pulse/frequency/switch output	$U_{nom} = DC 35 V$ $U_{max} = 250 V$ $P_{max} = 1 W^{1)}$
	4 to 20 mA current input	$U_{nom} = DC 35 V$ $U_{max} = 250 V$
Option E	FOUNDATION Fieldbus	$U_{nom} = DC 32 V$ $U_{max} = 250 V$ $P_{max} = 0.88 W$
	Pulse/frequency/switch output	$U_{nom} = DC 35 V$ $U_{max} = 250 V$ $P_{max} = 1 W^{1)}$
Option G	PROFIBUS PA	$U_{nom} = DC 32 V$ $U_{max} = 250 V$ $P_{max} = 0.88 W$
	Pulse/frequency/switch output	$U_{nom} = DC 35 V$ $U_{max} = 250 V$ $P_{max} = 1 W^{1)}$

1) Internal circuit limited by $R_i = 760.5 \Omega$

Remote display FHX50

Basic specification, position 1, 2 Approval	Cable specification	Basic specification, position 4 Display; operation Option L, M
Option JC, JK, J5	Max. cable length: 60 m (196.85 ft)	$U_o = 7.3 \text{ V}$
		$I_o = 327 \text{ mA}$
		$P_o = 362 \text{ mW}$
		$L_o = 149 \text{ }\mu\text{H}$
		$C_o = 388 \text{ nF}$
		$C_c \leq 125 \text{ nF}$
		$L_c \leq 149 \text{ }\mu\text{H}$



71513356

www.addresses.endress.com
