XA01908F-C/00/EN/03.22-00

71576830 2022-07-04

Safety Instructions Liquiphant FTL41

Ex ia IIC T6...T1 Ga/Gb Ex ia IIC T6...T1 Gb





Liquiphant FTL41

Table of contents

••••	4
••••	4
	4
	4
• • • •	4
	4
	8
• • • •	8
	9
1	LO
1	LO
1	12
	····· ····· ····· ····

About this document	This document has been translated into several languages. Legally determined is solely the English source text.
Associated documentation	This document is an integral part of the following Operating Instructions: BA01893F/00
Supplementary documentation	 Explosion-protection brochure: CP00021Z/11 The Explosion-protection brochure is available: In the download area of the Endress+Hauser website: www.endress.com -> Downloads -> Brochures and Catalogs -> Text Search: CP00021Z On the CD for devices with CD-based documentation
Manufacturer's certificates	Certificate of Conformity Certificate number: CML 19JPN1418X Affixing the certificate number certifies conformity with the following standards (depending on the device version): JNIOSH-TR-46-1:2020 JNIOSH-TR-46-6:2015 IEC 60079-26:2014
Manufacturer address	Endress+Hauser SE+Co. KG Hauptstraße 1 79689 Maulburg, Germany Address of the manufacturing plant: See nameplate.
Extended order code	The extended order code is indicated on the nameplate, which is affixed to the device in such a way that it is clearly visible. Additional information about the nameplate is provided in the associated Operating Instructions.

Structure of the extended order code

FTL41	-	*****	+	A*B*C*D*E*F*G*
(Device		(Basic		(Optional
type)		specifications)		specifications)

* = Placeholder

At this position, an option (number or letter) selected from the specification is displayed instead of the placeholders.

Basic specifications

The features that are absolutely essential for the device (mandatory features) are specified in the basic specifications. The number of positions depends on the number of features available. The selected option of a feature can consist of several positions.

Optional specifications

The optional specifications describe additional features for the device (optional features). The number of positions depends on the number of features available. The features have a 2-digit structure to aid identification (e.g. JA). The first digit (ID) stands for the feature group and consists of a number or a letter (e.g. J = Test, Certificate). The second digit constitutes the value that stands for the feature within the group (e.g. A = 3.1 material (wetted parts), inspection certificate).

More detailed information about the device is provided in the following tables. These tables describe the individual positions and IDs in the extended order code which are relevant to hazardous locations.

Extended order code: Liquiphant



The following specifications reproduce an extract from the product structure and are used to assign:

- This documentation to the device (using the extended order code on the nameplate).
- The device options cited in the document.


Device type

FTL41

Basic specifications

Position 1	Position 1, 2 (Approval)						
Selected option		Description					
FTL41	JB	JPN Ex ia IIC T6T1 Ga/Gb JPN Ex ia IIC T6T1 Gb					


Position 3	Position 3, 4 (Output)					
Selected o	ption	Description				
FTL41 A8 FEL48, 2-wire NAMUR		FEL48, 2-wire NAMUR				

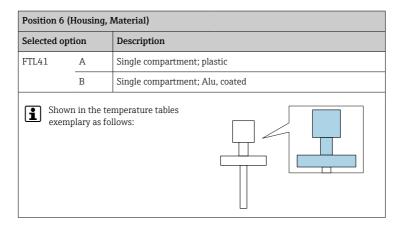

Position 7 (Electrical Connection)						
Selected op	tion	Description				
FTL41	А	Gland M20, plastic, IP66/68 NEMA Type 4X/6P				
	B 1)	Gland M20, brass nickel plated, IP66/68 NEMA Type 4X/6P				
	F	Thread M20, IP66/68 NEMA Type 4X/6P				
	G	Thread G1/2, IP66/68 NEMA Type 4X/6P				
	H ²⁾	Thread NPT1/2, IP66/68 NEMA Type 4X/6P				
	I 1)	Thread NPT3/4, IP66/68 NEMA Type 4X/6P				
	M 1)	Plug M12, IP66/67 NEMA Type 4X				
	Y	Special version: Thread NPT1/2, IP66/68 NEMA Type 4X/6P				

1) 2) Only in connection with Position 6 = BOnly in connection with Position 6 = A

Position 10 (Type of Probe)					
Selected option Description					
FTL41	1	Compact version			
	2	Extension tube			
	3	Short tube version			

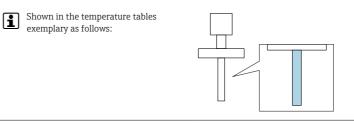


Optional specifications

I	ID Px (Accessory Enclosed)						
Selected option Description		Description					
F	TL41	PB 1)	Weather protection cover, plastic				

1) Only in connection with Position 6 = B

Safety instructions: General	 Devices suitable for zone separation (marked Ga/Gb or Da/Db) are always suitable for installation in the less critical zone (Gb or Db). Due to space limitations the corresponding marking maybe not indicated on the nameplate. Staff must meet the following conditions for mounting, electrical installation, commissioning and maintenance of the device: Be suitably qualified for their role and the tasks they perform Be trained in explosion protection Be familiar with national regulations Install the device according to the manufacturer's instructions and national regulations. Do not operate the device outside the specified electrical, thermal and mechanical parameters. Only use the device in media to which the wetted materials have sufficient durability. Avoid electrostatic charging: Of plastic surfaces (e.g. enclosure, sensor element, special varnishing, attached additional plates,) Of isolated capacities (e.g. isolated metallic plates) Refer to the temperature tables for the relationship between the permitted ambient temperature for the sensor and/or transmitter, depending on the range of application and the temperature class. Modifications to the device can affect the explosion protection and must be carried out by staff authorized to perform such work by Endress+Hauser.
Safety instructions: Special conditions	 Permitted ambient temperature range at the electronics enclosure: ⇒ <a> 10, "Temperature tables". To avoid electrostatic charging: Do not rub surfaces with a dry cloth. In the event of additional or alternative special varnishing on the enclosure or other metal parts or for adhesive plates: Observe the danger of electrostatic charging and discharge. Do not install in the vicinity of processes (≤ 0.5 m) generating strong electrostatic charges. Basic specification, Position 6 = A Avoid electrostatic charging of the enclosure (e.g. friction, cleaning, maintenance, strong medium flow). Basic specification, ID Px = PB Avoid electrostatic charging of the weather protection cover (e.g. friction, cleaning, maintenance, strong medium flow).

Safety instructions: Installation

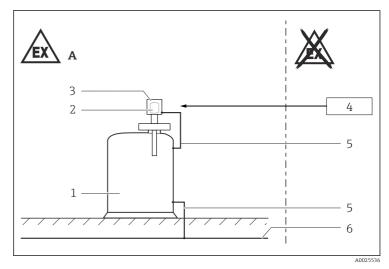

• 1

- A Zone 1
- 1 Tank; Zone 0, Zone 1
- 2 Electronic insert
- 3 Enclosure
- 4 Associated intrinsically safe power supply units
- 5 Potential equalization line
- 6 Local potential equalization
- When the device is connected to certified intrinsically safe circuits of Category Ex ib for Equipment Groups IIC and IIB, the type of protection changes to Ex ib IIC and Ex ib IIB.
- Continuous service temperature of the connecting cable: $\geq T_a + 20$ K.
- Observe the pertinent guidelines when interconnecting intrinsically safe circuits.
- Observe the maximum process conditions according to the manufacturer's Operating Instructions.
- At high medium temperatures, note flange pressure load capacity as a factor of temperature.
- Install the device to exclude any mechanical damage or friction during the application. Pay particular attention to flow conditions and tank fittings.
- Support extension tube of the device if a dynamic load is expected.

Accessory high pressure sliding sleeve

The high pressure sliding sleeve can be used for a continuous setting of the switch point and is suited for zone separation if mounted properly (see Operating Instructions).

Intrinsic safety

- The device is only suitable for connection to certified, intrinsically safe equipment with explosion protection Ex ia / Ex ib.
- The intrinsically safe input power circuit of the device is isolated from ground. The dielectric strength is at least 500 V_{rms}.

Potential equalization

Integrate the device into the local potential equalization.

Safety instructions: Zone 0

- In the event of potentially explosive vapor/air mixtures, only operate the device under atmospheric conditions.
 - Temperature: -20 to +60 °C
 - Pressure: 80 to 110 kPa (0.8 to 1.1 bar)
 - Air with normal oxygen content, usually 21 % (V/V)
- If no potentially explosive mixtures are present, or if additional protective measures have been taken, the device may also be operated under non-atmospheric conditions in accordance with the manufacturer's specifications.
- Only use the device in media to which the wetted materials have sufficient durability (e.g. process connection seal).
- When using under non-atmospheric pressures and non-atmospheric temperatures: The sensor part of the device approved for Zone 0 does not cause any ignition hazards.

Temperature tables

General notes

Optional specification, ID Px = PB

When using the weather protection cover: Reduce the values T_a of P1, P2, P3 by 16 K.

Description notes


Unless otherwise indicated, the positions always refer to the basic specification.

1st column: Position 3, 4 = .., A4, A8


2nd column: Temperature classes T6 (85 °C) to T1 (450 °C)

Column P1 to P5: Position (temperature value) on the axes of the derating

- T_a: Ambient temperature in °C
- T_p: Process temperature in °C

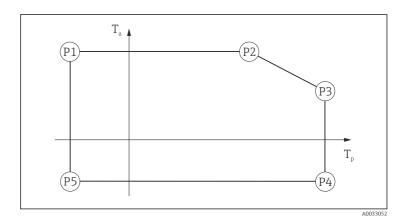



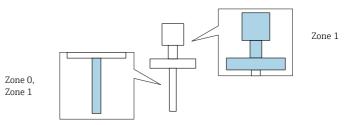

A8		P1		P2		Р3		P4		P5	
		T _p	T _a	T _p	Ta	Tp	T _a	T_p	Ta	T _p	T _a
	T6	-50	67	67	67	75	60	75	-40	-50	-40
	T5	-50	70	70	70	90	60	90	-40	-50	-40
	T4	-50	70	70	70	125	60	125	-40	-50	-40
	T3T1	-50	70	70	70	150	60	150	-40	-50	-40

Connection data Associated intrinsically safe power supply unit with max. electrical specifications below the characteristic values of the electronic inserts

Basic specification, Position 3, 4	Power supply circuit
A8	$\begin{array}{l} U_i = 16 \ V \\ I_i = 52 \ mA \\ P_i = 170 \ mW \\ L_i = 0 \\ C_i = 30 \ nF \end{array}$



71576830

www.addresses.endress.com

