Safety Instructions Solicap M FTI55, FTI56

II 1 D Ex ia IIIC Da II 1/2 D Ex ia IIIC Da/Db II 1/3 D Ex ia IIIC Da/Dc II 1/2 D Ex ia/tb IIIC Da/Db II 1/3 D Ex ia/tc IIIC Da/Dc







Solicap M FTI55, FTI56

Table of contents

Associated documentation		. 4
Supplementary documentation	• • • • •	. 4
Manufacturer's certificates		. 4
Manufacturer address		4
Other standards		. 4
Extended order code	• • • • •	. 5
Safety instructions: General		10
Safety instructions: Special conditions		10
Safety instructions: Installation		11
Safety instructions: Zone 20		12
Temperature tables		12
Connection data	•••	14

Associated documentation	This document is an integral part of the following Operating Instructions:
	BA00300F/00
Supplementary	Explosion-protection brochure: CP00021Z/11
documentation	 The Explosion-protection brochure is available: In the download area of the Endress+Hauser website: www.endress.com -> Downloads -> Brochures and Catalogs -> Text Search: CP00021Z On the CD for devices with CD-based documentation
Manufacturer's certificates	UK Declaration of Conformity
certificates	Declaration Number: UK_00205
	The UK Declaration of Conformity is available: In the download area of the Endress+Hauser website: www.endress.com -> Downloads -> Declaration -> Type: UKCA Declaration -> Product Code:
	UKCA type-examination certificate
	Certificate number: CML 21UKEX2458
	List of applied standards: See UK Declaration of Conformity.
Manufacturer address	Endress+Hauser SE+Co. KG Hauptstraße 1 79689 Maulburg, Germany Address of the manufacturing plant: See nameplate.
Other standards	 Among other things, the following standards shall be observed in their current version for proper installation: IEC/EN 60079-14: "Explosive atmospheres - Part 14: Electrical installations design, selection and erection" EN 1127-1: "Explosive atmospheres - Explosion prevention and protection - Part 1: Basic concepts and methodology"

XA02638F-A

Extended order code

The extended order code is indicated on the nameplate, which is affixed to the device in such a way that it is clearly visible. Additional information about the nameplate is provided in the associated Operating Instructions.

Structure of the extended order code

FTI5x	-	*********	+	A*B*C*D*E*F*G*
(Device type)		(Basic specifications)		(Optional specifications)

* = Placeholder

At this position, an option (number or letter) selected from the specification is displayed instead of the placeholders.

Basic specifications

The features that are absolutely essential for the device (mandatory features) are specified in the basic specifications. The number of positions depends on the number of features available. The selected option of a feature can consist of several positions.

Optional specifications

The optional specifications describe additional features for the device (optional features). The number of positions depends on the number of features available. The features have a 2-digit structure to aid identification (e.g. JA). The first digit (ID) stands for the feature group and consists of a number or a letter (e.g. J = Test, Certificate). The second digit constitutes the value that stands for the feature within the group (e.g. A = 3.1 material (wetted parts), inspection certificate).

More detailed information about the device is provided in the following tables. These tables describe the individual positions and IDs in the extended order code which are relevant to hazardous locations.

Extended order code: Solicap M

The following specifications reproduce an extract from the product structure and are used to assign:

- This documentation to the device (using the extended order code on the nameplate).
- The device options cited in the document.

Device type FTI55

Basic specifications

Position	Position 1 (Approval)		
Selected option		Description	
FTI55	В	ATEX II 1/3 D Ex ia/tc IIIC T90°C Da/Dc	
	С	ATEX II 1/2 D Ex ia/tb IIIC T90°C Da/Db	
	F	$\begin{array}{l} \mbox{ATEX II 1 D Ex ia IIIC T80 °C T_{200} 130 °C Da }^{1)} \\ \mbox{ATEX II 1/2 D Ex ia IIIC T80 °C T_{200} 130 °C Da/Db }^{1)} \\ \mbox{ATEX II 1/3 D Ex ia IIIC T80 °C T_{200} 130 °C Da/Dc }^{1)} \end{array}$	

1) For detailed information see chapter "Temperature tables", $\rightarrow \square 12$

Position 2 (Inactive Length L3)		
Selected option		Description
FTI55	А	Not selected
	В	Not selected + active build-up protection 125mm/5inch, 316L
	1, 5	mm/in, 316L

Position	Position 3 (Active Probe Length L1)	
Selected option		Description
FTI55	A, B, H, K, E, P	mm/in, steel
	C, D, M, N	mm/in, 316L

Position 4 (Insulation Rod)		
Selected option		Description
FTI55	1	Fully insulated, PE, max. 80°C/175°F
	2, 3	75mm/3in L2, partial insulated PPS, max. 180°C/350°F (Ex max. 150°C/300°F)

Position	Position 8 (Electronics, Output)		
Selected	l option	Description	
FTI55	B 1)	FEI51; 2-wire 19-253VAC + UK marking	
	C 1)	FEI52; 3-wire PNP 10-55VDC + UK marking	
	E 1)	FEI54; relay DPDT, 19-253VAC, 19-55VDC + UK marking	
	F	FEI55; 8/16mA, 11-35VDC + UK marking	
	G ²⁾	FEI57S; 2-wire PFM + UK marking	
	H ²⁾	FEI58; NAMUR+test button (H-L signal) + UK marking	
	Y	Special version: FEI50H	

Only in connection with supply circuit "Non-intrinsically safe" Only in connection with supply circuit "Intrinsically safe Ex ia" % f(x)=01) 2)

Position	Position 9 (Housing)		
Selected option		Description	
FTI55	1	F15 316L hygiene IP66/67 NEMA4X	
	3	F17 Alu IP66/67 NEMA4X	
	4	F13 Alu IP66 NEMA4X + gas-tight probe seal	
	5	T13 Alu IP66 NEMA4X + gas-tight probe seal + separate conn. compartment	
	6	F27 316L IP66/67 NEMA6P + gas-tight probe seal	

Position	Position 11 (Type of probe)		
Selected option		Description	
FTI55	1	Compact	
	2, 3, 4, 5	mm/in L4 cable > separate enclosure	

Optional specifications

No options specific to hazardous locations are available.



- This documentation to the device (using the extended order code on the nameplate).
- The device options cited in the document.

Device type

FTI56

Basic specifications

Position	Position 1 (Approval)		
Selected option		Description	
FTI56	В	ATEX II 1/3 D Ex ia/tc IIIC T90°C Da/Dc	
	С	ATEX II 1/2 D Ex ia/tb IIIC T90°C Da/Db	
	F	ATEX II 1 D Ex ia IIIC T80°C T ₂₀₀ 130°C Da ¹⁾ ATEX II 1/2 D Ex ia IIIC T80°C T ₂₀₀ 130°C Da/Db ¹⁾ ATEX II 1/3 D Ex ia IIIC T80°C T ₂₀₀ 130°C Da/Dc ¹⁾	

1) For detailed information see chapter "Temperature tables", $\rightarrow \cong 12$

Position	Position 2 (Inactive Length L3)		
Selected option		Description	
FTI56	А	Not selected	
	1, 5	mm/in, 316L	

Position 3 (Active Probe Length L1; Tension Weight)			
Selected option Description			
FTI56	A, B, H, K	mm/in, mm/" rope 316; 316L	
	C, D, M, N	mm/in, mm/" rope steel zinc coated; steel	

Position 4 (Insulation Rope)			
Selected option Description			
FTI56	1	Fully insulated, PA, max. 120°C/250°F	
	2	500mm L2, partial insulated, PTFE, max. 180°C/350°F (Ex max. 150°C/300°F)	

Position	Position 8 (Electronics, Output)			
Selected option		Description		
FTI56	B 1)	FEI51; 2-wire 19-253VAC + UK marking		
	C 1)	FEI52; 3-wire PNP 10-55VDC + UK marking		
	E 1)	FEI54; relay DPDT, 19-253VAC, 19-55VDC + UK marking		
	F	FEI55; 8/16mA, 11-35VDC + UK marking		
	G ²⁾	FEI57S; 2-wire PFM + UK marking		
	H ²⁾	FEI58; NAMUR+test button (H-L signal) + UK marking		
	Y	Special version: FEI50H		

Only in connection with supply circuit "Non-intrinsically safe" Only in connection with supply circuit "Intrinsically safe Ex ia" % f(x)=01) 2)

Position	Position 9 (Housing)			
Selected option		Description		
FTI56	1	F15 316L hygiene IP66/67 NEMA4X		
	3	F17 Alu IP66/67 NEMA4X		
	4	F13 Alu IP66 NEMA4X + gas-tight probe seal		
	5	T13 Alu IP66 NEMA4X + gas-tight probe seal + separate conn. compartment		
	6	F27 316L IP66/67 NEMA6P + gas-tight probe seal		

Position	Position 11 (Type of probe)			
Selected option Description		Description		
FTI56	1	Compact		
	2, 3, 4, 5	mm/in L4 cable > separate enclosure		

Optional specifications


No options specific to hazardous locations are available.

Safety instructions: General	 Staff must meet the following conditions for mounting, electrical installation, commissioning and maintenance of the device: Be suitably qualified for their role and the tasks they perform Be trained in explosion protection Be familiar with national regulations Install the device according to the manufacturer's instructions and national regulations. Do not operate the device outside the specified electrical, thermal and mechanical parameters. Avoid electrostatic charging: Of plastic surfaces (e.g. enclosure, sensor element, special varnishing, attached additional plates,) Of isolated capacities (e.g. isolated metallic plates)
Safety instructions: Special conditions	Permitted ambient temperature range at the electronics enclosure, permitted process temperature: -50 °C $\leq T_a \leq +70$ °C
	Observe the information in the temperature tables.In the event of additional or alternative special varnishing on the

- enclosure or other metal parts:
 - Observe the danger of electrostatic charging and discharge.
 Do not rub surfaces with a dry cloth.

Basic specification, Position 9 = 4, 5 and covers with glass window Restriction to -40 °C \leq T_a \leq +70 °C.

Safety instructions: Installation

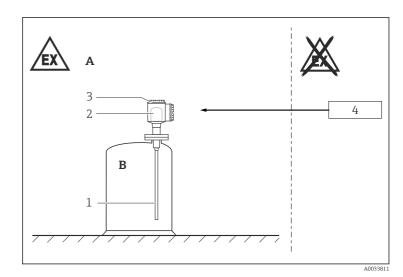

- A Supply circuit "Intrinsically safe Ex ia": Zone 20, Zone 21, Zone 22 Supply circuit "Non-intrinsically safe": Zone 21, Zone 22
- B Zone 20
- 1 Rope or rod probes
- 2 Electronic insert
- 3 Enclosure
- 4 Supply circuit "Intrinsically safe Ex ia": Certified associated apparatus Supply circuit "Non-intrinsically safe": Power supply
- Do not open in a potentially explosive dust atmosphere.
- Observe the maximum process conditions according to the manufacturer's Operating Instructions.
- At high medium temperatures, note flange pressure load capacity as a factor of temperature.
- To maintain the ingress protection of the enclosure:
 - Screw the cover tight.
 - Mount the cable entry correctly.
- After aligning (rotating) the enclosure, retighten the fixing screw (see Operating Instructions).
- Connect the device using suitable cable and wire entries of protection type "Equipment dust ignition protection by enclosure (Ex t)" or "Increased safety (Ex e)" (ingress protection of at least IP65). Lay connecting cable and secure.

- Seal unused entry glands with approved sealing plugs that correspond to the type of protection.
- Install the device to exclude any mechanical damage or friction during the application. Pay particular attention to flow conditions and tank fittings.
- Mechanically fix probes which are more than 3 m (e.g. using guy ropes).

Basic specification, Position 9 = 1 Before operation:

- Screw in the cover all the way.
- Tighten the securing clamp on the cover.

Basic specification, Position 9 = 3, 4, 5, 6Tighten the cover with torque 12 Nm.

Intrinsic safety

Observe the pertinent guidelines when interconnecting intrinsically safe circuits.

Potential equalization

Install potential equalization between the certified associated apparatus (non-hazardous area, \mathbb{A}) and the device (explosion-hazardoue area, \mathbb{A}).

Safety instructions: Zone 20

- In the event of potentially explosive dust/air mixtures, only operate the device under atmospheric conditions.
 - Temperature: -20 to +60 °C
 - Pressure: 80 to 110 kPa (0.8 to 1.1 bar)
 - Air with normal oxygen content, usually 21 % (V/V)
- If no potentially explosive mixtures are present, or if additional protective measures have been taken, the device may also be operated under non-atmospheric conditions in accordance with the manufacturer's specifications.


Temperature	2
tables	

	Probe and electronics enclosure in Zone 20	
	Connection to certified intrinsically safe power circuits	
Max. surface temperature at an ambient temperature of 70 °C	80 °C Deposited material with a layer of 200 mm T_{200} 130 °C	

	Probe in	Electronics enclosure in Zone 21, Zone 22		
	Zone 20	Connection to certified intrinsically safe power circuits	Connection to non-intrinsically safe power circuits	
Max. surface temperature at an ambient temperature of 70 $^\circ\mathrm{C}$	70 °C	80 °C	90 °C	
The compact version can also be used for process temperatures between +70 to +150 °C if it can also be ensured that the ambient temperature at the electronics enclosure does not exceed the values as indicated in the temperature graphic.	150°C	40 °C	40 ℃	


Compact version

Rod and rope version, partially insulated

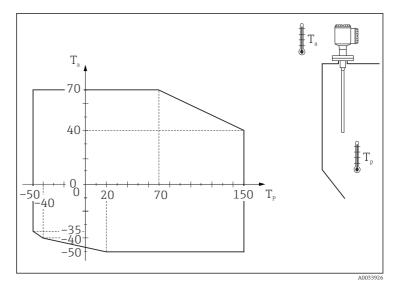

• 1

- T_a Ambient temperature in °C
- T_p Process temperature in °C

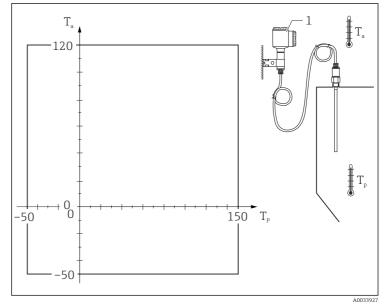

Version with separate enclosure

፼ 2

- T_a Ambient temperature in °C
- T_p Process temperature in °C
- 1 Temperature at the separate enclosure: $-40 \degree C \le T_a \le +70 \degree C$

Connection data

Connection to certified intrinsically safe circuits Ex ia (Zone 20)

Basic specification, Position 8	Electrical data
F	$\begin{array}{l} U_i \leq 35 \ V \\ I_i \leq 100 \ mA \\ P_i \leq 1 \ W \\ C_i \leq 2.4 \ nF \\ L_i \leq 0 \end{array}$
G	$\begin{array}{l} U_{i} \leq 16.1 \; V \\ I_{i} \leq 100 \; mA \\ P_{i} \leq 1 \; W \\ C_{i} \leq 2.4 \; nF \\ L_{i} \leq 0 \end{array}$

Basic specification, Position 8	Electrical data
Н	$\begin{array}{l} U_{i} \leq 18 \ V \\ I_{i} \leq 52 \ mA \\ P_{i} \leq 170 \ mW \\ C_{i}/L_{i} \leq 0 \end{array}$
У	$\begin{array}{l} U_{i} \leq 30 \; V \\ I_{i} \leq 120 \; mA \\ P_{i} \leq 1 \; W \\ C_{i} \leq 2.4 \; nF \\ L_{i} \leq 0 \end{array}$

Connection to non-instrinsically safe circuits (Zone 20/21 or Zone 20/22)

Basic specification, Position 8	Electrical data
Y ¹⁾	$U \le 35 V_{DC}$
F ¹⁾	$U \le 35 V_{DC}$

1) With Basic specification, Position 9 = 5 only with limiting module

Basic specification, Position 8	Power supply	Relay circuit
В	19 to 253 V _{AC}	-
С	10 to 55 V _{DC}	-
E	19 to 253 V _{AC}	$\begin{array}{l} 253 \ V_{AC} \ / \ 6 \ A \\ 1 \ 500 \ VA \ / \ cos \ \phi = 1 \\ 750 \ VA \ / \ cos \ \phi > 0.7 \end{array}$
	19 to 55 V _{DC}	30 V _{DC} / 4 A 125 V _{DC} / 0.2 A



71564245

www.addresses.endress.com

