

# Safety Instructions

## Micropilot

### FMR60B/62B/63B/66B/67B

Ex ia IIC T6...T1 Ga/Gb

Ex ia IIC T6...T1 Gb

Ex ia IIIC T\*\*\*°C Da/Db

Ex ia IIIC T\*\*\*°C Db





# Micropilot FMR60B/62B/63B/66B/67B

## Table of contents

About this document .....	4
Associated documentation .....	4
Supplementary documentation .....	4
General notes: Combined approval .....	5
Manufacturer's certificates .....	5
Manufacturer address .....	6
Extended order code .....	6
Safety instructions: General .....	11
Safety instructions: Special conditions .....	11
Safety instructions: Installation .....	13
Safety instructions: Zone separation Zone 0, Zone 1, Zone 20, Zone 21 .....	16
Temperature tables .....	16
Connection data .....	29

**About this document**

This document has been translated into several languages. Legally determined is solely the English source text.

**Associated documentation**

This document is an integral part of the following Operating Instructions:

**HART**

- BA02247F (FMR60B)
- BA02248F (FMR62B)
- BA02249F (FMR63B)
- BA02250F (FMR66B)
- BA02251F (FMR67B)

**PROFIBUS PA**

- BA02261F (FMR60B)
- BA02262F (FMR62B)
- BA02263F (FMR63B)
- BA02264F (FMR66B)
- BA02265F (FMR67B)

**PROFINET**

- BA02266F (FMR60B)
- BA02267F (FMR62B)
- BA02268F (FMR63B)
- BA02269F (FMR66B)
- BA02270F (FMR67B)

**Supplementary documentation**

Explosion protection brochure: CP00021Z

The Explosion-protection brochure is available:

- In the download area of the Endress+Hauser website:  
[www.endress.com](http://www.endress.com) -> Downloads -> Brochures and Catalogs ->  
Text Search: CP00021Z
- On the CD for devices with CD-based documentation

**General notes:  
Combined approval**

Ex ia IIC		Ex ia IIIC		Ex ia IIC		Ex ia IIIC	
Zone 0 or Zone 1	Zone 1	Zone 20 or Zone 21	Zone 21	Zone 0 or Zone 1	Zone 21	Zone 20 or Zone 21	Zone 1

The device is designed for operation in explosive gas or explosive dust atmosphere as shown in the sketch above. In the event of potentially explosive gas-air and dust-air mixtures occurring simultaneously: Suitability requires further assessment.



- A sequential change between gas and dust explosion protection is only possible if:
- A period with non-explosive atmosphere is realized during the transition or
  - Special examinations are done which are not covered by the certificate

**Manufacturer's certificates**

**KC Declaration of Conformity**

Certificate number:

**Ex ia IIC**

4-20 mA HART  
23-KA4BO-0113X  
PROFIBUS PA  
23-KA4BO-0115X  
PROFINET (APL)  
23-KA4BO-0117X

**Ex ia IIIC**

4-20 mA HART  
23-KA4BO-0118X  
PROFIBUS PA  
23-KA4BO-0119X  
PROFINET (APL)  
23-KA4BO-0120X

## IEC Declaration of Conformity

Certificate number:  
IECEX SEV 22.0028X

Affixing the certificate number certifies conformity with the following standards (depending on the device version):

- IEC 60079-0 : 2017
- IEC 60079-11 : 2011
- IEC 60079-26 : 2021
- IEC TS 60079-47 : 2021
- Protection Device Safety Certification Notification No. 2021-22

### Manufacturer address

Endress+Hauser SE+Co. KG  
Hauptstraße 1  
79689 Maulburg, Germany

Address of the manufacturing plant: See nameplate.

### Extended order code

The extended order code is indicated on the nameplate, which is affixed to the device in such a way that it is clearly visible. Additional information about the nameplate is provided in the associated Operating Instructions.

#### Structure of the extended order code

FMR6xB	-	*****	+	A*B*C*D*E*F*G*..
<i>(Device type)</i>		<i>(Basic specifications)</i>		<i>(Optional specifications)</i>

\* = Placeholder

At this position, an option (number or letter) selected from the specification is displayed instead of the placeholders.

#### *Basic specifications*

The features that are absolutely essential for the device (mandatory features) are specified in the basic specifications. The number of positions depends on the number of features available.

The selected option of a feature can consist of several positions.

#### *Optional specifications*

The optional specifications describe additional features for the device (optional features). The number of positions depends on the number of

features available. The features have a 2-digit structure to aid identification (e.g. JA). The first digit (ID) stands for the feature group and consists of a number or a letter (e.g. J = Test, Certificate). The second digit constitutes the value that stands for the feature within the group (e.g. A = 3.1 material (wetted parts), inspection certificate).

More detailed information about the device is provided in the following tables. These tables describe the individual positions and IDs in the extended order code which are relevant to hazardous locations.

### Extended order code: Micropilot



The following specifications reproduce an extract from the product structure and are used to assign:

- This documentation to the device (using the extended order code on the nameplate).
- The device options cited in the document.

#### Device type

FMR60B, FMR62B, FMR63B, FMR66B, FMR67B

#### Basic specifications

Position 1, 2 (Approval)		
Selected option		Description
FMR6xB	KK	KC Ex ia IIC T6...T1 Ga/Gb KC Ex ia IIC T6...T1 Gb KC Ex ia IIIC Txxx°C Da/Db KC Ex ia IIIC Txxx°C Db KC Ex ia IIC T6...T1 Ga / Ex ia IIIC Txxx°C Db KC Ex ia IIIC Txxx°C Da / Ex ia IIC T6...T1 Gb

Position 3, 4 (Output)		
Selected option		Description
FMR6xB	BA	2-wire, 4-20 mA HART
	DA	2-wire, PROFIBUS PA
	FA	2-wire, PROFINET, 10Mbit/s (APL)

Position 5 (Display, Operation)		
Selected option		Description
FMR6xB	M	Prepared for display FHX50B + Gland M20
	N	Prepared for display FHX50B + Thread NPT1/2
	O	Prepared for display FHX50B + Thread M20

Position 6 (Housing, Material)		
Selected option		Description
FMR6xB	B	Single compartment; Alu, coated
	J	Dual compartment; Alu, coated
	K	Dual compartment; 316L
	M	Dual compartment L-shape; Alu, coated
	N	Dual compartment L-shape; 316L, coated

Position 7 (Electrical Connection)		
Selected option		Description
FMR6xB	B	Gland M20, brass nickel plated, IP66/68 NEMA Type 4X/6P
	C	Gland M20, 316L, IP66/68 NEMA Type 4X/6P
	F	Thread M20, IP66/68 NEMA Type 4X/6P
	G	Thread G1/2, IP66/68 NEMA Type 4X/6P
	H	Thread NPT1/2, IP66/68 NEMA Type 4X/6P

Position 8 (Application)		
Selected option		Description
FMR60B FMR62B FMR63B FMR67B	B	Process temperature -20...+150°C
FMR60B FMR66B FMR67B	D	Process temperature -20...+200°C
FMR60B FMR66B	F	Process temperature -40...+80°C
FMR60B FMR66B	H	Process temperature -40...+130°C
FMR6xB	J	Process temperature -40...+150°C
	L	Process temperature -40...+200°C



<b>Position 8 (Application)</b>		
<b>Selected option</b>		<b>Description</b>
FMR62B	N	Process temperature -40...+280°C
FMR67B	P	Process temperature -40...+450°C
FMR62B	R	Process temperature -60...+200°C
	T	Process temperature -196...+200°C
FMR62B	V	Process temperature -20...+150°C, Steam application
FMR63B	W	Process temperature -20...+200°C, Steam application

<b>Position 9, 10 (Antenna)</b>		
<b>Selected option</b>		<b>Description</b>
FMR60B	BS	Encapsulated, PVDF, 40mm/1-1/2"
FMR66B		
FMR60B	GA	Drip-off, PTFE 50mm/2"
FMR62B		
FMR66B		
FMR67B		
FMR60B	GE	Integrated, PEEK, 20mm/3/4"
FMR63B		
FMR60B	GF	Integrated, PEEK, 40mm/1-1/2"
FMR62B	GM	Cladded flush mount, PTFE, 50mm/2"
FMR63B	GN	Cladded flush mount, PTFE, 80mm/3"
FMR67B	GP	Flush mount, PTFE, 80mm/3"
FMR63B	GQ	Cladded, flush mount, PEEK, 20mm/3/4"
	GR	Cladded, flush mount, PEEK, 40mm/1-1/2"
FMR62B	GT	Horn, 316L, 65mm/2.6"
FMR67B		

<b>Position 11, 12 (Process Connection, Sealing Surface)</b>		
<b>Selected option</b>		<b>Description</b>
FMR67B	JD	Alignment device, UNI flange

Position 16 (Seal)		
Selected option		Description
FMR60B FMR66B	A	PVDF encapsulated
FMR62B FMR63B	B	PTFE cladded
FMR63B	C	PEEK cladded
FMR6xB	D	VKM Viton GLT
	G	EPDM
FMR60B FMR62B	J	HNBR
FMR63B FMR67B	P	FFKM Kalrez
FMR62B FMR67B	U	Graphite

Position 17 (Air Purge Connection)		
Selected option		Description
FMR6xB	1	G1/4
	2	NPT1/4
	3	Adapter G1/4
	4	Adapter NPT1/4

### *Optional specifications*

ID Jx, Kx (Test, Certificate, Declaration)		
Selected option		Description
FMR6xB	JL	Ambient temp. transmitter -50°C/-58°F, sensor see specification

ID Nx, Ox (Accessory Mounted)		
Selected option		Description
FMR6xB	NA	Overvoltage protection <sup>1)</sup>

- 1) Only in connection with Position 6 = J, K, M, N

ID Px, Rx (Accessory Enclosed)	
Selected option	Description
FMR6xB PA	Weather protection cover, 316L <sup>1)</sup>

1) Only in connection with Position 6 = J, K, M, N

**Safety instructions:**  
**General**

- The device is intended to be used in explosive atmospheres as defined in the scope of IEC 60079-0 or equivalent national standards. If no potentially explosive atmospheres are present or if additional protective measures have been taken: The device may be operated according to the manufacturer's specifications.
- Devices suitable for zone separation (marked Ga/Gb or Da/Db) are always suitable for installation in the less critical zone (Gb or Db). Due to space limitations the corresponding marking maybe not indicated on the nameplate.
- Comply with the installation and safety instructions in the Operating Instructions.
- Staff must meet the following conditions for mounting, electrical installation, commissioning and maintenance of the device:
  - Be suitably qualified for their role and the tasks they perform
  - Be trained in explosion protection
  - Be familiar with national regulations
- Install the device according to the manufacturer's instructions and national regulations.
- Do not operate the device outside the specified electrical, thermal and mechanical parameters.
- Only use the device in media to which the wetted materials have sufficient durability.
- Avoid electrostatic charging:
  - Of plastic surfaces (e.g. enclosure, sensor element, special varnishing, attached additional plates, ...)
  - Of isolated capacities (e.g. isolated metallic plates)
- Alterations to the device can affect the explosion protection and must be carried out by staff authorized to perform such work by Endress+Hauser.

**Safety instructions:**  
**Special conditions**

- To avoid electrostatic charging: Do not rub surfaces with a dry cloth.
- In the event of additional or alternative special varnishing on the enclosure or other metal parts or for adhesive plates:
  - Observe the danger of electrostatic charging and discharge.
  - Do not install in the vicinity of processes ( $\leq 0.5$  m) generating strong electrostatic charges.
- Avoid sparks caused by impact and friction.

- In the case of process connections made of polymeric material or with polymeric coatings, avoid electrostatic charging of the plastic surfaces.
- For light metal flanges or flange faces (e.g. titanium, zirconium), avoid sparks caused by impact and friction.
- Avoid electrostatic charging of the sensor (e.g. do not rub dry and install outside the filling flow).

*Optional specification, ID Px, Rx = PA*

Connect the weather protection cover to the local potential equalization.

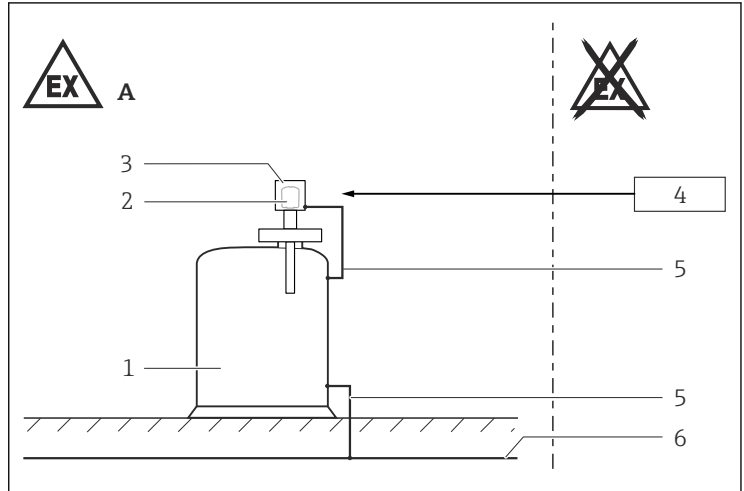
*Device type FMR67B and Basic specification, Position 11, 12 = JD*

- In Zone 0, Zone 20, avoid sparks caused by impact and friction.
- Changing the position of the alignment device must be impossible:
  - After the alignment of the antenna via the pivot bracket
  - After tightening of the clamping flange
  - After setting the damping ring (torque 10 to 11 Nm)
- Degree of protection IP67 must be fulfilled.

*Device type FMR67B and Basic specification, Position 17 = 1, 2, 3, 4*

- In Zone 0, Zone 20, avoid sparks caused by impact and friction.
- After removing the air purge connection: Lock the opening with a suitable plug.  
Torque: 6-7 Nm
- Degree of protection IP67 must be fulfilled.

## Safety instructions: Installation



A0025536

- A Zone 1, Zone 21
- 1 Tank; Zone 0, Zone 1, Zone 20, Zone 21
- 2 Electronic insert
- 3 Enclosure
- 4 Associated intrinsically safe power supply units
- 5 Potential equalization line
- 6 Local potential equalization

- After aligning (rotating) the enclosure, retighten the fixing screw.
- When the device is connected to certified intrinsically safe circuits of Category Ex ib for Equipment Groups IIC and IIB, the type of protection changes to Ex ib IIC and Ex ib IIB. Do not operate the sensor in Zone 0 if connecting to an intrinsically safe circuit of Category Ex ib.
- When the device is connected to certified intrinsically safe circuits of Category Ex ib for Equipment Groups IIIC and IIIB, the type of protection changes to Ex ib IIIC and Ex ib IIIB. Do not operate the sensor in Zone 20 if connecting to an intrinsically safe circuit of Category Ex ib.
- Continuous service temperature of the connecting cable:  $\geq T_a + 20 \text{ K}$ .
- Observe the pertinent guidelines when interconnecting intrinsically safe circuits.
- Observe the maximum process conditions according to the manufacturer's Operating Instructions.
- Install the device to exclude any mechanical damage or friction during the application. Pay particular attention to flow conditions and tank fittings.

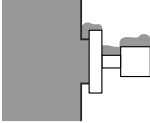
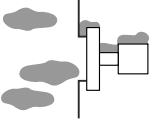
- Perform the following to achieve the degree of protection IP66/67:
  - Screw the cover tight.
  - Mount the cable entry correctly.
- Seal unused entry glands with suitable sealing plugs that correspond to the type of protection.
- Supplied cable glands and metallic sealing plugs comply with the requirements of type of protection marked on the nameplate.
- The plastic sealing plug is used only as transport protection.

*Basic specification, Position 5 = N, O*

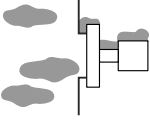
Observe the requirements according to IEC/EN 60079-14 for conduit systems and the wiring- and installation instructions of the suitable Safety Instructions (XA). In addition, observe national regulations and standards for conduit systems.

*Permitted ambient conditions*

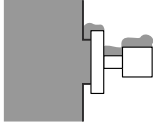
**Ex ia IIIC T<sub>xxx</sub>°C Da/Db**

Process Zone 20		Enclosure Zone 21
Continuous dust submersion		Dust accumulation or temporary explosive dust atmosphere
Continuous explosive dust atmosphere and deposits		Dust accumulation or temporary explosive dust atmosphere

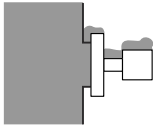
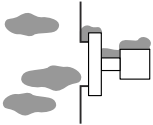
**Ex ia IIIC T<sub>xxx</sub>°C Db**

Process Zone 21		Enclosure Zone 21
Continuous dust deposits or temporary explosive dust atmosphere		Dust accumulation or temporary explosive dust atmosphere

**Ex ia IIC T6...T1 Ga / Ex ia IIIC Txxx°C Db**

Process Zone 0		Enclosure Zone 21
Explosive gas atmosphere		Dust accumulation or temporary explosive dust atmosphere

**Ex ia IIIC Txxx°C Da / Ex ia IIC T6...T1 Gb**

Process Zone 20		Enclosure Zone 1
Continuous dust submersion		Temporary explosive gas atmosphere
Continuous explosive dust atmosphere and deposits		Temporary explosive gas atmosphere

**Intrinsic safety**

- The device is only suitable for connection to certified, intrinsically safe equipment with explosion protection Ex ia / Ex ib.
- The intrinsically safe input power circuit of the device is isolated from ground. The dielectric strength is at least  $500 V_{rms}$ .

*Optional specification, ID Nx, Ox = NA*

The intrinsically safe input power circuit of the device is isolated from ground. The dielectric strength is at least  $290 V_{rms}$ .

**Potential equalization**

Integrate the device into the local potential equalization.

**Safety****instructions:****Zone separation****Zone 0, Zone 1,****Zone 20, Zone 21**

*Basic specification, Position 9, 10 = BS*

- Material specification of the separating element:
  - PVDF plastic:  $\geq 1$  mm
  - Maximum process temperature  $T_p$ : 80 °C (dust) / 130 °C (gas)
  - Maximum Working Pressure (MWP): 3 bar
- The antenna must not be subjected to abrasive or corrosive medium that may adversely affect the partition for the zone separation.

*Basic specification, Position 9, 10 = Gx*

- The separating element is not directly in contact with the process (process-wetted).
- Material specification of the separating element:
  - Glass feedthrough:  $\geq 1$  mm
  - Stainless steel weld:  $\geq 1$  mm

*Basic specification, Position 9, 10 in connection with Position 16*

The sealing is directly in contact with the process (process-wetted).

**Temperature tables****Ex ia IIC T6...T1 Ga/Gb**

- The specified ambient and process temperature ranges exclusively refer to the explosion protection and must not be exceeded. Operationally permitted ambient temperature ranges can be restricted depending on the version: See Operating Instructions.
- Do not exceed the max. ambient temperature at the enclosure.



*Optional specification, ID Jx, Kx = JL*

Lower limit of the ambient temperature for explosion protection changes to  $-50$  °C.

**Description notes**

Unless otherwise indicated, the positions always refer to the basic specification.

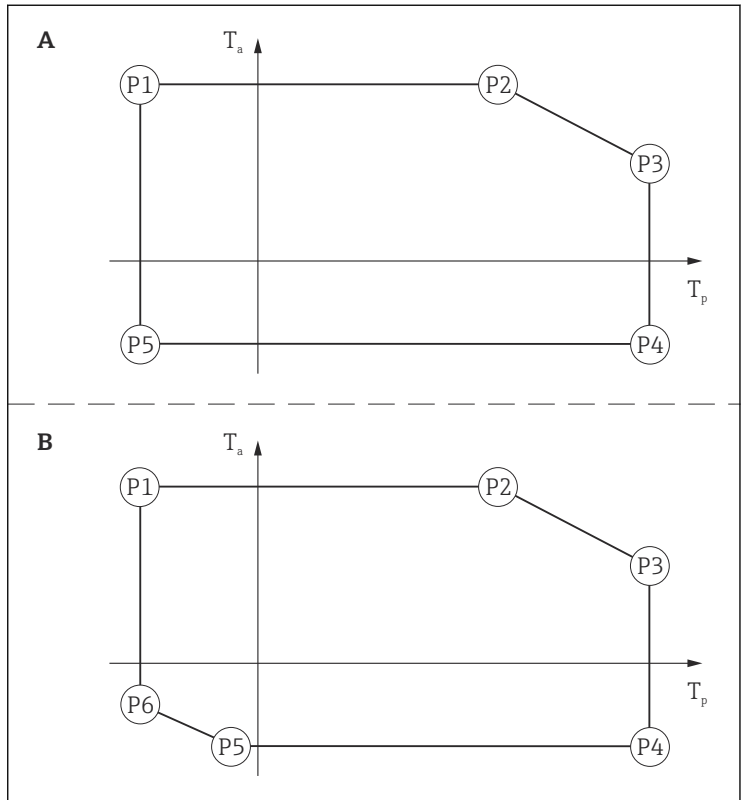
1st column: Temperature classes T6 (85 °C) to T1 (450 °C)

Column P1 to P5: Position (temperature value) on the axes of the derating


- $T_a$ : Ambient temperature in °C
- $T_p$ : Process temperature in °C



**Example diagrams of possible deratings**



A0022717

	<b>Position 6 (Housing, Material)</b>
	B, J, M

**FMR60B, FMR66B**

<b>Position 8 (Application)</b>
F

<b>Position 9, 10 (Antenna)</b>
BS

	P1		P2		P3		P4		P5		P6	
	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>
T6	-40	46	46	46	80	28	80	-40	-40	-40	-	-
T5...T1	-40	65	65	65	80	55	80	-40	-40	-40	-	-

**FMR60B, FMR62B, FMR63B, FMR66B, FMR67B**

<b>Position 8 (Application)</b>
B, J, V

<b>Position 9, 10 (Antenna)</b>
GA, GE, GF

	P1		P2		P3		P4		P5		P6	
	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>
T6	-40 <sup>1)</sup>	46	46	46	80	32	80	-40 <sup>2)</sup>	-40 <sup>1)</sup>	-40 <sup>2)</sup>	-	-
T5	-40 <sup>1)</sup>	61	61	61	95	47	95	-40 <sup>2)</sup>	-40 <sup>1)</sup>	-40 <sup>2)</sup>	-	-
T4	-40 <sup>1)</sup>	65	65	65	130	54	130	-40 <sup>2)</sup>	-40 <sup>1)</sup>	-40 <sup>2)</sup>	-	-
T3...T1	-40 <sup>1)</sup>	65	65	65	150	51	150	-40 <sup>2)</sup>	-40 <sup>1)</sup>	-40 <sup>2)</sup>	-	-

- 1) Position 16 = J, P: -20 °C
- 2) Optional specification, ID Jx, Kx = JL: -50 °C

**FMR62B, FMR63B, FMR67B****Position 8 (Application)**

D, L, R, T, W

**Position 9, 10 (Antenna)**

GM, GN, GQ, GR, GP

	P1		P2		P3		P4		P5		P6	
	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>
T6	-196 <sup>1) 2) 3)</sup>	46	46	46	80	37	80	-40 <sup>4)</sup>	-50 <sup>1) 2) 3)</sup>	-40 <sup>4)</sup>	-196	-6
T5	-196 <sup>1) 2) 3)</sup>	61	61	61	95	52	95	-40 <sup>4)</sup>	-50 <sup>1) 2) 3)</sup>	-40 <sup>4)</sup>	-196	-6
T4	-196 <sup>1) 2) 3)</sup>	65	65	65	130	56	130	-40 <sup>4)</sup>	-50 <sup>1) 2) 3)</sup>	-40 <sup>4)</sup>	-196	-6
T3	-196 <sup>1) 2) 3)</sup>	65	65	65	195	47	195	-40 <sup>4)</sup>	-50 <sup>1) 2) 3)</sup>	-40 <sup>4)</sup>	-196	-6
T2...T1	-196 <sup>1) 2) 3)</sup>	65	65	65	200	46	200	-40 <sup>4)</sup>	-50 <sup>1) 2) 3)</sup>	-40 <sup>4)</sup>	-196	-6

- 1) Position 8 = D, W: -20 °C; P6 not relevant
- 2) Position 8 = L: -40 °C; P6 not relevant
- 3) Position 8 = R: -60 °C; P6 not relevant
- 4) Optional specification, ID Jx, Kx = JL: -50 °C

**FMR62B, FMR67B****Position 8 (Application)**

N, R, T

**Position 9, 10 (Antenna)**

GT

	P1		P2		P3		P4		P5		P6	
	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>
T6	-196 <sup>1)2)</sup>	46	46	46	80	43	80	-40 <sup>3)</sup>	-50 <sup>1)2)</sup>	-40 <sup>3)</sup>	-196	-32
T5	-196 <sup>1)2)</sup>	61	61	61	95	58	95	-40 <sup>3)</sup>	-50 <sup>1)2)</sup>	-40 <sup>3)</sup>	-196	-32
T4	-196 <sup>1)2)</sup>	65	65	65	130	61	130	-40 <sup>3)</sup>	-50 <sup>1)2)</sup>	-40 <sup>3)</sup>	-196	-32
T3	-196 <sup>1)2)</sup>	65	65	65	195	57	195	-40 <sup>3)</sup>	-50 <sup>1)2)</sup>	-40 <sup>3)</sup>	-196	-32
T2...T1	-196 <sup>1)2)</sup>	65	65	65	280 <sup>4)</sup>	52	280 <sup>4)</sup>	-40 <sup>3)</sup>	-50 <sup>1)2)</sup>	-40 <sup>3)</sup>	-196	-32

- 1) Position 8 = N: -40 °C; P6 not relevant
- 2) Position 8 = R: -60 °C; P6 not relevant
- 3) Optional specification, ID Jx, Kx = JL: -50 °C
- 4) Position 8 = R, T: 200 °C

**Position 8 (Application)**

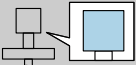
P

**Position 9, 10 (Antenna)**

GT

	P1		P2		P3		P4		P5		P6	
	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>
T6	-40	46	46	46	80	43	80	-40 <sup>1)</sup>	-40	-40 <sup>1)</sup>	-	-
T5	-40	61	61	61	95	58	95	-40 <sup>1)</sup>	-40	-40 <sup>1)</sup>	-	-
T4	-40	65	65	65	130	61	130	-40 <sup>1)</sup>	-40	-40 <sup>1)</sup>	-	-
T3	-40	65	65	65	195	57	195	-40 <sup>1)</sup>	-40	-40 <sup>1)</sup>	-	-
T2	-40	65	65	65	290	51	290	-40 <sup>1)</sup>	-40	-40 <sup>1)</sup>	-	-
T1	-40	65	65	65	440	39	440	-40 <sup>1)</sup>	-40	-40 <sup>1)</sup>	-	-

- 1) Optional specification, ID Jx, Kx = JL: -50 °C

	<b>Position 6 (Housing, Material)</b>
	K, N

**FMR60B, FMR66B**

<b>Position 8 (Application)</b>
F

<b>Position 9, 10 (Antenna)</b>
BS

	P1		P2		P3		P4		P5		P6	
	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>
T6	-40	46	46	46	80	29	80	-40	-40	-40	-	-
T5...T1	-40	65	65	65	80	54	80	-40	-40	-40	-	-

**FMR60B, FMR62B, FMR63B, FMR66B, FMR67B**

<b>Position 8 (Application)</b>
B, J, V

<b>Position 9, 10 (Antenna)</b>
GA, GE, GF

	P1		P2		P3		P4		P5		P6	
	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>
T6	-40 <sup>1)</sup>	46	46	46	80	28	80	-40 <sup>2)</sup>	-40 <sup>1)</sup>	-40 <sup>2)</sup>	-	-
T5	-40 <sup>1)</sup>	61	61	61	95	43	95	-40 <sup>2)</sup>	-40 <sup>1)</sup>	-40 <sup>2)</sup>	-	-
T4	-40 <sup>1)</sup>	65	65	65	130	53	130	-40 <sup>2)</sup>	-40 <sup>1)</sup>	-40 <sup>2)</sup>	-	-
T3...T1	-40 <sup>1)</sup>	65	65	65	150	42	150	-40 <sup>2)</sup>	-40 <sup>1)</sup>	-40 <sup>2)</sup>	-	-

- 1) Position 16 = J, P: -20 °C
- 2) Optional specification, ID Jx, Kx = JL: -50 °C

**FMR62B, FMR63B, FMR67B****Position 8 (Application)**

D, L, R, T, W

**Position 9, 10 (Antenna)**

GM, GN, GQ, GR, GP

	P1		P2		P3		P4		P5		P6	
	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>
T6	-196 <sup>1) 2) 3)</sup>	46	46	46	80	34	80	-40 <sup>4)</sup>	-50 <sup>1) 2) 3)</sup>	-40 <sup>4)</sup>	-196	-2
T5	-196 <sup>1) 2) 3)</sup>	61	61	61	95	49	95	-40 <sup>4)</sup>	-50 <sup>1) 2) 3)</sup>	-40 <sup>4)</sup>	-196	-2
T4	-196 <sup>1) 2) 3)</sup>	65	65	65	130	56	130	-40 <sup>4)</sup>	-50 <sup>1) 2) 3)</sup>	-40 <sup>4)</sup>	-196	-2
T3	-196 <sup>1) 2) 3)</sup>	65	65	65	195	39	195	-40 <sup>4)</sup>	-50 <sup>1) 2) 3)</sup>	-40 <sup>4)</sup>	-196	-2
T2...T1	-196 <sup>1) 2) 3)</sup>	65	65	65	200	37	200	-40 <sup>4)</sup>	-50 <sup>1) 2) 3)</sup>	-40 <sup>4)</sup>	-196	-2

- 1) Position 8 = D, W: -20 °C; P6 not relevant
- 2) Position 8 = L: -40 °C; P6 not relevant
- 3) Position 8 = R: -60 °C; P6 not relevant
- 4) Optional specification, ID Jx, Kx = JL: -50 °C

### FMR62B, FMR67B

**Position 8 (Application)**

N, R, T

**Position 9, 10 (Antenna)**

GT

	P1		P2		P3		P4		P5		P6	
	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>
T6	-196 <sup>1) 2)</sup>	46	46	46	80	42	80	-40 <sup>3)</sup>	-50 <sup>1) 2)</sup>	-40 <sup>3)</sup>	-196	-30
T5	-196 <sup>1) 2)</sup>	61	61	61	95	57	95	-40 <sup>3)</sup>	-50 <sup>1) 2)</sup>	-40 <sup>3)</sup>	-196	-30
T4	-196 <sup>1) 2)</sup>	65	65	65	130	61	130	-40 <sup>3)</sup>	-50 <sup>1) 2)</sup>	-40 <sup>3)</sup>	-196	-30
T3	-196 <sup>1) 2)</sup>	65	65	65	195	57	195	-40 <sup>3)</sup>	-50 <sup>1) 2)</sup>	-40 <sup>3)</sup>	-196	-30
T2...T1	-196 <sup>1) 2)</sup>	65	65	65	280 <sup>4)</sup>	52	280 <sup>4)</sup>	-40 <sup>3)</sup>	-50 <sup>1) 2)</sup>	-40 <sup>3)</sup>	-196	-30

- 1) Position 8 = N: -40 °C; P6 not relevant
- 2) Position 8 = R: -60 °C; P6 not relevant
- 3) Optional specification, ID Jx, Kx = JL: -50 °C
- 4) Position 8 = R, T: 200 °C

**Position 8 (Application)**

P


**Position 9, 10 (Antenna)**

GT


	P1		P2		P3		P4		P5		P6	
	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>	T <sub>p</sub>	T <sub>a</sub>
T6	-40	46	46	46	80	42	80	-40 <sup>1)</sup>	-40	-40 <sup>1)</sup>	-	-
T5	-40	61	61	61	95	57	95	-40 <sup>1)</sup>	-40	-40 <sup>1)</sup>	-	-
T4	-40	65	65	65	130	61	130	-40 <sup>1)</sup>	-40	-40 <sup>1)</sup>	-	-
T3	-40	65	65	65	195	57	195	-40 <sup>1)</sup>	-40	-40 <sup>1)</sup>	-	-
T2	-40	65	65	65	290	51	290	-40 <sup>1)</sup>	-40	-40 <sup>1)</sup>	-	-
T1	-40	65	65	65	440	32	440	-40 <sup>1)</sup>	-40	-40 <sup>1)</sup>	-	-

- 1) Optional specification, ID Jx, Kx = JL: -50 °C

**Ex ia IIIC T<sub>xxx</sub>°C Da/Db**

-  The specified surface temperature takes into account all direct heat influences from process heat and self-heating at the enclosure.
- The specified ambient and process temperature ranges exclusively refer to the explosion protection and must not be exceeded. Operationally permitted ambient temperature ranges can be restricted depending on the version: See Operating Instructions.
- Do not exceed the max. ambient temperature at the enclosure.

For detailed information see Technical Information.


-  Protection type of enclosure: IP66/67

Specific conditions of use:


- The surface temperature is
  - for equipment protection level (EPL) Da: T<sub>200</sub> xxx °C (with 200 mm dust deposit)
  - and equipment protection level (EPL) Db: T<sub>L</sub> xxx °C (with dust accumulation T<sub>L</sub>)
- The surface temperature is for equipment protection level (EPL) Db: T<sub>L</sub> xxx °C (with dust accumulation T<sub>L</sub>)

-  T<sub>L</sub> marking:  
The assigned surface temperature without dust layer is the same.

**Description notes**

-  Unless otherwise indicated, the positions always refer to the basic specification.



	<b>Position 6 (Housing, Material)</b>
	B, J, K, M, N

**FMR60B, FMR66B, FMR67B**Ex ia IIIC T<sub>200</sub> 80°C Da/DbEx ia IIIC T<sub>L</sub> 80°C Db

<b>Position 8 (Application)</b>
F

<b>Position 9, 10 (Antenna)</b>
BS

Maximum surface temperature	Process temperature range	Ambient temperature range
T <sub>200</sub> 80 °C	-20 °C ≤ T <sub>p</sub> ≤ +80 °C	-20 °C ≤ T <sub>a</sub> ≤ +55 °C

**FMR60B, FMR62B, FMR63B, FMR66B, FMR67B**Ex ia IIIC T<sub>200</sub> 150°C Da/DbEx ia IIIC T<sub>L</sub> 150°C Db**Position 8 (Application)**

B, H, J, V

**Position 9, 10 (Antenna)**

GA, GE, GF, GQ, GR

Maximum surface temperature	Process temperature range	Ambient temperature range
T <sub>200</sub> 80 °C	-40 °C <sup>1)2)</sup> ≤ T <sub>p</sub> ≤ +80 °C	-40 °C <sup>4)</sup> ≤ T <sub>a</sub> ≤ +60 °C
T <sub>200</sub> 100 °C	-40 °C <sup>1)2)</sup> ≤ T <sub>p</sub> ≤ +100 °C	-40 °C <sup>4)</sup> ≤ T <sub>a</sub> ≤ +55 °C
T <sub>200</sub> 130 °C	-40 °C <sup>1)2)</sup> ≤ T <sub>p</sub> ≤ +130 °C	-40 °C <sup>4)</sup> ≤ T <sub>a</sub> ≤ +50 °C
T <sub>200</sub> 150 °C	-40 °C <sup>1)2)</sup> ≤ T <sub>p</sub> ≤ +150 °C <sup>3)</sup>	-40 °C <sup>4)</sup> ≤ T <sub>a</sub> ≤ +45 °C

- 1) Position 8 = B, V: -20 °C
- 2) Position 16 = J, P: -20 °C
- 3) Position 8 = H: 130 °C
- 4) Optional specification, ID Jx, Kx = JL: -50 °C

**FMR62B, FMR63B, FMR67B**Ex ia IIIC T<sub>200</sub> 200°C Da/DbEx ia IIIC T<sub>L</sub> 200°C Db**Position 8 (Application)**

D, L, R, T, W

**Position 9, 10 (Antenna)**

GA, GM, GN, GQ, GR, GP

Maximum surface temperature	Process temperature range	Ambient temperature range
T <sub>200</sub> 100 °C	-40 °C <sup>1) 2) 3) 4)</sup> ≤ T <sub>p</sub> ≤ +100 °C	-40 °C <sup>5)</sup> ≤ T <sub>a</sub> ≤ +60 °C
T <sub>200</sub> 150 °C	-40 °C <sup>1) 2) 3) 4)</sup> ≤ T <sub>p</sub> ≤ +150 °C	-40 °C <sup>5)</sup> ≤ T <sub>a</sub> ≤ +55 °C
T <sub>200</sub> 200 °C	-40 °C <sup>1) 2) 3) 4)</sup> ≤ T <sub>p</sub> ≤ +200 °C	-40 °C <sup>5)</sup> ≤ T <sub>a</sub> ≤ +50 °C

- 1) Position 8 = D, W: -20 °C
- 2) Position 8 = R: -60 °C
- 3) Position 8 = T: -196 °C
- 4) Position 16 = J, P: -20 °C
- 5) Optional specification, ID Jx, Kx = JL: -50 °C

**FMR62B, FMR67B**Ex ia IIC T<sub>200</sub> 280°C Da/DbEx ia IIC T<sub>L</sub> 280°C Db

Position 8 (Application)
N, R, T

Position 9, 10 (Antenna)
GT

Maximum surface temperature	Process temperature range	Ambient temperature range
T <sub>200</sub> 150 °C	-40 °C <sup>1) 2)</sup> ≤ T <sub>p</sub> ≤ +150 °C	-40 °C <sup>4)</sup> ≤ T <sub>a</sub> ≤ +65 °C
T <sub>200</sub> 200 °C	-40 °C <sup>1) 2)</sup> ≤ T <sub>p</sub> ≤ +200 °C	-40 °C <sup>4)</sup> ≤ T <sub>a</sub> ≤ +60 °C
T <sub>200</sub> 280 °C	-40 °C <sup>1) 2)</sup> ≤ T <sub>p</sub> ≤ +280 °C <sup>3)</sup>	-40 °C <sup>4)</sup> ≤ T <sub>a</sub> ≤ +50 °C

- 1) Position 8 = R: -60 °C
- 2) Position 8 = T: -196 °C
- 3) Position 8 = R, T: 200 °C
- 4) Optional specification, ID Jx, Kx = JL: -50 °C

Ex ia IIC T<sub>200</sub> 450°C Da/DbEx ia IIC T<sub>L</sub> 450°C Db

Position 8 (Application)
P

Position 9, 10 (Antenna)
GT

Maximum surface temperature	Process temperature range	Ambient temperature range
T <sub>200</sub> 150 °C	-40 °C ≤ T <sub>p</sub> ≤ +150 °C	-40 °C <sup>1)</sup> ≤ T <sub>a</sub> ≤ +65 °C
T <sub>200</sub> 200 °C	-40 °C ≤ T <sub>p</sub> ≤ +200 °C	-40 °C <sup>1)</sup> ≤ T <sub>a</sub> ≤ +60 °C
T <sub>200</sub> 450 °C	-40 °C ≤ T <sub>p</sub> ≤ +450 °C	-40 °C <sup>1)</sup> ≤ T <sub>a</sub> ≤ +30 °C

- 1) Optional specification, ID Jx, Kx = JL: -50 °C

**Connection data***Basic specification, Position 3 = BA*

Power supply
$U_i \leq 30 V_{DC}$ $I_i \leq 300 \text{ mA}$ $P_i \leq 1 \text{ W}$ $C_i \leq 10 \text{ nF}$ $L_i = 0$

*Basic specification, Position 3 = DA*

Power supply	
FISCO	Entity
$U_i \leq 17.5 V_{DC}$ $I_i \leq 380 \text{ mA}$ $P_i \leq 5.32 \text{ W}$ $C_i \leq 5 \text{ nF}$ $L_i = 0$	$U_i \leq 24 V_{DC}$ $I_i \leq 300 \text{ mA}$ $P_i \leq 1.2 \text{ W}$ $C_i \leq 5 \text{ nF}$ $L_i = 0$

*Basic specification, Position 3 = FA*

Power supply	
2-WISE	Entity
$U_i \leq 17.5 V_{DC}$ $I_i \leq 380 \text{ mA}$ $P_i \leq 5.32 \text{ W}$ $C_i \leq 5 \text{ nF}$ $L_i = 0$	$U_i \leq 17.5 V_{DC}$ $I_i \leq 300 \text{ mA}$ $P_i \leq 1.2 \text{ W}$ $C_i \leq 5 \text{ nF}$ $L_i = 0$

In connection with: *Basic specification, Position 5 = M, N, O*  
 Installation according to the specifications of FHX50B.



Only the type of protection suitable for the device shall be connected!

**Ex ia IIIC T<sub>xxx</sub>°C Da/Db****Cable entry: Connection compartment**Cable gland: *Basic specification, Position 7 = B*

Thread	Clamping range	Material	Sealing insert	O-ring
M20x1,5	ø 8 to 10.5 mm	Ms, nickel-plated	Silicone	EPDM (ø 17x2)

Cable gland: *Basic specification, Position 7 = C*

Thread	Clamping range	Material	Sealing insert	O-ring
M20x1,5	ø 7 to 12 mm	1.4404	NBR	EPDM (ø 17x2)



- The tightening torque refers to cable glands installed by the manufacturer:
  - Recommended: 3.5 Nm
  - Maximum: 10 Nm
  - This value may be different depending on the type of cable. However, the maximum value must not be exceeded.
- Only suitable for fixed installation. The operator must pay attention to a suitable strain relief of the cable.
- To maintain the ingress protection of the enclosure: Install the enclosure cover, cable glands and blind plugs correctly.





71590668

[www.addresses.endress.com](http://www.addresses.endress.com)

---