

# Technical Information

## Dosimass

Coriolis flowmeter



Mass flowmeter with hygienic design, highest repeatability and a compact transmitter

### Application

- Measuring principle operates independently of physical fluid properties such as viscosity or density
- Measurement of liquids with the most diverse properties for demanding batching and dosing applications

### Device properties

- Wetted materials CIP, SIP cleanable
- Hygienic approvals 3-A and EHEDG available
- Fullfilling global Food Contact Materials, EU, US, CN
- Robust, compact transmitter housing
- Pulse/frequency/switch output, IO-Link, Modbus RS485
- Excellent and easily cleanable transmitter

### Your benefits

- High process safety – highest measuring accuracy for different media in shortest filling time
- Fewer process measuring points – multivariable measurement (flow, density, temperature)
- Space-saving installation – no in-/outlet run needs
- Versatile and time-saving wiring – plug connector
- Fast commissioning – pre-configured devices
- Automatic recovery of data for servicing






## Table of contents

<b>About this document</b> . . . . .	<b>3</b>	<b>Process</b> . . . . .	<b>30</b>
Symbols . . . . .	3	Medium temperature range . . . . .	30
<b>Function and system design</b> . . . . .	<b>4</b>	Medium pressure range . . . . .	30
Measuring principle . . . . .	4	Medium density . . . . .	30
Measuring system . . . . .	5	Pressure-temperature ratings . . . . .	30
Equipment architecture . . . . .	6	Sensor housing . . . . .	32
Reliability . . . . .	7	Flow limit . . . . .	32
<b>Input</b> . . . . .	<b>7</b>	Pressure loss . . . . .	32
Measured variable . . . . .	7	Heating . . . . .	32
Measuring range . . . . .	7	Vibrations . . . . .	33
Operable flow range . . . . .	8	<b>Mechanical construction</b> . . . . .	<b>34</b>
Input signal . . . . .	8	Dimensions in SI units . . . . .	34
<b>Output</b> . . . . .	<b>9</b>	Dimensions in US units . . . . .	39
Output signal . . . . .	9	Weight . . . . .	42
Signal on alarm . . . . .	11	Materials . . . . .	43
Low flow cut off . . . . .	11	Process connections . . . . .	43
Galvanic isolation . . . . .	12	Surface roughness . . . . .	44
Protocol-specific data . . . . .	12	<b>Operability</b> . . . . .	<b>44</b>
<b>Power supply</b> . . . . .	<b>13</b>	Languages . . . . .	44
Terminal assignment . . . . .	13	Local operation . . . . .	44
Available device plugs . . . . .	13	IO-Link . . . . .	44
Supply voltage . . . . .	18	Remote operation . . . . .	44
Power consumption . . . . .	18	<b>Certificates and approvals</b> . . . . .	<b>45</b>
Current consumption . . . . .	18	CE mark . . . . .	45
Power supply failure . . . . .	18	UKCA marking . . . . .	45
Electrical connection . . . . .	18	RCM marking . . . . .	45
Ensuring . . . . .	19	Ex approval . . . . .	45
Cable specification . . . . .	19	Hygienic compatibility . . . . .	46
<b>Performance characteristics</b> . . . . .	<b>20</b>	Pharmaceutical compatibility . . . . .	46
Reference operating conditions . . . . .	20	Pressure Equipment Directive . . . . .	46
Maximum measurement error . . . . .	21	External standards and guidelines . . . . .	47
Repeatability . . . . .	22	Additional certification . . . . .	47
Response time . . . . .	22	<b>Ordering information</b> . . . . .	<b>47</b>
Influence of ambient temperature . . . . .	22	<b>Accessories</b> . . . . .	<b>47</b>
Influence of medium temperature . . . . .	22	Device-specific accessories . . . . .	48
Influence of medium pressure . . . . .	22	Communication-specific accessories . . . . .	48
Design fundamentals . . . . .	22	Service-specific accessories . . . . .	48
<b>Mounting</b> . . . . .	<b>23</b>	<b>Documentation</b> . . . . .	<b>48</b>
Installation point . . . . .	23	Standard documentation . . . . .	48
Orientation . . . . .	24	Supplementary device-dependent documentation . . . . .	49
Inlet and outlet runs . . . . .	26	<b>Registered trademarks</b> . . . . .	<b>49</b>
Special mounting instructions . . . . .	26		
<b>Environment</b> . . . . .	<b>29</b>		
Ambient temperature range . . . . .	29		
Storage temperature . . . . .	29		
Degree of protection . . . . .	29		
Shock and vibration resistance . . . . .	29		
Internal cleaning . . . . .	30		
Electromagnetic compatibility (EMC) . . . . .	30		









## About this document

### Symbols





#### Electrical symbols

Symbol	Meaning
	Direct current
	Alternating current
	Direct current and alternating current
	<b>Ground connection</b> A grounded terminal which, as far as the operator is concerned, is grounded via a grounding system.
	<b>Potential equalization connection (PE: protective earth)</b> Ground terminals that must be connected to ground prior to establishing any other connections.  The ground terminals are located on the interior and exterior of the device: <ul style="list-style-type: none"> <li>▪ Interior ground terminal: potential equalization is connected to the supply network.</li> <li>▪ Exterior ground terminal: device is connected to the plant grounding system.</li> </ul>

#### Symbols for certain types of information

Symbol	Meaning
	<b>Permitted</b> Procedures, processes or actions that are permitted.
	<b>Preferred</b> Procedures, processes or actions that are preferred.
	<b>Forbidden</b> Procedures, processes or actions that are forbidden.
	<b>Tip</b> Indicates additional information.
	Reference to documentation
	Reference to page
	Reference to graphic
	Visual inspection

#### Symbols in graphics

Symbol	Meaning
1, 2, 3, ...	Item numbers
	Series of steps
A, B, C, ...	Views
A-A, B-B, C-C, ...	Sections
	Hazardous area
	Safe area (non-hazardous area)
	Flow direction

## Function and system design

### Measuring principle

The measuring principle is based on the controlled generation of Coriolis forces. These forces are always present in a system when both translational and rotational movements are superimposed.

$$F_c = 2 \cdot \Delta m (v \cdot \omega)$$

$F_c$  = Coriolis force

$\Delta m$  = moving mass

$\omega$  = rotational velocity


$v$  = radial velocity in rotating or oscillating system

The amplitude of the Coriolis force depends on the moving mass  $\Delta m$ , its velocity  $v$  in the system and thus on the mass flow. Instead of a constant rotational velocity  $\omega$ , the sensor uses oscillation.

#### Dosimass DN 1 to 4 ( $\frac{1}{24}$ to $\frac{1}{8}$ " measuring principle

In the sensor, an oscillation is produced in the measuring tube. The Coriolis forces produced at the measuring tube cause a phase shift in the tube oscillations (see illustration):

- If there is zero flow (i.e. when the fluid stands still), the oscillation measured at points A and B has the same phase (no phase shift) (1).
- Mass flow causes deceleration of the oscillation at the inlet of the tubes (2) and acceleration at the outlet (3).

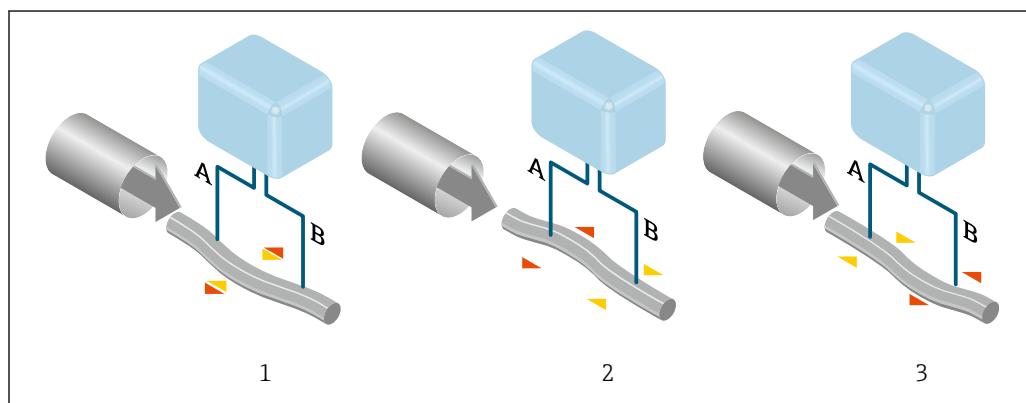

1 Dosimass DN 1 to 4 ( $\frac{1}{24}$  to  $\frac{1}{8}$ " measuring principle


A0029932

The phase shift (A-B) increases with increasing mass flow. Electrodynamic sensors register the tube oscillations at the inlet and outlet. System balance is created by exciting an eccentrically arranged swinging mass to antiphase oscillation. The measuring principle operates independently of temperature, pressure, viscosity, conductivity and flow profile.

#### Dosimass DN 8 to 40 ( $\frac{3}{8}$ to 1 $\frac{1}{2}$ " measuring principle

In the sensor, two parallel measuring tubes containing flowing fluid oscillate in antiphase, acting like a tuning fork. The Coriolis forces produced at the measuring tubes cause a phase shift in the tube oscillations (see illustration):

- At zero flow (when the fluid is at a standstill) the two tubes oscillate in phase (1).
- Mass flow causes deceleration of the oscillation at the inlet of the tubes (2) and acceleration at the outlet (3).

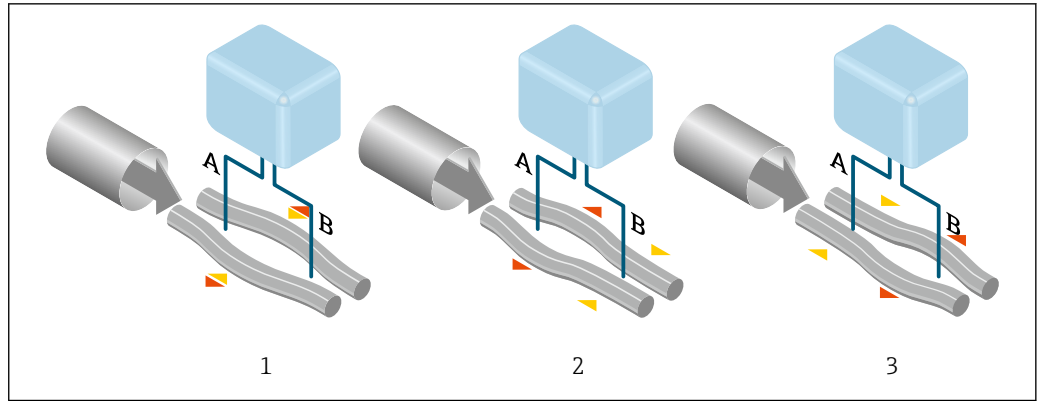

2 Dosimass DN 8 to 40 (3/8 to 1 1/2") measuring principle

The phase shift (A-B) increases with increasing mass flow. Electrodynamic sensors register the tube oscillations at the inlet and outlet. System balance is ensured by the antiphase oscillation of the two measuring tubes. The measuring principle operates independently of temperature, pressure, viscosity, conductivity and flow profile.

**Density measurement**

The measuring tube is continuously excited at its resonance frequency. A change in the mass and thus the density of the oscillating system (comprising measuring tube and fluid) results in a corresponding, automatic adjustment in the oscillation frequency. The resonance frequency is thus a function of the medium density. The microprocessor utilizes this relationship to obtain a density signal.

**Temperature measurement**

The temperature of the measuring tube is determined in order to calculate the compensation factor due to temperature effects. This signal corresponds to the process temperature and is also available as an output signal.

**Measuring system**

The device consists of a transmitter and a sensor.

*Dosimass DN 1 to 4 (1/24 to 1/8")*

<p><b>Dosimass</b></p> <p style="text-align: right; font-size: small;">A0053326</p>	<p><b>Transmitter</b></p> <ul style="list-style-type: none"> <li>▪ Materials:             <ul style="list-style-type: none"> <li>▪ Transmitter housing: stainless steel, 1.4409 (CF3M)</li> <li>▪ Housing seal: HNBR</li> </ul> </li> <li>▪ Configuration:             <ul style="list-style-type: none"> <li>▪ Via operating tools (e.g. FieldCare)</li> </ul> </li> </ul> <p><b>Sensor</b></p> <ul style="list-style-type: none"> <li>▪ Range of nominal diameter: DN 1 (1/24"), 2 (1/12"), 4 (1/8")</li> <li>▪ Materials:             <ul style="list-style-type: none"> <li>▪ Sensor housing: stainless steel, 1.4404 (316/316L)</li> <li>▪ Measuring tube: stainless steel, 1.4335 (316/316L)</li> <li>▪ Process connections: stainless steel, 1.4435 (316L)</li> </ul> </li> </ul>
---	--


*Dosimass DN 8 to 40 (3/8 to 1 1/2")*

<p><b>Dosimass</b></p> <p style="text-align: right; font-size: small;">A0052373</p>	<p><b>Transmitter</b></p> <ul style="list-style-type: none"> <li>▪ Materials:             <ul style="list-style-type: none"> <li>▪ Transmitter housing: stainless steel, 1.4409 (CF3M)</li> <li>▪ Housing seal: HNBR</li> </ul> </li> <li>▪ Configuration:             <ul style="list-style-type: none"> <li>▪ Via operating tools (e.g. FieldCare)</li> </ul> </li> </ul> <p><b>Sensor</b></p> <ul style="list-style-type: none"> <li>▪ Range of nominal diameter: DN 8 (3/8"), 15 (1/2"), 25 (1"), 40 (1 1/2")</li> <li>▪ Materials:             <ul style="list-style-type: none"> <li>▪ Sensor housing: stainless steel, 1.4301 (304)</li> <li>▪ Measuring tube: stainless steel, 1.4539 (904L)</li> <li>▪ Process connections: stainless steel, 1.4404 (316/316L)</li> </ul> </li> </ul>
---	--

Equipment architecture

**Device version: Two pulse/frequency/switch outputs**

**i** The device version has two pulse/frequency/switch outputs → 13.

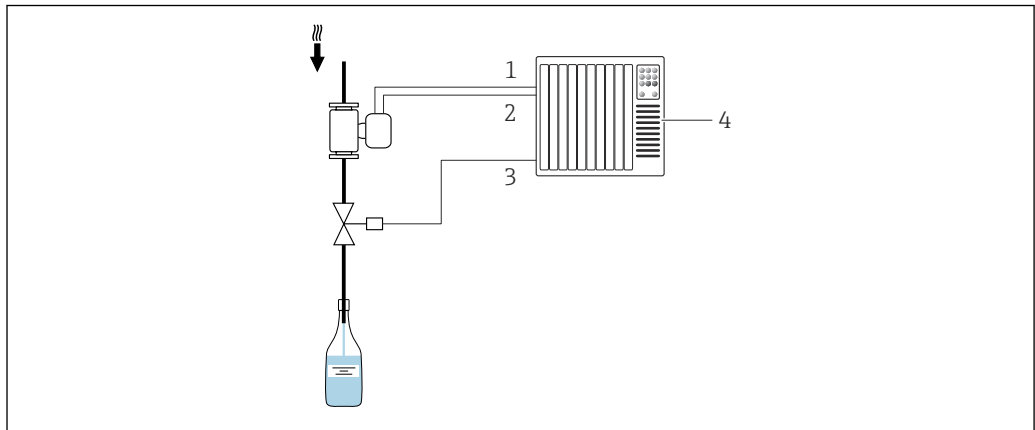


A0027057

**3** Options for integration into a system for batching processes

- 1 Pulse/frequency/switch output 1
- 2 Pulse/frequency/switch output 2
- 3 Control of valve (by automation system)
- 4 Control system (e.g. PLC)

**Device version: IO-Link, a pulse/frequency/switch output**

**i** The device version with IO-Link has a pulse/frequency/switch output → 13.

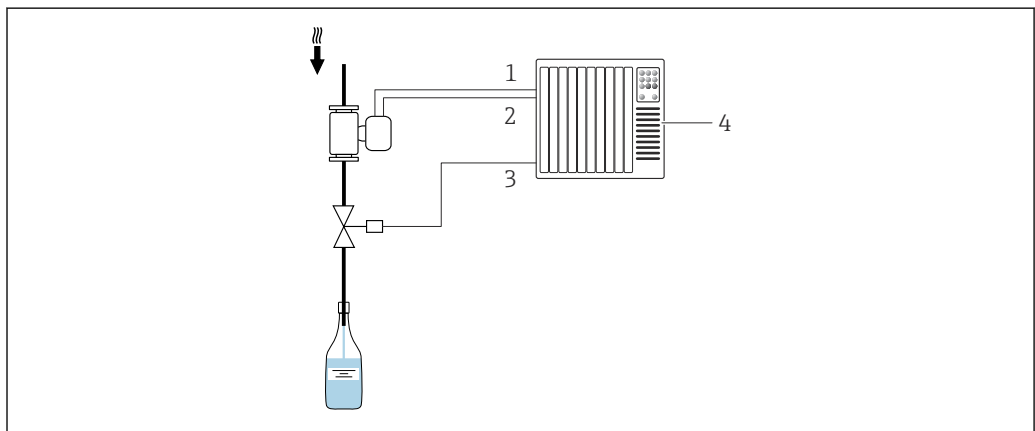


A0027057

**4** Options for integration into a system for batching processes

- 1 Pulse/frequency/switch output
- 2 IO-Link
- 3 Control of valve (by automation system)
- 4 Control system (e.g. PLC)

**Device version: Modbus RS485, two switch outputs (batch), a status output and a status input**

**i** Device versions with MODBUS RS485 have two switch outputs (batch) for valve control for the regulation of batching processes → 13.

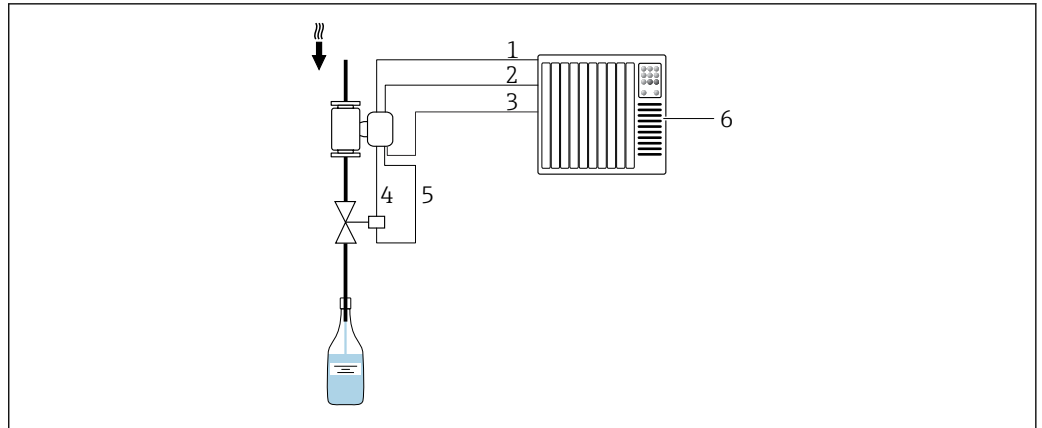

A0026621

5 Options for integration into a system for batching processes

- 1 MODBUS RS485: Measured value (to the automation system)
- 2 Status output/status input
- 3 Status input: Control of batching process (by the automation system)
- 4 Switch output (batch): Valve activation, level 1
- 5 Switch output (batch): Valve activation, level 2
- 6 Control system (e.g. PLC)

Reliability

IT security

Our warranty is valid only if the product is installed and used as described in the Operating Instructions. The product is equipped with security mechanisms to protect it against any inadvertent changes to the settings.

IT security measures, which provide additional protection for the product and associated data transfer, must be implemented by the operators themselves in line with their security standards.

## Input

Measured variable

Direct measured variables

- Mass flow
- Density
- Temperature

Calculated measured variables

Volume flow



Measuring range

Flow values in SI units



DN [mm]	Measuring range full scale values $\dot{m}_{\min(F)}$ to $\dot{m}_{\max(F)}$ [kg/h]
1	0 to 20
2	0 to 100
4	0 to 450
8	0 to 2 000
15	0 to 6 500
25	0 to 18 000
40	0 to 45 000

Flow values in US units

DN [in]	Measuring range full scale values $\dot{m}_{\min(F)}$ to $\dot{m}_{\max(F)}$ [lb/min]
1/24	0 to 0.735
1/12	0 to 3.675
1/8	0 to 16.54
3/8	0 to 73.50
1/2	0 to 238.9
1	0 to 661.5
1 1/2	0 to 1654

 To calculate the measuring range, use the *Applicator* →  48 sizing tool

**Recommended measuring range**

 Flow limit →  32


**Operable flow range**

Over 1000 : 1.

Flow rates above the preset full scale value do not override the electronics unit, with the result that the totalizer values are registered correctly.

**Input signal**

 Available only for device versions using the Modbus RS485 communication method →  13.

 The batching process is controlled by the automation system via the status input or via the fieldbus interface (Modbus) of the device.

**Status input via connection A/B**

Maximum input values	<ul style="list-style-type: none"> <li>▪ DC -3 to 30 V</li> <li>▪ 5 mA</li> </ul>
Response time	Configurable: 10 to 200 ms
Input signal level	<ul style="list-style-type: none"> <li>▪ Low signal: DC -3 to 5 V</li> <li>▪ High signal: DC 15 to 30 V</li> </ul>
Assignable functions	<ul style="list-style-type: none"> <li>▪ Off</li> <li>▪ Start batching process</li> <li>▪ Start and stop batching process</li> <li>▪ Reset totalizer 1 to 3 separately</li> <li>▪ Reset all totalizers</li> <li>▪ Flow override</li> </ul>

**Status output via connection A/B**

Maximum input values	<ul style="list-style-type: none"> <li>▪ DC 30 V</li> <li>▪ 6 mA</li> </ul>
Response time	Configurable: 10 to 200 ms
Input signal level	<ul style="list-style-type: none"> <li>▪ Low signal: DC 0 to 1.5 V</li> <li>▪ High signal: DC 10 to 30 V</li> </ul>
Assignable functions	<ul style="list-style-type: none"> <li>▪ Off</li> <li>▪ Start batching process</li> <li>▪ Start and stop batching process</li> <li>▪ Reset totalizer 1 to 3 separately</li> <li>▪ Reset all totalizers</li> <li>▪ Flow override</li> </ul>



# Output

**Output signal**

**Pulse/frequency/switch output**

<b>Function</b>	<p>Can be set to:</p> <ul style="list-style-type: none"> <li>▪ Pulse Quantity-proportional pulse with pulse width to be configured.</li> <li>▪ Automatic pulse Quantity-proportional pulse with on/off ratio of 1:1</li> <li>▪ Frequency Flow-proportional frequency output with 1:1 on/off ratio</li> <li>▪ Switch Contact for displaying a status</li> </ul>
<b>Version</b>	<ul style="list-style-type: none"> <li>▪ Option AA: 2 pulse/frequency/switch outputs Passive, high-side</li> <li>▪ Option FA: IO-Link, 1 pulse/frequency/switch output Active, high-side</li> </ul>
<b>Maximum output values</b>	<ul style="list-style-type: none"> <li>▪ Option AA: 2 pulse/frequency/switch outputs <ul style="list-style-type: none"> <li>▪ DC 30 V</li> <li>▪ 30 mA</li> </ul> </li> <li>▪ Option FA: IO-Link, 1 pulse/frequency/switch output <ul style="list-style-type: none"> <li>▪ DC 30 V</li> <li>▪ 100 mA</li> </ul> </li> </ul>
<b>Voltage drop</b>	<ul style="list-style-type: none"> <li>▪ Option AA: 2 pulse/frequency/switch outputs At 25 mA: ≤ DC 3 V</li> <li>▪ Option FA: IO-Link, 1 pulse/frequency/switch output At 100 mA: ≤ DC 3 V</li> </ul>
<b>Pulse output</b>	
<b>Pulse width</b>	Configurable: 0.05 to 2 000 ms
<b>Maximum pulse rate</b>	10 000 Impulse/s
<b>Pulse value</b>	Configurable
<b>Assignable measured variables</b>	<ul style="list-style-type: none"> <li>▪ Mass flow</li> <li>▪ Volume flow</li> </ul>
<b>Frequency output</b>	
<b>Output frequency</b>	Configurable: 0 to 10 000 Hz
<b>Damping</b>	Configurable: 0 to 999.9 s
<b>Pulse/pause ratio</b>	1:1
<b>Assignable measured variables</b>	<ul style="list-style-type: none"> <li>▪ Mass flow</li> <li>▪ Volume flow</li> <li>▪ Density</li> <li>▪ Temperature</li> <li>▪ Exciter current</li> <li>▪ Oscillation frequency</li> <li>▪ Oscillation amplitude</li> <li>▪ Frequency fluctuation</li> <li>▪ Oscillation damping</li> <li>▪ Fluctuation</li> <li>▪ Signal asymmetry</li> </ul>
<b>Switch output</b>	
<b>Switching behavior</b>	Binary, conductive or non-conductive

<b>Number of switching cycles</b>	Unlimited
<b>Assignable functions</b>	<ul style="list-style-type: none"> <li>▪ Off</li> <li>▪ On</li> <li>▪ Diagnostic behavior             <ul style="list-style-type: none"> <li>▪ Alarm</li> <li>▪ Alarm and warning</li> <li>▪ Warning</li> </ul> </li> <li>▪ Limit value             <ul style="list-style-type: none"> <li>▪ Mass flow</li> <li>▪ Volume flow</li> <li>▪ Density</li> <li>▪ Temperature</li> <li>▪ Totalizer 1-3</li> <li>▪ Oscillation damper</li> </ul> </li> <li>▪ Flow direction monitoring</li> <li>▪ Status             <ul style="list-style-type: none"> <li>▪ Partially filled pipe detection</li> <li>▪ Low flow cut off</li> </ul> </li> </ul>

### IO-Link

<b>Physical interface</b>	According to Standard IEC 61131-9
<b>Signal</b>	IO-Link digital communication signal, 3-wire
<b>IO-Link version</b>	1.1
<b>IO-Link SSP version</b>	Identification and Diagnosis, Measuring and Switching Sensor (as per SSP 4.3.4)
<b>IO-Link device port</b>	IO-Link port class A

 The pin assignment deviates from the IO-Link standard to enable compatibility with previous device versions and installations.

### Modbus RS485

<b>Physical interface</b>	RS485 according to Standard EIA/TIA-485-A
---------------------------	---

### Switch output (batch: valve control)

 Only available for device version with Modbus RS485 →  13.

Switch output (batch)	
<b>Version</b>	Active, high-side
<b>Maximum output values</b>	<ul style="list-style-type: none"> <li>▪ DC 30 V</li> <li>▪ 500 mA</li> </ul>
<b>Switching behavior</b>	Binary, conductive or non-conductive
<b>Number of switching cycles</b>	Unlimited
<b>Assignable functions</b>	<ul style="list-style-type: none"> <li>▪ Open</li> <li>▪ Closed</li> <li>▪ Batching</li> </ul>

### Status output

 Only available for device version with Modbus RS485 →  13.

Status output	
Version	Active, high-side
Maximum output values	<ul style="list-style-type: none"> <li>▪ DC 30 V</li> <li>▪ 100 mA</li> </ul>
Voltage drop	At 100 mA: ≤ DC 3 V
Switching behavior	Binary, conductive or non-conductive
Number of switching cycles	Unlimited
Assignable functions	<ul style="list-style-type: none"> <li>▪ Off</li> <li>▪ Batching process status (batch)</li> <li>▪ Batching process status (batch), output 1</li> <li>▪ Batching process status (batch), output 2</li> </ul>

**Signal on alarm**

Depending on the interface, failure information is displayed as follows.

**Pulse/frequency/switch output**

Pulse output	
Failure mode	Choose from: <ul style="list-style-type: none"> <li>▪ Actual value</li> <li>▪ No pulses</li> </ul>
Frequency output	
Failure mode	Choose from: <ul style="list-style-type: none"> <li>▪ Actual value</li> <li>▪ 0 Hz</li> <li>▪ Definable value between: 0 to 10 000 Hz</li> </ul>
Switch output	
Failure mode	Choose from: <ul style="list-style-type: none"> <li>▪ Current status</li> <li>▪ Open</li> <li>▪ Closed</li> </ul>

**IO-Link**

Operating mode	Digital transmission of all failure information
Device status	Readable via cyclical and acyclical data transmission

**Modbus RS485**

Failure mode	Choose from: <ul style="list-style-type: none"> <li>▪ NaN value instead of current value</li> <li>▪ Last valid value</li> </ul>
--------------	---

**Low flow cut off**

The switch points for low flow cut off are user-selectable.

**Galvanic isolation**

- Device version: 2 pulse/frequency/switch outputs  
(Order code for "Output, input": option AA)
  - Pulse/frequency/switch outputs galvanically isolated from supply potential.
  - Pulse/frequency/switch outputs not galvanically isolated from each other.
- Device version: IO-Link, 1 pulse/frequency/switch output  
(Order code for "Output, input": option FA)  
Pulse/frequency/switch outputs on supply potential.
- Device version: Modbus RS485, 2 switch outputs (batch), 1 status output, 1 status input  
(Order code for "Output, input": option MD)
  - Switch outputs (batch) on supply potential.
  - Status output on supply potential.
  - Status input galvanically isolated (connection C/D) or on supply potential (connection A/B)

**Protocol-specific data**

**IO-Link**

IO-Link specification	Version 1.1.3
Device ID	0x947401 (9729281)
Manufacturer ID	0x0011 (17)
Smart Sensor Profile 2nd Edition	Supports <ul style="list-style-type: none"> <li>▪ Identification and Diagnosis</li> <li>▪ Digital Measuring and Switching Sensor (as per SSP type 4.3.4)</li> </ul>
Smart Sensor Profile Type	Measuring profile type 4.3.4 Measuring and Switching Sensor, floating point, 4 channel
SIO	Yes
IO-Link transmission rate	COM3; 230.4 kBd
Minimum period	1.5 ms
Process data width input/output	18 bytes/2 bytes (as per SSP 4.3.4)
OnRequestdata PreOp/Op	8 bytes/2 bytes
Data storage	Yes
Block configuration	Yes
Device operational	The device is operational 3 seconds after the supply voltage is applied
System integration	Input cyclic process data <ul style="list-style-type: none"> <li>▪ Mass flow [kg/s]</li> <li>▪ Density [kg/m<sup>3</sup>]</li> <li>▪ Totalizer 1 [kg]</li> <li>▪ Temperature [°C]</li> </ul> Output cyclic process data <ul style="list-style-type: none"> <li>▪ Control signal channel - Volume flow</li> <li>▪ Control signal channel - Density</li> <li>▪ Control signal channel - Temperature</li> <li>▪ Control signal channel - Totalizer 1</li> <li>▪ Flow override</li> <li>▪ Totalizer 1 - Hold</li> <li>▪ Totalizer 1 - Reset + totalize</li> <li>▪ Totalizer 1 - Reset + hold</li> <li>▪ Totalizer 1 - Totalize</li> </ul>

**Device description**



In order to integrate field devices into a digital communication system, the IO-Link system needs a description of the device parameters, such as output data, input data, data format, data volume and supported transmission rate.

The data are included in the device description (IODD) that are provided to the IO-Link master during commissioning of the communication system.

The IODD can be downloaded as follows:

- [www.endress.com](http://www.endress.com)
- <https://ioddfinder.io-link.com>

**Modbus RS485**




Protocol	Modbus Applications Protocol Specification V1.1
Device type	Slave
Slave address range	1 to 247
Broadcast address range	0
Function codes	<ul style="list-style-type: none"> <li>▪ 03: Read holding register</li> <li>▪ 04: Read input register</li> <li>▪ 06: Write single registers</li> <li>▪ 08: Diagnostics</li> <li>▪ 16: Write multiple registers</li> <li>▪ 23: Read/write multiple registers</li> <li>▪ 43: Read device identification</li> </ul>
Broadcast messages	Supported by the following function codes: <ul style="list-style-type: none"> <li>▪ 06: Write single registers</li> <li>▪ 16: Write multiple registers</li> <li>▪ 23: Read/write multiple registers</li> </ul>
Supported baud rate	<ul style="list-style-type: none"> <li>▪ 1 200 BAUD</li> <li>▪ 2 400 BAUD</li> <li>▪ 4 800 BAUD</li> <li>▪ 9 600 BAUD</li> <li>▪ 19 200 BAUD</li> <li>▪ 38 400 BAUD</li> <li>▪ 57 600 BAUD</li> <li>▪ 115 200 BAUD</li> <li>▪ 230 400 BAUD</li> </ul>
Data transfer mode	RTU
Data access	Each device parameter can be accessed via Modbus RS485.  For Modbus register information →  49

**Power supply**

**Terminal assignment**

Connection is solely by means of device plug.


*There are different device versions available:*

Order code for "Output, input"	Device plug
Option AA: 2 pulse/frequency/switch outputs	→  13
Option FA: IO-Link, 1 pulse/frequency/switch output	→  14
Option MD: Modbus RS485, 2 switch outputs (batch), 1 status output, 1 status input	→  15

**Available device plugs**

**Device version: 2 pulse/frequency/switch outputs**

Order code for "Output, input": option AA:  
 2 pulse/frequency/switch outputs

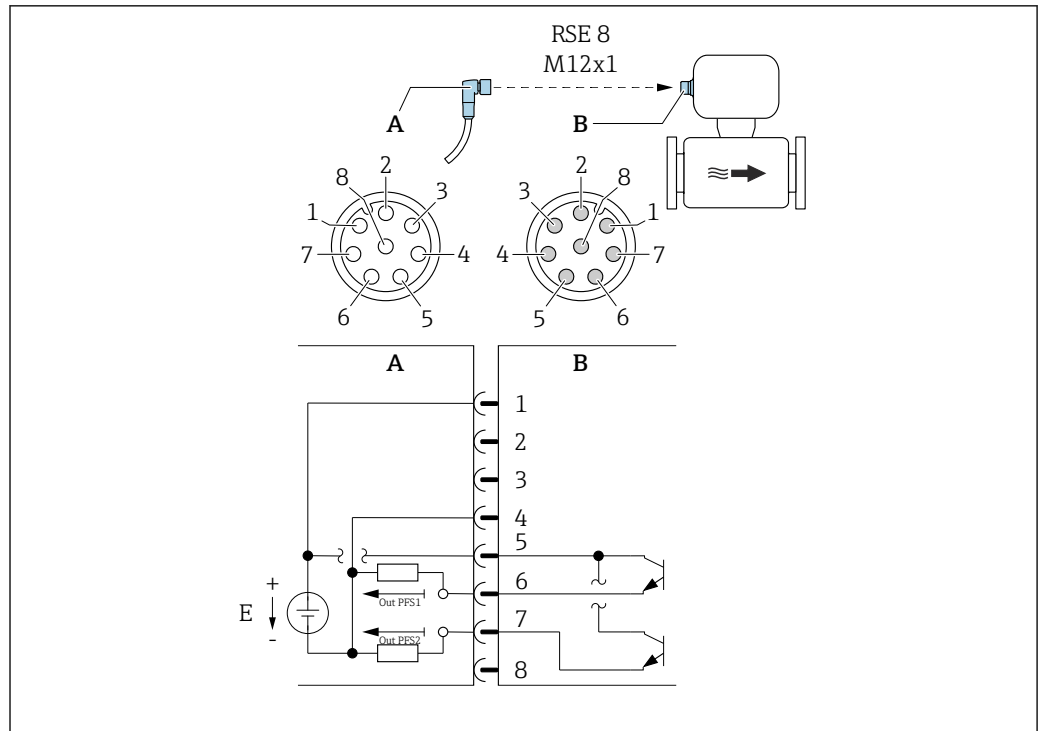

A0054873

6 Connection to device

- A Coupling: Supply voltage, pulse/freq./switch output
- B Connector: Supply voltage, pulse/freq./switch output
- E PELV or SELV power supply
- 1 to 8 Pin assignment

Pin assignment


Connection: Coupling (A) – Connector (B)		
Pin	Assignment	
1	L+	Supply voltage
2	+	Service interface RX
3	+	Service interface TX
4	L-	Supply voltage
5	+	Pulse/frequency/switch output 1 and 2
6	-	Pulse/frequency/switch output 1
7	-	Pulse/frequency/switch output 2
8	-	Service interface GND

Observe cable specifications → 19.

**Device version: IO-Link, 1 pulse/frequency/switch output**

Order code for "Output, input", option FA:

- IO-Link
- 1 pulse/frequency/switch output

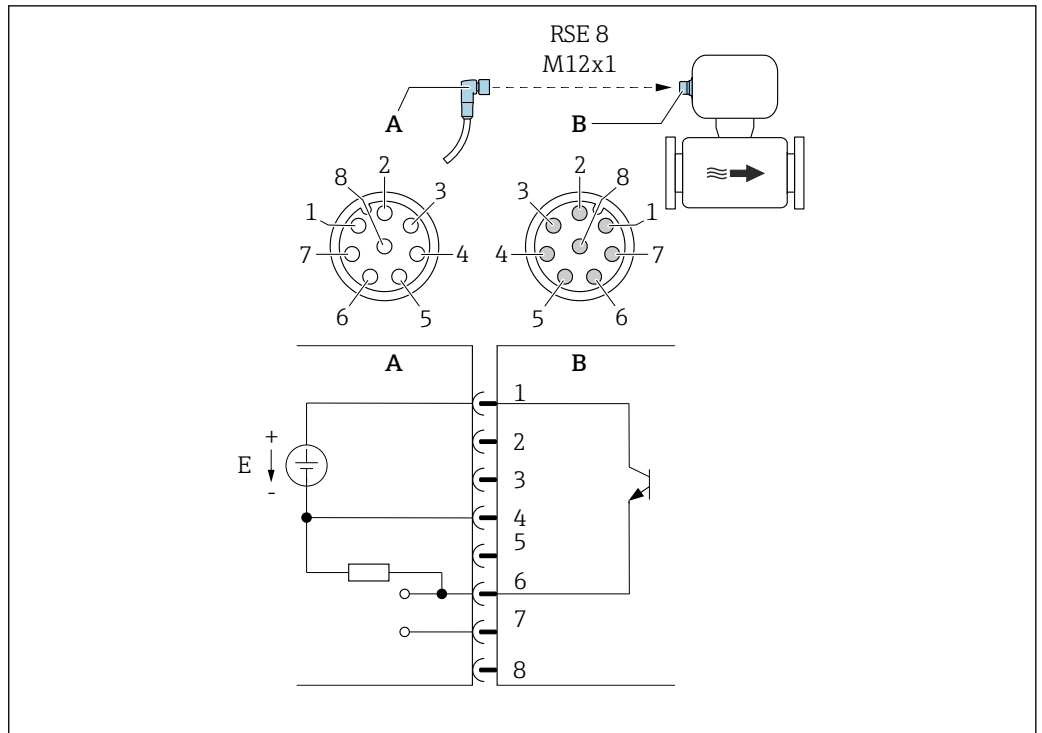

A0053318

**7** Connection to device

- A Coupling: Supply voltage, pulse/freq./switch output
- B Connector: Supply voltage, pulse/freq./switch output
- E PELV or SELV power supply
- 1 to Pin assignment
- 8

Pin assignment

Connection: Coupling (A) – Connector (B)		
Pin	Assignment	
1	L+	Supply voltage
2	+	Service interface RX
3	+	Service interface TX
4	L-	Supply voltage
5	Not used	
6	-	Pulse/frequency/switch output DQ
7	-	IO-Link communication signal C/Q
8	-	Service interface GND

**i** The pin assignment deviates from the IO-Link standard to enable compatibility with previous device versions and installations.


**i** Observe cable specifications → 19.

**Device version: Modbus RS485, 2 switch outputs (batch), 1 status output, 1 status input**

Order code for "Output, input", option MD:

- Modbus RS485
- 2 switch outputs (batch)
- 1 status output
- 1 status input

Version 1: Status input via connection A/B

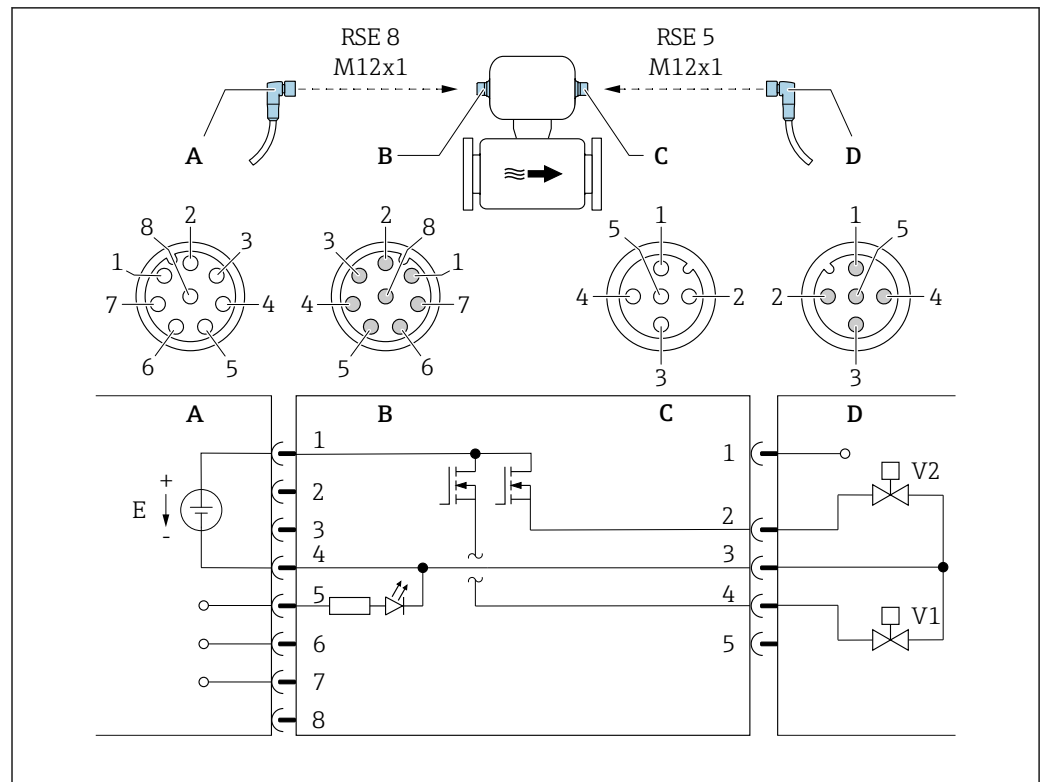


A0053319

8 Connection to device

- A Coupling: Supply voltage, Modbus RS485, status input
- B Connector: Supply voltage, Modbus RS485, status input
- C Coupling: Switch output (batch)
- D Connector: Switch output (batch)
- E PELV or SELV power supply
- V1 Valve (batch), level 1
- V2 Valve (batch), level 2
- 1 to Pin assignment
- 8



Version 2: Status output via connection A/B

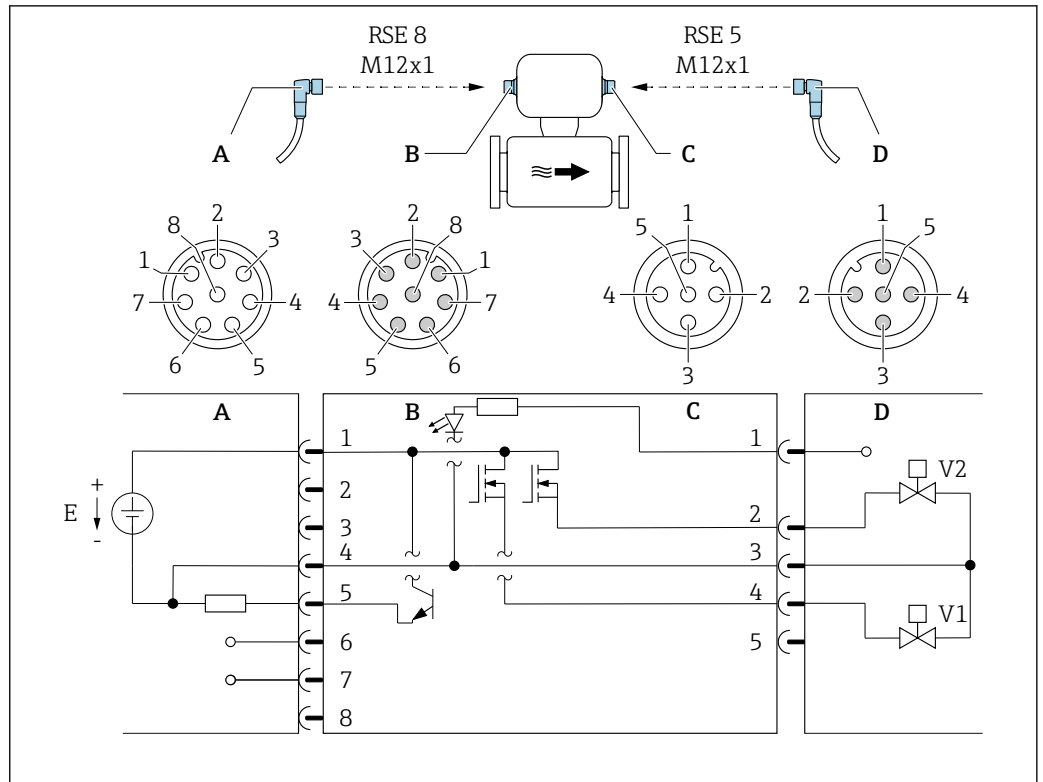



9 Connection to device

- A Coupling: Supply voltage, Modbus RS485, status output
- B Connector: Supply voltage, Modbus RS485, status output
- C Coupling: Switch output (batch), status input
- D Connector: Switch output (batch), status input
- E PELV or SELV power supply
- V1 Valve (batch), level 1
- V2 Valve (batch), level 2
- 1 to Pin assignment
- 8

Pin assignment

Connection: Coupling (A) – Connector (B)			Connection: Coupling (C) – Connector (D)		
Pin	Assignment		Pin	Assignment	
1	L+	Supply voltage	1	+	Status input
2	+	Service interface RX	2	+	Switch output (batch) 2
3	+	Service interface TX	3	-	Switch output (batch) 1 and 2, status input
4	L-	Supply voltage	4	+	Switch output (batch) 1
5	+	Status output/Status input <sup>1)</sup>	5	Not used	
6	+	Modbus RS485			
7	-	Modbus RS485			
8	-	Service interface GND			

1) The functionality of status input and status output is not possible at the same time.

 Observe cable specifications →  19.

**Supply voltage** DC 24 V (nominal voltage: DC 18 to 30 V)

-  The power unit must be safety-approved (e.g. PELV, SELV).
- The maximum short-circuit current must not exceed 50 A.

**Power consumption** 2.5 W (no outputs)

**Current consumption**

Order code for "Output, input"	Maximum current consumption
Option AA: 2 pulse/frequency/switch outputs	100 mA
Option FA: IO-Link, 1 pulse/frequency/switch output	100 mA + 100 mA <sup>1)</sup> at supply voltage $\geq 21$ V
Option MD: Modbus RS485, 2 switch outputs (batch), 1 status output, 1 status input	100 mA + 1 100 mA <sup>2)</sup>

- 1) If pulse/frequency/switch output is used
- 2) Per switch output used (batch) 500 mA, status output 100 mA

**Switch-on current**

- Option AA: 2 pulse/frequency/switch outputs  
Max. 1.2 A (< 15 ms)
- Option FA: IO-Link, 1 pulse/frequency/switch output  
Max. 400 mA (< 20 ms)
- Option MD: Modbus RS485, 2 switch outputs (batch), 1 status output, 1 status input  
Max. 1.2 A (< 15 ms)


**Power supply failure**

- Totalizers stop at the last value measured.
- Configuration is retained in the device memory.
- Error messages (incl. total operated hours) are stored.

**Electrical connection**

Connection is solely by means of device plug.


**Device version: 2 pulse/frequency/switch outputs and IO-Link, 1 pulse/frequency/switch output**

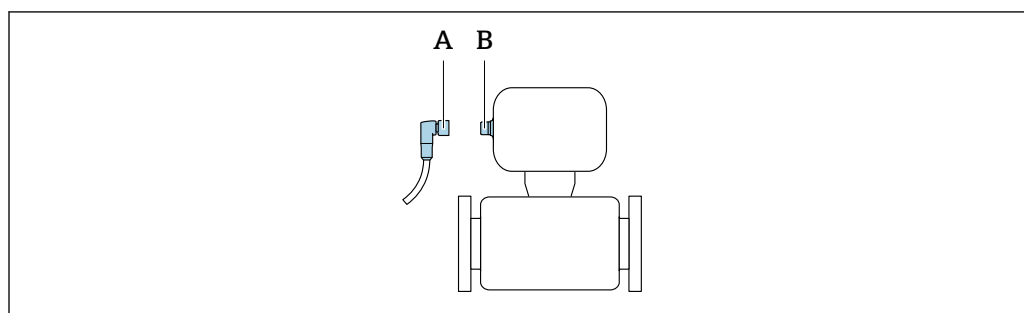

A0032652

- A Coupling
- B Connector

**Device version: Modbus RS485, 2 switch outputs (batch), 1 status output, 1 status input**

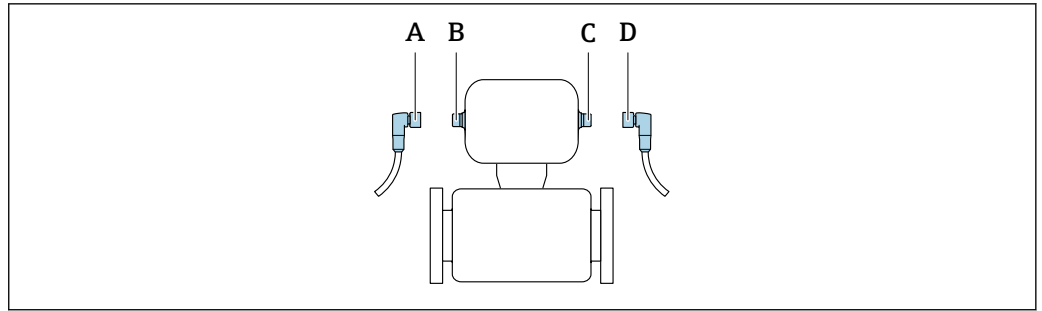

A0032534


A, C Coupling  
B, D Connector

There are different device versions available:

Order code for "Output, input"	Device plug
Option AA: 2 pulse/frequency/switch outputs	→ 13
Option FA: IO-Link, 1 pulse/frequency/switch output	→ 14
Option MD: Modbus RS485, 2 switch outputs (batch), 1 status output, 1 status input	→ 15

**Grounding**

Grounding is by means of a cable socket.

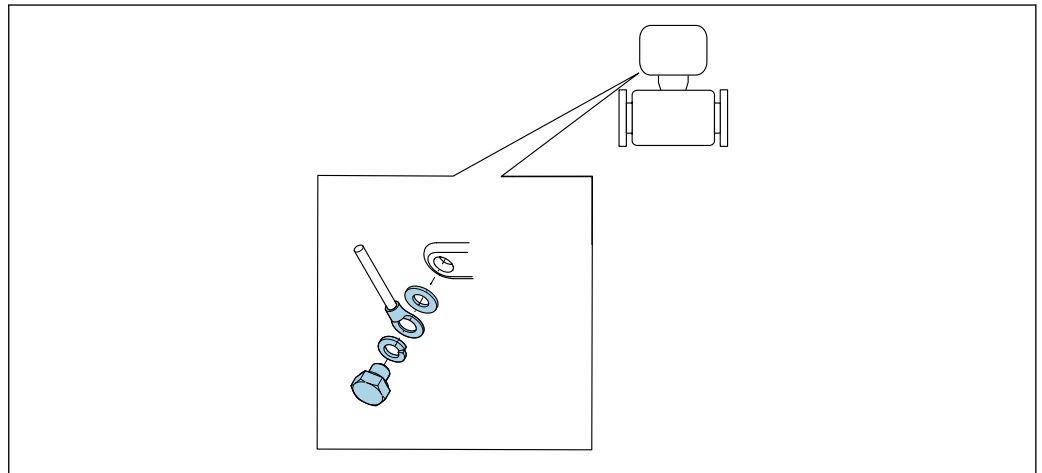

A0053306

**Ensuring**

No special measures for potential equalization are required.

**Cable specification**

**Permitted temperature range**

- The installation guidelines that apply in the country of installation must be observed.
- The cables must be suitable for the minimum and maximum temperatures to be expected.

**Signal cable**

**i** Cables are not included in the scope of delivery.

**i** Please note the following with regard to cable loading:

- Voltage drop due to the cable length and cable type.
- Valve performance.

*Pulse/frequency/switch output*

Standard installation cable is sufficient.

*IO-Link*

Standard installation cable is sufficient.

Cable length ≤ 20 m.

*Switch output (batch), status output and status input*

Standard installation cable is sufficient.

**Modbus RS485**

- i** The electrical connection of the shield to the device housing must be properly implemented (e.g. using a knurled nut).
- Please note the following with regard to cable loading:
  - Voltage drop due to the cable length and cable type.
  - Valve performance.

*Total length of cable in the Modbus network ≤ 50 m*

Use a shielded cable.

*Example:*

Terminated device plug with cable: Lumberg RKWTH 8-299/10

*Total length of cable in the Modbus network > 50 m*


Use shielded twisted pair cable for RS485 applications.

*Example:*

- Cable: Belden item no. 9842 (for 4-wire version, the same cable can be used for the power supply)
- Terminated device plug: Lumberg RKCS 8/9 (shieldable version)

**Terminating resistor**

The Modbus RS485 network must be terminated with a terminating resistor and polarization.

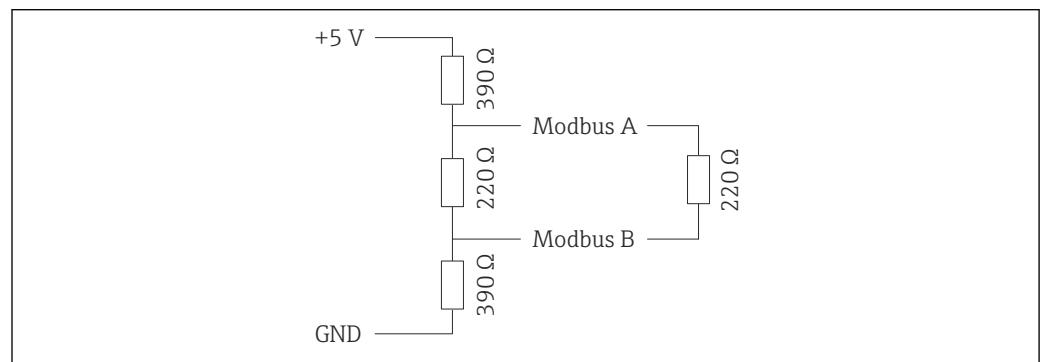

A0024990

**Performance characteristics**

**Reference operating conditions**

- Error limits based on ISO 11631
- Water
  - +15 to +45 °C (+59 to +113 °F)
  - 2 to 6 bar (29 to 87 psi)
- Data as indicated in the calibration protocol
- Accuracy based on accredited calibration rigs according to ISO 17025

**Installation**

- Measuring device is grounded.
- The sensor is centered in the pipe.

**i** To obtain measured errors, use the *Applicator* sizing tool → 48

**Maximum measurement error**

o.r. = of reading; 1 g/cm<sup>3</sup> = 1 kg/l; T = medium temperature

**Base accuracy**

Bases for calculation → 22

*Mass flow and volume flow (liquids)*

±0.15 %

*Density (liquids)*

Under reference conditions [g/cm <sup>3</sup> ]	Field density adjustment [g/cm <sup>3</sup> ]	Standard density calibration [g/cm <sup>3</sup> ]
±0.0005 g/cm <sup>3</sup>	±0.0005 g/cm <sup>3</sup>	±0.0025 g/cm <sup>3</sup>

*Temperature*

±0.5 °C ± 0.005 · T °C (±0.9 °F ± 0.003 · (T - 32) °F)

**Zero point stability**

DN		Zero point stability	
[mm]	[in]	[kg/h]	[lb/min]
1	1/24	0.0005	0.000018
2	1/12	0.0025	0.00009
4	1/6	0.0100	0.00036
8	3/8	0.20	0.007
15	1/2	0.65	0.024
25	1	1.80	0.066
40	1 1/2	4.50	0.165

**Flow values**

Flow values as turndown parameters depending on nominal diameter.


*SI units*

DN [mm]	1:1	1:10	1:20	1:50	1:100	1:500
	[kg/h]	[kg/h]	[kg/h]	[kg/h]	[kg/h]	[kg/h]
1	20	2	1	0.4	0.2	0.04
2	100	10	5	2	1	0.2
4	450	45	22.5	9	4.5	0.9
8	2000	200	100	40	20	4
15	6500	650	325	130	65	13
25	18000	1800	900	360	180	36
40	45000	4500	2250	900	450	90

US units

DN	1:1	1:10	1:20	1:50	1:100	1:500
[in]	[lb/min]	[lb/min]	[lb/min]	[lb/min]	[lb/min]	[lb/min]
1/24	0.735	0.074	0.037	0.015	0.007	0.001
1/12	3.675	0.368	0.184	0.074	0.037	0.007
1/8	16.54	1.654	0.827	0.331	0.165	0.033
3/8	73.50	7.350	3.675	1.470	0.735	0.147
1/2	238.9	23.89	11.95	4.778	2.389	0.478
1	661.5	66.15	33.08	13.23	6.615	1.323
1 1/2	1654	165.4	82.70	33.08	16.54	3.308

**Accuracy of outputs**

 The output accuracy must be factored into the measurement error if analog outputs are used; but can be ignored for fieldbus outputs (IO-Link and Modbus RS485).

The outputs have the following base accuracy specifications.

*Pulse/frequency output*

o.r. = of reading

<b>Temperature accuracy</b>	Max. ±50 ppm o.r. (over the entire ambient temperature range)
-----------------------------	---

**Repeatability**

**Base repeatability**

Dosing time [s]	Standard deviation [%]
0.75 s < t <sub>a</sub> < 1.5 s	0.2
1.5 s < t <sub>a</sub> < 3 s	0.1
3 s < t <sub>a</sub>	0.05

**Density (liquids)**

±0.00025 g/cm<sup>3</sup>

**Temperature**

±0.25 °C ± 0.0025 · T °C (±0.45 °F ± 0.0015 · (T-32) °F)

**Response time**

The response time depends on the configuration (damping).

**Influence of ambient temperature**

**Pulse/frequency output**

<b>Temperature coefficient</b>	No additional effect. Included in accuracy.
--------------------------------	---

**Influence of medium temperature**

**Mass flow**

If there is a differential between the temperature during zero adjustment and the process temperature, the typical measurement error of the sensor is ±0.0002 % of the full scale value/°C (±0.0001 % of the full scale value/°F).

**Temperature**

±0.005 · T °C (± 0.005 · (T - 32) °F)

**Influence of medium pressure**

A difference between the calibration pressure and process pressure does not affect accuracy.

**Design fundamentals**

o.r. = of reading, o.f.s. = of full scale value

BaseAccu = base accuracy in % o.r., BaseRepeat = base repeatability in % o.r.

MeasValue = measured value; ZeroPoint = zero point stability


Calculation of the maximum measured error as a function of the flow rate

Flow rate	Maximum measured error in % o.r.
$\geq \frac{\text{ZeroPoint}}{\text{BaseAccu}} \cdot 100$ <small>A0021332</small>	$\pm \text{BaseAccu}$ <small>A0021339</small>
$< \frac{\text{ZeroPoint}}{\text{BaseAccu}} \cdot 100$ <small>A0021333</small>	$\pm \frac{\text{ZeroPoint}}{\text{MeasValue}} \cdot 100$ <small>A0021334</small>

Calculation of the maximum repeatability as a function of the flow rate

Flow rate	Maximum repeatability in % o.r.
$\geq \frac{1/2 \cdot \text{ZeroPoint}}{\text{BaseRepeat}} \cdot 100$ <small>A0021335</small>	$\pm \text{BaseRepeat}$ <small>A0021340</small>
$< \frac{1/2 \cdot \text{ZeroPoint}}{\text{BaseRepeat}} \cdot 100$ <small>A0021336</small>	$\pm 1/2 \cdot \frac{\text{ZeroPoint}}{\text{MeasValue}} \cdot 100$ <small>A0021337</small>


**Example of maximum measurement error**

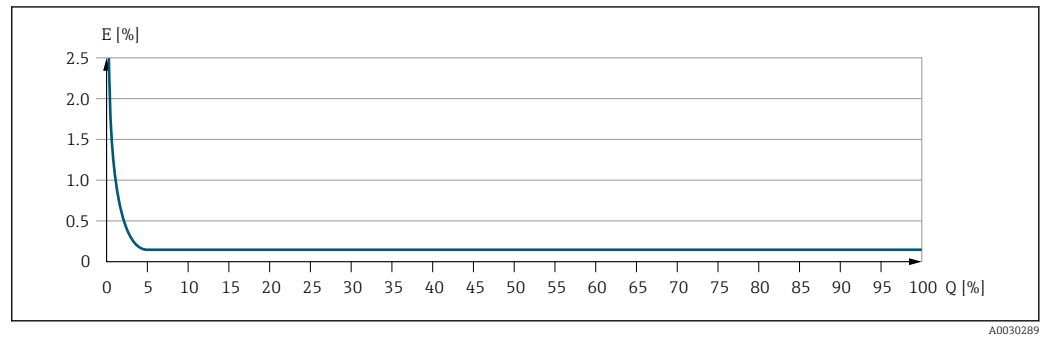

E Maximum measurement error in % o.r. (example)  
Q Flow rate in % of maximum full scale value

**Mounting**

**Installation point**

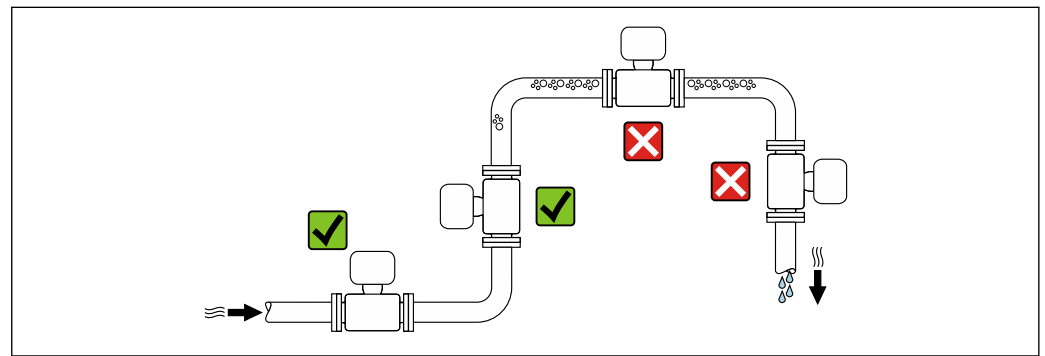


To prevent measuring errors arising from accumulation of gas bubbles in the measuring pipe, avoid the following mounting locations in the piping:

- Highest point of a pipeline.
- Directly upstream of a free pipe outlet in a down pipe.

**Installation in down pipes**

However, the following installation suggestion allows for installation in an open vertical pipeline. Pipe restrictions or the use of an orifice with a smaller cross-section than the nominal diameter prevent the sensor running empty while measurement is in progress.

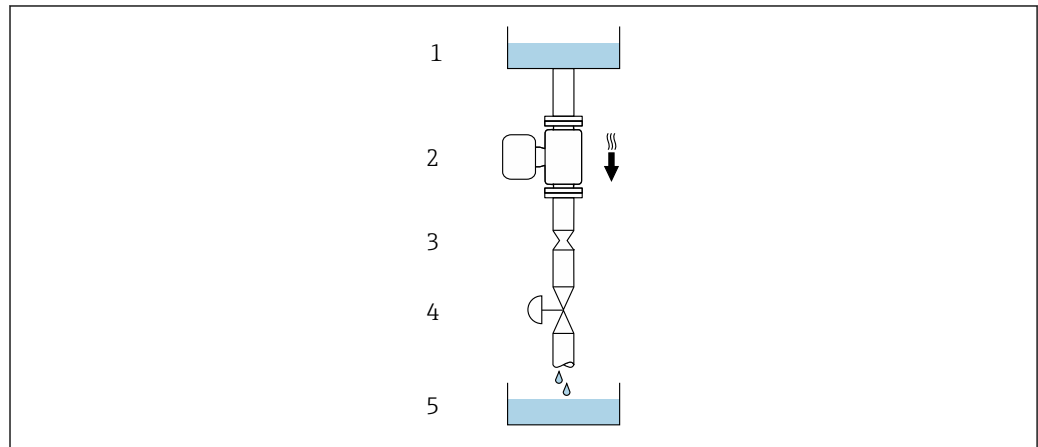

10 Installation in a down pipe (e.g. for batching applications)



- 1 Supply tank
- 2 Sensor
- 3 Orifice plate, pipe restriction
- 4 Valve
- 5 Filling vessel

DN		Ø orifice plate, pipe restriction	
[mm]	[in]	[mm]	[in]
1	1/24	0.8	0.03
2	1/12	1.5	0.06
4	1/8	3.0	0.12
8	3/8	6	0.24
15	1/2	10	0.40
25	1	14	0.55
40	1 1/2	22	0.87



**Orientation**

The direction of the arrow on the sensor nameplate helps you to install the sensor according to the flow direction (direction of medium flow through the piping).

Recommended orientation for DN 1 to 4 (1/24 to 1/8 ")


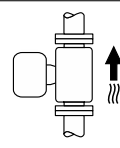


Orientation		Recommendation
<b>A</b>	Vertical orientation	 <small>A0015591</small> <input checked="" type="checkbox"/> <input checked="" type="checkbox"/> <sup>1)</sup>
<b>B</b>	Horizontal orientation, transmitter at top	 <small>A0015589</small> <input checked="" type="checkbox"/> <sup>2)</sup>



Orientation			Recommendation
C	Horizontal orientation, transmitter at bottom	 A0015590	✓ <sup>3)</sup>
D	Horizontal orientation, transmitter at side	 A0015592	✓

- 1) This orientation is recommended to ensure self-draining.
- 2) Applications with low process temperatures may reduce the ambient temperature. To maintain the minimum ambient temperature for the transmitter, this orientation is recommended.
- 3) Applications with high process temperatures may increase the ambient temperature. To maintain the maximum ambient temperature for the transmitter, this orientation is recommended.


*Recommended orientation for DN 8 to 40 (3/8 to 1 1/2")*

Orientation			Recommendation
A	Vertical orientation	 A0015591	✓✓ <sup>1)</sup>
B	Horizontal orientation, transmitter at top	 A0015589	✓✓ <sup>2)</sup>
C	Horizontal orientation, transmitter at bottom	 A0015590	✓✓ <sup>3)</sup>
D	Horizontal orientation, transmitter at side	 A0015592	✗

- 1) This orientation is recommended to ensure self-draining.
- 2) Applications with low process temperatures may reduce the ambient temperature. To maintain the minimum ambient temperature for the transmitter, this orientation is recommended.
- 3) Applications with high process temperatures may increase the ambient temperature. To maintain the maximum ambient temperature for the transmitter, this orientation is recommended.

**Horizontal orientation for DN 8 to 40 (3/8 to 1 1/2")**

If a sensor is installed horizontally with a curved measuring tube, match the position of the sensor to the fluid properties.

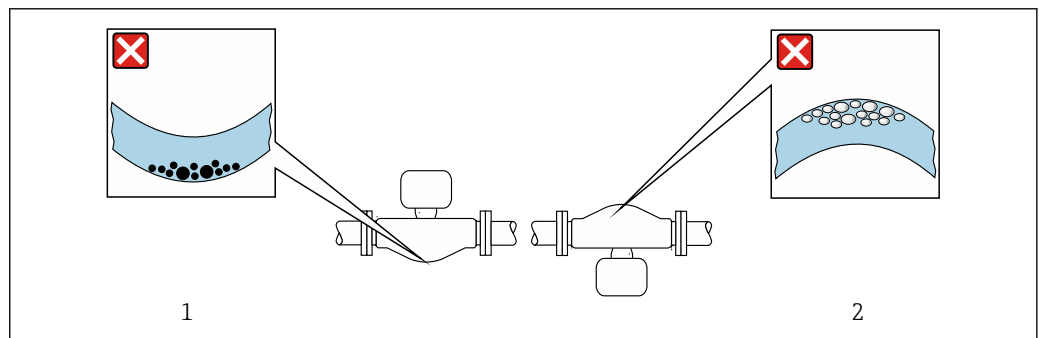


11 Orientation of sensor with curved measuring tube

- 1 Avoid this orientation for fluids with entrained solids: Risk of solids accumulating
- 2 Avoid this orientation for outgassing fluids: Risk of gas accumulating

### Valves

Never install the sensor downstream from a filling valve. If the sensor is completely empty this corrupts the measured value.

**i** Correct measurement is possible only if the piping is completely filled. Perform sample fillings before commencing filling in production.

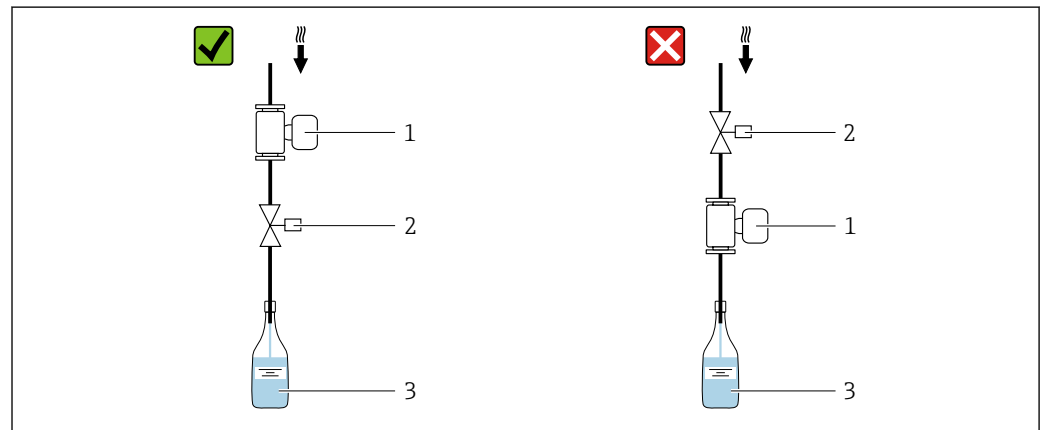


A0003768

- 1 Measuring device
- 2 Filling valve
- 3 Vessel

### Filling systems

The pipe system must be completely full to ensure optimum measurement.

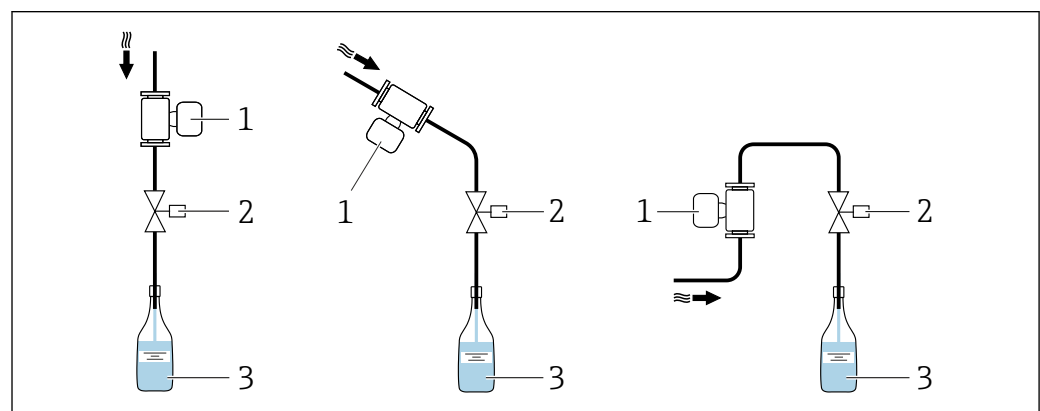

A0003795

**12** Filling system

- 1 Measuring device
- 2 Filling valve
- 3 Vessel

### Inlet and outlet runs


No special precautions need to be taken for fittings that create turbulence, such as valves, elbows or T-pieces, as long as no cavitation occurs.

### Special mounting instructions

#### Information for filling systems

Correct measurement is only possible if the pipe is completely full. We therefore recommend that some test batches be carried out prior to production batching.


*Circular filling system*

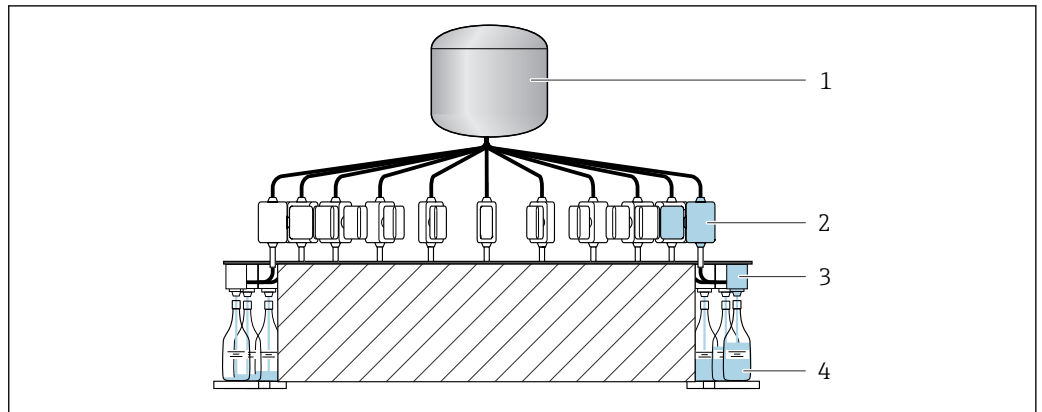

A0003761

- 1 Tank
- 2 Measuring instrument
- 3 Filling valve
- 4 Vessel

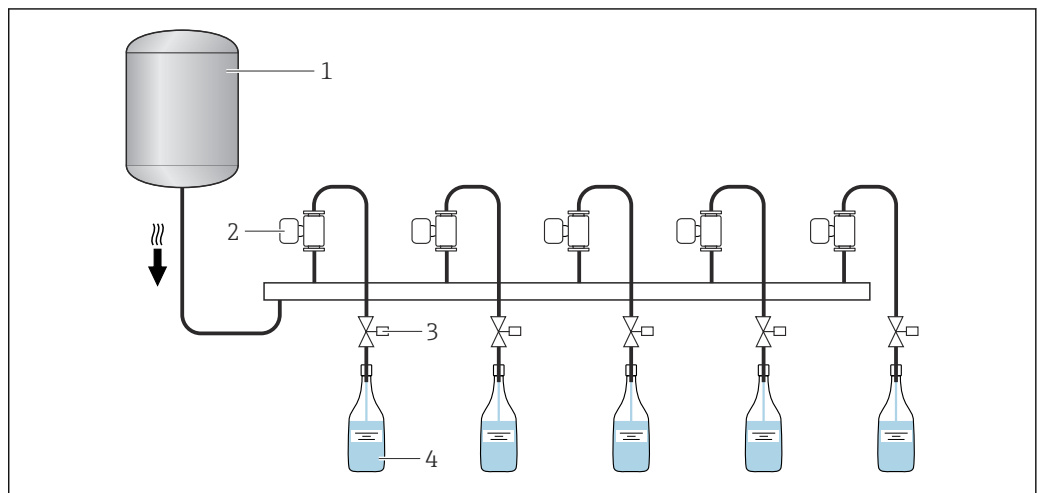

*Linear filling system*



A0003762


- 1 Tank
- 2 Measuring instrument
- 3 Filling valve
- 4 Vessel

**Hygienic compatibility**

 When installing in hygienic applications, please refer to the information in the "Certificates and approvals/hygienic compatibility" section →  46

**Sensor holder DN 1 to 4 (1/24 to 1/8")**

- The appropriate sensor holder must be used for all applications with increased safety or load requirements and for sensors with clamp process connections.
- The Endress+Hauser sensor holder is generally recommended for mounting for all applications → 48.

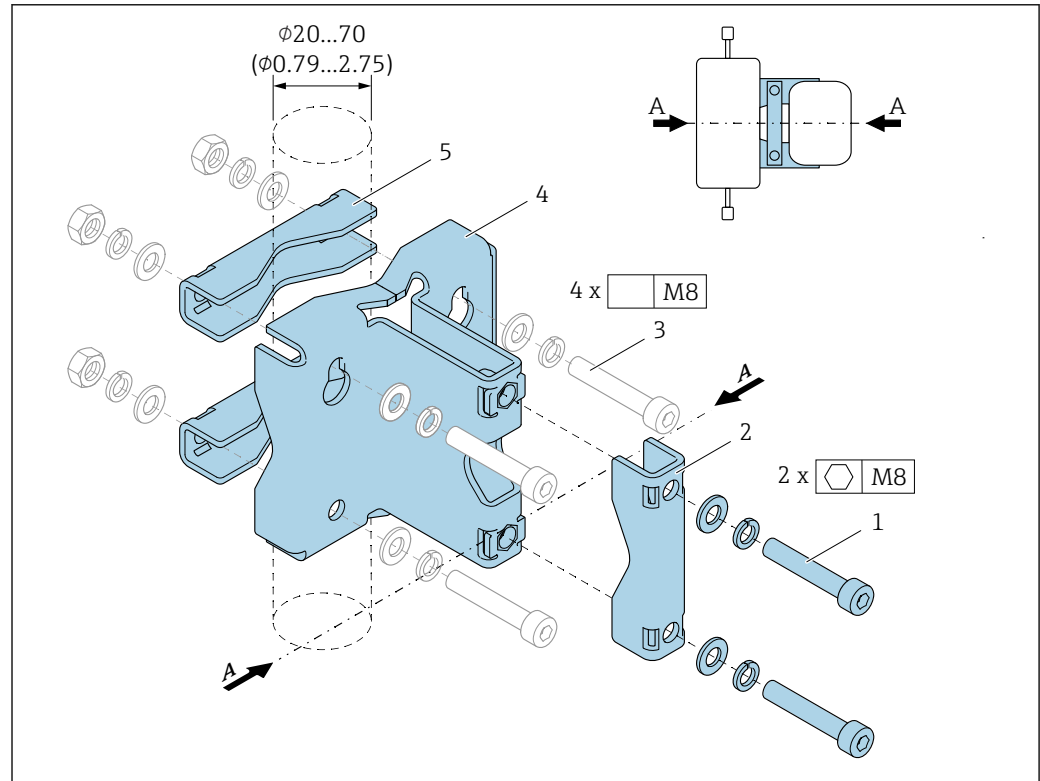

A0036471


- 1 2 x Allen screw M8 x 50, washer and spring washer A4
- 2 1 x clamp (measuring instrument neck)
- 3 4 x securing screw for wall, tabletop or pipe mounting (not supplied)
- 4 1 x base profile
- 5 2 x clamp (pipe mounting)
- A Measuring instrument central line

**⚠ WARNING**

**Strain on pipes!**

Excessive strain on an unsupported pipe can cause the pipe to break.

- Install the sensor in a sufficiently supported pipe. In addition to the use of the sensor holder, for maximum mechanical stability the sensor can also be supported on the inlet and outlet sides onsite at the installation location with the use of pipe clamps, for example.

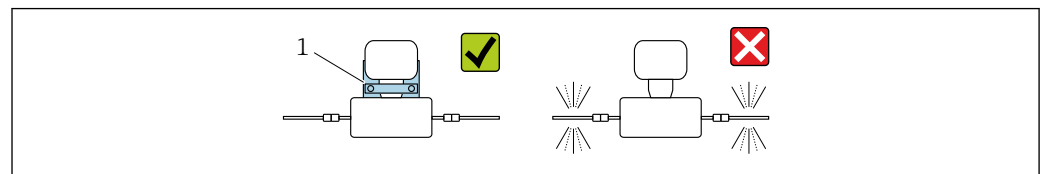

A0036492

- 1 Sensor holder Order number: 71392563

**The following mounting versions are recommended for the installation:**

- i** Lubricate all threaded joints prior to mounting. The screws for wall, tabletop or pipe mounting are not supplied with the device and must be chosen to suit the individual installation position.

*Wall mounting*

Screw the sensor holder to the wall with four screws. Two of the four holes to secure the holder are designed to hook into the screws.

*Mounting on a table*


Screw the sensor holder onto the tabletop with four screws.

*Pipe mounting*

Secure the sensor holder to the pipe with two clamps.



**⚠ WARNING**

**Failure to comply with the specifications for vibration and shock resistance can damage the measuring instrument!**

- ▶ During operation, transportation and storage, ensure compliance with the specifications for maximum vibration and shock resistance →  29.

**Zero adjustment**

The **Sensor adjustment** submenu contains parameters required for zero adjustment.

 Detailed information on the "**Sensor adjustment** submenu": Device parameters →  49

**NOTICE**

**All Dosimass measuring instruments are calibrated in accordance with state-of-the-art technology. Calibration takes place under reference conditions .**

Zero adjustment is therefore not required for the Dosimass as a general rule.

- ▶ Experience shows that a zero adjustment is advisable only in special cases.
- ▶ When maximum measurement accuracy is required and flow rates are very low.
- ▶ Under extreme process or operating conditions (e.g. very high process temperatures or very high-viscosity fluids).

 Detailed information on reference operating conditions →  20

## Environment

<b>Ambient temperature range</b>	<b>Transmitter</b>	-40 to +60 °C (-40 to +140 °F)
	<b>Sensor</b>	-40 to +60 °C (-40 to +140 °F)
<b>Storage temperature</b>	-40 to +80 °C (-40 to +176 °F), preferably at +20 °C (+68 °F)	
<b>Degree of protection</b>	Standard: IP67, Type 4X enclosure, suitable for pollution degree 4	
<b>Shock and vibration resistance</b>	<p><b>Vibration sinusoidal, in accordance with IEC 60068-2-6</b></p> <ul style="list-style-type: none"> <li>■ 2 to 8.4 Hz, 3.5 mm peak</li> <li>■ 8.4 to 2 000 Hz, 1 g peak</li> </ul> <p><b>Vibration broad-band random, according to IEC 60068-2-64</b></p> <ul style="list-style-type: none"> <li>■ 10 to 200 Hz, 0.003 g<sup>2</sup>/Hz</li> <li>■ 200 to 2 000 Hz, 0.001 g<sup>2</sup>/Hz</li> <li>■ Total: 1.54 g rms</li> </ul> <p><b>Shock half-sine, according to IEC 60068-2-27</b></p> <p>6 ms 30 g</p> <p><b>Rough handling shocks according to IEC 60068-2-31</b></p>	

**Internal cleaning**

- CIP cleaning
- SIP cleaning


**Options**


Oil- and grease-free version for wetted parts, without declaration  
 Order code for "Service", option HA <sup>1)</sup>

 Observe the maximum medium temperatures →  30

**Electromagnetic compatibility (EMC)**

As per IEC/EN 61326

 Details are provided in the Declaration of Conformity.

 This unit is not intended for use in residential environments and cannot guarantee adequate protection of the radio reception in such environments.

## Process

**Medium temperature range**

**Sensor**

-40 to +130 °C (-40 to +266 °F)

**Cleaning**

+150 °C (+302 °F) for a maximum of 60 min for CIP and SIP processes

**Seals**

No internal seals

**Medium pressure range**

Max. 40 bar (580 psi), depending on the process connection

**Medium density**


	DN		$\rho_{max}$ [kg/m <sup>3</sup> ]
	[mm]	[in]	
1		1/24	3 150
2		1/12	3 100
4		1/8	3 100
8		3/8	4 548
15		1/2	4 900
25		1	4 270
40		1 1/2	4 700

**Pressure-temperature ratings**

The following pressure/temperature diagrams apply to all pressure-bearing parts of the device and not just the process connection. The diagrams show the maximum permissible medium pressure depending on the specific medium temperature.


1) The cleaning refers to the measuring instrument only. Any accessories supplied are not cleaned.

**Process connection: flange similar to EN 1092-1 (DIN 2501/DIN 2512 N), flange similar to EN 1092-1 (DIN 2501)**

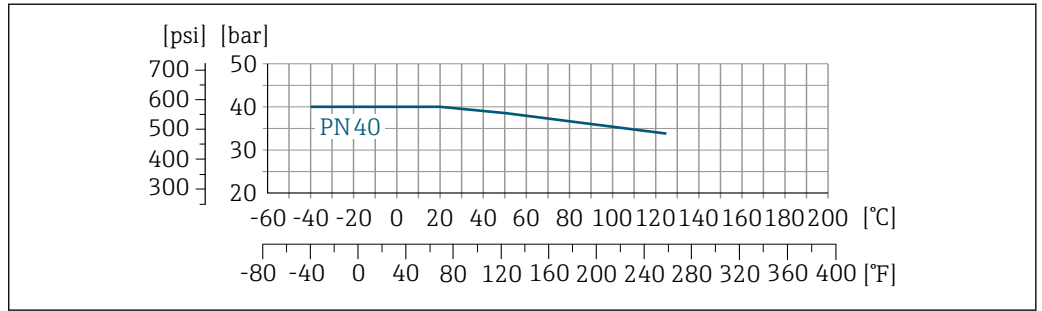

13 Process connection material: stainless steel 1.4404 (316/316L)

**Process connection: 1" clamp similar to DIN 32676**

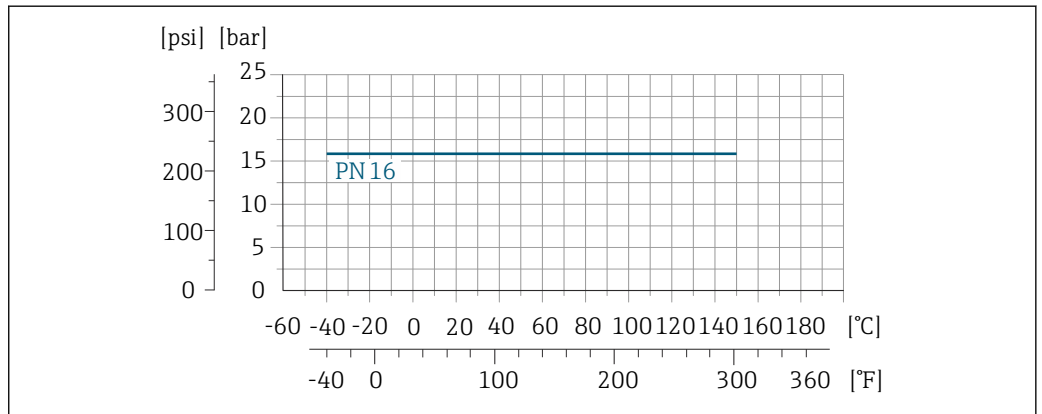


14 Process connection material: stainless steel 1.4404 (316/316L)

**Process connection: Tri-Clamp**


The load limit is defined exclusively by the material properties of the Tri-Clamp clamp used. This clamp is not included in the scope of delivery.

**Process connection: thread similar to DIN 11864-1, Form A**

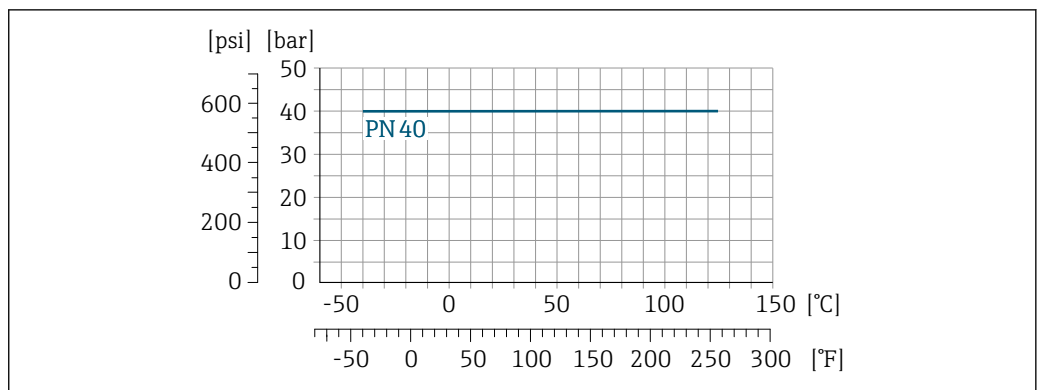


15 Process connection material: stainless steel 1.4404 (316/316L)

**Process connection: thread similar to DIN 11851**

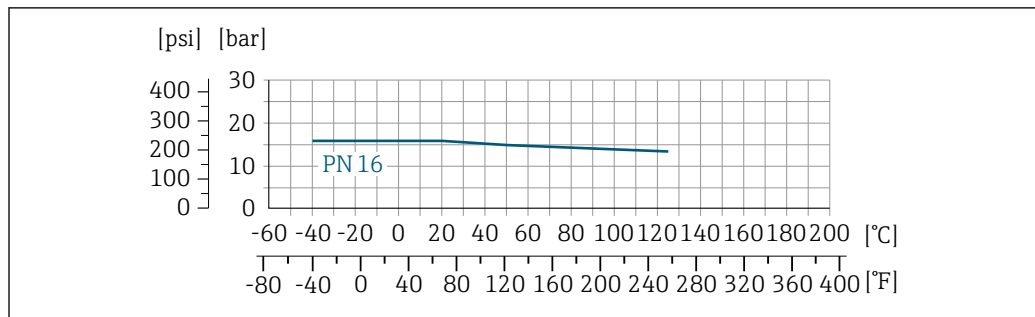

16 Process connection material: stainless steel 1.4404 (316/316L)

**Process connection: thread similar to ISO 2853**

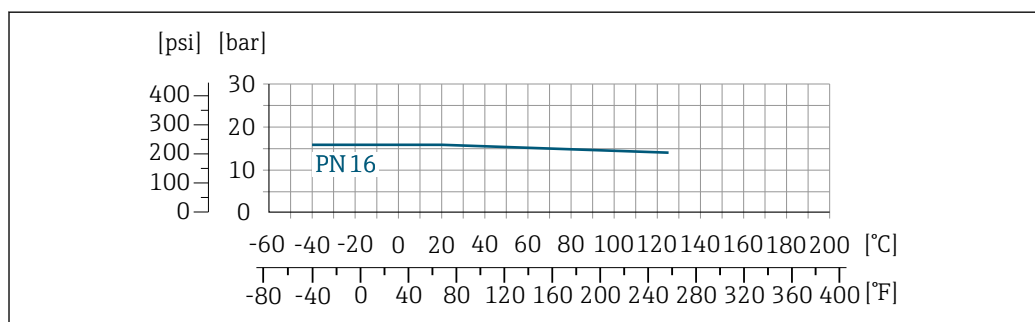

17 Process connection material: stainless steel 1.4404 (316/316L)

**Sensor housing**

The sensor housing is filled with dry nitrogen gas and protects the electronics and mechanics inside.

- The housing does not have a pressure rating classification.
- Reference value for the pressure loading capacity of the sensor housing: 16 bar (232 psi)

**Flow limit**

Select the nominal diameter by optimizing between the required flow range and permissible pressure loss.

**i** For an overview of the full scale values for the measuring range, see the "Measuring range" section → 7

- The minimum recommended full scale value is approx. 1/20 of the maximum full scale value
- In most applications, 20 to 50 % of the maximum full scale value can be considered ideal
- A low full scale value must be selected for abrasive media (such as liquids with entrained solids): flow velocity < 1 m/s (< 3 ft/s).

**i** To calculate the flow limit, use the *Applicator* sizing tool → 48

**Pressure loss**

**i** To calculate the pressure loss, use the *Applicator* sizing tool → 48

**Heating**

Some fluids require suitable measures to avoid loss of heat at the sensor.

**Heating options**

- Electrical heating, e.g. with electric band heaters<sup>2)</sup>
- Via pipes carrying hot water or steam
- Via heating jackets

2) The use of parallel electric band heaters is generally recommended (bidirectional electricity flow). Particular considerations must be made if a single-wire heating cable is to be used. Additional information is provided in the document EA01339D "Installation instructions for electrical trace heating systems"



**NOTICE**

**Danger of overheating when heating**

- ▶ Ensure that the temperature at the lower end of the transmitter housing does not exceed 80 °C (176 °F).
- ▶ Ensure that sufficient convection takes place at the transmitter neck.
- ▶ Ensure that a sufficiently large area of the transmitter neck remains exposed. The uncovered part serves as a radiator and protects the electronics from overheating and excessive cooling.

---

**Vibrations**


The high oscillation frequency of the measuring tubes ensures that the correct operation of the measuring system is not influenced by plant vibrations.

## Mechanical construction

Dimensions in SI units

Compact version


Order code for "Housing", option B "Compact, stainless", DN 1 to 4 ( $\frac{1}{24}$  to  $\frac{1}{8}$ ")

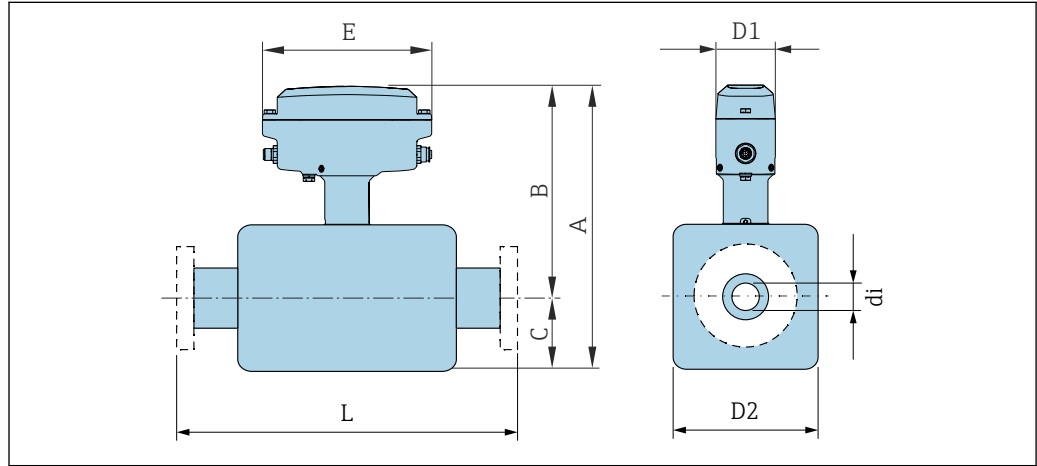

A0053344

DN [mm]	A [mm]	B [mm]	C [mm]	D1 [mm]	D2 [mm]	E [mm]	di [mm]	L [mm]
1	230	176	54	60	34	171	1.1	192
2	272	198	74	60	48	171	2.5	269
4	303	213	90	60	51	171	3.9	315

Order code for "Housing", option B "Compact, stainless", DN 8 to 40 ( $\frac{3}{8}$  to  $1\frac{1}{2}$ ")

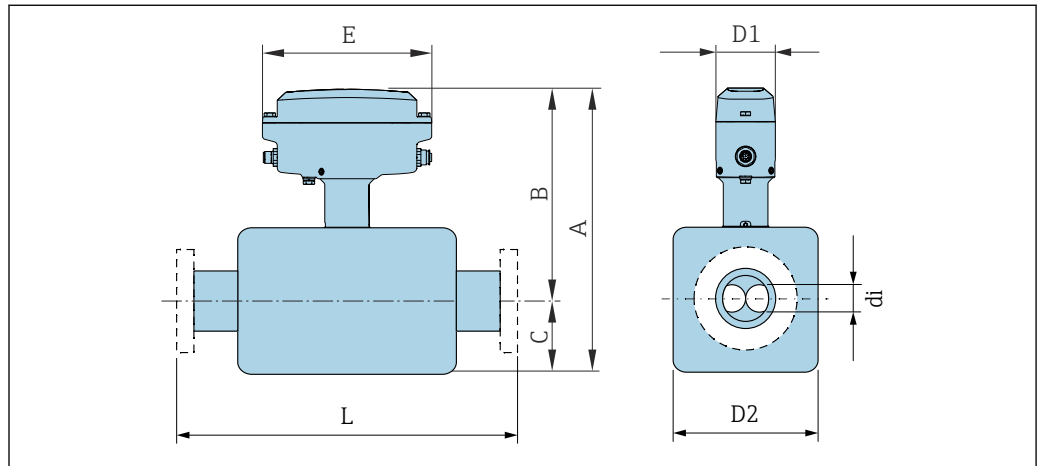


A0052375

DN [mm]	A [mm]	B [mm]	C [mm]	D1 [mm]	D2 [mm]	E [mm]	di [mm]	L [mm]
8	247	158	90	60	45	171	5.35	1)
15	258	158	101	60	45	171	8.3	1)
25	257	155	102	60	51	171	12	1)
40	282	161	121	60	65	171	17.6	1)

1) Depends on the particular process connection

**Fixed flange**

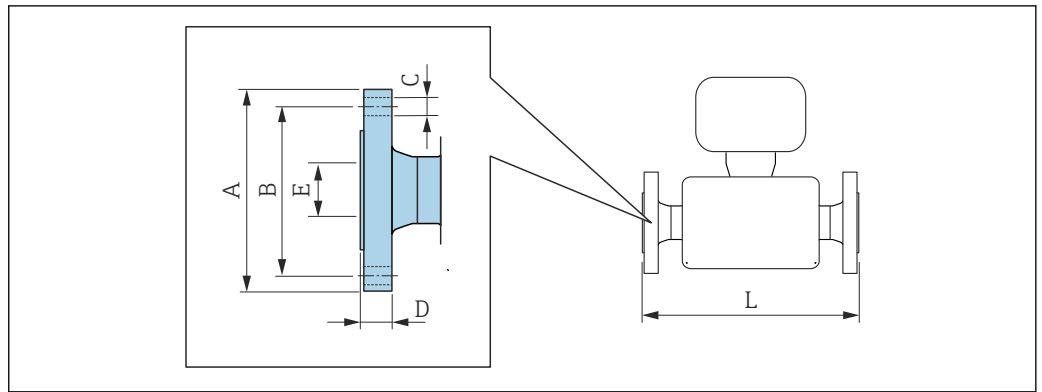


A0015621

**i** Length tolerance for dimension L in mm:  
+1.5 / -2.0

Flange according to EN 1092-1 (DIN 2501 / DIN 2512N): PN 40 1.4404 (316/316L): order code for "Process connection", option D2S						
DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L [mm]
8	95	65	4 × Ø 14	16	17.3	232
15	95	65	4 × Ø 14	16	17.3	279
25	115	85	4 × Ø 14	18	28.5	329
40	150	110	4 × Ø 14	18	43.1	445

Flange according to EN 1092-1 (DIN 2501): PN 40 (with DN 25 flanges) 1.4404 (316/316L): order code for "Process connection", option R2S						
DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L [mm]
8	95	65	4 × Ø 14	16	17.3	198.4
15	95	65	4 × Ø 14	16	17.3	198.4

**Clamp connection**

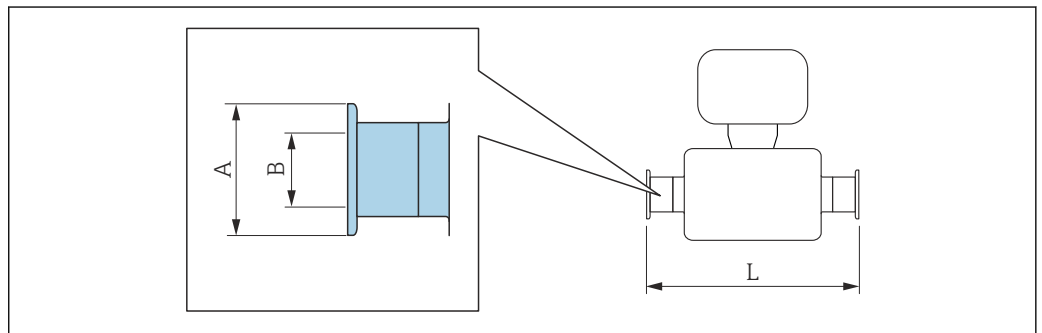


A0015625

**i** Length tolerance for dimension L in mm:  
+1.5 / -2.0

<b>1" clamp according to DIN 32676</b> 1.4404 (316/316L): order code for "Process connection", option KDW			
DN [mm]	A [mm]	B [mm]	L [mm]
8	34.0	16	229
15	34.0	16	273
25	50.5	26	324

Surface roughness:  
Parts in contact with medium mechanically polished: Ra<sub>max</sub> 0.38 µm/240 grit

**Tri-Clamp**

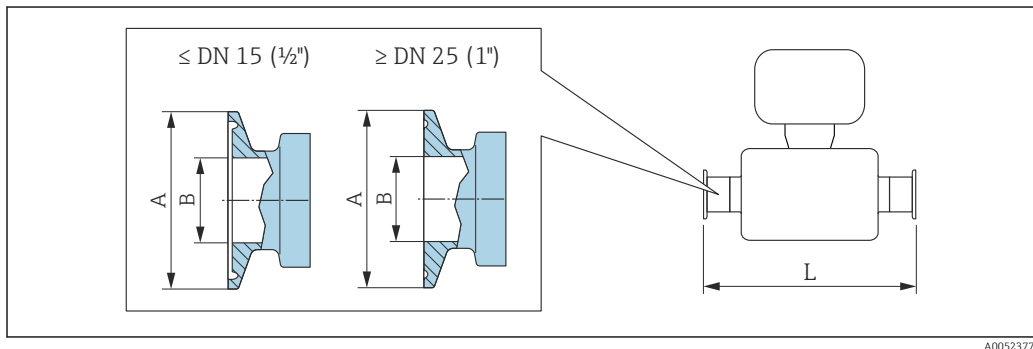

**i** Length tolerance for dimension L in mm:  
+1.5 / -2.0

<b>½" Tri-Clamp</b> 1.4435 (316L): order code for "Process connection", option FBW Suitable for piping according to DIN 11866 series C			
DN [mm]	A [mm]	B [mm]	L [mm]
1	25	9.4	192
2	25	9.4	269
4	25	9.4	315

3-A version available (Ra ≤ 0.76 µm/30 µin, Ra ≤ 0.38 µm/15 µin):  
Order code for "Measuring tube mat., wetted surface", option BB, BF in combination with order code for "Additional approval", option LP

<b>½" Tri-Clamp BS4825-3</b> 1.4404 (316/316L): order code for "Process connection", option FDW Suitable for piping according to DIN 11866 series C			
DN [mm]	A [mm]	B [mm]	L [mm]
8	25	9.5	229
15	25	9.5	273

3-A version available (Ra ≤ 0.76 µm/30 µin, Ra ≤ 0.38 µm/15 µin):  
Order code for "Measuring tube mat., wetted surface", option BB, BF in combination with order code for "Additional approval", option LP

**3/4" Tri-Clamp**  
**1.4404 (316/316L):** order code for "Process connection", option FWW  
 Suitable for piping according to DIN 11866 series C

DN [mm]	A [mm]	B [mm]	L [mm]
8	25.0	15.75	229
15	25.0	15.75	273


3-A version available (Ra ≤ 0.76 µm/30 µin, Ra ≤ 0.38 µm/15 µin):  
 Order code for "Measuring tube mat., wetted surface", option BB, BF in combination with order code for "Additional approval", option LP

**1" Tri-Clamp**  
**1.4404 (316/316L):** order code for "Process connection", option FTS  
 Suitable for piping according to DIN 11866 series C

DN [mm]	A [mm]	B [mm]	L [mm]
8	50.4	22.1	229
15	50.4	22.1	273
25	50.4	22.1	324
40	50.4	34.8	456

3-A version available (Ra ≤ 0.76 µm/30 µin, Ra ≤ 0.38 µm/15 µin):  
 Order code for "Measuring tube mat., wetted surface", option BB, BF in combination with order code for "Additional approval", option LP

**Threaded adapter**

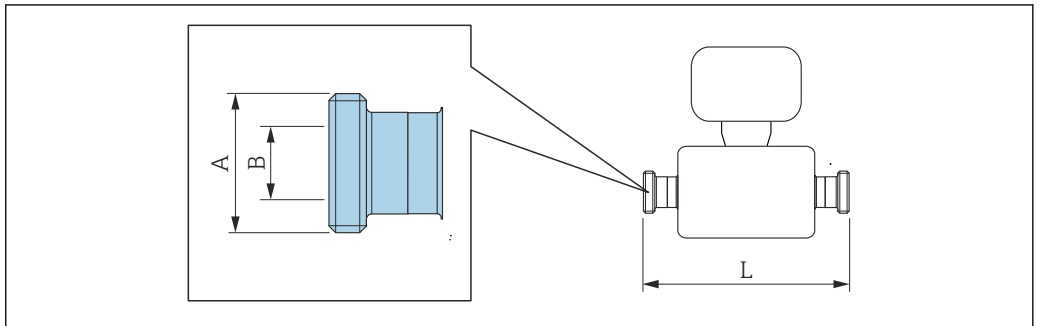

A0015628

**i** Length tolerance for dimension L in mm:  
 +1.5 / -2.0

**Threaded adapter as per DIN 11864-1 Form A**  
**1.4404 (316/316L):** order code for "Process connection", option FLW  
 Suitable for piping according to DIN 11866 series A


DN [mm]	A [mm]	B [mm]	L [mm]
8	Rd 28 × 1/8"	10	229
15	Rd 34 × 1/8"	16	273
25	Rd 52 × 1/6"	26	324
40	Rd 65 × 1/6"	38	456

3-A version available (Ra ≤ 0.76 µm/30 µin, Ra ≤ 0.38 µm/15 µin):  
 Order code for "Measuring tube mat., wetted surface", option BB, BF in combination with order code for "Additional approval", option LP

**Threaded adapter as per DIN 11851**  
**1.4404 (316/316L):** order code for "Process connection", option **FMW**  
 Suitable for piping according to DIN 11866 series A

DN [mm]	A [mm]	B [mm]	L [mm]
8	Rd 34 × 1/8"	16	229
15	Rd 34 × 1/8"	16	273
25	Rd 52 × 1/6"	26	324
40	Rd 65 × 1/6"	38	456

3-A version available (Ra ≤ 0.76 µm/30 µin, Ra ≤ 0.38 µm/15 µin):  
 Order code for "Measuring tube mat., wetted surface", option BB, BF in combination with order code for "Additional approval", option LP

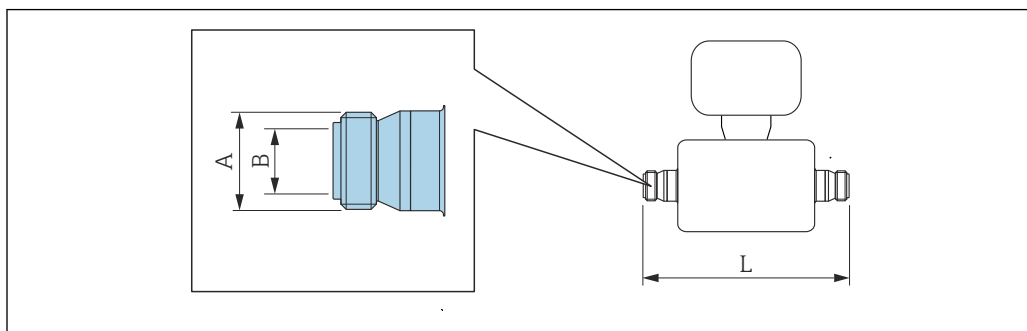

A0015623

**i** Length tolerance for dimension L in mm:  
 +1.5 / -2.0

**Threaded adapter as per ISO 2853**  
**1.4404 (316/316L):** order code for "Process connection", option **JSF**  
 Suitable for piping according to ISO 2037


DN [mm]	A <sup>1)</sup> [mm]	B [mm]	L [mm]
8	37.13	22.6	229
15	37.13	22.6	273
25	37.13	22.6	324
40	50.68	35.6	456

3-A version available (Ra ≤ 0.76 µm/30 µin, Ra ≤ 0.38 µm/15 µin):  
 Order code for "Measuring tube mat., wetted surface", option BB, BF in combination with order code for "Additional approval", option LP

1) Max. thread diameter according to ISO 2853 Annex A

Accessories

Sensor holder

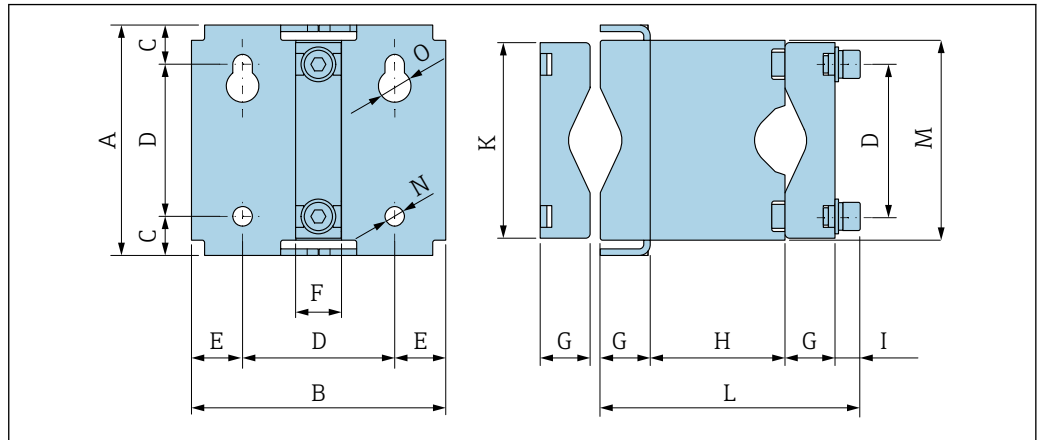

A0036633


A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	F [mm]	G [mm]
106	117	18	70	23.5	21	23

H [mm]	I [mm]	K [mm]	L [mm]	M [mm]	N [mm]	O [mm]
62	12	90	120	92	9	15

Dimensions in US units

Compact version


Order code for "Housing", option B "Compact, stainless", DN 1 to 4 (1/24 to 1/8")

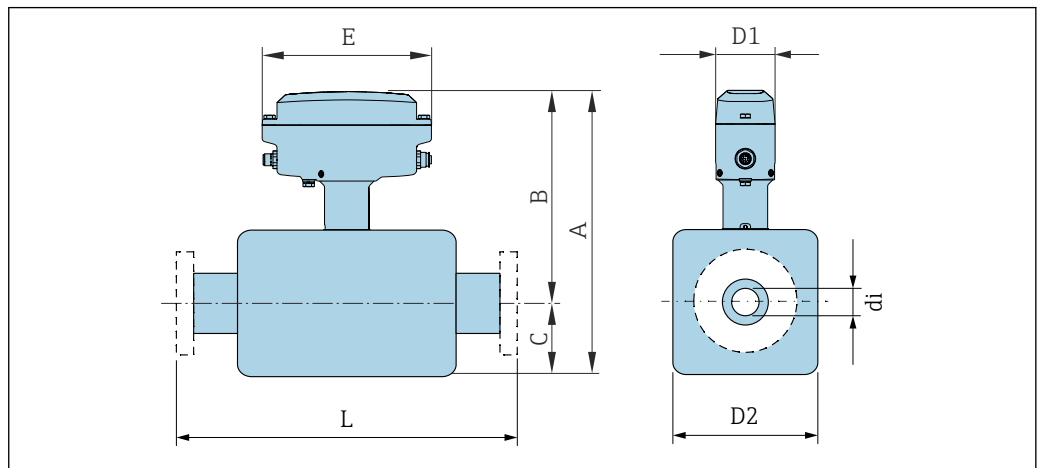

A0053344

DN [in]	A [in]	B [in]	C [in]	D1 [in]	D2 [in]	E [in]	di [in]	L [in]
1/24	9.06	6.93	2.13	2.36	1.34	6.73	0.04	7.56
1/12	10.71	7.80	2.91	2.36	1.89	6.73	0.08	10.59
1/8	11.93	8.39	3.54	2.36	2.01	6.73	0.12	12.40


Order code for "Housing", option B "Compact, stainless", DN 8 to 40 (3/8 to 1 1/2")

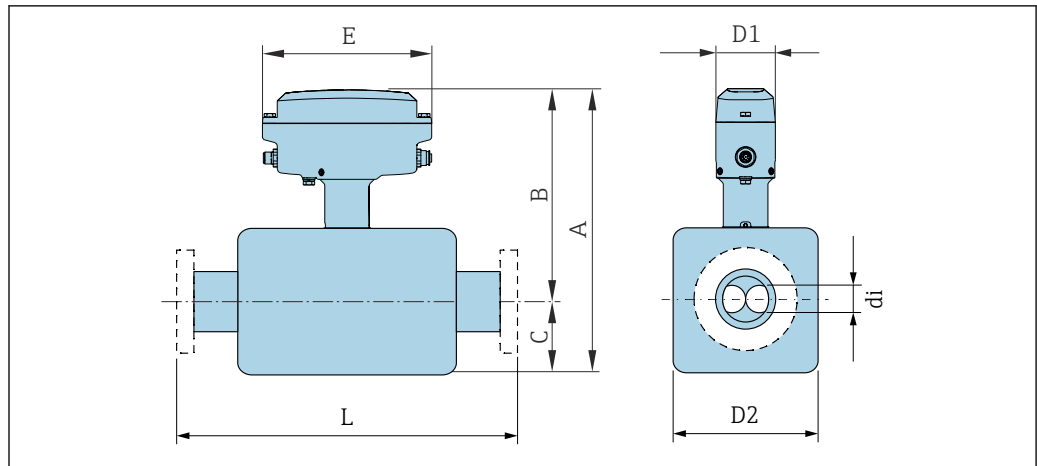

DN [in]	A [in]	B [in]	C [in]	D1 [in]	D2 [in]	E [in]	di [in]	L [in]
3/8	9.72	6.22	3.54	2.36	1.77	6.73	0.20	1)
1/2	10.16	6.22	3.98	2.36	1.77	6.73	0.31	1)
1	10.12	6.10	4.02	2.36	2.01	6.73	0.47	1)
1 1/2	11.10	6.34	4.76	2.36	2.56	6.73	0.67	1)

1) Depends on the particular process connection

**Tri-Clamp**

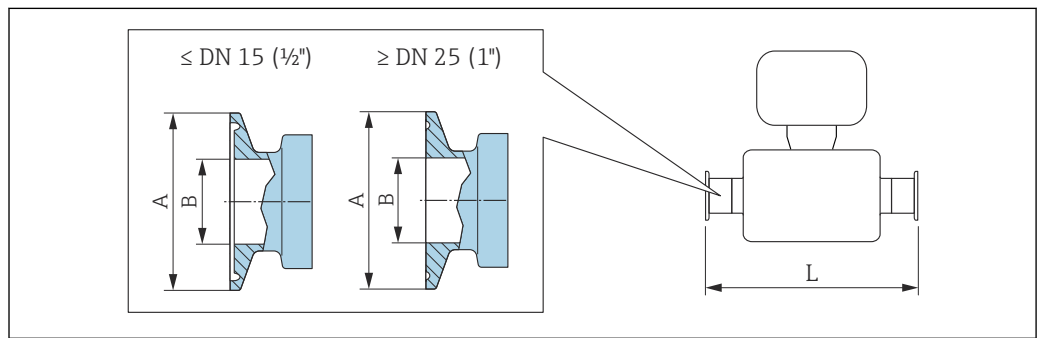

**i** Length tolerance for dimension L in inch:  
+0.06 / -0.08

DN [in]	A [in]	B [in]	L [in]
1/24	0.98	0.37	7.56
1/12	0.98	0.37	10.6
1/8	0.98	0.37	12.4

3-A version available (Ra ≤ 0.76 μm/30 μin, Ra ≤ 0.38 μm/15 μin):  
Order code for "Measuring tube mat., wetted surface", option BB, BF in combination with order code for "Additional approval", option LP



**½" Tri-Clamp BS4825-3**  
**1.4404 (316/316L):** order code for "Process connection", option **FDW**  
 Suitable for piping according to DIN 11866 series C

DN [in]	A [in]	B [in]	L [in]
⅜	0.98	0.37	9.02
½	0.98	0.37	10.80


3-A version available (Ra ≤ 0.76 µm/30 µin, Ra ≤ 0.38 µm/15 µin):  
 Order code for "Measuring tube mat., wetted surface", option BB, BF in combination with order code for "Additional approval", option LP

**¾" Tri-Clamp**  
**1.4404 (316/316L):** order code for "Process connection", option **FWW**  
 Suitable for piping according to DIN 11866 series C

DN [in]	A [in]	B [in]	L [in]
⅜	0.98	0.62	9.02
½	0.98	0.62	10.80

3-A version available (Ra ≤ 0.76 µm/30 µin, Ra ≤ 0.38 µm/15 µin):  
 Order code for "Measuring tube mat., wetted surface", option BB, BF in combination with order code for "Additional approval", option LP

**Threaded adapter**

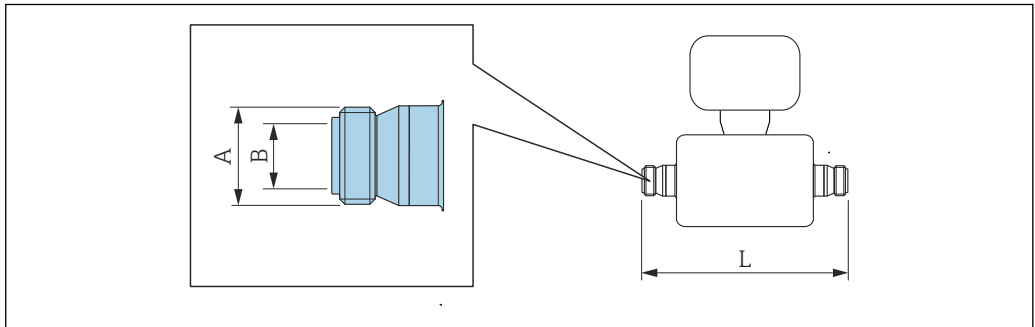

A0015623

**i** Length tolerance for dimension L in inch:  
 +0.06 / -0.08

**Threaded adapter as per ISO 2853**  
**1.4404 (316/316L):** order code for "Process connection", option **JSF**  
 Suitable for piping according to ISO 2037


DN [in]	A <sup>1)</sup> [in]	B [in]	L [in]
⅜	1.46	0.89	9.02
½	1.46	0.89	10.80
1	1.46	0.89	12.80
1 ½	1.97	1.38	17.95

3-A version available (Ra ≤ 0.76 µm/30 µin, Ra ≤ 0.38 µm/15 µin):  
 Order code for "Measuring tube mat., wetted surface", option BB, BF in combination with order code for "Additional approval", option LP

1) Max. thread diameter according to ISO 2853 Annex A

**Accessories**

*Sensor holder*

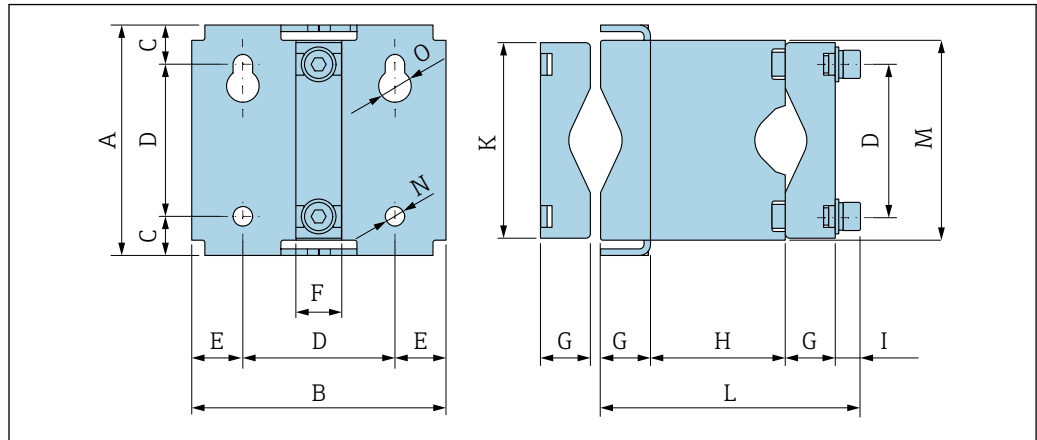

A0036633

A [in]	B [in]	C [in]	D [in]	E [in]	F [in]	G [in]
4.17	4.61	0.71	2.76	0.93	0.83	0.91

H [in]	I [in]	K [in]	L [in]	M [in]	N [in]	O [in]
2.44	0.47	3.54	4.72	3.62	0.35	0.59

**Weight**

**Weight in SI units**

DN [mm]	Weight [kg]
1	3.7
2	5.3
4	7.1
8	4.2
15	4.5
25	5.0
40	8.0

**Weight in US units**

DN [in]	Weight [lbs]
1/24	8.2
1/12	11.7
1/8	15.7
3/8	9.3
1/2	9.9
1	11.0
1 1/2	17.6

**Materials**

**Transmitter housing**

- Acid and alkali-resistant outer surface
- Stainless steel, 1.4409 (CF3M)

**Device plug**

Electrical connection	Material
M12x1 plug	<ul style="list-style-type: none"> <li>■ Socket: Polyamide contact support</li> <li>■ Connector: Contact support made of thermoplastic polyurethane (TPU-GF)</li> <li>■ Contacts: Gold-plated brass</li> </ul>

**Sensor housing**

Acid and alkali-resistant outer surface

**DN 1 to 4 mm ( $\frac{1}{24}$  to  $\frac{1}{8}$ "**

Stainless steel, 1.4404 (316/316L)

**DN 8 to 40 mm ( $\frac{3}{8}$  to 1  $\frac{1}{2}$ "**

Stainless steel 1.4301 (304)

**Measuring tubes**

**DN 1 to 4 mm ( $\frac{1}{24}$  to  $\frac{1}{8}$ "**

Stainless steel, 1.4435 (316/316L)

**DN 8 to 40 mm ( $\frac{3}{8}$  to 1  $\frac{1}{2}$ "**

Stainless steel, 1.4539 (904L)

**Process connections**

**DN 1 to 4 mm ( $\frac{1}{24}$  to  $\frac{1}{8}$ "**



$\frac{1}{2}$ " Tri-Clamp:

Stainless steel, 1.4435 (316L)

**DN 8 to 40 mm ( $\frac{3}{8}$  to 1  $\frac{1}{2}$ "**

All process connections:

Stainless steel, 1.4404 (316/316L)

 Available process connections →  43

**Seals**

Welded process connections without internal seals

**Accessories**

*Sensor holder*

Stainless steel, 1.4404 (316L)

**Process connections**

**Fixed flange**

- EN 1092-1 (DIN 2501 / DIN 2512N)
- EN 1092-1 (DIN 2501)

**Clamp connections**

1" clamp according to DIN 32676

**Tri-Clamp**

- $\frac{1}{2}$ " Tri-Clamp
- $\frac{1}{2}$ " Tri-Clamp BS4825-3
- $\frac{3}{4}$ " Tri-Clamp
- 1" Tri-Clamp

**Threaded adapter**

- DIN 11864-1 Form A
- DIN 11851
- ISO 2853



Process connection materials → 43

**Surface roughness**

All data refer to parts in contact with the medium. The following surface roughness categories can be ordered.

- $Ra_{max} = 0.76 \mu\text{m}$  (30  $\mu\text{in}$ )
- $Ra_{max} = 0.38 \mu\text{m}$  (15  $\mu\text{in}$ )

## Operability

**Languages**

Can be operated in the following languages:

Via "FieldCare", "DeviceCare" operating tool: English, German, French, Spanish, Italian, Chinese, Japanese

**Local operation**

This device cannot be operated locally using a display or operating elements.

**IO-Link**

The device-specific parameters are configured via IO-Link. There are specific configuration or operating programs from different manufacturers available to the user for this purpose. The device description file (IODD) is provided for the device.

**IO-Link operating concept**

Operator-oriented menu structure for user-specific tasks. Efficient diagnostic behavior increases measurement availability:

- Diagnostic messages
- Remedial measures
- Simulation options

**IODD download**

Two options to download the IODD:

- [www.endress.com/download](http://www.endress.com/download)
- <https://ioddfinder.io-link.com/>

**[www.endress.com/download](http://www.endress.com/download)**

1. Select "Device drivers".
2. Select the "IO Device Description (IODD)" entry under "Type".
3. Select "Product root".
4. Click "Search".

↳ A list of search results is displayed.

Select the appropriate version and download.

**<https://ioddfinder.io-link.com/>**

1. Enter "Endress" as the manufacturer and select.
2. Select product name.


↳ A list of search results is displayed.

Select the appropriate version and download.

**Remote operation****Using service adapter and Commubox FXA291**

Operation and configuration can be performed using the Endress+Hauser FieldCare or DeviceCare service and configuration software.

The device is connected to the USB port of the computer via the service adapter and Commubox FXA291.

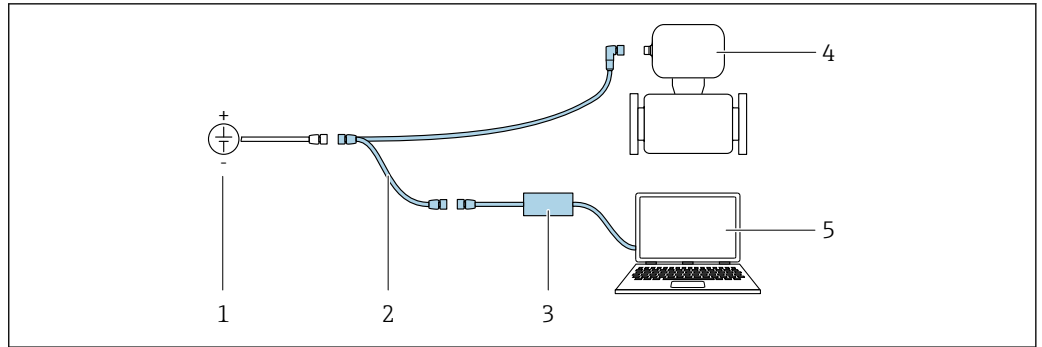

A0032567

- 1 Supply voltage 24 V DC
- 2 Service adapter
- 3 Commubox FXA291
- 4 Dosimass
- 5 Computer with "FieldCare" or "DeviceCare" operating tool

**i** The service adapter, cable and Commubox FXA291 are not included in the delivery. These components can be ordered as accessories → [47](#).

## Certificates and approvals

Current certificates and approvals for the product are available at [www.endress.com](http://www.endress.com) on the relevant product page:

1. Select the product using the filters and search field.
2. Open the product page.
3. Select **Downloads**.

**CE mark** The device meets the legal requirements of the applicable EU Directives. These are listed in the corresponding EU Declaration of Conformity along with the standards applied. Endress+Hauser confirms successful testing of the device by affixing to it the CE mark.

**UKCA marking** The device meets the legal requirements of the applicable UK regulations (Statutory Instruments). These are listed in the UKCA Declaration of Conformity along with the designated standards. By selecting the order option for UKCA marking, Endress+Hauser confirms a successful evaluation and testing of the device by affixing the UKCA mark.

Contact address Endress+Hauser UK:  
 Endress+Hauser Ltd.  
 Floats Road  
 Manchester M23 9NF  
 United Kingdom  
[www.uk.endress.com](http://www.uk.endress.com)

**RCM marking** The measuring system meets the EMC requirements of the "Australian Communications and Media Authority (ACMA)".

**Ex approval** The measuring device is certified for use in hazardous areas and the relevant safety instructions are provided in the separate "Safety Instructions" (XA) document. Reference is made to this document on the nameplate.

**i** The separate Ex documentation (XA) containing all the relevant explosion protection data is available from your Endress+Hauser sales center.

### ATEX, IECEx

Currently, the following versions for use in hazardous areas are available:

Ex ec

Category (ATEX)	Type of protection
II3G	Ex ec IIC T5 to T1 Gc

**cULus**

Currently, the following versions for use in hazardous areas are available:



Class I Division 2 Groups ABCD

**Hygienic compatibility**

- 3-A approval
    - Only measuring devices with the order code for "Additional approval", option LP "3A" have 3-A approval.
    - The 3-A approval refers to the measuring device.
    - When installing the measuring device, ensure that no liquid can accumulate on the outside of the measuring device.
    - Accessories (e.g. sensor holder) must be installed in accordance with the 3-A Standard. Each accessory can be cleaned. Disassembly may be necessary under certain circumstances.
  - EHEDG-certified<sup>3)</sup>

Only devices with the order code for "Additional approval", option LT "EHEDG" have been tested and meet the requirements of the EHEDG.

To meet the requirements for EHEDG certification, the device must be used with process connections in accordance with the EHEDG position paper entitled "Easy cleanable Pipe couplings and Process connections" ([www.ehedg.org](http://www.ehedg.org)).

When installed, the orientation of the device must facilitate draining in order to meet the requirements of EHEDG certification.
  - Food Contact Materials Regulation (EC) 1935/2004
-  Observe special mounting instructions →  26

**Pharmaceutical compatibility**

- FDA 21 CFR 177
- USP <87>
- USP <88> Class VI 121 °C
- TSE/BSE Certificate of Suitability
- cGMP
 

Devices with the order code for "Test, certificate", option JG "Conformity with cGMP-derived requirements, declaration" comply with the requirements of cGMP with regard to the surfaces of parts in contact with the medium, design, FDA 21 CFR material conformity, USP Class VI tests and TSE/BSE conformity.

A serial number-specific declaration is generated.

**Pressure Equipment Directive**

The measuring devices can be ordered with or without PED or PESR. If a device with PED or PESR is required, this must be ordered explicitly. For devices with nominal diameters less than or equal to DN 25 (1"), this is neither possible nor necessary. A UK order option must be selected for PESR under the order code for "Approvals".

3) DN 8 to 40 (3/8 to 1 1/2")

- With the marking
  - a) PED/G1/x (x = category) or
  - b) PESR/G1/x (x = category)
 on the sensor nameplate, Endress+Hauser confirms compliance with the "Essential Safety Requirements"
  - a) specified in Annex I of the Pressure Equipment Directive 2014/68/EU or
  - b) Schedule 2 of Statutory Instruments 2016 No. 1105.
- Devices bearing this marking (PED or PESR) are suitable for the following types of medium:
  - Media in Group 1 and 2 with a vapor pressure greater than, or smaller and equal to 0.5 bar (7.3 psi)
  - Unstable gases
- Devices not bearing this marking (without PED or PESR) are designed and manufactured according to sound engineering practice. They meet the requirements of
  - a) Art. 4 Para. 3 of the Pressure Equipment Directive 2014/68/EU or
  - b) Part 1, Para. 8 of Statutory Instruments 2016 No. 1105.
 The scope of application is indicated
  - a) in diagrams 6 to 9 in Annex II of the Pressure Equipment Directive 2014/68/EU or
  - b) Schedule 3, Para. 2 of Statutory Instruments 2016 No. 1105.

---

**External standards and guidelines**

- EN 60529  
Degrees of protection provided by enclosures (IP code)
- EN 61010-1  
Safety requirements for electrical equipment for measurement, control and laboratory use
- EN 61326-1/-2-3  
EMC requirements for electrical equipment for measurement, control and laboratory use
- CAN/CSA C22.2 No. 61010-1-12  
Safety Requirements for Electrical Equipment for Measurement, Control and Laboratory Use, Part 1: General Requirements
- ANSI/ISA-61010-1 (82.02.01)  
Safety Requirements for Electrical Equipment for Measurement, Control and Laboratory Use – Part 1: General Requirements

---

**Additional certification**

**CRN approval**

Some device versions have CRN approval. A CRN-approved process connection with a CSA approval must be ordered for a CRN-approved device.

## Ordering information

Detailed ordering information is available from your nearest sales organization [www.addresses.endress.com](http://www.addresses.endress.com) or in the Product Configurator at [www.endress.com](http://www.endress.com):

1. Select the product using the filters and search field.
2. Open the product page.
3. Select **Configuration**.








**Product Configurator - the tool for individual product configuration**


- Up-to-the-minute configuration data
- Depending on the device: Direct input of measuring point-specific information such as measuring range or operating language
- Automatic verification of exclusion criteria
- Automatic creation of the order code and its breakdown in PDF or Excel output format
- Ability to order directly in the Endress+Hauser Online Shop

## Accessories


Various accessories, which can be ordered with the device or subsequently from Endress+Hauser, are available for the device. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: [www.endress.com](http://www.endress.com).

Device-specific accessories	Accessories	Description
	Sensor holder	<p>For wall, tabletop and pipe mounting.</p> <p> Order number: 71392563</p> <p> Installation Instructions EA01195D</p>


Communication-specific accessories	Accessory	Description
	FieldCare	<p>FDT-based plant asset management tool from Endress+Hauser. It can configure all smart field units in your system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition.</p> <p> Operating Instructions BA00027S and BA00059S</p>
	DeviceCare	<p>Tool to connect and configure Endress+Hauser field devices.</p> <p> Innovation brochure IN01047S</p>
	Commubox FXA291	<p>Connects Endress+Hauser field devices with a CDI interface (= Endress+Hauser Common Data Interface) and the USB port of a computer or laptop.</p> <p> Technical Information TI00405C</p>
	Adapter connection	<p>Adapter connections for installation on other electrical connections: Adapter FXA291 (order number: 71035809)</p>

Service-specific accessories	Accessories	Description
	Applicator	<p>Software for selecting and sizing Endress+Hauser measuring devices:</p> <ul style="list-style-type: none"> <li>▪ Choice of measuring devices for industrial requirements</li> <li>▪ Calculation of all the necessary data for identifying the optimum flowmeter: e.g. nominal diameter, pressure loss, flow velocity and accuracy.</li> <li>▪ Graphic illustration of the calculation results</li> <li>▪ Determination of the partial order code, administration, documentation and access to all project-related data and parameters over the entire life cycle of a project.</li> </ul> <p>Applicator is available:</p> <ul style="list-style-type: none"> <li>▪ Via the Internet: <a href="https://portal.endress.com/webapp/applicator">https://portal.endress.com/webapp/applicator</a></li> <li>▪ As a downloadable DVD for local PC installation.</li> </ul>
	Commubox FXA291	<p>Connects Endress+Hauser field devices with a CDI interface (= Endress+Hauser Common Data Interface) and the USB port of a computer or laptop.</p> <p> Technical Information TI00405C</p>

## Documentation

-  For an overview of the scope of the associated Technical Documentation, refer to the following:
- *Device Viewer* ([www.endress.com/deviceviewer](http://www.endress.com/deviceviewer)): Enter the serial number from the nameplate
  - *Endress+Hauser Operations app*: Enter serial number from nameplate or scan matrix code on nameplate.

### Standard documentation

-  Additional information on semi-standard options is available in the associated Special Documentation in the TSP database.

### Brief Operating Instructions

Measuring instrument	Documentation code
Dosimass	KA01688D



### Operating Instructions

Measuring instrument	Documentation code		
	Pulse/frequency/status output Option AA	IO-Link Option FA	Modbus RS485 Option MD
Dosimass	BA02346D	BA02330D	BA02347D

### Description of Device Parameters

Measuring instrument	Documentation code		
	Pulse/frequency/status output Option AA	IO-Link Option FA	Modbus RS485 Option MD
Dosimass	GP01219D	GP01216D	GP01220D

### Supplementary device- dependent documentation

### Safety instructions

Contents	Documentation code
ATEX Ex ec	XA03257D
UL Class I, Division 2	XA03263D
UKEX Ex ec	XA03264D

### Special Documentation

Contents	Documentation code
IO-Link	SD03250D

## Registered trademarks

#### Modbus®

Registered trademark of SCHNEIDER AUTOMATION, INC.

#### IO-Link®

Is a registered trademark. It may only be used in conjunction with products and services by members of the IO-Link Community or by non-members who hold an appropriate license. For more specific guidelines on use, refer to the IO-Link Community rules on: [www.io-link.com](http://www.io-link.com).

#### TRI-CLAMP®

Registered trademark of Ladish & Co., Inc., Kenosha, USA

---

---



[www.addresses.endress.com](http://www.addresses.endress.com)

---