



Level



Pressure



Flow



Temperature



Liquid  
Analysis



Registration



Systems  
Components



Services




Solutions

## Technical Information

# Fieldgate Solution FXA360, FXA560

## Gateways / Interfaces

Gateway for Remote Monitoring of Sensors and Actuators  
via Web Browsers

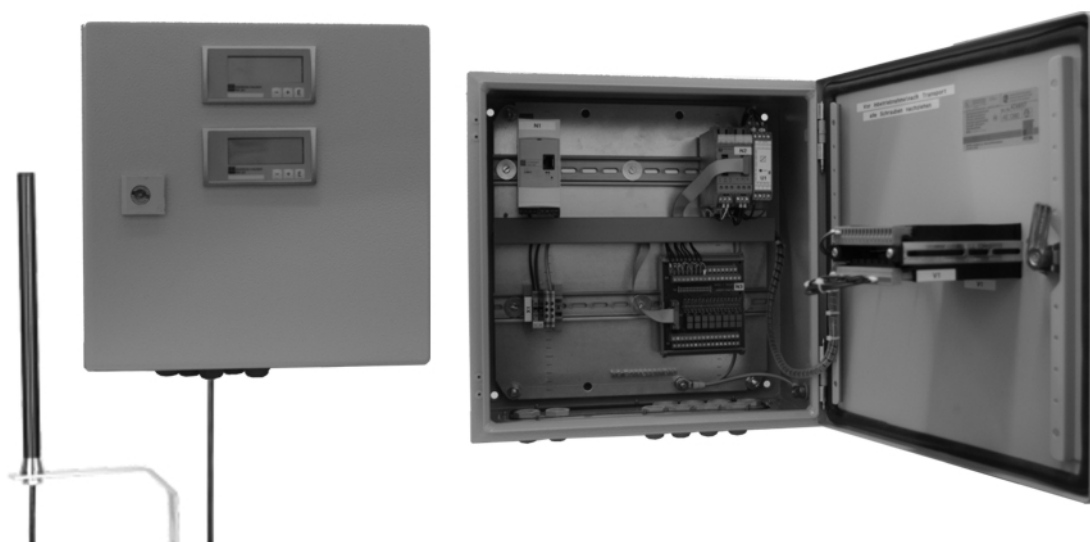

### Application

The Fieldgate Solutions FXA360 and FXA560 are customer-specific solutions, completely installed and wired inside a cabinet, for applications in the area of inventory control. With the integrated telemetry unit Fieldgate FXA320 or FXA520, inventory data from geographically widely distributed tanks or silos can be transmitted to an inventory management system using Internet technology. Up to 30 transmitters can be connected to the FXA560, and both passive (2-wire) and active (4-wire) transmitters can be connected. The size of the cabinet depends on the number of transmitters to be connected, which are ordered from the sales structure.

### Your benefits

- Quick and cost-effective commissioning with completely assembled and wired cabinet.
- Customer-specific solutions mean that customers order and pay for the exact configuration they need for their application, no more and no less.
- Remote monitoring via modem, Ethernet or GSM/GPRS.
- Visualisation with web browser or WAP-enabled mobile phone.
- Intrinsically safe version for applications in Ex hazardous areas.
- With the HART protocol, up to 30 transmitters can be connected.
- Limit monitoring with alarms via e-mail or SMS.


## Table of contents

<b>Applications</b> .....	<b>3</b>	Fieldgate Solution FXA560 .....	31
Vendor Managed Inventory .....	3	Fieldgate Solution FXA560 (continued) .....	32
<b>Communication interface</b> .....	<b>4</b>	<b>Accessories</b> .....	<b>33</b>
Internet connection .....	4	DAT module .....	33
Ethernet .....	4	PC cable .....	33
Telephone network (analogue) .....	4	Telephone cable .....	33
Mobile communications network (GSM) .....	5	Fieldgate OPC server .....	33
GPRS support .....	5	Java applets .....	33
<b>Function and system design</b> .....	<b>6</b>	Antenna .....	33
Measuring system .....	6	HART Client (FXA560 only) .....	33
<b>Input</b> .....	<b>11</b>	Multiplexer (FXA560 only) .....	34
Analogue 4...20 mA inputs (FXA360 only) .....	11	E+H power supply units (FXA560 only) .....	34
HART channel 1&2 (FXA560 only) .....	11	E+H Multidrop Connector FXN520 (FXA560 only) .....	34
Binary inputs .....	12	Solarbox (FXA360 only) .....	34
RN221N Active barrier .....	12	24 V switched-mode power supply (Phoenix) .....	34
RNS221 Transmitter power supply .....	12	Process display RIA251 .....	34
Multiplexer interface module .....	12	Process display OC7421 .....	34
<b>Power supply</b> .....	<b>13</b>	Fieldgate FX320 .....	34
Supply voltage .....	13	Fieldgate FX520 .....	34
Cable entry .....	13	WLAN components .....	34
Connection types FXA360 .....	13	<b>Documentation</b> .....	<b>35</b>
Connection types FXA560 .....	15	Operating Instructions .....	35
<b>Operating conditions: Environment</b> .....	<b>21</b>	Certificates .....	35
Permitted ambient temperatures .....	21	Accessories .....	35
Storage temperature .....	21		
Ingress protection .....	21		
<b>Mechanical construction</b> .....	<b>22</b>		
Design, dimensions .....	22		
Terminals in the cabinet .....	23		
Plug-in connections .....	23		
<b>Human interface</b> .....	<b>24</b>		
Display elements at Fieldgate FXA360/560 .....	24		
Operating elements at Fieldgate FXA360/560 .....	24		
Operation concept .....	25		
<b>Certificates and approvals</b> .....	<b>27</b>		
CE mark .....	27		
Ex-approval .....	27		
Explosion protection .....	27		
Other standards and guidelines .....	27		
<b>Telecommunications Regulatory Compliance</b> .....	<b>28</b>		
Fieldgate analogue version .....	28		
Fieldgate GSM version .....	28		
<b>Ordering information</b> .....	<b>29</b>		
Fieldgate Solution FXA360 .....	29		
Fieldgate Solution FXA360 (continued) .....	30		

## Applications

### Vendor Managed Inventory

By using Fieldgates to interrogate tank or silo levels remotely, suppliers of raw materials can provide their regular customers with information about the current supplies at any time and, for example, account for them in their own production planning. For their part, the Fieldgates monitor the configured level limits and, if required, automatically activate the next supply. The spectrum of options here ranges from a simple purchasing requisition via e-mail through to fully automatic order administration by coupling XML data into the planning systems on both sides.

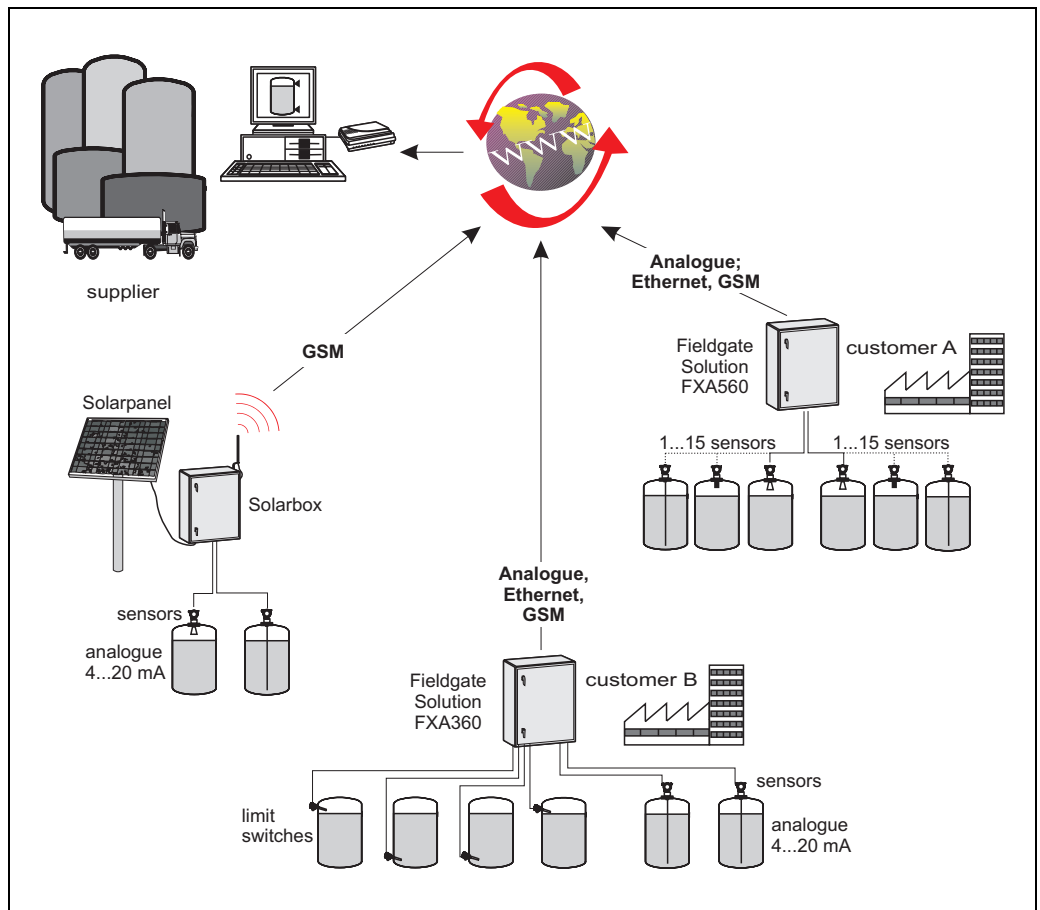

L00-FXA360cx-02-00-06-en-001


## Communication interface

### Internet connection

If the Fieldgate dials into the Internet permanently via an Internet Service Provider, it is also possible for several users to access the Fieldgate simultaneously when using an analogue/GSM version. The other advantage is that the respective user does not require a modem as a receiver at the work place.

### Ethernet


The 10 Base T Ethernet interface with RJ45 plug-in connection can be connected to the local network using a hub or switch. A standard network cable is used for this. In Ethernet operation, you always have access to the Fieldgate with a standard web browser, since the device is constantly available in the network. Several PCs can access the Fieldgate simultaneously.

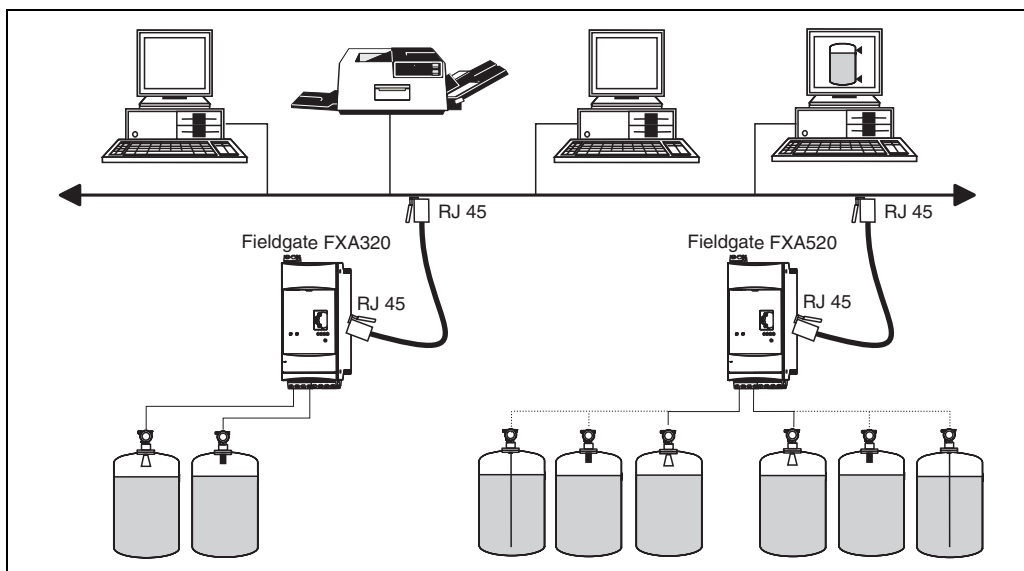

L00-FXA520xx-02-00-06-en-003

### Telephone network (analogue)

The Fieldgate is connected to the available telephone network via an RJ11 (PSTN) plug connector. This form of communication is always a point-to-point connection and only one PC can communicate with the device at any one time. In this configuration, the Fieldgate has to be selected before each access, so that it is ready for online operation. For example, the Windows internal telecommunications network can be used for dialling. After this, the Fieldgate can be accessed with a standard web browser (e.g. Internet Provider). The Fieldgate is also capable of dialling itself into a central server, in order to deliver periodic measured values for example. Here, it is also possible to transfer the measured values via the Internet using an Internet Service Provider.

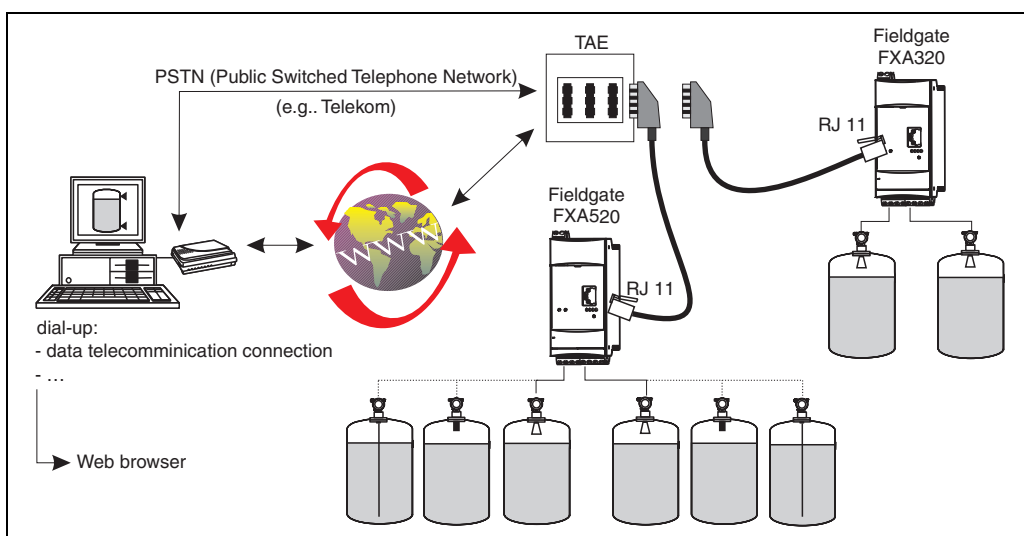


L00-FXA520xx-02-00-06-en-004

## Mobile communications network (GSM)

If there is no Ethernet or telephone network available in the Fieldgate's operating location, the data can also be transferred via GSM using the mobile communications network.

These communications versions can be configured as point-to-point connections or as freely accessible via the Internet/Intranet. A SIM card from a mobile communications network operator is required for GSM operation. Communication takes place via the data channel of the SIM card, which may require additional activation, depending on the GSM provider.

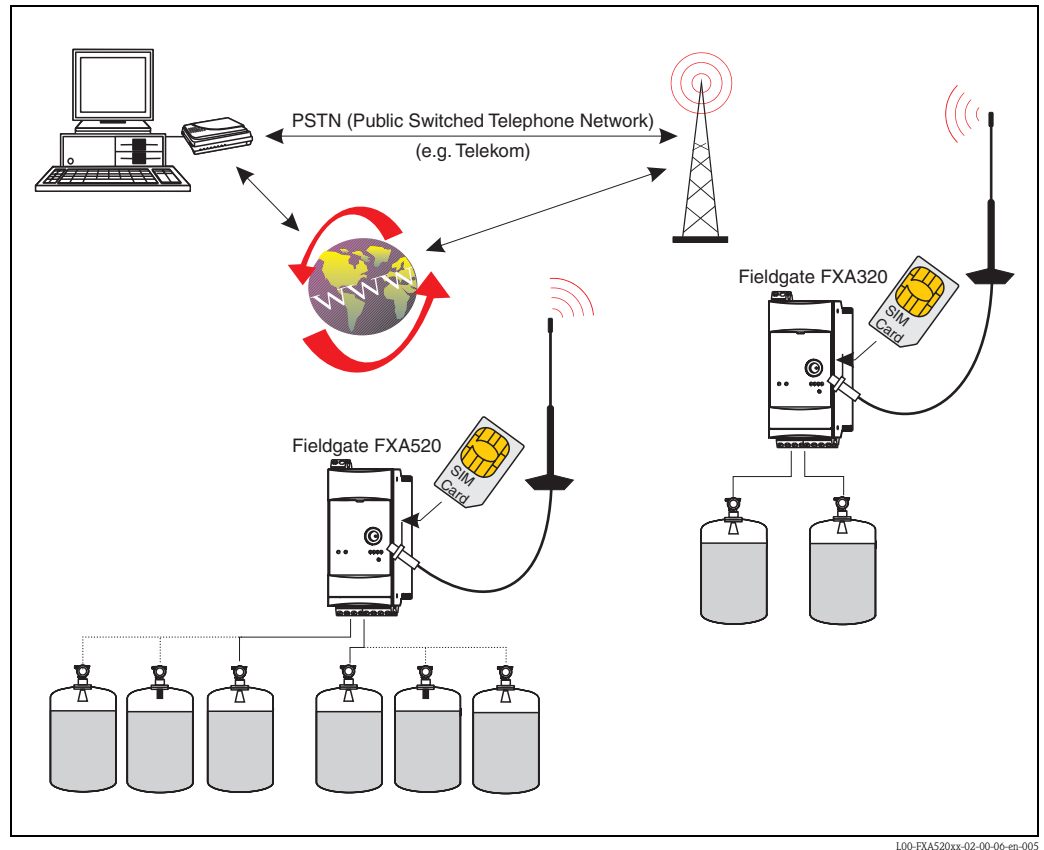

L00-FXA520xx-02-00-06-en-005

## GPRS support

GPRS (General Packet Radio Services) is a mobile communications technique, which exploits the advantages of packet-oriented data transmission and channel bundling.

Different from normal GSM connections, no complete channel is reserved for the duration of the connection between the mobile device and the basis station, rather the data is packed into packets, which can be sent depending on requirement and capacity. Data transmission in packets enables not only greater transmission rates but also always-on-operation. The Fieldgate is thus permanently in a position to connect to the Internet, an Intranet or a mailbox, whereby data is only transferred as required if a new e-mail is sent or a new Internet page is called up. Here, you are only charged for the amount of data actually transmitted (and not for connection time).

The GPRS mode of the Fieldgate GSM thus offers the easiest and most cost-effective option for connecting a measuring point permanently to the Internet or an Intranet. Thanks to always-on-operation, the WAP functions of the Fieldgate can also be used easily and cost-effectively.


To use the available GPRS functions, the GSM/GPRS provider will need to allocate a public IP address. It will be necessary to determine in each individual case, whether this additional service is offered by the respective operator.

## Function and system design

### Measuring system

#### Fieldgate Solution FXA360 - with Fieldgate FXA320

- Two transmitters can be connected directly.
- Active/passive current input pre-set according to order.
- Display for 4...20 mA current input (optional).
- Intrinsically safe inputs (optional).

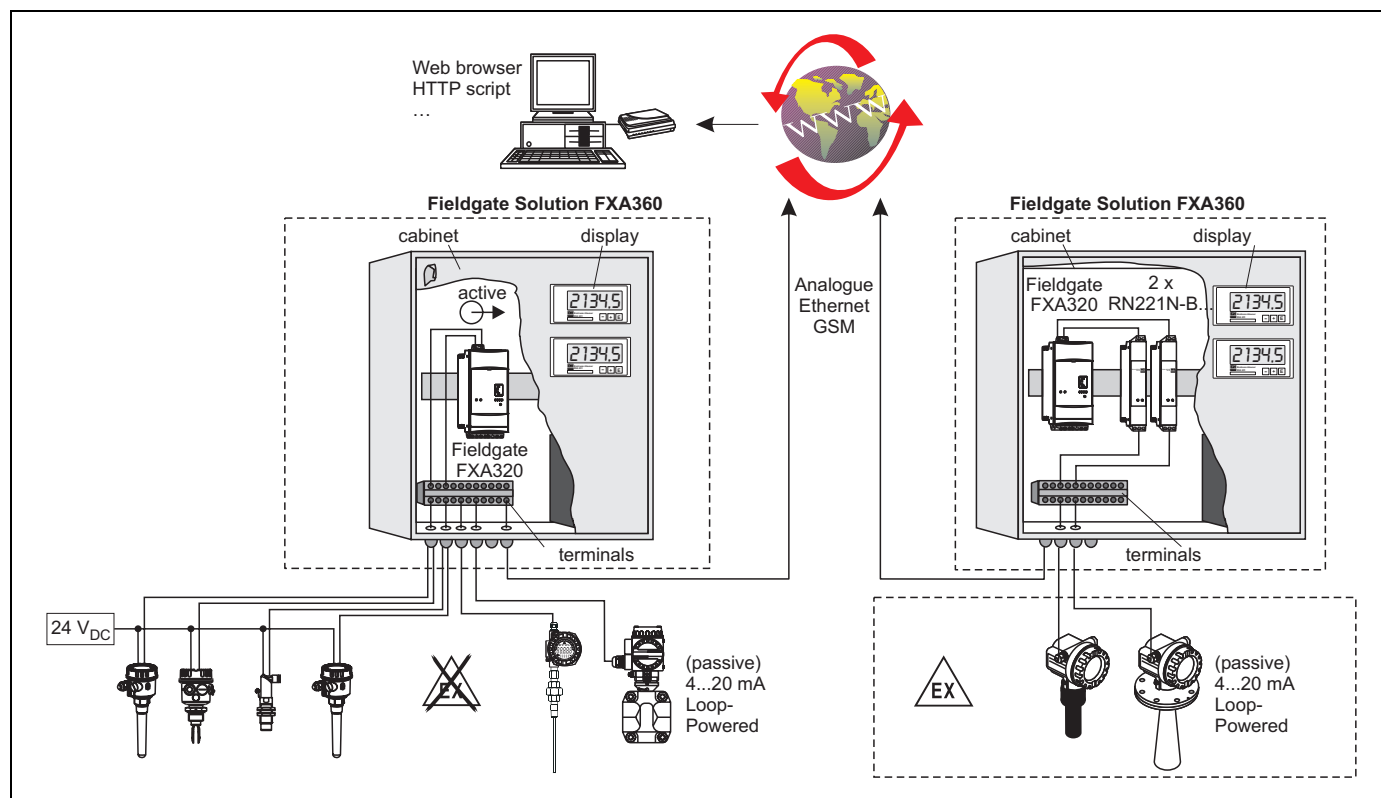

L00-FXA360xx-14-00-06-en-001

The following can be connected to the FXA360:

- Max. 2 transmitters (to the 4...20 mA analogue input)
- 4 transmitters (to the four binary inputs with event counter function and frequency measurement)

Active or passive current inputs can be selected in the sales structure.

- For example, 2-channel active means:  
both channels are supplied with voltage and are suitable for two-wire 4...20 mA transmitters (loop-powered).
- For example, 2-channel passive means:  
both channels are configured for connection to four-wire transmitters with active current output.

The two channels always have galvanic isolation. Optionally, the current inputs can be ordered with intrinsically safe explosion protection. The optional display RIA251 (display range -19,999 to 99,999) is looped into the 4...20 mA circuit.

The following cabinet sizes are available:


Dimensions / material	Approval	Number of channels	With galvanic isolation	Number of displays
300 x 300 x 210 mm / steel	Hazardous/non-hazardous area	2	Yes	Max. 2
300 x 400 x 200 mm / plastic	Hazardous/non-hazardous area	2	Yes	Max. 2

Note!

For connection, see "Connection types FXA360" on Page 13.

**Fieldgate Solution FXA560 - with Fieldgate FXA520 (2-channel HART)**

- Two transmitters can be connected directly.
- Can also be used in hazardous areas.
- Suitable for use in 4...20 mA SIL 2 Loops (IEC 61508)

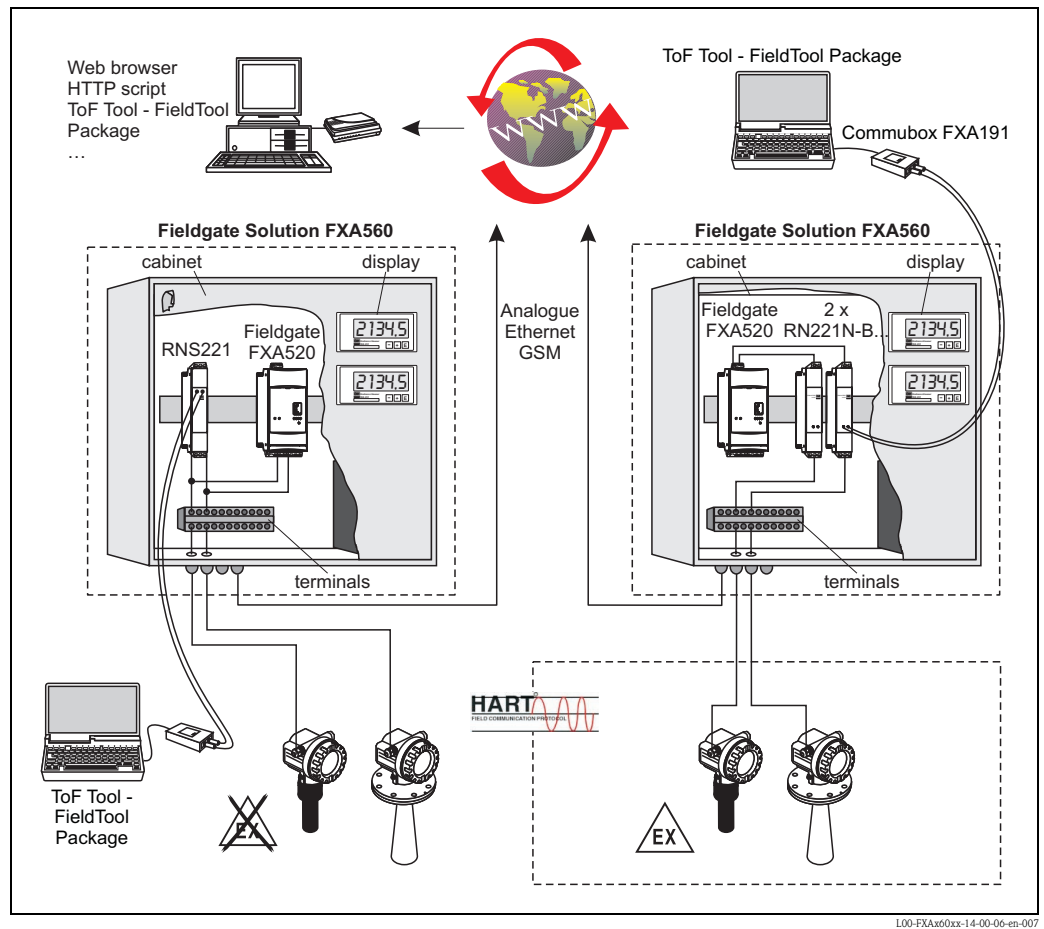

L00-FXA560xx-14-00-06-en-007

In the 2-channel HART connection type, a maximum of 2 transmitters can be connected with the HART protocol. Optionally, the transmitters can be supplied with voltage. If 4-wire transmitters with active current output will be connected, "none" must be selected under "sensor power supply" in the order. The two channels always have galvanic isolation.

The following cabinet sizes are available:


Dimensions / material	Approval	Number of channels	Power supply with galvanic isolation	Number of displays
300 x 300 x 210 mm / steel	Hazardous/non-hazardous area	2	Yes	Max. 2
300 x 400 x 200 mm / plastic	Hazardous/non-hazardous area	2	Yes	Max. 2

Note!

For connection, see "Connection types FXA560/2-channel connection, active" on Page 15.

**Fieldgate Solution FXA560 - with Fieldgate FXA520 (HART Multiplexer)**

- HART Multiplexer, such as the KFD2-HMM-16 from Pepperl + Fuchs.
- Up to 30 transmitters (2 x 15) can be connected.

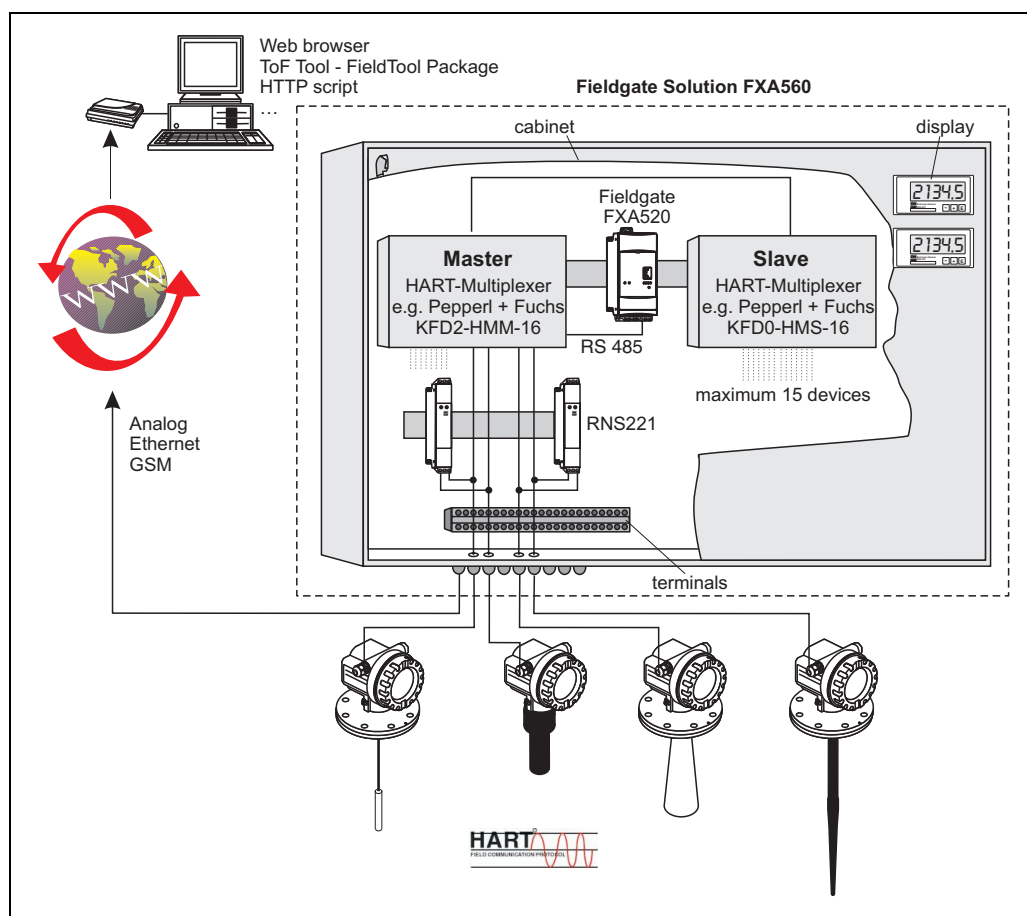

In the "HART Multiplexer" connection type, a maximum of 30 transmitters can be connected. Both transmitters with active and passive current outputs can be connected. If, for example, "active/passive" is selected as the connection type, either active or passive current outputs can be connected. Optionally, the transmitters can also be supplied with voltage.

The following options are available:

- Without galvanic isolation (all transmitters are supplied by one voltage source and thus are galvanically bonded to each other).
- With galvanic isolation (each transmitter is supplied by one transmitter power supply. Therefore, all transmitters are galvanically isolated from each other.) This option is recommended in order to prevent earth loops.
- The power supply can also be designed with "intrinsically safe" explosion protection.

The cabinet size depends on which of the various components are selected for a certain version. In particular, these are:

- The number of transmitters to be connected, whether with or without sensor power supply,
- Non-hazardous or hazardous area version,
- The number of displays

Note!

For connection, see "Connection types FXA560/HART Multiplexer connection" on Page 17.



The following cabinet sizes are available:

Versions with sensor power supply				
Dimensions / material	Approval	Number of channels	With galvanic isolation	Number of displays
380 x 380 x 210 mm / steel	Non-hazardous area	3 - 16	No	Max. 2
400 x 400 x 200 / plastic	Non-hazardous area	3 - 16	No	Max. 2
380 x 600 x 210 mm / steel	Non-hazardous area	3 - 16	No	Max. 4
400 x 600 x 200 / plastic	Non-hazardous area	3 - 16	No	Max. 4
380 x 380 x 210 mm / steel	Non-hazardous area	17 - 30	No	Max. 2
400 x 400 x 200 / plastic	Non-hazardous area	17 - 30	No	Max. 2
380 x 600 x 210 mm / steel	Non-hazardous area	17 - 30	No	Max. 4
400 x 600 x 200 / plastic	Non-hazardous area	17 - 30	No	Max. 4
380 x 600 x 210 mm / steel	Non-hazardous area	3 - 16	Yes	Max. 4
400 x 600 x 200 / plastic	Non-hazardous area	3 - 16	Yes	Max. 4
600 x 600 x 210 mm / steel	Non-hazardous area	17 - 30	Yes	Max. 8
600 x 600 x 200 / plastic	Non-hazardous area	17 - 30	Yes	Max. 8
380 x 600 x 210 mm / steel	Hazardous area	3 - 10	Yes	Max. 4
400 x 600 x 200 / plastic	Hazardous area	3 - 10	Yes	Max. 4
600 x 600 x 210 mm / steel	Hazardous area	11 - 16	Yes	Max. 8
600 x 600 x 200 / plastic	Hazardous area	11 - 16	Yes	Max. 8
600 x 600 x 210 mm / steel	Hazardous area	17 - 30	Yes	Max. 8
600 x 600 x 200 / plastic	Hazardous area	17 - 30	Yes	Max. 8

Versions without sensor power supply				
Dimensions / material	Approval	Number of channels	With galvanic isolation	Number of displays
380 x 380 x 210 mm / steel	Non-hazardous area	3 - 16	Yes <sup>1)</sup>	Max. 2
400 x 400 x 200 / plastic	Non-hazardous area	3 - 16	Yes <sup>1)</sup>	Max. 2
380 x 600 x 210 mm / steel	Non-hazardous area	3 - 16	Yes <sup>1)</sup>	Max. 4
400 x 600 x 200 / plastic	Non-hazardous area	3 - 16	Yes <sup>1)</sup>	Max. 4
380 x 380 x 210 mm / steel	Non-hazardous area	17 - 30	Yes <sup>1)</sup>	Max. 2
400 x 400 x 200 / plastic	Non-hazardous area	17 - 30	Yes <sup>1)</sup>	Max. 2
380 x 600 x 210 mm / steel	Non-hazardous area	17 - 30	Yes <sup>1)</sup>	Max. 4
400 x 600 x 200 / plastic	Non-hazardous area	17 - 30	Yes <sup>1)</sup>	Max. 4

1) Galvanic isolation is not possible with 8x display!

Optionally, each channel can also be equipped with a display. 1-channel or 8-channel displays are available. In the 8-channel display, 8 channels are combined into one display and polled either automatically or manually.


#### Galvanic isolation

Note!

In installations without galvanic isolation, particularly those with long lines, potential differences can arise that can cause earth loops and equalising currents. Therefore, the option with galvanic isolation is recommended.

**Fieldgate Solution FXA560 - with Fieldgate FXA520 (HART Multidrop Configuration)**

- Only HART communication possible.
- Up to 16 transmitters (2 x 8) can be connected, with Multidrop fixed current 4 mA.
- All connected transmitters must be assigned their own HART short address in advance.

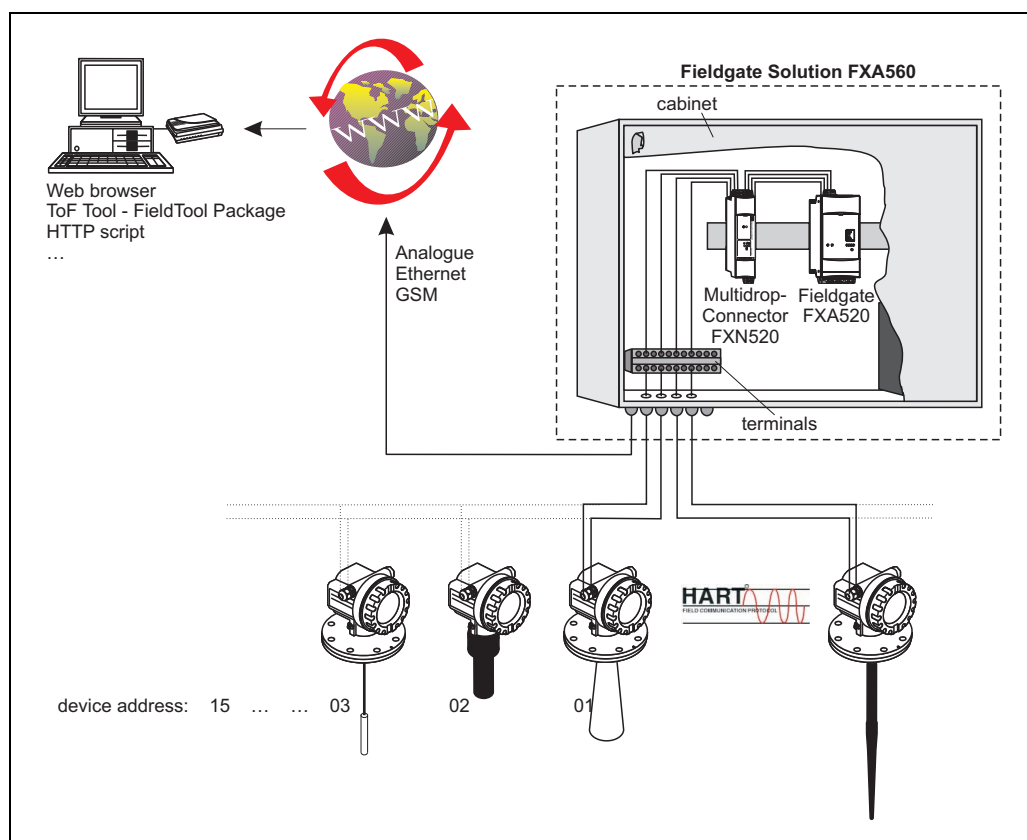

In the standardised HART Multidrop mode, the transmitters are operated in parallel as fieldbus devices.

Up to 15 transmitters can be connected to each segment.

The FXA560 supports the ability to connect 2 segments.

In Multidrop mode, the measured value is transmitted only digitally via the HART protocol, where the signal current is always fixed (typically 4 mA). Also, no display is possible in this mode.

The following cabinet sizes are available:

Dimensions / material	Approval	Number of segments	With galvanic isolation	Number of displays
300 x 300 x 210 mm / steel	Non-hazardous area	2	No	Without

Note!

For connection, see "Connection types FXA360/HART Multidrop connection" on Page 21.

**All E+H measuring devices with the HART protocol can, therefore, be used to the full extent with the Fieldgate**

A current list of all E+H measuring devices that have the HART protocol can be found under:

- [www.hartcomm.org](http://www.hartcomm.org): "HART Products/Product Catalogue/ ...".

All Endress+Hauser measuring devices with HART protocol can be connected to the Fieldgate.

Even 4...20 mA devices without HART protocol can be operated in conjunction with the Fieldgate, e.g. limit switch (Liquiphant, ...). However, then only the measured value can be read. The remote maintenance function is not given for 4...20 mA devices because the HART protocol is required for this function.

## Input

### Analogue 4...20 mA inputs (FXA360 only)

#### FXA320

2 channels with galvanic isolation. Can be used independently as active or passive input.

Channel 1&2 - active	
Output voltage	15 V $\pm$ 5% / (22 mA)
No-load voltage	23.5 V $\pm$ 5%
Output current	max. 23 mA
Short-circuit current	max. 64 mA
short-circuit duration	Unlimited
Connection cable	Instrument cable, unscreened
Cable resistance	max. 25 $\Omega$ per core

Channel 1&2 - passive	
Max. input voltage per channel	35 V
Max. input current per channel	45 mA
Input impedance	254 $\Omega$
Accuracy	$\leq$ 0.5 %
Voltage drop (incl. diode against reverse polarity)	$\leq$ 6.4 V
Connection cable	Instrument cable, unscreened
Cable resistance	max. 25 $\Omega$ per core

### HART channel 1&2 (FXA560 only)

#### FXA520

The HART signal is capacitive coupled and decoupled via a communication resistor

Communication resistor in the 4...20 mA signal line	Integrated 270 $\Omega$ communication resistor, for optional use, max. 45 mA!
Short-circuit duration (without interior communication resistor)	Unlimited

#### Passive connection

- Galvanic isolation between HART channel 1 and channel 2
- Ex isolation between transmitters and internal circuits.

Output voltage U <sub>0</sub> in the event of a fault (Ex)	Max. 6.5 V
Max. current for EEx ia (Ex)	5.97 mA
Max. output power (Ex)	39 mW
Maximum input voltage (Ex)	30 V
Maximum input voltage (non-Ex)	45 V

#### Active connection in non-hazardous area, galvanic isolation

- Galvanic isolation between HART channel 1 and channel 2
- For connection data, see:
  - TI081R/09/de for transmitter power supply RNS221

**Active connection in hazardous area, galvanic isolation**

- Galvanic isolation between HART channel 1 and channel 2
- For connection data, see:
  - TI073R/09/de for active barrier RN221N

**Active connection >3 channels in non-hazardous area, galvanic isolation**

- Galvanic isolation between HART channel 1-30
- For connection data, see:
  - TI081R/09/de for transmitter power supply RNS221
  - BA265F/00/de for HART Multiplexer Master KFD2-HMM-16
  - BA283F/00/de for HART Multiplexer Slave KFD0-HMS-16
  - BA266F/00/en and BA267F/00/de for Multiplexer Interface Module
  - TI063R/09/de for process display RIA251

**Active connection >3 channels in hazardous area, galvanic isolation**

- Galvanic isolation between HART channel 1-30
- For connection data, see:
  - TI073R/09/de for active barrier RN221N

**Connection >3 channels without galvanic isolation**

- Common power supply of HART channels 1-30
- For connection data, see:
  - 24 V with 250  $\Omega$  communication resistor in the interface module
  - BA265F/00/de for HART Multiplexer Master KFD2-HMM-16
  - BA283F/00/de for HART Multiplexer Slave KFD0-HMS-16
  - BA266F/00/en and BA267F/00/de for Multiplexer Interface Module
  - TI063R/09/de for process display RIA251

**Binary inputs****FXA320**

Galvanic isolation of all channels from the rest of the current circuits. Each 2 channels have the same reference potential.

Number of digital inputs	4
Input signal voltage	L-signal: -3 ... +5 V H-signal: +15 ... +30 V
Input current with H-signal	5 mA
Max. quiescent current with L-signal	1 mA
Measuring range of event counter function	0 ... 12.5 kHz
Measuring range of frequency measurement	4.7 Hz ( $\pm 1\%$ ) ... 12.5 kHz ( $\pm 4\%$ )

**RN221N  
Active barrier**

For information, see Technical Information TI073R/09/de.

**RNS221  
Transmitter power supply**

For information, see Technical Information TI081R/09/de.

**Multiplexer interface module**

For information, see Operating Instructions BA266F/00/en and BA267F/00/de.

## Power supply

### Supply voltage

#### Alternating current version (AC):

Voltage range: 90...253 V, 50/60 Hz.

Safe galvanic isolation between mains supply and internal circuits.

#### Direct current version (DC):

Voltage range: 20...30 V<sub>DC</sub>.


### Cable entry

- Cable entry for connecting the transmitters: M20x1.5
- In the Multidrop configuration: either M20x1.5 or as 7/8" plug (Fieldbus Foundation standard)
- In each unit, 2 M20x1.5 cable glands are screwed in for the power supply.

The number of cable glands for the transmitters can be defined in the order information (see Page 30 and 32).


### Connection types FXA360

#### 2-channel connection, active/passive

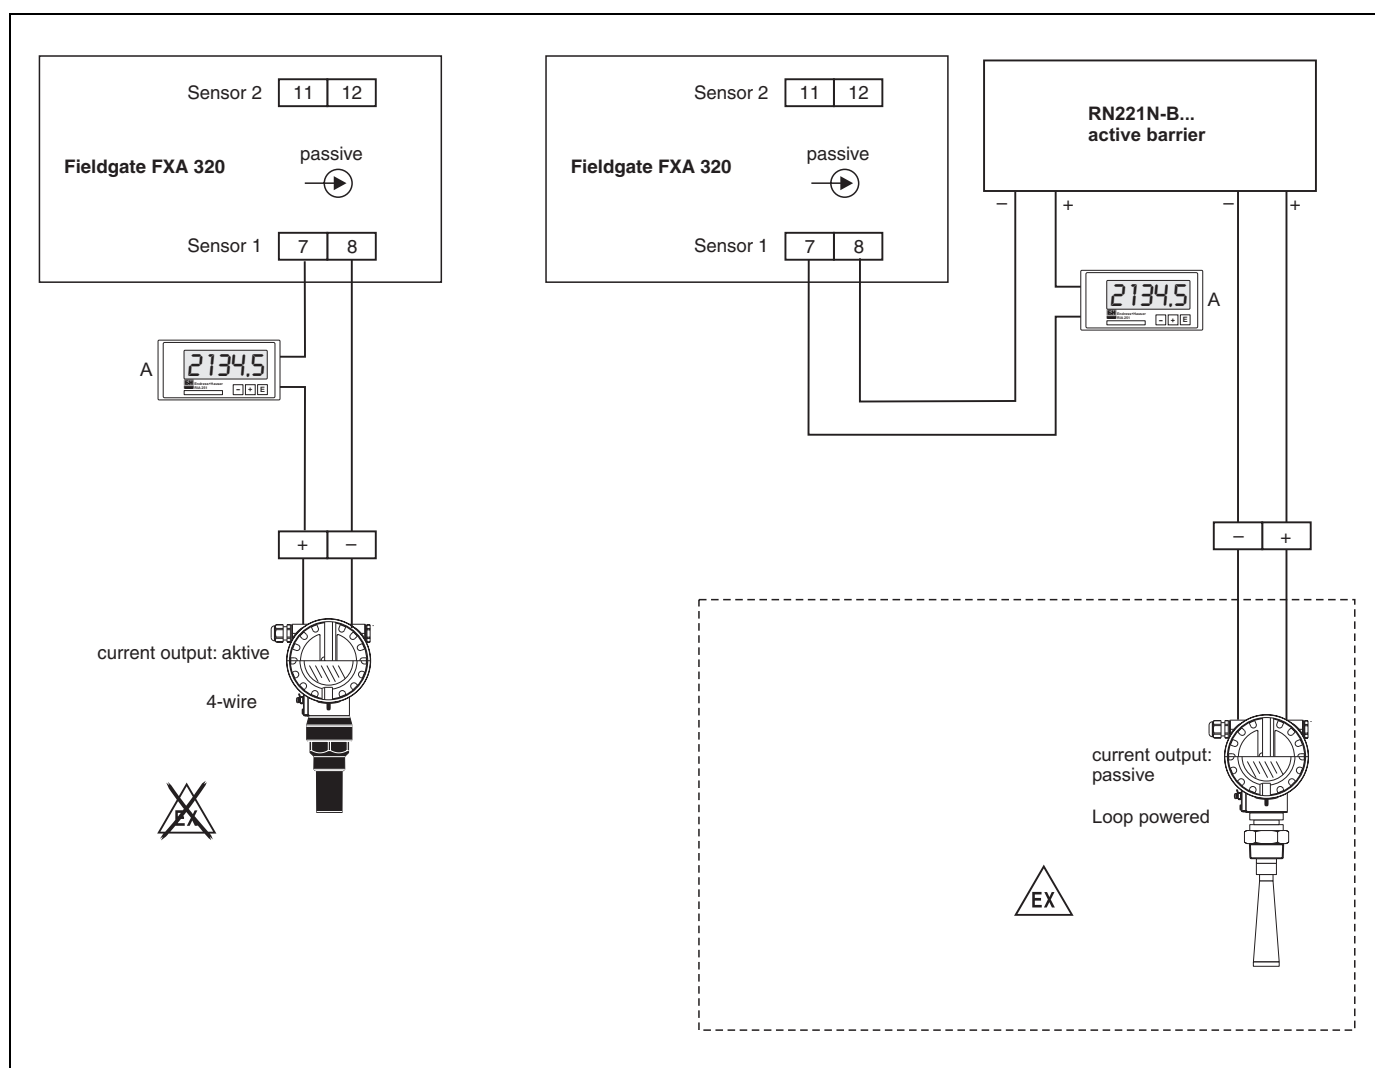


L00-FXA00xx-04-00-06-en-006

## Connection of binary inputs

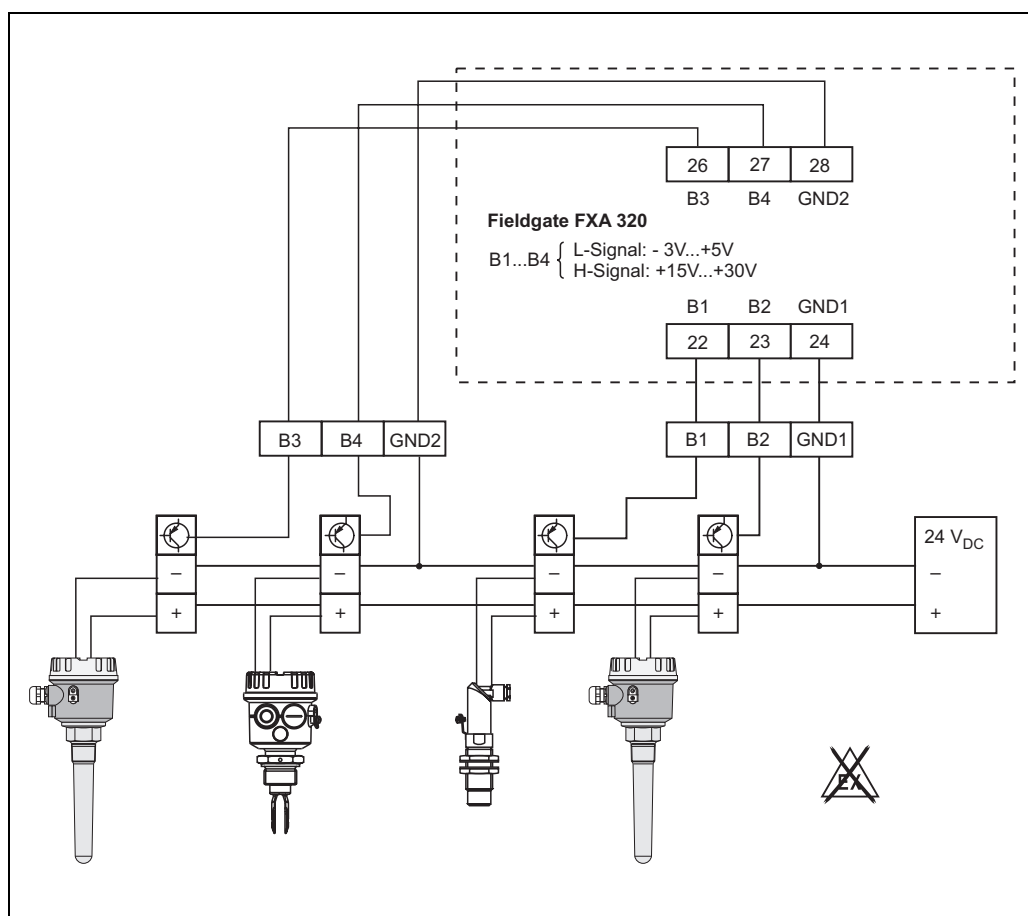

100-FXA00xx-04-00-06-en-010


Connection types FXA560      2-channel connection, active

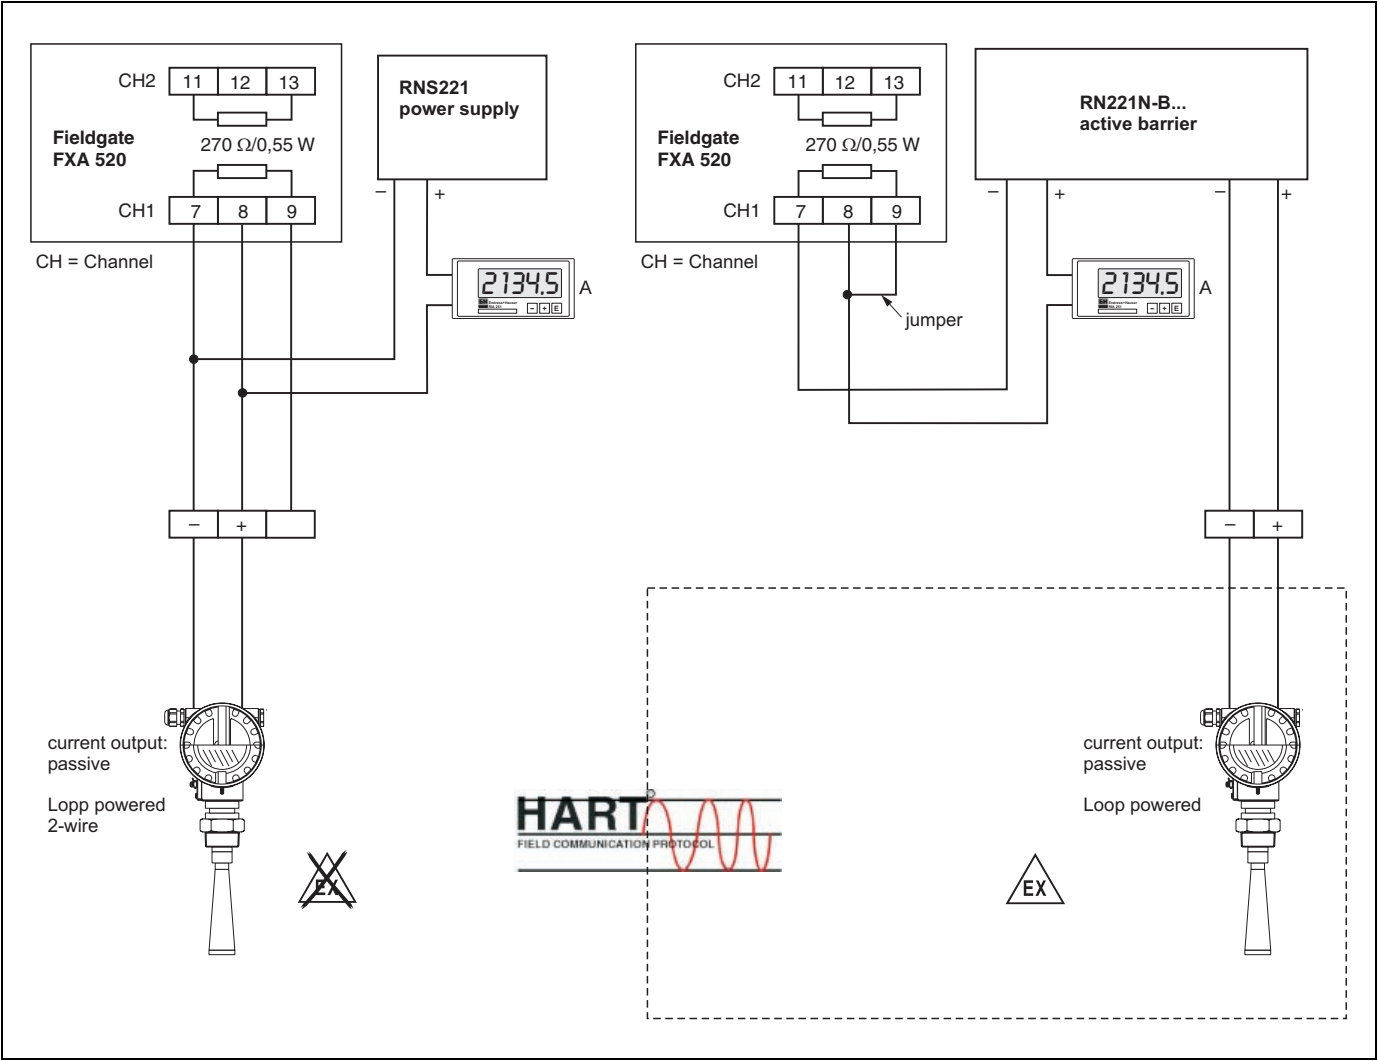

L00-FXA00xx-04-00-06-en-000

**2-channel connection, passive**

- Example ① of a four-wire passive connection with display
- Example ② of a passive connection and transmitter power supply with communication resistor without display
- Example ③ of a passive connection and transmitter power supply with communication resistor with display

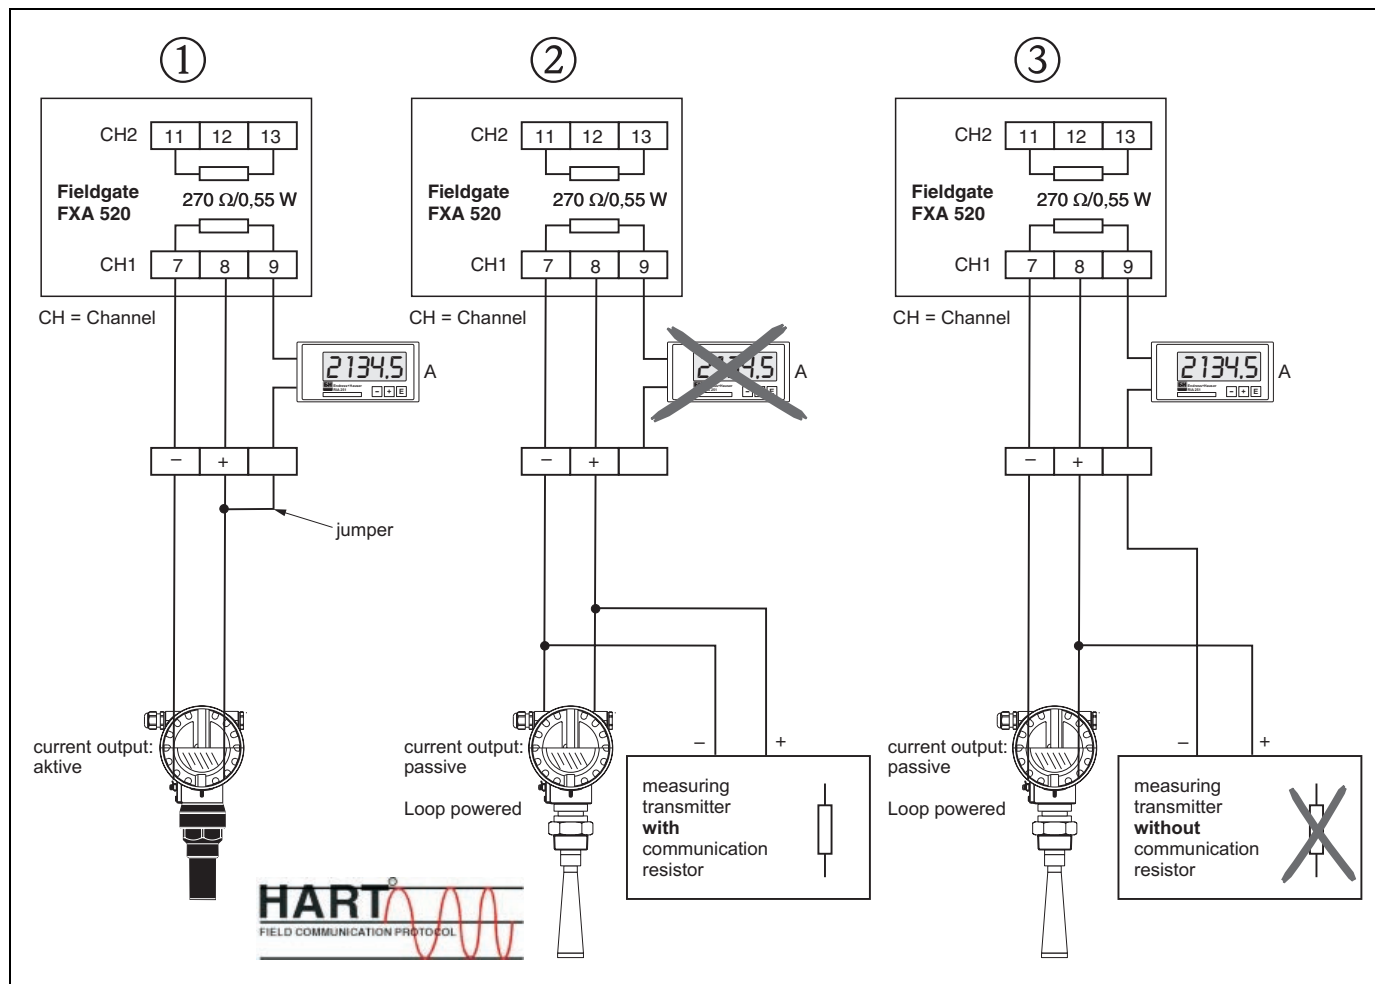

L00-FXA560xx-04-00-06-en-007


**Note!**

If a display is desired, the internal communication resistor of the FXA560 is always used (see example ③). Note the voltage drop of the communication resistor and display!




HART Multiplexer connection

Example of a passive connection to an existing installation without existing communication resistor with display:

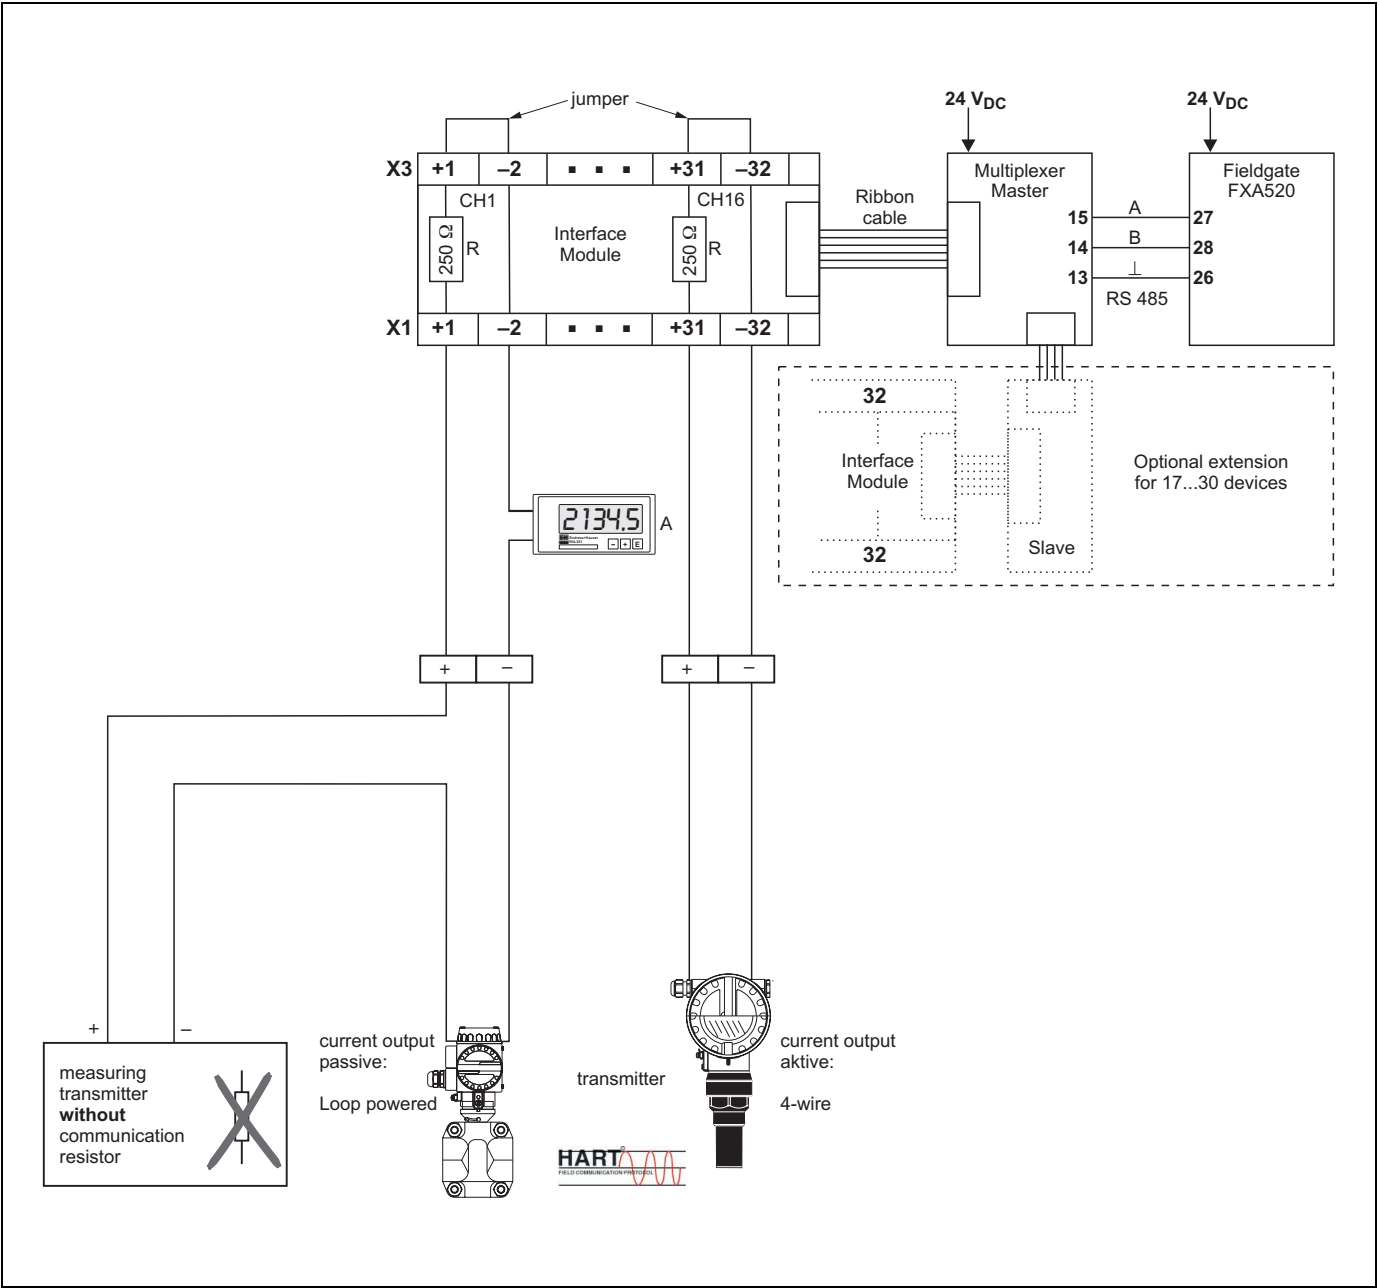

L00-FXA560xx-04-00-06-en-001

Example of a passive connection to an existing installation with existing communication resistor without display:

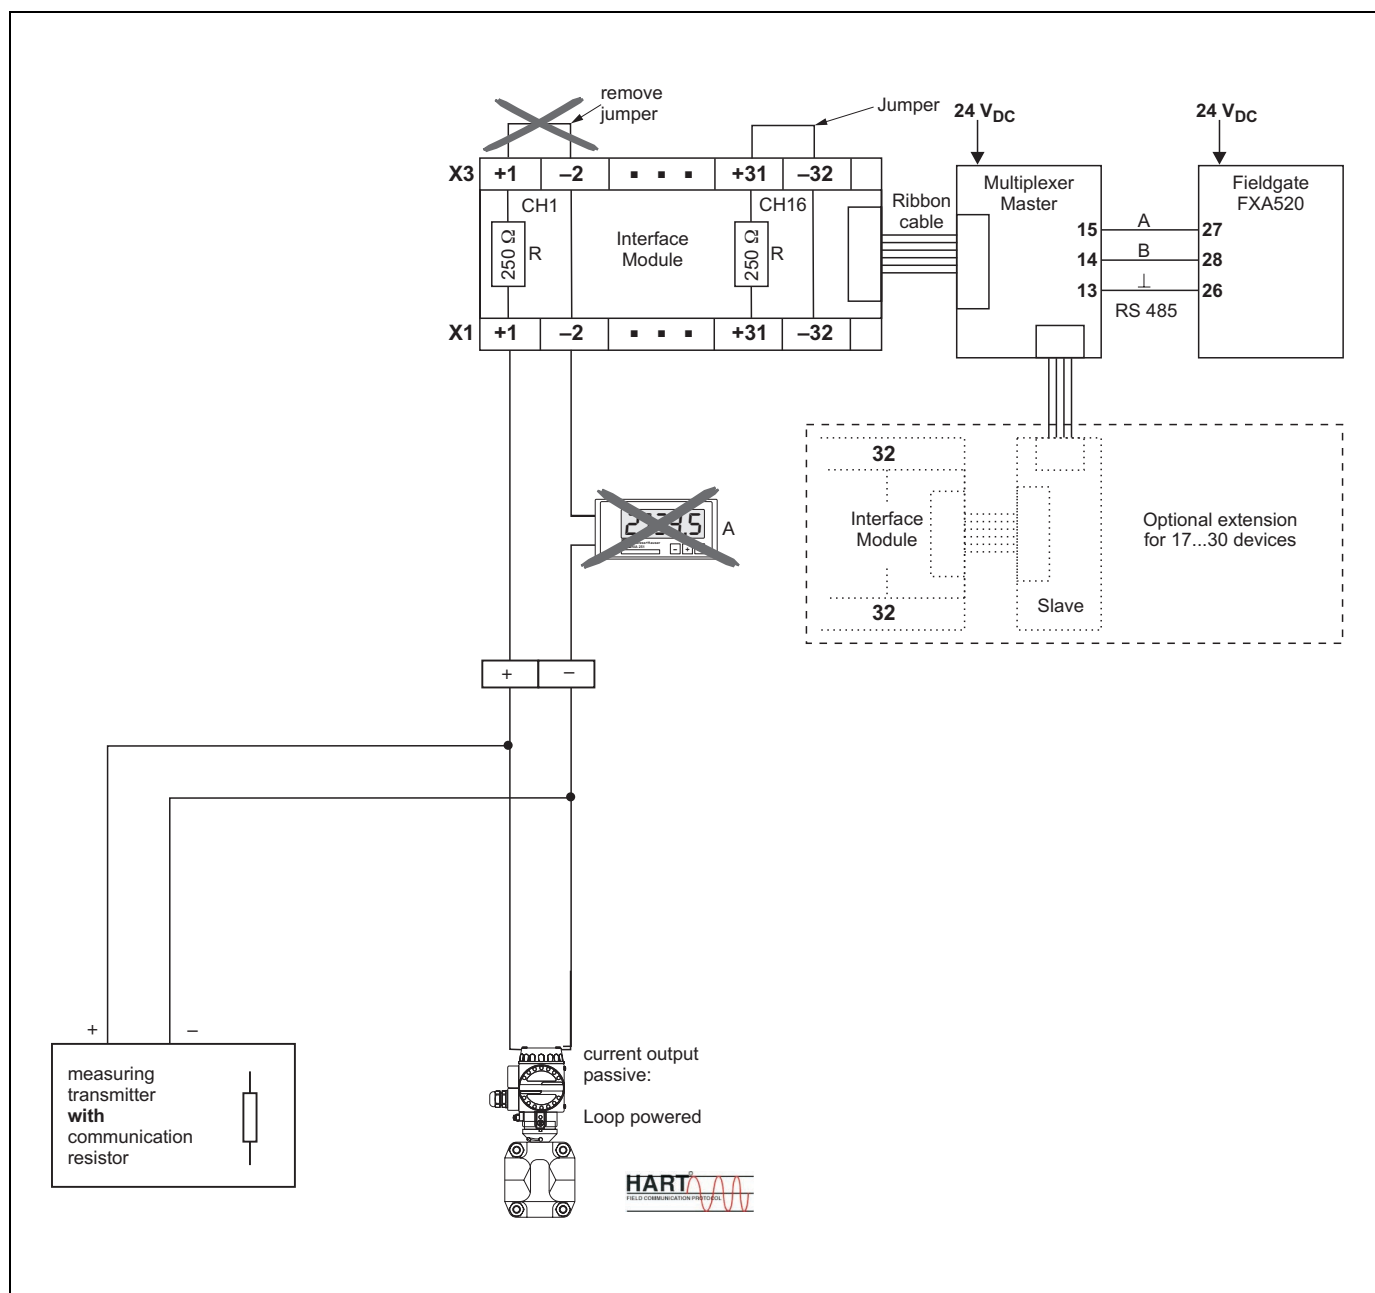


L00-FXA560ex-04-00-06-en-002


#### Note!

If a display is desired, the internal communication resistor of the FXA560 is always used (17). Note the voltage drop of the communication resistor and display!


Example of an active connection, with galvanic isolation in non-hazardous area:

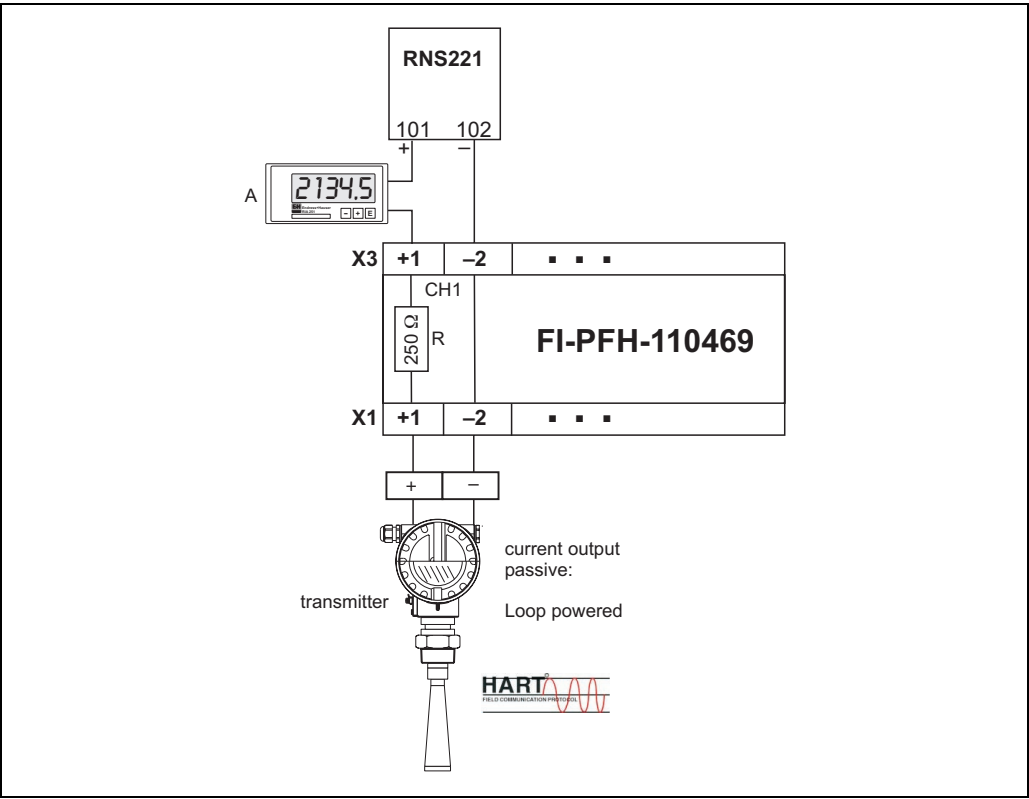

Example of an active connection, with galvanic isolation in hazardous area:

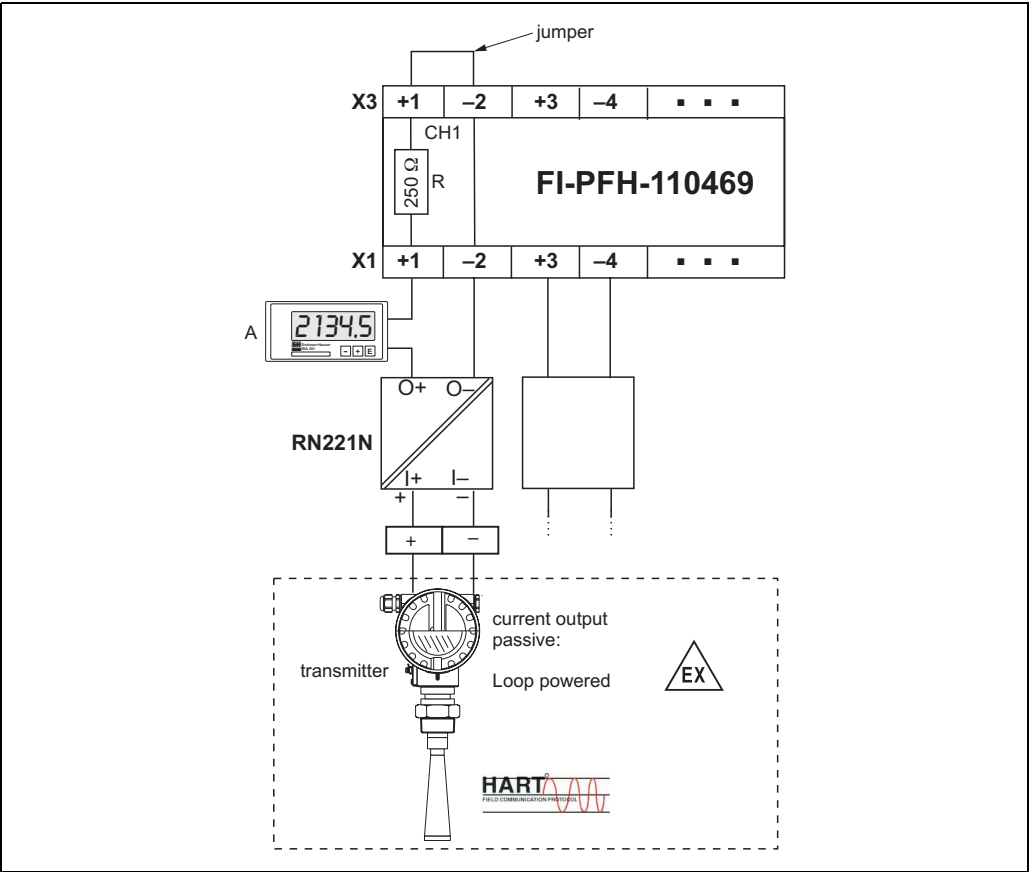


Example of an active connection, without galvanic isolation:

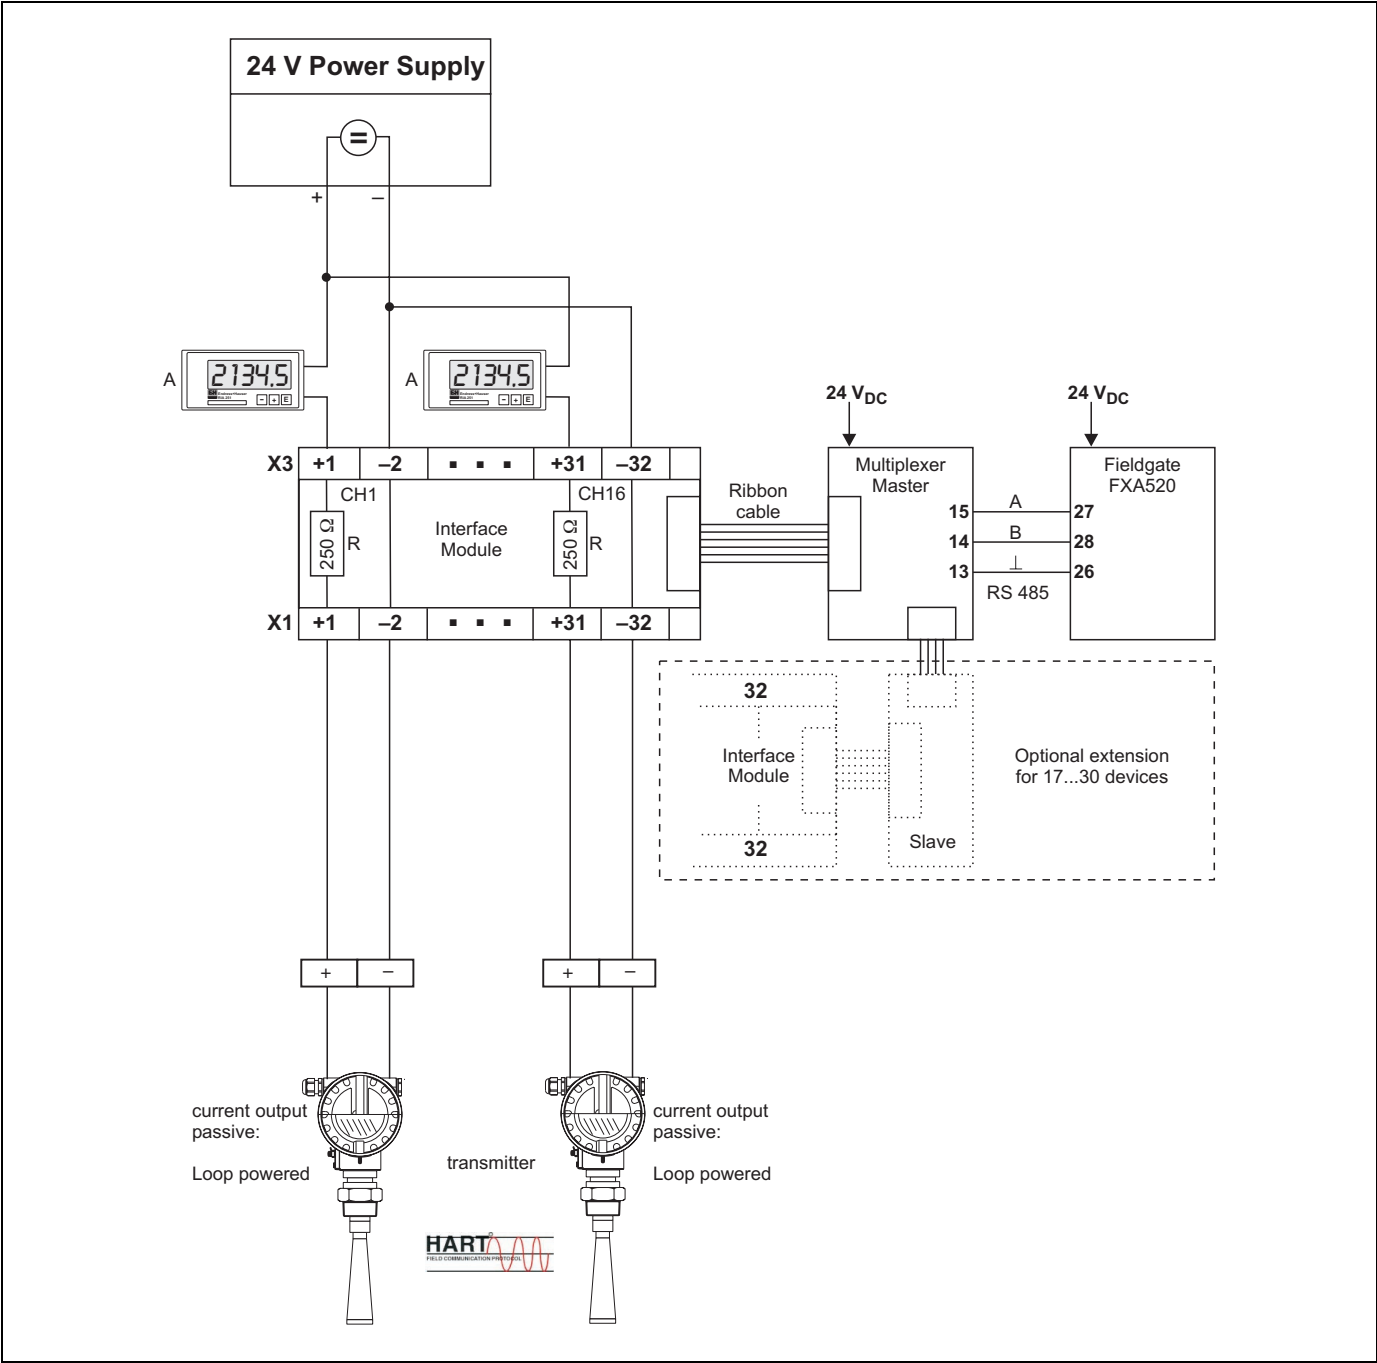

L00-FXA360xx-04-00-06-en-005

## HART Multidrop connection

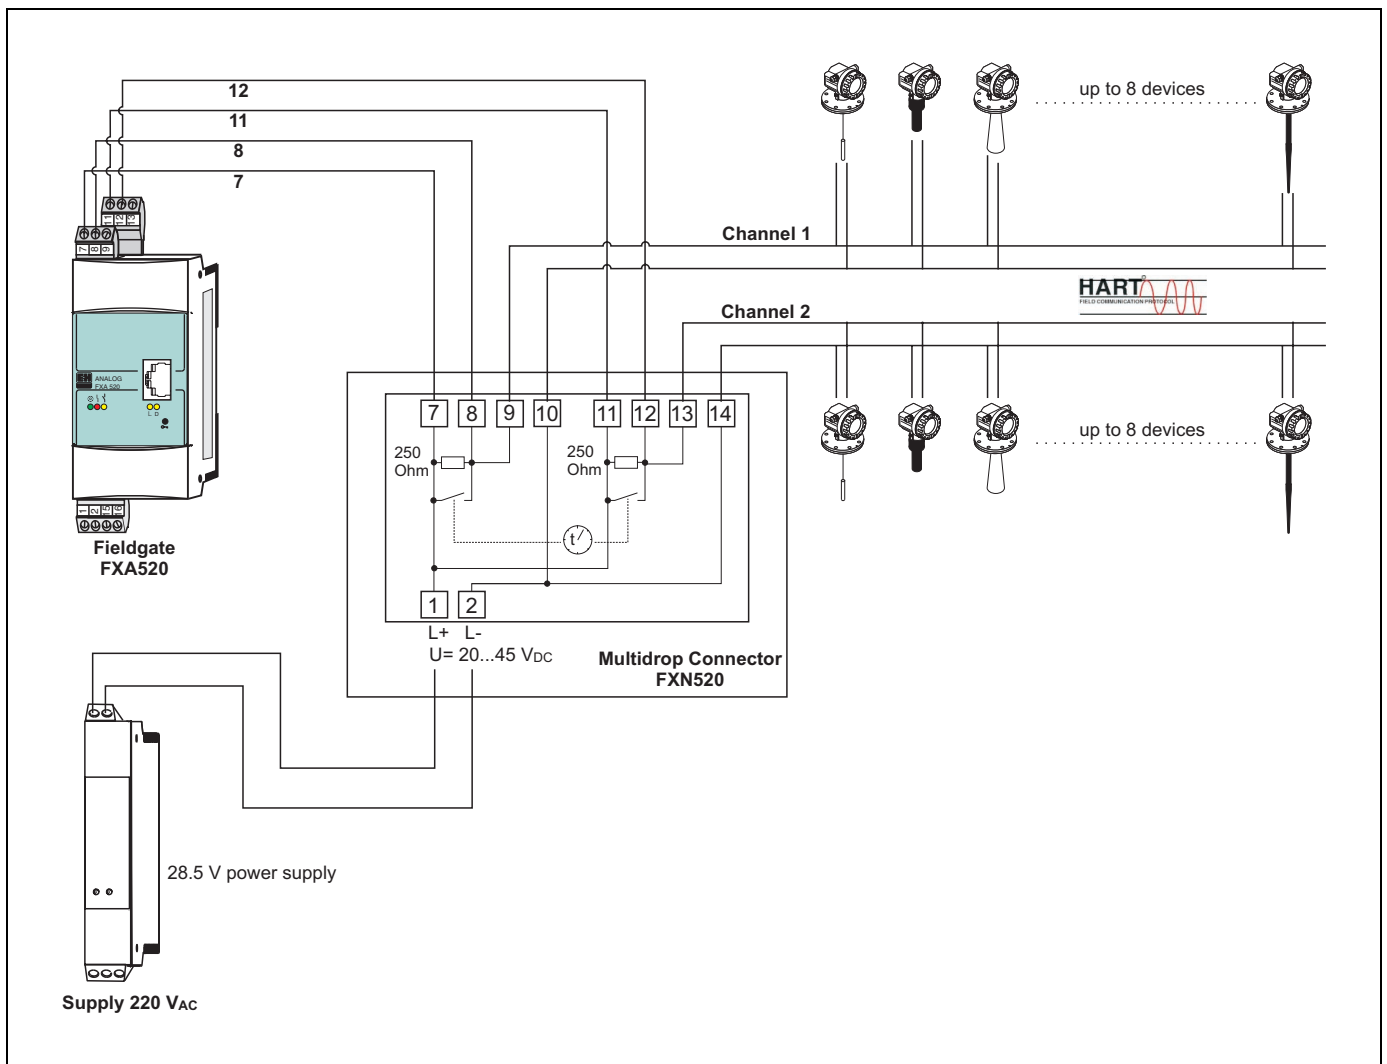

Note!

Output voltage at Multidrop segment  $U_{\max} = 29 \text{ V}$ .

Ensure that the connected transmitters are also designed for this output voltage.

## Operating conditions: Environment

Permitted ambient temperatures	-25 °C... +40 °C
Storage temperature	-25 °C... +85 °C (preferably at +20 °C)
Ingress protection	IP 65, as per EN 60529

## Mechanical construction


### Design, dimensions

#### Note!

100 mm = 3.94 in

#### Dimensions

Schaltschrank - Anzahl der Varianten siehe Tabelle unten

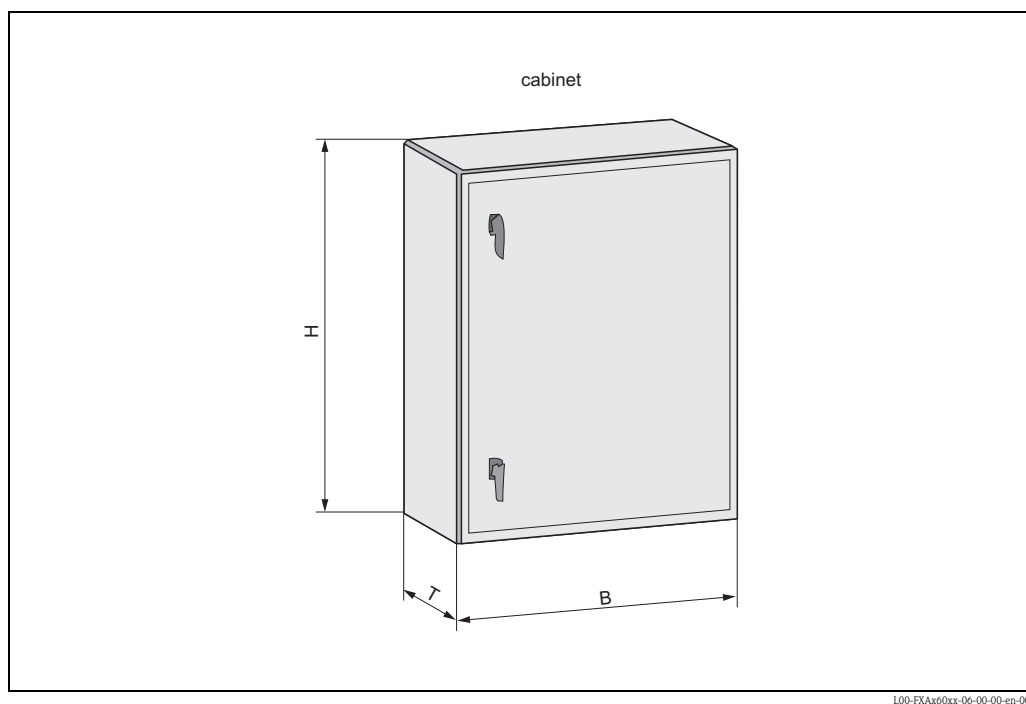

Version	W x H x D [mm]	Material	Cabinet weight [kg]
<b>FXA360-#####A##</b>	300 x 300 x 210	Steel <sup>1)</sup>	Approx. 7
<b>FXA560-#####A##</b>	300 x 300 x 210	Steel <sup>1)</sup>	Approx. 7
<b>FXA560-#####B##</b>	380 x 380 x 210	Steel <sup>1)</sup>	Approx. 9.2
<b>FXA560-#####C##</b>	380 x 600 x 210	Steel <sup>1)</sup>	Approx. 15
<b>FXA560-#####D##</b>	600 x 600 x 210	Steel <sup>1)</sup>	Approx. 21.5
<b>FXA360-#####B##</b>	300 x 400 x 200	Plastic <sup>2)</sup>	Approx. 5.3
<b>FXA560-#####E#</b>	300 x 400 x 200	Plastic <sup>2)</sup>	Approx. 5.3
<b>FXA560-#####F#</b>	400 x 400 x 200	Plastic <sup>2)</sup>	Approx. 7.2
<b>FXA560-#####G#</b>	400 x 600 x 200	Plastic <sup>2)</sup>	Approx. 10
<b>FXA560-#####H#</b>	600 x 600 x 200	Plastic <sup>2)</sup>	Approx. 14

1) Sheet steel, colour: light grey, RAL 7032

2) Polyester, fibreglass-reinforced, unsaturated


## Terminals in the cabinet

### Connection cross-section

maximum 1 x 2.5 mm or 2 x 1.5 mm

### An example of the arrangement of the components in a Fieldgate Solution FXA560

The arrangement of the individual components depends on the order.

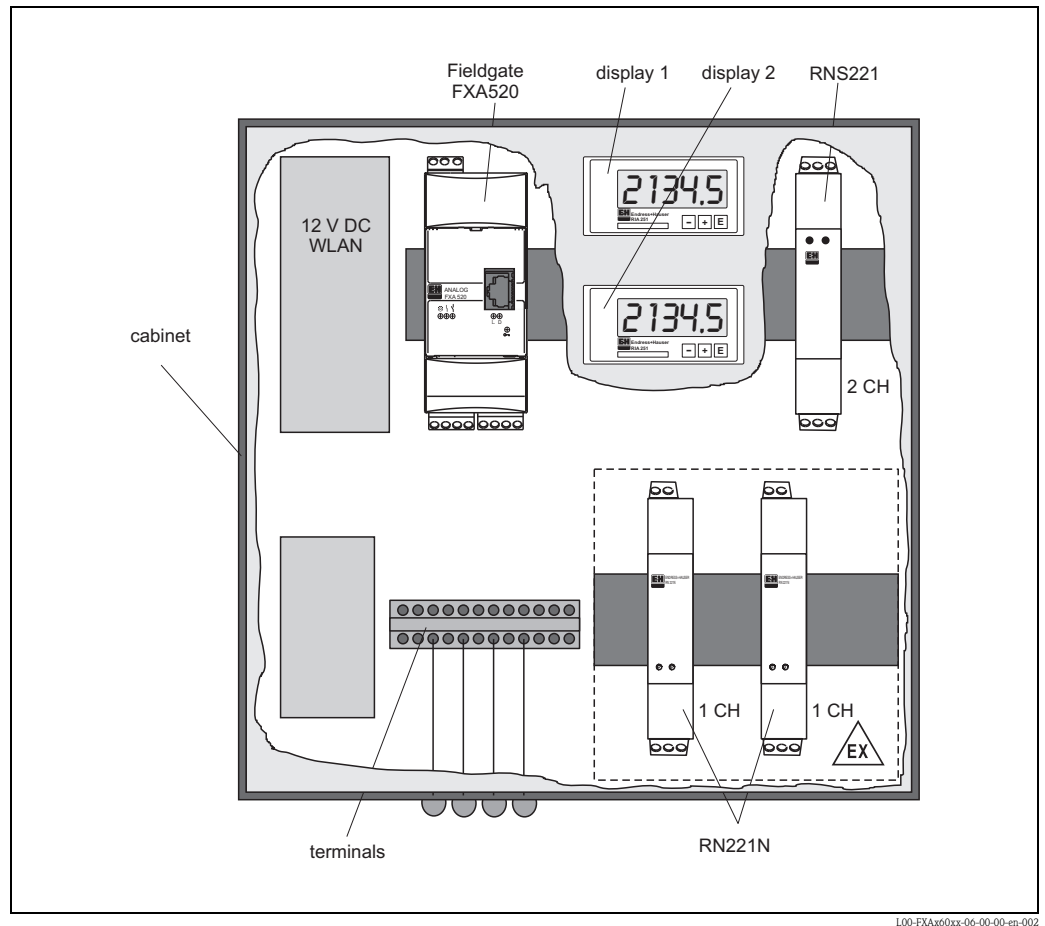

### Wiring diagram

Note!

A wiring diagram with the corresponding terminal assignment is located in the cabinet.

## Plug-in connections

### Connection socket for Ethernet Fieldgate versions:

RJ45 socket

### Connection socket for GSM antenna:

FME socket (male)

### Connection plug for DAT module:


8-pin plug connector in 2.54 mm raster, 2 rows

### Connection plug for PC cable:

3-pin plug connector in 2.54 mm raster, 1 row

## Human interface

Display elements at Fieldgate  
FXA360/560

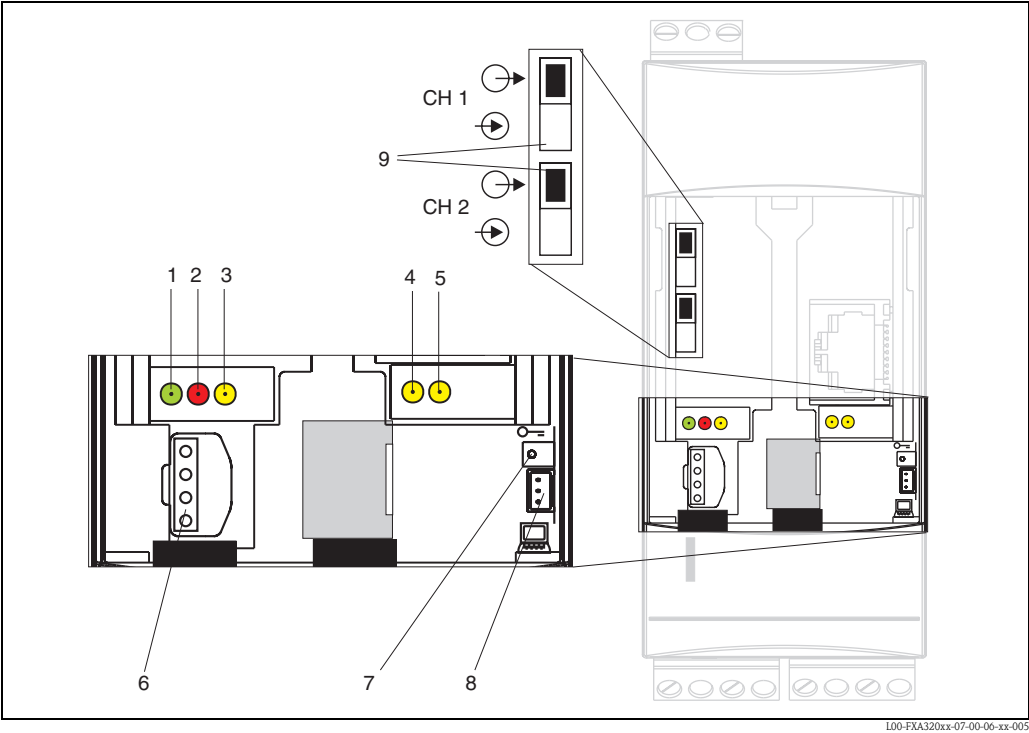

Position	Light emitting diode (LED)	Meaning
1	Green LED constant	Displays the correct power supply
2	Red LED constant	Displays a fault
	Red LED flashes	Displays a warning / On site communication via PC / Hardware is unlocked / system start
3	Yellow LED	Switching status of the built-in relay / LED on = relay tightens – LED off = relay de-energised – LED on = relay energised
4	Yellow LED	Displays a successful connection
5	Yellow LED	Displays a transfer activity / GSM version: field strength display if no connection

Operating elements at  
Fieldgate FXA360/560

For the arrangement of the elements, see the diagram above.

Position	Element	Meaning
6	Socket	Connection socket for DAT module
7	Button	Button for hardware security locking and configuration reset
8	Socket	Connection socket for PC cable (service connector)

FXA360 only


Position	Element		Current input channel 1 (CH1)		Current input channel 2 (CH2)	
9	Switch position (up)			active		active
	Switch position (down)			passive		passive



## Operation concept


Fieldgate offers world-wide remote monitoring, remote diagnosis and remote configuration of Smart transmitters with the international used HART® protocol. Measured values become available world-wide via Internet and can be efficiently processed. A standard web browser is used for visualising and remote inquiry. Fieldgate displays parameters and measured values of field instruments on an HTML page. Max. 30 measured values can be displayed. Up to 4 measured values can be displayed per device.

## Fieldgate FXA560

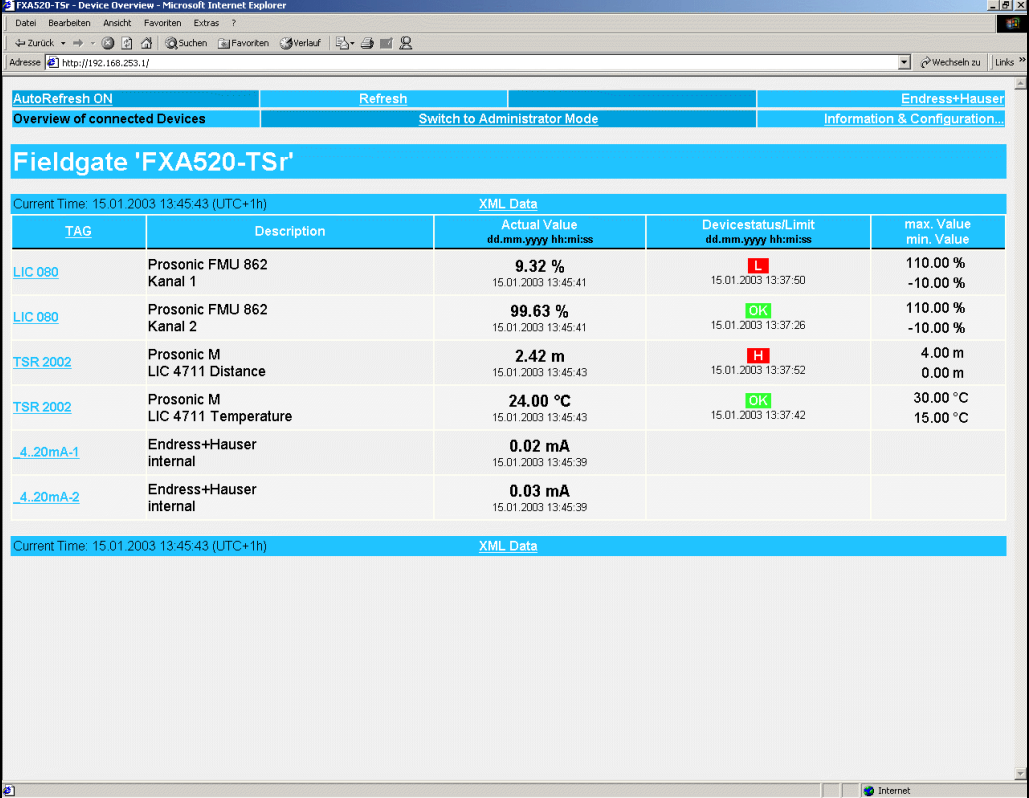

TAG	Description	Actual Value dd.mm.yyyy hh:mm:ss	Device status/Limit dd.mm.yyyy hh:mm:ss	max. Value min. Value
LIC 080	Prosonic FMU 862 Kanal 1	9.32 % 15.01.2003 13:45:41	L 15.01.2003 13:37:50	110.00 % -10.00 %
LIC 080	Prosonic FMU 862 Kanal 2	99.63 % 15.01.2003 13:45:41	OK 15.01.2003 13:37:26	110.00 % -10.00 %
TSR 2002	Prosonic M LIC 4711 Distance	2.42 m 15.01.2003 13:45:43	H 15.01.2003 13:37:52	4.00 m 0.00 m
TSR 2002	Prosonic M LIC 4711 Temperature	24.00 °C 15.01.2003 13:45:43	OK 15.01.2003 13:37:42	30.00 °C 15.00 °C
4..20mA-1	Endress+Hauser internal	0.02 mA 15.01.2003 13:45:39		
4..20mA-2	Endress+Hauser internal	0.03 mA 15.01.2003 13:45:39		

L00-FXA520xx-20-13-00-en-301

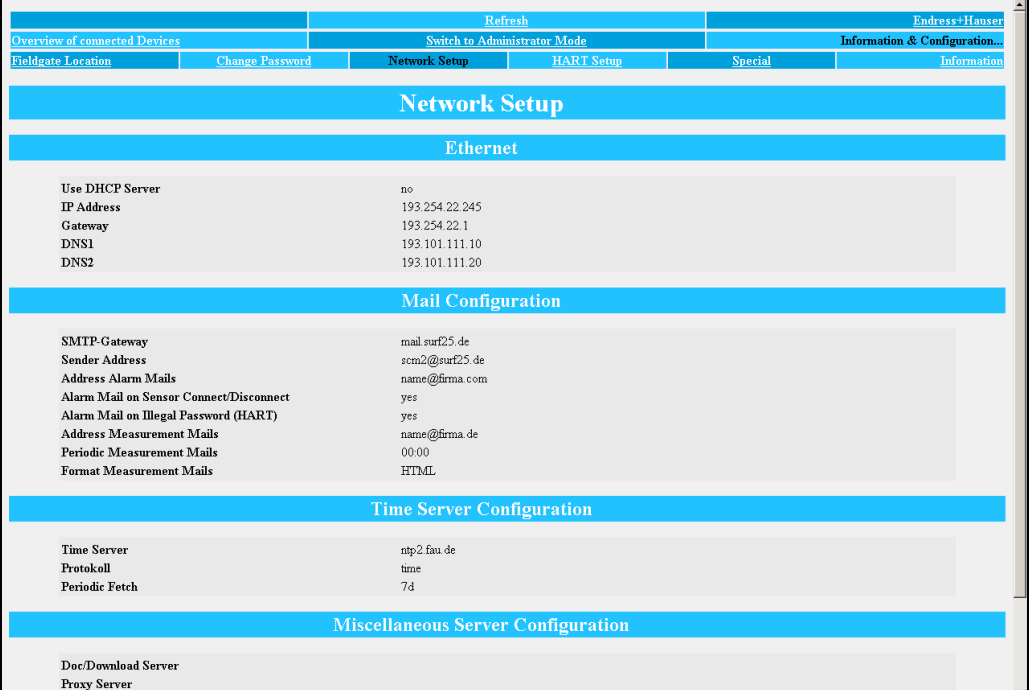

Fieldgate Location	Change Password	Network Setup	HART Setup	Special	Information
<b>Network Setup</b>					
<b>Ethernet</b>					
Use DHCP Server		no			
IP Address		193.254.22.245			
Gateway		193.254.22.1			
DNS1		193.101.111.10			
DNS2		193.101.111.20			
<b>Mail Configuration</b>					
SMTP-Gateway		mail.surf25.de			
Sender Address		scm2@surf25.de			
Address Alarm Mails		name@firma.com			
Alarm Mail on Sensor Connect/Disconnect		yes			
Alarm Mail on Illegal Password (HART)		yes			
Address Measurement Mails		name@firma.de			
Periodic Measurement Mails		00:00			
Format Measurement Mails		HTML			
<b>Time Server Configuration</b>					
Time Server		ntp2.fau.de			
Protokoll		time			
Periodic Fetch		7d			
<b>Miscellaneous Server Configuration</b>					
Doc/Download Server					
Proxy Server					
Post Number Downloader		0000			

L00-FXA520xx-20-13-00-en-167

## Fieldgate FXA360

FXA320 - Device Overview - Microsoft Internet Explorer zur Verfügung gestellt von Endress+Hauser

Adresse: http://10.54.8.186/

AutoRefresh Refresh Endress+Hauser

Overview of connected Devices Switch to Administrator Mode Information & Configuration...

### Fieldgate 'FXA320'

Current Time: 21.10.2003 05:51:29 (UTC+2h) XML Data

Tag	Description	Actual Value dd.mm.yyyy hh:mm:ss	DeviceStatus/Limit dd.mm.yyyy hh:mm:ss	max. Value min. Value
<a href="#">Binary-1</a>	Schalleingang 1 Binary Input	<b>uncovered</b> 0.000 21.10.2003 05:51:28	<b>OK</b> 20.10.2003 10:31:44	
<a href="#">Binary-2</a>	Schalleingang 2 Binary Input	<b>on</b> 0.000 21.10.2003 05:51:28	<b>OK</b> 20.10.2003 10:31:44	
<a href="#">Binary-3</a>	Schalleingang 3 Binary Input	<b>full</b> 0.000 21.10.2003 05:51:28	<b>OK</b> 20.10.2003 10:31:44	
<a href="#">Binary-4</a>	Schalleingang 4 Binary Input	<b>good</b> 0.000 21.10.2003 05:51:28	<b>OK</b> 20.10.2003 10:31:44	
<a href="#">Levelflex FMP40</a>	Stromeingang Kanal 1	<b>4.960 mA</b> 21.10.2003 05:51:28	<b>L</b> 20.10.2003 11:43:59	100.000 mA 0.000 mA
<a href="#">MulticapT DC11TEN</a>	Stromeingang Kanal 2	<b>3.878 mA</b> 21.10.2003 05:51:28	<b>LL</b> 20.10.2003 10:31:44	

Current Time: 21.10.2003 05:51:29 (UTC+2h) XML Data

Fertig Internet

L00-FXA320xx-20-13-00-en-001

## Certificates and approvals

---

<b>CE mark</b>	The FXA360/560 meets the legal requirements of the EC directives. Endress+Hauser confirms that the device has been successfully tested by applying the CE label.
<b>Ex-approval</b>	See Ordering information on Page 29 and 31
<b>Explosion protection</b>	<b>FXA560 - active connection</b> See documentation for active barrier RN221N.  <b>FXA360 - active connection</b> See documentation for active barrier RN221N.  <b>FXA560 2-channel HART, passive</b> See documentation for Fieldgate FXA520.
<b>Other standards and guidelines</b>	Other standards and guidelines that have been observed when designing and developing the Fieldgate.  <b>EN 60529</b> Ingress protections for housing (IP code)  <b>EN 61010</b> Safety requirements for electrical equipment for measurement, control and laboratory use

## Telecommunications Regulatory Compliance

---

**Fieldgate analogue version****North America**

FCC CFR 47, part 15 and part 68

**Europe**

Telecoms Terminal Equipment Directive (98/13/EG)

European approval TBR 21

---

**Fieldgate GSM version****North America**

FCC CFR 47 Part 15 and Part 24

**Federal Communications Commission Notice**

This device generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

To ensure that the unit complies with current FCC regulations and safety requirements limiting both maximum RF output power and human exposure to radio frequency radiation, use an antenna with a maximum gain of 2dBi and a separation distance of at least 20 cm must be maintained between the unit's antenna and the body of the user and any nearby persons at all times and in all applications and uses.

**Modifications**

The FCC requires the user to be notified that any changes or modifications made to this device that are not expressly approved by Endress+Hauser may void the user's authority to operate the equipment.

**Federal Communications Commission Statement****FCC-ID: LCG-FG-FXA52X-32X**

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

**Wireless Notices**

In some situations or environments, the use of wireless devices may be restricted. Such restrictions may apply aboard airplanes, in vehicles, in hospitals, near explosives, in hazardous locations, etc. If you are uncertain of the policy that applies to the use of this device, please ask for authorization to use it prior to turning it on.

## Ordering information

### Fieldgate Solution FXA360

10	Approval:									
	A	Non-hazardous area								
	B	ATEX II (1) GD [EEx ia] IIC								
	C	FM IS CL.I,II,III Div.1 Gr.A-G								
	D	CSA IS CL.I,II,III Div.1 Gr.A-G								
	F	CSA General purpose, CSA C US								
	Y	Special version								
20	Power Supply:									
	A	85-253VAC 50/60Hz								
	E	20-30VDC								
	Y	Special version								
30	Modem Interface:									
	1	Ethernet								
	2	Analog								
	4	GSM + Tri-band antenna NA								
	5	GSM + Dual-band antenna EN								
	9	Special version								
40	Data Management:									
	A	not selected								
	B	DAT module								
	Y	Special version								
50	Input:									
	A	2-channel analogue 4-20mA								
	B	2-channel analogue 4-20mA+4x digital								
	Y	Special version								
60	Sensor Power:									
	1	2-channel aktive								
	2	2-channel passive								
	3	1-channel aktive+ 1-channel passive								
	9	Special version								
70	Panel Mounting:									
	A	w/o display								
	B	1x display aktive								
	C	2x display aktive								
	D	1x display passive								
	E	2x display passive								
	F	1x display aktive + 1x display passive								
	Y	Special version								
80	WLAN:									
	1	not selected								
	2	Client ETSI, EN norm								
	3	Client FCC, NA norm								
	4	Client ETSI, EN norm + Accesspoint								
	5	Client FCC, NA norm + Accesspoint								
	9	Special version								
90	Electric Cabinet:									
	A	Steel 300x300x210mm								
	B	Plastics 300x400x200mm								
	Y	Special version								
FXA360-										Product designation (part 1)

100											<b>Cable Entry:</b>	
											1	not selected
											2	4x gland M20
											3	8x gland M20
											9	Special version
110											<b>Circuit Breaker:</b>	
											1	not selected
											2	selected
											9	Special version
FXA360-											Complete product designation	

## Fieldgate Solution FXA560

10	Approval:									
	A	Non-hazardous area								
	G	ATEX II (1)GD [EEx ia] IIC								
	P	FM IS CL,I,II,III Div.1 Gr.A-G								
	S	CSA IS CL,I,II,III Div.1 Gr.A-G								
	Y	Special version								
20	Power Supply:									
	A	85-253VAC								
	E	20-30VDC								
	Y	Special version								
30	Modem Interface:									
	1	Ethernet								
	2	Analogue								
	5	GSM + Tri-band antenna NA								
	6	GSM + Dual-band antenna EN								
	9	Special version								
40	Data Management:									
	A	not selected								
	B	DAT module								
	Y	Special version								
50	Connection HART:									
	1	2-channel aktive/passive								
	2	Multidrop, 2 segments								
	3	Multiplexer 3-16 channel aktive								
	4	Multiplexer 17-30 channel aktive								
	5	Multiplexer 3-16 channel aktive/passive								
	6	Multiplexer 17-30 channel aktive/passive								
	9	Special version								
60	Sensor Power:									
	A	not selected								
	B	Multidrop, 2 segments								
	C	x galvanic isolated 1-2								
	D	x galvanic isolated 3-16								
	E	x galvanic isolated 17-30								
	F	x galvanic isolated, Ex 1-2								
	G	x galvanic isolated, Ex 3-10								
	H	x galvanic isolated, Ex 11-16								
	K	x galvanic isolated, Ex 17-30								
	L	x not galvanic isolated 3-16								
	M	x not galvanic isolated 17-30								
	Y	Special version								
70	Panel Mounting:									
	1	w/o display								
	2	1x display 1-channel								
	3	2x display 2-channel								
	4	3x display 3-channel								
	5	4x display 4-channel								
	6	6x display 6-channel								
	7	8x display 8-channel								
	8	1x display 8-channel								
	A	2x display 16-channel								
	B	3x display 24-channel								
	C	4x display 30-channel								
	9	Special version								
FXA560-										Product designation (part 1)

**Note!**  
A PC cable is included in the scope of supply with FXA360/560.



## Accessories

### Note!

The following table gives an overview of possible application for the individual accessory parts with the Fieldgate Solution FXA360 or FXA560.

Accessory	Fieldgate Solution FXA360	Fieldgate Solution FXA560
DAT module	X	X
PC cable	X	X
Telephone cable (analogue version only)	is required	is required
Fieldgate OPC server	X	X
Java applets	X	X
Antenna (GSM version only)	is required	is required
HART Client (FXA560 only)	—	X
Multiplexer (FXA560 only)	—	X
E+H power supply units (FXA560 only)	—	X
24 V switched-mode power supply (Phoenix)		
Process display RIA251		
Process display OC7421		
Fieldgate FX320	X	—
Fieldgate FX520	—	X
WLAN components		

#### DAT module

An external EEPROM, in which the configuration data is saved identically to the internal EEPROM, can be attached optionally via plug. For example, this allows for the FXA360/560 to be changed in the event of a defect, without losing the customer-specific configuration data.  
Order number: 52013311.

#### PC cable

A PC can be connected to the FXA360/560 for configuration purposes via a serial RS 232 connection. Order number: 52013984.

#### Telephone cable

RJ11 (analogue plug, double-sided, length: 5 m).  
Order number: 52014031.

#### Fieldgate OPC server

The Fieldgate OPC server provides an interface between one or more Endress+Hauser Fieldgate devices and all possible OPC Data Access 2.0 compatible Clients. The Fieldgate can be connected via a dial-up modem or through a TCP/IP network.

#### Java applets

Java applets for a customised view of the screen.

#### Antenna

Antenna for communication via mobile communications (GSM):

- Tri-band flat antenna (900/1800/1900 MHz).  
Order number: 52018396.
- Dual-band station antenna (900/1800 MHz).  
Order number: 52018395.

#### HART Client (FXA560 only)

The HART Client is a free add-on which is required for remote configuration via HARTtools (e.g. with ToF Tool - FieldTool Package, ReadWin, ...). You can download the current software version from the Internet from the Endress+Hauser product pages (download: <http://www.endress.com>).

<b>Multiplexer (FXA560 only)</b>	<p>Accessories for HART Multiplexer system (from Pepperl+Fuchs):</p> <ul style="list-style-type: none"> <li>■ HART Multiplexer Master KFD2-HMM-16. Order number: 52017691.</li> <li>■ Master-interface connecting cable. Order number: 52017687.</li> <li>■ HART Multiplexer slave KFD0-HMS-16. Order number: 52020232.</li> <li>■ Master-slave connecting cable. Order number: 52020233.</li> <li>■ Interface module without communication resistor. Order number: 52017689.</li> <li>■ Interface module with communication resistor. Order number: 52017690.</li> </ul>
<b>E+H power supply units (FXA560 only)</b>	<p><b>RMA422</b></p> <p>Multifunctional 1-2-channel top-hat rail device with intrinsically safe current inputs and transmitter power supply, limit value monitoring, mathematics functions and 1-2 analogue outputs.</p> <p><b>RNS221</b></p> <p>Power supply unit for supplying power to two two-wire sensors or transmitters in non-hazardous areas.</p> <p><b>RN221N</b></p> <p>Isolator with power supply for safely isolating 4...20 mA standard signal circuits.</p> <p><b>RMA421</b></p> <p>Multifunctional 1-channel top-hat rail device with universal input, transmitter power supply, limit value monitoring and analogue output.</p>
<b>E+H Multidrop Connector FXN520 (FXA560 only)</b>	Operation of several devices in Multidrop operation for FXA520. Order number: 52023652.
<b>Solarbox (FXA360 only)</b>	Self-sufficient current supply unit for FXA320 with solar panel. Order number: 52023445.
<b>24 V switched-mode power supply (Phoenix)</b>	For supplying the Multidrop lines with up to 28.5 volts. Power supply to the 8-channel display and multiplexer. Order number: 52027739.
<b>Process display RIA251</b>	1-channel display. Not for Multidrop mode.
<b>Process display OC7421</b>	8-channel display. Not for Multidrop mode. Order number: 52027746
<b>Fieldgate FX320</b>	Gateway for Remote Monitoring of Sensors and Actuators via Web Browsers.
<b>Fieldgate FX520</b>	Gateway for Remote Monitoring of Sensors and Actuators via Web Browsers.
<b>WLAN components</b>	<p><b>Airpoint pro TOTAL</b></p> <p>WLAN access point.</p> <p>The device is available in the following versions:</p> <ul style="list-style-type: none"> <li>■ Conforms to EN standard, order number: 52027750</li> <li>■ Conforms to NA standard, order number: 52027751</li> </ul> <p><b>Airbridge TOTAL</b></p> <p>WLAN Ethernet client.</p> <p>The device is available in the following versions:</p> <ul style="list-style-type: none"> <li>■ Conforms to EN standard, order number: 52027752</li> <li>■ Conforms to NA standard, order number: 52027753</li> </ul> <p><b>E-TOP18 power unit</b></p> <p>12 V power unit for power supply to the WLAN components. Order number: 52027740.</p>

## Documentation

---

### Operating Instructions

#### **KA193F/00/a6**

Mounting and installation instructions for Fieldgate FXA520. Order number: 52013633.

#### **KA215F/00/a6**

Mounting and installation instructions for Fieldgate FXA320. Order number: 52020867.

#### **BA258F/00/en**

Operating Instructions for Fieldgate FXA520 (online help in the Internet browser).

#### **BA282F/00/en**

Operating Instructions for Fieldgate FXA320 (online help in the Internet browser).

#### **BA273F/00/en**

Operating instructions for Fieldgate Data Access software (download via the Internet).

#### **BA272F/00/en**

Operating instructions for Fieldgate OPC server software (download via the Internet).

---

### Certificates

#### **XA188F-A/00/a3**

Safety Instructions for electrical operating equipment for hazardous areas.  
Order number: 52013636.

#### **ZD086F/00/en**

Control Drawings (FM). Order number: 52013634.

#### **ZD087F/00/en**

Control Drawings (CSA). Order number: 52013635.

---

### Accessories

#### **BA265F/00/de**

Cable for the HART Multiplexer-System. Order number: 52017693.

#### **BA266F/00/en**

Interface Modul without Communication resistor. Order number: 52017694.

#### **BA267F/00/de**

Interface Modul with Communication resistor. Order number: 52017695.

#### **BA268F/00/en**

HART-Multiplexer Master KFD2-HMM-16. Order number: 52017696.

#### **BA283F/00/en**

HART Multiplexer slave KFD0-HMS-16. Order number: 52021044.

#### **BA269F/00/en**

Switched power supply. Order number: 52017698.

#### **TI391F/00/en**

Solarbox for Fieldgate FXA320. Order number: 52023595.

#### **TI081R/09/en**

Technical Information for Power Supply RNS221.

**KA110F/09/a3**

Operating Instructions for Power Supply RNS221. Order number: 51002645.

**TI073R/09/en**

Technical Information for Active Barrier RN221N.

**KA124R/09/a3**

Operating Instructions for Active Barrier RN221N. Order number: 51003567.

**TI063R/09/en**

Technical Information for Process Display RIA251 (1 channel).

**BA087R/09/a6**

Operating Instructions for Process Display RIA251. Order number: 51000471.

**Documentation for:**

- Process display OC7421 (8-channel), see accompanying Operating Instructions.
- WLAN components: AirPoint pro TOTAL -> WLAN access point, see accompanying CD-ROM.
- WLAN components: Airbridge TOTAL -> WLAN Ethernet client, see accompanying CD-ROM.
- E-TOP18 power unit -> 12 V power unit for supply of WLAN components, see accompanying Instructions.

## International Head Quarter

Endress+Hauser  
GmbH+Co. KG  
Instruments International  
Colmarer Str. 6  
79576 Weil am Rhein  
Deutschland

Tel. +49 76 21 9 75 02  
Fax +49 76 21 9 75 34 5  
[www.endress.com](http://www.endress.com)  
[info@ii.endress.com](mailto:info@ii.endress.com)

**Endress+Hauser** 

People for Process Automation