SD01492D/06/EN/01.15

71291597 Valid as of version 01.00.zz (Device firmware)

# Special Documentation **Proline Promag 100**

Heartbeat Verification + Monitoring application package

Endress+Hauser People for Process Automation

# Table of contents

| <b>1</b><br>1.1<br>1.2<br>1.3<br>1.4<br><b>2</b> | Document informationDocument functionUsing this documentSymbols usedDocumentationProduct features and availability | <b>4</b><br>4<br>4<br>5<br><b>6</b> |
|--|--|-------------------------------------|
| 2.1<br>2.2                                       | Product features   | 6<br>6                              |
| <b>3</b><br>3.1<br>3.2<br>3.3                    | Product description<br>Overview<br>Detailed product description<br>Performance characteristics                     | 8<br>8<br>10                        |
| 4  | System integration   | 11                                  |
| 4.1<br>4.2                                       | Automated data exchange<br>Data exchange performed by the user (asset<br>management system)                        | 11<br>13                            |
| 5  |  | 14                                  |
| 5.1<br>5.2<br>5.3<br>5.4                         | Availability   | 14<br>14<br>14<br>15                |
| 6  | Operation  | 16                                  |
| 6.1<br>6.2<br>6.3                                | Heartbeat Diagnostics  | 16<br>16<br>16                      |
| 7  | Mode of operation  | 25                                  |
| 7.1<br>7.2<br>7.3<br>7.4                         | Heartbeat Technology - integration<br>Heartbeat Verification – data management                                     | 25<br>25<br>26<br>32                |
| 8  | Application examples   | 34                                  |
| 8.1<br>8.2<br>8.3<br>8.4                         | Diagnostics  | 34<br>34<br>34<br>35                |
| 9  | Glossary and terminology   | 37                                  |
| 10   | Registered trademarks  | 38                                  |

# 1 Document information

# 1.1 Document function

This document is part of the Operating Instructions and serves as a reference for application-specific parameters and notes.

It provides detailed information on:

- Every individual parameter in the operating menu
- Advanced technical specifications
- General principles and application tips

# 1.2 Using this document

### 1.2.1 Information on the document structure

For the arrangement of the parameters as per the **Operation** menu, **Setup** menu, **Diagnostics** menu, along a short description, see the Operating Instructions for the device.

For information about the operating philosophy, see the "Operating philosophy" chapter in the device's Operating Instructions

# 1.3 Symbols used

## 1.3.1 Symbols for certain types of information

| Symbol | Meaning   |  |
|--------|---|--|
| i      | Tip<br>Indicates additional information.  |  |
| Ĩ      | <b>Reference to documentation</b><br>Refers to the corresponding device documentation.                                  |  |
|        | Reference to page<br>Refers to the corresponding page number.   |  |
|        | <b>Reference to graphic</b><br>Refers to the corresponding graphic number and page number.                              |  |
|        | <b>Operation via local display</b><br>Indicates navigation to the parameter via the local display.                      |  |
|        | <b>Operation via operating tool</b><br>Indicates navigation to the parameter via the operating tool.                    |  |
| Â      | Write-protected parameter<br>Indicates a parameter that can be locked against changes by entering a user-specific code. |  |

# **1.3.2** Symbols in graphics

| Symbol         | Meaning      |
|----------------|--------------|
| 1, 2, 3        | Item numbers |
| A, B, C,       | Views        |
| A-A, B-B, C-C, | Sections     |

# 1.4 Documentation

For an overview of the scope of the associated Technical Documentation, refer to the following:

- The W@M Device Viewer : Enter the serial number from the nameplate (www.endress.com/deviceviewer)
- The *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the 2-D matrix code (QR code) on the nameplate.

This documentation is not a substitute for the Operating Instructions supplied with the device.

For detailed information, refer to the Operating Instructions and other documentation on the CD-ROM provided or visit "www.endress.com/deviceviewer".

This documentation is an integral part of the following Operating Instructions:

| Measuring device | Documentation code |  |
|------------------|--------------------|--|
|                  | PROFINET           |  |
| Promag E 100     | BA01423D           |  |
| Promag H 100     | BA01421D           |  |
| Promag P 100     | BA01422D           |  |

This Special Documentation is available:

- On the CD-ROM supplied with the device (depending on the device version ordered)
  In the Download Area of the Endress+Hauser Internet site:
  - www.endress.com  $\rightarrow$  Download


## 1.4.1 Content and scope

This documentation contains descriptions of the additional parameters and technical data that are available with the Heartbeat Technology application package.

# 2 Product features and availability

# 2.1 Product features

Proline flowmeters with Heartbeat Technology offer diagnostic functions through continuous self-monitoring (**Heartbeat Diagnostics**), the transmission of additional measured variables to an external Condition Monitoring system (**Heartbeat Monitoring**) and the in-situ verification of flowmeters in the application (**Heartbeat Verification**).

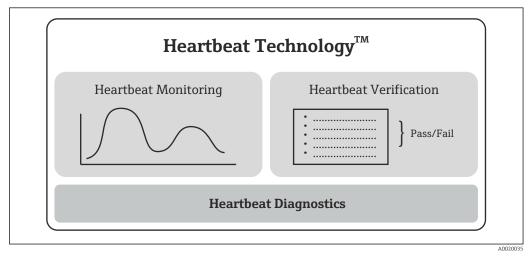

I Heartbeat Technology: Overview of modules and correlated functions

The **Heartbeat Monitoring** and **Heartbeat Verification** modules are optional  $\rightarrow \triangleq 6$ .

# 2.1.1 Heartbeat Diagnostics

The **Heartbeat Diagnostics** function provides information on the device status and is represented in the form of status signals (device diagnostics).

For more information on diagnostics, see the "Diagnostics and troubleshooting" section of the Operating Instructions.

## 2.1.2 Heartbeat Monitoring

Continuous output of monitoring measured values for monitoring in an external Condition Monitoring system. The measured values are transmitted to a Condition Monitoring system via the outputs provided on the measuring device.

# 2.1.3 Heartbeat Verification

The functionality of the device is checked on demand. The results of the check are saved as a data set in the measuring device and documented in the form of a verification report.

It is recommended to use the **Heartbeat Verification** function for the first time directly as part of the commissioning routine  $\rightarrow \cong 14$ .

# 2.2 Availability (product list and order option)

Heartbeat Technology is available for all Proline measuring principles. This enables the use of the function for the entire installed base of Proline flowmeters.

For information on how to enable the function  $\rightarrow \square 14$ .

Heartbeat Technology is compatible with all the system integration options. Interfaces with digital communication are required to access the data saved in the measuring device. The speed of data transmission depends on the type of communication interface used.

Please contact your Endress+Hauser service or sales organization for further information regarding product availability and upgrades to existing measuring devices.

#### 2.2.1 Order options

Heartbeat Diagnostics is a basic function of all the Proline measuring devices.

#### Heartbeat Monitoring and Heartbeat Verification

The **Heartbeat Monitoring** and **Heartbeat Verification** modules are optional and are indicated as order options in the product price list:

Order feature "Application Package", **EB** "Heartbeat Verification + Monitoring" option

If this order option is selected, the functionalities for **Heartbeat Monitoring** and **Heartbeat Verification** are already available in the device on leaving the factory. It is also possible to upgrade to this function during the life cycle of the measuring device.

# 3 Product description

# 3.1 Overview

Proline measuring devices with Heartbeat Technology have an integrated self-monitoring system that monitors the entire measuring chain from the sensor to the outputs. This integrated self-monitoring system supplies additional information (measured variables) for the direct assessment of the state of the measuring device, and information on process influences that affect the measuring function and performance.

# 3.1.1 Heartbeat Monitoring and Verification

The "Heartbeat Verification + Monitoring" application package can be used to verify the functionality of the device in the application (**Heartbeat Verification**); the measuring device can also be used to output additional measured variables to an external Condition Monitoring system (**Heartbeat Monitoring**).

The information gathered during self-monitoring is made available by the **Heartbeat Diagnostics**, **Heartbeat Monitoring** and **Heartbeat Verification** features in a variety of ways  $\rightarrow \bigoplus 6$ :

The **Heartbeat Diagnostics** function supplies continuous information about the state of the measuring device. It is represented in the form of status signals (device diagnostics).

With **Heartbeat Monitoring** it is possible to output additional monitoring-specific measured values for monitoring in an external Condition Monitoring system during continuous operation. The measured values are transmitted to a Condition Monitoring system via the outputs provided on the measuring device.

The flowmeter is verified on demand using the **Heartbeat Verification** function. The results of the check are documented as a data set in the measuring device and in the form of a verification report. The result of the verification provides information about the condition of the device.

# 3.2 Detailed product description

## 3.2.1 Heartbeat Diagnostics

#### Purpose

With the **Heartbeat Diagnostics** function, information on the status of the measuring device is generated on the basis of continuous self-monitoring and represented in the form of status signals (device diagnostics). The diagnostic data are classified and contain information on the cause of the error and measures to rectify the error.

#### Aim

Continuously output status signals via the operating interfaces and to the higher-level system (system integration).

#### Advantages

- Continuous monitoring and integration into the higher-order system ensure that information on the condition of the measuring device is available in real time and can be processed in time.
- Remedial measures are provided for each diagnostic event to ensure that problems can be rectified quickly.

#### Customer and industry requirements

The status signals are classified in accordance with VDI/VDE 2650 and NAMUR Recommendation NE 107.

For more information on diagnostics, see the "Diagnostics and troubleshooting" section of the Operating Instructions.

## 3.2.2 Heartbeat Monitoring

#### Purpose

Condition Monitoring is defined as the continuous monitoring of flowmeter measured variables in an external system. This is different from the continuous self-monitoring performed by the device, which forms the basis for device diagnostics. On the basis of continuous self-monitoring, **Heartbeat Monitoring** makes additional monitoring-specific measured values available. A range of measured variables is provided that relates to the measuring performance of the flowmeter.

The analysis of these continuous measured variables in a Condition Monitoring system makes it possible to assess these measured variables from the perspective of the application. Device diagnostics assesses measured variables with regard to the condition of the measuring device (system integrity, operation outside of manufacturer's specifications) and with regard to any restrictions or interruptions in the measuring function due to unsuitable process conditions. The purpose of **Heartbeat Monitoring**, on the other hand, is to use additional measured variables in the context of the application. Therefore the measured variables are interpreted in the Condition Monitoring system as opposed to interpretation by the flowmeter. The flowmeter only serves to supply the information.

#### Aim

To monitor the application, relevant monitoring-specific measured values are transmitted to a Condition Monitoring system via the outputs provided at the measuring device. The monitoring-specific measured values are assessed in the Condition Monitoring system and used to control maintenance-related measures (e.g. cleaning) or process optimization. Ideally these measures can be implemented before the process safety or product quality of the application is affected.

Possible applications of Condition Monitoring:

- Magnetite-containing media
- Multi-phase fluids (gas content in liquid fluids)
- Applications in which the sensor is exposed to a programmed amount of wear
- Applications with cathodic protection systems
- Applications with pipes that are not grounded

#### Advantages

- Measured variables preprocessed in the measuring device are made available for easy integration into the Condition Monitoring system.
- Early detection of changes (trends) to ensure plant availability and product quality.
- Use of information for the proactive planning of measures (cleaning).
- Identification of undesirable process conditions as the basis to optimizing the facility and the processes.

#### Customer and industry requirements

- For a product to have a high level of quality, the process quality must be monitored continuously and the quality of flow measurement must remain constant.
- High system availability requires the prevention of unscheduled downtime and short turnaround times for repair work proactive, forward planning is a prerequisite for this.

## 3.2.3 Heartbeat Verification

#### Purpose

**Heartbeat Verification** uses the self-monitoring function of the Proline flowmeters to check the measuring device functionality. Verification is performed on demand. During the verification process, the system checks whether the measuring device components comply with the factory specifications. Both the sensor and the electronic modules are included in the tests. The results of the check are saved as a data set in the measuring device and documented in the form of a verification report, if required. The request for verification can come from a higher-order system via the system integration interface. The overall result of the device function test can also be relayed to this higher-order system. The result of the verification provides information about the condition of the measuring device. Data interpretation by the user is not required.

#### Aim

To confirm the consistent quality of the measurement in the life cycle of the measuring device by periodically checking the measuring device functionality. To create traceable documentation of the condition of the measuring device in the life cycle of the measuring device.

#### Advantages

- The functionality is integrated in the measuring device and therefore available via all the operating and system integration interfaces. No onsite presence is required to use the function, thereby saving time and making the function easily available at any time.
- As the measuring device interprets and documents the results of the verification itself (**Pass/Fail**), no special knowledge is required on the part of the user.
- The documentation of the verification (verification report) can be used to prove quality measures to a third party.
- The use of the **Heartbeat Verification** function as a method to test Proline measuring devices in the application means it can replace other maintenance tasks (periodic check, repeat calibration) or be used to extend the testing intervals.

#### Customer and industry requirements

- Compliance with ISO 9001 (measuring points relevant to quality)
- Testing of measuring points with regard to energy monitoring, utilities and greenhouse gas emissions
- Testing of measuring points as regards billing

# 3.3 Performance characteristics

Heartbeat Technology™ carries out checks on the measuring device which increase the reliability of the measured value output.

## 3.3.1 Heartbeat Diagnostics

Heartbeat Diagnostics carries out diagnostic tests in the electronics modules based on continuous self-monitoring. The test scope achieved using these diagnostic tests is referred to as Total Test Coverage – TTC.

The TTC is expressed by the following formula for random errors (calculation based on FMEDA as per IEC 61508):

```
TTC = (\lambda_{TOT} - \lambda_{du}) \ / \ \lambda_{TOT}
```

 $\lambda_{TOT}$ : Rate of all theoretically possible failures

 $\lambda_{du}\!\!:\qquad \text{Rate of undetected dangerous failures}$ 

Only dangerous undetected failures are not identified by the instrument diagnosis and, if they occur, can distort the measured value that is output or interrupt the output of measured values.

Heartbeat Diagnostics checks the device function within the specified measuring tolerance using a defined TTC.


## 3.3.2 Heartbeat Verification

Heartbeat Verification is carried out on demand and, by means of additional checks, complements the diagnostics performed during diagnosis: internal verification also checks the 4 to 20 mA current output, and external verification supports the testing of all output modules.

This reduces the percentage of the failures undetected by diagnosis ( $\lambda_{du}$ ).

# 4 System integration

The Heartbeat Technology functions are available via the digital interfaces. The functionalities can be used via an asset management system and the automation infrastructure (e.g. PLC).

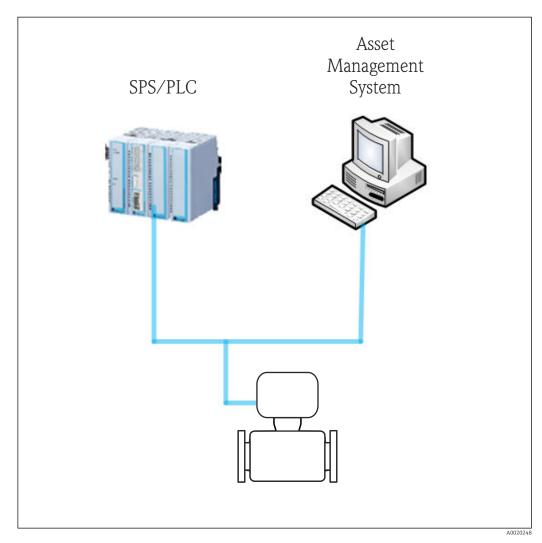

Data exchange can take place automatically or be triggered by a user.

For basic information on system integration, see the "System integration" section of the Operating Instructions.

# 4.1 Automated data exchange

| Heartbeat Diagnostics                      | Heartbeat Monitoring  | Heartbeat Verification                            |
|--|---|---|
| <ul> <li>Analyze field device</li></ul>    | <ul> <li>Continuous trend analysis</li> <li>Additional monitoring of measured</li></ul> | <ul> <li>Instrument check via self-</li></ul>     |
| diagnostics <li>Diagnostic events for</li> | variables for processing in a   | monitoring <li>Start verification and upload</li> |
| integration with the PLC                   | Condition Monitoring system   | verification results                              |


### 4.1.1 Automated data exchange: Heartbeat Monitoring

The following procedure describes the work flow that is principally involved in the automated handling of the **Heartbeat Monitoring** function, and the use of data for Condition Monitoring:

- The host application configures the cyclic services of the field device for **Heartbeat Monitoring**
- The field device communicates PVs (process variables) from Heartbeat Monitoring
- The host application analyzes the Heartbeat Monitoring PVs (e.g. trends, limit value monitoring)
- The host application initiates application-specific standard operating procedures (e.g. a "Maintenance Required" alarm is signaled or maintenance instructions are triggered)
- The fieldbus-specific implementation (HART, Modbus RS485, PROFIBUS DP, EtherNet/IP, PROFINET) is described in the "Technical data" section of the Operating Instructions under "Output".

## 4.1.2 Automated data exchange: Heartbeat Verification

The self-monitoring function integrated in the measuring device can by activated by a control system and the results can be checked. The following procedure must be implemented for this purpose:

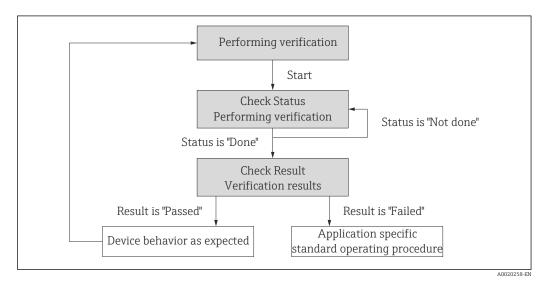

- Verification performance:
- The verification is started using the "Start verification" parameter.
- Verification status:
- On completion of the verification, the value of the "Status" parameter changes to "**Done**". Verification result:

The overall result of the verification is indicated in the "Overall result" parameter. Different application-specific measures must be performed by system routines depending on the result, e.g. a "Maintenance Required" alarm is triggered if **Failed** is displayed as the result.

# 4.2 Data exchange performed by the user (asset management system)

| Heartbeat Diagnostics   | Heartbeat Monitoring                   | Heartbeat Verification  |
|---|--|---|
| <ul> <li>Identify remedial measures</li> <li>Information on the cause of the error<br/>and remedial measures are provided<br/>in the asset management system</li> </ul> | Configuration of the monitoring system | <ul> <li>Instrument verification via self-<br/>monitoring</li> <li>Start verification<br/>Upload, archive and document<br/>verification results including detailed<br/>results</li> </ul> |



Data exchange performed by the user is described in the "Commissioning"  $\rightarrow \square 14$ , "Operation"  $\rightarrow \square 16$  and "Heartbeat Technology – Integration"  $\rightarrow \square 25$  sections.

# 5 Commissioning

# 5.1 Availability

## 5.1.1 Heartbeat Monitoring and Verification

If the optional package for **Heartbeat Monitoring** and **Heartbeat Verification** was ordered for the flowmeter from the factory, the function is already available when the measuring device is delivered to the customer. The function is accessed via the operating interfaces of the measuring device, via the Web server or Endress+Hauser's FieldCare asset management software. No particular measures are required to put the function into operation.

Ways to check function availability in the measuring device:

- Using the serial number:
- W@M Device Viewer  $^{1)} \rightarrow$  Order code for option **EB** "Heartbeat Verification + Monitoring" • In the operating menu:

Check whether the function appears in the operating menu: "Diagnostics" submenu  $\rightarrow$  Heartbeat.

If the "Heartbeat" option is available the function is activated.

If the function is not available in the measuring device, the optional package was not selected. It is then possible to upgrade to this function during the life cycle of the measuring device. On most flowmeters it is possible to activate the function without having to change the firmware.

## 5.1.2 Activation without firmware upgrade

You require a conversion kit from Endress+Hauser to enable the function without upgrading the firmware. Among other things, this kit contains an activation code which must be entered via the operating menu to activate the "Heartbeat Verification + Monitoring" function.

The function can be activated under "Setup" menu  $\rightarrow$  Advanced setup  $\rightarrow$  Enter access code.

Once activated, the **Heartbeat Monitoring** and **Heartbeat Verification** modules are permanently available in the measuring device.

Activation without firmware upgrade is possible as of the following firmware versions: PROFINET: 01.00.zz

# 5.2 Heartbeat Diagnostics

The diagnostics functions are part of the basic features of Proline flowmeters: See the "Diagnostics and troubleshooting" section of the Operating Instructions.

# 5.3 Heartbeat Monitoring

**Heartbeat Monitoring** is put into operation by activating the monitoring function and assigning the measured variables, which are relevant for monitoring from the point of view of the application, to the outputs on the measuring device. Once commissioning is completed, the selected monitoring-specific measured variables are continuously available at the outputs.

<sup>1)</sup> www.endress.com/deviceviewer

#### Activating/deactivating the monitoring function

The transmission of monitoring-specific measured variables is switched on or off in the operating menu:

→ 🗎 16

#### 5.3.1 Parameter selection: Outputs

The monitoring-specific parameters listed below can be assigned to the outputs for continuous transmission to a Condition Monitoring system.

Some parameters are only available if the "Heartbeat Monitoring" function is enabled in the measuring device.

| Parameter  | Description   | Value range                   |  |
|--|---|-------------------------------|--|
| Noise <sup>1)</sup>                              | This parameter indicates the degree to<br>which the differential signal from both<br>measuring electrodes is dispersed. | 0 to +3.0 · 10 <sup>+38</sup> |  |
| Coil current shot time <sup>1)</sup>             | Rise time of coil current for buildup of magnetic field   | 2 to 500 ms                   |  |
| Reference electrode potential against PE $^{1)}$ | Voltage of reference electrode based on potential of measuring tube   | -30 to +30 V                  |  |

1) Only available if the "Heartbeat Monitoring" function is enabled in the measuring device

For information on using the parameters and interpreting the measurement results  $\rightarrow \cong 34$ .

# 5.4 Heartbeat Verification

It is not necessary to commission the Heartbeat Verification function.

The configuration (factory reference) required as part of **Heartbeat Verification** is recorded during calibration at the factory and is permanently stored in the measuring device. When verifying in the application, the current situation of the measuring device is compared against this factory reference.

#### 5.4.1 Recording of customer and location

It is possible to manually record reference data relating to the customer and the location. If this function is used, these reference data appear in the verification report.

Reference data are recorded in the operating menu:

- "Setup" menu  $\rightarrow$  Advanced setup  $\rightarrow$  Heartbeat setup  $\rightarrow$  Heartbeat base settings  $\rightarrow$  Plant operator
- "Setup" menu  $\rightarrow$  Advanced setup  $\rightarrow$  Heartbeat setup  $\rightarrow$  Heartbeat base settings  $\rightarrow$  Location
- "Expert" menu → Diagnostics → Heartbeat → Heartbeat base settings → Plant operator
  - "Expert" menu  $\rightarrow$  Diagnostics  $\rightarrow$  Heartbeat  $\rightarrow$  Heartbeat base settings  $\rightarrow$  Location

# 6 Operation

# 6.1 Heartbeat Diagnostics

The diagnostics functions are part of the basic features of Proline flowmeters.

For more information on diagnostics, see the "Diagnostics and troubleshooting" section of the Operating Instructions.

# 6.2 Heartbeat Monitoring

#### Activating/deactivating the monitoring function

Once the device has been commissioned successfully, the continuous transmission of monitoring-specific measured variables to the outputs is switched on or off in the operating menu:

- "Setup  $\rightarrow$  Advanced setup  $\rightarrow$  Heartbeat setup  $\rightarrow$  Heartbeat monitoring"
- "Expert  $\rightarrow$  Diagnostics  $\rightarrow$  Heartbeat  $\rightarrow$  Heartbeat monitoring"

# 6.3 Heartbeat Verification

## 6.3.1 Initial verification

It is advisable to perform an initial verification when commissioning the measuring device and to save the results as the initial situation in the life cycle of the measuring device.

If verification is started during the first 60 minutes following commissioning, measured value output is interrupted for a period of up to two minutes.

# 6.3.2 Product features

For basic information on the product features of **Heartbeat Verification**  $\rightarrow \cong$  8. Refer to this section of the manual before continuing device operation.

# 6.3.3 Operation – performing a verification

Verification is performed on demand and started in the operating menu or via the Verification-DTM.

Access via the operating menu and Web server:

- "Diagnostics" submenu  $\rightarrow$  Heartbeat  $\rightarrow$  Performing verification
- "Expert" menu  $\rightarrow$  Diagnostics  $\rightarrow$  Heartbeat  $\rightarrow$  Performing verification

Access via FieldCare DTM: "Heartbeat" submenu → Performing verification

Measurement is interrupted briefly while the verification is being carried out. The output of measured values resumes; in the meantime, a "last valid value" is output. The interruption lasts for a maximum of 2 to 7 minutes, depending on the sensor type. The interruption to operation is indicated by a diagnostic message as well as the "Function check" status signal, see also "Diagnostic behavior" section  $\rightarrow \square 16$ .

#### **Diagnostic behavior**

A diagnostic event signals that verification is being performed: Event "302 – Device verification active". The status signal switches to "C – Function check". Factory setting: Warning. The output of measured values resumes; in the meantime, a "last valid value" is output. The signal outputs and totalizers are not affected.

The diagnostic behavior can be reconfigured by the user if necessary: If set to alarm, measured value output is interrupted, and the signal outputs and totalizers adopt the defined alarm condition.

For additional information on the diagnostic behavior, see the "Diagnostics and troubleshooting" section in the Operating Instructions.



Only use intrinsically safe measuring equipment in hazardous zones!

#### Parameters for "Performing verification/Start"

#### Navigation

"Diagnostics" submenu  $\rightarrow$  Heartbeat  $\rightarrow$  Performing verification

#### Navigation


"Expert" menu  $\rightarrow$  Diagnostics  $\rightarrow$  Heartbeat  $\rightarrow$  Performing verification

#### Parameter overview with brief description

| Parameter | Prerequisite   | Description  | User entry /<br>Selection / User<br>interface  | Factory setting |
|-----------|--|--|--|-----------------|
| Year      | Can be edited if verification status is not active.  | Entry for date and time<br>(field 1): enter the year<br>verification is performed.   | 9 to 99  | 10              |
| Month     | Can be edited if verification<br>status is not active.   | Entry for date and time<br>(field 2): enter the month<br>verification is performed.  | <ul> <li>January</li> <li>February</li> <li>March</li> <li>April</li> <li>May</li> <li>June</li> <li>July</li> <li>August</li> <li>September</li> <li>October</li> <li>November</li> <li>December</li> </ul> | January         |
| Day       | Can be edited if verification status is not active.  | Entry for date and time<br>(field 3): enter the day<br>verification is performed.    | 1 to 31  | 1               |
| Hour      | Can be edited if verification status is not active.  | Entry for date and time<br>(field 4): enter the hour<br>verification is performed.   | 0 to 23  | 12              |
| AM/PM     | Can be edited if verification<br>status is not active.<br>The dd.mm.yy hh:mm<br>am/pm option or the<br>mm/dd/yy hh:mm am/pm<br>option are selected in the<br>Date/time format parameter<br>(2812). | Entry for date and time<br>(field 5): enter the morning or<br>afternoon.             | • AM<br>• PM   | AM              |
| Minute    | Can be edited if verification status is not active.  | Entry for date and time<br>(field 6): enter the minute<br>verification is performed. | 0 to 59  | 0               |

| Parameter                   | Prerequisite   | Description  | User entry /<br>Selection / User<br>interface  | Factory setting |
|-----------------------------|--|--|--|-----------------|
| External device information | <ul> <li>With the following conditions:</li> <li>In the Verification mode<br/>parameter, the External<br/>verification option is<br/>selected.</li> <li>Can be edited if verification<br/>status is not active.</li> </ul> | Record measuring equipment for external verification.  | Free text entry  | -               |
| Start verification          | -  | Start verification. To carry out<br>a complete verification, the<br>selection parameters must be<br>selected individually. Once the<br>external measured values have<br>been recorded, verification is<br>started using "Start<br>verification".   | <ul> <li>Cancel</li> <li>Output 1 low value</li> <li>Output 1 high<br/>value</li> <li>Output 2 low value</li> <li>Output 2 high<br/>value</li> <li>Frequency output</li> <li>Pulse output</li> <li>Start verification</li> </ul> | Cancel          |
| Progress                    | -  | Shows the progress of the process.   | 0 to 100 %   | 0 %             |
| Status                      | -  |  | <ul> <li>Done</li> <li>Busy</li> <li>Failed</li> <li>Not done</li> </ul>   | Not done        |
| Overall result              | For the following order code:<br>"Application package", option<br>EB "Heartbeat Verification"<br>The software options<br>currently enabled are<br>displayed in the<br>Software option<br>overview parameter.               | Overall result of the<br>verification. Failed: At least<br>one test group was outside the<br>specifications. Passed: All<br>verified test groups complied<br>with the specifications (even if<br>"Check not done" is the result<br>for a test group). Check not<br>done: No verification was<br>performed for any of the test<br>groups. | <ul> <li>Failed</li> <li>Not used</li> <li>Passed</li> <li>Check not done</li> </ul>   | Check not done  |

Performing the verification: sequence of steps

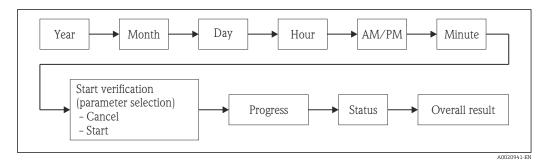

The entry for the date and time is saved in addition to the current operating time and the results of the verification and also appears in the verification report.

# 6.3.4 Verification results

The results of the verification can be called up via the operating menu or via the FieldCare Verification-DTM.

Access via the operating menu and Web server:

- "Diagnostics" submenu  $\rightarrow$  Heartbeat  $\rightarrow$  Verification results
- "Expert" menu  $\rightarrow$  Diagnostics  $\rightarrow$  Heartbeat  $\rightarrow$  Verification results

Access via FieldCare DTM: "Heartbeat" submenu → Verification results

#### Parameter/Test group verification results

#### Navigation

"Diagnostics" submenu  $\rightarrow$  Heartbeat  $\rightarrow$  Verification results

#### Navigation

"Expert" menu  $\rightarrow$  Diagnostics  $\rightarrow$  Heartbeat  $\rightarrow$  Verification results

#### Parameter overview with brief description

| Parameter       | Prerequisite   | Description  | User interface   | Factory setting |
|-----------------|--|--|--|-----------------|
| Date/time       | The verification has been performed.   | Entry for date and time in real time.  |  | 0               |
| Verification ID | The verification has been performed.   | Consecutive numbering of the verification results in the measuring device.   | 0 to 65535   | 0               |
| Operating time  | The verification has been performed.   | Indicates how long the device<br>has been in operation.  | Days (d), hours (h),<br>minutes (m), seconds<br>(s)                                  |                 |
| Overall result  | For the following order code:<br>"Application package", option<br>EB "Heartbeat Verification"<br>The software options<br>currently enabled are<br>displayed in the<br>Software option<br>overview parameter. | Overall result of the<br>verification. Failed: At least<br>one test group was outside the<br>specifications. Passed: All<br>verified test groups complied<br>with the specifications (even if<br>"Check not done" is the result<br>for a test group). Check not<br>done: No verification was<br>performed for any of the test<br>groups. | <ul> <li>Failed</li> <li>Not used</li> <li>Passed</li> <li>Check not done</li> </ul> | Check not done  |
| Sensor          | In the <b>Overall result</b><br>parameter, the <b>Failed</b> option is<br>displayed.   | Result for sensor test group.  | <ul><li>Failed</li><li>Not used</li><li>Passed</li><li>Check not done</li></ul>      | Check not done  |

| Parameter            | Prerequisite   | Description   | User interface  | Factory setting |
|----------------------|--|---|---|-----------------|
| Pre-amplifier module | In the <b>Overall result</b><br>parameter, the <b>Failed</b> option is<br>displayed. |   | <ul> <li>Failed</li> <li>Not used</li> <li>Passed</li> <li>Check not done</li> </ul>  | Check not done  |
| I/O module           | In the <b>Overall result</b><br>parameter, the <b>Failed</b> option is<br>displayed. | <ul> <li>Result for I/O module<br/>monitoring of the I/O module.</li> <li>For current output: Accuracy<br/>of the current</li> <li>For pulse output: Accuracy<br/>of pulses (for external<br/>verification only)</li> <li>For frequency output:<br/>Accuracy of frequency (for<br/>external verification only)</li> </ul> | <ul> <li>Failed</li> <li>Passed</li> <li>Check not done</li> <li>Limit value for<br/>current output (for<br/>internal verification<br/>only):</li> <li>±1%</li> <li>±300 μA</li> <li>Limit value for<br/>current output (for<br/>external verification<br/>only, for 4 mA and<br/>for 20 mA):</li> <li>±1%</li> <li>±300 μA</li> <li>Limit value for pulse<br/>output (for external<br/>verification only):</li> <li>Simulation: 1 pulse/s,<br/>pulse width 100 ms,<br/>with 1000 pulses</li> <li>±10 pulses</li> <li>Limit value for<br/>frequency output (for<br/>external verification<br/>only):</li> <li>±0.1 %</li> </ul> | Check not done  |

#### **Classify results**

#### **Classification of results**

- Failed: At least one individual test in the test group was outside the specifications.
- Passed: All individual tests in the test group complied with the specifications. The result is also "Passed" if the result of an individual test is "Check not done" and the result of all other tests is "Passed".
- Check not done: No test has been performed for this test group.


#### **Classification of overall results**

- Failed: At least one test group was outside the specifications.
- Passed: All verified test groups complied with the specifications (result "Passed"). The
  overall result is also "Passed" if the result for an individual test group is "Check not done"
  and the result for all other test groups is "Passed".
- Check not done: No verification was performed for any of the test groups (result for all test groups is "Check not done").
- If a result is classified as "Check not done", the output concerned has not been used.
- Heartbeat Verification confirms the device function within the specified measuring tolerance on demand with a total test coverage (TTC) of > 95%. Based on redundant references in the device which are traceable from the factory, Heartbeat Technology meets all the requirements concerning traceable device verification according to DIN EN ISO 9001:2008.

#### Test groups

- Sensor: Electrical components of the sensor (signals, circuits and cables).
- Sensor electronic module: Electronic module for exciting the sensor and converting.
- I/O electronics module: The test result for the I/O modules available.
- System condition: Tests whether an active measuring device error is pending at the measuring device.

For more information on the test groups and individual tests  $\rightarrow \cong 21$ .



The same applies for the overall result: All the test groups must pass for the overall result to be "passed". Information on the individual tests is provided in the verification report and in the detailed verification results which can be accessed via the Verification-DTM.

## 6.3.5 Detailed verification results

The detailed verification results and process conditions at the time of the verification can be accessed via the FieldCare Verification-DTM.

- Verification results: "VerificationDetailedResults → VerificationSensorResults"
- Process conditions: "VerificationDetailedResults → VerificationActualProcessConditions"

The detailed verification results listed below provide information on the results of the individual tests within a test group.

| Individual test                         | Description   | Result/limit value   |  |
|---|---|--|--|
| "Sensor" test group                     |   |  |  |
| Coil current shot time                  | Monitoring of symmetry in the<br>exciter circuit for coil current shot<br>times while both field polarities<br>are changed    | <ul><li>Failed</li><li>Passed</li><li>Check not done</li></ul> |  |
| Coil hold voltage                       | Monitoring of symmetry in<br>holding voltages of exciter circuit<br>for driving the coil current for<br>both field polarities | <ul><li>Failed</li><li>Passed</li><li>Check not done</li></ul> |  |
| Coil current                            | Monitoring of coil current at input/output  | <ul><li>Failed</li><li>Passed</li><li>Check not done</li></ul> |  |
| "Sensor electronic module" test group   | ·   |  |  |
| Reference voltage                       | Monitoring of reference voltages<br>in flowmeter circuit and exciter<br>circuit   | <ul><li>Failed</li><li>Passed</li><li>Check not done</li></ul> |  |
| Linearity of electrode signal amplifier | Monitoring of flowmeter circuit<br>with regard to gain and linearity  | <ul><li>Failed</li><li>Passed</li><li>Check not done</li></ul> |  |
| Offset electrode signal amplifier       | Monitoring of flow measurement<br>amplifier with regard to zero point   | <ul><li>Failed</li><li>Passed</li><li>Check not done</li></ul> |  |

Parameters for "Detailed verification results"

Furthermore, the current process conditions at the time of verification are recorded, thereby improving the comparability of the results.

| Process conditions                     | Description, value range   |
|--|--|
| Verification value conductivity        | Actual measured value for medium conductivity (if switched on)           |
| Process temperature verification value | Actual measured value for medium temperature (if available)              |
| Verification value volume flow         | Actual measured value for volume flow                                    |
| Electronic temperature                 | Current measured value for the electronic temperature in the transmitter |

# 6.3.6 Verification report

The results of the verification can be documented in the form of a verification report using a Web server or the FieldCare asset management software  $\rightarrow \boxdot 26$ . The verification report is created on the basis of the data set saved in the measuring device after verification. As the verification results are automatically and uniquely identified with the verification ID and the operating time, they are suitable for the traceable documentation of the verification of flowmeters.

#### Content of the verification report

The verification report is a two-page report. The first page contains information to identify the measuring point and the verification result and confirms that verification has been performed.

- Customer: Customer reference
- Device information: Information on the place of operation (tag) and the current configuration of the measuring point. This information is managed in the measuring device and indicated in the verification report.
- Calibration: Information on the calibration factor and zero point setting for the sensor. To ensure that the measuring device complies with the factory specification, these values must correspond to those of the last calibration or repeat calibration.
- Verification information: The operating time and verification ID are used to uniquely assign the verification results for the traceable documentation of the verification. The manual entry for the date and time is saved in addition to the current operating time in the measuring device and also appears in the verification report.
- Verification results: Overall result of the verification. The verification is only passed if all the test groups pass. The results for the test groups are indicated on the second page of the report.
- Validity Disclaimer: As a prerequisite for the validity of the verification report, the **Heartbeat Verification** function must be activated on the measuring device concerned and must have been performed by an operator tasked to carry out this job by the customer. Alternatively, an Endress+Hauser service technician or a service provider authorized by Endress+Hauser can be tasked with performing the verification.

|  | eport flowmeter   |   |
|--|---|---|
| Customer   |   | Mr. Smith   |
| Device informati   | on  |   |
| Location<br>Location 14  |   | Device tag<br>M-745   |
| <b>Module name</b><br>Promag P   |   | Nominal diameter<br>DN25                                    |
| <b>Device name</b><br>Promag 100   |   | O <b>rder code</b><br>5P1B25-725                            |
| <b>Serial number</b><br>1234567890   |   | Firmware version<br>01.00.07                                |
| Calibration  |   |   |
| Calibration factor   |   | Zero point<br>10  |
| 12d15h32min12 s  |   | 01.12.2010/12:00  |
| Operating time<br>12d15h32min12 s<br>Verification ID<br>17   |   | 11.12.2010/12:00  |
| 12d15h32min12 s<br>Verification ID   | lts   |   |
| 12d15h32min12 s<br>Verification ID<br>17   | lts   | X Failed  |
| 12d15h32min12 s<br>Verification ID<br>17<br>Verification resu  | lts   |   |
| 12d15h32min12 s<br>Verification ID<br>17<br>Verification resu<br>Overall result*<br>Detailed results   | lts   | <b>∑ Failed</b><br>See next page                            |
| 12d15h32min12 s<br>Verification ID<br>17<br>Verification resu<br>Overall result*<br>Detailed results   | lts   | <b>∑ Failed</b><br>See next page                            |
| 12d15h32min12 s<br>Verification ID<br>17<br>Verification resu<br>Overall result*<br>Detailed results<br>*Overall result: Resu<br>Notes<br>Validity of the verific<br>• For devices with th | Its<br>It of the complete device functionali<br>ation report is only given:<br>e Heartbeat Verification enabled so: | Failed<br>See next page<br>ty test via Heartbeat Technology |

☑ 2 Verification report (Page 1)

The second page of the verification report lists the individual test groups and the individual test group results. For information on the meaning of the individual test groups and a description of the individual tests  $\rightarrow \cong 21$ .

| Verification report  | Endress + Hauser |
|--|------------------|
| Verification report flowmeter  |                  |
| For serial number: 1234567890<br>Detailed results of verification ID: 17 |                  |
| Sensor   | Passed           |
| Coil current shot time   | ✓ Passed         |
| Coil hold voltage  | ✓ Passed         |
| Coil current   | Passed           |
| Sensor electronic module   | 🔀 Failed         |
| Reference voltage  | Passed           |
| Linearity of electrode measuring circuit                                 | 🔀 Failed         |
| Offset of electrode measuring circuit                                    | Check not done   |
| I/O module   | Passed           |
| I/O module   | Passed           |
|  |                  |

☑ 3 Verification report (Page 2)

# Data administration using Web server and FieldCare verification DTM $\rightarrow \ \textcircled{B}\ 26$

# 7 Mode of operation

# 7.1 Self-monitoring using Heartbeat Technology


The Heartbeat Technology function is based on reference values that are recorded during the factory calibration, or on series-specific limit values.

Device-internal parameters (measuring points) that are correlated with flow measurement (secondary measured variables, comparative values) are recorded during the calibration. The reference values for these parameters are stored permanently in the measuring device and act as the basis for Heartbeat Technology and particularly for the **Heartbeat Verification** function integrated in the measuring device.


Throughout the life cycle of the flowmeter, the **Heartbeat Verification** function checks whether the measuring points deviate from the reference condition defined at the time of the calibration and indicates if the deviation is outside the factory specification. The validity of the testing method is additionally ensured by redundant components and signal feedback (feedback loop). This ensures that any component drift is detected.

# 7.2 Heartbeat Technology - integration

The Heartbeat Technology function is accessible via all the operating interfaces.

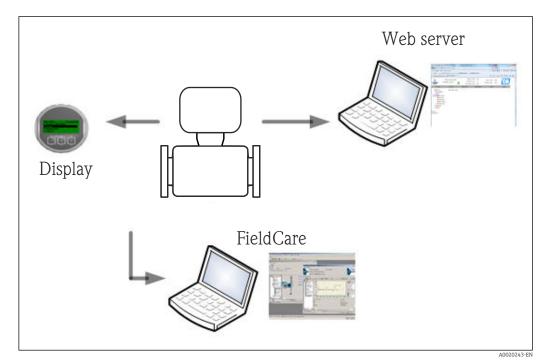

In addition, it is possible to access the function via the system integration interface, allowing the device to be used without onsite presence in the field. Via the process control system or asset management system, it is possible to periodically check the measuring point with a minimum amount of effort.

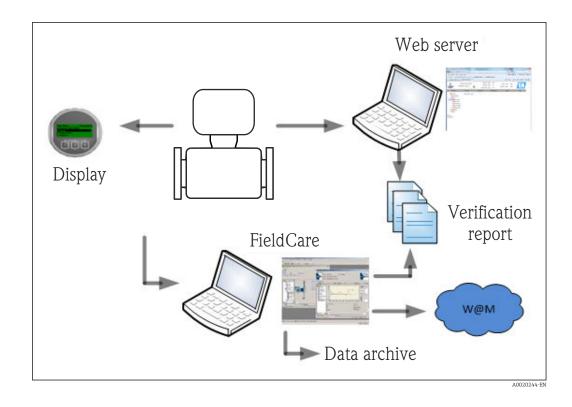

The creation of verification reports is supported by both the Web server integrated in the measuring device and Endress+Hauser's FieldCare asset management software. The FieldCare DTM module for verification also offers the possibility of archiving the verification results and reports to create traceable documentation.

W@M (Web-enabled asset management) from Endress+Hauser is an open information system for lifecycle management – device documentation and administration: project configuration, system integration, operation, maintenance and repair.

# 7.3 Heartbeat Verification – data management

The results of a **Heartbeat Verification** are saved as a non-volatile parameter set in the measuring device memory.

Eight storage areas are available for parameter sets.

New verification results overwrite older data on a "first in - first out" basis.

The results can be documented in the form of a verification report via the Web server and Endress+Hauser's FieldCare asset management software. In addition to the option of printing out the results in a verification report, FieldCare also offers a DTM for archiving the results of the verification. Furthermore, with FieldCare it is also possible to export data from these archives and to analyze trends in the verification results (line recorder function). For details see the "Description of the Verification-DTM" section.

## 7.3.1 Data management using Web server

#### Print verification report

Using the Web server, the menu for printing the verification reports can be accessed via the "Data management" tab. The information on "Customer" and "Location" can be entered in the relevant areas. The information entered here appears in the verification report.

In the "Select result dataset" area, the desired data set with verification results can be selected; verification data sets are referenced by time stamp in the drop-down menu.

If you select "VerificationReport.pdf", a verification report is generated in PDF format.

|              | Device name<br>Device tag<br>Actual diagnos. | Promag<br>Promag<br>Device OK | Output curr. 1<br>Volume flow<br>Conductivity | 0.00 | 00 mA<br>00 l/h<br>an μS/cm | Temperature<br>Mass flow<br>Correct.vol.flow | -nan °C<br>0.0000 kg/h<br>0.0000 NI/h | Endress+Hause    |
|--------------|--|-------------------------------|---|------|-----------------------------|--|---------------------------------------|------------------|
| Measured     | values                                       | Menu                          | Health status                                 |      | )ata managemen              | t  | Network                               | Logout (Service) |
| 🚞 Data mana  | gement                                       | Customer                      | Customer 1                                    |      |                             |  |                                       |                  |
| 🖻 📔 Device ( |  | Location                      | Plant #7                                      |      |                             |  |                                       |                  |
| E Docume     |  | Sel. result set               | 26.06.13 14:07                                | -    |                             |  |                                       |                  |
| Ver          | ific. report<br>ort backup                   | Download Verification Report  | VerificationReport.pdf                        |      |                             |  |                                       |                  |

#### Export of verification results

The verification results (raw data) can be exported to a CSV file using the "Backup export  $\rightarrow$  Export parameter" function. Clicking on "Parameters.csv" generates a file in CSV format. This format can be easily converted to a spreadsheet.

|             | Device name<br>Device tag<br>Actual diagnos. | Promag<br>Promag<br>Device OK | Output curr. 1<br>Volume flow<br>Conductivity | 4.00 mA<br>0.0000 l/h<br>-nan µS/cm | Temperature<br>Mass flow<br>Correct.vol.flow | -nan °C<br>0.0000 kg/h<br>0.0000 NI/h | Endress+Haus     |
|-------------|--|-------------------------------|---|-------------------------------------|--|---------------------------------------|------------------|
| Measured va | lues   | Menu                          | Health status                                 | Data management                     | t N  | letwork                               | Logout (Service) |
| Data manage | nfig.<br>ts                                  | Export Parameters Parame      | ters.csy                                      |                                     |  |                                       |                  |

# 7.3.2 Data management with Verification DTM

#### Description

A special DTM for **Heartbeat Verification** is also available in addition to the standard device DTM. This Verification-DTM offers advanced capabilities for performing the verification and managing the results.

Some extended functionalities can only be accessed via Service. This requires the user to enter the service code.

#### **Basic functions**

The following basic functions are provided:

|   |          | Start uploading the verification data sets from the measuring device to the asset management tool (FieldCare) |
|---|----------|---|
|   | A0020273 |   |
| D |          | Reset the DTM to the initial state  |
|   | A0020274 |   |
| 2 |          | Open saved archive files  |
|   | A0020275 |   |

| 3        | Save data sets to an existing archive file or initial saving of data sets to a new archive file |
|----------|---|
| A0020276 |   |
| 3        | Save the data sets under a new file name; a new archive file is created in this case            |
| A0020277 |   |
| 4        | Create a verification report in PDF format  |
| A0020278 |   |

#### DTM header

| Device TAG: Promag | The header refers to the top display area of the DTM. It contains information about the device TAG |
|--------------------|--|
| A0020887           |  |

#### "Upload" function

Upload the data from the measuring device to the asset management software. This is initiated via the  $\triangleq$  icon. This function transmits selected data sets, which are saved in the measuring device, to the asset management software and visualizes them.

| Device TAG: Promag  |                           | Verification: 🔽                          |                   |            | Endress+Hau | Jse |
|---|---------------------------|--|-------------------|------------|-------------|-----|
| ∃ 🗖 🖬 🗅 🚔 📙 👹 🗙 📴 Q. 💩  |                           |  |                   |            |             |     |
|   |                           | graphic Description Settings             |                   |            |             |     |
| Verification1_2013-06-26_15-06-09                               | Verification re           | sult 79AFFF16000 - Promag 0006 Passed    |                   |            |             |     |
| T9AFFF16000 - Promag     Promag     C:\ProgramData\Endress+Haus | Ct-sh                     |  | Init Simul Signal | Min. Value | Max. Value  |     |
| Promag     C:\ProgramData\Endress+Haus                          | TTTT THE REAL PROPERTY OF | fication DTM\Verification1_2013-06-26_1  | 00-00-09.EHV      |            |             |     |
|   |                           | Sensor                                   |                   |            |             |     |
| 0001 Failed<br>0002 Failed                                      |                           | Coil current shot time                   | 1.0002            |            |             |     |
| 0003 Failed   |                           | Coil hold voltage                        | 0.9922            |            |             |     |
| 0003 Failed<br>0004 Failed                                      |                           | Coil current                             | 1.0048            |            |             |     |
| 0005 Passed   |                           | Sensor electronic module                 |                   |            |             |     |
| V 0006 Passed   |                           | Reference voltage                        |                   |            |             |     |
| 0007 Not read   |                           | Actual reference voltage drift 1         | 1.0000            |            |             |     |
| 0008 Not read   |                           | Actual reference voltage drift 2         | 1.0000            |            |             |     |
| -   |                           | Linearity of electrode measuring circuit |                   |            |             |     |
|   |                           | Actual linearity for operation point 1   | 0.9997            |            |             |     |
|   |                           | Actual linearity for operation point 2   | 0.0142            |            |             |     |
|   |                           | Actual linearity for operation point 3   | 1.0000            |            |             |     |
|   |                           | Actual linearity for operation point 4   | 0.0138            |            |             |     |
|   |                           | Offset of electrode measuring circuit    | 1.8907            |            |             |     |
|   |                           | I/O module                               |                   |            |             | _   |
|   |                           |  |                   |            |             |     |


#### Verification results

Details for the verification results are displayed in the "Data area". The data area is split into three tabs:

- "Results": Status, test group and detailed results including limit values
- "Data graphic": Visualization of results as a trend curve
- "Description": Additional descriptions and information entered by the user

#### Saving to an archive file

Once uploaded, the data can be saved to an archive file. This is initiated via the 🖬 or 📓 icons, and a file with the extension ".EHV" is generated. This file is used to archive the data. It can be read and interpreted by every asset management system with an installed Verification-DTM and is therefore also suitable for analysis by a third party (e.g. Endress +Hauser service organization).

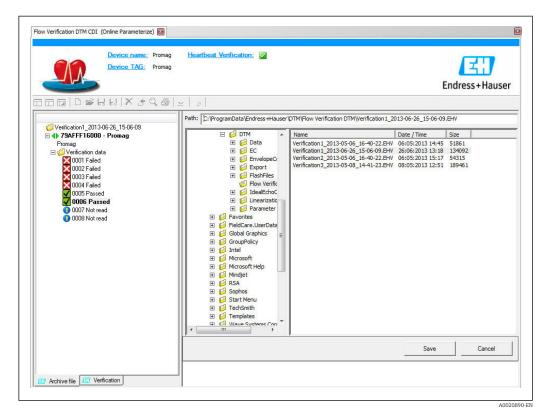

**Opening archive files** 

Archive files that are already available can be opened via the  $\ge$  function. Here the archive data are loaded in the Verification-DTM.

#### Visualization and trend analysis

The verification data can be visualized in the "Data graphic" tab in the data area. The data saved in the archive are visualized as a graph over time. For this purpose, any of the data available can be selected.

Selection

Select the desired parameters using a parameter list.

| Device name: Prom   | ·  |                  | Endress+   | -     |
|---|--|------------------|--|-------|
|   | 🖥 🖃 🕑 🔽 Promag 💽 🖈 🔆 🔍   | ର୍ 🗌 🌬           |  |       |
|   | Result Datagraphic Description Settings  |                  |  |       |
| <ul> <li>Verification1_2013-06-26_15-06-09</li> <li>TSAFFF16000 - Promag</li> <li>Verification data</li> </ul>  | Template settings "Promag "<br>Selection   Parameter settings   XY axis settings   M<br>Parameters   | iew template     |  |       |
| 0001 Failed   | Available  | >                | Selected parameters  |       |
| 0003 Failed     0004 Failed     0004 Failed     0009 Passed     0006 Passed     0007 Not read     0008 Not read | Volume flow value verification<br>Conductivity value verification<br>Process temperature value verification<br>Coll hold voltage<br>Coll current<br>Actual reference voltage drift 1<br>Actual reference voltage drift 2<br>Actual linearity for operation point 1<br>Actual linearity for operation point 2<br>Actual linearity for operation point 3<br>Actual linearity for operation point 4 | × × ×            | Electronic temperature<br>Coli current shot time<br>Offset of electrode measuring drouit |       |
|   | Parameter limits   |                  | 1  |       |
|   | Show lower range   | ſ                | Show upper range   |       |
|   |  |                  | Update template C  | ancel |
|   | Save your changes by clicking "Update template" or b   | y creating a new | template.  |       |

# Parameter settings

Assign properties for visualization in the graph.

| Verification1_2013:06:26_15:06:09     Verification1_2013:06:26_15:06:09     Promag     Promag     Out1 Failed     0001 Failed     00013 Failed     0003 Failed     Codd     Codd     Codd | Promag     Y     Promag     Y     Promag     Y     Patagraphic     Description     Settings     ate settings     "Promag     "     ton     Parameter settings     XY axis setting     sarance     acted parameters     tronic temperature     current shot time     set of electrode measuring circuit | ngs New template Display<br>Display<br>Line thickness: 1<br>Line color:<br>Background color: |
|---|--|--|
|   |  | Printer Line thickness: 1  Line color: Background color:                                     |
|   | our changes by clicking "Update template   | Update template Cano   |

Y-axis settings

Assign the parameters of the Y-axis.

| Device name; Proma<br>Device TAG: Proma  |   | Endress+Hause          |
|--|---|------------------------|
| Image: Constraint of the second s | Image: Second Second Second Section Section Sections         Image: Second Second Second Second Second Section Sections         Image: Second S |                        |
|  |   | Update template Cancel |

## Update template or create new template


Add a selected parameter configuration to the template or save under a new template name.

| Device name: Pror<br>Device TAG: Pror |  |               | ss+Haus |
|---------------------------------------|--|---------------|---------|
|                                       | 臺│业│୬│Promag 🚽 > 井 墩 象 ミ → №   |               |         |
|                                       | Result Datagraphic Description Settings  |               |         |
| Verification1_2013-06-26_15-06-09     | Template settings "Promag "  |               |         |
| Promag                                | Selection Parameter settings XY axis settings New template                     |               |         |
| E 💋 Verification data                 | Save template  |               |         |
| 0001 Failed<br>0002 Failed            | C Update template "Promag "  |               |         |
| 0003 Failed                           | Save as new template   |               |         |
| 0004 Failed<br>0005 Passed            | Name New Template  |               |         |
| 0006 Passed                           |  |               |         |
| 0007 Not read 0008 Not read           |  |               |         |
|                                       |  |               |         |
|                                       |  |               |         |
|                                       |  |               |         |
|                                       |  |               |         |
|                                       |  |               |         |
|                                       |  |               |         |
|                                       |  |               |         |
|                                       |  |               |         |
|                                       |  |               |         |
|                                       |  |               |         |
|                                       |  | Save template | Cancel  |
|                                       | Save your changes by clicking "Update template" or by creating a new template. |               |         |

A0020895-EN

#### Trend visualization

The template shows the data in chronological order. The data points are referenced by the verification ID (X-axis), the Y-axis displays the parameters defined in the configuration.

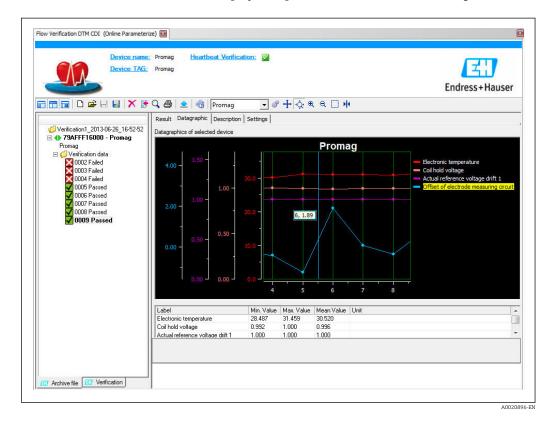

#### Creating a verification report

A data set can be selected using the 🗿 function and used to create a verification report.

# 7.4 Modules

Self-monitoring of the measuring device using Heartbeat Technology comprises the measuring chain from the sensor to the outputs. The table below lists the individual modules (test groups) and possible and recognized causes of errors.

#### Sensor module

| Sensor module/test group | Test and recognized causes of errors   |
|--------------------------|--|
| Sensor                   | <ul><li>Electrical testing of excitation system</li><li>Testing of coil current with regard to leak current</li><li>Testing of symmetry of coil current shot times and their required voltages for both field polarities</li></ul> |
|                          | Establishing<br>• an external magnetic field<br>• Impermissible leak current caused by moisture inside the sensor  |

#### Electronics module

| Electronic module/test group | Test and recognized causes of errors   |
|------------------------------|--|
| Sensor electronic module     | <ul> <li>Testing</li> <li>Monitoring of zero point, gain and linearity of measuring circuit in sensor electronic module</li> <li>Redundant reference voltage monitoring for measuring and exciter circuit in sensor electronic module</li> </ul> |
|                              | Detection of drift and aging of electronic components due to<br>environmental or process influences (temperature, vibration etc.).   |
| I/O module                   | Internal verification<br>Signal feedback in 4 to 20mA HART current output:<br>Detection of drift and aging due to environmental or process influences<br>(temperature, radiation, vibration etc.).   |
|                              | <b>External verification</b><br>External testing of all active outputs at the measuring device.  |

# 8 Application examples

# 8.1 Diagnostics

For information about the standard functions, see the "Diagnostics and troubleshooting" section of the Operating Instructions.

# 8.2 Condition Monitoring

## 8.2.1 Definition of Condition Monitoring

→ 🗎 8

## 8.2.2 Focus and target applications

Condition Monitoring focuses on measured variables which indicate a change in the performance of the measuring device brought about by process-specific influences. There are two difference categories of process-specific influences:

- Transient process-specific influences that impact the measuring function directly and therefore result in a higher level of measuring uncertainty than would normally be expected (e.g. measurement of multiphase fluids). These process-specific influences generally do not affect the integrity of the measuring device but do impact measuring performance temporarily.
- Process-specific influences which only impact the integrity of the sensor over the medium term but which also bring about a gradual change in the measuring performance. These influences also affect the integrity of the measuring device on the long term.

Flowmeters with **Heartbeat Monitoring** offer a range of parameters that are particularly suitable for monitoring specific, application-related influences. These target applications are:

- Magnetite-containing media
- Multi-phase fluids (gas content in liquid fluids)
- Applications in which the sensor is exposed to a programmed amount of wear
- Applications with cathodic protection systems
- Applications with pipes that are not grounded

The results of Condition Monitoring must always be interpreted in the context of the application. The parameters available with **Heartbeat Monitoring**, however, display a specific behavioral pattern for the applications listed above. This is explained in greater detail in the following chapters.

# 8.3 Heartbeat Monitoring

The benefits of **Heartbeat Monitoring** are in direct correlation with the recorded data selection and their interpretation. Good data interpretation is critical for deciding whether a problem has occurred and when and how maintenance should be scheduled/performed (good knowledge of the application is required). The elimination of process effects that cause misleading warnings/interpretation must also be ensured. For this reason it is important to compare the recorded data against a process reference.

## 8.3.1 Overview

This section describes the interpretation of certain monitoring-specific parameters in the context of the application.

| Monitoring parameter                        | Possible reasons for deviation   |
|---|--|
| Noise                                       | A change can be an indicator of multi-phase media (gas content in liquid<br>media or a change in the solids content of the medium) or changing<br>electrical conductivity. This value allows conclusions to be drawn about<br>the process.     |
| Coil current shot time                      | At constant process temperatures, a change can indicate a possible<br>buildup of magnetite or an increase in the magnetite content of the<br>medium. Strong external magnetic fields influence this value too.                                 |
| Reference electrode potential<br>against PE | This diagnostic value describes the voltage between the medium and the protective ground. This value is of significance if the measuring system with the reference electrode contacting the medium is disconnected from the protective ground. |

# 8.4 Heartbeat Verification

### 8.4.1 Scope of the test

**Heartbeat Verification** uses the self-monitoring function of the Proline flowmeters to check the measuring device functionality. During the verification process, the system checks whether the measuring device components comply with the factory specifications. Both the sensor and the electronic modules are included in the tests.

Compared to flow calibration, which incorporates the entire measuring device and assesses the flow measuring performance directly (primary measured variable), **Heartbeat Verification** checks the function of the measuring chain from the sensor to the outputs.

Here, the function checks device-internal parameters that are correlated with flow measurement (secondary measured variables, comparative values). The check is based on reference values that were recorded during the factory calibration.

## 8.4.2 Interpreting and using the verification results

If a verification is passed, this confirms that the comparison values that are checked are within the factory specification and that the measuring device is working correctly. At the same time, the zero point and calibration factor of the sensor are documented and traceable in the verification report. To ensure that the measuring device complies with the factory specification, these values must correspond to those of the last calibration or repeat calibration.

Confirmation with 100% total test coverage for compliance with the flow specification can only be achieved through validation of the primary measured variable (flow) by means of recalibration or proving.

Recommended course of action if the result of a verification is "Failed": If the result of a verification is "Failed", it is advisable to begin by repeating verification. This applies in particular if the individual tests of the "Sensor" test group are affected, as a process-specific influence is then possible.

In this case, it is advisable to compare the current process conditions to those of a previous verification to identify any deviations. To inhibit process-related influences as much as possible, the ideal solution is to create defined and stable process conditions and then to repeat verification:

Stabilize or stop flow, ensure that process temperature is stable, drain the sensor if possible.

Recommended remedial action if the result of the verification is "Failed":

- Calibrate the measuring device The calibration has the advantage that the "as found" measuring device state is recorded and the actual measured error is determined.
- Direct remedial measures

Take remedial action on the basis of the verification results and the diagnostic information of the measuring device. Narrow down the possible cause of the error by identifying the test group that failed the verification.

| Test group               | Possible cause of error and recommendation   |
|--------------------------|--|
| Sensor                   | <ul> <li>Electrical components of the sensor (signals, circuits and cables):</li> <li>Wiring for remote installation</li> <li>Grounding of sensor</li> <li>Defect in the sensor → replace</li> </ul>                   |
| Sensor electronic module | Electronic module for exciting the sensor and converting Electronic module drift or defect $\rightarrow$ replace   |
| I/O electronics module   | <ul> <li>Results of all the input and output modules installed on the measuring device</li> <li>Check wiring and connections, check the load (current output)</li> <li>I/O module drift or defect → replace</li> </ul> |
| System condition         | Test for active measuring device errors of "alarm"-type diagnostic behavior.<br>For information on the diagnostic behavior, see the "Diagnostics and troubleshooting" section of the Operating Instructions.           |

For more information on other possible causes and remedial measures, see the "Diagnostics and troubleshooting" section of the Operating Instructions.

# 9 Glossary and terminology

| Measuring device          | Flowmeter in its entirety   |
|---------------------------|---|
| Sensor                    | Entire sensor system. This comprises the measuring tube, the electrodynamic pick-<br>ups, the excitation system, the wiring, the temperature sensors etc. inside the<br>sensor housing.   |
| FieldCare                 | Software-based asset management system from Endress+Hauser. FieldCare is used for the documentation and analysis of the verification results.   |
| In-situ                   | An in-situ check implies that the measuring device does not need to be removed from the application in order to perform the specific check. A reference condition can be established during the in-situ check (e.g. measuring tube filled with water or empty pipe condition). The test is usually performed on demand (e.g. <b>Heartbeat Verification</b> ).   |
| Internal references       | Heartbeat Technology based on references that are incorporated into the measuring device (flowmeter electronics). References are technology-specific.   |
| Flow calibration          | This is the process which establishes a relation between the values of a flow standard (also known as a calibration rig) with its known measuring uncertainties, and the corresponding values of the flowmeter with its associated measuring uncertainties.  Calibration may be performed with or without adjustment of the calibration factor.   |
| Verification              | This involves proving that a flowmeter complies with manufacturer specifications regarding functionality. It also serves as confirmation that the technical characteristics of the measuring device have been implemented, thereby increasing confidence in the measured variable (flow).   |
| Validation                | A verification, whereby the manufacturer specifications are deemed adequate for the intended application.   |
| Heartbeat Verification    | A dedicated embedded instrumentation, the objective of which is to monitor the functionality of different components of the flowmeter in accordance with manufacturer specifications. It uses internal diagnostic tools to check flowmeter functionality based on factory references and corresponding specifications.<br>Heartbeat Verification is not a calibration system.   |
| Verification report       | Document in which the results of the <b>Heartbeat Verification</b> are recorded.  |
| Data set                  | A data set permanently saves a collection of information that comprises the verification results, including the ID, time stamp, device parameters etc. A range of <b>Heartbeat Verification</b> data sets are stored internally in Proline flowmeters.  |
| Metrological traceability | Characteristic of a measurement result based a reference using a documented and unbroken chain of calibrations.  Each of these calibrations must be linked either to an international measurement standard or a national measurement standard for the intended quantity, in order to have a measuring uncertainty, a clear measurement procedure, accredited technical competence, metrological traceability to the SI (international system of units) and defined calibration intervals. |
| Condition Monitoring      | The concept of Condition Monitoring is based on regular or continuous recording of<br>the system status by measuring and analyzing meaningful measured variables. For<br>the purpose of Condition Monitoring, <b>Heartbeat Monitoring</b> continuously<br>provides measured variables in an external condition monitoring system.   |

# 10 Registered trademarks

## HART®

Registered trademark of the HART Communication Foundation, Austin, USA

## **PROFIBUS**®

Registered trademark of the PROFIBUS User Organization, Karlsruhe, Germany

#### Modbus®

Registered trademark of SCHNEIDER AUTOMATION, INC.

#### **PROFINET**®

Registered trademark of the PROFIBUS User Organization, Karlsruhe, Germany

#### EtherNet/IP<sup>TM</sup>

Trademark of ODVA, Inc.

#### **Microsoft**®

Registered trademark of the Microsoft Corporation, Redmond, Washington, USA

**Applicator<sup>®</sup>**, **FieldCare<sup>®</sup>**, **Field Xpert<sup>™</sup>**, **HistoROM<sup>®</sup>**, **Heartbeat Technology<sup>®</sup>** Registered or registration-pending trademarks of the Endress+Hauser Group

www.addresses.endress.com

