

















## Technical Information

# Stamolys CA71CU

# Copper analyzer

Compact photometric analysis system for copper measurement in industrial applications



## Application

- Copper monitoring in industrial sewage treatment plants
- Copper monitoring in process industry

### Your benefits


- Stainless steel or glass-fibre reinforced carbon housing available
- Two channel version available
- Measured value storage using integrated data logger
- Automatic calibration and self-cleaning
- Free selectable measuring, cleaning and calibration intervals

## Function and system design

### Measuring principle

After sample conditioning, the analyzer sample pump conveys a part of the filtrate to a mixing vessel. The reagent pump adds reagent at a specific ratio. As a result of the reaction, the sample turns a characteristic colour. The photometer determines the sample's absorption of an emitted light at a specific wavelength (s. Fig., Pos. 2). The wavelength is parameter specific. The absorbance is proportional to the concentration of the specified parameter in the sample (Pos. 3). Additionally, the absorption of a reference light is determined to receive a genuine measuring result. The reference signal is subtracted from the measuring signal to prevent any effects due to turbidity, contamination and ageing of the LEDs.

The temperature in the photometer is controlled thermostatically so that the reaction is reproducible and takes place within a short period of time.

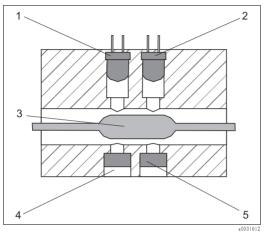

- 1 Reference LED
- 2 Emitter LED
- 3 Sample
- 4 Reference detector
- Measuring detector

Photometric principle

### Copper

Copper is contained in many minerals as an accompanying element. The copper concentration in natural bodies of water, on the other hand, is zero. Increased concentrations of copper in water arise from industrial wastes, landfill leachate and wastewater from copper pipes.

Copper is mainly used in industry in the Electronics Industry (printed circuit board production) and in electroplating. Wastewater arising from these processes demonstrates a high copper content.

Copper is not seen as dangerous substance for human beings. Concentrations above 1 mg/litre in water do.

however, cause a bitter taste and higher doses of such water can lead to vomiting and liver damage. Copper has a strong dampening effect on the micro-organisms used in aerobic waste water treatment. It also has a toxic effect in the digestion tank which does, however, disappear rapidly after the formation of copper sulphide.

# Photometric copper determination

## Cuprizone method

Under alkaline conditions cuprizone and  $Cu^{2+}$  form a blue complex.

With this method only  $Cu\ (II)$  ions can be determined. Complex bonded copper and  $Cu\ (I)$  ions cannot be determined.

The absorption is determined at a wavelength of  $565\,\mathrm{nm}$ . The absorption intensity is proportional to the copper concentration in the sample.

The reference wavelength is 880 nm.

#### Interferences

No interferences up to the given concentration:

Concentration [mg/l]	Interference
90,000	Na+, Cl-
60,000	K +
30,000	F-
10,000	Mg <sup>2+</sup>
1,500	Ca <sup>2+</sup>
140	Mn <sup>2+</sup>
110	Cr (VI)
100	Co <sup>2+</sup>
60	Ni <sup>2+</sup> , Al <sup>3+</sup>
10	Cd <sup>2+</sup>
6	Fe <sup>2+</sup>
3	Pb <sup>2+</sup> , Hg <sup>2+</sup>

## Sample conditioning

### Micro/ultrafiltration (Stamoclean CAT430, optional)

A membrane filter element is suspended directly into the wastewater basin or channel. A hose pump is located in a pump box on the basin rim. The pump creates a vacuum between the membrane and the carrier plate of the filter element. This vacuum makes the filtrate pass through the filter membrane. Suspended materials, particles, algae and bacteria are collected on the surface of the membrane.

Due to alternating pumping and pause, intervals of more than one month are achieved between cleaning cycles. Parallel connection of two or four filter elements increases the sampling quantity up to approx. 1 l/h. The hose pump pressure transports the sample to a collecting vessel near the analyzer over a distance of 20 m. For distances up to 100 m the sample is transported to the collecting vessel by means of compressed air. The analyzers suck the needed sample volume from the collecting vessel.

## Membrane filtration (Stamoclean CAT411, optional)

A sample flow of 0.8 to  $1.8 \, \text{m}^3/\text{h}$  is continuously conducted through the micro filter via a pressure pipe. A part of the sample passes the filter membrane and is then conveyed to the measuring device as filtrate. Sampling is based on the cross flow filtration principle. The PTFE filter membrane separates particles with sizes

> 0.45  $\mu m$  from the filtrate. These particles are collected in front of the membrane and are washed away with the sample flow.

The medium is conducted in a meander-like channel through the filter element. This results in a constantly high flow rate. The high flow rate generates the self cleaning effect. Therefore, mechanical drives for the generation of a flow at the filter surface are not necessary.

## Backwash filter (Stamoclean CAT221, optional)

A sample flow of 1 to  $2.5~\text{m}^3/\text{h}$  is permanently conveyed through the backwash filter by means of a sampling pump or compressed air or rinse water. The filtrate passes through the wedge wire sieve and is then transported to the measuring device.

Clogging is minimized by the flow at the wedge wire sieve. Automatic backwashing results in a filter operating time of several weeks.

The automatic backwashing and a small compressor or compressed air resp. rinse water supply guarantee low-maintenance and low-energy operation.

## Customer specific solution


Before analysis, the sample has to be conditioned and to be transported to an external or to the delivered collecting vessel.

### Measuring system

A complete measuring system comprises:


- An analyzer
- A sample conditioning system (optionally):
  - Micro filtration / ultra filtration Stamoclean CAT430 or Stamoclean CAT411
  - Backwash filter Stamoclean CAT221
  - Customer specific solution
- Collecting vessel (see product structure)

## Micro / ultra filtration

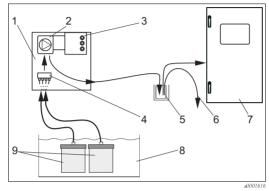

Measuring system with Stamoclean CAT430


- 1 Control box
- 2 Pump
- 3 Control unit
- 4 Collecting unit (optional)
- 5 Collecting vessel
- 6 Overflow
- 7 Analyzer
- 8 Aeration basin
- 9 Membrane filter

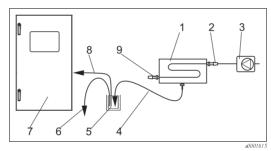

Measuring system with Stamoclean CAT411

- Stamoclean CAT411
- 2 Inlet
- 3 Sample pump or hydraulic main
- 4 Filtrate line
- 5 Collecting vessel
- 6 Overflow
- 7 Analyzer
- 8 Analyzer sample line
- 9 Outlet

## Backwash filter

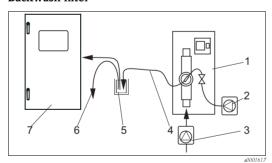

Measuring system with Stamoclean CAT221

- Stamoclean CAT221
- 2 Compressor or compressed air
- 3 Sample pump or hydraulic main
- 4 Sample outlet
- 5 Collecting vessel
- 6 Overflow
- 7 Analyzer

# Input

Measured variable	Cu (II) [mg/l]	
Measuring ranges	0.10 2.00 mg/l (CU-A) 0.20 5.00 mg/l (CU-B)	
Wavelength	565 nm	
Reference wavelength	880 nm	

# Output

Output signal	0/4 20 mA
Signal on alarm	Contacts: 2 limit contacts (per channel), 1 system alarm contact optional: end of measurement (with two channel version display of channel no. available)
Load	max. 500 $\Omega$
Data interface	RS 232 C
Data logger	1024 data pairs per channel with date, time and measured value 100 data pairs with date, time and measured value for calibration factor determination (diagnostic tool)
Load capacity	230 V / 115 V AC max. 2 A, 30 V DC max. 1 A

## Power supply

### **Electrical connection**



## Caution!

The following figure ( $\rightarrow \square$  1) shows the connection department sticker as an example. Terminal assignment and cable core colors can be different to the originals.

For connecting your analyzer only use the terminal assignment of the connection department sticker in the device  $(\rightarrow \bigcirc 2)!$ 

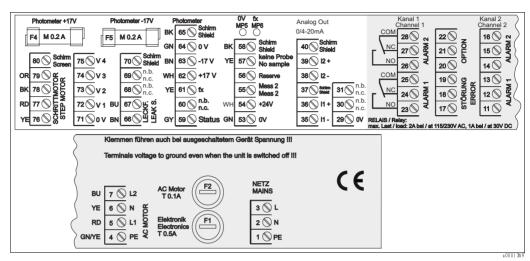


Fig. 1: Example of the connection sticker

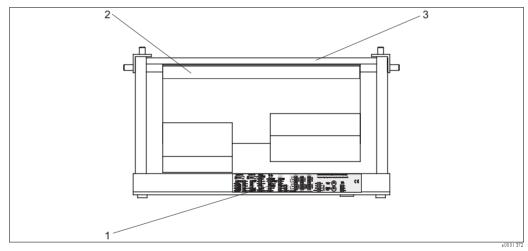


Fig. 2: Analyzer from top (open version resp. swung out)

- 1 Connection department sticker
- 2 Printed circuit board with terminal strip
- 3 Backside of the analyzer

Supply voltage	115 V AC / 230 V AC ±10%, 50/60 Hz				
Power consumption	approx. 50 VA				
Current consumption	approx. 0.2 A at 230 V approx. 0.5 A at 115 V				
Fuses	1 x time-lag 0.5 A for electronics 2 x medium time-lag 0.2 A for photometer 1 x time-lag 0.5 A for motors				

6

# Performance characteristics

Time between two measurements	$t_{mes} = reaction \; time + rinse \; time + waiting \; time + rinse \; again \; time + filling \; time + sampling \; time + reagent \; refusal \; time \; (min. \; waiting \; time = 0 \; min)$				
Maximum measured error	±2 % of measuring range end				
Measuring interval	t <sub>mes</sub> to 120 min				
Reaction time	2 minutes				
Sample requirement	15 ml (0.004 US.gal.) per measurement				
Reagent requirement	2 x 0.21 ml (0.000055 US.gal) 0.91 l (0.24 US.gal) per reagent per month with 10 minute measuring interval				
Calibration interval	0 to 720 h				
Rinse interval	0 to 720 h				
Rinse time	selectable from 20 to 300 s (standard = 60 s)				
Rinse again time	30 s				
Filling time	22 s				
Maintenance interval	6 months (typical)				
Servicing requirement	15 minutes per week (typical)				

# **Environment**

Ambient temperature	5 40 °C (41 104 °F), avoid strong fluctuations				
Humidity	below the condensation limit, installation in usual, clean rooms outdoor installation only possible with protective devices (customer supplied)				
Ingress protection	IP 43				


# **Process**

Sample temperature	5 to 40 °C (41 to 104 °F)
Sample flow rate	min. 5 ml (0.0013 US.gal.) per min
Consistence of the sample	low solid content (< 50 ppm)
Sample inlet	pressureless

## Mechanical construction


## Design, dimensions

## Stainless steel housing

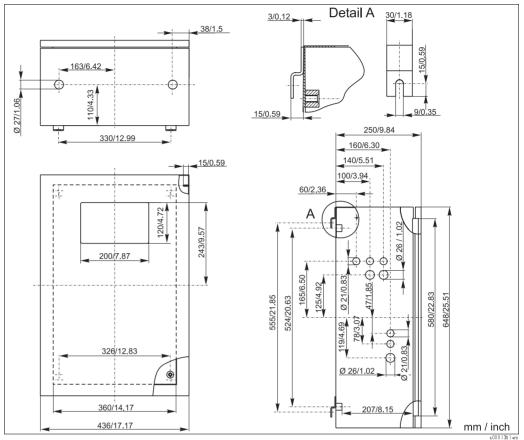


Stainless steel version

## **GFR** housing

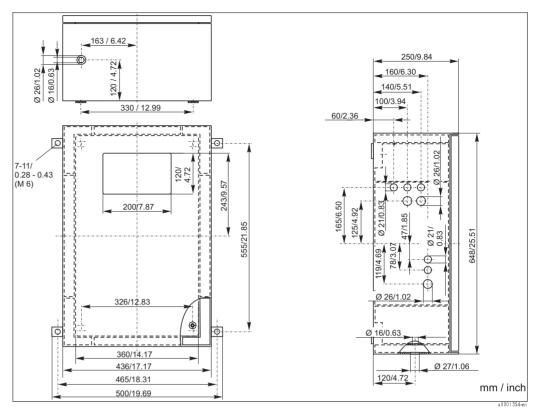

GFR version

## Open version

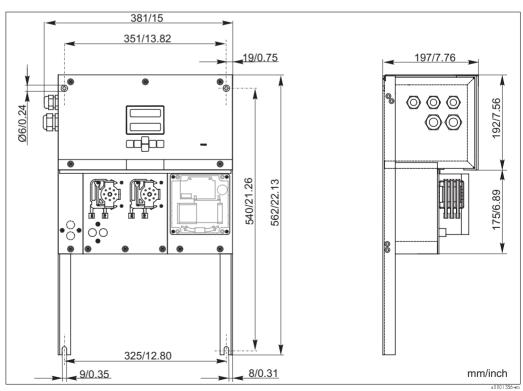

Open version (without housing)




#### Note!

With the open version, you need an additional platform for the reagents. Mount this platform max. 35 cm (14 inch) below the pumps. The reagent bottels have the following dimensions:  $90 \times 90 \times 215 \text{ mm}$  (3.54 x 5.54 x 8.46 inch). The number of bottles varies from 2 to 5 depending on the analyzer version.

For some versions, the outlet pipe must be installed right of the analyzer. See the supplement to the Operating Instructions.

The outlet pipe must be mounted to a wall so that the sample outlet hoses from the photometer have a gradient of 5 to 10 %. If neccessary, extend the hoses.

## Collecting vessel

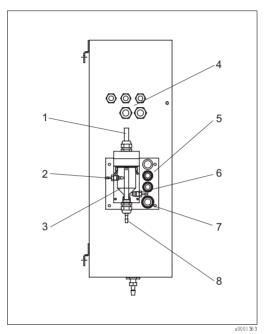

4 x Ø 6.6 Ø 34/25 4 x Ø 5.5/10.4 Ø 56 Ø 50H7 Ø 24

Collecting vessel at analyzer (optional)

- Ventilation
- Sample inlet from sampling 2
- Collecting vessel 3
- 4 Electrical connections
- Analyzer sample inlet

Collecting vessel dimensions

- variable, freely adjustable dimensions
- 6 Sampling for analyzer
- Analyzer outlet
- 8 Sample overflow

Weight	GFR
	Stain

housing approx. 28 kg (61.7 lb) less steel housing approx. 33 kg (72.8 lb) Without housing approx. 23 kg (50.6 lb)

### Material

Housing: Stainless steel 1.4301 (AISI 304) or

glass-fibre reinforced carbon(GFR)

Polycarbonate<sup>®</sup> Front windows: C-Flex®, Norprene® Endless hose: Tygon®, Viton® Pump hose: Tygon<sup>®</sup>, silicone Valves:

## Connecting the sample line

#### One channel version

Collecting vessel (at analyzer, with or without level measurement)

Connection hose ID 3.2 mm (0.13")

Customer collecting vessel

Connection hose ID 1.6 mm (0.06")

Max. distance from collecting vessel to analyzer 1 m (3.28 ft) Max. height difference from collecting vessel to analyzer 0.5 m (1.64 ft)

#### Two channel version

- Depending on the ordered version, one or two collecting vessels (with or without level measurement) are included in the scope of delivery.
- Level measurement is only possible for one channel.
- Only one collecting vessel can be mounted at the housing. The second is to be placed nearby the analyzer.

### Sample outlet

Connection Hose ID 6.4 mm (0.25")

 $-\,$  Max. length of closed loop: 1 m (3.28 ft)


- Open outlet downgrade installed

- No combination of several devices to a closed-loop system

Min. volume per measurement 20 ml (0.005 US.gal.)

## **Human Interface**

# Display and operating elements

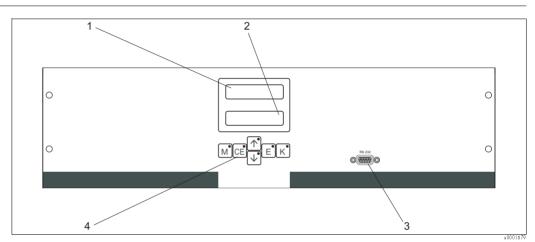

Display and operating elements

- 1 LED (measured value)
- 2 LC display (measured value and status)
- 3 Serial interface RS 232
- 4 Operating keys and control LEDs

## Certificates and approvals

## C € approval

## **Declaration of conformity**

The product meets the legal requirements of the harmonised European standards. The manufacturer confirms compliance with the standards by affixing the CE symbol.

## Test reports

## **Quality** certificate

Depending on the order code, you receive a quality certificate.

With the certificate the manufacturer confirms compliance with all technical regulations and the successful individual testing of your product.

## Ordering information

#### Product structure

	Meas	uring r	uring range					
	A		0.1 2 mg/l Cu					
	В	0.2 :	0.2 5 mg/l Cu					
	Y	Special	version	acc. to o	customer	's specifi	ication	
		Samp	le tran	sfer				
		1	From c	ne meas	suring po	oint (one-	-channel	version)
		2	From t	wo meas	suring po	oints (tw	o-ch ann	el version)
			Powe	r supp	ly			
			0		AC / 50			
			1		AC / 60			
			2		AC / 50			
			3	230 V	AC / 60	Hz		
				Collecting vessel for up to 3 analyzers				
				Α		ıt collect	0	
				В		_		vithout level measurement
				C		_		with level measurement (one-channel version only)
		l		D	With to	wo colle	cting ves	sels without level measurement (two-channel version)
					Hous	ing ver		
					1		ıt housin	9
					2 With GFR housing			
					With stainless steel 1.4301 (AISI 304) housing			
				Communication				
		ļ		ļ		A	0/4	20 mA, RS 232
							Addit	ional equipment
							1	Quality certificate
							2	Quality certificate + set of inactive reagents
							3	Quality certificate + three sets of inactive reagents
CA71CU -								complete order code

## Scope of delivery

The scope of delivery comprises:

- an analyzer with mains plug
- a cleaning injector
- a tin of silicone spray
- a Norprene hose, length 2.5 m (8.2 ft), ID 1.6 mm (0.06")
- **a** C-flex hose, length 2.5 m (8.2 ft), ID 6.4 mm (0.25")
- **a** C-flex hose, length 2.5 m (8.2 ft), ID 3.2 mm (0.12")
- two hose fittings of each size:
  - 1.6 mm x 1.6 mm (0.06" x 0.06")
  - 1.6 mm x 3.2 mm (0.06" x 0.12")
  - 6.4 mm x 3.2 mm (0.25" x 0.12")
- two T-hose fittings of each size:
  - 1.6 mm x 1.6 mm x 1.6 mm (0.06" x 0.06" x 0.06")
  - 3.2 mm x 3.2 mm x 3.2 mm (0.12" x 0.12" x 0.12")
- 4 edge covers
- a quality certificate
- Operating Instructions (English).



#### Note!

Please, order reagents separately with analyzer version CA71XX-XXXXXX1.

With all other versions, inactive reagents are included in the scope of delivery. You have to mix the reagents before using them. Please, read the instructions attached to the reagents.

# Accessories

Reagents and standard solutions	<ul> <li>Reagent set active, 1 l reagents CU1+CU2 each; order no. CAY850-V10AAE</li> <li>Reagent set inactive, 1 l reagents CU1+CU2 each; order no. CAY850-V10AAH</li> <li>Standard solution 1 mg/l Cu; order no. CAY852-V10C10AAE</li> <li>Standard solution 2 mg/l Cu; order no. CAY852-V10C20AAE</li> </ul>
Cleaner for hoses	<ul> <li>Cleaning agent, alkaline, 100 ml; order no. CAY746-V01AAE</li> <li>Cleaning agent, acidic, 100 ml; order no. CAY747-V01AAE</li> </ul>
Collecting vessel	<ul><li>for sampling from pressurised systems</li><li>results in an unpressurised continuous sample stream</li></ul>
	<ul> <li>Collecting vessel without level measurement; order no. 51512088</li> <li>Collecting vessel with level measurement (conductive); order no. 51512089</li> </ul>
Maintenance kit	<ul> <li>Maintenance kit CAV 740:</li> <li>1 set pump hoses yellow/blue</li> <li>1 set pump hoses black/black</li> <li>1 set hose connectors per hose set order no. CAV 740-1A</li> </ul>
Additional accessories	<ul> <li>Interference suppressor for control, power and signal lines order no. 51512800</li> <li>Silicon spray order no. 51504155</li> <li>Valve set, 2 pieces, for two-channel version order no. 51512234</li> <li>Upgrade kit for upgrading from one-channel to two-channel version order no. 51512640</li> </ul>

## **Documentation**

- Technical Information Stamoclean CAT430, TI 338C/07/en
- Technical Information Stamoclean CAT411, TI 349C/07/en
   Technical Information Stamoclean CAT221, TI 384C/07/en

14 Endress + Hauser

## **International Head Quarters**

Endress+Hauser GmbH+Co. KG Instruments International Colmarer Str. 6 79576 Weil am Rhein Deutschland

Tel. +49 76 21 9 75 02 Fax +49 76 21 9 75 34 5 www.endress.com info@ii.endress.com

TI359C/07/en/04.05 51512298 Printed in Germany / FM+SGML 6.0 / DT

