## Multi Parameter Sensor MultiSens C600 XL

# Immersion Sensor for Conductivity, Temperature, Oxygen, pH and Redox Measurement





















#### **Application**

MultiSens C600 XL is a multi parameter sensor for conductivity, temperature, oxygen, pH and redox measurement. The sensor is specifically suitable for the following applications:

- River monitoring
- Lake monitoring
- Monitoring of fish farming
- Drinking water and groundwater monitoring
- Industrial monitoring
- Monitoring of wastewater treatment plants

#### Your benefits

- Simultaneous monitoring of up to 6 parameters
- Measurement in fresh water as well as in salt water, brackish water or sewage water
- Measurement up to a depth of 60m / 196.9 ft
- 2 selectable measuring units for oxygen measurement (mg/l; % Sat)
- Internal data logger





### Function and system design

#### Measuring principles

The Multi Parameter Sensor C600 XL uses the following measuring principles:

#### Conductive conductivity measurement

The conductivity of liquids is measured with a 4-pole measuring system.

The electric resistance or its reciprocal value, the conductance G, is measured according to Ohm's law. The specific conductivity  $\kappa$  is determined using the cell constant k which is dependent on the sensor geometry.

#### Temperature measurement

Temperature in liquids is determined by an integrated NTC sensor (NTC = negative temperature coefficient, i.e. the sensor resistance decreases with rising temperature). NTC sensors are therefore used mainly for temperature measurement in ambient temperature ranges between  $0 \dots 65 \,^{\circ}\text{C} / 32 \dots 149 \,^{\circ}\text{F}$ .

#### Oxygen measurement

Dissolved oxygen is determined using the amperometric principle acc. to Clark. A PTFE membrane encloses the electrolyte solution with the immersed electrodes in the so called Clark cell. The oxygen molecules of the medium diffuse through the sensor membrane and are reduced to hydroxide ions (OH-) on the gold cathode. On the silver anode, silver is oxidised to silver ions (Ag+) and forms a silver ion layer. The electron release from the gold cathode and the electron acceptance at the silver anode result in a current flow, which is proportional to the concentration of dissolved oxygen in the medium under constant conditions.

The transmitter transforms the current signal into the measuring units concentration in mg/l and saturation index in % sat.

#### pH measurement

The pH value is used as a unit of measurement for the acidity or alkalinity of a liquid medium. The membrane glass of the electrode supplies an electrochemical potential which is dependent upon the pH value of the medium. This potential is generated by the selective penetration of H<sup>+</sup> ions through the outer layer of the membrane. An electrochemical boundary layer with an electric potential forms at this point. An integrated Ag/AgCl reference system serves as reference electrode.

The transmitter converts the measured voltage into the corresponding pH value using the Nernst equation.


#### Redox measurement

The redox potential is a unit of measurement for the state of equilibria between oxidising and reducing components of a medium. Redox potential is measured similarly to the pH value. A platinum or gold electrode is used instead of pH-sensitive membrane glass. Analog to the pH measurement, an integrated Ag/AgCl reference system is used as a reference electrode.

#### Measuring system

A complete measuring system comprises:

- Multi parameter sensor MultiSens C600 XL
- Sampler LiquiPort 2000 (version RPT 20-xG)
- Flow vessel (optional)

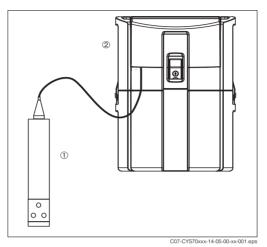

Example for a measuring system C600 XL with LiquiPort 2000

1 MultiSens C600 XL 2 LiquiPort 2000

### Input

#### Measured variables

Conductivity

Temperature

Dissolved oxygen (optional)

pH (optional) Redox (optional)

Salinity (calculated from conductivity and temperature)

#### Measuring ranges

Conductivity

0 ... 100 mS/cm

Temperature

–5 ... +45 °C / 23 ... 113 °F

Dissolved oxygen

0 ... 50 mg/l (ppm) 0 ... 500 % saturation

pH Redox 0 ... 14 pH -999 ... +999 mV

Salinity

0 ... 70 μg/l (ppt)


## **Performance characteristics**

Reference conditions	25 °C / 77 °F	
Measured value resolution	Conductivity	0.001 mS/cm or 0.1 mS/cm (dependent on meas. range)
	Temperature	0.01 °C / 0.01K
	Dissolved oxygen	0.01 mg/l (ppm)
	75	0.1% saturation
	Hq	0.01 pH
	Redox	0.1 mV
	Salinity	0.01 μg/l (ppt)
Measured error	Conductivity	±0.5% of measured value + 0.001 mS/cm
	Temperature	±0.15 °C / 0.15K
	Dissolved oxygen	Measuring range 0 20 mg/l (ppm):±2% of measured value Measuring range 20 50 mg/l (ppm):±6% of measured value Measuring range 0 200%: ±2% of measured value Measuring range 200 500%: ±6% of measured value
	На	±0.2 pH
	Redox	±20 mV
	Salinity	±1% of measured value


### **Electrical connection**

#### **Cable connection**

The sensor C600 XL is connected to the displaying instrument by the sensor cable with plug. Simply plug the cable plug into the socket of the LiquiPort 2000.

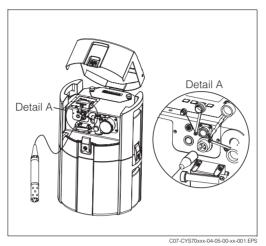

Cable connection of C600 XL to LiquiPort 2000

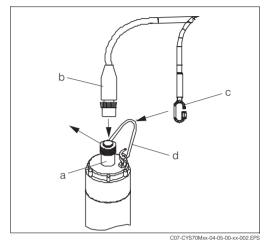

Installation of the cable strain releave (for sensors with detachable cable)

- a Sensor bulkhead connector
- b Cable plug
- c Releave hook
- d Bail

Installing the cable strain releave:

- 1. Remove the waterproof protection cover of the sensor bulkhead connector.
- 2. Plug the cable plug onto the sensor bulkhead connector.
- 3. Hook the releave hook into the bail and tighten it.

#### Cable lengths

- 7.5m / 25 ft
- 15m / 50 ft
- 30m / 100 ft
- max. cable length: 60m / 196.9 ft

#### Supply voltage

12 V DC (supply via LiquiPort 2000)


### Installation

#### Sensor installation

The sensor C600 XL is not pre-installed. To prepare the sensor for operation, first take the following steps:


#### Remove the sensor cap:

- 1 MultiSens sensor
- 2 Unscrew the sensor cap counterclockwise.

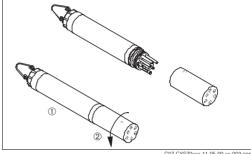


#### Remove the port plug:

- 1 MultiSens sensor
- 2 Port plug
- 3 Installation tool (provided in scope of supply)

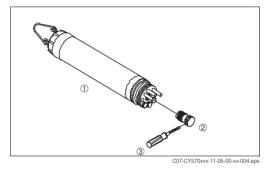


### Install the oxygen membrane:

- 1 Oxygen sensor
- 2 Oxygen sensor protection guard
- 3 Remove the dry membrane and replace it by a new one (refer to oxygen membrane kit for instructions).

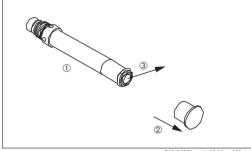


#### Install the sensor heads:

- 1 MultiSens sensor
- 2 Sensor head, e.g. oxygen sensor
- 3 Installation tool (provided in scope of supply)

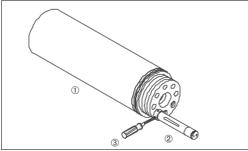

#### Install the sensor protection guard:

- 1 MultiSens sensor
- 2 Protection guard
- 3 Tighten the protection guard clockwise.

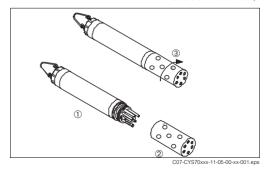


#### **Installation instructions**



#### Note!

- Install the sensor so that it is freely suspended in the water.
- When installing the sensor, make sure the sensor cannot be damaged (e.g. due to too little wall distance during strong flow).
- Make sure the sensor is completely immersed at changing water levels.

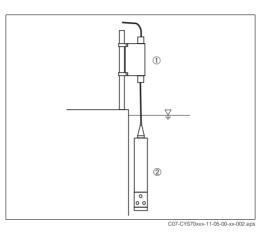

Mounting example of the sensor with mooring kit

- 1 Mooring kit
- 2 Sensor

### **Environment**


Storage temperature	-40 +60 °C / -40 140 °F (without pH and oxygen sensors installed) -10 +60 °C / 14 140 °F (with pH and oxygen sensors installed)		
Relative humidity	5 95 %		
Ingress protection	IP 68 / NEMA 6		

### **Process**

Process temperature	–5 +45 °C / 23 113 °F
Immersion depth	max. 60m / 196.9 ft
Process pressure	non-pressurised
Flow	no minimum flow required

### **Mechanical construction**


#### Design, dimensions

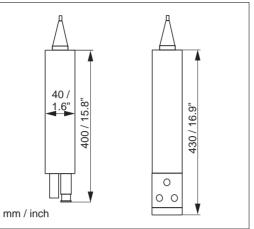

C07-CYS70Sxx-06-05-00-en-00

Dimensions MultiSens C600 XL

left: without protection guard right: with protection guard

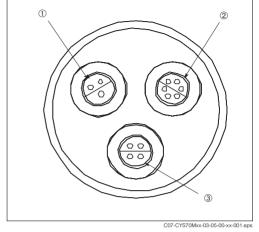

Design sensor bulkhead connector MultiSens C600 xI

(full assembly)

- 1 Dissolved oxygen (3-pin)
- 2 Conductivity / temperature (6-pin)
- 3 pH / redox (4-pin)

Weight

approx. 0.65 kg / 1.4 lb (without cable)

Materials (in contact with medium)

Sensor O-rings Polyurethane, PVC, stainless steel SS 316

Viton

### **Ordering information**

#### Product structure MultiSens C600 XL

Multi parameter immersion sensor with integrated sensor heads for online measurement of water quality. Standard version with temperature sensor and conductivity sensor (4-contact nickel sensor). Communication protocol RS 232 for data transfer and software update. Inclusive sensor protection guard, calibration vessel and maintenance kit.

	Para	Parameter				
	Α	Standard version without additional sensors				
	В	with additional pH sensor				
	С	with additional pH/redox sensor				
	D	with additional oxygen sensor				
	Е	with additional pH and oxygen sensor				
	F	with additional pH/redox and oxygen sensor				
	Υ	Special version acc. to customer specification				
		Cab	Cable length			
		0	no ca	able		
		1	7.5m / 25 ft cable			
		2	15m / 50 ft cable			
		3	30m /100 ft cable			
		9	Special version acc. to customer specification			
			Cable connection			
			F	Fixe	d cable	
			S Plug			
			Y Special version acc. to customer specification			
			Additional equipment			
				0	no additional equipment	
				9	Special version acc. to customer specification	
C600XL-					complete order code	

### Scope of delivery

#### Scope of delivery

The scope of delivery comprises:

- 1 multi parameter sensor MultiSens C600 XL with cable (cable length depending on version)
- 1 sensor cap for storage and calbration
- 1 sensor protection guard
- 1 maintenance kit for MultiSens C600 XL
- 1 membrane kit for oxygen sensor (with versions -D, -E, -F)
- 1 reconditioning kit for oxygen sensor (with versions -D, -E, -F)
- 1 Technical Information TI 372C/07/en

### **Accessories**

#### **Connection accessories**

#### Mains supply unit with adapter cable

☐ Mains supply unit (wide range) + adapter cable for PC

Order no.: 51513215

#### Measuring cable with plug

☐ Measuring cable 7.5m / 25 ft

Order no.: 51513212

 $\square$  Measuring cable 15m / 50 ft

Order no.: 51513213

☐ Measuring cable 30m / 100 ft

Order no.: 51513214

#### Sensor accessories

#### Flow vessel

☐ Flow vessel for hose connection

Order no.: 51513216

#### Mooring kit

☐ Mooring kit for sensor guidance in flowing media

Order no.: 51513217

#### Maintenance kits

☐ Maintenance kit

(brush, lubricant, O-ring set, dummy plug pH)

Order no.: 51513207

☐ Calibration and transport kit

(Calibration and transport box with cover and moistening sponge)

Order no.: 51513209

 $\hfill \square$  Membrane kit for oxygen sensor

(Electrolyte solution, membrane foil set, instructions for membrane replacement)

Order no.: 51513210

☐ Reconditioning kit for oxygen sensor

(Abrasive foil, instructions for sensor reconditioning)

Order no.: 51513211

#### Sensor heads

☐ Conductivity/temperature sensor

Order no.: 51513517

☐ Oxygen sensor

Order no.: 51513518

□ pH sensor

Order no.: 51513519

□ pH/redox sensor

Order no.: 51513520

#### **Calibration solutions**

#### pН

Technical buffer solutions for pH, accuracy 0.02 pH, traceable to NIST/DIN

□ pH 4.0 red, 100 ml, Order no. CPY 2-0

□ pH 4.0 red, 1000 ml, Order no. CPY 2-1

□ pH 7.0 green, 100 ml, Order no. CPY 2-2

□ pH 7.0 green, 1000 ml, Order no. CPY 2-3

□ pH 9.2 blue, 100 ml, Order no. CPY 2-4

□ pH 9.2 blue, 1000 ml, Order no. CPY 2-5

#### Conductivity

Precision solution for conductivity, accuracy  $\pm$  0.5 %, traceable to SRM (Standard Reference Material) by NIST for qualified calibration of conductivity measuring systems acc. to ISO, with temperature table

QCLY 11-C, 1.406 mS/cm (reference temperature 25 °C / 77 °F), 500 ml, Order no. 50081904

### **Supplementary documentation**

□ LiquiPort 2000, Technical Information TI 084R/09/en, Order no. 51002730 □ LiquiPort 2000, Operating Instructions BA 116R/09/en, Order no. 51002780

Endress+Hauser GmbH+Co. KG Instruments International P.O. Box 2222 D-79574 Weil am Rhein Germany

Tel. (07621) 975-02 Tx 773926 Fax (07621) 975 345 e-mail: info@ii.endress.com

Internet: http://www.endress.com

