# Technical Information **Memosens CPS71E**

pH sensor for chemical process applications



## Digital with Memosens 2.0 technology With poison-resistant reference thanks to ion trap

#### **Application**

Process technology and monitoring of processes with:

- Rapidly changing pH values
- High proportion of electrode poisons such as H<sub>2</sub>S

With ATEX, IECEx, CSA C/US, NEPSI, Japan Ex and INMETRO approvals for use in hazardous areas Zone 0, Zone 1 and Zone 2.

#### Your benefits

- Very long service life thanks to poison-resistant reference with improved ion trap
- Bridging electrolyte free of silver ions, acrylamide-free
- TP reference system with pressurized reference, for chemical processes with high concentrations of reference poisons
- TU reference system for upside-down installation, solidified gel in the internal reference lead
- Integrated NTC 30K temperature sensor for effective temperature compensation
- Choice of 1 or 3 ceramic junctions (TB and TC reference system)

#### Other advantages provided by Memosens technology

- Maximum process safety thanks to non-contact, inductive signal transmission
- Data security thanks to digital data transmission
- Very easy to use as sensor data are saved in the sensor
- Predictive maintenance can be performed with the Memobase Plus CYZ71D by recording sensor load data in the sensor



## Function and system design

#### Measuring principle

#### pH measurement

The pH value is used as a unit of measurement for the acidity or alkalinity of a medium. The membrane glass of the electrode delivers an electrochemical potential that depends on the pH value of the medium. This potential is generated by the selective accumulation of  $H^+$  ions on the outer layer of the membrane. As a result, an electrochemical boundary layer with an electrical potential difference forms at this point. An integrated Ag/AgCl reference system serves as the required reference electrode.


The measured voltage is converted to the corresponding pH value using the Nernst equation.

#### Measuring system

A complete measuring system comprises:

- pH sensor CPS71E
- Memosens data cable CYK10 or CYK20
- Transmitter, e.g. Liquiline CM44, Liquiline CM42
- Assembly
  - Immersion assembly, e.g. Dipfit CPA111
  - Flow assembly, e.g. Flowfit CPA250
  - Retractable assembly, e.g. Cleanfit CPA871
  - Permanent installation assembly, e.g. Unifit CPA842

Additional options are available depending on the application: Automatic cleaning and calibration system, e.g. Liquiline Control CDC90

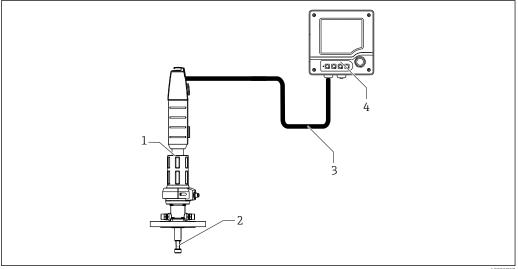

- **₽** 1 Example of a measuring system for pH measurement
- Retractable assembly Cleanfit CPA871
- pH sensor CPS71E 2
- Memosens data cable CYK10
- Liquiline M CM42 two-wire transmitter for hazardous areas

#### Communication and data processing

#### Communication with the transmitter

Always connect digital sensors with Memosens technology to a transmitter with Memosens technology. Data transmission to a transmitter for analog sensors is not possible.

2

Digital sensors can store measuring system data in the sensor. These include the following:

- Manufacturer data
  - Serial number
  - Order code
  - Date of manufacture
- Calibration data
  - Calibration date
  - Slope at 25 °C (77 °F)
  - Zero point at 25 °C (77 °F)
  - Offset of integrated temperature sensor
  - Number of calibrations
  - Calibration history
  - Serial number of the transmitter used to perform the last calibration or adjustment
- Operating data
  - Temperature application range
  - pH application range
  - Date of initial commissioning
  - Maximum temperature value
  - Hours of operation under extreme conditions
  - Number of sterilizations
  - CIP counter
  - Sensor load

The data listed above can be displayed with Liquiline CM42, CM44x, and Memobase Plus CYZ71D.

#### Dependability

#### Reliability

#### Easy handling

Sensors with Memosens technology have an integrated electronics unit that stores calibration data and other information (e.g. total hours of operation or operating hours under extreme measuring conditions). Once the sensor has been connected, the sensor data are transferred automatically to the transmitter and used to calculate the current measured value. As the calibration data are stored in the sensor, the sensor can be calibrated and adjusted independently of the measuring point. The result:

- Easy calibration in the measuring lab under optimum external conditions increases the quality of the calibration.
- Pre-calibrated sensors can be replaced quickly and easily, resulting in a dramatic increase in the availability of the measuring point.
- Thanks to the availability of the sensor data, maintenance intervals can be accurately defined and predictive maintenance is possible.
- The sensor history can be documented on external data carriers and evaluation programs, e.g. Memobase Plus CYZ71D.
- The saved application data of the sensor can be used to determine the continued use of the sensor in a targeted manner.

#### Integrity

#### Data security thanks to digital data transmission

Memosens technology digitizes the measured values in the sensor and transmits the data to the transmitter via a non-contact connection that is free from potential interference. The result:

- If the sensor fails or there is an interruption in the connection between the sensor and transmitter, this is reliably detected and reported.
- The availability of the measuring point is reliably detected and reported.

#### Safety

#### Maximum process safety

With inductive transmission of the measured value using a non-contact connection, Memosens guarantees maximum process safety and offers the following benefits:

- All problems caused by moisture are eliminated:
  - No corrosion at the connection
  - Measured values cannot be distorted by moisture
- The transmitter is galvanically decoupled from the medium. Issues concerning "symmetrical high-impedance" or "asymmetry" or the type of impedance converter are a thing of the past.
- Electromagnetic compatibility (EMC) is guaranteed by screening measures for the digital transmission of measured values.
- Intrinsically safe electronics mean operation in hazardous areas is not a problem. Complete flexibility thanks to individual Ex approvals for all components, such as sensors, cables and transmitters.

## Input

#### Measured variable

pH value

Temperature

#### Measuring range

#### Application B

- pH: 0 to 14
- Temperature: 0 to 140 °C (32 to 284 °F)

#### Application H


- pH: 0 to 12
- Temperature: 0 to 140 °C (32 to 284 °F)



Pay attention to the operating conditions in the process.

## Power supply

#### **Electrical connection**

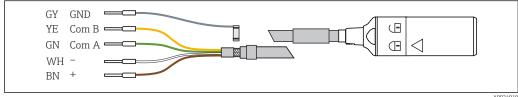

A00240

- 2 Measuring cable CYK10 or CYK20
- ► Connect the Memosens measuring cable, e.g. CYK10 or CYK20 to the sensor.

For further information on cable CYK10, see BA00118C

## Performance characteristics

#### Reference system

TB and TC reference system: Ag/AgCl reference lead with ion trap, reference and bridging

electrolyte 3 M KCl, acrylamide-free, flowable gel electrolyte

TP reference system: Ag/AgCl reference lead with ion trap, reference and bridging electrolyte 3 M KCl acrylamide-free flowable gel electrolyte

electrolyte 3 M KCl, acrylamide-free, flowable gel electrolyte, pressurized 7 bar (102 psi) (absolute); display via pressure

indicator

TU reference system: Ag/AgCl reference lead with ion trap, reference and bridging

electrolyte 3 M KCl, acrylamide-free, solidified gel electrolyte

H

Pay attention to the operating conditions in the process.


#### Installation

#### Orientation

#### TB, TC and TP reference system

- Do not install the sensors upside-down.
- The angle of inclination from the horizontal must be at least 15°.

An installation angle  $< 15^{\circ}$  is not permitted, as otherwise an air bubble will form. Contact between the reference and membrane glass is then no longer guaranteed.

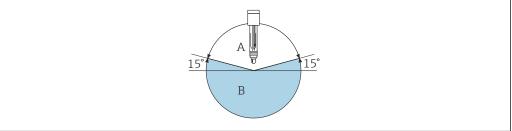


A0028039

- $\blacksquare$  3 Installation angle at least 15° from the horizontal
- A Permitted orientation
- B Incorrect orientation

#### TU reference system

- The sensor is suitable for upside-down installation.
- Install the sensor at any angle.

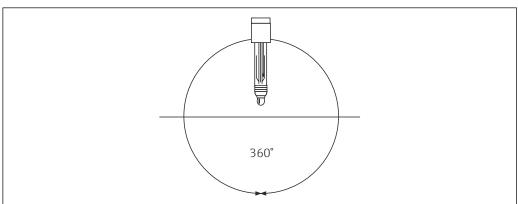

■ 4 Any installation angle

Endress+Hauser 5

A 002 6 E

#### **Installation instructions**

- Before screwing in the sensor, make sure the assembly thread, the O-rings and the sealing surface are clean and undamaged and that the thread runs smoothly.
- Pay attention to the installation instructions provided in the Operating Instructions of the assembly used.
- ► Screw in the sensor and tighten by hand with a torque of 3 Nm (2.21 lbf ft) (specifications only apply if installing in Endress+Hauser assemblies).

#### TP reference system

#### **A** CAUTION

#### Glass sensor with pressurized reference

Possibility of sudden rupture and injury from glass splinters!

► Always wear protective goggles when working with these sensors.

#### For correct pH measurement:

- 1. Before commissioning, open the modified atmosphere packaging (MAP) by pulling the red tear tab.
- 2. Completely remove the MAP.
- 3. Remove the moistening cap with the bayonet lock.
- 4. Remove the reusable protective netting from the sensor.
- 5. For optimum accuracy, insert the sensor into a calibration buffer solution with pH 4 to 9 for 15 to 20 min before calibration.
- 6. Put the sensor into operation.
- For detailed information on removing the moistening cap, see BA01988C

#### **Environment**

Ambient temperature range	NOTICE  Risk of damage from frost!  ▶ Do not use the sensor at temperatures below -15 °C (5 °F).
Storage temperature	0 to 50 °C (32 to 122 °F)
Degree of protection	IP 68 (10 m (33 ft) water column, 25 °C (77 °F), 45 days, 1 M KCl)
Electromagnetic compatibility (EMC)	Interference emission and interference immunity as per EN 61326-1: 2013

#### **Process**

Process temperature range	Applications B and H: 0 to 140 $^{\circ}$ C (32 to 284 $^{\circ}$ F)				
	Version TB, TC:	0 to 140 °C (32 to 284 °F)			
	Version TU, TP (pressurized reference):	0 to 140 °C (32 to 284 °F) (140 °C (284 °F) only for sterilization) Maximum 100 °C (212 °F) in continuous operation due to increasing pressure loss at T > 100 °C (212 °F)			
Process pressure range	Application B:	0.8 to 14 bar (11.6 to 203 psi) absolute			
	Application H	0.8 to 7 bar (11.6 to 101.5 psi) absolute			

#### **A** CAUTION

#### Pressurization of sensor due to prolonged use under increased process pressure


Possibility of sudden rupture and injury from glass splinters!

- ► Avoid fast heating of these pressurized sensors if they are used under reduced process pressure or under atmospheric pressure.
- ▶ When handling these sensors, always wear protective goggles and appropriate protective gloves.

#### Conductivity

 $10\,\mu\text{S/cm}$  (at atmospheric pressure, without flow) (minimized flow; pressure and temperature must remain constant)

## Pressure/temperature ratings

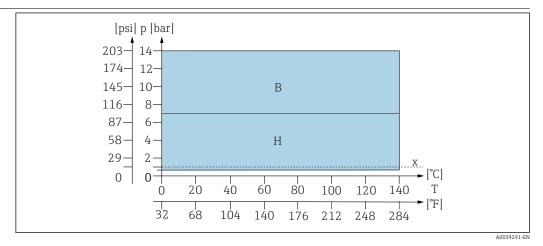

■ 5 Pressure/temperature ratings


B Application B


H Application H

x Atmospheric pressure

## Mechanical construction

#### Design, dimensions

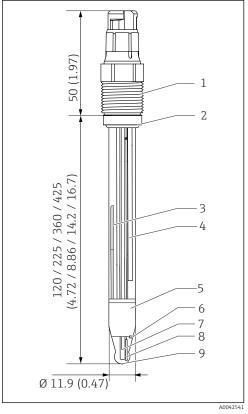

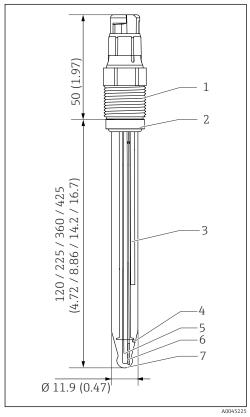

- ₩ 6 CPS71E. Engineering unit: mm (in)
- Memosens plug-in head with process connection 1
- O-ring with thrust collar
- 3 Pressure indicator (only for TP version)
- Ag/AgCl reference lead with ion trap 4
- Ion trap
- 6 Ceramic junction
- Temperature sensor
- 8 pH inner lead
- pH glass membrane

pH membrane glass

Metal lead

- **₽** 7 CPS71E TU reference system. Engineering unit: mm (in)
- Memosens plug-in head with process connection
- O-ring with thrust collar
- Ag/AgCl reference lead with ion trap
- Ceramic junction
- Temperature sensor
- pH inner lead
- pH glass membrane

Weight	Installed length	120 mm (4.72 in)	225 mm (8.86 in)	360 mm (14.17 in)	425 mm (16.73 in)
	Weight	40 g (1.4 oz)	60 q (2.1 oz)	90 g (3.2 oz)	100 g (3.5 oz)

Materials Sensor shaft Glass to suit process

> Type B Type N

Ag/AgCl Open aperture Ceramic junction, zirconium dioxide O-ring FKM

> Process coupling PPS fiber-glass reinforced Nameplate Ceramic metal oxide

Temperature sensor NTC 30K

Plug-in head Memosens plug-in head for digital, non-contact data transmission, pressure resistance 16 bar (232 psi) (relative)

Pg 13.5 **Process connections** 

## Certificates and approvals

#### C€ mark

The product meets the requirements of the harmonized European standards. As such, it complies with the legal specifications of the EU directives. The manufacturer confirms successful testing of the product by affixing to it the CC mark.

#### Ex approval

#### **ATEX**

II 1G Ex ia IIC T3/T4/T6 Ga

#### **IECE**x

Ex ia IIC T3/T4/T6 Ga

#### **NEPSI**

Ex ia IIC T3/T4/T6 Ga

#### CSA C/US


- IS Cl. I Div 1, GP A-D Ex ia IIC T3/T4/T6
- IS Cl. I Zone O, AEx ia IIC T3/T4/T6

#### Japan Ex

Ex ia IIC T3/T4/T6 Ga

#### **INMETRO**

Ex ia IIC T3/T4/T6 Ga

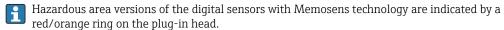



Pay attention to the instructions for Memosens data cable CYK10 and transmitter CM82.

#### Additional certification

#### TÜV certificate for Memosens plug-in head

Pressure resistance 16 bar (232 psi) relative, minimum three times the safety pressure

#### EAC

The product has been certified according to guidelines TP TC 004/2011 and TP TC 020/2011 which apply in the European Economic Area (EEA). The EAC conformity mark is affixed to the product.

## Ordering information

#### Product page

#### www.endress.com/cps71e

#### **Product Configurator**

On the product page there is a **Configure** button to the right of the product image.

- 1. Click this button.
  - ► The Configurator opens in a separate window.
- 2. Select all the options to configure the device in line with your requirements.
  - In this way, you receive a valid and complete order code for the device.
- 3. Export the order code as a PDF or Excel file. To do so, click the appropriate button on the right above the selection window.
- For many products you also have the option of downloading CAD or 2D drawings of the selected product version. Click the **CAD** tab for this and select the desired file type using picklists.

#### Scope of delivery

The delivery comprises:

- Sensor in the version ordered
- Operating Instructions
- Safety instructions for the hazardous area (for sensors with Ex approval)

#### Accessories

The following are the most important accessories available at the time this documentation was issued.

► For accessories not listed here, please contact your Service or Sales Center.

#### **Device-specific accessories**

#### Assemblies

#### **Unifit CPA842**

- Installation assembly for food, biotechnology and pharmaceutics
- With EHEDG and 3A certificate
- Product Configurator on the product page: www.endress.com/cpa842



Technical Information TI01367C

#### Cleanfit CPA875

- Retractable process assembly for sterile and hygienic applications
- For in-line measurement with standard sensors with 12 mm diameter, e.g. for pH, ORP, oxygen
- Product Configurator on the product page: www.endress.com/cpa875



Technical Information TI01168C

#### Dipfit CPA140

- pH/ORP immersion assembly with flange connection for very demanding processes
- Product Configurator on the product page: www.endress.com/cpa140



Technical Information TI00178C

#### Cleanfit CPA871

- Flexible process retractable assembly for water, wastewater and the chemical industry
- For applications with standard sensors with 12 mm diameter
- Product Configurator on the product page: www.endress.com/cpa871



Technical Information TI01191C

#### Cleanfit CPA450

- Manual retractable assembly for installing sensors with a diameter of 12 mm and a length of 120 mm in tanks and pipes
- Product Configurator on the product page: www.endress.com/cpa450



Technical Information TI00183C

#### Cleanfit CPA473

- Stainless steel process retractable assembly with ball valve shutoff for particularly reliable separation of the medium from the environment
- Product Configurator on the product page: www.endress.com/cpa473



Technical Information TI00344C

#### Cleanfit CPA474

- Plastic process retractable assembly with ball valve shutoff for particularly reliable separation of the medium from the environment
- Product Configurator on the product page: www.endress.com/cpa474



Technical Information TI00345C

#### Dipfit CPA111

- Immersion and installation assembly made of plastic for open and closed vessels
- Product Configurator on the product page: www.endress.com/cpa111



Technical Information TI00112C

#### Flowfit CPA240

- pH/ORP flow assembly for processes with stringent requirements
- Product Configurator on the product page: www.endress.com/cpa240



Technical Information TI00179C

#### Flowfit CPA250

- Flow assembly for pH/ORP measurement
- Product Configurator on the product page: www.endress.com/cpa250



Technical Information TI00041C

#### **Ecofit CPA640**

- Set comprising adapter for 120 mm pH/ORP sensors and sensor cable with TOP68 coupling
- Product Configurator on the product page: www.endress.com/cpa640



Technical Information TI00246C

#### **Buffer solutions**

#### High-quality buffer solutions from Endress+Hauser - CPY20

The secondary buffer solutions have been referenced to primary reference material of the PTB (German Federal Physico-technical Institute) or to standard reference material of NIST (National Institute of Standards and Technology) according to DIN 19266 by a laboratory accredited by the DAkkS (German accreditation body) according to DIN 17025.

Product Configurator on the product page: www.endress.com/cpy20

#### Measuring cable

#### Memosens data cable CYK10

- For digital sensors with Memosens technology
- Product Configurator on the product page: www.endress.com/cyk10



Technical Information TI00118C

#### Memosens laboratory cable CYK20

- For digital sensors with Memosens technology
- Product Configurator on the product page: www.endress.com/cyk20



www.addresses.endress.com