# Technical Information Cerabar PMP71B

Process pressure and level measurement in liquids or gases

4-20mA HART, PROFINET over Ethernet-APL, PROFIBUS PA



# Digital pressure transmitter with metallic process membrane



- Pressure measuring ranges: up to 700 bar (10500 psi)
- Process temperatures: up to 400 °C (752 °F) with diaphragm seal
- Accuracy: up to ±0.025%



The new Cerabar generation introduces a robust pressure transmitter that combines numerous benefits: Easiest local or remote operation, allows condition-based maintenance and offers smart safety in processes. The firmware is designed to ensure extremely easy handling. Intuitive and clear wizard navigation guides the user through the commissioning and verification of the device. The Bluetooth connectivity provides safe and remote operation. The large display with backlight guarantees excellent readability. The Heartbeat Technology software package offers an ondemand verification and monitoring function to detect undesired anomalies. These undesired anomalies include dynamic pressure shocks or changes in the supply voltage, for example.





# Table of contents

About this document		Environment	
Symbols	4	Ambient temperature range	31
Graphic conventions	4	Storage temperature	32
List of abbreviations	5	Operating altitude	32
Turn down calculation	5	Climate class	32
		Atmosphere	32
Function and system design	6	Degree of protection	32
Equipment architecture		Vibration resistance	33
Measuring system		Electromagnetic compatibility (EMC)	33
Communication and data processing			
Reliability for devices with HART, Bluetooth, PROFINET	0	Process	34
over Ethernet-APL , PROFIBUS PA	Ω	Process temperature range	
over Ethernet ALL, I NOI 1003 I A	0	Process pressure range	
_	_	Ultrapure gas applications	
Input		Hydrogen applications	
Measured variable		Steam applications and saturated steam applications	
Measuring range	9	Thermal insulation	
		Thermal mouldation	) /
Output	11	Manhamian and according to	<i>i</i> . 1
Output signal	11	Mechanical construction	
Signal on alarm		Design dimensions	
Load		Dimensions	
Damping		Weight	
	12	Materials in contact with process	
Linearization	12	Materials not in contact with process	
Protocol-specific data	12	Accessories	/4
Wireless HART data	14		
		Operability	75
Power supply	15	Operating concept	75
Terminal assignment		Languages	75
Available device pluqs		Local operation	75
	17	Local display	76
	17	Remote operation	78
	18	System integration	80
-	18	Supported operating tools	80
	18	HistoROM	80
	19		
	19	Certificates and approvals	Ω1
Overvoltage protection	19	CE mark	
		RCM-Tick marking	
Performance characteristics		Ex approvals	81
Response time	21	Corrosion test	
J	21	EAC conformity	
Total performance	21	Drinking water approval	
	24	Overfill protection system	
Total error		Functional safety SIL/ IEC 61508 Declaration of	O1
Long-term stability		Conformity	81
Response time T63 and T90		Marine approval	
Installation factors		Radio approval	
Warm-up time	26	CRN approval	
		Test reports	
Installation	27	Pressure Equipment Directive 2014/68/EU (PED)	
	27	Oxygen application (optional)	
	27	China RoHS symbol	
Installation instructions for devices with diaphragm seals	I .	RoHS	
	28	PROFINET over Ethernet-APL certification	
Special mounting instructions		Additional certification	
- r gg · · · · · · · ·		1 data on the continuous and the	J

Order information	85
Ordering information	
Scope of delivery	
Service	
Measuring point (TAG)	
Test reports, declarations and inspection certificates	
Application packages	87
Heartbeat Technology	87
Accessories	88
Device-specific accessories	
Device Viewer	88
Documentation	88
Registered trademarks	89
Diaphragm seal China, order code 105	90
Performance characteristics	
Process	90
Mechanical construction	
Certificates and approvals	104

## About this document

## **Symbols**

## Warning symbols

## **⚠** DANGER

This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury.

#### **WARNING**

This symbol alerts you to a potentially dangerous situation. Failure to avoid this situation can result in serious or fatal injury.

## **▲** CAUTION

This symbol alerts you to a potentially dangerous situation. Failure to avoid this situation can result in minor or medium injury.

#### NOTICE

This symbol alerts you to a potentially harmful situation. Failure to avoid this situation can result in damage to the product or something in its vicinity.

## Electrical symbols

*Ground connection:*  $\pm$ 

Terminal for connection to the grounding system.

## Symbols for certain types of Information

Permitted: 🗸

Procedures, processes or actions that are permitted.

Forbidden: 🔀

Procedures, processes or actions that are forbidden.

Additional information: 🚹

Reference to documentation: 📵

Reference to page: 🖺

Series of steps: 1., 2., 3.

Result of an individual step:

#### Symbols in graphics

Item numbers: 1, 2, 3 ...

Series of steps: 1., 2., 3.

Views: A, B, C, ...

## Symbols on the device

format

Safety instructions:  $\Lambda \rightarrow \square$ 


Observe the safety instructions contained in the associated Operating Instructions.

## **Graphic conventions**




- Installation, explosion and electrical connection drawings are presented in simplified format
   Devices, assemblies, components and dimensional drawings are presented in reduced-line
- Dimensional drawings are not to-scale representations; the dimensions indicated are rounded off to 2 decimal places

## List of abbreviations

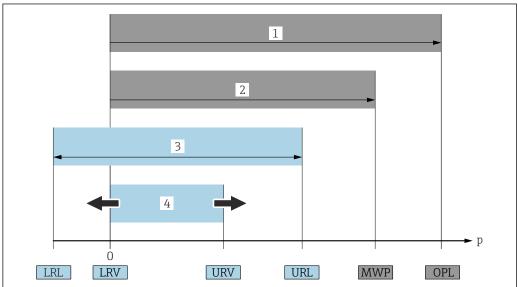

- OPL: The OPL (over pressure limit = measuring cell overpressure limit) for the device depends on the lowestrated element, with regard to pressure, of the selected components, i.e. the process connection must be taken into consideration in addition to the measuring cell. Observe pressure-temperature dependency. OPL (Over Pressure Limit) is a test pressure.
- MWP: The MWP (maximum working pressure) for the measuring cells depends on the lowest-rated element, with regard to pressure, of the selected components, i.e. the process connection also has to be taken into consideration besides the measuring cell. Observe pressure-temperature dependency. The maximum working pressure may be applied at the device for an unlimited period of time. The maximum working pressure can be found on the nameplate.
- The maximum measuring range corresponds to the span between the LRL and URL. This measuring range is equivalent to the maximum span that can be calibrated/adjusted.
- The calibrated/adjusted span corresponds to the span between the LRV and URV. Factory setting: 0 to URL. Other calibrated spans can be ordered as customized spans.
- Pressure
- LRL Lower range limit
- URL Upper range limit
- LRV Lower range value
- URV Upper range value
- *TD Turn down Example see the following section.*

## Turn down calculation

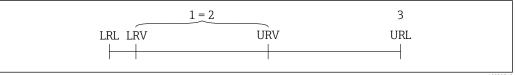

- Calibrated/adjusted span
- 2 Zero point-based span
- Upper range limit

## Example:

- Measuring cell: 10 bar (150 psi)
- Upper range limit (URL) = 10 bar (150 psi)
- Calibrated/adjusted span: 0 to 5 bar (0 to 75 psi)
- Lower range value (LRV) = 0 bar (0 psi)
- Upper range value (URV) = 5 bar (75 psi)




In this example, the TD is therefore 2:1. This measuring span is based on the zero point.

## Function and system design

## Equipment architecture

## Standard device

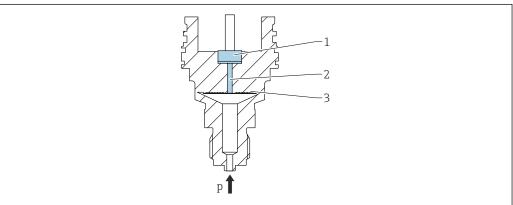


- Measuring element
- Channel with fill fluid 2
- 3 Metallic membrane
- Pressure

The pressure deflects the metallic membrane of the measuring cell. A fill fluid transfers the pressure to a Wheatstone bridge (semiconductor technology). The pressure-dependent change in the bridge output voltage is measured and evaluated.

## Advantages:

- Can be used for high pressures
- High long-term stability
- High overload resistance
- Secondary containment for enhanced integrity
- Very low thermal effect e.g. compared to diaphragm seal systems with capillaries

## Device with diaphragm seal (diaphragm seal system)

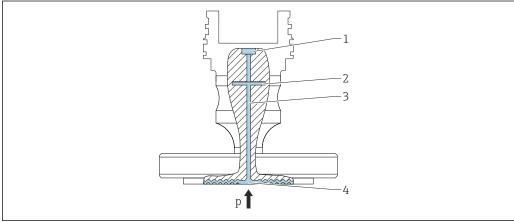

- Measuring element
- Internal membrane 2
- Channel with fill fluid 3
- Metallic membrane

The pressure acts on the membrane of the diaphragm seal and is transferred to the internal membrane by a fill fluid. The internal membrane is deflected. A fill fluid transfers the pressure to the measuring element on which a resistance bridge is located. The pressure-dependent change in the bridge output voltage is measured and evaluated.

## Advantages:

- Depending on the version, can be used for pressures up to 400 bar (6000 psi) and extreme process temperatures
- High long-term stability
- High overload resistance
- Standard device: secondary containment for enhanced integrity


## Applications for diaphragm seals

Diaphragm seal systems are used if the process and the device need to be separated. Diaphragm seal systems offer clear advantages in the following instances:

- In the case of extreme process temperatures through the use of temperature isolators or capillaries
- In the case of strong vibrations decouple the process from the device by using a capillary
- In the case of aggressive or corrosive media through the use of high-durability membrane materials
- In the case of media that crystallize or contain solids through the choice of suitable coatings
- In the case of heterogeneous and fibrous process media
- If extreme measuring point cleaning is necessary, or in the event of very damp mounting locations
- For mounting locations that are difficult to access

## Measuring system

#### **Device versions**

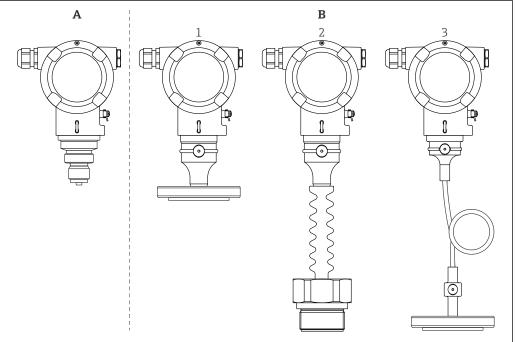


A0043594

- A Standard device (without diaphragm seal)
- $B \qquad \textit{Device with diaphragm seal}$
- 1 Compact diaphragm seal type
- 2 Diaphragm seal type with temperature isolator
- 3 Diaphragm seal type with capillary


## Level measurement (level, volume and mass)

Standard device or device with diaphragm seal

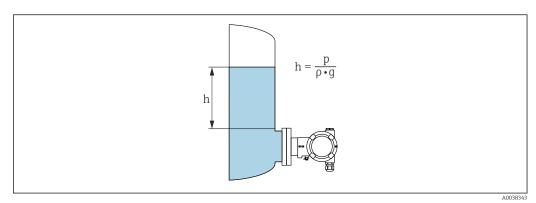

- h Height (level)
- Pressure
- Density of the medium ρ
- Acceleration due to gravity

## Device with diaphragm seal and capillary

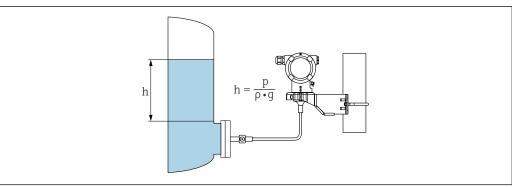

- **■** 1 Sample illustration: diaphragm seal with capillary
- h Height (level)
- Pressure р
- Density of the medium
- Acceleration due to gravity

#### Advantages:

- Volume and mass measurements in any vessel shape with a freely programmable characteristic curve
- Has a wide range of uses, e.g.
  - For foam formation
  - In vessels with agitators or screen fittings
  - For liquid gases

## Communication and data processing

- 4 to 20 mA with HART communication protocol (optional)
- Bluetooth (optional)
- PROFIBUS PA (optional)
- PROFINET over Ethernet-APL (optional): 10BASE-T1L communication protocol

Reliability for devices with HART, Bluetooth, PROFINET over Ethernet-APL, PROFIBUS PA

## IT security

Endress+Hauser can only provide a warranty if the device is installed and used as described in the Operating Instructions. The device is equipped with security mechanisms to protect it against any inadvertent changes to the device settings. IT security measures in line with operators' security standards and designed to provide additional protection for the device and device data transfer must be implemented by the operators themselves.

## Input

## Measured variable

## Measured process variables

- Absolute pressure
- Gauge pressure

#### Measuring range

Depending on the device configuration, the maximum working pressure (MWP) and the overpressure limit (OPL) can deviate from the values in the tables.

## Absolute pressure

Measuring cell	Maximum measuring range 1)		Smallest calibratable span (preset at factory) 2) 3)	
	lower (LRL)	upper (URL)		
	[bar <sub>abs</sub> (psi <sub>abs</sub> )]	[bar <sub>abs</sub> (psi <sub>abs</sub> )]	[bar (psi)]	Platinum
400 mbar (6 psi)	0	+0.4 (+6)	0.005 (0.075) <sup>4)</sup>	80 mbar (1.2 psi)
1 bar (15 psi)	0	+1 (+15)	0.01 (0.15) 5)	200 mbar (3 psi)
2 bar (30 psi)	0	+2 (+30)	0.02 (0.3) 5)	400 mbar (6 psi)
4 bar (60 psi)	0	+4 (+60)	0.04 (0.6) 5)	800 mbar (12 psi)
10 bar (150 psi)	0	+10 (+150)	0.1 (1.5) 5)	2 bar (30 psi)
40 bar (600 psi)	0	+40 (+600)	0.4 (6) 5)	8 bar (120 psi)
100 bar (1500 psi)	0	+100 (+1500)	1.0 (15) <sup>5)</sup>	20 bar (300 psi)
400 bar (6000 psi)	0	+400 (+6000)	4.0 (60) 5)	80 bar (1200 psi)
700 bar (10500 psi) 6)	0	+700 (+10500)	7.0 (105) <sup>5)</sup>	140 bar (2 100 psi)

- 1) Device with diaphragm seal: within the measuring range, the minimum upper range value of 80 mbar $_{abs}$  (1.16 psi $_{abs}$ ) must be observed.
- 2) Turn down > 100:1 on request or can be set on device
- 3) The maximum TD is 5:1 in the case of platinum.
- 4) Largest factory-configurable turn down: 80:1
- 5) Largest factory-configurable turn down: 100:1
- 6) Only for standard device (without diaphragm seal). On request for device with diaphragm seal.

## Absolute pressure

Measuring cell	MWP	OPL	Vacuum resistance 1)	Burst pressure 2)
	[bar <sub>abs</sub> (psi <sub>abs</sub> )]	[bar <sub>abs</sub> (psi <sub>abs</sub> )]	[bar <sub>abs</sub> (psi <sub>abs</sub> )]	[bar (psi)]
400 mbar (6 psi)	4 (60)	6 (90)		100 (1450)
1 bar (15 psi)	6.7 (100)	10 (150)		100 (1450)
2 bar (30 psi)	13.3 (200)	20 (300)		100 (1450)
4 bar (60 psi)	18.7 (280.5)	28 (420)		100 (1450)
10 bar (150 psi)	26.7 (400.5)	40 (600)	<ul><li>Silicone oil: 0.01 (0.15)</li><li>Inert oil: 0.04 (0.6)</li></ul>	100 (1450)
40 bar (600 psi)	100 (1500)	160 (2400)		250 (3625)
100 bar (1500 psi)	100 (1500)	400 (6000) <sup>3)</sup>		1000 (14500)
400 bar (6 000 psi)	400 (6000)	600 (9000)	2000	2000 (29000)
700 bar (10 500 psi) 4)	700 (10500)	1050 (15750)		2800 (40600)

- 1) The vacuum resistance applies for the measuring cell under reference operating conditions. A ceramic membrane is recommended for applications in the limit range. Device with diaphragm seal: Observe the pressure and temperature application limits of the selected fill fluid.
- 2) The following data apply for the standard device (without diaphragm seal).
- 3) OPL optional 160 bar (2 400 psi) for low-temperature version.
- 4) Only for standard device (without diaphragm seal). On request for device with diaphragm seal.

## Gauge pressure

Measuring cell	Maximum measuring range		Smallest calibratable span (preset at factory) 1) 2)	
	lower (LRL)	upper (URL)		
	[bar (psi)]	[bar (psi)]	[bar (psi)]	Platinum
400 mbar (6 psi)	-0.4 (-6)	+0.4 (+6)	0.005 (0.075)	80 mbar (1.2 psi)
1 bar (15 psi)	-1 (-15)	+1 (+15)	0.01 (0.15)	200 mbar (3 psi)
2 bar (30 psi)	-1 (-15)	+2 (+30)	0.02 (0.3)	400 mbar (6 psi)
4 bar (60 psi)	-1 (-15)	+4 (+60)	0.04 (0.6)	800 mbar (12 psi)
10 bar (150 psi)	-1 (-15)	+10 (+150)	0.1 (1.5)	2 bar (30 psi)
40 bar (600 psi)	-1 (-15)	+40 (+600)	0.4 (6)	8 bar (120 psi)
100 bar (1500 psi)	-1 (-15)	+100 (+1500)	1.0 (15)	20 bar (300 psi)
400 bar (6000 psi)	-1 (-15)	+400 (+6000)	4.0 (60)	80 bar (1200 psi)
700 bar (10 500 psi) 3)	-1 (-15)	+700 (+10500)	7.0 (105)	140 bar (2 100 psi)

- 1) Turn down > 100:1 on request or can be set on device
- The maximum TD is 5:1 in the case of platinum. 2)
- 3) Only for standard device (without diaphragm seal). On request for device with diaphragm seal.

## Gauge pressure

Measuring cell	MWP	OPL	Vacuum resistance 1)	Burst pressure 2)
	[bar (psi)]	[bar (psi)]	[bar <sub>abs</sub> (psi <sub>abs</sub> )]	[bar (psi)]
400 mbar (6 psi)	4 (60)	6 (90)		100 (1450)
1 bar (15 psi)	6.7 (100)	10 (150)		100 (1450)
2 bar (30 psi)	13.3 (200)	20 (300)		100 (1450)
4 bar (60 psi)	18.7 (280.5)	28 (420)		100 (1450)
10 bar (150 psi)	26.7 (400.5)	40 (600)	<ul><li>Silicone oil: 0.01 (0.15)</li><li>Inert oil: 0.04 (0.6)</li></ul>	100 (1450)
40 bar (600 psi)	100 (1500)	160 (2400)		250 (3625)
100 bar (1500 psi)	100 (1500)	400 (6000) <sup>3)</sup>		1000 (14500)
400 bar (6000 psi)	400 (6000)	600 (9000)		2000 (29000)
700 bar (10 500 psi) 4)	700 (10500)	1050 (15750)		2800 (40600)

- 1)  $The \ vacuum \ resistance \ applies \ for \ the \ measuring \ cell \ under \ reference \ operating \ conditions. \ A \ ceramic \ membrane \ is \ recommended \ for \ reference \ operating \ conditions.$ applications in the limit range. Device with diaphragm seal: Observe the pressure and temperature application limits of the selected fill fluid.
- The following data apply for the standard device (without diaphragm seal). OPL optional 160 bar (2 400 psi) for low-temperature version. 2)
- 3)
- 4) Only for standard device (without diaphragm seal). On request for device with diaphragm seal.

## **Output**

## Output signal

## **Current output**

4 to 20 mA with superimposed digital communication protocol HART, 2-wire

The current output offers a choice of three different operating modes:

- 4.0 to 20.5 mA
- NAMUR NE 43: 3.8 to 20.5 mA (factory setting)
- US mode: 3.9 to 20.8 mA

#### PROFINET with Ethernet-APL

10BASE-T1L, 2-wire 10 Mbit

## **PROFIBUS PA**

According to EN 50170 Volume 2, IEC 61158-2

## Signal coding:

Manchester Bus Powered (MBP) type 1

#### Data transmission rate:

31.25 kBit/s, voltage mode

#### Galvanic isolation:

Yes

## Signal on alarm


■ 4 to 20 mA HART:

Options:

- Max alarm: can be set from 21.5 to 23 mA
- Min. alarm: < 3.6 mA (factory setting)
- Signal on alarm in accordance with NAMUR recommendation NE 43.
- PROFINET over Ethernet-APL:
  - According to "Application layer protocol for decentralized periphery", Version 2.4
  - Diagnostics according to PROFINET PA Profile 4.02
- PROFIBUS PA
  - Diagnostics in accordance with PROFIBUS PA Profile 3.02
  - Status signal (as per NAMUR recommendation NE 107) plain text display

### Load

### 4 to 20 mA HART

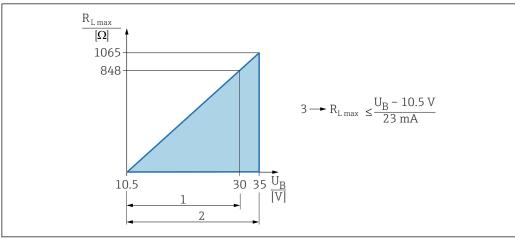

A0039232

- Power supply 10.5 to 30 VDC Ex i
- Power supply 10.5 to 35 VDC, for other types of protection and non-certified device versions
- $R_{Lmax}$  maximum load resistance
- Supply voltage

Operation via handheld terminal or PC with operating program: take minimum communication resistance of 250  $\Omega$  into consideration.

## **Damping**

A damping affects all outputs (output signal, display). Damping can be enabled as follows:

- Via the onsite display, Bluetooth, handheld terminal or PC with operating program, continuous from 0 to 999 seconds
- Factory setting: 1 s

#### Ex connection data

See the separate technical documentation (Safety Instructions (XA)) on www.endress.com/download.

#### Linearization

The device's linearization function allows the user to convert the measured value to any units of height or volume. User-defined linearization tables of up to 32 value pairs can be entered if necessary.

## Protocol-specific data

#### **HART**

Manufacturer ID: 17 (0x11{hex})

■ Device type ID: 0x112A

• Device revision: 1

■ HART specification: 7

- DD revision: 1
- Device description files (DTM, DD) information and files at:
  - www.endress.com
  - www.fieldcommgroup.org
- HART load: min. 250 Ohm

HART device variables (preset at the factory)

The following measured values are assigned to the device variables at the factory:

Device variable	Measured value
Primary variable (PV) 1)	Pressure <sup>2)</sup>
Secondary variable (SV)	Sensor temperature
Tertiary variable (TV)	Electronic temperature
Quaternary variable (QV)	Sensor pressure 3)

- 1) The PV is always applied to the current output.
- The pressure is the calculated signal after damping and position adjustment.
- 3) The Sensor pressure is the raw signal of the measuring cell before damping and position adjustment.

## Choice of HART device variables

- Pressure option (after position correction and damping)
- Scaled variable
- Sensor temperature
- Sensor pressure

Sensor Pressure is the raw signal from sensor before damping and position adjustment.

- Electronics temperature
- Terminal current

The terminal current is the read-back current on terminal block.

■ Terminal voltage 1

Visibility depends on order options or device settings

- Noise of pressure signal option and Median of pressure signal option
   Visible if Heartbeat Technology ordered
- Percent of range
- Loop current

The loop current is the output current set by the applied pressure.

## Supported functions

- Burst mode
- Additional transmitter status
- Device locking

## PROFINET over Ethernet-APL

Protocol	Application layer protocol for decentral device periphery and distributed automation, Version 2.4
Communication type	Ethernet Advanced Physical Layer 10BASE-T1L
Conformity class	Conformance Class B
Netload Class	Netload Class II
Baud rates	Automatic 10 Mbit/s with full-duplex detection
Periods	From 32 ms
Polarity	Auto-polarity for automatic correction of crossed TxD and RxD pairs
Media Redundancy Protocol (MRP)	Yes
System redundancy support	System redundancy S2 (2 AR with 1 NAP)
Device profile	Application interface identifier 0xB310 Generic device
Manufacturer ID	0x11
Device type ID	A22A
Device description files (GSD, FDI, DTM, DD)	Information and files at:  ■ www.endress.com  On the product page for the device: Documents/Software → Device drivers  ■ www.profibus.org
Supported connections	<ul> <li>2 x AR (IO Controller AR)</li> <li>1 x AR (IO-Supervisor Device AR connection allowed)</li> <li>1 x Input CR (Communication Relation)</li> <li>1 x Output CR (Communication Relation)</li> <li>1 x Alarm CR (Communication Relation)</li> </ul>
Configuration options for device	<ul> <li>Manufacturer-specific software (FieldCare, DeviceCare)</li> <li>Web browser</li> <li>Device master file (GSD), can be read out via the integrated web server of the device</li> <li>DIP switch for setting the service IP address</li> </ul>
Configuration of the device name	<ul> <li>DCP protocol</li> <li>Process Device Manager (PDM)</li> <li>Integrated web server</li> </ul>
Supported functions	<ul> <li>Identification &amp; maintenance         Simple device identification via:         <ul> <li>Control system</li> <li>Nameplate</li> </ul> </li> <li>Measured value status         <ul> <li>The process variables are communicated with a measured value status</li> </ul> </li> <li>Blinking feature via the local display for simple device identification and assignment</li> <li>Device operation via operating tools (e.g. FieldCare, DeviceCare, SIMATIC PDM)</li> </ul>
System integration	For information on system integration, see  Operating Instructions  Cyclic data transmission  Overview and description of the modules  Status coding  Startup parameterization  Factory setting
	<ul><li>Startup parameterization</li><li>Factory setting</li></ul>

## PROFIBUS PA

Manufacturer ID:

17 (0x11)

Ident number:

0x1573 or 0x9700

## Profile version:

3.02

## GSD file and version

Information and files at:

www.endress.com

On the product page for the device: Documents/Software  $\rightarrow$  Device drivers

www.profibus.com

## Output values

#### **Analog Input:**

- Pressure
- Scaled variable
- Sensor temperature
- Sensor pressure
- Electronics temperature
- Median of pressure signal option (only available if the "Heartbeat Verification + Monitoring" application package was selected).
- Noise of pressure signal option (only available if the "Heartbeat Verification + Monitoring" application package was selected).

## **Digital Input:**

 $\blacksquare$  Only available if the "Heartbeat Verification + Monitoring" application package was selected

Heartbeat Technology → SSD: Statistical Sensor Diagostics

Heartbeat Technology → Process Window

Input values

## Analog Output:

Analog value from PLC to be indicated on the display

## Supported functions

- Identification & maintenance
  - Simple device identification via control system and nameplate  $% \left( 1\right) =\left( 1\right) \left( 1\right$
- Automatic Ident Number Adoption
  - GSD compatibility mode for generic profile 0x9700 "Transmitter with 1 Analog Input"
- Physical Layer Diagnostics
  - Installation check of the PROFIBUS segment and device using terminal voltage and message monitoring
- PROFIBUS upload/download
  - Reading and writing parameters is up to ten times faster with PROFIBUS upload/download
- Condensed status
- Straightforward and self-explanatory diagnostic information through categorization of occurring diagnostic messages


## Wireless HART data

- Minimum starting voltage: 10.5 V
- Start-up current: 3.6 mA
- Start-up time: <5 s
- Minimum operating voltage: 10.5 V
- Multidrop current: 4 mA

## **Power supply**

## Terminal assignment


## Single compartment housing

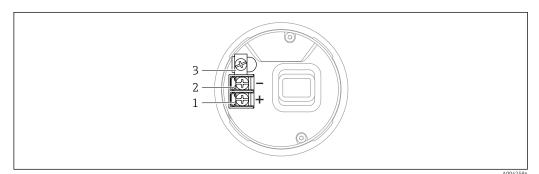

lacksquare 2 Connection terminals and ground terminal in the connection compartment

- 1 Plus terminal
- 2 Minus terminal
- 3 Internal ground terminal


## **Dual-compartment housing**

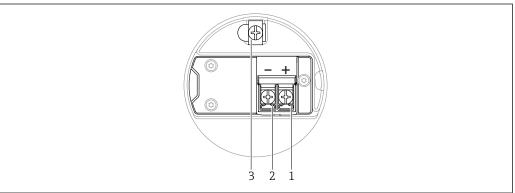

A0042803


- $\blacksquare$  3 Connection terminals and ground terminal in the connection compartment
- 1 Plus terminal
- 2 Minus terminal
- 3 Internal ground terminal

## Available device plugs

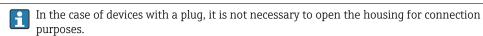

Use the enclosed seals to prevent the penetration of moisture into the device.

## Devices with M12 plug

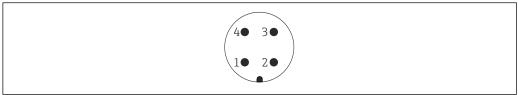

A001117

■ 4 View of the plug-in connection on the device

Pin	HART PROFIBUS PA
1	Signal +
2	Not used

Pin	HART PROFIBUS PA
3	Signal –
4	Earth

Pin	PROFINET over Ethernet-APL
1	APL signal -
2	APL signal +
3	Shielding
4	Not used

Endress+Hauser offers the following accessories for devices with an M12 plug:

Plug-in jack M 12x1, straight

- Material:
  - Body: PBT; union nut: nickel-plated die-cast zinc; seal: NBR
- Degree of protection (fully locked): IP67
- Order number: 52006263


Plug-in jack M 12x1, angled (not for PROFINET over Ethernet-APL)

- Material:
  - Body: PBT; union nut: nickel-plated die-cast zinc; seal: NBR
- Degree of protection (fully locked): IP67
- Order number: 71114212

Cable 4x0.34 mm<sup>2</sup> (20 AWG) with M12 plug-in jack, elbowed, screw plug, length 5 m (16 ft)

- Material: body: TPU; union nut: nickel-plated die-cast zinc; cable: PVC
- Degree of protection (fully locked): IP67/68
- Order number: 52010285
- Cable colors
  - 1 = BN = brown
  - 2 = WT = white
  - 3 = BU = blue
  - 4 = BK = black

## Devices with a Harting plug Han7D

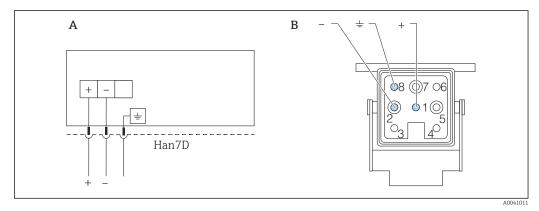

- A Electrical connection for devices with Harting plug Han7D
- B View of the plug-in connection on the device
- Brown
- ± Green/yellow
- + Blue

Material: CuZn, gold-plated contacts of the plug-in jack and plug

## Supply voltage

- Analog/HART: Ex d, Ex e, non-Ex: supply voltage: 10.5 to 35 V<sub>DC</sub>
- Analog/HART: Ex i: supply voltage: 10.5 to 30 V<sub>DC</sub>
- HART: Nominal current: 4 to 20 mA HART
- PROFINET over Ethernet-APL: APL power class A (9.6 to 15 V<sub>DC</sub> 540 mW)
- PROFIBUS PA
  - Non-hazardous, Ex d, Ex e: 9 to 32 V<sub>DC</sub>
  - Ex i FISCO principle: 9 to 17.5 V<sub>DC</sub>
  - Ex i entity concept: 9 to 24 V<sub>DC</sub>
  - Nominal current: 14 mA
  - Failure current FDE (Fault Disconnection Electronic) 0 mA

A suitable circuit breaker should be provided for the device in accordance with IEC/EN 61010.


Depending on the supply voltage at the time of power-on:

- The background lighting is deactivated (supply voltage <15 V 12 V)
- The Bluetooth function (order option) is also deactivated (supply voltage <12 V 10 V).
- Analog/HART: The power unit must be tested to ensure it meets safety requirements (e.g. PELV, SELV, Class 2) and must comply with the relevant protocol specifications. For 4 to 20 mA, the same requirements apply as for HART.
- PROFINET over Ethernet-APL: The APL field switch must be tested to ensure it meets safety requirements (e.g. PELV, SELV, Class 2) and must comply with the relevant protocol specifications.
- PROFIBUS PA:
  - Use only suitable and certified PROFIBUS PA components (e.g. DP/PA segment coupler) for the power supply.
  - FISCO/FNICO-compliant according to IEC 60079-27
  - The supply is not polarity-dependent

#### **Electrical connection**

### Connection examples


PROFINET over Ethernet-APL

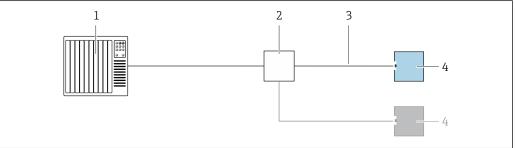

A0045803

- **■** 5 Connection example for PROFINET over Ethernet-APL
- 1 Automation system
- 2 APL field switch
- 3 Observe cable specifications
- 4 Transmitter


## PROFIBUS PA

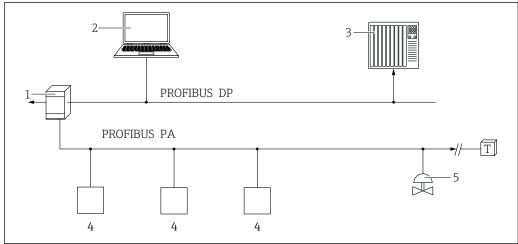

- Segment coupler
- Computer with PROFIusb and operating tool (e.g. DeviceCare/FieldCare) 2
- 3 PLC (programmable logic controller)
- Transmitter
- Additional functions (valves etc.)


## Potential equalization

If necessary, the potential matching line can be connected to the outer ground terminal of the device before the device is connected.

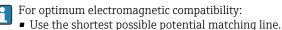


- Ensure a cross-section of at least 2.5 mm<sup>2</sup> (14 AWG).

## Single-compartment housing

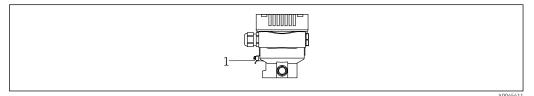

Ground terminal for connecting the potential matching line

## **Dual-compartment housing**

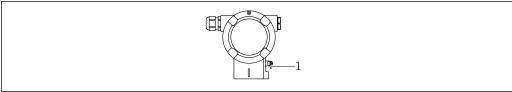

Ground terminal for connecting the potential matching line

## **Terminals**

- Supply voltage and inner ground terminal Clamping range: 0.5 to 2.5 mm<sup>2</sup> (20 to 14 AWG)
- External ground terminal Clamping range: 0.5 to 4 mm<sup>2</sup> (20 to 12 AWG)


## Cable entries

The type of cable entry depends on the device version ordered.

Always route connecting cables downwards so that moisture cannot penetrate the connection compartment.


If necessary, create a drip loop or use a weather protection cover.

## Single-compartment housing

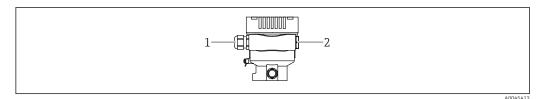

- 1 Cable entry
- 2 Blind plug

#### **Dual-compartment housing**

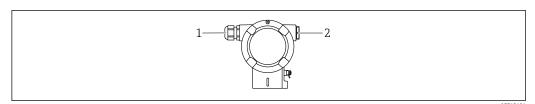

- 1 Cable entry
- 2 Blind plug

## Cable specification

- The cable outer diameter depends on the cable entry used
- Cable outer diameter
  - Plastic: Ø5 to 10 mm (0.2 to 0.38 in)
  - Nickel-plated brass: Ø7 to 10.5 mm (0.28 to 0.41 in)
  - Stainless steel: Ø7 to 12 mm (0.28 to 0.47 in)



PROFIBUS PA: Use a twisted, shielded twin-core cable, preferably cable type A.

For further information on the cable specification:

- PROFIBUS Assembling Guideline 8.022
- IEC 61158-2 (MBP).

## PROFINET with Ethernet-APL

The reference cable type for APL segments is fieldbus cable type A, MAU type 1 and 3 (specified in IEC 61158-2). This cable meets the requirements for intrinsically safe applications according to IEC TS 60079-47 and can also be used in non-intrinsically safe applications.

Cable type	A
Cable capacitance	45 to 200 nF/km
Loop resistance	15 to 150 Ω/km
Cable inductance	0.4 to 1 mH/km

Further details are provided in the Ethernet-APL Engineering Guideline (https://www.ethernet-apl.org).

## Overvoltage protection

## Devices without optional overvoltage protection

Equipment from Endress+Hauser fulfills the requirements of the product standard IEC/DIN EN 61326-1 (Table 2 Industrial Environment).

Depending on the type of port (DC power supply, input/output port) different testing levels according to IEC/DIN EN against transient overvoltages are applied (IEC/DIN EN 61000-4-5 Surge): Test level on DC power ports and input/output ports is  $1\,000\,V$  line to earth

## Devices with optional overvoltage protection

- Spark-over voltage: min.  $400~V_{DC}$  Tested according to IEC/DIN EN 60079-14 sub chapter 12.3 (IEC/DIN EN 60060-1 chapter 7)
   Nominal discharge current: 10~kA

## NOTICE

## The device may be damaged by excessively high electrical voltages.

► Always ground the device with integrated overvoltage protection.

## Overvoltage category

Overvoltage category II

## **Performance characteristics**

#### Response time

- HART:
  - Acyclic: min. 330 ms, typically 590 ms (depends on commands and number of preambles)
  - Cyclic (burst): min. 160 ms, typically 350 ms (depends on commands and number of preambles)
- PROFINET with Ethernet-APL: cyclic: min. 32 ms
- PROFIBUS PA:
  - Acyclic: approx. 60 ms to 70 ms (depending on Min. Slave Interval)
  - Cyclic: approx. 10 ms to 13 ms (depending on Min. Slave Interval)

# Reference operating conditions

- As per IEC 62828-2
- Ambient temperature  $T_A$  = constant, in the range +22 to +28 °C (+72 to +82 °F)
- Humidity  $\varphi$  = constant, in the range: 5 to 80 % rF  $\pm$  5 %
- Atmospheric pressure  $p_U$  = constant, in the range: 860 to 1060 mbar (12.47 to 15.37 psi)
- Position of the measuring cell: horizontal ±1°
- Membrane material: AISI 316L (1.4435), Alloy C (Alloy C only for standard device)
- Fill fluid:
  - Silicone oil, standard
  - Silicone oil, diaphragm seal (FDA)
- Input of LOW SENSOR TRIM and HIGH SENSOR TRIM for lower range value and upper range value
- Supply voltage: 24 V DC ±3 V DC
- Load with HART: 250  $\Omega$
- Turn Down TD= URL/ | URV LRV |
- Zero point-based span

## Total performance

The performance characteristics refer to the accuracy of the device. The factors influencing accuracy can be divided into two groups.

- Total performance of device
- Installation factors

All of the performance characteristics meet the requirement of  $\geq \pm 3$  sigma.

The total performance of the device comprises the reference accuracy and the ambient temperature effect and is calculated using the following formula:

Total performance =  $\pm \sqrt{((E1)^2 + (E2)^2)}$ 

E1 = Reference accuracy

E2 = Ambient temperature effect

Influence of diaphragm seal (calculation performed with Applicator "Sizing Diaphragm Seal")

Calculation of E2:

Ambient temperature effect per ±28 °C (50 °F)

(corresponds to a range of -3 to +53 °C (+27 to +127 °F))

 $E2 = E2_M + E2_E$ 

 $E2_M = Main temperature error$ 

 $E2_E$  = Electronics error

- ullet The values apply to process membranes made of 316L (1.4435)
- The values refer to the calibrated span.

## Calculation of the total performance with the Endress+Hauser Applicator

Detailed inaccuracies, e.g. for other temperature ranges, can be calculated with the Applicator "Sizing Pressure Performance".



A0038927

## Calculation of the diaphragm seal error with the Endress+Hauser Applicator

Diaphragm seal errors are not taken into consideration. They are calculated separately in the Applicator "Sizing Diaphragm Seal".



A0038925

## Reference accuracy [E1]

The reference accuracy comprises the non-linearity according to the limit point method, pressure hysteresis and non-repeatability in accordance with [IEC62828-1]. Reference accuracy for standard up to TD 100:1, for platinum up to TD 5:1.

Standard device (without diaphragm seal)

Measuring cell	Standard	Platinum 1)
400 mbar (6 psi)	TD 1:1 = ±0.05 % TD > 1:1 = ±0.05 % · TD	TD 1:1 = ±0.025 % TD > 1:1 to TD 5:1 = ±0.04 %
1 bar (15 psi)	TD 1:1 to 2.5:1 = ±0.05 % TD > 2.5:1 = ±0.02 % · TD	TD 1:1 = ±0.025 % TD > 1:1 to TD 5:1 = ±0.03 %
2 bar (30 psi)	TD 1:1 to 5:1 = ±0.05 % TD > 5:1 = ±0.01 % · TD	TD 1:1 = ±0.025 % TD > 1:1 to TD 5:1 = ±0.03 %
4 bar (60 psi) 10 bar (150 psi) 40 bar (600 psi)	TD 1:1 to 10:1 = ±0.05 % TD > 10:1 = ±0.005 % · TD	TD 1:1 = ±0.025 % TD > 1:1 to TD 5:1 = ±0.03 %
100 bar (1500 psi)	TD 1:1 to 10:1 = ±0.05 % TD > 10:1 = ±0.005 % · TD	TD 1:1 = ±0.035 % TD > 1:1 to TD 5:1 = ±0.04 %
400 bar (6 000 psi) 700 bar (10 500 psi)	TD 1:1 to 5:1 = ±0.1 % TD > 5:1 = ±0.02 % · TD	TD 1:1 = ±0.065 % TD > 1:1 to TD 5:1 = ±0.09 %

1) Platinum not for flush mount process connections G ½, NPT ¾ and M20.

## Devices with diaphragm seal

Measuring cell	Standard	Platinum
400 mbar (6 psi)	TD 1:1 = $\pm 0.15 \%$ TD > 1:1 = $\pm 0.15 \% \cdot TD$	not available
1 bar (15 psi)	TD 1:1 to 2.5:1 = $\pm 0.075$ % TD > 2.5:1 = $\pm 0.03$ % · TD	not available
2 bar (30 psi)	TD 1:1 to 5:1 = ±0.075 % TD > 5:1 = ±0.015 % · TD	not available
4 bar (60 psi) 10 bar (150 psi) 40 bar (600 psi) 100 bar (1500 psi)	TD 1:1 to 10:1 = ±0.075 % TD > 10:1 = ±0.0075 % · TD	not available
400 bar (6 000 psi)	TD 1:1 to 5:1 = $\pm 0.15 \%$ TD > 5:1 = $\pm 0.03 \% \cdot TD$	not available

Measuring uncertainty for small absolute pressure measuring ranges

The smallest extended uncertainty of measurement that can delivered by our standards in the 0.001 to 35 mbar (0.0000145 to 0.5075 psi) range is 0.1 % of the reading + 0.004 mbar (0.000058 psi).

## Temperature effect [E2]

## E2<sub>M</sub> - Main temperature error

The output changes due to the effect of the ambient temperature [IEC 62828-1] with respect to the reference temperature [IEC 62828-1]. The values specify the maximum error due to min./max. ambient or process temperature conditions.

400 mbar (6 psi), 1 bar (15 psi), 2 bar (30 psi) and 4 bar (60 psi) measuring cell Standard and platinum:  $\pm$  (0.04 %  $\cdot$  TD + 0.08 %)

10 bar (150 psi) and 40 bar (600 psi) measuring cell Standard and platinum:  $\pm$  (0.03 %  $\cdot$  TD + 0.03 %)

100 bar (1500 psi), 400 bar (6000 psi) and 700 bar (10500 psi) measuring cell Standard and platinum:  $\pm$  (0.015  $\%\cdot$  TD + 0.06 %)

 $E2_E$  - Electronics error

- 4 to 20 mA: 0.05 %
- Digital output HART: 0 %
- Digital output PROFINET: 0 %
- Digital output PROFIBUS PA: 0%

## Resolution

## Current output: <1 µA

#### **Total error**

The total error of the device comprises the total performance and the long-term stability effect and is calculated using the following formula:

Total error = total performance + long-term stability

## Calculation of the total error with the Endress+Hauser Applicator

Detailed measurement errors, e.g. for other temperature ranges, can be calculated with the Applicator "Sizing Pressure Performance".



A003892

## Calculation of the diaphragm seal error with the Endress+Hauser Applicator

Diaphragm seal errors are not taken into consideration. They are calculated separately in the Applicator "Sizing Diaphragm Seal".



A0038925

24

## Long-term stability

The specifications refer to the upper range limit (URL).

400 mbar (6 psi), 1 bar (15 psi) and 2 bar (30 psi) measuring cells

■ 1 year: ± 0.08 %

■ 5 years: ± 0.12 %

■ 10 years: ± 0.13 %

■ 15 years: ± 0.14 %

All other measuring cells

■ 1 year: ± 0.05 %

■ 5 years: ± 0.07 %


■ 10 years: ± 0.10 %

■ 15 years: ± 0.11 %

#### Response time T63 and T90

#### Dead time, time constant

Representation of dead time and time constant as per IEC62828-1:

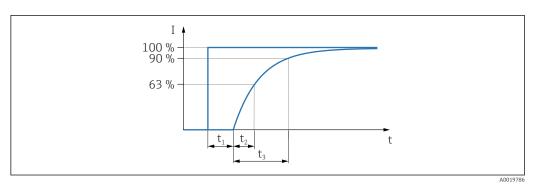

Step response time = dead time  $(t_1)$  + time constant T90  $(t_3)$  according to IEC62828-1

## Dynamic behavior, current output (HART electronics)

400 mbar (6 psi) standard measuring device (without diaphragm seal)

- Dead time  $(t_1)$ : maximum 45 ms
- Time constant T63 ( $t_2$ ): maximum 85 ms
- Time constant T90 (t<sub>3</sub>): maximum 200 ms

≥ 1 bar (15 psi) standard measuring device (without diaphragm seal)

- Dead time  $(t_1)$ : maximum 45 ms
- Time constant T63 (t<sub>2</sub>): maximum 45 ms
- Time constant T90 (t<sub>3</sub>): maximum 85 ms


Devices with diaphragm seal

Values like standard device (without diaphragm seal) plus influence of diaphragm seal. Calculation with Applicator Sizing Diaphragm Seal.

The "Thermal range expander" diaphragm seal can be used for extreme applications with high process temperatures and low ambient temperatures. The range of application is expanded by the use of two different fill fluids (fill fluid in the primary chamber for high process temperature and fill fluid in the secondary chamber for ambient temperature).

Ordering information: Product Configurator, order code for "Application package", option "Thermal Range Expander"


#### **Installation factors**

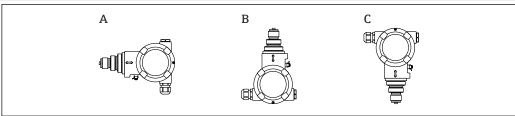

A0052060

## Standard device

- A: Axis of membrane horizontal: calibration position, no zero point shift
- Process connections G ½, ½ MNPT, JIS G ½, JIS R ½, M20x1.5
  - B: Membrane pointing upwards: measurement error ≤ +4 mbar (+0.06 psi)
  - B: Membrane pointing downwards: measurement error ≤ -4 mbar (-0.06 psi)
- Process connections G 1 A, G 1½, G 2, 1½ MNPT, 2 MNPT, M44x1,25, EN/DIN, ASME and JIS flanges
  - B: Membrane pointing upwards: measurement error ≤ +10 mbar (+0.15 psi)
  - B: Membrane pointing downwards: measurement error  $\leq -10$  mbar (-0.15 psi)
- The values are doubled for devices with inert oil.

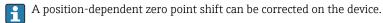

## Device with diaphragm seals

Take into account the additional influence of the hydrostatic pressure of the diaphragm seal oil.

Warm-up time

As per IEC 62828-4: ≤5 s

## Installation

#### Orientation

- A position-dependent zero point shift (when the vessel is empty the measured value does not display zero) can be corrected
- Diaphragm seals also shift the zero point, depending on the installation position
- The use of shutoff devices and/or siphons is recommended for installation.
- The orientation depends on the measuring application

#### Installation instructions

- Standard devices are installed according to the same guidelines as pressure gauges (DIN EN837-2).
- To ensure optimal readability of the local display, align the housing and local display.
- Endress+Hauser offers a mounting bracket for installing the device on pipes or walls.
- Use flushing rings for flanges, flange seals and pancake seals if buildup or clogging can be expected at the membrane
  - The flushing ring is clamped between the process connection and the flange, flange seal or pancake seal.
  - Material buildup in front of the membrane is flushed away and the pressure chamber is vented via the two lateral flushing holes.
- For measurements in media containing solids (e.g. dirty liquids), it makes sense to install separators and drain valves.
- Using a valve allows for easy commissioning, installation and maintenance without interrupting the process.
- When installing the device, establishing the electrical connection and during operation: prevent moisture from entering the housing.
- Point the cable and connector downwards where possible to prevent moisture from entering (e.g. rain or condensation water).

# Installation instructions for devices with diaphragm seals

#### General information

A diaphragm seal together with the transmitter form a closed, calibrated system, which is filled through openings in the diaphragm seal and in the transmitter's measurement system. These openings are sealed and must not be opened.

In the case of devices with diaphragm seals and capillaries, the zero point shift caused by the hydrostatic pressure of the filling liquid column in the capillaries must be taken into account when selecting the measuring cell. Perform zero adjustment if necessary. If a measuring cell with a small measuring range is selected, the nominal measuring cell range may be overdriven as a result of a position adjustment (position adjustment due to the zero offset caused by the installation position of the fluid column of the fill fluid).

For devices with a capillary, a suitable fastening device (mounting bracket) is recommended for installation.

During installation, ensure sufficient strain relief for the capillary to prevent it from bending (capillary bending radius  $\geq$  100 mm (3.94 in)).

Mount the capillary so that it is vibration-free (in order to avoid additional pressure fluctuations).

Do not mount capillaries in the vicinity of heating or cooling lines and protect them against direct sunlight.


Additional installation instructions are provided in the Applicator "Sizing Diaphragm Seal".

## Vacuum applications

For vacuum applications, pressure transmitters with a ceramic measuring membrane (oil-free) are preferable.

In vacuum applications, mount the pressure transmitter below the diaphragm seal. This prevents additional vacuum loading of the diaphragm seal caused by the presence of fill fluid in the capillary.

If the pressure transmitter is installed above the diaphragm seal, do not exceed the maximum height difference h1. The height difference h1 is shown in the Applicator "Sizing Diaphragm Seal".

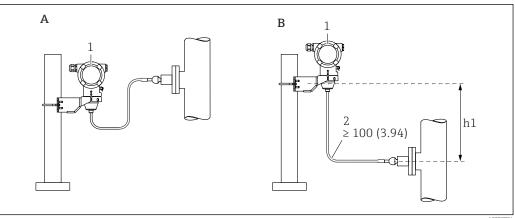

A003873

- A Recommended installation in a vacuum application
- B Installation above the diaphragm seal
- h1 Height difference
- 1 Device
- Bending radius  $\geq$  100 mm (3.94 in). Ensure strain relief to prevent the capillary from bending.

The maximum height difference depends on the density of the fill fluid and the lowest absolute pressure that can ever occur at the diaphragm seal (empty vessel).

# Sensor selection and arrangement

## Installing the device

Pressure measurement in gases

Mount the device with the shutoff device above the tapping point so that any condensate can flow into the process.

Pressure measurement in steam

Observe the maximum permitted ambient temperature of the transmitter!

Installation:

- Preferably install the device with a circular siphon below the tapping point.
   The device may also be installed above the tapping point.
- Fill the siphon with fluid before commissioning.

Advantages of using siphons:

- Protects the measuring instrument from hot, pressurized media by forming and accumulating condensate
- Dampens pressure shocks
- The defined water column only causes minimal (negligible) measurement errors and minimal (negligible) thermal effects on the device.

For technical data (e.q. materials, dimensions or order numbers), see the accessory document



Pressure measurement in liquids


Mount the device with the shutoff device below or at the same level as the tapping point.

Level measurement

- Always install the device below the lowest measuring point.
- Do not install the device at the following positions:
  - In the filling curtain
  - In the tank outlet
  - In the suction area of a pump
  - At a point in the tank that could be affected by pressure pulses from the agitator
- Install the device downstream from a shutoff device: the functional test and adjustment can then be carried out more easily.

Mounting bracket for device or separate housing

The device or the separate housing can be mounted on walls or pipes (for pipes with a diameter of  $1\frac{1}{4}$ " to 2") using the mounting bracket.

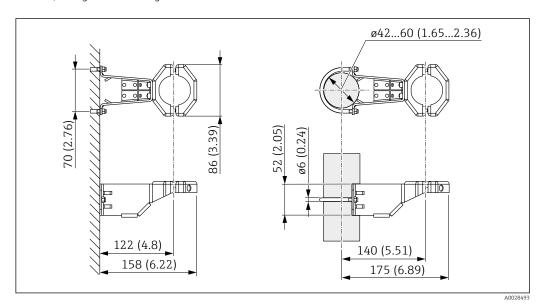

Unit of measurement mm (in)

Ordering information:

- Can be ordered via the Product Configurator
- Can be ordered as a separate accessory, part number 71102216



The mounting bracket is included in the delivery if you order the device with a separate housing.

# Special mounting instructions

## Wall and pipe mounting with a manifold (optional)

If the device is mounted on a shutoff device (e.g. manifold or shutoff valve), then use the bracket provided for this purpose. This makes it easier to disassemble the device.

For technical data, see the SD01553P accessory document.

## Sensor, remote (separate housing)

The housing of the device (including electronic insert) is mounted away from the measuring point.


This version thus facilitates trouble-free measurement

- Under particularly difficult measuring conditions (at installation locations that are cramped or difficult to access)
- If the measuring point is exposed to vibrations

Cable versions:

- PE: 2 m (6.6 ft), 5 m (16 ft) and 10 m (33 ft)
- FEP: 5 m (16 ft).

The sensor is supplied with the process connection and cable fitted. The housing (including electronic insert) and a mounting bracket are enclosed as separate units. The cable is provided with a socket at both ends. These sockets are simply connected to the housing (including electronic insert) and the sensor.

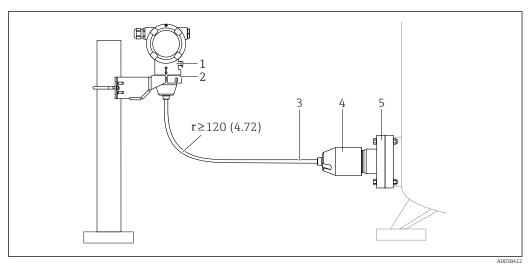

or remote (including electronic insert)

- 1 Sensor, remote (including electronic insert)
- 2 Mounting bracket provided, suitable for wall mounting or pipe mounting
- 3 Cable, both ends are fitted with a socket
- 4 Process connection adapter
- 5 Process connection with sensor

## Ordering information:

- Sensor, remote (including electronic insert), and mounting bracket can be ordered via the Product Configurator
- Mounting bracket can also be ordered as a separate accessory, part number 71102216

## Technical data for cable:

- Minimum bending radius: 120 mm (4.72 in)
- Cable extraction force: max. 450 N (101.16 lbf)
- Resistance to UV light

### Use in hazardous area:

- Intrinsically safe installations (Ex ia/IS)
- FM/CSA IS: for Div.1 installation only

## Reduction of the installation height

If the "Remote sensor" version is used, the installation height of the process connection is reduced compared to the dimensions of the standard version. For dimensions, see "Mechanical construction" section.

## **Environment**

## Ambient temperature range

The following values apply up to a process temperature of +85 °C (+185 °F). The permitted ambient temperature is reduced at higher process temperatures.


- Without segment display or graphic display:
  - Standard:-40 to +85 °C (-40 to +185 °F)
  - Optionally available: -50 to +85 °C (-58 to +185 °F)with restricted operating life and performance
  - Optionally available: -60 to +85 °C (-76 to +185 °F) with restricted operating life and performance; below -50 °C (-58 °F): devices can be permanently damaged
- With segment display or graphic display: -40 to +85 °C (-40 to +185 °F) with limitations in optical properties such as display speed and contrast for example. Can be used without limitations up to -20 to +60 °C (-4 to +140 °F)
  - Segment display: up to -50 to  $+85\,^{\circ}\text{C}$  (-58 to  $+185\,^{\circ}\text{F})$  with restricted operating life and performance
- Devices with PVC-coated capillary armor: -25 to +80 °C (-13 to +176 °F)
- Separate housing: -20 to +60 °C (-4 to +140 °F)

Applications with very high temperatures: use diaphragm seals with a temperature isolator or capillaries. Use a mounting bracket!

If vibrations additionally occur in the application: use a device with a capillary. Diaphragm seal with temperature isolator: use a mounting bracket!

## Ambient temperature T<sub>a</sub> depending on the process temperature T<sub>p</sub>

The process connection must be fully insulated for ambient temperatures below  $-40\,^{\circ}\text{C}$  ( $-40\,^{\circ}\text{F}$ ).

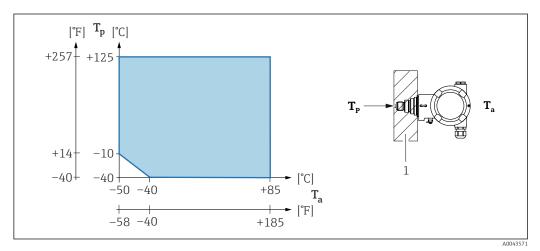

l Insulation material

## Hazardous area

- For devices for use in hazardous areas, see the Safety Instructions, Installation Drawing or Control Drawing
- Devices that have the most common explosion protection certificates (e.g. ATEX/ IEC Ex, etc.) can be used in explosive atmospheres up to an ambient temperature of -60 °C (-76 °F) (optionally available). The functionality of the explosion protection Ex ia is guaranteed for ambient temperatures to -50 °C (-58 °F) (optionally available).

At temperatures  $\leq$  -50 °C (-58 °F), explosion protection is guaranteed by the housing in the case of flameproof enclosure (Ex d) type of protection. The functionality of the transmitter cannot be fully guaranteed. The Ex ia capability can no longer be guaranteed.

## Storage temperature

- Without device display:
  - Standard: -40 to +90 °C (-40 to +194 °F)
  - Optionally available: -50 to +90 °C (-58 to +194 °F)with restricted operating life and performance
  - Optionally available: -60 to +90 °C (-76 to +194 °F) with restricted operating life and performance; below -50 °C (-58 °F): Ex d devices can be permanently damaged
- With device display: -40 to +85 °C (-40 to +185 °F)
- Separate housing: -40 to +60 °C (-40 to +140 °F)

With M12 plug, elbowed: -25 to +85 °C (-13 to +185 °F)

Devices with PVC-coated capillary armor: −25 to +90 °C (−13 to +194 °F)

## Operating altitude

Up to 5000 m (16404 ft) above sea level.

#### Climate class

Class 4K26 (air temperature: -20 to +50 °C (-4 to +122 °F), relative air humidity: 4 to 100 %) in accordance with IEC/EN 60721-3-4.

Condensation is possible.

## Atmosphere

## Operation in very corrosive environment

For corrosive environments (e.g. maritime environment / coastal areas), Endress+Hauser recommends the use of a PVC-coated capillary armor or a PTFE capillary armor for capillaries and the stainless steel housing. The transmitter can be additionally protected by a special coating (Technical Special Product (TSP)).

## Degree of protection

Test as per IEC 60529 and NEMA 250-2014

## Housing and process connection

IP66/68, TYPE 4X/6P

(IP68:  $(1.83 \text{ mH}_2\text{O for } 24 \text{ h})$ )

#### Cable entries

- Gland M20, plastic, IP66/68 TYPE 4X/6P
- Gland M20, brass nickel plated, IP66/68 TYPE 4X/6P
- Gland M20, 316L, IP66/68 TYPE 4X/6P
- Thread M20, IP66/68 TYPE 4X/6P
- Thread G1/2, IP66/68 TYPE 4X/6P

If the G1/2 thread is selected, the device is delivered with an M20 thread as standard and a G1/2 adapter is included with the delivery, along with the corresponding documentation

- Thread NPT1/2, IP66/68 TYPE 4X/6P
- Dummy plug transport protection: IP22, TYPE 2
- HAN7D plug, 90 degrees, IP65 NEMA Type 4X
- M12 plug

When housing is closed and connecting cable is plugged in: IP66/67 NEMA Type 4X When housing is open or connecting cable is not plugged in: IP20, NEMA Type 1

#### NOTICE

## M12 pluq and HAN7D pluq: incorrect installation can invalidate the IP protection class!

- The degree of protection only applies if the connecting cable used is plugged in and screwed tight.
- The degree of protection only applies if the connecting cable used is specified according to IP67 NEMA Type 4X.
- ▶ The IP protection classes are only maintained if the dummy cap is used or the cable is connected.

## Process connection and process adapter when using the separate housing

## FEP cable

- IP69 (on sensor side)
- IP66 TYPE 4/6P
- IP68 (1.83 mH<sub>2</sub>O for 24 h) TYPE 4/6P

## PE cable

- IP66 TYPE 4/6P
- IP68 (1.83  $mH_2O$  for 24 h) TYPE 4/6P

#### Vibration resistance

## Aluminum single-compartment housing

Description	Sinusoidal vibration IEC62828-1	Shock
Device	10 Hz to 60 Hz: ±0.35 mm (0.0138 in) 60 Hz to 1000 Hz: 5 g	30 g
Device with "Compact" or "Temperature isolator" diaphragm seal type 1)	10 Hz to 60 Hz: ±0.15 mm (0.0059 in) 60 Hz to 1000 Hz: 2 g	30 g

For applications with very high temperatures, either a device with a temperature isolator or with a
capillary can be used. If vibrations also occur in the application, Endress+Hauser recommends using a
device with a capillary. If a device with a temperature isolator or capillary is used, it must be mounted with
a mounting bracket.

#### Aluminum dual-compartment housing

Description	Sinusoidal vibration IEC62828-1	Shock
Device	10 Hz to 60 Hz: ±0.15 mm (0.0059 in) 60 Hz to 1000 Hz: 2 g	30 g
Device with "Compact" or "Temperature isolator" diaphragm seal type $^{1)}$	10 Hz to 60 Hz: ±0.15 mm (0.0059 in) 60 Hz to 1000 Hz: 2 g	30 g

For applications with very high temperatures, either a device with a temperature isolator or with a
capillary can be used. If vibrations also occur in the application, Endress+Hauser recommends using a
device with a capillary. If a device with a temperature isolator or capillary is used, it must be mounted with
a mounting bracket.

# Stainless steel dual-compartment housing and stainless steel precision-cast dual-compartment housing

Description	Sinusoidal vibration IEC62828-1	Shock
Device	10 Hz to 60 Hz: ±0.15 mm (0.0059 in) 60 Hz to 1000 Hz: 2 g	15 g
Device with "Compact" or "Temperature isolator" diaphragm seal type 1)	10 Hz to 150 Hz: 0.2 g	15 g

For applications with very high temperatures, either a device with a temperature isolator or with a
capillary can be used. If vibrations also occur in the application, Endress+Hauser recommends using a
device with a capillary. If a device with a temperature isolator or capillary is used, it must be mounted with
a mounting bracket.

# Electromagnetic compatibility (EMC)

- Electromagnetic compatibility as per IEC 61326 series and NAMUR recommendation EMC (NE21)
- With regard to the safety function (SIL), the requirements of IEC 61326-3-x are satisfied.
- Maximum deviation with interference influence: < 0.5% of span with full measuring range (TD 1:1)</li>

For more details refer to the EU Declaration of Conformity.

## **Process**


## Process temperature range

## Standard device

## **NOTICE**

The permitted process temperature depends on the process connection, process seal, ambient temperature and the type of approval.

▶ All the temperature data in this document must be taken into consideration when selecting the device.

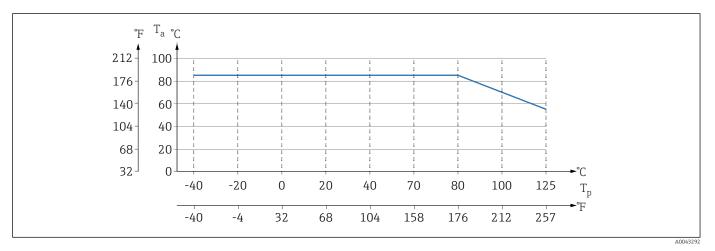

 $\blacksquare$  6 Values apply for vertical mounting without insulation.

 $T_n$  *Process temperature* 

*T<sub>a</sub>* Ambient temperature

## Diaphragm seal fill fluid

Fill fluid	$P_{abs} = 0.05 \text{ bar } (0.725 \text{ psi})^{1)}$	$P_{abs} \ge 1 \text{ bar (14.5 psi)}^{2}$
Silicone oil	-40 to +180 °C (-40 to +356 °F)	-40 to +250 °C (-40 to +482 °F)
High-temperature oil	-20 to +200 °C (-4 to +392 °F)	-20 to +400 °C (-4 to +752 °F) <sup>3) 4) 5)</sup>
Low-temperature oil	−70 to +120 °C (−94 to +248 °F)	−70 to +180 °C (−94 to +356 °F)
Vegetable oil	-10 to +160 °C (+14 to +320 °F)	-10 to +220 °C (+14 to +428 °F)
Inert oil	-40 to +100 °C (-40 to +212 °F)	-40 to +175 °C (-40 to +347 °F) <sup>6) 7)</sup>

- 1) Permitted temperature range at  $p_{abs} = 0.05$  bar (0.725 psi) (observe temperature limits of the device and the system!)
- 2) Permitted temperature range at  $p_{abs} \ge 1$  bar (14.5 psi) (observe temperature limits of the device and the system!)
- 3) 325 °C (617 °F) at  $\geq$ 1 bar (14.5 psi) absolute pressure
- 4) 350 °C (662 °F) at  $\geq$ 1 bar (14.5 psi) absolute pressure (max. 200 hours)
- 5)  $400 \,^{\circ}\text{C} (752 \,^{\circ}\text{F}) \text{ at} \ge 1 \text{ bar (14.5 psi) absolute pressure (max. 10 hours)}$
- 6) 150 °C (302 °F) at  $\geq$ 1 bar (14.5 psi) absolute pressure
- 7) 175 °C (347 °F) at  $\geq$ 1 bar (14.5 psi) absolute pressure (max. 200 hours)

Fill fluid	Density <sup>1)</sup> kg/m <sup>3</sup>
Silicone oil	970
High-temperature oil	995
Low-temperature oil	940
Vegetable oil	920
Inert oil	1900

1) Density of the diaphragm seal fill fluid at 20  $^{\circ}\text{C}$  (68  $^{\circ}\text{F}).$ 

The calculation of the operating temperature range of a diaphragm seal system depends on the fill fluid, capillary length and capillary internal diameter, process temperature and oil volume of the diaphragm seal. Detailed calculations, e.g. for temperature ranges, vacuum and temperature ranges, are done separately in the Applicator "Sizing Diaphragm Seal".



V003603E

## Oxygen applications (gaseous)

Oxygen and other gases can react explosively to oils, grease and plastics. The following precautions must be taken:

- All components of the system, such as devices, must be cleaned in accordance with national requirements.
- Depending on the materials used, a certain maximum temperature and a maximum pressure must not be exceeded for oxygen applications.

The cleaning of the device (not accessories) is provided as an optional service.

$T_{max}$	P <sub>max</sub> <sup>1)</sup>
80 °C (176 °F)	80 bar (1200 psi)
> 80 to 120 °C (176 to 248 °F)	70 bar (1050 psi)

1) Depends on the lowest-rated element, with regard to pressure, of the selected components: overpressure limit (OPL) of the measuring cell, process connection (1.5 x PN) or fill fluid

## Standard device

- Process connections with internal membrane: -40 to +125 °C (-40 to +257 °F); 150 °C (302 °F) for max, one hour
- Process connections with flush membrane:
  - Thread (ISO228, ASME, metric DIN13) and flanges (EN, ASME, JIS): -40 to +100 °C (-40 to +212 °F)
  - Exceptions with seal supplied (M20 x 1.5, G1/2 DIN3852): -20 to +85 °C (-4 to +185 °F)

## Devices with diaphragm seal

- $\blacksquare$  Depending on diaphragm seal and fill fluid:–70 °C (–94 °F)up to +400 °C (+752 °F)
- A4 screws of process connection, threaded separator:  $T_{min}$  –60 °C (–76 °F)
- Observe the maximum gauge pressure and maximum temperature

## Diaphragm seal with tantalum membrane

 $-70 \text{ to } +300 ^{\circ}\text{C} (-94 \text{ to } +572 ^{\circ}\text{F})$ 

#### Devices with PTFE-coated diaphragm seal membrane


The anti-stick coating has very good anti-friction properties and protects the membrane against abrasive media.

## NOTICE

### Destruction of the device due to incorrect use of PTFE coating!

► The PTFE coating used is designed to protect the unit against abrasion. It does not provide protection against corrosive media.

Area of application of the 0.25 mm (0.01 in) PTFE foil on AISI 316L (1.4404/1.4435) membrane, see the following graphic:

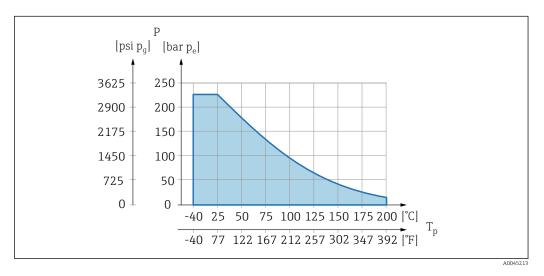


For vacuum applications:  $p_{abs} \le 1$  bar (14.5 psi) to 0.05 bar (0.725 psi) to max.+150 °C (302 °F). If a PTFE coating has been selected, a conventional membrane is always delivered.

## Diaphragm seal capillary armor

Process temperature depending on the ambient temperature.

- 316L: No restrictions
- PTFE: No restrictions
- PVC: See the following diagram

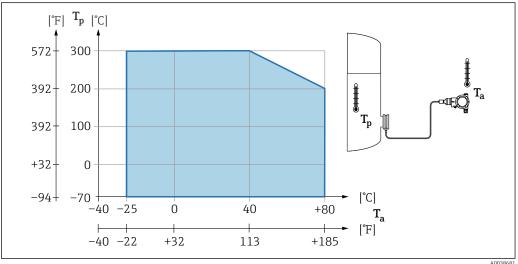

## Process pressure range

## Pressure specifications

The maximum pressure for the device depends on the lowest-rated element with regard to pressure.

Components are: process connection, optional mounting parts, or accessories.

## **WARNING**

#### Incorrect design or use of the device may cause injury due to bursting parts!

- ▶ Only operate the device within the specified limits for the components!
- ▶ MWP (maximum working pressure): The maximum working pressure is specified on the nameplate. This value refers to a reference temperature of +20 °C (+68 °F) and may be applied to the device for an unlimited time. Note temperature dependence of MWP. For flanges, refer to the following standards for the permitted pressure values at higher temperatures: EN 1092-1 (with regard to their stability/temperature property, the materials 1.4435 and 1.4404 are grouped together under EN 1092-1; the chemical composition of the two materials can be identical.), ASME B 16.5a, JIS B 2220 (the latest version of the standard applies in each case). Maximum working pressure data that deviate from this are provided in the relevant sections of the Technical Information.
- ► The overpressure limit is the maximum pressure that a device may be subjected to during a test. The overpressure limit exceeds the maximum working pressure by a certain factor. This value refers to a reference temperature of +20 °C (+68 °F).
- ► The Pressure Equipment Directive (2014/68/EU) uses the abbreviation "PS". The abbreviation "PS" corresponds to the MWP (maximum working pressure) of the device.
- ► The Pressure Equipment Directive (2014/68/EU) uses the abbreviation "PT". The abbreviation "PT" corresponds to the OPL (Over Pressure Limit) of the device. OPL (Over Pressure Limit) is a test pressure.
- ▶ In the case of measuring cell range and process connection combinations where the overpressure limit (OPL) of the process connection is less than the nominal value of the measuring cell, the device is set at the factory, at the very maximum, to the OPL value of the process connection. If the entire measuring cell range must be used, select a process connection with a higher OPL value (1.5 x PN; MWP = PN).
- lacktriangle Oxygen applications: do not exceed values for  $P_{max}$  and  $T_{max}$ .

#### **Burst pressure**

As of the specified burst pressure, the complete destruction of the pressure-bearing parts and/or a device leak must be expected. It is therefore imperative to avoid such operating conditions by carefully planning and sizing your facility.

#### Ultrapure gas applications

Endress+Hauser also offers devices for special applications, such as for ultrapure gas, that are cleaned of oil and grease. No special restrictions regarding the process conditions apply to these devices.

#### Hydrogen applications

A **gold-coated** metallic membrane offers universal protection against hydrogen diffusion, both in gas applications and in applications with water-based solutions.


# Steam applications and saturated steam applications

For steam and saturated steam applications: Use a device with a metallic membrane or provide a siphon for temperature decoupling when installing.

#### Thermal insulation


#### Thermal insulation with diaphragm seal directly mounted

The device may only be insulated up to a certain height. The maximum permitted insulation height is indicated on the device and applies to an insulation material with a heat conductivity  $\leq 0.04~\text{W/(m~x~K)}$  and to the maximum permitted ambient and process temperature. The data were determined under the most critical application "quiescent air". Maximum permitted insulation height, indicated here on a device with a flange:

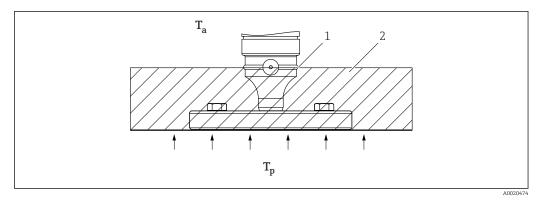

- $T_a$  Ambient temperature at transmitter
- $T_p$  Maximum process temperature
- 1 Maximum permitted insulation height
- 2 Insulation material

# Mounting with "Compact" diaphragm seal type

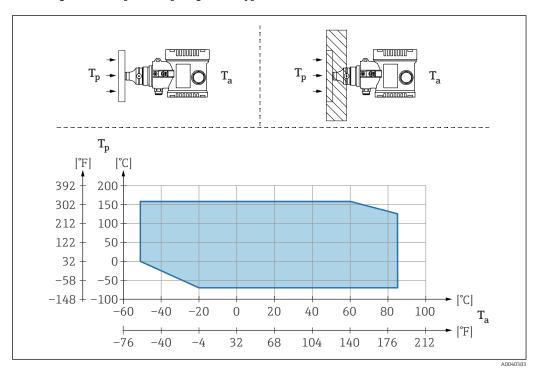

- $T_a$  Ambient temperature at transmitter
- $T_p$  Maximum process temperature

T <sub>a</sub>	$T_{p}$
+85 °C (+185 °F)	-70 to +120 °C (-94 to +248 °F)
+60 °C (+140 °F)	−70 to +160 °C (−94 to +320 °F)
−20 °C (−4 °F)	−70 to +160 °C (−94 to +320 °F)
-50 °C (-58 °F)	0 to +160 °C (+32 to +320 °F)

## Thermal insulation when mounting with a "Temperature isolator" diaphragm seal type

Use of temperature isolators in the event of constant extreme medium temperatures which cause the maximum permissible electronics temperature of +85 °C (+185 °F) to be exceeded. Diaphragm seal systems with temperature isolators can be used up to a maximum temperature of +400 °C (+752 °F) depending on the fill fluid used. To minimize the influence of rising heat, mount the device horizontally or with the housing pointing downwards. The additional installation height brings about


a zero point shift due to the hydrostatic column in the temperature isolator. This zero point shift can be corrected on the device.

The maximum ambient temperature  $T_{\text{a}}$  at the transmitter depends on the maximum process temperature  $T_{\text{p}}.$ 

The maximum process temperature depends on the fill fluid used.

The "Thermal Range Expander" diaphragm seal can be used for extreme applications with high process temperatures and low ambient temperatures. The range of application is expanded by the use of two different fill fluids (fill fluid in the primary chamber for high process temperature and fill fluid in the secondary chamber for ambient temperature).

Ordering information: Product Configurator, order code for "Application package", option "Thermal Range Expander"

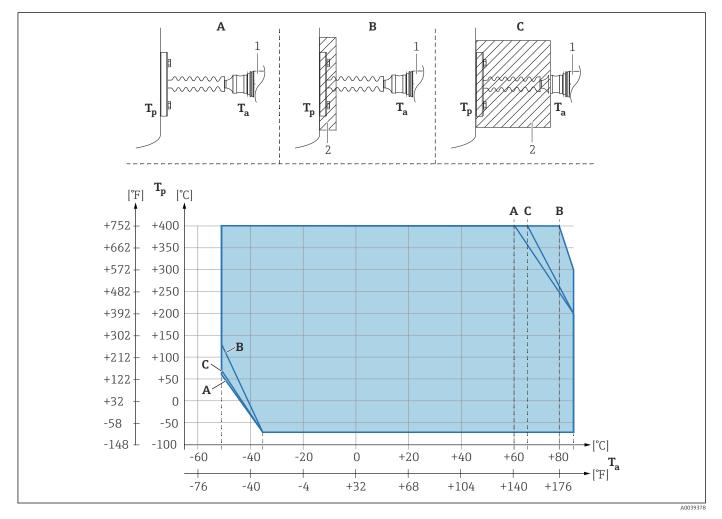

- A No insulation
- B Insulation 30 mm (1.18 in)
- C Maximum insulation
- 1 Transmitter
- 2 Insulation material

Position	T <sub>a</sub> 1)	T <sub>p</sub> <sup>2)</sup>		
A	60 °C (140 °F)	400 °C (752 °F) <sup>3)</sup>		
	85 °C (185 °F)	200 °C (392 °F)		
	-50 °C (-58 °F)	60 °C (140 °F)		
	-35 °C (-31 °F)	−70 °C (−94 °F)		
В	80 °C (176 °F)	400 °C (752 °F) <sup>3)</sup>		
	85 °C (185 °F)	300 °C (572 °F)		

Position	T <sub>a</sub> 1)	T <sub>p</sub> <sup>2)</sup>	
	-50 °C (-58 °F)	130 °C (266 °F)	
	-35 °C (-31 °F)	−70 °C (−94 °F)	
С	67 °C (153 °F)	400 °C (752 °F) <sup>3)</sup>	
	85 °C (185 °F)	200 °C (392 °F)	
	-50 °C (-58 °F)	70 °C (158 °F)	
	-35 °C (-31 °F)	−70 °C (−94 °F)	


- 1) Maximum ambient temperature at transmitter
- 2) Maximum process temperature
- 3) Process temperature: max. +400 °C (+752 °F), depending on the fill fluid used

#### Thermal Range Expander

The "Thermal Range Expander" diaphragm seal can be used for extreme applications with high process temperatures and low ambient temperatures. The range of application is expanded by the use of two different fill fluids (fill fluid in the primary chamber for high process temperature and fill fluid in the secondary chamber for ambient temperature).

The device may only be insulated up to a certain height. The maximum permitted insulation height applies to an insulation material with a thermal conductivity  $\leq 0.04 \, \text{W/(m x K)}$  and to the maximum permitted ambient temperature and process temperature. The data were determined under the application "quiescent air".

Ordering information: Product Configurator, order code for "Application package", option "Thermal Range Expander"

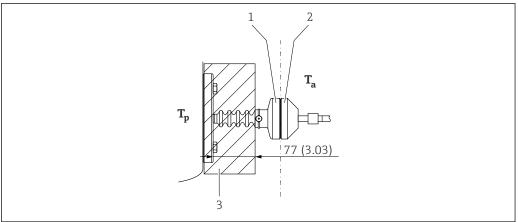

A0054921

- 1 Primary chamber
- 2 Secondary chamber
- 3 Insulation material

Without insulation, the ambient temperature decreases by 5 K.


# Mechanical construction

# Design dimensions

# Height of standard device

The device height is calculated from

- the height of the housing
- the height of the individual process connection

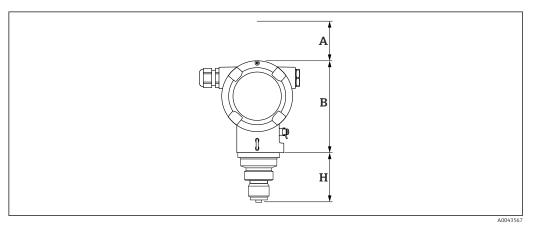


A Installation clearance

- B Height of the housing
- H Height of the process connection

## Device height, diaphragm seal

The device height is calculated from


- the height of the housing
- the height of optional mounted parts such as temperature isolators or capillaries
- the height of the individual process connection

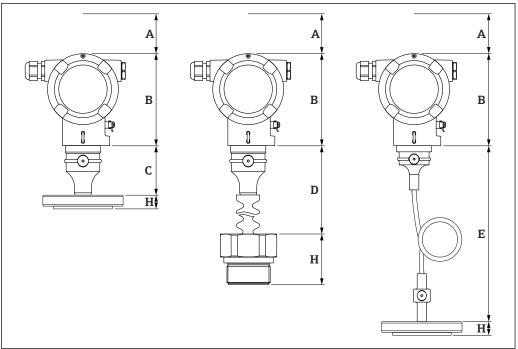

- A Installation clearance
- B Height of the housing
- ${\it C~-} Height~of~the~mounted~parts,~with~the~"Compact"~diaphragm~seal~here,~for~example$
- D Height of the mounted parts, with the "Temperature isolator" diaphragm seal type here, for example
- E Height of the mounted parts, here with the "Capillary" diaphragm seal type for example
- H Height of the process connection

## **Dimensions**

# Single-compartment housing

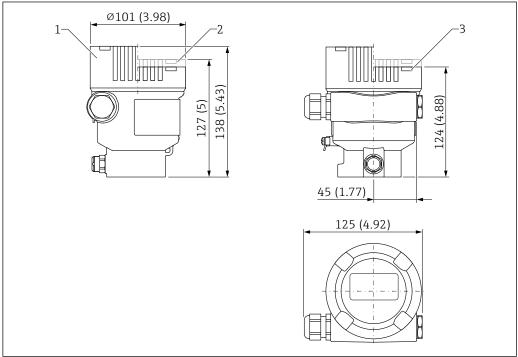


A0054983

Unit of measurement mm (in)

- 1 Device with display, cover with sight glass made of glass (devices for Ex d/XP, dust Ex): 138 mm (5.43 in)
- 2 Device with display, cover with plastic sight glass: 127 mm (5 in)
- 3 Device without display, cover without sight glass: 124 mm (4.88 in)

Cover optionally with ANSI Safety Red (color RAL3002) coating.

# **Dual-compartment housing**

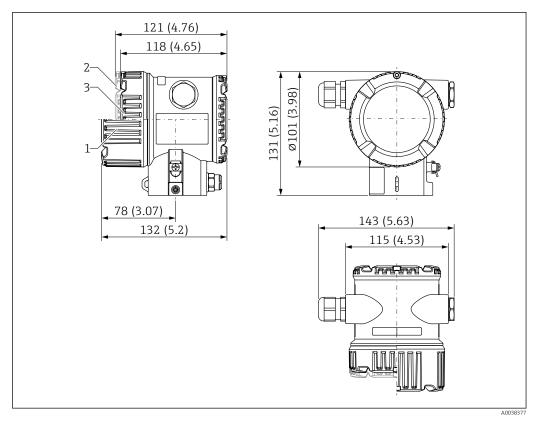


Unit of measurement mm (in)

- Device with display, cover with sight glass made of glass (devices for Ex d/XP, dust Ex): 132 mm (5.2 in) Device with display, cover with plastic sight glass: 121 mm (4.76 in)
- 2
- Device without display, cover without sight glass: 118 mm (4.65 in)

Cover optionally with ANSI Safety Red (color RAL3002) coating.


# Stainless steel dual-compartment housing, precision cast

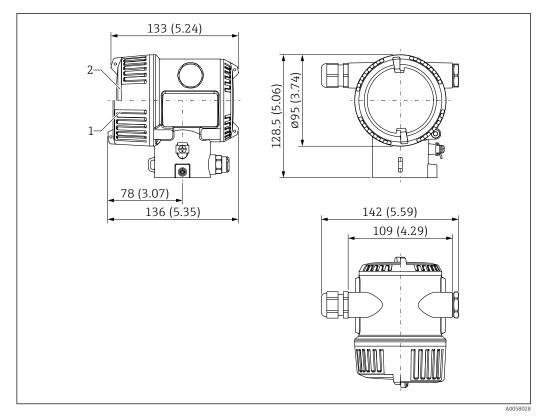


Unit of measurement mm (in)

- Device with display, cover with sight glass made of glass (devices for Ex d/XP, dust Ex): 136 mm (5.35 in)
- Device without display, cover without sight glass: 133 mm (5.24 in)

# Sensor, remote (separate housing)

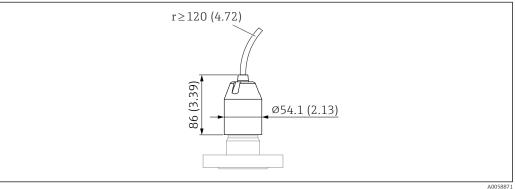


# Bracket and cable length

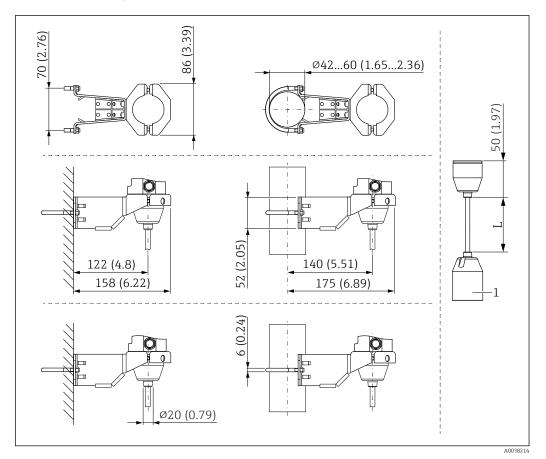

Unit of measurement mm (in)

- 1 86 mm (3.39 in)
- L Length of cable versions

## Mounted parts, diaphragm seal

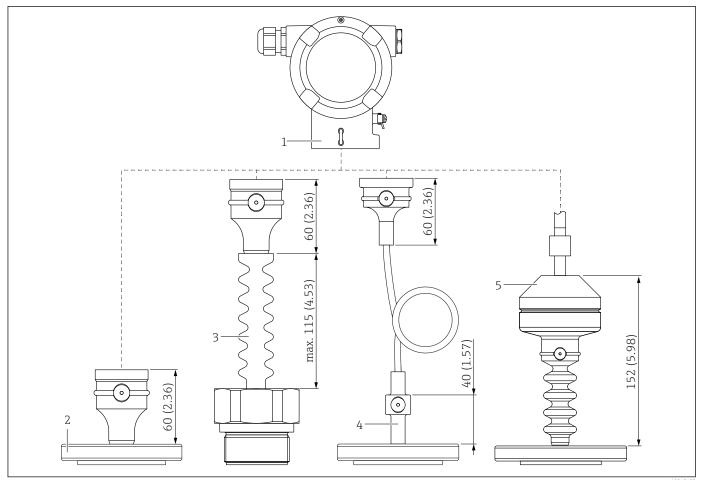

- 1 Housing
- 2 Diaphragm seal, e.g. flange diaphragm seal here
- 3 Diaphragm seal with temperature isolator
- 4 Process connections with capillaries are 40 mm (1.57 in) higher than process connections without capillaries
- 5 Thermal Range Expander

# Maximum working pressure and overpressure limit

The maximum working pressure (MWP) and the overpressure limit (OPL) of the sensor can deviate from the maximum MWP and OPL of the process connection.


## **Explanation of terms**

- DN or NPS or A = alphanumeric identifier of the flange size
- ullet PN or Class or K = alphanumeric pressure rating of a component

## Outer diameter of capillary

Designation	Outer diameter
Flexible armor made from 316L	8 mm (0.31 in)
Flexible armor with PVC-coating	10 mm (0.39 in)
Flexible armor with PTFE-coating	12.5 mm (0.49 in)


# Thread ISO 228 G, flush membrane, standard device

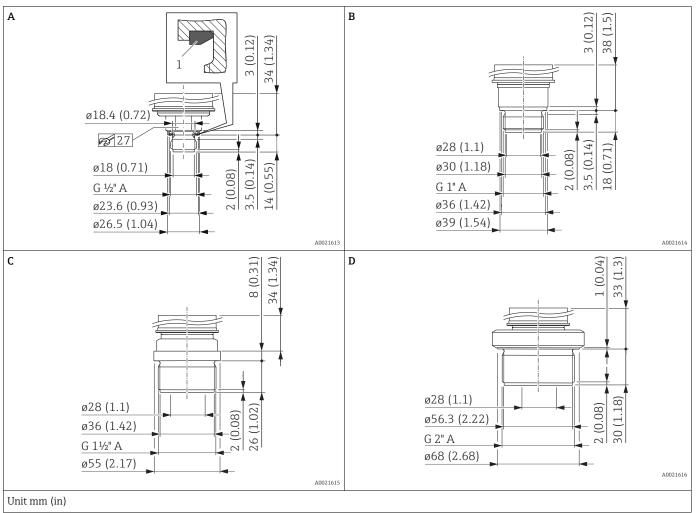

Item	Designation	Material	Order option 1)
A	Thread ISO 228 G ½" A, DIN 3852 FKM form seal (item 1) pre-installed	AISI 316L	wjj
A	Thread ISO 228 G ½" A, DIN 3852 FKM form seal (item 1) pre-installed	Alloy C276 (2.4819)	wjc
В	Thread ISO 228 G 1" A	AISI 316L	WLJ
В	Thread ISO 228 G 1" A	Alloy C276 (2.4819)	WLC
С	Thread ISO 228 G 11/2" A	AISI 316L	WNJ
С	Thread ISO 228 G 11/2" A	Alloy C276 (2.4819)	WNC
D	Thread ISO 228 G 2" A	AISI 316L	WPJ
D	Thread ISO 228 G 2" A	Alloy C276 (2.4819)	WPC

1) Product Configurator order code for "Process connection"


# Thread DIN, flush membrane, standard device

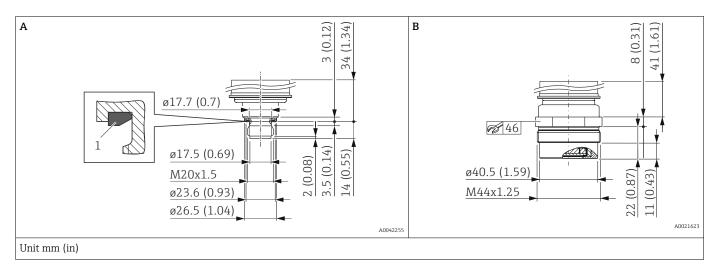

Item	Designation	Material	Order option 1)
A	Thread DIN 16288 M20 FKM 80 flat seal (item 1) pre-installed	AISI 316L	X6J
A	Thread DIN 16288 M20 FKM 80 flat seal (item 1) pre-installed	Alloy C276 (2.4819)	X6C
В	Thread DIN 13 M44 x 1.25	AISI 316L	X7J

1) Product Configurator order code for "Process connection"


# Thread ASME, flush membrane, standard device

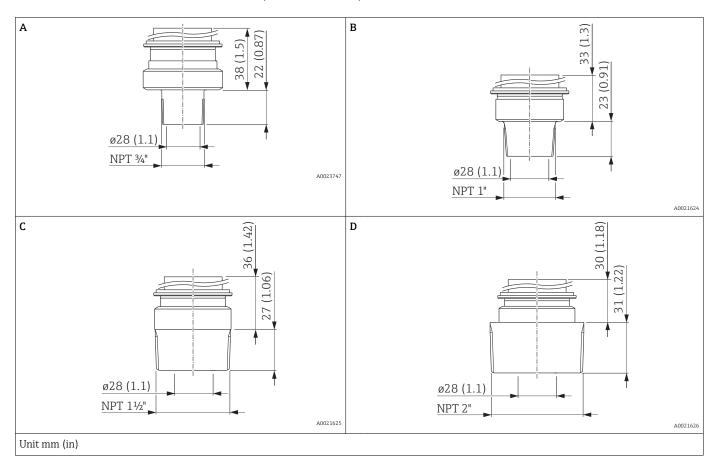

Item	Designation	Material	Order option 1)
A	Thread ASME 3/4" MNPT	AISI 316L	VHJ
В	Thread ASME 1" MNPT	AISI 316L	VJJ
В	Thread ASME 1" MNPT	Alloy C276 (2.4819)	VJC
С	Thread ASME 1½" MNPT	AISI 316L	VLJ
С	Thread ASME 1½" MNPT	Alloy C276 (2.4819)	VLC
D	Thread ASME 2" MNPT	AISI 316L	VMJ
D	Thread ASME 2" MNPT	Alloy C276 (2.4819)	VMC

1) Product Configurator order code for "Process connection"


# Thread ISO 228 G, internal membrane, standard device

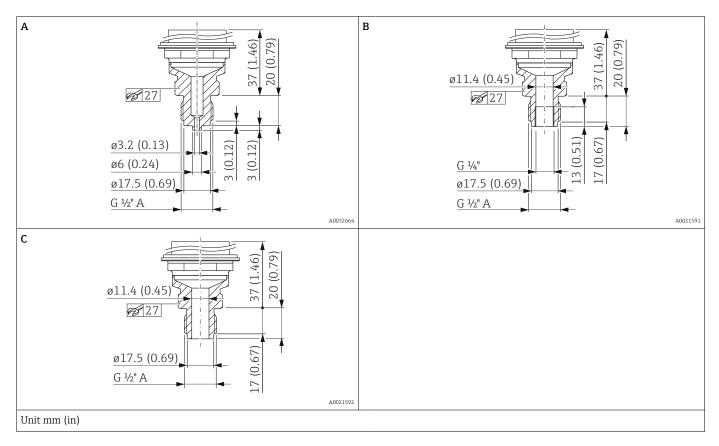

Item	Designation	Material	Order option 1)
A	Thread ISO 228 G ½" A EN837 Bore 11.4 mm (0.45 in) = 400 bar (6000 psi) Bore 3.2 mm (0.13 in) = 700 bar (10500 psi)	AISI 316L	WBJ
A	Thread ISO 228 G $\frac{1}{2}$ " A EN837 Bore 11.4 mm (0.45 in) = 400 bar (6000 psi)	Alloy C276 (2.4819)	WWC
В	Thread ISO 228 G ½"A,	AISI 316L	WXJ
b	$G \frac{1}{4}$ " (female) bore 11.4 mm (0.45 in) = 400 bar (6000 psi)	Alloy C276 (2.4819)	WXC
С	Thread ISO 228 G $\frac{1}{2}$ " A, bore 11.4 mm (0.45 in) = 400 bar (6000 psi)	AISI 316L	wwj
С	Thread ISO 228 G $\frac{1}{2}$ " A, bore 11.4 mm (0.45 in) = 400 bar (6000 psi)	Alloy C276 (2.4819)	WBC

1) Product Configurator order code for "Process connection"


# Thread ASME B1.20.1, internal membrane, standard device

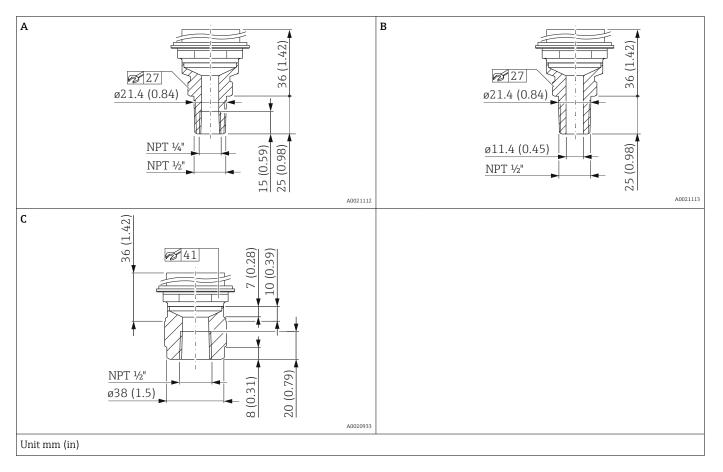

Item	Designation	Material	Order option 1)
A	Thread ASME ½" MNPT, ¼" FNPT	AISI 316L	VXJ
A	Thread ASME ½" MNPT, ¼" FNPT	Alloy C276 (2.4819)	VXC
В	Thread ASME ½" MNPT, bore 11.4 mm (0.45 in) = 400 bar (6000 psi) Bore 3.2 mm (0.13 in) = 700 bar (10500 psi)	AISI 316L	vwj
В	Thread ASME ½" MNPT, bore 11.4 mm (0.45 in) = 400 bar (6000 psi) Bore 3.2 mm (0.13 in) = 700 bar (10500 psi)	Alloy C276 (2.4819)	VWC
С	Thread ASME ½" FNPT	AISI 316L	VNJ
С	Thread ASME ½" FNPT	Alloy C276 (2.4819)	VNC

1) Product Configurator order code for "Process connection"


# Thread JIS, internal membrane, standard device

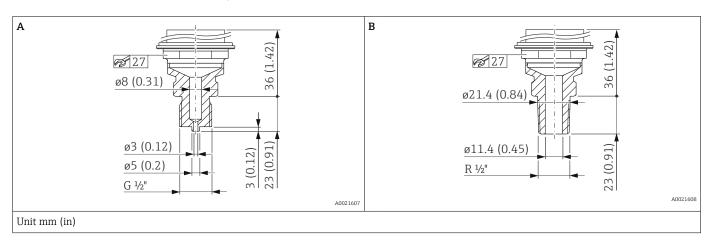

Item	Designation	Material	Order option 1)
A	JIS B0202 G ½" (male)	AISI 316L	ZBJ
В	JIS B0203 R 1/2" (male)	AISI 316L	ZJJ

1) Product Configurator order code for "Process connection"

Thread DIN 13, internal membrane, standard device

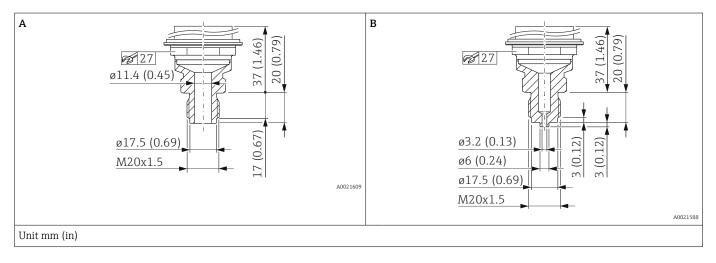


Item	Designation	Material	Order option 1)
A	DIN 13 M20 x 1.5 11.4 mm (0.45 in)	AISI 316L	хој
A	DIN 13 M20 x 1.5 11.4 mm (0.45 in)	Alloy C276 (2.4819)	XOC
В	DIN 13 M20 x 1.5, 3 mm (0.12 in)	AISI 316L	XZJ
В	DIN 13 M20 x 1.5, 3 mm (0.12 in)	Alloy C276 (2.4819)	XZC

1) Product Configurator order code for "Process connection"

# Flange EN1092-1, flush membrane, standard device

Connection dimensions according to EN1092-1.

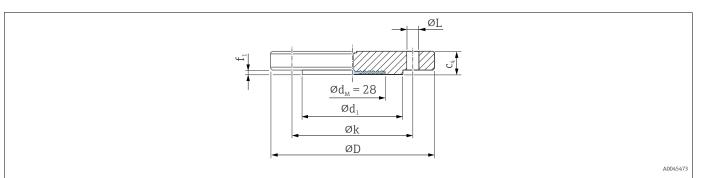

ØD Diameter of flange

c<sub>4</sub> Thickness

 $\emptyset d_1$  Raised face

 $f_1$  Raised face

Øk Pitch diameter

ØL Diameter of hole

 $\emptyset d_M$  Max. diameter of membrane

Unit mm


Flange 1) 2)						Boltholes			Order option 3)	
DN	PN	Form	ØD	C <sub>4</sub>	Ød <sub>1</sub>	$f_1$	Quantity	Quantity ØL Øk		
			mm	mm	mm	mm		mm	mm	
DN 25	PN 10-40	B1	115	18	68	2	4	14	85	НОЈ
DN 32	PN 10-40	B1	140	18	78	2	4	18	100	Н1Ј
DN 40	PN 10-40	B1	150	18	88	3	4	18	110	Н2Ј
DN 50	PN 10-40	B1	165	20	102	3	4	18	125	нзј
DN 80	PN 10-40	B1	200	24	138	3	8	18	160	Н5Ј

- 1) Material: AISI 316L
- 2) The flange raised face is made from the same material as the membrane.
- 3) Product Configurator order code for "Process connection"

54

# Flange ASME, flush membrane, standard device

Connection dimensions in accordance with ASME B 16.5, raised face RF

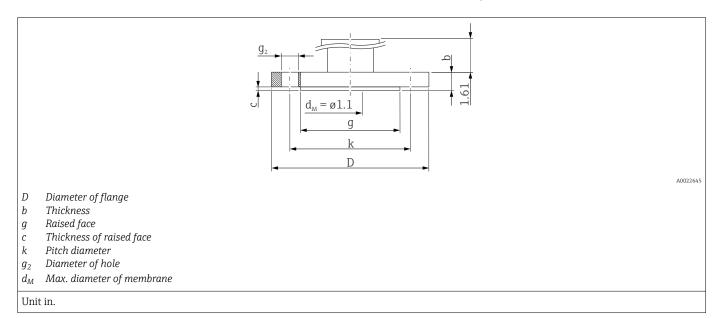


Flange 1)						Boltholes			Order option 2)
NPS	Class	D	b	g	с	Quantity	$g_2$	k	
in		in	in	in	in		in	in	
1	150	4.25	0.61	2.44	0.08	4	0.62	3.13	AAJ
1	300	4.88	0.69	2.7	0.06	4	0.75	3.5	AMJ
1½	150	5	0.69	2.88	0.08	4	0.62	3.88	ACJ
1½	300	6.12	0.81	2.88	0.08	4	0.88	4.5	APJ
2	150	6	0.75	3.62	0.08	4	0.75	4.75	ADJ
2	300	6.5	0.88	3.62	0.08	8	0.75	5	AQJ
3	150	7.5	0.94	5	0.08	4	0.75	6	AFJ
3	300	8.25	1.12	5	0.08	8	0.88	6.62	ASJ
4	150	9	0.94	6.19	0.08	8	0.75	7.5	AGJ
4	300	10	1.25	6.19	0.08	8	0.88	7.88	ATJ

<sup>1)</sup> Material: AISI 316/316L; combination of AISI 316 for required pressure resistance and AISI 316L for required chemical resistance (dual rated)

<sup>2)</sup> Product Configurator order code for "Process connection"


## Oval flange

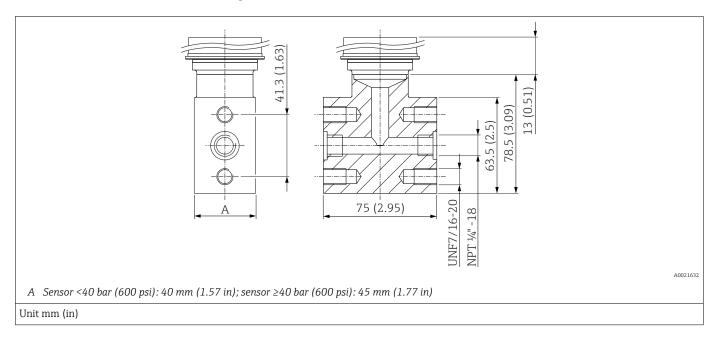

Material	Description	Weight	Order option 1)	
		kg (lb)		
AISI 316L (1.4404)	Oval flange adapter 1/4-18 NPT as per IEC 61518 Mounting: 7/16-20 UNF	1.9 (4.19)	SA0	

1) Product Configurator order code for "Process connection"

# NPT1/4-18, vertical installation, UNF7/16-20

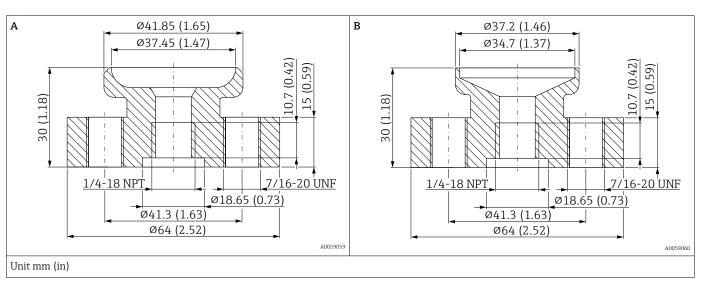


Item	PN 1)	Material	Weight kg (lb)	Order option <sup>2)</sup>
A	100	AISI 316L	0.40 (0.88)	SAC
		Alloy C276	1 0.40 (0.00)	SAJ

Item	PN 1)	Material	Weight	Order option <sup>2)</sup>
			kg (lb)	
В	10	AISI 316L	0.40 (0.88)	SAC
		Alloy C276	0.40 (0.00)	SAJ

<sup>1)</sup> 

Depends on the measuring cell ordered. Product Configurator order code for "Process connection" 2)

#### Pancake seal with flush membrane

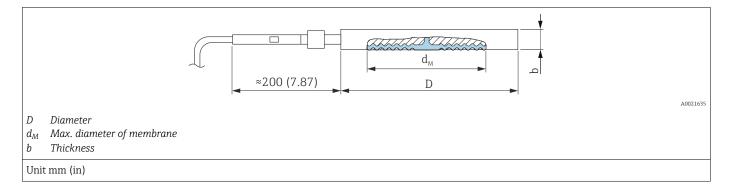

Material <sup>1)</sup>	DN	PN <sup>2)</sup>	D mm	b mm	Order option 3)
	DN 50	PN 16-400	102	20 - 22	NRJ
AISI 316L	DN 80	PN 16-400	138	20 - 22	NTJ
	DN 100	PN 16-400	162	20 - 22	NUJ

- 1) Supplied with conventional membrane if a PTFE membrane coating is ordered.
- 2) The specified nominal pressure applies for the diaphragm seal. The maximum pressure for the device depends on the lowest-rated element, with regard to pressure, of the selected component.
- 3) Product Configurator order code for "Process connection"


Material	NPS	Class 1)	D in	b in	Order option <sup>2)</sup>
AISI 316L	2	150-2500	3.62	0.79 - 0.87	N1J
	3	150-2500	5.00	0.79 - 0.87	N3J
	4	150-2500	6.22	0.79 - 0.87	N4J

- 1) The specified nominal pressure applies for the diaphragm seal. The maximum pressure for the device depends on the lowest-rated element, with regard to pressure, of the selected component.
- 2) Product Configurator order code for "Process connection"

## Maximum diameter of the process membrane $\emptyset d_M$

DN	PN		Ød <sub>M</sub> (mm)									
		316L TempC	316L	Alloy C276	Tantalum	Monel (Alloy 400)	PTFE					
50	16-400	61	-	62	60	59	52					
80	16-400	89	-	90	92	89	80					
100	16-400	-	89	90	92	89	-					

NPS	Class		$\operatorname{\emptyset}\operatorname{d}_{\operatorname{M}}\left(\operatorname{in}\right)$											
in		316L TempC	316L	Alloy C276	Tantalum	Monel (Alloy 400)	PTFE							
2	150-2500	2.40	-	2.32	2.36	2.32	2.05							
3	150-2500	3.50	-	3.54	3.62	3.50	3.14							
4	150-2500	-	3.14	3.50	3.62	3.50	-							

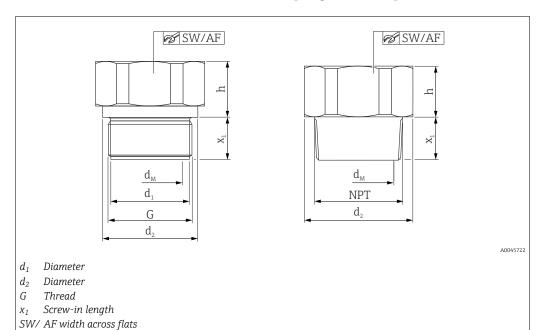

# Thread ISO228 , thread ASME, flush membrane, diaphragm seal , TempC Membrane

 $d_M$  Max. diameter of process membrane h Height

Unit mm (in). Left: thread ISO228, right: thread ASME

Schematic diagram, the design may differ.

Thread				Diaphragm seal		Order option 1)			
Material	G	PN	d <sub>1</sub>	d <sub>2</sub>	<b>x</b> <sub>1</sub>	SW/AF	d <sub>M</sub> h		
			[mm]	[mm]	[mm]		[mm]	[mm]	
AISI 316L	G 1" A	400	30	39	21	41	28	19	WLJ
Alloy C276	G 1" A	400	30	39	21	41	28	19	WLC
AISI 316L	G 1 ½" A	400	-	55	30	46	41	20	WNJ
Alloy C276	G 1 ½" A	400	-	55	30	46	41	20	WNC
AISI 316L	G 2"	400	-	68	30	60	48	20	WPJ
Alloy C276	G 2"	400	-	68	30	60	48	20	WPC


1) Product Configurator, order code for "Process connection"

Thread		Diaphragm seal		Option 1)						
Material	MNPT	PN	$d_1$	d <sub>2</sub>	<b>x</b> <sub>1</sub>	SW/AF	d <sub>M</sub>	h		
			[mm]	[mm]	[mm]		[mm]	[mm]		
AISI 316L	1" MNPT	400	-	45	23	41	28	16	VJJ	
Alloy C276	1" MNPT	400	-	45	23	41	28	16	VJC	
AISI 316L	1 ½" MNPT	400	-	60	30	46	41	20	VLJ	
Alloy C276	1 ½" MNPT	400	-	60	30	46	41	20	VLC	
AISI 316L	2" MNPT	400	-	60	34	46	48	21	VMJ	
Alloy C276	2" MNPT	400	-	60	34	46	48	21	VMC	

1) Product Configurator, order code for "Process connection"

# Flange EN1092-1, flush membrane, diaphragm seal

Connection dimensions according to EN1092-1.

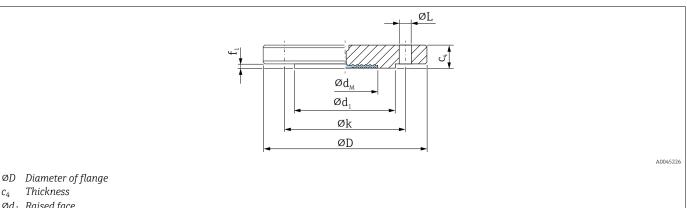

 $Ød_1$  Raised face

Raised face  $f_1$ 

Pitch diameter Øk

Diameter of hole

 $Ød_M$  Max. diameter of membrane

Unit mm

Flange 1) 2)	3) 4)						Boltholes			Order option 5)
DN	PN	Form	ØD	C <sub>4</sub>	Ød <sub>1</sub>	$f_1$	Quantity	øL	Øk	
			mm	mm	mm	mm		mm	mm	
DN 25	PN 10-40	B1	115	18	68	2	4	14	85	НОЈ
DN 25	PN 63-160	B2	140	24	68	2	4	18	100	MAJ
DN 25	PN 250	B2	150	28	68	2	4	22	105	МНЈ
DN 25	PN 400	B2	180	38	68	2	4	26	130	MQJ
DN 32	PN 10-40	B1	140	18	78	2	4	18	100	H1J
DN 40	PN 10-40	B1	150	18	88	3	4	18	110	Н2Ј
DN 50	PN 10-40	B1	165	20	102	3	4	18	125	НЗЈ
DN 50	PN 63	B2	180	26	102	3	4	22	135	FGJ
DN 50	PN 100-160	B2	195	30	102	3	4	26	145	MCJ
DN 80	PN 10-40	B1	200	24	138	3	8	18	160	Н5Ј
DN 80	PN 100	B2	230	32	138	3	8	26	180	FPJ
DN 100	PN 10-16	B1	220	20	158	3	8	18	180	ETJ
DN 100	PN 25-40	B1	235	24	162	3	8	22	190	E5J
DN 100	PN 100	B2	265	36	162	3	8	30	210	FQJ

- Material: AISI 316L 1)
- The roughness of the surface in contact with the medium including the raised face of the flanges (all standards) made of Alloy C276, Monel, 2) tantalum, gold > 316L or PTFE is  $R_a$ < 0.8  $\mu$ m (31.5  $\mu$ in). Lower surface roughness on request.
- The flange raised face is made from the same material as the membrane. 3)
- 4) Supplied with conventional membrane if a PTFE membrane coating is ordered.
- 5) Product Configurator order code for "Process connection"


60

# Maximum diameter of membrane $\emptyset d_M$

DN	PN			Ød <sub>M</sub> (r	nm)		
		316L TempC	316L	Alloy C276	Tantalum	Monel (Alloy 400)	PTFE
DN 25	PN 10-40	28	-	33	33	33	28
DN 25	PN 63-160	-	28	28	28	28	-
DN 25	PN 250	-	28	28	28	28	-
DN 25	PN 400	-	28	28	28	28	-
DN 32	PN 10-40	-	34	42	42	34	-
DN 40	PN 10-40	-	38	48	51	42	-
DN 50	PN 10-40	61	-	57	60	59	52
DN 50	PN 63	-	52	62	60	59	-
DN 50	PN 100-160	-	52	62	60	59	-
DN 80	PN 10-40	89	-	89	92	89	80
DN 80	PN 100	-	80	90	92	90	-
DN 100	PN 10-16	-	80	90	92	89	-
DN 100	PN 25-40	-	80	90	92	89	-
DN 100	PN 100	-	80	90	92	89	-

# Barrel, flange, EN1092-1, flush membrane, diaphragm seal

Connection dimensions in accordance with EN 1092-1.

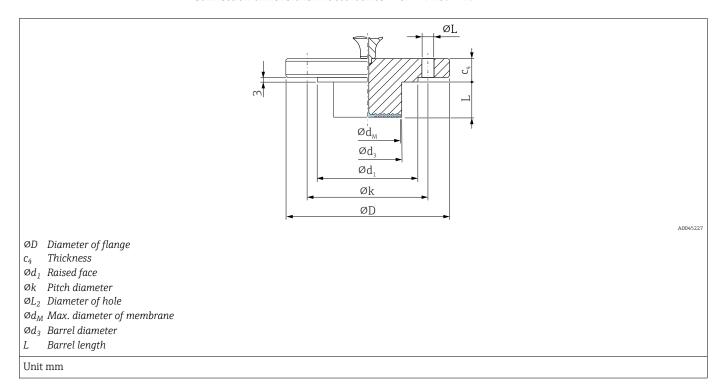

Flange 1) 2)						Boltholes			Diaphragm seal
DN	PN	Form	ØD	C <sub>4</sub>	Ød <sub>1</sub>	Quantity	øL øk		Ød <sub>M</sub> <sup>3)</sup>
			mm	mm	mm		mm	mm	mm
DN 50	PN 10-40	B1	165	20	102	4	18	125	48
DN 80	PN 10-40	B1	200	24	138	8	18	160	73

- 1) Material: AISI 316L
- 2) In the case of membranes made of Alloy C276, the flange raised face and the barrel are made of 316L
- 3) Maximum membrane diameter


Barrel								
DN	PN	L	Ød <sub>3</sub>	Order option 1)				
		mm	mm					
DN 50	PN 10-40	50 / 100 / 150 / 200	48.3	JNJ, JPJ, JQJ, JRJ				
DN 80	PN 10-40	50 /100 / 150 / 200	76	JSJ, JTJ, JUJ, JUV				

1) Product Configurator order code for "Process connection"

62

## Flange ASME B16.5, flush membrane, diaphragm seal

Connection dimensions in accordance with ASME B 16.5, raised face RF

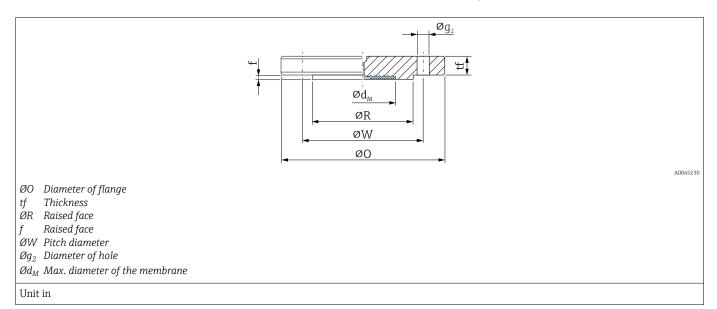

Flange <sup>1</sup>	1) 2) 3)					Boltholes			Order option 4)
NPS	Class	ØO	tf	ØR	f	Quantity	Øg <sub>2</sub>	øw	
in		in	in	in	in		in	in	
1	150	4.25	0.50	2	0.06	4	5/8	3.12	AAJ
1	300	4.88	0.62	2	0.06	4	3/4	3.5	AMJ
1	400/600	4.88	0.69	2	0.25	4	3/4	3.5	AXJ
1	900/1500	5.88	1.12	2	0.25	4	1	4	BDJ
1	2500	6.25	1.38	2	0.25	4	1	4.25	ВЈЈ
11/2	150	5	0.62	2.88	0.06	4	5/8	3.88	ACJ
11/2	300	6.12	0.75	2.88	0.06	4	7/8	4.5	APJ
2	150	6	0.69	3.62	0.06	4	3/4	4.75	ADJ
2	300	6.5	0.81	3.62	0.06	8	3/4	5	AQJ
2	400/600	6.5	1	3.62	0.25	8	3/4	5	A0J
2	900/1500	8.5	1.5	3.62	0.25	8	1	6.5	BFJ
2	2500	9.25	2	3.62	0.25	8	1 1/8	6.75	BLJ
3	150	7.5	0.88	5	0.06	4	3/4	6	AFJ
3	300	8.25	1.06	5	0.06	8	7/8	6.62	ASJ
3	400/600	6.5	1.25	5	0.25	8	7/8	6.62	A1J
3	900	9.5	1.5	5	0.25	8	1	7.5	BAJ
4	150	9	0.88	6.19	0.06	8	3/4	7.5	AGJ
4	300	10	1.19	6.19	0.06	8	7/8	7.88	ATJ


- 1) Material AISI 316/316L: Combination of AISI 316 for required pressure resistance and AISI 316L for required chemical resistance (dual rated)
- 2) The roughness of the surface in contact with the medium including the raised face of the flanges (all standards) made of Alloy C276, Monel, tantalum, gold or PTFE is  $R_a$ < 0.8  $\mu$ m (31.5  $\mu$ in). Lower surface roughness on request.
- 3) The flange raised face is made of the same material as the membrane.
- 4) Product Configurator order code for "Process connection"

# Maximum diameter of membrane $\mathcal{Q}d_{M}$

NPS	Class			Ød <sub>M</sub> (in)		
		316L TempC	316L	Alloy C276	Tantalum	Monel (Alloy 400)
1	150	1.10	-	1.30	1.34	1.30
1	300	1.10	-	1.30	1.34	1.30
1	400/600	-	1.10	1.30	1.34	1.30
1	900/1500	-	1.10	1.10	1.02	1.10
1	2500	-	1.10	1.30	1.34	1.30
1½	150	-	1.50	1.89	2.01	1.89
1½	300	-	1.50	1.89	2.01	1.89
2	150	2.40	-	2.44	2.44	2.44
2	300	2.40	-	2.44	2.44	2.44
2	400/600	-	2.05	2.44	2.44	2.44
2	900/1500	-	2.05	2.44	2.44	2.44
2	2500	-	2.05	2.44	2.44	2.44
3	150	3.50	-	3.62	3.62	3.62
3	300	3.50	-	3.62	3.62	3.62
3	400/600	-	3.15	3.62	3.62	3.62
3	900	-	3.15	3.62	3.62	3.62
4	150	-	3.15	3.62	3.62	3.62
4	300	-	3.15	3.62	3.62	3.62

## Barrel, flange ASME B16.5, flush membrane, diaphragm seal

Connection dimensions in accordance with ASME B 16.5, raised face RF

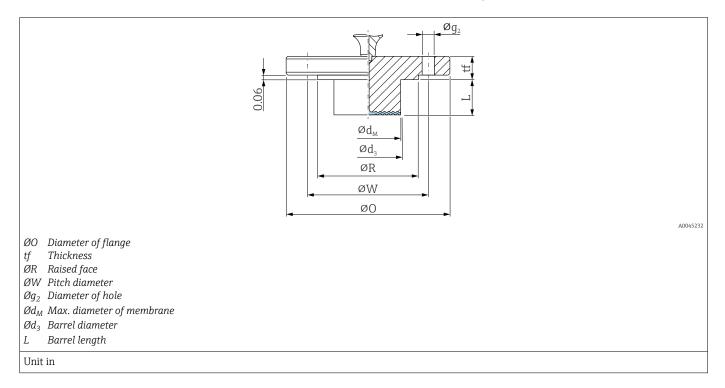

Flange 1) 2)	Flange 1) 2) 3)						Diaphragm seal	
NPS	Class	ØО	tf	ØR	Quantity	Øg <sub>2</sub> ØW		Ød <sub>M</sub> <sup>4)</sup>
in		in	in	in		in	in	in
2	150	6	0.69	3.62	4	3/4	4.75	1.9
3	150	7.5	0.88	5	4	3/4	6	2.87
4	150	9	0.88	6.19	8	3/4	7.5	3.5


- 1) Material: AISI 316/316L. Combination of AISI 316 for required pressure resistance and AISI 316L for required chemical resistance (dual rated)
- 2) In the case of membranes made of Alloy C276, the flange raised face is made of 316L.
- 3) Supplied with a conventional membrane if a PTFE membrane coating is ordered.
- 4) Maximum membrane diameter

Barrel	Barrel								
NPS	Class	L	d <sub>3</sub>	Order option 1)					
in		in (mm)	in (mm)						
2	150	2 (50.8) / 4 (101.6) / 6 (152.4) / 8 (203.2)	1.9 (48.3)	CJJ, CKJ, CLJ, CMJ					
3	150	2 (50.8) / 4 (101.6) / 6 (152.4) / 8 (203.2)	2.99 (76)	CSJ, CTJ, CUJ, CVJ					
4	150	2 (50.8) / 4 (101.6) / 6 (152.4) / 8 (203.2)	3.7 (94)	CWJ, CXJ, CZJ, COJ					

1) Product Configurator order code for "Process connection"

## Flange JIS, flush membrane, diaphragm seal

Connection dimensions in accordance with JIS B 2220 BL, raised face RF.

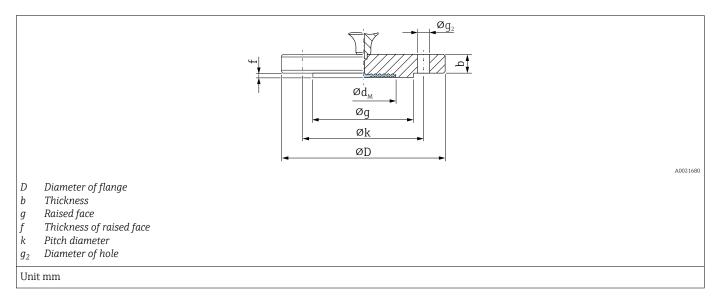

Flange 1) 2) 3)						Boltholes			Order option <sup>4)</sup>
A <sup>5)</sup>	K <sup>6)</sup>	D	b	g	f	Quantity g <sub>2</sub>		k	
		mm	mm	mm	mm		mm	mm	
25 A	10 K	125	14	67	1	4	19	90	PAJ
40 A	10 K	140	16	81	2	4	19	105	PCJ
50 A	10 K	155	16	96	2	4	19	120	PDJ
80 A	10 K	185	18	127	2	8	19	150	PFJ
100 A	10 K	210	18	151	2	8	19	175	PGJ


- 1) Material: AISI 316L
- The roughness of the surface in contact with the medium, including the raised face of the flanges (all standards) made of Alloy C276, Monel, 2) tantalum, gold or PTFE, is  $R_a$ < 0.8  $\mu m$  (31.5  $\mu$ in). Lower surface roughness on request.
- The flange raised face is made of the same material as the membrane.
- Product Configurator order code for "Process connection" 4)
- 5) Alphanumeric designation of the flange size.
- 6) Alphanumeric pressure rating of a component.

# Maximum diameter of membrane $\emptyset d_M$

A 1)	K 2)			Ød <sub>M</sub> (n	nm)		
		316L TempC	316L	Alloy C276	Tantalum	Monel (Alloy 400)	PTFE
25 A	10 K	-	28	-	-	-	-
40 A	10 K	-	38	-	-	-	-
50 A	10 K	-	52	62	60	59	-
80 A	10 K	-	80	-	-	-	-
100 A	10 K	-	80	-	-	-	-

- Alphanumeric designation of the flange size.
- 1) 2) Alphanumeric pressure rating of a component.


## Separator, thread, ISO228, ASME, DIN, welded, diaphragm seal, TempC Membrane

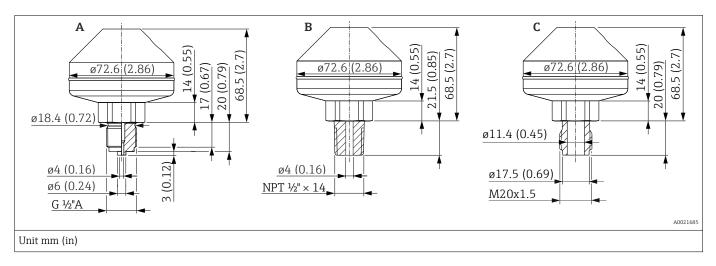

Position	Description	Material	Measuring range	PN	Order option 1)
			bar (psi)		
A	Welded, ISO228 G ½ A EN837				W4J
В	Welded, ANSI MNPT ½	AISI 316L	≤ 160 (2320)	PN 160	V4J
С	Welded, DIN13 M20x1.5 thread				X1J

1) Product Configurator order code for "Process connection"


# Separator ISO 228, ASME, DIN13, threaded, diaphragm seal, membrane material 316L, TempC

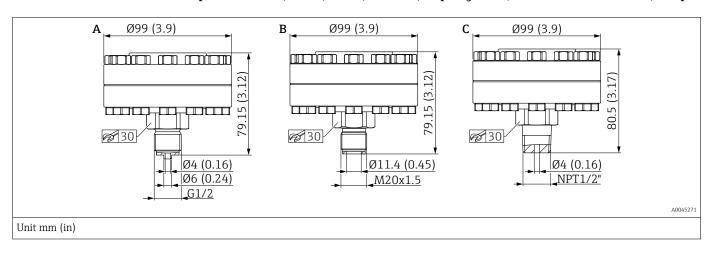

Item	Designation	Material	Measuring range	PN	Order option 1)
			bar (psi)		
A	Threaded, ISO 228 G½ EN 837 with metal seal (silver-plated) $-60$ to $+400$ °C ( $-76$ to $+752$ °F)	AISI 316L, screws made of A4	≤ 100 (1450)	PN 100	W3J
В	Threaded, DIN13 M20x1.5 with metal seal (silver-plated) $-60$ to $+400$ °C ( $-76$ to $+752$ °F)	AISI 316L, screws made of A4	≤ 100 (1450)	PN 100	X4J
С	Threaded, ASME MNPT ½ with metal seal (silver-plated) $-60$ to $+400$ °C ( $-76$ to $+752$ °F)	AISI 316L, screws made of A4	≤ 100 (1450)	PN 100	V3J

1) Product Configurator order code for "Process connection"

## Separator ISO228, ASME, threaded, diaphragm seal

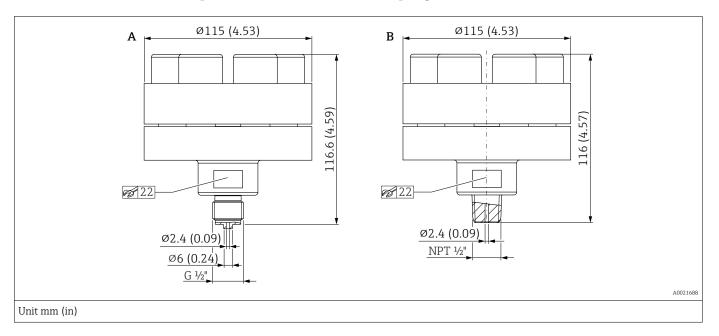

Position	Description	Material	Measuring range	PN 1)	Order option 2)
			bar (psi)		
A	Threaded, ISO228 G $\frac{1}{2}$ A EN837, with integrated seal lip $-60$ to $+400$ °C ( $-76$ to $+752$ °F)	AISI 316L,	> 40 (580)	PN 400	W7J
В	Threaded, ASME MNPT $\frac{1}{2}$ , with integrated seal lip $-60$ to $+400$ °C ( $-76$ to $+752$ °F)	Screws made of A4	/ 40 (J00)		V7J

- 1) This separator is assembled prior to delivery and must not be disassembled!
- 2) Product Configurator order code for "Process connection"

## Weight Housing

Weight including electronics and display.

- Single-compartment housing: 1.1 kg (2.43 lb)
- Dual-compartment housing
  - Aluminum: 1.4 kg (3.09 lb)
  - Stainless steel: 3.3 kg (7.28 lb)

# Sensor, remote (separate housing)

- Housing: see the Housing section
- Housing adapter: 0.55 kg (1.21 lb)
- Process connection adapter: 0.36 kg (0.79 lb))
- Cable:
  - PE cable, 2 meters: 0.18 kg (0.40 lb)
  - PE cable, 5 meters: 0.35 kg (0.77 lb)
  - PE cable, 10 meters: 0.64 kg (1.41 lb)
  - FEP cable, 5 meters: 0.62 kg (1.37 lb)
- Mounting bracket: 0.46 kg (1.01 lb)

## Temperature isolator

- Temperature isolator, short: 0.19 kg (0.42 lb)
- Temperature isolator, long: 0.34 kg (0.75 lb)

# Capillary

- 316L (standard capillary armor):
   0.16 kg/m (0.35 lb/m) + 0.2 kg (0.44 lb)
   (Weight per capillary in m)
- (Weight per capillary in m)

  PVC-coated capillary armor on 316 L:
  0.21 kg/m (0.46 lb/m) + 0.2 kg (0.44 lb)
  (Weight per capillary in m)
- PTFE-jacketed capillary armor on 316 L:
   0.29 kg/m (0.64 lb/m) + 0.2 kg (0.44 lb) (Weight per capillary in m)

# **Process connections**

Threaded connect	ion	Flanges		
Weight 1)	Order option 2)	Weight 1)		Order option 2)
		Standard	Diaphragm seal	
0.60 kg (1.32 lb)	VHJ	1.10 kg (2.43 lb)	1.20 kg (2.65 lb)	AAJ
0.70 kg (1.54 lb)	VJC	1.30 kg (2.87 lb)	1.50 kg (3.31 lb)	AMJ
0.70 kg (1.54 lb)	VJJ	1.50 kg (3.31 lb)	1.60 kg (3.53 lb)	ACJ
1.00 kg (2.21 lb)	VLC	2.60 kg (5.73 lb)	2.70 kg (5.95 lb)	APJ
1.00 kg (2.21 lb)	VLJ	2.40 kg (5.29 lb)	2.50 kg (5.51 lb)	ADJ
0.70 kg (1.54 lb)	VNC	3.20 kg (7.06 lb)	3.40 kg (7.50 lb)	AQJ
0.70 kg (1.54 lb)	VNJ	4.90 kg (10.80 lb)	5.10 kg (11.25 lb)	AFJ
0.63 kg (1.39 lb)	VXC	6.70 kg (14.77 lb)	7.00 kg (15.44 lb)	ASJ
0.63 kg (1.39 lb)	VXJ	7.10 kg (15.66 lb)	7.20 kg (15.88 lb)	AGJ
0.63 kg (1.39 lb)	VWJ	11.60 kg (25.88 lb)	11.70 kg (25.80 lb)	ATJ
0.63 kg (1.39 lb)	VWC	1.70 kg (3.75 lb)	1.70 kg (3.75 lb)	AXJ
1.30 kg (2.87 lb)	VMJ	-	4.30 kg (9.48 lb)	A0J
0.63 kg (1.39 lb)	WBC	-	8.60 kg (18.96 lb)	A1J
0.63 kg (1.39 lb)	WBJ	-	13.30 kg (29.33 lb)	BAJ
0.40 kg (0.88 lb)	WJJ	3.70 kg (8.16 lb)	3.70 kg (8.16 lb)	BDJ
0.40 kg (0.88 lb)	WJC	-	10.30 kg (22.71 lb)	BFJ
0.70 kg (1.54 lb)	WLC	-	15.80 kg (34.84 lb)	BLJ
0.70 kg (1.54 lb)	WLJ	1.70 kg (3.75 lb)	1.70 kg (3.75 lb)	BJJ
1.30 kg (2.87 lb)	VMC	-	12.40 kg (27.30 lb)	СОЈ
1.10 kg (2.43 lb)	WNC	-	3.84 kg (8.47 lb)	CJJ
1.10 kg (2.43 lb)	WNJ	-	4.16 kg (9.17 lb)	СКЈ
1.50 kg (3.31 lb)	WPC	-	4.47 kg (9.86 lb)	CLJ
1.50 kg (3.31 lb)	WPJ	-	4.77 kg (10.52 lb)	CMJ
0.63 kg (1.39 lb)	WWC	-	6.0 kg (13.20 lb)	CSJ
0.63 kg (1.39 lb)	wwj	-	6.60 kg (14.50 lb)	СТЈ
0.63 kg (1.39 lb)	WXC	-	7.10 kg (15.70 lb)	CUJ
0.63 kg (1.39 lb)	WXJ	-	7.80 kg (17.20 lb)	CVJ
0.60 kg (1.32 lb)	XOC	-	8.60 kg (19.00 lb)	CWJ
0.60 kg (1.32 lb)	хој	-	9.90 kg (21.80 lb)	CXJ
0.40 kg (0.88 lb)	X6C	-	11.20 kg (24.70 lb)	CZJ
0.40 kg (0.88 lb)	X6J	-	7.60 kg (16.76 lb)	E5J
1.10 kg (2.43 lb)	X7J	-	5.65 kg (12.46 lb)	ETJ

Threaded connection		Flanges		
Weight 1)	Order option 2)	Weight 1)	Order option 2)	
5		Standard	Diaphragm seal	
0.60 kg (1.32 lb)	XZJ	-	4.52 kg (9.97 lb)	FGJ
0.60 kg (1.32 lb)	XZC	-	8.85 kg (19.51 lb)	FPJ
0.60 kg (1.32 lb)	ZBJ	-	13.30 kg (29.33 lb)	FQJ
0.60 kg (1.32 lb)	ZJJ	1.38 kg (3.04 lb)	1.38 kg (3.04 lb)	НОЈ
-	-	2.03 kg (4.48 lb)	2.03 kg (4.48 lb)	H1J
-	-	2.35 kg (5.18 lb)	2.35 kg (5.18 lb)	H2J
-	-	3.20 kg (7.06 lb)	3.20 kg (7.06 lb)	НЗЈ
-	-	5.54 kg (12.22 lb)	5.54 kg (12.22 lb)	H5J
-	-	-	3.44 kg (7.59 lb)	JNJ
-	-	-	3.80 kg (8.40 lb)	JPJ
-	-	-	4.10 kg (9.04 lb)	JQJ
-	-	-	4.40 kg (9.70 lb)	JRJ
-	-	-	6.20 kg (13.70 lb)	JSJ
-	-	-	6.70 kg (14.80 lb)	JTJ
-	-	-	7.27 kg (16.03 lb)	Juj
-	-	-	7.80 kg (17.20 lb)	JUV
-	-	-	2.54 kg (5.60 lb)	MAJ
-	-	-	6.07 kg (13.38 lb)	MCJ
-	-	-	3.70 kg (8.16 lb)	МНЈ
-	-	-	6.65 kg (14.66 lb)	MQJ
-	-	-	1.30 kg (2.87 lb)	N1J
-	-	-	2.30 kg (5.07 lb)	N3J
-	-	-	3.10 kg (6.84 lb)	N4J
-	-	-	1.30 kg (2.87 lb)	NRJ
-	-	-	2.30 kg (5.07 lb)	NTJ
-	-	-	3.10 kg (6.84 lb)	NUJ
-	-	1.50 kg (3.31 lb)	-	PAJ
-	-	2.00 kg (4.41 lb)	-	PCJ
-	-	2.30 kg (5.07 lb)	-	PDJ
-	-	3.30 kg (7.28 lb)	-	PFJ
-	-	4.40 kg (9.70 lb)	-	PGJ
-	-	1.90 kg (4.19 lb)	-	SA0
-	-	2.35 kg (5.18 lb)	-	V3J
-	-	1.43 kg (3.15 lb)	-	V4J
-	-	4.75 kg (10.47 lb)	-	V7J
-	-	0.38 kg (0.84 lb)	-	VJJ
-	-	0.41 kg (0.90 lb)	-	VJC
-	-	0.70 kg (1.54 lb)	-	VLJ
-	-	0.76 kg (1.68 lb)	-	VLC
-	-	2.35 kg (5.18 lb)	-	W3J
-	-	1.43 kg (3.15 lb)	-	W4J

Threaded connection		Flanges			
Weight 1)	Order option 2)	Weight 1)		Order option 2)	
		Standard	Diaphragm seal		
-	-	4.75 kg (10.47 lb)	-	W7J	
-	-	0.35 kg (0.77 lb)	-	WLJ	
-	-	0.38 kg (0.84 lb)	-	WLC	
-	-	0.73 kg (1.61 lb)	-	WNJ	
-	-	0.79 kg (1.74 lb)	-	WNC	
-	-	1.20 kg (2.65 lb)	-	WPJ	
-	-	1.30 kg (2.87 lb)	-	WPC	
-	-	1.10 kg (2.43 lb)	-	VMJ	
-	-	1.19 kg (2.62 lb)	-	VMC	
-	-	1.43 kg (3.15 lb)	-	X1J	
-	-	2.30 kg (5.07 lb)	-	X4J	

- 1) Total weight consisting of sensor assembly and process connection.
- 2) Product Configurator order code for "Process connection"

#### Accessories

Mounting bracket: 0.5 kg (1.10 lb)

## Materials in contact with process

#### Membrane material

- 316L (1.4435)
- 316L (1.4435), TempC

TempC Membrane stands for "Temperature Compensatory Membrane" This membrane reduces the process and environmental influences for diaphragm seals compared to conventional systems

■ Alloy C276

The flange raised face is made from the same material as the membrane In the case of devices with a barrel, the flange raised face is made of 316L

- 316L in the case of EN 1092-1 flanges
- F316/316L in the case of ASME flanges
- Tantalum

The flange raised face is made from the same material as the membrane

■ Monel (Alloy 400)

The flange raised face is made from the same material as the membrane

## Membrane coating

- PTFE, 0.25 mm (0.01 in)
  - PTFE is standard only with conventional membranes
- Standard device (without diaphragm seal): gold, 25 μm
- Device with diaphragm seal: gold, 25 µm The gold-plated TempC membrane does not offer any corrosion protection! Gold is standard only for TempC membranes

## **Process connections**

See the specific process connection.

#### Accessories



For tec... SD01553P. For technical data (e.g. materials, dimensions or order numbers), see the accessory document

# Materials not in contact with process

#### Single compartment housing, aluminum, coated

- Housing: EN AC-43400 aluminum
- Housing coating, cover: polyester
- EN AC-43400 aluminum cover with Lexan 943A PC sight glass EN AC-443400 aluminum cover with borosilicate sight glass; dust-Ex for Ex d/XP
- Dummy cover: EN AC-43400 aluminum
- Cover sealing materials: HNBR
- Cover sealing materials: FVMQ (in low temperature version only)
- Plug: PBT-GF30-FR or aluminum
- Plug sealing material: EPDM
- Nameplate: plastic foil
- TAG plate: plastic foil, stainless steel or provided by the customer
- The cable entry with material specification can be ordered via the product structure "Electrical connection".

## Dual compartment housing, aluminum, coated

- Housing: EN AC-43400 aluminum
- Housing coating, cover: polyester
- EN AC-43400 aluminum cover with Lexan 943A PC sight glass
   EN AC-443400 aluminum cover with borosilicate sight glass; dust-Ex for Ex d/XP
- Dummy cover: EN AC-43400 aluminum
- Cover sealing materials: HNBR
- Cover sealing materials: FVMQ (in low temperature version only)
- Plug: PBT-GF30-FR or aluminum
- Plug sealing material: EPDM
- Nameplate: plastic foil
- TAG plate: plastic foil, stainless steel or provided by the customer
- The cable entry with material specification can be ordered via the product structure "Electrical connection".

#### Dual compartment housing; 316L

- Housing: stainless steel AISI 316L (1.4409)
   Stainless steel (ASTM A351: CF3M (cast equivalent to AISI 316L material)/DIN EN 10213: 1.4409)
- Dummy cover: stainless steel AISI 316L (1.4409)
- Cover: stainless steel AISI 316L (1.4409) with borosilicate sight glass
- Cover sealing materials: HNBR
- Cover sealing materials: FVMQ (in low temperature version only)
- Plug: stainless steel
- Plug sealing material: EPDM
- Nameplate: stainless steel
- TAG plate: plastic foil, stainless steel or provided by the customer
- The cable entry with material specification can be ordered via the product structure "Electrical connection".

#### **Electrical connection**

#### Coupling M20, plastic

- Material: PA
- Seal on cable gland: EPDM
- Dummy plug: plastic

#### Coupling M20, nickel-plated brass

- Material: nickel-plated brass
- Seal on cable gland: EPDM
- Dummy plug: plastic

## Coupling M20, 316L

- Material: 316L
- Seal on cable gland: EPDM
- Dummy plug: plastic

#### M20 coupling, 316 L, hygiene

- Material: 316L
- Seal on cable gland: EPDM

#### M20 thread

The device is supplied with M20 thread as standard.

Transport plug: LD-PE

#### Thread G 1/2

The device is supplied as standard with an M20 thread and an enclosed adapter to  $G \frac{1}{2}$  including documentation (aluminum housing, 316L housing, hygienic housing) or with a mounted adapter to  $G \frac{1}{2}$  (plastic housing).

- Adapter made of PA66-GF or aluminum or 316L (depends on housing version ordered)
- Transport plug: LD-PE

#### NPT 1/2 thread

The device is supplied as standard with an NPT ½ thread (aluminum housing, 316L housing) or with a mounted adapter to NPT ½ (plastic housing, hygienic housing).

- Adapter made of PA66-GF or 316L (depends on housing version ordered)
- Transport plug: LD-PE

#### Thread NPT 3/4

The device is supplied with NPT ¾ thread as standard.

Transport plug: LD-PE

# M20 coupling, blue plastic

- Material: PA. blue
- Seal on cable gland: EPDM
- Dummy plug: plastic

#### M12 plug

- Material: nickel-plated CuZn or 316L (depends on housing version ordered)
- Transport cap: LD-PE

#### HAN7D plug

Material: aluminum, die-cast zinc, steel

#### Valve plug ISO44000 M16

- Material: PA6
- Transport plug: LD-PE

#### Separate housing

- Mounting bracket
  - Bracket: AISI 316L (1.4404)
  - Screw and nuts: A4-70
  - Half-shells: AISI 316L (1.4404)
- Seal for cable from separate housing: EPDM
- Gland for cable of separate housing: AISI 316L (1.4404)
- PE cable for separate housing: abrasion-proof cable with strain-relief Dynema members; shielded using aluminum-coated foil; insulated with polyethylene (PE-LD), black; copper wires, twisted, UV-resistant
- FEP cable for separate housing: abrasion-proof cable; shielded using galvanized steel wire netting; insulated with fluorinated ethylene propylene (FEP), black; copper cores, twisted, UV-resistant
- Process connection adapter for separate housing: AISI 316L (1.4404)

#### Fill fluid

Fill fluid, standard:

- Silicone oil
- Inert oil (not suitable for temperatures below -20 °C (-4 °F))

Fill fluid, diaphragm seal:

- Silicone oil, FDA 21 CFR 175.105
- Vegetable oil, FDA 21 CFR 172.856
- High-temperature oil
- Low-temperature oil
- Inert oil

# **Connecting parts**

- Connection between housing and process connection: AISI 316L (1.4404)
- Measuring cell body: AISI 316L (1.4404)
- Connection between measuring cell body and capillary: AISI 316L (1.4404)
- Heat shrink tube (only available for capillary with PTFE capillary armor or PVC-coated capillary armor): polyolefin

# Armor for capillary

# AISI 316L

- Capillary: AISI 316 Ti (1.4571)
- Protective hose for capillary: AISI 316L (1.4404)

#### PVC-coated

- Capillary: AISI 316 Ti (1.4571)
- Protective hose for capillary: AISI 316L (1.4404)
- Coating: PVC
- Heat shrink tube at capillary junction: polyolefin

# PTFE-armored

- Capillary: AISI 316 Ti (1.4571)
- Protective hose for capillary: AISI 316L (1.4404)
- Armor: PTFE
- Single-ear clamp: 1.4301

#### Accessories



For technical data (e.g. materials, dimensions or order numbers), see the accessory document SD01553P.

# Operability

#### Operating concept

#### Operator-oriented menu structure for user-specific tasks

- Guidance
- Diagnostics
- Application
- System

#### Quick and safe commissioning

- Interactive wizard with graphical user interface for quided commissioning in FieldCare, DeviceCare or DTM, AMS and PDM-based third-party tools or SmartBlue
- Menu guidance with brief explanations of the individual parameter functions
- Standardized operation at the device and in the operating tools
- PROFINET over Ethernet-APL: access to the device via web server

# Integrated HistoROM data memory

- Adoption of data configuration when electronics modules are replaced
- Up to 100 event messages recorded in the device

#### Efficient diagnostic behavior increases measurement reliability

- Remedial action is integrated in plain text
- Various simulation options

### Bluetooth module (optionally integrated in local display)

- Quick and easy setup with SmartBlue app or PC with DeviceCare, version 1.07.00 and higher, or FieldXpert SMT70
- No additional tools or adapters needed
- Encrypted single point-to-point data transmission (tested by Fraunhofer Institute) and passwordprotected communication via *Bluetooth®* wireless technology

#### Languages

The operating language of the local display (optional) can be selected via the Product Configurator.


If no particular operating language has been selected, the local display is delivered from the factory with English.

The operating language can be changed subsequently via the **Language** parameter.

# Local operation

# Operating keys and DIP switches on the electronic insert


HART

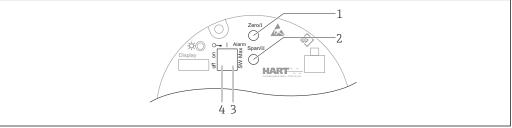

- *Operating key for lower range value (Zero)*
- Operating key for upper range value (Span)
- DIP switch for alarm current
- DIP switch for locking and unlocking the device

The setting of the DIP switches has priority over the settings made via other operation methods (e.g. FieldCare/DeviceCare).


#### PROFINET with Ethernet-APL

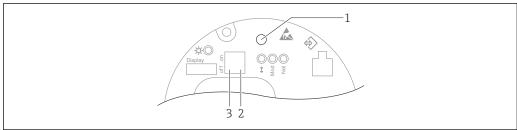

A0046061

- 1 Operating key for position adjustment (zero point correction) and device reset
- 2 DIP switch for setting the service IP address
- 3 DIP switch for locking and unlocking the device
- The setting of the DIP switches has priority over the settings made via other operation methods (e.g. FieldCare/DeviceCare).

#### PROFIBUS PA

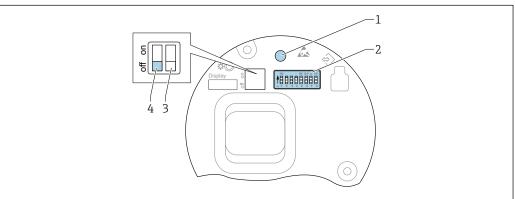

A005098


- 1 Operating key for position adjustment (zero point correction), reset device (reset) and password (for Bluetooth login and user role)
- 2 DIP switch for address configuration
- 3 DIP switch with no function
- 4 DIP switch for locking and unlocking the device
- The setting of the DIP switches on the electronic insert has priority over the settings made via other operation methods (e.g. FieldCare/DeviceCare).

### Local display

### Device display (optional)

### Functions:

- Display measured values and fault and notice messages
- Background lighting, which switches from green to red in the event of an error
- The device display can be removed for easier operation
- ho The device displays are available with the additional option of Bluetooth $^{ ext{@}}$  wireless technology.

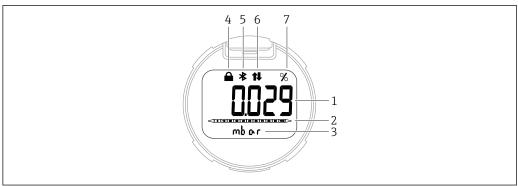


A0043599

# Segment display

- 1 Measured value (up to 5 digits)
- 2 Bar graph (refers to the specified pressure range) proportional to the current output (not for PROFINET over Ethernet-APL or PROFIBUS PA)
- 3 Unit of measured value
- 4 Locking (symbol appears when device is locked)
- 5 Bluetooth (symbol flashes if Bluetooth connection is active)
- 6 HART communication, PROFINET over Ethernet-APL communication or PROFIBUS PA communication (symbol appears when communication is enabled)
- 7 Measured value output in %

The following graphics are examples. The display depends on the display settings.

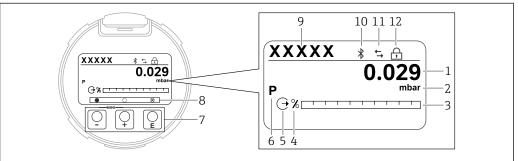


A0047142

# ■ 8 Graphic display with optical operating keys.

- 1 Measured value (up to 12 digits)
- 2 Unit of measured value
- 3 Bar graph (refers to the specified pressure range) proportional to the current output (not for PROFINET over Ethernet-APL or PROFIBUS PA)
- 4 Bar aranh unit
- 5 Symbol for current output (not for PROFINET over Ethernet-APL or PROFIBUS PA)
- 6 Symbol for displayed measured value (e.g. p = pressure)
- 7 Optical operating keys
- Symbols for key feedback. Different display symbols are possible: circle (not filled in) = key pressed briefly; circle (filled in) = key pressed for longer; circle (with X) = no operation possible due to Bluetooth connection
- 9 Device Tag
- 10 Bluetooth (symbol flashes if Bluetooth connection is active)
- 11 HART communication, PROFINET over Ethernet-APL communication or PROFIBUS PA communication (symbol appears when communication is enabled)
- 12 Locking (symbol appears when device is locked)

# Remote operation


# Via HART protocol or Bluetooth

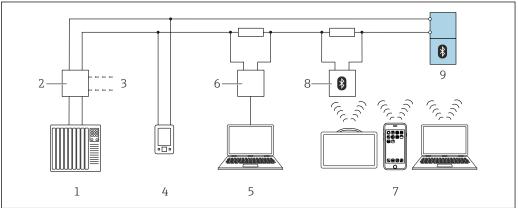

A0044334

- 9 Options for remote operation via HART protocol
- 1 PLC (programmable logic controller)
- 2 Transmitter power supply unit, e.g. RN221N (with communication resistor)
- 3 Connection for Commubox FXA195 and AMS  $Trex^{TM}$  device communicator
- 4 AMS Trex<sup>TM</sup> device communicator
- 5 Computer with operating tool (e.g. DeviceCare/FieldCare, AMS Device View, SIMATIC PDM)
- 6 Commubox FXA195 (USB)
- 7 Field Xpert SMT70/SMT77, smartphone or computer with operating tool (e.g. DeviceCare/FieldCare, AMS Device View, SIMATIC PDM)
- 8 Bluetooth modem with connecting cable (e.g. VIATOR)
- 9 Transmitter

#### Via PROFINET over Ethernet-APL network

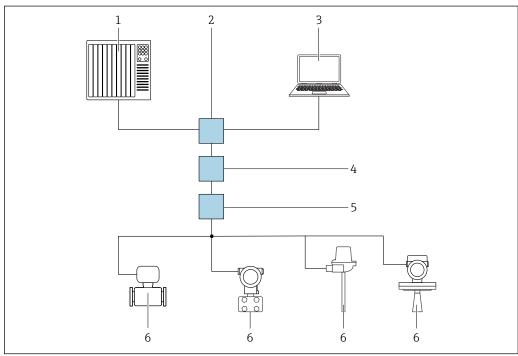

A0046097

🗟 10 Options for remote operation via PROFINET over Ethernet-APL network: star topology

- 1 Automation system, e.g. Simatic S7 (Siemens)
- 2 Ethernet switch
- 3 Computer with web browser (e.g., Microsoft Edge) for accessing the integrated device web server or computer with operating tool (e.g. FieldCare, DeviceCare, SIMATIC PDM) with iDTM PROFINET Communication
- 4 APL power switch (optional)
- 5 APL field switch
- 6 APL field device

78

Call up the website via the computer in the network. The IP address of the device must be known.

The IP address can be assigned to the device in a variety of ways:


- Dynamic Configuration Protocol (DHCP), factory setting
   The automation system (e.g. Siemens S7) automatically assigns the IP address to the device.
- Software addressing
- The IP address is entered via the IP address parameter.

   .DIP switch for service
- The device then has the fixed IP address 192.168.1.212.
- The IP address is only adopted following a restart.

The IP address can now be used to establish the connection to the network.

The default setting is that the device uses the Dynamic Configuration Protocol (DHCP). The automation system (e.g. Siemens S7) automatically assigns the IP address of the device.

#### Via PROFIBUS PA protocol

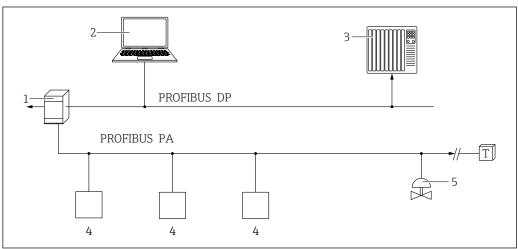

A005094

- 1 Segment coupler
- 2 Computer with PROFIusb and operating tool (e.g. DeviceCare/FieldCare)
- 3 PLC (programmable logic controller)
- 4 Transmitter
- 5 Additional functions (valves etc.)

#### Via Web browser (for devices with PROFINET)

#### Function scope

Thanks to the integrated Web server the device can be operated and configured via a Web browser. The structure of the operating menu is the same as for the local display. In addition to the measured values, device status information is also displayed and allows users to monitor the status of the device. Furthermore the device data can be managed and the network parameters can be configured.

#### Via service interface (CDI)

With the Commubox FXA291, a CDI connection is established with the device interface and a Windows PC/notebook with a USB port.

#### Operation via Bluetooth® wireless technology (optional)

Prerequisite

- Device with Bluetooth display
- Smartphone or tablet with Endress+Hauser SmartBlue app or PC with DeviceCare from version 1.07.00 or FieldXpert SMT70

The connection has a range of up to 25 m (82 ft). The range can vary depending on environmental conditions such as attachments, walls or ceilings.

The operating keys on the display are locked as soon as the device is connected via Bluetooth.

System integration	HART								
	Version 7								
	PROFINET over Ethernet-APL								
	PROFINET Profile 4.02								
	PROFIBUS PA								
	PROFIBUS PA Profile Version 3.02								
Supported operating tools	Smartphone or tablet with Endress+Hauser SmartBlue (app), DeviceCare, version 1.07.00 and higher, FieldCare, DTM, AMS and PDM.								
	PC with Web server via fieldbus protocol.								
HistoROM	When replacing the electronic insert, the stored data is transferred by reconnecting the HistoROM. The device does not work without HistoROM.								
	The device serial number is saved in the HistoROM. The electronics serial number is saved in the electronics.								

# Certificates and approvals

Current certificates and approvals for the product are available at <a href="www.endress.com">www.endress.com</a> on the relevant product page:

- 1. Select the product using the filters and search field.
- 2. Open the product page.
- 3. Select **Downloads**.

#### CE mark

The device meets the legal requirements of the relevant EC directives. Endress+Hauser confirms that the device has been successfully tested by applying the CE mark.

#### **RCM-Tick marking**

The supplied product or measuring system meets the ACMA (Australian Communications and Media Authority) requirements for network integrity, interoperability, performance characteristics as well as health and safety regulations. Here, especially the regulatory arrangements for electromagnetic compatibility are met. The products bear the RCM-Tick marking on the nameplate.



A0029561

#### Ex approvals

- ATEX
- CSA
- NEPSI
- UKCA
- INMETRO
- KC
- EAC
- JPN
- Combinations of different approvals also

All the data related to explosion protection is provided in separate Ex documentation which is also available upon request. The Ex documentation is supplied as standard with all devices approved for use in explosion hazardous areas.

Additional approvals in preparation.

#### Explosion-protected smartphones and tablets

If used in hazardous areas, mobile end devices with an Ex approval must be used.

### Corrosion test

Standards and test methods:

- 316L: ASTM A262 Practice E and ISO 3651-2 Method A
- Alloy C22 and Alloy C276: ASTM G28 Practice A and ISO 3651-2 Method C
- 22Cr duplex, 25Cr duplex: ASTM G48 Practice A or ISO 17781 and ISO 3651-2 Method C

The corrosion test is confirmed for all wetted and pressure-bearing parts.

A 3.1 material certificate must be ordered as confirmation of the test.

# **EAC** conformity

The device meets the legal requirements of the applicable EAC Directives. These are listed in the corresponding EAC Declaration of Conformity along with the standards applied.

Endress+Hauser confirms successful testing of the device by affixing to it the EAC mark.

#### Drinking water approval

NSF/ANSI 61 drinking water approval

#### Overfill protection system

The device is tested in accordance with the approval guidelines for overfill protection units (ZG-ÜS:2012-07) as overfill protection as per Section 63 of the German Water Resources Act (WHG).

# Functional safety SIL/ IEC 61508 Declaration of Conformity

The devices with a 4-20 mA output signal have been developed according to the IEC 61508 standard. These devices can be used to monitor the process level and pressure up to SIL 3. For a detailed description of the safety functions, settings and functional safety data, see the "Functional Safety Manual".

#### Marine approval

- ABS (American Bureau of Shipping)
- LR (Lloyd's Register)
- BV (Bureau Veritas)
- DNV GL (Det Norske Veritas / German Lloyd)

#### Radio approval

Displays with Bluetooth LE have radio licenses according to CE and FCC. The relevant certification information and labels are provided on display.

#### CRN approval

A CRN approval (Canadian Registration Number) is available for some device versions. These devices are fitted with a separate plate bearing the following registration numbers:

- Devices without a diaphragm seal: CRN 0F22502.5C
- Devices with diaphragm seal: CRN 0F24854.5C

In order to obtain a CRN-approved device, a CRN-approved process connection must be ordered along with the option "CRN" in the order code for "Additional approvals".

In order to obtain a CRN-approved device, a CRN-approved process connection must be ordered along with the option "CRN" in the order code for "Additional approvals".

#### Test reports

#### Test, certificate, declarations

- Inspection certificate 3.1, EN10204 (material certificate, wetted metallic parts)
   The selection of this feature for coated process membranes/process connections refers to the metallic base material.
- NACE MR0175 / ISO 15156 (wetted metallic parts), declaration
- NACE MR0103 / ISO 17945 (wetted metallic parts), declaration
- AD 2000 (wetted metal parts), declaration, excluding membrane
- ASME B31.3 process piping, declaration
- ASME B31.1 power piping, declaration
- Ambient temperature for transmitter (-50 to +85 °C (-58 to +185 °F)); for sensor, see specification
- Ambient temperature for transmitter (-54 to +85 °C (-65 to +185 °F)); for sensor, see specification
- Pressure test, internal procedure, test report
- Helium leak test, internal procedure, test report
- PMI test, internal procedure (wetted metallic parts), test report
- Standard device (without diaphragm seal): dye penetration test ISO23277-1 (PT), wetted/ pressurized metal parts. test report
- Standard device (without diaphragm seal): dye penetration test ASME VIII-1 (PT), wetted/ pressurized metal parts, test report
- Welding documentation, wetted/pressurized seams, declaration

All test reports, declarations and inspection certificates are provided electronically in the Device Viewer: Enter the serial number of the nameplate

(https://www.endress.com/de/pages/supporting-tools/device-viewer).

Applicable for the order codes "Calibration" and "Test, certificate".

# Product documentation on paper

Test reports, declarations and inspection certificates in hard copy can optionally be ordered with the order option "Product documentation on paper". These documents are supplied with the ordered product.

#### Calibration

5-point calibration certificate

10-point calibration certificate, traceable to ISO/IEC 17025

# Manufacturer declarations

Various manufacturer declarations can be downloaded from the Endress+Hauser website. Other manufacturer declarations can be ordered from the Endress+Hauser sales office.

Downloading the Declaration of Conformity

www.endress.com → Download

# Pressure Equipment Directive 2014/68/EU (PED)

#### Pressure equipment with permitted pressure ≤ 200 bar (2 900 psi)

Pressure equipment (maximum working pressure PS  $\leq$  200 bar (2 900 psi)) can be classified as pressure accessories in accordance with Pressure Equipment Directive 2014/68/EU. If the maximum working pressure is  $\leq$  200 bar (2 900 psi) and the pressurized volume of the pressure equipment is  $\leq$  0.1 l, the pressure equipment is subject to the Pressure Equipment Directive (see Pressure Equipment Directive 2014/68/EU, Article 4, point 3). The Pressure Equipment Directive only requires that the pressure equipment shall be designed and manufactured in accordance with the "sound engineering practice of a Member State".

#### Reasons:

- Pressure Equipment Directive (PED) 2014/68/EU Article 4, point 3
- Pressure Equipment Directive 2014/68/EU, Commission's Working Group "Pressure", Guideline A-05 + A-06

#### Note.

A partial examination shall be performed for pressure instruments that are part of a safety instrumented system for the protection of a pipe or vessel from exceeding allowable limits (equipment with safety function in accordance with Pressure Equipment Directive 2014/68/EU, Article 2, point 4).

#### Pressure equipment with allowable pressure > 200 bar (2 900 psi)

Pressure equipment designated for application in every process fluid having a pressurized volume of  $< 0.1 \, \mathrm{l}$  and a maximum allowable pressure PS  $> 200 \, \mathrm{bar}$  (2 900 psi) shall satisfy the essential safety requirements set out in Annex I of the Pressure Equipment Directive 2014/68/EU. According to Article 13, pressure equipment shall be classified by categories in accordance with Annex II. The conformity assessment of the pressure equipment shall be determined by the category I under consideration of the above-mentioned low pressurized volume. They must then bear a CE mark.

#### Reasons:

- Pressure Equipment Directive 2014/68/EU, Article 13, Annex II
- Pressure Equipment Directive 2014/68/EU, Commission's Working Group "Pressure", Guideline A-05

#### Note:

A partial examination shall be performed for pressure instruments that are part of a safety instrumented system for the protection of a pipe or vessel from exceeding allowable limits (equipment with safety function in accordance with Pressure Equipment Directive 2014/68/EU, Article 2, point 4).

#### The following also applies:

- Devices with thread and internal membrane PN > 200 and oval flange adapter PN > 200: Suitable for stable gases in group 1, category I, module A
- Devices with separators PN > 200 ≥ 1.5" / PN 40:
   Suitable for stable gases in group 1, category I, module A
- Devices with thread PN > 200:
   Suitable for stable gases in group 1, category I, module A

# Oxygen application (optional)

Verified cleaned, suitable for O2 service (wetted parts)

#### China RoHS symbol

The device is visibly identified according to SJ/T 11363-2006 (China-RoHS).

#### RoHS

The measuring system complies with the substance restrictions of the Restriction on Hazardous Substances Directive 2011/65/EU (RoHS 2).

### PROFINET over Ethernet-APL certification

#### PROFINET over Ethernet-APL interface

The device is certified and registered by the PNO (PROFIBUS Nutzerorganisation e. V.). The measuring system meets all the requirements of the following specifications:

- Certified according to:
  - Test specification for PROFINET devices
  - PROFINET Security Level Netload Class
- The device can also be operated with certified devices of other manufacturers (interoperability)

#### Additional certification

# Classification of process sealing between electrical systems and (flammable or combustible) process fluids according to UL 122701 (formerly ANSI/ISA 12.27.01)

Endress+Hauser devices are designed in compliance with UL 122701 (formerly ANSI/ISA 12.27.01), allowing users to eliminate the need for external secondary process seals in the piping, as specified in the process seal sections of ANSI/NFPA 70 (NEC) and CSA 22.1 (CEC), thereby saving on costs. These devices comply with North American installation practices and provide a highly secure and cost-effective installation solution for pressure-bearing applications involving hazardous media. The devices are assigned to "single seal" as follows:

CSA C/US IS, XP, NI:

Up to 400 bar (6000 psi).

Further information can be found in the control drawings of the relevant devices.

#### Metrological approval

If you select the "China" order option, the device is delivered with a Chinese nameplate according to the Chinese Quality Act.

#### MID parts certificate

MID parts certificate for custody transfer, optionally available.



For details, refer to document SD02854P.

# Order information

#### Ordering information

Detailed ordering information is available from the nearest sales organization www.addresses.endress.com or in the Product Configurator under www.endress.com:

- 1. Select the product using the filters and search field.
- 2. Open the product page.

The **Configuration** button opens the Product Configurator.

# H

# Product Configurator - the tool for individual product configuration

- Up-to-the-minute configuration data
- Depending on the device: direct input of information specific to the measuring point, such as the measuring range or operating language
- Automatic verification of exclusion criteria
- Automatic creation of the order code and its breakdown in PDF or Excel output format
- Ability to order directly in the Endress+Hauser Online Shop

## Scope of delivery

The scope of delivery comprises:

- Device
- Optional accessories

Accompanying documentation:

- Brief Operating Instructions
- Final inspection report
- Additional Safety Instructions for devices with approvals (e.g. ATEX, IECEx, NEPSI, etc.)
- Optional: factory calibration form, test certificates
- i

The Operating Instructions are available on the Internet at:

www.endress.com → Download

#### Service

The following services, among others, can be selected using the Product Configurator.

- Cleaned of oil+grease (wetted)
- Verified cleaned, suitable for O2 applic. (wetted)
- PWIS-free (paint-wetting impairment substances)
   (The plastic protective cover is excluded from the PWIS cleaning)
- ANSI Safety Red coating, coated housing cover
- Set HART burst mode PV
- Set max. alarm current
- Bluetooth communication is disabled on delivery
- Product documentation on paper

A printed (hard copy) version of test reports, declarations and inspection certificates can optionally be ordered via the **Service**, Version, **Product documentation on paper** option. The required documents can be selected under the feature **Test, certificate, declaration** and are then included with the device on delivery.

# Measuring point (TAG)

- Order code: marking
- Option: Z1, tagging (TAG), see additional specification
- Location of tag identifier: to be selected in the additional specifications
  - Stainless steel wired-on tag plate
  - Paper adhesive label
  - Plate provided
  - RFID tag
  - RFID tag + stainless steel wired-on tag plate
  - RFID tag + paper adhesive label
  - RFID tag + supplied label/plate
- Definition of tag name: to be defined in the additional specifications
   3 lines of maximum 18 characters each

The specified tag name appears on the selected label and/or the RFID TAG

• Identification on electronic nameplate (ENP): 32 digits

# Test reports, declarations and inspection certificates

All test reports, declarations and inspection certificates are provided electronically in the Device Viewer:

Enter the serial number from the nameplate

(https://www.endress.com/de/pages/supporting-tools/device-viewer)



# Product documentation on paper

Test reports, declarations and inspection certificates in hard copy can optionally be ordered with feature 570 "Service", Version I7 "Product documentation on paper". The documents are then provided with the device upon delivery.

# **Application packages**

#### **Heartbeat Technology**

#### Availability

Available in all device versions.

Heartbeat Verification + Monitoring, optional.

#### **Heartbeat Diagnostics**

- Continuous self-monitoring of the device
- Diagnostic messages output to
  - the local display
  - an asset management system (e.g. FieldCare or DeviceCare)
  - an automation system (e.g. PLC)
  - web server

#### **Heartbeat Verification**

- Monitoring of the installed device without interrupting the process, including a verification report
- Clear measuring point assessment (pass/fail) with high total test coverage as part of the manufacturer's specification
- Can be used to document normative requirements
- Meets the requirements for measurement traceability in accordance with ISO 9001 (ISO9001:2015 Section 7.1) ((HART: As of firmware 01.01.xx) (PROFIBUS PA: As of firmware 01.00.xx)). The verification report can be generated via Bluetooth and digital communication interface.

# **Heartbeat Monitoring**

- Statistical Sensor Diagnostics: statistical analysis and evaluation of the pressure signal, including signal noise, to detect process anomalies (e.g. blocked impulse lines)
- Loop Diagnostics: detection of elevated measuring circuit resistance values or declining power supply (only with current output)
- Process Window: user-definable pressure and temperature limits to detect dynamic pressure surges or faulty trace heating systems or insulation
- Continuously supplies additional monitoring data to an external condition monitoring system for the purpose of predictive maintenance or process monitoring

# **Detailed description**



See Special Documentation for SD Heartbeat Technology.

# Accessories

#### Device-specific accessories

#### Mechanical accessories

- Mounting bracket for housing
- Prepared for sealing, PMO-compliant
- Mounting bracket for block & bleed valves
- Block&Bleed valves:
  - Block&Bleed valves can be ordered as **enclosed** accessories (seal for mounting is enclosed)
  - Block and bleed valves can be ordered as **mounted** accessories (mounted manifolds are supplied with a documented leak test)
  - Certificates (e.g. 3.1 material certificate and NACE) and tests (e.g. PMI and pressure test) that are ordered with the device apply for the transmitter and the manifold.
  - During the operating life of the valves, it may be necessary to re-tighten the pack.
- Siphons (PZW)
- Flushing rings
- Weather protective cover

For technical data (e.g. materials, dimensions or order numbers), see the accessory document SD01553P.

#### Plug connectors

- Plug connector M12 90 deg, IP67 5m cable, union nut, Cu Sn/Ni
- Plug connector M12, IP67 union nut, Cu Sn/Ni
- Plug connector M12, 90 deg IP67 union nut, Cu Sn/Ni

The IP protection classes are only maintained if the dummy cap is used or the cable is connected.

# Weld-in accessory



For details, refer to TI00426F/00/EN "Weld-in adapters, process adapters and flanges".

#### **Device Viewer**

All the spare parts for the device, along with the order code, are listed in the *Device Viewer* (https://www.endress.com/de/pages/supporting-tools/device-viewer).

# **Documentation**

The following document types are available in the Downloads area of the Endress+Hauser website (www.endress.com/downloads), depending on the device version:

Document type	Purpose and content of the document
Technical Information (TI)	Planning aid for your device The document contains all the technical data on the device and provides an overview of the accessories and other products that can be ordered for the device.
Brief Operating Instructions (KA)	Guide that takes you quickly to the 1st measured value The Brief Operating Instructions contain all the essential information from incoming acceptance to initial commissioning.
Operating Instructions (BA)	Your reference document The Operating Instructions contain all the information that is required in various phases of the life cycle of the device: from product identification, incoming acceptance and storage, to mounting, connection, operation and commissioning through to troubleshooting, maintenance and disposal.
Description of Device Parameters (GP)	Reference for your parameters The document provides a detailed explanation of each individual parameter. The description is aimed at those who work with the device over the entire life cycle and perform specific configurations.

Document type	Purpose and content of the document
Safety instructions (XA)	Depending on the approval, safety instructions for electrical equipment in hazardous areas are also supplied with the device. These are an integral part of the Operating Instructions.
	The nameplate indicates which Safety Instructions (XA) apply to the device.
Supplementary device-dependent documentation (SD/FY)	Always comply strictly with the instructions in the relevant supplementary documentation. The supplementary documentation is a constituent part of the device documentation.

# Registered trademarks

#### HART®

Registered trademark of the FieldComm Group, Austin, Texas USA

#### **PROFINET®**

Registered trademark of the PROFIBUS User Organization, Karlsruhe, Germany

#### **PROFIBUS®**

PROFIBUS and the associated trademarks (The Association Trademark, the Technology Trademarks, the Certification Trademark and the Certified by PI Trademark) are registered trademarks of the PROFIBUS User Organization e.V. (Profibus User Organization), Karlsruhe - Germany

#### Bluetooth®

The Bluetooth® wordmark and logos are registered trademarks of Bluetooth SIG, Inc. and any use of these trademarks by Endress+Hauser is licensed. Other trademarks and trade names are those of their respective owners.

#### Apple<sup>®</sup>

Apple, the Apple logo, iPhone, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc.

#### Android®

Android, Google Play and the Google Play logo are trademarks of Google Inc.

# Diaphragm seal China, order code 105

This section describes all the technical information of diaphragm seal versions with order code 105, option "8A" to "8N". All other technical information not described in this section can be found in the remaining sections of this document.

#### Performance characteristics

#### Total performance

Performance of the basic unit

The calculation of the total performance for the basic unit remains unchanged.

Calculation of the diaphragm seal error: The resulting diaphragm seal error is different to the data in the Applicator, "Sizing Diaphragm Seal". The influence of the diaphragm seal error is not specified further. Specific sizing is not possible for this device version.

#### Long-term stability

The influence of the long-term stability for the basic unit can be determined by means of the Applicator, "Sizing Pressure Performance". The influence of the diaphragm seal system is not specified further.

#### Total error

The total error can be determined for the basic unit only without diaphragm seal mount.

#### Response time

The response time can be determined for the basic unit only without diaphragm seal mount. The influence of the diaphragm seal system is not specified further.

#### Continuous and alternating load capacity

The device version is designed and validated in accordance with the specifications and requirements of EN 837. Contrary to IEC 62828, a lower load resistance (temperature and pressure) must be assumed.

#### Vibration resistance

The device version is designed and validated in accordance with the specifications and requirements of EN 837.

#### Oxygen applications

This device version must **not** be used for oxygen applications.

# Process

#### Process temperature range

Fill fluid	P <sub>abs</sub> = 0.05 bar (0.725 psi) <sup>1)</sup>	P <sub>abs</sub> ≥1 bar (14.5 psi) <sup>2)</sup>
Silicone oil	-40 to +180 °C (-40 to +356 °F)	-40 to +250 °C (-40 to +482 °F)
High-temperature oil	−10 to +200 °C (+14 to +392 °F)	−10 to +360 °C (+14 to +680 °F)
Low-temperature oil	−98 to +60 °C (−144 to +140 °F)	−98 to +100 °C (−144 to +212 °F)
Vegetable oil	-10 to +160 °C (+14 to +320 °F)	-10 to +220 °C (+14 to +428 °F)
Inert oil	-40 to +100 °C (-40 to +212 °F)	-40 to +175 °C (-40 to +347 °F)

- 1) Permitted temperature range at  $p_{abs} = 0.05$  bar (0.725 psi) (observe temperature limits of the device and the system!)
- 2) Permitted temperature range at  $p_{abs} \ge 1$  bar (14.5 psi) (observe temperature limits of the device and the system!)


# Mechanical construction

# Design, dimensions

Device height, diaphragm seal

The device height is calculated from


- the height of the housing
- the height of optional mounted parts such as temperature isolators or capillaries
- the height of the individual process connection

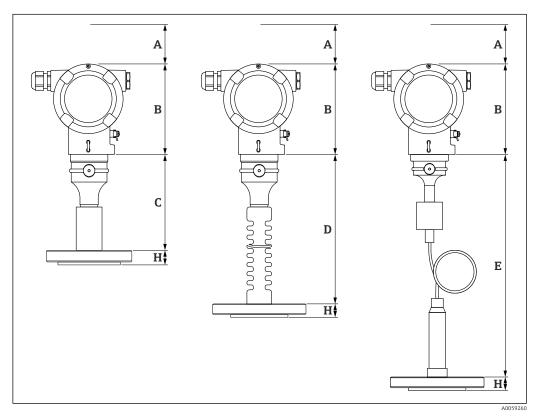

- A Installation clearance
- B Height of the housing
- C Height of the mounted parts, with the "Compact" diaphragm seal here, for example
- D Height of the mounted parts, with the "Temperature isolator" diaphragm seal type here, for example
- $E \qquad \textit{Height of the mounted parts, here with the "Capillary" diaphragm seal type for example} \\$
- H Height of the process connection

# Dimensions


Mounted parts, diaphragm seal

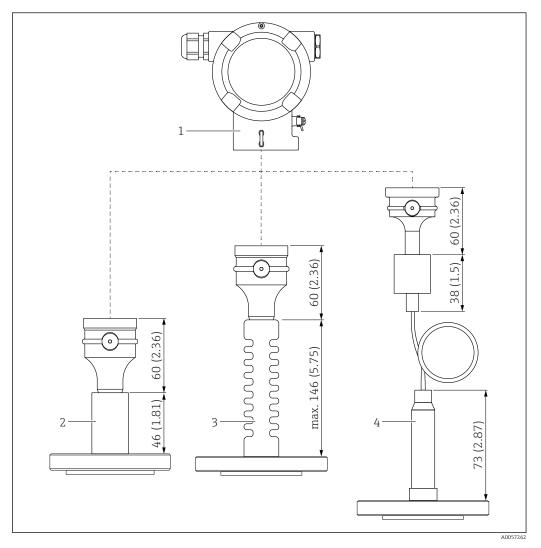

Housing

- 2
- 3
- Diaphragm seal, e.g. flange diaphragm seal here
  Diaphragm seal with temperature isolator
  Process connections with capillaries are 73 mm (2.87 in) higher than process connections without capillaries

Flange EN1092-1, Form B1 and B2, flush membrane, diaphragm seal Connection dimensions according to EN1092-1.

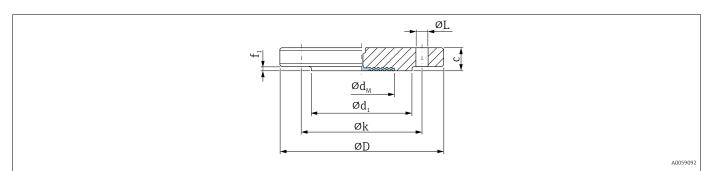

ØD Diameter of flange

c Thickness

Ød1 Raised face

f<sub>1</sub> Raised face

Øk Bolt circle diameter

ØL Diameter of hole

 $\emptyset d_M$  Max. diameter of membrane

Unit mm (in)

Flange 1)	2)		Boltholes			Order option 3)				
DN	PN	Form	ØD	С	Ød <sub>1</sub>	f <sub>1</sub>	Number	øL	Øk	-
			mm	mm	mm	mm		mm	mm	-
DN 25	PN 10-40	B1	115	18	68	2	4	14	85	ној
DN 25	PN 63-160	B2	140	24	68	2	4	18	100	MAJ
DN 50	PN 10-40	B1	165	20	102	2	4	18	125	нзј
DN 50	PN 63	B2	180	26	102	2	4	22	135	FGJ
DN 50	PN 100-160	B2	195	30	102	2	4	26	145	МСЈ
DN 80	PN 10-40	B1	200	24	138	2	8	18	160	н5Ј
DN 80	PN 100	B2	230	36	138	2	8	26	180	FPJ

1) Material: AISI 316L


2) The flange raised face is made from the same material as the membrane.

3) Product Configurator order code for "Process connection"

# Maximum diameter of membrane $\mathcal{O}d_{M}$

DN	PN	Ød <sub>M</sub> (mm)								
		316L	Alloy C276	Tantalum	Monel (Alloy 400)					
DN 25	PN 10-40	33.5	51	51	51					
DN 25	PN 63-160	33.5	51	51	51					
DN 50	PN 10-40	60	92	92	92					
DN 50	PN 63	60	92	92	92					
DN 50	PN 100-160	60	92	92	92					
DN 80	PN 10-40	89	127	127	127					
DN 80	PN 100	89	127	127	127					

# Flange EN1092-1, Form E, flush membrane, diaphragm seal Connection dimensions according to EN1092-1.

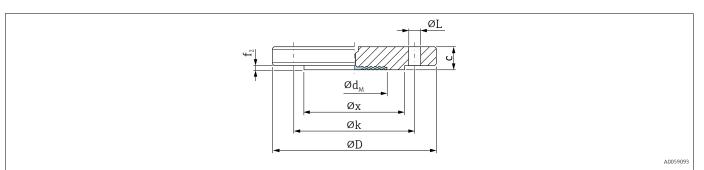

ØD Diameter of flange

Thickness

Raised face Øχ

Raised face

Øk Bolt circle diameter

ØL Diameter of hole

 $\emptyset d_M$  Max. diameter of membrane

Unit mm (in)


Flange 1)2)		Boltholes			Order option 3)					
DN	PN	Form	ØD	с	Øx	f2	Number	ØL Ø		
			mm	mm	mm	mm		mm	mm	
DN 25	PN 10-40	Е	115	18	57	4.5	4	14	85	ној
DN 50	PN 10-40	Е	165	20	87	4.5	4	18	125	нзј
DN 80	PN 10-40	Е	200	24	120	4.5	8	18	160	Н5Ј

- 1) Material: AISI 316L
- The flange raised face is made from the same material as the membrane. Product Configurator order code for "Process connection" 2)
- 3)

# Maximum diameter of membrane $\emptyset d_M$

DN	PN	Ød <sub>M</sub> (mm)									
		316L	Alloy C276	Tantalum	Monel (Alloy 400)						
DN 25	PN 10-40	33.5	51	51	51						
DN 50	PN 10-40	60	92	92	92						
DN 80	PN 10-40	89	127	127	127						

Flange EN1092-1, Form F, flush membrane, diaphragm seal Connection dimensions according to EN1092-1.

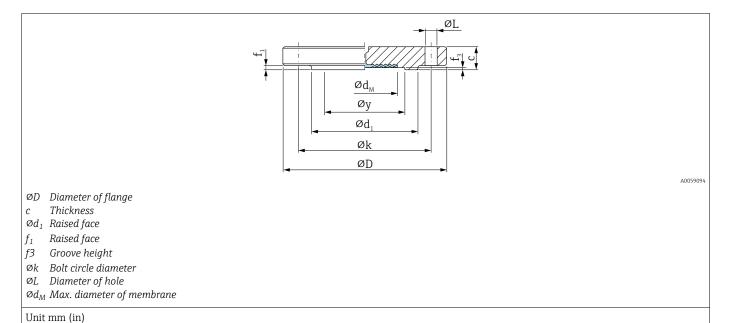


Flange 1) 2	Flange <sup>1) 2)</sup>										Order option 3)	
DN	PN	Form	ØD	с	Ød <sub>1</sub>	øy	$f_1$	f3	Number	ØL	Øk	
			mm	mm	mm	mm	mm	mm		mm	mm	
DN 25	PN 10-40	F	115	18	68	58	2	4	4	14	85	ној
DN 50	PN 10-40	F	165	20	102	88	3	4	4	18	125	НЗЈ
DN 80	PN 10-40	F	200	24	138	121	3	4	8	18	160	Н5Ј

- 1) Material: AISI 316L
- 2) The flange raised face is made from the same material as the membrane.
- 3) Product Configurator order code for "Process connection"

# Maximum diameter of membrane $\emptyset d_M$

DN	PN	Ød <sub>M</sub> (mm)								
		316L	Alloy C276	Tantalum	Monel (Alloy 400)					
DN 25	PN 10-40	33.5	51	51	51					
DN 50	PN 10-40	60	92	92	92					
DN 80	PN 10-40	89	127	127	127					

*Flange ASME B16.5, Form RF and LM, flush membrane, diaphragm seal* Connection dimensions in accordance with ASME B 16.5.

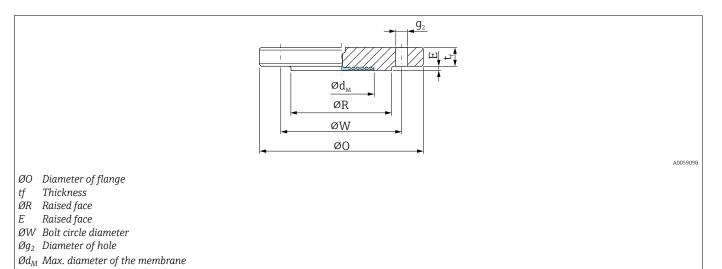

Flange 1)2) Order option 3) **Boltholes** NPS Class ØΟ tf ØR Ε Number Øg<sub>2</sub> øw in in in in in in in 1 150 4.33 0.55 2.01 0.08 4 5/8 3.13 AAJ 1 300 4.92 0.63 2.01 0.08 4 3/4 3.5 AMJ 1 0.28 3.5 400/600 4.92 0.69 2.01 4 3/4 AXJ 1 900/1500 0.28 5.91 1.10 2.01 1 4 BDJ 1 0.28 2500 6.30 1.38 2.01 4 1 4.25 BJJ 2.87 0.08 5/8 1 ½ 150 4.92 0.63 4 3.87 ACJ 1 1/2 300 6.10 0.75 2.87 0.08 4 7/8 4.5 APJ 2 150 6 0.71 3.63 0.08 3/4 4.75 ADJ 5 2 300 6.5 0.81 3.63 80.0 8 3/4 AQJ A0J 2 400/600 6.5 1.00 3.63 0.28 8 3/4 5 2 900/1500 8.46 1.52 3.63 0.28 8 1 6.5 BFJ 2 2.01 2500 9.25 3.63 0.28 8 1 1/8 6.75 BLJ 3 150 7.5 0.88 5 0.08 3/4 6 AFJ 300 7/8 3 5 0.08 8 8.23 1.06 6.63 ASJ 5 0.28 3 400/600 8.23 1.23 8 7/8 6.63 A1J 3 900 9.80 1.5 5 0.28 8 1 7.5 BAJ 3 1500 10.43 1.88 5 0.28 8 1.3 8 BGJ 3 2500 12.01 5 0.28 9 2.63 8 1.42 BMJ

1) Material: AISI 316L


Unit mm (in)

- 2) The flange raised face is made from the same material as the membrane.
- 3) Product Configurator order code for "Process connection"

# Maximum diameter of membrane $\emptyset d_M$

NPS	Class			Ød <sub>M</sub> (in)	
		316L	Alloy C276	Tantalum	Monel (Alloy 400)
1	150	1.32	2.01	2.01	2.01
1	300	1.32	2.01	2.01	2.01
1	400/600	1.32	2.01	2.01	2.01
1	900/1500	1.32	2.01	2.01	2.01
1	2500	1.32	2.01	2.01	2.01
1 ½	150	1.77	2.87	2.87	2.87
1 1/2	300	1.77	2.87	2.87	2.87
2	150	2.36	3.63	3.63	3.63
2	300	2.36	3.63	3.63	3.63
2	400/600	2.36	3.63	3.63	3.63
2	900/1500	2.36	3.63	3.63	3.63
2	2500	2.36	3.63	3.63	3.63
3	150	3.50	5.00	5.00	5.00
3	300	3.50	5.00	5.00	5.00
3	400/600	3.50	5.00	5.00	5.00
3	900	3.50	5.00	5.00	5.00
3	1500	3.50	5.00	5.00	5.00
3	2500	3.50	5.00	5.00	5.00

Flange ASME B16.5, Form RTJ, flush membrane, diaphragm seal Connection dimensions in accordance with ASME B 16.5.

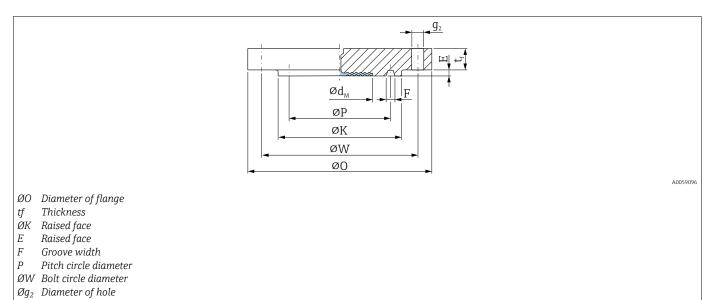

Flange	1) 2)							Boltholes			Order option 3)
NPS	Class	ØO	tf	P	E	F	ØК	Number	Øg <sub>2</sub>	øw	
in		in	in	in	in	in	in		in	in	-
1	150	4.33	0.55	47.62	6.35	8.74	63.5	4	5/8	3.13	AAJ
1	300	4.92	0.63	50.8	6.35	8.74	69.8	4	3/4	3.5	AMJ
1	400/600	4.92	0.69	50.8	6.35	8.74	69.8	4	3/4	3.5	AXJ
1	900/1500	5.91	1.10	50.8	6.35	8.74	71.4	4	1	4	BDJ
1	2500	6.30	1.38	60.33	6.35	8.74	82.6	4	1	4.25	BJJ
1 ½	150	4.92	0.63	65.07	6.35	8.74	82.6	4	5/8	3.87	ACJ
1 ½	300	6.10	0.75	68.28	6.35	8.74	90.4	4	7/8	4.5	APJ
2	150	6	0.71	82.55	6.35	8.74	102	4	3/4	4.75	ADJ
2	300	6.5	0.81	82.55	7.92	11.91	108	8	3/4	5	AQJ
2	400/600	6.5	1.00	82.55	7.92	11.91	108	8	3/4	5	A0J
2	900/1500	8.46	1.52	95.25	7.92	11.91	124	8	1	6.5	BFJ
2	2500	9.25	2.01	101.60	7.92	11.91	133	8	1 1/8	6.75	BLJ
3	150	7.5	0.88	114.30	6.35	8.74	133	4	3/4	6	AFJ
3	300	8.23	1.06	123.82	7.92	11.91	146	8	7/8	6.63	ASJ
3	400/600	8.23	1.23	123.82	7.92	11.91	146	8	7/8	6.63	A1J
3	900	9.80	1.5	123.82	7.92	11.91	155	8	1	7.5	BAJ
3	1500	10.43	1.88	136.52	7.92	11.91	168	8	1.3	8	BGJ
3	2500	12.01	2.63	127	9.53	13.49	168	8	1.42	9	BMJ

1) Material: AISI 316L


 $\emptyset d_M$  Max. diameter of the membrane

- 2) The flange raised face is made from the same material as the membrane.
- 3) Product Configurator order code for "Process connection"

# Maximum diameter of membrane $\emptyset d_M$

NPS	Class	Ød <sub>M</sub> (in)							
		316L	Alloy C276	Tantalum	Monel (Alloy 400)				
1	150	1.32	2.01	2.01	2.01				
1	300	1.32	2.01	2.01	2.01				
1	400/600	1.32	2.01	2.01	2.01				
1	900/1500	1.32	2.01	2.01	2.01				
1	2500	1.32	2.01	2.01	2.01				
1 ½	150	1.77	2.87	2.87	2.87				
1 ½	300	1.77	2.87	2.87	2.87				
2	150	2.36	3.63	3.63	3.63				
2	300	2.36	3.63	3.63	3.63				
2	400/600	2.36	3.63	3.63	3.63				
2	900/1500	2.36	3.63	3.63	3.63				
2	2500	2.36	3.63	3.63	3.63				
3	150	3.50	5.00	5.00	5.00				
3	300	3.50	5.00	5.00	5.00				
3	400/600	3.50	5.00	5.00	5.00				
3	900	3.50	5.00	5.00	5.00				
3	1500	3.50	5.00	5.00	5.00				
3	2500	3.50	5.00	5.00	5.00				

*Flange ASME B16.5, Form LG, flush membrane, diaphragm seal* Connection dimensions in accordance with ASME B 16.5.

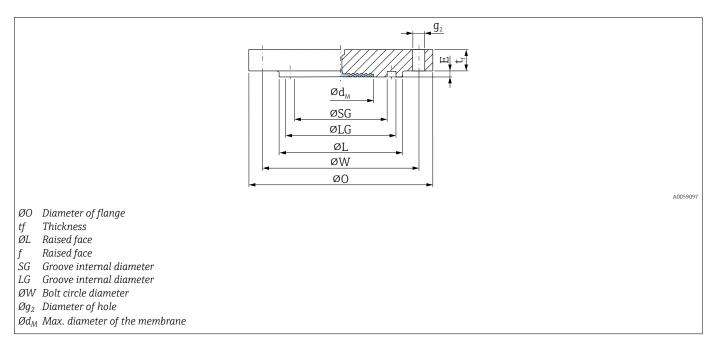

Flange 1) 2)								Boltholes		Order option 3)	
NPS	Class	ØO	tf	ØL	f	SG	LG	Number	Øg <sub>2</sub>	øw	
in	-	in	in	in	in	mm	mm		in	in	-
1	150	4.33	0.55	2.01	0.08	36.6	52.3	4	5/8	3.13	AAJ
1	300	4.92	0.63	2.01	0.08	36.6	52.3	4	3/4	3.5	AMJ
1	400/600	4.92	0.69	2.01	0.28	36.6	52.3	4	3/4	3.5	AXJ
1	900/1500	5.91	1.10	2.01	0.28	36.6	52.3	4	1	4	BDJ
1	2500	6.30	1.38	2.01	0.28	36.6	52.3	4	1	4.25	BJJ
1 ½	150	4.92	0.63	2.87	0.08	52.3	74.7	4	5/8	3.87	ACJ
1 ½	300	6.10	0.75	2.87	0.08	52.3	74.7	4	7/8	4.5	APJ
2	150	6	0.71	3.63	0.08	71.4	93.7	4	3/4	4.75	ADJ
2	300	6.5	0.81	3.63	0.08	71.4	93.7	8	3/4	5	AQJ
2	400/600	6.5	1.00	3.63	0.28	71.4	93.7	8	3/4	5	A0J
2	900/1500	8.46	1.52	3.63	0.28	71.4	93.7	8	1	6.5	BFJ
2	2500	9.25	2.01	3.63	0.28	71.4	93.7	8	1 1/8	6.75	BLJ
3	150	7.5	0.88	5	0.08	106.4	128.5	4	3/4	6	AFJ
3	300	8.23	1.06	5	0.08	106.4	128.5	8	7/8	6.63	ASJ
3	400/600	8.23	1.23	5	0.28	106.4	128.5	8	7/8	6.63	A1J
3	900	9.80	1.5	5	0.28	106.4	128.5	8	1	7.5	BAJ
3	1500	10.43	1.88	5	0.28	106.4	128.5	8	1.3	8	BGJ
3	2500	12.01	2.63	5	0.28	106.4	128.5	8	1.42	9	BMJ

- 1) Material: AISI 316L
- $\begin{tabular}{ll} \begin{tabular}{ll} \beg$
- 3) Product Configurator order code for "Process connection"

# Maximum diameter of membrane $\emptyset d_M$

NPS	Class	Ød <sub>M</sub> (in)						
		316L	Alloy C276	Tantalum	Monel (Alloy 400)			
1	150	1.32	2.01	2.01	2.01			
1	300	1.32	2.01	2.01	2.01			
1	400/600	1.32	2.01	2.01	2.01			
1	900/1500	1.32	2.01	2.01	2.01			
1	2500	1.32	2.01	2.01	2.01			
1 ½	150	1.77	2.87	2.87	2.87			
1 ½	300	1.77	2.87	2.87	2.87			
2	150	2.36	3.63	3.63	3.63			
2	300	2.36	3.63	3.63	3.63			
2	400/600	2.36	3.63	3.63	3.63			
2	900/1500	2.36	3.63	3.63	3.63			
2	2500	2.36	3.63	3.63	3.63			
3	150	3.50	5.00	5.00	5.00			
3	300	3.50	5.00	5.00	5.00			
3	400/600	3.50	5.00	5.00	5.00			
3	900	3.50	5.00	5.00	5.00			
3	1500	3.50	5.00	5.00	5.00			
3	2500	3.50	5.00	5.00	5.00			

# Weight

# Process connections

Weight 1)	Order option <sup>2)</sup>
1.20 kg (2.65 lb)	AAJ
1.50 kg (3.31 lb)	AMJ
1.60 kg (3.53 lb)	ACJ
2.70 kg (5.95 lb)	APJ
2.50 kg (5.51 lb)	ADJ
3.40 kg (7.50 lb)	AQJ
5.10 kg (11.25 lb)	AFJ
7.00 kg (15.44 lb)	ASJ
1.70 kg (3.75 lb)	AXJ
4.30 kg (9.48 lb)	АОЈ
8.60 kg (18.96 lb)	A1J
13.30 kg (29.33 lb)	BAJ
3.70 kg (8.16 lb)	BDJ
10.30 kg (22.71 lb)	BFJ
21.80 kg (48.07 lb)	BGJ
15.80 kg (34.84 lb)	BLJ
39.00 kg (86.00 lb)	вмј
1.70 kg (3.75 lb)	вјј
1.38 kg (3.04 lb)	ној
3.20 kg (7.06 lb)	нзј
5.54 kg (12.22 lb)	ны

- Total weight consisting of sensor assembly and process connection. Product Configurator order code for "Process connection"
- 1) 2)

# Materials in contact with process

Membrane material

- 316L
- Alloy C276

The flange raised face is made from the same material as the membrane.

- 316L in the case of EN 1092-1 flanges
- 316L in the case of ASME flanges
- Tantalum

The flange raised face is made from the same material as the membrane.

- 316L in the case of EN 1092-1 flanges
- 316L in the case of ASME flanges
- Monel (Alloy 400)

The flange raised face is made from the same material as the membrane.

- 316L in the case of EN 1092-1 flanges
- 316L in the case of ASME flanges

#### Membrane coating

#### PTFE:

- Coating: 50 to 65 μm (0.0019 to 0.0025 μin)
- Maximum process pressure:
  - Process temperature ≤ +40 °C (+104 °F): maximum process pressure +150 bar (+2 175 psi)
  - Process temperature ≤ +150 °C (+302 °F): maximum process pressure +50 bar (+725 psi)
  - Process temperature ≤ +200 °C (+392 °F): maximum process pressure +20 bar (+290 psi)
- Permitted process temperature:
  - -40 to +260 °C (-40 to +500 °F)
  - Under vacuum or negative pressure conditions at  $p_{abs} \le 1$  bar: -40 to +200 °C (-40 to +392 °F)
- PTFE coating serves as anti-adhesive layer and protects against abrasion

#### Gold

Coating: 25 µm (0.00098 µin)

#### Materials not in contact with process

Armor for capillary

#### 316L

- Capillary: ASTM 312 316L
- Protective sleeve for capillary: ASTM A240 316 L

#### Certificates and approvals

# **Corrosion test**

Standards and test methods are available for specific versions.

Contact Endress+Hauser for a more detailed specification with the selected system configuration and order code.

#### Overfill protection system

This device version **has not** been validated as overfill protection in accordance with §63 WHG (German Water Resources Act).

#### Marine approval

This device version **does not** have marine approval.

# CRN approval

This device version **does not** have CRN approval.

# Drinking water approval

This device version does **not** have drinking water approval.

# Test reports

Test, certificate, declarations

This device version does **not** meet the following requirements:

- AD 2000 (wetted metal parts), declaration, excluding process membrane
- NACE MR0175 / ISO 15156 (wetted metallic parts), declaration
- ASME B31.3 process piping, declaration
- ASME B31.1 power piping, declaration
- NACE MR0103/ISO 17945 (wetted metal parts), test report

The following tests **cannot** be provided for this device version:

- Helium leak test, internal procedure, test report
- Welding documentation, wetted/pressurized seams
- Inspection certificate 3.1, EN10204 (material certificate, wetted metallic parts)
- PMI test, internal procedure (wetted metallic parts), test report
- Penetrant testing ISO23277-1 (PT), wetted/pressurized metallic parts, test report
- NACE MR0103/ISO 17945 (wetted metal parts), test report
- Ambient temperature range transmitter -50 °C (-58 °F), sensor; see specification
- Ambient temperature range transmitter -60 °C (-76 °F), sensor; see specification

Manufacturer declarations

**No** valid manufacturer declarations are currently available for this device version.

Contact Endress+Hauser if necessary.





www.addresses.endress.com