# Technical Information **Proline Promass I 100**

Coriolis flowmeter



## Combines in-line viscosity and flow measurement with an ultra-compact transmitter

#### Application

- Measuring principle operates independently of physical fluid properties such as viscosity or density
- Measuring liquids and gases in applications requiring low pressure loss and gentle fluid treatment

#### Device properties

- Straight, easy-to-clean single-tube system
- TMB technology
- Measuring tube made of Titanium
- Robust, ultra-compact transmitter housing
- Highest degree of protection: IP69K
- Local display available

#### Your benefits

- Energy-saving full-bore design enables minimal pressure
- Fewer process measuring points multivariable measurement (flow, density, temperature)
- Space-saving installation no in-/outlet run needs
- Space-saving transmitter full functionality on smallest footprint
- Time-saving local operation without additional software and hardware – integrated web server
- Integrated verification Heartbeat Technology



## Table of contents

About this document	4	Degree of protection	47
Symbols	4	Vibration resistance and shock resistance	47
		Electromagnetic compatibility (EMC)	48
Function and system design		_	
Measuring principle		Process	48
Measuring system	6	Medium temperature range	
Equipment architecture	7	Medium density	48
Reliability	7	Pressure-temperature ratings	49
		Sensor housing	52
Input	Ω	3	52
		Flow limit	52
Measured variable		Pressure loss	53
Measuring range	l l	Static pressure	53
Operable flow range	9	Thermal insulation	53
Input signal	9	Heating	53
		Vibrations	54
Output	10		
Output signal	10	Mechanical construction	55
Signal on alarm			<b>رر</b> 55
	13	Dimensions in SI units	
	14	Dimensions in US units	
Protocol-specific data	14	Weight	
•		Materials	
Danier annula	2.6	Process connections	
11 3	24	Surface roughness	78
	24		
J , 1 J	31	Operability	78
	34	Operating concept	
	34	Local display	
	34	Remote operation	
	35	Service interface	
	35		
	35	C-4:C-411-	02
1	37		83
	37	CE mark	
	37	UKCA marking	
Cable specification	37	RCM marking	
		Ex approval	
Performance characteristics	38	Hygienic compatibility	
Reference operating conditions		Pharmaceutical compatibility	
Maximum measurement error		HART certification	
	40	Certification PROFIBUS	
	41	Certification PROFINET	85
	41	EtherNet/IP certification	
Influence of medium temperature		Modbus RS485 certification	85
<del>-</del>	42	Pressure Equipment Directive	85
Design fundamentals	I .	Additional certification	
2 corga ramaamentaa va v		External standards and guidelines	86
Installation	/ <sub>1</sub> 2		
Installation		Ordering information	86
Mounting location	I .	•	
	44	Application page and	07
	45	Application packages	
-r	45	Heartbeat Technology	87
Installing the Safety Barrier Promass 100	47	Concentration measurement	
		Viscosity	87
Environment	47	Special density	87
	47		
- · · · · · · · · · · · · · · · · · · ·	47	Accessories	88
	47	Device-specific accessories	88
	ı		

Communication-specific accessories	89
Documentation	90
Registered trademarks	91

## About this document

#### Symbols Electrical symbols

Symbol	Meaning
	Direct current
~	Alternating current
$\overline{}$	Direct current and alternating current
<u></u>	Ground connection A grounded terminal which, as far as the operator is concerned, is grounded via a grounding system.
	Protective earth (PE) Ground terminals that must be connected to ground prior to establishing any other connections.
	The ground terminals are located on the interior and exterior of the device:  Interior ground terminal: protective earth is connected to the mains supply.  Exterior ground terminal: device is connected to the plant grounding system.

#### $Symbols \ for \ certain \ types \ of \ information$

Symbol	Meaning
<b>✓</b>	Permitted Procedures, processes or actions that are permitted.
	Preferred Procedures, processes or actions that are preferred.
X	Forbidden Procedures, processes or actions that are forbidden.
i	Tip Indicates additional information.
	Reference to documentation
	Reference to page
	Reference to graphic
	Visual inspection

#### $Symbols\ in\ graphics$

Symbol	Meaning
1, 2, 3,	Item numbers
1., 2., 3.,	Series of steps
A, B, C,	Views
A-A, B-B, C-C,	Sections
EX	Hazardous area
×	Safe area (non-hazardous area)
≋ <b>→</b>	Flow direction

### Function and system design

#### Measuring principle

The measuring principle is based on the controlled generation of Coriolis forces. These forces are always present in a system when both translational and rotational movements are superimposed.

 $F_c = 2 \cdot \Delta m (v \cdot \omega)$ 

 $F_c$  = Coriolis force

 $\Delta m = moving mass$ 


 $\omega = rotational velocity$ 

v = radial velocity in rotating or oscillating system

The amplitude of the Coriolis force depends on the moving mass  $\Delta m$ , its velocity v in the system and thus on the mass flow. Instead of a constant rotational velocity  $\omega$ , the sensor uses oscillation.

In the sensor, an oscillation is produced in the measuring tube. The Coriolis forces produced at the measuring tube cause a phase shift in the tube oscillations (see illustration):

- If there is zero flow (i.e. when the medium is at a standstill), the oscillation measured at points A and B has the same phase (no phase shift) (1).
- Mass flow causes deceleration of the oscillation at the inlet of the tubes (2) and acceleration at the outlet (3).

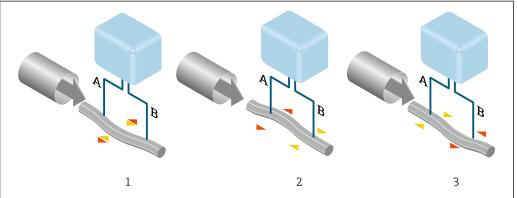

A0029932

The phase shift (A-B) increases with increasing mass flow. Electrodynamic sensors register the tube oscillations at the inlet and outlet. System balance is ensured by the antiphase oscillation of an eccentrically arranged swinging mass. The measuring principle operates independently of temperature, pressure, viscosity, conductivity and flow profile.

#### Density measurement

The measuring tube is continuously excited at its resonance frequency. A change in the mass and thus the density of the oscillating system (comprising measuring tube and medium) results in a corresponding, automatic adjustment in the oscillation frequency. The resonance frequency is thus a function of the medium density. The microprocessor utilizes this relationship to obtain a density signal.

#### Volume measurement

Together with the measured mass flow, this is used to calculate the volume flow.

#### Temperature measurement

The temperature of the measuring tube is determined in order to calculate the compensation factor due to temperature effects. This signal corresponds to the process temperature and is also available as an output signal.


#### Measuring system

The device consists of a transmitter and a sensor. If a device with Modbus RS485 intrinsically safe is ordered, the Safety Barrier Promass 100 is part of the scope of supply and must be implemented to operate the device.

The device is available as a compact version:

The transmitter and sensor form a mechanical unit.

#### Transmitter

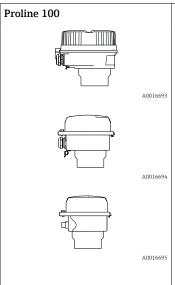

Device versions and materials:

- Compact, aluminum, coated:
   Aluminum, AlSi10Mg, coated
- Compact, hygienic, stainless:
   Hygienic version, stainless steel 1.4301 (304)
- Ultra-compact, hygienic, stainless:
   Hygienic version, stainless steel 1.4301 (304)


Configuration:

- Via operating tools (e.g. FieldCare, DeviceCare)
- Also for device version with local display (LCD):
   Via web browser
- Also for device version with 4-20 mA HART, pulse/frequency/switch output:

Via web browser


- Also for device version with EtherNet/IP output:
- Via web browser
- Via Add-on Profile Level 3 for automation system from Rockwell Automation
- Via Electronic Data Sheet (EDS)
- Also for device version with PROFINET output:
  - Via web browser
  - Via device master file (GSD)

#### Sensor

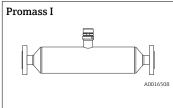

- Sensitive fluid handling thanks to straight single-tube system
- Simultaneous measurement of viscosity, flow, volume flow, density and temperature (multivariable)
- Immune to process influences
- Nominal diameter range: DN 8 to 80 (3/8 to 3")
- Materials:
  - Sensor: stainless steel, 1.4301 (304)
  - Measuring tubes: titanium Grade 9
  - Process connections: stainless steel, 1.4301 (304), wetted parts: titanium Grade 2


#### **Safety Barrier Promass 100**

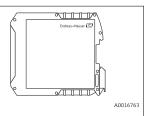

- Dual-channel safety barrier for installation in non-hazardous locations or zone 2/div. 2:
  - Channel 1: DC 24 V power supply
  - Channel 2: Modbus RS485
- In addition to current, voltage and power limitation, it offers galvanic isolation of circuits for explosion protection.
- Easy top-hat rail mounting (DIN 35 mm) for installation in control cabinets

6

#### **Equipment architecture**

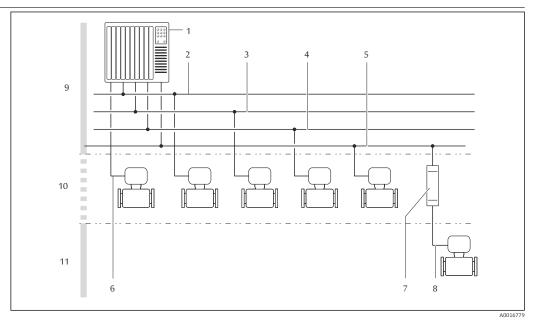

 $\blacksquare 1$  Possibilities for integrating measuring instruments into a system

- 1 Automation system (e.g. PLC)
- 2 EtherNet/IP
- 3 PROFIBUS DP
- 4 PROFINET
- 5 Modbus RS485
- 6 4-20 mA HART, pulse/frequency/switch output
- 7 Safety Barrier Promass 100
- 8 Modbus RS485, intrinsically safe
- 9 Non-hazardous area
- 10 Non-hazardous area and Zone 2/Div. 2
- 11 Hazardous area and Zone 1/Div. 1

#### Reliability

#### IT security

The manufacturer warranty is valid only if the product is installed and used as described in the Operating Instructions. The product is equipped with security mechanisms to protect it against any inadvertent changes to the settings.

IT security measures, which provide additional protection for the product and associated data transfer, must be implemented by the operators themselves in line with their security standards.

## **Input**

#### Measured variable

#### Direct measured variables

- Mass flow
- Density
- Temperature
- Viscosity

#### Calculated measured variables

- Volume flow
- Corrected volume flow
- Reference density

#### Measuring range

#### Measuring range for liquids

DN		Measuring range full scale values $\dot{m}_{min(F)}$ to $\dot{m}_{max(F)}$	
[mm]	[in]	[kg/h]	[lb/min]
8	3/8	0 to 2 000	0 to 73.50
15	1/2	0 to 6 500	0 to 238.9
15 FB	½ FB	0 to 18000	0 to 661.5
25	1	0 to 18000	0 to 661.5
25 FB	1 FB	0 to 45 000	0 to 1654
40	1½	0 to 45 000	0 to 1654
40 FB	1½ FB	0 to 70 000	0 to 2 573
50	2	0 to 70 000	0 to 2 573
50 FB	2 FB	0 to 180 000	0 to 6615
80	3	0 to 180 000	0 to 6615
FB = Full bore			

#### Measuring range for gases

The full scale value depends on the density and the speed of sound of the gas used. The full scale value can be calculated with the following formulas:

- $$\begin{split} \bullet & \ \dot{m}_{max(G)} = minimum \ (\dot{m}_{max(F)} \cdot \rho_G : x \ ) \\ \bullet & \ \dot{m}_{max(G)} = minimum \ (\rho_G \cdot (c_G/2) \cdot d_i^2 \cdot (\pi/4) \cdot 3600 \cdot n) \end{split}$$

m <sub>max(G)</sub>	Maximum full scale value for gas [kg/h]
ṁ <sub>max(F)</sub>	Maximum full scale value for liquid [kg/h]
$\dot{m}_{\max(G)} < \dot{m}_{\max(F)}$	$\dot{m}_{ max(G)}$ can never be greater than $\dot{m}_{ max(F)}$
$\rho_G$	Gas density in [kg/m³] at operating conditions
х	Limitation constant for max. gas flow [kg/m³]
$c_G$	Speed of sound (gas) [m/s]
d <sub>i</sub>	Measuring tube internal diameter [m]
π	Pi
n = 1	Number of measuring tubes

DN		х
[mm]	[in]	[kg/m³]
8	3/8	60
15	1/2	80
15 FB	½ FB	90
25	1	90
25 FB	1 FB	90
40	1½	90
40 FB	1½ FB	90
50	2	90
50 FB	2 FB	110
80	3	110
FB = Full bore	,	

 $\square$  To calculate the measuring range, use the *Applicator* sizing tool  $\rightarrow \square$  89

If calculating the full scale value using the two formulas:

- 1. Calculate the full scale value with both formulas.
- 2. The smaller value is the value that must be used.

#### Recommended measuring range



Flow limit  $\rightarrow$   $\blacksquare$  52

#### Operable flow range

Over 1000:1.

Flow rates above the preset full scale value do not override the electronics unit, with the result that the totalizer values are registered correctly.

#### Input signal

#### External measured values

To increase the measurement accuracy of certain measured variables or to calculate the corrected volume flow for gases, the automation system can continuously write different measured values to the measuring instrument:

- Operating pressure to increase measurement accuracy (Endress+Hauser recommends the use of a pressure measuring instrument for absolute pressure, e.g. Cerabar M or Cerabar S)
- Medium temperature to increase measurement accuracy (e.g. iTEMP)
- Reference density for calculating the corrected volume flow for gases

It is recommended to read in external measured values to calculate the following measured variables:

- Mass flow
- Corrected volume flow

#### HART protocol

The measured values are written from the automation system to the measuring device via the HART protocol. The pressure transmitter must support the following protocol-specific functions:

- HART protocol
- Burst mode

#### Digital communication

The measured values can be written by the automation system via:

- PROFIBUS DP
- Modbus RS485
- EtherNet/IP
- PROFINET

## Output

#### Output signal

#### HART current output

Current output	4-20 mA HART (active)
Maximum output values	<ul><li>DC 24 V (no flow)</li><li>22.5 mA</li></ul>
Load	$0$ to $700~\Omega$
Resolution	0.38 μΑ
Damping	Configurable: 0.07 to 999 s
Assignable measured variables	<ul> <li>Mass flow</li> <li>Volume flow</li> <li>Corrected volume flow</li> <li>Density</li> <li>Reference density</li> <li>Temperature</li> <li>The range of options increases if the measuring device has one or more application packages.</li> </ul>

#### Pulse/frequency/switch output

Function	Can be set to pulse, frequency or switch output
Version	Passive, open collector
Maximum input values	■ DC 30 V ■ 25 mA
Voltage drop	For 25 mA: ≤ DC 2 V
Pulse output	
Pulse width	Configurable: 0.05 to 2 000 ms
Maximum pulse rate	10 000 Impulse/s
Pulse value	Adjustable
Assignable measured variables	<ul><li>Mass flow</li><li>Volume flow</li><li>Corrected volume flow</li></ul>
Frequency output	
Output frequency	Configurable: 0 to 10 000 Hz
Damping	Configurable: 0 to 999 s
Pulse/pause ratio	1:1

Assignable measured variables	<ul> <li>Mass flow</li> <li>Volume flow</li> <li>Corrected volume flow</li> <li>Density</li> <li>Reference density</li> <li>Temperature</li> <li>The range of options increases if the measuring device has one or more application packages.</li> </ul>
Switch output	
Switching behavior	Binary, conductive or non-conductive
Switching delay	Configurable: 0 to 100 s
Number of switching cycles	Unlimited
Assignable functions	<ul> <li>Off</li> <li>On</li> <li>Diagnostic behavior</li> <li>Limit value</li> <li>Mass flow</li> <li>Volume flow</li> <li>Corrected volume flow</li> <li>Density</li> <li>Reference density</li> <li>Temperature</li> <li>Totalizer 1-3</li> <li>Flow direction monitoring</li> <li>Status</li> <li>Partially filled pipe detection</li> <li>Low flow cut off</li> <li>The range of options increases if the measuring device has one or more application packages.</li> </ul>

#### PROFIBUS DP

Signal encoding	NRZ code
Data transfer	9.6 kBaud12 MBaud
Terminating resistor	Integrated, can be activated via DIP switches

#### Modbus RS485

Physical interface	In accordance with EIA/TIA-485-A standard
Terminating resistor	<ul> <li>For device version used in non-hazardous areas or Zone 2/Div. 2: integrated and can be activated via DIP switches on the transmitter electronics module</li> <li>For device version used in intrinsically safe areas: integrated and can be activated via DIP switches on the Safety Barrier Promass 100</li> </ul>

#### EtherNet/IP

Standards	In accordance with IEEE 802.3
-----------	-------------------------------

#### PROFINET

Standards	In accordance with IEEE 802.3
-----------	-------------------------------

#### Signal on alarm

Depending on the interface, failure information is displayed as follows:

#### **Current output**

Current output 4-20 mA	
Failure mode	Configurable:  4 to 20 mA in accordance with NAMUR recommendation NE 43  4 to 20 mA in accordance with US  Min. value: 3.59 mA  Max. value: 22.5 mA  Definable value between: 3.59 to 22.5 mA  Actual value  Last valid value

#### Pulse/frequency/switch output

Pulse output	
Failure mode	Configurable:  Actual value No pulses
Frequency output	
Failure mode	Configurable:  Actual value  O Hz  Definable value between: 0 to 12 500 Hz
Switch output	
Failure mode	Configurable:  Current status  Open Closed

#### PROFIBUS DP

Status and alarm	Diagnostics in accordance with PROFIBUS PA Profile 3.02
messages	

#### Modbus RS485

Failure mode	Choose from:
	NaN value instead of current value
	Last valid value

#### EtherNet/IP

Device diagnostics	Device condition can be read out in Input Assembly
Device anaghosaes	Device condition can be read out in input rissembly

#### PROFINET

Device diagnostics
--------------------

#### Local display

Plain text display	With information on cause and remedial measures
Backlight	Red backlighting indicates a device error.



Status signal as per NAMUR recommendation NE 107

#### Interface/protocol

- Via digital communication:
  - HART protocol
  - PROFIBUS DP
  - Modbus RS485
  - EtherNet/IP
  - PROFINET
- Via service interface
   Service interface CDI-RJ45
- Plain text display
   With information on cause and remedial actions



#### Web browser

Plain text display	With information on cause and remedial measures

#### **LEDs**

Status information	Status indicated by various LEDs
	The following information is displayed depending on the device version:  Supply voltage active  Data transmission active  Device alarm/error has occurred  Network available 1)  Connection established 1)  PROFINET blinking feature 2)

- 1) Only available for PROFINET, Ethernet/IP
- 2) Only available for PROFINET,

#### Ex connection data

These values only apply for the following device version:

Order code for "Output", option M "Modbus RS485", for use in intrinsically safe areas

#### **Safety Barrier Promass 100**

#### Safety-related values

Terminal numbers			
Supply voltage		Signal tra	nsmission
2 (L-)	1 (L+) 26 (B) 27 (A		27 (A)
U <sub>nom</sub> = DC 24 V U <sub>max</sub> = AC 260 V		$U_{\text{nom}} = U_{\text{max}} = A$	

#### Intrinsically safe values

Terminal numbers			
Supply voltage		Signal transmission	
20 (L-)	10 (L+)	62 (B)	72 (A)
$\begin{array}{c c} U_o = 16.24 \ V \\ I_o = 623 \ \text{mA} \\ P_o = 2.45 \ W \\ \text{For IIC}^{\ 1)} : L_o = 92.8 \ \mu\text{H}, \ C_o = 0.433 \ \mu\text{F}, \ L_o/R_o = 14.6 \ \mu\text{H}/\Omega \\ \text{For IIC} : L_o = 92.8 \ \mu\text{H}, \ C_o = 0.433 \ \mu\text{F}, \ L_o/R_o = 58.3 \ \mu\text{H}/\Omega \\ \text{For IIB}^{\ 1)} : L_o = 372 \ \mu\text{H}, \ C_o = 2.57 \ \mu\text{F}, \ L_o/R_o = 58.3 \ \mu\text{H}/\Omega \\ \end{array}$			
For an overview and for information on the interdependencies between the gas group - sensor - nominal diameter, see the "Safety Instructions" (XA) document for the measuring device			

The gas group depends on the sensor and nominal diameter

#### Transmitter

Intrinsically safe values

Order code for	Terminal numbers			
"Approval"	Supply voltage		Signal transmission	
	20 (L-)	10 (L+)	62 (B)	72 (A)
<ul> <li>Option BM: ATEX II2G + IECEx Z1 Ex ia, II2D Ex tb</li> <li>Option BO: ATEX II1/2G + IECEx Z0/Z1 Ex ia, II2D</li> <li>Option BQ: ATEX II1/2G + IECEx Z0/Z1 Ex ia</li> <li>Option BU: ATEX II2G + IECEx Z1 Ex ia</li> <li>Option C2: CSA C/US IS Cl. I, II, III Div. 1</li> <li>Option 85: ATEX II2G + IECEx Z1 Ex ia + CSA C/US IS Cl. I, II, III Div. 1</li> </ul>		$U_i = 1$ $I_i = 62$ $P_i = 2$ $L_i = 0$ $C_i = 0$	23 mA .45 W 0 µH	

diameter, see the "Safety Instructions" (XA) document for the measuring device

#### Low flow cut off

The switch points for low flow cut off are user-selectable.

#### Protocol-specific data

#### **HART**

Manufacturer ID	0x11
Device type ID	0x4A
HART protocol revision	7
Device description files (DTM, DD)	Information and files under: www.endress.com
HART load	Min. 250 Ω

Dynamic variables	Read out the dynamic variables: HART command 3 The measured variables can be freely assigned to the dynamic variables.
	Measured variables for PV (primary dynamic variable)  Mass flow Volume flow Corrected volume flow Density Reference density Temperature
	Measured variables for SV, TV, QV (secondary, tertiary and quaternary dynamic variable)  Mass flow  Volume flow  Corrected volume flow  Density  Reference density  Temperature  Totalizer 1  Totalizer 2  Totalizer 3
	The range of options increases if the measuring device has one or more application packages.
	Heartbeat Technology application package Additional measured variables are available with the Heartbeat Technology application package:  Sensor integrity Carrier pipe temperature Frequency fluctuation 1 Oscillation amplitude 1 Tube damping fluctuation 1 Exciter current 1
Device variables	Read out the device variables: HART command 9 The device variables are permanently assigned.  A maximum of 8 device variables can be transmitted:  0 = mass flow  1 = volume flow  2 = corrected volume flow  3 = density  4 = reference density  5 = temperature  6 = totalizer 1  7 = totalizer 2  8 = totalizer 3  9 = dynamic viscosity  10 = kinematic viscosity  11 = temp. compensated dynamic viscosity  12 = temp. compensated kinematic viscosity  13 = target mass flow  14 = carrier mass flow
	• 15 = concentration

#### PROFIBUS DP

Manufacturer ID	0x11
Ident number	0x1561
Profile version	3.02
Device description files (GSD, DTM, DD)	Information and files available at:  ■ https://www.endress.com/download On the device product page: PRODUCTS → Product Finder → Links ■ https://www.profibus.com

Output values	Analog input 1 to 8
(from measuring instrument to	Mass flow     Volume flow
automation system)	Corrected volume flow
	Target mass flow
	• Carrier mass flow
	<ul><li>Density</li></ul>
	Reference density
	■ Concentration
	Dynamic viscosity
	Kinematic viscosity
	Temp. compensated dynamic viscosity
	■ Temp. compensated kinematic viscosity
	Temperature
	<ul><li>Carrier pipe temperature</li><li>Electronics temperature</li></ul>
	Oscillation frequency
	Oscillation amplitude
	• Frequency fluctuation
	Oscillation damping
	Tube damping fluctuation
	Signal asymmetry
	Exciter current
	Digital input 1 to 2
	Partially filled pipe detection
	Low flow cut off
	Totalizer 1 to 3
	Mass flow
	■ Volume flow
	Corrected volume flow
Input values	Analog output 1 to 3 (fixed assignment)
(from automation system to	Pressure
measuring instrument)	■ Temperature
	Reference density
	Digital output 1 to 3 (fixed assignment)
	■ Digital output 1: switch positive zero return on/off
	Digital output 2: perform zero adjustment
	Digital output 3: switch switch output on/off
	Totalizer 1 to 3
	■ Totalize
	Reset and hold
	■ Preset and hold
	■ Stop
	Operating mode configuration:
	• Net flow total
	Forward flow total
	Reverse flow total
Supported functions	■ Identification & maintenance
	Straightforward device identification on the part of the control system and
	nameplate
	■ PROFIBUS upload/download
	Reading and writing parameters is up to ten times faster with PROFIBUS
	upload/download.
	Condensed status     Straightforward and self-explanatory diagnostic information by
	categorizing diagnostic messages that occur
Configuration of the device	■ DIP switches on the I/O electronics module
address	<ul><li>Via operating tools (e.g. FieldCare)</li></ul>

#### Modbus RS485

Protocol	Modbus Applications Protocol Specification V1.1
Device type	Slave
Slave address range	1 to 247

Broadcast address range	0
Function codes	<ul> <li>03: Read holding register</li> <li>04: Read input register</li> <li>06: Write single registers</li> <li>08: Diagnostics</li> <li>16: Write multiple registers</li> <li>23: Read/write multiple registers</li> </ul>
Broadcast messages	Supported by the following function codes:  O6: Write single registers  16: Write multiple registers  23: Read/write multiple registers
Supported baud rate	<ul> <li>1 200 BAUD</li> <li>2 400 BAUD</li> <li>4 800 BAUD</li> <li>9 600 BAUD</li> <li>19 200 BAUD</li> <li>38 400 BAUD</li> <li>57 600 BAUD</li> <li>115 200 BAUD</li> </ul>
Data transfer mode	ASCII     RTU
Data access	Each device parameter can be accessed via Modbus RS485. For Modbus register information, see "Description of device parameters" documentation $\rightarrow \stackrel{\cong}{=} 90$

#### EtherNet/IP

Protocol	<ul> <li>The CIP Networks Library Volume 1: Common Industrial Protocol</li> <li>The CIP Networks Library Volume 2: Ethernet/IP Adaptation of CIP</li> </ul>	
Communication type	■ 10Base-T ■ 100Base-TX	
Device profile	Generic device (product type: 0x2B)	
Manufacturer ID	0x49E	
Device type ID	0x104A	
Baud rates	Automatic <sup>10</sup> / <sub>100</sub> Mbit with half-duplex and full-duplex detection	
Polarity	Auto-polarity for automatic correction of crossed TxD and RxD pairs	
Supported CIP connections	Max. 3 connections	
Explicit connections	Max. 6 connections	
I/O connections	Max. 6 connections (scanner)	
Configuration options for measuring instrument	<ul> <li>DIP switches on the electronics module for IP addressing</li> <li>Manufacturer-specific software (FieldCare)</li> <li>Add-on Profile Level 3 for Rockwell Automation control systems</li> <li>Web browser</li> <li>Electronic Data Sheet (EDS) integrated in the measuring instrument</li> </ul>	
Configuration of the EtherNet interface	<ul> <li>Speed: 10 MBit, 100 MBit, auto (factory setting)</li> <li>Duplex: half-duplex, full-duplex, auto (factory setting)</li> </ul>	
Configuration of the device address	<ul> <li>DIP switches on the electronics module for IP addressing (last octet)</li> <li>DHCP</li> <li>Manufacturer-specific software (FieldCare)</li> <li>Add-on Profile Level 3 for Rockwell Automation control systems</li> <li>Web browser</li> <li>Ethernet/IP tools, e.g. RSLinx (Rockwell Automation)</li> </ul>	
Device Level Ring (DLR)	No	

RPI	5 ms to 10 s (factory setting: 2	0 ms)	
Exclusive Owner Multicast		Instance	Size [byte]
	Instance configuration:	0x68	398
	O → T configuration:	0x66	64
	$T \rightarrow O$ configuration:	0x64	44
Exclusive Owner Multicast		Instance	Size [byte]
	Instance configuration:	0x69	-
	O → T configuration:	0x66	64
	$T \rightarrow O$ configuration:	0x64	44
Input only Multicast		Instance	Size [byte]
	Instance configuration:	0x68	398
	O → T configuration:	0xC7	-
	$T \rightarrow O$ configuration:	0x64	44
Input only Multicast	-	Instance	Size [byte]
-	Instance configuration:	0x69	-
	O → T configuration:	0xC7	-
	$T \rightarrow O$ configuration:	0x64	44
	<ul><li>Density</li></ul>		
	<ul> <li>Reference density</li> <li>Temperature</li> <li>Totalizer 1</li> <li>Totalizer 2</li> <li>Totalizer 3</li> </ul>		
Configurable Input	<ul><li>Temperature</li><li>Totalizer 1</li><li>Totalizer 2</li></ul>		
Configurable Input RPI	<ul><li>Temperature</li><li>Totalizer 1</li><li>Totalizer 2</li></ul>	20 ms)	
RPI	<ul> <li>Temperature</li> <li>Totalizer 1</li> <li>Totalizer 2</li> <li>Totalizer 3</li> </ul>	20 ms)  Instance	Size [byte]
RPI	<ul> <li>Temperature</li> <li>Totalizer 1</li> <li>Totalizer 2</li> <li>Totalizer 3</li> </ul>	_	Size [byte]
RPI	<ul> <li>Temperature</li> <li>Totalizer 1</li> <li>Totalizer 2</li> <li>Totalizer 3</li> </ul> 5 ms to 10 s (factory setting: 2	Instance	
RPI	<ul> <li>Temperature</li> <li>Totalizer 1</li> <li>Totalizer 2</li> <li>Totalizer 3</li> </ul> 5 ms to 10 s (factory setting: 2 Instance configuration:	Instance 0x68	398
RPI Exclusive Owner Multicast	<ul> <li>Temperature</li> <li>Totalizer 1</li> <li>Totalizer 2</li> <li>Totalizer 3</li> </ul> 5 ms to 10 s (factory setting: 2 Instance configuration: O → T configuration:	Instance 0x68 0x66	398 64
RPI Exclusive Owner Multicast	<ul> <li>Temperature</li> <li>Totalizer 1</li> <li>Totalizer 2</li> <li>Totalizer 3</li> </ul> 5 ms to 10 s (factory setting: 2 Instance configuration: O → T configuration:	0x68 0x66 0x65	398 64 88
RPI Exclusive Owner Multicast	<ul> <li>Temperature</li> <li>Totalizer 1</li> <li>Totalizer 2</li> <li>Totalizer 3</li> </ul> 5 ms to 10 s (factory setting: 2 Instance configuration: <ul> <li>O → T configuration:</li> <li>T → O configuration:</li> </ul>	Instance  0x68  0x66  0x65  Instance	398 64 88
RPI Exclusive Owner Multicast	<ul> <li>Temperature</li> <li>Totalizer 1</li> <li>Totalizer 2</li> <li>Totalizer 3</li> </ul> 5 ms to 10 s (factory setting: 2 Instance configuration: O → T configuration: T → O configuration: Instance configuration:	0x68 0x66 0x65 Instance 0x69	398 64 88 Size [byte]
RPI Exclusive Owner Multicast  Exclusive Owner Multicast	■ Temperature ■ Totalizer 1 ■ Totalizer 2 ■ Totalizer 3  5 ms to 10 s (factory setting: 2  Instance configuration:  O → T configuration:  T → O configuration:  O → T configuration:	Instance           0x68           0x66           0x65           Instance           0x69           0x66	398 64 88 Size [byte] - 64
RPI Exclusive Owner Multicast  Exclusive Owner Multicast	■ Temperature ■ Totalizer 1 ■ Totalizer 2 ■ Totalizer 3  5 ms to 10 s (factory setting: 2  Instance configuration:  O → T configuration:  T → O configuration:  O → T configuration:	Instance           0x68           0x66           0x65           Instance           0x69           0x66           0x65	398 64 88 Size [byte] - 64 88
RPI Exclusive Owner Multicast  Exclusive Owner Multicast	■ Temperature ■ Totalizer 1 ■ Totalizer 2 ■ Totalizer 3  5 ms to 10 s (factory setting: 2  Instance configuration:  O → T configuration:  T → O configuration:  O → T configuration:  T → O configuration:	Instance	398 64 88 Size [byte] - 64 88 Size [byte]
RPI Exclusive Owner Multicast  Exclusive Owner Multicast	■ Temperature ■ Totalizer 1 ■ Totalizer 2 ■ Totalizer 3  5 ms to 10 s (factory setting: 2  Instance configuration:  O → T configuration:  T → O configuration:  O → T configuration:  T → O configuration:  Instance configuration:  T → O configuration:	Instance	398 64 88 Size [byte] - 64 88 Size [byte] 398
Exclusive Owner Multicast  Exclusive Owner Multicast  Exclusive Owner Multicast  Input only Multicast	■ Temperature ■ Totalizer 1 ■ Totalizer 2 ■ Totalizer 3  5 ms to 10 s (factory setting: 2  Instance configuration:  O → T configuration:  T → O configuration:  O → T configuration:  T → O configuration:  O → T configuration:  T → O configuration:  O → T configuration:	Instance	398 64 88 Size [byte] - 64 88 Size [byte] 398 -
Exclusive Owner Multicast  Exclusive Owner Multicast  Exclusive Owner Multicast  Input only Multicast	■ Temperature ■ Totalizer 1 ■ Totalizer 2 ■ Totalizer 3  5 ms to 10 s (factory setting: 2  Instance configuration:  O → T configuration:  T → O configuration:  O → T configuration:  T → O configuration:  O → T configuration:  T → O configuration:  O → T configuration:	Instance	398 64 88 Size [byte] - 64 88 Size [byte] 398 - 88
	<ul> <li>Temperature</li> <li>Totalizer 1</li> <li>Totalizer 2</li> <li>Totalizer 3</li> </ul> 5 ms to 10 s (factory setting: 2 Instance configuration: <ul> <li>O → T configuration:</li> <li>T → O configuration:</li> <li>O → T configuration:</li> <li>O → T configuration:</li> </ul>	Instance	398 64 88 Size [byte] - 64 88 Size [byte] 398 - 88 Size [byte]

Configurable Input Assembly	<ul> <li>Current device diagnostics</li> <li>Mass flow</li> <li>Volume flow</li> <li>Corrected volume flow</li> <li>Density</li> <li>Reference density</li> <li>Temperature</li> <li>Totalizer 1</li> <li>Totalizer 2</li> <li>Totalizer 3</li> <li>The range of options increases if the measuring device has one or more application packages.</li> </ul>
Fix output	
Output Assembly	<ul> <li>Activation of reset totalizers 1-3</li> <li>Activation of pressure compensation</li> <li>Activation of reference density compensation</li> <li>Activation of temperature compensation</li> <li>Reset totalizers 1-3</li> <li>External pressure value</li> <li>Pressure unit</li> <li>External reference density</li> <li>Reference density unit</li> <li>External temperature</li> <li>Temperature unit</li> </ul>
Configuration	
Configuration Assembly	Only the most common configurations are listed below.  Software write protection  Mass flow unit  Mass unit  Volume flow unit  Volume flow unit  Corrected volume flow unit  Corrected volume unit  Density unit  Reference density unit  Temperature unit  Pressure unit  Length  Totalizer 1-3:  Assignment  Unit  Mode of operation  Failure mode  Alarm delay

#### PROFINET

Protocol	"Application layer protocol for decentral device periphery and distributed automation", version 2.3
Conformity class	В
Communication type	100 Mbps
Device profile	Application interface identifier 0xF600 Generic device
Manufacturer ID	0x11
Device type ID	0x844A
Device description files (GSD, DTM)	Information and files available at:  ■ https://www.endress.com/download On the device product page: PRODUCTS → Product Finder → Links ■ https://www.profibus.com
Baud rates	Automatic 100 Mbit/s with full-duplex detection

Polarity	Periods	From 8 ms
1 x Input CR (Communication Relation)   1 x Output CR (CR (CR (CR (CR (CR (CR (CR (CR (CR	Polarity	Auto-polarity for automatic correction of crossed TxD and RxD pairs
measuring instrument    Manufacturer-specific software (FieldCare, DeviceCare)	Supported connections	<ul> <li>1 x Input CR (Communication Relation)</li> <li>1 x Output CR (Communication Relation)</li> </ul>
part) DCP protocol  Analog Input module (slot 1 to 14)  Mass flow Volume flow Corrected volume flow Carrier mass flow Carrier mass flow Density Reference density Concentration Dynamic viscosity Temp. compensated dynamic viscosity Temp. compensated kinematic viscosity Temp. compensated kinematic viscosity Temp. compensated kinematic viscosity Tempe concentration Oscillation frequency Oscillation amplitude Frequency fluctuation Oscillation amplitude Frequency fluctuation Oscillation damping Tube damping fluctuation Signal asymmetry Exciter current  Discrete Input module (slot 1 to 14) Empty pipe detection Low flow cut off Diagnostics Input module (slot 1 to 14) Last diagnostics Current diagnostics Totalizer 1 to 3 (slot 15 to 17)	_	part)  Manufacturer-specific software (FieldCare, DeviceCare)  Web browser  Device master file (GSD), can be read out via the integrated web server of
(from measuring instrument to automation system)  • Mass flow • Volume flow • Corrected volume flow • Target mass flow • Density • Reference density • Concentration • Dynamic viscosity • Kinematic viscosity • Temp. compensated dynamic viscosity • Temp. compensated kinematic viscosity • Temperature • Carrier pipe temperature • Electronics temperature • Oscillation frequency • Oscillation amplitude • Frequency fluctuation • Oscillation damping • Tube damping fluctuation • Oscillation damping • Tube damping fluctuation • Signal asymmetry • Exciter current  Discrete Input module (slot 1 to 14) • Empty pipe detection • Low flow cut off  Diagnostics Input module (slot 1 to 14) • Last diagnostics • Current diagnostics • Current diagnostics		part)
■ Volume flow ■ Corrected volume flow  Heartbeat Verification module (fixed assignment)  Verification status (slot 23)  The range of options increases if the measuring device has one or more application packages.	(from measuring instrument to	<ul> <li>Mass flow</li> <li>Volume flow</li> <li>Corrected volume flow</li> <li>Target mass flow</li> <li>Density</li> <li>Reference density</li> <li>Concentration</li> <li>Dynamic viscosity</li> <li>Kinematic viscosity</li> <li>Temp. compensated dynamic viscosity</li> <li>Temp. compensated kinematic viscosity</li> <li>Temperature</li> <li>Carrier pipe temperature</li> <li>Electronics temperature</li> <li>Oscillation frequency</li> <li>Oscillation amplitude</li> <li>Frequency fluctuation</li> <li>Oscillation damping</li> <li>Tube damping fluctuation</li> <li>Signal asymmetry</li> <li>Exciter current</li> <li>Discrete Input module (slot 1 to 14)</li> <li>Empty pipe detection</li> <li>Low flow cut off</li> <li>Diagnostics Input module (slot 1 to 14)</li> <li>Last diagnostics</li> <li>Current diagnostics</li> <li>Totalizer 1 to 3 (slot 15 to 17)</li> <li>Mass flow</li> <li>Volume flow</li> <li>Corrected volume flow</li> <li>Heartbeat Verification module (fixed assignment)</li> <li>Verification status (slot 23)</li> <li>The range of options increases if the measuring device has one or more</li> </ul>

Input values (from automation system to measuring instrument)	Analog Output module (fixed assignment)  External pressure (slot 18)  External temperature (slot 19)  External reference density (slot 20)  Discrete Output module (fixed assignment)  Activate/deactivate positive zero return (slot 21)  Perform zero adjustment (slot 22)
	Totalizer 1 to 3 (slot 15 to 17)  Totalize  Reset and hold  Preset and hold  Stop  Operating mode configuration:  Net flow total  Forward flow total  Reverse flow total
	Heartbeat Verification module (fixed assignment) Start verification (slot 23)  The range of options increases if the measuring device has one or more application packages.
Supported functions	<ul> <li>Identification &amp; maintenance         Simple device identification via:         <ul> <li>Control system</li> <li>Nameplate</li> </ul> </li> <li>Measured value status         <ul> <li>The process variables are communicated with a measured value status</li> </ul> </li> <li>Blinking feature via the local display for simple device identification and assignment</li> </ul>

#### Administration of software options

Input/output value	Process variable	Category	Slot	
Output value	Mass flow	Process variable	114	
	Volume flow			
	Corrected volume flow			
	Density			
	Reference density			
	Temperature			
	Electronics temperature			
	Oscillation frequency			
	Frequency fluctuation			
	Oscillation damping			
	Oscillation frequency			
	Signal asymmetry			
	Exciter current			
	Empty pipe detection			
	Low flow cut off			
	Current device diagnostics			
	Previous device diagnostics			
Output value	Target mass flow	Concentration 1)	114	
	Carrier mass flow			
	Concentration			
Output value	Dynamic viscosity	Viscosity 2)	114	

Input/output value	Process variable	Category	Slot
	Kinematic viscosity		
	Temp. compensated dynamic viscosity		
	Temp. compensated kinematic viscosity		
Output value	Carrier pipe temperature	Heartbeat Technology 3)	114
	Oscillation damping 1		
	Oscillation frequency 1		
	Oscillation amplitude 0		
	Oscillation amplitude 1		
	Frequency fluctuation 1		
	Tube damping fluctuation 1		
	Exciter current 1		
	Sensor integrity		
Input value	External density	Process monitoring	18
External temperature			19
	External reference density		20
	Flow override		21
	Zero adjustment		22
	Verification status	Heartbeat Verification	23

- 1) 2) 3)
- Only available with the "Concentration" application package.
  Only available with the "Viscosity" application package.
  Only available with the Heartbeat Technology application package.

#### Startup configuration

## Startup configuration (NSU)

If startup configuration is enabled, the configuration of the most important device parameters is taken from the automation system and used.


The following configuration is taken from the automation system:

- Management
  - Software revision
  - Write protection
- System units
  - Mass flow
  - Mass
  - Volume flow
  - Volume
  - Corrected volume flow
  - Corrected volume
  - Density
  - Reference density
  - Temperature
  - Pressure
- Viscosity application package
  - Dynamic viscosity
  - Kinematic viscosity
- Concentration application package
  - Coefficients A0 to A4
  - Coefficients B1 to B3
- Sensor adjustment
- Process parametersDamping (flow, density, temperature)
  - Flow override
- Low flow cut off
  - Assign process variable
  - Switch-on/switch-off point
  - Pressure shock suppression
- Empty pipe detection
  - Assign process variable
  - Limit values
  - Response time
  - Max. damping
- Corrected volume flow calculation
  - External reference density
  - Fixed reference density
  - Reference temperature
  - Linear expansion coefficient
- Square expansion coefficient
- Measuring mode
  - Medium
  - Gas type
  - Reference sound velocity
  - Temperature coefficient sound velocity
- External compensation
  - Pressure compensation
  - Pressure value
  - External pressure
- Diagnostic settings
- Diagnostic settings
   Diagnostic behavior for diverse diagnostic information

## Power supply

#### Terminal assignment

#### Overview: housing version and connection versions

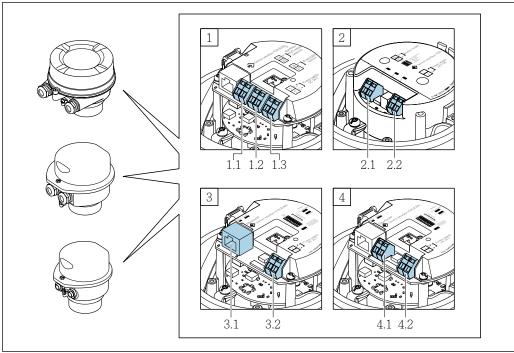

A0016770

- A Housing version: compact, aluminum coated
- B Housing version: compact, hygienic, stainless
- C Housing version: ultra-compact, hygienic, stainless
- 1 Connection version: 4-20 mA HART, pulse/frequency/switch output
- 1.1 Signal transmission: pulse/frequency/switch output
- 1.2 Signal transmission: 4-20 mA HART
- 1.3 Supply voltage
- 2 Connection version: Modbus RS485
- 2.1 Signal transmission
- 2.2 Supply voltage
- 3 Connection versions: EtherNet/IP and PROFINET
- 3.1 Signal transmission
- 3.2 Supply voltage
- 4 Connection version: PROFIBUS DP
- 4.1 Signal transmission
- 4.2 Supply voltage

#### Transmitter

Connection version 4-20 mA HART with pulse/frequency/switch output


Order code for "Output", option  ${\bf B}$ 

Depending on the housing version, the transmitters can be ordered with terminals or device plugs.

Order code for	Connection methods available		Possible options for order code
"Housing"	Outputs	Power supply	"Electrical connection"
Options A, B	Terminals	Terminals	<ul> <li>Option A: coupling M20x1</li> <li>Option B: thread M20x1</li> <li>Option C: thread G ½"</li> <li>Option D: thread NPT ½"</li> </ul>
Options A, B	Device plug → 🖺 32	Terminals	■ Option L: plug M12x1 + thread NPT ½" ■ Option N: plug M12x1 + coupling M20 ■ Option P: plug M12x1 + thread G ½" ■ Option U: plug M12x1 + thread M20
Options A, B, C	Device plug → 🖺 32	Device plug → 🖺 32	Option <b>Q</b> : 2 x plug M12x1

Order code for "Housing":

- Option **A**: compact, coated aluminum
- lacktriangledown Option **B**: compact, hygienic, stainless
- Option **C**: ultra-compact, hygienic, stainless

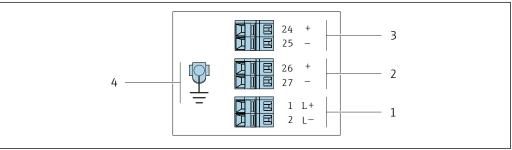

A001688

- 2 Terminal assignment 4-20 mA HART with pulse/frequency/switch output
- 1 Power supply: DC 24 V
- 2 Output 1: 4-20 mA HART (active)
- 3 Output 2: pulse/frequency/switch output (passive)
- 4 Connection for cable shield (IO signals) if present and/or protective ground from the supply voltage if present. Not for option C "Ultra-compact, hygienic, stainless".

	Terminal number					
Order code for "Output"	Power supply		Output 1		Output 2	
5 - A-F	2 (L-)	1 (L+)	27 (-)	26 (+)	25 (-)	24 (+)
Option <b>B</b>	DC 24 V		4-20 mA HART (active)		Pulse/frequency/switch output (passive)	

Order code for "Output":

Option B: 4-20 mA HART with pulse/frequency/switch output

#### PROFIBUS DP connection version

i

For use in the non-hazardous area and Zone  $2/\text{Div.}\ 2$ 


Order code for "Output", option  ${\bf L}$ 

Depending on the housing version, the transmitters can be ordered with terminals or device plugs.

Order code for	Connection methods available		Descible entions for order sode
"Housing"	Output	Power supply	Possible options for order code "Electrical connection"
Options A, B	Terminals	Terminals	<ul> <li>Option A: coupling M20x1</li> <li>Option B: thread M20x1</li> <li>Option C: thread G ½"</li> <li>Option D: thread NPT ½"</li> </ul>
Options A, B	Device plug → 🖺 32	Terminals	■ Option L: plug M12x1 + thread NPT ½" ■ Option N: plug M12x1 + coupling M20 ■ Option P: plug M12x1 + thread G ½" ■ Option U: plug M12x1 + thread M20
Options A, B, C	Device plug → 🖺 32	Device plug → 🖺 32	Option <b>Q</b> : 2 x plug M12x1

Order code for "Housing":

- Option **A**: compact, coated aluminum
- Option **B**: compact, hygienic, stainless
- Option **C**: ultra-compact, hygienic, stainless

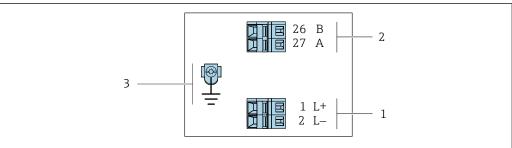

A002271

- 3 PROFIBUS DP terminal assignment
- 1 Power supply: DC 24 V
- 2 PROFIBUS DP
- 3 Connection for cable shield (IO signals) if present and/or protective ground from the supply voltage if present. Not for option C "Ultra-compact, hygienic, stainless".

	Terminal number			
Order code for	Power supply		Output	
"Output"	2 (L-)	1 (L+)	26 (RxD/TxD-P)	27 (RxD/TxD- N)
Option <b>L</b>	DC 24 V		В	A

Order code for "Output":

Option L: PROFIBUS DP, for use in non-hazardous areas and Zone 2/Div. 2

26

Modbus RS485 connection version

For use in the non-hazardous area and Zone 2/Div. 2


Order code for "Output", option  ${\bf M}$ 

Depending on the housing version, the transmitters can be ordered with terminals or device plugs.

Order code for	Connection methods available		Descible entions for order sode
"Housing"	Output	Power supply	Possible options for order code "Electrical connection"
Options A, B	Terminals	Terminals	<ul> <li>Option A: coupling M20x1</li> <li>Option B: thread M20x1</li> <li>Option C: thread G ½"</li> <li>Option D: thread NPT ½"</li> </ul>
Options A, B	Device plug → 🖺 32	Terminals	■ Option L: plug M12x1 + thread NPT ½" ■ Option N: plug M12x1 + coupling M20 ■ Option P: plug M12x1 + thread G ½" ■ Option U: plug M12x1 + thread M20
Options A, B, C	Device plug → 🖺 32	Device plug → 🖺 32	Option <b>Q</b> : 2 x plug M12x1

Order code for "Housing":

- $\, \bullet \,$  Option A: compact, coated aluminum
- Option **B**: compact, hygienic, stainless
- Option **C**: ultra-compact, hygienic, stainless

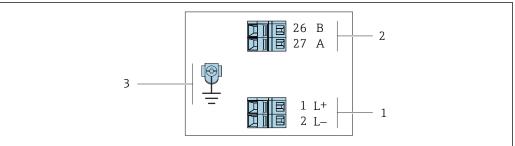

- € 4 Modbus RS485 terminal assignment, connection version for use in non-hazardous areas and Zone 2/Div.
- Power supply: DC 24 V
- Modbus RS485
- Connection for cable shield (IO signals) if present and/or protective ground from the supply voltage if present. Not for option C "Ultra-compact, hygienic, stainless".

	Terminal number			
Order code for "Output"	Power supply		Output	
o at par	1 (L+)	2 (L-)	26 (B)	27 (A)
Option <b>M</b>	DC 24 V		Modbus	s RS485

Order code for "Output":

Option M: Modbus RS485, for use in non-hazardous areas and Zone 2/Div. 2

#### Modbus RS485 connection version

🚹 For u

For use in the intrinsically safe area. Connection via Safety Barrier Promass 100.


Order code for "Output", option  ${\bf M}$ 

Depending on the housing version, the transmitters can be ordered with terminals or device plugs.

Order code for	Connection me	thods available	Descible autions for order and
"Housing"	Output	Power supply	Possible options for order code "Electrical connection"
Options A, B	Terminals	Terminals	<ul> <li>Option A: coupling M20x1</li> <li>Option B: thread M20x1</li> <li>Option C: thread G ½"</li> <li>Option D: thread NPT ½"</li> </ul>
A, B, C	Device plug → 🖺 32		Option I: plug M12x1

Order code for "Housing":

- Option **A**: compact, coated aluminum
- Option **B**: compact, hygienic, stainless
- Option **C**: ultra-compact, hygienic, stainless

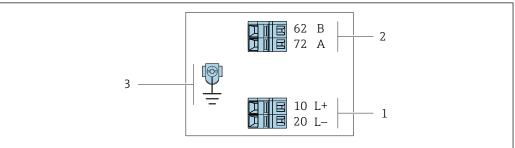

A0030219

- Modbus RS485 terminal assignment, connection version for use in intrinsically safe areas (connection via Safety Barrier Promass 100)
- 1 Intrinsically safe power supply
- 2 Modbus RS485
- 3 Connection for cable shield (IO signals) if present and/or protective ground from the supply voltage if present. Not for option C "Ultra-compact, hygienic, stainless".

Order code for "Output"	10 (L+)	20 (L-)	62 (B)	72 (A)
Option <b>M</b>	Intrinsically safe supply voltage		Modbus RS485,	intrinsically safe

Order code for "Output":

 $Option \ \textbf{\textit{M}}{:}\ Modbus\ RS485, for\ use\ in\ the\ intrinsically\ safe\ area\ (connection\ via\ Safety\ Barrier\ Promass\ 100)$ 

EtherNet/IP connection version


Order code for "Output", option  ${\bf N}$ 

Depending on the housing version, the transmitters can be ordered with terminals or device plugs.

Order code for	Connection me	thods available	Descible antique for order and
"Housing"	Output	Power supply	Possible options for order code "Electrical connection"
Options A, B	Device plug → 🖺 33	Terminals	■ Option L: plug M12x1 + thread NPT ½" ■ Option N: plug M12x1 + coupling M20 ■ Option P: plug M12x1 + thread G ½" ■ Option U: plug M12x1 + thread M20
Options A, B, C	Device plug → 🖺 33	Device plug → 🖺 33	Option <b>Q</b> : 2 x plug M12x1

Order code for "Housing":

- Option **A**: compact, coated aluminum
- Option B: compact, hygienic, stainless
   Option C: ultra-compact, hygienic, stainless

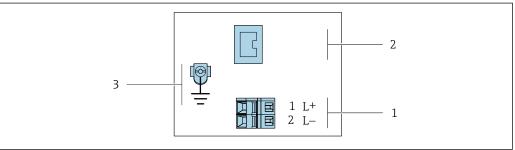

- € 6 EtherNet/IP terminal assignment
- Power supply: DC 24 V 1
- 2 EtherNet/IP
- 3 Connection for cable shield (IO signals) if present and/or protective ground from the supply voltage if present. Not for option C "Ultra-compact, hygienic, stainless".

	Terminal number			
Order code for "Output"	Power supply		Output	
	2 (L-)	1 (L+)	Device plug M12x1	
Option <b>N</b>	DC 24 V		EtherNet/IP	
Order code for "Output":				

#### PROFINET connection version


#### Order code for "Output", option ${\bf R}$

Depending on the housing version, the transmitters can be ordered with terminals or device plugs.

Order code for	Connection me	thods available	Possible options for order code
"Housing"	Output	Power supply	"Electrical connection"
Options A, B	Device plug → 🖺 31	Terminals	<ul> <li>Option L: plug M12x1 + thread NPT ½"</li> <li>Option N: plug M12x1 + coupling M20</li> <li>Option P: plug M12x1 + thread G ½"</li> <li>Option U: plug M12x1 + thread M20</li> </ul>
Options A, B, C	Device plug → 🖺 31	Device plug → 🖺 31	Option <b>Q</b> : 2 x plug M12x1

#### Order code for "Housing":

- Option **A**: compact, coated aluminum
- Option B: compact, hygienic, stainless
   Option C: ultra-compact, hygienic, stainless

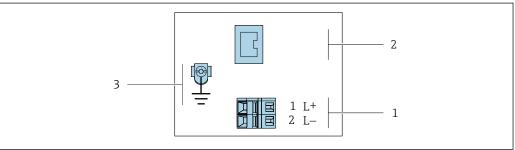


#### **₽** 7 PROFINET terminal assignment

- Power supply: DC 24 V 1
- 2 **PROFINET**
- 3 Connection for cable shield (IO signals) if present and/or protective ground from the supply voltage if present. Not for option C "Ultra-compact, hygienic, stainless".

	Terminal number			
Order code for "Output"	Power supply		Output	
o u.p.u.	2 (L-)	1 (L+)	Device plug M12x1	
Option R	DC 24 V		PROFINET	
Order code for "Output": Option <b>R</b> : PROFINET				

#### **Safety Barrier Promass 100**

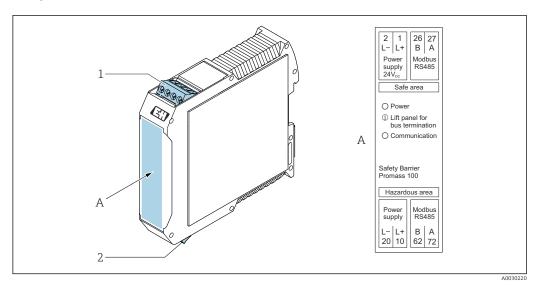

- 8 Safety Barrier Promass 100 with terminals
- 1 Non-hazardous area: Zone 2; Class I, Division 2
- 2 Intrinsically safe area

#### Pin assignment, device plug


Order codes for the M12x1 plugs, see the "Order code for **electrical connection**" column:

- 4-20 mA HART, pulse/frequency/switch output → 🖺 24
- PROFIBUS DP→ 🖺 26
- Modbus RS485 → 🗎 27
- EtherNet/IP → 🗎 29
- PROFINET → 🖺 30

#### Supply voltage

Intrinsically safe for all connection versions except MODBUS RS485, intrinsically safe (device side), male connection (plug)

Device plug MODBUS RS485, intrinsically safe with supply voltage  $\rightarrow~\cong~32$ 

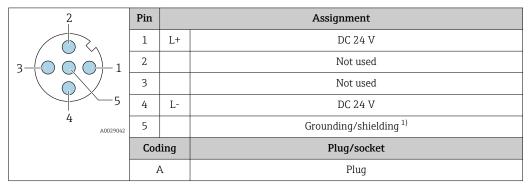

- Connection for protective ground and/or shielding from the supply voltage if present. Not for option C
  "Ultra-compact, hygienic, stainless". Note: There is a metallic connection between the union nut of the M12
  cable and the transmitter housing.
- The following is recommended as a socket:
  - Binder, series 763, part no. 79 3440 35 05
  - Alternatively: Phoenix part no. 1682951 SAC-5P-5.0-PUR/M12FS SH
  - With the order code for "Output", option **B**: 4-20 mA HART, pulse/frequency/switch output
  - With the order code for "Output", option N: EtherNet/IP
  - When using the device in a hazardous location: Use a suitably certified socket.

#### 4-20 mA HART with pulse/frequency/switch output

Device plug for signal transmission (device side), female connection


2	Pin		Assignment
250	1	+	4-20 mA HART (active)
$1 \longrightarrow 0 \longrightarrow 3$	2	-	4-20 mA HART (active)
	3	+	Pulse/frequency/switch output (passive)
5	4	-	Pulse/frequency/switch output (passive)
4 A0016810	5		Shielding <sup>1)</sup>
	Cod	ling	Plug/socket
	A	A	Socket

- Connection for cable shield (IO signals) if present. Not for option C "Ultra-compact, hygienic, stainless".
   Note: There is a metallic connection between the union nut of the M12 cable and the transmitter housing.
- Recommended plug: Binder, series 763, part no. 79 3439 12 05
   When using the device in a hazardous location, use a suitably certified plug.

#### **PROFIBUS DP**

For use in the non-hazardous area and Zone 2/Div. 2.


Device plug for signal transmission (device side)

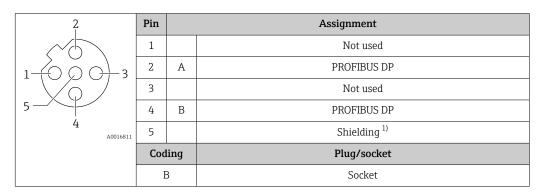

- Connection for cable shield (IO signals) if present. Not for option C "Ultra-compact, hygienic, stainless".
   Note: There is a metallic connection between the union nut of the M12 cable and the transmitter housing.
  - Recommended plug: Binder, series 763, part no. 79 4449 20 05
    When using the device in a hazardous location, use a suitably certified plug.

#### **MODBUS RS485**

Device plug for signal transmission with supply voltage (device side), MODBUS RS485 (intrinsically safe)

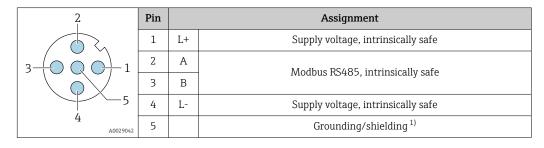

Coding	Plug/socket
А	Plug

- Connection for protective ground and/or shielding from the supply voltage if present. Not for option C
  "Ultra-compact, hygienic, stainless". Note: There is a metallic connection between the union nut of the M12
  cable and the transmitter housing.
- Recommended socket: Binder, series 763, part no. 79 3439 12 05

  When using the device in a hazardous location: Use a suitably certified socket.

Device plug for signal transmission (device side), MODBUS RS485 (not intrinsically safe)

For use in the non-hazardous area and Zone 2/Div. 2.

2	Pin		Assignment
	1		Not used
$1 \longrightarrow 0 \longrightarrow 3$	2	A	Modbus RS485
	3		Not used
5	4	В	Modbus RS485
4 A0016811	5		Shielding <sup>1)</sup>
	Cod	ling	Plug/socket
	I	3	Socket

- Connection for cable shield (IO signals) if present. Not for option C "Ultra-compact, hygienic, stainless".
   Note: There is a metallic connection between the union nut of the M12 cable and the transmitter housing.
  - Recommended plug: Binder, series 763, part no. 79 4449 20 05
     When using the device in a hazardous location, use a suitably certified plug.

#### EtherNet/IP

Device plug for signal transmission (device side)


2	Pin		Assignment
	1	+	Tx
1 3	2	+	Rx
	3	-	Tx
	4	-	Rx
4 A0016812	Cod	ling	Plug/socket
	I	)	Socket

- There is a metallic connection between the union nut of the M12 cable and the transmitter housing.

   Recommended plug:
  - Binder, series 763, part no. 99 3729 810 04
  - Phoenix, part no. 1543223 SACC-M12MSD-4Q
  - When using the device in a hazardous location, use a suitably certified plug.

#### **PROFINET**

Device plug for signal transmission (device side)

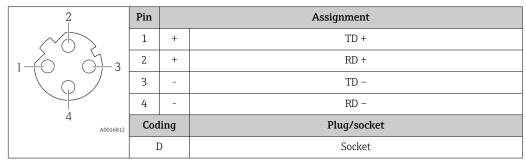



- There is a metallic connection between the union nut of the M12 cable and the transmitter housing.
   Recommended plug:
  - - Binder, series 763, part no. 99 3729 810 04
    - Phoenix, part no. 1543223 SACC-M12MSD-4Q
    - When using the device in a hazardous location, use a suitably certified plug.

#### Supply voltage

The power unit must be tested to ensure it meets safety requirements (e.g. PELV, SELV).

#### Transmitter

For device version with communication type:

- HART, PROFIBUS DP, EtherNet/IP: DC 20 to 30 V
- Modbus RS485, device version:
  - For use in the non-hazardous area and Zone 2/Div. 2: DC 20 to 30 V
  - For use in the intrinsically safe area: power supply via Safety Barrier Promass 100

#### Promass 100 safety barrier

DC 20 to 30 V

#### Power consumption

#### Transmitter

Order code for "Output"	Maximum Power consumption
Option <b>B</b> : 4-20 mA HART with pulse/frequency/switch output	3.5 W
Option L: PROFIBUS DP	3.5 W
Option <b>M</b> Modbus RS485, for use in non-hazardous areas and Zone 2/Div. 2	3.5 W
Option <b>M</b> : Modbus RS485, for use in intrinsically safe areas	2.45 W
Option N: EtherNet/IP	3.5 W
Option R: PROFINET	3.5 W

#### Safety Barrier Promass 100

Order code for "Output"	Maximum Power consumption
Option <b>M</b> : Modbus RS485, for use in intrinsically safe areas	4.8 W

#### **Current consumption**

#### Transmitter

Order code for "Output"	Maximum current consumption	Maximum switch-on current	
Option <b>B</b> : 4-20mA HART, pul./freq./switch output	145 mA	18 A (< 0.125 ms)	
Option L: PROFIBUS DP	145 mA	18 A (< 0.125 ms)	

Order code for "Output"	Maximum current consumption	Maximum switch-on current
Option <b>M</b> Modbus RS485, for use in non-hazardous areas and Zone 2/Div. 2	90 mA	10 A (< 0.8 ms)
Option $\mathbf{M}$ : Modbus RS485, for use in intrinsically safe areas	145 mA	16 A (< 0.4 ms)
Option <b>N</b> : EtherNet/IP	145 mA	18 A (< 0.125 ms)
Option R: PROFINET	145 mA	18 A (< 0.125 ms)

#### Safety Barrier Promass 100

Order code for "Output"	Maximum current consumption	Maximum switch-on current
Option <b>M</b> : Modbus RS485, for use in intrinsically safe areas	230 mA	10 A (< 0.8 ms)

#### Device fuse


Fine-wire fuse (slow-blow) T2A

#### Power supply failure


- Totalizers stop at the last value measured.
- Depending on the device version, the configuration is retained in the device memory or in the plug-in memory (HistoROM DAT).
- Error messages (incl. total operated hours) are stored.

#### **Electrical connection**

#### Transmitter connection

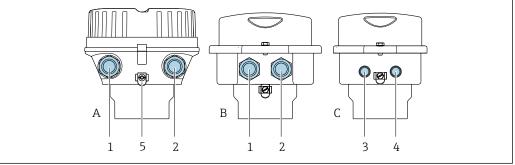


- Α Housing version: compact, coated, aluminum
- Housing version: compact, hygienic, stainless
- С Housing version: ultra-compact, hygienic, stainless, M12 device plug
- Cable entry or device plug for signal transmission
- Cable entry or device plug for supply voltage
- Device plug for signal transmission
- Device plug for supply voltage
- Ground terminal. Cable lugs, pipe clips or ground disks are recommended for optimization of the grounding/ shielding.

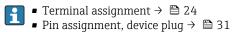

In the case of device versions with a connector, the transmitter housing does not need to be opened to connect the signal cable or power supply cable.

#### **Connection examples**


Pulse output/frequency output/switch output

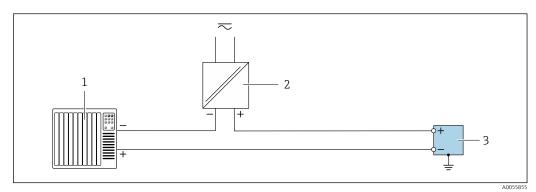

■ 9 Connection example for pulse output/frequency output/switch output (passive)

- 1 Automation system with pulse input/frequency input/switch input (e.g. PLC)
- 2 Power supply
- 3 Transmitter with pulse output/frequency output/switch output (passive)


#### Current output 4 to 20 mA HART

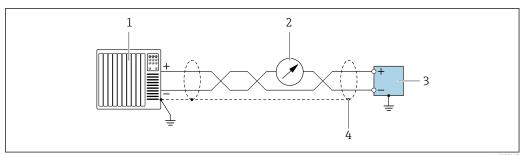

A005

- 10 Connection example for 4 to 20 mA current output with HART (active)
- 1 Automation system with 4 to 20 mA current input with HART (e.g. PLC)
- 2 Optional display unit: Note maximum load
- *3 Transmitter with 4 to 20 mA current output with HART (active)*
- 4 Ground cable shield at one end. For installations in compliance with NAMUR NE 89, grounding of the cable shield on both sides is required.

#### Modbus RS485

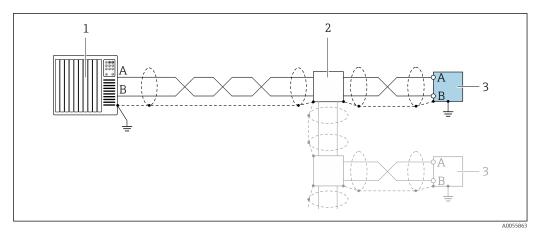

■ 11 Connection example for Modbus RS485

- 1 Automation system with Modbus master (e.g. PLC)
- 2 Optional distribution box
- 3 Transmitter with Modbus RS485

#### PROFIBUS DP



See https://www.profibus.com "PROFIBUS Installation Guidelines".

#### PROFINET



See https://www.profibus.com "PROFINET Planning guideline".

#### EtherNet/IP



See https://www.odva.org"EtherNet/IP Media Planning & Installation Manual".

#### Potential equalization

#### Requirements

For potential equalization:

- Pay attention to in-house grounding concepts
- Take account of operating conditions like the pipe material and grounding
- Connect the medium, sensor and transmitter to the same electric potential
- Use a ground cable with a minimum cross-section of 6 mm<sup>2</sup> (10 AWG) and a cable lug for potential equalization connections

#### **Terminals**

#### Transmitter

Spring terminals for wire cross-sections 0.5 to 2.5 mm<sup>2</sup> (20 to 14 AWG)

## Promass 100 safety barrier

Plug-in screw terminals for wire cross-sections 0.5 to 2.5 mm<sup>2</sup> (20 to 14 AWG)

#### Cable entries

- Cable gland: M20 × 1.5 with cable Ø 6 to 12 mm (0.24 to 0.47 in)
- Thread for cable entry:
  - M20
  - G ½"
  - NPT ½"

#### Cable specification

#### Permitted temperature range

- The installation guidelines that apply in the country of installation must be observed.
- The cables must be suitable for the minimum and maximum temperatures to be expected.

#### Power supply cable (incl. conductor for the inner ground terminal)

Standard installation cable is sufficient.

#### Signal cable

4 to 20 mA current output (without HART)

Standard installation cable is sufficient.

Pulse/frequency/switch output

Standard installation cable is sufficient.

Current output 4 to 20 mA HART

Shielded twisted-pair cable.



See https://www.fieldcommgroup.org "HART PROTOCOL SPECIFICATIONS".

Modbus RS485

Shielded twisted-pair cable.



See https://modbus.org "MODBUS over Serial Line Specification and Implementation Guide".

#### PROFIBUS DP

Shielded twisted-pair cable. Cable type A is recommended.



See https://www.profibus.com "PROFIBUS Installation Guidelines".

#### **PROFINET**

Only PROFINET cables.



See https://www.profibus.com "PROFINET Planning guideline".

#### EtherNet/IP

Twisted-pair Ethernet CAT 5 or better.



See https://www.odva.org"EtherNet/IP Media Planning & Installation Manual".

#### Connecting cable between Safety Barrier Promass 100 and measuring device

Cable type	Shielded twisted-pair cable with 2x2 wires. When grounding the cable shield, observe the grounding concept of the plant.
Maximum cable resistance	$2.5~\Omega$ , one side

Comply with the maximum cable resistance specifications to ensure the operational reliability of the measuring device.


The maximum cable length for individual wire cross-sections is specified in the table below. Observe the maximum capacitance and inductance per unit length of the cable and connection values for hazardous areas.

Wire cros	ss-section	Maximum cable length		
[mm <sup>2</sup> ]	[AWG]	[m]	[ft]	
0.5	20	70	230	
0.75	18	100	328	
1.0	17	100	328	
1.5	16	200	656	
2.5	14	300	984	

## Performance characteristics

#### Reference operating conditions

- Error limits based on ISO 11631
- Water
  - +15 to +45 °C (+59 to +113 °F)
  - 2 to 6 bar (29 to 87 psi)
- Data as indicated in the calibration protocol
- Accuracy based on accredited calibration rigs according to ISO 17025

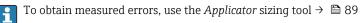

#### Maximum measurement error

o.r. = of reading;  $1 \text{ g/cm}^3 = 1 \text{ kg/l}$ ; T = medium temperature

#### Base accuracy



Design fundamentals  $\rightarrow \triangleq 42$ 

Mass flow and volume flow (liquids)

±0.10 % o.r.

Mass flow (gases)

±0.50 % o.r.

Density (liquids)

Under reference conditions	Standard density calibration 1)	Wide-range Density specification <sup>2) 3)</sup>
[g/cm³]	[g/cm³]	[g/cm³]
±0.0005	±0.02	±0.004

- 1) Valid over the entire temperature and density range
- Valid range for special density calibration: 0 to 2 g/cm<sup>3</sup>, +10 to +80  $^{\circ}$ C (+50 to +176  $^{\circ}$ F)
- 3) order code for "Application package", option EE "Special density"

## Temperature

 $\pm 0.5 \,^{\circ}\text{C} \pm 0.005 \cdot \text{T} \,^{\circ}\text{C} \, (\pm 0.9 \,^{\circ}\text{F} \pm 0.003 \cdot (\text{T} - 32) \,^{\circ}\text{F})$ 

## Zero point stability

D	N	Zero point stability				
[mm]	[mm] [in]		[lb/min]			
8	3/8	0.150	0.0055			
15	1/2	0.488	0.0179			
15 FB	⅓ FB	1.350	0.0496			
25	1	1.350	0.0496			
25 FB	1 FB	3.375	0.124			
40	1½	3.375	0.124			
40 FB	1½ FB	5.25	0.193			
50	2	5.25	0.193			
50 FB	2 FB	13.5	0.496			
80	3	13.5	0.496			
FB = Full bore	FB = Full bore					

## Flow values

Flow values as turndown parameters depending on nominal diameter.

#### SI units

DN	1:1	1:10	1:20	1:50	1:100	1:500
[mm]	[kg/h]	[kg/h]	[kg/h]	[kg/h]	[kg/h]	[kg/h]
8	2 000	200	100	40	20	4
15	6500	650	325	130	65	13
15 FB	18 000	1800	900	360	180	36
25	18 000	1800	900	360	180	36
25 FB	45 000	4500	2 250	900	450	90
40	45 000	4500	2 250	900	450	90
40 FB	70 000	7 000	3 500	1400	700	140

DN	1:1	1:10	1:20	1:50	1:100	1:500
[mm]	[kg/h]	[kg/h]	[kg/h]	[kg/h]	[kg/h]	[kg/h]
50	70 000	7 000	3 500	1400	700	140
50 FB	180 000	18000	9000	3 600	1800	360
80	180 000	18000	9000	3 6 0 0	1800	360
FB = Full bore						

#### US units

DN	1:1	1:10	1:20	1:50	1:100	1:500
[inch]	[lb/min]	[lb/min]	[lb/min]	[lb/min]	[lb/min]	[lb/min]
3/8	73.50	7.350	3.675	1.470	0.735	0.147
1/2	238.9	23.89	11.95	4.778	2.389	0.478
½ FB	661.5	66.15	33.08	13.23	6.615	1.323
1	661.5	66.15	33.08	13.23	6.615	1.323
1 FB	1654	165.4	82.70	33.08	16.54	3.308
1½	1654	165.4	82.70	33.08	16.54	3.308
1½ FB	2 573	257.3	128.7	51.46	25.73	5.146
2	2 573	257.3	128.7	51.46	25.73	5.146
2 FB	6 6 1 5	661.5	330.8	132.3	66.15	13.23
3	6 6 1 5	661.5	330.8	132.3	66.15	13.23
FB = Full bore						

## Accuracy of outputs

The output accuracy must be factored into the measurement error if analog outputs are used; but can be ignored for fieldbus outputs (e.g. Modbus RS485, EtherNet/IP).

The outputs have the following base accuracy specifications:

Current output

Accuracy	Max. ±5 μA	
----------	------------	--

Pulse/frequency output

o.r. = of reading

Accuracy	Max. ±50 ppm o.r. (over the entire ambient temperature range)
----------	---

## Repeatability

o.r. = of reading;  $1 \text{ g/cm}^3 = 1 \text{ kg/l}$ ; T = medium temperature

## Base repeatability

Properties Design fundamentals  $\rightarrow \triangle 42$ 

Mass flow and volume flow (liquids)  $\pm 0.05 \% \text{ o.r.}$ 

Mass flow (gases)

±0.25 % o.r.

Density (liquids)

 $\pm 0.00025 \text{ g/cm}^3$ 

**Temperature** 

 $\pm 0.25 \,^{\circ}\text{C} \pm 0.0025 \cdot \text{T} \,^{\circ}\text{C} \, (\pm 0.45 \,^{\circ}\text{F} \pm 0.0015 \cdot (\text{T}-32) \,^{\circ}\text{F})$ 

#### Response time

The response time depends on the configuration (damping).

## Influence of ambient temperature

#### **Current output**

o.r. = of reading

Temperature coefficient	Max. ±0.005 % o.r./°C
-------------------------	-----------------------

### Pulse/frequency output

Temperature coefficient	No additional effect. Included in accuracy.

## Influence of medium temperature

#### Mass flow

o.f.s. = of full scale value

If there is a difference between the temperature during zero adjustment and the process temperature, the additional measurement error of the sensors is typically  $\pm 0.0002$  %o.f.s./°C ( $\pm 0.0001$  % o.f.s./°F).


The influence is reduced when the zero adjustment is performed at process temperature.

#### Density

If there is a difference between the density calibration temperature and the process temperature, the measurement error of the sensors is typically  $\pm 0.0001$  g/cm<sup>3</sup>/°C ( $\pm 0.00005$  g/cm<sup>3</sup>/°F). Field density adjustment is possible.

#### Wide-range density specification (special density calibration)

If the process temperature is outside the valid range ( $\rightarrow \triangleq 38$ ) the measurement error is  $\pm 0.0001 \text{ g/cm}^3 \text{ °C } (\pm 0.00005 \text{ g/cm}^3 \text{ °F})$ 

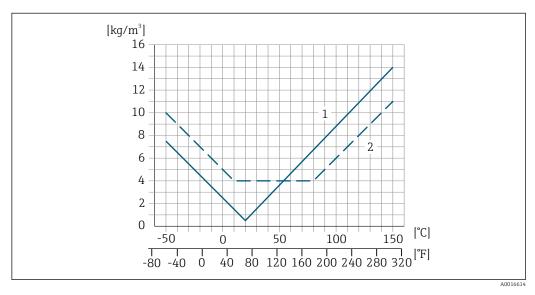

- 1 Field density adjustment, for example at +20  $^{\circ}$ C (+68  $^{\circ}$ F)
- 2 Special density calibration

## Temperature

±0.005 · T °C (± 0.005 · (T − 32) °F)

## Influence of medium pressure

The following shows how the process pressure (gauge pressure) affects the accuracy of the mass flow.

o.r. = of reading



It is possible to compensate for the effect by:

- Reading in the current pressure measured value via the current input or a digital input.
- Specifying a fixed value for the pressure in the device parameters.

DN		[% o.r./bar]	[% o.r./psi]
[mm]	[in]		
8	3/8	no effect	no effect
15	1/2	no effect	no effect
15 FB	½ FB	+0.003	+0.0002
25	1	+0.003	+0.0002
25 FB	1 FB	no effect	no effect
40	1½	no effect	no effect
40 FB	1½ FB	no effect	no effect
50	2	no effect	no effect
50 FB	2 FB	no effect	no effect
80	3	no effect	no effect
FB = Full bore			

## Design fundamentals

o.r. = of reading, o.f.s. = of full scale value

BaseAccu = base accuracy in % o.r., BaseRepeat = base repeatability in % o.r.

MeasValue = measured value; ZeroPoint = zero point stability


Calculation of the maximum measured error as a function of the flow rate

Flow rate	Maximum measured error in % o.r.
$\geq \frac{\text{ZeroPoint}}{\text{BaseAccu}} \cdot 100$	± BaseAccu
A0021332	A0021337
< ZeroPoint · 100	± ZeroPoint MeasValue · 100
A0021333	A0021334

Calculation of the maximum repeatability as a function of the flow rate

Flow rate	Maximum repeatability in % o.r.
$\geq \frac{\frac{1}{2} \cdot \text{ZeroPoint}}{\text{BaseRepeat}} \cdot 100$	± BaseRepeat
A0021335	10013.0
$<\frac{\frac{1}{2} \cdot \text{ZeroPoint}}{\text{BaseRepeat}} \cdot 100$	$\pm \frac{1}{2} \cdot \frac{\text{ZeroPoint}}{\text{MeasValue}} \cdot 100$
A0021336	A0021337


#### Example of maximum measurement error

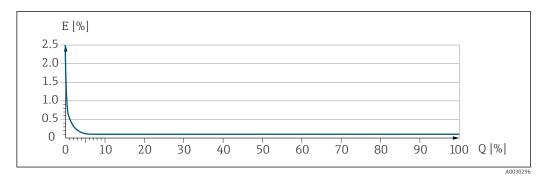

- E Maximum measurement error in % o.r. (example)
- Q Flow rate in % of maximum full scale value

## Installation

#### Mounting location

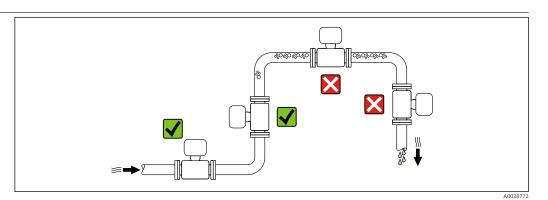


To avoid measurement errors caused by gas bubble formation in the measuring tube, avoid the following installation locations in the pipe:

- Highest point of a pipeline
- Directly upstream of a free pipe outlet in a down pipe

#### Installation in down pipes

However, the following installation suggestion allows for installation in an open vertical pipeline. Pipe restrictions or the use of an orifice with a smaller cross-section than the nominal diameter prevent the sensor running empty while measurement is in progress.

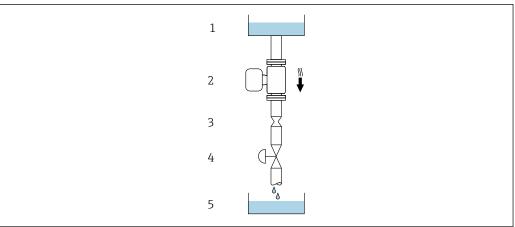

A002877

■ 12 Installation in a down pipe (e.g. for batching applications)

- 1 Supply tank
- 2 Sensor
- *3 Orifice plate, pipe restriction*
- 4 Valve
- 5 Filling container

DN/	NPS	Ø orifice plate, pipe restriction			
[mm]	[in]	[mm]	[in]		
8	<sup>3</sup> / <sub>8</sub>	6	0.24		
15	1/2	10	0.40		
15 FB	½ FB	15	0.60		
25	1	14	0.55		
25 FB	1 FB	24	0.95		
40	1 1/2	22	0.87		
40 FB	1½ FB	35	1.38		
50	2	28	1.10		
50 FB	2 FB	54	2.13		
80	3	50	1.97		
FB = Full bore					

## Orientation

The direction of the arrow on the sensor nameplate helps you to install the sensor according to the flow direction (direction of medium flow through the piping).

	Orientatio	n	Recommendation
A	Vertical orientation	A0015591	<b>V V</b> 1)
В	Horizontal orientation, transmitter at top	A0015589	<b>√ √</b> 2)

	Orientatio	Recommendation	
С	Horizontal orientation, transmitter at bottom	A0015590	<b>√ √</b> 3)
D	Horizontal orientation, transmitter at side	A0015592	$\checkmark$

- This orientation is recommended to ensure self-draining. 1)
- 2) Applications with low process temperatures may reduce the ambient temperature. To maintain the minimum ambient temperature for the transmitter, this orientation is recommended.
- 3) Applications with high process temperatures may increase the ambient temperature. To maintain the maximum ambient temperature for the transmitter, this orientation is recommended.

#### Inlet and outlet runs


No special precautions need to be taken for fittings that create turbulence, such as valves, elbows or T-pieces, as long as no cavitation occurs  $\rightarrow \equiv 53$ .

#### Special installation instructions

#### Drainability

When installed vertically, the measuring tube can be drained completely and protected against buildup.

When the sensor is installed in a horizontal line, eccentric clamps can be used to ensure complete drainability. When the system is pitched in a specific direction and at a specific slope, gravity can be used to achieve complete drainability. The sensor must be mounted in the correct position to ensure full drainability in the horizontal position. Markings on the sensor show the correct mounting position to optimize drainability.

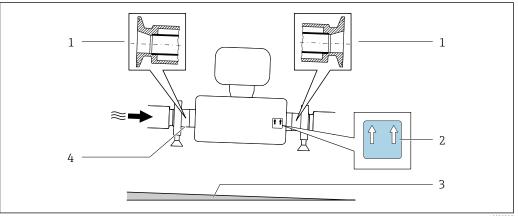

- Eccentric clamp connection
- "This side up" label indicates which side is up
- Slope the device in accordance with the hygiene quidelines. Slope: approx. 2 % or 21 mm/m (0.24 in/feet)
- *Line on the underside indicates the lowest point of the eccentric process connection.*

#### Hygienic compatibility




When installing in hygienic applications, please refer to the information in the "Certificates and approvals/hygienic compatibility" section → 🖺 84

#### Securing with mounting clamp in the case of hygiene connections

It is not necessary to provide additional support for the sensor for operational performance purposes. If, however, additional support is required for installation purposes, the following dimensions must be observed.

Use mounting clamp with lining between clamp and measuring instrument.

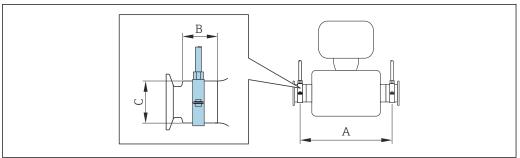

D	N	A		В		С		
[mm]	[in]	[mm]	[in]	[mm]	[in]	[mm]	[in]	
8	8	373	14.69	20	0.79	40	1.57	
15	15	409	16.1	20	0.79	40	1.57	
15 FB	15 FB	539	21.22	30	1.18	44.5	1.75	
25	25	539	21.22	30	1.18	44.5	1.75	
25 FB	25 FB	668	26.3	28	1.1	60	2.36	
40	40	668	26.3	28	1.1	60	2.36	
40 FB	40 FB	780	30.71	35	1.38	80	3.15	
50	50	780	30.71	35	1.38	80	3.15	
50 FB	50 FB	1152	45.35	57	2.24	90	3.54	
80	80	1152	45.35	57	2.24	90	3.54	

### Zero point verification and zero adjustment

All measuring instruments are calibrated in accordance with state-of-the-art technology. Calibration generally not required.


Experience shows that zero adjustment is advisable only in special cases:

- To achieve maximum measurement accuracy even with low flow rates.
- Under extreme process or operating conditions (e.g. very high process temperatures or very highviscosity media).
- For gas applications with low pressure.

For information on checking the zero point and performing a zero adjustment, see the Operating Instructions for the device.

To achieve the highest possible measurement accuracy at low flow rates, the installation must protect the sensor from mechanical stress during operation.

## Installing the Safety Barrier Promass 100

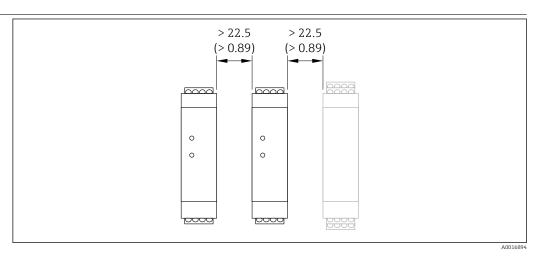

 $\blacksquare$  13 Minimum distance between additional Safety Barrier Promass 100 or other modules. Engineering unit mm (in)

## **Environment**

6 ms 30 g

Ambient temperature range	Measuring instrument	■ -40 to +60 °C (-40 to +140 °F) ■ Order code for "Test, certificate", option JM: -50 to +60 °C (-58 to +140 °F)				
	Safety Barrier Promass 100	-40 to +60 °C (-40 to +140 °F)				
	► If operating outdoors:  Avoid direct sunlight, particularly in warm climatic regions.					
Storage temperature	-40 to +80 °C (-40 to +176 °F), p	referably at +20 °C (+68 °F) (standard version)				
	-50 to $+80$ °C ( $-58$ to $+176$ °F) (Order code for "Test, certificate", option JM)					
Climate class	DIN EN 60068-2-38 (test Z/AD)					
Degree of protection	Transmitter and sensor  ■ Standard: IP66/67, Type 4X enclosure, suitable for pollution degree 4  ■ With the order code for "Sensor options", option CM: IP69 can also be ordered  ■ When the housing is open: IP20, Type 1 enclosure, suitable for pollution degree 2  ■ Display module: IP20, Type 1 enclosure, suitable for pollution degree 2					
	Safety Barrier Promass 100 IP20					
	Sinusoidal vibration similar to IEC 60068-2-6					
shock resistance	<ul> <li>2 to 8.4 Hz, 3.5 mm peak</li> <li>8.4 to 2 000 Hz, 1 g peak</li> </ul>					
	Broadband random vibration similar to IEC 60068-2-64					
	<ul> <li>10 to 200 Hz, 0.003 g²/Hz</li> <li>200 to 2000 Hz, 0.001 g²/Hz</li> <li>Total: 1.54 g rms</li> </ul>					
	■ 10tal: 1.54 g rms					

Endress+Hauser 47

Rough handling shocks similar to IEC 60068-2-31  $\,$ 

## Electromagnetic compatibility (EMC)


- As per IEC/EN 61326
- As per NAMUR Recommendation 21 (NE 21), NAMUR Recommendation 21 (NE 21) is fulfilled when the device is installed in accordance with NAMUR Recommendation 98 (NE 98).
- As per IEC/EN 61000-6-2 and IEC/EN 61000-6-4
- Complies with emission limits for industry as per EN 55011 (class A)
- Device version with PROFIBUS DP: Complies with emission limits for industry as per EN 50170 Volume 2, IEC 61784
- The following applies for PROFIBUS DP: If baud rates > 1.5 MBaud, an EMC cable entry must be used and the cable shield must continue as far as the terminal wherever possible.
- Details are provided in the Declaration of Conformity.
- This unit is not intended for use in residential environments and cannot guarantee adequate protection of the radio reception in such environments.

## **Process**

#### Medium temperature range

-50 to +150 °C (-58 to +302 °F)

#### Dependency of ambient temperature on medium temperature

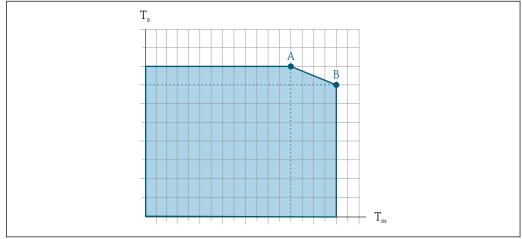

A003112

- 14 Exemplary representation, values in the table below.
- T<sub>a</sub> Ambient temperature
- *T<sub>m</sub>* Medium temperature
- A Maximum permitted medium temperature  $T_m$  at  $T_{a max}$  = 60 °C (140 °F); higher medium temperatures  $T_m$  require a reduction in the ambient temperature  $T_a$
- B Maximum permitted ambient temperature  $T_a$  for the maximum specified medium temperature  $T_m$  of the sensor

Values for devices that are used in the hazardous area: Separate Ex documentation (XA) for the device .

Not insulated Insulated								
A B				A		В		
T <sub>a</sub>	T <sub>m</sub>	Ta	T <sub>m</sub>	T <sub>a</sub>	T <sub>m</sub>	T <sub>a</sub>	$T_{\mathrm{m}}$	
60 °C (140 °F)	150 °C (302 °F)	-	ı	60 °C (140 °F)	120 °C (248 °F)	55 ℃ (131 ℉)	150 ℃ (302 ℉)	


Medium density

0 to  $5000 \text{ kg/m}^3$  (0 to 312 lb/cf)

## Pressure-temperature ratings


The following pressure/temperature diagrams apply to all pressure-bearing parts of the device and not just the process connection. The diagrams show the maximum permissible medium pressure depending on the specific medium temperature.

#### Flange similar to EN 1092-1 (DIN 2501)

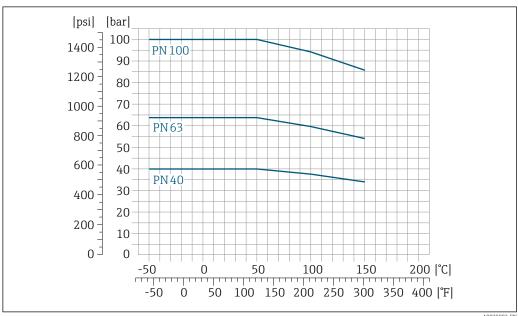

■ 15 With flange material 1.4301 (304); wetted parts: titanium

#### Flange similar to ASME B16.5

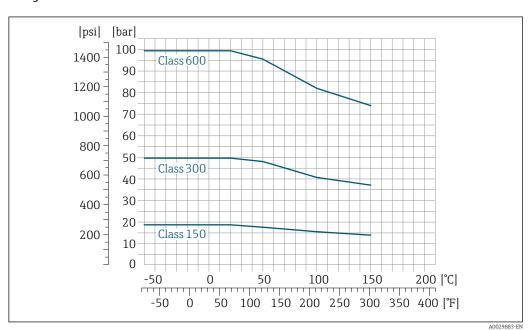


■ 16 With flange material 1.4301 (304); wetted parts: titanium

Endress+Hauser 49


AUU29882-E

## Flange JIS B2220

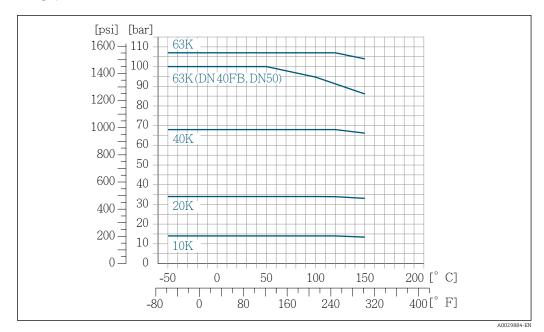


■ 17 With flange material 1.4301 (304). Wetted parts: titanium.

## Flange DIN 11864-2 Form A

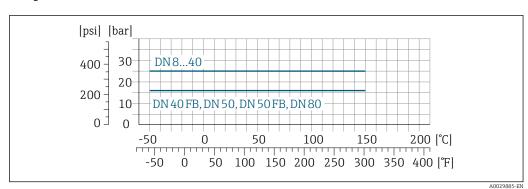

■ 18 With flange material Grade 2 titanium


## Threaded adapter DIN 11851

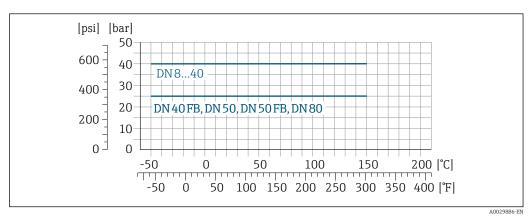

■ 19 With connection material Grade 2 titanium


DIN 11851 allows for applications up to  $+140\,^{\circ}\text{C}$  ( $+284\,^{\circ}\text{F}$ ) if suitable sealing materials are used. Please take this into account when selecting seals and counterparts, as these components can limit the pressure and temperature range.

#### Thread DIN 11864-1 Form A

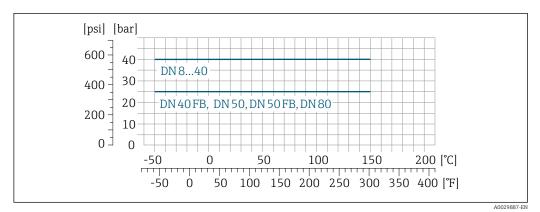


■ 20 With connection material Grade 2 titanium

#### Threaded adapter ISO 2853

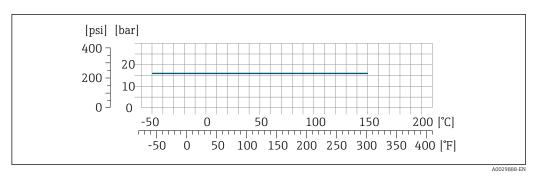

■ 21 With connection material Grade 2 titanium

#### Threaded adapter SMS 1145

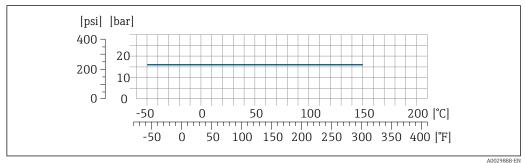

■ 22 With connection material Grade 2 titanium

SMS 1145 allows for applications up to 16 bar (232 psi) if suitable sealing materials are used. Please take this into account when selecting seals and counterparts, as these components can limit the pressure and temperature range.

#### Tri-clamp

The clamp connections are suitable up to a maximum pressure of 16 bar (232 psi). Please observe the operating limits of the clamp and seal used as they can be over 16 bar (232 psi). The clamp and seal are not included in the scope of supply.

#### Sensor housing

The sensor housing is filled with dry nitrogen gas and protects the electronics and mechanics inside.

If a measuring tube fails (e.g. due to process characteristics like corrosive or abrasive fluids), the fluid will initially be contained by the sensor housing.

If the sensor is to be purged with gas (gas detection), it should be equipped with purge connections.

Do not open the purge connections unless the containment can be filled immediately with a dry, inert gas. Use only low pressure to purge.

Maximum pressure: 5 bar (72.5 psi)

#### Burst pressure of the sensor housing

The following sensor housing burst pressures are only valid for standard devices and/or devices equipped with closed purge connections (not opened/as delivered).

If a device fitted with purge connections (order code for "Sensor option", option CH "Purge connection") is connected to the purge system, the maximum pressure is determined by the purge system itself or by the device, depending on which component has the lower pressure classification.

The sensor housing burst pressure refers to a typical internal pressure which is reached prior to mechanical failure of the sensor housing and which was determined during type testing. The corresponding type test declaration can be ordered with the device (order code for "Additional approval", option LN "Sensor housing burst pressure, type test").

D	N	Sensor housing burst pressure				
[mm]	[in]	[bar]	[psi]			
8	3/8	220	3 190			
15	1/2	220	3 190			
15 FB	½ FB	235	3 408			
25	1	235	3 408			
25 FB	1 FB	220	3 190			
40	1½	220	3 190			
40 FB	1 ½ FB	235	3 408			
50	2	235	3 408			
50 FB	2 FB	460	6670			
80	3	460	6670			
FB = Full bore						

For information on the dimensions: see the "Mechanical construction" section

### Internal cleaning

- CIP cleaning
- SIP cleaning
- Cleaning with pigs

#### Options

Oil- and grease-free version for wetted parts, without declaration Order code for "Service", option HA  $^{1)}$ 

#### Flow limit

Select the nominal diameter by optimizing between the required flow range and permissible pressure loss

<sup>1)</sup> Cleaning only refers to the measuring instrument. Any accessories that have been supplied are not cleaned.

- The minimum recommended full scale value is approx. 1/20 of the maximum full scale value
- For the most common applications, 20 to 50 % of the maximum full scale value can be considered ideal
- A low full scale value must be selected for abrasive media (such as liquids with entrained solids): flow velocity < 1 m/s (< 3 ft/s).
- For gas measurement the following rules apply:
  - The flow velocity in the measuring tubes should not exceed half the speed of sound (0.5 Mach)
  - The maximum mass flow depends on the density of the gas: formula  $\rightarrow \triangleq 8$
- To calculate the flow limit, use the *Applicator* sizing tool  $\rightarrow \triangleq 89$

#### Pressure loss




To calculate the pressure loss, use the *Applicator* sizing tool  $\rightarrow \implies 89$ 

#### Static pressure

It is important that cavitation does not occur, or that gases entrained in the liquids do not outgas. This is prevented by means of a sufficiently high static pressure.

For this reason, the following mounting locations are recommended:

- At the lowest point in a vertical pipe
- Downstream from pumps (no danger of vacuum)

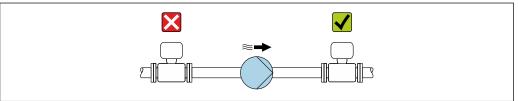

A0028777

#### Thermal insulation

In the case of some fluids, it is important to keep the heat radiated from the sensor to the transmitter to a low level. A wide range of materials can be used for the required insulation.


The following device versions are recommended for applications with thermal insulation: Version with extended neck for insulation:

Order code for "Sensor option", option CG with an extended neck length of 105 mm (4.13 in).

#### NOTICE

## Electronics overheating on account of thermal insulation!

- ▶ Recommended orientation: horizontal orientation, transmitter housing pointing downwards.
- Do not insulate the transmitter housing .
- ▶ Maximum permissible temperature at the lower end of the transmitter housing: 80 °C (176 °F)
- ► Thermal insulation with exposed extension neck: We recommend that you do not insulate the extension neck in order to ensure optimum dissipation of heat.

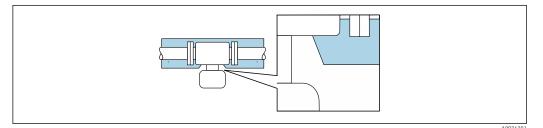

1 23 Thermal insulation with exposed extension neck

Heating

Some media require suitable measures to avoid loss of heat at the sensor.

#### **Heating options**

- Electrical heating, e.g. with electric band heaters <sup>2)</sup>
- Via pipes carrying hot water or steam
- Via heating jackets

#### NOTICE

## Danger of overheating when heating

- ► Ensure that the temperature at the lower end of the transmitter housing does not exceed 80 °C (176 °F).
- ► Ensure that sufficient convection takes place at the transmitter neck.
- ► Ensure that a sufficiently large area of the transmitter neck remains exposed. The uncovered part serves as a radiator and protects the electronics from overheating and excessive cooling.
- When using in potentially explosive atmospheres, observe the information in the device-specific Ex documentation. For detailed information on the temperature tables, see the separate document entitled "Safety Instructions" (XA) for the device.
- Consider the behavior of the process diagnostics "830 Ambient temperature too high" and "832 Electronics temperature too high" if overheating cannot be avoided by a suitable system design.

**Vibrations** 


The high oscillation frequency of the measuring tubes ensures that the correct operation of the measuring system is not influenced by plant vibrations.

## Mechanical construction

#### Dimensions in SI units

## **Compact version**

 ${\it Order\ code\ for\ "Housing",\ option\ A\ "Compact,\ aluminum\ coated"}$ 

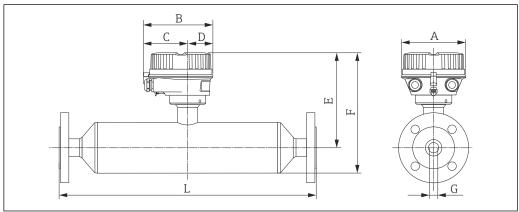


A0016456

DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E 1) 2) [mm]	F <sup>1) 2)</sup> [mm]	G [mm]	L [mm]
8	136	147.5	93.5	54	207.2	264.4	8.55	3)
15	136	147.5	93.5	54	207.2	264.4	11.38	3)
15 FB	136	147.5	93.5	54	207.2	264.4	17.07	3)
25	136	147.5	93.5	54	216.9	274.1	17.07	3)
25 FB	136	147.5	93.5	54	216.9	287.6	26.40	3)
40	136	147.5	93.5	54	231.2	301.9	26.40	3)
40 FB	136	147.5	93.5	54	231.2	315.4	35.62	3)
50	136	147.5	93.5	54	256.6	340.8	35.62	3)
50 FB	136	147.5	93.5	54	256.6	366.2	54.8	3)
80	136	147.5	93.5	54	256.6	366.2	54.8	3)
FB = Full bo	ore							

<sup>1)</sup> If using an extension neck for the extended temperature range, order code for "Sensor option", option CG: values +70 mm

- 2) If using a display, order code for "Display; Operation", option B: values +28 mm
- 3) Depends on the particular process connection


## Order code for "Housing", option B "Compact, hygienic, stainless"

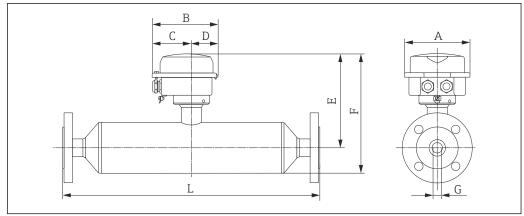

DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E <sup>2)</sup> [mm]	F <sup>1) 2)</sup> [mm]	G [mm]	L [mm]
8	133.5	136.8	78	58.8	202.2	264.4	8.55	3)
15	133.5	136.8	78	58.8	202.2	264.4	11.38	3)
15 FB	133.5	136.8	78	58.8	202.2	264.4	17.07	3)
25	133.5	136.8	78	58.8	211.9	274.1	17.07	3)
25 FB	133.5	136.8	78	58.8	211.9	287.6	26.40	3)
40	133.5	136.8	78	58.8	226.2	301.9	26.40	3)
40 FB	133.5	136.8	78	58.8	226.2	315.4	35.62	3)
50	133.5	136.8	78	58.8	251.6	340.8	35.62	3)
50 FB	133.5	136.8	78	58.8	251.6	366.2	54.8	3)
80	133.5	136.8	78	58.8	251.6	366.2	54.8	3)
FB = Full bo	ore							

- If using an extension neck for the extended temperature range, order code for "Sensor option", option CG: 1)
- 2) If using a display, order code for "Display; Operation", option B: values +14 mm
- Depends on the particular process connection

## Order code for "Housing", option C "Ultra-compact, hygienic, stainless"

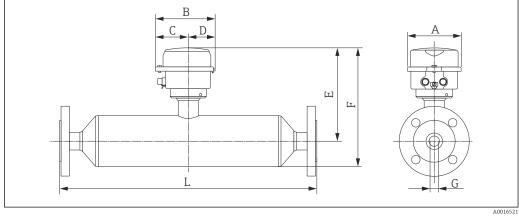


DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E <sup>2)</sup> [mm]	F <sup>1)2)</sup> [mm]	G [mm]	L [mm]
8	111.4	123.6	67.7	55.9	202.2	264.4	8.56	3)
15	111.4	123.6	67.7	55.9	202.2	264.4	11.38	3)
15 FB	111.4	123.6	67.7	55.9	202.2	264.4	17.07	3)
25	111.4	123.6	67.7	55.9	211.9	274.1	17.07	3)
25 FB	111.4	123.6	67.7	55.9	211.9	287.6	26.37	3)
40	111.4	123.6	67.7	55.9	226.2	301.9	26.37	3)
40 FB	111.4	123.6	67.7	55.9	226.2	315.4	35.62	3)
50	111.4	123.6	67.7	55.9	251.6	340.8	35.62	3)
50 FB	111.4	123.6	67.7	55.9	251.6	366.2	54.76	3)
80	111.4	123.6	67.7	55.9	251.6	366.2	54.76	3)
FB = Full bo	ore	1				1		

- 1) If using an extension neck for the extended temperature range, order code for "Sensor option", option CG: values  $\pm 70 \text{ mm}$
- 2) If using a display, order code for "Display; Operation", option B: values  $\pm 14 \text{ mm}$
- 3) Depends on the particular process connection

#### Flange connections

Fixed flange EN 1092-1, ASME B16.5, JIS B2220

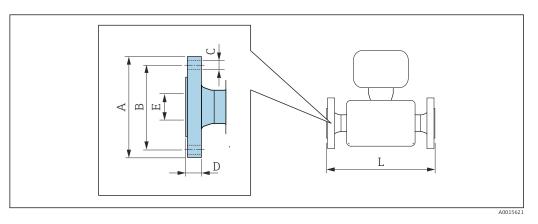

Length tolerance for dimension L in mm: +1.5/-2.0

1.4301 (304),	Flange according to EN 1092-1 (DIN 2501) Form B1 (DIN 2526 Form C): PN 40 1.4301 (304), wetted parts: titanium Order code for "Process connection", option D2W							
DN         A         B         C         D         E           [mm]         [mm]         [mm]         [mm]         [mm]								
8 <sup>1)</sup>	95	65	4 × Ø14	16	17.30	403		
15	95	65	4 × Ø14	16	17.30	439		
15 FB	95	65	4 × Ø14	15	17.07	573		
25	115	85	4 × Ø14	19	28.50	579		
25 FB	115	85	4 × Ø14	18	26.40	702		
40	150	110	4 × Ø18	22	43.10	707.5		
40 FB	150	110	4 × Ø18	20	35.62	821		
50	165	125	4 × Ø18	24	54.50	829		

## Flange according to EN 1092-1 (DIN 2501) Form B1 (DIN 2526 Form C): PN 40 1.4301 (304), wetted parts: titanium

Order code for "Process connection", option D2W

DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L [mm]
50 FB	165	125	4 × Ø18	36	54.8	1211.5
80	200	160	8 × Ø18	33	82.5	1211

FB = Full bore

Surface roughness: Ra 3.2 to 12.5  $\mu m$ 

#### 1) DN 8 with DN 15 flanges as standard

## Flange according to EN 1092-1 (DIN 2501) Form B2 (DIN 2526 Form E): PN 63 1.4301 (304), wetted parts: titanium

Order code for "Process connection", option D3W

DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L [mm]
50	180	135	4 × Ø22	34	54.5	833
50 FB	180	135	4 × Ø22	45	54.8	1211.5
80	215	170	8 × Ø22	41	81.7	1211

FB = Full bore

Surface roughness (flange): Ra 0.8 to 3.2  $\mu m$ 

## Flange according to EN 1092-1 (DIN 2501) Form B2 (DIN 2526 Form E): PN 100 1.4301 (304), wetted parts: titanium

Order code for "Process connection", option D4W

order code for Trocess connection, option Daw						
DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L [mm]
8 1)	105	75	4 × Ø14	25	17.30	403
15	105	75	4 × Ø14	25	17.30	439
15 FB	105	75	4 × Ø14	26	17.07	573
25	140	100	4 × Ø18	29	28.50	579
25 FB	140	100	4 × Ø18	31	26.40	702
40	170	125	4 × Ø22	32	42.50	707.5
40 FB	170	125	4 × Ø22	33	35.62	821
50	195	145	4 × Ø26	36	53.90	833
50 FB	195	145	4 × Ø26	48	54.8	1211.5
80	230	180	8 × Ø26	58	80.9	1236.5
1						

FB = Full bore

Surface roughness (flange): Ra 0.8 to 3.2  $\mu m$ 

### 1) DN 8 with DN 15 flanges as standard

#### Flange similar to ASME B16.5: Class 150 1.4301 (304), wetted parts: titanium Order code for "Process connection", option AAW В С D Е DN L Α [mm] [mm] [mm] [mm] [mm] [mm] [mm] 8 1) 90 60.3 $4 \times Ø15.7$ 20 15.70 403 15 15.70 90 60.3 4 × Ø15.7 20 439

Flange similar to ASME B16.5: Class 150 1.4301 (304), wetted parts: titanium  Order code for "Process connection", option AAW									
DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L [mm]			
15 FB	90	60.3	4 × Ø15.7	19	17.07	573			
25	110	79.4	4 × Ø15.7	23	26.70	579			
25 FB	110	79.4	4 × Ø15.7	22	26.40	702			
40	125	98.4	4 × Ø15.7	26	40.90	707.5			
40 FB	125	98.4	4 × Ø15.7	24	35.62	821			
50	150	120.7	4 × Ø19.1	28	52.60	829			

4 × Ø19.1

4 × Ø19.1

40

37

54.8

78

1211.5

1211

80 FB = Full bore

50 FB

Surface roughness (flange): Ra 3.2 to 6.3  $\mu m$ 

150

190

120.7

152.4

## DN 8 with DN 15 flanges as standard

Flange similar to ASME B16.5: Class 300 1.4301 (304), wetted parts: titanium Order code for "Process connection", option ABW								
DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L [mm]		
8 <sup>1)</sup>	95	66.7	4 × Ø15.7	20	15.70	403		
15	95	66.7	4 × Ø15.7	20	15.70	439		
15 FB	95	66.7	4 × Ø15.7	19	17.07	573		
25	125	88.9	4 × Ø19.1	23	26.70	579		
25 FB	125	88.9	4 × Ø19.1	22	26.40	702		
40	155	114.3	4 × Ø22.4	26	40.90	707.5		
40 FB	155	114.3	4 × Ø22.4	24	35.62	821		
50	165	127.0	8 × Ø19.1	28	52.60	829		
50 FB	165	127.0	8 × Ø19.1	43	54.8	1211.5		
80	210	168.3	8 × Ø22.3	42	78	1211		
	FB = Full bore Surface roughness (flange): Ra 3.2 to 6.3 µm							

1) DN 8 with DN 15 flanges as standard

Flange similar to ASME B16.5: Class 600 1.4301 (304), wetted parts: titanium Order code for "Process connection", option ACW							
DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L [mm]	
8 <sup>1)</sup>	95	66.7	4 × Ø15.7	20	13.80	403	
15	95	66.7	4 × Ø15.7	20	13.80	439	
15 FB	95	66.7	4 × Ø15.7	22	17.07	573	
25	125	88.9	4 × Ø19.1	23	24.40	579	
25 FB	125	88.9	4 × Ø19.1	25	26.40	702	
40	155	114.3	4 × Ø22.4	28	38.10	707.5	

## Flange similar to ASME B16.5: Class 600 1.4301 (304), wetted parts: titanium

Order code for "Process connection", option ACW

DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L [mm]
40 FB	155	114.3	4 × Ø22.4	29	35.62	821
50	165	127.0	8 × Ø19.1	33	49.30	833
50 FB	165	127.0	8 × Ø19.1	46	54.8	1211.5
80	210	168.3	8 × Ø22.3	53	73.7	1223

FB = Full bore

Surface roughness (flange): Ra 3.2 to 6.3  $\mu m$ 

#### 1) DN 8 with DN 15 flanges as standard

## Flange JIS B2220: 10K 1.4301 (304), wetted parts: titanium Order code for "Process connection", option NDW

DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L [mm]
50	155	120	4 × Ø19	28	50	829
50 FB	155	120	4 × Ø19	40	54.8	1211.5
80	185	150	8 × Ø19	33	80	1211

FB = Full bore

Surface roughness (flange): Ra 3.2 to 6.3  $\mu m$ 

Flange JIS B2220: 20K
1.4301 (304), wetted parts: titanium
Order code for "Process connection", option <b>NEW</b>

order code for Trocess connection, option NEW						
DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L [mm]
8 <sup>1)</sup>	95	70	4 × Ø15	20	15.00	403
15	95	70	4 × Ø15	20	15.00	439
15 FB	95	70	4 × Ø15	19	17.07	573
25	125	90	4 × Ø19	23	25.00	579
25 FB	125	90	4 × Ø19	22	26.40	702
40	140	105	4 × Ø19	26	40.00	707.5
40 FB	140	105	4 × Ø19	24	35.62	821
50	155	120	8 × Ø19	28	50.00	829
50 FB	155	120	8 × Ø19	42	54.8	1211.5
80	200	160	8 × Ø23	36	80	1211
	•		•			

FB = Full bore

Surface roughness (flange): Ra 3.2 to 6.3  $\mu m$ 

1) DN 8 with DN 15 flanges as standard

1.4301 (304),	Flange JIS B2220: 40K 1.4301 (304), wetted parts: titanium Order code for "Process connection", option NFW								
DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L [mm]			
8 <sup>1)</sup>	115	80	4 × Ø19	25	15.00	403			
15	115	80	4 × Ø19	25	15.00	439			
15 FB	115	80	4 × Ø19	26	17.07	573			
25	130	95	4 × Ø19	27	25.00	579			

 $4\times \emptyset 19$ 

 $4 \times \emptyset 23$ 

 $4 \times \emptyset 23$ 

8 × Ø19

 $8 \times \emptyset 19$ 

 $8 \times \emptyset 23$ 

29

30

31

32

43

46

26.40

38.00

35.62

50.00

54.8

75

702

707.5

821

829

1211.5

1211

80 FB = Full bore

25 FB

40

40 FB

50

50 FB

Surface roughness (flange): Ra 3.2 to 6.3  $\mu m$ 

130

160

160

165

165

210

95

120

120

130

130


170

## 1) DN 8 with DN 15 flanges as standard

Flange JIS B2220: 63K 1.4301 (304), wetted parts: titanium Order code for "Process connection", option NHW						
DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L [mm]
8 <sup>1)</sup>	120	85	4 × Ø19	28	12.00	403
15	120	85	4 × Ø19	28	12.80	439
15 FB	120	85	4 × Ø19	29	17.07	573
25	140	100	4 × Ø23	30	22.00	579
25 FB	140	100	4 × Ø23	32	26.40	702
40	175	130	4 × Ø25	36	35.00	707.5
40 FB	175	130	4 × Ø25	37	35.62	821
50	185	145	8 × Ø23	40	48.00	833
50 FB	185	145	8 × Ø23	47	54.8	1211.5
80	230	185	8 × Ø25	55	73	1226.5

1) DN 8 with DN 15 flanges as standard

## Fixed flange DIN 11864-2

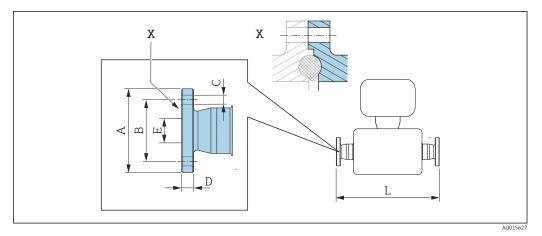

Detail X: Asymmetrical process connection; the part shown in gray is provided by the supplier. € 24

Length tolerance for dimension L in mm: +1.5 / -2.0


Flange DIN11864-2 Form A, for pipe according to DIN11866 series A, flange with notch Titanium Order code for "Process connection", option KFW						
DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L [mm]
8 1)	54	37	4 × Ø9	10	10	448
15	59	42	4 × Ø9	10	16	484
25	70	53	4 × Ø9	10	26	622
40	82	65	4 × Ø9	10	38	750
50	94	77	4 × Ø9	10	50	872
80	133	112	8 × Ø11	12	81	1269

3A version available: order code for "Additional approval", option LP in conjunction with Ra  $\leq 0.76~\mu m$ : order code for "Measuring tube material", option CB or Ra  $\leq 0.38~\mu m$ : order code for "Measuring tube material", option CD

1) DN 8 with DN 10 flanges

## **Clamp connections**

## Tri-Clamp

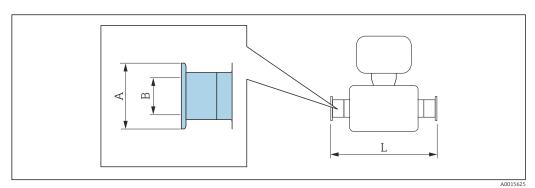

Length tolerance for dimension L in mm:  $+1.5 \ / \ -2.0$ 

Tri-Clamp (≥ 1"), DIN 11866 series C  Titanium  Order code for "Process connection", option FTW					
DN [mm]	Clamp [in]	A [mm]	B [mm]	L [mm]	
8	1	50.4	22.1	426	
15	1	50.4	22.1	462	
15 FB	See ¾" Tri-Clamp connection				
25	1	50.4	22.1	602	
25 FB	1	50.4	22.1	730.5	
40	1 1/2	50.4	34.8	730.5	
40 FB	1 1/2	50.4	34.8	850	
50	2	63.9	47.5	850	
50 FB <sup>1)</sup>	2 1/2	77.4	60.3	1268.5	
80	3	90.9	72.9	1268.5	

FB = Full bore

3A version available: order code for "Additional approval", option LP in conjunction with Ra  $\leq 0.76~\mu m$ : order code for "Measuring tube material", option CB or

 $Ra \leq 0.38~\mu m$  : order code for "Measuring tube material", option CD

## Order code for "Process connection", option FRW

3¼" Tri-Clamp, DIN 11866 series C Titanium Order code for "Process connection", option FEW					
DN [mm]	Clamp [in]	A [mm]	B [mm]	L [mm]	
8	3/4	25.0	16.0	426	
15	3/4	25.0	16.0	462	
15 FB	3/4	25.0	16.0	602	

3A version available: order code for "Additional approval", option LP in conjunction with

 $Ra \le 0.76 \ \mu m$ : order code for "Measuring tube material", option CB or

 $Ra \le 0.38 \ \mu m$ : order code for "Measuring tube material", option CD

#### ½" Tri-Clamp, DIN 11866 series C Titanium Order code for "Process connection", option FBW DN Clamp В [mm] [in] [mm] [mm] [mm] 8 25.0 9.5 426 15 25.0 9.5 462

3A version available: order code for "Additional approval", option LP in conjunction with

 $Ra \leq 0.76~\mu m$ : order code for "Measuring tube material", option CB or

 $Ra \leq 0.38~\mu m$ : order code for "Measuring tube material", option CD

Eccentric Tri-Clamp, DIN 11866 series C Titanium					
DN [mm]	Order code for "Process connection", option	Clamp [in]	A [mm]	B [mm]	L [mm]
8	FEA	1/2	25	9.5	426
15	FEC	3/4	25	15.75	462
15 FB	FEE	1	50.5	22.1	602
25	FEE	1	50.5	22.1	602
25 FB	FEG	1½	50.5	34.8	730.5
40	FEG	1½	50.5	34.8	730.5
40 FB	FEJ	2	64	47.5	850
50	FEJ	2	64	47.5	850
50 FB	FEL	21/2	77.5	60.3	1268.5
50 FB	FEM	3	91	72.9	1268.5
80	FEL	21/2	77.5	60.3	1268.5
80	FEM	3	91	72.9	1268.5


3A version available: order code for "Additional approval", option LP in conjunction with

Ra  $\leq$  0.76 µm: order code for "Measuring tube material", option CB or Ra  $\leq$  0.38 µm: order code for "Measuring tube material", option CD

Additional information regarding "Eccentric clamps"

## Glands

Threaded adapter DIN 11851

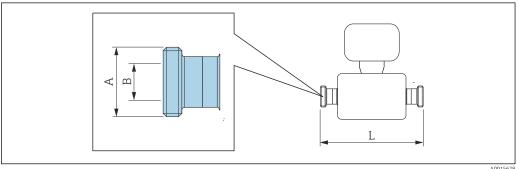

A0015628

Length tolerance for dimension L in mm: +1.5 / -2.0

Titanium Order code for "Process connection", option KCW					
DN [mm]	A [in]	B [mm]	L [mm]		
8	Rd 34 × 1/8	16	426		
15	Rd 34 × 1/8	16	462		
15 FB	Rd 34 × 1/8	16	602		
25	Rd 52 × 1/6	26	602		
25 FB	Rd 52 × 1/6	26	737		
40	Rd 65 × 1/6	38	730.5		
40 FB	Rd 65 × 1/6	38	856		
50	Rd 78 × 1/6	50	856		
50 FB	Rd 78 × 1/6	50	1268.5		
80	Rd 110 × 1/4	81	1268.5		

FB = Full bore

3A version available: order code for "Additional approval", option LP in conjunction with

 $Ra \le 0.76 \ \mu m$ : order code for "Measuring tube material", option CB

Threaded adapter DIN 11851, for pipe according to DIN11866 series A

Threaded adapter Rd 28 × 1/8" DIN 11851, for pipe according to DIN11866 series A  Titanium  Order code for "Process connection", option KAW					
DN A B L [mm] [mm]					
8	Rd 28 × 1/8	10	426		
15	Rd 28 × 1/8	10	462		

3A version available: order code for "Additional approval", option LP in conjunction with Ra  $\leq 0.76~\mu m$ : order code for "Measuring tube material", option CB

Threaded adapter DIN11864-1 Form A, for pipe according to DIN11866 series A  Titanium  Order code for "Process connection", option KEW				
DN [mm]	A [in]	B [mm]	L [mm]	
8 1)	Rd 28 × 1/8	10	426	
15	Rd 34 × 1/8	16	462	
15 FB	Rd 34 × 1/8	16	602	
25	Rd 52 × 1/6	26	602	
25 FB	Rd 52 × 1/6	26	735	
40	Rd 65 × 1/6	38	730.5	
40 FB	Rd 65 × 1/6	38	856	
50	Rd 78 × 1/6	50	856	
50 FB	Rd 78 × 1/6	50	1268.5	
80	Rd 110 × 1/4	81	1268.5	


FB = Full bore

3A version available (order code for "Additional approval", option LP) in combination with Ra  $\leq$  0.76  $\mu m$ , Ra  $\leq$  0.38  $\mu m$  (order code for "Measuring tube material", option CB, CD)

1) DN 8 with DN 10 threaded adapter as standard

Threaded adapter SMS 1145 Titanium Order code for "Process connection", option SAW				
DN [mm]	A [in]	B [mm]	L [mm]	
8	Rd 40 × 1/6	22.5	426	
15	Rd 40 × 1/6	22.5	462	
25	Rd 40 × 1/6	22.5	602	
25 FB	Rd 40 × 1/6	22.5	737	
40	Rd 60 × 1/6	35.5	738.5	
40 FB	Rd 60 × 1/6	35.5	858	
50	Rd 70 × 1/6	48.5	858	
50 FB	Rd 70 × 1/6	48.5	1258.5	
80	Rd 98 × 1/6	72	1268.5	
FB = Full bore 3A version available (Ra ≤ 0.76 μm) (order code for "Additional approval", option LP)				

## Threaded adapter ISO 2853

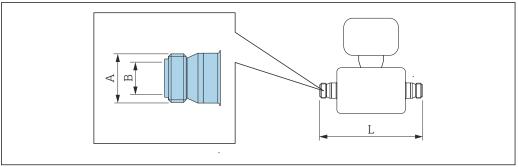

A0015623

# Length tolerance for dimension L in mm: +1.5 / -2.0

Threaded adapter ISO 2853, for pipe according to ISO 2037 Titanium Order code for "Process connection", option JSE				
DN [mm]	A [in]	B [mm]	L [mm]	
8 1)	37.13	22.6	434	
15	37.13	22.6	470	
15 FB	37.13	22.6	610	
25 FB	37.13	22.6	745	
40	50.65	35.6	736.5	
40 FB	50.65	35.6	861	
50	64.16	48.6	858	
50 FB	64.1	48.6	1268.5	

## Threaded adapter ISO 2853, for pipe according to ISO 2037 Titanium

Order code for "Process connection", option JSE

DN	A	B	L
[mm]	[in]	[mm]	[mm]
80	91.19	72.9	1268.5

FB = Full bore


3A version available (order code for "Additional approval", option LP) in combination with Ra  $\leq$  0.76  $\mu m$  , Ra  $\leq$  $0.38 \, \mu m$  (order code for "Measuring tube material", option CB, CD)

DN 8 with DN 15 threaded adapter as standard 1)

## **Safety Barrier Promass 100**

Top-hat rail EN 60715:


- TH 35 x 7.5
- TH 35 x 15

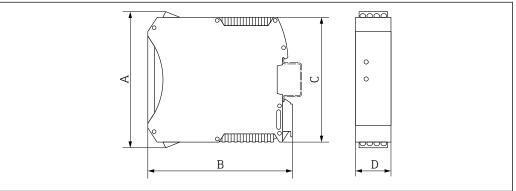

A	В	С	D
[mm]	[mm]	[mm]	[mm]
108	114.5	99	22.5

#### Accessories

Rinse connections

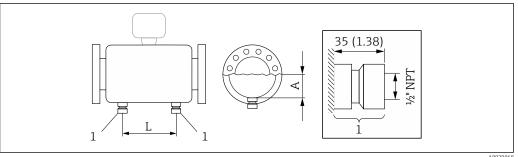

Connection nipple for purge connections: order code for "Sensor options", option CH "Purge connection"


DN	A	L
[mm]	[mm]	[mm]
8	90.65	122
15	90.65	158

DN	A	L
[mm]	[mm]	[mm]
15 FB	90.65	158
25	90.65	296
25 FB	90.65	296
40	103.35	392
40 FB	103.35	392
50	117.75	488
50 FB	145.5	814
80	145.5	814

## **Dimensions in US units**

#### Compact version


Order code for "Housing", option A "Compact, aluminum coated"

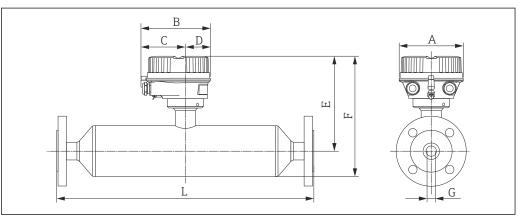

DN [in]	A [in]	B [in]	C [in]	D [in]	E <sup>2)</sup> [in]	F <sup>1) 2)</sup> [in]	G [in]	L [in]
3/8	5.35	5.81	3.68	2.13	8.16	10.41	0.34	3)
1/2	5.35	5.81	3.68	2.13	8.16	10.41	0.45	3)
½ FB	5.35	5.81	3.68	2.13	8.16	10.41	0.67	3)
1	5.35	5.81	3.68	2.13	8.54	10.79	0.67	3)
1 FB	5.35	5.81	3.68	2.13	8.54	11.32	1.01	3)
11/2	5.35	5.81	3.68	2.13	9.1	11.89	1.01	3)
1½ FB	5.35	5.81	3.68	2.13	9.1	12.42	1.40	3)
2	5.35	5.81	3.68	2.13	10.1	13.42	1.40	3)
2 FB	5.35	5.81	3.68	2.13	10.1	14.42	2.16	3)
3	5.35	5.81	3.68	2.13	10.1	14.42	2.16	3)
FB = Full bo	ore							

- 1) If using an extension neck for the extended temperature range, order code for "Sensor option", option CG: values +2.76 in
- If using a display, order code for "Display; Operation", option B: values +1.1 in Depends on the particular process connection
- 2) 3)

## Order code for "Housing", option B "Compact, hygienic, stainless"

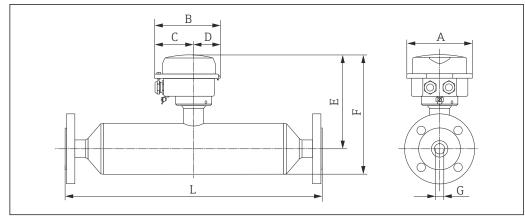


A0016522

DN [in]	A [in]	B [in]	C [in]	D [in]	E <sup>2)</sup> [in]	F <sup>1) 2)</sup> [in]	G [in]	L [in]
3/8	5.26	5.39	3.07	2.31	7.96	10.41	0.34	3)
1/2	5.26	5.39	3.07	2.31	7.96	10.41	0.45	3)
½ FB	5.26	5.39	3.07	2.31	7.96	10.41	0.67	3)
1	5.26	5.39	3.07	2.31	8.34	10.79	0.67	3)
1 FB	5.26	5.39	3.07	2.31	8.34	11.32	1.01	3)
1½	5.26	5.39	3.07	2.31	8.91	11.89	1.01	3)
1½ FB	5.26	5.39	3.07	2.31	8.91	12.42	1.40	3)
2	5.26	5.39	3.07	2.31	9.91	13.42	1.40	3)
2 FB	5.26	5.39	3.07	2.31	9.91	14.42	2.16	3)
3	5.26	5.39	3.07	2.31	9.91	14.42	2.16	3)
FB = Full bo	ore							

- 1) If using an extension neck for the extended temperature range, order code for "Sensor option", option CG: values  $\pm 2.76$  in
- 2) If using a display, order code for "Display; Operation", option B: values +0.55 in
- 3) Depends on the particular process connection

## Order code for "Housing", option C "Ultra-compact, hygienic, stainless"

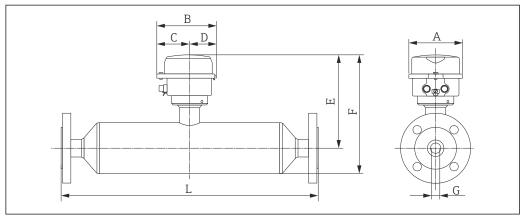


A0016521

DN [in]	A [in]	B [in]	C [in]	D [in]	E <sup>2)</sup> [in]	F <sup>1) 2)</sup> [in]	G [in]	L [in]
3/8	4.39	4.87	2.67	2.2	7.96	10.41	0.337	3)
1/2	4.39	4.87	2.67	2.2	7.96	10.41	0.448	3)
½ FB	4.39	4.87	2.67	2.2	7.96	10.41	0.672	3)
1	4.39	4.87	2.67	2.2	8.34	10.79	0.672	3)
1 FB	4.39	4.87	2.67	2.2	8.34	11.32	1.038	3)
1½	4.39	4.87	2.67	2.2	8.91	11.89	1.038	3)
1½ FB	4.39	4.87	2.67	2.2	8.91	12.42	1.402	3)
2	4.39	4.87	2.67	2.2	9.91	13.42	1.402	3)
2 FB	4.39	4.87	2.67	2.2	9.91	14.42	2.156	3)
3	4.39	4.87	2.67	2.2	9.91	14.42	2.156	3)
FB = Full bo	ore							

- 1) If using an extension neck for the extended temperature range, order code for "Sensor option", option CG: values +2.76 in
- 2) 3) If using a display, order code for "Display; Operation", option B: values  $\pm 0.55$  in
- Depends on the particular process connection

## Flange connections

Fixed flange ASME B16.5

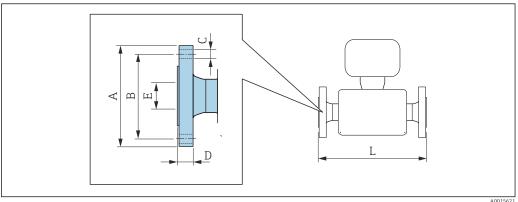

Length tolerance for dimension L in inches: +0.06/-0.08

1.4301 (304), w	Flange similar to ASME B16.5: Class 150 1.4301 (304), wetted parts: titanium Order code for "Process connection", option AAW											
DN [in]	A [in]	B [in]	C [in]	D [in]	E [in]	L [in]						
3/8 1)	3.54	2.37	4 × Ø0.62	0.79	0.62	15.87						
1/2	3.54	2.37	4 × Ø0.62	0.79	0.62	17.28						
½ FB	3.54	2.37	4 × Ø0.62	0.75	0.67	22.56						
1	4.33	3.13	4 × Ø0.62	0.91	1.05	22.8						
1 FB	4.33	3.13	4 × Ø0.62	0.87	1.04	27.64						
1½	4.92	3.87	4 × Ø0.62	1.02	1.61	27.85						
1½ FB	4.92	3.87	4 × Ø0.62	0.94	1.4	32.32						
2	5.91	4.75	4 × Ø0.75	1.1	2.07	32.64						

Flange similar to ASME B16.5: Class 150 1.4301 (304), wetted parts: titanium Order code for "Process connection", option AAW										
DN A B C D E L [in] [in] [in] [in]										
2 FB	5.91	4.75	4 × Ø0.75	1.57	2.16	47.7				
3	3 7.48 6.00 4 × Ø0.75 1.46 3.07 47.68									
FB = Full bore Surface roughness (flange): Ra 126 to 248 μin										

1) DN 3/8" with DN ½" flanges as standard;

der code for "I	Process connect	tion", option <b>A</b>	BW			
DN [in]	A [in]	B [in]	C [in]	D [in]	E [in]	L [in]
3/8 1)	3.74	2.63	4 × Ø0.62	0.79	0.62	15.87
1/2	3.74	2.63	4 × Ø0.62	0.79	0.62	17.28
½ FB	3.74	2.63	4 × Ø0.62	0.75	0.67	22.56
1	4.92	3.50	4 × Ø0.75	0.91	1.05	22.8
1 FB	4.92	3.50	4 × Ø0.75	0.87	1.04	27.64
1½	6.10	4.50	4 × Ø0.88	1.02	1.61	27.85
1½ FB	6.10	4.50	4 × Ø0.88	0.94	1.4	32.32
2	6.50	5.00	8 × Ø0.75	1.1	2.07	32.64
2 FB	6.50	5.00	8 × Ø0.75	1.69	2.16	47.7
3	8.27	6.63	8 × Ø0.88	1.65	3.07	47.68

1) DN 3/8" with DN ½" flanges as standard;

Flange similar to ASME B16.5: Class 600 1.4301 (304), wetted parts: titanium Order code for "Process connection", option ACW											
DN [in]	A [in]	B [in]	C [in]	D [in]	E [in]	L [in]					
3/8 1)	3.74	2.63	4 × Ø0.62	0.79	0.54	15.87					
1/2	3.74	2.63	4 × Ø0.62	0.79	0.54	17.28					
½ FB	3.74	2.63	4 × Ø0.62	0.87	0.67	22.56					
1	4.92	3.50	4 × Ø0.75	0.91	0.96	22.8					
1 FB	4.92	3.50	4 × Ø0.75	0.98	1.04	27.64					
1½	6.10	4.50	4 × Ø0.88	1.1	1.5	27.85					
1½ FB	6.10	4.50	4 × Ø0.88	1.14	1.4	32.32					
2	6.50	5.00	8 × Ø0.75	1.3	1.94	32.8					
2 FB	6.50	5.00	8 × Ø0.75	1.81	2.16	47.7					

Flange similar to ASME B16.5: Class 600 1.4301 (304), wetted parts: titanium Order code for "Process connection", option ACW									
DN [in]	A [in]	B [in]	C [in]	D [in]	E [in]	L [in]			
3	8.27	6.63	8 × Ø0.88	2.09	2.9	48.15			


FB = Full bore

Surface roughness (flange): Ra 126 to 248  $\mu in$ 

DN 3/8" with DN  $\frac{1}{2}$ " flanges as standard;

## **Clamp connections**

## Tri-Clamp

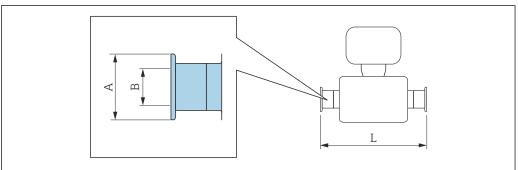

Length tolerance for dimension L in inch:  $+0.06\ /\ -0.08$ 

Tri-Clamp (≥ 1"), DIN 11866 series C  Titanium  Order code for "Process connection", option FTW										
DN [in]	Clamp [in]	A [in]	B [in]	L [in]						
3/8	1	1.98	0.87	16.77						
1/2	1	1.98	0.87	18.19						
½ FB	See ¾" Tri-Clamp conne	See ¾" Tri-Clamp connection								
1	1	1.98	0.87	23.7						
1 FB	1	1.98	0.87	28.76						
1½	11/2	1.98	1.37	28.76						
1½ FB	11/2	1.98	1.37	33.46						
2	2	2.52	1.87	33.46						
2 FB <sup>1)</sup>	21/2	3.05	2.37	49.92						
3	3	3.58	2.87	49.92						

3A version available: order code for "Additional approval", option LP in conjunction with Ra  $\leq$  30  $\mu$ in: order code for "Measuring tube material", option CB or Ra  $\leq$  15  $\mu$ in: order code for "Measuring tube material", option CD

Order code for "Process connection", option FRW 1)

72

## 3/4" Tri-Clamp, DIN 11866 series C

Titanium

Order code for "Process connection", option **FEW** 

DN [in]	Clamp [in]	A [in]	B [in]	L [in]
3/8	3/4	0.98	0.63	16.77
1/2	3/4	0.98	0.63	18.19
½ FB	3/4	0.98	0.63	23.7

FB = Full bore

3A version available: order code for "Additional approval", option LP in conjunction with

 $Ra \le 30 \ \mu in$ : order code for "Measuring tube material", option CB or

 $Ra \le 15$  µin: order code for "Measuring tube material", option CD

1/2" Tri-Clamp, DIN 11866 series C Titanium Order code for "Process connection", option FBW				
DN [in]	Clamp [in]	A [in]	B [in]	L [in]
3/8	1/2	0.98	0.37	16.77
1/2	1/2	0.98	0.37	18.19

3A version available: order code for "Additional approval", option LP in conjunction with

 $Ra \leq 30~\mu in:$  order code for "Measuring tube material", option CB or

 $Ra \le 15 \mu in$ : order code for "Measuring tube material", option CD

Eccentric Tri-Clamp, DIN 11866 series C Titanium					
DN [in]	Order code for "Process connection", option	Clamp [in]	A [in]	B [in]	L [in]
3/8	FEA	1/2	0.98	0.37	16.77
1/2	FEC	3/4	0.98	0.62	18.19
½ FB	FEE	1	1.99	0.87	23.7
1	FEE	1	1.99	0.87	23.7
1 FB	FEG	1½	1.99	1.37	28.76
1½	FEG	1½	1.99	1.37	28.76
1½ FB	FEJ	2	2.52	1.87	33.46
2	FEJ	2	2.52	1.87	33.46
2 FB	FEL	21/2	3.05	2.37	49.94
2 FB	FEM	3	3.58	2.87	49.94
3	FEL	21/2	3.05	2.37	49.94
3	FEM	3	3.58	2.87	49.94

FB = Full bore

3A version available: order code for "Additional approval", option LP in conjunction with


 $Ra \leq 30~\mu in:$  order code for "Measuring tube material", option CB or

 $Ra \le 15$  µin: order code for "Measuring tube material", option CD

Additional information regarding "Eccentric clamps"

## **Compression fittings**

Threaded adapter SMS 1145

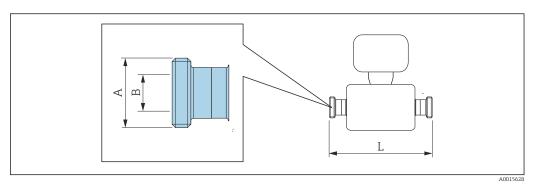


Length tolerance for dimension L in inch:  $\pm 0.06\ /\ -0.08$ 

readed adapter SMS 11 anium der code for "Process cont			
DN [in]	A [in]	B [in]	L [in]
3/8	Rd 40 × 1/6	0.89	16.77
1/2	Rd 40 × 1/6	0.89	18.19
1	Rd 40 × 1/6	0.89	23.7
1 FB	Rd 40 × 1/6	0.89	29.02
11/2	Rd 60 × 1/6	1.4	29.07
1½ FB	Rd 60 × 1/6	1.4	33.78
2	Rd 70 × 1/6	1.91	33.78
2 FB	Rd 70 × 1/6	1.91	49.55
3	Rd 98 × 1/6	2.83	49.94

## Safety Barrier Promass 100

Top-hat rail EN 60715:


- TH 35 x 7.5
  TH 35 x 15

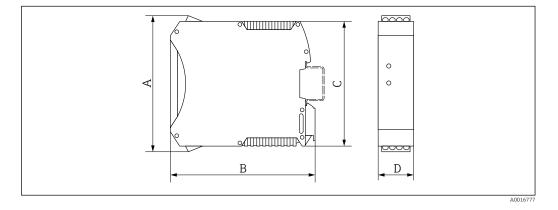

A	В	С	D
[mm]	[mm]	[mm]	[mm]
108	114.5	99	22.5

## Accessories

## Rinse connections

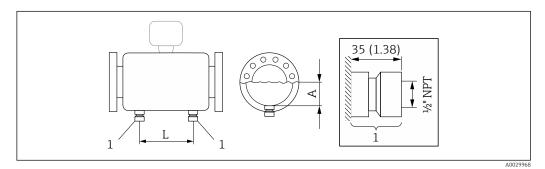

Connection nipple for purge connections: order code for "Sensor options", option CH "Purge connection"

DN	A	L
[in]	[in]	[in]
3/8	3.569	4.8
1/2	3.569	6.22
½ FB	3.569	6.22
1	3.569	11.65
1 FB	3.569	11.65
11/2	4.069	15.43
1½ FB	4.069	15.43
2	4.636	19.21
2 FB	5.73	32.05
3	5.73	32.05

## Weight

All values (weight exclusive of packaging material) refer to devices with EN/DIN PN 40 flanges. Weight specifications including transmitter: order code for "Housing", option A "Compact, aluminum coated".

## Weight in SI units

DN [mm]	Weight [kg]
8	11
15	13
15 FB	19
25	20
25 FB	39
40	40
40 FB	65
50	67
50 FB	118

DN [mm]	Weight [kg]
80	122
FB = Full bore	

## Weight in US units

DN [in]	Weight [lbs]
3/8	24
1/2	29
½ FB	42
1	44
1 FB	86
1½	88
1½ FB	143
2	148
2 FB	260
3	269
FB = Full bore	

## **Safety Barrier Promass 100**


49 g (1.73 ounce)

## Materials

## Transmitter housing

- Order code for "Housing", option A "Compact, aluminum coated": Aluminum, AlSi10Mg, coated
- Order code for "Housing", option B "Compact, hygienic, stainless": Hygienic version, stainless steel 1.4301 (304)
- Order code for "Housing", option C "Ultra-compact, hygienic, stainless": Hygienic version, stainless steel 1.4301 (304)
- Window material for optional local display (→ 🖺 79):
  - $\bullet$  For order code for "Housing", option A : glass
  - For order code for "Housing", option **B** and **C**: plastic

## Cable entries/cable glands

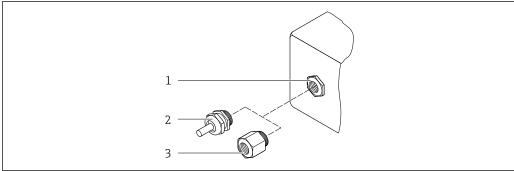

A002064

## ■ 25 Possible cable entries/cable glands

- 1 Internal thread M20  $\times$  1.5
- 2 Cable gland  $M20 \times 1.5$
- 3 Adapter for cable entry with internal thread G  $\frac{1}{2}$ " or NPT  $\frac{1}{2}$ "

76

Order code for "Housing", option A "Compact, aluminum, coated"

The various cable entries are suitable for hazardous and non-hazardous areas.

Cable entry/cable gland	Material
Cable gland M20 × 1.5	
Adapter for cable entry with female thread G 1/2"	Nickel-plated brass
Adapter for cable entry with female thread NPT 1/2"	

Order code for "Housing", option B "Compact, hygienic, stainless"

The various cable entries are suitable for hazardous and non-hazardous areas.

Cable entry/cable gland	Material
Cable gland M20 × 1.5	Stainless steel, 1.4404 (316L)
Adapter for cable entry with female thread G ½"	
Adapter for cable entry with female thread NPT 1/2"	

## Device plug

Electrical connection	Material
Plug M12x1	<ul> <li>Socket: Stainless steel, 1.4404 (316L)</li> <li>Contact housing: Polyamide</li> <li>Contacts: Gold-plated brass</li> </ul>

## Sensor housing

- Acid and alkali-resistant outer surface
- Stainless steel 1.4301 (304)

## Measuring tubes

Grade 9 titanium

## **Process connections**

- Flanges similar to EN 1092-1 (DIN 2501)/similar to ASME B16.5/similar to JIS:
  - Stainless steel 1.4301 (304)
  - Wetted parts: Grade 2 titanium
- All other process connections:
   Grade 2 titanium

## Seals

Welded process connections without internal seals

## Accessories

Safety Barrier Promass 100

Housing: Polyamide

#### **Process connections**

- Fixed flange connections:
  - EN 1092-1 (DIN 2501) flange
  - EN 1092-1 (DIN 2512N) flange
  - ASME B16.5 flange
  - JIS B2220 flange
  - DIN 11864-2 Form A flange, DIN 11866 series A, flange with notch
- Clamp connections:

Tri-Clamp (OD tubes), DIN 11866 series C

• Eccentric clamp connections:

Eccen. Tri-Clamp, DIN 11866 series C

- Thread:
  - DIN 11851 thread, DIN 11866 series A
  - SMS 1145 thread
  - ISO 2853 thread, ISO 2037
  - DIN 11864-1 Form A thread, DIN 11866 series A



Process connection materials

## Surface roughness

All data relate to parts in contact with medium.

*The following surface roughness categories can be ordered:* 

Category	Method	Option(s)/Order code "Measuring tube mat., wetted surface"
Not polished	_	CA
Ra ≤ 0.76 μm (30 μin) <sup>1)</sup>	Mechanically polished <sup>2)</sup>	СВ
Ra ≤ 0.38 μm (15 μin) <sup>1)</sup>	Mechanically polished <sup>2)</sup>	CD

- 1) Ra according to ISO 21920
- 2) Inaccessible weld seams between pipe and manifold are excluded

## Operability

## Operating concept

## Operator-oriented menu structure for user-specific tasks

- Commissioning
- Operation
- Diagnostics
- Expert level

## Fast and safe commissioning

- Individual menus for applications
- Menu guidance with brief descriptions of the individual parameter functions

#### Reliable operation

- Operation in the following languages:
  - Via "FieldCare", "DeviceCare" operating tool:
     English, German, French, Spanish, Italian, Chinese, Japanese
  - Via integrated web browser (only available for device versions with HART, PROFIBUS DP, PROFINET and EtherNet/IP):
  - English, German, French, Spanish, Italian, Dutch, Portuguese, Polish, Russian, Turkish, Chinese, Japanese, Bahasa (Indonesian), Vietnamese, Czech, Swedish, Korean
- Uniform operating philosophy applied to operating tools and web browser
- If replacing the electronic module, transfer the device configuration via the plug-in memory (HistoROM DAT) which contains the process and measuring instrument data and the event logbook. No need to reconfigure.

For devices with Modbus RS485, the data recovery function is implemented without the plug-in memory (HistorOM DAT).

## Efficient diagnostic behavior increases measurement reliability

- Remedial action can be called up via the operating tools and web browser
- Diverse simulation options
- Status indicated by several light emitting diodes (LEDs) on the electronic module in the housing compartment

## Local display

A local display is only available for device versions with the following communication protocols: HART, PROFIBUS-DP, PROFINET, EtherNet/IP

The local display is only available with the following device order code: Order code for "Display; operation", option  ${\bf B}$ : 4-line; illuminated, via communication


## Display element

- 4-line liquid crystal display with 16 characters per line.
- White background lighting; switches to red in event of device errors.
- Format for displaying measured variables and status variables can be individually configured.
- Permitted ambient temperature for the display: -20 to +60 °C (-4 to +140 °F). The readability of the display may be impaired at temperatures outside the temperature range.

#### Remote operation

## Via HART protocol

This communication interface is available in device versions with a HART output.

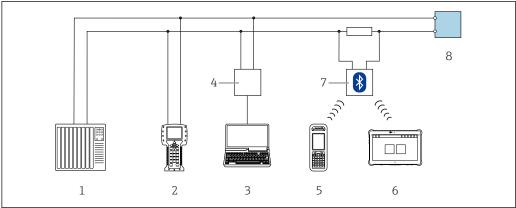


A00287

■ 26 Options for remote operation via HART protocol

- 1 Automation system (e.g. PLC)
- 2 Field Communicator 475
- 3 Computer with operating tool (e.g. FieldCare, AMS Device Manager, SIMATIC PDM)
- 4 Commubox FXA195 (USB)
- 5 Field Xpert SFX350 or SFX370
- 6 Field Xpert SMT70
- 7 VIATOR Bluetooth modem with connecting cable
- 8 Transmitter

## Via PROFIBUS DP network

This communication interface is available in device versions with PROFIBUS DP.

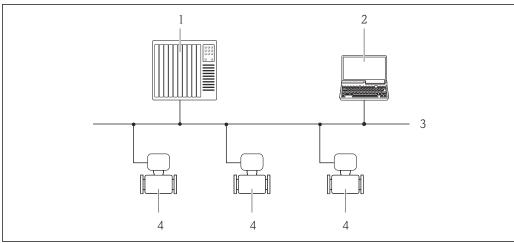

A0020903


■ 27 Options for remote operation via PROFIBUS DP network

- 1 Automation system
- 2 Computer with PROFIBUS network card
- 3 PROFIBUS DP network
- 4 Measuring instrument

## Via EtherNet/IP network

This communication interface is available in device versions with EtherNet/IP.

Star topology

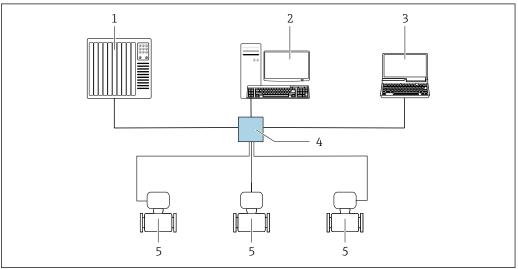

A003207


■ 28 Options for remote operation via Ethernet/IP network: star topology

- 1 Automation system, z. B. "RSLogix" (Rockwell Automation)
- 2 Workstation for measuring instrument operation: with Custom Add-On Profile for "RSLogix 5000" (Rockwell Automation) or with Electronic Data Sheet (EDS)
- 3 Computer with web browser for accessing the integrated web server or computer with operating tool (e.g. FieldCare, DeviceCare) with COM DTM "CDI Communication TCP/IP"
- 4 Standard Ethernet switch, e.g. Scalance X204 (Siemens)
- 5 Measuring instrument

## Via PROFINET network

This communication interface is available in device versions with PROFINET.

## Star topology

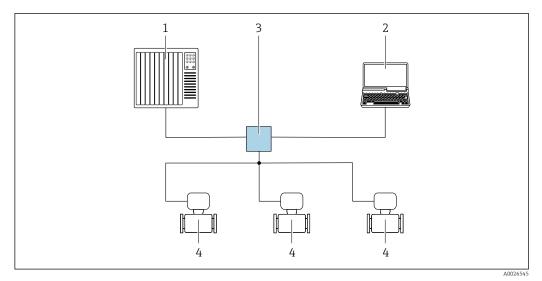

**2**9 **2**9 Options for remote operation via PROFINET network: star topology

- Automation system, e.g. Simatic S7 (Siemens)
- Computer with web browser for accessing integrated web server or computer with operating tool (e.g. 2 FieldCare, DeviceCare, SIMATIC PDM) with COM DTM "CDI Communication TCP/IP"
- Standard Ethernet switch, e.g. Scalance X204 (Siemens)
- Measuring instrument


## Service interface

## Via service interface (CDI-RJ45)

This communication interface is present in the following device version:


- Order code for "Output", option **B**: 4-20 mA HART, pulse/frequency/switch output
- Order code for "Output", option **L**: PROFIBUS DP
- Order code for "Output", option N: Ethernet/IP
- Order code for "Output", option R: PROFINET

## **HART**

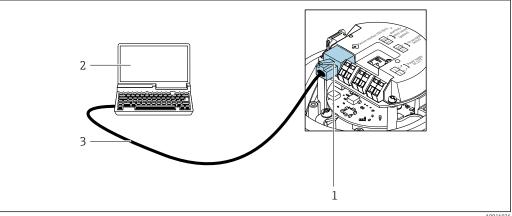

- **■** 30 Connection for the order code for "Output", option B: 4-20 mA HART, pulse/frequency/switch output
- Service interface (CDI-RJ45) of the measuring instrument with access to the integrated web server
- 2 Computer with web browser for accessing the integrated web server or with FieldCare operating tool with COM DTM "CDI Communication TCP/IP"
- Standard Ethernet connecting cable with RJ45 plug

## PROFIBUS DP

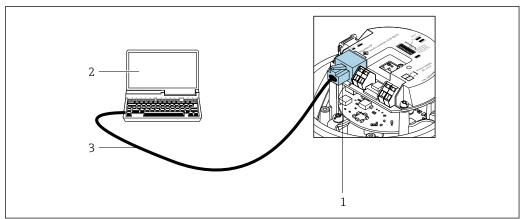


A0021270

## ■ 31 Connection for order code for "Output", option L: PROFIBUS DP

- 1 Service interface (CDI-RJ45) of the measuring instrument with access to the integrated web server
- 2 Computer with web browser for accessing the integrated web server or with FieldCare operating tool with COM DTM "CDI Communication TCP/IP"
- 3 Standard Ethernet connecting cable with RJ45 plug

## EtherNet/IP

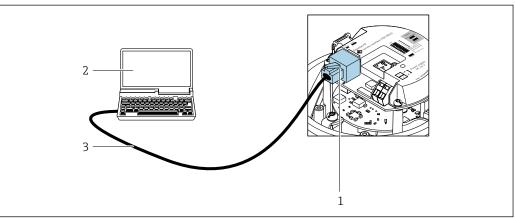


A0016940

## ■ 32 Connection for order code for "Output", option N: EtherNet/IP

- 1 Service interface (CDI-RJ45) and EtherNet/IP interface of the measuring instrument with access to the integrated web server
- 2 Computer with web browser for accessing the integrated web server or with FieldCare operating tool with COM DTM "CDI Communication TCP/IP"
- 3 Standard Ethernet connecting cable with RJ45 plug

## **PROFINET**

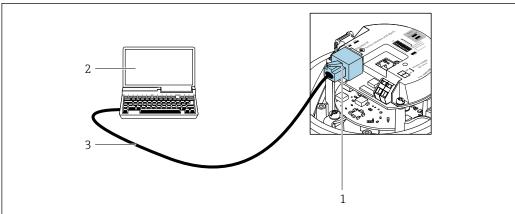

10016060


■ 33 Connection for order code for "Output", option R: PROFINET

- 1 Service interface (CDI-RJ45) and PROFINET interface of the measuring instrument with access to the integrated web server
- 2 Computer with web browser for accessing the integrated web server or with FieldCare operating tool with COM DTM "CDI Communication TCP/IP"
- 3 Standard Ethernet connecting cable with RJ45 plug

## Via service interface (CDI)

This communication interface is present in the following device version: Order code for "Output", option  $\mathbf{M}$ : Modbus RS485

#### Modbus RS485

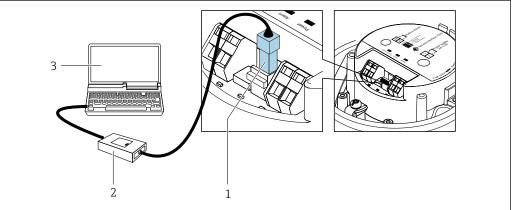

Δ00302

- 1 Service interface (CDI) of the measuring instrument
- 2 Commubox FXA291
- 3 Computer with FieldCare operating tool with COM DTM "CDI Communication FXA291"

## Certificates and approvals

Current certificates and approvals for the product are available at <a href="https://www.endress.com">www.endress.com</a> on the relevant product page:

- 1. Select the product using the filters and search field.
- 2. Open the product page.
- 3. Select **Downloads**.

## CE mark

The device meets the legal requirements of the applicable EU Directives. These are listed in the corresponding EU Declaration of Conformity along with the standards applied.

Endress+Hauser confirms successful testing of the device by affixing to it the CE mark.

## **UKCA** marking

The device meets the legal requirements of the applicable UK regulations (Statutory Instruments). These are listed in the UKCA Declaration of Conformity along with the designated standards. By selecting the order option for UKCA marking, Endress+Hauser confirms a successful evaluation and testing of the device by affixing the UKCA mark.

Contact address Endress+Hauser UK:

Endress+Hauser Ltd.

Floats Road

Manchester M23 9NF

United Kingdom

www.uk.endress.com

## RCM marking

The measuring system meets the EMC requirements of the "Australian Communications and Media Authority (ACMA)".

## Ex approval

The measuring device is certified for use in hazardous areas and the relevant safety instructions are provided in the separate "Safety Instructions" (XA) document. Reference is made to this document on the nameplate.



The separate Ex documentation (XA) containing all the relevant explosion protection data is available from your Endress+Hauser sales center.

## Hygienic compatibility

- 3-A approval
  - Only measuring instruments with the order code for "Additional approval", option LP "3A" have 3-A approval.
  - The 3-A approval refers to the measuring instrument.
  - When installing the measuring instrument, ensure that no liquid can accumulate on the outside
    of the measuring instrument.
    - A remote display module must be installed in accordance with the 3-A Standard.
  - Accessories (e.g. heating jacket, weather protection cover, wall holder unit) must be installed in accordance with the 3-A Standard.
    - Each accessory can be cleaned. Disassembly may be necessary under certain circumstances.
- EHEDG-tested (Type EL Class I)

Only devices with the order code for "Additional approval", option LT "EHEDG" have been tested and meet the requirements of the EHEDG.

To meet the requirements for EHEDG certification, the device must be used with process connections in accordance with the EHEDG position paper entitled "Easy cleanable Pipe couplings and Process connections" (www.ehedg.org).

To meet the requirements for EHEDG certification, the orientation of the device must ensure drainability.

Test criteria for cleanability according to EHEDG is a flow velocity of 1.5 m/s in the process line. This speed must be ensured for EHEDG-compliant cleaning.

- FDA CFR 21
- Food Contact Materials Regulation (EC) 1935/2004
- Food Contact Materials Regulation GB 4806
- The requirements of the Food Contact Material regulations must be observed when selecting the material versions.



Observe special installation instructions

## Pharmaceutical compatibility

- FDA 21 CFR 177
- USP <87>
- USP <88> Class VI 121 °C
- TSE/BSE Certificate of Suitability
- cGMP

Devices with the order code for "Test, certificate", option JG "Conformity with cGMP-derived requirements, declaration" comply with the requirements of cGMP with regard to the surfaces of parts in contact with the medium, design, FDA 21 CFR material conformity, USP Class VI tests and TSE/BSE conformity.

A serial number-specific declaration is generated.

#### HART certification

#### HART interface

The measuring device is certified and registered by the FieldComm Group. The measuring system meets all the requirements of the following specifications:

- Certified according to HART 7
- The device can also be operated with certified devices of other manufacturers (interoperability)

## **Certification PROFIBUS**

## **PROFIBUS** interface

The measuring device is certified and registered by the PNO (PROFIBUS Nutzerorganisation e.V./ PROFIBUS User Organization). The measuring system meets all the requirements of the following specifications:

- Certified according to PA Profile 3.02
- The device can also be operated with certified devices of other manufacturers (interoperability)

#### Certification PROFINET

#### **PROFINET** interface

The measuring instrument is certified and registered by the PROFIBUS Nutzerorganisation e.V. (PNO). The measuring system meets all the requirements of the following specifications:

- Certified according to:
  - Test specification for PROFINET devices
  - PROFINET Netload Class 2 100 Mbit/s
- The device can also be operated with certified devices of other manufacturers (interoperability).
- The device supports PROFINET S2 system redundancy.

## EtherNet/IP certification

The measuring device is certified and registered by the ODVA (Open Device Vendor Association). The measuring system meets all the requirements of the following specifications:

- Certified in accordance with the ODVA Conformance Test
- EtherNet/IP Performance Test
- EtherNet/IP PlugFest compliance
- The device can also be operated with certified devices of other manufacturers (interoperability)

## Modbus RS485 certification

The measuring instrument meets all the requirements of the MODBUS RS485 conformity test and has the "MODBUS RS485 Conformance Test Policy, Version 2.0". The measuring instrument has successfully passed all the test procedures carried out.

## Pressure Equipment Directive

The measuring instruments can be ordered with or without PED or PESR. If a device with PED or PESR is required, this must be ordered explicitly. For devices with nominal diameters less than or equal to DN 25 (NPS 1"), this is neither possible nor necessary. A UK order option must be selected for PESR under the order code for "Approvals".

- With the marking
  - a) PED/G1/x (x = category) or
  - b) PESR/G1/x (x = category)
  - on the sensor nameplate, Endress+Hauser confirms compliance with the "Essential Safety Requirements"  $\,$
  - a) specified in Annex I of the Pressure Equipment Directive 2014/68/EU or
  - b) Schedule 2 of Statutory Instruments 2016 No. 1105.
- Devices bearing this marking (PED or PESR) are suitable for the following types of medium:
  - Media in Group 1 and 2 with a vapor pressure greater than, or smaller and equal to 0.5 bar (7.3 psi)
  - Unstable gases
- Devices not bearing this marking (without PED or PESR) are designed and manufactured according
  to sound engineering practice. They meet the requirements of
  - a) Art. 4, Section 3 of the Pressure Equipment Directive 2014/68/EU or
  - b) Part 1, Section 8 of Statutory Instruments 2016 No. 1105.
  - The scope of application is indicated
  - a) in diagrams 6 to 9 in Annex II of the Pressure Equipment Directive 2014/68/EU or
  - b) in Schedule 3, Section 2 of Statutory Instruments 2016 No. 1105.

## Additional certification

## CRN approval

Some device versions have CRN approval. A CRN-approved process connection with a CSA approval must be ordered for a CRN-approved device.

## Tests and certificates

- EN10204-3.1 material certificate, wetted parts and sensor housing (order code for "Test, certificate", option JA)
- Pressure test, internal process, test report (order code for "Test, certificate", option JB)
- Surface roughness test ISO4287/Ra, (wetted parts), test report (option JE)
- Compliance with requirements derived from cGMP, Declaration (option JG)

# External standards and quidelines

■ EN 60529

Degrees of protection provided by enclosure (IP code)

■ IEC/EN 60068-2-6

Environmental influences: Test procedure - Test Fc: vibrate (sinusoidal).

■ IEC/EN 60068-2-31

Environmental influences: Test procedure - Test Ec: shocks due to rough handling, primarily for devices.

■ EN 61010-1

Safety requirements for electrical equipment for measurement, control and laboratory use - general requirements

■ GB 30439.5

Safety requirements for industrial automation products - Part 5: Flowmeter safety requirements

■ EN 61326-1/-2-3

EMC requirements for electrical equipment for measurement, control and laboratory use

■ NAMUR NE 21

Electromagnetic compatibility (EMC) of industrial process and laboratory control equipment

NAMUR NE 32

Data retention in the event of a power failure in field and control instruments with microprocessors

NAMUR NE 43

Standardization of the signal level for the breakdown information of digital transmitters with analog output signal.

■ NAMUR NE 53

Software of field devices and signal-processing devices with digital electronics

NAMUR NE 80

The application of the pressure equipment directive to process control devices

■ NAMUR NE 105

Specifications for integrating fieldbus devices in engineering tools for field devices

■ NAMUR NE 107

Self-monitoring and diagnostics of field devices

NAMUR NE 131

Requirements for field devices for standard applications

NAMUR NE 132

Coriolis mass meter

■ ETSI EN 300 328

Guidelines for  $2.4\ \text{GHz}$  radio components.

■ EN 301489

Electromagnetic compatibility and radio spectrum matters (ERM).

## Ordering information

Detailed ordering information is available from your nearest sales organization www.addresses.endress.com or in the Product Configurator at www.endress.com:

- 1. Select the product using the filters and search field.
- 2. Open the product page.
- 3. Select **Configuration**.

## Product Configurator - the tool for individual product configuration

- Up-to-the-minute configuration data
- Depending on the device: direct input of information specific to the measuring point, such as the measuring range or operating language
- Automatic verification of exclusion criteria
- Automatic creation of the order code and its breakdown in PDF or Excel output format
- Ability to order directly in the Endress+Hauser Online Shop

## Application packages

Many different application packages are available to enhance the functionality of the device. Such packages might be needed to address safety aspects or specific application requirements.

The application packages can be ordered with the device or subsequently from Endress+Hauser. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: <a href="https://www.endress.com">www.endress.com</a>.



#### **Heartbeat Technology**

Order code for "Application package", option EB "Heartbeat Verification + Monitoring"

#### Heartbeat Verification

Meets the requirement for traceable verification in accordance with DIN ISO 9001:2015 Clause 7.6 a) "Control of monitoring and measuring equipment".

- Functional testing in the installed state without interrupting the process.
- Traceable verification results on request, including a report.
- Simple testing process via local operation or other operating interfaces.
- Clear measuring point assessment (pass/fail) with high total test coverage within the framework
  of manufacturer specifications.
- Extension of calibration intervals according to operator's risk evaluation.

#### **Heartbeat Monitoring**

Continuously supplies data, which are characteristic of the measuring principle, to an external condition monitoring system for the purpose of preventive maintenance or process analysis. These data enable the operator to:

- Draw conclusions using these data and other information about the impact the process influences (e.g. corrosion, abrasion, deposit buildup etc.) have on measuring performance over time
- Schedule servicing in time.
- Monitor the process or product quality, e.g. gas pockets.



#### Concentration measurement

Order code for "Application package", option ED "Concentration"

Calculation and outputting of fluid concentrations.

The measured density is converted to the concentration of a substance of a binary mixture using the "Concentration" application package:

Concentration calculation from user-defined tables.

The measured values are output via the digital and analog outputs of the measuring instrument.



For detailed information, see the Special Documentation for the device.

## Viscosity

Order code for "Application package", option EG "Viscosity"

## In-line and real-time viscosity measurement

Promass I with the "Viscosity" application package also measures the real-time viscosity of the fluid directly in the process, in addition to measuring the mass flow/volume flow/ temperature and density.

The following viscosity measurements are performed on liquids:

- Dynamic viscosity
- Kinematic viscosity
- Temperature-compensated viscosity (kinematic and dynamic) in relation to the reference temperature

Viscosity measurement can be used for Newtonian and non-Newtonian applications and supplies accurate measured data irrespective of the flow, even under difficult conditions.



For detailed information, see the Special Documentation for the device.

## Special density


Order code for "Application package", option EE "Special density"

Many applications use density as a key measured value for monitoring quality or controlling processes. The device measures the density of the fluid as standard and makes this value available to the control system.

The "Special Density" application package offers high-precision density measurement over a wide density and temperature range particularly for applications subject to varying process conditions.

The following information can be found in the calibration certificate supplied:

- Density performance in air
- Density performance in liquids with different density
- Density performance in water with different temperatures

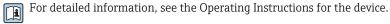

## Accessories

Various accessories, which can be ordered with the device or subsequently from Endress+Hauser, are available for the device. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: <a href="https://www.endress.com">www.endress.com</a>.

## Device-specific accessories

## For the sensor

Accessories	Description
Heating jacket	Is used to stabilize the temperature of the fluids in the sensor. Water, water vapor and other non-corrosive liquids are permitted for use as fluids.
	If using oil as a heating medium, please consult with Endress+Hauser.
	If ordered together with the measuring device:
	Order code for "Accessory enclosed"
	<ul><li>Option RB "Heating jacket, G 1/2" female thread"</li></ul>
	<ul><li>Option RC "Heating jacket, G 3/4" female thread"</li></ul>
	<ul> <li>Option RD "Heating jacket, NPT 1/2" female thread"</li> </ul>
	<ul><li>Option RE "Heating jacket, NPT 3/4" female thread"</li></ul>
	If ordered subsequently:
	Use the order code with the product root DK8003.
	Special Documentation SD02158D

# Communication-specific accessories

Accessories	Description	
Commubox FXA195 HART	For intrinsically safe HART communication with FieldCare via the USB interface.  Technical Information TI00404F	
Commubox FXA291	Connects Endress+Hauser field devices with a CDI interface (= Endress+Hauser Common Data Interface) and the USB port of a computer or laptop.  Technical Information TI00405C	
HART loop converter HMX50	Is used to evaluate and convert dynamic HART process variables to analog current signals or limit values.  Technical Information TI00429F Operating Instructions BA00371F	
Wireless HART adapter SWA70	Is used for the wireless connection of field devices. The WirelessHART adapter can be easily integrated into field devices and existing infrastructures, offers data protection and transmission safety and can be operated in parallel with other wireless networks with minimum cabling complexity.  Operating Instructions BA00061S	

Fieldgate FXA42	Transmission of the measured values of connected 4 to 20 mA analog measuring instruments, as well as digital measuring instruments
	<ul> <li>Technical Information TI01297S</li> <li>Operating Instructions BA01778S</li> <li>Product page: www.endress.com/fxa42</li> </ul>
Field Xpert SMT50	The Field Xpert SMT50 tablet PC for device configuration enables mobile plant asset management in non-hazardous areas. It is suitable for commissioning and maintenance staff to manage field instruments with a digital communication interface and to record progress.  This tablet PC is designed as an all-in-one solution with a preinstalled driver library and is an easy-to-use, touch-sensitive tool which can be used to manage field instruments throughout their entire life cycle.
	<ul> <li>Technical Information TI01555S</li> <li>Operating Instructions BA02053S</li> <li>Product page: www.endress.com/smt50</li> </ul>
Field Xpert SMT70	The Field Xpert SMT70 tablet PC for device configuration enables mobile plant asset management in hazardous and non-hazardous areas. It is suitable for commissioning and maintenance staff to manage field instruments with a digital communication interface and to record progress.  This tablet PC is designed as an all-in-one solution with a preinstalled driver library and is an easy-to-use, touch-sensitive tool which can be used to manage field instruments throughout their entire life cycle.
	<ul> <li>Technical Information TI01342S</li> <li>Operating Instructions BA01709S</li> <li>Product page: www.endress.com/smt70</li> </ul>
Field Xpert SMT77	The Field Xpert SMT77 tablet PC for device configuration enables mobile plant asset management in areas categorized as Ex Zone 1.
	<ul> <li>Technical Information TI01418S</li> <li>Operating Instructions BA01923S</li> <li>Product page: www.endress.com/smt77</li> </ul>

## Service-specific accessories

Accessory	Description
Applicator	Software for selecting and sizing Endress+Hauser measuring instruments:  Choice of measuring instruments for industrial requirements  Calculation of all the necessary data for identifying the optimum flowmeter: e.g. nominal diameter, pressure loss, flow velocity and measurement accuracy.  Graphic display of the calculation results  Determining the partial order code. Administration, documentation and access to all project-related data and parameters over the entire life cycle of a project.  Applicator is available: Via the Internet: https://portal.endress.com/webapp/applicator
Netilion	lloT ecosystem: Unlock knowledge With the Netilion IIoT ecosystem, Endress+Hauser allows you to optimize your plant performance, digitize workflows, share knowledge, and enhance collaboration.  Based on decades of experience in process automation, Endress+Hauser offers the process industry an IIoT ecosystem that enables you to gain useful insights from data. These insights can be used to optimize processes, leading to increased plant availability, efficiency, and reliability - ultimately resulting in a more profitable plant.  www.netilion.endress.com
FieldCare	FDT-based plant asset management tool from Endress+Hauser. It can configure all intelligent field units in your system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition.  Operating Instructions BA00027S and BA00059S
DeviceCare	Tool to connect and configure Endress+Hauser field devices.  • Technical Information: TI01134S • Innovation brochure: IN01047S

System	components
--------	------------

Accessories	Description
Memograph M graphic data manager	The Memograph M graphic data manager provides information on all the relevant measured variables. Measured values are recorded correctly, limit values are monitored and measuring points analyzed. The data are stored in the 256 MB internal memory and also on a SD card or USB stick.
	<ul><li>Technical Information TI00133R</li><li>Operating Instructions BA00247R</li></ul>
iTEMP	The temperature transmitters can be used in all applications and are suitable for the measurement of gases, steam and liquids. They can be used to read in the medium temperature.
	"Fields of Activity" document FA00006T

## **Documentation**



- For an overview of the scope of the associated Technical Documentation, refer to the following:
  - Device Viewer (www.endress.com/deviceviewer): Enter the serial number from the
  - Endress+Hauser Operations app: Enter serial number from nameplate or scan matrix code on nameplate.

## Standard documentation



Supplementary information on the semi-standard options is available in the relevant Special Documentation in the TSP database.

## **Brief Operating Instructions**

*Brief Operating Instructions for the sensor* 

Measuring instrument	Documentation code
Proline Promass I	KA01284D

## Brief Operating Instructions for the transmitter

	Documentation code				
Measuring instrument	HART	PROFIBUS DP	Modbus RS485	EtherNet/IP	PROFINET
Proline Promass 100	KA01334D	KA01333D	KA01335D	KA01332D	KA01336D

## **Operating Instructions**

	Documentation code				
Measuring device	HART	PROFIBUS DP	Modbus RS485	EtherNet/IP	PROFINET
Promass I 100	BA01190D	BA01251D	BA01058D	BA01066D	BA01429D

## **Description of Device Parameters**

Measuring	Documentation code				
instrument	HART	PROFIBUS DP	Modbus RS485	EtherNet/IP	PROFINET
Promass 100	GP01033D	GP01034D	GP01035D	GP01036D	GP01037D

## Supplementary devicedependent documentation

## **Safety Instructions**

Content	Documentation code
ATEX/IECEx Ex i	XA00159D
ATEX/IECEx Ex nA	XA01029D
cCSAus IS	XA00160D
INMETRO Ex i	XA01219D
INMETRO Ex nA	XA01220D
NEPSI Ex i	XA01249D
NEPSI Ex nA	XA01262D

## **Special Documentation**

Contents	Documentation code
Information on the Pressure Equipment Directive	SD01614D
Concentration measurement Ethernet/IP, HART, Modbus RS485, PROFIBUS DP	SD01152D
Concentration measurement PROFINET	SD01503D
Viscosity measurement	SD01151D
Heartbeat Technology EtherNet/IP, HART, Modbus RS485, PROFIBUS DP	SD01153D
Heartbeat Technology PROFINET	SD01493D
Web server HART	SD01820D
Web server PROFIBUS DP	SD01821D
Web server EtherNet/IP	SD01822D
Web server PROFINET	SD01823D

## **Installation Instructions**

Contents	Note
Installation instructions for spare part sets and accessories	The corresponding documentation code is listed with the relevant accessory. $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $

## Registered trademarks

## **HART®**

Registered trademark of the FieldComm Group, Austin, Texas USA

#### **PROFIBUS**<sup>®</sup>

Registered trademark of the PROFIBUS Nutzerorganisation e.V. (PROFIBUS User Organization), Karlsruhe, Germany

## Modbus®

Registered trademark of SCHNEIDER AUTOMATION, INC.

## Ethernet/IP™

Trademark of ODVA, Inc.

## **PROFINET®**

Registered trademark of the PROFIBUS Nutzerorganisation e.V. (PROFIBUS User Organization), Karlsruhe, Germany

## TRI-CLAMP®

Registered trademark of Ladish & Co., Inc., Kenosha, USA



www.addresses.endress.com