

Technical Information

Liquiline CM44P

Universal four-wire multichannel transmitter for process photometers and Memosens sensors



Field device or cabinet device

Applications

- Food and beverages
- Life sciences
- Water and wastewater
- Chemical industry
- Power plants
- Other industrial applications

Your benefits

- Highly flexible:
 - Able to connect up to 2 process photometers
 - Mathematics functions calculate new measured values
 - Digital fieldbuses (HART, PROFIBUS, Modbus, Ethernet/IP, PROFINET) and integrated web server
 - Choice of cleaning function, controller and alarm relay
- Optional digital or analog inputs/outputs
- Maximum process safety thanks to standardized operating concept across all devices in the Liquiline, sampler and analyzer platform
- Fast commissioning thanks to:
 - Memosens: lab-calibrated sensors & hot plug-and-play
 - Preconfigured Liquiline transmitters
 - Easy extension and adaptation
- Minimum inventory:
 - Cross-platform, modular concept (e.g. identical modules irrespective of parameters)
 - Integration into FieldCare and W@M facilitates effective asset management

Table of contents

Function and system design	4	Current outputs, active	21
Measuring system with photometer	4	Span	21
Measuring system with optional Memosens sensors	5	Signal characterization	21
Application example	6	Electrical specification	21
		Cable specification	21
Equipment architecture	7	Relay outputs	21
Slot and port assignment	7	Electrical specification	21
Order of the modules	7	Cable specification	22
Basic rule for hardware upgrades	8		
Determining the hardware delivery status	8	Protocol-specific data	22
Terminal diagram	8	HART	22
Device configuration using the example of a CM44P-**	9	PROFIBUS DP	23
Block circuit diagram of CM44P-**	11	Modbus RS485	23
		Modbus TCP	23
Communication and data processing	12	Ethernet/IP	23
		PROFINET	24
Reliability	12	Web server	25
Dependability	12		
Maintainability	14	Power supply	25
Safety	17	Supply voltage	25
		Power consumption	25
Input	18	Fuse	25
Measured variables	18	Overvoltage protection	26
Measuring ranges	18	Cable entries (field device only)	26
Types of input	18	Cable specification	26
Input signal	18	Electrical connection	27
Cable specification	18	Connecting optional modules	29
		Protective ground connection	32
Digital inputs, passive	18	Sensor connection	32
Electrical specification	18		
Span	19	Performance characteristics	36
Nominal input current	19	Response time	36
PFM function	19	Reference temperature	36
Test voltage	19	Measurement error for sensor inputs	36
Cable specification	19	Measurement error for current inputs and outputs	36
		Frequency tolerance of digital inputs and outputs	36
Current input, passive	19	Resolution of current inputs and outputs	36
Span	19	Repeatability	37
Signal characterization	19		
Internal resistance	19	Installation	37
Test voltage	19	Installation requirements	37
		Installation	37
Output	19	Mounting on DIN rail as per IEC 60715	39
Output signal	19	Wall mounting	40
Signal on alarm	20	Mounting the external display	41
Load	20		
Linearization/transmission behavior	20	Environment	41
		Ambient temperature	41
Digital outputs, passive	21	Storage temperature	41
Electrical specification	21	Relative humidity	41
External power supply	21	Degree of protection	41
PFM function	21	Climate class (cabinet device only)	42
Auxiliary voltage	21	Vibration resistance	42
Test voltage	21	Electromagnetic compatibility	42
Cable specification	21	Electrical safety	42
		Pollution degree	42

Pressure compensation to environment (field device only) . 42

Mechanical construction 43
Dimensions 43
Weight 46
Materials 47

Operability 47
display 47
Operation concept 47
Local operation 48
Remote operation 48
Language packages 48

Certificates and approvals 49

Ordering information 49
Product page 49
Product Configurator 49
Scope of delivery 49


Accessories 49
Device-specific accessories 50
Communication-specific accessory 55
Service-specific accessories 56
System components 57
Other accessories 58

Function and system design

Measuring system with photometer

An optical measuring system comprises:

- Transmitter, e. g. Liquiline CM44P
- Sensor (photometer), e. g. OUSAF11/12/21/22/44/46, OUSTF10 or OUSBT66
- Cable set, e. g. CUK80
- The correct assembly for the sensor, e. g. OUA260
- The following are optional:
 - Post retainer
 - Protective cover
 - Memosens sensors (→ 5)

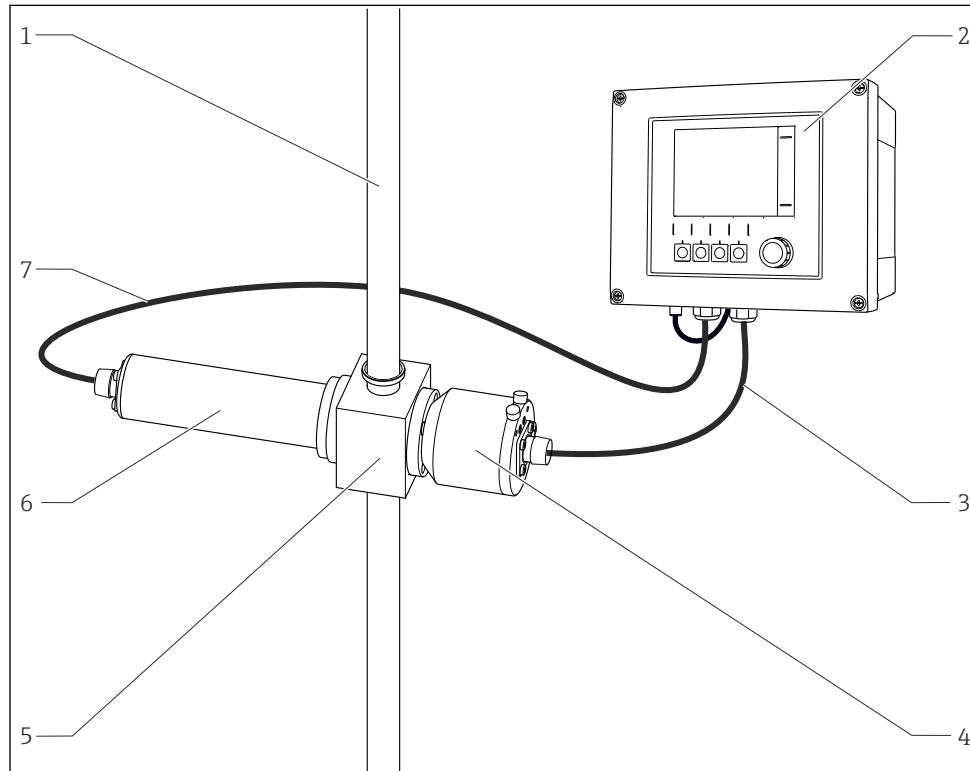

 1 Example of a measuring system with a photometer sensor

- | | |
|---------------------|-------------------------------|
| 1 Pipe | 5 Flow assembly OUA260 |
| 2 Transmitter CM44P | 6 Sensor: light source (lamp) |
| 3 CUK80 cable set | 7 CUK80 cable set |
| 4 Sensor: detector | |

 You can combine your measuring point with a variety of Memosens sensors and suitable assemblies (→ 5). For more information, visit www.endress.com/cm44p

Measuring system with optional Memosens sensors

The overview shows examples of measuring systems. Other sensors and assemblies can be ordered for conditions specific to your application (www.endress.com/products).

Measuring point

A measuring system comprises:

- Liquiline transmitter
- Optional display (for cabinet device)
- Sensors with Memosens technology
- Assemblies to suit the sensors used
- Post retainer or railing (optional, for field device)
- Weather protection cover (optional, for field device)


pH value or ORP

pH measurement in in the pharmaceutical industry

- Cleanfit CPA871 retractable assembly
- Memosens CPS11E sensor
- Measuring cable CYK10

ORP in drinking water

- Dipfit CYA112 immersion assembly
- Memosens CPS12E sensor
- Measuring cable CYK10

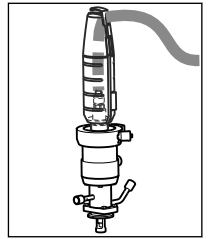


Conductivity

Inductive conductivity

- measurement in Food industry
- Indumax CLS54D sensor
- Sensor fixed cable

Conductive conductivity measurement in power plant cooling water


- Memosens CLS15E sensor
- Measuring cable CYK10

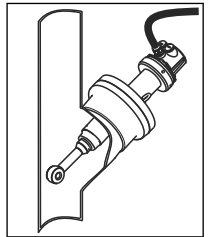

Oxygen

Oxygen in aeration basins

- Dipfit CYA112 immersion assembly
- CYH112 holder
- Sensor
 - COS61D (optical) with fixed cable
 - COS51E (amperometric), CYK10 cable

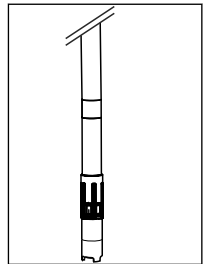


Nitrate and SAC

Nitrate in wastewater

- Sensor CAS51D-**A2 with fixed cable
- Dipfit CYA112 immersion assembly
- CYH112 holder

SAC in the wastewater treatment outlet

- Sensor CAS51D-**2C2 with fixed cable
- Dipfit CYA112 immersion assembly
- CYH112 holder

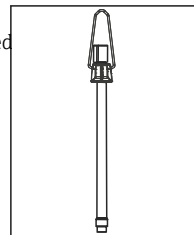


Turbidity and interface

Turbidity in industrial water

- Turbimax CUS51D sensor with fixed cable
- Flowfit CUA250 assembly
- CUR3 spray head (optional)

Interface in the primary clarifier


- Turbimax CUS71D sensor
- CYA112 assembly
- CYH112 holder

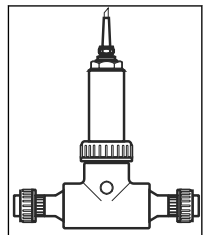

Disinfection

Free available chlorine (and pH) in drinking water


- CCS51D sensor
- Memosens CPS11E sensor
- Measuring cable CYK10
- CYA27 flow assembly

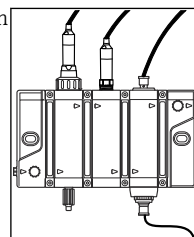

Ion-selective electrodes

Ammonium and nitrate measurement in the aeration basin

- CAS40D sensor with fixed cable
- CYH112 holder

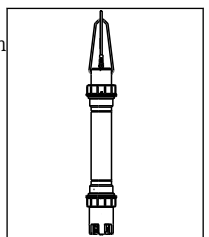


If mounting outdoors, always use the weather protection cover (see "Accessories") to protect the transmitter against weather conditions.

Application example

Measuring point in chromatography monitoring

Transmitter CM44P-AADINP1M22A1FG15BAEA+PK (cabinet device) with:

- 1 photometer input, 2 Memosens inputs, PROFIBUS, 2 analog outputs and 2 digital inputs
- Optional display
- Photometer OUSAF44 (item 4)
- Flow assembly OUA260-AA1C05B1A3A with 2 mm path length and POPL, Triclamp 1/2", quartz window, item 3 (www.endress.com/oua260)
- Flow assembly CYA680 with 2x Pg 13.5 process connection for Memosens sensors, item 1
- pH and temperature with CPS71D, item 2 (www.endress.com/cps71d)
- Conductivity, conductive four-pin sensor CLS82D, item 5 (www.endress.com/cls82d)

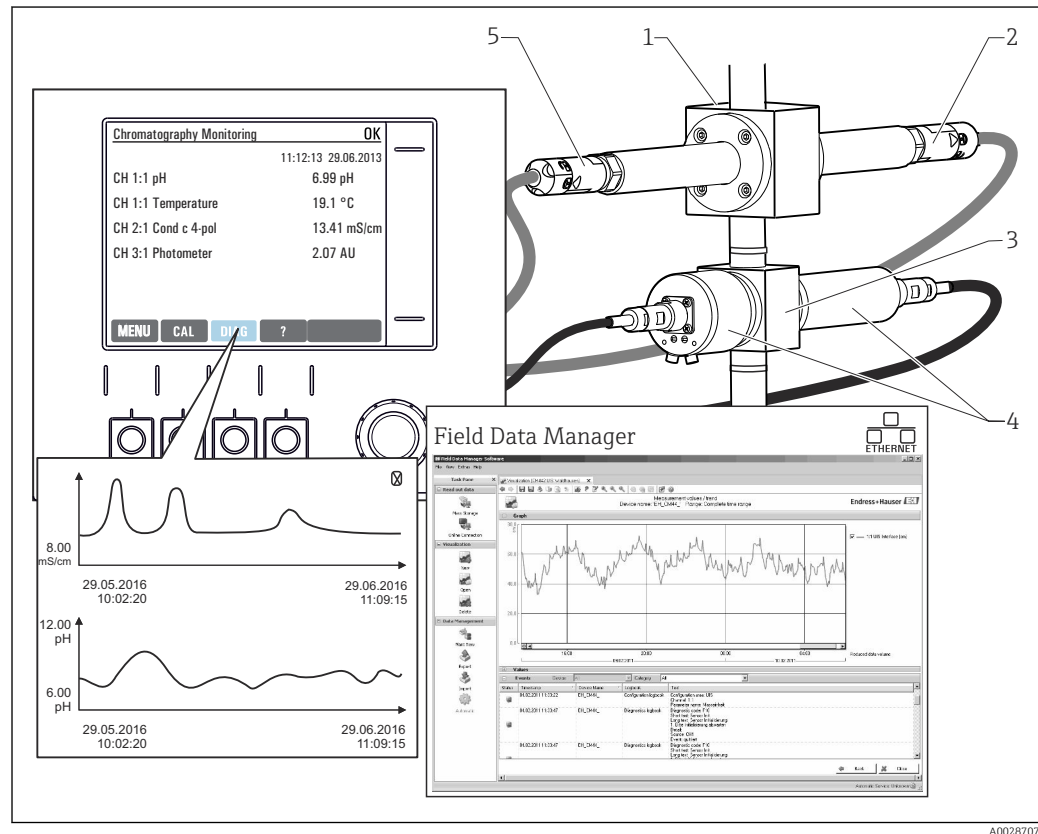

A0028707


2 Measuring point in chromatography monitoring

Data retention

- Storage of all measured values, incl. values of external sources, in the non-volatile memory (data logbook)
- Data called up on site via user-defined measuring menu and load curve display of the data logbook
- Transmission of data by ethernet, CDI interface or SD card and storage in a tamper-proof database (Field Data Manager)
- Data export to csv file (for Microsoft Excel)

Equipment architecture

Slot and port assignment

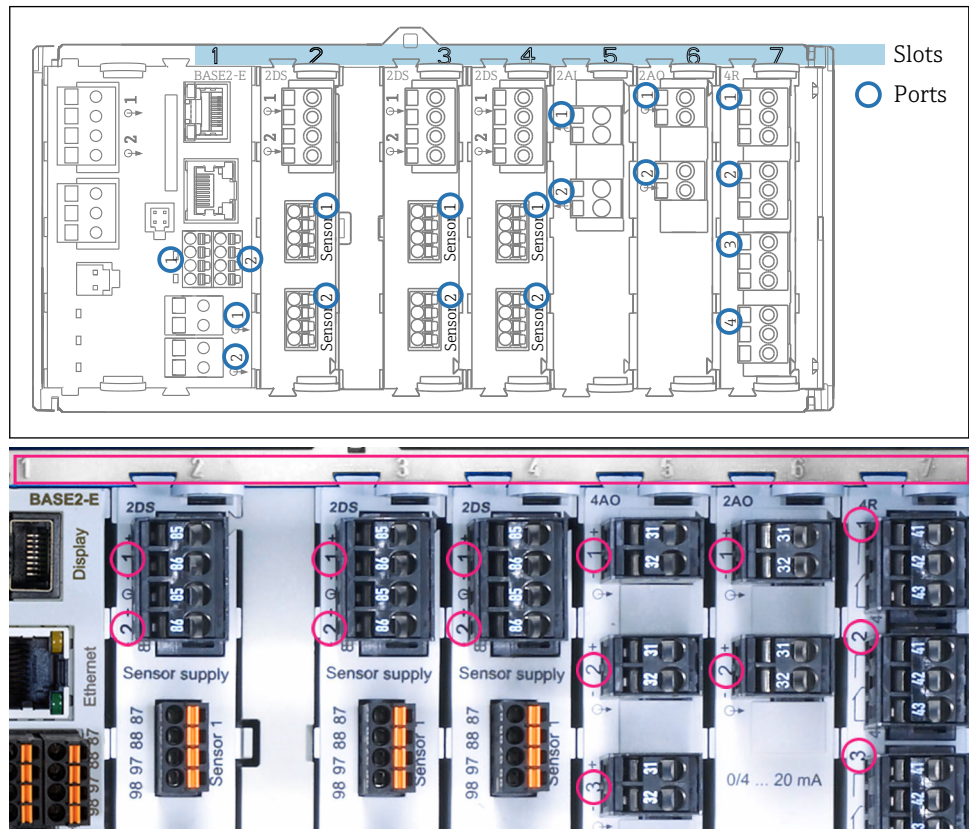

3 Slot and port assignment of the hardware modules

Outlet 1			OK
CH1:	1:1 pH Glass	ATC 6.95 pH	Port Slot
CH2:	1:2 TU/TS	500.0 g/l	
CH3:	5:1 SAC	500.0 1/m	
CH4:	5:2 Cond i	ATC 2.62 mS/cm	
CH5:	6:1 Chlorine	28.33 mg/l	
CH6:	6:2 Redox	± 51 mV	
CH7:	7:1 Oxygen (am...	32.86 mg/l	
CH8:	7:2 Cond c	ATC 131.1 pS/cm	
MENU CAL DIAG HOLD			

4 Slot and port assignment on the display

- Inputs are assigned to measuring channels in the ascending order of the slots and ports. Adjacent example: "CH1: 1:1 pH glass" means: Channel 1 (CH1) is slot 1 (basic module) : Port 1 (input 1), pH glass sensor
- Outputs and relays are named according to their function, e.g. "current output", and are displayed in ascending order with the slot and port numbers

Order of the modules

Depending on the version ordered, the device is supplied with a number of electronic modules, which are assigned in a specific sequence in ascending order to slots 0 to 7. If you do not have a particular module, the next moves up automatically:

- The basic module (which is always present) always occupies slots 0 and 1
- Fieldbus module 485DP or 485MB
- Photometer module PEM
- Memosens input module 2DS (DS = digital sensor)
- Extension module for digital inputs and outputs DIO (DIO = digital input and output)
- Current input module 2AI (AI = analog input)
- Current output modules 4AO or 2AO (AO = analog output)
- Relay modules AOR, 4R or 2R (AOR = analog output + relay, R = relay)

With intrinsically safe sensor communication module 2DS Ex-i:

- CM442/CM442R: always in slot 2
- CM444/CM444R: always in slot 7 (two channel) and slot 6 (four channel)
- CM448/CM448: slot 7, 6, 5

i Modules with 4 ports are connected before modules of the same type with 2 ports.

Basic rule for hardware upgrades



Please note the following if upgrading the device:

- Upgrade only to 1x 4 AO module possible
- A maximum of two "DIO" modules may be used.

Determining the hardware delivery status

You must be aware of the type of modules and the number of them supplied with the device you have ordered to determine the delivery status of your Liquiline.

- Basic module
One basic module in all versions. Always occupies slots 0 and 1.
- Fieldbus module
Optional, and only one fieldbus module is possible.
- Input modules
 - Must be clearly assigned to the number of optional inputs ordered.
 - Examples:
2 current inputs = module 2AI
2 inputs for photometer sensors = module PEM
4 Memosens inputs = 2 inputs with basic module + module 2DS with 2 further inputs
- Current outputs and relays
Various module combinations can exist.
The following table will help you determine which modules your device has, depending on the type and number of outputs.

Current outputs	Relays		
	0	2	4
2	-	1 x 2R	1 x 4R
4	1 x 2AO	1 x AOR	1 x 2AO + 1 x 4R
6	1 x 4AO	1 x 4AO + 1 x 2R	1 x 4AO + 1 x 4R
8	1 x 4AO + 1 x 2AO	1 x 4AO + 1 x 2AO + 1 x 2R	1 x 4AO + 1x 2AO + 1 x 4R

- Sum up the number of modules and sort them according to the specified sequence → 7.
↳ This will give you the slot assignment for your device.

Terminal diagram




The unique terminal name is derived from:

Slot no. : Port no. : Terminal

Example, NO contact of a relay

Device with 2 inputs for digital sensors, 4 current outputs and 4 relays


- Base module BASE2-E (contains 2 sensor inputs, 2 current outputs)
- PEM module (1 photometer sensor)
- 2AO module (2 current outputs)
- 4R module (4 relays)

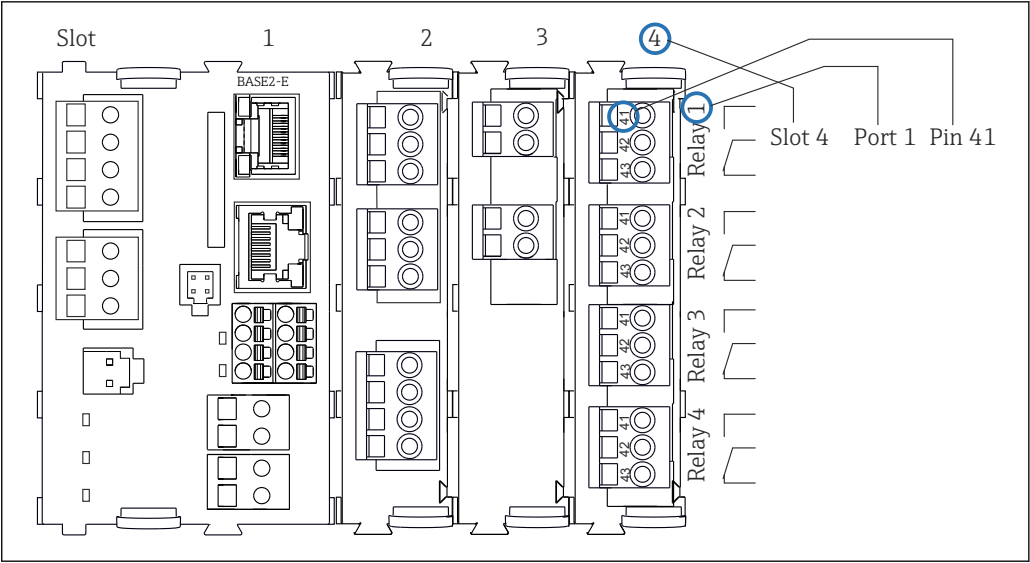

A0039659


5 Creating a terminal diagram using the example of the NO contact (terminal 41) of a relay

Device configuration using
the example of a CM44P-**

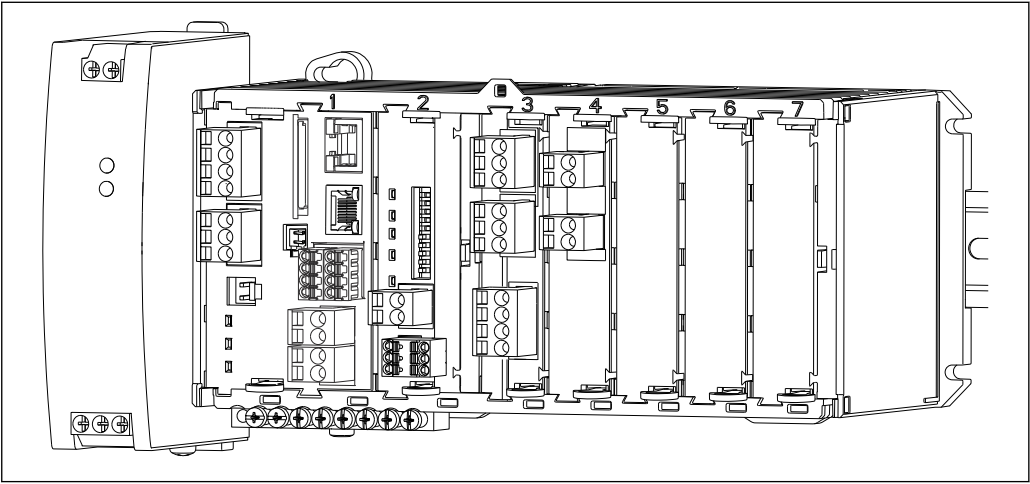

Ordered basic device (example)	■ CM44P-**DINP1M22A1FA* (cabinet device) ■ Functionality: ■ 1 x photometer (module PEM) ■ 2 x Memosens (BASE2-E module) ■ PROFIBUS communication (module 485DP) ■ 2 current outputs without HART (on BASE2-E module) ■ 2 current inputs (module AI) 3 slots are still free in this example. More or fewer slots can be free in other versions.
Extension options without additional modules	Activation code for Ethernet communication via BASE2: Web server (71449918)
Modification options without additional modules	Communication type changed by entering activation code. This disables the communication type used previously! ■ Ethernet communication via BASE2 ■ PROFINET + web server (71449901) ■ EtherNet/IP + web server (71449914) ■ Modbus TCP + web server (71449915) ■ HART via BASE2 (71128428)
Modification options by replacing existing modules	Change the communication type by replacing module 485DP with module 485MB. This disables the communication type used previously! Module 485MB: Modbus RS485 + web server (Order No. 71575178)
Extension options by using extension modules in free slots 5-7	Only the following is possible for the example above: ■ Module 2R (71125375) or 4R (71125376): 2 or 4 relays ■ Module DIO (71135638): 2 digital inputs and 2 digital outputs If extending to four Memosens channels: ■ Module 2DS (71135631): 2 Memosens inputs ■ Use of the 2 current outputs in the basic module by entering activation code (71140891) Additional inputs or outputs and relays if fieldbus module 485 is removed: ■ Module 2AO (71135632): 2 current outputs ■ Module AOR (71111053): 2 current outputs, 2 relays ■ Module 2R (71125375) or 4R (71125376): 2 or 4 relays  If module 485DP is removed and an Ethernet-based fieldbus is used, a maximum of up to 6 current outputs can be operated in addition. Only two current outputs are possible with module 485DP.
Basic rule for extensions	The sum of all current inputs and outputs must not exceed 8.
Restrictions if using CUS71D sensors for interface measurement	If CUS71D sensors are used, the maximum number of Memosens inputs is restricted to two. Any combination of CUS71D or other sensors is possible.
Product Configurator	www.endress.com/cm44p

**Block circuit diagram of
CM44P-****

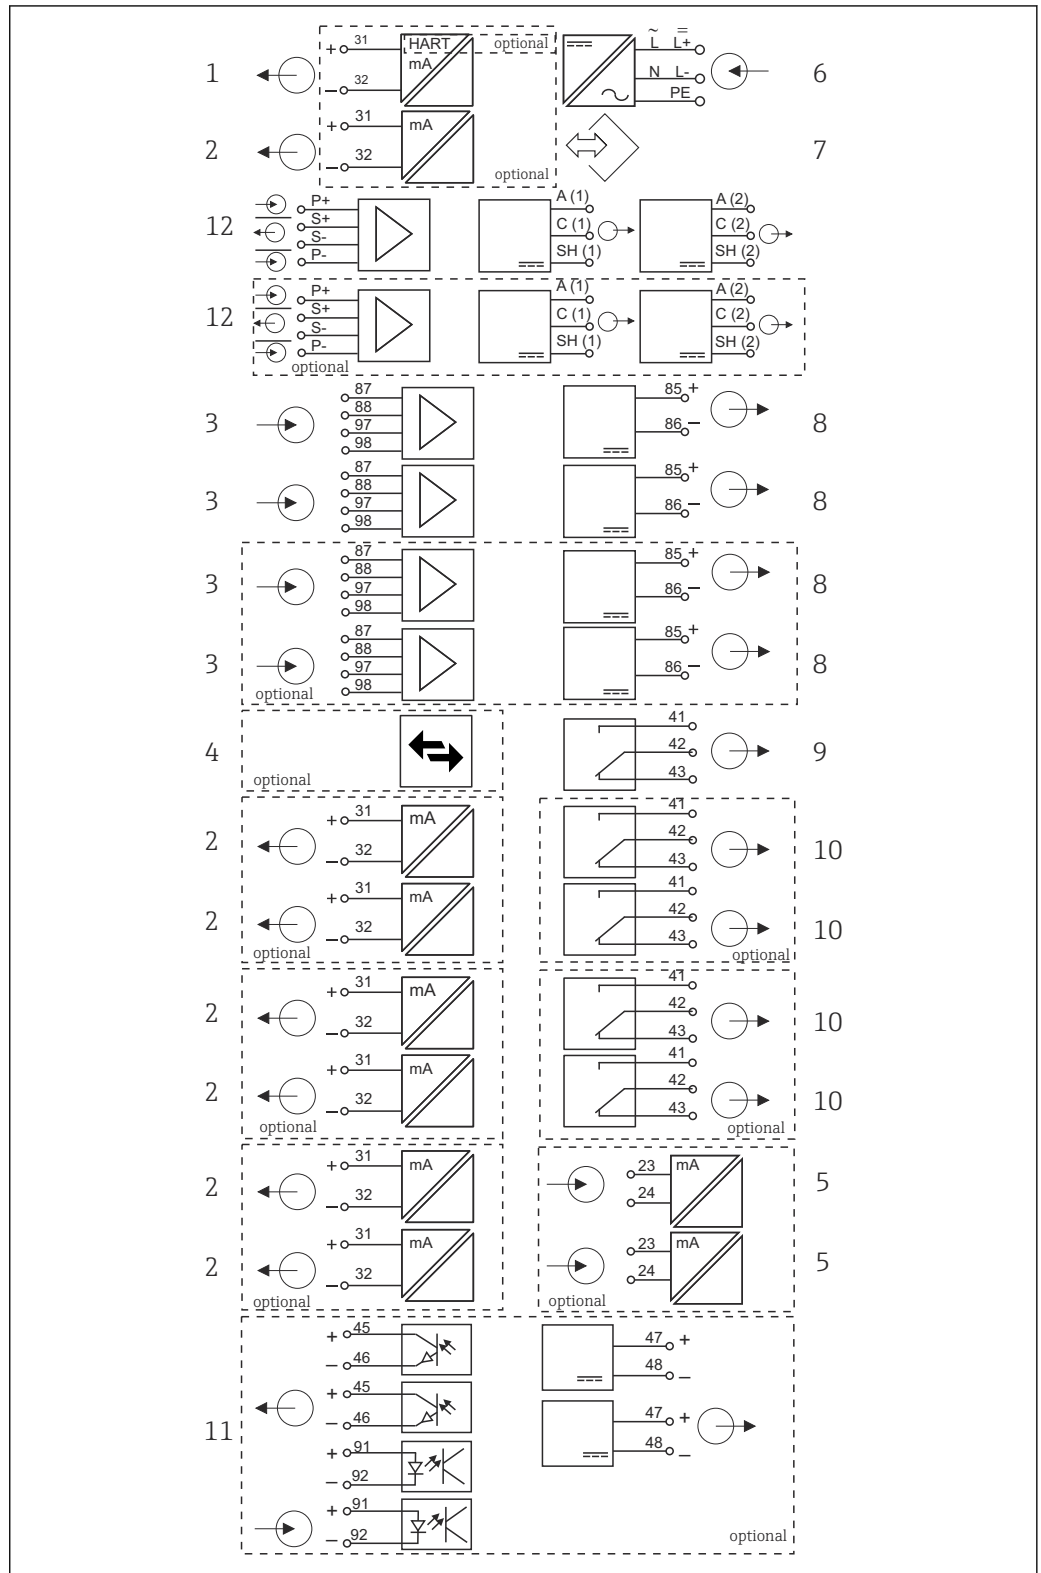

6 Block circuit diagram of CM444P

- | | | | |
|---|--|----|--|
| 1 | Current output 1:1, + HART (both optional) | 7 | Service interface |
| 2 | Max. 7 x current output (optional) | 8 | Power supply, fixed cable sensors |
| 3 | Memosens input (2 x standard + 2 x optional) | 9 | Alarm relay |
| 4 | PROFIBUS DP/Modbus/Ethernet (optional) | 10 | 2 or 4 x relays (optional) |
| 5 | 2 x current input (optional) | 11 | 2 digital inputs and outputs (optional) |
| 6 | Power supply | 12 | Photometer: 2x lamp voltage and detector |

Communication and data processing

Communication protocols:

Fieldbus systems

- HART
- PROFIBUS DP (Profile 3.02)
- Modbus TCP or RS485
- PROFINET
- EtherNet/IP



Only one type of fieldbus communication can ever be active. The last activation code entered decides which bus is used.

The device drivers available make it possible to perform a basic setup and display measured values and diagnostics information via the fieldbus. A full device configuration via the fieldbus is not possible.

Extension module 485DP/485MB and current outputs

For PROFIBUS DP and Modbus RS485 communication protocols:

A maximum of 2 current outputs can be used in parallel.

Ethernet functionality via Base2 module and current outputs

A maximum of 6 current outputs can be used in parallel.

Bus termination on the device

- Via slide switch at bus module 485DP/485MB
- Displayed via LED "T" on bus module 485DP/485MB

Reliability

Dependability

Memosens

Memosens makes your measuring point safer and more reliable:

- Non-contact, digital signal transmission enables optimum galvanic isolation
- No contact corrosion
- Completely watertight
- Sensor can be calibrated in a lab, thus increasing the availability of the measuring point in the process
- Intrinsically safe electronics mean operation in hazardous areas is not a problem.
- Predictive maintenance thanks to recording of sensor data, e.g.:
 - Total hours of operation
 - Hours of operation with very high or very low measured values
 - Hours of operation at high temperatures
 - Number of steam sterilizations
 - Sensor condition

Heartbeat diagnostics

- Heartbeat diagnostics screen with graphic indicators for the health of the device and sensor and with a maintenance or (sensor-dependent) calibration timer
- Heartbeat status information on the health of the device and condition of the sensor
 - ☺: Sensor/device condition and maintenance timer > 20 %; no action is required
 - ☹: Sensor/device condition or maintenance timer > 5 ≤ 20 %, maintenance not yet urgent but should be scheduled
 - ☹: Sensor/device condition or maintenance timer < 5 %, maintenance is recommended
- The Heartbeat sensor condition is the assessment of the calibration results and the sensor diagnostic functions.

An unhappy smiley can be due to the calibration result, the measured value status or to the operating hours limit having been exceeded. These limits can be configured in the sensor setup in a way that adapts the Heartbeat diagnostics to the application.

Heartbeat and NAMUR category

The Heartbeat status indicates the sensor or device condition while the NAMUR categories (F, C, M, S) assess the reliability of the measured value. The two conditions can correlate but do not have to.

■ Example 1

- The number of remaining cleaning cycles for the sensor reaches 20% of the defined maximum number. The Heartbeat symbol changes from ☺ to ☹. The measured value is still reliable so the NAMUR status signal does not change.
- If the maximum number of cleaning cycles is exceeded, the Heartbeat symbol changes from ☹ to ☹. While the measured value can still be reliable, the NAMUR status signal changes to M (maintenance required).

■ Example 2

The sensor breaks. The Heartbeat status changes immediately from ☺ to ☹ and the NAMUR status signal also changes immediately to F (failure).

Heartbeat Monitoring

Sensor data from Memosens sensors are transmitted via the EtherNet/IP, PROFINET, PROFIBUS DP, HART, Modbus RTU and Modbus TCP fieldbus protocols. These data can be used for predictive maintenance, for instance.

Examples include:

- Total hours of operation
- Hours of operation with very high or very low measured values
- Hours of operation at high temperatures
- Number of steam sterilizations
- Sensor identification
- Calibration information



For detailed information on "Ethernet/IP communication", see the product pages on the Internet (→ SD01293C).



For detailed information on "Modbus communication", see the product pages on the Internet (→ SD01189C).



For detailed information on "PROFINET communication", see the product pages on the internet (→ SD02490C).



For detailed information on "PROFIBUS communication", see the product pages on the Internet (→ SD01188C).



More detailed information on HART communication is provided on the product pages on the Internet (→ SD01187C).

Heartbeat Verification

Heartbeat Verification makes it possible to verify the correct operation of the measuring device without interrupting the process. This verification can be documented anytime.

Sensor Check System (SCS)

The Sensor Check System (SCS) monitors the high impedance of the pH glass. An alarm is issued if a minimum impedance value is undershot or a maximum impedance is exceeded.

- Glass breakage is the main reason for a drop in high impedance values
- The reasons for increasing impedance values include:
 - Dry sensor
 - Worn pH glass membrane

Process Check System (PCS)

The process check system (PCS) checks the measuring signal for stagnation. An alarm is triggered if the measuring signal does not change over a specific period (several measured values).

The main causes of stagnating measured values are:

- Contaminated sensor, or sensor outside of medium
- Sensor defective
- Process error (e.g. through control system)

Self-monitoring functions

Current inputs are deactivated in the event of overcurrent and reactivated once the overcurrent stops. Board voltages are monitored and the board temperature is also measured.

USP and EP

The limit functions for pharmaceutical water in accordance with USP and EP specifications are implemented in the software for conductivity measurements:

- "Water for Injection" (WFI) as per USP <645> and EP
- "Highly Purified Water" (HPW) as per EP
- "Purified Water" (PW) as per EP

The uncompensated conductivity value and the temperature are measured for the USP/EP limit functions. The measured values are compared against the tables defined in the standards. An alarm is triggered if the limit value is exceeded. Furthermore, it is also possible to configure an early warning alarm that signals undesired operating states before they occur.

ChemocleanPlus

Freely programmable sequence control


- e.g. for automatic sensor cleaning in retractable assemblies for reliable measurement results in processes with a high risk of contamination
- Individual, time-based activation of 4 outputs e.g. relays
- Starting, stopping or pausing of activities via digital input or fieldbus signals e.g. from limit position switches

Maintainability

Modular design


The modular transmitter design means it can be easily adapted to suit your needs:

- Retrofit extension modules for new or extended range of functions, e.g. current outputs, relays and digital communication
- Upgrade to maximum 2 photometers and 4 Memosens inputs
- Optional: M12 sensor connector for connecting any kind of Memosens sensor
- Optional: CDI connector for external access to the service interface (avoids having to unscrew the housing cover)

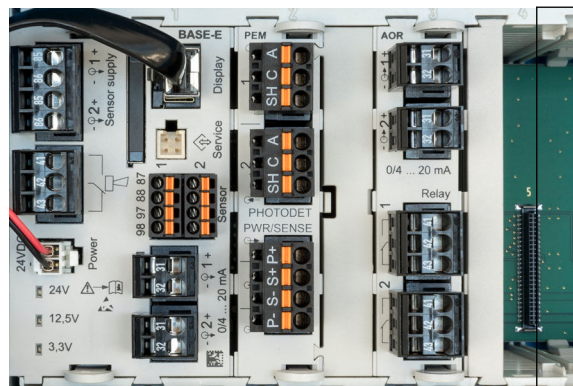

7 CM44P: example

A0034282

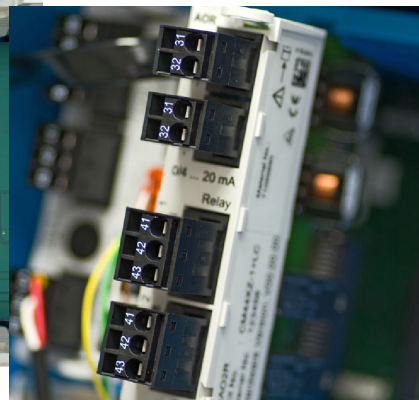


8 Extension module

A0042346

Data logger function

- Adjustable scan time: 1 to 3600 s (1 h)
- Data logbooks:
 - Max. 8 data logbooks
 - 150,000 entries per logbook
 - Graphic display (load curves) or numerical list
- Calibration logbook: max. 75 entries
- Hardware version logbook:
 - Hardware configuration and modifications
 - Max. 125 entries
- Version logbook:
 - E.g. software updates
 - Max. 50 entries
- Operation logbook: max. 250 entries
- Diagnostics logbook: max. 250 entries

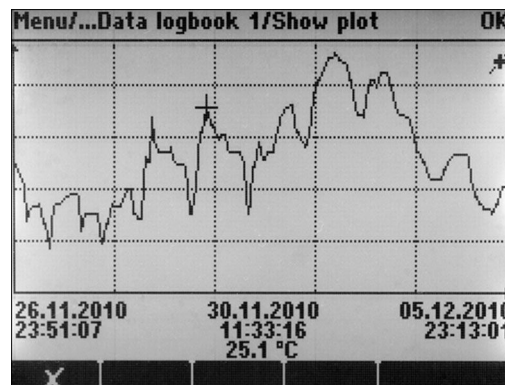

A0015032

 9 Data logbook: Graphic display

 Logbooks remain unchanged even after a software update.

SD card

The exchangeable storage medium enables:

- Quick and easy software updates and upgrades
- Data storage of internal device memory (e.g. logbooks)
- Transfer of complete configurations to a device with an identical setup (backup function)
- Transfer of configurations without the TAG and bus address to devices with an identical setup (copy function)
- Saving of screenshots for documentation purposes

Endress+Hauser offers industry-approved SD cards as accessories. These memory cards provide maximum data security and integrity.

Other industrial quality SD cards, 1 to 32 GB and with a maximum weight of 5 g can also be used. However, Endress+Hauser does not accept any responsibility for the data security of such cards.

External signals for device control and for activating external devices

Hardware options, e.g. the "DIO" module with 2 digital inputs and 2 digital outputs or fieldbus module 485DP/485MB enable the following:

- via a digital input signal
 - measuring range switching for conductivity (upgrade code required, see accessories)
 - switching between different calibration datasets in the case of optical sensors
 - an external hold
 - a cleaning interval to be triggered
 - switching on and off a PID controller, e.g. via the proximity switch of the CCA250
 - the use of the input as an "analog input" for pulse-frequency modulation (PFM)
- via a digital output signal
 - the static transmission (similar to a relay) of diagnostic states, point level switch states etc.
 - the dynamic transmission (comparable to a non-wearing "analog output") of PFM signals, e.g. to control dosing pumps.

FieldCare and Field Data Manager

FieldCare


Configuration and asset management software based on FDT/DTM technology

- Complete device configuration when connected via FXA291 and service interface
- Access to a number of configuration parameters and identification, measuring and diagnostic data when connected via HART modem
- Logbooks can be downloaded in CSV format or binary format for "Field Data Manager" software

Field Data Manager

Visualization software and database for measuring, calibration and configuration data

- SQL database which is protected against manipulation
- Functions to import, save and print out logbooks
- Load curves to display measured values

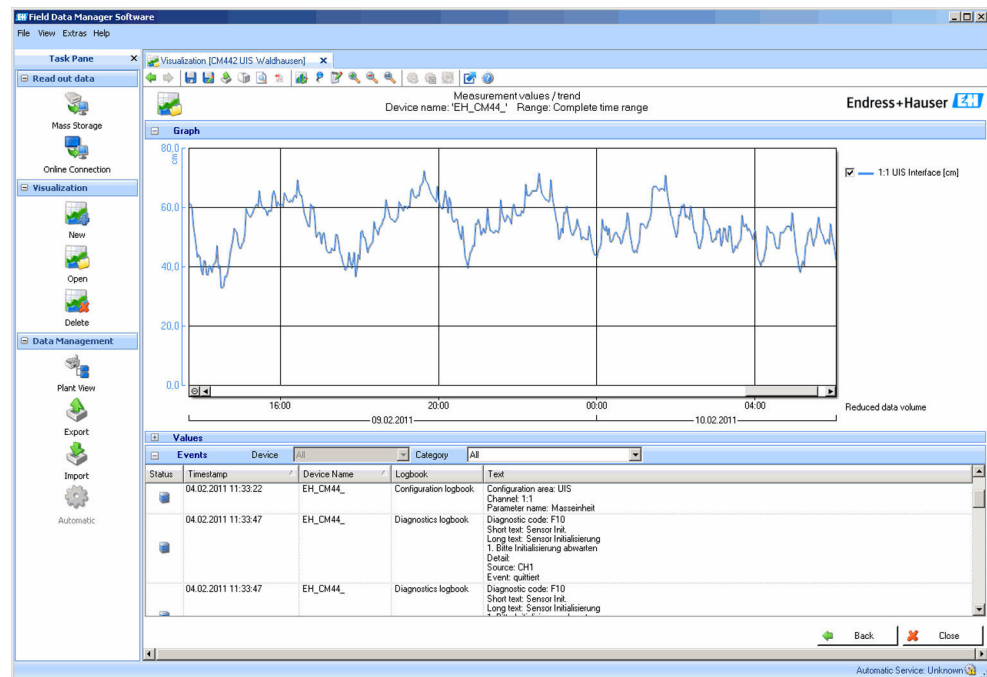

A0016009

10 Field Data Manager: Load curves

Virtual process values (mathematical functions)

In addition to "real" process values, which are provided by connected physical sensors or analog inputs, mathematical functions can be used to calculate a maximum of 8 "virtual" process values.

The "virtual" process values can be:

- Output via a current output or a fieldbus
- Used as a controlled variable
- Assigned as a measured variable to a limit switch
- Used as a measured variable to trigger cleaning
- Displayed in user-defined measuring menus

The following mathematical functions are possible:

- Calculation of pH from two conductivity values according to VGB 405 RL, e.g. in boiler feedwater
- Difference between two measured values from different sources, e.g. for membrane monitoring
- Differential conductivity, e.g. for monitoring the efficiency of ion exchangers
- Degassed conductivity, e.g. for process controls in power plants
- Redundancy for monitoring two or three redundant sensors
- rH calculation from the measured values of a pH sensor and an ORP sensor
- Calculation of the remaining capacity of a cation exchanger
- Calculation of the combined chlorine concentration. This calculation involves subtracting the free chlorine concentration from the total chlorine concentration. This requires both a sensor for free chlorine CCS51E and a sensor for total chlorine CCS53E.
- Formula editor

Concentration tables

When the device is delivered from the factory, tables are saved in the device that allow inductive conductivity measurements to be converted to concentrations of certain substances. 4 user-defined tables are also possible.

The following factory concentration tables are available:

NaOH	0 to 15 %	0 to 100 °C (32 to 212 °F)
NaOH	25 to 50%	2 to 80 °C (36 to 176 °F)
HCl	0 to 20 %	0 to 65 °C (32 to 149 °F)
HNO ₃	0 to 30 %	2 to 80 °C (36 to 176 °F)
H ₂ SO ₄	0.5 to 27 % and 35 to 85 %	0 to 100 °C (32 to 212 °F)
H ₂ SO ₄	93 to 100 %	10 to 115 °C (50 to 239 °F)
H ₃ PO ₄	0 to 40 %	2 to 80 °C (36 to 176 °F)
NaCl	0 to 26 %	2 to 80 °C (36 to 176 °F)

Safety**Real-time clock**

The device has a real-time clock, which is buffered by a button cell battery if the power supply fails.

This ensures that the device continues to keep the correct date and time when it is restarted and that the time stamp for the logbooks is correct.

Data security

All settings, logbooks etc. are stored in a non-volatile memory to ensure that the data are retained even in the event of a disruption to the power supply.

Measuring range switching for conductivity

- Can be used in CIP processes e.g. for safe monitoring of phase separations
- Switching between 4 complete parameter sets:
 - Conductivity operating mode
 - Concentration tables
 - Temperature compensation
 - Output signal range
 - Limit value switch
- Via digital inputs or fieldbus

Measured value compensation for oxygen and conductivity

- Pressure or temperature compensation
- Input signals from external sensors via current input or fieldbus
- Signals from connected temperature sensors

Password protection

Password-protected login

- For remote operation via web server
- For local operation

Process safety

Two independent PID controllers

- One- or two-sided control
- Limit switches
- 4 cleaning programs which can be programmed independently of each other

IT security

The manufacturer warranty is valid only if the product is installed and used as described in the Operating Instructions. The product is equipped with security mechanisms to protect it against any inadvertent changes to the settings.

IT security measures, which provide additional protection for the product and associated data transfer, must be implemented by the operators themselves in line with their security standards.

Input

Measured variables	Photometer ■ Absorption (UV, color, NIR, cell growth) ■ Turbidity Memosens sensors → Documentation of the connected sensor
Measuring ranges	Photometer OUSAF12, OUSAF21, OUSAF22, OUSAF44, OUSAF46 ■ 0 to 2.5 AU ■ Max. 50 OD (depending on the optical path length) OUSAF11 ■ 0 to 3 AU ■ 0 to 6 OD (depending on the optical path length) OUSTF10 ■ 0 to 200 FTU ■ 0 to 200 ppm DE OUSBT66 ■ 0 to 4 AU ■ 0 to 8 OD (depending on the optical path length) Memosens sensors → Documentation of the connected sensor
Types of input	■ Digital sensor inputs for sensors with Memosens protocol ■ Analog current inputs (optional) ■ Digital inputs (optional) ■ Digital sensor inputs for intrinsically safe sensors with Memosens protocol and Ex approval (optional) ■ Analog photometer inputs
Input signal	Depending on version: ■ Max. 2 x analog photometers ■ max. 4 x binary sensor signal ■ 2 x 0/4 to 20 mA (optional), passive, potentially isolated from one another and from the sensor inputs ■ 0 to 30 V
Cable specification	Cable type ■ Cable set CUK80 for photometer sensors ■ Memosens data cable CYK10 or sensor fixed cable, each with cable end sleeves or M12 circular plug (optional, for field housing) Cable length <i>All sensors except OUSBT66</i> Max. 100 m (330 ft) <i>OUSBT66</i> Maximum 20 m (65 ft)

Digital inputs, passive

Electrical specification	■ Drawing power (passive) ■ Galvanically isolated
---------------------------------	--

Span	■ High: 11 to 30 V DC ■ Low: 0 to 5 V DC
-------------	---

Nominal input current	max. 8 mA
------------------------------	-----------

PFM function	Minimum pulse width: 500 µs (1 kHz)
---------------------	-------------------------------------

Test voltage	500 V
---------------------	-------

Cable specification	Max. 2.5 mm ² (14 AWG)
----------------------------	-----------------------------------

Current input, passive

Span	> 0 to 20 mA
-------------	--------------

Signal characterization	Linear
--------------------------------	--------

Internal resistance	Non-linear
----------------------------	------------

Test voltage	500 V
---------------------	-------

Output

Output signal	Depending on version: ■ 2 x 0/4 to 20 mA, active, galvanically isolated from one another and from the sensor circuits ■ 4 x 0/4 to 20 mA, active, galvanically isolated from one another and from the sensor circuits ■ 6 x 0/4 to 20 mA, active, galvanically isolated from one another and from the sensor circuits ■ 8 x 0/4 to 20 mA, active, galvanically isolated from one another and from the sensor circuits ■ Optional HART communication (only via current output 1:1)
----------------------	--

HART	
Signal encoding	FSK ± 0.5 mA above current signal
Data transmission rate	1200 baud
Galvanic isolation	Yes
Load (communication resistor)	250 Ω

PROFIBUS DP/RS485	
Signal encoding	EIA/TIA-485, PROFIBUS DP-compliant acc. to IEC 61158
Data transmission rate	9.6 kBd, 19.2 kBd, 45.45kBd, 93.75 kBd, 187.5 kBd, 500 kBd, 1.5 MBd, 6 MBd, 12 MBd
Galvanic isolation	Yes
Connectors	Spring terminal (max. 1.5 mm), bridged internally (T-function), optional M12
Bus termination	Internal slide switch with LED display

Modbus RS485	
Signal encoding	EIA/TIA-485
Data transmission rate	2,400, 4,800, 9,600, 19,200, 38,400, 57,600 and 115,200 baud
Galvanic isolation	Yes
Connectors	Spring terminal (max. 1.5 mm), bridged internally (T-function), optional M12
Bus termination	Internal slide switch with LED display

Ethernet and Modbus TCP	
Signal encoding	IEEE 802.3 (Ethernet)
Data transmission rate	10/100 MBd
Galvanic isolation	Yes
Connection	RJ45
IP address	DHCP (default) or configuration via menu

Ethernet/IP	
Signal encoding	IEEE 802.3 (Ethernet)
Data transmission rate	10/100 MBd
Galvanic isolation	Yes
Connection	RJ45
IP address	DHCP (default) or configuration via menu

PROFINET	
Signal encoding	IEEE 802.3 (Ethernet)
Data transmission rate	100 MBd
Galvanic isolation	Yes
Connection	RJ45
Name of station	Via DCP protocol by means of configuration tool (e.g. Siemens PRONETA)
IP address	Via DCP protocol by means of configuration tool (e.g. Siemens PRONETA)

Signal on alarm

Adjustable, as per NAMUR Recommendation NE 43

- In measuring range 0 to 20 mA (HART is not available with this measuring range):
Failure current from 0 to 23 mA
- In measuring range 4 to 20 mA:
Failure current from 2.4 to 23 mA
- Factory setting for failure current for both measuring ranges:
21.5 mA

LoadMax. 500 Ω **Linearization/transmission behavior**

Linear

Digital outputs, passive

Electrical specification	■ Passive ■ Open collector, max. 30 V, 15 mA ■ Maximum voltage drop 3 V
External power supply	When using an onsite auxiliary voltage supply and an onsite digital input: Recommended minimum auxiliary voltage = $3\text{ V} + V_{IHmin}$ (V_{IHmin} = minimum input voltage required (high-level input voltage))
PFM function	Minimum pulse width: 500 μs (1 kHz)
Auxiliary voltage	Electrical specification ■ Galvanically isolated ■ Unregulated, 24 V DC ■ Max. 50 mA (per DIO module)
Test voltage	500 V
Cable specification	Max. 2.5 mm ² (14 AWG)

Current outputs, active

Span	0 to 23 mA 2.4 to 23 mA for HART communication
Signal characterization	Linear
Electrical specification	Output voltage Max. 24 V Test voltage 500 V
Cable specification	Cable type Recommended: shielded cable Cable specification Max. 2.5 mm ² (14 AWG)

Relay outputs

Electrical specification	Relay types ■ 1 single-pin changeover contact (alarm relay) ■ 2 or 4 single-pin changeover contacts (optional with extension modules) Maximum load ■ Alarm relay: 0.5 A ■ All other relays: 2.0 A
---------------------------------	---

Relay switching capacity*Base module (Alarm relay)*

Switching voltage	Load (max.)	Switching cycles (min.)
230 V AC, $\cos\Phi = 0.8$ to 1	0.1 A	700,000
	0.5 A	450,000
115 V AC, $\cos\Phi = 0.8$ to 1	0.1 A	1,000,000
	0.5 A	650,000
24 V DC, L/R = 0 to 1 ms	0.1 A	500,000
	0.5 A	350,000

Extension modules

Switching voltage	Load (max.)	Switching cycles (min.)
230 V AC, $\cos\Phi = 0.8$ to 1	0.1 A	700,000
	0.5 A	450,000
	2 A	120,000
115 V AC, $\cos\Phi = 0.8$ to 1	0.1 A	1,000,000
	0.5 A	650,000
	2 A	170,000
24 V DC, L/R = 0 to 1 ms	0.1 A	500,000
	0.5 A	350,000
	2 A	150,000

Cable specificationMax. 2.5 mm² (14 AWG)**Protocol-specific data**

HART	Manufacturer ID	11 _h
	Device type	155D _h
	Device revision	001 _h
	HART version	7.2
	Device description files (DD/DTM)	www.endress.com/hart Device Integration Manager DIM
	Device variables	16 user-definable and 16 predefined device variables, dynamic variables PV, SV, TV, QV
	Supported features	PDM DD, AMS DD, DTM, Field Xpert DD

PROFIBUS DP	Manufacturer ID	11 _h		
	Device type	155D _h		
	Profile version	3.02		
	Device database files (GSD files)	www.endress.com/profibus Device Integration Manager DIM		
	Output variables	16 AI blocks, 8 DI blocks		
	Input variables	4 AO blocks, 8 DO blocks		
	Supported features	■ 1 MSCY0 connection (cyclical communication, master class 1 to slave) ■ 1 MSAC1 connection (acyclical communication, master class 1 to slave) ■ 2 MSAC2 connections (acyclical communication, master class 2 to slave) ■ Device lock: The device can be locked using the hardware or software. ■ Addressing using DIL switches or software ■ GSD, PDM DD, DTM		
Modbus RS485	Protocol	RTU/ASCII		
	Function codes	03, 04, 06, 08, 16, 23		
	Broadcast support for function codes	06, 16, 23		
	Output data	16 measured values (value, unit, status), 8 digital values (value, status)		
	Input data	4 setpoints (value, unit, status), 8 digital values (value, status), diagnostic information		
	Supported features	Address can be configured using switch or software		
Modbus TCP	TCP port	502		
	TCP connections	3		
	Protocol	TCP		
	Function codes	03, 04, 06, 08, 16, 23		
	Broadcast support for function codes	06, 16, 23		
	Output data	16 measured values (value, unit, status), 8 digital values (value, status)		
	Input data	4 setpoints (value, unit, status), 8 digital values (value, status), diagnostic information		
	Supported features	Address can be configured using DHCP or software		
Ethernet/IP	Log	EtherNet/IP		
	ODVA certification	Yes		
	Device profile	Generic device (product type: 0x2B)		
	Manufacturer ID	0x049E _h		
	Device type ID	0x109C _h		
	Polarity	Auto-MIDI-X		
	Connections	CIP	12	
		I/O	6	
		Explicit message	6	
		Multicast	3 consumers	
	Minimum RPI	100 ms (default)		

Maximum RPI	10000 ms	
System integration	EtherNet/IP	EDS
	Rockwell	Add-on-Profile Level 3, Faceplate for Factory Talk SE
IO data	Input (T → O)	Device status and diagnostic message with highest priority Measured values: 16 AI (analog input) + Status + Unit 8 DI (discrete input) + Status
	Output (O → T)	Actuating values: 4 AO (analog output) + status + unit 8 DO (discrete output) + Status

PROFINET

Protocol	"Application layer protocol for decentral device periphery and distributed automation", PNIO Version 2.34
Communication type	100 MBit/s
Conformance Class	Conformance Class B
Netload Class	Netload Class II
Baud rate	Automatic 100 Mbps with full-duplex detection
Cycle times	From 32 ms
Device profile	Application interface identifier 0xF600 Generic device
PROFINET interface	1 port, Realtime Class 1 (RT_CLASS_1)
Manufacturer ID	0x11 _h
Device type ID	0x859C D _h
Device description files (GSD)	Information and files under: www.endress.com On the product page for the device: Documents/Software → Device drivers www.profibus.com On the website under Products/Product Finder
Polarity	Auto-polarity for automatic correction of crossed TxD and RxD pairs
Supported connections	1 x AR (IO Controller AR) 1 x AR (IO-Supervisor Device AR connection allowed) 1 x Input CR (Communication Relation) 1 x Output CR (Communication Relation) 1 x Alarm CR (Communication Relation)
Configuration options for measuring device	- Web browser - Manufacturer-specific software (FieldCare, DeviceCare) - Device master file (GSD), can be read out via the integrated web server of the measuring device
Configuration of the device name	DCP protocol

Supported functions	■ Identification & maintenance Simple device identification via: ■ Process control system ■ Nameplate ■ Measured value status The process variables are communicated with a measured value status ■ Blinking feature (FLASH_ONCE) via the local display for simple device identification and assignment ■ Device operation via operating tools (e.g. FieldCare, DeviceCare)
System integration	For information on system integration, see the Operating Instructions ■ Cyclic data transmission ■ Overview and description of the modules ■ Status coding ■ Startup configuration ■ Factory setting

Web server

The web server enables full access to the device configuration, measured values, diagnostic messages, logbooks and service data via standard WiFi/WLAN/LAN/GSM or 3G routers with a user-defined IP address.

TCP port	80
Supported features	■ Remote-controlled device configuration(1 session) ■ Save/restore device configuration (via SD card) ■ Logbook export (file formats: CSV, FDM) ■ Access to web server via DTM or Internet Explorer ■ Login ■ Web server can be switched off

Power supply

Supply voltage**CM44P**

Depending on the version,:

- 100 to 230 V AC, 50/60 Hz
Maximum permitted fluctuation of mains supply voltage: $\pm 15\%$ of nominal voltage ¹⁾
- 24 V DC
Maximum permitted fluctuation of mains supply voltage: $+20\%/-15\%$ of nominal voltage ¹⁾

NOTICE**The device does not have a power switch!**

- ▶ Provide a protected circuit breaker in the vicinity of the device at the place of installation.
- ▶ The circuit breaker must be a switch or power switch, and must be labeled as the circuit breaker for the device.
- ▶ Secondary circuits must be separated from mains supply circuits by reinforced insulation or double insulation.

Power consumption**CM44P**

Depending on supply voltage

- 100 to 230 V AC:
Max. 73 VA (field device)
Max. 150 VA (cabinet device) ¹⁾
- 24 V DC:
Max. 68 W (field device)
Max. 59 W (cabinet device) ¹⁾

Fuse

Fuse not exchangeable

¹⁾ *Specifications only apply if used with power unit supplied by manufacturer.


Overvoltage protection

Overvoltage protection: integrated protection against transient overvoltages according to EN 61326-1 (Table 2, industrial environment)


Only for devices for DIN rail mounting:

Additional overvoltage protection in accordance with EN 61643-21: The Endress+Hauser HAW562 overvoltage protection device can be installed on a DIN rail to protect the electronics against damage caused by overvoltage in the supply lines.

Cable entries (field device only)*Cable entries for transmitters for the non-hazardous area*

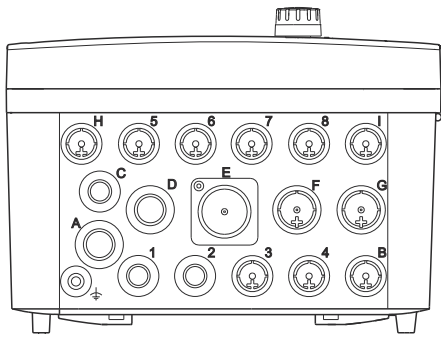Identification of the cable entry on housing base	Suitable gland
B, C, H, I, 1-8	M16x1.5 mm/NPT3/8"/G3/8
A, D, F, G	M20x1.5 mm/NPT1/2"/G1/2
E	-
⏏	M12x1.5 mm
	Recommended assignment
	1-8 Sensors 1-8 A Power supply B Unrestricted use C RS485 Out or M12 Ethernet D,F,G Current outputs and inputs, relays H RS485 In or M12 DP/RS485 I Unrestricted use E Do not use

Cable entries for transmitters with sensor communication module 2DS Ex-i for the hazardous area

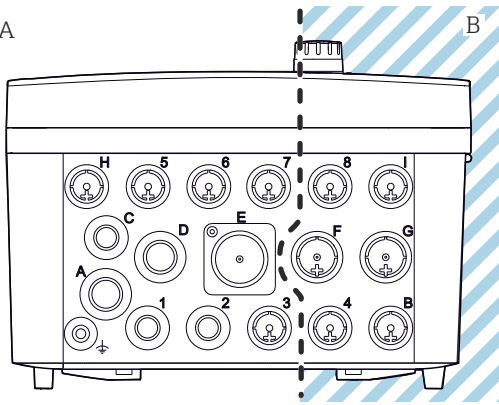Identification of the cable entry on housing base	Suitable gland
B, C, H, I, 1-8	M16x1.5 mm/NPT3/8"/G3/8
A, D, F, G	M20x1.5 mm/NPT1/2"/G1/2
E	-
⏏	M12x1.5 mm
	Recommended assignment
	1/2/3 Do not use 5/6/7 4/8 Intrinsically safe sensors B/F/G/I A Power supply C RS485 Out or M12 Ethernet D Current outputs and inputs, relays H RS485 In or M12 DP/RS485 E Do not use

11 A: Non-hazardous area, B: Hazardous area



Do not cross cables for the non-hazardous area and the hazardous area in the housing. Select a suitable cable entry for the connection.


Cable specification

Length of display cable provided (cabinet device only):
3 m (10 ft)

Maximum permitted length of a display cable (cabinet device only):
3 m (10 ft)


Electrical connection

Connecting the supply voltage

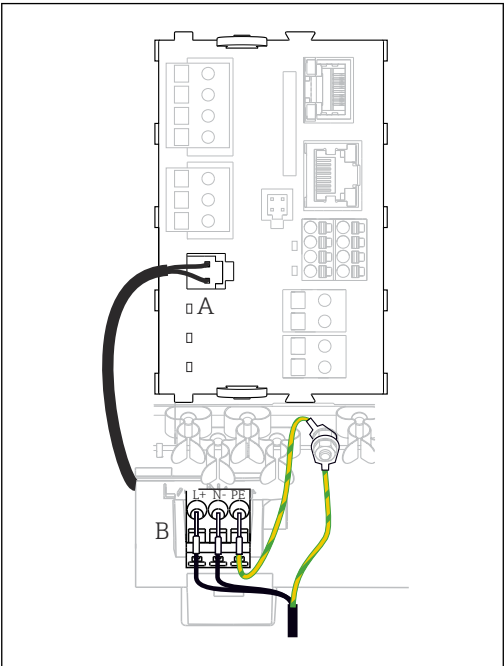


12 Connecting the power supply using the example of the BASE2-E (field device)

- A Internal power supply cable
- B Extension power unit

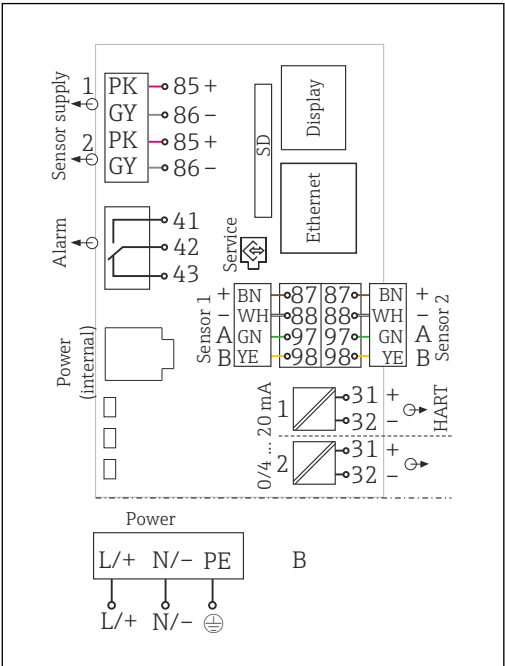

13 Complete wiring diagram using the example of the BASE2-E and extension power supply unit (B)

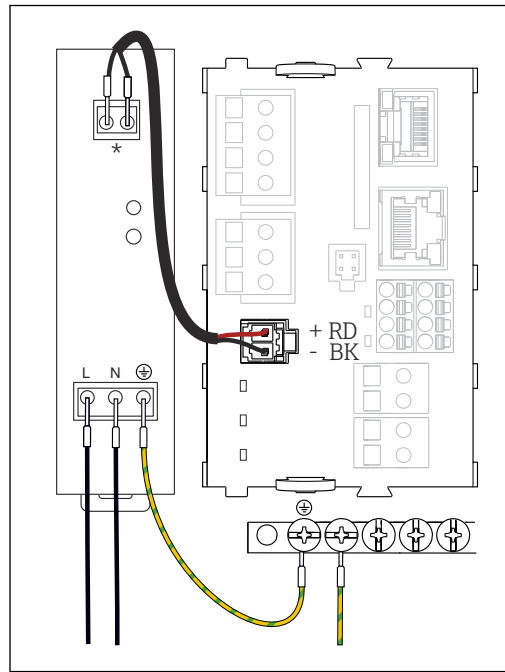


A0039668

14 Connecting the power supply using the example of the BASE2-E (cabinet device)

* Assignment depends on power supply unit; make sure it is correctly connected.

i The two device versions may only be operated with the power unit supplied and the power unit cable. Also pay attention to the information in the operating instructions supplied for the power unit.

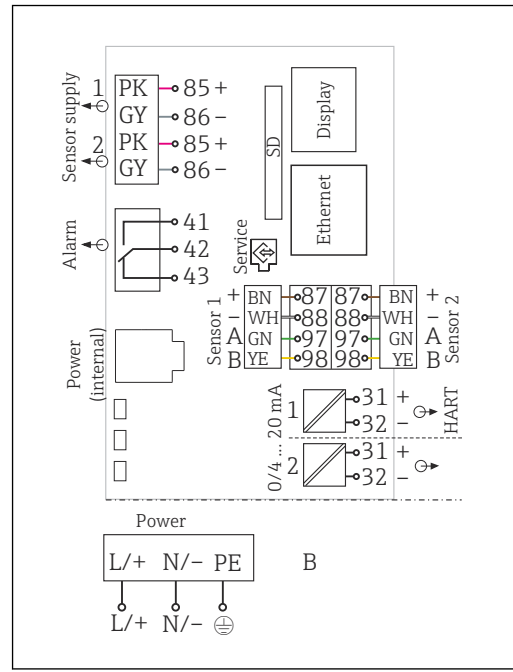

A0039624

15 Complete wiring diagram using the example of the BASE2-E and external power supply unit (B)

Connecting optional modules With extension modules you can purchase additional functions for your device.











NOTICE









Unacceptable hardware combinations (due to conflicts in power supply)





Incorrect measurements or total failure of the measuring point as a result of heat build-up or overloading

- ▶ Find out whether the planned extension for your transmitter results in a permitted hardware combination (Configurator at www.endress.com).
- ▶ Remember that the sum of all current inputs and outputs may not exceed 8.
- ▶ Make sure not to use more than 2 "DIO" modules. More "DIO" modules are not permitted.
- ▶ Please contact your Endress+Hauser sales center should you have any questions.

Overview of all the modules available

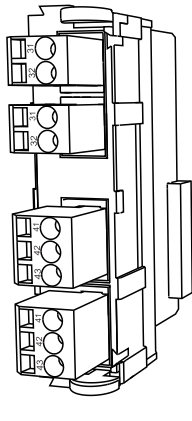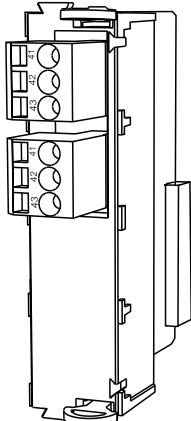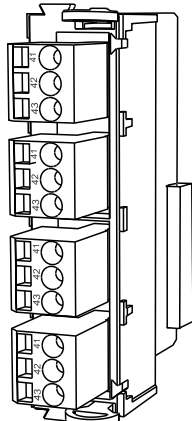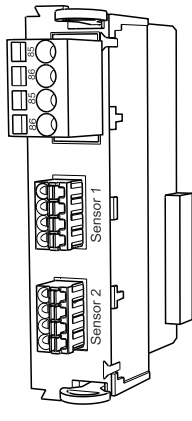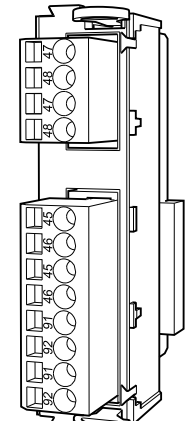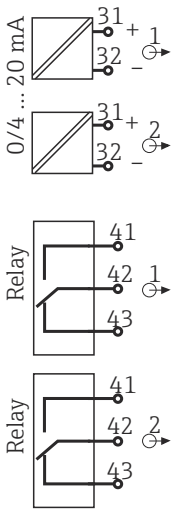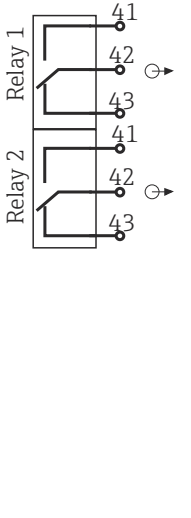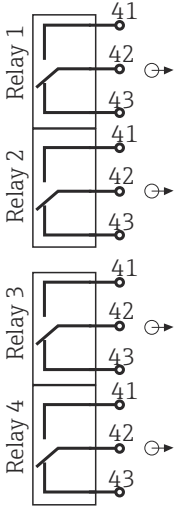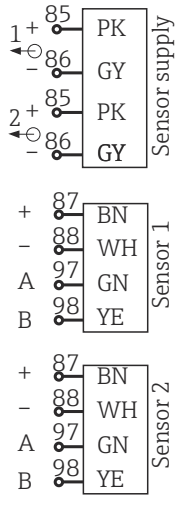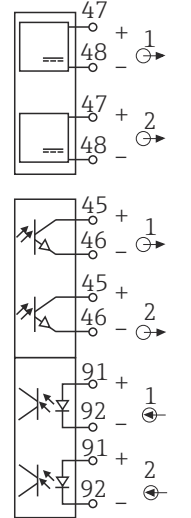Module name				
AOR	2R	4R	2DS	DIO
 A0025110	 A0025111	 A0025112	 A0025113	 A0025114
■ 2 x 0/4 to 20 mA analog outputs ■ 2 relays ■ Order No. 71111053	■ 2 relays ■ Order No. 71125375	■ 4 relays ■ Order No. 71125376	■ 2 digital sensor inputs ■ 2 power supply systems for digital sensors ■ Order No. 71135631	■ 2 digital inputs ■ 2 digital outputs with auxiliary voltage ■ Order No. 71135638
 A0033234	 A0033235	 A0025125	 A0025128	 A0025129

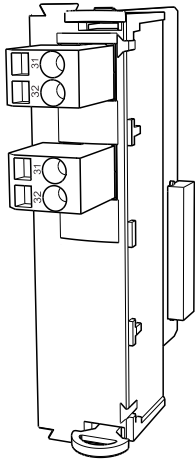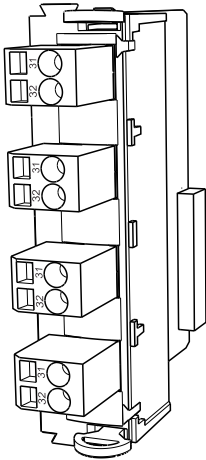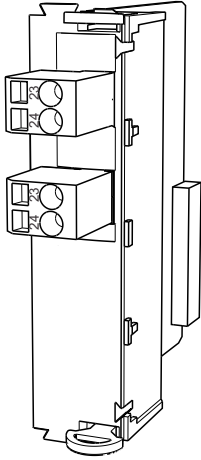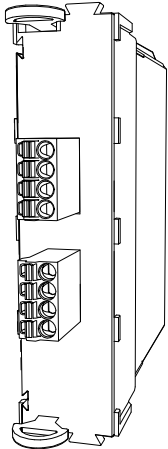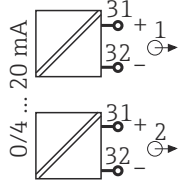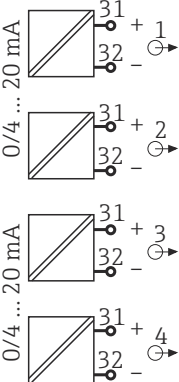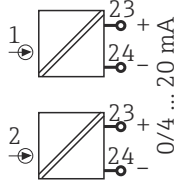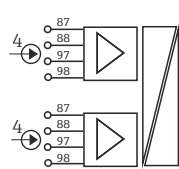Module name			
2AO	4AO	2AI	2DS Ex-i
 A0025132	 A0025133	 A0025135	 A0046513
2 x 0/4 to 20 mA analog outputs - Order No. 71135632	4 x 0/4 to 20 mA analog outputs - Order No. 71135633	2 x 0/4 to 20mA analog inputs - Order No. 71135639	2 intrinsically safe digital inputs for Memosens sensors with Ex approval - Inputs on BASE2 module are disabled - Module 2DS EX-i is equipped in the right slot of the device - Order No. 71477718
 A0025137	 A0025138	 A0025139	 A0046512

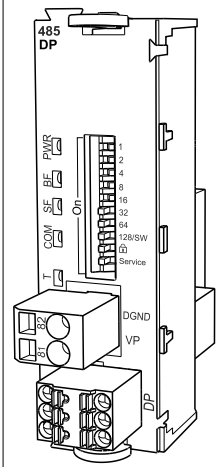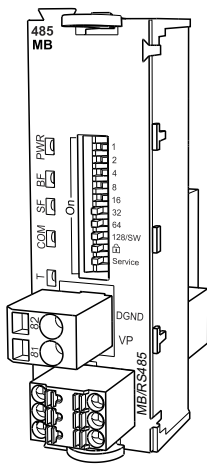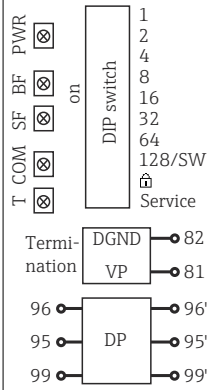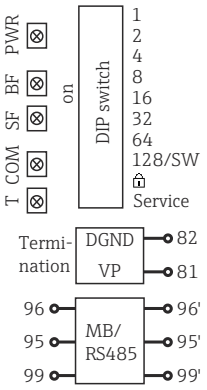
Module name	
485DP	485MB
 A0050399	 A0050401
■ 5V power supply for PROFIBUS DP termination ■ RS485 (PROFIBUS DP) ■ Order No. 71575177	■ RS485 (Modbus RS485) ■ Order No. 71575178
 A0050400	 A0050402



PROFIBUS DP (module 485DP)


Contacts 95, 96 and 99 are bridged in the connector. This ensures that PROFIBUS communication is not interrupted if the connector is disconnected.

Protective ground connection

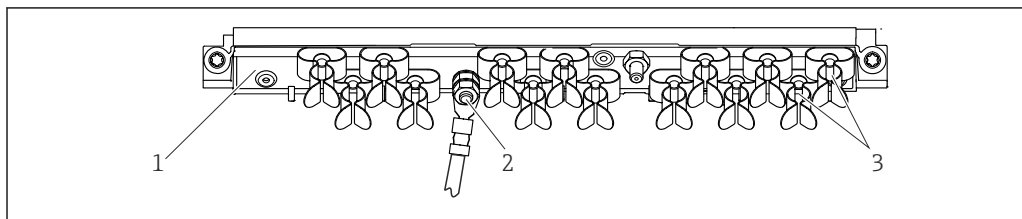

A0048299

16 Cable mounting rail and associated function (field device)

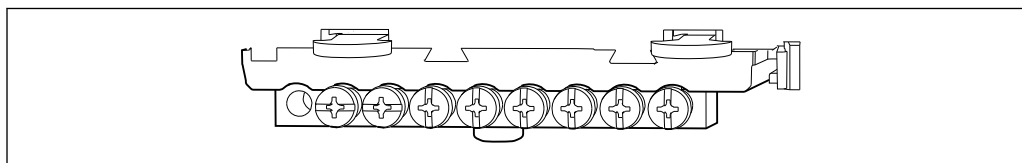

A0025366

17 Mounting rail for functional ground connections (cabinet device)

- 1 Cable mounting rail
- 2 Threaded bolt (protective ground connection, central grounding point)
- 3 Cable clamps (fixing and grounding the sensor cables)

Sensor connection

Sensor types for non-hazardous area

Photometer sensors

Sensor types	Sensor cable	Sensors
Analog photometer sensors without additional internal power supply	CUK80	■ OUSAF12 ■ OUSAF21 ■ OUSAF22 ■ OUSAF44 ■ OUSAF46 ■ OUSTF10 ■ OUSBT66
	Fixed cable	OUSAF11

Sensors with Memosens protocol

Sensor types	Sensor cable	Sensors
Digital sensors without additional internal power supply	With plug-in connection and inductive signal transmission	■ pH sensors ■ ORP sensors ■ Combined sensors ■ Oxygen sensors (amperometric and optical) ■ Conductivity sensors with conductive measurement of conductivity ■ Chlorine sensors (disinfection)
	Fixed cable	Conductivity sensors with inductive measurement of conductivity
Digital sensors with additional internal power supply	Fixed cable	■ Turbidity sensors ■ Sensors for interface measurement ■ Sensors for measuring the spectral absorption coefficient (SAC) ■ Nitrate sensors ■ Optical oxygen sensors ■ Ion-sensitive sensors


The following rule applies if connecting CUS71D sensors:

- The maximum number of Memosens inputs is limited to two.
- Any combination of CUS71D or other sensors is possible.


Types of connection

- Direct connection of the sensor cable to the terminal connector of the PEM sensor module, SEM Memosens module , basic module-E (→ 18 ff.)(Memosens sensors only)
- Optional for Memosens sensors: Sensor cable plug connected to the M12 sensor socket on the underside of the device (field device)
With this type of connection, the device is already wired at the factory (→ 22).


Sensor cable connected directly

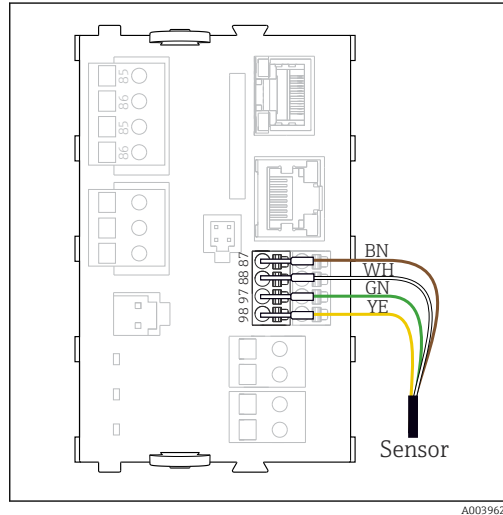


18 Memosens sensors without additional supply voltage

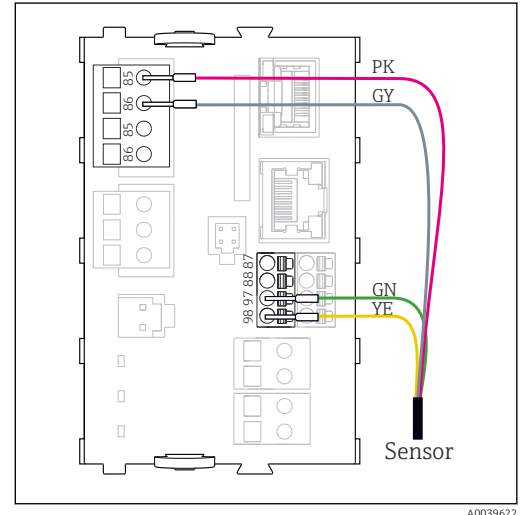

19 Memosens sensors with additional supply voltage

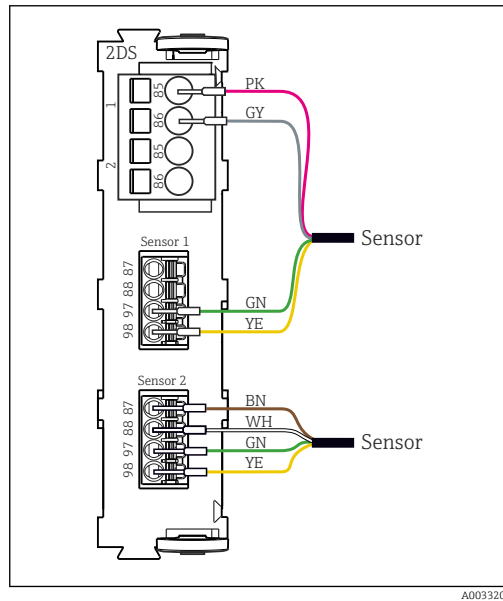

20 Sensors with and without additional supply voltage at sensor module 2DS

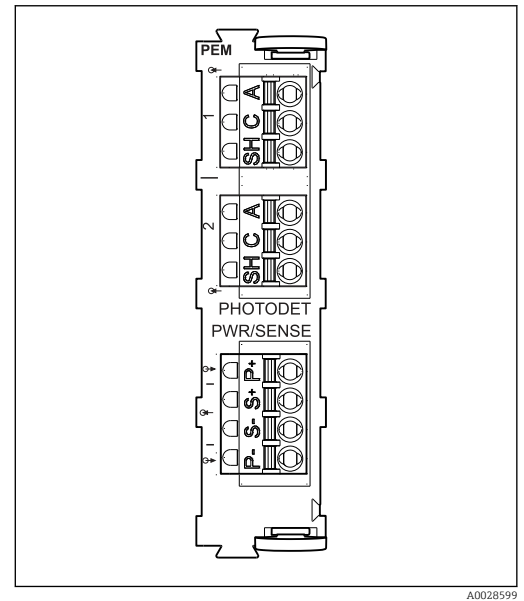

21 PEM module



In the case of a single-channel device:

The left-hand Memosens input on basic module must be used!

Connecting photometer sensors to PEM module


Sensor	Cable color	PEM terminal	Assignment
OUSAF11 OUSAF12	YE (thick)	P+	Lamp voltage +
	YE (thin)	S+	Recording lamp voltage +
	BK (thin)	S-	Recording lamp voltage -
	BK (thick)	P-	Lamp voltage -
	RD	A (1)	Sensor +
	BK ¹⁾ / WH ²⁾	C(1)	Sensor -
	GY	SH (1)	Screening
OUSAF21 OUSAF22 OUSTF10 OUSAF44	YE (thick)	P+	Lamp voltage +
	YE (thin)	S+	Recording lamp voltage +
	BK (thin)	S-	Recording lamp voltage -
	BK (thick)	P-	Lamp voltage -
	RD	A (1)	Measuring detector sensor +
	BK	C(1)	Measuring detector sensor -
	GY	SH (1)	Measuring detector screening
	WH	A (2)	Sensor reference +
	GN	C(2)	Sensor reference -
	GY	SH (2)	Reference screening
OUSAF46  2 PEM modules necessary	PEM module 1		
	YE (thick)	P+	Lamp voltage +
	YE (thin)	S+	Recording lamp voltage +
	BK (thin)	S-	Recording lamp voltage -
	BK (thick)	P-	Lamp voltage -
	RD	A (1)	Measuring detector sensor +
	BK	C(1)	Measuring detector sensor -
	GY	SH (1)	Measuring detector screening
	WH (lamp)	A (2)	Sensor reference +
	GN (lamp)	C(2)	Sensor reference -
	GY (lamp)	SH (2)	Reference screening
	PEM module 2		
	WH	A (1)	Measuring detector sensor +
	GN	C(1)	Measuring detector sensor -
	GY	SH (1)	Measuring detector screening
	RD (lamp)	A (2)	Sensor reference +
	BK (lamp)	C(2)	Sensor reference -
	GY (lamp)	SH (2)	Reference screening

Sensor	Cable color	PEM terminal	Assignment
OUSBT66	BN	P+	Lamp voltage +
	BN	S+	Recording lamp voltage +
	BK	P-	Lamp voltage -
	BK	S-	Recording lamp voltage -
	RD	A (1)	Sensor +
	OG	C(1)	Sensor -
	TP	SH (1)	Screening

- 1) OUSAF12
2) OUSAF11

Memosens connection via M12 connection (field device only)

Only for connection in non-hazardous area.

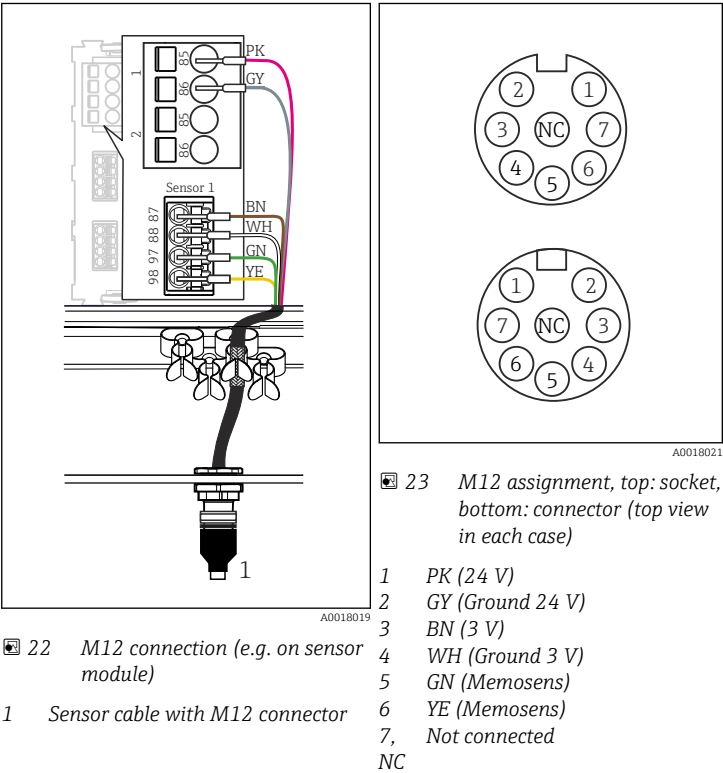


i When connecting intrinsically safe sensors to transmitters with sensor communication module type 2DS Ex i, the M12 plug-in connector is **not** permitted.

Connecting intrinsically safe sensors to sensor communication module type 2DS Ex i

Sensor cable connected directly

- ▶ Connect the sensor cable to the terminal connector of the sensor communication module 2DS Ex-i.

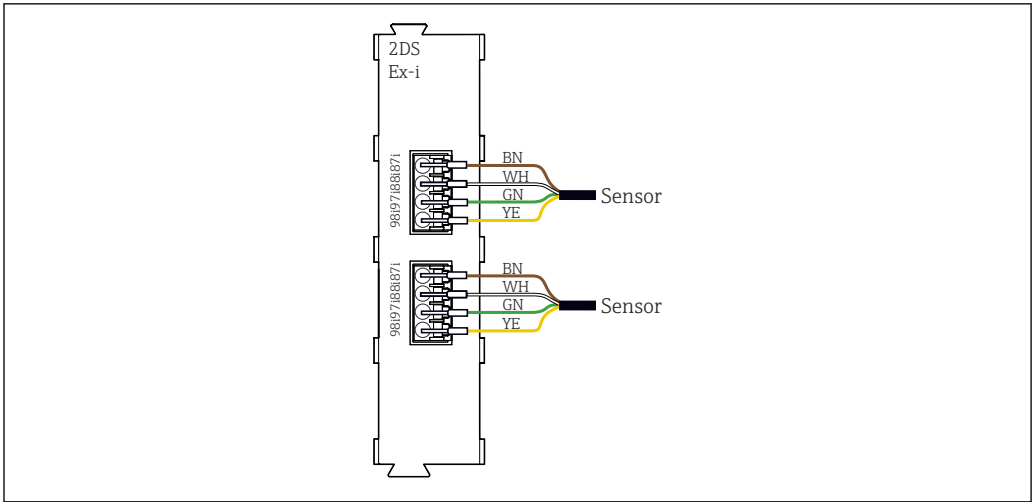

A0045659

24 Sensors without additional supply voltage at sensor communication module type 2DS Ex-i

i Intrinsically safe sensors for use in explosive atmospheres may only be connected to the sensor communication module type 2DS Ex-i. Only the sensors covered by the certificates may be connected (see XA).


Performance characteristics

Response time	Current outputs t_{90} = max. 500 ms for an increase from 0 to 20 mA Current inputs t_{90} = max. 330 ms for an increase from 0 to 20 mA Digital inputs and outputs t_{90} = max. 330 ms for an increase from low to high
Reference temperature	25 °C (77 °F)
Measurement error for sensor inputs	Photometer 0 to 2.5 AU / to 50 OD 0.3 % of measuring range at 25 °C (77 °F) Max. 1 % of measuring range 0 to 200 FTU / 0 to 200 ppm DE Max. 2 % of measuring range i The photometer lamps will not operate at full capacity until a warm-up period of 30 minutes has elapsed. Only then do the specified inaccuracies apply. Memosens sensors → Documentation of the connected sensor
Measurement error for current inputs and outputs	Typical measured errors: < 20 μ A (with current values < 4 mA) < 50 μ A (with current values 4 to 20 mA) at 25 °C (77 °F) each Additional measured error depending on the temperature: < 1.5 μ A/K
Frequency tolerance of digital inputs and outputs	$\leq$ 1%
Resolution of current inputs and outputs	< 5 μ A

Repeatability → Documentation of the connected sensor


Installation

Installation requirements Mounting plate (field device)

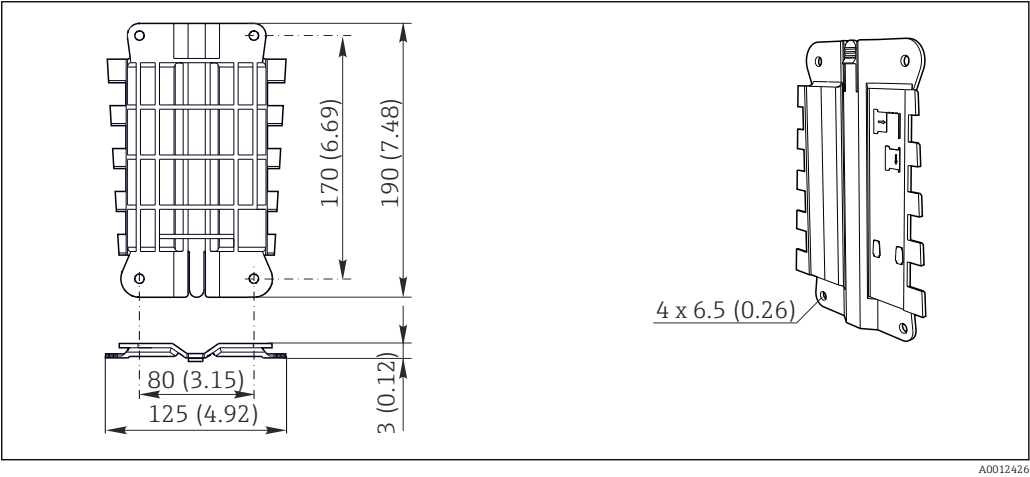

25 Mounting plate. Engineering unit: mm (in)

Weather protection cover (field device)

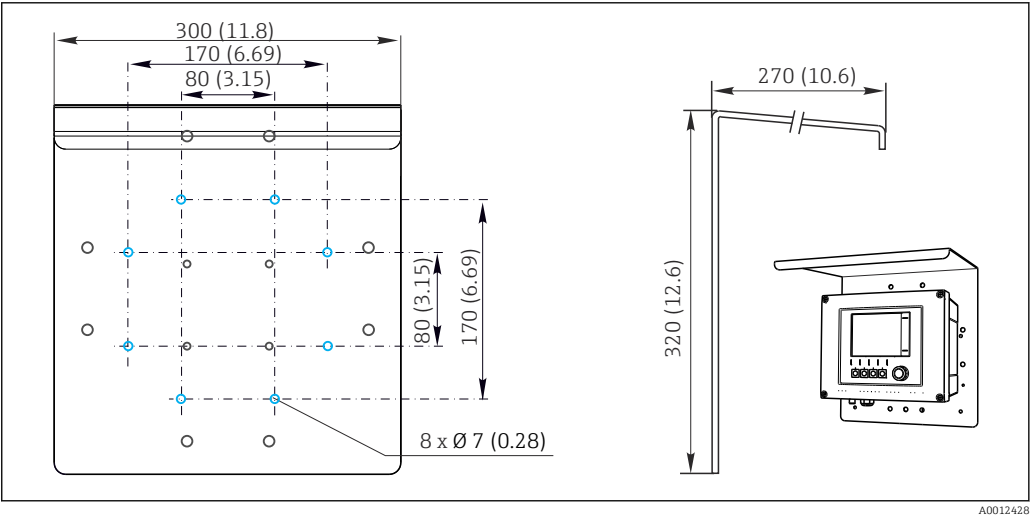


26 Dimensions in mm (in)

Installation

Post mounting

i You require the post mounting kit (optional) to mount the unit on a pipe, post or railing (square or circular, clamping range 20 to 61 mm (0.79 to 2.40")).

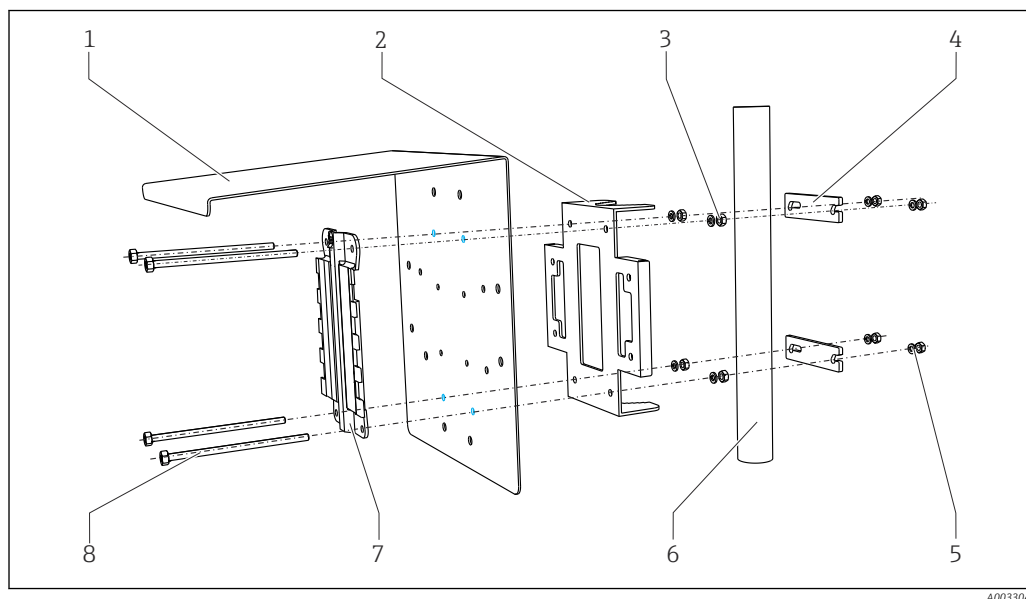


A0033044

27 Post mounting

- | | | | |
|---|---|---|---|
| 1 | Weather protection cover (optional) | 5 | Spring washers and nuts (post mounting kit) |
| 2 | Post mounting plate (post mounting kit) | 6 | Pipe or railing (circular/square) |
| 3 | Spring washers and nuts (post mounting kit) | 7 | Mounting plate |
| 4 | Pipe clamps (post mounting kit) | 8 | Threaded rods (post mounting kit) |

Rail mounting

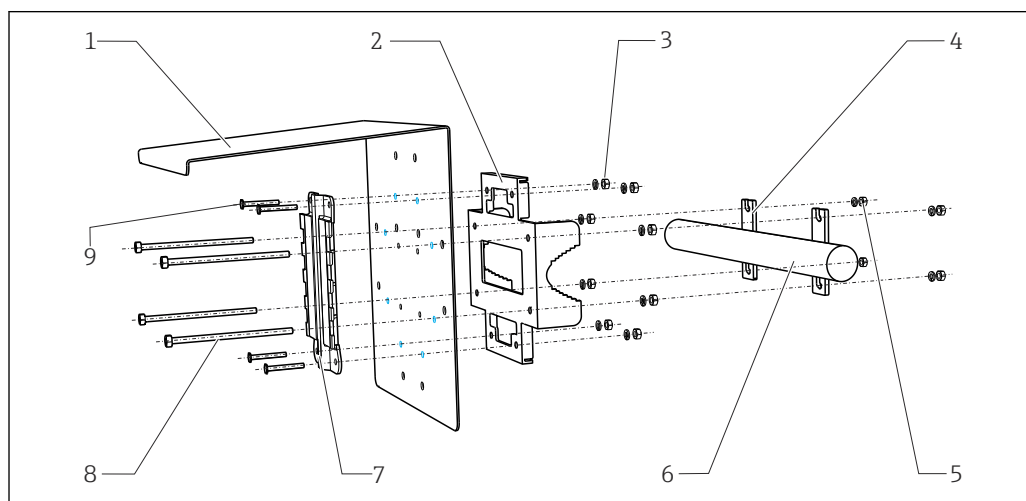


A0012668

28 Rail mounting


- | | | | |
|---|---|---|-----------------------------------|
| 1 | Weather protection cover (optional) | 6 | Pipe or railing (circular/square) |
| 2 | Post mounting plate (post mounting kit) | 7 | Mounting plate |
| 3 | Spring washers and nuts (post mounting kit) | 8 | Threaded rods (post mounting kit) |
| 4 | Pipe clamps (post mounting kit) | 9 | Screws (post mounting kit) |
| 5 | Spring washers and nuts (post mounting kit) | | |

Wall mounting

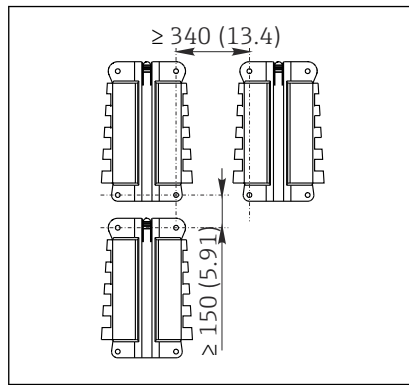

A0012686

29 Installation clearance in mm (in)

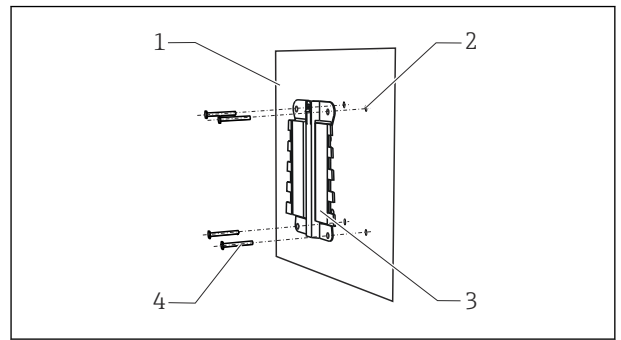

A0027798

30 Wall mounting

- 1 Wall
- 2 4 drill holes ¹⁾
- 3 Mounting plate
- 4 Screws Ø 6 mm (not part of scope of supply)

¹⁾The size of the drill holes depends on the wall plugs used. The wall plugs and screws must be provided by the customer.

Mounting on DIN rail as per IEC 60715

NOTICE


Incorrect mounting location in the cabinet, spacing regulations not observed

Possible malfunctions as a result of heat buildup and interference from neighboring devices!

- ▶ Do not position the device directly above sources of heat. The temperature specification must be observed.
- ▶ The components are designed for convection-based cooling. Avoid heat buildup. Ensure openings are not covered, e.g. by cables.
- ▶ Observe the specified distances to other devices.
- ▶ Physically separate the device from frequency converters and high-voltage devices.
- ▶ Recommended installation direction: horizontal. The specified ambient conditions, and particularly the ambient temperatures, only apply for horizontal installation.
- ▶ Vertical orientation is also possible. However, this requires additional fixing clips at the place of installation to hold the device in position on the DIN rail.
- ▶ Recommended installation of power unit: to the left of the device

The following minimum clearance specifications must be observed:


- Distances at the side in relation to other devices incl. power units and to the wall of the cabinet:
at least 20 mm (0.79 inch)
- Distance above and below the device and depth distance (to control cabinet door or other devices installed there):
at least 50 mm (1.97 inch)

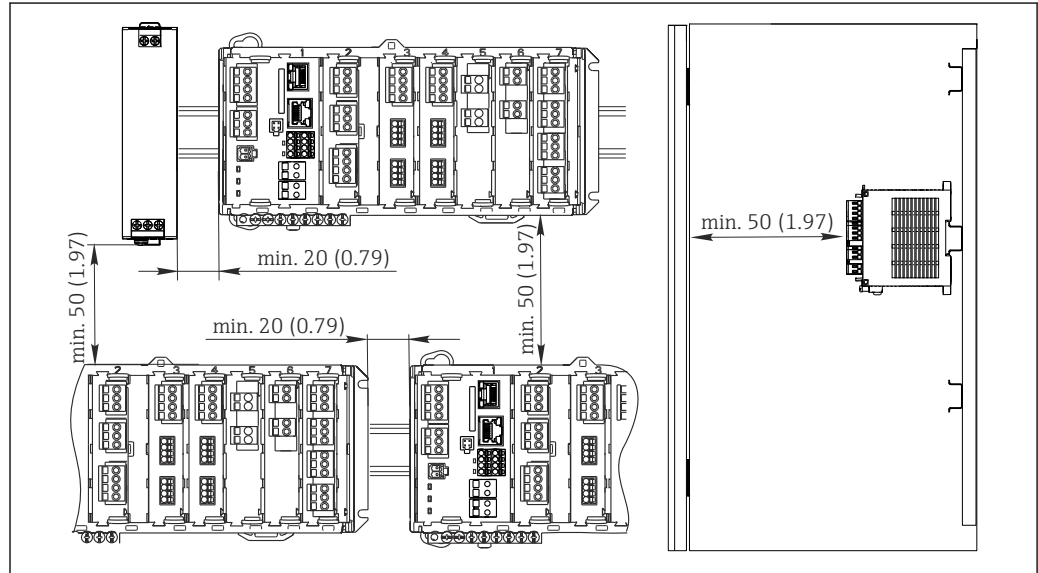

A0039736

31 Minimum clearance in mm (in)

Wall mounting

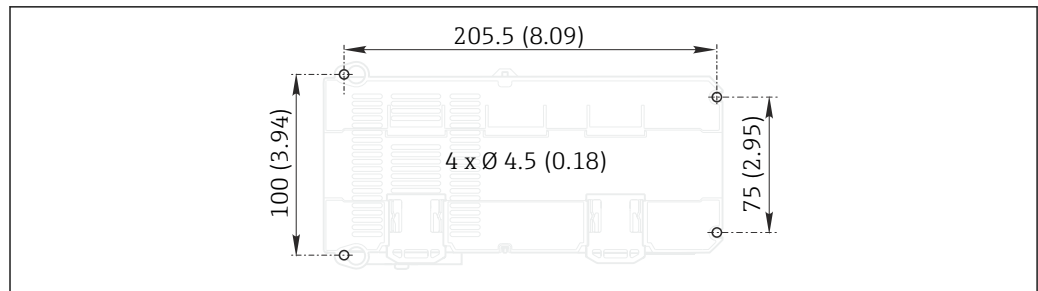


A0027859

32 Drilling pattern for wall mounting in mm (in)

Mounting the external display

 The mounting plate also serves as the drilling template. The side markings are used to mark the drill holes.

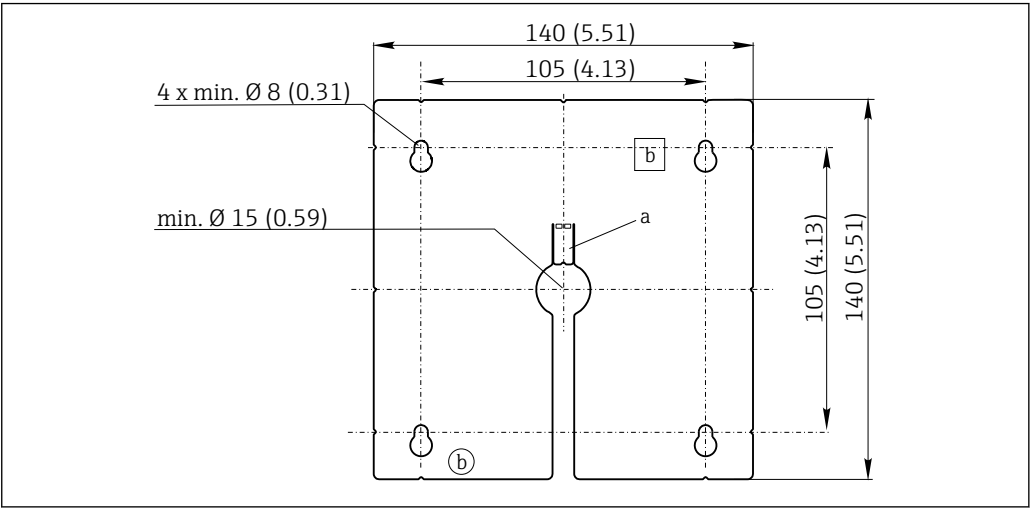

A0025371

 33 Mounting plate of external display, dimensions in mm (in)

- a Retaining tab
b Production-related recesses, no function for the user

Environment

Ambient temperature

Cabinet device

- Generally 0 to 50 °C (32 to 122 °F), with the exception of packages under the following point in the list
- 0 to 45 °C (32 to 113 °F) for the following packages:
CM44P-**DINP2M4*A5FI*****+...

External display (optional)

-20 to 60 °C (-4 to 140 °F)

Field device

- Generally -20 to 50 °C (-4 to 122 °F), with the exception of packages under the following point in the list
- -20 to 45 °C (-4 to 113 °F) for the following packages:
CM44P-**FIHP2M4*A5FI*****+...

Storage temperature

Cabinet device

-25 to 85 °C (-13 to 185 °F)

Field device

-40 to +80 °C (-40 to 176 °F)

Relative humidity

cabinet device

5 to 85%, not condensing

External display (in installed state)

10 to 95%, not condensing

Field device

10 to 95 %, non-condensing

Degree of protection

cabinet device

IP20

External display

IP66 front-panel, when installed correctly including seal for housing door

Field device

IP66/67 as per IEC 60529

Housing protection rating NEMA Type 4X as per UL 50E

Climate class (cabinet device only)

As per IEC 60654-1: B2

Vibration resistance**Environmental tests**

Vibration test according to DIN EN 60068-2

Vibration test according to DIN EN 60654-3

Post or pipe mounting

Frequency range 10 to 500 Hz (sinusoidal)

Amplitude 10 to 57.5 Hz: 0.15 mm
57.5 to 500 Hz: 2 g ¹⁾

Test duration 10 frequency cycles/ spatial axis, in 3 spatial axes (1 oct./min)

Wall mounting

Frequency range 10 to 150 Hz (sinusoidal)

Amplitude 10 to 12.9 Hz: 0.75 mm
12.9 to 150 Hz: 0.5 g ¹⁾

Test duration 10 frequency cycles/ spatial axis, in 3 spatial axes (1 oct./min)

1) g ... acceleration due to gravity (1 g $\approx$ 9.81 m/s²)**Electromagnetic compatibility**

Interference emission and interference immunity as per EN 61326-1, class A for industrial areas

Electrical safety**Cabinet device**

IEC 61010-1, Class I equipment

Low voltage: overvoltage category II

Environment < 2000 m (< 6562 ft) above MSL

Field device

IEC 61010-1, Class I equipment

Low voltage: overvoltage category II

Environment < 3000 m (< 9840 ft) above MSL

Pollution degree**cabinet device**

The product is suitable for pollution degree 2.

Optional display (for cabinet device)

The product is suitable for pollution degree 4.

Field device

The product is suitable for pollution degree 4.

Pressure compensation to environment (field device only)


Filter made of GORE-TEX used as pressure compensation element

Ensures pressure compensation to environment and guarantees IP protection.

Mechanical construction

Dimensions


Field device

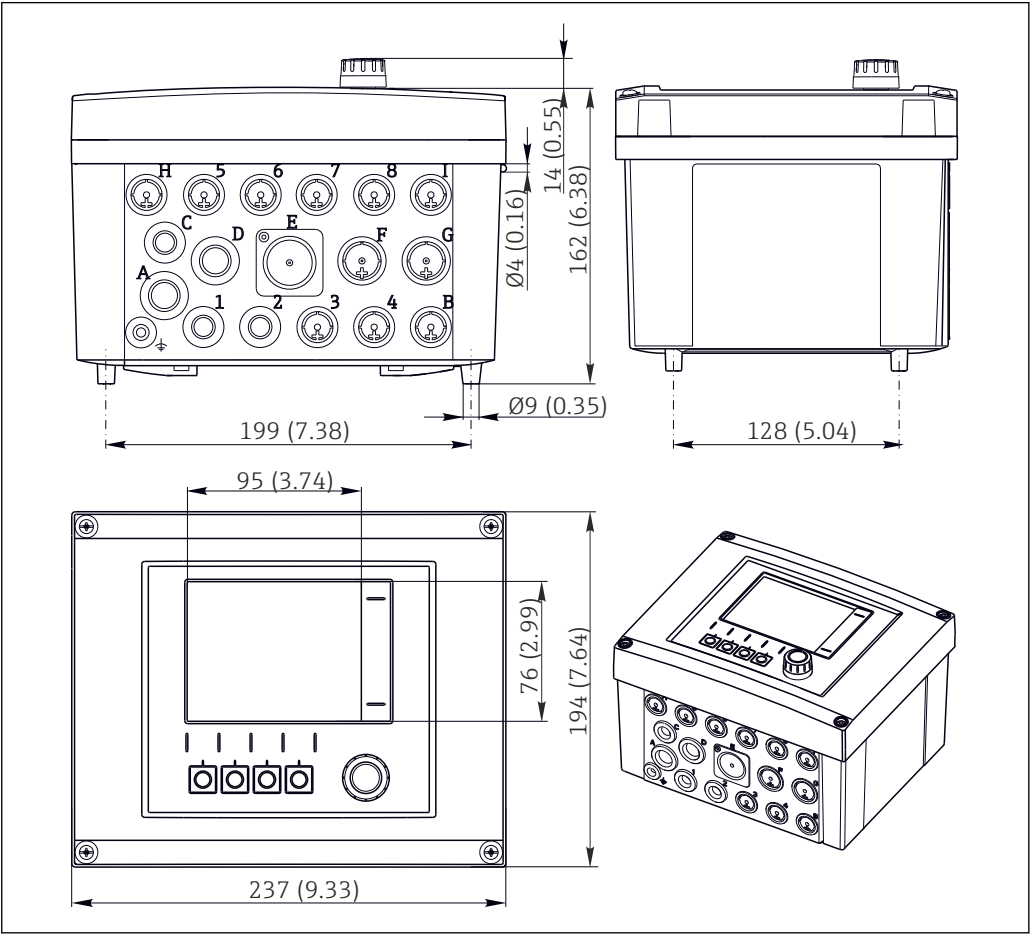

34 Dimensions of field housing in mm (in)

A0012396


cabinet device

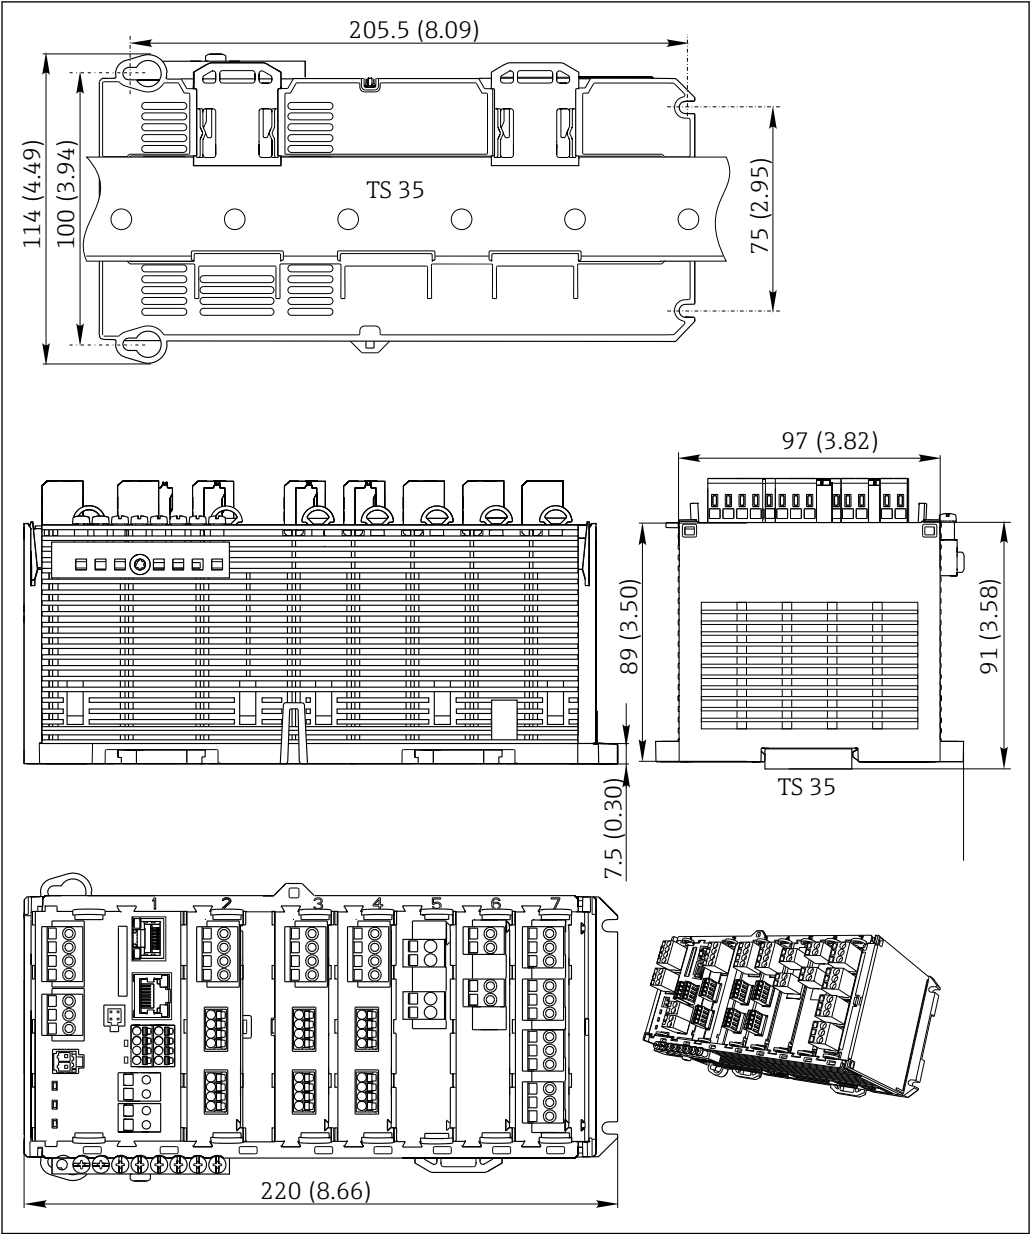

35 Dimensions in mm (inch)

A0039730


Optional display (for cabinet device)

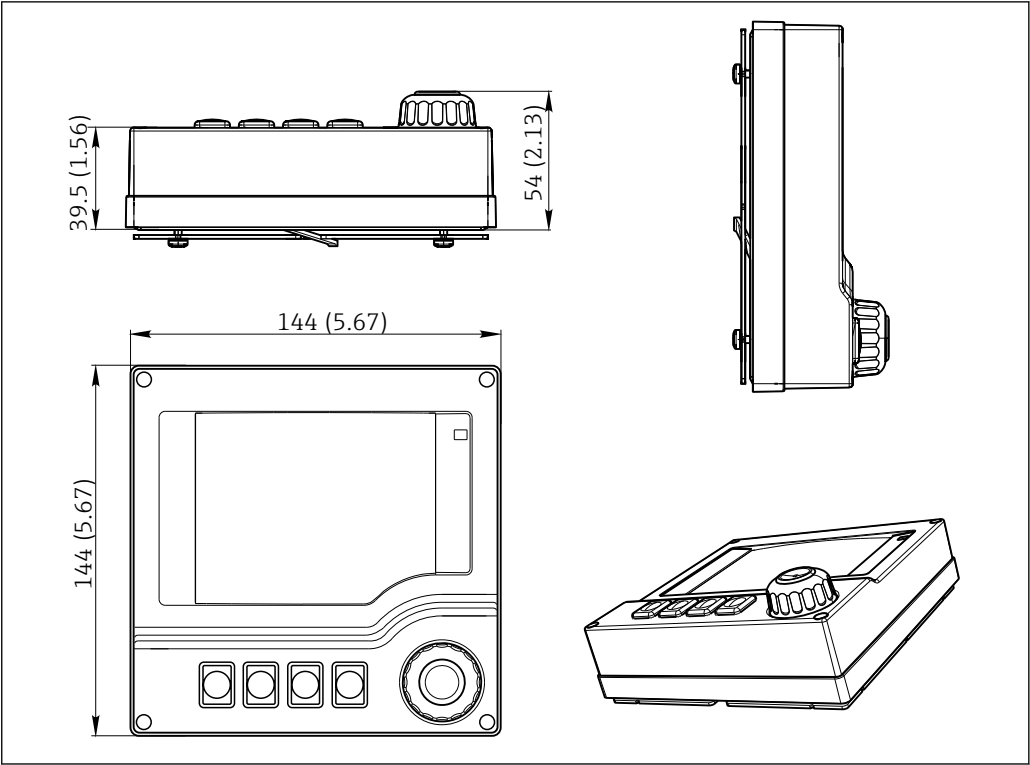


36 Dimensions in mm (inch)

External power units (for cabinet device)


Depending on the version ordered, a power unit for connection to 230 V or 24 V is supplied. There are two delivery variants for each version (cannot be selected). The factory-preferred variant is shown on the left in each case.

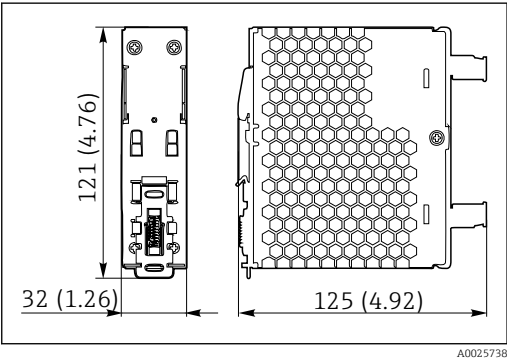


37 Power unit 230 V

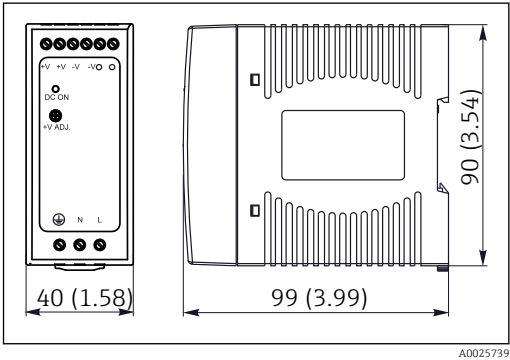

38 Power unit 230 V (optional)

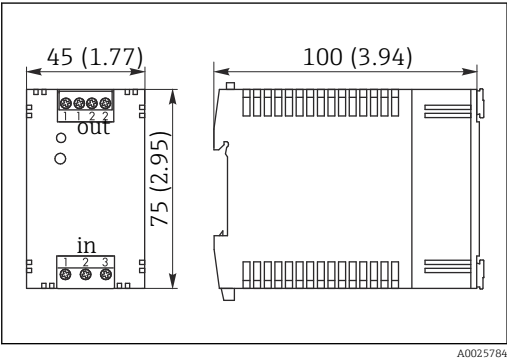

39 Power unit 24 V

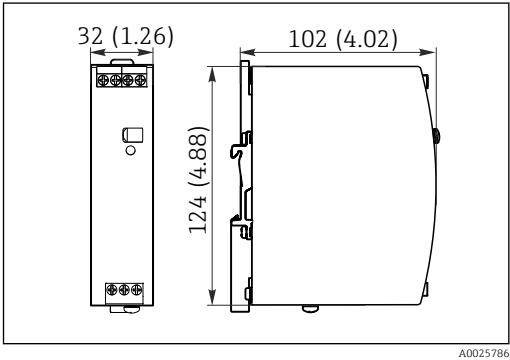


40 Power unit 24 V (optional)

Service display (accessories)

The service display comprises:

- Portable display (same dimensions as under "Optional display")
- Cover to protect the display and to hook it onto the (open) cabinet door

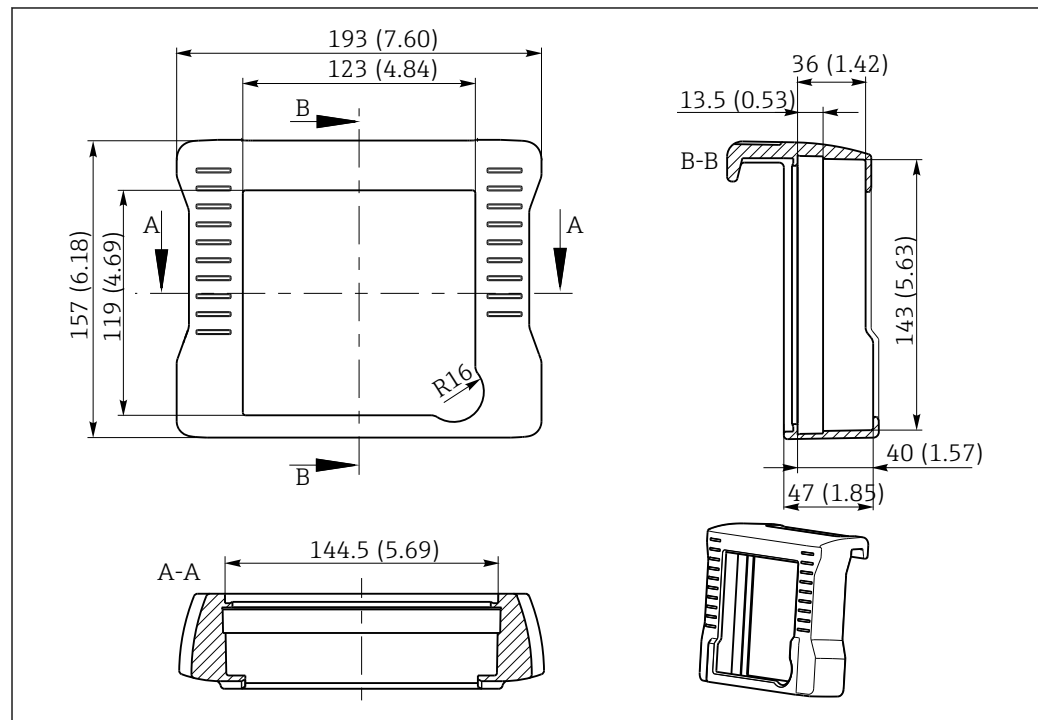

A0025343

41 Dimensions of the service display cover in mm (inch)

Weight**Field device**

Complete device

Approx. 2.1 kg (4.63 lbs), depending on the version

Individual module

Approx. 0.06 kg (0.13 lbs)

Cabinet device

CM44P (fully configured)

Approx. 0.95 kg (2.1 lbs)

Individual module

Approx. 0.06 kg (0.13 lbs)

External display (excluding cables)

Approx. 0.56 kg (1.2 lbs)

Service display cover

0.46 kg (1 lbs)

External power unit

0.27 to 0.42 kg (0.60 to 0.92 lbs), depending on the power unit variant

Materials	Housing base and DIN rail housing	PC-FR
	Display cover	PC-FR
	Display film and soft keys (field device)	PE
	Housing seal Display seal	EPDM
	Soft keys (optional display)	EPDM
	Module side panels	PC-FR
	Module housing 2DS Ex-i	PC-PBT
	Module covers	PBT GF30 FR
	Cable mounting rail (field device) Terminal strip (cabinet device)	PBT GF30 FR, stainless steel 1.4301 (AISI304) Nickel-plated brass
	Clamps Ground terminals	Stainless steel 1.4301 (AISI304)
	Screws	Stainless steel 1.4301 (AISI304)
	Mounting plate (optional display)	Stainless steel 1.4301 (AISI304)
	Securing screws (optional display)	Steel, galvanized
	Cover for service display (accessories)	EPDM
	Cable glands	Polyamide V0 as per UL94
	Separation element	PC-PBT GF30

Operability

display	Graphic display: ■ Resolution: 240 x 160 pixel ■ Back light with switch-off function ■ Red display background for alarms alerts users to errors ■ Transflective display technology for maximum contrast even in bright environments
---------	--

Operation concept	The simple and structured operating concept sets new standards: ■ Intuitive operation with the navigator and soft keys ■ Fast configuration of application-specific measurement options ■ Easy configuration and diagnosis thanks to plain-text display ■ All languages that can be ordered are available in every device
-------------------	--




42 Easy operation



43 Plain-text menu

Local operation

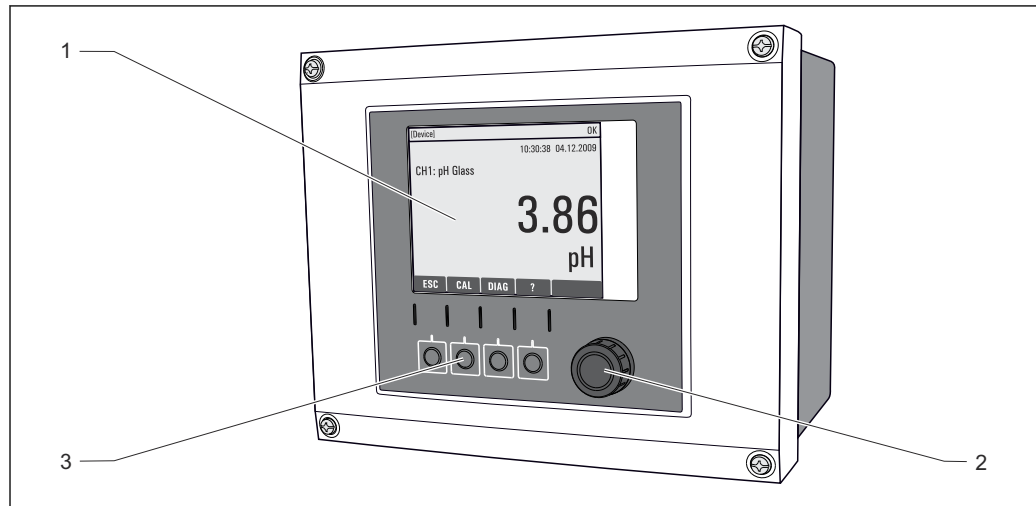


A0011764

44 Overview of operation (using the example of the field device)

- 1 Display (with red display background in alarm condition)
- 2 Navigator (jog/shuttle and press/hold function)
- 3 Soft keys (function depends on menu)

Remote operation

Via HART (e.g. via HART modem and FieldCare)

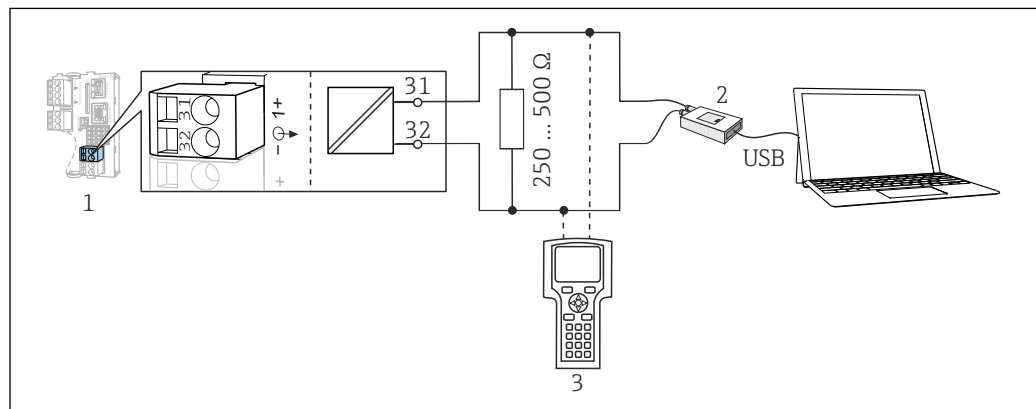

A0039620

45 HART using modem

- 1 Device module Base2-L, -H or -E: current output 1 with HART
- 2 HART modem for connection to PC, e.g. Commubox FXA191 (RS232) or FXA195 ¹⁾ (USB)
- 3 HART handheld terminal

¹⁾ Switch position "on" (substitutes the resistor)

Language packages

The language selected in the product structure is the operating language preset at the factory. All other languages can be selected using the menu.

- English (US)
- German
- Chinese (Simplified, PR China)
- Czech
- Dutch
- French
- Italian
- Japanese
- Polish
- Portuguese
- Russian
- Spanish
- Swedish
- Turkish

- Hungarian
- Croatian
- Vietnamese

The availability of other languages can be checked via the product structure at www.endress.com/cm44p.

Certificates and approvals

Current certificates and approvals for the product are available at www.endress.com on the relevant product page:

1. Select the product using the filters and search field.
2. Open the product page.
3. Select **Downloads**.

Ordering information

Product page	www.endress.com/cm44p
Product Configurator	1. Configure: Click this button on the product page. 2. Select Extended selection. ↳ The Configurator opens in a separate window. 3. Configure the device according to your requirements by selecting the desired option for each feature. ↳ In this way, you receive a valid and complete order code for the device. 4. Accept: Add the configured product to the shopping cart.  For many products, you also have the option of downloading CAD or 2D drawings of the selected product version. 5. CAD: Open this tab. ↳ The drawing window is displayed. You have a choice between different views. You can download these in selectable formats.
Scope of delivery	The scope of delivery comprises: ■ 1 multichannel transmitter in the version ordered ■ 1 mounting plate ■ 1 wiring label (attached at the factory to the inside of the display cover) ■ 1 external display (if selected as an option) ²⁾ ■ 1 DIN rail power unit incl. cable (cabinet device only) ■ 1 printed copy of the Operating Instructions for the DIN rail power unit (cabinet device only) ■ 1 printed copy of the Brief Operating Instructions in the language ordered ■ Separation element (pre-installed on hazardous area version type 2DS Ex-i) ■ Safety instructions for the hazardous area (for hazardous area version type 2DS Ex-i)

Accessories

The following are the most important accessories available at the time this documentation was issued.

2) The external display can be selected as an option in the order structure or ordered as an accessory at a later stage.

Listed accessories are technically compatible with the product in the instructions.

1. Application-specific restrictions of the product combination are possible.
Ensure conformity of the measuring point to the application. This is the responsibility of the operator of the measuring point.
2. Pay attention to the information in the instructions for all products, particularly the technical data.
3. For accessories not listed here, please contact your Service or Sales Center.

Device-specific accessories

Measuring cables

CUK80 cable set

- Pre-terminated and labeled cables for connecting analog photometer sensors
- Order as per product structure

Memosens data cable CYK10

- For digital sensors with Memosens technology
- Product Configurator on the product page: www.endress.com/cyk10



Technical Information TI00118C

Memosens data cable CYK11

- Extension cable for digital sensors with Memosens protocol
- Product Configurator on the product page: www.endress.com/cyk11



Technical Information TI00118C

Sensors

Photometer sensors

OUSAF11

- Optical sensor for VIS/NIR absorption
- Stainless steel housing and sensor head made from dirt-repellent FEP
- Product Configurator on the product page: www.endress.com/ousaf11



Technical Information TI00474C

OUSAF12

- Optical sensor for the measurement of absorbance
- Variety of materials and process connections available
- Product Configurator on the product page: www.endress.com/ousaf12



Technical Information TI00497C

OUSAF22

- Optical sensor for measuring color concentrations
- Variety of materials and process connections available
- Product Configurator on the product page: www.endress.com/ousaf22



Technical Information TI00472C

OUSAF44

- Optical sensor for measuring UV absorption
- Variety of materials and process connections available
- Hygienic design
- Product Configurator on the product page: www.endress.com/ousaf44



Technical Information TI00416C

OUSTF10

- Optical sensor for measuring turbidity and undissolved solids
- Variety of materials and process connections available
- Product Configurator on the product page: www.endress.com/oustf10



Technical Information TI00500C

OUSBT66

- NIR absorption sensor for measuring cell growth and biomass
- Sensor version suitable for pharmaceutical industry
- Product Configurator on the product page: www.endress.com/ousbt66

 Technical Information TI00469C

Glass electrodes

Memosens CPS11E

- pH sensor for standard applications in process and environmental engineering
- Digital with Memosens 2.0 technology
- Product Configurator on the product page: www.endress.com/cps11e

 Technical Information TI01493C

Memosens CPS41E

- pH sensor for process technology
- With ceramic junction and KCl liquid electrolyte
- Digital with Memosens 2.0 technology
- Product Configurator on the product page: www.endress.com/cps41e

 Technical Information TI01495C

Memosens CPS71E

- pH sensor for chemical process applications
- With ion trap for poison-resistant reference
- Digital with Memosens 2.0 technology
- Product Configurator on the product page: www.endress.com/cps71e

 Technical Information TI01496C

Memosens CPS91E

- pH sensor for heavily polluted media
- With open aperture
- Digital with Memosens 2.0 technology
- Product Configurator on the product page: www.endress.com/cps91e

 Technical Information TI01497C

Memosens CPS31E

- pH sensor for standard applications in drinking water and swimming pool water
- Digital with Memosens 2.0 technology
- Product Configurator on the product page: www.endress.com/cps31e

 Technical Information TI01574C

Memosens CPS61E

- pH sensor for bioreactors in life sciences and for the food industry
- Digital with Memosens 2.0 technology
- Product Configurator on the product page: www.endress.com/cps61e

 Technical Information TI01566C

Memosens CPF81E

- pH sensor for mining operations, industrial water and wastewater treatment
- Digital with Memosens 2.0 technology
- Product Configurator on the product page: www.endress.com/cpf81e

 Technical Information TI01594C

Enamel pH electrodes

Ceramax CPS341D

- pH electrode with pH-sensitive enamel
- Meets highest demands of measuring accuracy, pressure, temperature, sterility and durability
- Product Configurator on the product page: www.endress.com/cps341d

 Technical Information TI00468C

*ORP sensors***Memosens CPS12E**

- ORP sensor for standard applications in process and environmental engineering
- Digital with Memosens 2.0 technology
- Product Configurator on the product page: www.endress.com/cps12e



Technical Information TI01494C

Memosens CPS42E

- ORP sensor for process technology
- Digital with Memosens 2.0 technology
- Product Configurator on the product page: www.endress.com/cps42e



Technical Information TI01575C

Memosens CPS72E

- ORP sensor for chemical process applications
- Digital with Memosens 2.0 technology
- Product Configurator on the product page: www.endress.com/cps72e



Technical Information TI01576C

Memosens CPF82E

- ORP sensor for mining operations, industrial water and wastewater treatment
- Digital with Memosens 2.0 technology
- Product Configurator on the product page: www.endress.com/cpf82e



Technical Information TI01595C

Memosens CPS92E

- ORP sensor for use in heavily polluted media
- Digital with Memosens 2.0 technology
- Product Configurator on the product page: www.endress.com/cps92e



Technical Information TI01577C

Memosens CPS62E

- ORP sensor for hygienic and sterile applications
- Digital with Memosens 2.0 technology
- Product Configurator on the product page: www.endress.com/cps62e



Technical Information TI01604C

*pH ISFET sensors***Memosens CPS47E**

- ISFET sensor for pH measurement
- Digital with Memosens 2.0 technology
- Product Configurator on the product page: www.endress.com/cps47e



Technical Information TI01616C

Memosens CPS77E

- Sterilizable and autoclavable ISFET sensor for pH measurement
- Digital with Memosens 2.0 technology
- Product Configurator on the product page: www.endress.com/cps77e



Technical Information TI01396

Memosens CPS97E

- ISFET sensor for pH measurement
- Digital with Memosens 2.0 technology
- Product Configurator on the product page: www.endress.com/cps97e



Technical Information TI01618C

Combined pH/ORP sensors

Memosens CPS16E

- pH/ORP sensor for standard applications in process technology and environmental engineering
- Digital with Memosens 2.0 technology
- Product Configurator on the product page: www.endress.com/cps16e



Technical Information TI01600C

Memosens CPS76E

- pH/ORP sensor for process technology
- Digital with Memosens 2.0 technology
- Product Configurator on the product page: www.endress.com/cps76e



Technical Information TI01601C

Memosens CPS96E

- pH/ORP sensor for heavily polluted media and suspended solids
- Digital with Memosens 2.0 technology
- Product Configurator on the product page: www.endress.com/cps96e



Technical Information TI01602C

Conductivity sensors with inductive measurement of conductivity

Indumax CLS50D

- High-durability inductive conductivity sensor
- For standard and hazardous area applications
- With Memosens technology
- Product Configurator on the product page: www.endress.com/cls50d



Technical Information TI00182C

Indumax CLS54D

- Inductive conductivity sensor
- With certified, hygienic design for food, beverages, pharmaceuticals, and biotechnology
- Product configurator on the product page: www.endress.com/cls54d



Technical Information TI00508C

Conductivity sensors with conductive measurement of conductivity

Memosens CLS15E

- Digital conductivity sensor for measurements in pure and ultrapure water
- Conductive measurement
- With Memosens 2.0
- Product Configurator on the product page: www.endress.com/cls15e



Technical Information TI01526C

Memosens CLS16E

- Digital conductivity sensor for measurements in pure and ultrapure water
- Conductive measurement
- With Memosens 2.0
- Product Configurator on the product page: www.endress.com/cls16e



Technical Information TI01527C

Memosens CLS21E

- Digital conductivity sensor for media with medium or high conductivity
- Conductive measurement
- With Memosens 2.0
- Product Configurator on the product page: www.endress.com/cls21e



Technical Information TI01528C

Memosens CLS82E

- Hygienic conductivity sensor
- Digital with Memosens 2.0 technology
- Product Configurator on the product page: www.endress.com/cls82e



Technical Information TI01529C

*Oxygen sensors***Memosens COS22E**

- Hygienic amperometric oxygen sensor with maximum measurement stability over multiple sterilization cycles
- Digital with Memosens 2.0 technology
- Product Configurator on the product page: www.endress.com/cos22e



Technical Information TI01619C

Memosens COS51E

- Amperometric oxygen sensor for water, wastewater and utilities
- Digital with Memosens 2.0 technology
- Product Configurator on the product page: www.endress.com/cos51e



Technical Information TI01620C

Oxymax COS61D

- Optical oxygen sensor for drinking water and industrial water measurement
- Measuring principle: quenching
- With Memosens technology
- Product Configurator on the product page: www.endress.com/cos61d



Technical Information TI00387C

Memosens COS81E

- Hygienic optical oxygen sensor with maximum measurement stability over multiple sterilization cycles
- Digital with Memosens 2.0 technology
- Product Configurator on the product page: www.endress.com/cos81e



Technical Information TI01558C

*Disinfection sensors***Memosens CCS51D**

- Sensor for measuring free available chlorine
- Product Configurator on the product page: www.endress.com/ccs51d



Technical Information TI01423C

*Ion-selective sensors***ISEmax CAS40D**

- Ion selective sensors
- Product Configurator on the product page: www.endress.com/cas40d



Technical Information TI00491C

*Turbidity sensors***Turbimax CUS51D**

- For nephelometric measurements of turbidity and solids in wastewater
- 4-beam scattered light method
- With Memosens technology
- Product Configurator on the product page: www.endress.com/cus51d



Technical Information TI00461C

Turbimax CUS52D

- Hygienic Memosens sensor for turbidity measurement in drinking water, process water and in utilities
- With Memosens technology
- Product Configurator on the product page: www.endress.com/cus52d



Technical Information TI01136C

SAC and nitrate sensors

Viomax CAS51D

- SAC and nitrate measurement in drinking water and wastewater
- With Memosens technology
- Product Configurator on the product page: www.endress.com/cas51d



Technical Information TI00459C

Interface measurement

Turbimax CUS71D

- Immersion sensor for interface measurement
- Ultrasonic interface sensor
- Product Configurator on the product page: www.endress.com/cus71d



Technical Information TI00490C

Spectrometer sensors

Memosens Wave CAS80E

- Measurement of various parameters in liquid media
- With Memosens technology
- Product Configurator on the product page: www.endress.com/cas80e



Technical Information TI01522C

Fluorescence sensors

Memosens CFS51

- Sensor for fluorescence measurement
- With Memosens technology
- Product Configurator on the product page: www.endress.com/cfs51



Technical Information TI01630C

Communication-specific accessory

Device Care SFE100

- Configuration of Endress+Hauser devices
- Fast and easy installation, online application updates, one-click connection to devices
- Automatic hardware identification and driver catalog update
- Device configuration with DTMs



Technical Information Device Care SFE100, TI01134S

Commubox FXA195

Intrinsically safe HART communication with FieldCare via the USB port



Technical Information TI00404F

Commubox FXA291

Connects the CDI interface of measuring devices with the USB port of the computer or laptop



Technical Information TI00405C

Wireless HART adapter SWA70

- Wireless device connection
- Easily integrated, offers data protection and transmission safety, can be operated in parallel with other wireless networks, minimum cabling complexity



Technical Information TI00061S

Field Data Manager Software MS20/21

- PC software for central data management
- Visualization of series of measurements and logbook events
- SQL database for secure data storage

FieldCare SFE500

- Universal tool for field device configuration and management
- Supplied with a complete library of certified DTMs (Device Type Manager) for operation of Endress+Hauser field devices
- Order according to product order structure
- www.endress.com/sfe500

Memobase Plus CYZ71D

- PC software to support laboratory calibration
- Visualization and documentation of sensor management
- Sensor calibrations stored in database
- Product Configurator on the product page: www.endress.com/cyz71d



Technical Information TI00502C

Service-specific accessories**Additional functionality***Hardware extension modules***Kit, extension module AOR**

- 2 x relay, 2 x 0/4 to 20 mA analog output
- Order No. 71111053

Kit, extension module 2R

- 2 x relay
- Order No. 71125375

Kit, extension module 4R

- 4 x relay
- Order No. 71125376

Kit, extension module 2AO

- 2 x 0/4 to 20 mA analog output
- Order No. 71135632

Kit, extension module 4AO

- 4 x analog output 0/4 to 20 mA
- Order No. 71135633

Kit, extension module 2DS

- 2 x digital sensor, Memosens
- Order No. 71135631

Kit, extension module 2AI

- 2 x 0/4 to 20 mA analog input
- Order No. 71135639

Kit, extension module DIO

- 2 x digital input
- 2 x digital output
- Auxiliary voltage supply for digital output
- Order No. 71135638

Upgrade kit, extension module 485DP

- Extension module 485DP
- PROFIBUS DP
- Order No. 71575177

Upgrade kit, extension module 485MB

- Extension module 485MB
- Modbus RS485
- Order No. 71575178

Firmware and activation codes

SD card with Liquiline firmware

- Industrial Flash Drive, 1 GB
- Order No. 71127100



You must quote the serial number of the device when ordering the activation code.

Kit CM442: activation code for 2nd digital sensor input

Order No. 71114663

Activation code for feedforward control

- Requires current input or fieldbus communication
- Order No. 71211288

Activation code for measuring range switch

- Requires digital inputs or fieldbus communication
- Order No. 71211289

Activation code for ChemocleanPlus

- Requires relays or digital outputs or fieldbus communication and optional digital inputs
- Order No. 71239104

Activation code for Heartbeat Verification and Monitoring

Order No. 71367524

Activation code for mathematics

- Formula editor
- Order No. 71367541

Activation code for Ethernet/IP and web server

Order No. XPC0018

Activation code for Modbus TCP and web server

Order No. XPC0020

Activation code for web server for BASE2

Order No. XPC0021

Activation code for PROFINET and web server Base2

Order No. XPC0022

Activation code for HART

Order No. XPC0023

Activation code for Profibus DP for module 485

Order No. XPC0024

Activation code for module 485 Modbus RS485

Order No. XPC0025

Activation code for Liquiline inputs/outputs

Order No. XPC0026

Activation code for additional functions

Order No. XPC0027

System components

RIA14, RIA16

- Field display unit for integration into 4-20 mA circuits
- RIA14 in flameproof metal enclosure



Technical Information TI00143R and TI00144R

RIA15

- Process display unit, Digital display unit for integration into 4-20 mA circuits
- Panel mounting
- With optional HART communication



Technical Information TI01043K

Other accessories**External display³⁾****Graphic display**

- For installation in the control cabinet door or panel
- Order number: 71185295

Service display

- Portable, for commissioning
- Order number: 71185296

SD card

- Industrial Flash Drive, 1 GB
- Order number: 71110815

M12 built-in socket and cable junction with Velcro strip**Kit CM442/CM444/CM448/CSF48: M12 built-in socket for digital sensors**

- Pre-terminated
- Order No. 71107456

Kit CM442/CM444/CM448/CSF48: M12 built-in socket for PROFIBUS DP/Modbus RS485

- B-coded, pre-terminated
- Order No. 71140892

Kit CM442/CM444/CM448/CSF48: M12 built-in socket for Ethernet

- D-coded, pre-terminated
- Order No. 71140893

Kit: external CDI socket, complete

- Retrofit kit for CDI interface, with terminated connecting cables
- Order No. 51517507

Cable junction with Velcro strip

- 4 pieces, for sensor cable
- Order No. 71092051

3) The external display can be selected as an option in the product structure or ordered subsequently as an accessory.



www.addresses.endress.com
