



Special Documentation

FHG51-B#1PB

Clamping device for density measurement with protective guard


For pipes with an outer diameter of 200 to 420 mm (8 to 16.5 in)

Designated use

Clamping device to secure a radiometric measuring system on pipes with an outer diameter of 200 to 420 mm (8 to 16.5 in).


The radiometric measuring system comprises an FQG61 or FQG62 source container and the Gammapiot FMG50 compact transmitter.

Overview

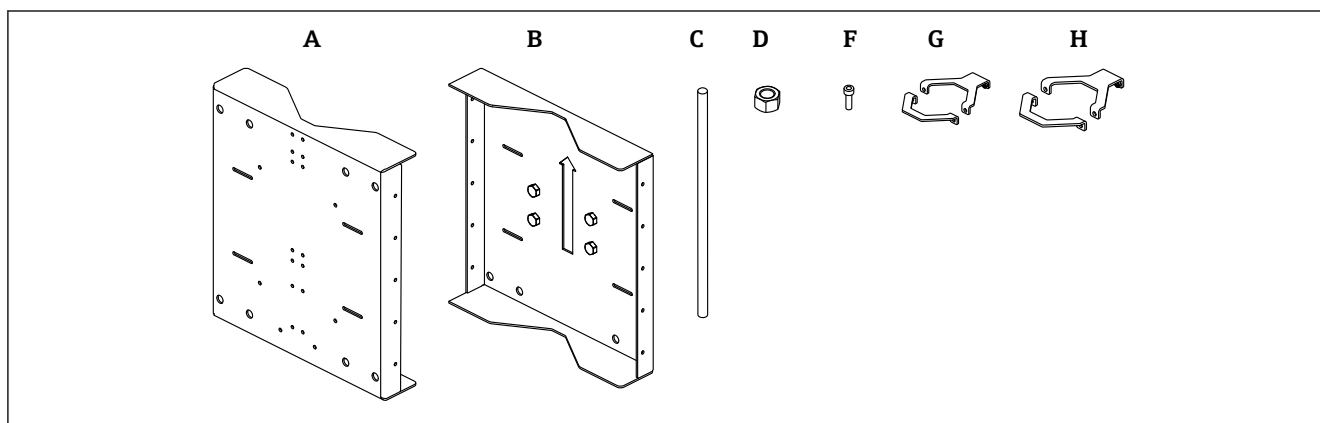

A0041952


- A 1 × retaining plate FMG50; 550 mm (21.65 in) × 500 mm (19.69 in) × 100 mm (3.94 in), 316L (1.4404)
- B 1 × retaining plate FQG61, FQG62; 520 mm (20.47 in) × 500 mm (19.69 in) × 100 mm (3.94 in), 316L (1.4404)
- C 4 × threaded rod DIN976-1 M16×600, A4
- D 20 × nut DIN EN ISO4032 M16, A4
- F 8 × screw DIN EN ISO4762 M6×20, A4
- G 2 × pipe bracket Ø80 mm (3.15 in); 126 mm (4.96 in) × 171 mm (6.73 in) × 18 mm (0.71 in), 316L (1.4404)
- H 1 × pipe bracket Ø95 mm (3.74 in); 140 mm (5.51 in) × 178 mm (7.01 in) × 20 mm (0.79 in), 316L (1.4404)

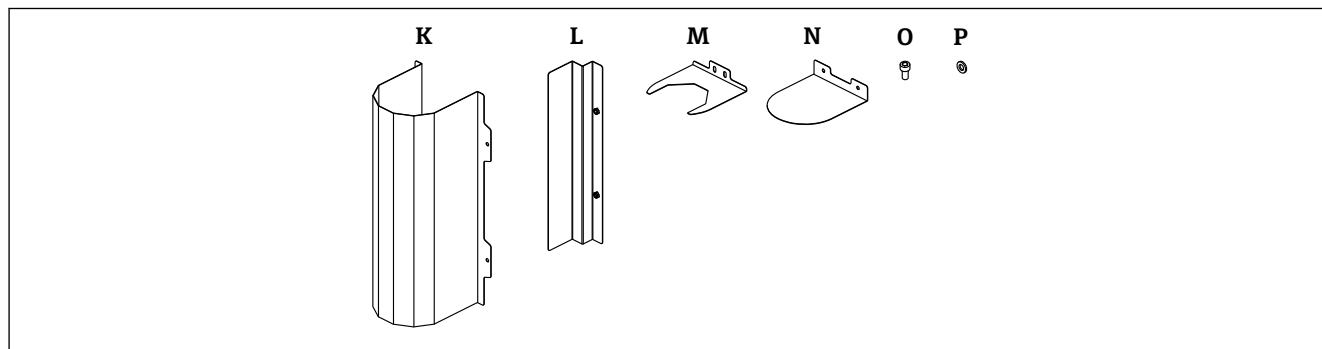

A0041966

- K** 1 × protective guard cover FMG50; 500 mm (19.68 in) × 240 mm (9.45 in) × 187 mm (7.36 in), 316L (1.4404)
L 4 × adjustable protective guard, pipe; 425 mm (16.73 in) × 100 mm (3.94 in) × 60 mm (2.36 in), 316L (1.4404)
M 1 × protective guard, top; 155 mm (6.10 in) × 30 mm (1.81 in) × 150 mm (5.91 in), 316L (1.4404)
N 1 × protective guard, bottom; 155 mm (6.10 in) × 35 mm (1.38 in) × 183 mm (7.20 in), 316L (1.4404)
O 14 × screw DIN EN ISO4762 M6×16, A4
P 8 × washer DIN EN ISO7089-6, A4

Tools list

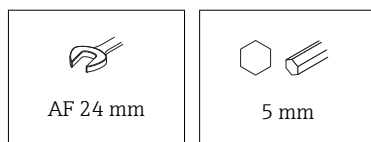

Safety instructions

⚠ CAUTION

Heavy components and devices

Risk of injury, damage to equipment

- Use hoists

⚠ CAUTION

Protruding threaded rods

Risk of injury


- After installation, shorten any protruding threaded rods

Installation



- At least three people are required for the installation
- Mount the clamping device first and then mount the devices.
- Pay attention to the mounting position of the Gammapiot FMG50.
- In the case of the FQG61 and FQG62, ensure that the lifting eye bolt is aligned.


Gammapiilot mounting position

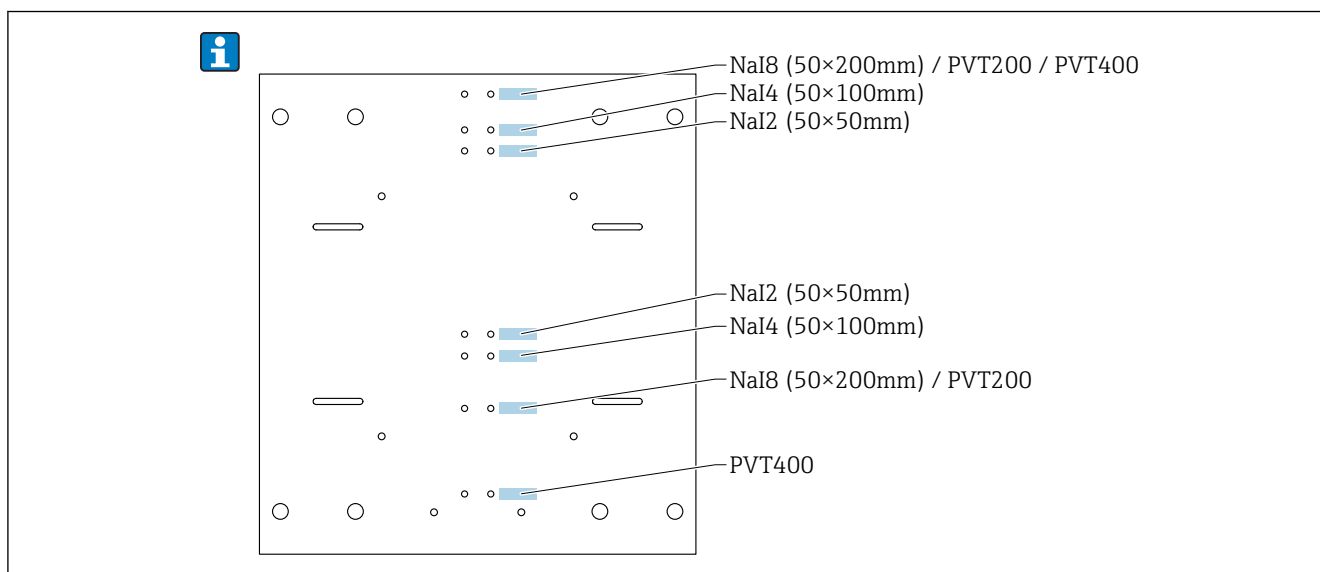

A0041940

1 Gammapiilot mounting position


Alignment of source container

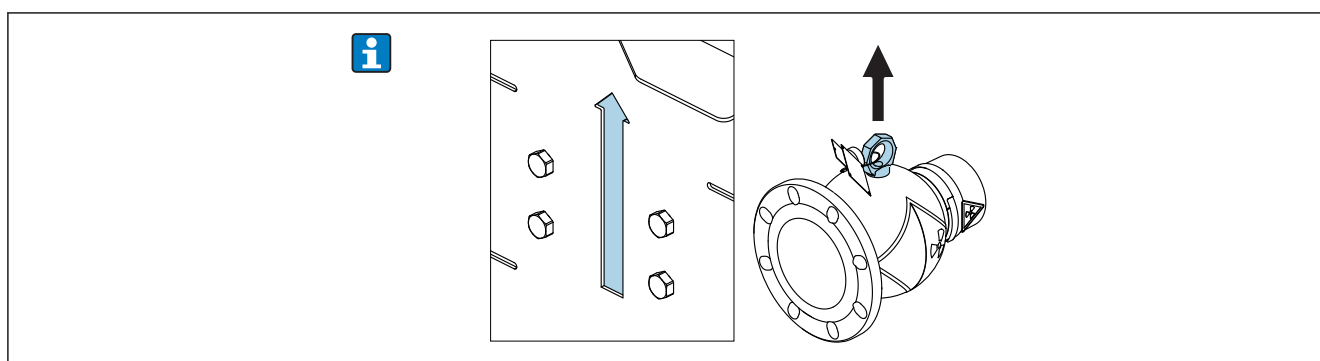

A0042096

2 Alignment of source container

Mounting position of pipe bracket

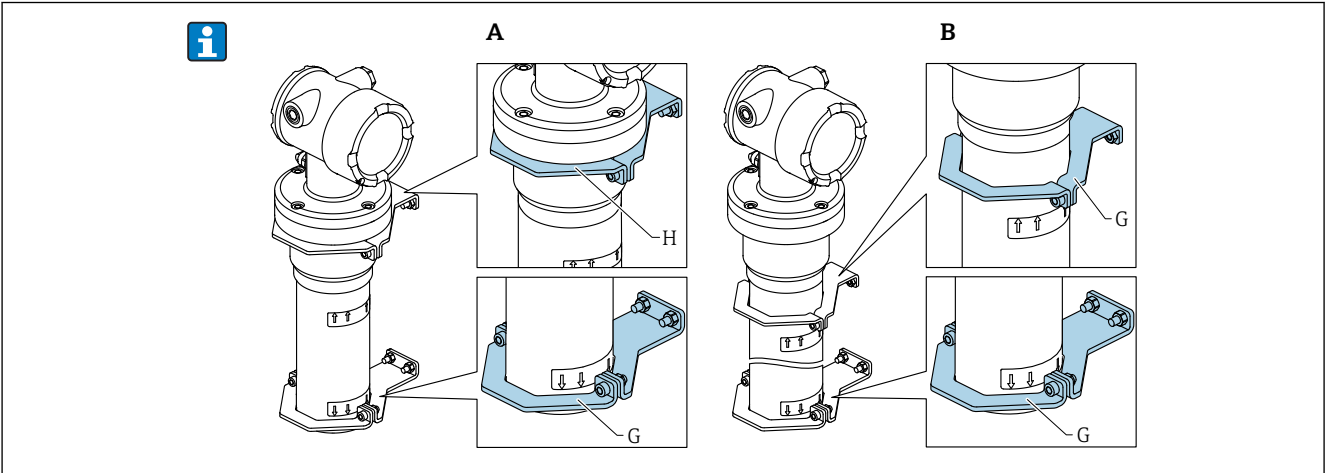


A0042097


3 Mounting position of pipe bracket

- A FMG50 sensor - NaI, PVT200
- B FMG50 sensor - PVT400

Pre-assembly

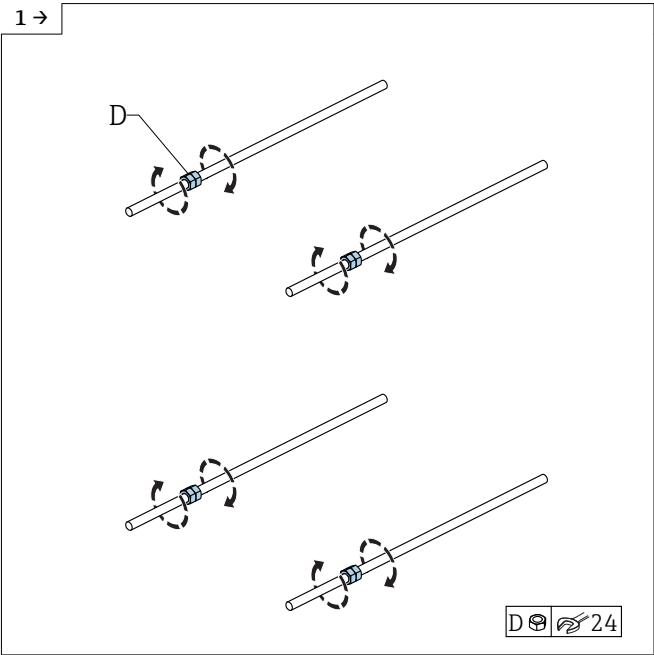


A0042032

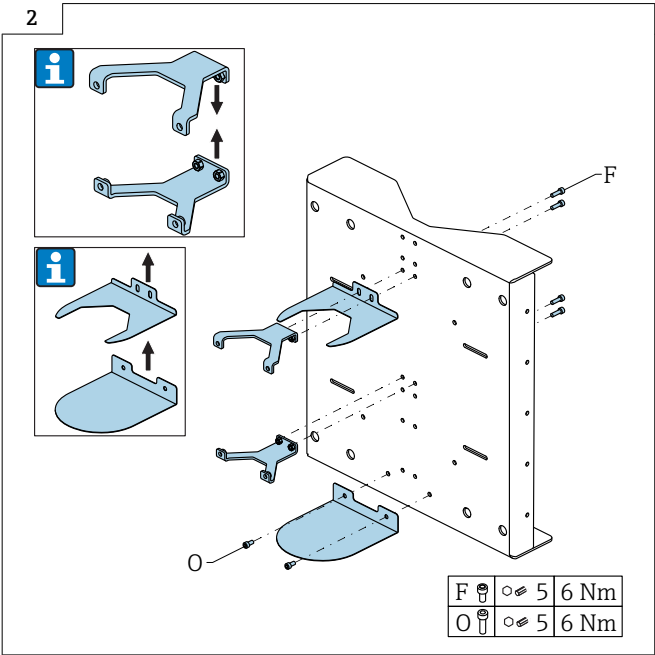


A0042033


Installation steps

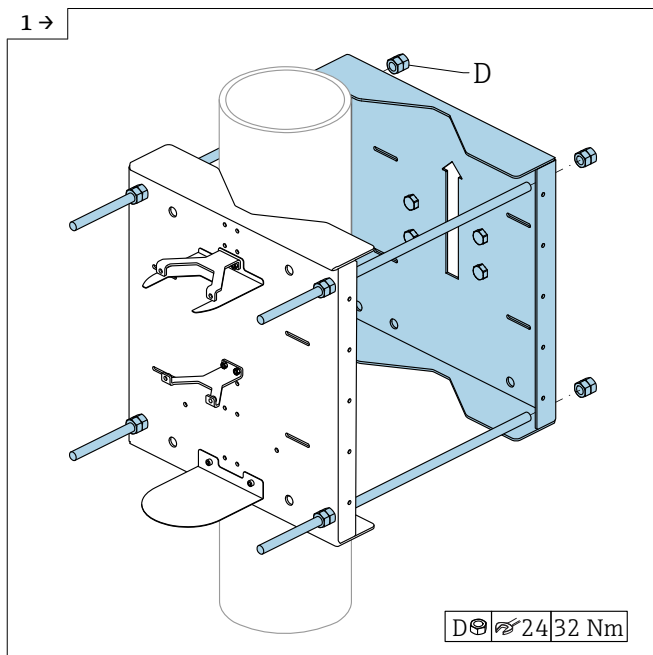


A0042034

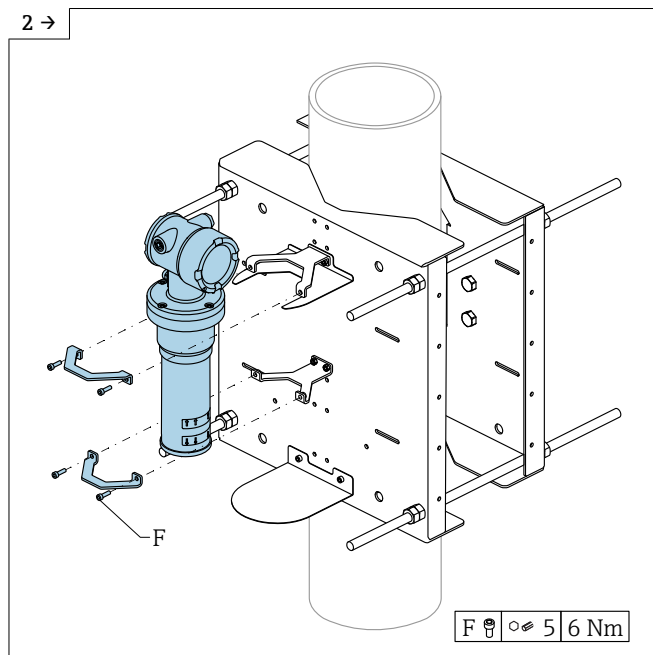

A0042035

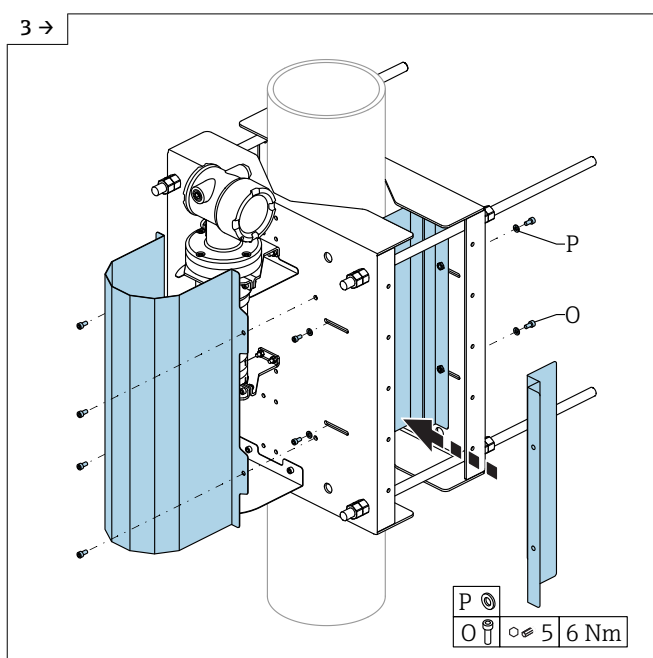


A0042036

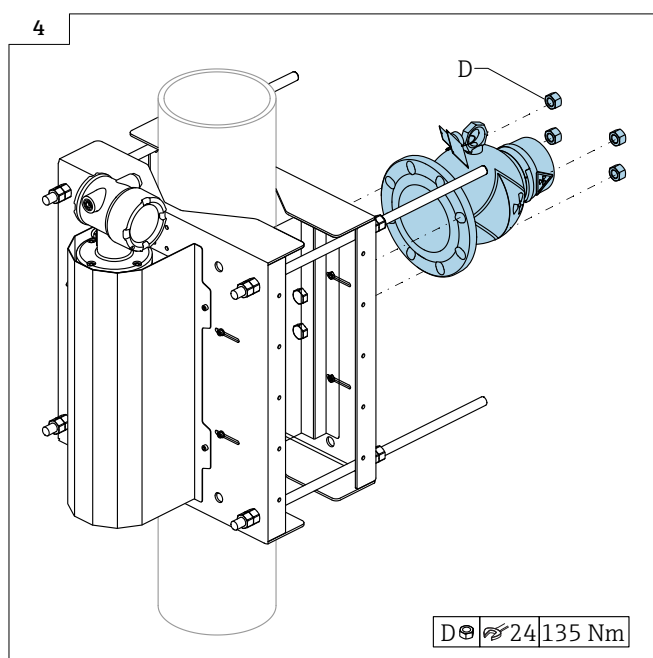

A0042037

Dimensions and weight

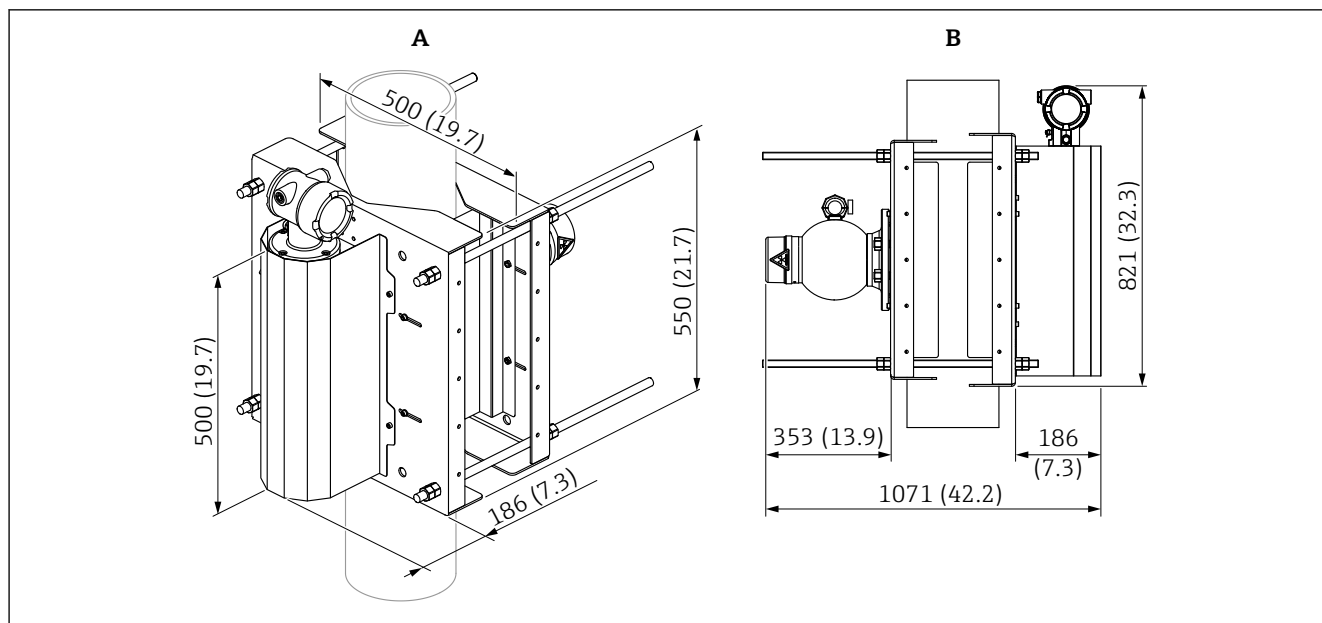

A0042038

Unit of measurement mm (in)

A Product dimensions

B Maximum required installation space; less space may be required depending on the device selected

Weight: approx. 37 kg (excluding detector and source container)

Supplementary documentation

The following supplementary documentation is available in the Downloads section of the Endress+Hauser website (www.endress.com/downloads):

Gammapirot FMG50



BA01966F

Source container FQG61, FQG62



TI00435F