# Technical Information Liquiline CM442/CM444/CM448

Multiparameter transmitter with a maximum of eight measuring channels based on digital Memosens technology



For monitoring and controlling processes in industry and the environmental sector

### Application

- Water and wastewater
- Power stations
- Chemical industry
- Other industrial applications

### Your benefits

- Highly flexible:
  - Able to connect up to 8 Memosens sensors
  - Mathematics functions calculate new measured values
  - Digital fieldbuses (HART, PROFIBUS, Modbus, Ethernet/IP, PROFINET) and integrated web server
  - Choice of cleaning function, controller and alarm relay

- Optional digital or analog inputs/outputs
- Maximum process safety thanks to standardized operating concept across all devices in the Liquiline, sampler and analyzer platform
- Fast commissioning thanks to:
  - Memosens: lab-calibrated sensors & hot plug-and-play
  - Preconfigured Liquiline transmitters
  - Easy extension and adaptation
- Minimum inventory:
  - Cross-platform, modular concept (e.g. identical modules irrespective of parameters)
  - Integration into FieldCare and W@M facilitates effective asset management



### Table of contents

Function and system design		External power supply	
Measuring system		PFM function	
Application example	5	Auxiliary voltage	
		Cable specification	
Device architecture		cable specification	47
Slot and port assignment		Current outputs, active	22
Order of the modules		Current outputs, active	
Determining the hardware delivery status		Signal characteristic	
Terminal diagram		Electrical specification	
Device configuration using the example of a CM442-	<i>'</i>	Cable specification	
**M1A1F0*	8	· ·	
Function diagram CM442		Relay outputs	24
Device configuration using the example of a CM444-		Electrical specification	
**M42A1FA*		Cable specification	
Function diagram CM444	12		
Device configuration using the example of a CM448-	10	Protocol-specific data	25
**26A1*		HART	
Function diagram CM448	14	PROFIBUS DP	
		Modbus RS485	
Communication and data processing	15	Modbus TCP	
		Ethernet/IP	26
Dependability	15	PROFINET	
	15	Web server	28
Maintainability			
Safety	20	Power supply	28
Input		Power consumption	
Measured variables		Fuse	
Measuring ranges		Overvoltage protection	
Types of input		Cable entries	29
Input signal		Electrical connection	
Cable specification	21	Connecting optional modules	
		Protective ground connection	
Digital inputs, passive		Sensor connection	
Electrical specification			
Span		Performance characteristics	36
PFM function		Response time	36
Test voltage		Reference temperature	
Cable specification		Measured error for sensor inputs	
•		1 1	36
Current input, passive	21		36
Span		1 1	
Signal characteristic		Repeatability	36
Internal resistance			
Test voltage	21	Installation	
		Installation conditions	
Output	22	Installation	38
Output signal			
Signal on alarm		Environment	39
Load		<b>3</b>	39
Linearization/transmission behavior	23	5 1	40
		Humidity	
<i>y</i> 1 , 1	23	Degree of protection	40 40
	23	Electromagnetic compatibility	
		Enectioning inche companionity	-10

2

Electrical safety	40
Degree of contamination	40
Pressure compensation to environment	41
Mechanical construction	41
Dimensions	41
Weight	41
Materials	41
Operability	42
Display	42
Operating concept	42
Local operation	42
Remote operation	43
Language packages	44
Certificates and approvals	45
<b>C€</b> mark	45
EAC	45
cCSAus	45
MCERTS	45
Marine approvals	45
Ordering information	45
Product page	45
Product Configurator	46
Scope of delivery	46
Accessories	46
Protective cover	46
Post mounting kit	46
Measuring cable	46
Sensors	46
Additional functionality	51
Software	52
Other accessories	52

### Function and system design


### Measuring system

The overview shows examples of measuring systems. Other sensors and assemblies can be ordered for conditions specific to your application (www.endress.com/products).

### Measuring point

A complete measuring system comprises:

- TransmitterLiquiline
- Sensors with Memosens technology
- Assemblies to suit the sensors used
- Post or rail mounting (optional)
- Weather protection cover (optional)

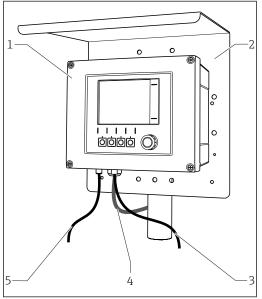

**1** Measuring system (e.g. two-channel device)

Liquiline

Nitrate and SAC

cable

outlet

assembly ■ Holder CYH112

Nitrate in wastewater

- Weather protection cover CYY101 (optional)
- 3, 5 Sensor cable CYK10 or fixed cable

Sensor CAS51D-\*\*A2 with fixed

Dipfit CYA112 immersion

SAC in the wastewater treatment

■ Sensor CAS51D-\*\*2C2 with

• Dipfit CYA112 immersion

Power supply cable (to be provided by the customer)

Turbidity in industrial water

- Sensor Turbimax CUS51D with fixed cable ( $\rightarrow$  Fig.)
- Assembly Flowfit CUA250

Interface in the primary clarifier

### pH value or ORP

pH measurement in drinking water (→ Fig.)

- Retractable assembly Cleanfit CPA871
- Sensor Orbisint CPS11D
- Measuring cable CYK10

ORP in drinking water

- Dipfit CYA112 immersion assembly
- Sensor Orbisint CPS12D
- Measuring cable CYK10

### Conductivity

Inductive conductivity measurement in wastewater treatment


- Sensor Indumax CLS50D
- Sensor fixed cable


Conductive conductivity measurement in power plant cooling water

- Sensor Condumax CLS15D
- Measuring cable CYK10


Oxygen in aeration basins

- Dipfit CYA112 immersion assembly
- Holder CYH112
- Sensor
  - COS61D (optical) with fixed cable (→ Fig.)
  - COS51D (amperometric), cable CYK10

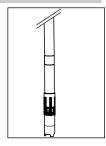

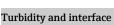

- Spray head CUR3 (optional)
- Sensor Turbimax CUS71D
- Assembly CYA112
- Holder CYH112

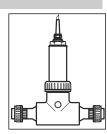


### Disinfection

fixed cable

assembly ■ Holder CYH112

Free available chlorine (and pH) in drinking water


- Sensor CCS142D
- Sensor CPS11D
- Measuring cable CYK10
- Flow assembly CCA250

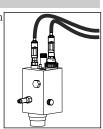

### Ion-selective electrodes

Ammonium and nitrate measurement in the aeration basin

- Sensor CAS40D with fixed cable
- Holder CYH112

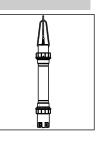


If mounting outdoors, always use the weather protection cover (see "Accessories") to protect the transmitter against weather conditions.

### Application example

### Measuring point at wastewater treatment plant outlet (open channel)

- Transmitter CM444-AAM44A0FF with: 4x Memosens, Modbus TCP, 4 x relays for cleaning/limit value, 2 x analog current input
- pH and temperature with CPS11D, item 1, (www.endress.com/cps11d)
- Turbidity with CUS51D, item 2, (www.endress.com/cus51d)
- Nitrate with CAS51D, item 3, (www.endress.com/cas51d)
- Spectral absorption coefficient with CAS51D, item 4, (www.endress.com/cas51d)
- Flow from external measurement via current input
- Assembly holder CYH112 with assemblies CYA112 (www.endress.com/cyh112)

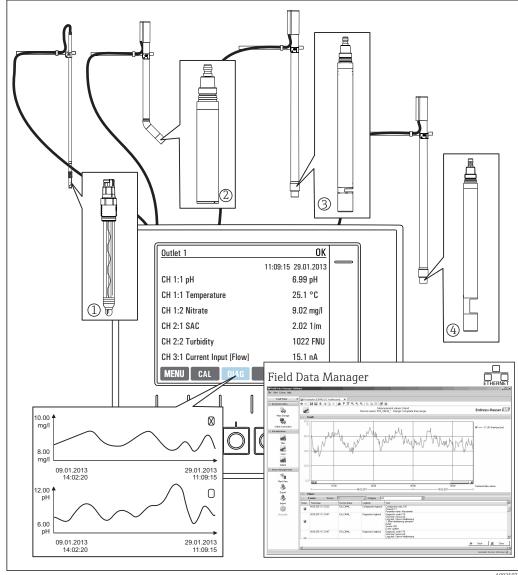


**₽** 2 Measuring point at wastewater treatment plant outlet


Data retention

- Storage of all measured values, incl. values of external sources, in the non-volatile memory (data logbook)
- Data called up on site via user-defined measuring menu and load curve display of the data logbook
- Transmission of data by ethernet, CDI interface or SD card and storage in a tamper-proof database (Field Data Manager)
- Data export to csv file (for Microsoft Excel)


### **Device** architecture

### Slot and port assignment

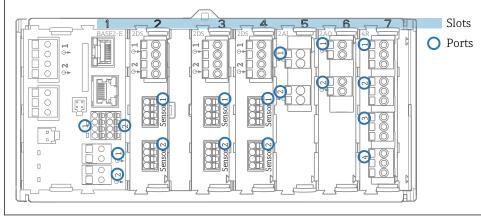

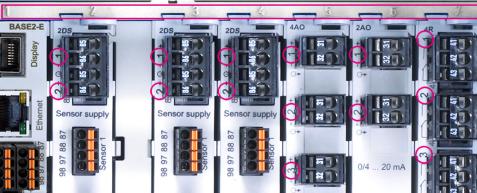

 $\blacksquare$  3 Slot and port assignment of the hardware modules

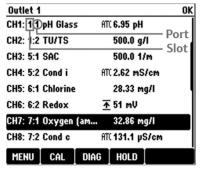

■ 4 Slot and port assignment on the display

- Inputs are assigned to measuring channels in the ascending order of the slots and ports.
  - Adjacent example:
  - "CH1: 1:1 pH glass" means:
  - Channel 1 (CH1) is slot 1 (basic module) : Port 1 (input 1), pH glass sensor
- Outputs and relays are named according to their function, e.g. "current output", and are displayed in ascending order with the slot and port numbers

### Order of the modules

Depending on the version ordered, the device is supplied with a number of electronic modules, which are assigned in a specific sequence in ascending order to slots 0 to 7. If you do not have a particular module, the next moves up automatically:

- The basic module (which is always present) always occupies slots 0 and 1
- Fieldbus module 485
- Memosens input module 2DS (DS = digital sensor)
- Extension module for digital inputs and outputs DIO (DIO = digital input and output)
- Current input module 2AI (AI = analog input)
- Current output module 4AO or 2AO (AO = analog output)
- Relay modules AOR, 4R or 2R (AOR = analog output + relay, R = relay)
- Modules with 4 ports are connected before modules of the same type with 2 ports.

# Basic rule for hardware upgrades

### Please note the following if upgrading the device:

- The sum of all current inputs and outputs may not exceed 8!
- A maximum of two "DIO" modules may be used.

## Determining the hardware delivery status

You must be aware of the type of modules and the number of them supplied with the device you have ordered to determine the delivery status of your Liquiline.

■ Basic module

One basic module in all versions. Always occupies slots 0 and 1.

• Fieldbus module

Optional, and only one fieldbus module is possible.

- Input modules
  - Must be clearly assigned to the number of optional inputs ordered.
  - Examples:
    - 2 current inputs = module 2AI
    - 4 Memosens inputs = 2 inputs with basic module + module 2DS with 2 further inputs
- Current outputs and relays

Various module combinations can exist.

The following table will help you determine which modules your device has, depending on the type and number of outputs.

	Relays		
<b>Current outputs</b>	0	2	4
2	-	1 x 2R	1 x 4R
4	1 x 2AO	1 x AOR	1 x 2AO + 1 x 4R
6	1 x 4AO	1 x 4AO + 1 x 2R	1 x 4AO + 1 x 4R
8	1 x 4AO + 1 x 2AO	1 x 4AO + 1 x 2AO + 1 x 2R	1 x 4AO + 1x 2AO + 1 x 4R

- ▶ Sum up the number of modules and sort them according to the specified sequence  $\rightarrow \triangleq 6$ .
  - ► This will give you the slot assignment for your device.

### Terminal diagram




The unique terminal name is derived from:

Slot no.: Port no.: Terminal

### Example, NO contact of a relay

Device with 4 inputs for digital sensors, 4 current outputs and 4 relays


- Base module BASE2-E (contains 2 sensor inputs, 2 current outputs)
- 2DS module (2 sensor inputs)
- 2AO module (2 current outputs)
- 4R module (4 relays)

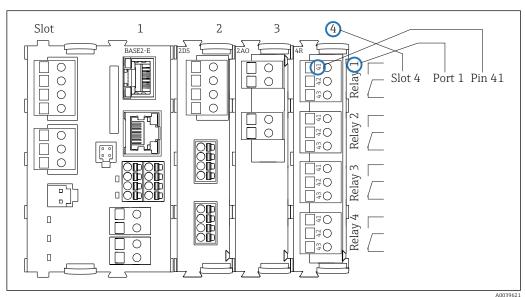


A005

 $\blacksquare$  5 Creating a terminal diagram using the example of the NO contact (terminal 41) of a relay

Device configuration using the example of a CM442-\*\*M1A1F0\*

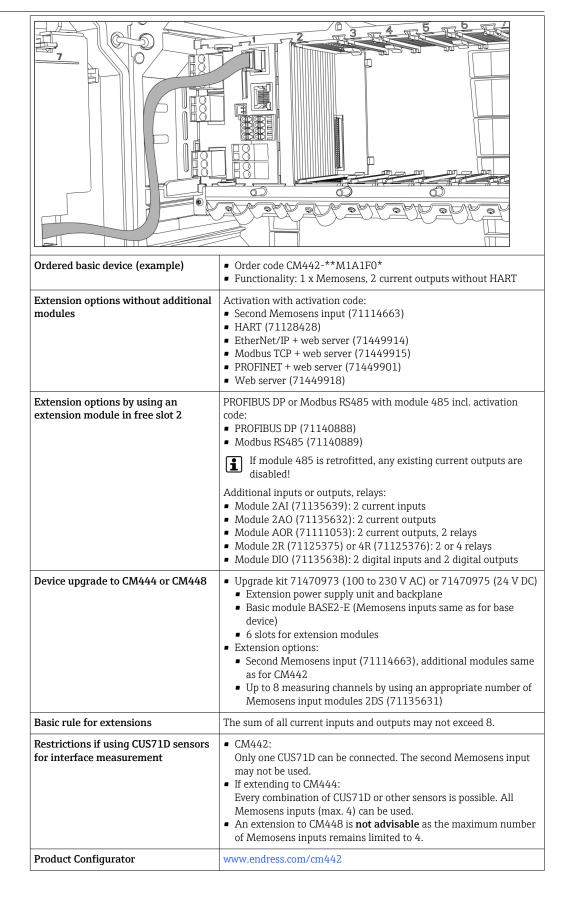

### Function diagram CM442

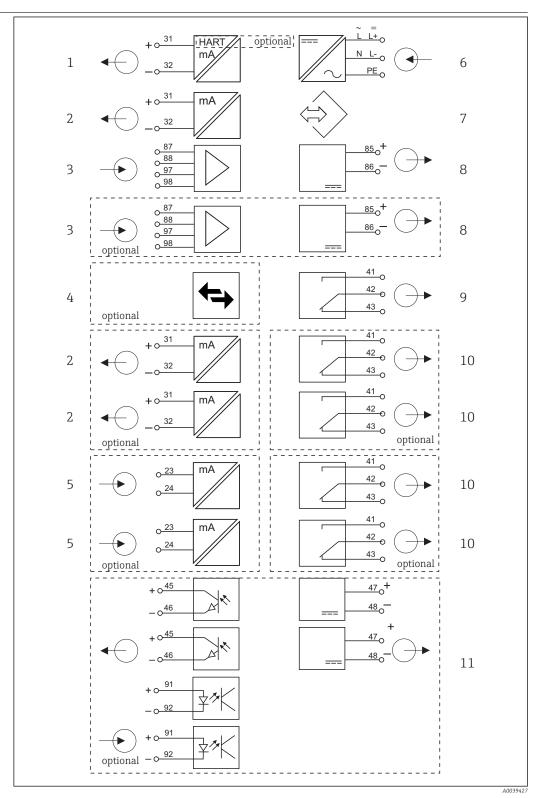

■ 6 Function diagram CM442

1 Current output 1:1, + HART (optional)

2 Current outputs (2 x optional)

3 2 x Memosens input (1 x optional)

4 PROFIBUS DP/Modbus/Ethernet (optional)

5 2 x current input (optional)

6 Power supply

7 Service interface


8 Power supply, fixed cable sensors

9 Alarm relay

10 2 or 4 x relays (optional)


11 2 digital inputs and outputs (optional)

Device configuration using the example of a CM444-\*\*M42A1FA\*

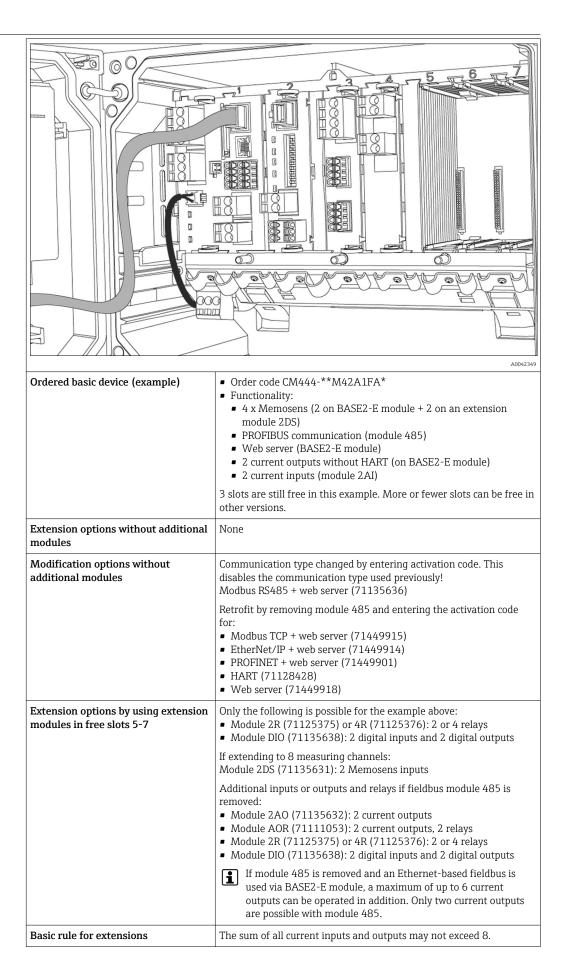

Restrictions if using CUS71D sensors for interface measurement	<ul> <li>In the case of CM444, every combination of Memosens sensors (max. 4) is possible.</li> <li>An extension to CM448 is not advisable as the maximum number of Memosens inputs when using CUS71D remains limited to 4.</li> </ul>
Product Configurator	www.endress.com/cm444

### Function diagram CM444

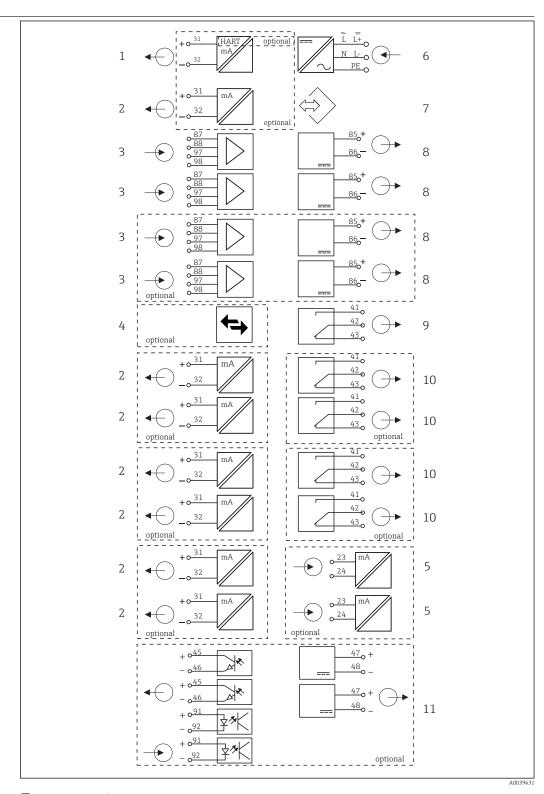


■ 7 Function diagram CM444

- 1 Current output 1:1, + HART (both optional)
- 2 *Max.* 7 x current output (optional)
- 3 Memosens input (2 x standard + 2 x optional)
- 4 PROFIBUS DP/Modbus/Ethernet (optional)
- 5 2 x current input (optional)
- 6 Power supply
- 7 Service interface
- 8 Power supply, fixed cable sensors
- 9 Alarm relay
- 10 2 or 4 x relays (optional)
- 11 2 digital inputs and outputs (optional)

12

Device configuration using the example of a CM448-\*\*26A1\*

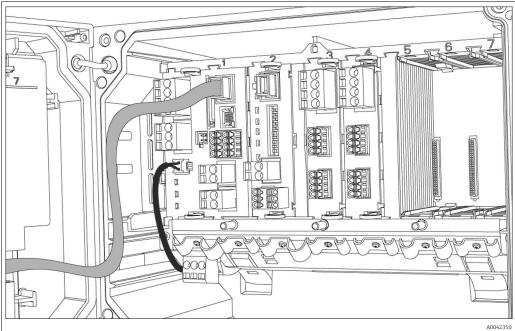


Ordered basic device (example)	Order code CM448-**26A1* Functionality:     6 x Memosens (2 on BASE2-E module + 2 on two 2DS extension modules)     PROFIBUS communication (module 485)     Web server (BASE2-E module)  3 slots are still free in this example. More or fewer slots can be free in other versions.
Extension options without additional modules	Activation code for the use of current outputs of the basic module: 2 current outputs (71140891)
Modification options without additional modules	Communication type changed by entering activation code. This disables the communication type used previously!  Modbus RS485 + web server (71135636)  Retrofit by removing module 485 and entering the activation code for communication via the BASE2 module:  • Modbus TCP + web server (71449915)  • EtherNet/IP + web server (71449914)  • PROFINET + web server (71449901)  • HART (71128428)  • Web server (71449918)
Extension options by using extension modules in free slots 5-7	If extending to 8 measuring channels: Module 2DS (71135631): 2 Memosens inputs  Additional inputs or outputs, relays:  Module 2AO (71135632): 2 current outputs  Module 2AI (71135639): 2 current inputs  Module AOR (71111053): 2 current outputs, 2 relays  Module 2R (71125375) or 4R (71125376): 2 or 4 relays  Module DIO (71135638): 2 digital inputs and 2 digital outputs  If module 485 is removed and an Ethernet-based fieldbus is used, a maximum of up to 6 current outputs can be operated in addition. Only two current outputs are possible with module 485.
Basic rule for extensions	The sum of all current inputs and outputs may not exceed 8.
Restrictions if using CUS71D sensors for interface measurement	The maximum number of Memosens inputs that can be used is limited to 4! Here, every combination of CUS71D and other Memosens sensors is then possible.

www.endress.com/cm448

Endress+Hauser 13

**Product Configurator** 

### Function diagram CM448

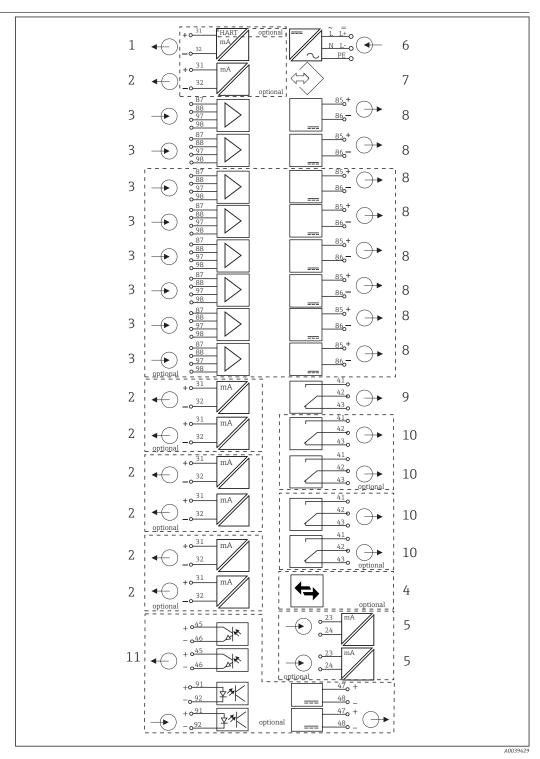

■ 8 Function diagram CM448

- 1 Current output 1:1, + HART (both optional)
- 2 Max. 7 x current output (optional)
- 3 Max 8 x Memosens input (2 x of which are optional)
- 4 PROFIBUS DP/Modbus/Ethernet (optional)
- 5 2 x current input (optional)
- 6 Power supply

- 7 Service interface
- 8 Power supply, fixed cable sensors
- 9 Alarm relay
- 10 2 or 4 x relays (optional)
- 11 2 digital inputs and outputs (optional)

### Communication and data processing

### Communication protocols:

Fieldbus systems

- HART
- PROFIBUS DP (Profile 3.02)
- Modbus TCP or RS485
- PROFINET
- Ethernet/IP



Only one type of Fieldbus communication can ever be active. The last activation code entered decides which bus is used.

The device drivers available make it possible to perform a basic setup and display measured values and diagnostics information via the fieldbus. A full device configuration via the fieldbus is not possible.

### Extension module 485 and current outputs

For PROFIBUS DP, and Modbus RS485 communication protocols:

■ CM442

Current outputs cannot be used in parallel. Any existing current outputs are deactivated with the installation of 485.

CM444/CM448

A maximum of 2 current outputs can be used in parallel.

### Ethernet functionality via Base2 module and current outputs

■ CM442

A maximum of 2 current outputs can be used in parallel.

■ CM444 and CM448

A maximum of 6 current outputs can be used in parallel.

### Bus termination on the device

- Via slide switch at bus module 485
- Displayed via LED "T" on bus module 485

### Dependability

### Reliability

### Memosens MEMO(SENS

Memosens makes your measuring point safer and more reliable:

- Non-contact, digital signal transmission enables optimum galvanic isolation
- No contact corrosion
- Completely watertight
- Sensor can be calibrated in a lab, thus increasing the availability of the measuring point in the process
- Intrinsically safe electronics mean operation in hazardous areas is not a problem.
- Predictive maintenance thanks to recording of sensor data, e.g.:
  - Total hours of operation
  - Hours of operation with very high or very low measured values
  - Hours of operation at high temperatures
  - Number of steam sterilizations
  - Sensor condition

### Heartbeat diagnostics

- Heartbeat diagnostics screen with graphic indicators for the health of the device and sensor and with a maintenance or (sensor-dependent) calibration timer
- Heartbeat status information on the health of the device and the condition of the sensor
  - ②: Sensor/device condition or maintenance timer > 20 %; no action is required
  - • Sensor/device condition or maintenance timer > 5 ≤ 20 %, maintenance not yet urgent but should be scheduled
  - ②: Sensor/device condition or maintenance timer < 5 %, maintenance is recommended
- The Heartbeat sensor condition is the assessment of the calibration results and the sensor diagnostic functions.

An unhappy smiley can be due to the calibration result, the measured value status or to the operating hours limit having been exceeded. These limits can be configured in the sensor setup in a way that adapts the Heartbeat diagnostics to the application.

### Heartbeat and NAMUR category

The Heartbeat status indicates the sensor or device condition while the NAMUR categories (F, C, M, S) assess the reliability of the measured value. The two conditions can correlate but do not have to.

#### • Example 1

- The number of remaining cleaning cycles for the sensor reaches 20% of the defined maximum number. The Heartbeat symbol changes from ② to ②. The measured value is still reliable so the NAMUR status signal does not change.
- If the maximum number of cleaning cycles is exceeded, the Heartbeat symbol changes from to . While the measured value can still be reliable, the NAMUR status signal changes to M (maintenance required).

### ■ Example 2

The sensor breaks. The Heartbeat status changes immediately from  $\odot$  to  $\odot$  and the NAMUR status signal also changes immediately to F (failure).

### **Heartbeat Monitoring**

Sensor data from Memosens sensors are transmitted via the EtherNet/IP, PROFINET, PROFIBUS DP, HART, Modbus RTU and Modbus TCP fieldbus protocols. These data can be used for predictive maintenance, for instance.

### Examples include:

- Total hours of operation
- Hours of operation with very high or very low measured values
- Hours of operation at high temperatures
- Number of steam sterilizations
- Sensor identification
- Calibration information
- For detailed information on "Ethernet/IP communication", see the product pages on the Internet  $(\rightarrow SD01293C)$ .
- For detailed information on "Modbus communication", see the product pages on the Internet ( $\rightarrow$  SD01189C).
- For detailed information on "PROFINET communication", see the product pages on the internet ( $\rightarrow$  SD02490C).
- For detailed information on "PROFIBUS communication", see the product pages on the Internet ( $\rightarrow$  SD01188C).
- More detailed information on HART communication is provided on the product pages on the Internet ( $\rightarrow$  SD01187C).

### **Heartbeat Verification**

Heartbeat Verification makes it possible to verify the correct operation of the measuring device without interrupting the process. This verification can be documented anytime.

### Sensor Check System (SCS)

The Sensor Check System (SCS) monitors the high impedance of the pH glass. An alarm is issued if a minimum impedance value is undershot or a maximum impedance is exceeded.

- Glass breakage is the main reason for a drop in high impedance values
- The reasons for increasing impedance values include:
  - Dry sensor
  - Worn pH glass membrane
- For the SCS, upper and lower limit values can be enabled or disabled independently of one another.

### **Process Check System (PCS)**

The process check system (PCS) checks the measuring signal for stagnation. An alarm is triggered if the measuring signal does not change over a specific period (several measured values).

The main causes of stagnating measured values are:

- Contaminated sensor, or sensor outside of medium
- Sensor defective
- Process error (e.g. through control system)

### **Self-monitoring functions**

Current inputs are deactivated in the event of overcurrent and reactivated once the overcurrent stops. Board voltages are monitored and the board temperature is also measured.

### USP and EP

The limit functions for pharmaceutical water in accordance with USP and EP specifications are implemented in the software for conductivity measurements:

- "Water for Injection" (WFI) as per USP <645> and EP
- "Highly Purified Water" (HPW) as per EP
- "Purified Water" (PW) as per EP

The uncompensated conductivity value and the temperature are measured for the USP/EP limit functions. The measured values are compared against the tables defined in the standards. An alarm is triggered if the limit value is exceeded. Furthermore, it is also possible to configure an early warning alarm that signals undesired operating states before they occur.

### ChemocleanPlus

Freely programmable sequence control


- e.g. for automatic sensor cleaning in retractable assemblies for reliable measurement results in processes with a high risk of contamination
- Individual, time-based activation of 4 outputs e.g. relays
- Starting, stopping or pausing of activities via digital input or fieldbus signals e.g. from limit position switches


### Maintainability

### Modular design

The modular transmitter design means it can be easily adapted to suit your needs:

- Retrofit extension modules for new or extended range of functions, e.g. current outputs, relays and digital communication
- Upgrade to maximum eight-channel measurement
- Optional: M12 sensor connector for connecting any kind of Memosens sensor
- Optional: CDI connector for external access to the service interface (avoids having to unscrew the housing cover)

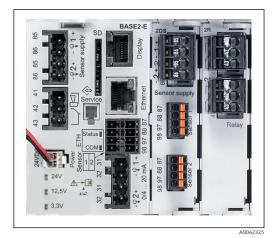

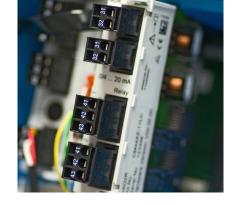


A0042346

■ 9 CM444: example

■ 10 Extension module

### Data logger function

- Adjustable scan time: 1 to 3600 s (1 h)
- Data logbooks:
  - Max. 8 data logbooks
  - 150,000 entries per logbook
  - Graphic display (load curves) or numerical list
- Calibration logbook: max. 75 entries
- Hardware version logbook:
  - Hardware configuration and modifications
  - Max. 125 entries
- Version logbook:
  - E.g. software updates
  - Max. 50 entries
- Operation logbook: max. 250 entries
- Diagnostics logbook: max. 250 entries

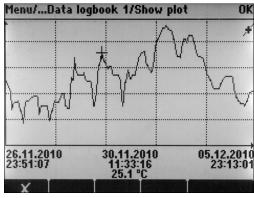

A0015032

🖪 11 🛮 Data logbook: Graphic display



Logbooks remain unchanged even after a software update.

### SD card

The exchangeable storage medium enables:

- Quick and easy software updates and upgrades
- Data storage of internal device memory (e.g. logbooks)
- Transfer of complete configurations to a device with an identical setup (backup function)
- Transfer of configurations without the TAG and bus address to devices with an identical setup (copy function)
- Saving of screenshots for documentation purposes

Endress+Hauser offers industry-approved SD cards as accessories. These memory cards provide maximum data security and integrity.

Other SD cards up to a maximum weight of 5 g can also be used. However, Endress+Hauser does not accept any responsibility for the data security of such cards.

### External signals for device control and for activating external devices

Hardware options, e.g. module "DIO" with 2 digital inputs and 2 digital outputs or fieldbus module "485" enable the following:

- via a digital input signal
  - measuring range switching for conductivity (upgrade code required, see accessories)
  - $\ \ \, \bullet \,$  switching between different calibration datasets in the case of optical sensors
  - an external hold
  - a cleaning interval to be triggered
  - switching on and off a PID controller, e.g. via the proximity switch of the CCA250
  - the use of the input as an "analog input" for pulse-frequency modulation (PFM)
- via a digital output signal
  - the static transmission (similar to a relay) of diagnostic states, point level switch states etc.
  - the dynamic transmission (comparable to a non-wearing "analog output") of PFM signals, e.g. to control dosing pumps.

### FieldCare and Field Data Manager

#### **FieldCare**


Configuration and asset management software based on FDT/DTM technology

- Complete device configuration when connected via FXA291 and service interface
- Access to a number of configuration parameters and identification, measuring and diagnostic data when connected via HART modem
- Logbooks can be downloaded in CSV format or binary format for "Field Data Manager" software

### Field Data Manager

Visualization software and database for measuring, calibration and configuration data

- SQL database which is protected against manipulation
- Functions to import, save and print out logbooks
- Load curves to display measured values

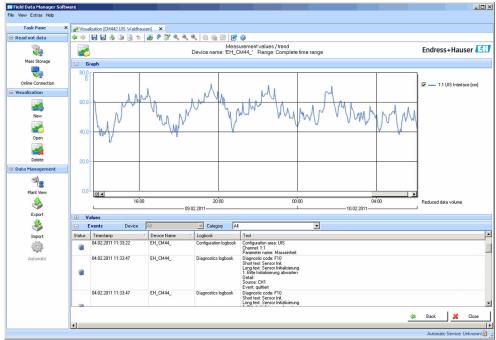

■ 12 Field Data Manager: Load curves

Virtual process values (mathematical functions)

In addition to "real" process values, which are provided by connected physical sensors or analog inputs, mathematical functions can be used to calculate a maximum of 8 "virtual" process values.

The "virtual" process values can be:

- Output via a current output or a fieldbus
- Used as a controlled variable
- $\ \ \, \blacksquare$  Assigned as a measured variable to a limit switch
- Used as a measured variable to trigger cleaning
- Displayed in user-defined measuring menus

The following mathematical functions are possible:

- Calculation of pH from two conductivity values according to VGB 405 RL, e. g. in boiler feedwater
- Difference between two measured values from different sources, e. g. for membrane monitoring
- Differential conductivity, e. g. for monitoring the efficiency of ion exchangers
- Degassed conductivity, e. g. for process controls in power plants
- Redundancy for monitoring two or three redundant sensors
- rH calculation based on the measured values of a pH and an ORP sensor
- Calculation of the remaining capacity of a cation exchanger
- Formula editor

Endress+Hauser 19

A0016009

A0016009

### **Concentration tables**

When the device is delivered from the factory, tables are saved in the device that allow inductive conductivity measurements to be converted to concentrations of certain substances. 4 user-defined tables are also possible.

*The following factory concentration tables are available:* 

NaOH	0 to 15 %	0 to 100 °C (32 to 212 °F)
NaOH	25 to 50%	2 to 80 °C (36 to 176 °F)
HCl	0 to 20 %	0 to 65 °C (32 to 149 °F)
$HNO_3$	0 to 30 %	2 to 80 °C (36 to 176 °F)
$H_2SO_4$	0.5 to 27 % and 35 to 85 %	0 to 100 °C (32 to 212 °F)
$H_2SO_4$	93 to 100 %	10 to 115 °C (50 to 239 °F)
$H_3PO_4$	0 to 40 %	2 to 80 °C (36 to 176 °F)
NaCl	0 to 26 %	2 to 80 °C (36 to 176 °F)

### Safety

#### Real-time clock

The device has a real-time clock, which is buffered by a button cell battery if the power supply fails.

This ensures that the device continues to keep the correct date and time when it is restarted and that the time stamp for the logbooks is correct.

### Data security

All settings, logbooks etc. are stored in a non-volatile memory to ensure that the data are retained even in the event of a disruption to the power supply.

### Measuring range switching for conductivity

- Can be used in CIP processes e.g. for safe monitoring of phase separations
- Switching between 4 complete parameter sets:
  - Conductivity operating mode
  - Concentration tables
  - Temperature compensation
  - Output signal range
  - Limit value switch
- Via digital inputs or fieldbus

### Measured value compensation for oxygen and conductivity

- Pressure or temperature compensation
- Input signals from external sensors via current input or fieldbus
- Signals from connected temperature sensors

### Password protection

Password-protected login

- For remote operation via web server
- For local operation

### **Process safety**

Two independent PID controllers

- One- or two-sided control
- Limit switches
- 4 cleaning programs which can be programmed independently of each other

### IT security

Our warranty is valid only if the device is installed and used as described in the Operating Instructions. The device is equipped with security mechanisms to protect it against any inadvertent changes to the settings.

IT security measures, which provide additional protection for the device and associated data transfer, must be implemented by the operators themselves in line with their security standards.

### Input

Measured variables	→ Documentation of the connected sensor	
Measuring ranges	→ Documentation of the connected sensor	
Types of input	<ul> <li>Digital sensor inputs for sensors with Memosens protocol</li> <li>Analog current inputs (optional)</li> <li>Digital inputs (optional)</li> </ul>	
Input signal	<ul> <li>Depending on version:</li> <li>Max. 8 x binary sensor signal</li> <li>2 x 0/4 to 20 mA (optional), passive, potentially isolated from one another and from the sensor inputs</li> <li>0 to 30 V</li> </ul>	
Cable specification	Cable type  Memosens data cable CYK10 or sensor fixed cable, each with cable end sleeves or M12 round-pin connector (optional)  Cable length  Max. 100 m (330 ft)	

### Digital inputs, passive

Electrical specification	<ul><li>drawing power (passive)</li><li>Galvanically isolated</li></ul>
Span	■ High: 11 to 30 V DC ■ Low: 0 to 5 V DC
Nominal input current	max. 8 mA
PFM function	Minimum pulse width: 500 $\mu$ s (1 kHz)
Test voltage	500 V
Cable specification	Max. 2.5 mm <sup>2</sup> (14 AWG)

### Current input, passive

Span	> 0 to 20 mA
Signal characteristic	Linear
Internal resistance	Non-linear
Test voltage	500 V

### Output

### Output signal

Depending on version:

- ullet 2 x 0/4 to 20 mA, active, galvanically isolated from one another and from the sensor circuits
- $4 \times 0/4$  to 20 mA, active, galvanically isolated from one another and from the sensor circuits
- 6 x 0/4 to 20 mA, active, galvanically isolated from one another and from the sensor circuits
- $\bullet$  8 x 0/4 to 20 mA, active, galvanically isolated from one another and from the sensor circuits
- Optional HART communication (only via current output 1:1)

HART		
Signal encoding	FSK ± 0.5 mA via current signal	
Data transmission rate	1200 baud	
Galvanic isolation	Yes	
Load (communication resistor)	250 Ω	

PROFIBUS DP/RS485	
Signal encoding	EIA/TIA-485, PROFIBUS DP-compliant acc. to IEC 61158
Data transmission rate	9.6 kBd, 19.2 kBd, 45.45kBd, 93.75 kBd, 187.5 kBd, 500 kBd, 1.5 MBd, 6 MBd, 12 MBd
Galvanic isolation	Yes
Connectors	Spring terminal (max. 1.5 mm), bridged internally (T-function), optional M12
Bus termination	Internal slide switch with LED display

Modbus RS485	
Signal encoding	EIA/TIA-485
Data transmission rate	2,400, 4,800, 9,600, 19,200, 38,400, 57,600 and 115,200 baud
Galvanic isolation	Yes
Connectors	Spring terminal (max. 1.5 mm), bridged internally (T-function), optional M12
Bus termination	Internal slide switch with LED display

Ethernet and Modbus TCP		
Signal encoding	IEEE 802.3 (Ethernet)	
Data transmission rate	10/100 MBd	
Galvanic isolation	Yes	
Connection	RJ45, M12 optional	
IP address	DHCP (default) or configuration via menu	

EtherNet/IP		
Signal encoding	IEEE 802.3 (Ethernet)	
Data transmission rate	10/100 MBd	
Galvanic isolation	Yes	
Connection	RJ45, M12 optional (D-encoded)	
IP address	DHCP (default) or configuration via menu	

PROFINET		
Signal encoding IEEE 802.3 (Ethernet)		
Data transmission rate 100 MBd		
Galvanic isolation	Yes	
Connection	RJ45, M12 optional (D-encoded)	
Name of station	Via DCP protocol using the configuration tool (e.g. Siemens PRONETA)	
IP address	Via DCP protocol using the configuration tool (e.g. Siemens PRONETA)	

### Signal on alarm

Adjustable, as per NAMUR Recommendation NE 43

- In measuring range 0 to 20 mA (HART is not available with this measuring range): Failure current from 0 to 23 mA
- In measuring range 4 to 20 mA:
   Failure current from 2.4 to 23 mA
- Factory setting for failure current for both measuring ranges: 21.5 mA

**Load** Max. 500 Ω

### Linearization/transmission behavior

**Electrical specification** 

Linear

### Digital outputs, passive

### \_\_\_\_\_

Passive

Open collector, max. 30 V, 15 mAMaximum voltage drop 3 V

### **External power supply** When using an onsite auxiliary voltage supply and an onsite digital input:

Recommended minimum auxiliary voltage =  $3 V + V_{IHmin}$ 

 $(V_{IHmin} = minimum input voltage required (high-level input voltage)$ 

**PFM function** Minimum pulse width: 500 μs (1 kHz)

### Auxiliary voltage Electrical specification

- Galvanically isolated
- Unregulated, 24 V DC
- Max. 50 mA (per DIO module)

Test voltage 500 V

Cable specification Max. 2.5 mm<sup>2</sup> (14 AWG)

### Current outputs, active

Span 0 to 23 mA
2.4 to 23 mA for HART communication

Signal characteristic Linear

**Electrical specification** 

**Output voltage** 

Max. 24 V

Test voltage

500 V

Cable specification

Cable type

Recommended: shielded cable

Cable specification

Max. 2.5 mm<sup>2</sup> (14 AWG)

### Relay outputs

### **Electrical specification**

### Relay types

- 1 single-pin changeover contact (alarm relay)
- 2 or 4 single-pin changeover contacts (optional with extension modules)

### Maximum load

Alarm relay: 0.5 AAll other relays: 2.0 A

### Relay switching capacity

Base module (Alarm relay)

Switching voltage	Load (max.)	Switching cycles (min.)
230  V AC, cosΦ = 0.8 to 1	0.1 A	700,000
	0.5 A	450,000
115 V AC, $\cos \Phi$ = 0.8 to 1	0.1 A	1,000,000
	0.5 A	650,000
24 V DC, L/R = 0 to 1 ms	0.1 A	500,000
	0.5 A	350,000

### Extension modules

Switching voltage	Load (max.)	Switching cycles (min.)
230 V AC, cosΦ = 0.8 to 1	0.1 A	700,000
	0.5 A	450,000
	2 A	120,000
115 V AC, $\cos \Phi$ = 0.8 to 1	0.1 A	1,000,000
	0.5 A	650,000
	2 A	170,000
24 V DC, L/R = 0 to 1 ms	0.1 A	500,000
	0.5 A	350,000
	2 A	150,000

Cable specification

Max. 2.5 mm<sup>2</sup> (14 AWG)

# Protocol-specific data

	<del>-</del>	
HART	Manufacturer ID	11 <sub>h</sub>
	Device type	155D <sub>h</sub>
	Device revision	001 <sub>h</sub>
	HART version	7.2
	Device description files (DD/DTM)	www.endress.com/hart Device Integration Manager DIM
	Device variables	16 user-definable and 16 predefined device variables, dynamic variables PV, SV, TV, QV
	Supported features	PDM DD, AMS DD, DTM, Field Xpert DD
PROFIBUS DP	Manufacturer ID	11 <sub>h</sub>
	Device type	155D <sub>h</sub>
	Profile version	3.02
	GSD files	www.endress.com/profibus Device Integration Manager DIM
	Output values	16 AI blocks, 8 DI blocks
	Input variables	4 AO blocks, 8 DO blocks
	Supported features	<ul> <li>1 MSCYO connection (cyclical communication, master class 1 to slave)</li> <li>1 MSAC1 connection (acyclical communication, master class 1 to slave)</li> <li>2 MSAC2 connections (acyclical communication, master class 2 to slave)</li> <li>Device lock: The device can be locked using the hardware or software.</li> <li>Addressing using DIL switches or software</li> <li>GSD, PDM DD, DTM</li> </ul>
Modbus RS485	Protocol	RTU/ASCII
	Function codes	03, 04, 06, 08, 16, 23
	Broadcast support for function codes	06, 16, 23
	Output data	16 measured values (value, unit, status), 8 digital values (value, status)
	Input data	4 setpoints (value, unit, status), 8 digital values (value, status), diagnostic information
	Supported features	Address can be configured using switch or software
N. II. TOD		
Modbus TCP	TCP port	502
	TCP connections	3
	Protocol	TCP
	Function codes	03, 04, 06, 08, 16, 23
	Broadcast support for function codes	06, 16, 23
	Output data	16 measured values (value, unit, status), 8 digital values (value, status)
	Input data	4 setpoints (value, unit, status), 8 digital values (value, status), diagnostic information
	Supported features	Address can be configured using DHCP or software

### Ethernet/IP

	I	
Log	EtherNet/IP	
ODVA certification	Yes	
Device profile	Generic device (product type: 0x2B)	
Manufacturer ID	0x049E <sub>h</sub>	
Device type ID	0x109C <sub>h</sub>	
Polarity	Auto-MIDI-X	
Connections	CIP	12
	I/O	6
	Explicit message	6
	Multicast	3 consumers
Minimum RPI	100 ms (default)	
Maximum RPI	10000 ms	
System integration	EtherNet/IP	EDS
	Rockwell	Add-on-Profile Level 3, Faceplate for Factory Talk SE
IO data	Input $(T \rightarrow O)$	Device status and diagnostic message with highest priority
		Measured values:  16 AI (analog input) + Status + Unit 8 DI (discrete input) + Status
	Output (O → T)	Actuating values:  4 A0 (analog output) + status + unit  8 DO (discrete output) + Status

### PROFINET

Protocol	"Application layer protocol for decentral device periphery and distributed automation", PNIO Version 2.34	
Communication type	100 MBit/s	
Conformance Class	Conformance Class B	
Netload Class	Netload Class II	
Baud rate	Automatic 100 Mbps with full-duplex detection	
Cycle times	From 32 ms	
Device profile	Application interface identifier 0xF600 Generic device	
PROFINET interface	1 port, Realtime Class 1 (RT_CLASS_1)	
Manufacturer ID	0x11 <sub>h</sub>	
Device type ID	0x859C D <sub>h</sub>	
Device description files (GSD)	Information and files under:  ■ www.endress.com  On the product page for the device: Documents/Software → Device drivers  ■ www.profibus.com On the website under Products/Product Finder	
Polarity	Auto-polarity for automatic correction of crossed TxD and RxD pairs	
Supported connections	<ul> <li>1 x AR (IO Controller AR)</li> <li>1 x AR (IO-Supervisor Device AR connection allowed)</li> <li>1 x Input CR (Communication Relation)</li> <li>1 x Output CR (Communication Relation)</li> <li>1 x Alarm CR (Communication Relation)</li> </ul>	
Configuration options for measuring device	<ul> <li>Web browser</li> <li>Manufacturer-specific software (FieldCare, DeviceCare)</li> <li>Device master file (GSD), can be read out via the integrated web server of the measuring device</li> </ul>	
Configuration of the device name	DCP protocol	
Supported functions	<ul> <li>Identification &amp; Maintenance         Simple device identification via:         <ul> <li>Process control system</li> <li>Nameplate</li> </ul> </li> <li>Measured value status         <ul> <li>The process variables are communicated with a measured value status</li> </ul> </li> <li>Blinking feature (FLASH_ONCE) via the local display for simple device identification and assignment</li> <li>Device operation via operating tools (e.g. FieldCare, DeviceCare)</li> </ul>	
System integration	For information on system integration, see the Operating Instructions  Cyclic data transmission  Overview and description of the modules  Status coding  Startup configuration  Factory setting	

#### Web server

The Web server enables full access to the device configuration, measured values, diagnostic messages, logbooks and service data via standard WiFi/WLAN/LAN/GSM or 3G routers with a userdefined IP address.

TCP port	80
Supported features	<ul> <li>Remote-controlled device configuration(1 session)</li> <li>Save/restore device configuration (via SD card)</li> <li>Logbook export (file formats: CSV, FDM)</li> <li>Access to Web server via DTM or Internet Explorer</li> <li>Login</li> <li>Web server can be switched off</li> </ul>

### Power supply

### Supply voltage

### CM442

Depending on version:

- 100 to 230 V AC, 50/60 Hz
- Maximum permitted fluctuation of mains supply voltage: ± 15 % of nominal voltage
- 24 V AC/DC, 50/60 Hz

Maximum permitted fluctuation of mains supply voltage: +20/-15% of nominal voltage

#### CM444 and CM448

Depending on the version,:

- 100 to 230 V AC, 50/60 Hz
- Maximum permitted fluctuation of mains supply voltage: ± 15 % of nominal voltage

Maximum permitted fluctuation of mains supply voltage: + 20/- 15 % of nominal voltage

### The device does not have a power switch!

- Provide a protected circuit breaker in the vicinity of the device at the place of installation.
- The circuit breaker must be a switch or power switch, and must be labeled as the circuit breaker
- At the supply point, the power supply must be isolated from dangerous live cables by double or reinforced insulation in the case of devices with a 24 V supply voltage.

### Power consumption

### CM442

Depending on supply voltage

- 100 to 230 V AC and 24 V AC:
  - Max. 55 VA
- 24 V DC:

Max. 22 W

### CM444 and CM448

Depending on supply voltage

- 100 to 230 V AC:
  - Max. 73 VA Max. 68 W
- 24 V DC:

**Fuse** 

Fuse not exchangeable

### Overvoltage protection

Integrated overvoltage/lightning protection as per EN 61326 Protection category 1 and 3

28

### Cable entries

Identification of the cable entry on housing base	Suitable gland
B, C, H, I, 1-8	M16x1.5 mm/NPT3/8"/G3/8
A, D, F, G	M20x1.5 mm/NPT1/2"/G1/2
E	-
±	M12x1.5 mm
RUUU	Recommended assignment
	1-8 Sensors 1-8 A Power supply B RS485 In or M12 DP/RS485 C Can be used freely D,F,G Current outputs and inputs, relays H Can be used freely I RS485 Out or M12 Ethernet E Do not use


### Cable specification


Cable gland	Permitted cable diameter	
M16x1.5 mm	4 to 8 mm (0.16 to 0.32")	
M12x1.5 mm	2 to 5 mm (0.08 to 0.20")	
M20x1.5 mm	6 to 12 mm (0.24 to 0.48")	
NPT3/8"	4 to 8 mm (0.16 to 0.32")	
G3/8	4 to 8 mm (0.16 to 0.32")	
NPT1/2"	6 to 12 mm (0.24 to 0.48")	
G1/2	7 to 12 mm (0.28 to 0.48")	

Cable glands mounted at the factory are tightened with 2 Nm.

### **Electrical connection**

### Basic module

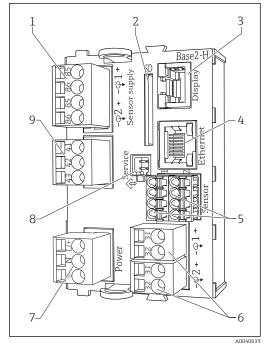

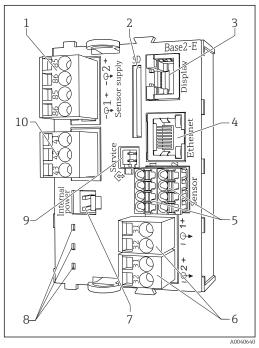



- 13 Basic module BASE2-H or -L (two-channel device)
- 1 Power supply for digital fixed cable sensors with Memosens protocol
- 2 SD card slot
- 3 Slot for display cable 1)
- 4 Ethernet interface
- 5 Connections for 2 Memosens sensors
- 6 Current outputs
- 7 Power connection
- 8 Service interface
- 9 Alarm relay connection

- 14 Basic module BASE2-E (four- and eightchannel device)
- Power supply for digital fixed cable sensors with Memosens protocol
- 2 SD card slot
- 3 Slot for display cable 1)
- 4 Ethernet interface
- 5 Connections for 2 Memosens sensors
- 6 Current outputs
- 7 Socket for internal supply cable 1)
- 7 Socket for inte8 LEDs
- 9 Service interface
- 10 Alarm relay connection

 $<sup>^{1)}</sup>$  Internal device connection. Do not disconnect the plug!


### Connecting supply voltage for CM442

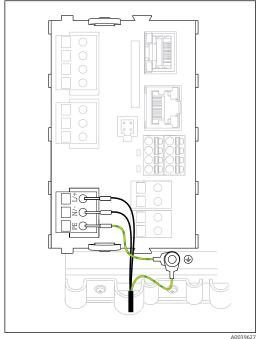

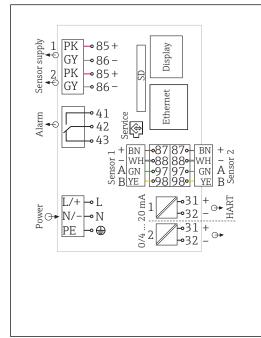


- 15 Connecting power supply on the BASE2-H or -
- 16 Overall wiring diagram for BASE2-H or -L
- H Power unit 100 to 230 VAC
- L Power unit 24 VAC or 24 VDC

### Connecting supply voltage for CM444 and CM448

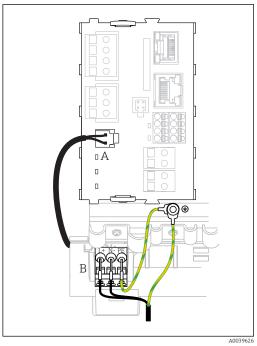

- 17 Power supply connection on the BASE2-E
- A Internal power supply cable
- B Extension power unit

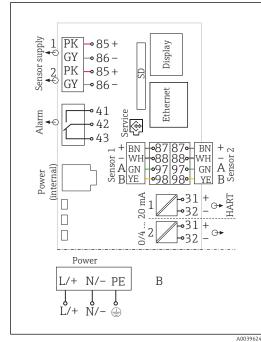

■ 18 Overall wiring diagram for BASE2-E and extension power unit (B)

### Connecting optional modules

With extension modules you can purchase additional functions for your device.


### **NOTICE**


### Unacceptable hardware combinations (due to conflicts in power supply)

Incorrect measurements or total failure of the measuring point as a result of heat build-up or overloading

- ► If you are planning to extend your controller, make sure the resulting hardware combination is permitted (Configurator at www.endress.com/CM442 or .../CM444 or .../CM448).
- ▶ Please note that if you are extending CM442 to CM444 or CM448, you must additionally fit an extension power supply unit and an extension backplane. You must then also use basic module BASE-E.
- ▶ Remember that the sum of all current inputs and outputs may not exceed 8.
- ▶ Make sure not to use more than 2 "DIO" modules. More "DIO" modules are not permitted.
- ▶ Please contact your Endress+Hauser sales center should you have any questions.

Overview of all the modules available

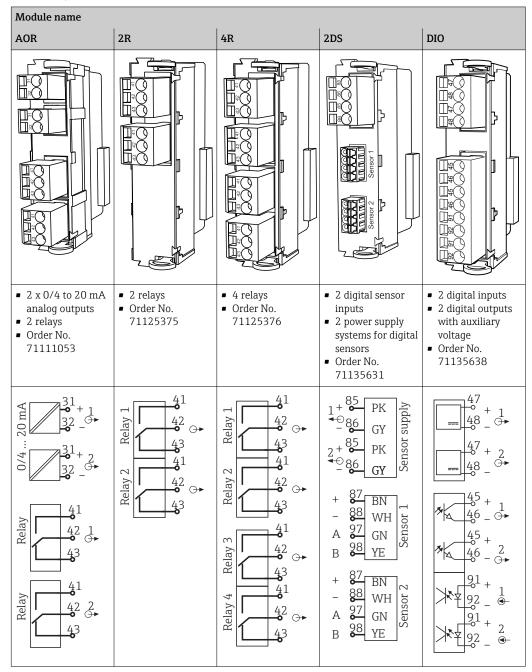

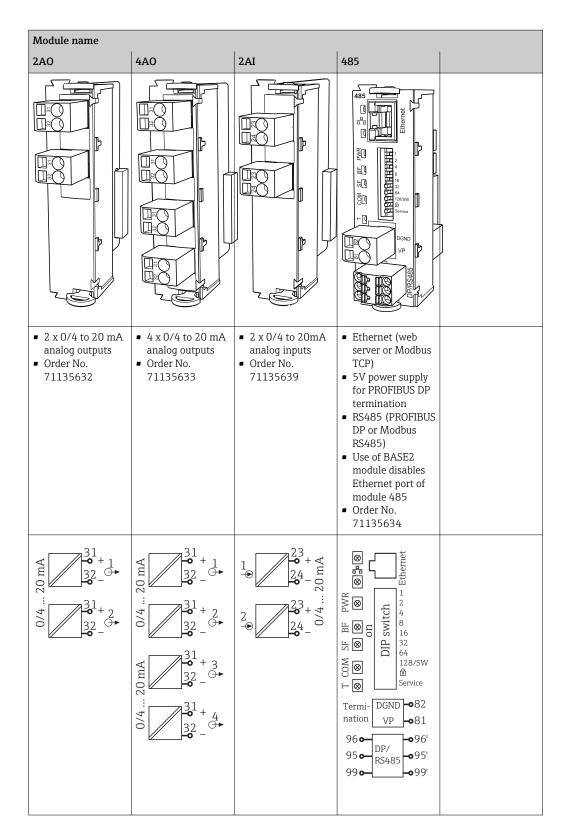


### i

### PROFIBUS DP (module 485)

Contacts 95, 96 and 99 are bridged in the connector. This ensures that PROFIBUS communication is not interrupted if the connector is disconnected.

### Protective ground connection

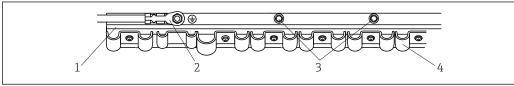

A0025171

### ■ 19 Cable mounting rail and associated function

- 1 Cable mounting rail
- 2 Threaded bolt (protective ground connection, central grounding point)
- 3 Additional threaded bolts for ground connections
- Cable clamps (fixing and grounding the sensor cables)

#### Sensor connection

### Sensors with Memosens protocol

Sensor types	Sensor cable	Sensors
Digital sensors <b>without</b> additional internal power supply	With plug-in connection and inductive signal transmission	<ul> <li>pH sensors</li> <li>ORP sensors</li> <li>Combined sensors</li> <li>Oxygen sensors (amperometric and optical)</li> <li>Conductivity sensors with conductive measurement of conductivity</li> <li>Chlorine sensors (disinfection)</li> </ul>
	Fixed cable	Conductivity sensors with inductive measurement of conductivity
Digital sensors with additional internal power supply	Fixed cable	<ul> <li>Turbidity sensors</li> <li>Sensors for interface measurement</li> <li>Sensors for measuring the spectral absorption coefficient (SAC)</li> <li>Nitrate sensors</li> <li>Optical oxygen sensors</li> <li>Ion-sensitive sensors</li> </ul>

### The following rule applies if connecting CUS71D sensors:

- CM442
  - Only one CUS71D is possible; an additional sensor is not permitted.
  - The second sensor input may also not be used for another type of sensor.
- CM444


No restrictions. All the sensor inputs can be used as required.


- CM448
  - If a CUS71D is connected, the number of sensor inputs that can be used is limited to a maximum of 4.
  - Of these, all 4 inputs can be used for CUS71D sensors.
  - Every combination of CUS71D and other sensors is possible, provided that the total number of connected sensors does not exceed 4.

### Types of connection

- Direct connection of the sensor cable to the terminal connector of the sensor module 2DS or of the base module-L, -H or -E (→ 🕟 20 ff.)
- Optional: Sensor cable plug connected to the M12 sensor socket on the underside of the device With this type of connection, the device is already wired at the factory (→ ■ 23).


### Sensor cable connected directly

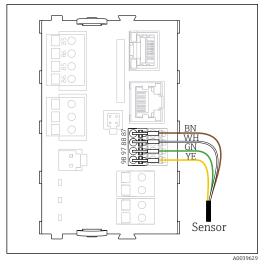

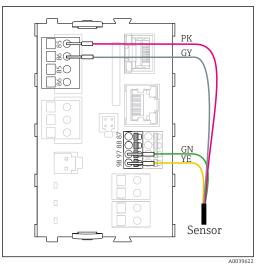


 $\blacksquare$  20 sensors without additional supply voltage


 $\blacksquare$  21 sensors with additional supply voltage

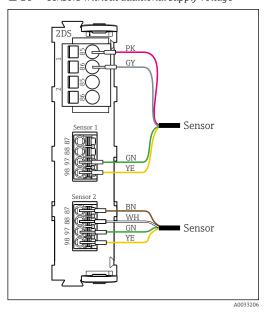


 $\blacksquare$  22 sensors with and without additional supply voltage at sensor module 2DS

### connection via M12 plug-in connection

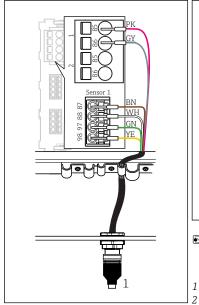

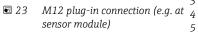

1 Sensor cable with M12 connector

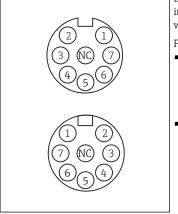

■ 24 M12 assignment Top: socket Bottom: connector (top view in each case)

PK (24 V)

GY (Ground 24 V)

BN (3 V)

WH (Ground 3 V)
GN (Memosens)

6 YE (Memosens)

7, Not connected

NC

Device versions with a preinstalled M12 socket are readywired upon delivery.

Please note the following:

- The internal device wiring is always the same regardless of what kind of sensor you connect to the M12 socket (plug&play).
- The signal or power supply cables are assigned in the sensor head in such a way that the PK and GY power supply cables are either used (e.g. optical sensors) or not (e.g. pH or ORP sensors).


### Performance characteristics

Response time	<b>Current outputs</b> $t_{90}$ = max. 500 ms for an increase from 0 to 20 mA
	Current inputs $t_{90}$ = max. 330 ms for an increase from 0 to 20 mA
	Digital inputs and outputs $t_{90}$ = max. 330 ms for an increase from low to high
Reference temperature	25 °C (77 °F)
Measured error for sensor inputs	→ Documentation of the connected sensor
Measured error for current inputs and outputs	Typical measured errors: $< 20 \ \mu A$ (with current values $< 4 \ mA$ ) $< 50 \ \mu A$ (with current values 4 to 20 mA) at 25 °C (77° F) each
	Additional measured error depending on the temperature: $< 1.5~\mu\text{A/K}$
Frequency tolerance of digital inputs and outputs	≤ 1%
Resolution of current inputs and outputs	< 5 μΑ
Repeatability	→ Documentation of the connected sensor

# Installation


# Installation conditions

# Mounting plate

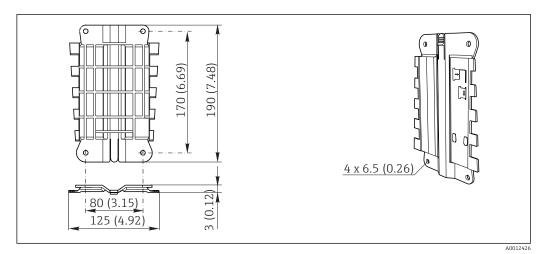

■ 25 Mounting plate, dimensions in mm (in)

# Weather protection cover

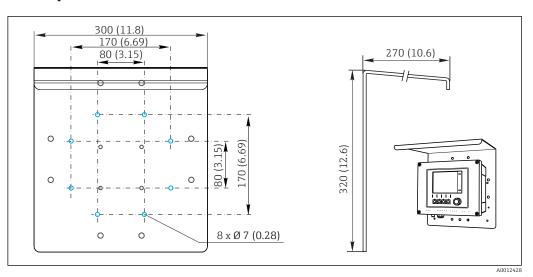


🛮 26 Dimensions in mm (in)

# Installation

# Post mounting

i

You require the post mounting kit (optional) to mount the unit on a pipe, post or railing (square or circular, clamping range 20 to 61 mm (0.79 to 2.40")).

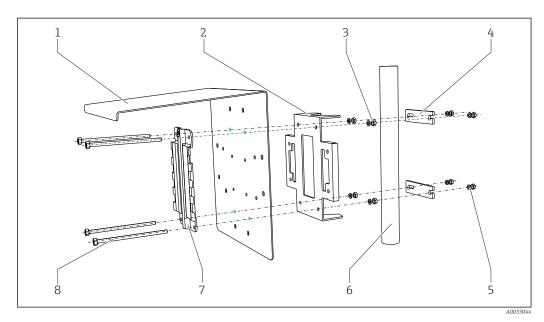


6

■ 27 Post mounting

- 1 Weather protection cover (optional)
- 2 Post mounting plate (post mounting kit)
- 3 Spring washers and nuts (post mounting kit)
- 4 Pipe clamps (post mounting kit)
- 5 Spring washers and nuts (post mounting kit)
  - Pipe or railing (circular/square)
- 7 Mounting plate
- 8 Threaded rods (post mounting kit)

# Rail mounting

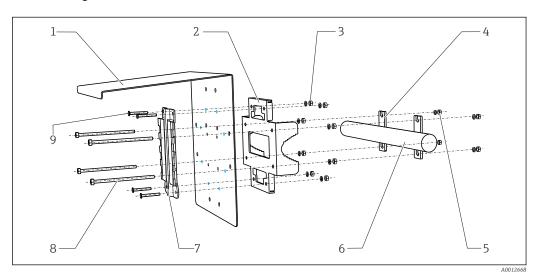



7

- 28 Rail mounting
- 1 Weather protection cover (optional)
- *2 Post mounting plate (post mounting kit)*
- 3 Spring washers and nuts (post mounting kit)
- 4 Pipe clamps (post mounting kit)
- 5 Spring washers and nuts (post mounting kit)
- 6 Pipe or railing (circular/square)
  - Mounting plate
- 8 Threaded rods (post mounting kit)
- 9 Screws (post mounting kit)

38

# Wall mounting

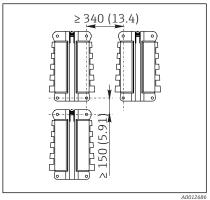

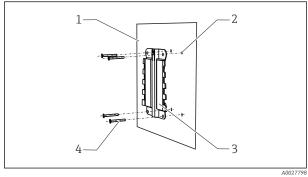

■ 29 Installation clearance in mm (in)

■ 30 Wall mounting

- Wall 1
- 2 4 drill holes 1)
- 3 Mounting plate
- Screws Ø 6 mm (not part of scope of supply)

 $^{1)}$ The size of the drill holes depends on the wall plugs used. The wall plugs and screws must be provided by the customer.

# **Environment**

## Ambient temperature range

### CM442

-20 to 60 °C (0 to 140 °F)

### CM444

- Generally -20 to 55 °C (0 to 130 °F), with the exception of packages under the second list item
- -20 to 50 °C (0 to 120 °F) for the following packages:
  - CM444-\*\*M40A7FI\*\*\*\*\*+...
  - CM444-\*\*M40A7FK\*\*\*\*\*+...
  - CM444-\*\*N40A7FI\*\*\*\*\*+...
  - CM444-\*\*N40A7FK\*\*\*\*\*+... ■ CM444-\*\*M4AA5F4\*\*\*\*\*+...
  - CM444-\*\*M4AA5FF\*\*\*\*\*+...
  - CM444-\*\*M4AA5FH\*\*\*\*\*+...
  - CM444-\*\*M4AA5FI\*\*\*\*\*+...
  - CM444-\*\*M4AA5FK\*\*\*\*\*+...
  - CM444-\*\*M4AA5FM\*\*\*\*\*+...
  - CM444-\*\*M4BA5F4\*\*\*\*\*+...
  - CM444-\*\*M4BA5FF\*\*\*\*+...
  - CM444-\*\*M4BA5FH\*\*\*\*\*+...
  - CM444-\*\*M4BA5FI\*\*\*\*\*+...

  - CM444-\*\*M4BA5FK\*\*\*\*\*+... ■ CM444-\*\*M4BA5FM\*\*\*\*\*+...
  - CM444-\*\*M4DA5F4\*\*\*\*\*+...
  - CM444-\*\*M4DA5FF\*\*\*\*\*+...
  - CM444-\*\*M4DA5FH\*\*\*\*\*+...
  - CM444-\*\*M4DA5FI\*\*\*\*\*+...
  - CM444-\*\*M4DA5FK\*\*\*\*\*+...
  - CM444-\*\*M4DA5FM\*\*\*\*\*+...

### CM448

• Generally -20 to 55 °C (0 to 130 °F), with the exception of packages under the second list item

■ -20 to 50 °C (0 to 120 °F) for the following packages:

■ CM448-\*\*\*6AA\*\*\*\*\*+...

■ CM448-\*\*\*8A4\*\*\*\*\*+...

■ CM448-\*\*\*8A5\*\*\*\*\*+...

■ CM448-\*\*28A3\*\*\*\*\*+...

■ CM448-\*\*38A3\*\*\*\*\*+...

■ CM448-\*\*48A3\*\*\*\*\*+...

■ CM448-\*\*58A3\*\*\*\*\*+...

■ CM448-\*\*68A3\*\*\*\*\*+...

■ CM448-\*\*26A5\*\*\*\*\*+...

■ CM448-\*\*36A5\*\*\*\*\*+...

■ CM448-\*\*46A5\*\*\*\*\*+...

■ CM448-\*\*56A5\*\*\*\*\*+...

■ CM448-\*\*66A5\*\*\*\*\*+... ■ CM448-\*\*22A7\*\*\*\*\*+...

■ CM448-\*\*32A7\*\*\*\*\*+...

■ CM448-\*\*42A7\*\*\*\*\*+...

■ CM448-\*\*52A7\*\*\*\*\*+...

■ CM448-\*\*62A7\*\*\*\*\*+...

■ CM448-\*\*A6A5\*\*\*\*\*+...

■ CM448-\*\*A6A7\*\*\*\*\*+...

■ CM448-\*\*B6A5\*\*\*\*\*+...

■ CM448-\*\*B6A7\*\*\*\*\*+...

■ CM448-\*\*C6A5\*\*\*\*\*+...

■ CM448-\*\*C6A7\*\*\*\*\*+...

■ CM448-\*\*D6A5\*\*\*\*\*+...

■ CM448-\*\*D6A7\*\*\*\*\*+...

### Storage temperature

-40 to +80 °C (-40 to 175 °F)

### Humidity

10 to 95 %, non-condensating

### Degree of protection

IP 66/67, impermeability and corrosion resistance in accordance with NEMA TYPE 4X

# Vibration resistance

### **Environmental tests**

Vibration test based on DIN EN 60068-2, October 2008 Vibration test based on DIN EN 60654-3, August 1998

## Post or pipe mounting

Frequency range 10 to 500 Hz (sinusoidal)

Amplitude 10 to 57.5 Hz: 0.15 mm

 $2 g^{-1}$ 57.5 to 500 Hz:

Test duration 10 frequency cycles/ spatial axis, in 3 spatial axes (1 oct./min)

# Wall mounting

Frequency range 10 to 150 Hz (sinusoidal)

Amplitude 10 to 12.9 Hz: 0.75 mm 12.9 to 150 Hz:  $0.5 \, q^{-1}$ 

Test duration 10 frequency cycles/ spatial axis, in 3 spatial axes (1 oct./min)

1) g ... gravitational acceleration (1 g  $\approx$  9.81 m/s<sup>2</sup>)

# Electromagnetic compatibility

Interference emission and interference immunity as per EN 61326-1:2013, Class A for Industry

### **Electrical safety**

IEC 61010-1, Class I equipment Low voltage: overvoltage category II

Environment < 3000 m (< 9840 ft) above MSL

### Degree of contamination


The product is suitable for pollution degree 4.

Pressure compensation to environment

Filter made of GORE-TEX used as pressure compensation element Ensures pressure compensation to environment and guarantees IP protection.

# Mechanical construction

# **Dimensions**

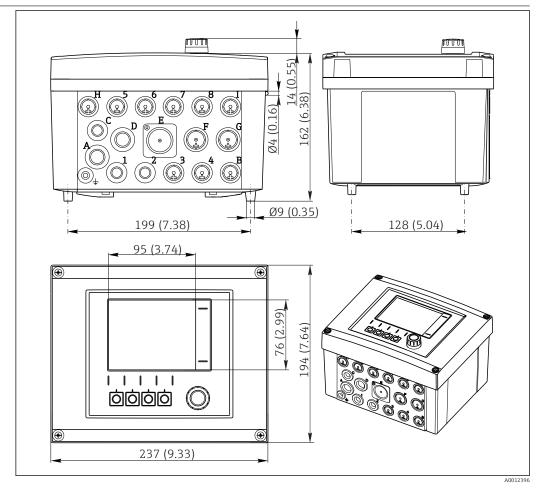

■ 31 Dimensions of field housing in mm (inch)

Weight	Complete device Individual module	Approx. 2.1 kg (4.63 lbs), depending on the version Approx. 0.06 kg (0.13 lbs)
Materials	Housing base	PC-FR
	Display cover	PC-FR
	Display foil and soft keys	PE
	Housing seal	EPDM
	Module side panels	PC-FR
	Module covers	PBT GF30 FR
	Cable mounting rail	PBT GF30 FR, stainless steel 1.4301 (AISI304)
	Clamps	Stainless steel 1.4301 (AISI304)
	Threaded fasteners	Stainless steel 1.4301 (AISI304)
	Cable glands	Polyamide VO as per UL94

# Operability

# Display

Graphic display:

- Resolution: 240 x 160 pixel
- Back light with switch-off function
- Red display background for alarms alerts users to errors
- Transflective display technology for maximum contrast even in bright environments
- User-definable measuring menus mean you can always keep track of the values that are important for your application.

# Operating concept

The simple and structured operating concept sets new standards:


- Intuitive operation with the navigator and soft keys
- Fast configuration of application-specific measurement options
- Easy configuration and diagnosis thanks to plain-text display
- All languages that can be ordered are available in every device



■ 32 Easy operation

🖸 33 🛮 Plain-text menu

### Local operation

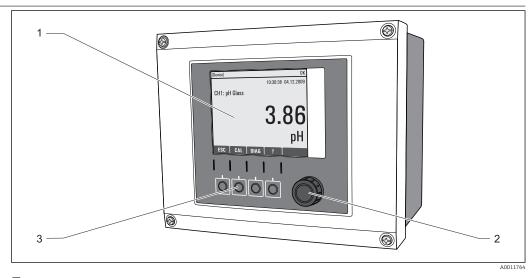


■ 34 Overview of operation

- 1 Display (with red display background in alarm condition)
- 2 Navigator (jog/shuttle and press/hold function)
- 3 Soft keys (function depends on menu)

# Remote operation


# Via HART (e.g. via HART modem and FieldCare)

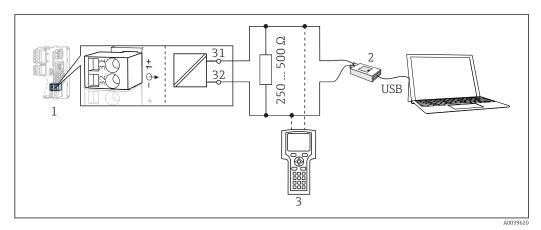

**■** 35 HART using modem

- 1 Device module Base2-L, -H or -E: current output 1 with HART
- 2 HART modem for connection to PC, e.g. Commubox FXA191 (RS232) or FXA195  $^{1)}$  (USB)
- 3 HART handheld terminal
- 1) Switch position "on" (substitutes the resistor)


# Via PROFIBUS DP

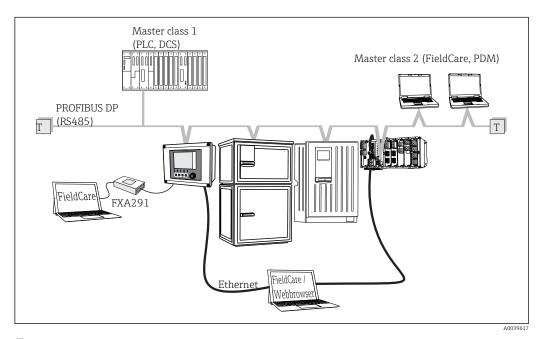

■ 36 PROFIBUS DP

T Terminating resistor


### Via Modbus RS485

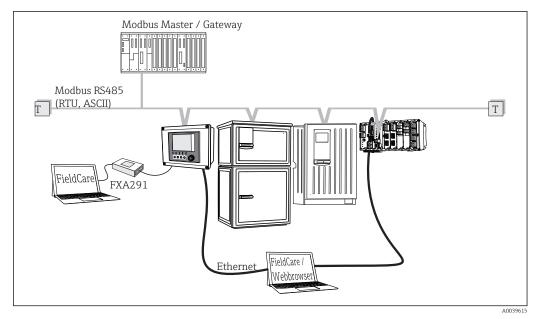

■ 37 Modbus RS485

T Terminating resistor

### Via Ethernet: web server/Modbus TCP/PROFINET/EtherNet/IP

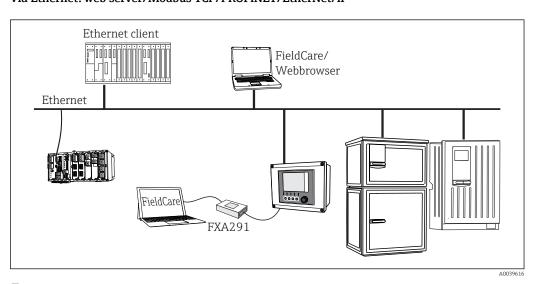

 $\blacksquare$  38 Modbus TCP or EtherNet/IP or PROFINET

# Language packages

The language selected in the product structure is the operating language preset at the factory. All other languages can be selected using the menu.

- English (US)
- German
- Chinese (Simplified, PR China)
- Czech
- Dutch
- French
- Italian
- Japanese
- Polish
- Portuguese
- Russian
- Spanish
- Swedish
- Turkish

44

- Hungarian
- Croatian
- Vietnamese

The availability of other languages can be checked via the product structure at www.endress.com/cm442 or .../cm444 or .../cm448.

# Certificates and approvals

#### C€ mark

The product meets the requirements of the harmonized European standards. As such, it complies with the legal specifications of the EU directives. The manufacturer confirms successful testing of the product by affixing to it the CC mark.

### **EAC**

The product has been certified according to guidelines TP TC 004/2011 and TP TC 020/2011 which apply in the European Economic Area (EEA). The EAC conformity mark is affixed to the product.

#### cCSAus

The device has been certified with regard to its electrical safety and for NI Class I Div. 2 cCSAus explosion-proof environments. It meets the requirements in accordance with:

- CLASS 2252 06 Process Control Equipment
- CLASS 2252 86 Process Control Equipment Certified to US Standards
- CLASS 2258 03 Process Control Equipment Intrinsically Safe and Non-incendive Systems For Hazardous Locations
- CLASS 2258 83 Process Control Equipment Intrinsically Safe and Non-incendive Systems For Hazardous Locations - Certified to US Standards
- FM3600
- FM3611
- FM3810
- UL50E
- IEC 60529
- CAN/CSA-C22.2 No. 0
- CAN/CSA C22.2 No. 94
- CSA Std. C22.2 No. 213
- CAN/CSA-C22.2 No. 61010-1
- CAN/CSA-C22.2 No. 60529
- UL/ANSI/ISA 61010-1
- ANSI ISA 12 12 01

# **MCERTS**

# CM442 only

The device has been assessed by Sira Certification Service and complies with "MCERTS Performance Standards for Continuous Water Monitoring Equipment, Part 2: online analysers, Version 3.1, dated August 2010"; Certificate No.: Sira MC140246/01.

### Marine approvals

A selection of the devices and sensors have type approval for marine applications, issued by the following classification societies: ABS (American Bureau of Shipping), BV (Bureau Veritas), DNV-GL (Det Norske Veritas-Germanischer Lloyd) and LR (Lloyd's Register). Details of the order codes of the approved devices and sensors, and the installation and ambient conditions, are provided in the relevant certificates for marine applications on the product page on the Internet.

# Ordering information

## Product page

www.endress.com/cm442 www.endress.com/cm444

### **Product Configurator**

On the product page there is a **Configure** button to the right of the product image.

- 1. Click this button.
  - ► The Configurator opens in a separate window.
- 2. Select all the options to configure the device in line with your requirements.
  - In this way, you receive a valid and complete order code for the device.
- 3. Export the order code as a PDF or Excel file. To do so, click the appropriate button on the right above the selection window.
- For many products you also have the option of downloading CAD or 2D drawings of the selected product version. Click the **CAD** tab for this and select the desired file type using picklists.

### Scope of delivery

The scope of delivery comprises:

- 1 multichannel controller in the version ordered
- 1 mounting plate
- 1 wiring label (attached at the factory to the inside of the display cover)
- 1 printed copy of the Brief Operating Instructions in the language ordered

# Accessories

The following are the most important accessories available at the time this documentation was issued

► For accessories not listed here, please contact your Service or Sales Center.

### Protective cover

#### **CYY101**

- Weather protection cover for field devices
- Absolutely essential for field installation
- Material: stainless steel 1.4301 (AISI 304)
- Order No. CYY101-A

# Post mounting kit

# Post mounting kit CM44x

- For securing the field housing to horizontal and vertical posts and pipes
- Order No. 71096920

# Measuring cable

# Memosens data cable CYK10

- For digital sensors with Memosens technology
- Product Configurator on the product page: www.endress.com/cyk10



Technical Information TI00118C

### Memosens data cable CYK11

- Extension cable for digital sensors with Memosens protocol
- Product Configurator on the product page: www.endress.com/cyk11



Technical Information TI00118C

### Sensors

### Glass electrodes

### **Orbisint CPS11D**


- pH sensor for process technology
- Optional SIL version for connecting to SIL transmitter
- With dirt-repellent PTFE diaphragm
- Product Configurator on the product page: www.endress.com/cps11d



Technical Information TI00028C


### Memosens CPS31D

- pH electrode with gel-filled reference system with ceramic diaphragm
- Product Configurator on the product page: www.endress.com/cps31d

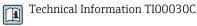


### Ceraliquid CPS41D

- pH electrode with ceramic junction and KCl liquid electrolyte
- Product Configurator on the product page: www.endress.com/cps41d

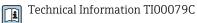


### Ceragel CPS71D

- pH electrode with reference system including ion trap
- Product Configurator on the product page: www.endress.com/cps71d

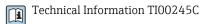


### Memosens CPS171D

- pH electrode for bio-fermenters with digital Memosens technology
- Product Configurator on the product page: www.endress.com/cps171d

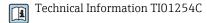


### **Orbipore CPS91D**

- pH electrode with open aperture for media with high dirt load
- Product Configurator on the product page: www.endress.com/cps91d

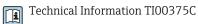

## Orbipac CPF81D


- Compact pH sensor for installation or immersion operation
- In industrial water and wastewater
- Product Configurator on the product page: www.endress.com/cpf81d

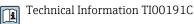

### Enamel pH electrodes

# Ceramax CPS341D


- pH electrode with pH-sensitive enamel
- Meets highest demands of measuring accuracy, pressure, temperature, sterility and durability
- Product Configurator on the product page: www.endress.com/cps341d

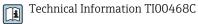

# **ORP** sensors


### **Orbisint CPS12D**

- ORP sensor for process technology
- Product Configurator on the product page: www.endress.com/cps12d

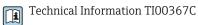

### Ceraliquid CPS42D

- ORP electrode with ceramic junction and KCl liquid electrolyte
- Product Configurator on the product page: www.endress.com/cps42d

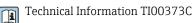


### Ceragel CPS72D

- ORP electrode with reference system including ion trap
- Product Configurator on the product page: www.endress.com/cps72d

Technical Information TI00374C


### Orbipac CPF82D

- Compact ORP sensor for installation or immersion operation in process water and wastewater
- Product Configurator on the product page: www.endress.com/cpf82d

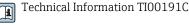

### Orbipore CPS92D


- ORP electrode with open aperture for media with high dirt load
- Product Configurator on the product page: www.endress.com/cps92d

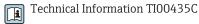

### pH ISFET sensors


## **Tophit CPS441D**

- Sterilizable ISFET sensor for low-conductivity media
- Liquid KCl electrolyte
- Product Configurator on the product page: www.endress.com/cps441d

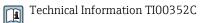


# **Tophit CPS471D**

- Sterilizable and autoclavable ISFET sensor for food and pharmaceutics, process engineering
- Water treatment and biotechnology
- Product Configurator on the product page: www.endress.com/cps471d

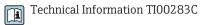

### **Tophit CPS491D**


- ISFET sensor with open aperture for media with high dirt load
- Product Configurator on the product page: www.endress.com/cps491d

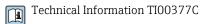

# pH and ORP combined sensors


### Memosens CPS16D

- Combined pH/ORP sensor for process technology
- With dirt-repellent PTFE diaphragm
- With Memosens technology
- Product Configurator on the product page: www.endress.com/cps16D

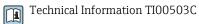

# Memosens CPS76D

- Combined pH/ORP sensor for process technology
- Hygienic and sterile applications
- With Memosens technology
- Product Configurator on the product page: www.endress.com/cps76d

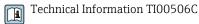

# Memosens CPS96D

- Combined pH/ORP sensor for chemical processes
- With poison-resistant reference with ion trap
- With Memosens technology
- Product Configurator on the product page: www.endress.com/cps96d

Technical Information TI00507C

## Conductivity sensors with inductive measurement of conductivity

#### Indumax CLS50D

- High-durability inductive conductivity sensor
- For standard and hazardous area applications
- With Memosens technology
- Product Configurator on the product page: www.endress.com/cls50d



Technical Information TI00182C

### Indumax H CLS54D

- Inductive conductivity sensor
- With certified, hygienic design for foodstuffs, beverages, pharmaceuticals and biotechnology
- Product Configurator on the product page: www.endress.com/cls54d



Technical Information TI00508C

### Conductivity sensors with conductive measurement of conductivity

### Condumax CLS15D

- Conductive conductivity sensor
- For pure water, ultrapure water and hazardous area applications
- Product Configurator on the product page: www.endress.com/CLS15d



Technical Information TI00109C

## Condumax CLS16D

- Hygienic, conductive conductivity sensor
- For pure water, ultrapure water and Ex applications
- With EHEDG and 3A approval
- Product Configurator on the product page: www.endress.com/CLS16d



Technical Information TI00227C

# Condumax CLS21D

- Two-electrode sensor in plug-in head version version
- Product Configurator on the product page: www.endress.com/CLS21d



Technical Information TI00085C

# Memosens CLS82D

- Four-electrode sensor
- With Memosens technology
- Product Configurator on the product page: www.endress.com/cls82d



Technical Information TI01188C

# Oxygen sensors

# Oxymax COS22D

- Sterilizable sensor for dissolved oxygen
- With Memosens technology or as an analog sensor
- Product Configurator on the product page: www.endress.com/cos22d



Technical Information TI00446C

### Oxymax COS51D


- Amperometric sensor for dissolved oxygen
- With Memosens technology
- Product Configurator on the product page: www.endress.com/cos51d



Technical Information TI00413C


## Oxymax COS61D

- Optical oxygen sensor for drinking water and industrial water measurement
- Measuring principle: quenching
- With Memosens technology
- Product Configurator on the product page: www.endress.com/cos61d

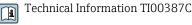

### Memosens COS81D


- Sterilizable, optical sensor for dissolved oxygen
- With Memosens technology
- Product Configurator on the product page: www.endress.com/cos81d

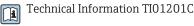

### Disinfection sensors

### CCS142D


- Membrane-covered amperometric sensor for free chlorine
- Measuring range 0.01 to 20 mg/l
- With Memosens technology
- Product Configurator on the product page: www.endress.com/ccs142d

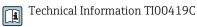

### Ion-selective sensors

### ISEmax CAS40D


- Ion selective sensors
- Product Configurator on the product page: www.endress.com/cas40d

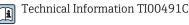

# **Turbidity sensors**


### **Turbimax CUS51D**

- For nephelometric measurements of turbidity and solids in wastewater
- 4-beam scattered light method
- With Memosens technology
- Product Configurator on the product page: www.endress.com/cus51d

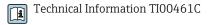

### **Turbimax CUS52D**


- Hygienic Memosens sensor for turbidity measurement in drinking water, process water and in utilities
- With Memosens technology
- Product Configurator on the product page: www.endress.com/cus52d

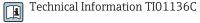

### SAC and nitrate sensors

### Viomax CAS51D


- SAC and nitrate measurement in drinking water and wastewater
- With Memosens technology
- Product Configurator on the product page: www.endress.com/cas51d

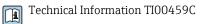

### Interface measurement

# **Turbimax CUS71D**

- Immersion sensor for interface measurement
- Ultrasonic interface sensor
- Product Configurator on the product page: www.endress.com/cus71d

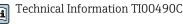

50

### Additional functionality

### Hardware extension modules

### Kit, extension module AOR

- 2 x relay, 2 x 0/4 to 20 mA analog output
- Order No. 71111053

### Kit, extension module 2R

- 2 x relay
- Order No. 71125375

### Kit, extension module 4R

- 4 x relay
- Order No. 71125376

### Kit, extension module 2AO

- 2 x 0/4 to 20 mA analog output
- Order No. 71135632

### Kit, extension module 4AO

- 4 x analog output 0/4 to 20 mA
- Order No. 71135633

### Kit, extension module 2DS

- 2 x digital sensor, Memosens
- Order No. 71135631

### Kit, extension module 2AI

- 2 x 0/4 to 20 mA analog input
- Order No. 71135639

### Kit, extension module DIO

- 2 x digital input
- 2 x digital output
- Auxiliary voltage supply for digital output
- Order No. 71135638

### Kit, extension module 485

- Can be extended to PROFIBUS DP or Modbus RS485. This requires an additional activation code
  which can be ordered separately.
- Order No. 71135634

### Upgrade kit, extension module 485 with PROFIBUS DP

- Extension module 485
- PROFIBUS DP (+ Ethernet configuration)
- Order No. 71140888

### Upgrade kit, extension module 485 with Modbus RS485

- Extension module 485
- Modbus RS485 (+ Ethernet configuration)
- Order No. 71140889

### Kit CM442: upgrade kit to CM444/CM448

- Extension power supply unit 100 to 230 V AC and extension backplane
- Basic module
- You must quote the serial number of the device when ordering the kit.
- Order No. 71470973

# Kit CM442: upgrade kit to CM444/CM448

- Extension power supply unit 24 V DC and extension backplane
- Basic module
- You must quote the serial number of the device when ordering the kit.
- Order No. 71470975

### Firmware and activation codes

# SD card with Liquiline firmware

- Industrial Flash Drive, 1 GB
- Order No. 71127100

You must quote the serial number of the device when ordering the activation code.

### Activation code for digital HART communication

Order No. 71128428

### Activation code for PROFIBUS DP

Order No. 71135635

### Activation code for Modbus RS485

Order No. 71135636

#### Activation code for PROFINET + web server for BASE2

Order No. 71449901

### Activation code for Ethernet/IP + web server for BASE2

Order No. 71449914

### Activation code for Modbus TCP + web server for BASE2

Order No. 71449915

### Activation code for web server for BASE2

Order No. 71449918

# Kit CM442: activation code for 2nd digital sensor input

Order No. 71114663

### Kit CM444/CM448: upgrade code for 2 x 0/4 to 20 mA for BASE2-E

On request

### Activation code for feedforward control

- Requires current input or fieldbus communication
- Order No. 71211288

### Activation code for measuring range switch

- Requires digital inputs or fieldbus communication
- Order No. 71211289

### Activation code for ChemocleanPlus

- Requires relays or digital outputs or fieldbus communication and optional digital inputs
- Order No. 71239104

## Activation code for Heartbeat Verification and Monitoring

Order No. 71367524

### Activation code for ion exchanger operating time

- Configure the mathematical function
- Order No. 71367531

### Activation code for mathematics

- Formula editor
- Order No. 71367541

### Software

### Memobase Plus CYZ71D

- PC software to support laboratory calibration
- Visualization and documentation of sensor management
- Sensor calibrations stored in database
- Product Configurator on the product page: www.endress.com/cyz71d



Technical Information TI00502C

### Field Data Manager Software MS20

- PC software for central data management
- Visualization of series of measurements and logbook events
- SQL database for secure data storage

## FieldCare SFE500

- Universal tool for field device configuration and management
- Supplied with a complete library of certified DTMs (Device Type Manager) for operation of Endress +Hauser field devices
- Order according to product order structure
- www.endress.com/sfe500

# Other accessories

### SD card

- Industrial Flash Drive, 1 GB
- Order No. 71110815

# Cable glands

## Kit CM44x: gland M

- Set, 6 pieces
- Order No. 71101768

### Kit CM44x: gland NPT

- Set, 6 pieces
- Order No. 71101770

### Kit CM44x: gland G

- Set, 6 pieces
- Order No. 71101771

### Kit CM44x: dummy plug for cable gland

- Set, 6 pieces
- Order No. 71104942

### M12 built-in socket and cable junction with Velcro strip

### Kit CM42/CM442/CM444/CM448: external CDI socket

- Socket with terminated connecting cables and counter nut
- Order No. 51517507

### Kit CM442/CM444/CM448/CSF48: M12 built-in socket for digital sensors

- Pre-terminated
- Order No. 71107456

### Kit CM442/CM444/CM448/CSF48: M12 built-in socket for PROFIBUS DP/Modbus RS485

- B-coded, pre-terminated
- Order No. 71140892

# Kit CM442/CM444/CM448/CSF48: M12 built-in socket for Ethernet

- D-coded, pre-terminated
- Order No. 71140893

### Kit: external CDI socket, complete

- Retrofit kit for CDI interface, with terminated connecting cables
- Order No. 51517507

### Cable junction with Velcro strip

- lacksquare 4 pieces, for sensor cable
- Order No. 71092051

### Communication-specific accessories

### Commubox FXA195

Intrinsically safe HART communication with FieldCare via the USB port



Technical Information TI00404F

### Commubox FXA291

Connects the CDI interface of measuring devices with the USB port of the computer or laptop



Technical Information TI00405C

# Wireless HART adapter SWA70

- Wireless device connection
- Easily integrated, offers data protection and transmission safety, can be operated in parallel with other wireless networks, minimum cabling complexity



Technical Information TI00061S

### **System components**

### RIA14, RIA16

- Field display unit for integration into 4-20 mA circuits
- RIA14 in flameproof metal enclosure



Technical Information TI00143R and TI00144R

# RIA15

- Process display unit, Digital display unit for integration into 4-20 mA circuits
   Panel mounting
- With optional HART communication



Technical Information TI01043K





