Technical Information Smartec CLD134

Hygienic measuring system for conductivity and concentration for applications in the food, beverage and pharmaceutical industries and in biotechnology



Application

The inductive conductivity measuring system is specifically designed for use in hygienic applications in the food, beverage and pharmaceutical industries and in biotechnology. Thanks to its hygiene certificates and its food-safe, virgin PEEK design without any joints or crevices, it meets the strict demands of these industries. Both compact and remote system versions are available. The Smartec CLD134 is ideal for:

- Phase separation of product/water and product/product mixtures in pipe systems
- Control of cleaning in place (CIP) processes in the return line
- Concentration control in the remaking of CIP cleaning agents
- Product monitoring in pipes, bottling plants and quality assurance
- Leakage monitoring
- in the following industries:
- Dairies
- Breweries
- Beverages (water, juices, soft drinks)
- Pharmaceuticals and biotechnology

Your benefits

- Unique hygienic design, therefore no risk of recontamination
- Has all the hygiene certificates required in the hygiene sector
- Hygiene-compliant stainless steel transmitter housing
- Durable thanks to fully encapsulated, sealless design
- Fast measurement with temperature response time t_{90} under 26 s, ensuring safe and efficient phase separation
- Flexible thanks to a variety of operating options:
 - Keypad
 - HART[®] handheld terminal
 - PROFIBUS PA/DP
 - PC with FieldCare software package (with FDT/DTM technology)
- Basic version upgradeable by extending functions with remote parameter set configuration (measuring range switching)




Function and system design

Measuring principle

Inductive conductivity measurement

An oscillator (1) generates an alternating magnetic field in the primary coil (2), which induces a current flow (3) in the medium. The strength of the current depends on the conductivity and thus on the ion concentration in the medium. The current flow in the medium, in turn, generates a magnetic field in the secondary coil (4). The resulting induced current is measured by the receiver (5) and used to determine the conductivity.

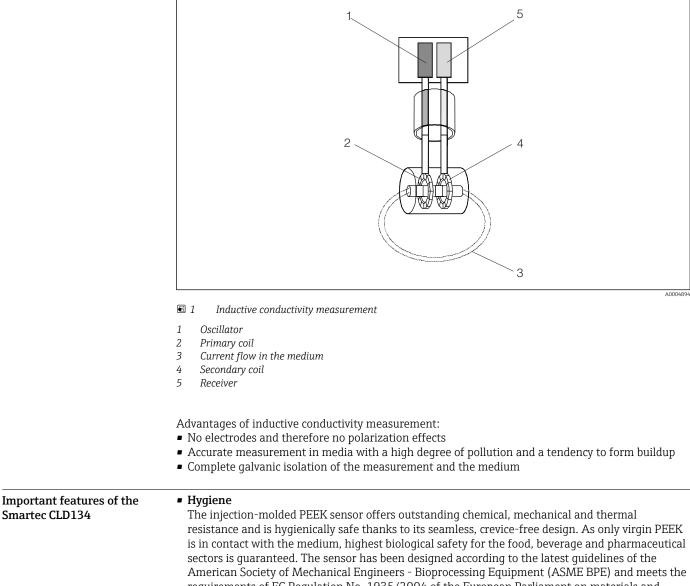

requirements of EC Regulation No. 1935/2004 of the European Parliament on materials and articles intended to come into contact with food.

Certified hygiene .


The sensor has all the necessary listings and approvals for the hygiene sector, such as exclusive use of FDA-listed materials for surfaces in contact with medium and certification according to 3-A standards. With regard to in-place cleanability, the CLS54 sensor is certified by the European Hygienic Engineering & Design Group (EHEDG). A certificate for biological reactivity testing according to USP part <87> and <88> class VI including lot number tracking back to compounding is also available as an option.

Process connections

The sensor is available with all the process connections commonly used in hygienic applications. The most common connections can be supplied as standard. Other process connections can be ordered as a custom-made product.

Smartec CLD134

	 Process temperature, process pressure The use of special materials means that the sensor is suitable for exposure to continuous temperatures of up to 125 °C (257 °F). It may be exposed to temperatures of up to 150 °C (300 °F) for a short time (max. 60 minutes) for sterilization phases. The sensor's pressure-resistance is 12 bar (174 psi), abs at temperatures up to 90 °C (194 °F) and at higher temperatures is always above the steam pressure. The sensor is suitable for underpressure applications. Temperature measurement The sensor has an integrated temperature sensor with a temperature response time t₉₀ of less than 26 s, making efficient phase separations possible at varying and quickly changing process temperatures. The temperature sensor is embedded into the PEEK body without any seals, thereby ensuring a long sensor service life. Temperature compensation The following types of temperature compensation are available in the Smartec CLD134: Linear compensation with user-configurable temperature coefficient α Compensation according to EEC 60746-3 for NaCl Comcentration Measurement The transmitter can be switched from the conductivity operating mode to the concentration mode. In the concentration mode, four user-programmable and various pre-programmed concentration curves are available, especially for common CIP solutions. In this way, it is possible to display the concentration directly as a %. Remote parameter set configuration Smarter CLD134 can be ordered with remote parameter set configuration (measuring range switching, MRS) in order to: Cover a large measuring range. Adjust temperature compensation when the product is changed. Switch between concentration curves. Proce versions The clLD134 measuring system is available as both a compact version for simple installation and as a remote upering (the conce and transmitter are onemated by a cable)
	installation and as a remote version (the sensor and transmitter are connected by a cable). Furthermore, the transmitter can be ordered separately without a sensor.
Measuring system	 A complete measuring system comprises: The remote version of the Smartec CLD134 transmitter The CLS54 conductivity sensor with an integrated temperature sensor and fixed cable or The compact version with the integrated CLS54 conductivity sensor Optionally for the remote version: CLK6 extension cable, VBM junction box, mounting kit for post mounting

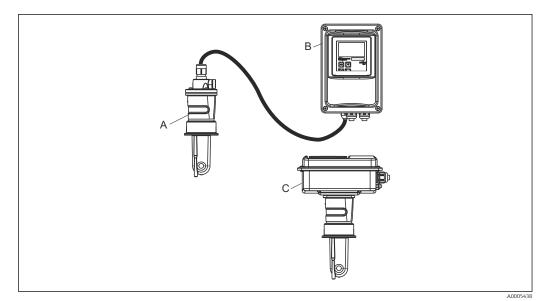

■ 2 Example of a measuring system with CLD134

- A CLS54 conductivity sensor
- *B* Smartec CLD134 transmitter
- C Smartec CLD134 compact version with integrated CLS54 conductivity sensor

Input


Measured values	Conductivity	
	Concentration	
	Temperature	
Measuring range	Conductivity:	Recommended range: 100 µS/cm to 2000 mS/cm (uncompensated)
	Concentration:	
	NaOH:	0 to 15 %
	HNO ₃ :	0 to 25 %
	H_2SO_4 :	0 to 30 %
	H ₃ PO ₄ :	0 to 15 %
	User 1 (to 4):	(4 tables available in versions with additional "remote parameter set configuration" function)
	Temperature:	−35 to +250 °C (-31 to +482 °F)
Temperature measurement	Pt 1000	
Sensor cable	Max. cable length of 55 m (180	ft.) with CLK6 cable (remote version)
Binary inputs 1 and 2	Voltage	10 to 50 V
	Current consumption	Max. 10 mA at 50 V

Output


Output signal

Conductivity, concentration: Temperature (optional second current output) 0 / 4 to 20 mA, galvanically isolated

Signal on alarm	2.4 or 22 mA in the event of an error	
Load	Max. 500 Ω	
Transmission range	Conductivity	Configurable
	Temperature	Configurable
Signal resolution	Max. 700 digits/mA	
Separation voltage	Max. 350 V _{RMS} / 500 V DC	
Minimum spread of output	Conductivity	
signal	Measured value 200 to 1999 μ S/cm	200 μS/cm
	Measured value 0 to 19.99 mS/cm	2 mS/cm
	Measured value 20 to 200 mS/cm	20 mS/cm
	Measured value 200 to 2000 mS/cm	200 mS/cm
	Concentration	No minimum spread
	Temperature	15 °C or 27 °F
Overvoltage protection	According to EN 61000-4-5:1995	
Auxiliary voltage output	Output voltage	15 V ± 0.6 V
	Output current	Max. 10 mA
Contact outputs	Switching current with ohmic load (cos ϕ = 1)	Max. 2 A
	Switching current with inductive load (cos ϕ = 0.4)	Max. 2 A
	Switching voltage	Max. 250 V AC, 30 V DC
	Switching power with ohmic load (cos $\varphi = 1$)	Max. 500 VA AC, 60 W DC
	Switching power with inductive load (cos ϕ = 0.4)	Max. 500 VA AC
Limit contactors	Pickup/dropout delay	0 to 2000 s
	(for versions with remote parameter set configuration	ion)
Alarm	Function (switchable):	Latching/momentary contact
	Alarm delay:	0 to 2000 s (min)

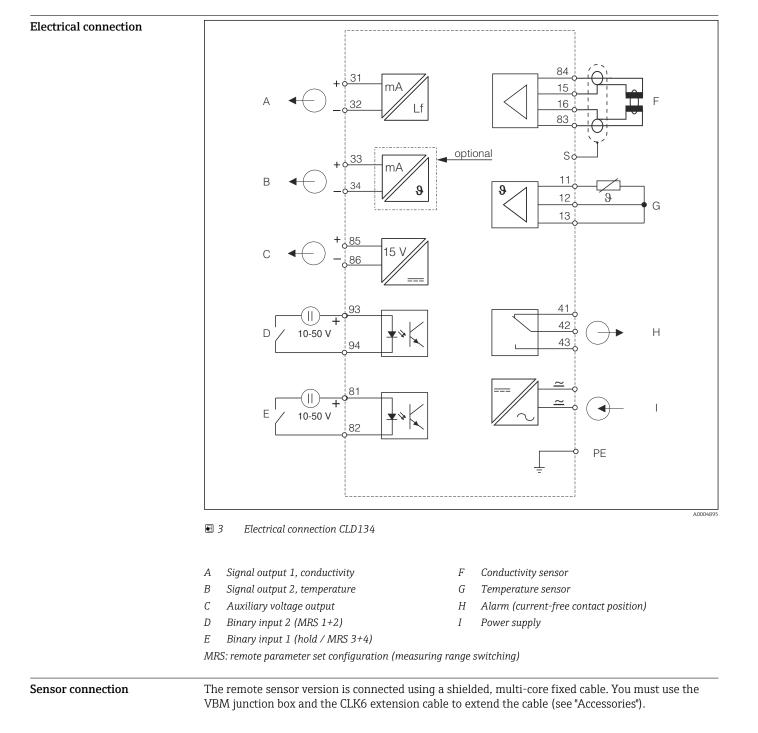

Power supply

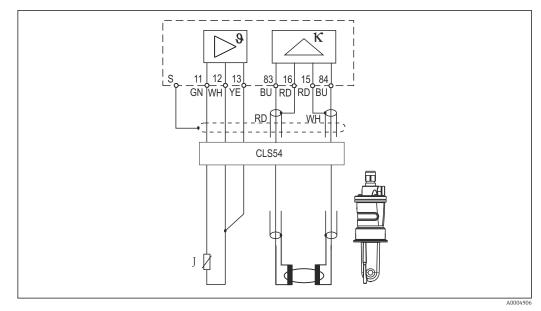

🗟 4 CLD134 wiring diagram

Cable entries	
Cable entries	
	A Separate version B Compact version 1 Dummy plug, analog output, binary input 1 Dummy plug, analog output, binary input 2 Cable entry for fault-signaling contact 2 Cable entry for fault-signaling contact 3 Cable entry for power supply 3 Cable entry for power supply 4 Functional earth (FE) 4 Functional earth (FE) 5 Pressure compensation element PCE (Goretex® filter) 5 Pressure compensation element PCE (Goretex® filter) 6 Cable entry for sensor connection, Pg 9
Supply voltage	Depending on order version: • 100/115/230 V AC +10/-15 %, 48 to 62 Hz • 24 V AC/DC +20/-15 %
Circuit breaker	 NOTICE The device does not have a power switch The customer must provide a protected circuit breaker in the vicinity of the device. The circuit breaker must be a switch or power switch, and you must label it as the circuit breaker for the device. At the supply point, the power supply must be isolated from dangerous live cables by double or reinforced insulation in the case of devices with a 24 V supply voltage.

Power consumption	Max. 7.5 VA	
Mains fuse	Fine-wire fuse, semi-delay 250 V/3.15 A	
Cable cross-section	Cable length \leq 10 m (33 ft) Cable length $>$ 10 \leq 20 m ($>$ 33 \leq 66 ft)	At least 3 x 0.75 mm² (≅ 18 AWG) At least 3 x 1.5 mm² (≅ 24 AWG)

Performance characteristics

Measured value resolution	Temperature:	0.1 °C
 Response time	Conductivity:	t95 < 1.5 s
-	Temperature:	t90 < 26 s
Measured error of sensor ¹⁾	Conductivity:	\pm (0.5 % of reading + 10 $\mu S/cm)$ after calibration (plus uncertainty of the conductivity of the calibration solution)
	Temperature:	Pt 1000 Class A according to IEC 60751
Measured error of	Conductivity:	
transmitter ²⁾	- Display:	Max. 0.5 % of measured value \pm 4 digits
	- Conductivity signal output:	Max. 0.75 % of current output range
	Temperature:	
	- Display:	Max. 0.6 % of measuring range
	- Temperature signal output:	Max. 0.75 % of current output range
Repeatability ³⁾	Conductivity:	Max. 0.2 % of measured value \pm 2 digits
Cell constant	6.3 cm ⁻¹	
Measuring frequency (oscillator)	2 kHz	
Temperature compensation	Range	-10 to +150 °C (+14 to +302 °F)
	Types of compensation	 None Linear with user-configurable temperature coefficient A user-programmable coefficient table (four tables in versions with remote parameter set configuration) NaCl in accordance with IEC 60746-3
	Minimum distance for table:	1 K
Reference temperature	25 °C (77 °F)	
Temperature offset	Adjustable, \pm 5 °C, for adjusting the temperature display	

Temperature offset Adjustable, \pm 5 °C, for adjusting the temperature display

¹⁾

²⁾ 3)

In accordance with DIN IEC 746 Part 1, at rated operating conditions In accordance with DIN IEC 746 Part 1, at rated operating conditions In accordance with DIN IEC 746 Part 1, at rated operating conditions


Installation

Installation instructions

For a 3-A compliant installation, the following must be noted:

After the instrument is installed its hygienic integrity shall be maintained. All process connections must be 3-A compliant.

The sensor must be completely immersed in the medium. Avoid air bubbles in the area of the sensor.

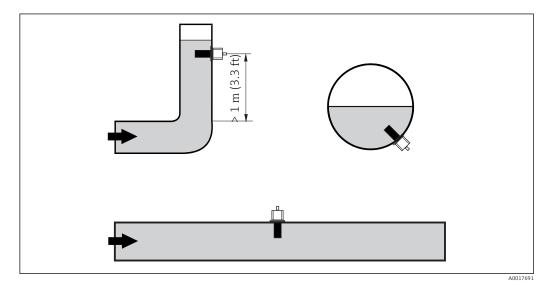

6 Orientation of conductivity sensors

If the flow direction changes (after pipe bends), turbulence in the medium can result. Install the sensor at a distance of at least 1 m (3.3 ft) downstream from a pipe bend.


The ionic current in the liquid is affected by the walls in confined installation conditions. This effect is compensated by what is referred to as the installation factor. The installation factor can be entered in the transmitter for the measurement or the cell constant is corrected by multiplying by the installation factor.

The value of the installation factor depends on the diameter and the conductivity of the pipe nozzle as well as the distance a between the sensor and the wall.

The installation factor can be disregarded (f = 1.00) if the distance to the wall is sufficient (a > 15 mm, from DN 65).


If the distance to the wall is smaller, the installation factor increases for electrically insulating pipes (f > 1) and decreases for electrically conductive pipes (f < 1).

It can be measured using calibration solutions, or a close approximation can be determined from the diagram below.

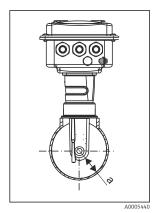

Installation of CLD134

a Wall distance

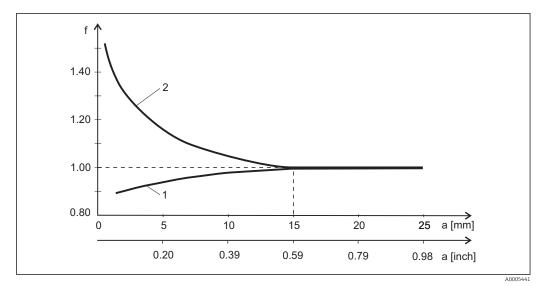

• 8 Relationship between installation factor f and wall distance a


Electrically conductive pipe wall 1

2 Electrically insulating pipe wall

Air set

remote version


To compensate for residual coupling between the two coils and in the cable, zero adjustment in air ("air set") must be performed before the sensor is installed.

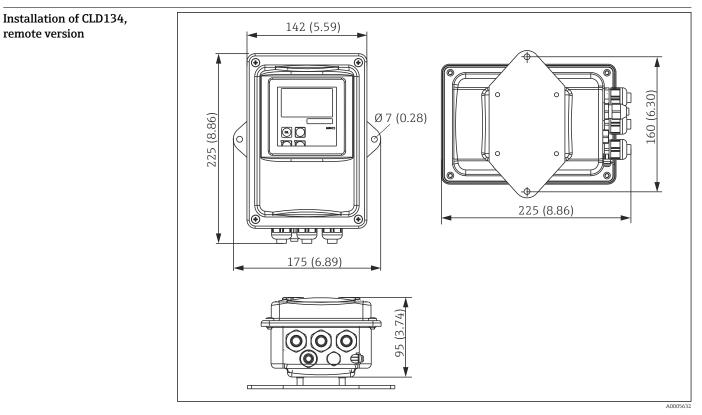

9 CLD134 wall mounting, remote version




Wall mounting is not recommended in areas with strict hygiene requirements!

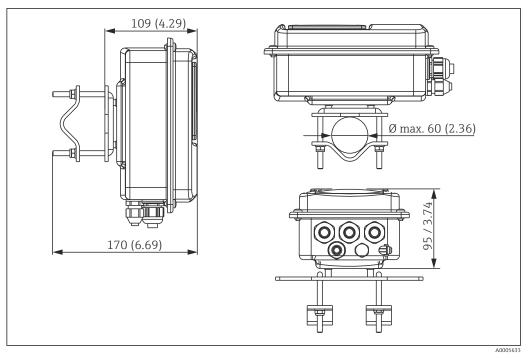

 10 CLD134 remote version for post mounting on pipes Ø 60 mm (2.36") with a post mounting kit (see "Accessories")

Shorten the thread as much as possible if you are using the transmitter in areas with strict hygiene requirements!

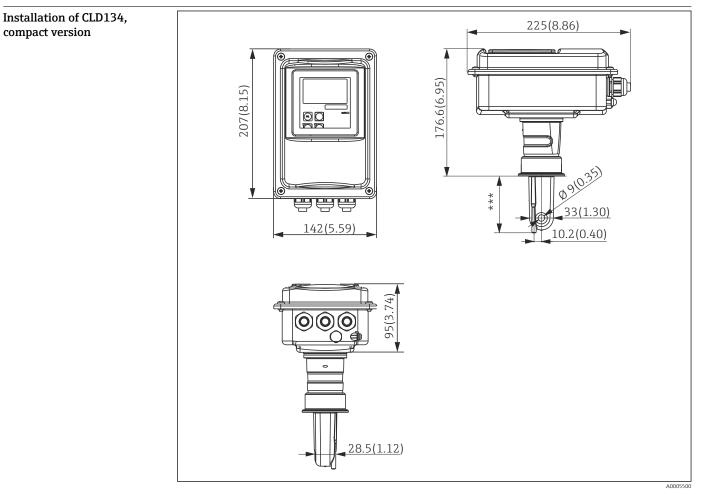

🖻 11 Installation dimensions of CLD134, compact version

*** Depends on the process connection selected

The symmetrical measuring channel allows flow in both directions.


The housing can be rotated against the sensor so that the display can be read easily in both a vertical and a horizontal mounting position.

Ambient temperature	Compact version or electronics housing:	0 to +55 °C (32 to +131 °F)	
	Sensor (remote version):	-20 to +60 °C (-4 to +140 °F)	
Ambient temperature limits	–10 to +70 °C (14 to +158 °F) (remote version) and separate transmitter		
	–10 to +55 °C (14 to +131 °F) (compact version)		
	See also graphic for "Permitted temperature ranges of Smartec CLD134".		
Storage temperature	-25 to +70 °C (-13 to +158 °F)		
Electromagnetic compatibility	Interference emission and interference immunity as per EN 61326-1:2006, EN 61326-2-3:2006		
Degree of protection	IP67/Type 4		
Relative humidity	10 to 95 %, non-condensating		
Vibration resistance as per	Oscillation frequency:	10 to 500 Hz	
IEC 60770-1 and IEC	Deflection (peak value):	0.15 mm	
61298-3	Acceleration (peak value):	19.6 m/s ² (64.3 ft/s ²)	
Display window shock resistance	9 J		

Environment

Process


Process temperature	CLS54 sensor with:		
	Remote version:	max. 125 °C (257 °F) at 70 °C (158 °F) ambient temperature	
	Compact version:	max. 125 °C (257 °F) at 35 °C (95 °F) ambient temperature	
		max. 55 °C (131 °F) at 55 °C ambient temperature	
Sterilization	CLS54 sensor with:		
	Remote version:	150 °C (302 °F) at 60 °C (140 °F) ambient temperature, 6 bar (87 psi), abs, max. 60 min	
	Compact version: 150 °C (302 °F) at 35 °C (95 °F) ambient temperature, 6 bar (87 psi), abs, max 60 min		
Absolute process pressure	13 bar (188.5 psi), abs to up to 90 °C (194 °F)		
	9 bar (130.5 psi), abs at 125 °C (257 °F)		
	1 to 6 bar (14.5 to 87 psi), abs in CRN environment (tested with 51 bar (739.5 psi), abs)		
	Negative pressure to 0.1 bar (1.45 psi) absolute		

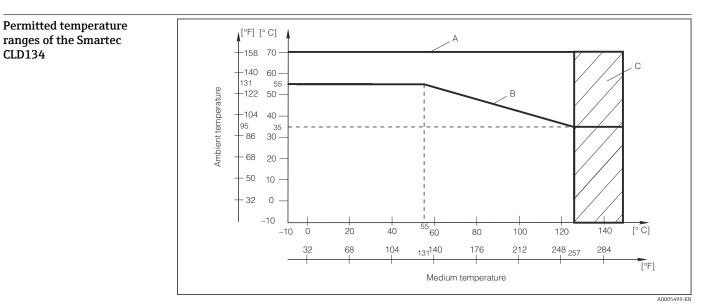

■ 12 Permitted temperature ranges of Smartec CLD134

- A CLS54 sensor with remote version
- B Compact version
- C Temporarily for sterilization (< 60 min)

Pressure-temperature ratings of CLS54 sensor

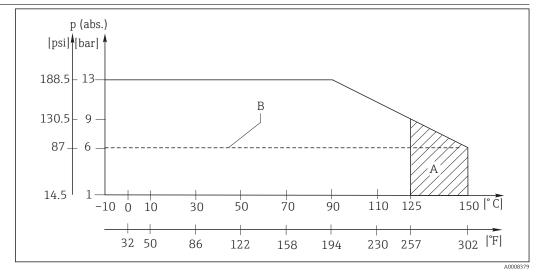

■ 13 Pressure temperature ratings

A Temporarily for sterilization (max. < 60 minutes)


B MAWP (maximum allowable working pressure) according to ASME-BPVC Sec. VIII, Div 1, UG101 for CRN registration

Flow velocity

Max. 5 m/s (16.4 ft/s) for low-viscosity media in DN65 pipes

Remote version with mounting plate: Compact version:	L x B x D: 225 x	142 x 109 mm (8.86 x 5.59 x 4.29 ")	
Version MV5, CS1, AA5, SMS:	L x B x D: 225 x	142 x 255 mm (8.86 x 5.59 x 10.04 ")	
Version VA4, BC5:	L x B x D: 225 x	142 x 213 mm (8.86 x 5.59 x 8.39 ")	
Remote version:			
Transmitter:			
CLS54 sensor:	Depending on version 0.3 to 0.5 kg (0.66 to 1.1 lb.)		
Compact version with CLS54 sensor:	Approx. 3 kg (6	.6 lb.)	
In contact with medium:	ontact with medium: Virgin PEEK		
Not in contact with medium:	PPS-GF40		
	Screws: 1.4301 (AISI 304)		
		•	
	-	-	
		-	
-		SI 304)	
Front window: Polyca	arbonate		
Medium	Concentration	PEEK	
Caustic soda NaOH	0 to 15 %	20 to 90 °C (68 to 194 °F)	
Nitric acid HNO ₃	0 to 10 %	20 to 90 °C (68 to 194 °F)	
Phosphoric acid H ₃ PO ₄	0 to 15 %	20 to 80 °C (68 to 176 °F)	
		20 °C (60 °E)	
Sulfuric acid H_2SO_4	0 to 30 %	20 °C (68 °F)	
Sulfuric acid H_2SO_4 Peracetic acid H_3C -CO-OOH	0 to 30 % 0.2 %	20 °C (68 °F)	
 Peracetic acid H₃C-CO-OOH Errors and omissions excepted Sanitary connection DIN 11851, DN 9 Aseptic coupling DIN 11864-1 form A the shape of the aseptic liner) Clamp ISO 2852 (also for TriClamp®, SMS coupling 2" ^b) 	0.2 % 50 ^{a)} A, for pipe according	to DIN 11850, DN 50 (the sensor has	
 Peracetic acid H₃C-CO-OOH Errors and omissions excepted Sanitary connection DIN 11851, DN 5 Aseptic coupling DIN 11864-1 form A the shape of the aseptic liner) Clamp ISO 2852 (also for TriClamp®, SMS coupling 2" ^{b)} Varivent N DN 40 - 125 	0.2 % 50 ^{a)} A, for pipe according	to DIN 11850, DN 50 (the sensor has	
 Peracetic acid H₃C-CO-OOH Errors and omissions excepted Sanitary connection DIN 11851, DN 9 Aseptic coupling DIN 11864-1 form A the shape of the aseptic liner) Clamp ISO 2852 (also for TriClamp®, SMS coupling 2" ^b) 	0.2 % 50 ^{a)} A, for pipe according DIN 32676), 2" (long	to DIN 11850, DN 50 (the sensor has	
 Peracetic acid H₃C-CO-OOH Errors and omissions excepted Sanitary connection DIN 11851, DN 5 Aseptic coupling DIN 11864-1 form A the shape of the aseptic liner) Clamp ISO 2852 (also for TriClamp®, SMS coupling 2" ^{b)} Varivent N DN 40 - 125 NEUMO BioControl D50, DN 40.2" Additional process connections are avairable a) Sanitary connection DIN 11851 	0.2 % 0.2 % 50 ^{a)} A, for pipe according DIN 32676), 2" (long lable on request. is generally not cons	to DIN 11850, DN 50 (the sensor has	
-	Compact version: Version MV5, CS1, AA5, SMS: Version VA4, BC5: Remote version: Transmitter: CLS54 sensor: Compact version with CLS54 sensor: In contact with medium: Not in contact with medium: Not in contact with medium: Front window: Polyca Medium Caustic soda NaOH Nitric acid HNO3	Compact version:Version MV5, CS1, AA5, SMS:L x B x D: 225 x 1Version VA4, BC5:L x B x D: 225 x 1Remote version:Transmitter:Transmitter:Approx. 2.5 kg 4CLS54 sensor:Depending on vCompact version with CLS54 sensor:Approx. 3 kg (6In contact with medium:Virgin PEEKNot in contact with medium:PPS-GF40Stainless steel 1.Screws: 1.4301 (6Screws: 1.4301 (6FKM, EPDM (seaPVDF (cable glarTPE (cable - remHousing:Stainless steel 1.4301 (AISFront window:PolycarbonateMediumO to 15 %Nitric acid HNO30 to 10 %	

Mechanical construction

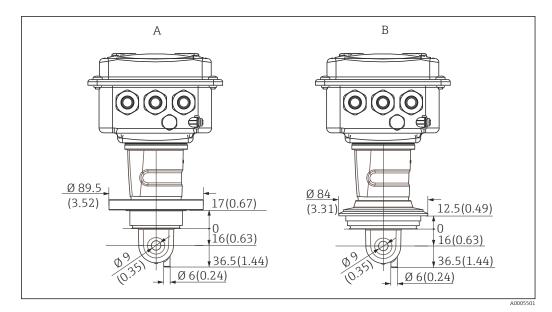


■ 14 Process connections for compact version (short), dimensions in mm (inch)

A NEUMO BioControl D50 For pipe connection:

DN 40 (DIN 11866 series A, DIN 11850) DN 42.4 (DIN 11866 series B, DIN EN ISO 1127) 2" (DIN 11866 series C, ASME-BPE)



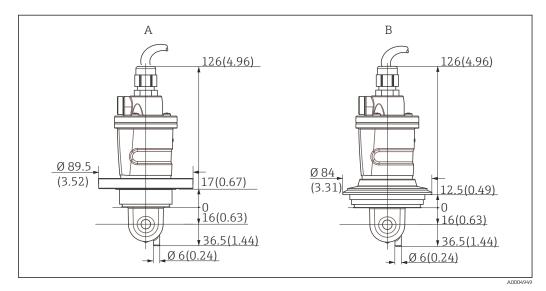


■ 15 Process connections of CLS54 (short version)

A NEUMO BioControl D50 For pipe connection:


DN 40 (DIN 11866 series A, DIN 11850) DN 42.4 (DIN 11866 series B, DIN EN ISO 1127) 2" (DIN 11866 series C, ASME-BPE)

B Varivent N DN 40 to 125

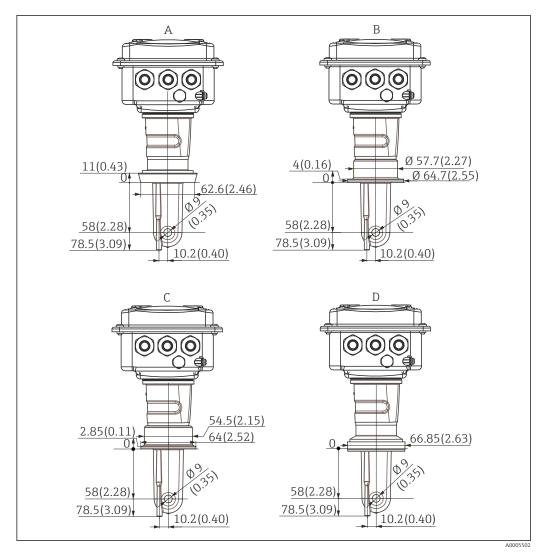

🖻 16 Process connections for compact version (long), dimensions in mm (inch)

- Sanitary connection DIN 11851 DN 50 SMS coupling 2" Α
- В
- С Clamp ISO 2852, 2"
- D Aseptic coupling DIN 11864-1 form A, for pipe according to DIN 11850, DN 50

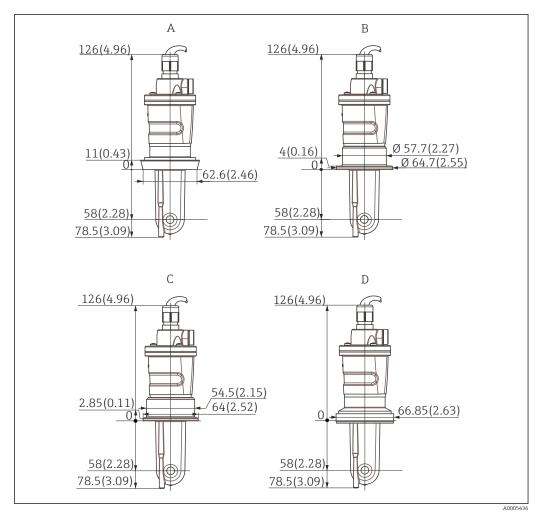

 17 Process connections for CLS54 (long version), dimensions in mm (inch)

Sanitary connection DIN 11851, DN 50 Α


В

- SMS coupling 2" Clamp ISO 2852 , 2" С
- D Aseptic coupling DIN 11864-1 form A, for pipe according to DIN 11850, DN 50

Display and operating elements	Is Display and keys of the CLD134 Is Called A and a configuration data	
	 Four operating keys for calibration and device configuration Field for user-defined information Light emitting diode for alarm function 	
Operation	 You can choose from the following options to operate the Smartec CLD134: Via the Smartec keypad The four operating keys are covered by the housing cover. To operate the Smartec, loosen the four screws and open the housing cover. Via the HART interface HART handheld terminal PC with HART modem and FieldCare software package (with FDT/DTM technology) Via PROFIBUS PA/DP by PC with a corresponding interface and the Fieldcare software package (with FDT/DTM technology) or via a programmable logic controller (PLC). 	
Operating functions	All the device's operating functions are arranged in a clear menu structure. The individual parameters can only be modified once the access code has been entered. The current position in the menu structure is indicated.	

Operability

Endress+Hauser

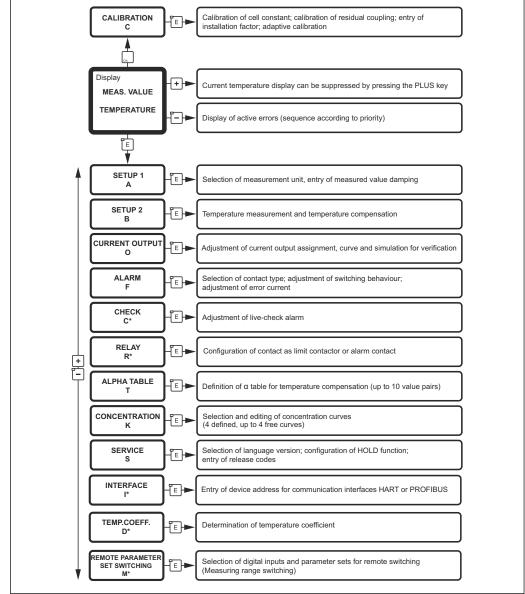

A0027590-EN

🖻 19 Overview of the Smartec CLD134 menu, with all possible options that can be installed

* Menus not available in basic device version

Certificates and approvals

Hygiene

FDA

All materials in contact with the product are listed by the FDA.

EHEDG

The cleanability of the CLS54 sensor is certified to EHEDG Type EL - Class I.

When using the sensor in hygienic applications, please note that the cleanability of the sensor also depends on the way the sensor is installed. To install the sensor in a pipe, use the appropriate and EHEDG-certified flow vessels for the particular process connection.

3-A

Certified according to 3-A Standard 74- ("3-A Sanitary Standards for Sensor and Sensor Fittings and Connections Used on Milk and Milk Products Equipment").

Biological reactivity (USP class VI) (option)

Biological reactivity test certificate according to USP (United States Pharmacopoeia) part <87> and part <88> class VI with lot number traceability of materials in contact with the medium.

EC Regulation No. 1935/2004

The sensor meets the requirements of EC Regulation No. 1935/2004 on materials and articles intended to come into contact with food.

Pressure approval Canadian pressure approval for pipes according to ASME B31.3

Ordering information

Product page	www.endress.com/CLD134		
Product Configurator	 The navigation area is located on the right of the product page. Under "Device support" click "Configure your selected product". The Configurator opens in a separate window. Select all the options to configure the device in line with your requirements. 		
	 In this way, you receive a valid and complete order code for the device. 3. Export the order code as a PDF or Excel file. To do so, click the appropriate button at the top of the screen. 		
Scope of delivery	 The scope of delivery of the "compact version" comprises: 1 compact Smartec CLD134 measuring system with an integrated sensor 1 terminal strip set 1 set of Operating Instructions BA00401C/07/EN 1 set of Brief Operating Instructions KA00401C/07/EN For versions with HART communication: 1 set of Operating Instructions: Field communication with HART BA00212C/07/EN For versions with PROFIBUS interface: 1 set of Operating Instructions: Field communication with PROFIBUS BA00213C/07/EN I set of Operating Instructions: Field communication with PROFIBUS BA00213C/07/EN 		
	 The scope of delivery of the "remote version" comprises: 1 Smartec CLD134 transmitter 1 CLS54 inductive sensor with fixed cable 1 terminal strip set 1 set of Operating Instructions BA00401C/07/EN 1 set of Brief Operating Instructions KA00401C/07/EN For versions with HART communication: 1 set of Operating Instructions: Field communication with HART BA00212C/07/EN For versions with PROFIBUS interface: 1 set of Operating Instructions: Field communication with PROFIBUS BA00213C/07/EN I set of Operating Instructions: Field communication with PROFIBUS BA00213C/07/EN 		
	 The scope of delivery of the "transmitter excluding sensor" version comprises: 1 Smartec CLD134 transmitter 1 terminal strip set 1 set of Operating Instructions BA00401C/07/EN 1 set of Brief Operating Instructions KA00401C/07/EN For versions with HART communication: 1 set of Operating Instructions: Field communication with HART BA00212C/07/EN For versions with PROFIBUS interface: 1 set of Operating Instructions: Field communication with PROFIBUS BA00213C/07/EN I set of Operating Instructions: Field communication with PROFIBUS BA00213C/07/EN 1 m12 connector (for device version -*****PF*) 		

Basic version and function	Functions of the basic version	Additional options and associated functions
upgrade	 Measurement Calibration of cell constant Calibration of residual coupling Entry of installation factor Device parameter read-out Linear current output for measured value Current output simulation for measured value Service functions Choice of temperature compensation (including a user-configurable coefficient table) Choice of concentration measurement (4 fixed curves, 1 user-configurable table) Relay as a fault-signaling contact 	 Second current output for temperature (additional hardware option) HART communication PROFIBUS communication Remote parameter set configuration (additional software option): Remote switching of max. 4 parameter sets (measuring ranges) Temperature coefficients can be determined Temperature compensation can be selected (including 4 user-configurable coefficient tables) Choice of concentration measurement (4 fixed curves, 4 user-configurable tables) Measuring system checked with PCS alarm (live check) Relay can be configured as limit contactor or fault-signaling contact Biological reactivity test in accordance with USP <87>, <88> class VI

Accessories

Cable extension	 Measuring cable CLK6 Extension cable for inductive conductivity sensors, for extension via VBM junction box Sold by the meter, order number: 71183688 VBM Junction box for cable extension 10 terminal strips Cable entries: 2 x Pg 13.5 or 2 x NPT ½" Material: aluminum Degree of protection: IP 65 Order numbers Cable entries Pg 13.5 : 50003987 Cable entries NPT ½": 51500177 Depending on the ambient conditions, the inserted desiccant pouch must be checked and replaced at regular intervals to prevent incorrect measurements resulting from moisture bridges in the measuring line. Desiccant pouch Desiccant pouch with color indicator for VBM junction box Order No. 50000671
Post mounting kit	 Post mounting kit Mounting kit for securing the Smartec CLD132/CLD134 on horizontal and vertical pipes (max. Ø 60 mm (2.36")) Material: stainless steel 1.4301 (AISI 304) Order No. 50062121
	ADDOD4902 20 Mounting kit for mounting the CLD132/CLD134 remote version on a post (base plate is included in the scope of delivery for the transmitter)
Software upgrade	 Function upgrade Remote parameter set configuration (measuring range switching, MRS) and determination of temperature coefficient; Order No. 51501643 The serial number of the device must be specified when ordering.
Optoscope	 Optoscope Interface between the transmitter and PC/laptop for service purposes. The necessary Windows software "Scopeware" is supplied with the optoscope. The optoscope is supplied in a sturdy case along with all the necessary accessories. Order No.: 51500650

Calibration solutions

Conductivity calibration solutions CLY11

Precision solutions referenced to SRM (Standard Reference Material) by NIST for qualified calibration of conductivity measuring systems in accordance with ISO 9000

- CLY11-B, 149.6 μS/cm (reference temperature 25 °C (77 °F)), 500 ml (16.9 fl.oz) Order No. 50081903
- CLY11-C, 1.406 mS/cm (reference temperature 25 °C (77 °F)), 500 ml (16.9 fl.oz) Order No. 50081904
- CLY11-D, 12.64 mS/cm (reference temperature 25 °C (77 °F)), 500 ml (16.9 fl.oz) Order No. 50081905
- CLY11-E, 107.00 mS/cm (reference temperature 25 °C (77 °F)), 500 ml (16.9 fl.oz) Order No. 50081906

Technical Information TI00162C

www.addresses.endress.com

