# Technical Information **CCS120D**

Digital sensor with Memosens technology for determining total chlorine



# CCS120D offers high-precision measurement with long-term stability to guarantee optimum process monitoring.

## Application

Memosens CCS120D measures total chlorine in:

- Wastewater treatment plants
  - Disinfection monitoring and control in wastewater outlet
  - Reuse of outlet water
- Utilities of all industries All disinfection measuring points

## Your benefits

- Easy handling thanks to Memosens digital technology
- Enables predictive maintenance due to storage of sensor and process-specific data
- Low maintenance thanks to fast exchange of membrane cap and electrolyte
- Flexible installation in CYA112 immersion assembly or CCA250 flow assembly
- Easy combination with other relevant parameters of liquid analysis thanks to connection to the Liquiline multichannel transmitter

## Other advantages of Memosens technology


- Maximum process safety
- Data security thanks to digital data transmission
- Very easy to use as sensor data saved in the sensor
- Recording of sensor load data in the sensor enables predictive maintenance




Measuring principle	Total chlorine levels are determined in accordance with the amperometric measuring principle.
	<ul> <li>In this context, the following compounds are referred to collectively as total chlorine:</li> <li>Free available chlorine: hypochlorous acid (HOCl), hypochlorite ions (OCl<sup>-</sup>)</li> <li>Combined chlorine (chloramines)</li> <li>Organic combined chlorine, e.g. cyanuric acid derivatives</li> </ul>
	Chloride (Cl <sup>-</sup> ) is not recorded.
	The sensor is a membrane-covered, two-electrode sensor. A platinum working electrode is used as the working electrode. A counter electrode coated in silver halide is used as the counter and reference electrode.
	The membrane cap, which is filled with electrolyte, constitutes the measuring chamber. The measuring electrodes are immersed in the measuring chamber. The measuring chamber is separated from the medium by means of a microporous membrane. The chlorine compounds contained in the medium diffuse through the sensor membrane.
	The constant polarization voltage present between the two electrodes causes the electrochemical reaction of the chlorine compounds at the working electrode. Electron donation at the working electrode and electron acceptance at the counter-electrode cause a current to flow. In the operational range of the sensor, this current flow is proportional to the chlorine concentration under constant conditions and is only slightly pH-dependent in the case of this sensor type. The transmitter uses the current signal to calculate the measured variable for concentration in mg/l (ppm).
Mode of operation	<ul> <li>The sensor consists of:</li> <li>Membrane cap (measuring chamber with membrane)</li> <li>Sensor shaft with counter-electrode with large surface area and a working electrode embedded in plastic</li> </ul>
	The electrodes are in an electrolyte which is separated from the medium by a membrane. The membrane prevents the electrolyte from leaking and protects against contaminant penetration.
	The measuring system is calibrated by means of a colorimetric comparison measurement in accordance with the DPD method for total chlorine. The calibration value determined is entered in the transmitter.
Cross-sensitivities <sup>1)</sup>	Oxidants, such as bromine, iodine, ozone, chlorine dioxide, permanganate, peracetic acid and hydrogen peroxide result in higher readings than expected.
	Reducing agents, such as sulfides, sulfites, thiosulfates and hydrazine, result in lower readings than expected.
Measuring system	<ul> <li>A complete measuring system comprises:</li> <li>CCS120D disinfection sensor (membrane-covered)</li> <li>Flexdip CYA112 immersion assembly</li> <li>Measuring cable CYK10, CYK20</li> <li>Transmitter, e. g. Liquiline CM44x with firmware version 01.06.08 or higher or CM44xR with firmware version 01.06.08 or higher</li> <li>Optional: extension cable CYK11</li> <li>Optional: Flowfit CCA250 flow assembly (a pH/ORP sensor can additionally be installed here)</li> </ul>

# Function and system design

1) The listed substances have been tested individually and in different concentrations. A reaction to a mixture of substances was not tested.

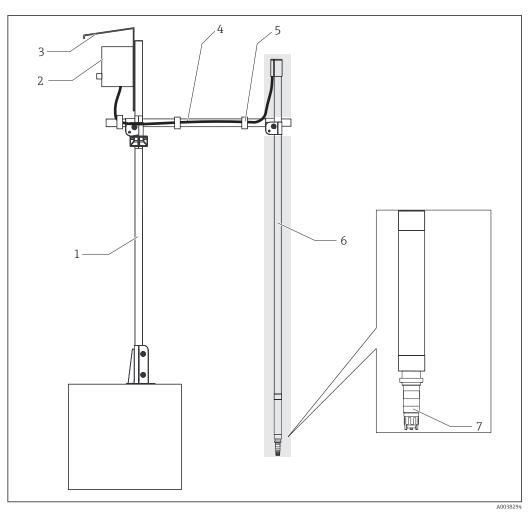

- **1** Example of a measuring system
- CYH112 holder, main pipe 1
- 2 3 Transmitter
- Protective cover
- 4 CYH112 holder, transverse pipe
- 5 6 7
- Hook-and-loop tape CYA112 assembly (gray background) Disinfection sensor CCS120D (membrane-covered, Ø25 mm)

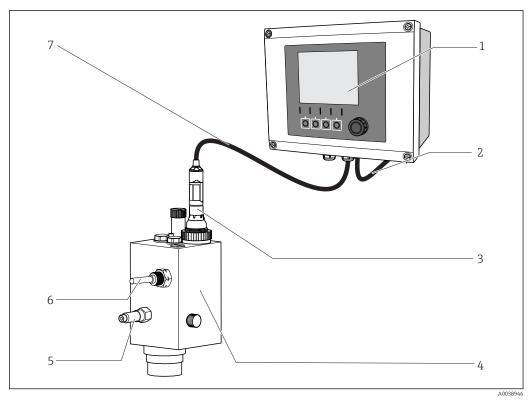

#### E 2 Example of a measuring system

- 1 Liquiline CM44x transmitter
- 2 Power cable for transmitter
- 3 Disinfection sensor CCS120D (membrane-covered, Ø25 mm)
- 4 Flowfit CCA250 flow assembly
- 5 Inlet to Flowfit CCA250 flow assembly
- 6 Proximity switch (optional)
- 7 Measuring cable CYK10

### Dependability

## Reliability Memosens

Memosens makes your measuring point safer and more reliable:

- Non-contact, digital signal transmission enables optimum galvanic isolation
- Dust- and waterproof (IP 68)
- Sensor can be calibrated in a lab, thus increasing the availability of the measuring point in the process
- Predictive maintenance thanks to recording of sensor data, e.g.:
  - Total hours of operation
  - Hours of operation with very high or very low measured values
  - Hours of operation at high temperatures
  - Calibration history

### Maintainability

#### Easy handling

Sensors with Memosens technology have integrated electronics that store calibration data and other information (e.g. total hours of operation or operating hours under extreme measuring conditions). Once the sensor has been connected, the sensor data are transferred automatically to the transmitter and used to calculate the current measured value. As the calibration data are stored in the sensor, the sensor can be calibrated and adjusted independently of the measuring point. The result:

- Easy calibration in the measuring lab under optimum external conditions increases the quality of the calibration.
- Pre-calibrated sensors can be replaced quickly and easily, resulting in a dramatic increase in the availability of the measuring point.
- Thanks to the availability of the sensor data, maintenance intervals can be accurately defined and predictive maintenance is possible.
- The sensor history can be documented on external data carriers and in evaluation programs,.
- Thus, the current application of the sensors can be made to depend on their previous history.

## Safety

### Data security thanks to digital data transmission


Memosens technology digitizes the measured values in the sensor and transmits the data to the transmitter via a non-contact connection that is free from potential interference. The result:

- Automatic error message if sensor fails or connection between sensor and transmitter is
  - interrupted
- Immediate error detection increases measuring point availability

## Input

Measured values	Total chlorine         [mg/l, μg/l, ppm, ppb]         • Free available chlorine:         - Hypochlorous acid (HOCl)         - Hypochlorite ions (OCl <sup>-</sup> )         • Combined chlorine (chloramines)         • Organically combined chlorine (e.g. cyanuric acid derivatives)
	Temperature [°C, °F]
Measuring ranges	0.1 to 10 mg/l (ppm) The sensor is not suitable for checking the absence of chlorine.
Signal current	2.4 to 5.4 nA per 1 mg/l (ppm)

## Power supply

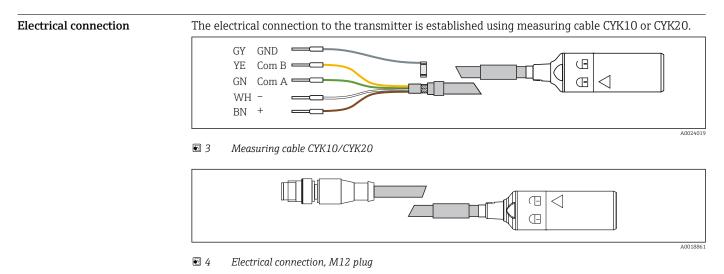

# Performance characteristics

Reference operating	Temperature	3	30 °C (86 °F)	
conditions	pH value	p	H 7.2	
Response time	$T_{90}$ approx. 60 s (with increasing and decreasing concentration)			
Measured value resolution of sensor	0.01 mg/l (ppm)			
Nominal slope	4 nA per 1 mg/l (ppm) (under reference operating conditions)			
Long-term drift	< ±3 % per month			
Polarization time	Initial commissioning		Up to 24 h	
	After replacing the membrane cap		Typically 1 to 6 h	
	Recommissioning		Pour approx. 4 to 24 h	
Operating time of the electrolyte	3 to 6 months (depending on water quality)			
Operating time of membrane	With electrolyte	Typically 3	to 6 months, depending on water quality	
сар	Without electrolyte	> 2 years (	25 °C (77 °F))	

Installation

## Orientation Do not install upside-down! Install the sensor in an assembly, support or appropriate process connection at an angle of at ► least 15° to the horizontal. Other angles of inclination are not permitted. Follow the instructions for installing the sensor in the Operating Instructions of the assembly used. Α Permitted orientation В Incorrect orientation Α 15° 15 В At least 70 mm (2.76 in) Immersion depth Installation instructions Installation in Flowfit CCA250 flow assembly The Flowfit CCA250 flow assembly is designed for installing the sensor. It allows a pH and an ORP sensor to also be installed, in addition to the total chlorine sensor. A needle valve controls the flow rate in the range of 30 to 120 l/h (7.9 to 31.7 gal/h). Please note the following during installation: The flow rate must be at least 30 l/h (7.9 gal/h). If the flow drops below this value or stops ► completely, this can be detected by an inductive proximity switch. If the medium is returned to an overflow basin, pipe or similar, the resulting counterpressure on the sensor must not exceed 1 bar (14.5 psi) and must remain constant. Negative pressure at the sensor, e.g. due to medium being returned to the suction side of a pump, must be avoided. To avoid buildup, heavily contaminated water should also be filtered. Additional installation instructions can be found in the Operating Instructions for the assembly. Installation in other flow assemblies When using other flow assemblies, please ensure the following: A flow velocity of at least 15 cm/s (0.49 ft/s) must always be ensured at the membrane. The flow direction is upwards. Transported air bubbles must be removed so that they do not collect in front of the membrane. The flow must be directed to the membrane. Pay attention to the additional installation instructions in the Operating Instructions for the assembly. Installation in Flexdip CYA112 immersion assembly

Alternatively, the sensor can be installed in an immersion assembly with threaded connection NPT  $\frac{3}{4}$ , e. g. CYA112.

Please note the following during installation:

- Do not twist the sensor measuring cable. Recommendation: use a quick release fastener.
- To improve the sealing effect, we recommend you wrap a thin PTFE tape around the thread for assemblies with an NPT <sup>3</sup>/<sub>4</sub>" thread.



Additional installation instructions can be found in the Operating Instructions for the assembly.

## Environment

Ambient temperature	5 to 45 °C (41 to 113 °F), no temperature fluctuations		
Storage temperature	Without electrolyte	-20 to 60 °C (-4 to 140 °F)	
Degree of protection	IP68		

## Process

Process temperature	5 to 45 °C (41 to 113 °F), no temperature fluctuations
Process pressure	Maximum 1 bar (14.5 psi), if installed in the Flowfit CCA250 assembly
pH range	pH5.5 to 9.5
	pH dependency: increase from pH 7 to pH 8: approx10 % for free chlorine
Conductivity range	0.03 to 40 mS/cm
Flow	CCA250 • Optimum 40 to 60 l/h (10.6 to 15.8 gal/h) • Minimum 30 l/h (7.9 gal/h) • Maximum 100 l/h (26.4 gal/h)
Minimum flow	<ul> <li>Optimum 20 to 30 cm/s</li> <li>Minimum 15 cm/s</li> <li>Maximum 50 cm/s</li> </ul>

Dimensions

# 

## Mechanical construction

☑ 5 Dimensions in mm (in)

75 g (2.65 oz)		
Sensor shaft	PVC	
Membrane	PET	
Membrane cap	PPE	
Clamping ring	PTFE	
Hose seal	Silicone	
Electrode body	PMMA	
	Sensor shaft Membrane Membrane cap Clamping ring Hose seal	Sensor shaftPVCMembranePETMembrane capPPEClamping ringPTFEHose sealSilicone

<u>Ø25 (0.98)</u> Ø28.8 (1.13)

**Cable specification** 

max. 100 m (330 ft), incl. Cable extension

# **Certificates and approvals**

C€ mark

## Declaration of conformity

The product meets the requirements of the harmonized European standards. As such, it complies with the legal specifications of the EU directives. The manufacturer confirms successful testing of the product by affixing to it the CE mark.

A0038260

## Ex approvals<sup>2)</sup>

## cCSAus NI Cl. I, Div. 2

This product complies with the requirements defined in:

- UL 61010-1
- ANSI/ISA 12.12.01
- FM 3600
- FM 3611
- CSA C22.2 NO. 61010-1-12
- CSA C22.2 NO. 213-16
- Control drawing: 401204

# **Ordering information**

Product page	www.endress.com/ccs120d
Product Configurator	<ul> <li>On the product page there is a <b>Configure</b> button to the right of the product image.</li> <li>1. Click this button.</li> <li>The Configurator opens in a separate window.</li> </ul>
	<ol> <li>Select all the options to configure the device in line with your requirements.</li> <li>In this way, you receive a valid and complete order code for the device.</li> <li>Export the order code as a PDF or Excel file. To do so, click the appropriate button on the right above the selection window.</li> </ol>
	For many products you also have the option of downloading CAD or 2D drawings of the selected product version. Click the <b>CAD</b> tab for this and select the desired file type using picklists.
Scope of delivery	The delivery comprises: Disinfection sensor (membrane-covered) Bottle with electrolyte (50 ml (1.69 fl.oz)) and nozzle Replacement membrane cap Operating Instructions

Manufacturer's certificate

<sup>2)</sup> Only if connected to CM44x(R)-CD\*

## Accessories

The following are the most important accessories available at the time this documentation was issued.

► For accessories not listed here, please contact your Service or Sales Center.

Device-specific accessories	<ul> <li>Kit CCS120/120D, maintenance kit</li> <li>2 x membrane caps and 1 x electrolyte 50 ml (1.69 fl.oz)</li> <li>Order number: 71412917</li> </ul>
	<ul> <li>Kit CCS120/120D, electrolyte</li> <li>1 × electrolyte 50 ml (1.69 fl.oz)</li> <li>Order number: 71412916</li> </ul>
	Kit CCS120/120D, Viton ring set <ul> <li>2 × Viton rings</li> <li>Order number: 71105209</li> </ul>
	<ul> <li>Memosens data cable CYK10</li> <li>For digital sensors with Memosens technology</li> <li>Product Configurator on the product page: www.endress.com/cyk10</li> </ul>
	Technical Information TI00118C
	<ul> <li>Memosens data cable CYK11</li> <li>Extension cable for digital sensors with Memosens protocol</li> <li>Product Configurator on the product page: www.endress.com/cyk11</li> </ul>
	Technical Information TI00118C
	<ul> <li>Memosens laboratory cable CYK20</li> <li>For digital sensors with Memosens technology</li> <li>Product Configurator on the product page: www.endress.com/cyk20</li> </ul>
	<ul> <li>Flowfit CCA250</li> <li>Flow assembly for chlorine and pH/ORP sensors</li> <li>Product Configurator on the product page: www.endress.com/cca250</li> </ul>
	Technical Information TI00062C
	<ul> <li>Flexdip CYA112</li> <li>Immersion assembly for water and wastewater</li> <li>Modular assembly system for sensors in open basins, channels and tanks</li> <li>Material: PVC or stainless steel</li> <li>Product Configurator on the product page: www.endress.com/cya112</li> </ul>

Technical Information TI00432C

## Photometer PF-3

- Compact hand-held photometer for determining the free available chlorine and total chlorine concentration
- Color-coded reagent bottles with clear dosing instructions
- Order No.: 71257946

### COY8

Zero-point gel for oxygen and disinfection sensors

- Oxygen-free and chlorine-free gel for the verification, zero point calibration and adjustment of oxygen and disinfection measuring points
- Product Configurator on the product page: www.endress.com/coy8

Technical Information TI01244C

www.addresses.endress.com

