# Technical Information **TR66, TC66**

Modular thermometer, explosion-protected, barstock thermowell, with thread or flange



TR66 Resistance thermometer (RTD)
TC66 Thermometer with thermocouple (TC)

## **Applications**

- Heavy duty applications
- Oil & Gas processing industry
- Measuring range:
  - Resistance insert (RTD):-200 to 600 °C (-328 to 1112 °F)
  - Thermocouple (TC):-40 to 1100 °C (-40 to 2012 °F)
- Static pressure range up to 100 bar (1450 psi)
- Degree of protection up to IP68

## Head transmitter

All Endress+Hauser transmitters are available with enhanced accuracy and reliability compared to directly wired sensors. Easy customizing by choosing one of the following outputs and communication protocols:

- Analog output 4 to 20 mA
- HART
- PROFIBUS® PA
- FOUNDATION Fieldbus™

## Your benefits

- High degree of flexibility thanks to modular design with standard terminal heads as per DIN EN 50446 and customer-specific immersion lengths
- High degree of insert compatibility and design as per DIN 43772
- Extension neck, nipple union version, to protect the head transmitter from overheating
- Types of protection for use in hazardous locations:
  - Intrinsic Safety (Ex ia)
  - Flameproof (Ex d)
  - Non-sparking (Ex nA)
  - Dust ignition proof (protection by enclosure)



## Function and system design

## Measuring principle

#### Resistance thermometer (RTD)

These resistance thermometers use a Pt100 temperature sensor according to IEC 60751. The temperature sensor is a temperature-sensitive platinum resistor with a resistance of 100  $\Omega$  at 0 °C (32 °F) and a temperature coefficient  $\alpha$  = 0.003851 °C<sup>-1</sup>.

## There are generally two different kinds of platinum resistance thermometers:

- Wire wound (WW): Here, a double coil of fine, high-purity platinum wire is located in a ceramic support. This is then sealed top and bottom with a ceramic protective layer. Such resistance thermometers not only facilitate very reproducible measurements but also offer good long-term stability of the resistance/temperature characteristic within temperature ranges up to 600 °C (1112 °F). This type of sensor is relatively large in size and it is comparatively sensitive to vibrations.
- Thin film platinum resistance thermometers (TF): A very thin, ultrapure platinum layer, approx. 1 µm thick, is vaporized in a vacuum on a ceramic substrate and then structured photolithographically. The platinum conductor paths formed in this way create the measuring resistance. Additional covering and passivation layers are applied and reliably protect the thin platinum layer from contamination and oxidation, even at high temperatures.


The primary advantages of thin film temperature sensors over wire wound versions are their smaller sizes and better vibration resistance. A relatively low principle-based deviation of the resistance/ temperature characteristic from the standard characteristic of IEC 60751 can frequently be observed among TF sensors at high temperatures. As a result, the tight limit values of tolerance category A as per IEC 60751 can only be observed with TF sensors at temperatures up to approx.  $300 \, ^{\circ}\text{C}$  (572  $^{\circ}\text{F}$ ).

## Thermocouples (TC)

Thermocouples are comparatively simple, robust temperature sensors which use the Seebeck effect for temperature measurement: if two electrical conductors made of different materials are connected at a point, a weak electrical voltage can be measured between the two open conductor ends if the conductors are subjected to a thermal gradient. This voltage is called thermoelectric voltage or electromotive force (emf.). Its magnitude depends on the type of conducting materials and the temperature difference between the "measuring point" (the junction of the two conductors) and the "cold junction" (the open conductor ends). Accordingly, thermocouples primarily only measure differences in temperature. The absolute temperature at the measuring point can be determined from these if the associated temperature at the cold junction is known or is measured separately and compensated for. The material combinations and associated thermoelectric voltage/temperature characteristics of the most common types of thermocouple are standardized in the IEC 60584 and ASTM E230/ANSI MC96.1 standards.

2


## Measuring system

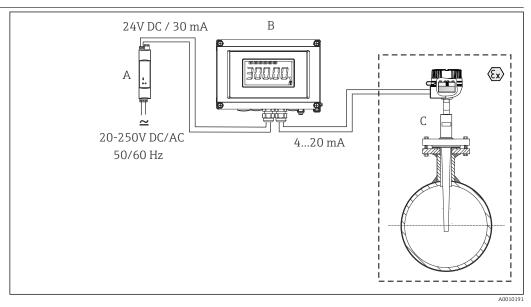

#### **■** 1 Application example

- The RN221N active barrier (24 V DC, 30 mA) has a galvanically isolated output for powering 2-wiretransmitters. The universal power supply works with an input supply voltage of 20 to 250 V DC/AC, 50/60 Hz, which means that it can be used in all international power grids. More information on this can be found in the Technical Information (see "Documentation").
- RIA16 field display unit The display unit records the analog measuring signal from the head transmitter and shows this on the display. The LC display shows the current measured value in digital form and as a bar graph indicating a limit value violation. The display unit is looped into the 4 to 20 mA circuit and gets the required energy from there. More information on this can be found in the Technical Information (see "Documentation").
- Mounted thermometer with head transmitter installed.

## Modular design

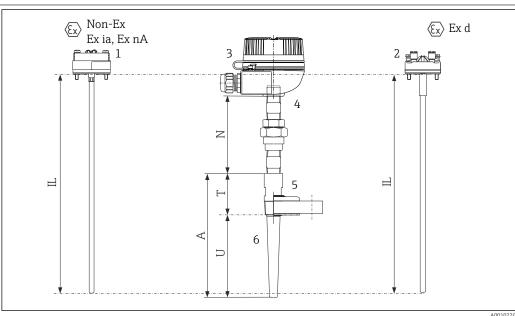

#### **₽** 2 Thermometer design

- *Insert with mounted head transmitter (example)* 1
- 2 Insert with mounted ceramic terminal block (example)
- 3 Terminal head
- Extension neck
- Threaded or flanged process connection
- 6 Thermowell from round barstock material
- N Extension neck length
- Thermowell lagging Τ
- U Immersion length
- Thermowell length Α
- Insertion length

The terminal head is used as a connection module for the extension neck and for the mechanical and electrical connection of the insert. The primary sensor is, mechanically protected, positioned inside of the insert. The insert can be replaced or calibrated without interrupting the process. The insert can be assembled with a ceramic terminal block or a transmitter. If required, the thermowell can be supplied with a flanged or threaded process connection.

## Input

## Measured variable

Temperature (temperature-linear transmission behavior)

#### Measuring range

Depends on the type of sensor used

Sensor type	Measuring range
Pt100 thinfilm	−50 to +400 °C (−58 to +752 °F)
Pt100 thinfilm, iTHERM StrongSens, vibration-resistant > 60g	-50 to +500 °C (-58 to +932 °F)
Pt100 wire wound, extended measuring range	−200 to +600 °C (−328 to +1112 °F)
Thermocouple TC, type J	−40 to +750 °C (−40 to +1382 °F)
Thermocouple TC, type K	-40 to +1100 °C (-40 to +2012 °F)

## Output

## **Output signal**

Generally, the measured value can be transmitted in one of two ways:

- Directly-wired sensors sensor measured values forwarded without a transmitter.
- Via all common protocols by selecting an appropriate Endress+Hauser iTEMP temperature transmitter. All the transmitters listed below are mounted directly in the terminal head and wired with the sensory mechanism.

# Family of temperature transmitters

Thermometers fitted with iTEMP transmitters are an installation-ready complete solution to improve temperature measurement by significantly increasing accuracy and reliability, when compared to direct wired sensors, as well as reducing both wiring and maintenance costs.

#### 4 to 20 mA head transmitters

They offer a high degree of flexibility, thereby supporting universal application with low inventory storage. The iTEMP transmitters can be configured quickly and easily at a PC. Endress+Hauser offers free configuration software which can be downloaded from the Endress+Hauser Website. More information can be found in the Technical Information.

#### HART® head transmitters

The transmitter is a 2-wire device with one or two measuring inputs and one analog output. The device not only transfers converted signals from resistance thermometers and thermocouples, it also transfers resistance and voltage signals using HART $^{\oplus}$  communication. Swift and easy operation, visualization and maintenance using universal device configuration tools like FieldCare, DeviceCare or FieldCommunicator 375/475. Integrated Bluetooth $^{\oplus}$  interface for the wireless display of measured values and configuration via E+H SmartBlue (app), optional. For more information, see the Technical Information.

## PROFIBUS® PA head transmitters

Universally programmable head transmitter with PROFIBUS® PA communication. Conversion of various input signals into digital output signals. High accuracy over the complete ambient temperature range. The configuration of PROFIBUS PA functions and of device-specific parameters is performed via fieldbus communication. For more information, see the Technical Information.

## FOUNDATION Fieldbus™ head transmitters

Universally programmable head transmitter with FOUNDATION Fieldbus™ communication. Conversion of various input signals into digital output signals. High accuracy over the complete

ambient temperature range. All transmitters are released for use in all important process control systems. The integration tests are performed in Endress+Hauser's "System World". For more information, see the Technical Information.


Advantages of the iTEMP transmitters:


- Dual or single sensor input (optionally for certain transmitters)
- Pluggable display (optionally for certain transmitters)
- Unsurpassed reliability, accuracy and long-term stability in critical processes
- Mathematical functions
- Monitoring of the thermometer drift, sensor backup functionality, sensor diagnostic functions
- Sensor-transmitter matching for dual sensor input transmitters, based on Callendar/Van Dusen coefficients


## Power supply


## Wiring diagram for RTD

Type of sensor connection

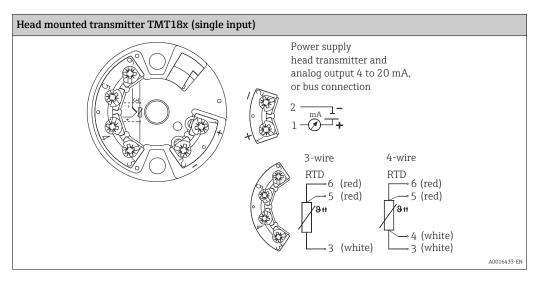

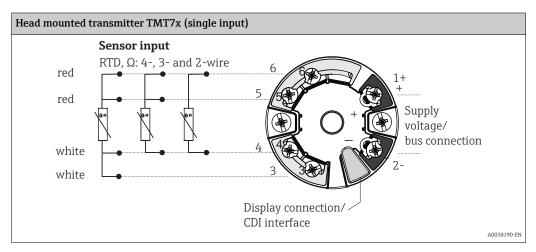

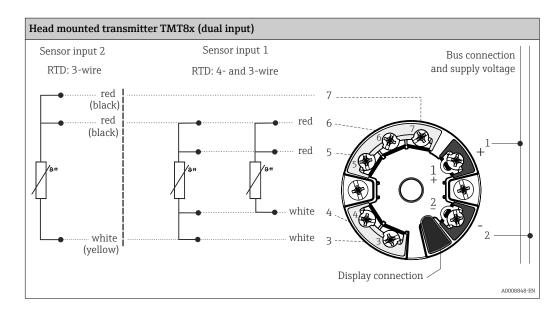


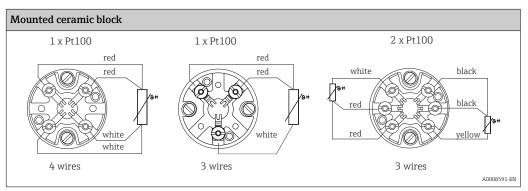


## Wiring diagram for TC

Thermocouple wire colors

As per IEC 60584	As per ASTM E230				
31 3 1 1	<ul><li>Type J: white (+), red (-)</li><li>Type K: yellow (+), red (-)</li></ul>				

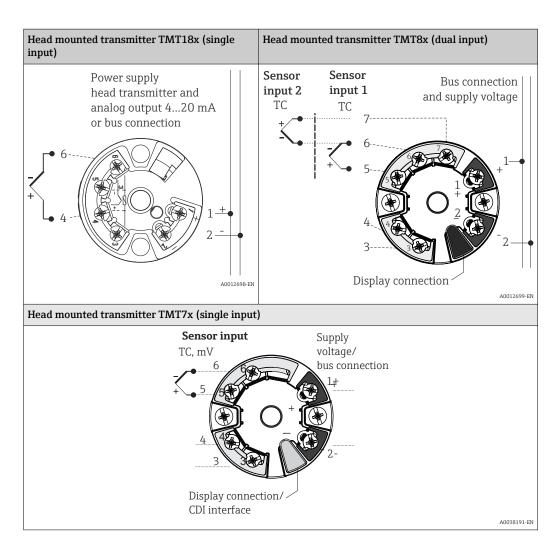

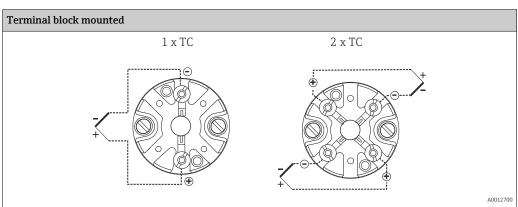

## Overvoltage protection

To protect against overvoltage in the power supply and signal/communication cables for the thermometer electronics, Endress+Hauser offers the HAW562 surge arrester for DIN rail mounting and the HAW569 for field housing installation.

For more information see the Technical Information "HAW562 Surge arrester" TI01012K and "HAW569 Surge arrester" TI01013K.

## Performance characteristics

## Accuracy

Permissible deviation limits of thermoelectric voltages from the standard characteristic for thermocouples as per IEC 60584 or ASTM E230/ANSI MC96.1:


Standard	Туре	Stand	ard tolerance	Special tolerance			
IEC 60584		Class	Deviation		Deviation		
	J (Fe-CuNi)	2	2 ±2,5 °C (-40 to 333 °C) ±0,0075  t  1) (333 to 750 °C)		±1,5 °C (-40 to 375 °C) ±0,004  t  1) (375 to 750 °C)		
	K (NiCr-NiAl)	2	±2,5 °C (-40 to 333 °C) ±0,0075  t  1) (333 to 1200 °C)	1	±1,5 °C (-40 to 375 °C) ±0,004  t  <sup>1)</sup> (375 to 1000 °C)		

1) |t| = absolute value in °C

Standard	Туре	Standard tolerance	Special tolerance			
ASTM E230/ANSI		Deviation, the larger respective value applies				
MC96.1	J (Fe-CuNi)	±2,2 K or ±0,0075  t  <sup>1)</sup> (0 to 760 °C)	±1,1 K or ±0,004  t  <sup>1)</sup> (0 to 760 °C)			
	K (NiCr- NiAl)	$\pm 2.2$ K oder $\pm 0.02$  t  $^{1)}$ ( $-200$ to $0$ °C) $\pm 2.2$ K or $\pm 0.0075$  t  $^{1)}$ ( $0$ to $1260$ °C)	±1,1 K or ±0,004  t  1) (0 to 1260 °C)			

1) |t| = absolute value in °C

RTD resistance thermometer as per IEC 60751

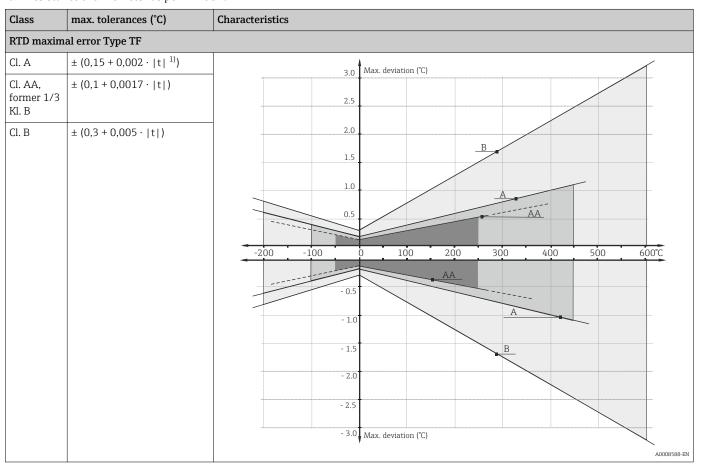

1) |t| = absolute value in °C

i

In order to obtain the maximum tolerances in  $^{\circ}F$ , the results in  $^{\circ}C$  must be multiplied by a factor of 1.8.

## Self heating

RTD elements are passive resistances that are measured using an external current. This measurement current causes a self-heating effect in the RTD element itself which in turn creates an additional measurement error. In addition to the measurement current, the size of the measurement error is also affected by the temperature conductivity and flow velocity of the process. This self-heating error is negligible when an Endress+Hauser iTEMP temperature transmitter (very small measurement current) is connected.

## Response time

Calculated according to IEC 60751 at an ambient temperature of approx. 23  $^{\circ}$ C by immersing in running water (0.4 m/s flow rate, 10 K excess temperature):

φ Q1 thermowell	Φ Q2 tapered tip	Response time			
20 mm (0.79 in)	14 mm (0.55 in)	t <sub>50</sub> t <sub>90</sub>	34 s 105 s		
25 mm (0.98 in)	18 mm (0.71 in)	t <sub>50</sub> t <sub>90</sub>	37 s 115 s		



Response time for insert without transmitter.

#### Calibration

Endress+Hauser provides comparison temperature calibration from -80 to +1400 °C (-110 to +2552 °F) based on the International Temperature Scale (ITS90). Calibrations are traceable to national and international standards. The calibration certificate is referenced to the serial number of the thermometer. Only the insert is calibrated.

Insert: Ø 6 mm (0.24 in)	Minimum insertion length of insert in mm (in)				
Temperature range	without head transmitter with head transmitter				
-80 to 250 °C (−110 to 480 °F)	No minimum immersion length required				
250 to 550 °C (480 to 1020 °F)	300 (11.81)				
550 to 1400 °C (1020 to 2552 °F)	450 (17.72)				

## Insulation resistance

Insulation resistance  $\geq 100 \text{ M}\Omega$  at ambient temperature.


Insulation resistance between the terminals and the tube is measured with a voltage of 100 V DC.

## Installation

#### Orientation

No restrictions.

#### **Installation instructions**

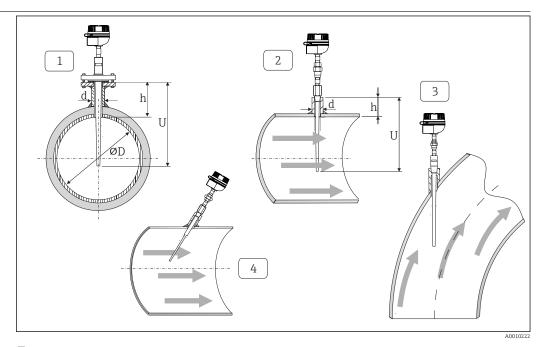

3 Installation examples

- 1 2 In pipes with a small cross-section, the sensor tip should reach or extend slightly past the center axis of the pipe (=U).
- 3 4 Slanted orientation.

The immersion length of the thermometer influences the accuracy. If the immersion length is too small, errors in the measurement are caused by heat conduction via the process connection and the container wall. Therefore, if installing in a pipe the immersion length should be at least half the pipe diameter. Installation at an angle (see item 3 and 4) could be another solution. When determining the immersion length or installation depth all the parameters of the thermometer and of the process to be measured must be taken into account (e.g. flow velocity, process pressure).

For the best installation, apply the following rule:  $h \sim d$ ; U > D/2 + h. As far as corrosion is concerned, the base material for parts in contact with the fluid is able to withstand the most common corrosive media up to the high temperature range. For further information on specific applications, please contact the Endress+Hauser sales organization.

The counterparts for process connections and seals are not supplied with the thermometer and must be ordered separately if needed.

## **Environment**

## Ambient temperature range

Terminal head	Temperature in °C (°F)					
Without mounted head transmitter	Depends on the terminal head used and the cable gland or fieldbus connector, see Terminal heads' section → 🖺 16					
With mounted head transmitter	-40 to 85 °C (-40 to 185 °F)					
With mounted head transmitter and display	−20 to 70 °C (−4 to 158 °F)					

# Shock and vibration resistance

The Endress+Hauser inserts exceed the requirements of IEC 60751 with regard to shock and vibration resistance of 3g in a range from 10 to 500 Hz. The vibration resistance of the measuring point depends on the sensor type and design. See the following table:

Sensor type	Vibration resistance for the sensor tip
Pt100 (WW)	> 30 m/s² (3g)
Pt100 (TF), enhanced vibration resistance	> 40 m/s² (4g)
iTHERM StrongSens Pt100 (TF)	> 600 m/s² (60g)
Thermocouple inserts	> 30 m/s² (3g)

# Electromagnetic compatibility (EMC)

Depends on the head transmitter used. For details see the Technical Information.  $\rightarrow$   $\stackrel{ riangle}{=}$  21

## **Process**

## Process temperature range


Depends on the sensor type and the material of the thermowell used, max. -200 to  $+1\,100$  °C (-328 to  $+2\,012$  °F)

## Process pressure range

Process connection	Standard	Max. process pressure
Thread	ANSI B1.20.1	75 bar (1088 psi)
Flange	ASME B16.5	Depending on flange pressure rating 150, 300 or 600 lb

## Permitted flow velocity depending on the immersion length

The highest flow velocity tolerated by the thermometer diminishes with increasing sensor immersion length exposed to the stream of the fluid. The flow velocity is also dependent on the diameter of the thermometer tip, the type of medium being measured, the process temperature and the process pressure. The following diagrams exemplify the maximum permitted flow velocities in water and superheated steam at a process pressure of 4 MPa (40 bar).

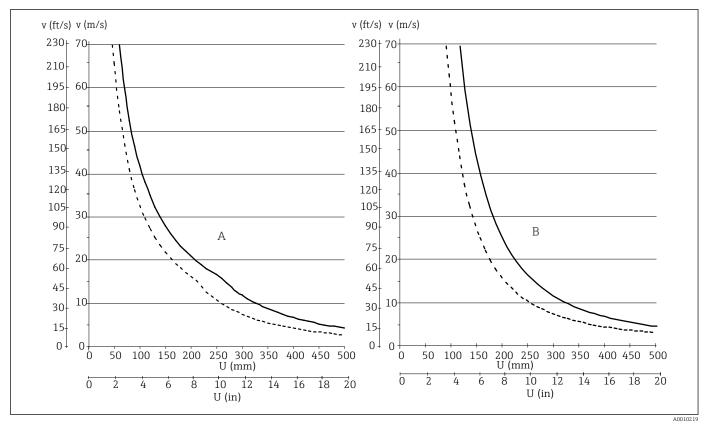

■ 4 Permitted flow velocity


- A Medium water at  $T = 50 \,^{\circ}\text{C}$  (122 °F)
- B Medium superheated steam at  $T = 400 \,^{\circ}\text{C}$  (752 °F)
- U Immersion length of the thermowell, material 1.4401 (316)
- v Flow velocity
- ----- Thermowell diameter with  $\phi$  D1 = 35 mm (1.38 in),  $\phi$  Q1 = 25 mm (0.98 in),  $\phi$  Q2 = 18 mm (0.71 in)
- --- Thermowell diameter with  $\phi D1 = 30 \text{ mm} (1.18 \text{ in}), \phi Q1 = 20 \text{ mm} (0.8 \text{ in}), \phi Q2 = 14 \text{ mm} (0.55 \text{ in})$

Information on the thermowell dimensions  $\phi$  Q1,  $\phi$  Q2,  $\phi$  D1,  $\phi$  Df and U,

## Mechanical construction

Design, dimensions

All dimensions in mm (in).

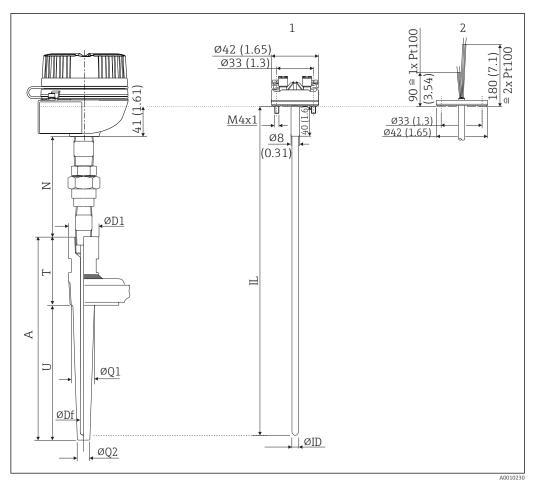

■ 5 Dimensions of the Omnigrad S TX66

- 1 Insert with terminal block mounted
- 2 Insert with flying leads
- ID Insert diameter
- N Extension neck length
- T Thermowell lagging
- A Thermowell length
- U Immersion length
- IL Insertion length
- Ø Thermowell diameter at extension neck connection
- Ø Df Thermowell internal diameter
- Ø Q1 Thermowell outer diameter at flanged or threaded process connection
- Ø Q2 Thermowell tip outer diameter

In the process, the thermowell is the component of the thermometer that is exposed to the highest mechanical stress. It is made from round barstock and can be supplied in different materials and dimensions to fit the different chemical/physical properties of the process: corrosion, temperature, pressure and flow velocity.

The thermowell consists of three parts:

- The cylindrical thermowell lagging (with a standard diameter of 30 or 35 mm (1.18 or 1.38 in) and lengths of 70/100 mm (2.76/3.94 in)) constitutes the outer part of the thermowell and is connected to the terminal head via an extension neck (nipple, type N or nipple-union-nipple, type NUN).
- The conical or cylindrical part (U) that is in contact with the medium (wetted part) is located below the process connection. The standard diameter (Ø Q1) below the process connection is 20 or 25 mm (0.79 or 0.98 in).
- The threaded or flanged process connection is the part between the thermowell extension and the wetted part. It is the interface to the plant and guarantees the sealing between the thermometer and the environment.

The surface of the wetted part of the thermowell is available with a standard surface roughness rating of Ra =  $1.6~\mu m$  (other surface versions available on request).



The maximum total length A of the thermowell (maximum drilling length) is 1200 mm (47.3 in). Lengths of more than 1200 mm (47.3 in) are only available on request.

## Weight

1.5 to 5.5 kg (3.3 to 12.1 lbs) for standard options.

## Materials

## Extension neck and thermowell, insert

The temperatures for continuous operation specified in the following table are only intended as reference values for use of the various materials in air and without any significant compressive load. The maximum operating temperatures are reduced considerably in cases where process conditions such as high mechanical load occur or in aggressive media.

Designation	Short form	Recommended max. temperature for continuous use in air	Features
AISI 316/1.4401	X5CrNiMo 17-12-2	650 °C (1 202 °F) <sup>1)</sup>	<ul> <li>Austenitic, stainless steel</li> <li>High corrosion resistance in general</li> <li>Particularly high corrosion resistance in chlorine-based and acidic, non-oxidizing atmospheres through the addition of molybdenum (e.g. phosphoric and sulfuric acids, acetic and tartaric acids with a low concentration)</li> </ul>
AISI 316L/ 1.4404	X2CrNiMo17-12-2	650 °C (1202 °F) <sup>1)</sup>	<ul> <li>Austenitic, stainless steel</li> <li>High corrosion resistance in general</li> <li>Particularly high corrosion resistance in chlorine-based and acidic, non-oxidizing atmospheres through the addition of molybdenum (e.g. phosphoric and sulfuric acids, acetic and tartaric acids with a low concentration)</li> <li>Increased resistance to intergranular corrosion and pitting</li> <li>Compared to 1.4404, 1.4435 has even higher corrosion resistance and a lower delta ferrite content</li> </ul>
AISI 316Ti/ 1.4571	X6CrNiMoTi17-12-2	700 °C (1292 °F) <sup>1)</sup>	<ul> <li>Properties comparable with AISI316L</li> <li>The addition of titanium increases resistance to intergranular corrosion even after welding</li> <li>Broad range of uses in the chemical, petrochemical and oil industries as well as in coal chemistry</li> <li>Can only be polished to a limited extent, titanium streaks can form</li> </ul>
AISI A105/1.0460	C22.8	450 °C (842 °F)	<ul> <li>Heat-resistant steel</li> <li>Resistant to atmospheres which contain nitrogen and are low in oxygen; not suitable for acids or other aggressive media</li> <li>Often used for steam generators, water and steam pipes, pressure vessels</li> </ul>

Designation	Short form	Recommended max. temperature for continuous use in air	Features
Alloy600/ 2.4816	NiCr15Fe	1100°C (2012°F)	<ul> <li>A nickel/chromium alloy with very good resistance to aggressive, oxidizing and reducing atmospheres, even at high temperatures</li> <li>Resistance to corrosion caused by chlorine gases and chlorinated media as well as many oxidizing mineral and organic acids, sea water, etc.</li> <li>Corrosion from ultrapure water</li> <li>Not to be used in sulfur-containing atmospheres</li> </ul>
Alloy400	NiCu30Fe	500 °C (932 °F)	<ul> <li>A nickel/copper alloy with good resistance to hydrofluoric acid, non-oxidizing diluted acids, bases, saline solutions and organic acids.</li> <li>Largely immune to stress corrosion cracking.</li> <li>Particularly reliable in flowing sea water, suitable for chemical processes and gas and water tanks.</li> </ul>

1) Can be used to a limited extent up to  $800\,^{\circ}$ C (1472  $^{\circ}$ F) for low compressive loads and in non-corrosive media. Please contact your Endress+Hauser sales team for further information.

## **Process connections**

The standard process connections are threaded or flanged connections. When the process connection is threaded, the connection material used is the same as that of the thermowell. Standard flange material: SS 316/1.4401 or ASTM A105.

Other materials, surface finishes and connections can be supplied on request.

Type and dimensions of the process connections (ASME B16.5, ANSI B1.20.1). All dimensions in mm (in).


Туре			Ø	Ø D	ØL	No. of drillings	f	b	Ø D1	A	A1
	Flange	1" ANSI 150 RF SO <sup>1)</sup>	50.8 (2)	107.9 (4.25)	15.7 (0.62)	4	1.6 (0.06)	14.2 (0.56)	-	-	-
		1" ANSI 300 RF SO		124 (4.9)	19.1 (0.75)			17.5 (0.69)	-	-	-
D1	150 RF SO 1½" ANS 300 RF SO	600 RF					6.4 (0.25)		-	-	-
THREAD			73 (2.9)	127 (5)	15.7 (0.62)		1.6 (0.06)	17.5 (0.69)	-	-	-
WELDED				155.4 (6.1)	22.4 (0.85)			20.6 (0.81)	-	-	-
FLANGE							6.4 (0.25)		-	-	-
d D		150 RF	91.9 (3.62)	152.4 (6)	19.1 (0.75)	4	1.6 (0.06)	19.1 (0.75)	-	-	-
A0010224-EN		300 RF	92.1 (3.6)	165.1 (6.5)		8		22.4 (0.88)	-	-	-
		2" ANSI 600 RF SO					6.4 (0.25)	25.4 (1)	-	-	-


Туре		Ø	Ø D	ØL	No. of drillings	f	b	Ø D1	A	A1	
	Thread	34" NPT	-	-	-	-	-	-	≥ 21.4 (0.84)	19.9 (0.78)	8.1 (0.32)
		1" NPT	-	-	-	-	-	-	≥ 26.7 (1.1)	20.2 (0.79)	8.6 (0.34)


1) RF SO: "Raised Face Slip On" flange (flat flange with sealing face).


## Terminal heads

All terminal heads have an internal shape and size in accordance with DIN EN 50446, flat face and a thermometer connection with a M24x1.5,  $G\frac{1}{2}$ " or  $\frac{1}{2}$ " NPT thread. All dimensions in mm (in). The cable glands in the diagrams correspond to M20x1.5 connections. Specifications without head transmitter installed. For ambient temperatures with head transmitter installed, see "Operating conditions" section.

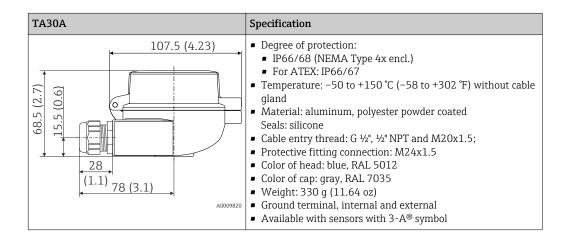

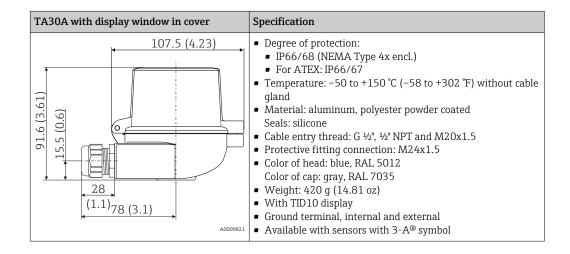

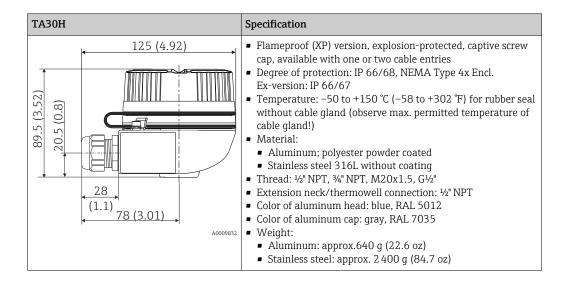

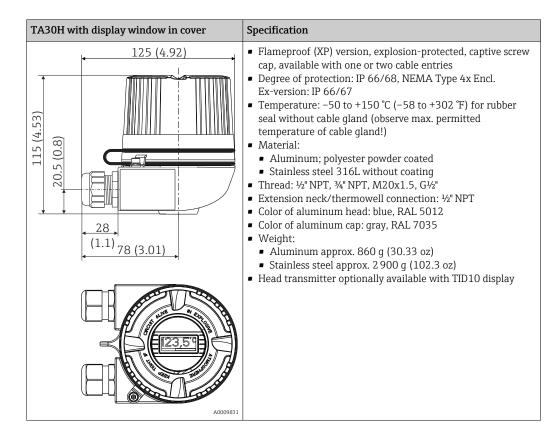


## Extension neck

The extension neck is the part between the process connection and the terminal head. The use of a union (see NUN) allows the terminal head to be aligned. The standard extension neck comprises a composite tube with appropriate connections (nipples or joints) to adapt the sensor to the various thermowells.

Extension neck			Material	Extension neck length N	Thread	Screw-in length C
N	NUN	N		69 mm (2.72 in)		
		IN		109 mm (4.3 in)		
	Z A0010216	NUN	AISI 316 or A105	148 mm (5.83 in)	½" NPT M	8 mm (0.31 in)

As illustrated in the following diagram, the extension neck length influences the temperature in the terminal head. This temperature must remain within defined limits .

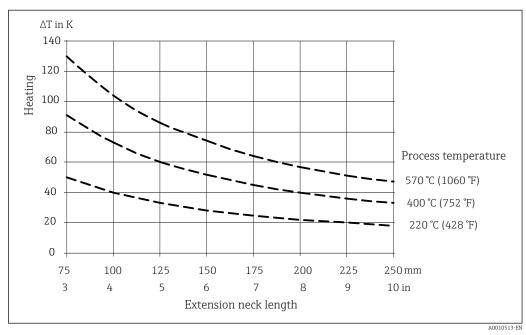

■ 6 Heating of the terminal head as a function of the process temperature. Temperature in terminal head = ambient temperature 20 °C (68 °F) +  $\Delta T$ 

## Spare parts

- The RTD insert is available as spare part TS111  $\rightarrow$   $\stackrel{\triangle}{=}$  21
- The TC insert is available as spare part TPC100/TPC300  $\rightarrow$  🗎 21

The inserts are made from mineral insulated cable (MgO) with a sheath of AISI316/1.4401 or Alloy600. An insertion length (IL) within the standard range of 50 to 1000 mm (1.97 to 39.4 in) can be selected for the insert. Inserts with an insertion length > 1000 mm (39.4 in) can be supplied after an Endress+Hauser sales office has conducted a technical analysis of the specific application.

18

If the insert is being replaced, it is necessary to refer to the following table to obtain the correct insertion length (IL), (only applies to thermowells with a standard bottom thickness). The insertion length of the replacement insert (IL) is calculated from the total thermowell length (immersion length U + extension T) up to the extension neck used (N).

Universal or ATEX certification						
Insert	Ø mm	Connection type	Extension neck lengths in mm (in)	Material	IL in mm (in)	
TPC100 / TPC300 TS111		N	69 (2.72)	RTD: 316/1.4401 or A105/1.0460 TC: Alloy600/2.4816 or 316L/ 1.4404	IL = U + T + N + 36 (1.42)	
TPC100 / TPC300 TS111	6	N	109 (4.3)	RTD: 316/1.4401 or A105/1.0460 TC: Alloy600/2.4816 or 316L/ 1.4404	IL = U + T + N + 36 (1.42)	
TPC100 / TPC300 TS111		NUN	148 (5.83)	RTD: 316/1.4401 or A105/1.0460 TC: Alloy600/2.4816 or 316L/ 1.4404	IL = U + T + N + 36 (1.42)	

# Certificates and approvals

CE mark	The product meets the requirements of the harmonized European standards. As such, it complies with the legal specifications of the EC directives. The manufacturer confirms successful testing of the product by affixing to it the CE-mark.					
Hazardous area approvals	For further details on the available Ex versions (ATEX, CSA, FM etc.), please contact your nearest Endress+Hauser sales organization. All relevant data for hazardous areas can be found in separate Ex documentation.					
Other standards and guidelines	<ul> <li>IEC 60529: Degrees of protection provided by enclosures (IP code)</li> <li>IEC/EN 61010-1: Safety requirements for electrical equipment for measurement, control and laboratory use</li> <li>IEC 60751: Industrial platinum resistance thermometers</li> <li>IEC 60584 and ASTM E230/ANSI MC96.1: Thermocouples</li> <li>DIN 43772: Thermowells</li> <li>DIN EN 50446: Terminal heads</li> </ul>					
Schiffbauzulassung	Information on the Type Approval Certificates currently available (DNVGL, BV, etc.) can be obtained from the sales organization.					
Test on thermowell	Thermowell pressure tests are carried out in accordance with the specifications in DIN 43772. With regard to thermowells with tapered or reduced tips that do not comply with this standard, these are tested using the pressure of corresponding straight thermowells. Sensors for use in hazardous areas are also always subjected to a comparative pressure during the tests. Tests according to other specifications can be carried out on request. The liquid penetration test verifies that there are no cracks in the welded seams of the thermowell.					
Test report and calibration	The "Factory calibration" is carried out according to an internal procedure in a laboratory of Endress +Hauser accredited by the European Accreditation Organization (EA) to ISO/IEC 17025. A calibration which is performed according to EA guidelines (SIT/Accredia) or (DKD/DAkkS) may be requested separately. The calibration is performed on the replaceable insert of the thermometer. In the case of thermometers without a replaceable insert, the entire thermometer - from the process connection to the tip of the thermometer - is calibrated.					
Examination certificate	In compliance with WELMEC 8.8: "Guide on the General and Administrative Aspects of the Voluntary System of Modular Evaluation of Measuring Instruments."					

# Calibration according to GOST

Russian Metrology Test, +100/+300/+500/+700 °C + transmitter factory calibration, 6 points (fixed)

## Ordering information

Detailed ordering information is available for your nearest sales organization www.addresses.endress.com or in the Product Configurator under www.endress.com :

- 1. Click Corporate
- 2. Select the country
- 3. Click Products
- 4. Select the product using the filters and search field
- 5. Open the product page

The Configuration button to the right of the product image opens the Product Configurator.

- Product Configurator the tool for individual product configuration
  - Up-to-the-minute configuration data
  - Depending on the device: Direct input of measuring point-specific information such as measuring range or operating language
  - Automatic verification of exclusion criteria
  - Automatic creation of the order code and its breakdown in PDF or Excel output format
  - Ability to order directly in the Endress+Hauser Online Shop

## Accessories

Various accessories, which can be ordered with the device or subsequently from Endress+Hauser, are available for the device. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: www.endress.com.

## Service-specific accessories

Accessories	Description		
Applicator	Software for selecting and sizing Endress+Hauser measuring devices:  Calculation of all the necessary data for identifying the optimum measuring device: e.g. pressure loss, accuracy or process connections.  Graphic illustration of the calculation results		
	Administration, documentation and access to all project-related data and parameters over the entire life cycle of a project.		
	Applicator is available: Via the Internet: https://portal.endress.com/webapp/applicator		
DeviceCare SFE100	Configuration tool for devices via fieldbus protocols and Endress+Hauser service protocols.  DeviceCare is the tool developed by Endress+Hauser for the configuration of Endress+Hauser devices. All smart devices in a plant can be configured via a point-to-point or point-to-bus connection. The user-friendly menus enable transparent and intuitive access to the field devices.  For details, see Operating Instructions BA00027S		
FieldCare SFE500	FDT-based plant asset management tool from Endress+Hauser. It can configure all smart field units in your system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition.  For details, see Operating Instructions BA00027S and BA00065S		

Accessories	Description
W@M	Life cycle management for your plant W@M offers assistance with a wide range of software applications over the entire process: from planning and procurement to the installation, commissioning and operation of the measuring devices. All the relevant information is available for every measuring device over the entire life cycle, such as the device status, device-specific documentation, spare parts etc.  The application already contains the data of your Endress+Hauser device.  Endress+Hauser also takes care of maintaining and updating the data records.
	W@M is available: Via the Internet: www.endress.com/lifecyclemanagement

#### Thermowell sizing tool



The 'Thermowell sizing' tool can be found on the Endress+Hauser website for online calculation and engineering of all Endress+Hauser thermometer thermowells. See <a href="https://wapps.endress.com/applicator">https://wapps.endress.com/applicator</a>

## Supplementary documentation

#### Technical Information:

- Temperature head transmitter iTEMP:
  - TMT180, PC-programmable, single-channel, Pt100 (TI00088R/09/en)
  - PCP TMT181, PC-programmable, single-channel, RTD, TC, Ω, mV (TI00070R/09/en)
  - HART® TMT182, single-channel, RTD, TC, Ω, mV (TI078R/09/en)
  - HART® TMT82, two-channel, RTD, TC, Ω, mV (TI01010T/09/en)
  - PROFIBUS® PA TMT84, two-channel, RTD, TC, Ω, mV (TI00138R/09/en)
  - FOUNDATION Fieldbus<sup>TM</sup> TMT85, two-channel, RTD, TC, Ω, mV (TI00134R/09/en)
- Inserts:
  - RTD assembly insert iTHERM TS111 (TI01014T/09)
  - Thermocouple insert TPC100 (TI278t/02/en)
- Application example:
  - RN221N active barrier, for supplying loop-powered transmitters (TI073R/09/en)
  - RIA16 field display unit, loop-powered (TI00144R/09/en)
- Industrial protecting tube Heavy duty General purpose From round bar stock:
  - TA550: diameter 30 mm (TI0153T/02/)
  - TA555: diameter 34 mm (TI0154T/02/)
  - TA557: diameter 35 mm (TI0156T/02/)
  - iTHERM ModuLine TT151 (TI01481T/09)

## Supplementary ATEX documentation:

- RTD/TC thermometer TRxx, TCxx, TxCxxx, ATEX II 1GD or II 1/2GD Ex ia IIC T6...T1 (XA00072R/09/a3)
- RTD/TC thermometer TR/TC6x, ATEX II1/2, 2GD or II2G (XA014T/02/a3)
- RTD/TC thermometer TR/TC6x, ATEX II 1/2 or 2G; II 1/2 or 2D; II 2G (XA00084R/09/a3)
- Inserts and cable thermometer ATEX/IECEx Ex ia (XA00100R/09/a3)





