

Technical Information

Liquiline System CA80AL

Colorimetric analyzer for aluminum



Integrated controller with up to 2 measuring channels and digital Memosens technology

Application

The Liquiline System CA80AL is a wet-chemical analyzer for the almost continuous determination of the concentration of aluminum in liquid media.

The analyzer is designed for use in the following applications:

- Control of the precipitation of phosphates in wastewater treatment plants
- Monitoring of precipitants in drinking water and wastewater treatment plants

Your benefits

- Easy upgrade to measuring station by connecting up to 4 Memosens sensors
- Two-channel device available
- Digital fieldbuses (e.g. PROFINET, PROFIBUS DP, Modbus TCP, Modbus RS485 and Ethernet IP) and web server
- Simple, tool-free maintenance

Table of contents

| | | | |
|---|---------------|---|---------------|
| Function and system design | 4 | Fuse | 20 |
| Colorimetric measuring principle | 4 | Cable entries | 20 |
| Aluminum | 4 | Cable specification | 20 |
| Photometric determination of aluminum | 4 | Heating for dilution water | 20 |
| Cross-sensitivity | 4 | Connecting optional modules | 20 |
| Measuring system | 5 | Sensor connection (optional) | 23 |
| Equipment architecture | 9 | Performance characteristics | 23 |
| Block diagram | 9 | Maximum measured error | 23 |
| Slot and port assignment | 10 | Maximum measured error for sensor inputs | 23 |
| Communication and data processing | 10 | Maximum measured error for current inputs and outputs | 23 |
| Dependability | 11 | Repeatability | 23 |
| Reliability thanks to Memosens technology | 11 | Repeatability of sensor inputs | 23 |
| Maintainability | 11 | Measuring interval | 23 |
| Self-monitoring functions | 13 | Sample requirement | 23 |
| Data security | 13 | Reagent requirement | 24 |
| IT security | 14 | Standard requirement | 24 |
| Input | 14 | Calibration interval | 24 |
| Measured variables | 14 | Maintenance interval | 24 |
| Measuring range | 14 | Maintenance effort | 24 |
| Types of input | 14 | Mounting | 24 |
| Input signal | 14 | Mounting location | 24 |
| Current input, passive | 14 | Installation instructions | 24 |
| Cable specification (for optional sensors with Memosens technology) | 14 | Environment | 25 |
| Output | 14 | Ambient temperature range | 25 |
| Output signal | 14 | Storage temperature | 25 |
| Signal on alarm | 15 | Relative humidity | 25 |
| Load | 16 | Degree of protection | 25 |
| Transmission behavior | 16 | Electromagnetic compatibility | 25 |
| Current outputs, active | 16 | Electrical safety | 25 |
| Span | 16 | Pollution degree | 25 |
| Signal characteristic | 16 | Process | 25 |
| Electrical specification | 16 | Sample temperature | 25 |
| Cable specification | 16 | Consistency of the sample | 25 |
| Relay outputs | 16 | pH value of the sample | 25 |
| Electrical specification | 16 | Sample supply | 26 |
| Protocol-specific data | 17 | Mechanical construction | 26 |
| PROFIBUS DP | 17 | Dimensions | 26 |
| Modbus RS485 | 17 | Weight | 27 |
| Modbus TCP | 18 | Materials | 27 |
| Web server | 18 | Process connection | 28 |
| EtherNet/IP | 18 | Hose entries | 28 |
| PROFINET | 19 | Hose specification (self-priming) | 28 |
| Power supply | 19 | Operability | 28 |
| Supply voltage | 19 | Operating concept | 28 |
| Fieldbus connection | 20 | Display | 28 |
| Power consumption | 20 | Remote operation | 29 |
| | | Language packages | 30 |
| | | Certificates and approvals | 31 |

Ordering information 31
Product page 31
Product Configurator 31
Scope of delivery 31


Accessories 31
Device-specific accessories 32
Communication-specific accessories 36
System components 37

Function and system design

Colorimetric measuring principle

After sample preparation, some of the permeate is pumped into the mixing/reaction chamber. The specific color reagent is metered exactly in a defined mixture ratio. The chemical reaction causes the characteristic change in the color of the sample. The multispectral photometer determines the level of absorption by the sample at defined wavelengths. The analyzed wavelengths, and their relationships to one another, are parameter-specific.

Based on proportionality the amount of light absorption is a direct indicator of the concentration of the parameter under analysis in the sample. In order to compensate for any interference influences, a reference measurement is performed before the actual measurement. This reference signal is subtracted from the measuring signal. The temperature in the photometer is kept constant to ensure a reproducible reaction that takes place within a short period of time.

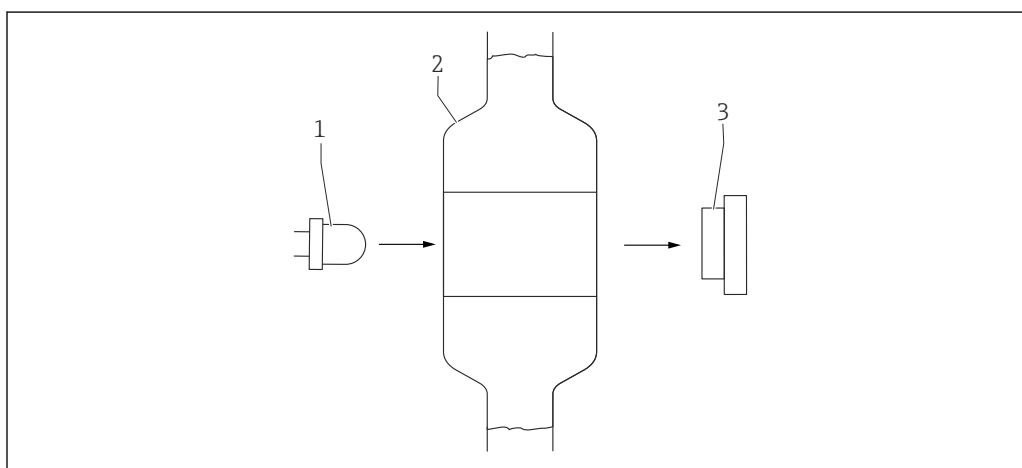

A0022399

1 Colorimetric measuring principle

1 Multispectral LED unit (for measurement/reference)

2 Cuvette - mixing and reaction vessel

3 Detector (for measurement/reference)

Aluminum

Aluminum's favorable mechanical properties (malleability) make it one of the most commonly used light metals. The vehicle construction sector and packaging industry are among the primary consumers of aluminum. Aluminum occurs in the environment, particularly in soil and in many ores (feldspars, mica). A low concentration of aluminum is a natural constituent of surface water and groundwater. Aluminum in the soil can be released at low pH levels and thereby enter the groundwater and ultimately the food chain. Aluminum is predominantly harmful to human health. Various health effects of aluminum in food and deodorants are currently being debated. Higher concentrations in drinking water can be toxic. According to the German Drinking Water Ordinance (Trinkwasserverordnung), the limit concentration for aluminum is 0.2 mg/l Al.

Photometric determination of aluminum

Pyrocatechol violet method according to DIN ISO 10566

Catechol violet reacts with Al (III) in a solution buffered to pH 5.8 - 6.0 to form a blue dye. The absorption is measured at a wavelength of 568 nm. The amount of light absorption is proportional to the concentration of aluminum in the sample.

Cross-sensitivity

The ions listed were checked with the specified concentrations. A summary effect has not been studied. No cross-sensitivities were observed up to the concentration levels indicated.

1000 mg/l (ppm)

500 mg/l (ppm)

100 mg/l (ppm)

10 mg/l (ppm)

2 mg/l (ppm)

Cl⁻, SO₄²⁻

Ca²⁺, K⁺, Na⁺

NO₃⁻

Zn²⁺

F⁻

Measuring system

A complete measuring system comprises:

- Analyzer Liquiline System CA80AL with the configuration ordered
- reagents and standard solution (to be ordered separately)
- Sample conditioning Liquiline System CAT8x0 (optional)

Microfiltration (Liquiline System CAT810)


- Function: pressure pipe sampling and filtration
- Sieve filter, 50 µm
- Control via CA80
- Optional: time control via integrated timer
- Backflushing, with compressed air or water
- Panel version or integration into analyzer stand
- Application: drinking water, industrial wastewater

Membrane filtration (Liquiline System CAT820), ceramic filter version


- Function: sampling and filtration
- Ceramic membrane filter candle; pore size 0.1 µm or 0.4 µm
- Communication via Memosens protocol, control via CA80
- Backflushing with compressed air (version with Memosens technology)
- Easy installation with Flexdip CYH112 (TI00430C)
- Application: aeration, drinking water, industrial wastewater, surface water

Membrane filtration (Liquiline System CAT860)

- Function: sampling and filtration
- Ceramic membrane filter candle; pore size 0.1 µm or 0.4 µm
- Communication via Memosens protocol, control via CA80
- Automatic backflush function with cleaning solution and compressed air
- Easy installation via Flexdip CYH112 (TI00430C)
- Application: wastewater treatment plant inlet

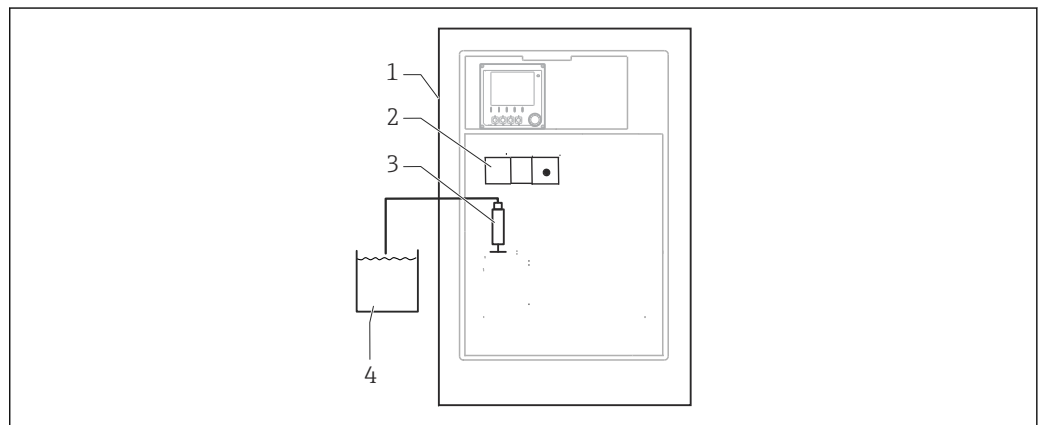

A0044814

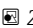
 2 Measuring system with Liquiline System, self-priming

1 Liquiline System CA80AL

2 Photometer

3 Dosing dispenser


4 Particle-free sample

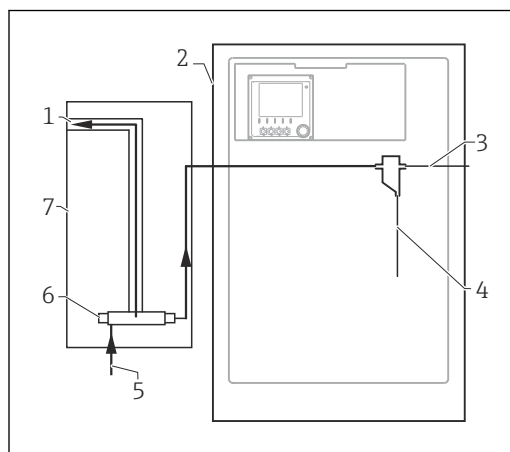

A0044812

3 Measuring system with Liquiline System CAT810


- 1 Overflow
- 2 Liquiline System CA80
- 3 Sample collecting vessel overflow
- 4 Sample
- 5 Pressurized sample
- 6 Filter unit
- 7 Liquiline System CAT810

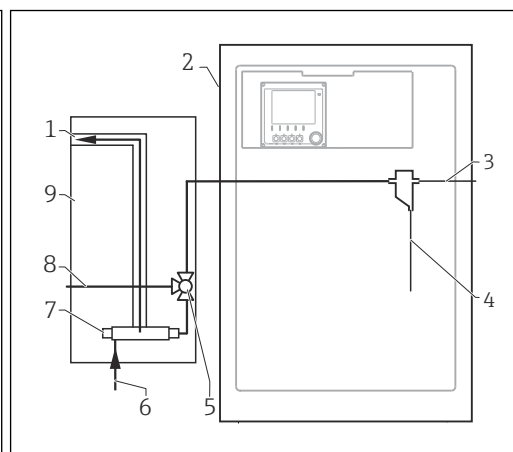

A0044813

4 Measuring system with Liquiline System CAT810 and cleaning valve


- 1 Overflow
- 2 Liquiline System CA80
- 3 Sample collecting vessel overflow
- 4 Sample
- 5 Cleaning valve
- 6 Pressurized sample
- 7 Filter unit
- 8 Purge connection (compressed air or water)
- 9 Liquiline System CAT810

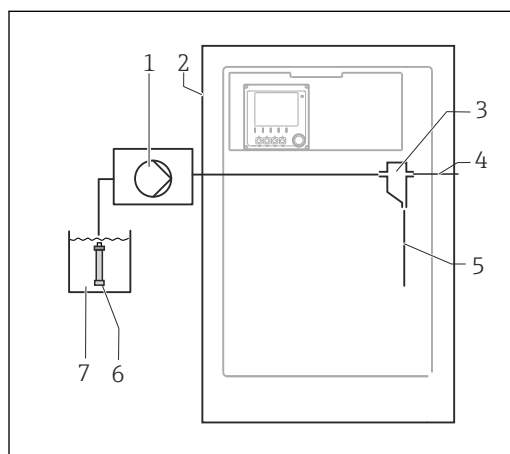

A0044810

5 Measuring system with Liquiline System CAT820


- 1 Pump
- 2 Liquiline System CA80
- 3 Sample collecting vessel
- 4 Sample collecting vessel overflow
- 5 Sample
- 6 Filter (ceramic)
- 7 Medium

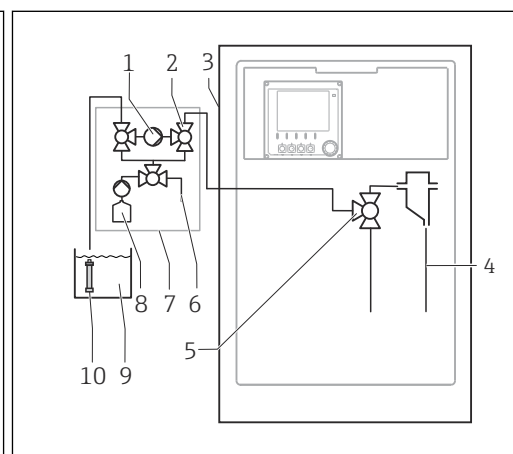

A0044809

6 Measuring system with Liquiline System CAT860


- 1 Pump
- 2 Valve
- 3 Liquiline System CA80
- 4 Sample
- 5 Valve
- 6 Compressed air
- 7 Liquiline System CAT860
- 8 Cleaning solution
- 9 Medium
- 10 Filter (ceramic)

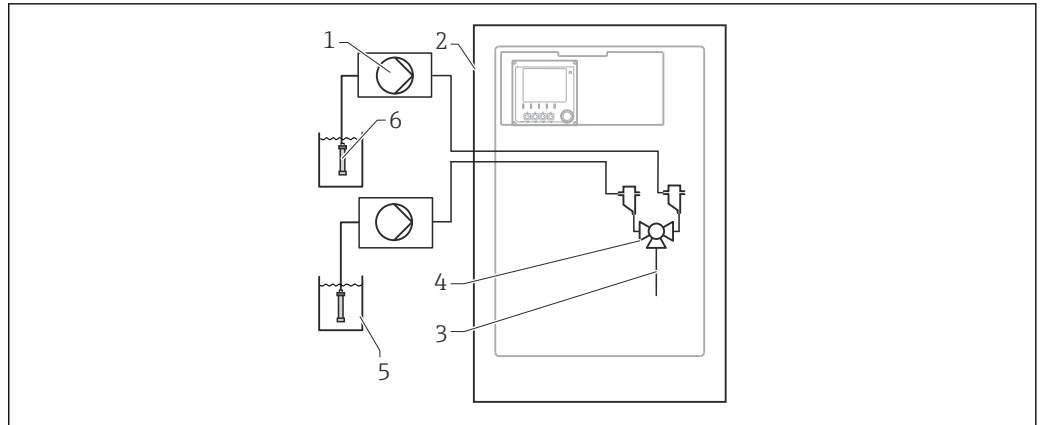

A0044811

7 Measuring system with 2x Liquiline System CAT820

- 1 Pump
- 2 Liquiline System CA80
- 3 Sample
- 4 Valve
- 5 Medium
- 6 Filter (ceramic)

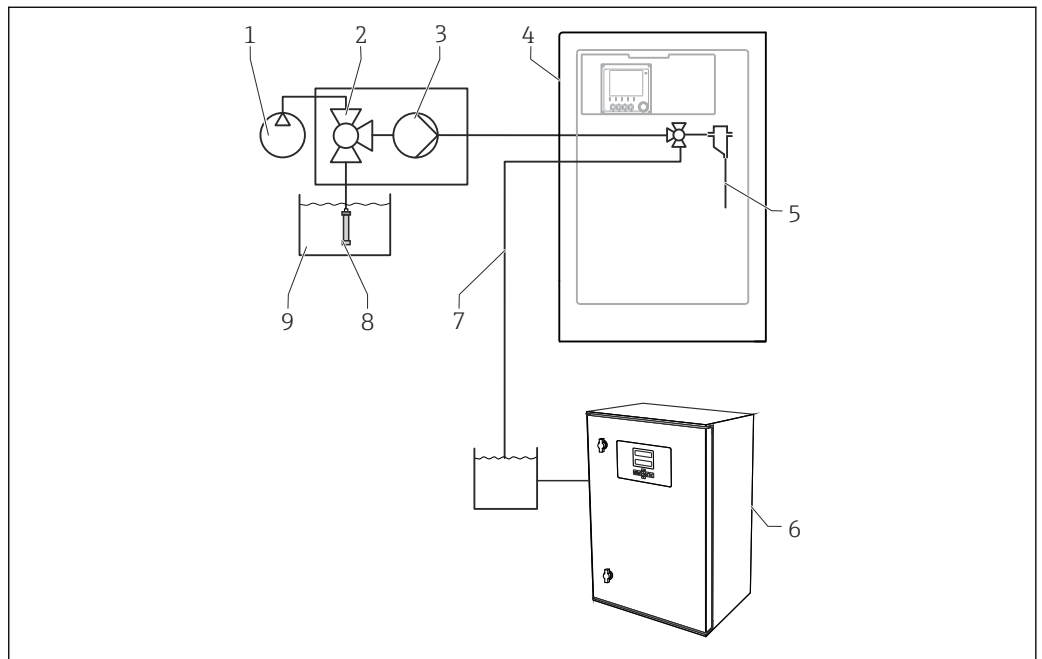

A0044808

8 Measuring system with Liquiline System CA80, Liquiline System CAT820 and second analyzer

- 1 Backflushing with compressed air (optional)
- 2 Valve (optional)
- 3 Pump
- 4 Liquiline System CA80
- 5 Sample
- 6 Second analyzer
- 7 Sample to second analyzer
- 8 Filter (ceramic)
- 9 Medium

Customer-specific solution


Prior to analysis, the sample must be prepared at the customer site so that it is particle-free and homogeneous (representative sample). The sample can either be supplied to an external collecting vessel or pumped directly into the sample collecting vessel of the analyzer. The customer-specific sample preparation system must have its own individual control unit.



The version of the Liquiline System CA80 as a self-priming device does not have a collecting vessel with level detection. For this reason, a continuous supply of sample must be guaranteed on the process side.

Equipment architecture

Block diagram

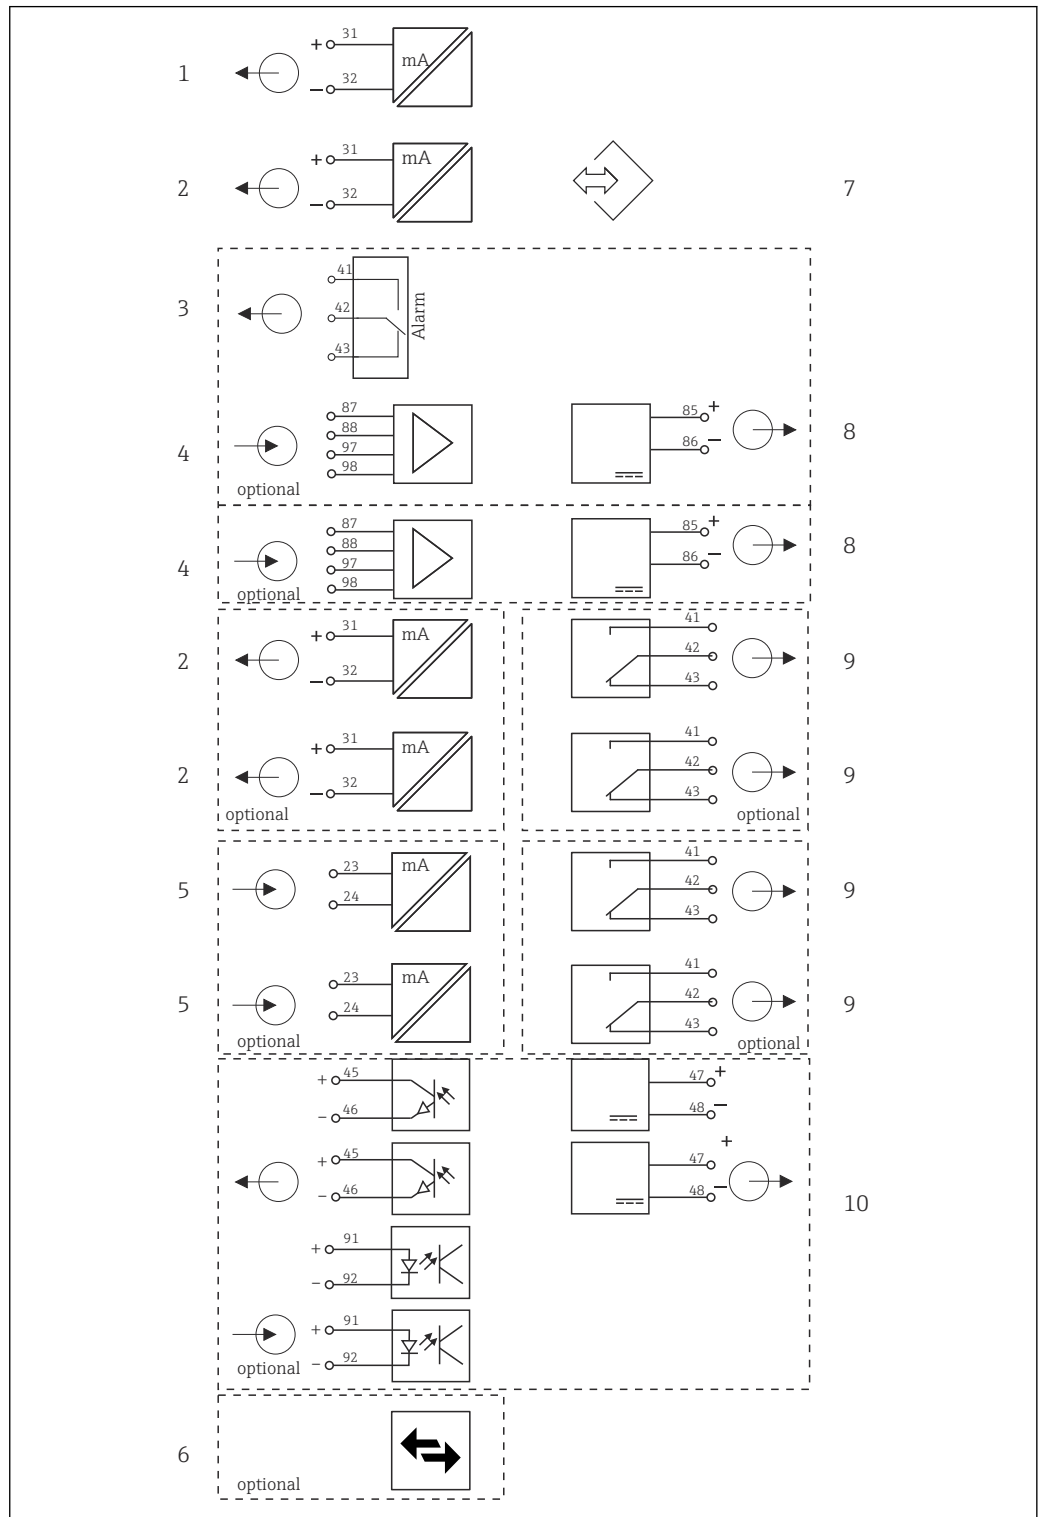

9 Block diagram CA80

1 Current output 1:1

2 Current outputs

3 Alarm relay

4 2 x Memosens input (1 x optional)

5 2 x current input (optional)


6 Modbus/Ethernet (optional)

7 Service interface

8 Power supply, fixed cable sensors


9 2 or 4 x relays (optional)

10 2 digital inputs and outputs (optional)

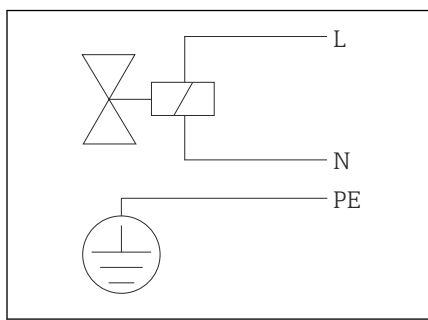

A0023193

10 Sample preparation block diagram, Liquiline System CAT810 with cleaning valve

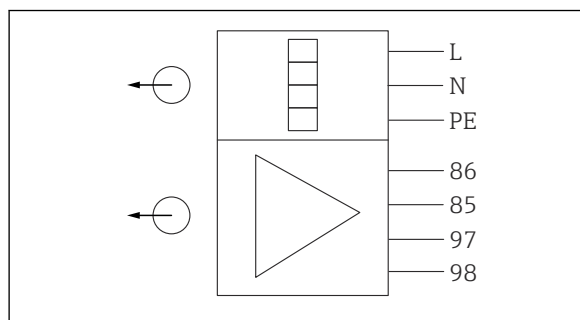

A0021102

11 Sample preparation block diagram, Liquiline System CAT820 and CAT860

85, Connection for 24-V power supply


86

97, Communication connection

98


2 x communication via Memosens protocol (1 x optional), hose heating system

Slot and port assignment

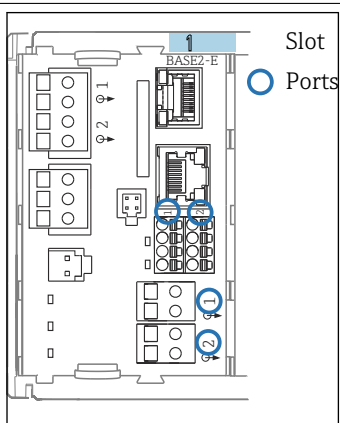

A0044868

12 Slot and port assignment

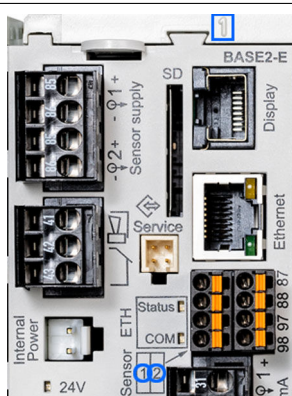

A0044869

13 Slot and port assignment

| | | | |
|-------------------------|-----------------|------|--|
| Analyzer_C8024A05600 | | | |
| ▶ Heartbeat diagnostics | | | |
| SP1 Analyzer* | Slot | Port | |
| CH1: 1:1 pH Glass | ATC 6.95 pH | | |
| CH2: 1:2 Cond c | ATC 131.1 pS/cm | | |
| Current output 1:1 | 22.5 mA | | |
| Current output 1:2 | 22.5 mA | | |
| Current output 4:1 | 22.5 mA | | |
| Current output 4:2 | 22.5 mA | | |

A0040671

14 Slots and ports on the display

* Analyzer measured value (parameter-specific)

- Inputs are assigned to measuring channels in the ascending order of the slots and ports.

In the example above:

"CH1: 1:1 pH glass" means:

Channel 1 (CH1) is slot 1 (basic module) : Port 1 (input 1), pH glass sensor

- Outputs and relays are named according to their function, e.g. "current output", and are displayed in ascending order with the slot and port numbers
- Display shows SP1: analyzer measuring channel 1 with sampling point SP1 (measured value display is parameter-specific; is not illustrated in the example)

Communication and data processing

Communication protocols:

- Fieldbus systems
 - PROFIBUS DP (Profile 3.02)
 - Modbus TCP or RS485
 - PROFINET
 - EtherNet/IP
- Configuration via Ethernet

Extension module 485DP/485MB and current outputs

For PROFIBUS DP and Modbus RS485 communication protocols:
A maximum of 2 current outputs can be used in parallel.

Ethernet functionality via Base2 module and current outputs

A maximum of 6 current outputs can be used in parallel.

Bus termination on the device

- Via slide switch at bus module 485DP/485MB
- Displayed via LED "T" on bus module 485DP/485MB

Dependability

Reliability thanks to Memosens technology

Memosens

Memosens makes your measuring point safer and more reliable:

- Non-contact, digital signal transmission enables optimum galvanic isolation
- Completely watertight
- Sensor can be calibrated in a lab, thus increasing the availability of the measuring point in the process
- Intrinsically safe electronics mean operation in hazardous areas is not a problem.
- Predictive maintenance thanks to recording of sensor data, e.g.:
 - Total hours of operation
 - Hours of operation with very high or very low measured values
 - Hours of operation at high temperatures
 - Number of steam sterilizations
 - Sensor condition

Maintainability


Modular design

The modular analyzer can be easily adapted to suit your needs:

- Retrofit extension modules for new or extended range of functions, e.g. current outputs, relays and digital communication
- Upgrade from one channel to two channel analyzer
- Upgrade to measuring station with digital sensors with Memosens technology
- Optional: M12 sensor connector for connecting any kind of Memosens sensor

Data storage

- Independent, integrated ring memories (FIFO) or stack memories for recording:
 - An analog value (e.g. flow, pH value, conductivity)
 - Events (e.g. power failure)
- Analyzer data logbook
 - Scan time: automatically adjusted to the measuring interval
 - Max. 2 data logbooks
 - 20 000 entries per logbook
 - Graphic display (load curves) or numerical list
 - Factory setting: enabled for all channels, ring memory (FIFO)
- Data logbooks for digital sensors:
 - Adjustable scan time: 1 to 3600 s (1 h)
 - Max. 8 data logbooks
 - 150,000 entries per logbook
 - Graphic display (load curves) or numerical list
- Calibration logbook: max. 75 entries
- Hardware logbook:
 - Hardware configuration and modifications
 - Max. 125 entries
- Version logbook:
 - Software updates among other things
 - Max. 50 entries
- Event logbook
- Analyzer event logbook
 - Analyzer-specific events
 - Max. 19 500 entries, ring memory or fill-up buffer for recording
- Operations logbook: max. 250 entries
- Diagnostic logbook: max. 250 entries

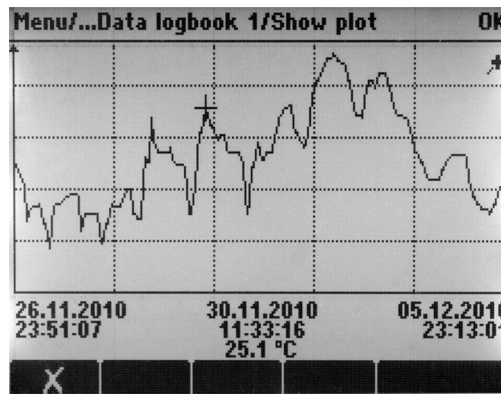

A0024359

15 Data logbook: graphic representation on the display

Mathematical functions (virtual process values)

In addition to "real" process values, which are provided by connected physical sensors or analog inputs, mathematical functions can be used to calculate a maximum of 6 "virtual" process values.

The "virtual" process values can be:

- Output via a current output or a fieldbus
- Used as a controlled variable
- Assigned as a measured variable to a limit switch
- Used as a measured variable to trigger cleaning
- Displayed in user-defined measuring menus

The following mathematical functions are possible:

- Calculation of pH from two conductivity values according to VGB Standard 405, e.g. in boiler feedwater
- Difference between two measured values from different sources, e.g. to monitor membranes
- Differential conductivity, e.g. to monitor the efficiency of ion exchangers
- Degassed conductivity, e.g. for process controls in power plants
- Redundancy to monitor two or three redundant sensors
- rH calculation based on the measured values of a pH and an ORP sensor
- Formula editor as a powerful mathematics tool and for Boolean operations with up to 3 measured values

FieldCare


Configuration and asset management software based on FDT/DTM technology

- Complete device configuration when connected via FXA291 and service interface
- Access to a number of configuration parameters and identification, measuring and diagnostic data when connected via HART modem
- Logbooks can be downloaded in CSV format or binary format for "Field Data Manager" software

Field Data Manager

Visualization software and database for measuring, calibration and configuration data

- SQL database which is protected against manipulation
- Functions to import, save and print out logbooks
- Load curves to display measured values

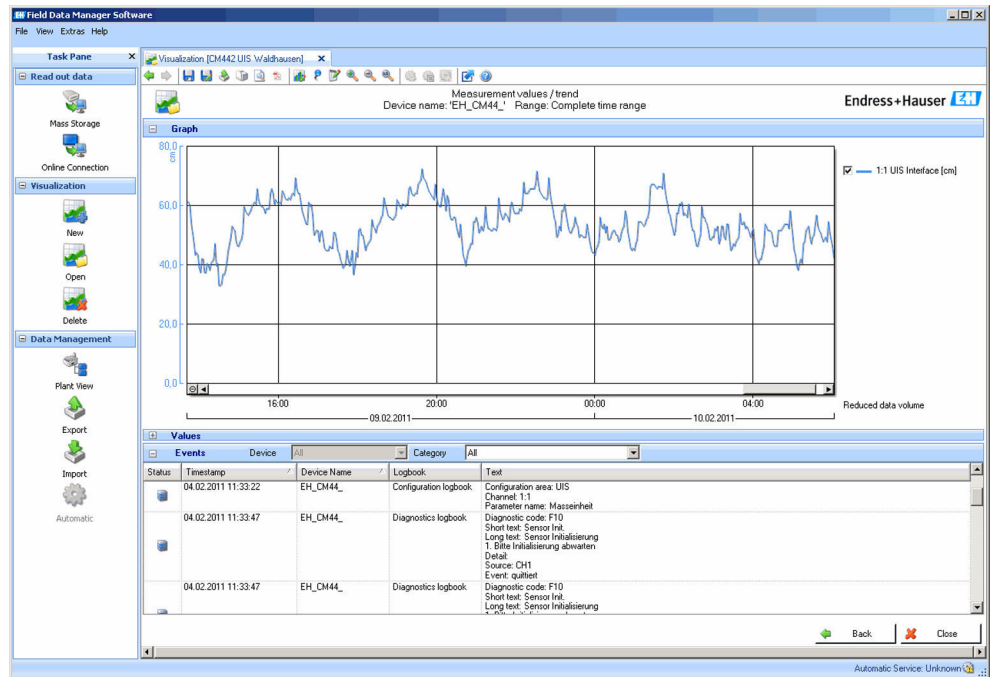

16 Field Data Manager: load curve display

SD card

The exchangeable storage medium enables:

- Quick and easy software updates and upgrades
- Quick and easy updates and upgrades to measuring parameter lists
- Data storage of internal device memory (e.g. logbooks)
- Transfer of complete configurations to a device with an identical setup (backup function)
- Transfer of configurations without the TAG and bus address to devices with an identical setup (copy function)

Endress+Hauser offers industry-approved SD cards as accessories. These memory cards provide maximum data security and integrity.

Other SD cards can also be used. However, Endress+Hauser does not accept any responsibility for the data security of such cards.

Self-monitoring functions

Electronics

- Current inputs are deactivated in the event of overcurrent and reactivated once the overcurrent stops.
- Board voltages are monitored and the board temperature is also measured.

Counter

Counters monitor consumables such as reagents or dispensers.

Photometer

- Automatic temperature monitoring
- Active monitoring of communication between the photometer module and the analyzer electronics

Sample preparation (optional)

- Active monitoring of communication between sample preparation with Memosens communication and the analyzer
- Counter for consumables, such as hoses of the peristaltic pump

Sample collecting vessel (optional)

Active monitoring of liquid level in the sample collecting vessel to ensure the supply of liquid to the analyzer

Leak sensor in the housing

Data security

All settings, logbooks etc. are stored in a non-volatile memory to ensure that the data are retained even in the event of a disruption to the power supply.

IT security

We only provide a warranty if the device is installed and used as described in the Operating Instructions. The device is equipped with security mechanisms to protect it against any inadvertent changes to the device settings.

IT security measures in line with operators' security standards and designed to provide additional protection for the device and device data transfer must be implemented by the operators themselves.

Input

Measured variables

Al [$\mu\text{g/l}$, ppb]

Measuring range

15 to 1000 $\mu\text{g/l}$ (ppb) Al

Order version with dilution function (optional)

| Measuring range to be configured [$\mu\text{g/l}$ (ppb)] | Dilution factor ¹⁾ | Effective measuring range [$\mu\text{g/l}$ (ppb)] |
|---|-------------------------------|--|
| 15 to 1000 | 1 | 15 to 1000 ²⁾ |
| 15 to 1000 | 5 | 75 to 5000 |
| 15 to 1000 | 10 | 150 to 10000 |
| 15 to 1000 | 20 | 300 to 20000 |

1) User configurable

2) Dilution function disabled

Types of input

- 1 or 2 measuring channels (analyzer main parameter)
- 1 to 4 digital sensor inputs for sensors with Memosens protocol (optional)
- Analog current inputs (optional)
- Binary inputs (optional)

Input signal

Depending on version
2 x 0/4 to 20 mA (optional), passive, potentially isolated

Current input, passive

Span
> 0 to 20 mA
Signal characteristic
Linear
Internal resistance
Non-linear
Test voltage
500 V

**Cable specification
(for optional sensors with
Memosens technology)**

Cable type
Memosens data cable CYK10 or sensor fixed cable, each with cable end sleeves or M12 round-pin connector (optional)
Cable length
Max. 100 m (330 ft)

Output

Output signal

- Depending on version:
- 2 x 0/4 to 20 mA, active, potentially isolated (standard version)
 - 4 x 0/4 to 20 mA, active, potentially isolated (version with 2 additional analog outputs)
 - 6 x 0/4 to 20 mA, active, potentially isolated (version with 4 additional analog outputs)
 - Binary outputs

| PROFIBUS DP/RS485 | |
|------------------------|--|
| Signal encoding | EIA/TIA-485, PROFIBUS DP-compliant acc. to IEC 61158 |
| Data transmission rate | 9.6 kBd, 19.2 kBd, 45.45kBd, 93.75 kBd, 187.5 kBd, 500 kBd, 1.5 MBd, 6 MBd, 12 MBd |
| Galvanic isolation | Yes |
| Connectors | Spring terminal (max. 1.5 mm), bridged internally (T-function), optional M12 |
| Bus termination | Internal slide switch with LED display |

| Modbus RS485 | |
|------------------------|--|
| Signal encoding | EIA/TIA-485 |
| Data transmission rate | 2,400, 4,800, 9,600, 19,200, 38,400, 57,600 and 115,200 baud |
| Galvanic isolation | Yes |
| Bus termination | Internal slide switch with LED display |

| Web server and Modbus TCP | |
|---------------------------|----------------------------------|
| Signal encoding | IEEE 802.3 (Ethernet) |
| Data transmission rate | 10 / 100 MBd |
| Galvanic isolation | Yes |
| Connection | RJ45, M12 optional |
| IP address | DHCP or configuration using menu |

| EtherNet/IP | |
|------------------------|--|
| Signal encoding | IEEE 802.3 (Ethernet) |
| Data transmission rate | 10 / 100 MBd |
| Galvanic isolation | Yes |
| Connection | RJ45, M12 optional (D-encoded) |
| IP address | DHCP (default) or configuration via menu |

| PROFINET | |
|------------------------|--|
| Signal encoding | IEEE 802.3 (Ethernet) |
| Data transmission rate | 100 MBd |
| Galvanic isolation | Yes |
| Connection | RJ45 |
| Name of station | Via DCP protocol using the configuration tool (e.g. Siemens PRONETA) |
| IP address | Via DCP protocol using the configuration tool (e.g. Siemens PRONETA) |

Signal on alarm

Adjustable, as per NAMUR Recommendation NE 43

- In measuring range 0 to 20 mA:
Failure current from 0 to 23 mA
- In measuring range 4 to 20 mA:
Failure current from 2.4 to 23 mA
- Factory setting for failure current for both measuring ranges:
21.5 mA

| | |
|-------------|-------------------|
| Load | Max. 500 Ω |
|-------------|-------------------|

| | |
|------------------------------|--------|
| Transmission behavior | Linear |
|------------------------------|--------|

Current outputs, active

| | |
|-------------|------------|
| Span | 0 to 23 mA |
|-------------|------------|

| | |
|------------------------------|--------|
| Signal characteristic | Linear |
|------------------------------|--------|

| | |
|---------------------------------|--|
| Electrical specification | Output voltage Max. 24 V Test voltage 500 V |
|---------------------------------|--|

| | |
|----------------------------|---|
| Cable specification | Cable type Recommended: shielded cable Cable specification Max. 2.5 mm ² (14 AWG) |
|----------------------------|---|

Relay outputs

| | |
|---------------------------------|---|
| Electrical specification | Relay types <ul style="list-style-type: none"> ▪ 1 single-pin changeover contact (alarm relay) ▪ 2 or 4 single-pin changeover contacts (optional with extension modules) Maximum load <ul style="list-style-type: none"> ▪ Alarm relay: 0.5 A ▪ All other relays: 2.0 A Relay switching capacity |
|---------------------------------|---|

Base module (Alarm relay)

| Switching voltage | Load (max.) | Switching cycles (min.) |
|---------------------------------|-------------|-------------------------|
| 230 V AC, $\cos\Phi = 0.8$ to 1 | 0.1 A | 700,000 |
| | 0.5 A | 450,000 |
| 115 V AC, $\cos\Phi = 0.8$ to 1 | 0.1 A | 1,000,000 |
| | 0.5 A | 650,000 |
| 24 V DC, L/R = 0 to 1 ms | 0.1 A | 500,000 |
| | 0.5 A | 350,000 |

Extension module

| Switching voltage | Load (max.) | Switching cycles (min.) |
|---------------------------------|-------------|-------------------------|
| 230 V AC, $\cos\Phi = 0.8$ to 1 | 0.1 A | 700,000 |
| | 0.5 A | 450,000 |
| | 2 A | 120,000 |
| 115 V AC, $\cos\Phi = 0.8$ to 1 | 0.1 A | 1,000,000 |
| | 0.5 A | 650,000 |
| | 2 A | 170,000 |
| 24 V DC, L/R = 0 to 1 ms | 0.1 A | 500,000 |
| | 0.5 A | 350,000 |
| | 2 A | 150,000 |

Minimum load (typical)

- Min. 100 mA at 5 V DC
- Min. 1 mA at 24 V DC
- Min. 5 mA at 24 V AC
- Min. 1 mA at 230 V AC

Protocol-specific data

| | | |
|---------------------|--------------------------------------|---|
| PROFIBUS DP | Manufacturer ID | 11 _h |
| | Device type | 155E _h |
| | Profile version | 3.02 |
| | Device database files (GSD files) | www.endress.com/profibus Device Integration Manager DIM |
| | Output variables | 16 AI blocks, 8 DI blocks |
| | Input variables | 4 AO blocks, 8 DO blocks |
| | Supported features | <ul style="list-style-type: none"> ■ 1 MSCY0 connection (cyclical communication, master class 1 to slave) ■ 1 MSAC1 connection (acyclical communication, master class 1 to slave) ■ 2 MSAC2 connections (acyclical communication, master class 2 to slave) ■ Device lock: The device can be locked using the hardware or software. ■ Addressing using DIL switches or software ■ GSD, PDM DD, DTM |
| Modbus RS485 | Protocol | RTU/ASCII |
| | Function codes | 03, 04, 06, 08, 16, 23 |
| | Broadcast support for function codes | 06, 16, 23 |
| | Output data | 16 measured values (value, unit, status), 8 digital values (value, status) |
| | Input data | 4 setpoints (value, unit, status), 8 digital values (value, status), diagnostic information |
| | Supported features | Address can be configured using switch or software |

Modbus TCP

| | |
|--------------------------------------|---|
| TCP port | 502 |
| TCP connections | 3 |
| Protocol | TCP |
| Function codes | 03, 04, 06, 08, 16, 23 |
| Broadcast support for function codes | 06, 16, 23 |
| Output data | 16 measured values (value, unit, status), 8 digital values (value, status) |
| Input data | 4 setpoints (value, unit, status), 8 digital values (value, status), diagnostic information |
| Supported features | Address can be configured using DHCP or software |

Web server

The web server enables full access to the device configuration, measured values, diagnostic messages, logbooks and service data via standard WiFi/WLAN/LAN/GSM or 3G routers with a user-defined IP address.

| | |
|--------------------|---|
| TCP port | 80 |
| Supported features | <ul style="list-style-type: none"> ■ Remote-controlled device configuration(1 session) ■ Save/restore device configuration (via SD card) ■ Logbook export (file formats: CSV, FDM) ■ Access to web server via DTM or Internet Explorer ■ Login ■ Web server can be switched off |




EtherNet/IP

| | | |
|--------------------|-------------------------------------|---|
| Log | EtherNet/IP | |
| ODVA certification | Yes | |
| Device profile | Generic device (product type: 0x2B) | |
| Manufacturer ID | 0x049E _h | |
| Device type ID | 0x109F | |
| Polarity | Auto-MIDI-X | |
| Connections | CIP | 12 |
| | I/O | 6 |
| | Explicit message | 6 |
| | Multicast | 3 consumers |
| Minimum RPI | 100 ms (default) | |
| Maximum RPI | 10000 ms | |
| System integration | EtherNet/IP | EDS |
| | Rockwell | Add-on-Profile Level 3, Faceplate for Factory Talk SE |
| IO data | Input (T → O) | Device status and diagnostic message with highest priority Measured values: <ul style="list-style-type: none"> ■ 16 AI (analog input) + Status + Unit ■ 8 DI (discrete input) + Status |
| | Output (O → T) | Actuating values: <ul style="list-style-type: none"> ■ 4 AO (analog output) + status + unit ■ 8 DO (discrete output) + Status |

| | | |
|-----------------|--|--|
| PROFINET | Protocol | "Application layer protocol for decentral device periphery and distributed automation", PNIO Version 2.34 |
| | Communication type | 100 MBit/s |
| | Conformance Class | Conformance Class B |
| | Netload Class | Netload Class II |
| | Baud rate | Automatic 100 Mbps with full-duplex detection |
| | Cycle times | From 32 ms |
| | Device profile | Application interface identifier 0xF600 Generic device |
| | PROFINET interface | 1 port, Realtime Class 1 (RT_CLASS_1) |
| | Manufacturer ID | 0x11 _h |
| | Device type ID | 0x859F _h |
| | Device description files (GSD) | Information and files under: <ul style="list-style-type: none"> ■ www.endress.com On the product page for the device: Documents/Software → Device drivers ■ www.profibus.com On the website under Products/Product Finder |
| | Polarity | Auto-polarity for automatic correction of crossed TxD and RxD pairs |
| | Supported connections | <ul style="list-style-type: none"> ■ 1 x AR (IO Controller AR) ■ 1 x AR (IO-Supervisor Device AR connection allowed) ■ 1 x Input CR (Communication Relation) ■ 1 x Output CR (Communication Relation) ■ 1 x Alarm CR (Communication Relation) |
| | Configuration options for measuring device | <ul style="list-style-type: none"> ■ Web browser ■ Manufacturer-specific software (FieldCare, DeviceCare) ■ Device master file (GSD), can be read out via the integrated web server of the measuring device |
| | Configuration of the device name | DCP protocol |
| | Supported functions | <ul style="list-style-type: none"> ■ Identification & maintenance Simple device identification via: <ul style="list-style-type: none"> ■ Process control system ■ Nameplate ■ Measured value status The process variables are communicated with a measured value status ■ Blinking feature (FLASH_ONCE) via the local display for simple device identification and assignment ■ Device operation via operating tools (e.g. FieldCare, DeviceCare) |
| | System integration | For information on system integration, see the Operating Instructions <ul style="list-style-type: none"> ■ Cyclic data transmission ■ Overview and description of the modules ■ Status coding ■ Startup configuration ■ Factory setting |

Power supply











| | |
|-----------------------|---|
| Supply voltage | <ul style="list-style-type: none"> ■ 100 to 120 V AC / 200 to 240 V AC or 24 V DC (not available for "Outdoor" version) ■ 50 or 60 Hz |
|-----------------------|---|

| Fieldbus connection | Supply voltage: not applicable | | | | | | | | | | | | | | | | | |
|---|---|--|-------------|--------------------------|------------|---------------------------|--|---------------------------|------------|----------------------------|-----------------------------------|---------------------------|-------------------------------|---------------------------|-----------------------------------|----------------------------|-------------------------------|----------------------------|
| Power consumption | All versions except "Outdoor" version 130 VA + 660 VA per hose heater, max. 1450 VA 24-V version: max. 105 W "Outdoor" version 680 VA + 660 VA per hose heater, max. 2000 VA (version with cooling system) ¹⁾ | | | | | | | | | | | | | | | | | |
| Fuse | 5 x 20 mm 10 A/250 V fine-wire fuse for hose trace heating system | | | | | | | | | | | | | | | | | |
| Cable entries | <ul style="list-style-type: none">■ 4 x bores for M16, G3/8, NPT3/8", Memosens connection ²⁾■ 4 x bores for M20, G1/2, NPT1/2" | | | | | | | | | | | | | | | | | |
| Cable specification | <table><tr><th>Cable gland</th><th>Permitted cable diameter</th></tr><tr><td>M16x1.5 mm</td><td>4 to 8 mm (0.16 to 0.32")</td></tr><tr><td>M12x1.5 mm (for order version M12 socket for Memosens sensors)</td><td>2 to 5 mm (0.08 to 0.20")</td></tr><tr><td>M20x1.5 mm</td><td>6 to 12 mm (0.24 to 0.48")</td></tr><tr><td>NPT³/₈"</td><td>4 to 8 mm (0.16 to 0.32")</td></tr><tr><td>G³/₈</td><td>4 to 8 mm (0.16 to 0.32")</td></tr><tr><td>NPT¹/₂"</td><td>6 to 12 mm (0.24 to 0.48")</td></tr><tr><td>G¹/₂</td><td>7 to 12 mm (0.28 to 0.48")</td></tr></table> | | Cable gland | Permitted cable diameter | M16x1.5 mm | 4 to 8 mm (0.16 to 0.32") | M12x1.5 mm (for order version M12 socket for Memosens sensors) | 2 to 5 mm (0.08 to 0.20") | M20x1.5 mm | 6 to 12 mm (0.24 to 0.48") | NPT ³ / ₈ " | 4 to 8 mm (0.16 to 0.32") | G ³ / ₈ | 4 to 8 mm (0.16 to 0.32") | NPT ¹ / ₂ " | 6 to 12 mm (0.24 to 0.48") | G ¹ / ₂ | 7 to 12 mm (0.28 to 0.48") |
| Cable gland | Permitted cable diameter | | | | | | | | | | | | | | | | | |
| M16x1.5 mm | 4 to 8 mm (0.16 to 0.32") | | | | | | | | | | | | | | | | | |
| M12x1.5 mm (for order version M12 socket for Memosens sensors) | 2 to 5 mm (0.08 to 0.20") | | | | | | | | | | | | | | | | | |
| M20x1.5 mm | 6 to 12 mm (0.24 to 0.48") | | | | | | | | | | | | | | | | | |
| NPT ³ / ₈ " | 4 to 8 mm (0.16 to 0.32") | | | | | | | | | | | | | | | | | |
| G ³ / ₈ | 4 to 8 mm (0.16 to 0.32") | | | | | | | | | | | | | | | | | |
| NPT ¹ / ₂ " | 6 to 12 mm (0.24 to 0.48") | | | | | | | | | | | | | | | | | |
| G ¹ / ₂ | 7 to 12 mm (0.28 to 0.48") | | | | | | | | | | | | | | | | | |
| <div> Cable glands mounted at the factory are tightened with 2 Nm.</div> | | | | | | | | | | | | | | | | | | |
| Heating for dilution water | <div> The dilution water and the hose for dilution water must be heated onsite at the place of installation!</div> | | | | | | | | | | | | | | | | | |
| Connecting optional modules | With extension modules you can purchase additional functions for your device. <div><div>NOTICE</div>Unacceptable hardware combinations (due to conflicts in power supply) Incorrect measurements or total failure of the measuring point as a result of heat build-up or overloading<ul style="list-style-type: none">▶ Find out if the planned upgrade of your device results in a permitted hardware combination (configurator on www.endress.com/CA80AL).▶ A maximum of eight current inputs and current outputs is permitted.▶ A maximum of two "DIO" modules is permitted.▶ Please contact your Endress+Hauser sales center should you have any questions.</div> <div> Cable entries and possible cable diameters</div> | | | | | | | | | | | | | | | | | |

1) The power value indicated on the nameplate refers to the power consumption when commissioning at 5 °C (41 °F) after an operating time of one minute.

2) In the case of the "Outdoor" version, 2 bores are occupied; for this reason only 2 Memosens sensors are possible

Overview of all the optional modules
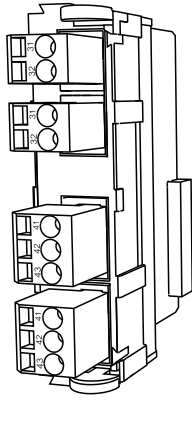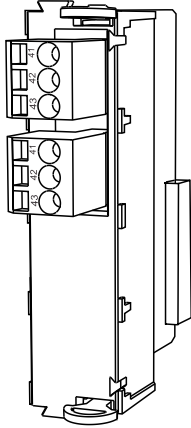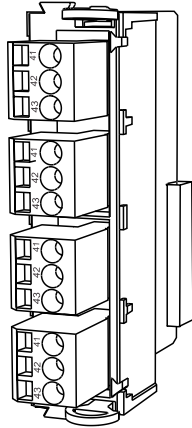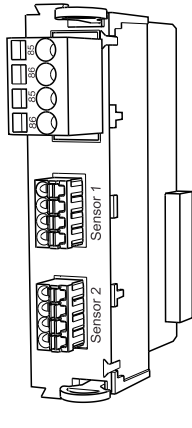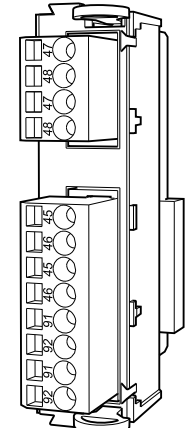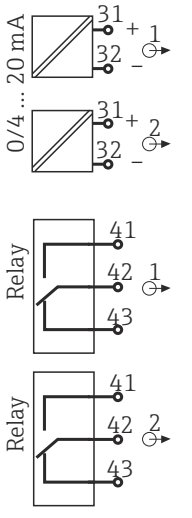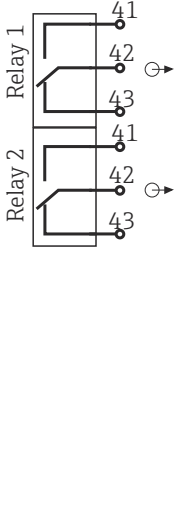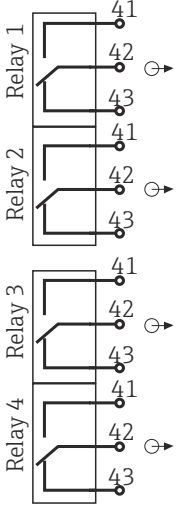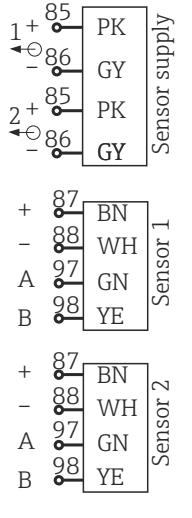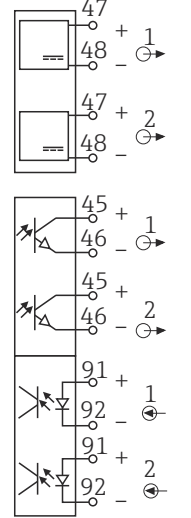
| Module name | | | | |
|---|---|--|---|--|
| AOR | 2R | 4R | 2DS | DIO |
|  |  |  |  |  |
| <ul style="list-style-type: none"> 2 x 0/4 to 20 mA analog outputs 2 relays Order No. 71111053 | <ul style="list-style-type: none"> 2 relays Order No. 71125375 | <ul style="list-style-type: none"> 4 relays Order No. 71125376 | <ul style="list-style-type: none"> 2 digital sensor inputs 2 power supply systems for digital sensors Order No. 71135631 | <ul style="list-style-type: none"> 2 digital inputs 2 digital outputs with auxiliary voltage Order No. 71135638 |
|  <p>0/4... 20 mA</p> <p>Relay</p> <p>Relay</p> |  <p>Relay 1</p> <p>Relay 2</p> |  <p>Relay 1</p> <p>Relay 2</p> <p>Relay 3</p> <p>Relay 4</p> |  <p>Sensor supply</p> <p>Sensor 1</p> <p>Sensor 2</p> |  |

| Module name | | | | |
|---|---|--|---|--|
| 2AO | 4AO | 2AI | 485 | |
| | | | | |
| <ul style="list-style-type: none"> 2 x 0/4 to 20 mA analog outputs Order No. 71135632 | <ul style="list-style-type: none"> 4 x 0/4 to 20 mA analog outputs Order No. 71135633 | <ul style="list-style-type: none"> 2 x 0/4 to 20 mA analog inputs Order No. 71135639 | <ul style="list-style-type: none"> Ethernet (web server or Modbus TCP) Order No. 71135634 | |
| | | | | |

**PROFIBUS DP (module 485)**

Contacts 95, 96 and 99 are jumpered in the connector. This ensures that PROFIBUS communication is not interrupted if the connector is disconnected.

Sensor connection (optional) *Sensors with Memosens protocol*

| Sensor types | Sensor cable | Sensors |
|---|---|---|
| Digital sensors without additional internal power supply | With plug-in connection and inductive signal transmission | <ul style="list-style-type: none"> ■ pH sensors ■ ORP sensors ■ Combined sensors ■ Oxygen sensors (amperometric and optical) ■ Conductivity sensors with conductive measurement of conductivity ■ Chlorine sensors (disinfection) |
| | Fixed cable | Conductivity sensors with inductive measurement of conductivity |
| Digital sensors with additional internal power supply | Fixed cable | <ul style="list-style-type: none"> ■ Turbidity sensors ■ Sensors for interface measurement ■ Sensors for measuring the spectral absorption coefficient (SAC) ■ Nitrate sensors ■ Optical oxygen sensors ■ Ion-sensitive sensors |

Performance characteristics

Maximum measured error³⁾ 2 % of end of measuring range
 With dilution and dilution factor 5:
 additionally 2.0 % of end of measuring range

Maximum measured error for sensor inputs → Documentation of the connected sensor

Maximum measured error for current inputs and outputs Typical measured errors:
 < 20 µA (with current values < 4 mA)
 < 50 µA (with current values 4 to 20 mA)
 at 25 °C (77° F) in each case
 Additional measured error depending on the temperature:
 < 1.5 µA/K

Repeatability³⁾

- ±10 µg/l (ppb) (to 300 µg/l (ppb))
- ±20 µg/l (ppb) (300 to 1000 µg/l (ppb))

 With dilution and dilution factor 5:
 Additionally 1.5 % of end of measuring range

Repeatability of sensor inputs → Documentation of the connected sensor

Measuring interval Continuous (10.5 min), adjustable 10 min to 24 h

Sample requirement Without dilution module
 20.5 ml (0.69 fl oz)/measurement
 With dilution module

- Sample: 18 to 22 ml (0.61 to 0.74 fl oz)/measurement (depends on dilution factor)
- Dilution water: 17 to 21 ml (0.57 to 0.71)/measurement (depends on dilution factor)

3) According to ISO 15839 with standard solutions. Measured errors include all the uncertainties of the analyzer. They do not include the uncertainties from the standard solutions used as a reference.


| | | | |
|-----------------------------|---|--------------------------------------|---|
| Reagent requirement | RB, RK: | 60 µl (0.002 fl.oz) per measurement | 0.173 l (5.85 fl.oz) per month given a measuring interval of 15 minutes |
| | RN: | 100 µl (0.003 fl.oz) per measurement | 0.288 l (9.74 fl.oz) per month given a measuring interval of 15 minutes |
| Standard requirement | Given a calibration interval of 48 h approx. 800 ml (27.05 fl.oz) per month | | |
| Calibration interval | 1 h to 90 days, depending on the application and ambient conditions | | |
| Maintenance interval | Every 6 months, depending on the application | | |
| Maintenance effort | <ul style="list-style-type: none"> ■ Weekly: visual inspection ■ Half-yearly: 2 hours | | |

Mounting

| | |
|--------------------------|---|
| Mounting location | <p>Note the following when erecting the device:</p> <ul style="list-style-type: none"> ▶ If mounting on a wall, make sure that the wall has sufficient load-bearing capacity and is fully perpendicular. ▶ If mounting on a base, erect the device on a level surface. ▶ Protect the device against additional heating (e.g. from a heating system). ▶ Protect the device against mechanical vibrations. ▶ Protect the device against corrosive gases, e.g. hydrogen sulfide (H₂S) . ▶ Make sure to pay attention to the maximum height difference and the maximum distance from the sampling point. ▶ Ensure that the unit can drain freely, without any siphoning effects. ▶ Make sure air can circulate freely at the front of the housing. ▶ Open analyzers (i.e. analyzers that are supplied without a door) may only be erected in closed areas or in a protective cabinet or similar facility. |
|--------------------------|---|


| | |
|----------------------------------|---|
| Installation instructions | <p>The device can be installed in the following ways:</p> <ul style="list-style-type: none"> ■ Mounted on a wall ■ Mounted on a base ■ Post mounting / on a post (accessory) |
|----------------------------------|---|

Spacing required for installing analyzer

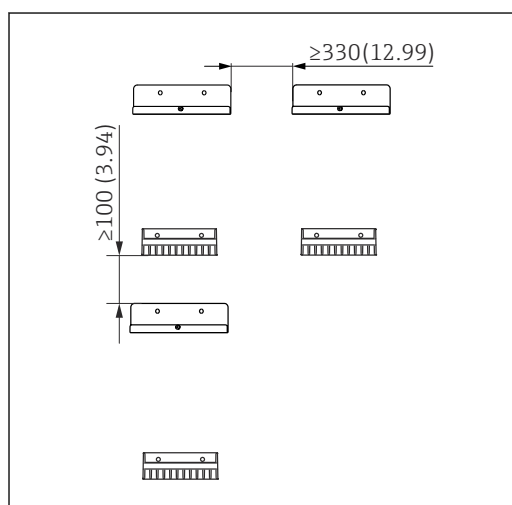

A0036774


17 Minimum spacing required for mounting.
Engineering unit mm (in).

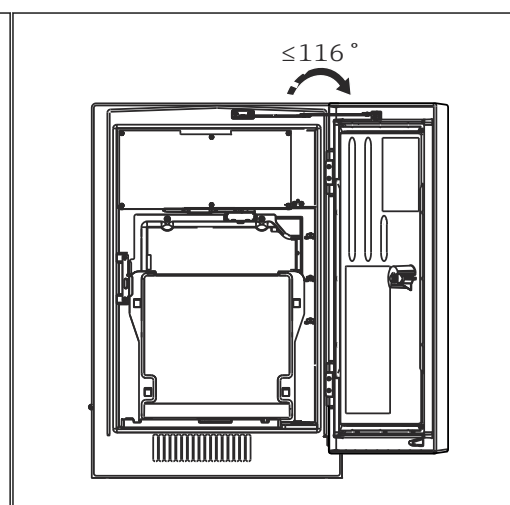

A0036775

18 Maximum opening angle

Spacing required for installing wall-mount version

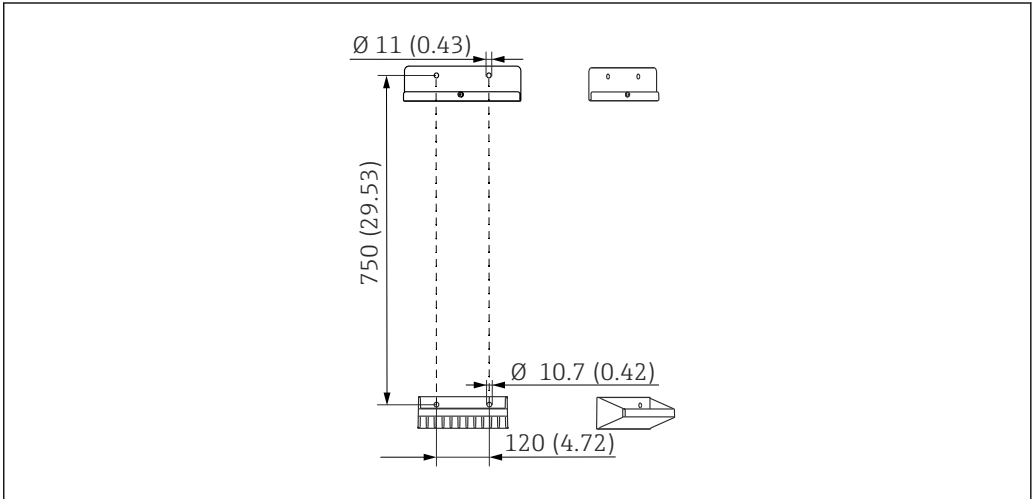

19 Holder unit dimensions. Engineering unit mm (in)

Environment

| | |
|---|---|
| Ambient temperature range | All housing versions with the exception of the outdoor version +5 to +40 °C (41 to 104 °F) |
| | Outdoor version -20 to +40 °C (-4 to 104 °F) |
| Storage temperature | -20 to 60 °C (-4 to 140 °F) |
| Relative humidity | 10 to 95 %, non-condensing |
| Degree of protection | IP55 (cabinet, analyzer stand), TYPE 3R (cabinet, analyzer stand) |
| Electromagnetic compatibility ⁴⁾ | Interference emission and interference immunity as per EN 61326-1:2013, Class A for Industry |
| Electrical safety | According to EN/IEC 61010-1:2010, Class I equipment Low voltage: overvoltage category II For installations up to 2000 m (6500 ft) above MSL |
| Pollution degree | Pollution level 2 |

Process

| | |
|---------------------------|---|
| Sample temperature | 4 to 40 °C (39 to 104 °F) |
| Consistency of the sample | Low solids content (turbidity < 50 NTU), aqueous, homogenized |
| pH value of the sample | < 6, measurement according to DIN ISO 10566:1999 |


4) Sufficient mains quality is required to operate the product as designated.

Sample supply

Unpressurized


Mechanical construction

Dimensions

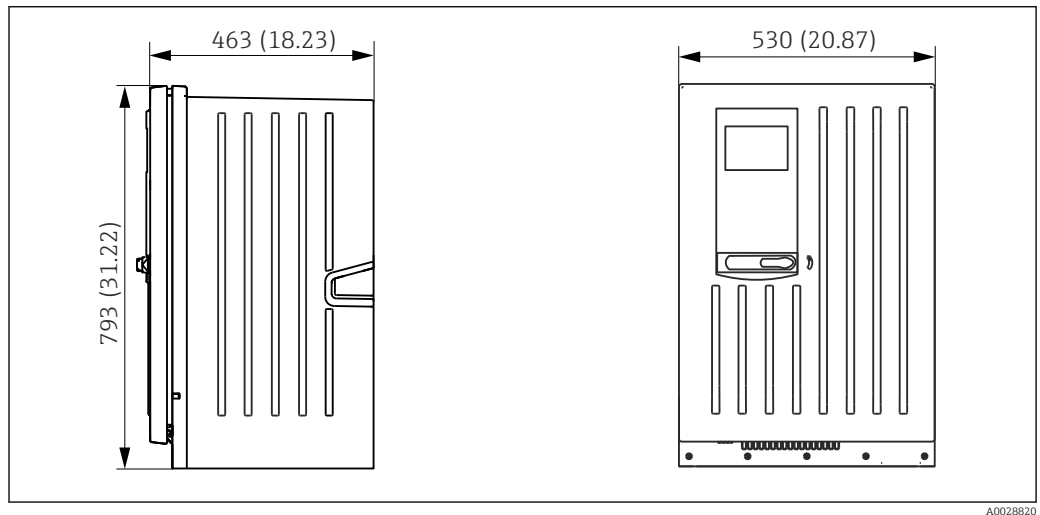


A0028820

20 Liquiline System CA80 closed version, dimensions in mm (in)

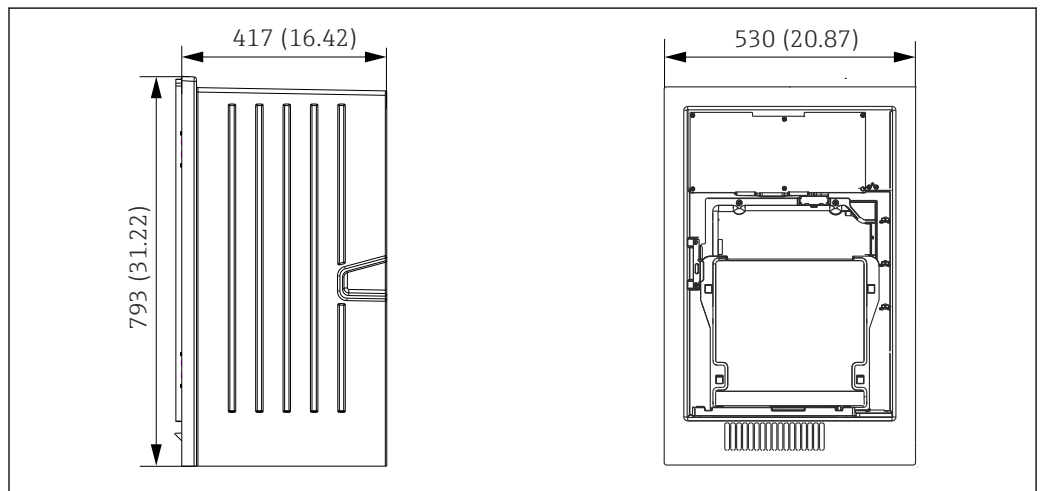

A0030419

21 Liquiline System CA80 open version, dimensions in mm (in)

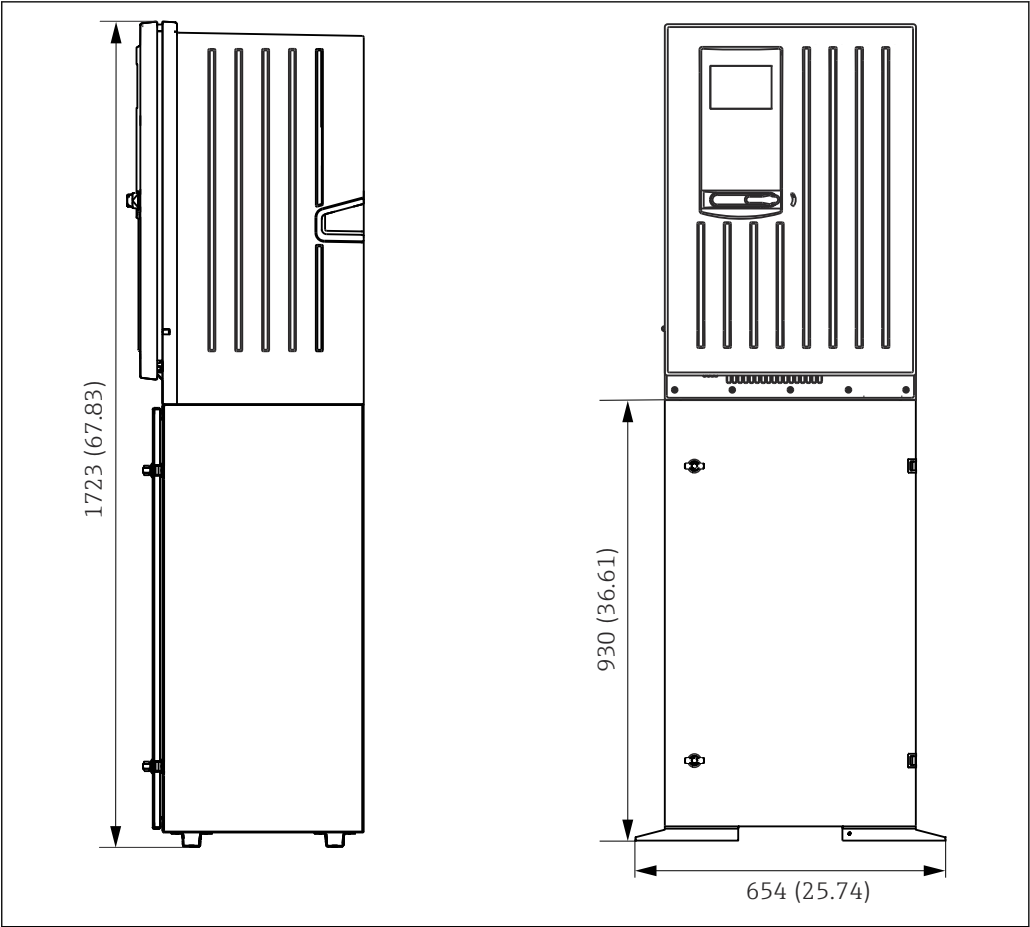

A0028821

22 *Liquiline System CA80 with base, dimensions in mm (in)*

| Weight | Order version | Weight |
|--------|-------------------|---------------------|
| | Cabinet version | 39.5 kg (87.1 lbs) |
| | Open installation | 31.5 kg (69.45 lbs) |
| | Analyzer stand | 72.5 kg (159.8 lbs) |

| Materials | Parts not in contact with medium | |
|-----------|------------------------------------|------------------------------|
| | Cabinet version, exterior cover | Plastic ASA+PC |
| | Open installation, exterior cover | |
| | Cabinet version, interior lining | Plastic PP |
| | Open installation, interior lining | |
| | Window | Shatterproof glass, coated |
| | Reagent container | Plastic PP |
| | Insulation | Plastic EPP (extruded PP) |
| | Base, analyzer stand | Powder-coated sheet steel |
| | Parts in contact with medium | |
| | Dispensers | Plastic PP and elastomer TPE |
| | Liquid Manager | Plastic PP and elastomer FKM |
| | Hoses | C-Flex, NORPRENE |
| | Optical window | Glass |

| | |
|---|---|
| Molded seal | Elastomer EPDM |
| Drain pipe | Plastic PP |
| Sample collecting vessel (optional) <ul style="list-style-type: none">■ Beaker■ Cover■ Level detector pins■ Seal | <ul style="list-style-type: none">■ Plastic PMMA■ Plastic PP■ Stainless steel 1.4404 (V4A)■ EPDM |
| Valve (optional) | PVDF |


| | | |
|--------------------|----------------------------------|--|
| Process connection | Sample inlet: | |
| | With sample collecting vessel | Plug-in connector for rigid hoses with OD 4 mm |
| | Without sample collecting vessel | Hose barb for flexible hoses with ID 1.6 mm |
| | Dilution water: | Hose barb for flexible hoses with ID 3.2 mm |
| | Outlet: | Hose barb for flexible hoses with ID 13 mm |

| | |
|--------------|---|
| Hose entries | 4 x bores for M32 for sample inflow and outflow |
|--------------|---|


| | |
|-----------------------------------|--|
| Hose specification (self-priming) | <ul style="list-style-type: none">■ Clearance: max. 1.0 m (3.3 ft)■ Height: max. 0.5 m (1.6 ft)■ Hose ID: 1.6 mm (¹/₁₆ in) |
|-----------------------------------|--|

Operability

| | |
|-------------------|---|
| Operating concept | The simple and structured operating concept sets new standards: |
| | ■ Intuitive operation with the navigator and soft keys |
| | ■ Fast configuration of application-specific measurement options |
| | ■ Easy configuration and diagnosis thanks to plain-text display |
| | ■ All languages that can be ordered are available in every device |

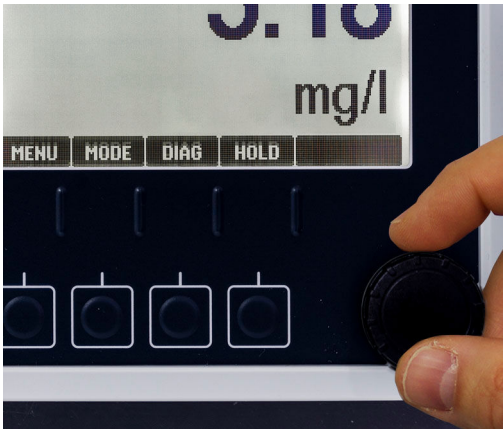

23 Easy operation

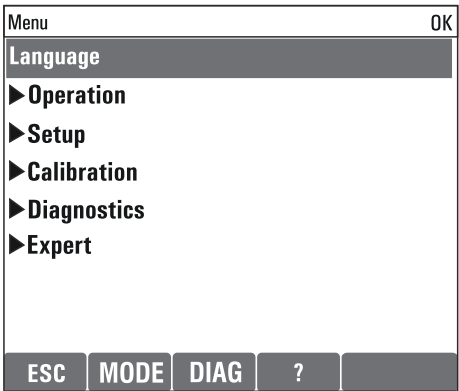


24 Plain-text menu

| | |
|---------|---|
| Display | Graphic display: |
| | ■ Resolution: 240 x 160 pixel |
| | ■ Back light with switch-off function |
| | ■ Red display background for alarms alerts users to errors |
| | ■ Transflective display technology for maximum contrast even in bright environments |

Remote operation

Via HART (e.g. via HART modem and FieldCare)

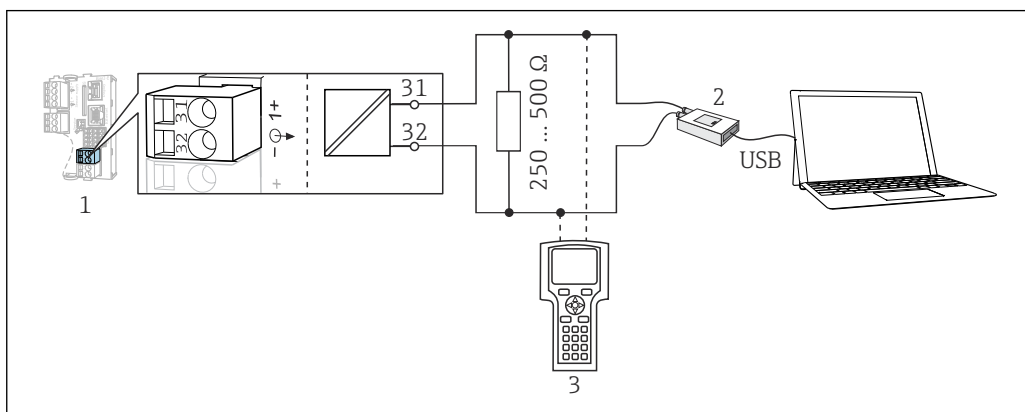


A0039620

 25 *HART using modem*

- 1 Device module Base2-E: current output 1 with HART
2 HART modem for connection to PC, e.g. Commubox FXA191 (RS232) or FXA195 ¹⁾ (USB)
3 HART handheld terminal

¹⁾ Switch position "on" (substitutes the resistor)

Via PROFIBUS DP

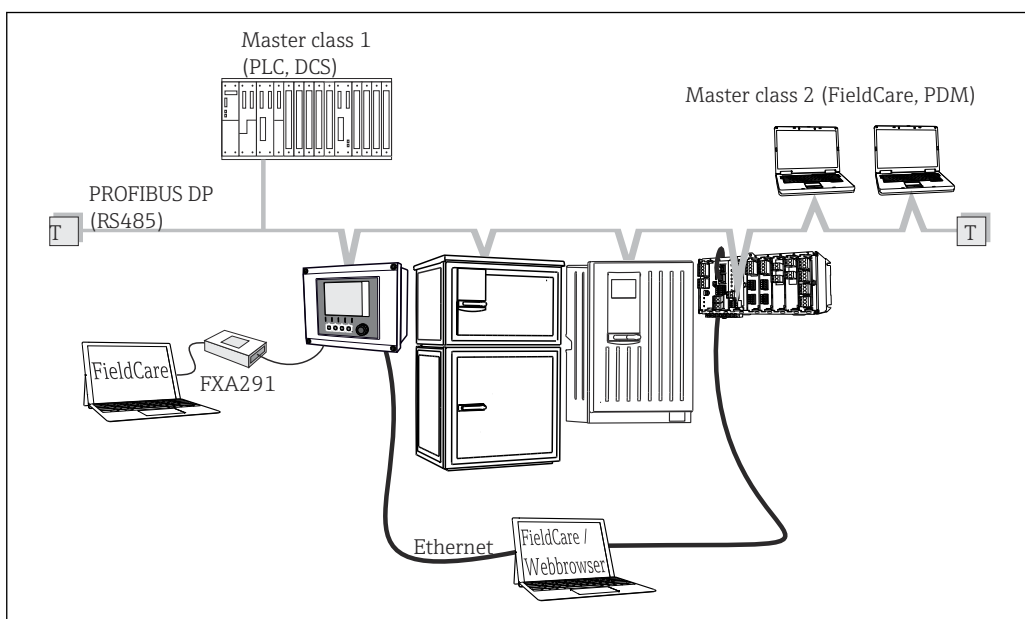


A0039617

26 PROFIBUS DP

T Terminating resistor

Via Modbus RS485

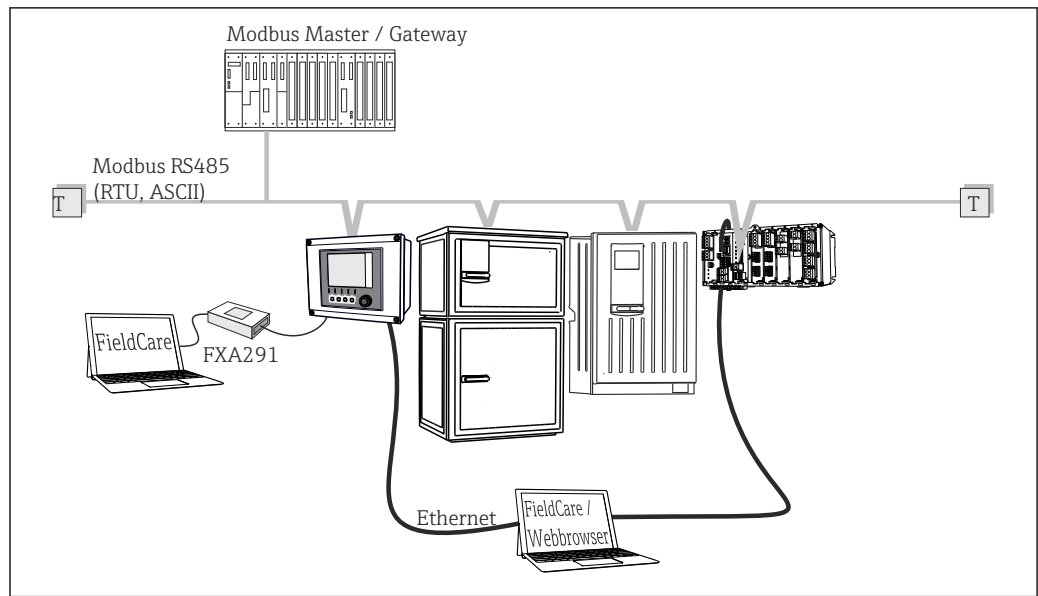


A0039615

27 Modbus RS485

T Terminating resistor

Via Ethernet: web server/Modbus TCP/PROFINET/Ethernet/IP

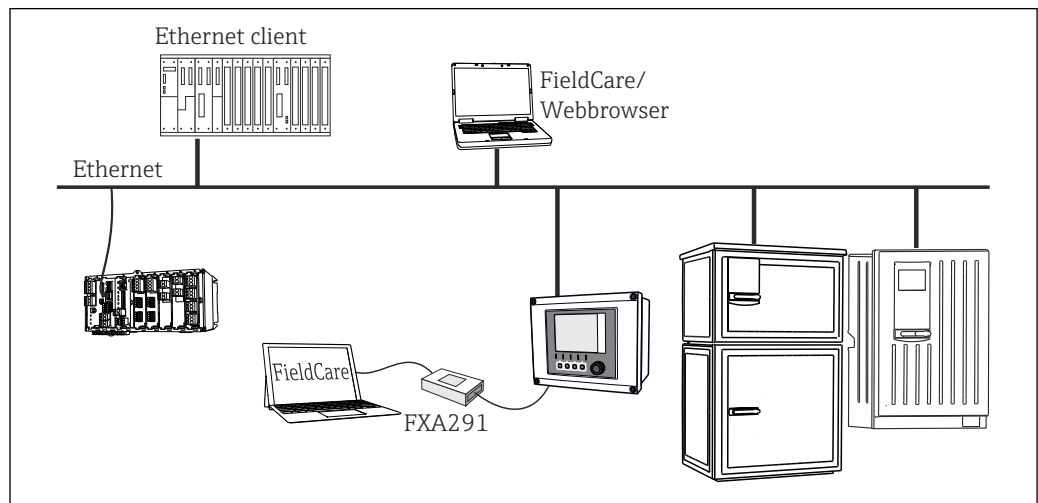

A0039616

28 Modbus TCP or EtherNet/IP or PROFINET

Language packages

The language selected in the product structure is the operating language preset at the factory. All other languages can be selected using the menu.

- English (US)
- German
- Chinese (Simplified, PR China)
- Czech
- Dutch
- French
- Italian
- Japanese
- Polish
- Portuguese
- Russian
- Spanish
- Turkish

- Hungarian
- Croatian
- Vietnamese


The availability of other languages can be checked via the product structure at www.endress.com/ca80al.

Certificates and approvals

Current certificates and approvals that are available for the product can be selected via the Product Configurator at www.endress.com:

1. Select the product using the filters and search field.
2. Open the product page.
3. Select **Configuration**.

Ordering information

| | |
|----------------------|--|
| Product page | www.endress.com/ca80al |
| Product Configurator | <ol style="list-style-type: none"> 1. Configure: Click this button on the product page. 2. Select Extended selection. <ul style="list-style-type: none"> ↳ The Configurator opens in a separate window. 3. Configure the device according to your requirements by selecting the desired option for each feature. <ul style="list-style-type: none"> ↳ In this way, you receive a valid and complete order code for the device. 4. Apply: Add the configured product to the shopping cart. <p> For many products, you also have the option of downloading CAD or 2D drawings of the selected product version.</p> <ol style="list-style-type: none"> 5. Show details: Open this tab for the product in the shopping cart. <ul style="list-style-type: none"> ↳ The link to the CAD drawing is displayed. If selected, the 3D display format is displayed along with the option to download various formats. |
| Scope of delivery | <p>The scope of delivery comprises:</p> <ul style="list-style-type: none"> ■ 1 analyzer in the version ordered with optional hardware ■ 1 x Brief Operating Instructions (hard copy) ■ 1 x Maintenance Manual ■ Optional accessories |

Accessories

The following are the most important accessories available at the time this documentation was issued.

Listed accessories are technically compatible with the product in the instructions.

1. Application-specific restrictions of the product combination are possible.
Ensure conformity of the measuring point to the application. This is the responsibility of the operator of the measuring point.
2. Pay attention to the information in the instructions for all products, particularly the technical data.
3. For accessories not listed here, please contact your Service or Sales Center.

Device-specific accessories**Sample preparation**

Liquiline System CAT810

- Pressure pipe sampling and microfiltration
- Order according to product structure
(--> Online Configurator, www.endress.com/cat810)
- Technical Information TI01138C/07/EN

Liquiline System CAT820

- Sampling and membrane filtration
- Order according to product structure
(--> Online Configurator, www.endress.com/cat820)
- Technical Information TI01131C/07/EN

Liquiline System CAT860

- Pressure pipe sampling and membrane filtration
- Order according to product structure
(--> Online Configurator, www.endress.com/cat860)
- Technical Information TI01137C/07/EN



The Liquiline System CAT860 can only be operated with a Liquiline System CA80 single-channel device.

Installation accessories

Kit, post with bracket CA80, outd.

- Post 60 x 60 x 1800 mm, stainless steel 1.4571
- Post mount clamp CA80xx
- Kit installation instructions
- Order No. 71458285

Consumables

You can find the order codes on the website: <https://www.endress.com/device-viewer>.

1. Indicate the serial number of the device.
2. Search.
 - ↳ Device information is displayed.
3. Select the "Spare parts" tab.
4. Click the product root.
 - ↳ The complete product structure is displayed.

The following consumables are available:

- Reagent and standard solutions
CY80AL
- Cleaner CY800 (for hoses in the device)
- Cleaner CY820 (for hoses of sample preparation system and of sample collecting vessel)
- CAC880, inlet and outlet hoses for CA80

Maintenance kit CAV800

Order according to product structure (<https://www.endress.com/device-viewer>)

Standard

- Dispensers, 6 x 2.5 ml and 4 x 10 ml, including adapter
- Hoses
- Silicone grease, medium-viscosity, tube 2 g
- Plug
- Sealing caps
- Filter mats

Optional

- Inlet and outlet hoses
- Liquid Manager 3 reagents without motor
- Collecting vessel, beaker (2 pcs.)

Upgrade kits CAZ800

Kit for upgrade with sample collecting vessel

- Sample collecting vessel with level monitoring, pre-fitted on mounting bracket
- Hoses, connection adapters
- Activation code
- Order No. CAZ800-N1A1

Kit for upgrade to two-channel device

- Valve for switching sample flow
- Two sample collecting vessels with level monitoring, pre-fitted on mounting bracket
- Hoses, connection adapters
- Activation code
- Order No. CAZ800-N1A2

Kit for upgrade for second, downstream analyzer ⁵⁾

- Valve for switching sample flow
- Hoses, connection adapters
- Activation code
- Order No. CAZ800-N1M1

Kit for dilution function

Order No. CAZ800-AAN5

Kit for upgrading the dilution function

- Hose with identification marking
- Modified cable gland
- Activation code
- Order No. CAZ800-N1N5

Sensors

pH glass electrodes

Memosens CPS11E

- pH sensor for standard applications in process and environmental engineering
- Digital with Memosens 2.0 technology
- Product Configurator on the product page: www.endress.com/cps11e



Technical Information TI01493C

Memosens CPS41E

- pH sensor for process technology
- With ceramic junction and KCl liquid electrolyte
- Digital with Memosens 2.0 technology
- Product Configurator on the product page: www.endress.com/cps41e



Technical Information TI01495C

Memosens CPS71E

- pH sensor for chemical process applications
- With ion trap for poison-resistant reference
- Digital with Memosens 2.0 technology
- Product Configurator on the product page: www.endress.com/cps71e



Technical Information TI01496C

Memosens CPS91E

- pH sensor for heavily polluted media
- With open aperture
- Digital with Memosens 2.0 technology
- Product Configurator on the product page: www.endress.com/cps91e



Technical Information TI01497C

5) Not for analyzers operated with CAT860 and not for two-channel versions.

Memosens CPS31E

- pH sensor for standard applications in drinking water and swimming pool water
- Digital with Memosens 2.0 technology
- Product Configurator on the product page: www.endress.com/cps31e



Technical Information TI01574C

Memosens CPS71E

- pH sensor for chemical process applications
- Digital with Memosens 2.0 technology
- Product Configurator on the product page: www.endress.com/cps71e



Technical Information TI01496C

Memosens CPS91E

- pH sensor for heavily polluted media
- Digital with Memosens 2.0 technology
- Product Configurator on the product page: www.endress.com/cps91e



Technical Information TI01497C

Ceramax CPS341D

- pH electrode with pH-sensitive enamel
- Meets highest demands of measuring accuracy, pressure, temperature, sterility and durability
- Product Configurator on the product page: www.endress.com/cps341d



Technical Information TI00468C

Memosens CPF81E

- pH sensor for mining operations, industrial water and wastewater treatment
- Digital with Memosens 2.0 technology
- Product Configurator on the product page: www.endress.com/cpf81e



Technical Information TI01594C

*ORP electrodes***Memosens CPS12E**

- ORP sensor for standard applications in process and environmental engineering
- Digital with Memosens 2.0 technology
- Product Configurator on the product page: www.endress.com/cps12e



Technical Information TI01494C

Memosens CPS42E

- ORP sensor for process technology
- Digital with Memosens 2.0 technology
- Product Configurator on the product page: www.endress.com/cps42e



Technical Information TI01575C

Memosens CPS72E

- ORP sensor for chemical process applications
- Digital with Memosens 2.0 technology
- Product Configurator on the product page: www.endress.com/cps72e



Technical Information TI01576C

Memosens CPS92E

- ORP sensor for use in heavily polluted media
- Digital with Memosens 2.0 technology
- Product Configurator on the product page: www.endress.com/cps92e



Technical Information TI01577C

Memosens CPF82E

- ORP sensor for mining operations, industrial water and wastewater treatment
- Digital with Memosens 2.0 technology
- Product Configurator on the product page: www.endress.com/cpf82e



Technical Information TI01595C

Conductivity sensors with inductive measurement of conductivity

Indumax CLS50D

- High-durability inductive conductivity sensor
- For standard and hazardous area applications
- With Memosens technology
- Product Configurator on the product page: www.endress.com/cls50d



Technical Information TI00182C

Conductivity sensors with conductive measurement of conductivity

Memosens CLS21E

- Digital conductivity sensor for media with medium or high conductivity
- Conductive measurement
- With Memosens 2.0
- Product Configurator on the product page: www.endress.com/cls21e



Technical Information TI01528C

Oxygen sensors

Memosens COS51E

- Amperometric oxygen sensor for water, wastewater and utilities
- Digital with Memosens 2.0 technology
- Product Configurator on the product page: www.endress.com/cos51e



Technical Information TI01620C

Memosens COS81E

- Hygienic optical oxygen sensor with maximum measurement stability over multiple sterilization cycles
- Digital with Memosens 2.0 technology
- Product Configurator on the product page: www.endress.com/cos81e



Technical Information TI01558C

Memosens COS22E

- Hygienic amperometric oxygen sensor with maximum measurement stability over multiple sterilization cycles
- Digital with Memosens 2.0 technology
- Product Configurator on the product page: www.endress.com/cos22e



Technical Information TI01619C

Chlorine dioxide and chlorine sensors

Memosens CCS50D

- Membrane-covered amperometric sensor for chlorine dioxide
- With Memosens technology
- Product Configurator on the product page: www.endress.com/ccs50d



Technical Information TI01353C

Memosens CCS51D

- Sensor for measuring free chlorine
- Product configurator on the product page: www.endress.com/ccs51d



Technical Information TI01423C

*Ion-selective sensors***ISEmax CAS40D**

- Ion selective sensors
- Product Configurator on the product page: www.endress.com/cas40d



Technical Information TI00491C

*Turbidity sensors***Turbimax CUS51D**

- For nephelometric measurements of turbidity and solids in wastewater
- 4-beam scattered light method
- With Memosens technology
- Product Configurator on the product page: www.endress.com/cus51d



Technical Information TI00461C

Turbimax CUS52D

- Hygienic Memosens sensor for turbidity measurement in drinking water, process water and in utilities
- With Memosens technology
- Product Configurator on the product page: www.endress.com/cus52d



Technical Information TI01136C

*SAC and nitrate sensors***Viomax CAS51D**

- SAC and nitrate measurement in drinking water and wastewater
- With Memosens technology
- Product Configurator on the product page: www.endress.com/cas51d



Technical Information TI00459C

*Interface measurement***Turbimax CUS71D**

- Immersion sensor for interface measurement
- Ultrasonic interface sensor
- Product Configurator on the product page: www.endress.com/cus71d



Technical Information TI00490C

Cable junction with Velcro strip

- 4 pieces, for sensor cable
- Order No. 71092051

Communication-specific accessories**Additional functionality**

- Always quote the serial number of your device when ordering activation codes.

| | Communication; software |
|----------|---|
| 51516983 | Commubox FXA291 (hardware) |
| 71127100 | SD card with Liquiline Firmware, 1 GB, Industrial Flash Drive |
| 71135636 | Activation code for Modbus RS485 |
| 71219871 | Activation code for EtherNet/IP |
| 71135635 | Activation code for Profibus DP for module 485 |
| 71449914 | Upgrade code for EtherNet/IP+web server for BASE2 |
| 71449915 | Upgrade code for Modbus TCP+web server for BASE2 |
| 71449918 | Upgrade code for web server for BASE2 |
| 71449901 | Upgrade code for PROFINET+web server for BASE2 |


| | Communication; software |
|----------|--|
| 71249548 | Kit CA80: activation code for 1st digital sensor input |
| 71249555 | Kit CA80: activation code for 2nd digital sensor input |

| | Retrofit kits |
|----------|---|
| 71136999 | Kit CSF48/CA80: retrofit service interface (CDI flange connector, counter nut) |
| 71111053 | Kit module AOR: 2 x relay, 2 x analog output 0/4 to 20 mA |
| 71125375 | Kit module 2R: 2 x relay |
| 71125376 | Kit module 4R: 4 x relay |
| 71135632 | Kit module 2AO: 2 x analog output 0/4 to 20 mA |
| 71135633 | Kit module 4AO: 4 x analog output 0/4 to 20 mA |
| 71135631 | Kit module 2DS: 2 x digital sensor, Memosens |
| 71135634 | Kit module 485: PROFIBUS DP or Modbus RS485. This requires an additional activation code which can be ordered separately. |
| 71135638 | Kit module DIO: 2 x digital input; 2 x digital output; auxiliary power supply for digital output |
| 71135639 | Kit module 2AI: 2 x analog input 0/4 to 20 mA |
| 71140888 | Upgrade kit module 485 + Profibus DP |
| 71140889 | Upgrade kit module 485 + Modbus RS485 |
| 71141366 | Kit, extension backplane module |

Software

Memobase Plus CYZ71D

- PC software to support laboratory calibration
- Visualization and documentation of sensor management
- Sensor calibrations stored in database
- Product Configurator on the product page: www.endress.com/cyz71d

 Technical Information TI00502C

Field Data Manager Software MS20/21

- PC software for central data management
- Visualization of series of measurements and logbook events
- SQL database for secure data storage

System components

Measuring cable


Memosens data cable CYK10

- For digital sensors with Memosens technology
- Product Configurator on the product page: www.endress.com/cyk10

 Technical Information TI00118C

Memosens data cable CYK11

- Extension cable for digital sensors with Memosens protocol
- Product Configurator on the product page: www.endress.com/cyk11

 Technical Information TI00118C

Measuring cable CYK81

- Underminated cable for extending sensor cables (e.g. Memosens, CUS31/CUS41)
- 2 x 2 cores, twisted with shielding and PVC sheath (2 x 2 x 0.5 mm² + shielding)
- Sold by meter, Order No.: 51502543

SD card

- Industrial Flash Drive, 1 GB
- Order number: 71110815



www.addresses.endress.com
