



Level



Pressure



Flow



Temperature



Liquid  
Analysis



Registration



Systems  
Components



Services




Solutions

## Technical Information

# Stamolys CA71NO

## Nitrite analyzer

Compact photometric analysis system for the nitrite measurement in drinking water, wastewater and in mineral waters

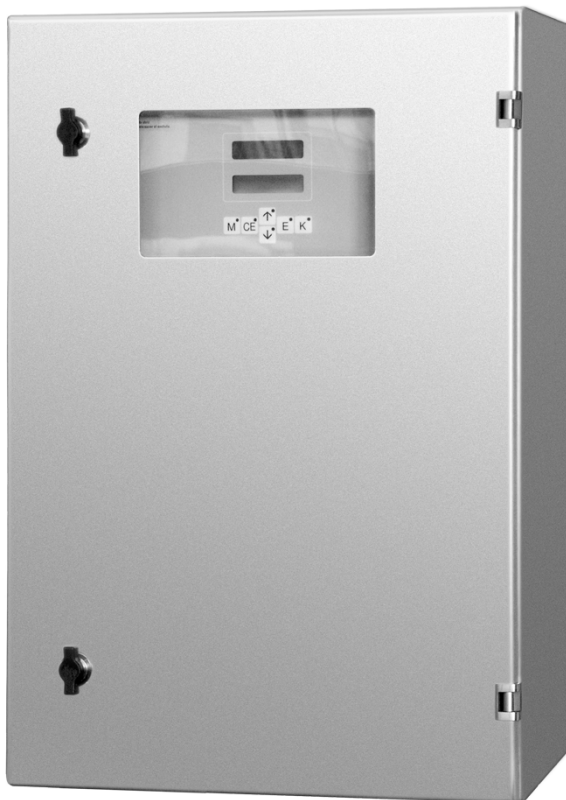

### Application

- Nitrite monitoring in drinking water
- Nitrite monitoring in sewage treatment plants
- Nitrite monitoring in the mineral water production

### Your benefits


- Stainless steel or glass-fibre reinforced carbon housing available
- Two channel version available
- Measured value storage using integrated data logger
- Automatic calibration and self-cleaning
- Free selectable measuring, cleaning and calibration intervals

## Function and system design

### Measuring principle CA71NO-A/B/C

After sample conditioning, the analyzer sample pump conveys a part of the filtrate to a mixing vessel. The reagent pump adds reagent at a specific ratio. As a result of the reaction, the sample turns a characteristic colour. The photometer determines the sample's absorption of an emitted light at a specific wavelength (s. Fig., Pos. 2). The wavelength is parameter specific. The absorbance is proportional to the concentration of the specified parameter in the sample (Pos. 3). Additionally, the absorption of a reference light is determined to receive a genuine measuring result. The reference signal is subtracted from the measuring signal to prevent any effects due to turbidity, contamination and ageing of the LEDs.

The temperature in the photometer is controlled thermostatically so that the reaction is reproducible and takes place within a short period of time.

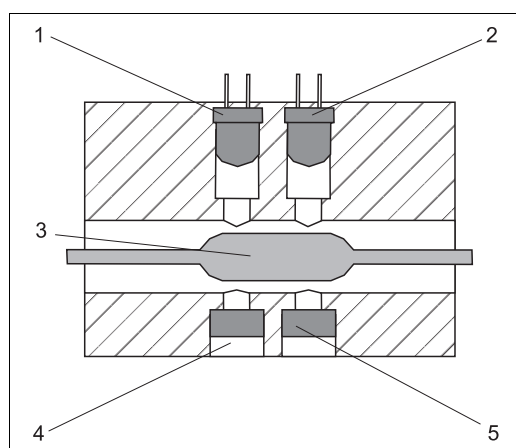


- 1 Reference LED
- 2 Emitter LED
- 3 Sample
- 4 Reference detector
- 5 Measuring detector

Photometric principle

### Measuring principle CA71NO-D

The LED sends light at a defined wavelength through the sample. The intensity of the received light is measured by the detector and converted to an electrical signal. In the analyzer, the respective concentration is calculated from the proportion of light absorbed by the sample.

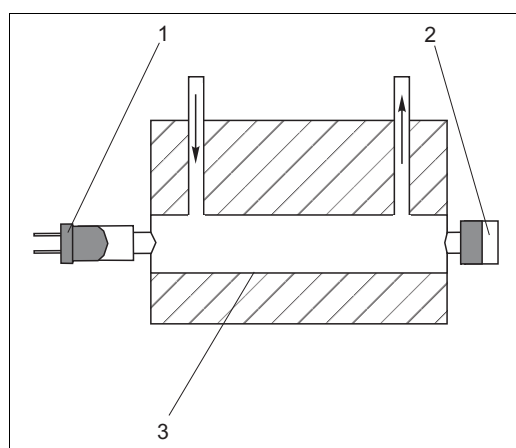

- 1 LED
- 2 Detector
- 3 Sample

Photometric measuring principle

### Nitrite

Nitrite is a metastable intermediate stage of bacterial oxidation: proteins, urea → ammonium → nitrite → nitrate.

Thus nitrite serves as an indicator in sewage treatment plant processes or in discharge streams of incomplete nitrification.

Nitrite is often added to process and cooling water as a corrosion inhibitor. The Food Industry uses it as a preservative (e.g. pickling salt).

Nitrite occurs very rarely in surface waters since it easily oxidizes to nitrate in the presence of air. High nitrite concentrations in water therefore indicate the presence of partially disintegrated, organic wastes.

There should be no nitrite present in drinking water due to its toxicity (limit value according to the German Trinkwasserverordnung (drinking water ordinance): 0.1 mg/l (ppm)). Nitrite causes haemoglobin to convert to methaemoglobin which suppresses take up of oxygen in the blood ("inner asphyxiation").

**Photometric nitrite determination****Naphthylamine method for nitrite determination acc. to DIN 38405-D10**

Under acidic conditions, nitrite ions diazotize sulphonamido, which forms a red dye in conjunction with N-(1-naphthyl)-ethylenediamine.

The absorption is determined at a wavelength of 565 nm. The absorption intensity is proportional to the nitrite concentration in the sample.

The reference wavelength is 880 nm.

**Interferences**

No interferences up to the given concentration:

Concentration [mg/l (ppm)]	Interference
1,000	Cl <sup>-</sup> , SO <sub>4</sub> <sup>2-</sup>
700	Cd <sup>2+</sup>
500	Na <sup>+</sup> , K <sup>+</sup> , Ca <sup>2+</sup>
50	Pb <sup>2+</sup> , Zn <sup>2+</sup> , Ni <sup>2+</sup> , Fe <sup>2+</sup> , Fe <sup>3+</sup> , Co <sup>2+</sup> , Hg <sup>2+</sup> , Ag <sup>+</sup> , NiO <sub>3</sub> <sup>-</sup> , CO <sub>3</sub> <sup>2-</sup>
25	Sn <sup>2+</sup>
10	Cr (VI)

Copper causes decreases in nitrite measured value.

**Sample conditioning****Micro/ultrafiltration (Stamoclean CAT430, optional)**

A membrane filter element is suspended directly into the wastewater basin or channel. A hose pump is located in a pump box on the basin rim. The pump creates a vacuum between the membrane and the carrier plate of the filter element. This vacuum makes the filtrate pass through the filter membrane. Suspended materials, particles, algae and bacteria are collected on the surface of the membrane.

Due to alternating pumping and pause, intervals of more than one month are achieved between cleaning cycles. Parallel connection of two or four filter elements increases the sampling quantity up to approx. 1 l/h (0.26 gal/hr).

The hose pump pressure transports the sample to a collecting vessel near the analyzer over a distance of 20 m (66 ft). For distances up to 100 m (330 ft) the sample is transported to the collecting vessel by means of compressed air. The analyzers suck the needed sample volume from the collecting vessel.

**Membrane filtration (Stamoclean CAT411, optional)**

A sample flow of 0.8 to 1.8 m<sup>3</sup>/h (3.5 to 7.9 gal/min) is continuously conducted through the micro filter via a pressure pipe. A part of the sample passes the filter membrane and is then conveyed to the measuring device as filtrate.

Sampling is based on the cross flow filtration principle. The PTFE filter membrane separates particles with sizes > 0.45 µm from the filtrate. These particles are collected in front of the membrane and are washed away with the sample flow.

The medium is conducted in a meander-like channel through the filter element. This results in a constantly high flow rate. The high flow rate generates the self cleaning effect. Therefore, mechanical drives for the generation of a flow at the filter surface are not necessary.

**Backwash filter (Stamoclean CAT221, optional)**

A sample flow of 1 to 2.5 m<sup>3</sup>/h (4.4 to 11 gal/min) is permanently conveyed through the backwash filter by means of a sampling pump or compressed air or rinse water. The filtrate passes through the wedge wire sieve and is then transported to the measuring device.

Clogging is minimized by the flow at the wedge wire sieve. Automatic backwashing results in a filter operating time of several weeks.

The automatic backwashing and a small compressor or compressed air resp. rinse water supply guarantee low-maintenance and low-energy operation.

**Customer specific solution**


Before analysis, the sample has to be conditioned and to be transported to an external or to the delivered collecting vessel.

**Measuring system**

A complete measuring system comprises:

- An analyzer
- A sample conditioning system (optionally):
  - Micro filtration / ultra filtration Stamoclean CAT430 or Stamoclean CAT411
  - Backwash filter Stamoclean CAT221
  - Customer specific solution
- Collecting vessel (see product structure)


**Micro / ultra filtration**

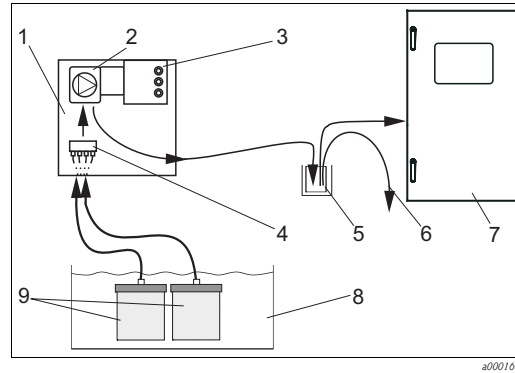

- 1 Control box
- 2 Pump
- 3 Control unit
- 4 Collecting unit (optional)
- 5 Collecting vessel
- 6 Overflow
- 7 Analyzer
- 8 Aeration basin
- 9 Membrane filter

Measuring system with Stamoclean CAT430

a0001010

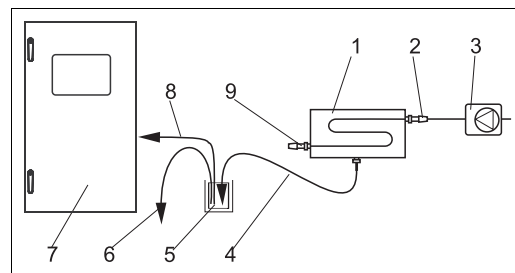


- 1 Stamoclean CAT411
- 2 Inlet
- 3 Sample pump or hydraulic main
- 4 Filtrate line
- 5 Collecting vessel
- 6 Overflow
- 7 Analyzer
- 8 Analyzer sample line
- 9 Outlet

Measuring system with Stamoclean CAT411

a0001015

**Backwash filter**

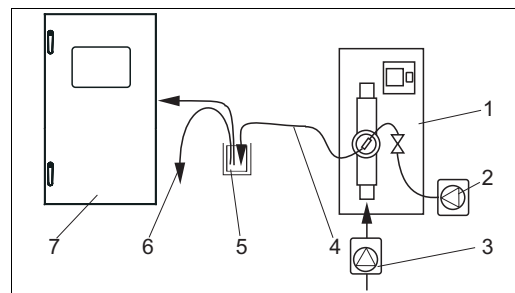

- 1 Stamoclean CAT221
- 2 Compressor or compressed air
- 3 Sample pump or hydraulic main
- 4 Sample outlet
- 5 Collecting vessel
- 6 Overflow
- 7 Analyzer

Measuring system with Stamoclean CAT221

a0001017

## Input

<b>Measured variable</b>	<ul style="list-style-type: none"> <li>■ NO-A/B/C NO<sub>2</sub>-N [mg/l (ppm)]</li> <li>■ NO-D NO<sub>2</sub> [mg/l (ppm)]</li> </ul>
<b>Measuring ranges</b>	<ul style="list-style-type: none"> <li>■ NO-A 10 ... 500 µg/l (ppb)</li> <li>■ NO-B 0.10 ... 1.00 mg/l (ppm)</li> <li>■ NO-C 0.20 ... 3.00 mg/l (ppm)</li> <li>■ NO-D 0.01 ... 250.00 µg/l (ppb)</li> </ul>
<b>Wavelength</b>	<ul style="list-style-type: none"> <li>■ NO-A/B/C 565 nm</li> <li>■ NO-D 555 nm</li> </ul>
<b>Reference wavelength</b>	880 nm (NO-A/B/C only)

## Output

<b>Output signal</b>	0/4 ... 20 mA
<b>Signal on alarm</b>	Contacts: 2 limit contacts (per channel), 1 system alarm contact optional: end of measurement (with two channel version display of channel no. available)
<b>Load</b>	max. 500 Ω
<b>Data interface</b>	RS 232 C
<b>Data logger</b>	1024 data pairs per channel with date, time and measured value 100 data pairs with date, time and measured value for calibration factor determination (diagnostic tool)
<b>Load capacity</b>	230 V / 115 V AC max. 2 A, 30 V DC max. 1 A

# Power supply

## Electrical connection



Caution!

The following figure (→ 1) shows the connection department sticker as an example. Terminal assignment and cable core colors can be different to the originals.

For connecting your analyzer only use the terminal assignment of the connection department sticker **in the device** (→ 2)!

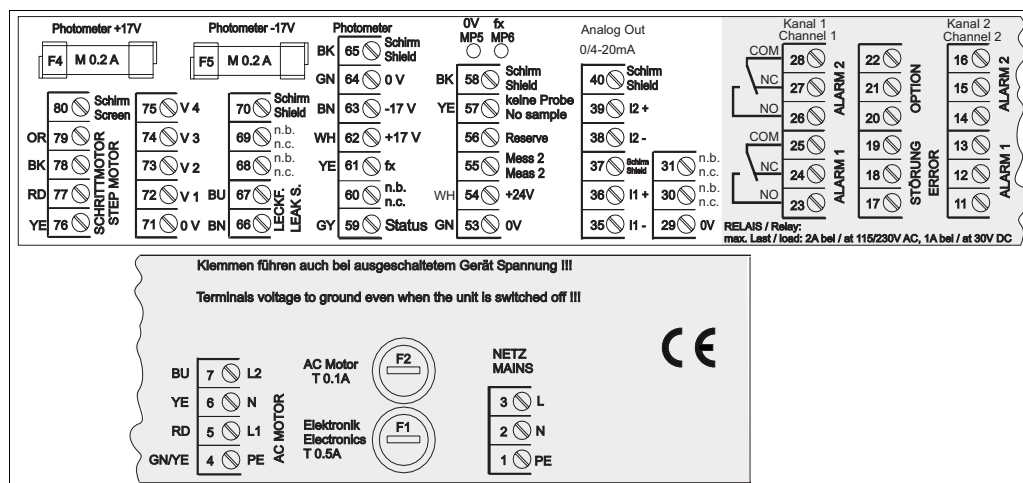


Fig. 1: Example of the connection sticker

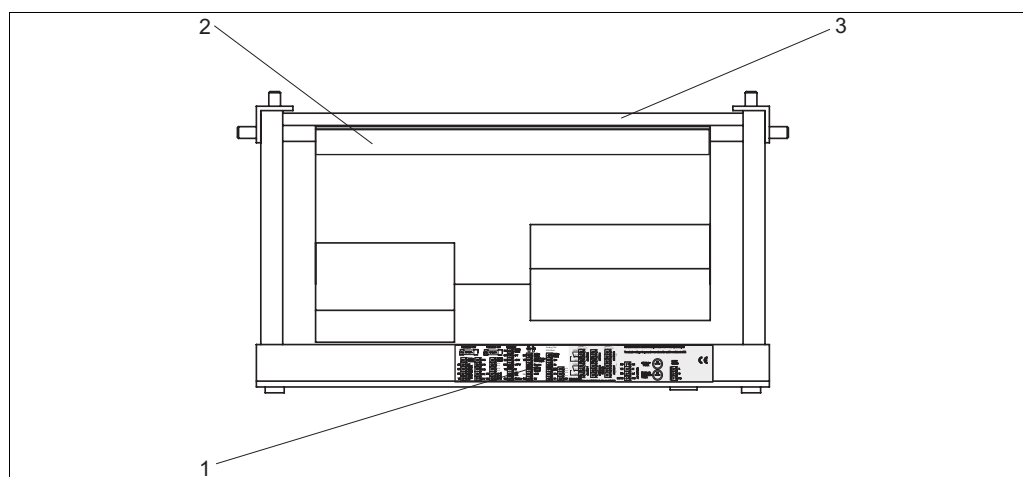


Fig. 2: Analyzer from top (open version resp. swung out)

- 1 Connection department sticker
- 2 Printed circuit board with terminal strip
- 3 Backside of the analyzer

**Supply voltage** 115 V AC / 230 V AC ±10%, 50/60 Hz

**Power consumption** approx. 50 VA

**Current consumption** approx. 0.2 A at 230 V  
 approx. 0.5 A at 115 V

**Fuses** 1 x time-lag 0.5 A for electronics  
 2 x medium time-lag 0.2 A for photometer  
 1 x time-lag 0.5 A for motors

## Performance characteristics

<b>Time between two measurements</b>	$t_{mes}$ = reaction time + rinse time + waiting time + rinse again time + filling time + sampling time + reagent refusal time (min. waiting time = 0 min)
<b>Maximum measured error</b>	±2 % of measuring range end
<b>Repeatability</b>	<ul style="list-style-type: none"> <li>■ NO-A: up to 100 µg/l: ± 5 µg/l (ppb) &gt; 100 µg/l: ± 0.1 µg/l (ppb)</li> <li>■ NO-B: up to 0.25 mg/l: ± 0.01 mg/l (ppm) &gt; 0.25 mg/l: ± 0.02 mg/l (ppm)</li> <li>■ NO-C: up to 0.50 mg/l: ± 0.03 mg/l (ppm) &gt; 0.50 mg/l: ± 0.06 mg/l (ppm)</li> <li>■ NO-D: ± 2 µg/l (ppb)</li> </ul>
<b>Measuring interval</b>	$t_{mes}$ to 120 min
<b>Reaction time</b>	<p><b>NO-A/B/C</b> 2 minutes</p> <p><b>NO-D</b> 210 sec</p>
<b>Sample requirement</b>	<p><b>NO-A/B/C</b> 15 ml (0.51 fl.oz.) per measurement</p> <p><b>NO-D</b> 20 ml (0.68 fl.oz.) per measurement</p>
<b>Reagent requirement</b>	<p><b>NO-A/B/C</b> 1 x 0.21 ml (0.007 fl.oz.) 0.91 l (0.24 gal) per reagent per month with 10 minute measuring interval</p> <p><b>NO-D</b> 1 x 0.115 ml (0.004 fl.oz.) 0.5 l (0.13 gal) per reagent per month with 10 minute measuring interval</p>
<b>Calibration interval<sup>1)</sup></b>	0 to 720 h
<b>Rinse interval</b>	0 to 720 h
<b>Rinse time</b>	selectable from 20 to 300 s (standard = 60 s)
<b>Rinse again time</b>	30 s
<b>Filling time</b>	<p><b>NO-A/B/C</b> 22 s</p> <p><b>NO-D</b> 30 sec</p>

1) standard solutions have a limited tenability because of biological activity

---

<b>Maintenance interval</b>	6 months (typical)
<b>Servicing requirement</b>	15 minutes per week (typical)

---

## Environment

---

<b>Ambient temperature</b>	5 ... 40 °C (40... 100 °F), avoid strong fluctuations
<b>Humidity</b>	below the condensation limit, installation in usual, clean rooms outdoor installation only possible with protective devices (customer supplied)
<b>Ingress protection</b>	IP 43

---

## Process

---

<b>Sample temperature</b>	5 to 40 °C (40 to 100 °F)
<b>Sample flow rate</b>	min. 5 ml (0.0013 US.gal.) per min
<b>Consistence of the sample</b>	low solid content (< 50 ppm)
<b>Sample inlet</b>	pressureless


---



# Mechanical construction

Design, dimensions


Stainless steel housing, NO-A/B/C/D

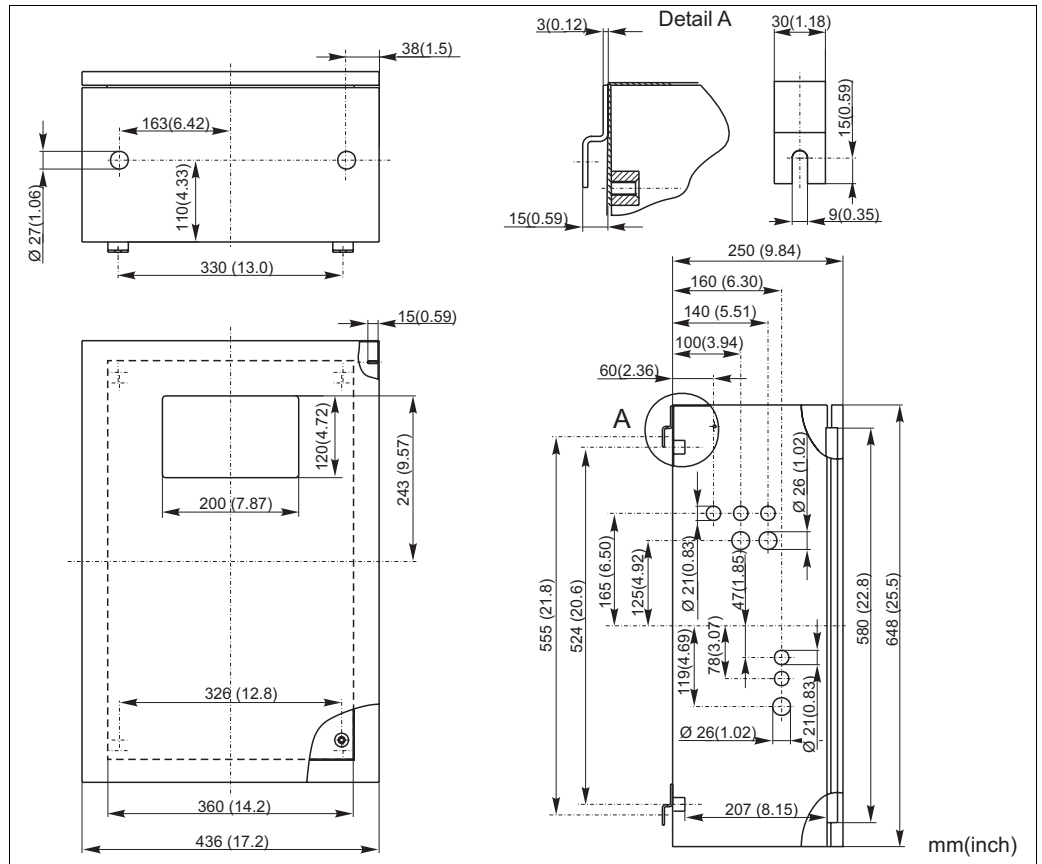

Stainless steel version

#0001361


GFR housing, NO-A/B/C

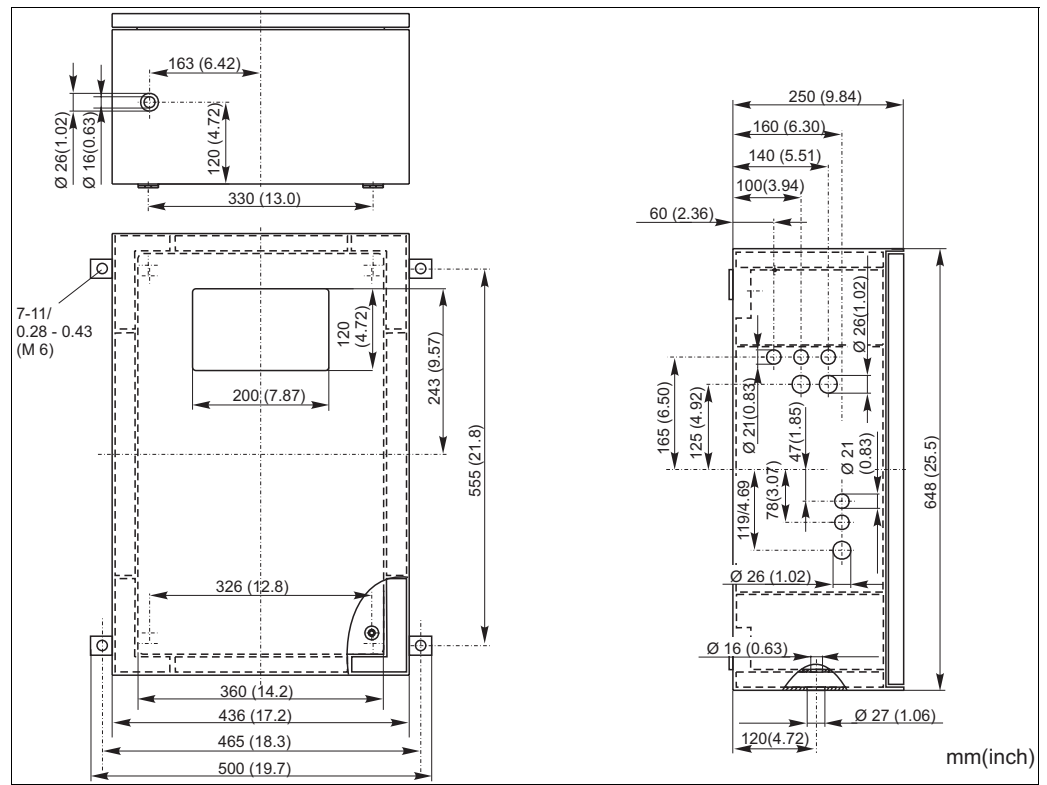

GFR version

a0001354-en


GFR housing, NO-D

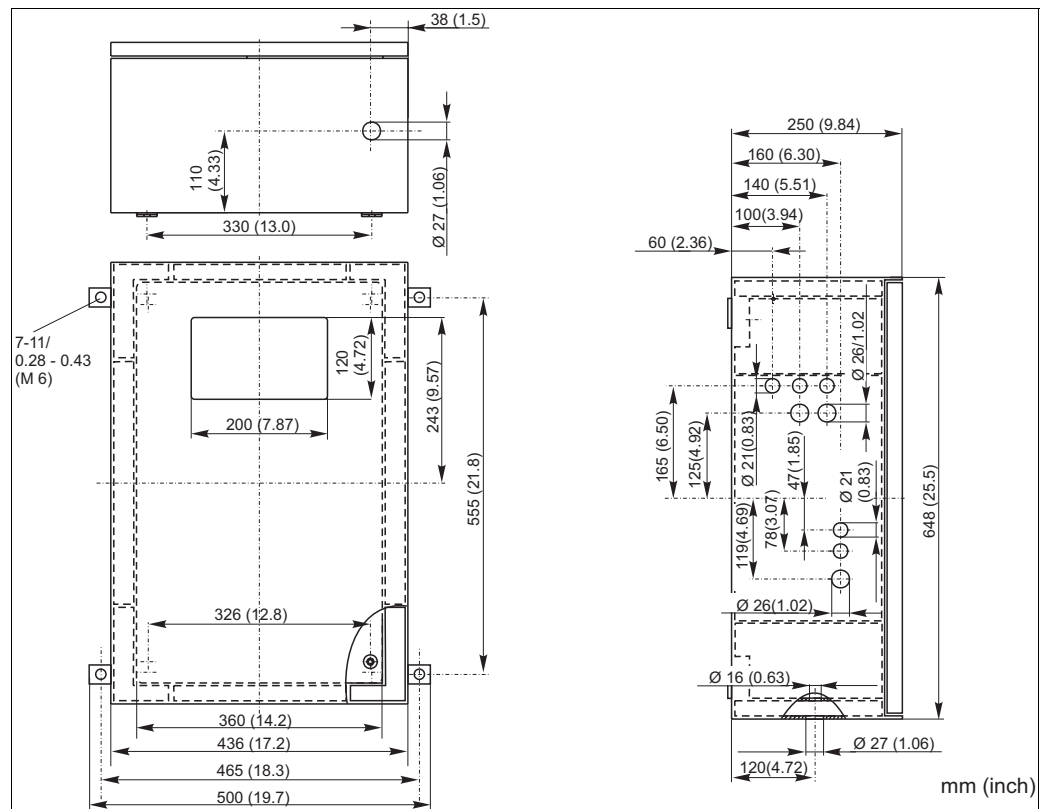

GFR version

a0001355

## Open version, NO-A/B/C/D

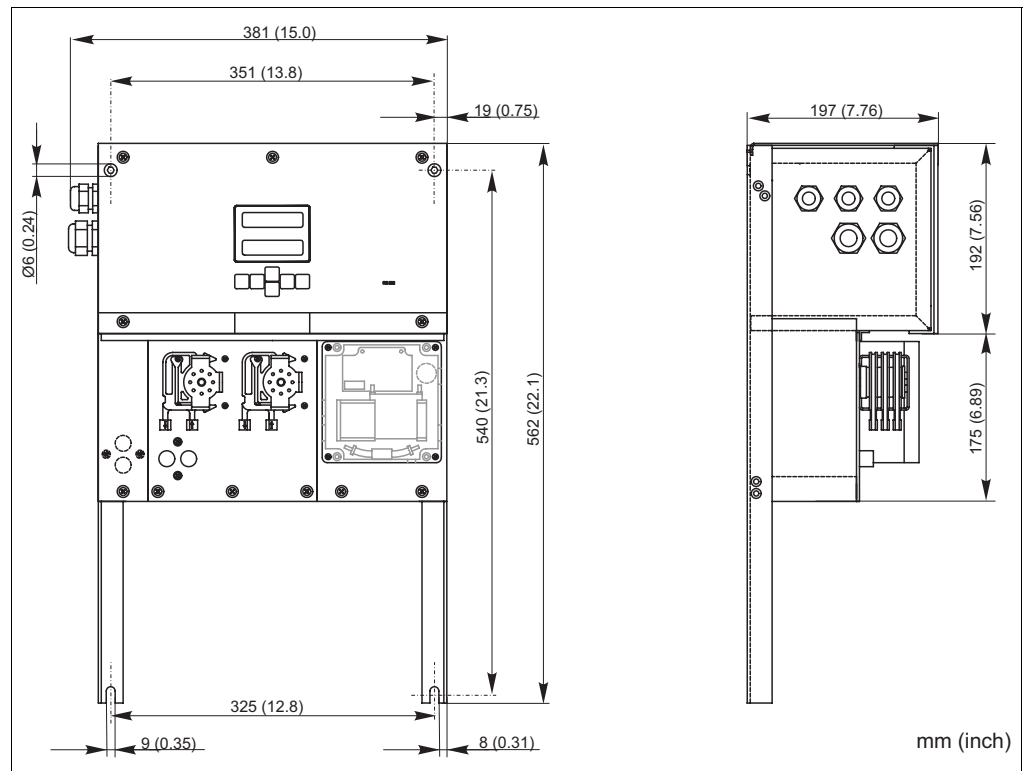

Open version (without housing)

a0001356





**Note!**

With the open version, you need an additional platform for the reagents. Mount this platform max. 35 cm (13.8 inch) below the pumps. The reagent bottles have the following dimensions: 90 x 90 x 215 mm (3.54 x 5.54 x 8.46 inch). The number of bottles varies from 2 to 5 depending on the analyzer version.

For some versions, the outlet pipe must be installed right of the analyzer. See the supplement to the Operating Instructions.

The outlet pipe must be mounted to a wall so that the sample outlet hoses from the photometer have a gradient of 5 to 10 %. If necessary, extend the hoses.

### Collecting vessel

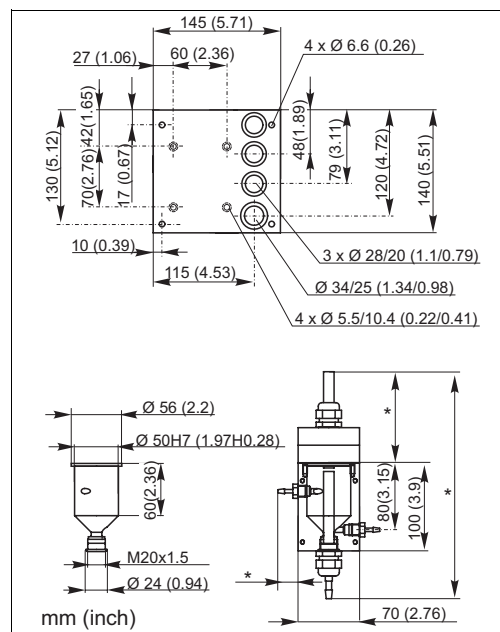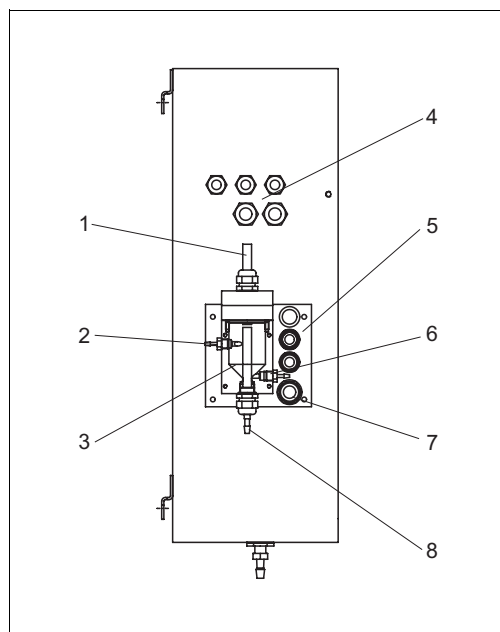

Collecting vessel at analyzer (optional)

- 1 Ventilation
- 2 Sample inlet from sampling
- 3 Collecting vessel
- 4 Electrical connections
- 5 Analyzer sample inlet

Collecting vessel dimensions

- \* variable, freely adjustable dimensions
- 6 Sampling for analyzer
- 7 Analyzer outlet
- 8 Sample overflow

<b>Weight</b>	GFR housing	approx. 28 kg (62 lbs)
	Stainless steel housing	approx. 33 kg (73 lbs)
	Without housing	approx. 25 kg (55 lbs)

<b>Material</b>	Housing:	Stainless steel 1.4301 (AISI 304) or glass-fibre reinforced carbon(GFR)
	Front windows:	Polycarbonate®
	Endless hose:	C-Flex®, Norprene®
	Pump hose:	Tygon®, Viton®
	Valves:	Tygon®, silicone

### Connecting the sample line

#### One channel version

<i>Collecting vessel</i> (at analyzer, with or without level measurement)	
Connection	hose ID 3.2 mm (0.13 inch)
<i>Customer collecting vessel</i>	
Connection	hose ID 1.6 mm (0.06 inch)
Max. distance from collecting vessel to analyzer	1 m (3.3 ft)
Max. height difference from collecting vessel to analyzer	0.5 m (1.6 ft)

#### Two channel version

- Depending on the ordered version, one or two collecting vessels (with or without level measurement) are included in the scope of delivery.
- Level measurement is only possible for one channel.
- Only one collecting vessel can be mounted at the housing. The second is to be placed nearby the analyzer.

**Sample outlet**

**NO-A/B/C**


- Connection                      Hose ID 6.4 mm (0.25 inch)  
 – Max. length of closed loop: 1 m (3.28 ft)  
 – Open outlet downgrade installed  
 – No combination of several devices to a closed-loop system
- Min. volume per measurement    20 ml (0.68 fl.oz.)

**NO-D**

- Connection                      Hose ID 16 mm (0.63 inch)  
 – Max. length of closed loop: 1 m (3.3 ft)  
 – Open outlet downgrade installed  
 – No combination of several devices to a closed-loop system
- Min. volume per measurement    20 ml (0.68 fl.oz.)

**Human Interface**

**Display and operating elements**

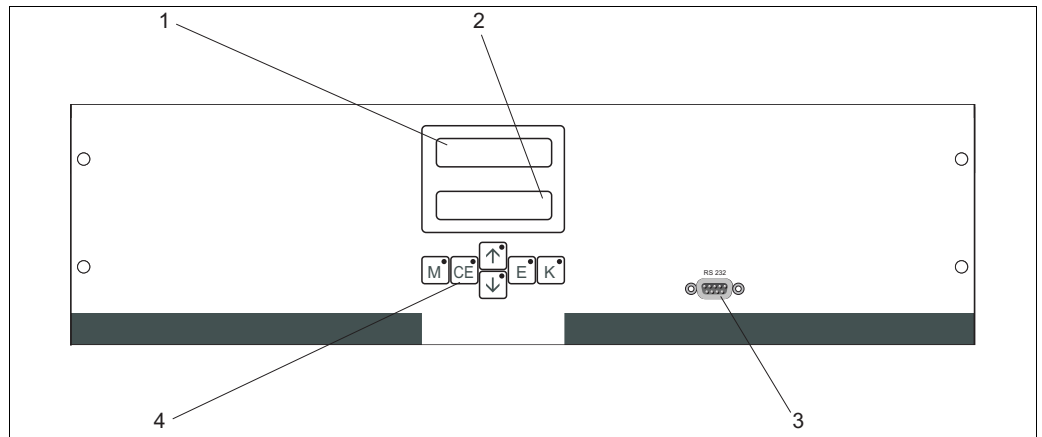

*Display and operating elements*

- 1    LED (measured value)
- 2    LC display (measured value and status)
- 3    Serial interface RS 232
- 4    Operating keys and control LEDs

**Certificates and approvals**

**CE approval**

**Declaration of conformity**

The product meets the legal requirements of the harmonized European standards.  
 The manufacturer confirms compliance with the standards by affixing the **CE** symbol.

**Test reports**

**Quality certificate**

Depending on the order code, you receive a quality certificate.  
 With the certificate the manufacturer confirms compliance with all technical regulations and the successful individual testing of your product.

## Ordering information

### Product structure

Measuring range	
A	10 ... 500 µg/l (ppb) NO <sub>2</sub> -N
B	0.1 ... 1 mg/l (ppm) NO <sub>2</sub> -N
C	0.2 ... 3 mg/l (ppm) NO <sub>2</sub> -N
D	0.01 ... 250 µg/l (ppb) NO <sub>2</sub>
Y	Special version acc. to customer's specification
Sample transfer	
1	From one measuring point (one channel version)
2	From two measuring points (two channel version)
Power supply	
0	230 V AC / 50 Hz
1	115 V AC / 60 Hz
2	115 V AC / 50 Hz
3	230 V AC / 60 Hz
Collecting vessel (for up to 3 analyzers)	
A	Not selected (without collecting vessel)
B	Collecting vessel without level measurement
C	Collecting vessel with level measurement (one-channel version only)
D	Two collecting vessels without level measurement (two-channel version)
Housing	
1	Open design
2	GFR housing
3	Stainless steel (1.4301 / AISI 304) + purge
8	Stainless steel (1.4301 / AISI 304) + without purge
Output	
A	0/4 ... 20 mA, RS 232
B	Profibus DP
Reagents	
1	To order separately
2	One set, inactive
3	Three sets, inactive
CA71NO -	<b>complete order code</b>

### Scope of delivery

#### NO-A/B/C

The scope of delivery comprises:

- an analyzer with mains plug
- a cleaning injector
- a tin of silicone spray
- a Norprene hose, length 2.5 m (8.2 ft), ID 1.6 mm (0.06 inch)
- a C-flex hose, length 2.5 m (8.2 ft), ID 6.4 mm (0.25 inch)
- a C-flex hose, length 2.5 m (8.2 ft), ID 3.2 mm (0.13 inch)
- two hose fittings of each size:
  - 1.6 mm x 1.6 mm (0.06 inch x 0.06 inch)
  - 1.6 mm x 3.2 mm (0.06 inch x 0.13 inch)
  - 6.4 mm x 3.2 mm (0.25 inch x 0.13 inch)
- two T-hose fittings of each size:
  - 1.6 mm x 1.6 mm x 1.6 mm (0.06 inch x 0.06 inch x 0.06 inch)
  - 3.2 mm x 3.2 mm x 3.2 mm (0.13 inch x 0.13 inch x 0.13 inch)
- an interference suppressor for the current output
- 4 edge covers
- a quality certificate
- Operating Instructions (English).

**NO-D**

The scope of delivery comprises:

- an analyzer with mains plug
- a cleaning injector
- a tin of silicone spray
- a Norprene hose, length 2.5 m (8.2 ft), ID 1.6 mm (0.06 inch)
- a Grifflex hose, length 2.0 m (6.6 ft), ID 19 mm (0.75 inch)
- a C-flex hose, length 2.5 m (8.2 ft), ID 3.2 mm (0.13 inch)
- two hose fittings of each size:
  - 1.6 mm x 1.6 mm (0.06 inch x 0.06 inch)
  - 1.6 mm x 3.2 mm (0.06 inch x 0.13 inch)
- two T-hose fittings of each size:
  - 1.6 mm x 1.6 mm x 1.6 mm (0.06 inch x 0.06 inch x 0.06 inch)
  - 3.2 mm x 3.2 mm x 3.2 mm (0.13 inch x 0.13 inch x 0.13 inch)
- an interference suppressor for the current output
- a screwed socket for the outlet pipe
- 4 edge covers
- a quality certificate
- Operating Instructions (English).



Note!

Please, order reagents separately with analyzer version CA71XX-XXXXXX1.

With all other versions, inactive reagents are included in the scope of delivery. You have to mix the reagents before using them. Please, read the instructions attached to the reagents.

## Accessories

### Reagents and standard solutions

- Reagent NO1 active, 1 l (0.26 gal); order no. CAY343-V10AAE
- Reagent NO1 inactive, 1 l (0.26 gal); order no. CAY343-V10AAE
- Cleaning agent R; order no. CAY344-V10AAE
- Standard (stock solution) 250 mg/l (ppm) NO<sub>2</sub> - N; order no. CAY345-V05C25AAE<sup>2)</sup>

### Cleaner for hoses

- Cleaning agent, alkaline, 100 ml (3.4 fl.oz.); order no. CAY746-V01AAE
- Cleaning agent, acidic, 100 ml (3.4 fl.oz.); order no. CAY747-V01AAE

### Collecting vessel

- for sampling from pressurised systems
- results in an unpressurised continuous sample stream
- Collecting vessel without level measurement; order no. 51512088
- Collecting vessel with level measurement (conductive); order no. 51512089

### Maintenance kit

- Maintenance kit CAV 740:
    - 1 set pump hoses yellow/blue
    - 1 set pump hoses black/black
    - 1 set hose connectors per hose set
- order no. CAV 740-1A

### Additional accessories

- Interference suppressor for control, power and signal lines  
order no. 51512800
- Silicon spray  
order no. 51504155
- Valve set, 2 pieces, for two-channel version  
order no. 51512234
- Upgrade kit for upgrading from one-channel to two-channel version  
order no. 51512640

2) The stock solution is highly concentrated due to its tenability. Mix your own standard solutions according to the package insert information.

## Documentation

- Technical Information Stamoclean CAT430, TI 338C/07/en
- Technical Information Stamoclean CAT411, TI 349C/07/en
- Technical Information Stamoclean CAT221, TI 384C/07/en

### International Headquarters

Endress+Hauser  
GmbH+Co. KG  
Instruments International  
Colmarer Str. 6  
79576 Weil am Rhein  
Deutschland

Tel. +49 76 21 9 75 02  
Fax +49 76 21 9 75 34 5  
[www.endress.com](http://www.endress.com)  
[info@ii.endress.com](mailto:info@ii.endress.com)

TI355C/07/en/07.06  
51512290  
Printed in Germany / FM+SGML 6.0 / DT