# Technical Information OUSAF22

Optical sensor combined with the OUA260 flow assembly for the measurement of color concentrations



#### **Application**

**Products** 

The sensor is used to measure color concentrations in the range of the visible electromagnetic spectrum.

- Color scale measurement APHA/Hazen, EBC, ASBC, ASTM, ICUMSA
- Measurement of color concentration
  - Outgoing goods inspection/purity monitoring
  - Color assurance
  - Discoloration control
  - Distillation monitoring

#### Your benefits

- As slightest color changes are detected, production quality is guaranteed
- Measuring range up to 2.5 AU or 50 OD (depending on optical path length)
- Can be configured to measure color concentration at discrete wavelengths in the visible regionregion
- Outstanding filter properties for highest linearity
- Direct concurrence with laboratory values
- Integrated reference detector for the compensation of particles, bubbles and lamp aging
- Incandescent lamp for long service life and stable measured values
- Cost-effective, time-efficient verification (liquid-free)
- FM- and ATEX-approved lamps for applications in the hazardous area
- Deployable and durable in numerous applications:
   Variety of materials and process connections
- Hygienic design for high degree of product safety: certified materials and CIP/SIPresistance
- Can be adapted to process requirements:
   Optional air purge ports to prevent the formation of condensate on the optical windows

# Function and system design

#### Measuring principle

#### Light absorption

The measuring principle is based on the Lambert-Beer law.

There is a linear dependency between the absorption of light and the concentration of the absorbing substance:

 $A = -logA_m = \epsilon \cdot c \cdot OPL$ 

 $A \dots absorption, A_m \dots absorption measured by detector$ 

 $\varepsilon$  ... Extinction coefficient

c ... Concentration


OPL ... Optical path length

A light source emits radiation through the medium and the incident radiation is measured on the detector side.

A beam splitter splits the light into two beams. One beam is used for measuring while the other acts as a reference to compensate for particles, bubbles and lamp aging.

Once the light has passed through a filter for wavelength selection, the intensity of the light is determined by a photodiode and converted to a photocurrent.

The subsequent conversion to absorbance units (AU, OD) is performed in the associated transmitter.

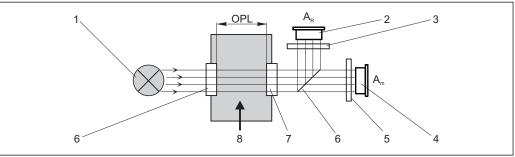

A002940


#### ■ 1 Absorption measurement (double wavelength) with reference

- 1 Light source
- 2 Reference detector
- 3 Reference filter
- 4 Measuring detector
- 5 Measurement filter
- 6 Beam splitter
- 7 Optical windows
- 8 Medium flow

## Measuring system

An optical measuring system comprises:

- Sensor (photometer) OUSAF22
- Liquiline CM44P transmitter
- Cable set CUK80
- Assembly to suit the sensor, e.g. OUA260

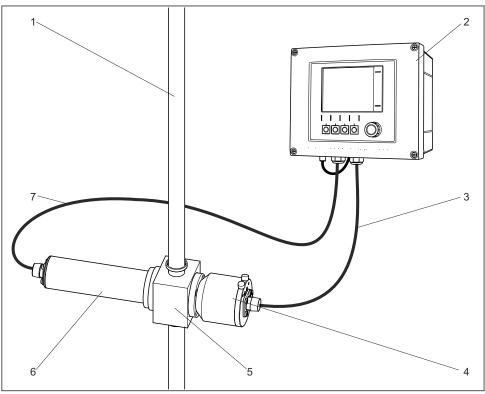

 $\blacksquare$  2 Example of a measuring system with a photometer sensor

1 pipe

2 Transmitter CM44P

3 Cable set CUK80

4 Sensor: detector

5 Flow assembly OUA260

6 Sensor: light source (lamp)

Cable set CUK80


# **Input**

Measured variable	process absorption			
Measuring range	<ul> <li>0 to 2.5 AU</li> <li>Max. 50 OD (depending on the optical path length)</li> </ul>			
Wavelength	Measurement 400 nm, 420 nm, 430 nm, 490 nm, 520 nm			
	Reference 720 nm			

# **Power supply**

#### **Electrical connection**

The sensor is connected to the transmitter using the pre-terminated or labeled cable set CUK80 (for connection to CM44P) or OUK20 (for connection to CVM40). The terminals and labeling may vary depending on the transmitter in use. The cable set must be ordered separately.



₩ 3 OUSAF22 connecting cable

Light source (lamp) power supply

Signals of measurement and reference detector

CM44P terminal	CVM40 terminal	Cable color	Assignment	
P+	V1.1	YE (thick) Lamp voltage +		
S+	V1.3	YE (thin) Detection of lamp voltage +		
P-	V1.2	BK (thick)	Lamp voltage -	
S-	V1.4	BK (thin)	Detection of lamp voltage -	
A (1)	S1.1	RD	Measuring detector sensor +	
C(1)	S1.2	BK	Measuring detector sensor -	
SH (1)	S1.S	GY	Shield	
A (2)	S2.1	WH	Sensor reference +	
C(2)	S2.2	GN	Sensor reference -	
SH (2)	S2.S	GY	Shield	

#### Cable length

Maximum 100 m (330 ft)

#### Lamp voltage

Sensor version	Lamp type	Lamp voltage [V]
OUSAF22-xxxxx	Dual beam, high-luminescence or gas-filled high- performance lamp	4.9 ± 0.1

#### Versions for use in hazardous areas




Safety instructions for electrical apparatus in explosion-hazardous areas, XA01403C

#### Connecting the detector using a safety barrier

The photometer sensors use silicon photovoltaic cells as detectors which are operated in the current mode. The detectors are intrinsically safe and can be deployed in Zone 1 environments.


The safe area is separated from the hazardous area by two safety barriers MTL7760AC.

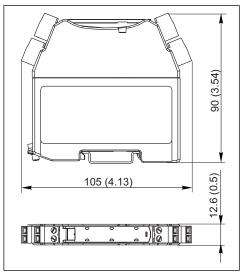

Safety barrier, dimensions in mm (inch)

The safety barrier may only have a very low leak current since the optical signals from the sensor can be in the nanoampere range. Therefore, the sensor cable shield is connected to the ground terminal of the barrier.

On delivery, the CUK80 detector cable is permanently wired to the safety barriers. All you have to do is simply connect the individual cable ends to the detector and transmitter.

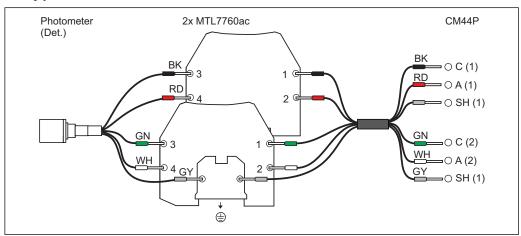


#### Connecting the hazardous area lamp using a junction box

The hazardous area lamp (EXP-1) must be connected to the transmitter using a certified junction box.

i

For versions with FM approval, the junction box is included in the delivery and already preterminated on the lamp side. You simply have to connect the cable of the transmitter (CUK80) to the terminals of the junction box.


For versions with ATEX approval, the junction box is not included in the delivery and it and the cable glands required must be provided by the customer at the place of installation. You must connect the cables entirely on your own (CUK80 of transmitter and lamp cable of photometer sensor).

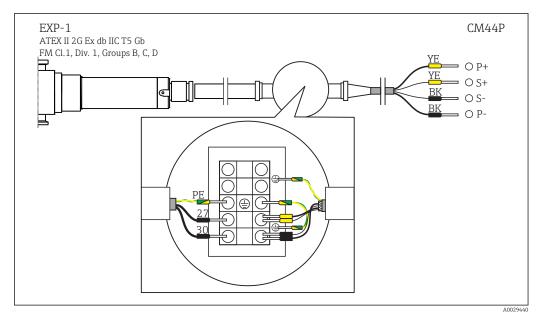

**₽** 5 Connecting the hazardous area lamp to CM44P using a junction box

# Installation

#### **Installation instructions**

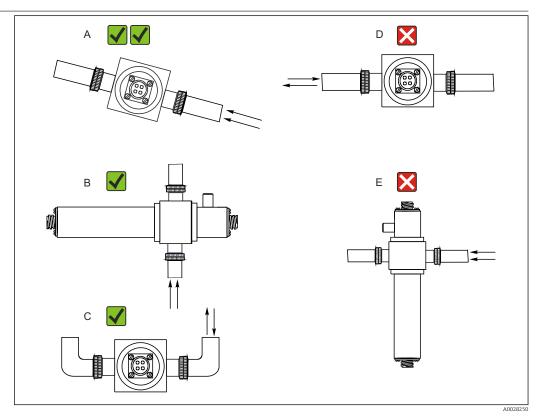

Mounting angles. The arrows indicate the direction of medium flow in the pipe.

- Α Preferred mounting angle
- В
- Optimum mounting angle Acceptable mounting angle С
- D Mounting angle to be avoided
- Е Forbidden mounting angle

## **Environment**


Ambient temperature range	0 to 55 °C (32 to 130 °F)
Storage temperature	-10 to +70 °C (+10 to +160 °F)
Humidity	5 to 95 %
Degree of protection	IP 65 (NEMA 4) for all optical parts

## **Process**

Process temperature	0 to 90 °C (32 to 194 °F) continuous Max. 130 °C (266 °F) for 2 hours
Process pressure	Max. 100 bar (1450 psi) absolute, depending on the material, pipe size and process connection of the flow assembly

# Mechanical construction

#### Design, dimensions

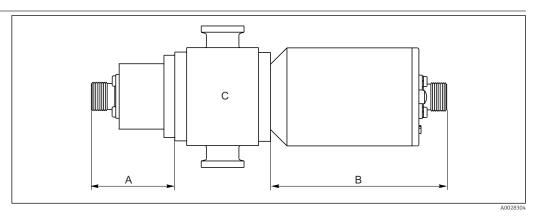

- 7 Sensor module
- A Dimension of lamp, depends on lamp type, see table
- B Dimension of detector, see table
- Assembly, see Technical Information for assembly

Lamp type	Dimension A in mm (inch)	
High-luminescence lamp and standard incandescent lamp	33.78 (1.33)	
Gas-filled lamp	33.78 (1.33)	
Detector type	Dimension B in mm (inch)	
Standard version with test filter	101.6 (4.0)	

The total length of the sensor module is derived from the lengths of the lamp, the detector and the assembly.

The dimensions of the OUA260 assembly are provided in Technical Information, TI00418C.

▶ When connecting the sensor cable, make sure you maintain an additional distance of 5 cm (2") on both the lamp side and the detector side of the sensor.

Weight	1.225 kg (2.7 lbs.), without flow	v assembly		
	Sensor housing	Stainless steel 316L		
	OUA260 assembly	Stainless steel 316, 316L or Kynar or customer-specific material Depends on version		
	Cable connection ends	Nickel-plated brass		
Light source	High-luminescence lamp (wavel	length filter 450 nm and above)		
	Gas-filled high-performance lan	np (wavelength filter below 450 nm)		
	Lamp operating life: typically 10 000 h			
Detector	UV silicon detectors, hermetically sealed			
Filter	Multilayer narrow-band interference filter			
C€mark	Declaration of Conformity			
C€mark	<b>Declaration of Conformity</b> The product meets the requirements of the harmonized European standards. As such, it complies with the legal specifications of the EC directives. The manufacturer confirms successful testing of the			
	product by affixing to it the $\mathbf{C}\mathbf{\epsilon}$ n	nark.		
Ex approvals	<ul> <li>ATEX II 2G Ex db IIC T5 Gb</li> <li>FM Cl.1, Div. 1, Groups B, C, D</li> </ul>			
	- 11vi Gi.1, Div. 1, Gloups B, G, E			
FDA conformity	of FDA 21 CFR 177.2600. The p	with medium, such as rubber and plastic parts, meet the requirements plastic and elastomer parts of the sensor in contact with medium ivity tests according to USP <87> and <88> Class VI.		
FDA conformity	of FDA 21 CFR 177.2600. The p	plastic and elastomer parts of the sensor in contact with medium ivity tests according to USP <87> and <88> Class VI.		
FDA conformity  Product page	of FDA 21 CFR 177.2600. The phave passed the biological react	ivity tests according to USP <87> and <88> Class VI.		

	3		
Product page	www.endress.com/ousaf22		
Product Configurator	On the product page there is a "Configuration" button to the right of the product image.  1. Click this button.		
	<ul> <li>The Configurator opens in a separate window.</li> <li>2. Select all the options to configure the device in line with your requirements.</li> <li>In this way, you receive a valid and complete order code for the device.</li> </ul>		
	3. Export the order code as a PDF or Excel file. To do so, click the appropriate button on the right above the selection window.		
	For many products you also have the option of downloading CAD or 2D drawings of the selected product version. To do so, click the "CAD" tab and select the desired file type using dropdown lists.		
Scope of delivery	The scope of delivery consists of the following depending on the version ordered:  sensor  Detector and lamp module without flow assembly or  Detector and lamp module mounted on OUA260 flow assembly  Operating Instructions		

If the sensor is ordered with a transmitter, the complete measuring system is factory-calibrated and shipped as one package.

If you have any questions, please contact your supplier or your local sales center.

## Accessories



The following are the most important accessories available at the time this documentation was issued. For accessories not listed here, please contact your service or sales office.

## Flow assembly

#### **OUA260**

- Flow assembly for hygienic sensors
- For sensor installation in pipes
- Materials: stainless steel 316, 316L or Kynar (other materials available on request)
- Wide variety of process connections and path lengths available
- Product Configurator on the product page: www.endress.com/oua260



Technical Information TI00418C

#### Cable

### CUK80 cable set

- Pre-terminated and labeled cables for connecting analog photometer sensors
- Product Configurator on the product page: www.endress.com/cuk80



www.addresses.endress.com

