

Installation Instructions

Replacing the transmitter

Promag 10, 23, 50, 53, 55

EN Installation Instructions: EA00082D →  3

DE Einbauanleitung: EA00082D →  21

Replacing the transmitter

Promag 10, 23, 50, 53, 55

Table of contents

1	Overview of replacement transmitters	4
2	Designated use	5
3	Personnel authorized to carry out repairs	5
4	Safety instructions	6
5	Symbols used	7
6	Tools list	8
7	Promag 10 compact version and remote version	9
8	Promag 23 compact version	11
9	Promag 50, 53, 55 compact version and remote version	13

1 Overview of replacement transmitters

The Installation Instructions apply to the following replacement transmitters:

Order number	Original replacement transmitter
10XXX-	Promag 10 transmitter, aluminum
23XXX-	Promag 23 transmitter, aluminum
50XXX-	Promag 50 transmitter, aluminum
50XXX-	Promag 50 transmitter, stainless steel
50XXX-	Promag 50 transmitter, wall-mount housing
53XXX-	Promag 53 transmitter, aluminum
53XXX-	Promag 53 transmitter, stainless steel
53XXX-	Promag 53 transmitter, wall-mount housing
55XXX-	Promag 55 transmitter, aluminum
55XXX-	Promag 55 transmitter, stainless steel
55XXX-	Promag 55 transmitter, wall-mount housing


- 
- The order number of the spare parts set (on the product label on the package) can differ from the production number (on the label directly on the spare part)!
 - You can find the order number of the relevant spare parts set by entering the production number of the spare part in the spare parts search tool.
 - We recommend that you keep the Installation Instructions and packaging together at all times.

2 Designated use

The spare part sets and Installation Instructions are used to replace a faulty unit with a functioning unit of the same type. Only original parts from Endress+Hauser may be used. Only spare parts kits designed by Endress+Hauser for the measuring device can be used at any time.

Inspection is performed using the W@M Device Viewer. The procedure involved is described as follows.

i A spare parts overview is located in the interior of some measuring devices. If the spare parts kit is specified on this list, no inspection is required.

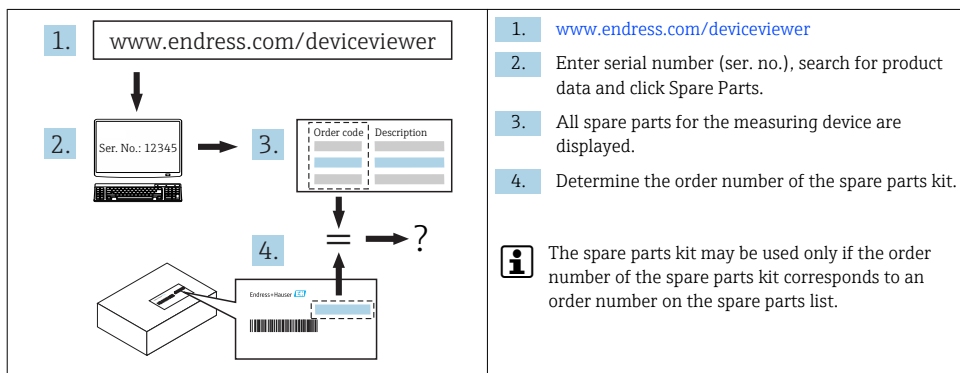

3 Personnel authorized to carry out repairs

Authorization to carry out repairs depends on the measuring device's approval type. The table below shows the authorized group of people in each case.


i Whoever carries out the repairs has full responsibility to ensure that work is carried out safely and to the required quality standard. He/she must also guarantee the safety of the device following repair.

Measuring device approval	Personnel authorized to perform repairs ¹⁾
With approval (e.g. IECEx)	2, 3
Without approval	2, 3
For custody transfer	4

- 1) 1 = Qualified specialist on customer side, 2 = Service technician authorized by Endress+Hauser, 3 = Endress+Hauser (return measuring device to manufacturer)
 4 = Check with local approval center if installation/modification must be performed under supervision.

4 Safety instructions

- Check whether the spare part matches the labeling on the measuring device as described on the cover page.
- The spare part sets and Installation Instructions are used to replace a faulty unit with a functioning unit of the same type.
Only use original parts from Endress+Hauser.
- Comply with national regulations governing mounting, electrical installation, commissioning, maintenance and repair procedures.
- The following requirements must be met with regard to specialized technical staff for the mounting, electrical installation, commissioning, maintenance and repair of the measuring devices:
 - Specialized technical staff must be trained in instrument safety.
 - They must be familiar with the individual operating conditions of the devices.
 - In the case of Ex-certified measuring devices, they must also be trained in explosion protection.
- The measuring device is energized! Risk of fatal injury from electric shock. Open the measuring device only when the device is deenergized.
- When using Ex-certified measuring devices: Open device only when in a deenergized state (allow 10 minutes to elapse after switching off the power supply) or in environments which do not have a potentially explosive atmosphere.
- In the case of measuring devices in safety-related applications in accordance with IEC 61508 or IEC 61511: Commission in accordance with Operating Instructions after repair. Document the repair procedure.
- Before removing the device: set the process to a safe state and purge the pipe of dangerous process substances.
- Hot surfaces! Risk of injury! Before commencing work: Allow the system and measuring device to cool down to a touchable temperature.
- In the case of devices in custody transfer, the custody transfer status no longer applies once the seal has been removed.
- The Operating Instructions for the device must be followed.
- Risk of damaging the electronic components! Ensure you have a working environment protected from electrostatic discharge.
- After removal of the electronics compartment cover: risk of electrical shock due to missing touch protection!
Turn instrument off before removing internal covers.
- Modifications to the measuring device are not permitted.
- Only open housing for a brief period. Avoid the penetration of foreign bodies, moisture or contaminants.
- Printed circuit boards for devices in categories II1G, II1D, II 2G, II 2D, Zone 1 and Class I, Div. 1, Gp. A, B, C, D have a recess / printed circuit board codification. Unauthorized breaking of this codification is not permitted as explosion protection will then no longer apply.

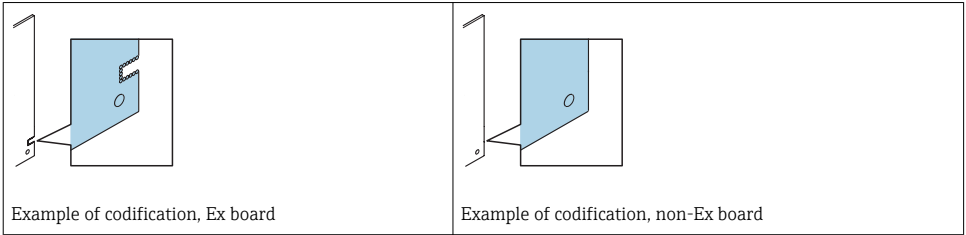

- **Caution!** When replacing the amplifier board, I/O board or submodules, ensure compatibility with the installed software. The procedure for reading out the software version number is described in the Operating Instructions (device functions). If the printed circuit board's software is not compatible, an update must be performed using an operating software tool (e.g. Field Care). Notify the plant operator in the event of functional changes.
- Replace defect seals only with original seals from Endress+Hauser.
- If threads are damaged or defective, the measuring device must be repaired.
- Threads (e.g. of the electronics compartment cover and connection compartment cover) must be lubricated if an abrasion-proof dry lubricant is not available. Use acid-free, non-hardening lubricant.
- If spacing is reduced or the dielectric strength of the measuring device cannot be guaranteed during repair work, perform a test on completion of the work (e.g. high-voltage test in accordance with the manufacturer's instructions).
- Service plug:
 - Do not connect in explosive atmospheres.
 - Only connect to Endress+Hauser service devices.
- Observe the instructions for transporting and returning the device outlined in the Operating Instructions.



If you have any questions, please contact your [Endress+Hauser service organization](#).

5 Symbols used

5.1 Safety symbols

DANGER

This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury.

WARNING

This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.

CAUTION

This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or medium injury.

NOTICE

This symbol contains information on procedures and other facts which do not result in personal injury.

5.2 Symbols for certain types of information

Symbol	Meaning
	Permitted Procedures, processes or actions that are permitted.
	Forbidden Procedures, processes or actions that are forbidden.
	Tip Indicates additional information.
	Series of steps

6 Tools list

 3 mm	 T20	 PH2	 0.5 x 3.5 mm	 8 mm, 10 mm
Pin/tool Ø ≤ 2 mm (0.08 inch)	Acid-free, non- hardening lubricant	Have sealing rings available		

7 Promag 10 compact version and remote version

7.1 Replacing the transmitter


WARNING

The measuring device is energized!


Risk of fatal injury from electric shock.

- Open the measuring device only when the device is de-energized.


 Remove the housing seal. When installing, use a new housing seal.

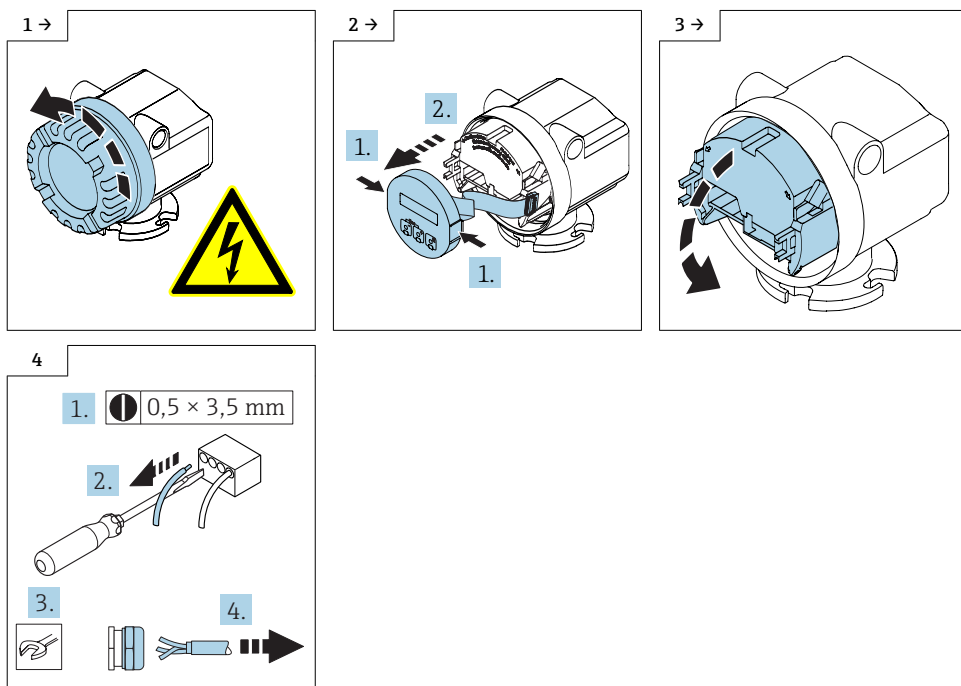

i Special screw! Do not loosen the screw completely or replace it with another one. Only use original parts from Endress+Hauser.

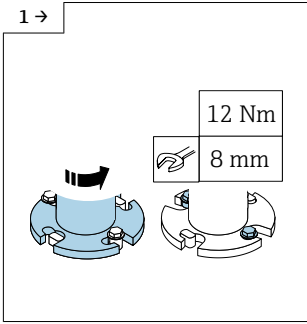

► Turn neck component and release screws.


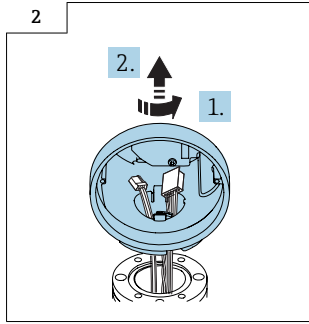


► Turn the transmitter and lift it off.

7.1.1 Reassembling the transmitter housing

Reassembly is carried out in reverse order. Note the following:

i When installing, use new housing seals!

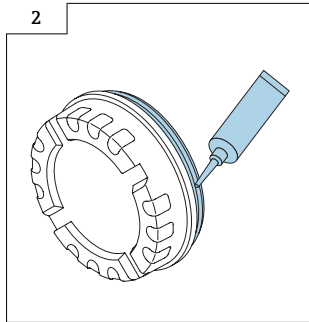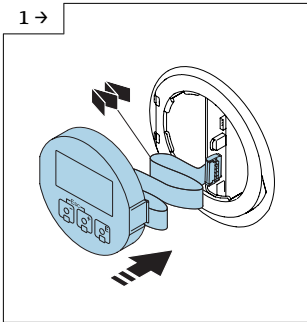

► Acid-free, non-hardening lubricant

i For detailed information on the electrical connection, see the "Electrical connection" section of the Operating Instructions for the device.

i For detailed information on commissioning, see the "Commissioning" section of the Operating Instructions for the device.

8 Promag 23 compact version

8.1 Replacing the transmitter

⚠ WARNING


The measuring device is energized!

Risk of fatal injury from electric shock.


- Open the measuring device only when the device is de-energized.



Remove the housing seal. When installing, use a new housing seal.

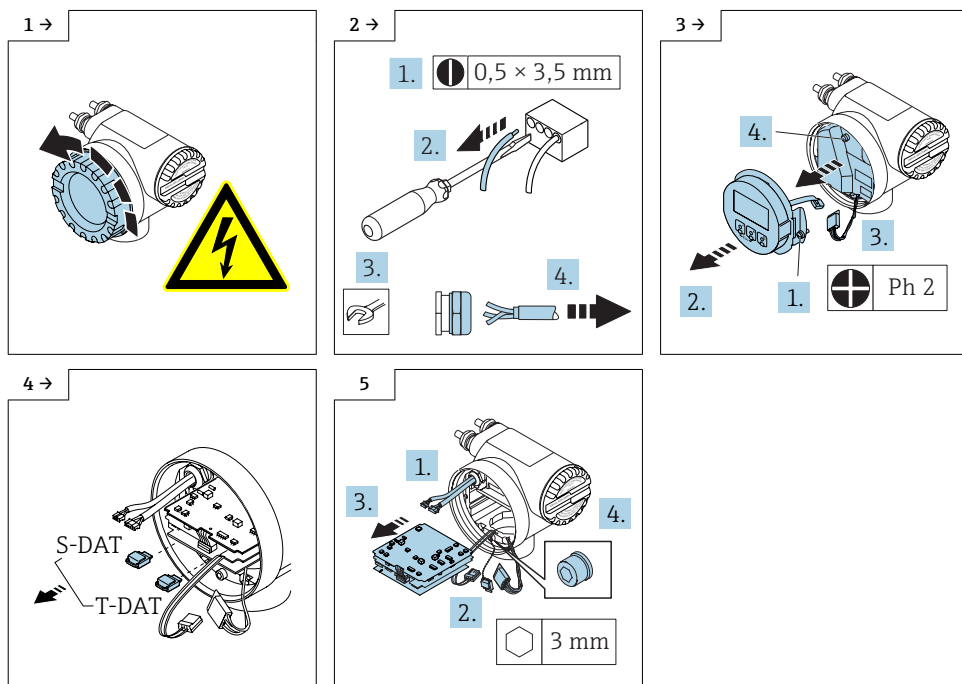

i Special screw! Do not loosen the screw completely or replace it with another one. Only use original parts from Endress+Hauser.


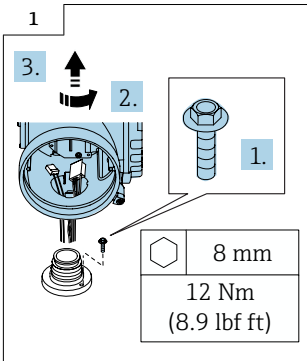


- Release screws, turn the transmitter and lift it off.

8.1.1 Reassembling the transmitter housing

Reassembly is carried out in reverse order. Note the following:

i When installing, use new housing seals!

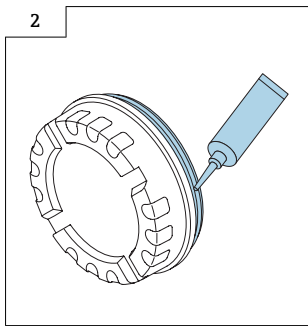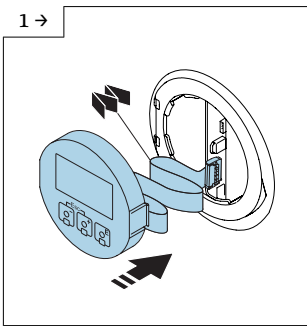

- Acid-free, non-hardening lubricant

i For detailed information on the electrical connection, see the "Electrical connection" section of the Operating Instructions for the device.

i For detailed information on commissioning, see the "Commissioning" section of the Operating Instructions for the device.

9 Promag 50, 53, 55 compact version and remote version

9.1 Removing electronics module from aluminum, stainless steel transmitter


⚠ WARNING

The measuring device is energized!


Risk of fatal injury from electric shock.

- Open the measuring device only when the device is de-energized.




i Remove the housing seal. When installing, use a new housing seal.



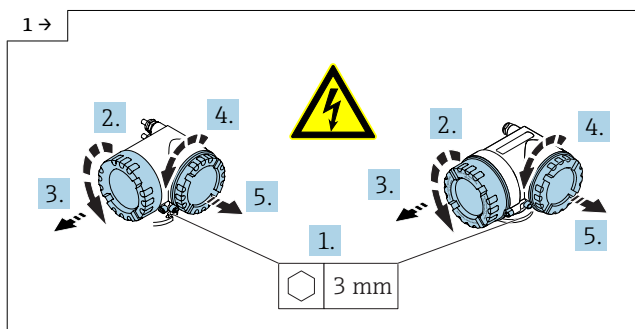


- Open non-Ex version and Ex version of aluminum transmitter

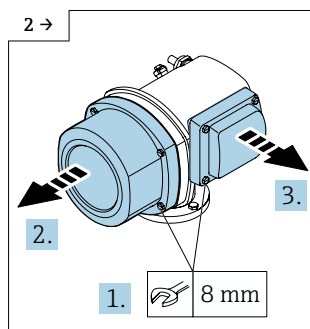

- Open stainless steel transmitter

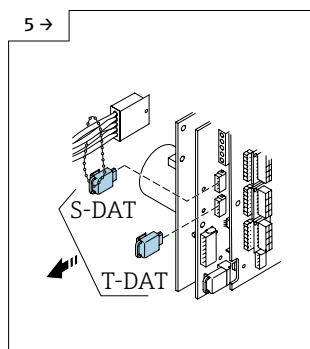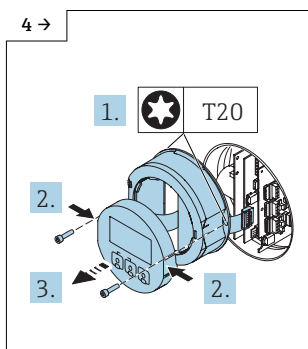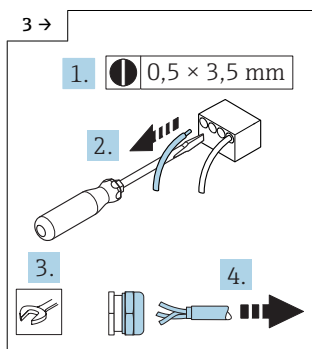

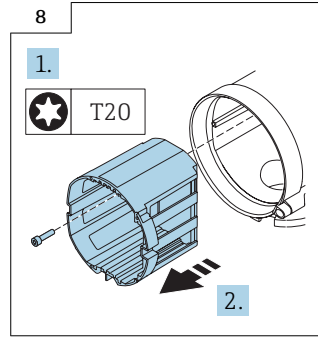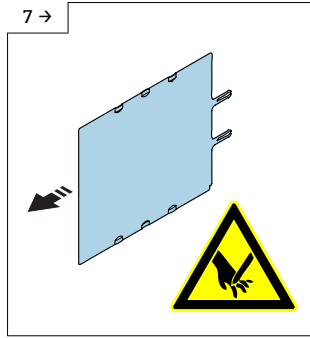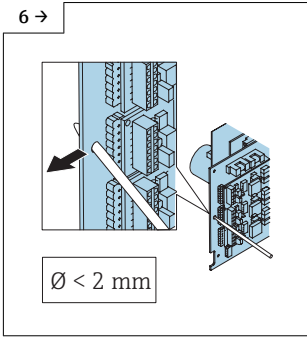


- In Category II2GD and Div.1 devices for use in hazardous areas, shielding plates are located between the individual electronics boards. Remove these and insert them again when installing.


9.2 Replacing non-Ex version of aluminum transmitter

Proceed as described in Section 9.1 → 13 and as illustrated in the pictures below.

- Special screw! Do not loosen the screw completely or replace it with another one. Only use original parts from Endress+Hauser.

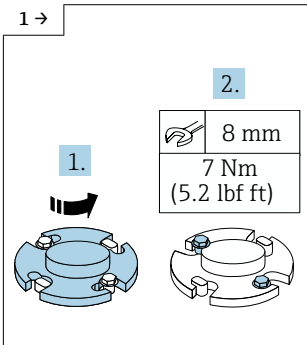

- Turn neck component and release screws.

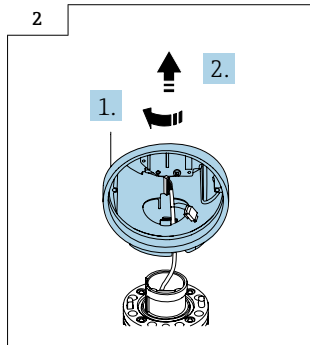


- Turn the transmitter and lift it off.

9.2.1 Assembling non-Ex version of aluminum transmitter

Reassembly is carried out in reverse order. Note the following:

 When installing, use new housing seals!

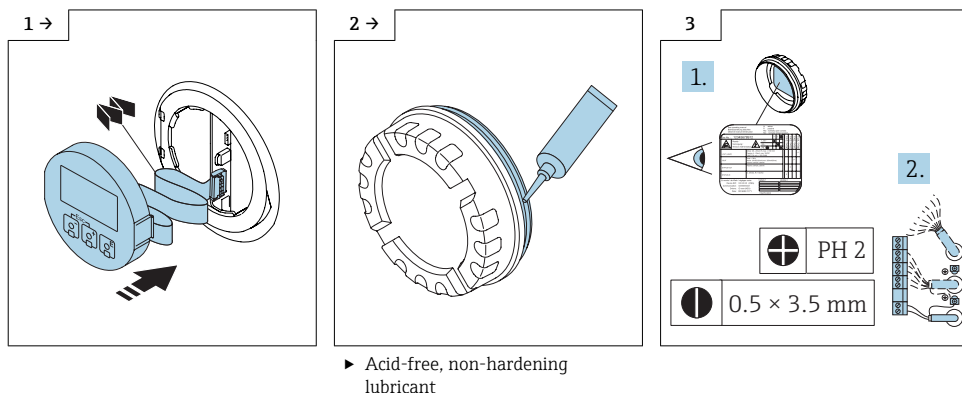


 For detailed information on the electrical connection, see the "Electrical connection" section of the Operating Instructions for the device.

 For detailed information on commissioning, see the "Commissioning" section of the Operating Instructions for the device.

9.3 Replacing Ex version of aluminum transmitter



Proceed as described in Section 9.1 →  13 and as illustrated in the pictures below.

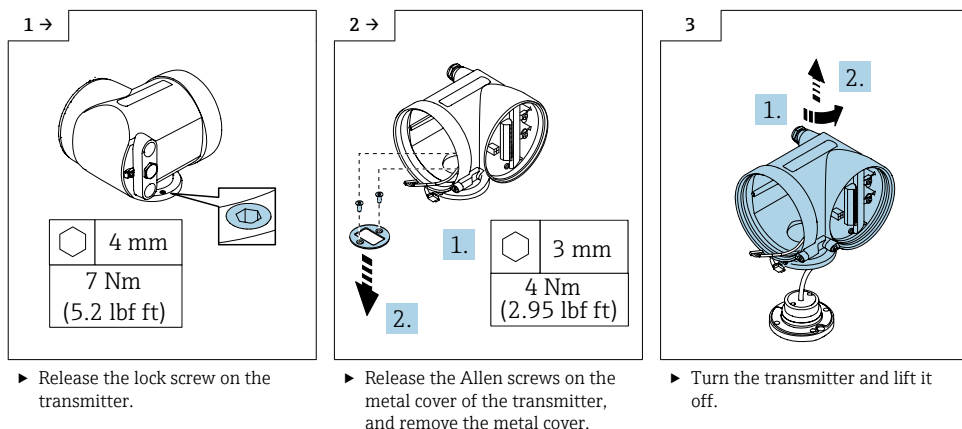


9.3.1 Assembling Ex version of aluminum transmitter

Reassembly is carried out in reverse order. Note the following:


 When installing, use new housing seals!

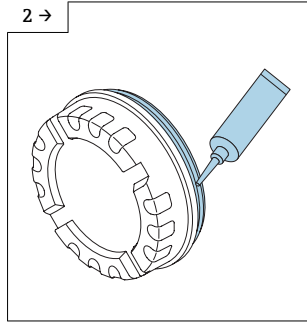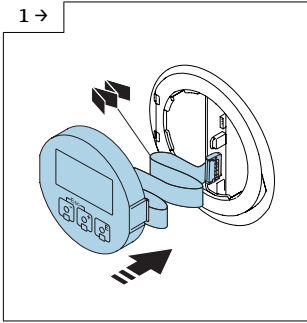

► Acid-free, non-hardening lubricant

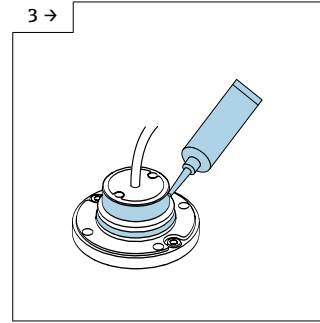

► Acid-free, non-hardening lubricant

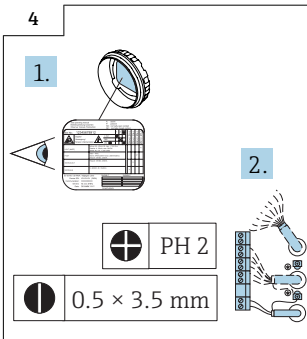


 For detailed information on the electrical connection, see the "Electrical connection" section of the Operating Instructions for the device.

 For detailed information on commissioning, see the "Commissioning" section of the Operating Instructions for the device.

9.4 Replacing the stainless steel transmitter

Proceed as described in Section 9.1 →  13 and as illustrated in the pictures below.

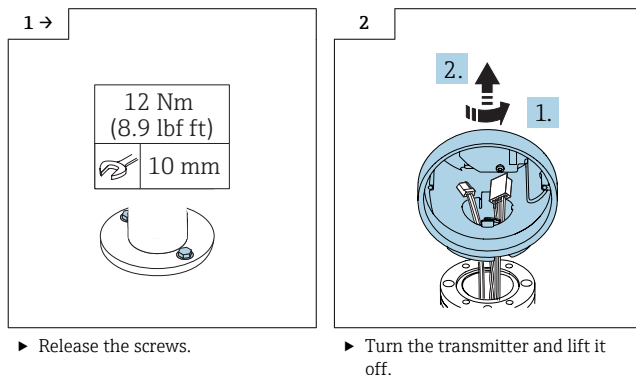


9.4.1 Assembling the stainless steel transmitter

Reassembly is carried out in reverse order. Note the following:



When installing, use new housing seals!

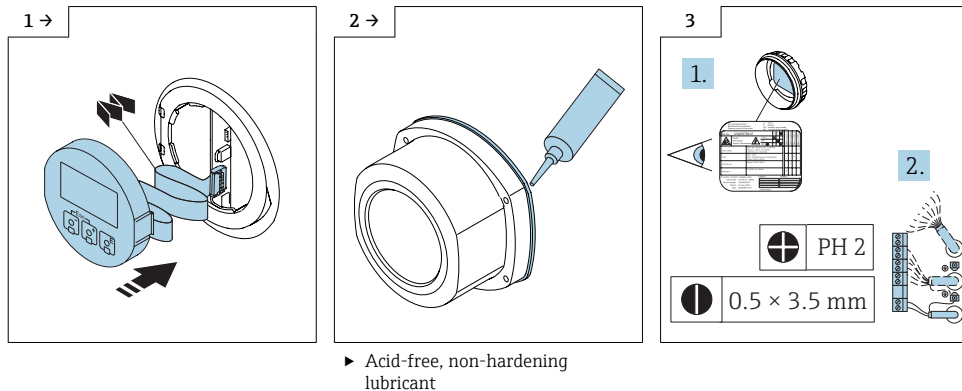

For detailed information on the electrical connection, see the "Electrical connection" section of the Operating Instructions for the device.



For detailed information on commissioning, see the "Commissioning" section of the Operating Instructions for the device.

9.5 Replacing the transmitter wall-mount housing


⚠ WARNING

The measuring device is energized!

Risk of fatal injury from electric shock.

► Open the measuring device only when the device is de-energized.


i Remove the housing seal. When installing, use a new housing seal.

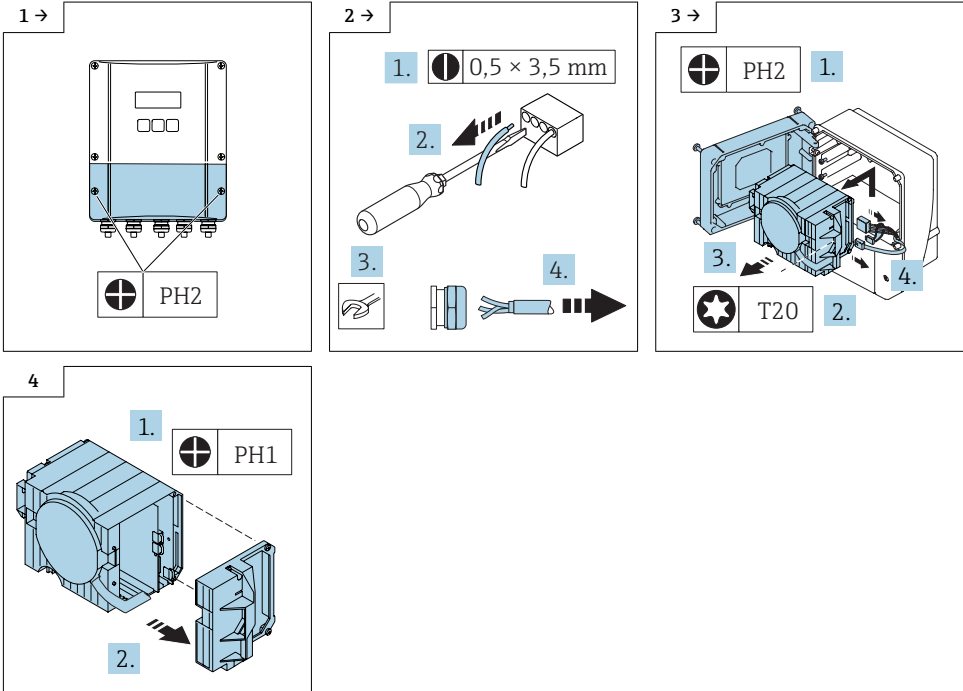

9.5.1 Assembling the transmitter wall-mount housing

Reassembly is carried out in reverse order. Note the following:

 When installing, use new housing seals!

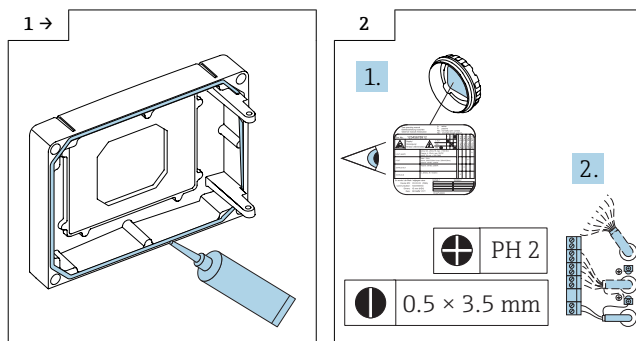

► Acid-free, non-hardening lubricant

 For detailed information on the electrical connection, see the "Electrical connection" section of the Operating Instructions for the device.

 For detailed information on commissioning, see the "Commissioning" section of the Operating Instructions for the device.

Austausch Messumformer

Promag 10, 23, 50, 53, 55

Inhaltsverzeichnis

1	Übersicht Ersatzmessumformer	22
2	Bestimmungsgemäße Verwendung	23
3	Reparaturberechtigte Personen	23
4	Sicherheitshinweise	24
5	Verwendete Symbole	25
6	Werkzeugliste	26
7	Promag 10 Kompaktausführung und Getrenntausführung	27
8	Promag 23 Kompaktausführung	29
9	Promag 50, 53, 55 Kompaktausführung und Getrenntausführung	31

1 Übersicht Ersatzmessumformer

Die Einbauanleitung ist für folgende Ersatzmessumformer gültig:

Bestellnummer	Original Ersatzmessumformer
10XXX-	Messumformer Alu Promag 10
23XXX-	Messumformer Alu Promag 23
50XXX-	Messumformer Alu Promag 50
50XXX-	Messumformer Edelstahl Promag 50
50XXX-	Messumformer Wandgehäuse Promag 50
53XXX-	Messumformer Alu Promag 53
53XXX-	Messumformer Edelstahl Promag 53
53XXX-	Messumformer Wandgehäuse Promag 53
55XXX-	Messumformer Alu Promag 55
55XXX-	Messumformer Edelstahl Promag 55
55XXX-	Messumformer Wandgehäuse Promag 55

- Die Bestellnummer des Ersatzteilsets (auf dem Produktaufkleber der Verpackung) kann sich von der Produktionsnummer (auf dem Aufkleber direkt auf dem Ersatzteil) unterscheiden!
- Durch Eingabe der Produktionsnummer des Ersatzteiles im Ersatzteilfindetool kann die Bestellnummer des entsprechenden Ersatzteilsets ermittelt werden.
- Wir empfehlen Einbauanleitung und Verpackung immer zusammen aufzubewahren.

2 Bestimmungsgemäße Verwendung

Ersatzteilset und Einbauanleitung dienen dazu, eine defekte Einheit gegen eine funktionierende Einheit des gleichen Typs zu ersetzen. Es dürfen nur Originalteile von Endress+Hauser verwendet werden. Grundsätzlich dürfen nur Ersatzteilsets verwendet werden, die von Endress+Hauser für das Messgerät vorgesehen sind.

Die Überprüfung ist via W@M Device Viewer durchzuführen, die Vorgehensweise dazu ist nachfolgend beschrieben.

i Bei einigen Messgeräten befindet sich im Inneren des Gerätes eine Ersatzteilübersicht. Ist das Ersatzteilset dort aufgelistet, entfällt die Überprüfung.

1. www.endress.com/deviceviewer

↓

2. 

→

3. 

↓

4. 

↑

?

1. www.endress.com/deviceviewer

2. Seriennummer (Ser. No.) eingeben, Produktdaten suchen und auf Ersatzteile klicken.

3. Anzeige aller Ersatzteile zum Messgerät.

4. Die Bestellnummer des Ersatzteilsets ermitteln.

i Nur wenn die Bestellnummer des Ersatzteilsets mit einer Bestellnummer in der Ersatzteilliste übereinstimmt, darf das Ersatzteilset verwendet werden.

3 Reparaturberechtigte Personen

Die Berechtigung zur Durchführung einer Reparatur ist von der Zulassung des Messgeräts abhängig. Die Tabelle zeigt den jeweils berechtigten Personenkreis.

i Die Person, die eine Reparatur vornimmt, übernimmt die Verantwortung für die Sicherheit während der Arbeiten, die Qualität der Ausführung und die Sicherheit des Geräts nach der Reparatur.

Zulassung des Messgeräts	Reparaturberechtigter Personenkreis ¹⁾
Mit Zulassung (z.B. IECEx)	2, 3
Ohne Zulassung	2, 3
Bei eichfähigem Verkehr	4


1) 1 = Ausgebildete Fachkraft des Kunden, 2 = Von Endress+Hauser autorisierter Servicetechniker, 3 = Endress+Hauser (Messgerät an Hersteller zurücksenden)
4 = Mit der lokalen Zulassungsstelle prüfen, ob ein Ein-/Umbau unter Aufsicht erfolgen muss.

Endress+Hauser

23

4 Sicherheitshinweise

- Prüfen, ob das vorliegende Ersatzteil zur Kennzeichnung auf dem Messgerät passt, wie auf der Titelseite beschrieben.
- Ersatzteilset und Einbauanleitung dienen dazu, eine defekte Einheit gegen eine funktionierende Einheit des gleichen Typs zu ersetzen.
Nur Originalteile von Endress+Hauser verwenden.
- Nationale Vorschriften bezüglich der Montage, elektrischen Installation, Inbetriebnahme, Wartung und Reparatur einhalten.
- Folgende Anforderungen an das Fachpersonal für Montage, elektrische Installation, Inbetriebnahme, Wartung und Reparatur der Messgeräte müssen erfüllt sein:
 - In Gerätesicherheit ausgebildet.
 - Mit den jeweiligen Einsatzbedingungen der Geräte vertraut.
 - Bei Ex-zertifizierten Messgeräten: zusätzlich im Explosionsschutz ausgebildet.
- Messgerät unter Spannung! Lebensgefahr durch Stromschlag. Messgerät nur im spannungslosen Zustand öffnen.
- Bei Ex-zertifizierten Messgeräten: Nur in spannungslosem Zustand (nach Berücksichtigung einer Wartezeit von 10 Minuten nach Abschalten der Energiezufuhr) oder in Umgebungen öffnen, die keine explosionsfähige Atmosphäre enthalten.
- Bei Messgeräten in sicherheitstechnischen Applikationen gemäß IEC 61508 bzw. IEC 61511: Nach Reparatur Neuinbetriebnahme gemäß Betriebsanleitung durchführen. Reparatur dokumentieren.
- Vor einem Geräteausbau: Prozess in sicheren Zustand bringen und Leitung von gefährlichen Prozessstoffen befreien.
- Verbrennungsgefahr durch heiße Oberflächen! Vor Arbeitsbeginn: Anlage und Messgerät auf berührungssichere Temperatur abkühlen.
- Bei Messgeräten im abrechnungspflichtigen Verkehr: Nach Entfernen der Plombe ist der geeichte Zustand aufgehoben.
- Die Betriebsanleitung zum Messgerät ist zu beachten.
- Beschädigungsgefahr elektronischer Bauteile! Eine ESD-geschützte Arbeitsumgebung herstellen.
- Nach Entfernen der Elektronikabdeckung: Stromschlaggefahr durch aufgehobenen Berührungsschutz!
Messgerät ausschalten, bevor interne Abdeckungen entfernt werden.
- Änderungen am Messgerät sind nicht zulässig.
- Gehäuse nur kurzzeitig öffnen. Eindringen von Fremdkörpern, Feuchtigkeit oder Verunreinigung vermeiden.
- Leiterplatten für Geräte der Kategorien II1G, II1D, II 2G, II 2D, Zone 1 und Class I, Div. 1, Gp. A, B, C, D besitzen eine Aussparung / Leiterplattenkodierung. Das eigenmächtige Herausbrechen der Kodierung ist nicht zulässig, weil dadurch der Explosionsschutz aufgehoben wird.

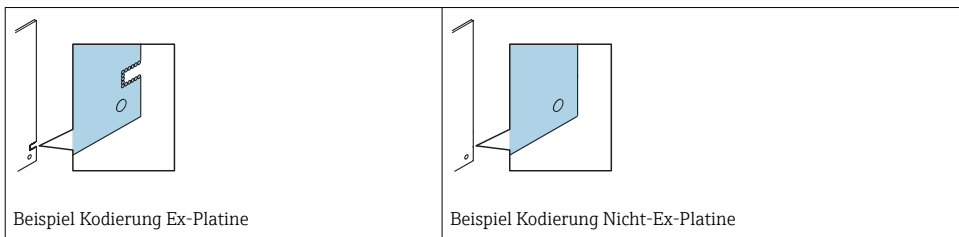

- Achtung! Beim Auswechseln von Messverstärker-, I/O-Platine oder Submodulen: Kompatibilität mit der vorhandenen Software sicherstellen. Der Auslesevorgang der Software Revisionsnummer ist in der Betriebsanleitung (Gerätefunktionen) beschrieben. Wenn die Software der Platine nicht kompatibel ist, muss mit Hilfe einer Bediensoftware (z. B. Field Care) ein Update durchgeführt werden. Bei funktionalen Änderungen Anlagenbetreiber informieren.
- Defekte Dichtungen nur durch Original-Dichtungen von Endress+Hauser ersetzen.
- Defekte Gewinde erfordern eine Instandsetzung des Messgeräts.
- Gewinde (z.B. von Elektronikraum- und Anschlussraumdeckel) müssen geschmiert sein, sofern keine abriebfeste Trockenschmierung vorhanden ist. Säurefreies, nicht härtendes Fett verwenden.
- Wenn bei den Reparaturarbeiten Abstände reduziert oder die Spannungsfestigkeit des Messgeräts nicht sichergestellt werden kann: Prüfung nach Abschluss der Arbeiten durchführen (z.B. Hochspannungstest gemäß Herstellerangaben).
- Servicestecker:
 - Nicht in explosionsfähiger Atmosphäre anschließen.
 - Nur an Servicegeräte von Endress+Hauser anschließen.
- Die in der Betriebsanleitung aufgeführten Hinweise zum Transport und zur Rücksendung beachten.



Bei Fragen kontaktieren Sie bitte Ihre zuständige [Endress+Hauser Serviceorganisation](#).

5 Verwendete Symbole

5.1 Warnhinweissymbole

GEFAHR

Dieser Hinweis macht auf eine gefährliche Situation aufmerksam, die, wenn sie nicht vermieden wird, zu Tod oder schwerer Körperverletzung führen wird.

WARNUNG

Dieser Hinweis macht auf eine gefährliche Situation aufmerksam, die, wenn sie nicht vermieden wird, zu Tod oder schwerer Körperverletzung führen kann.

VORSICHT

Dieser Hinweis macht auf eine gefährliche Situation aufmerksam, die, wenn sie nicht vermieden wird, zu leichter oder mittelschwerer Körperverletzung führen kann.

HINWEIS

Dieser Hinweis enthält Informationen zu Vorgehensweisen und weiterführenden Sachverhalten, die keine Körperverletzung nach sich ziehen.

5.2 Symbole für Informationstypen

Symbol	Bedeutung
	Erlaubt Abläufe, Prozesse oder Handlungen, die erlaubt sind.
	Verboten Abläufe, Prozesse oder Handlungen, die verboten sind.
	Tipp Kennzeichnet zusätzliche Informationen.
1., 2., 3...	Handlungsschritte

6 Werkzeugliste

 3 mm	 T20	 PH2	 0.5 x 3.5 mm	 8 mm, 10 mm
Stift / Werkzeug Ø ≤ 2 mm (0,08 inch)	säurefreies, nicht härtendes Fett	Dichtungsringe bereitstellen		

7 Promag 10 Kompaktauführung und Getrenntauführung

7.1 Austausch Messumformer


WARNUNG

Messgerät unter Spannung!


Lebensgefahr durch Stromschlag.

► Messgerät nur im spannungslosen Zustand öffnen.


 Gehäusedichtung entfernen. Beim Einbau neue Gehäusedichtung verwenden.

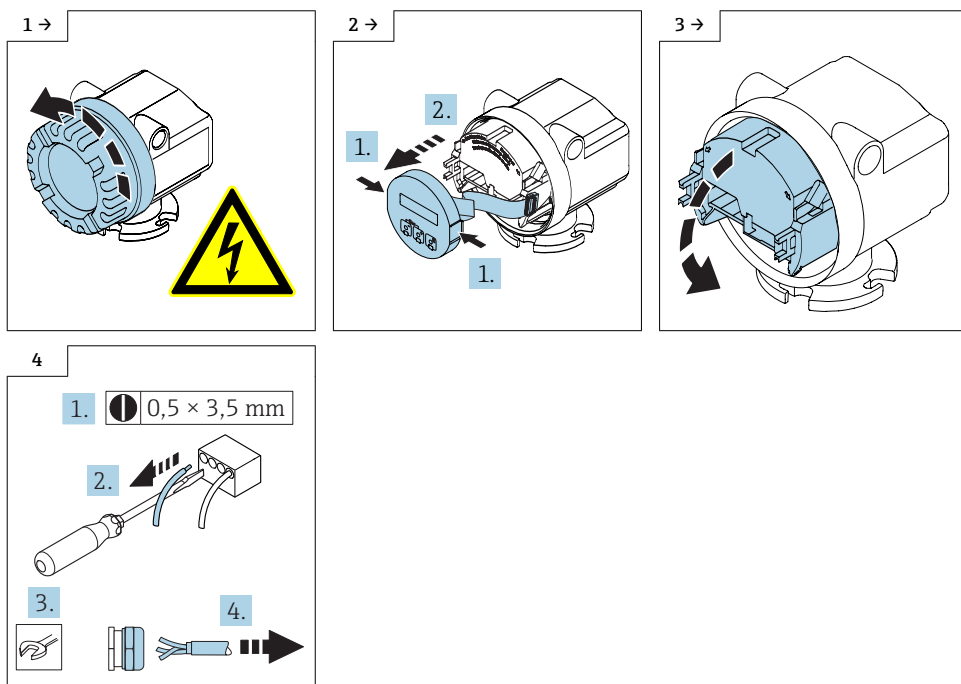

i Spezialschraube! Schraube nicht ganz lösen oder durch eine andere ersetzen. Nur Originalteile von Endress+Hauser verwenden.

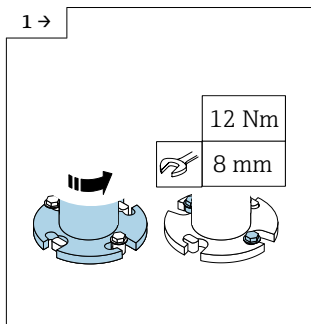

► Halsteil drehen und Schrauben lösen.


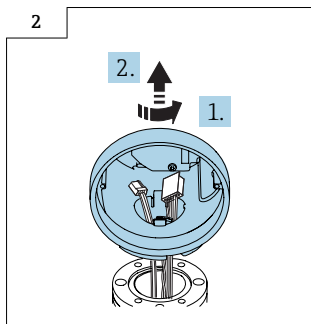


► Messumformer drehen und hochziehen.

7.1.1 Zusammenbau Messumformergehäuse

Der Zusammenbau erfolgt in umgekehrter Reihenfolge. Folgendes ist zu beachten:

i Beim Einbau neue Gehäusedichtungen verwenden!

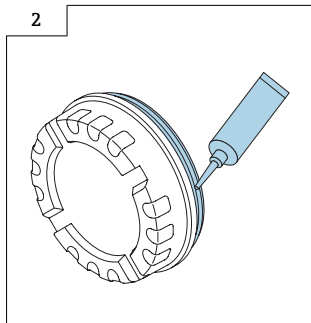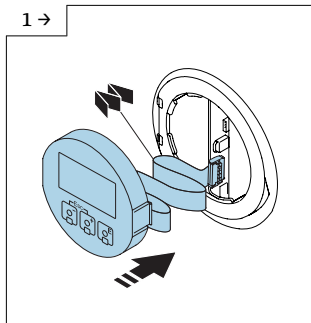

► Säurefreies, nicht härtendes Fett

i Detaillierte Angaben zum elektrischen Anschluss: Kapitel "Elektrischer Anschluss", Betriebsanleitung zum Gerät.

i Detaillierte Angaben zur Inbetriebnahme: Kapitel "Inbetriebnahme", Betriebsanleitung zum Gerät.

8 Promag 23 Kompaktauführung

8.1 Austausch Messumformer

⚠️ WARNUNG

Messgerät unter Spannung!


Lebensgefahr durch Stromschlag.

- ▶ Messgerät nur im spannungslosen Zustand öffnen.




Gehäusedichtung entfernen. Beim Einbau neue Gehäusedichtung verwenden.


1 →

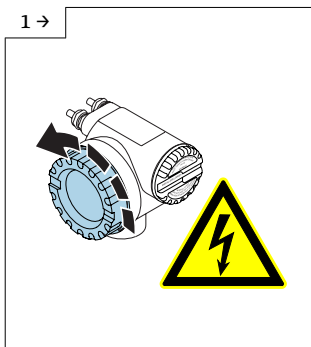


2 →

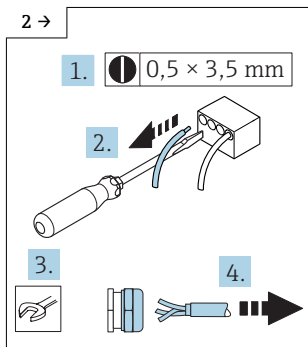


3 →

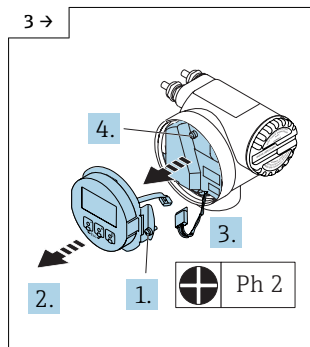


4 →

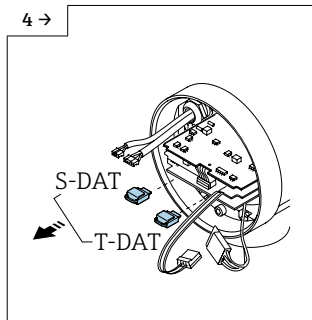

5

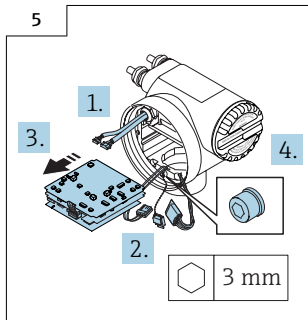

i Spezialschraube! Schraube nicht ganz lösen oder durch eine andere ersetzen. Nur Originalteile von Endress+Hauser verwenden.


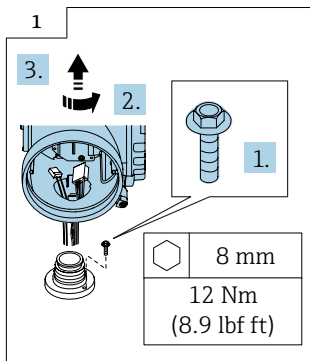


- Schrauben lösen, Messumformer drehen und hochziehen.

8.1.1 Zusammenbau Messumformergehäuse

Der Zusammenbau erfolgt in umgekehrter Reihenfolge. Folgendes ist zu beachten:

i Beim Einbau neue Gehäusedichtungen verwenden!

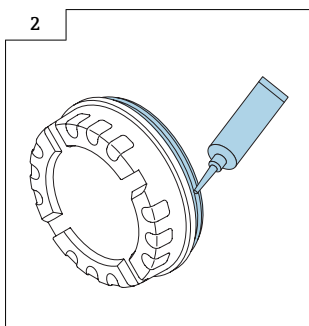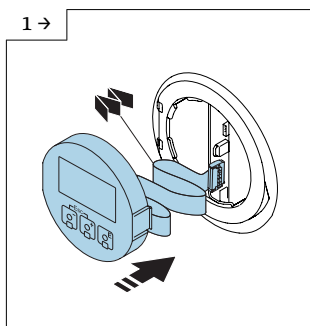

- Säurefreies, nicht härtendes Fett

i Detaillierte Angaben zum elektrischen Anschluss: Kapitel "Elektrischer Anschluss", Betriebsanleitung zum Gerät.

i Detaillierte Angaben zur Inbetriebnahme: Kapitel "Inbetriebnahme", Betriebsanleitung zum Gerät.

9 Promag 50, 53, 55 Kompaktausbauung und Getrenntausführung

9.1 Ausbau Elektronik Messumformer Alu, Edelstahl


⚠️ WARNUNG

Messgerät unter Spannung!


Lebensgefahr durch Stromschlag.

- Messgerät nur im spannungslosen Zustand öffnen.




i Gehäusedichtung entfernen. Beim Einbau neue Gehäusedichtung verwenden.


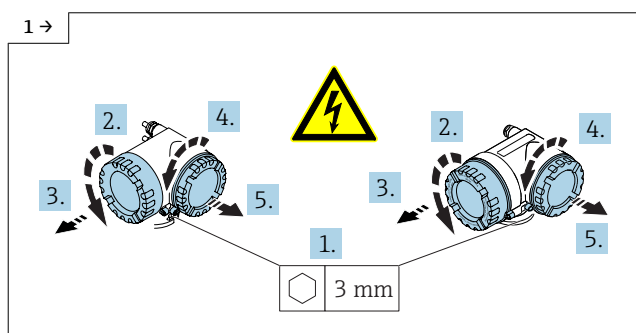


- Öffnen Messumformer Alu in nicht explosionsgeschützter Ausführung und in explosionsgeschützter Ausführung

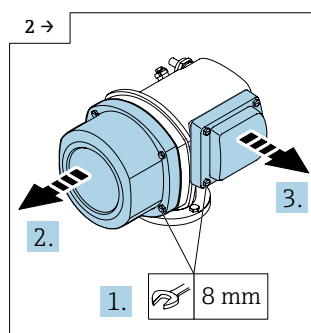


- Öffnen Messumformer Edelstahl

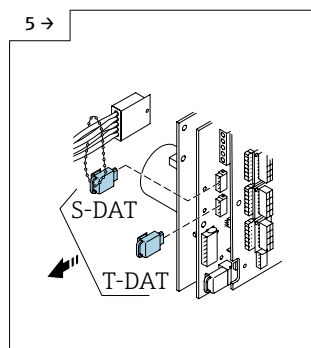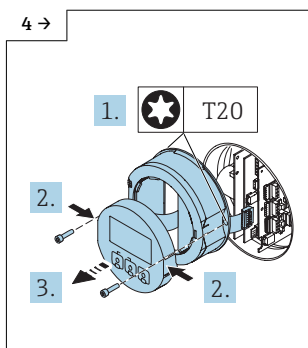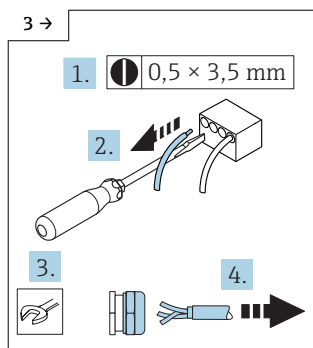

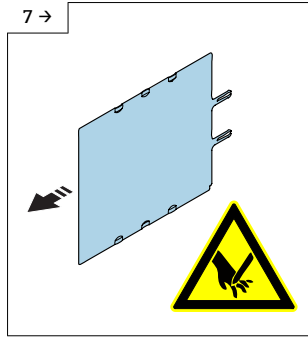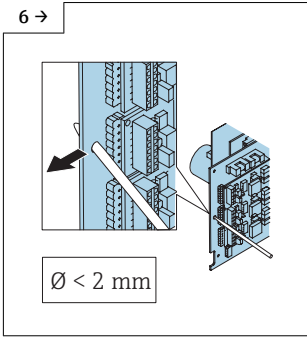


- Bei Geräten in explosionsgeschützter Ausführung der Kategorie II2GD und Div.1 sind zwischen den einzelnen Elektronikplatinen Abschirmbleche. Diese entfernen und beim Einbau wieder einsetzen.

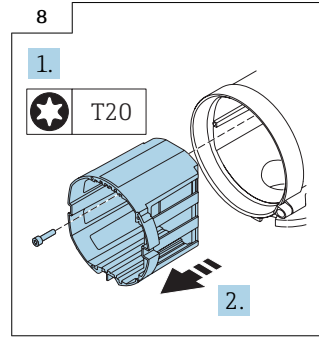


9.2 Austausch Messumformer Alu in nicht explosionsgeschützter Ausführung

Vorgehen wie in Kap. 9.1 → 31 und wie in den Bildern unten.

i Spezialschraube! Schraube nicht ganz lösen oder durch eine andere ersetzen. Nur Originalteile von Endress+Hauser verwenden.

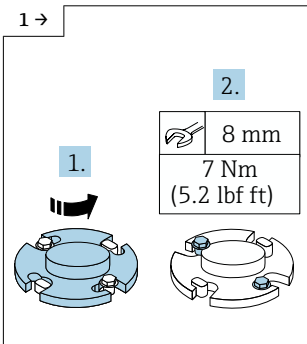

- Halsteil drehen und Schrauben lösen.

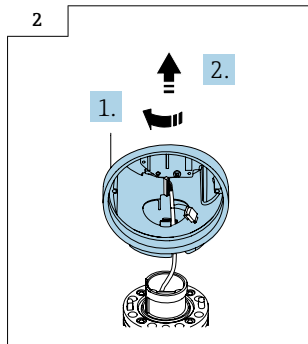


- Messumformer drehen und hochziehen.

9.2.1 Zusammenbau Messumformer Alu in nicht explosionsgeschützter Ausführung

Der Zusammenbau erfolgt in umgekehrter Reihenfolge. Folgendes ist zu beachten:



Beim Einbau neue Gehäusedichtungen verwenden!

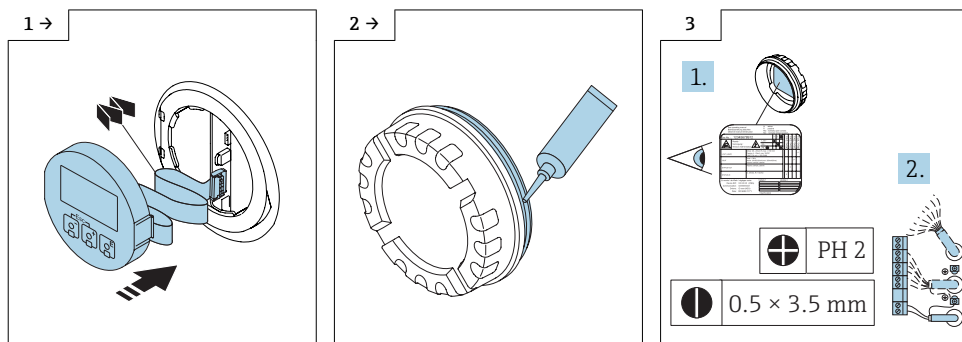

► Säurefreies, nicht härtendes Fett




Detaillierte Angaben zum elektrischen Anschluss: Kapitel "Elektrischer Anschluss", Betriebsanleitung zum Gerät.



Detaillierte Angaben zur Inbetriebnahme: Kapitel "Inbetriebnahme", Betriebsanleitung zum Gerät.

9.3 Austausch Messumformer Alu in explosionsgeschützter Ausführung

Vorgehen wie in Kap. 9.1 → 31 und wie in den Bildern unten.

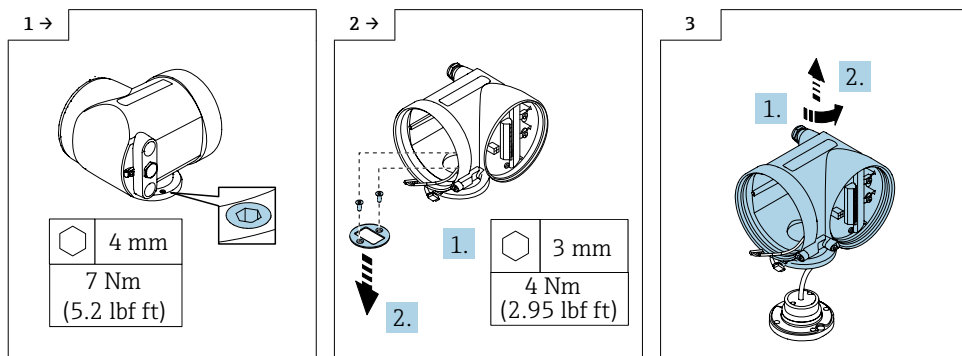

► Sicherungsschraube am Messumformer lösen.

► Imbusschrauben an der Metallabdeckung des Messumformers lösen, Metallabdeckung abnehmen.




► Messumformer drehen und hochziehen.

9.3.1 Zusammenbau Messumformer Alu in explosionsgeschützter Ausführung

Der Zusammenbau erfolgt in umgekehrter Reihenfolge. Folgendes ist zu beachten:




Beim Einbau neue Gehäusedichtungen verwenden!

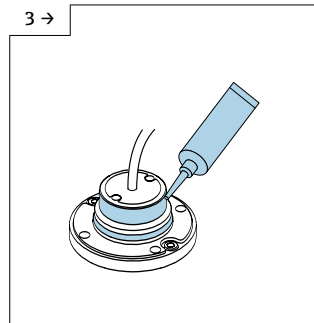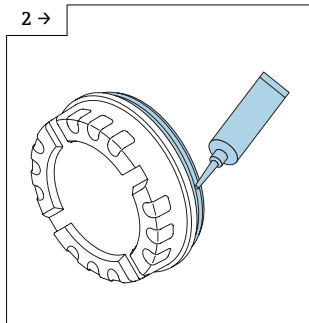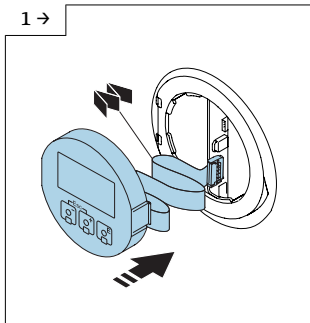

► Säurefreies, nicht härtendes Fett

► Säurefreies, nicht härtendes Fett

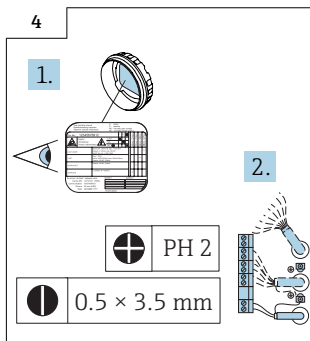


Detaillierte Angaben zum elektrischen Anschluss: Kapitel "Elektrischer Anschluss", Betriebsanleitung zum Gerät.




Detaillierte Angaben zur Inbetriebnahme: Kapitel "Inbetriebnahme", Betriebsanleitung zum Gerät.

9.4 Austausch Messumformer Edelstahl

Vorgehen wie in Kap. 9.1 →  31 und wie in den Bildern unten.

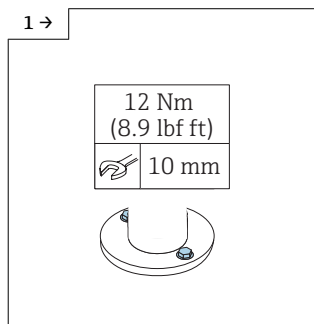

► Schrauben lösen.

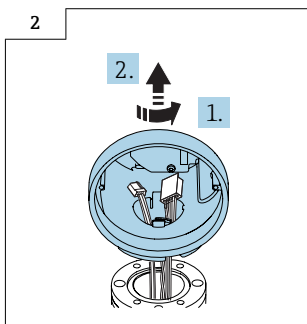



► Messumformer drehen und hochziehen.

9.4.1 Zusammenbau Messumformer Edelstahl


Der Zusammenbau erfolgt in umgekehrter Reihenfolge. Folgendes ist zu beachten:



Beim Einbau neue Gehäusedichtungen verwenden!

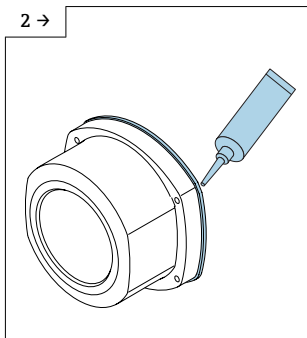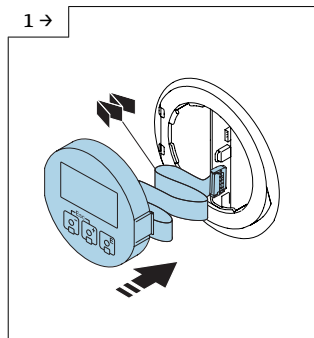

► Säurefreies, nicht härtendes Fett

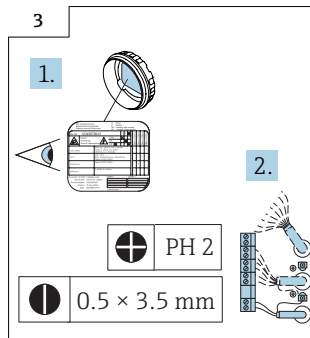

Detaillierte Angaben zum elektrischen Anschluss: Kapitel "Elektrischer Anschluss", Betriebsanleitung zum Gerät.



Detaillierte Angaben zur Inbetriebnahme: Kapitel "Inbetriebnahme", Betriebsanleitung zum Gerät.

9.5 Austausch Messumformer Wandgehäuse

⚠ WARNUNG


Messgerät unter Spannung!

Lebensgefahr durch Stromschlag.

- Messgerät nur im spannungslosen Zustand öffnen.



Gehäusedichtung entfernen. Beim Einbau neue Gehäusedichtung verwenden.

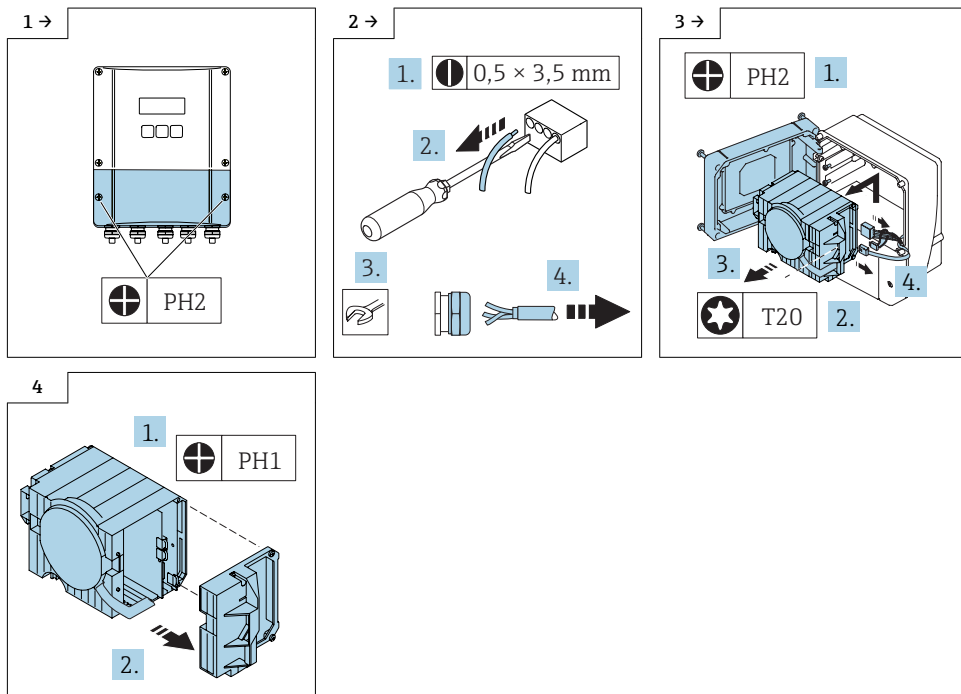


9.5.1 Zusammenbau Messumformer Wandgehäuse

Der Zusammenbau erfolgt in umgekehrter Reihenfolge. Folgendes ist zu beachten:



Beim Einbau neue Gehäusedichtungen verwenden!

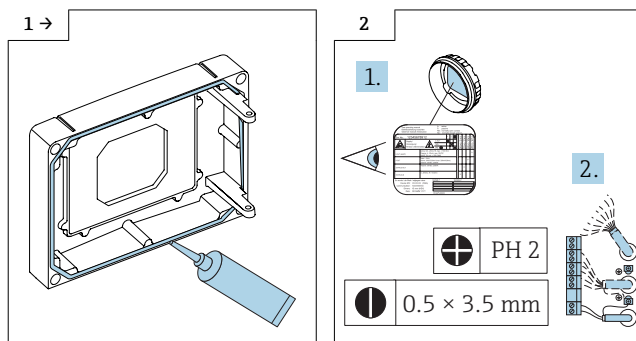

► Säurefreies, nicht härtendes Fett



Detaillierte Angaben zum elektrischen Anschluss: Kapitel "Elektrischer Anschluss", Betriebsanleitung zum Gerät.



Detaillierte Angaben zur Inbetriebnahme: Kapitel "Inbetriebnahme", Betriebsanleitung zum Gerät.



71430401

www.addresses.endress.com
