



Level



Pressure



Flow



Temperature



Liquid Analysis



Registration



Systems Components



Services



Solutions

Technical Information

Nivotester FTR325

1-channel switch amplifier for the microwave barrier Soliwave FDR50/FQR50



Area of application

The Nivotester FTR325 is suitable as a 1-channel switch amplifier for the Soliwave FDR50/FQR50 microwave barrier. You can use the FTR325 for level detection for any type of solids or for control and counting tasks for packaged goods.

Associated apparatus for the microwave barrier with intrinsically safe circuits.

Advantages at a glance

- High level of operational safety through line monitoring up to the sensor
- LED display of operating and switching state
- Selectable pick up and/or drop out delay of the switching output
- Compact housing for easy inline mounting on standard rack rails
- Easy wiring via pluggable terminal block connectors

Table of contents

Function and system design	3	Human interface	10
Measuring principle	3	Control concept	10
Measuring system	3	Display elements	10
Limit switch signal function	3	Operating elements	10
Function monitoring system	3		
Device combinations	4		
Input	4	Certificates and approvals	12
Measured variable	4	CE approval	12
Input signal	4	Ex approval	12
		Other standards and guidelines	12
Output	4	Ordering information	12
Output signal	4	Ordering information Nivotester FTR325	12
Switching frequency	4	Notes on product structure	12
Power supply	5		
Electrical connection	5	Safety instructions	13
Ring wiring	5	Zone classification	13
Star wiring	5	Safety notes for electrical equipment for potentially	
Supply voltage	6	explosive atmospheres	13
Cable specification	6		
Power consumption	6		
Installation	7	Accessories	14
Installation instructions	7	Protective housing	14
Clearances	7		
Environment	8	Documentation	15
Ambient temperature range	8	Operating instructions (KA)	15
Storage temperature	8	Technical informations	15
Degree of protection	8	Safety instructions	15
Electromagnetic compatibility (EMC)	8		
Mechanical construction	9		
Design, dimensions	9		
Weight	9		
Material	9		
Housing	9		
Terminals	9		


Function and system design

Measuring principle

The Nivotester FTR325 monitors the Soliwave FDR50/FQR50 microwave barrier's open collector output and uses a relay (change-over gate) to provide this output for many user applications. An LED displays the switching state of the relay. Problems such as a cable breakage are also displayed.

The input on the Nivotester FTR325 is galvanically isolated from main power and output. It is connected to the microwave barrier via a three-wire cable (ring or star wiring), whereupon the Nivotester provides distribution (intrinsically safe circuit, DC) voltage to the microwave barrier.

Measuring system

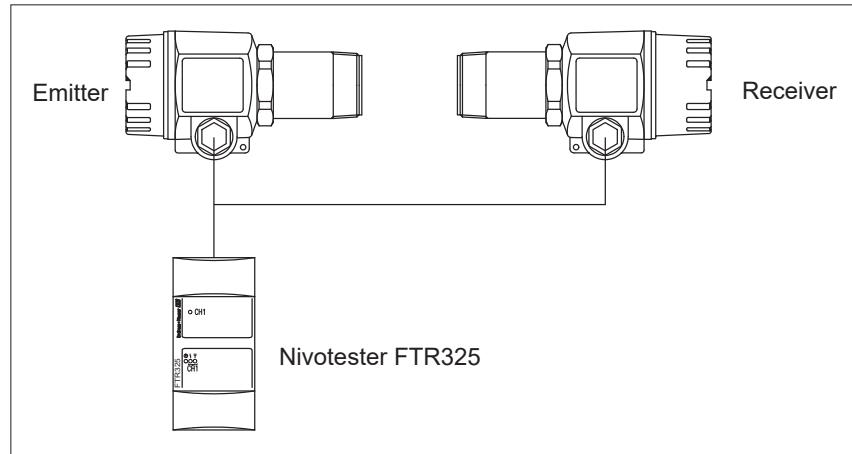

The complete measuring system for limit detection consists of:

- an emitter FQR50,
- a receiver FDR50 and
- an evaluator Nivotester FTR325

Optical or acoustic signallers, contactors, relays, solenoids etc. may be connected to the Nivotester.

Limit switch signal function

The appropriate setting for the limit switch signal function (see page 9) ensures that the relay for signal output and fault is always activated (fail-safe mode) in idle state.

In combination with the Soliwave FDR50/FQR50 microwave barrier the following secure modes are possible:

- The relay drops out when the switch point is reached (microwave barrier interrupted), a fault occurs or the distribution voltage fails.
- The relay drops out when the switch point is underrun (microwave barrier uninterrupted), a fault occurs or the distribution voltage fails.

Function monitoring system

The Nivotester FTR325 is equipped with a function monitoring system for improved fail-safe operation. A fault is indicated by an LED, the fault relay falls off.

In combination with the microwave barrier Soliwave FQR50/FDR50-C* and -D* resp. the Nivotester FTR325-B* and -D* resp. can recognise the following faults and use an LED to indicate them:

- Breakage in the power supply cable to the emitter FQR50
- Microwave barrier power input (emitter FQR50 and/or receiver FDR50) too high
- Short-circuit (emitter FQR50, receiver FDR50 or wiring)

Manual function monitoring can be carried out by pushing the test button.

Device combinations

The following equipment combinations are possible:

- Nivotester FTR325-B* (ATEX II (1)G [Ex ia Ga] IIC and ATEX II (1)D [Ex ia Da] IIIC resp.) with FQR50/FDR50-C* (ATEX II 1/2G Ex ia IIC T4 Ga/Gb and ATEX II 1/2D Ex ia IIIC T98°C Da/Db resp.)
- Nivotester FTR325-D* (IECEx [Ex ia Ga] IIC and IECEx [Ex ia Da] IIIC resp.) with FQR50/FDR50-D* (IECEx Ex ia IIC T4 Ga/Gb and IECEx Ex ia IIIC T98°C Da/Db resp.)

The following equipment combinations are impossible:

- Nivotester FTR325-A* (non hazardous area) with FQR50/FDR50-C* (ATEX II 1/2G and ATEX II 1/2D resp.)
- Nivotester FTR325-A* (non hazardous area) with FQR50/FDR50-D* (IECEx)
- Nivotester FTR325-B* (ATEX II (1)G and ATEX II (1)D resp.) with FQR50/FDR50-A* (non hazardous area)
- Nivotester FTR325-B* (ATEX II (1)G and ATEX II (1)D resp.) with FQR50/FDR50-B*(ATEX II 1/2D)
- Nivotester FTR325-B* (ATEX II (1)G and ATEX II (1)D resp.) with FQR50/FDR50-D* (IECEx)
- Nivotester FTR325-D* (IECEx) with FQR50/FDR50-A*(non hazardous area)
- Nivotester FTR325-D* (IECEx) with FQR50/FDR50-B* (ATEX II 1/2D)
- Nivotester FTR325-D* (IECEx) with FQR50/FDR50-C* (ATEX II 1/2G and ATEX II 1/2D resp.)

Input

Measured variable

A limit signal is generated when the microwave barrier is either interrupted or uninterrupted, depending on the type of limit signal selected.

Input signal

- FTR325 input:
 - Soliwave FDR50/FQR50 microwave barrier
 - input galvanically isolated from power supply
 - intrinsically safe circuit

Output

Output signal

- Relay output:
 - galvanically isolated from power supply
 - a potential-free switching contact for the limit signal
 - a potential-free switching contact for fault notification
- Breaking capacity for relay contacts:
 U~ max. 253 VAC
 I~ max. 2 A (AC)
 P~ max. 500 VA ($\cos \phi \geq 0.7$)
 U- max. 40 VDC
 I- max. 2 A (DC)
 P- max. 80 W
- Service life: min. 10^5 switching operations at max. contact load
- Function indicators: LEDs for
 - On (green)
 - Limit signal (yellow)
 - Fault (red)

Switching frequency


max. 2 Hz

Power supply


Electrical connection

When connected to the Nivotester FTR325 a microwave barrier can be wired via a choice of ring or star connection. The required backup power is provided by the FTR325.

Ring wiring

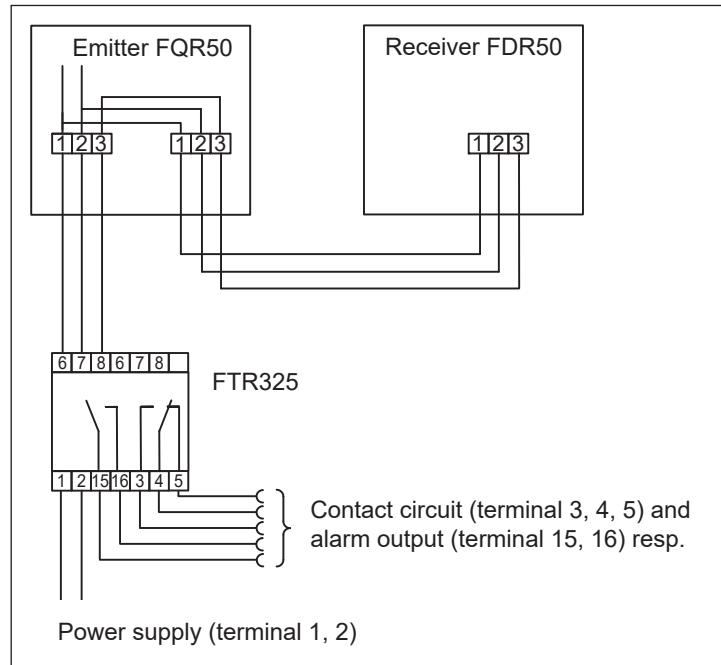

Star wiring

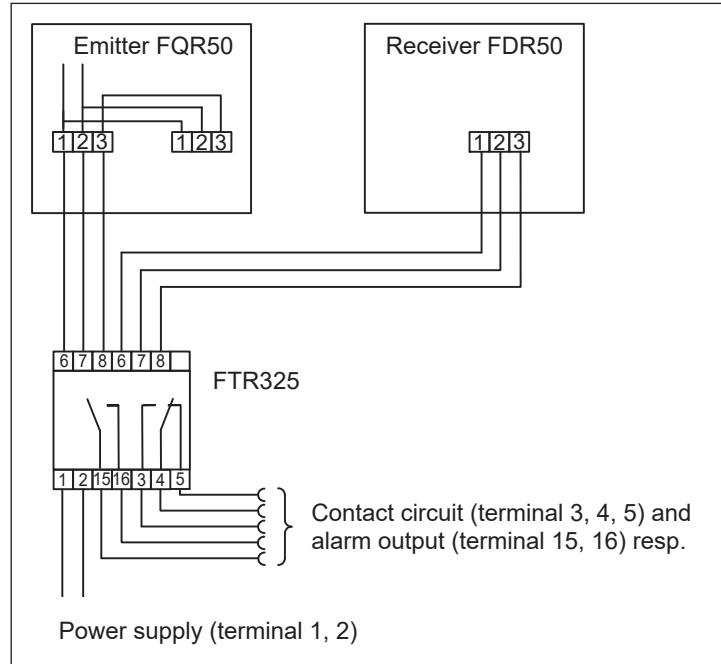

Supply voltage

- AC voltage model
 - Voltage range: 85 .. 253 VAC, 50/60 Hz
- DC voltage model
 - Voltage range: 20 .. 30 VAC / 20 .. 60 VDC
 - Reverse voltage protection

Internally there is a micro-fuse built into the supply voltage circuit so that only one fuse for short circuits in the feed line to the FTR325 must be upstream.

Cable specification

FTR325-B* with FQR50/FDR50-C* and FTR325-D* with FQR50/FDR50-D* resp.:

- Off-the-shelf installation cable, 3-conductor, non-shielded
- Resistance: $15 \Omega/\text{km} \leq R' \leq 150 \Omega/\text{km}$
- Inductance: $0.4 \text{ mH/km} \leq L' \leq 1 \text{ mH/km}$
- Capacitance: $45 \text{ nF/km} \leq C' \leq 200 \text{ nF/km}$
- Length of spurs max. 1000 m (IIC) and 5000 m (IIB) respectively


Power consumption

- AC voltage model: 6,9 VA
- DC voltage model: 1,85 W


Installation

Installation instructions

The Nivotester FTR325 is mounted upright on a DIN rail (TS 35 as per EN 50022). A protective case (IP 66, see accessories) is available for external installation.

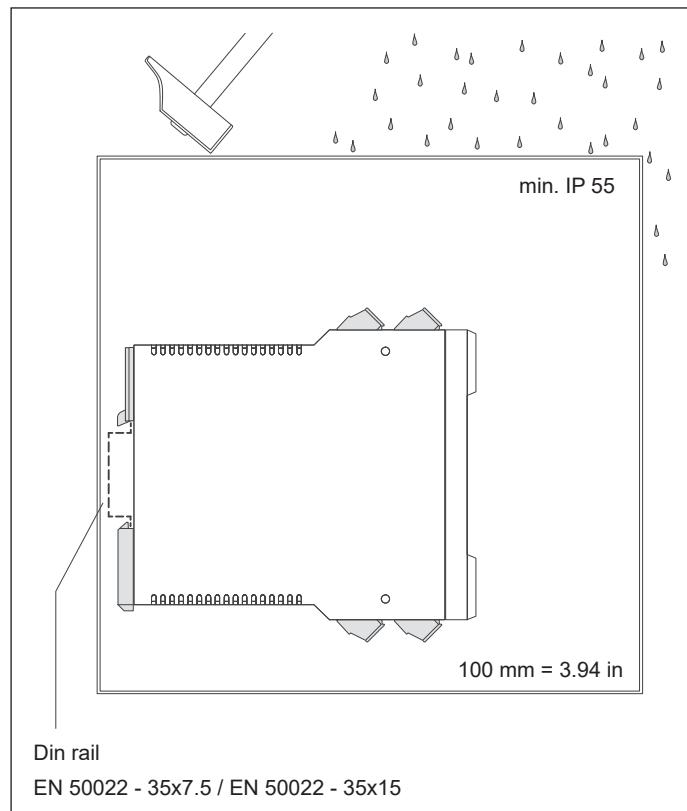

Clearances

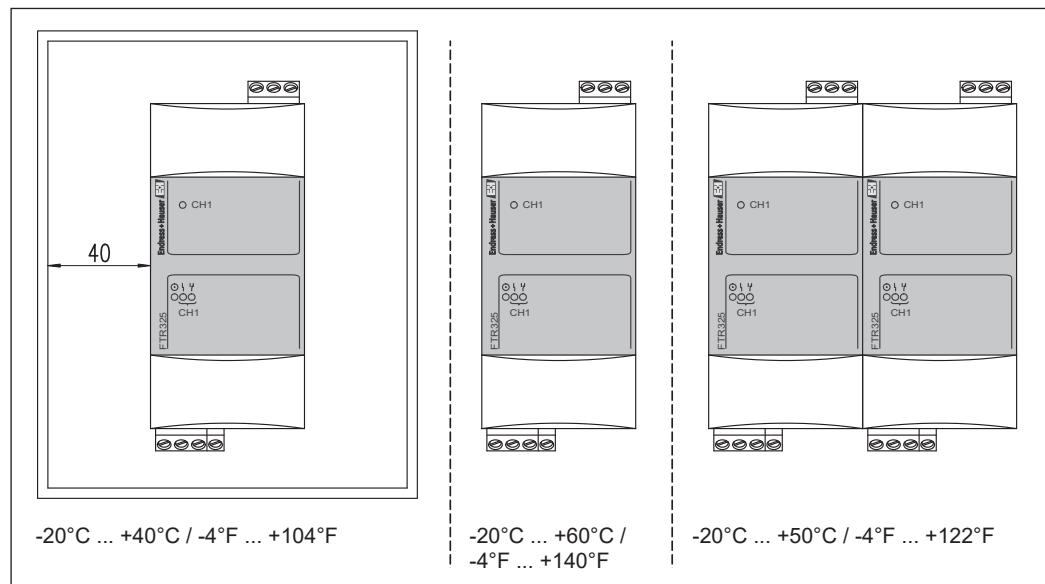

Environment

Ambient temperature range

- - 20°C ... + 60°C (if installed individually)
- - 20°C ... + 50°C (if installed in-line without clearance spaces)
- - 20°C ... + 40°C (if installed in protective case)

Note!

If possible mount devices so that they are not subjected to direct sunlight. This applies especially to use in warmer climates.

Storage temperature

- - 20°C ... + 85°C (preferably at + 20°C)

Degree of protection


- IP 20

Electromagnetic compatibility (EMC)

- Interference Emission to EN 61326, Electrical Equipment Class B
- Interference Immunity to EN 61326, Appendix A (Industrial)

Mechanical construction

Design, dimensions

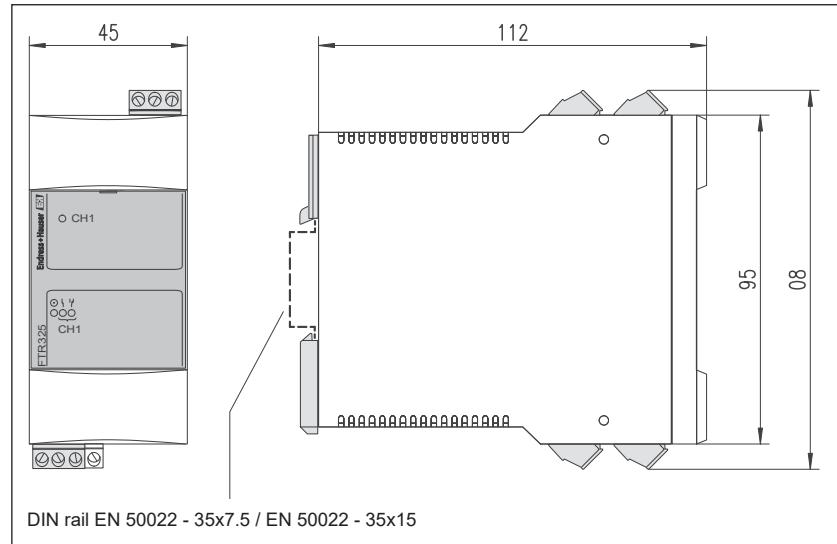

Weight

- 0.3 kg


Material

- Housing:
 - Polycarbonat, Polyamid PA6
 - Color (main part): Light grey, RAL 7035

Housing

- Housing: In-line case (Minipac shape) made of plastic

Terminals

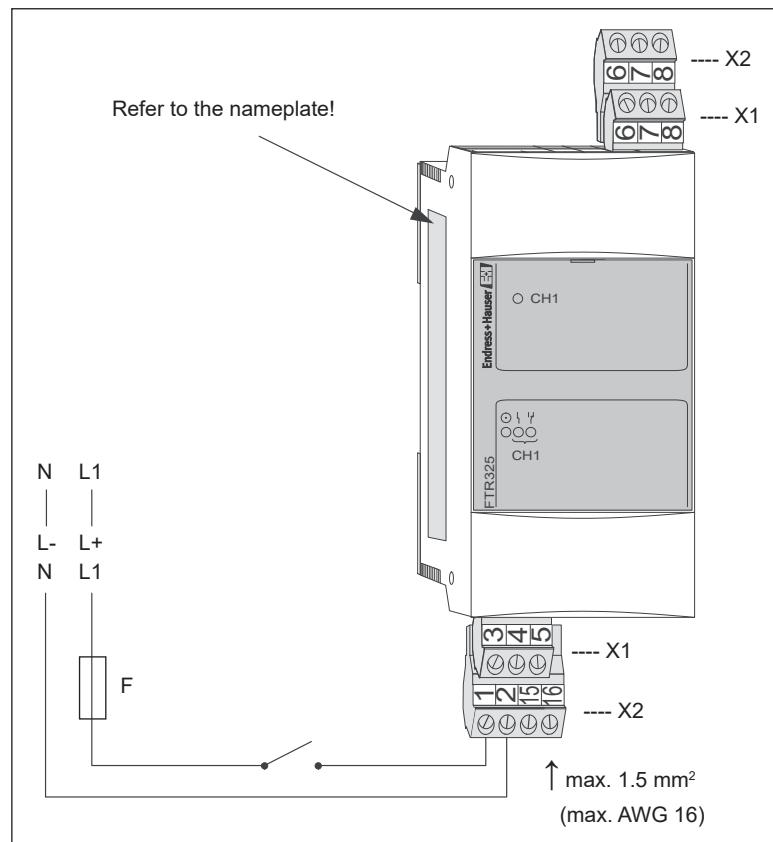

The four plug terminals are a part of the device.

Human interface


Control concept

Onsite adjustments using switches and potentiometers behind the hinged face plate.

Display elements

- Green LED: operational state
- Yellow LED: switching state
- Red LED: fault

Operating elements

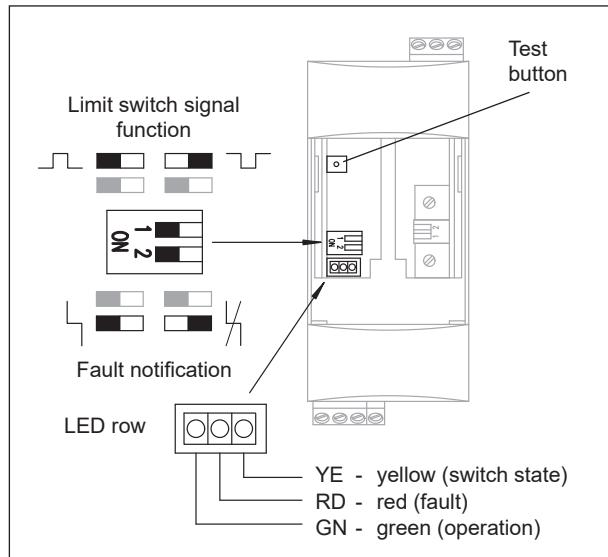

■ Limit switch signal function:


- Switches the limit switch relay on or off when the microwave barrier is either interrupted or uninterrupted, depending on the type of limit signal selected.
- Optical indication of switching state via yellow LED

■ Fault notification:

- When activated, switches on the fault relay when a fault occurs
- Optical indication of a fault via red LED

■ Test button:

- Simulation of a fault when fault notification switched on
- Simulation of a limit signal when fault notification is switched off (for uninterrupted microwave barrier)

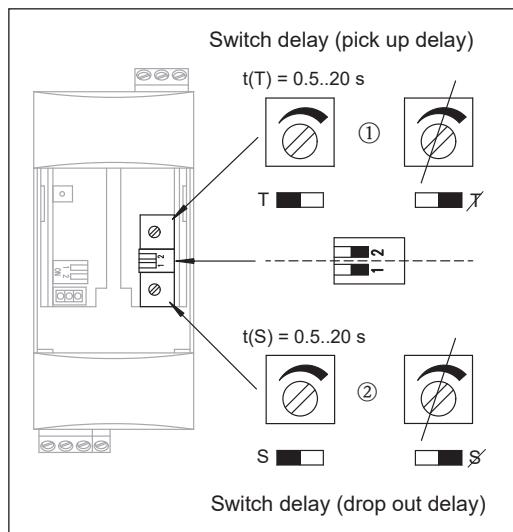

- Switch delay (pick up delay):
 - When switch delay activated limit switch relay switches on pick up delay after time $t(T)$
 - Adjustable time: $t(T) = 0.5 .. 20 \text{ s}$

- Switch delay (drop out delay):
 - When switch delay activated limit switch relay switches off drop out delay after time $t(S)$
 - Adjustable time: $t(S) = 0.5 .. 20 \text{ s}$

Note:

The switching frequency (maximum 2 Hz) is given by the microwave barrier Soliwave FDR50/FQR50.

You can find detailed information on the different setting options in the KA00205F/97/A6 operating instructions.

Certificates and approvals

CE approval

The Nivotester FTR325 fulfils the legal requirements of the EC directives. The manufacturer confirms the successful examination of the equipment by using the CE mark.

Ex approval

See "Ordering information"

Other standards and guidelines

- EN 60529
Degrees of protection through housing (IP code)
- EN 61010-1
Safety requirements for electrical equipment for measurement, control and laboratory use
- EN 61326-X
EMC product family standard for electrical equipment for measurement, control and laboratory use

Ordering information

Ordering information Nivotester FTR325

10	Approval:	
	B	ATEX II (1)G [Ex ia Ga] IIC
		ATEX II (1)D [Ex ia Da] IIIC
	D	IECEx [Ex ia Ga] IIC
		IECEx [Ex ia Da] IIIC
	Y	Special version, to be specified
20	Model:	
	1	DIN rail mounting, b = 45 mm
	9	Special version, to be specified
30	Power supply:	
	A	85 - 253 VAC, 50/60 Hz
	E	20 - 60 VDC
		20 - 30 VAC, 50/60 Hz
	Y	Special version, to be specified
40	Output:	
	1	1x level SPDT + 1x alarm/level SPST
	9	Special version, to be specified
FTR325 - <input type="text"/> <input type="text"/> <input type="text"/> <input type="text"/>		


Notes on product structure

The following equipment combinations are possible:

- Nivotester FTR325-B* (ATEX II (1)G [Ex ia Ga] IIC and ATEX II (1)D [Ex ia Da] IIIC resp.) with FQR50/FDR50-C* (ATEX II 1/2G Ex ia IIC T4 Ga/Gb and ATEX II 1/2D Ex ia IIIC T98°C Da/Db resp.)
- Nivotester FTR325-D* (IECEx [Ex ia Ga] IIC and IECEx [Ex ia Da] IIIC resp.) with FQR50/FDR50-D* (IECEx Ex ia IIC T4 Ga/Gb and IECEx Ex ia IIIC T98°C Da/Db resp.)

Safety instructions

Zone classification

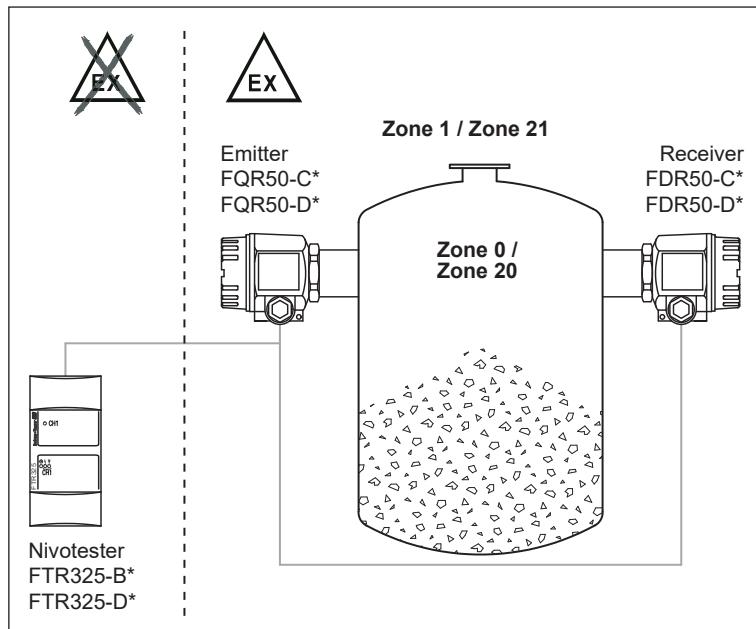

Safety notes for electrical equipment for potentially explosive atmospheres

- The following equipment combinations are allowed to operate in explosive area:
 - FTR325-B* with FQR50/FDR50-C* (see Safety Instructions XA00219F/97/A3)
 - FTR325-D* with FQR50/FDR50-D* (see Safety Instructions XA00484F/97/EN)
- Install the device according to the manufacturer's instructions and any other valid standards and regulations (e.g. EN/IEC 60079-14).
- Incorrect use of the device poses a danger.
- The device may be installed, hooked up and put into operation only by qualified and authorized persons with special attention paid to
 - the operating manual,
 - the relevant standards and
 - legal rules and regulations.
- The Nivotester can and may be serviced by the manufacturer only.

Accessories


Protective housing

A protective housing for field installation of top-hat rail devices e. g. Nivotester FTR325 is available. In this housing there is space for several top-hat rail devices (to a maximum installation width of 145 mm).



■ Technical data

- Order code: 52010132
- Protection type (according to EN 60529): IP 66
- Lower housing section: fibre-glass reinforced polycarbonate, grey
- Upper housing section: polycarbonate, transparent
- Seal: PU seal
- Top-hat rail (EN 50022): galvanized
- Cable entries: 5 pieces M20x1.5

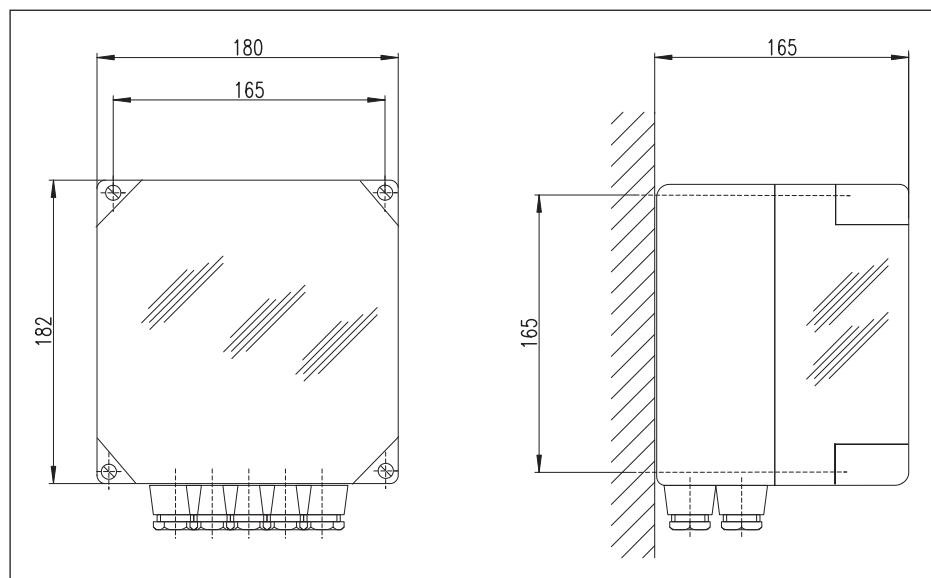

Documentation

Operating instructions (KA)	Nivotester FTR325 KA00205F/97/A6
	Soliwave FQR50/FDR50 KA00206F/97/A6
Technical informations	Soliwave FQR50/FDR50 TI00378F/97/EN
Safety instructions	Soliwave FQR50/FDR50-C* with the Nivotester FTR325-B* XA00219F/97/A3
	Soliwave FQR50/FDR50-D* with the Nivotester FTR325-D* XA00484F/97/EN

Subject to modification

Instruments International

Endress+Hauser
Instruments International AG
Kaegenstrasse 2
4153 Reinach
Switzerland

Tel.+41 61 715 81 00
Fax+41 61 715 25 00
www.endress.com
info@ii.endress.com

Endress+Hauser 

People for Process Automation